


Installation Manual

Please check the accessories before installation



- 1** Long steel mesh x 2
- 2** Two hole steel mesh x 2
- 3** Short steel mesh x 2
- 4** Long hanger x 1
Short hanger x 1
Circular hanger x 1
- 5** Linear side x 2
- 6** Upper tube x 6
- 7** Middle tube x 6
- 8** Lower tube x 6
- 9** Anti slip clip x 48
- 10** Small accessory x 1 set
6 * 13 screws x 4
Nut x 4
Iron clip x 4
Metal gasket x 2
6 * 20 screws x 2
Installation tool x 1 set
Adjustable footrest x 6
Top plug x 6

1. Take out 1 long steel mesh. 1 two hole steel mesh. 6 * 13 screws * 2. Nut * 2. Iron clip * 2. Install as shown.

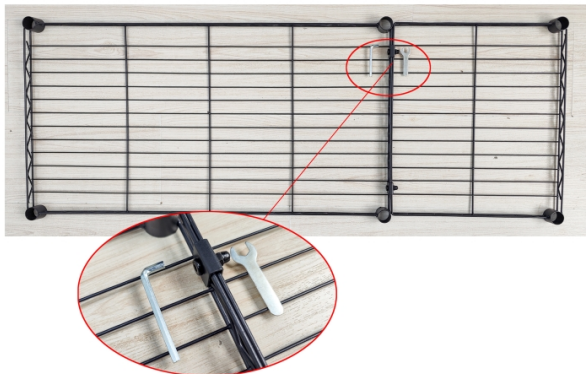

2. Take out 6 lower tubes. 6 adjustable footrest. Install adjustable footrest. 12 anti slip clips. (Install the clip with the arrow facing upwards at the bottom hole position)

Assembled step 1 bottom steel mesh.


As shown.




3. Install as shown in the picture.



4. Take out 1 short steel mesh. 8 anti slip clips. Install as shown in the picture.

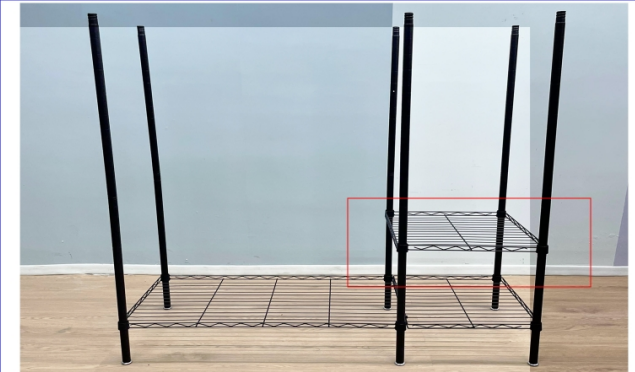

5. Take out 6 middle tubes. Connect the lower tube. Gently spiral tighten. 8 anti slip clips. 2 linear sides. As shown.

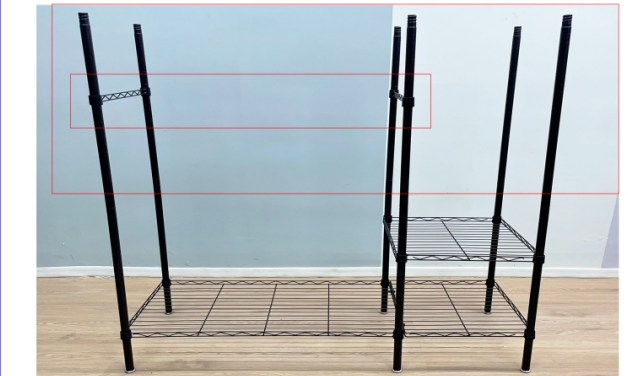

6. Take out 6 upper tubes. Connect the middle tube. Gently spiral tighten. As shown.



7. Take out 1 short steel mesh. 8 anti slip clips. Install as shown.



8. Take out 12 anti slip clips. 6 *13 screws *2. Nut *2. Iron clip*2. 1 long steel mesh. 1 two hole steel mesh. The installation method is the same as step 1. Install as shown.



9. Take out 2 hangers (1 long and 1 short). Directly suspended under the steel mesh. As shown. Then take out 1 circular hanger. Metal gasket*2. 6 * 20 screws*2. Install as shown.

The wardrobe installation is completed. As shown.

