

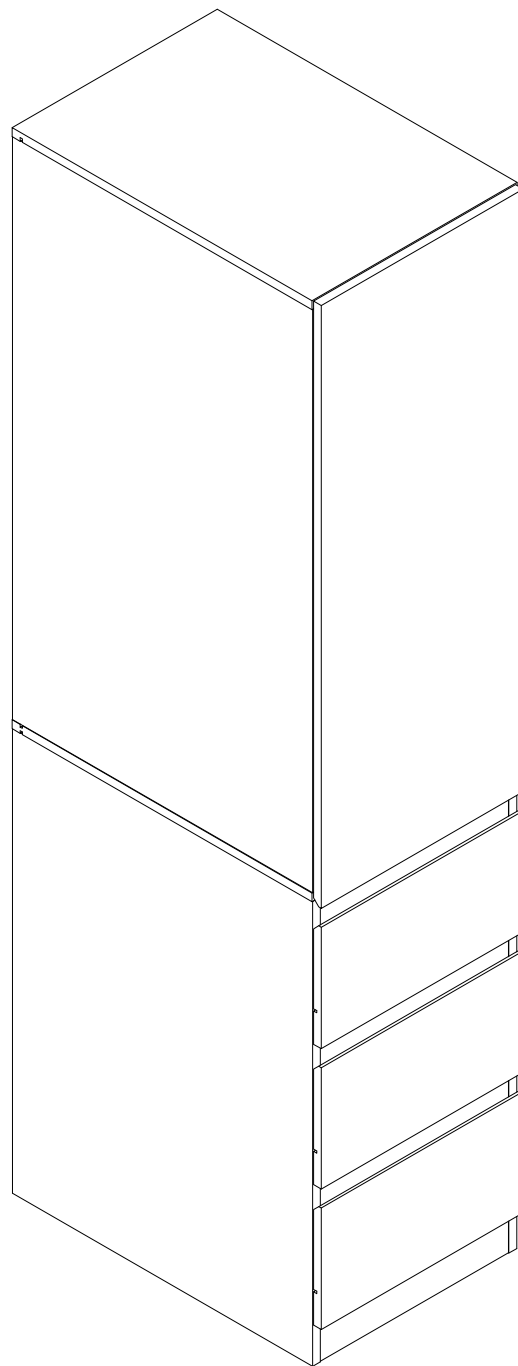
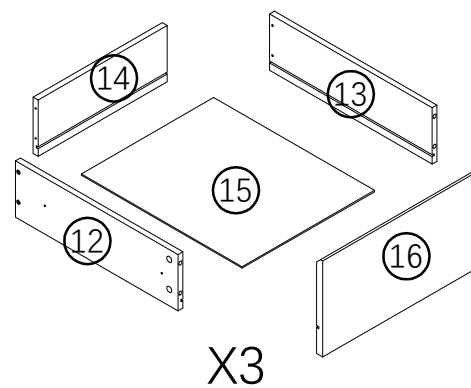
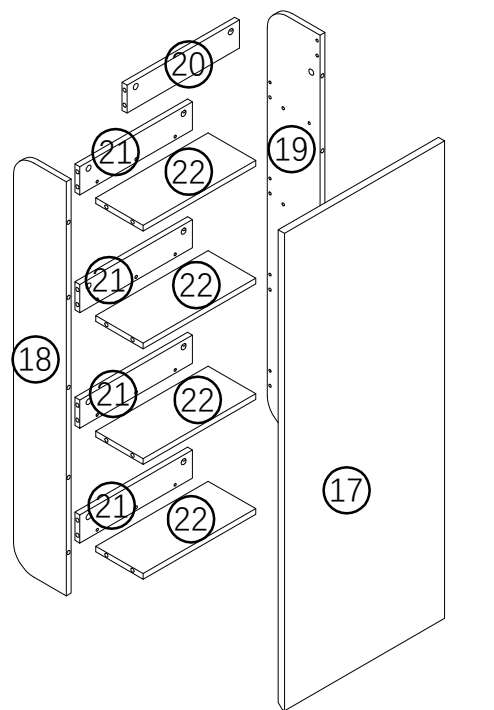
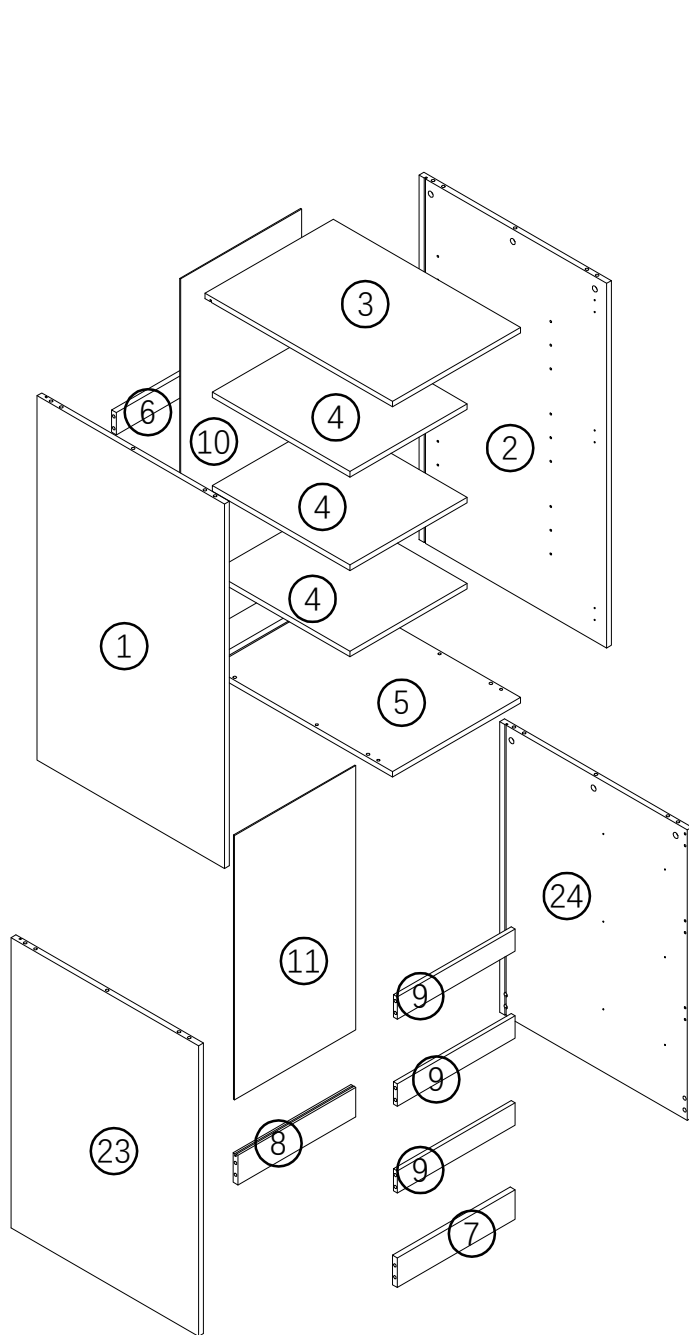




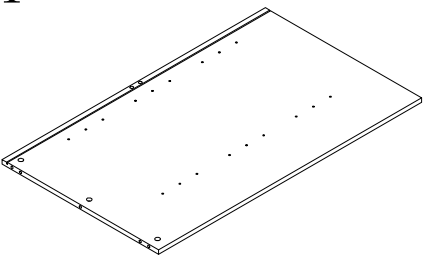
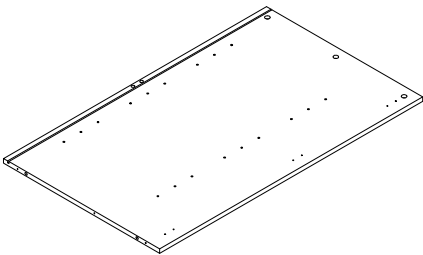
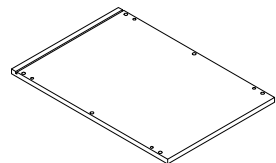
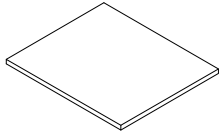
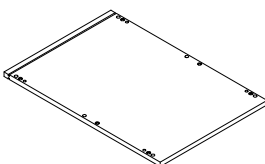
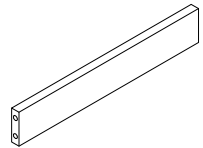
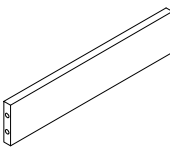
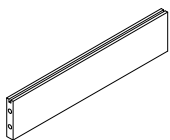
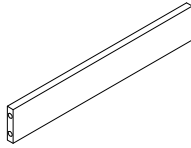

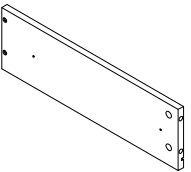
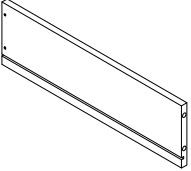
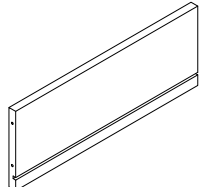


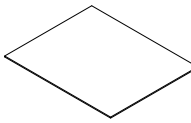


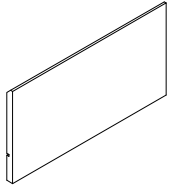

O  01 02 03 04 2PCS	H  12PCS	A  24PCS
P  7*50 6PCS	I  I1 I2 3PCS	B  24PCS
	J  3.5*30 12PCS	C  8*40 12PCS
	K  10PCS	D  64PCS
L  3*12 10PCS	E  64PCS	
M  3.5*14 30PCS	F  6*30 18PCS	
N  3.5*12 12PCS	G  3PCS	


1  985*585 1PS	2  985*585 1PS	3  400*585 1PS	4  366*429 3PS
5  400*585 1PS	6  368*60 1PS	7  368*80 1PS	8  368*80 1PS
9  368*60 3PS	10  994*378 1PS	11  714*378 1PS	12  400*120 3PS
13  400*120 3PS	14  318*120 3PS	15  326*396 3PS	16  394*205 3PS

17

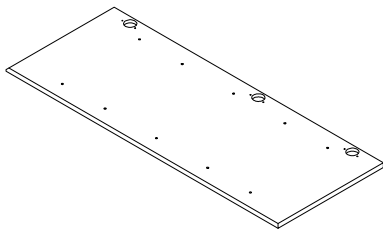


1018*394 1PS

18

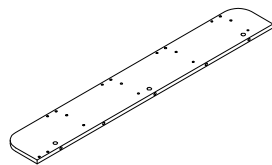


883*130 1PS

19

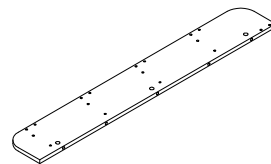


883*130 1PS

20

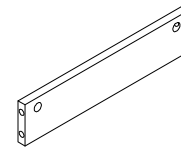


277*60 1PS

21

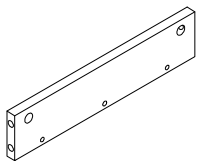


277*60 4PS

22

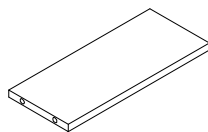


277*117 4PS

23

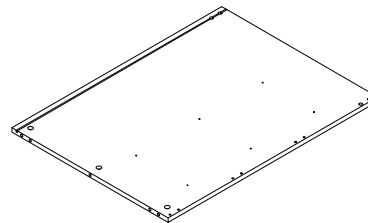


785*585 1PS

24

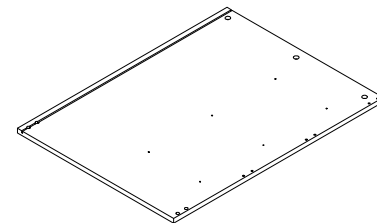


785*585 1PS


1

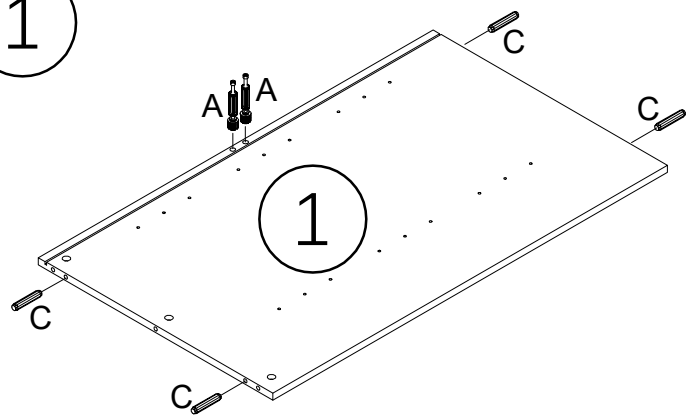


2

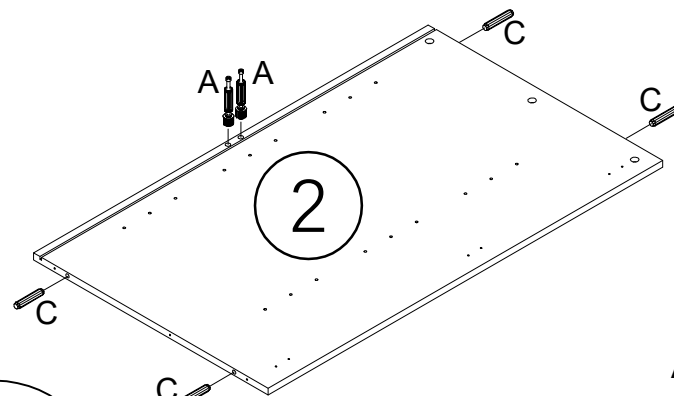


3

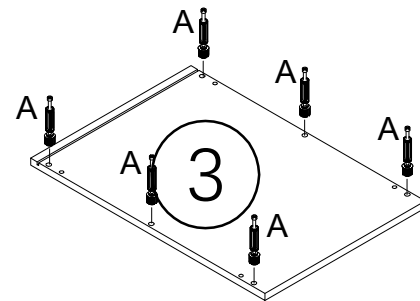


23

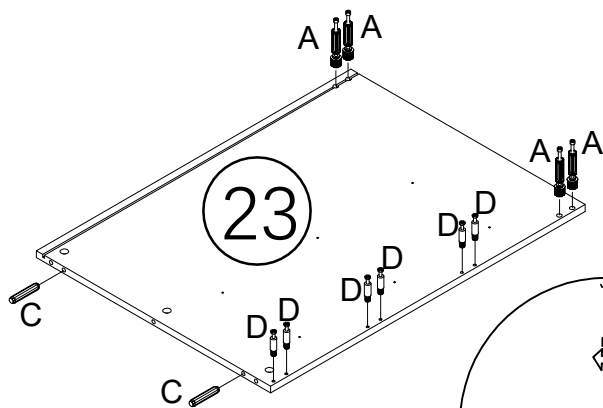


24

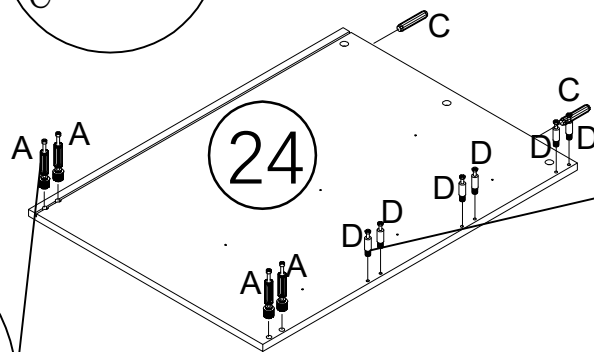

D

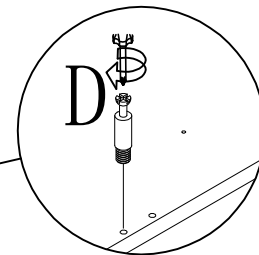

5

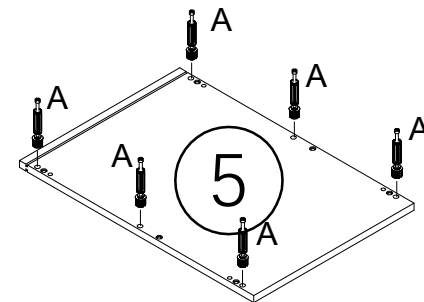







	A*24
	C*12
	D*12

put A on board 1 2 3 5 23 24

put C on board 1 2 23 24

put D on board 23 24

2

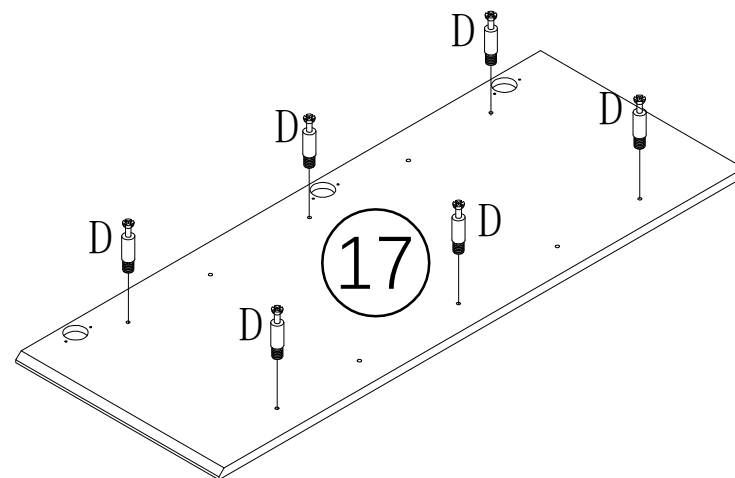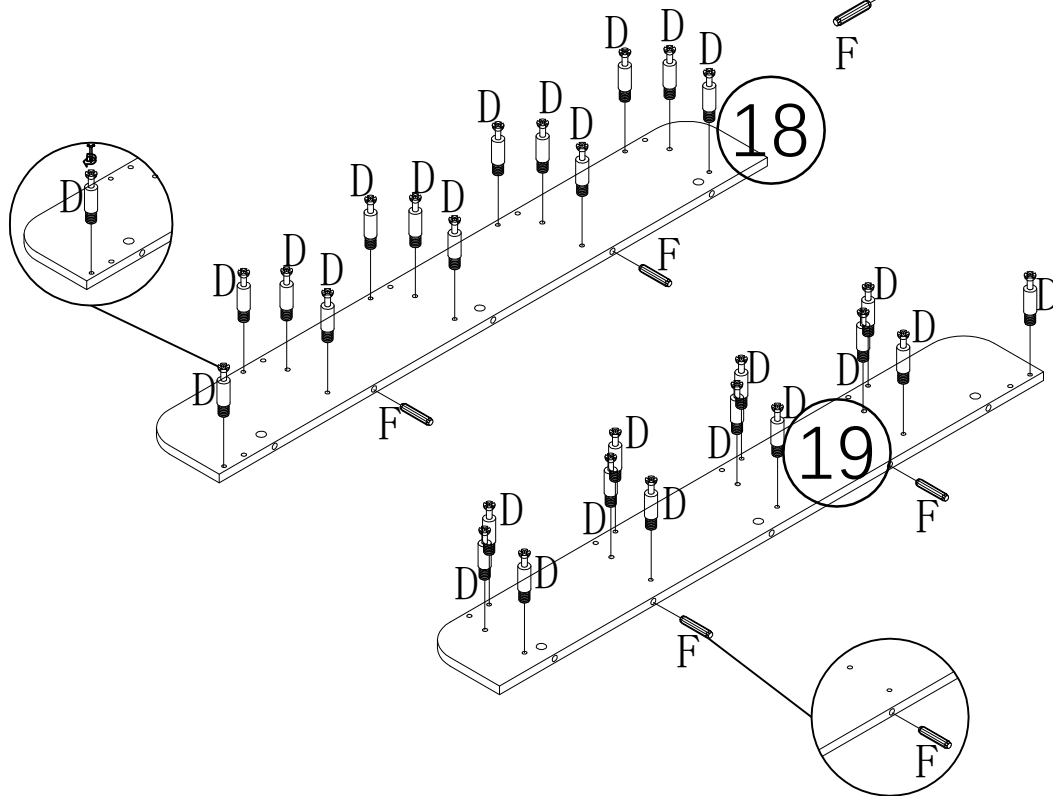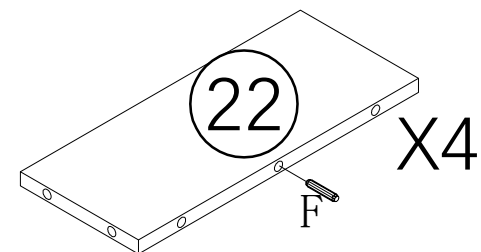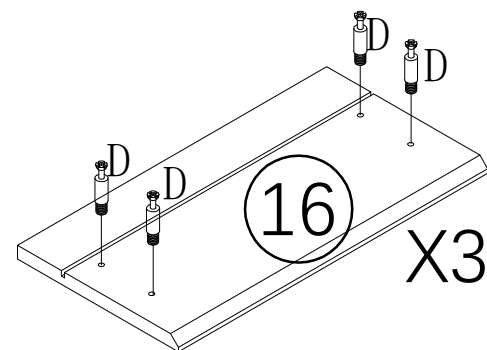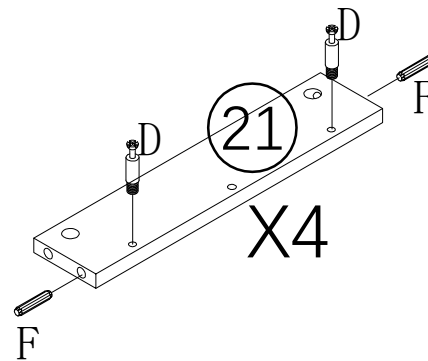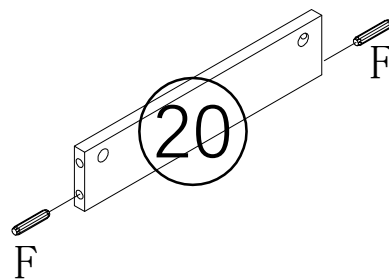

F*18


put F on board (18)(19)(20)(21)(22)



D*52



put D on board (16)(17)(18)(19)(21)

3

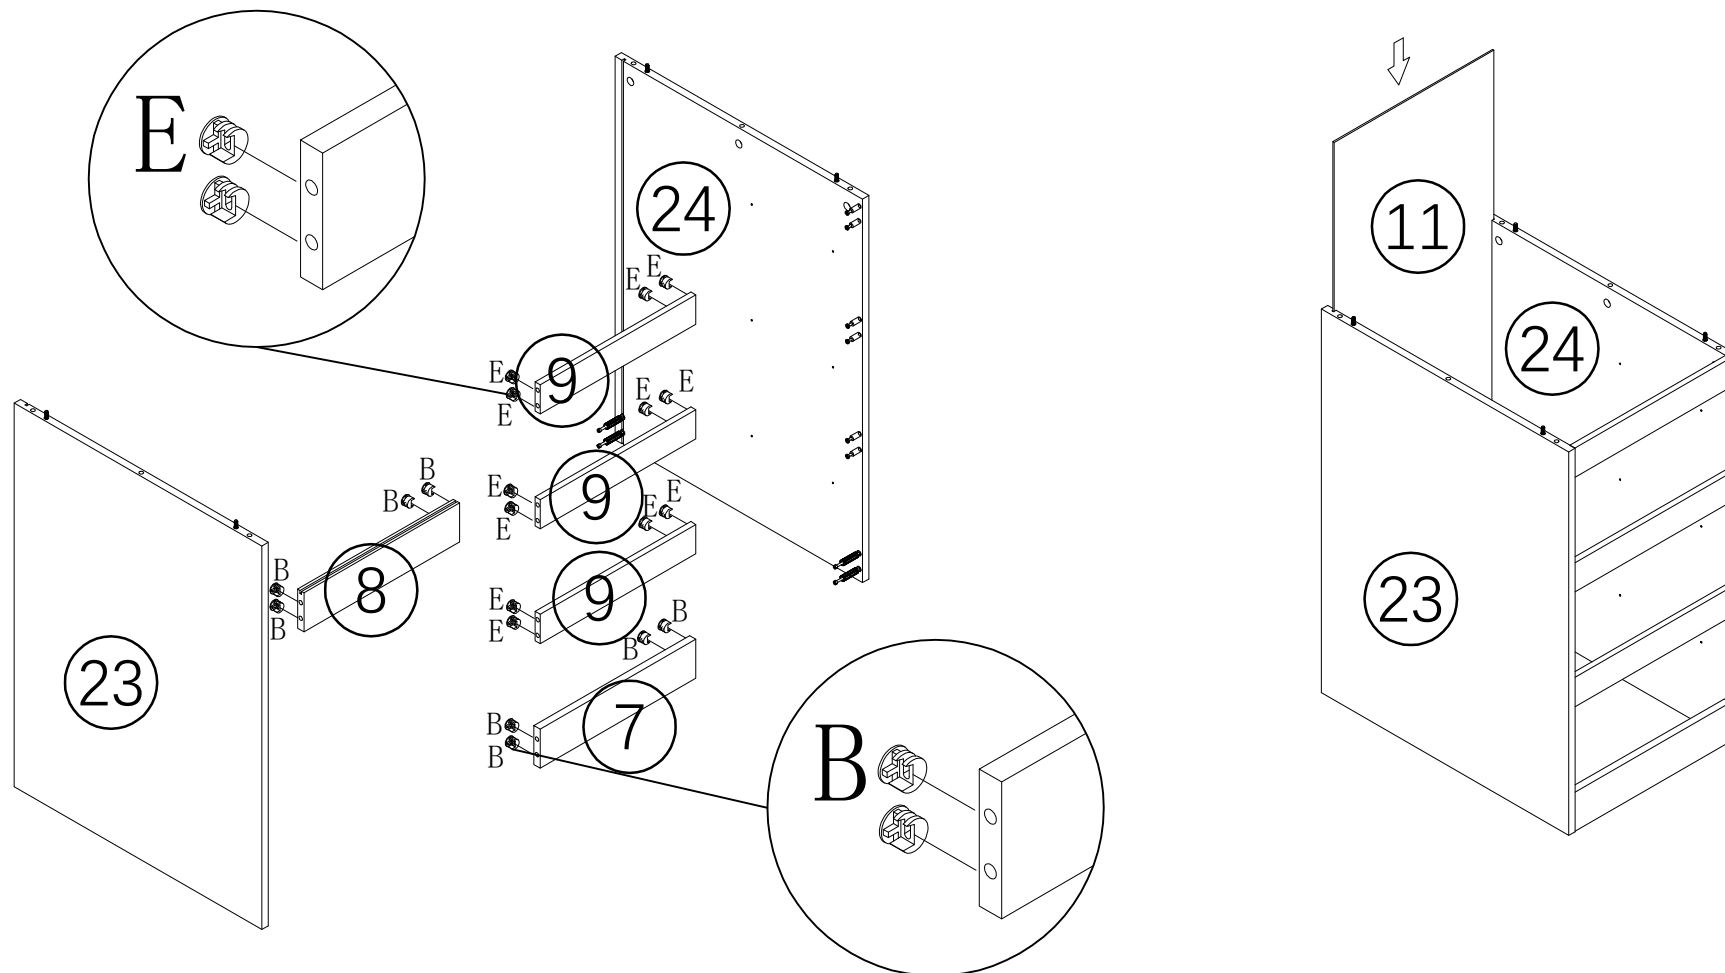

	B*8	put B on board (7)(8)
	E*12	put E on board (9)

4

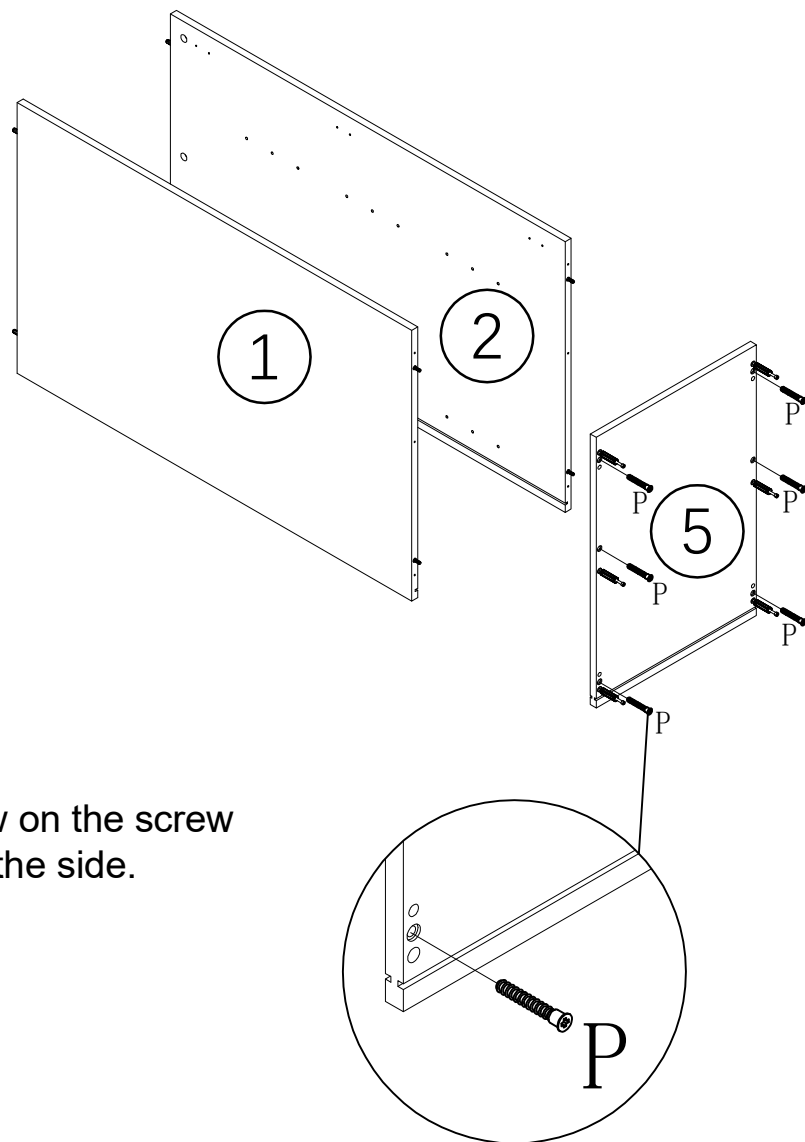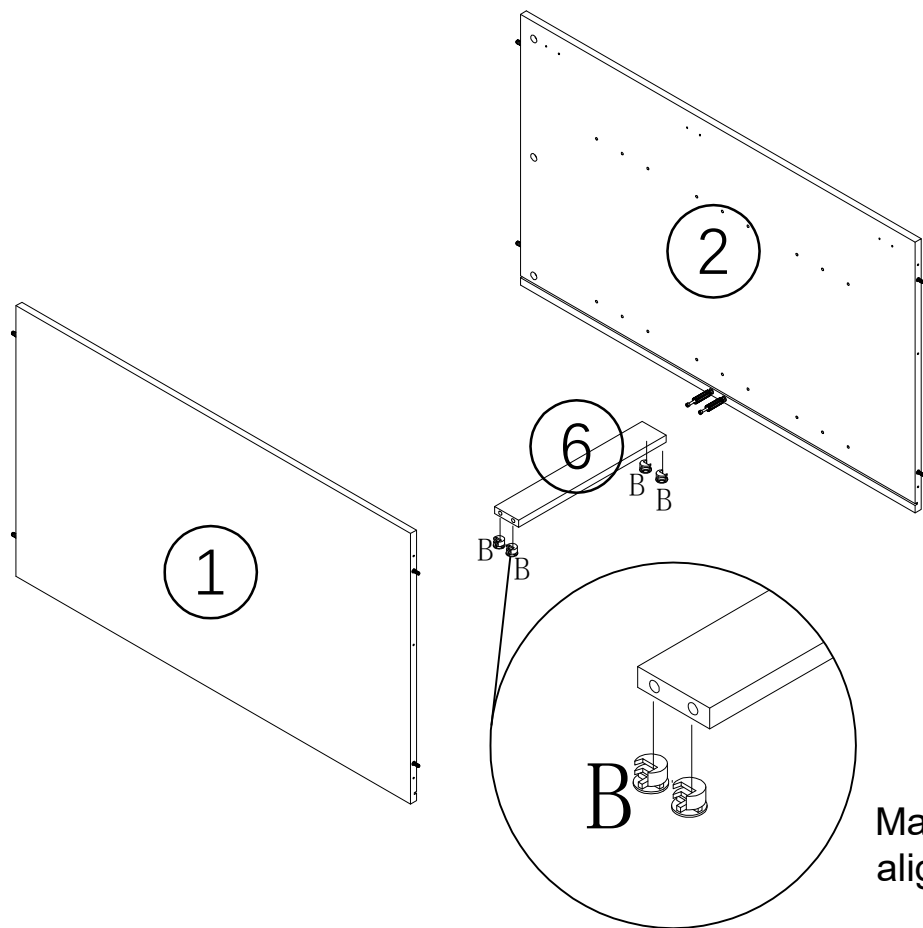

Make sure the arrow on the screw align to the hole on the side.



B*4

put B on board ⑥





P*6

put P on board ⑤

5


Make sure the arrow on the screw align to the hole on the side.

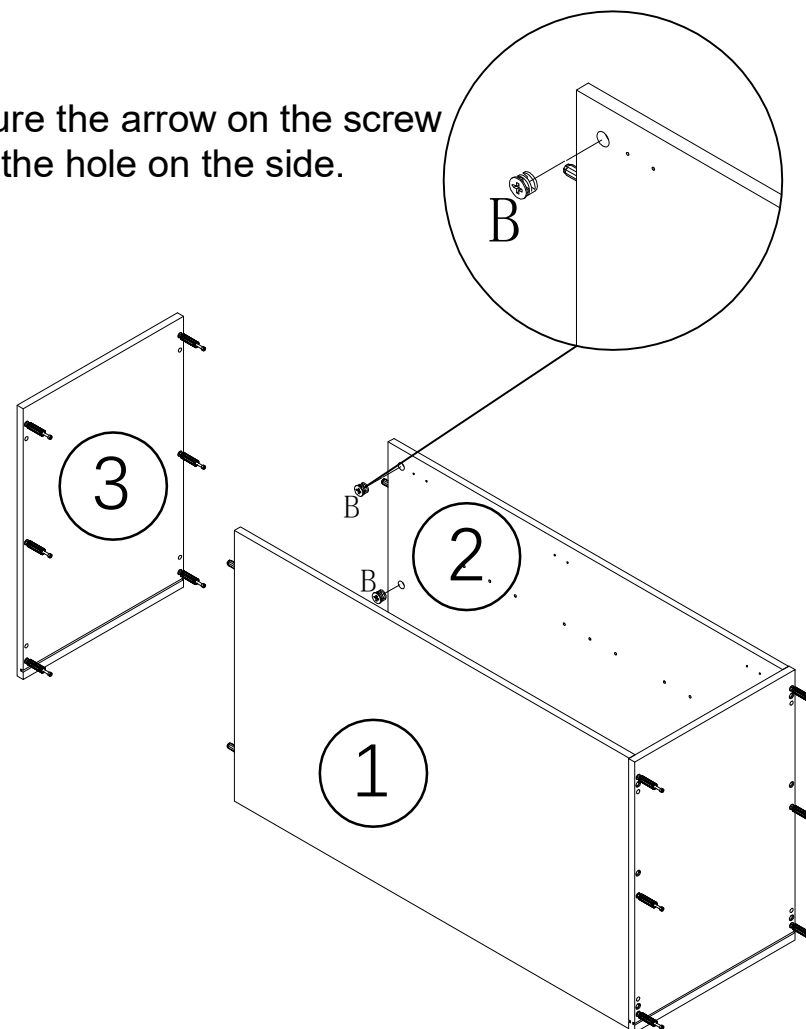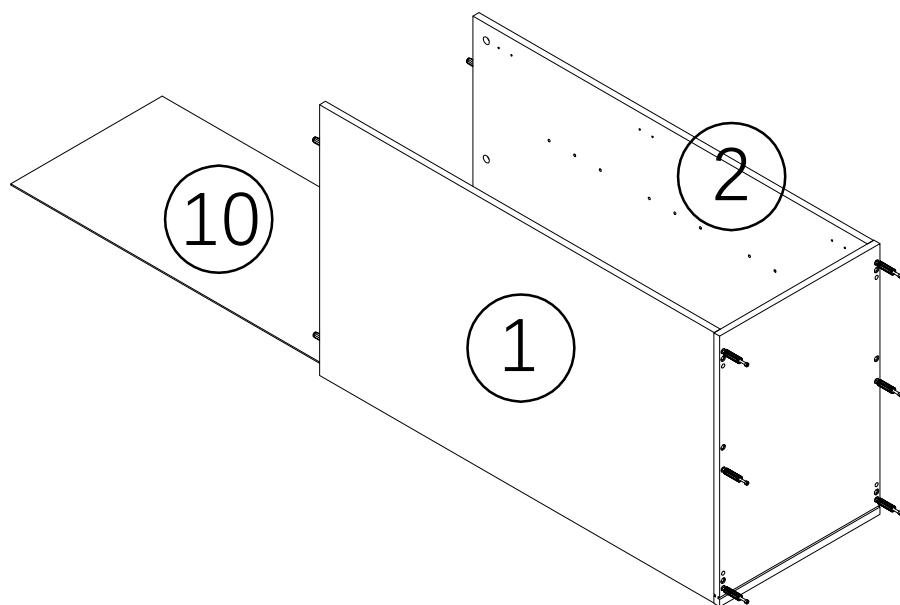

B*6

put B on board 1 2

6

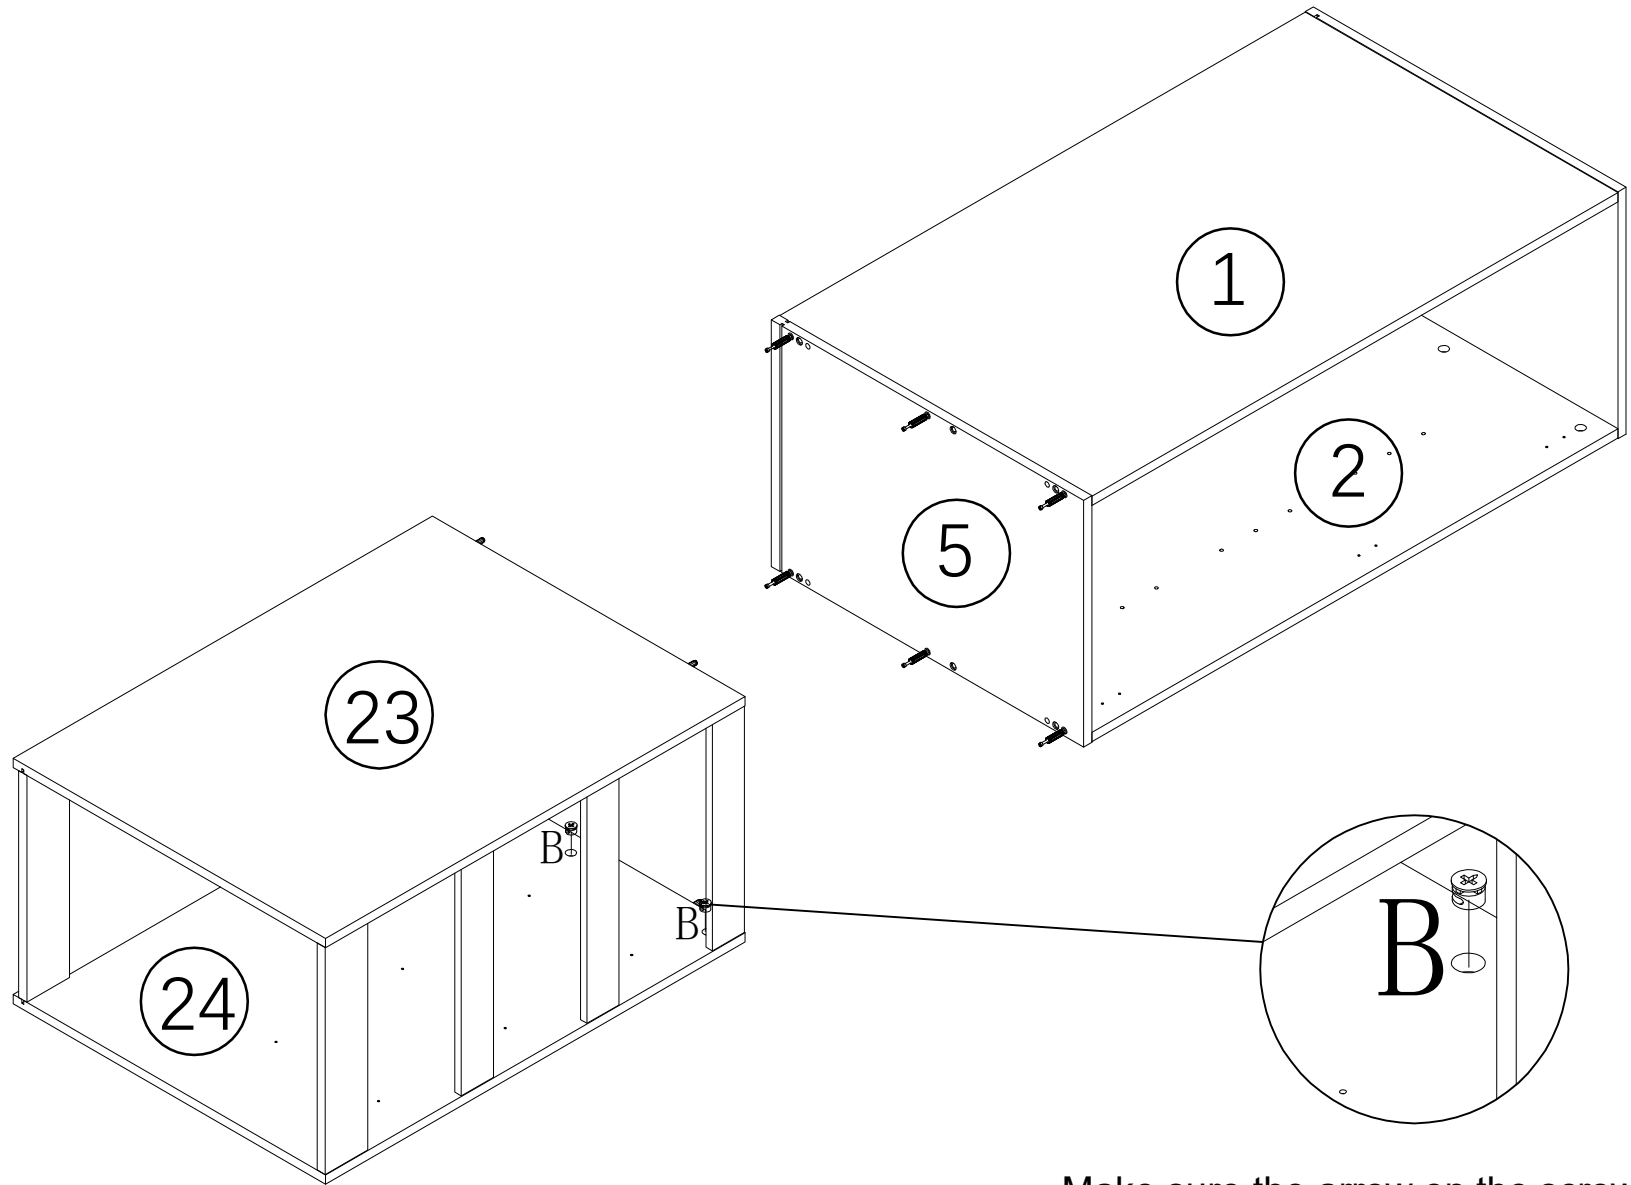



Make sure the arrow on the screw align to the hole on the side.




B*6

put B on board (23)(24)

7

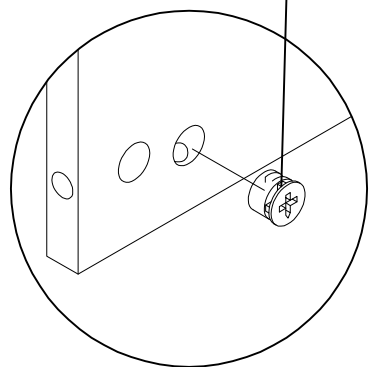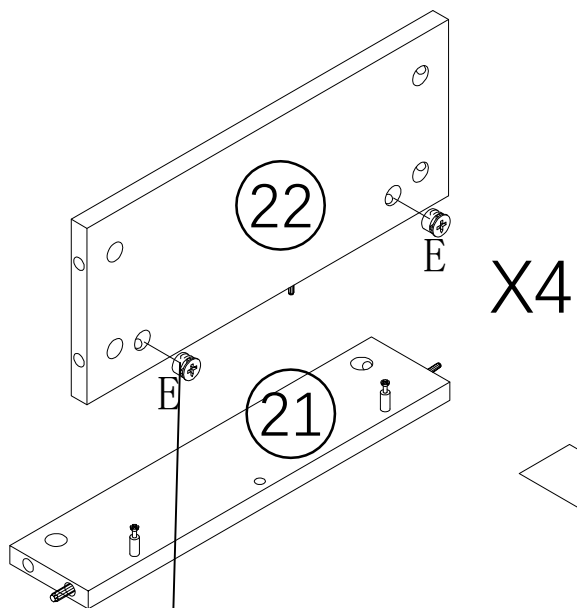


Make sure the arrow on the screw align to the hole on the side.

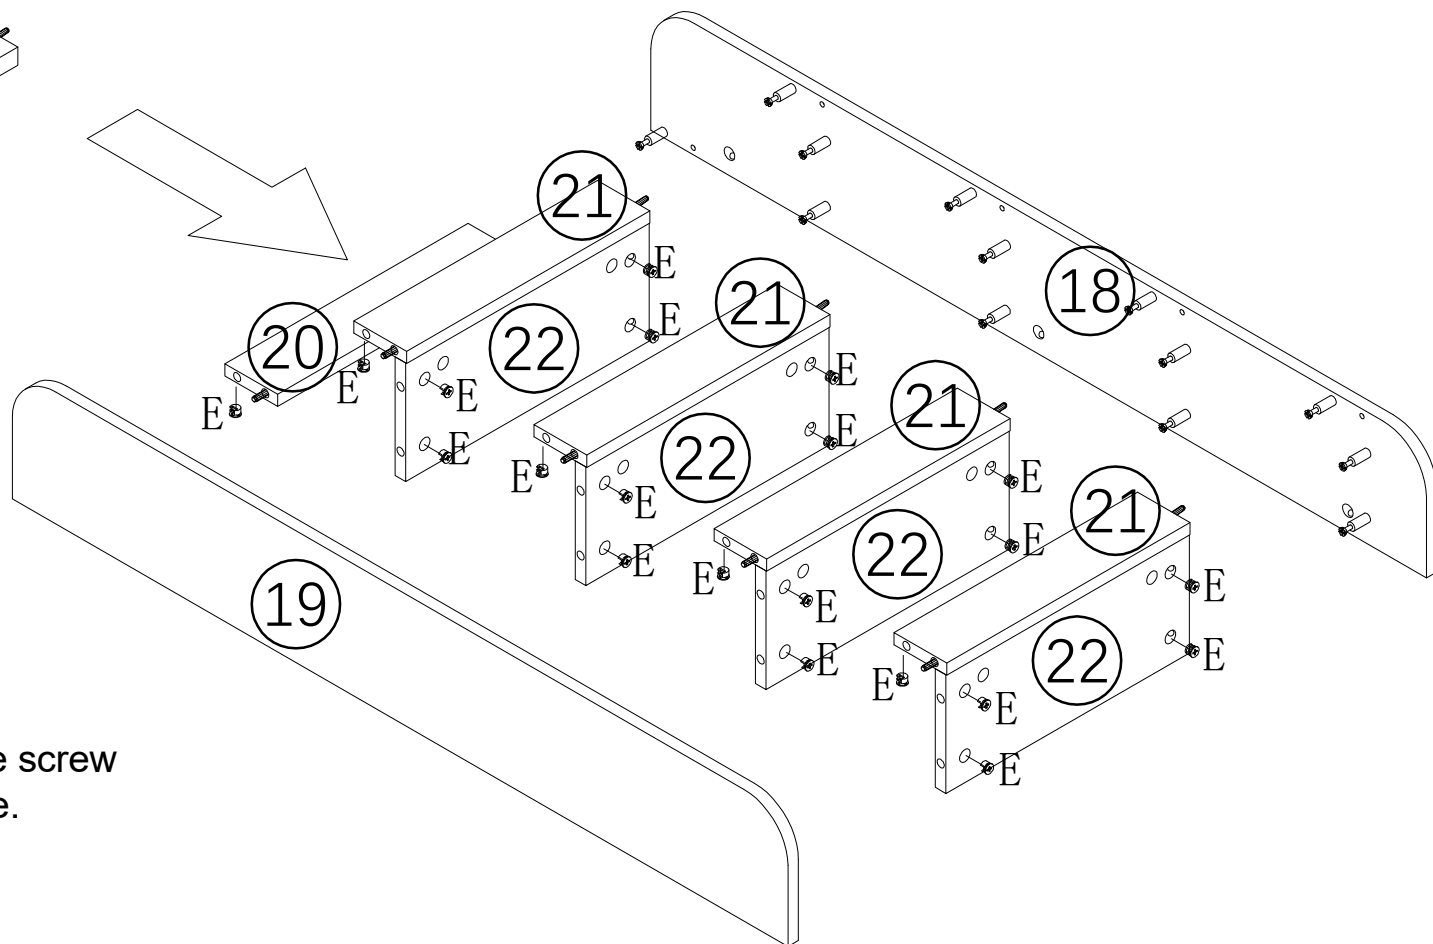

E*34 put E on board 20 21 22

8

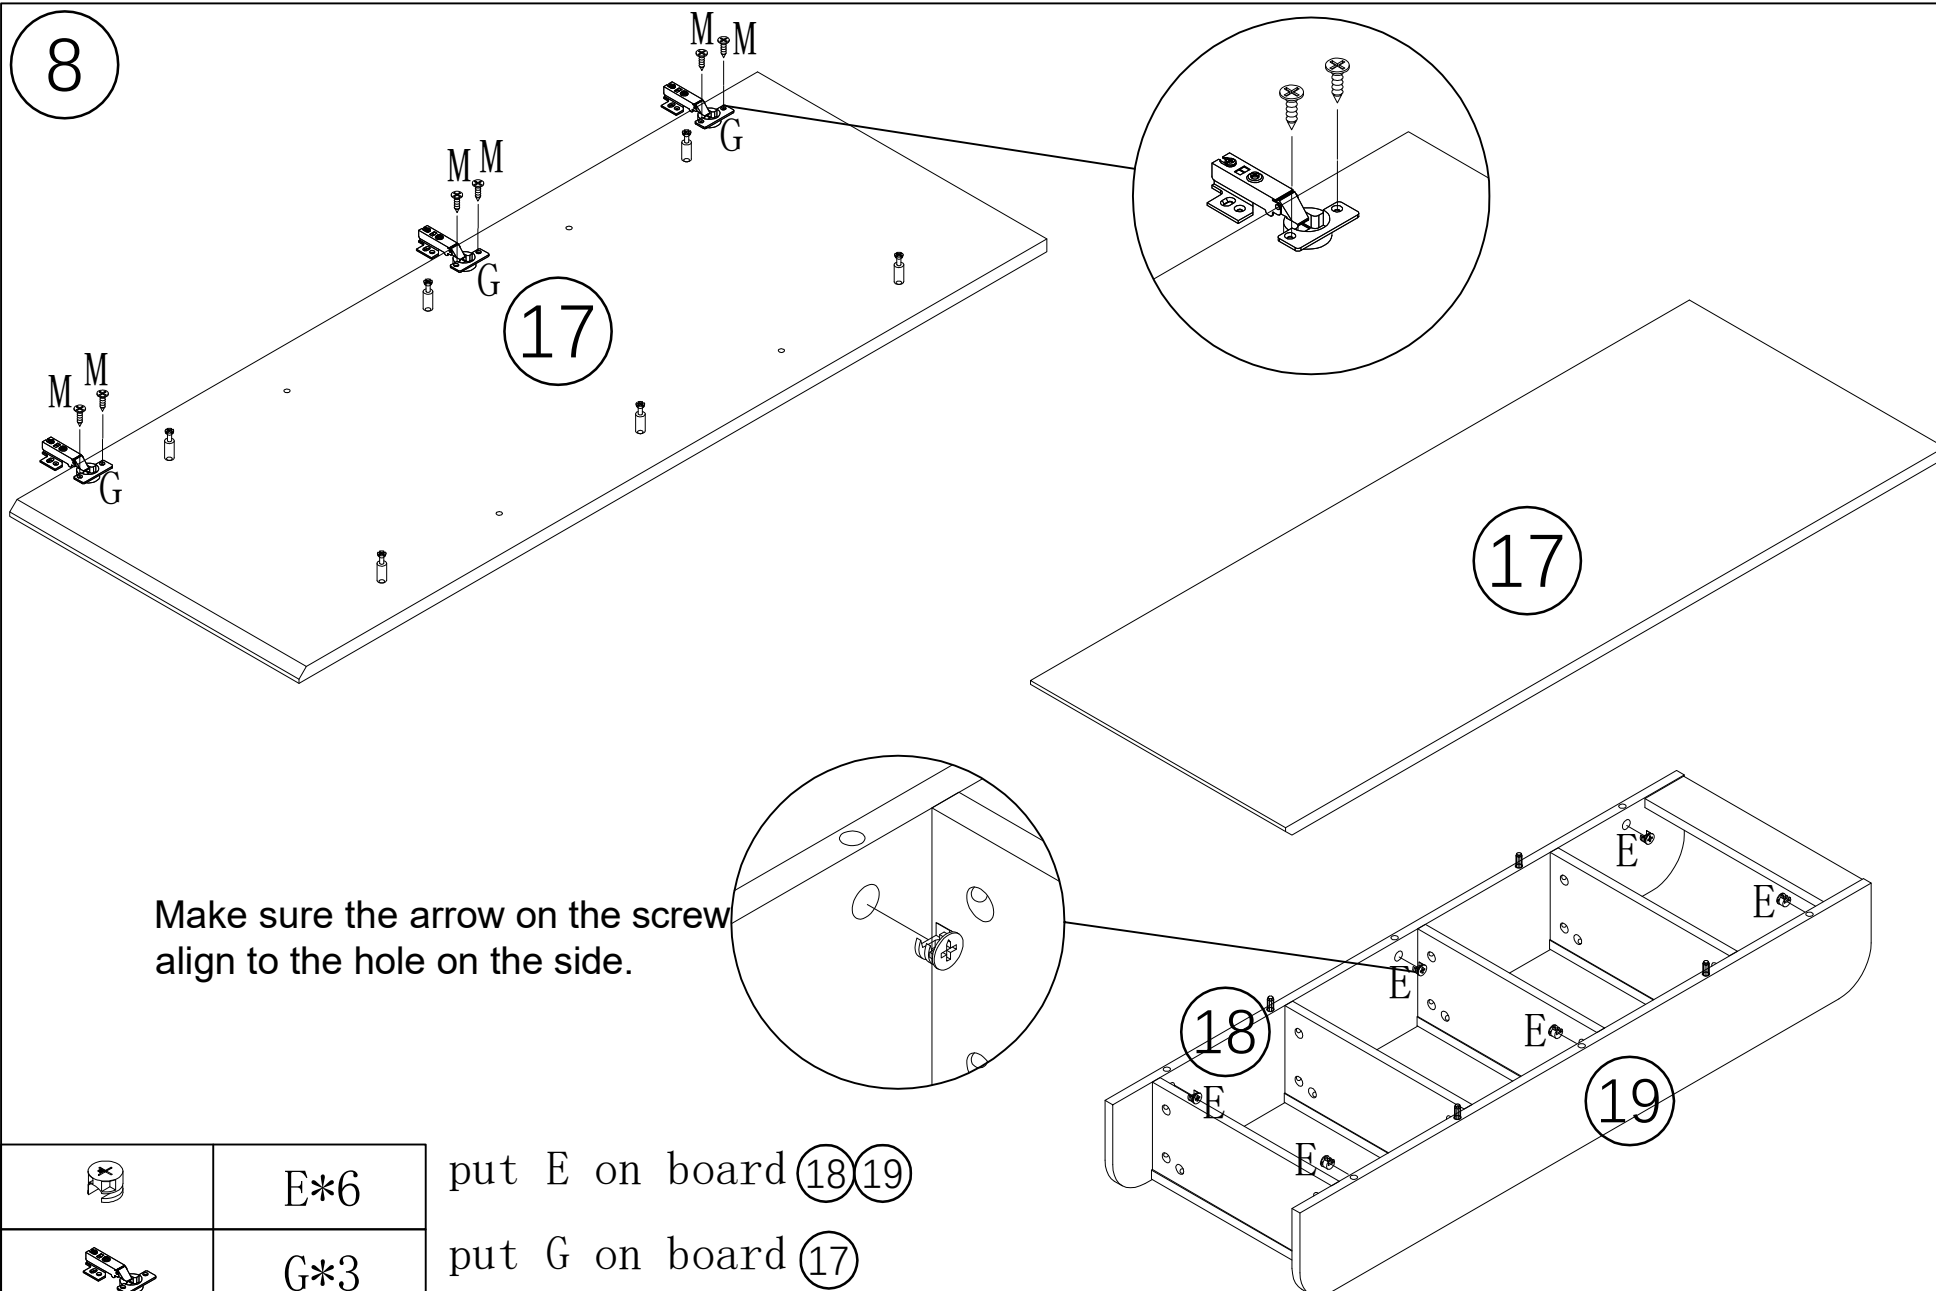

E*6

put E on board 18 19




G*3

put G on board 17




M*6

put M on board 17

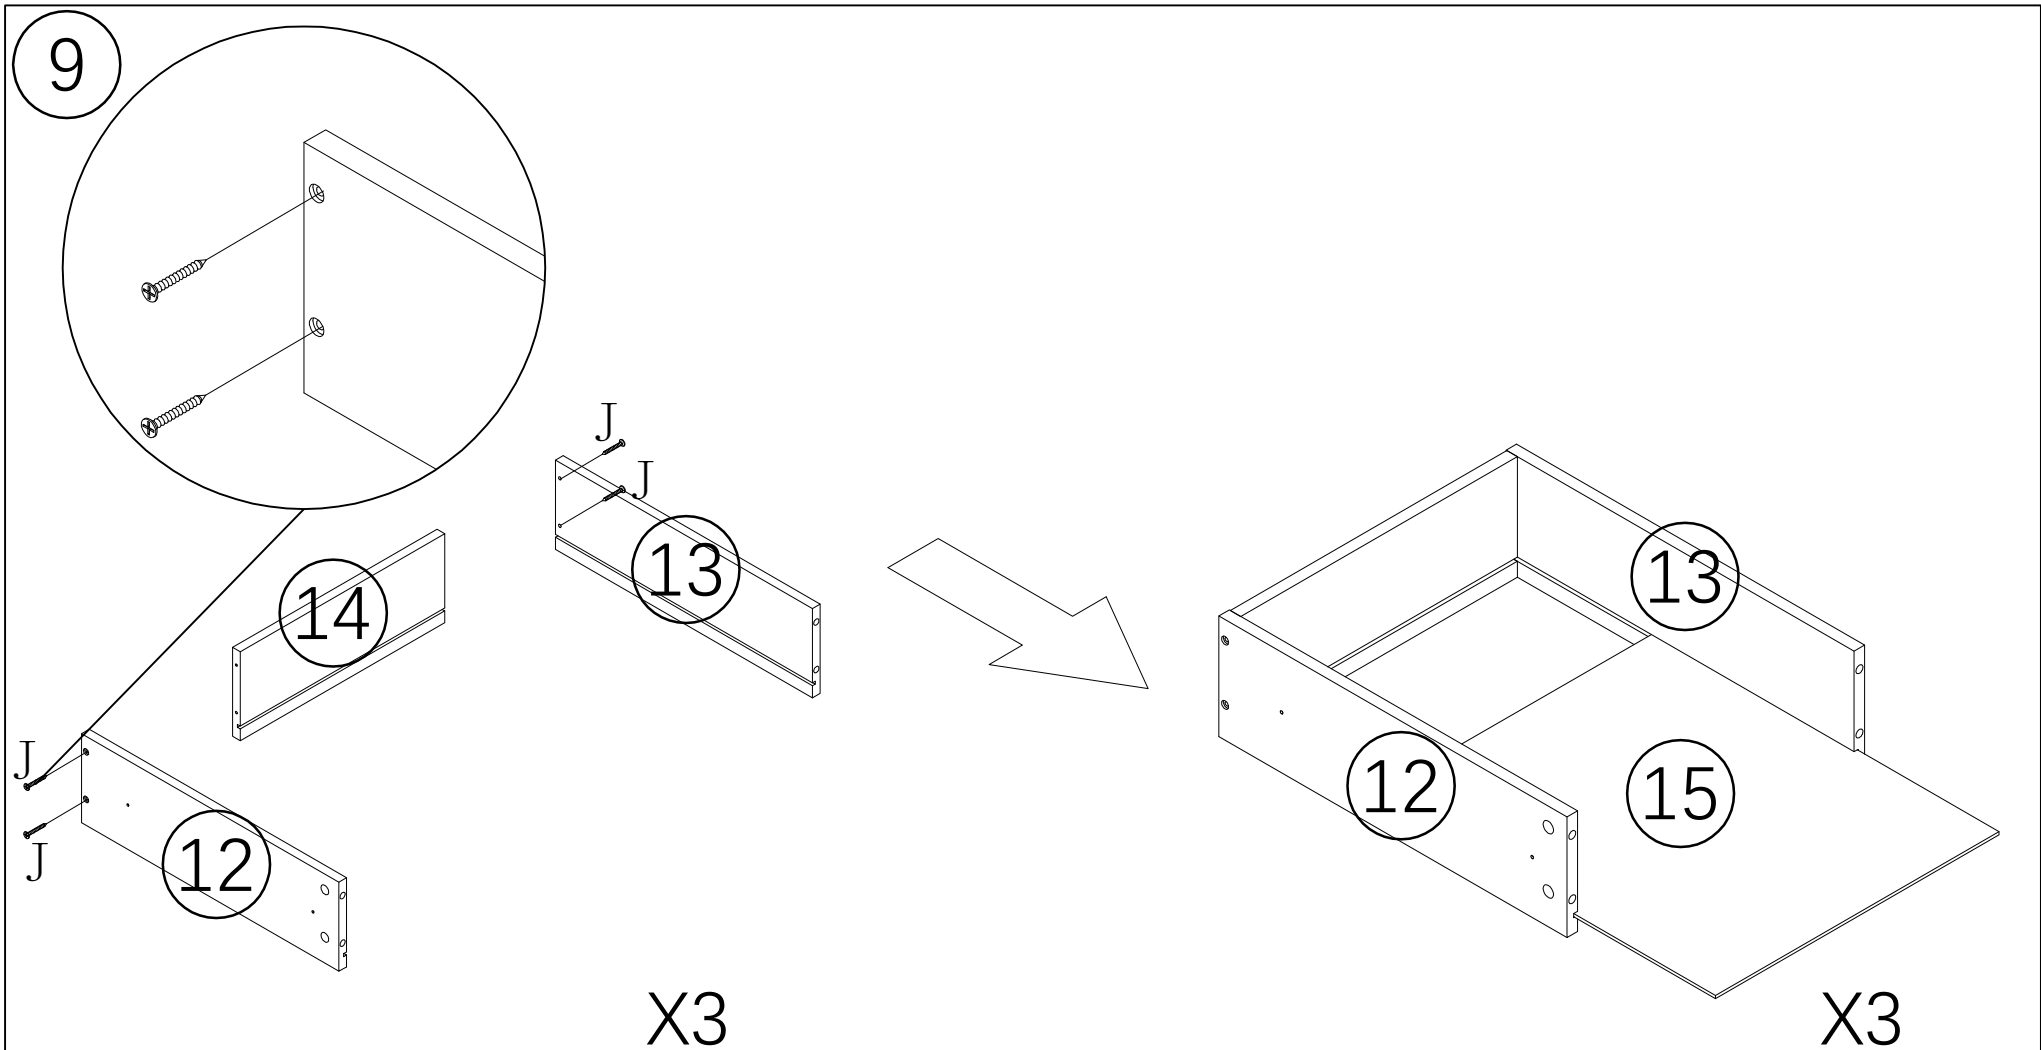

	J*12	put J on board (12)(13)
---	------	-------------------------

10

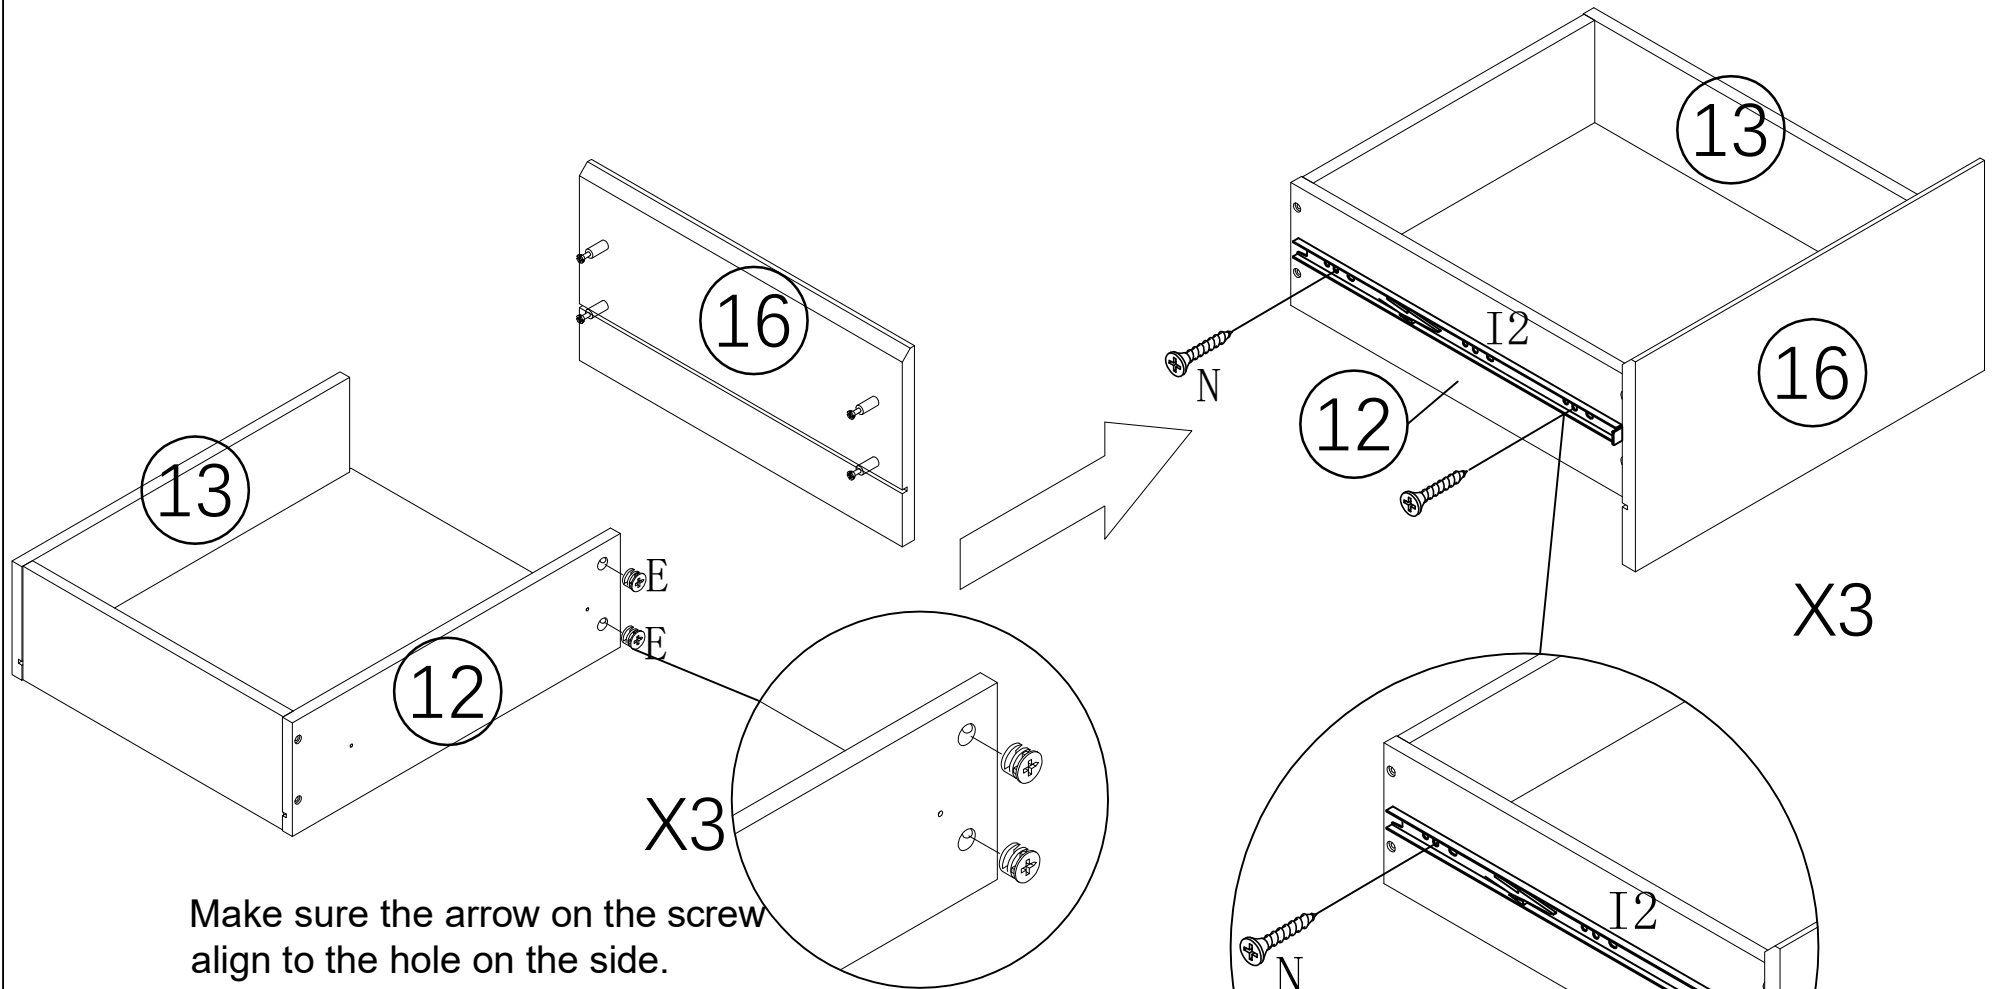



	E*12
	N*12
	I2*6

put E on board (12)(13)

put N on board (12)(13)

put I2 on board (12)(13)

11

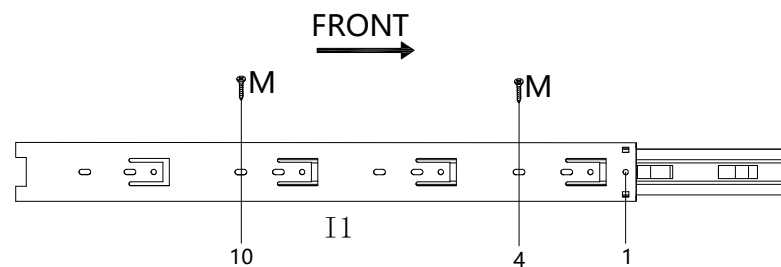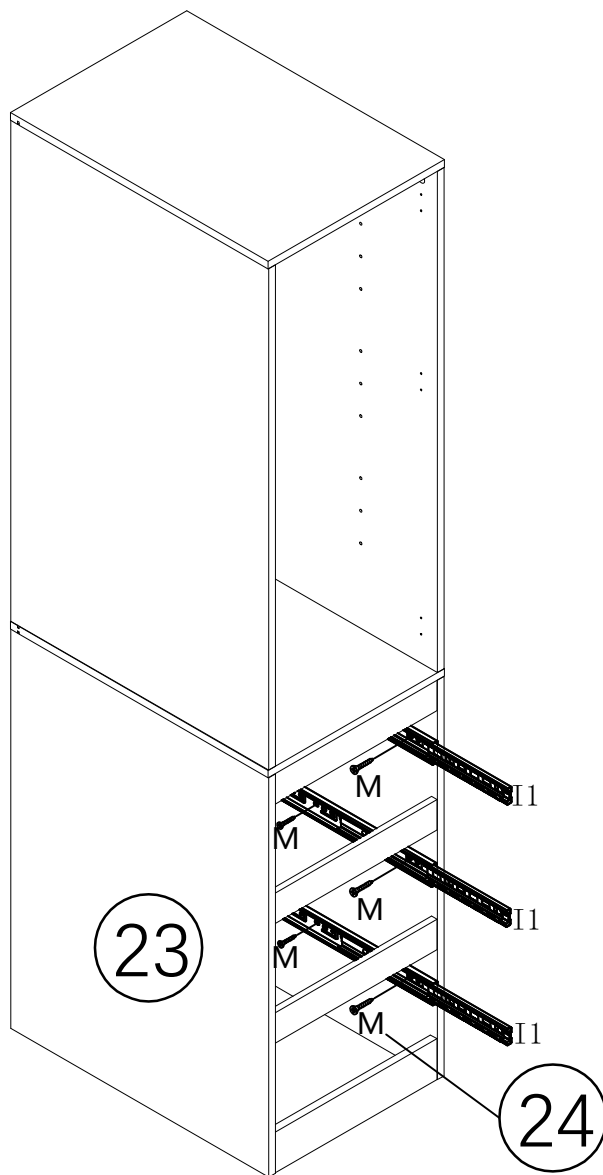


	M*12
	I1*6

put M on board (23)(24)

put I1 on board (23)(24)


12

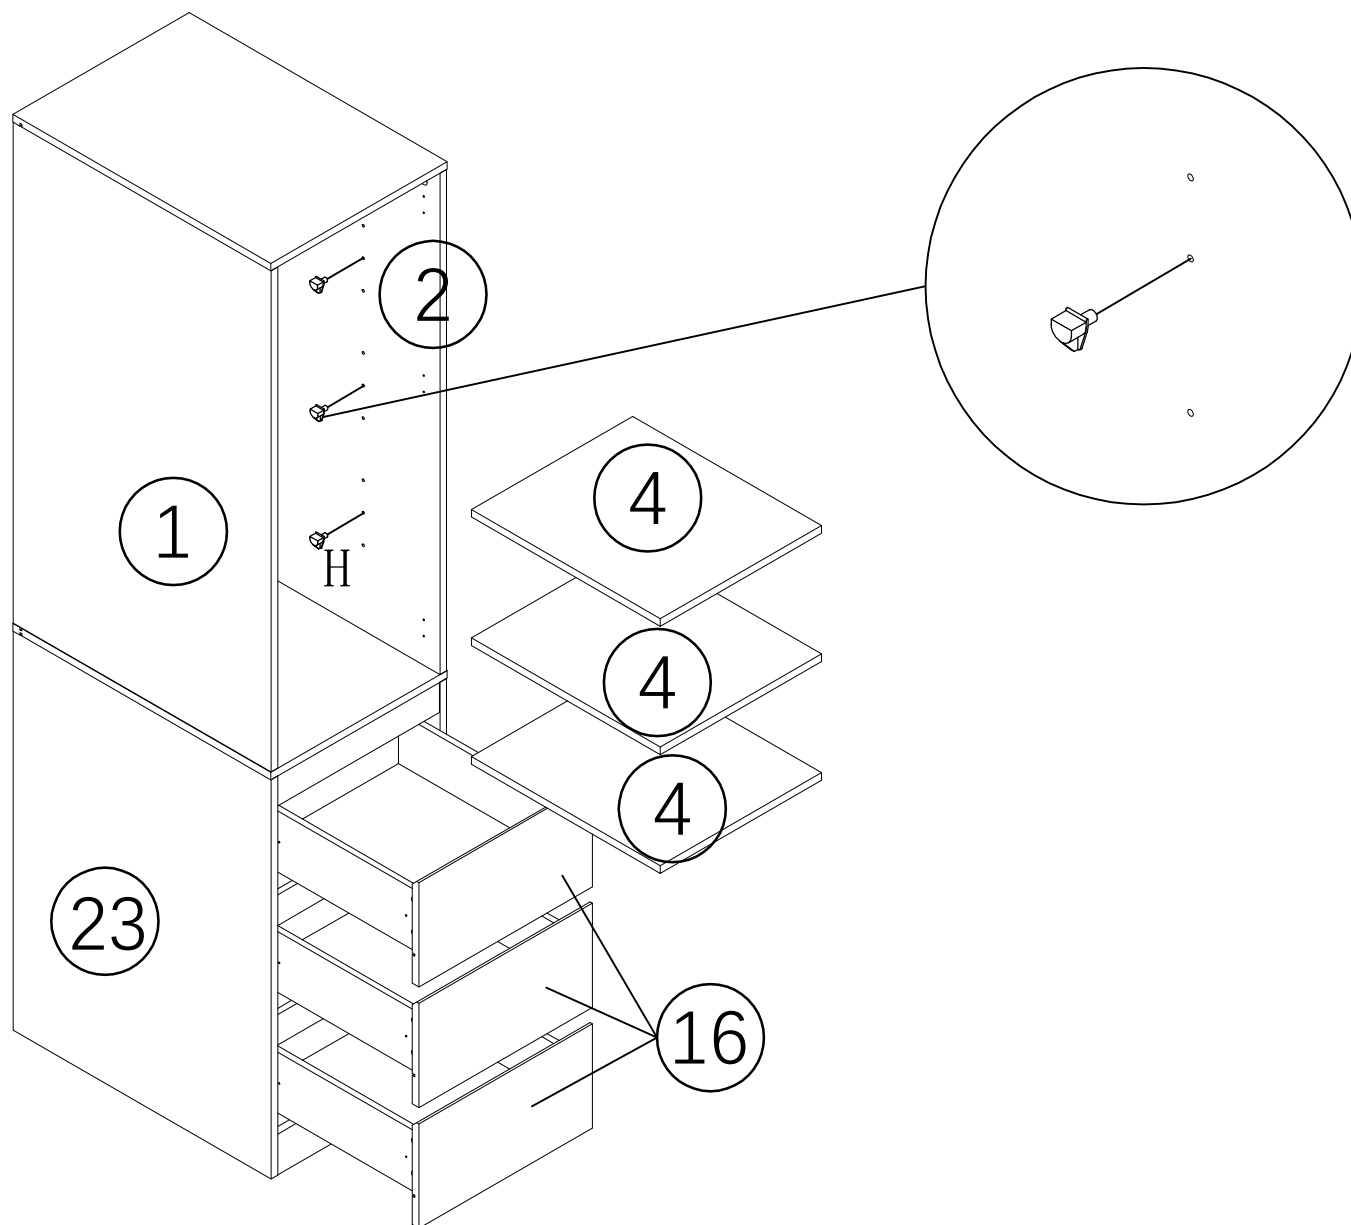

H*12



put H on board (1) (2)

13

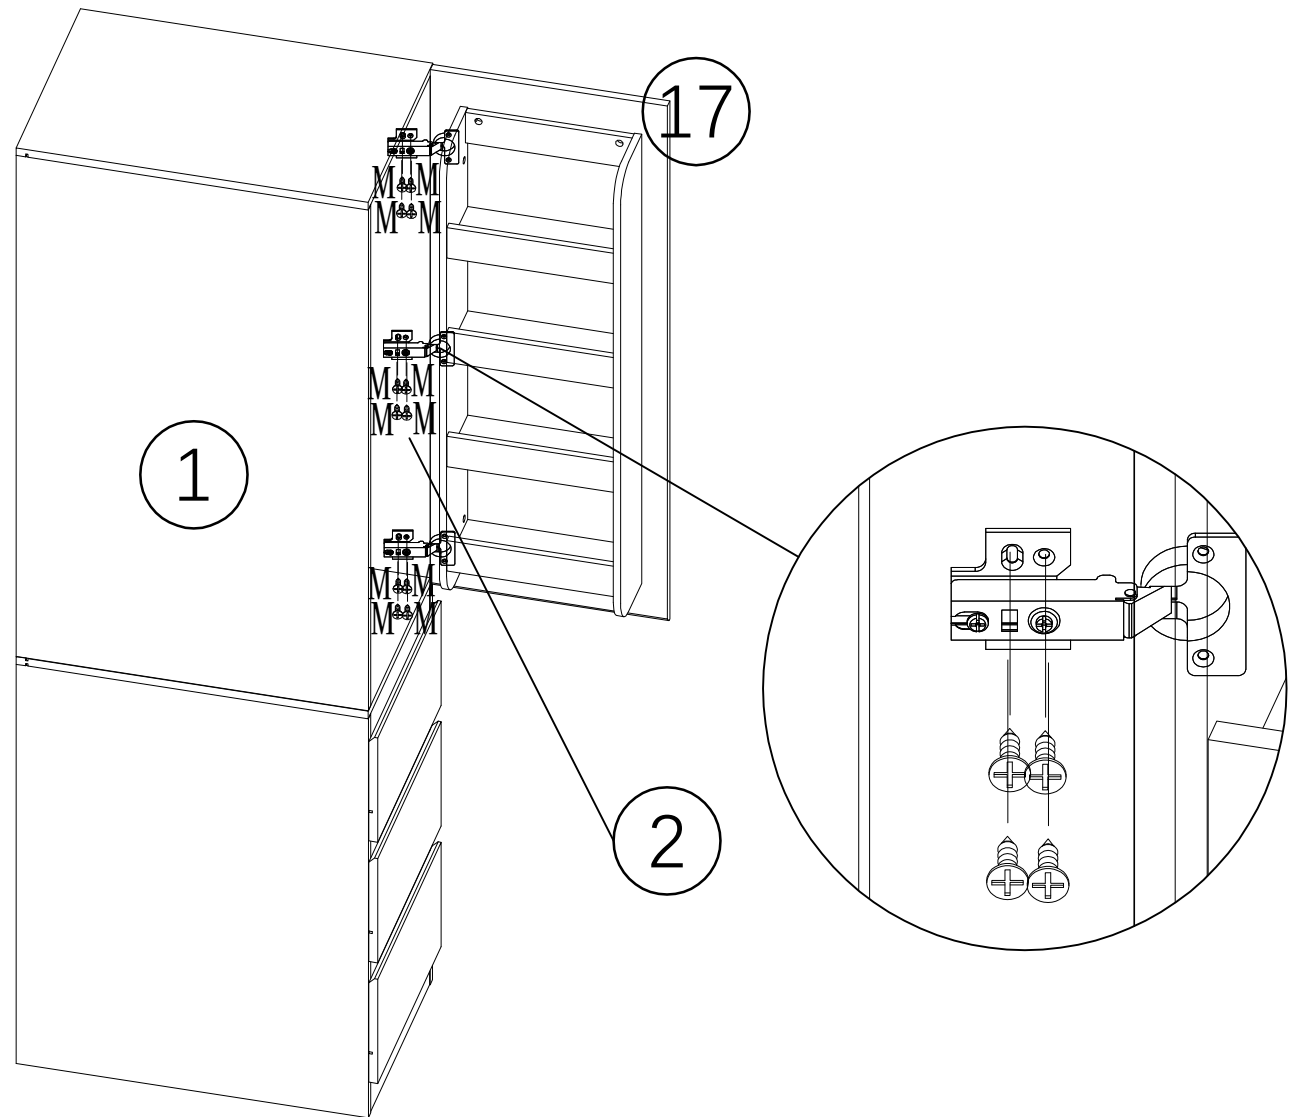





M*12 put M on board (2)

14

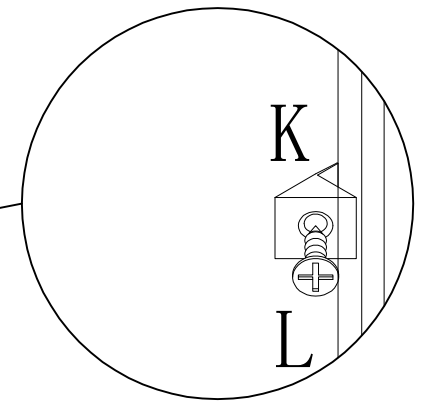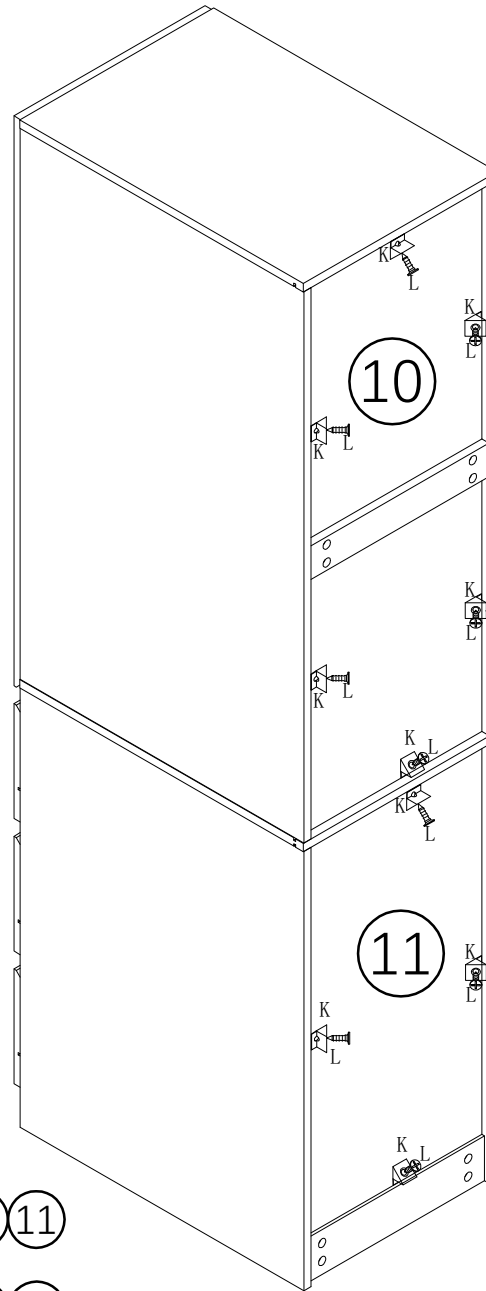

	K*10	put K on board (10)(11)
	L*10	put L on board (10)(11)

15

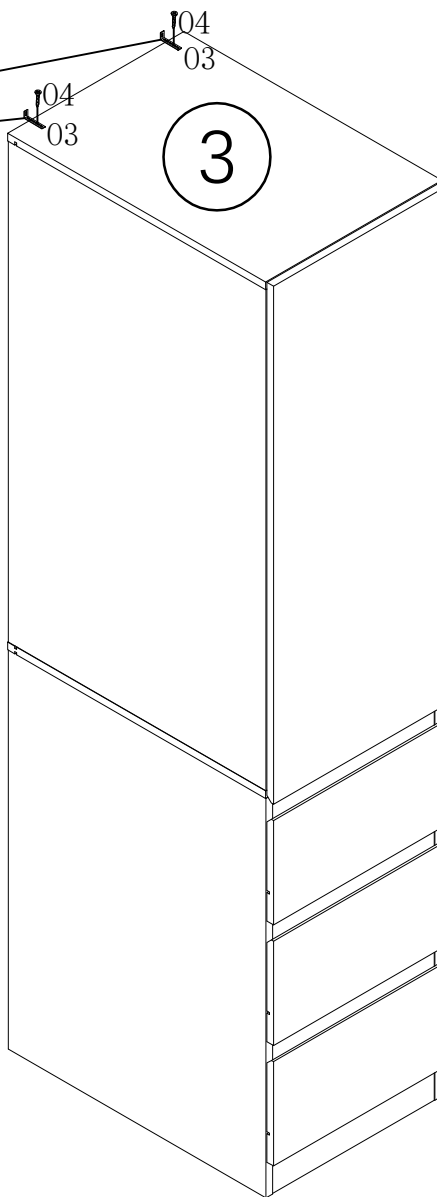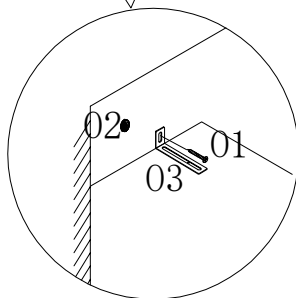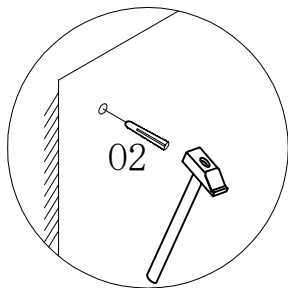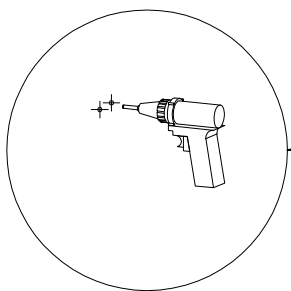

— 01 03
— 02 04

0*2