




Product Installation Instructions

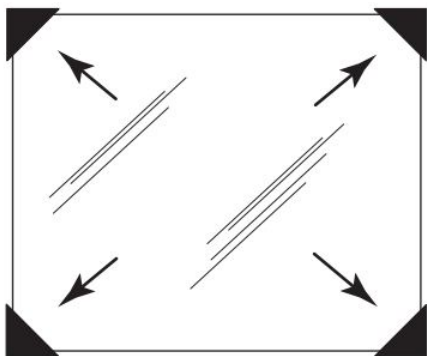

DO NOT REMOVE THE PROTECTIONS
UNTIL THE MIRROR IS INSTALLED.

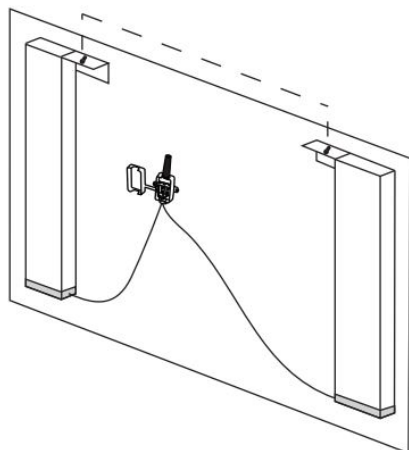

Measure the distance between the hole centers
and drill the wall with a 6mm (0.23") drill bit.

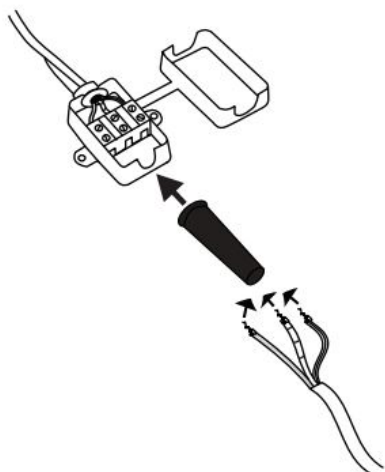

Connect the cables in the box (if present) and
close it.

Collection
T5-R

Model |
T5-R L45911
T5-R L45913
T5-R L45916

Dimensions Metric
1 inch = 2.54 cm
1 inch = 25.4 mm

WS[®] BATH
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426
Tel. 215 513 9400 - Fax 610 831 0215
www.ws bathcollections.com - info@ws bathcollections.com