


USER GUIDE

SHOE RACK

Natural / Stylish / Unique

HARDWARE

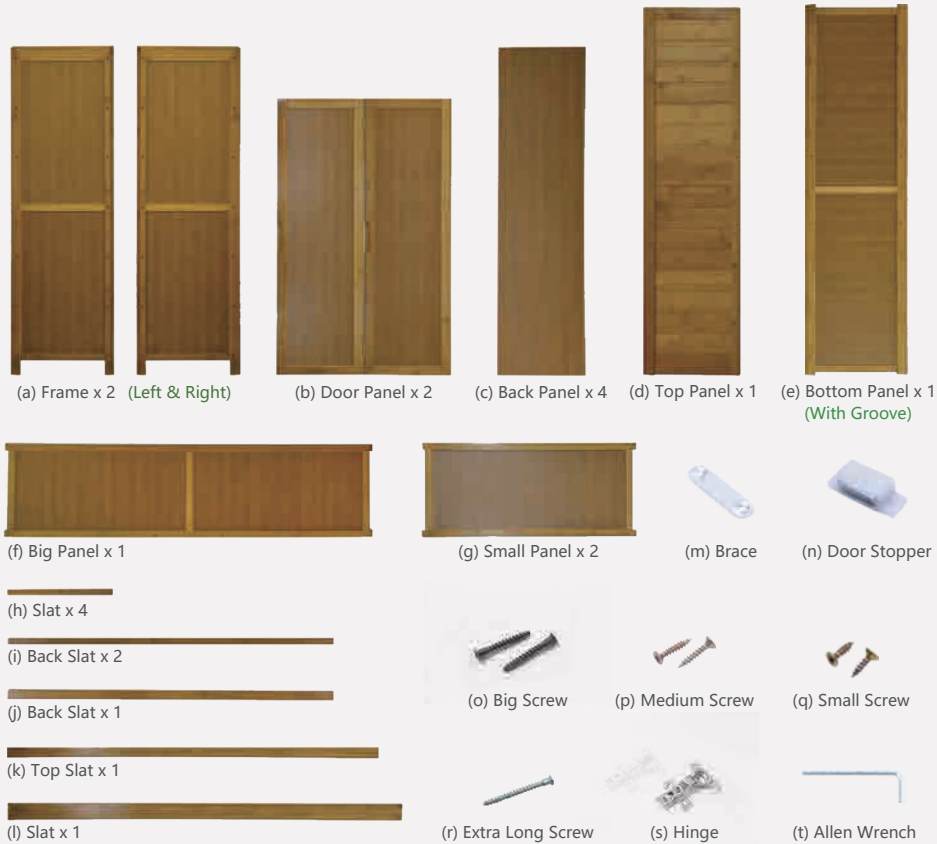

! ATTENTION

- 1 Please always read and follow the assembly, maintenance and operating instruction.
- 2 Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.
- 3 Keep children away during assembly. This item contains small parts which can be swallowed by children.
- 4 Wipe frames with water gently, do not use bleach, acid, or other solvents.
- 5 Check all hardware before assembly. Incorrect parts used may lead to damage.



Scan the QR code to view the assembly video.

ASSEMBLY INSTRUCTIONS



- 1 Unscrew the Hinges (s). Install them on Frame (a) with Small Screws (q).



- 2 Install Hinges (s) and Braces (m) on Door Panels (b) with Small Screws (q).



- 3 Connect Frames (a) with Bottom Panel (e). Secure them with Big Screws (o). Keep the grooves aligned.



- 4 Install Back Slat (j) and Slats (h) with Big Screws (o).



- 5 Install Big Panel (f) with Big Screws (o). Then install Slats (h) with Big Screws (o).



- 6 Position and secure Small Panels (g) with Big Screws (o).

© 2020 - 2021 by Pundarika LLC - MoNiBloom.com



- 7 Install Door Stoppers (n) on Top Panel (d) with Small Screws (q). Then install Top Panel (d) with Big Screws (o).



- 8 Insert Back Panels (c) and Back Slats (i) along the grooves as picture shown.



- 9 Secure Top Slat (k) with Big Screws (o). Use Extra Long Screw (r) on top.



- 10 Install Door Panels (b) with Small Screws (q).



- 11 Secure Slat (l) with Medium Screws (p).



- 12 Done!

© 2020-2021 by Pundarika LLC - MoNiBloom.com

© 2020-2021 by Pundarika LLC - MoNiBloom.com