


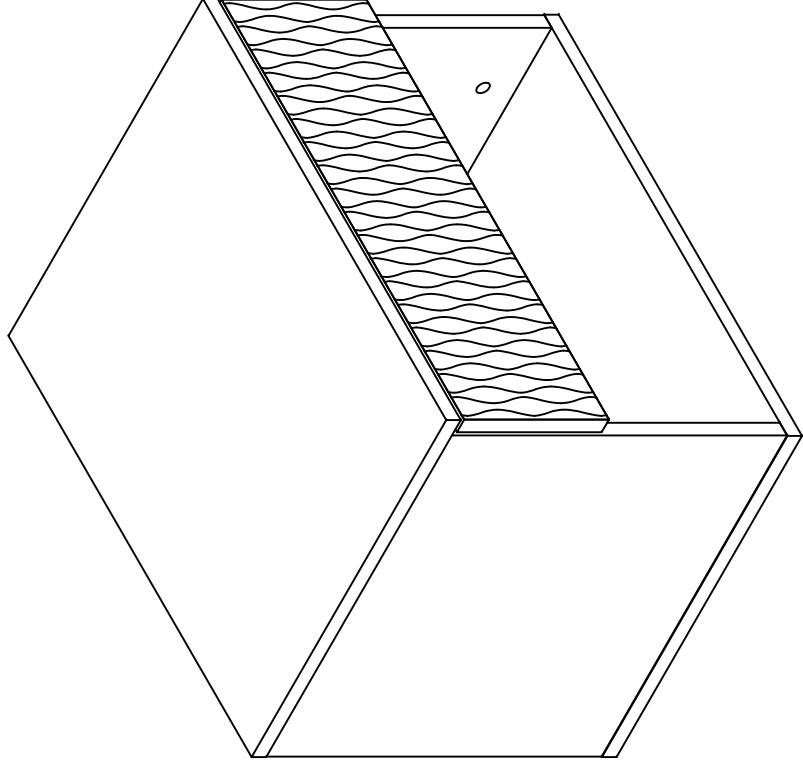
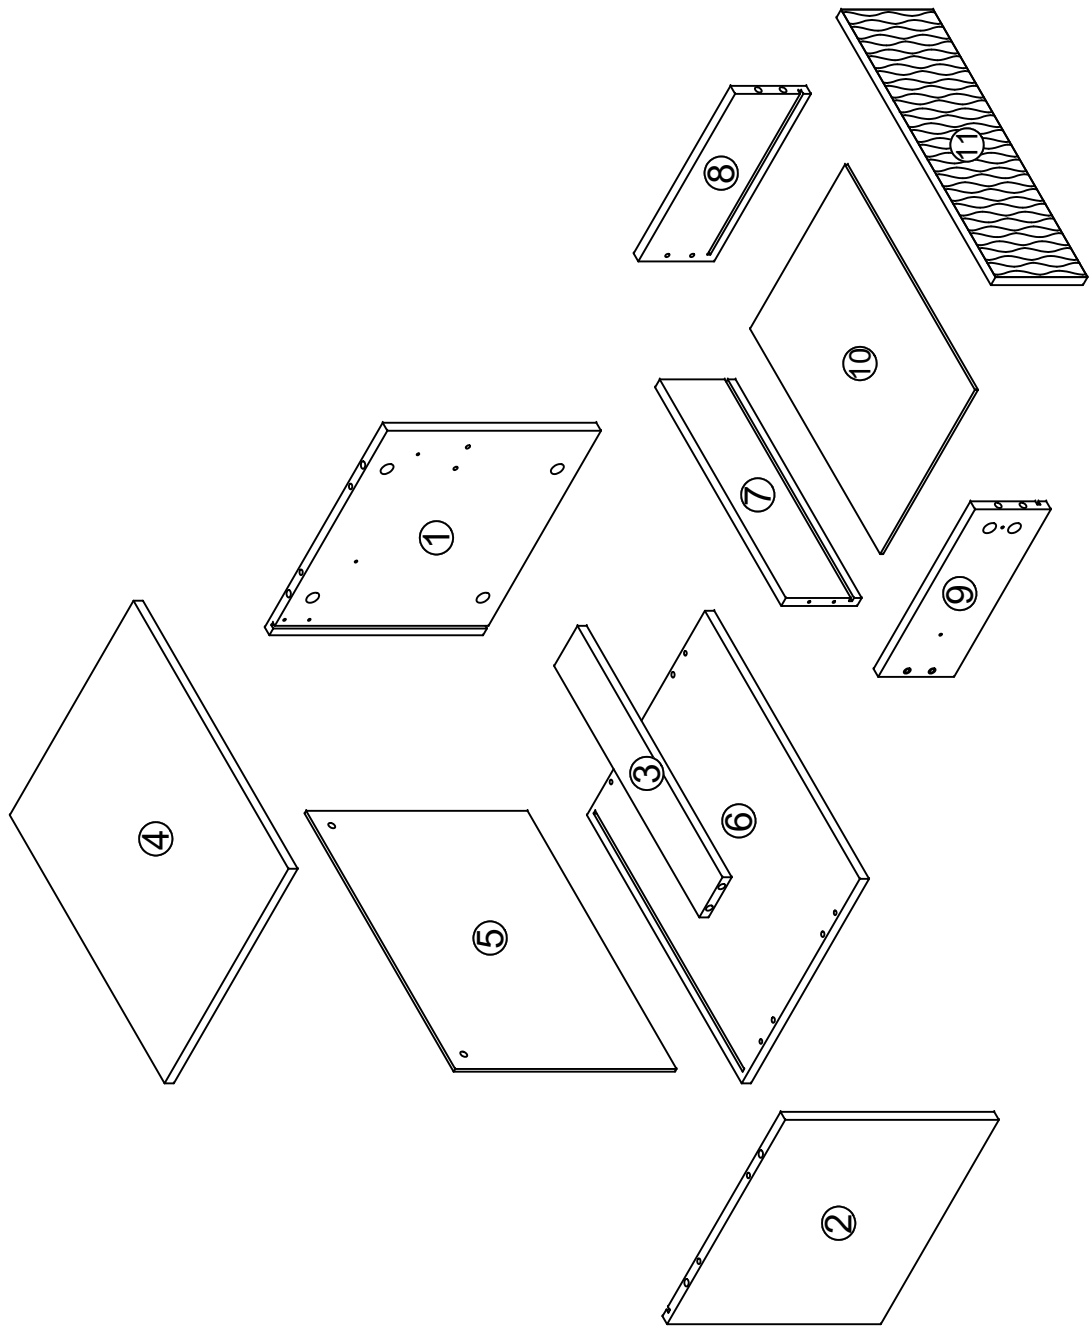


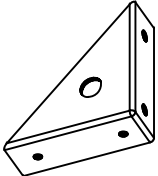


XFG3-01/XFG3-02







A  16+2PCS	B  16+2PCS	C  8+2PCS	 M3.5X12M 16+2PCS
E  M3.5X30M 4+1PCS	F  2PCS	G  LX250mm 2PCS	H  (3.5*16mm) 4+1PCS
I  M4X45M 2PCS	J  2PCS	K  2PCS	

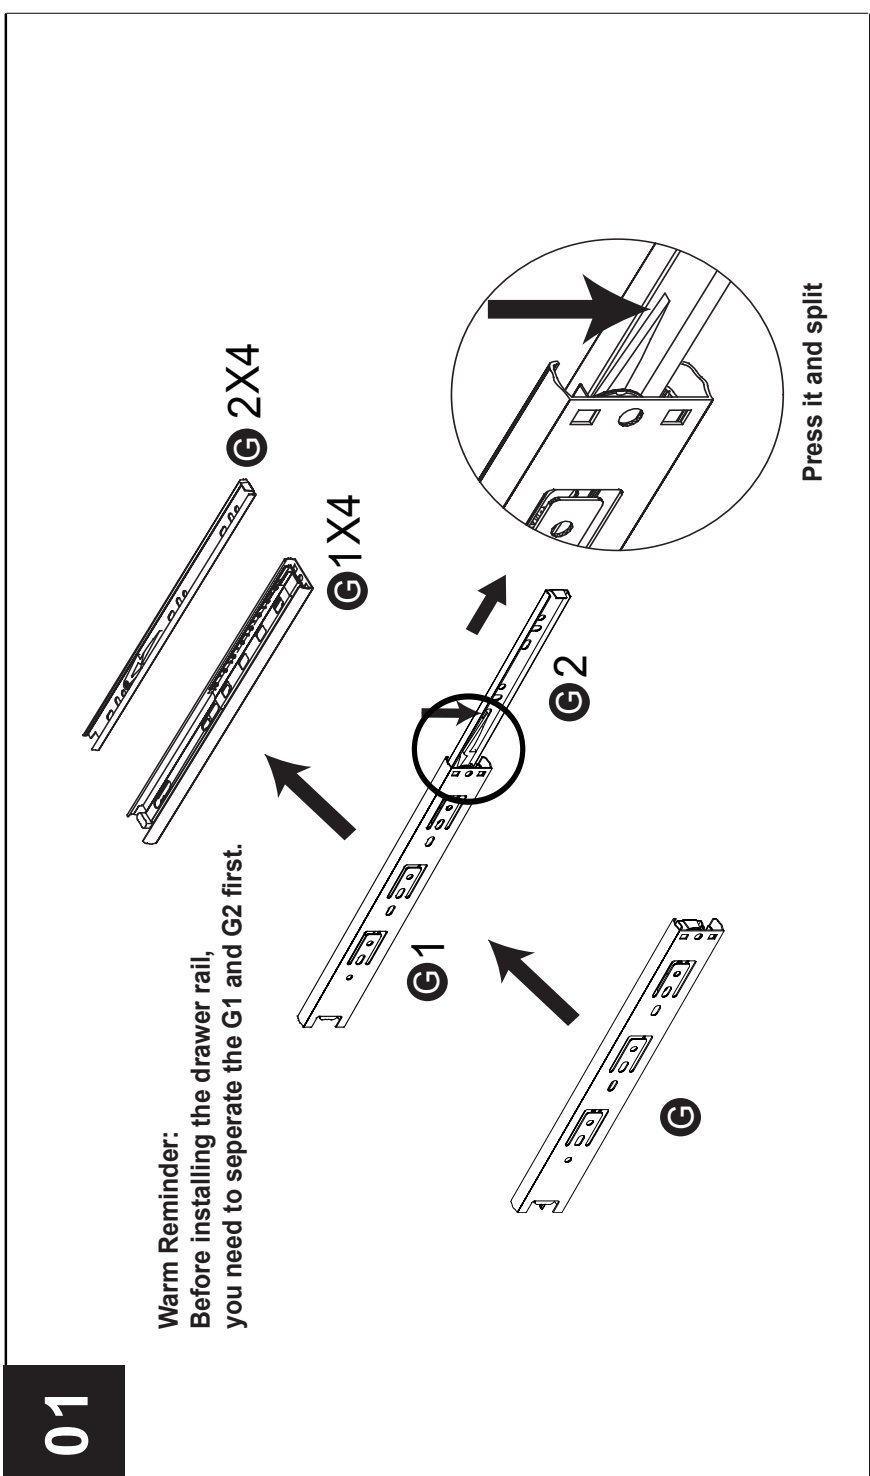

02

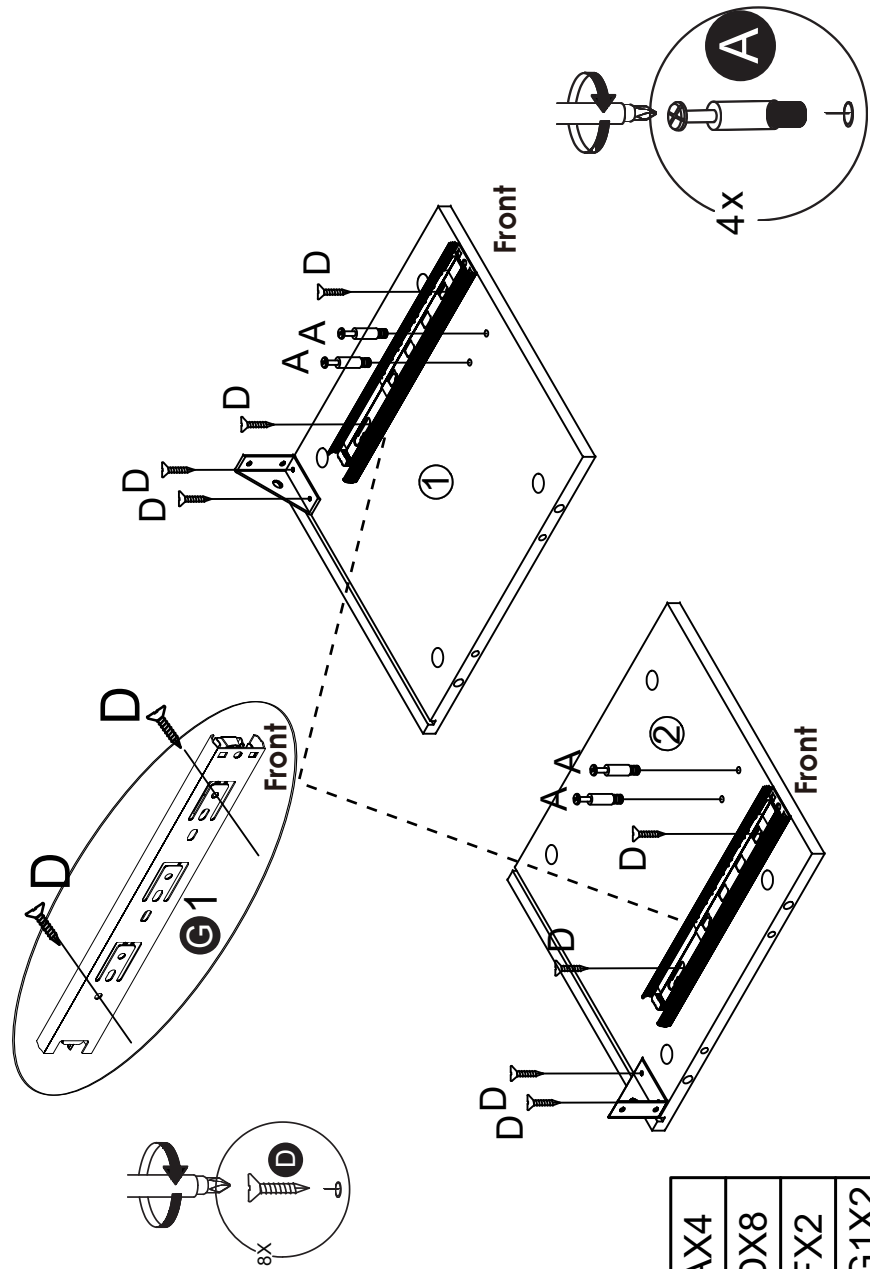


03

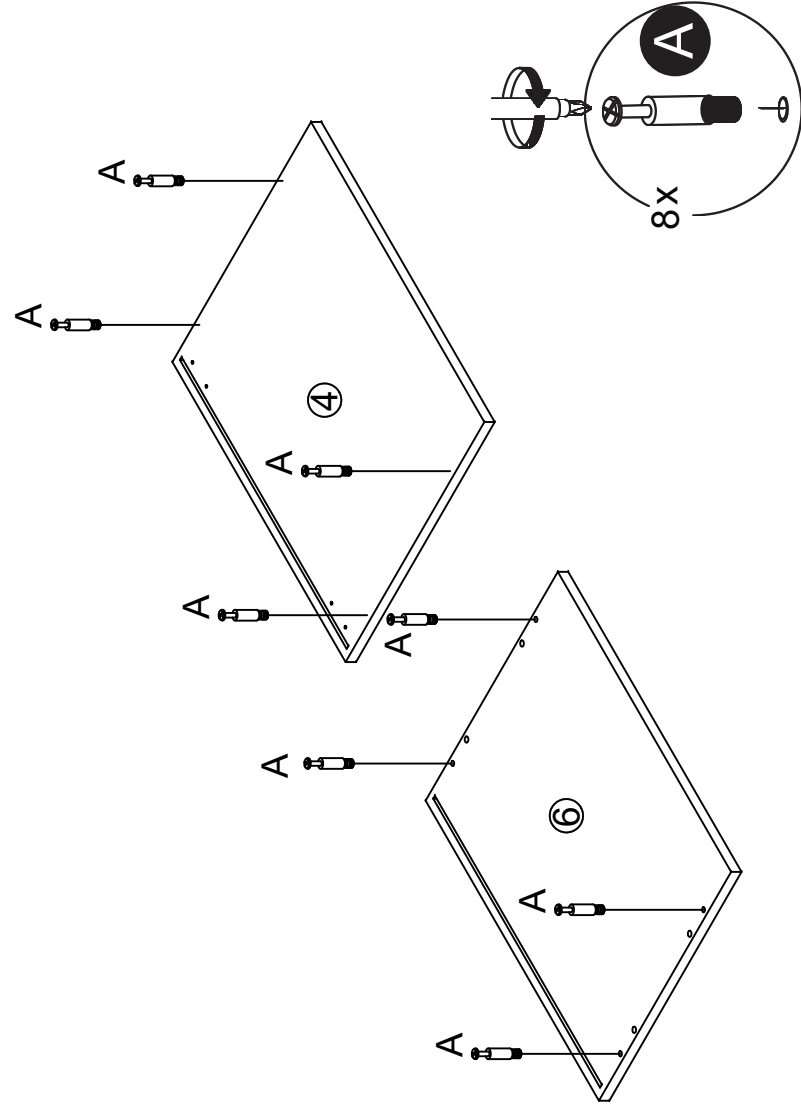



	AX8
--	-----

04

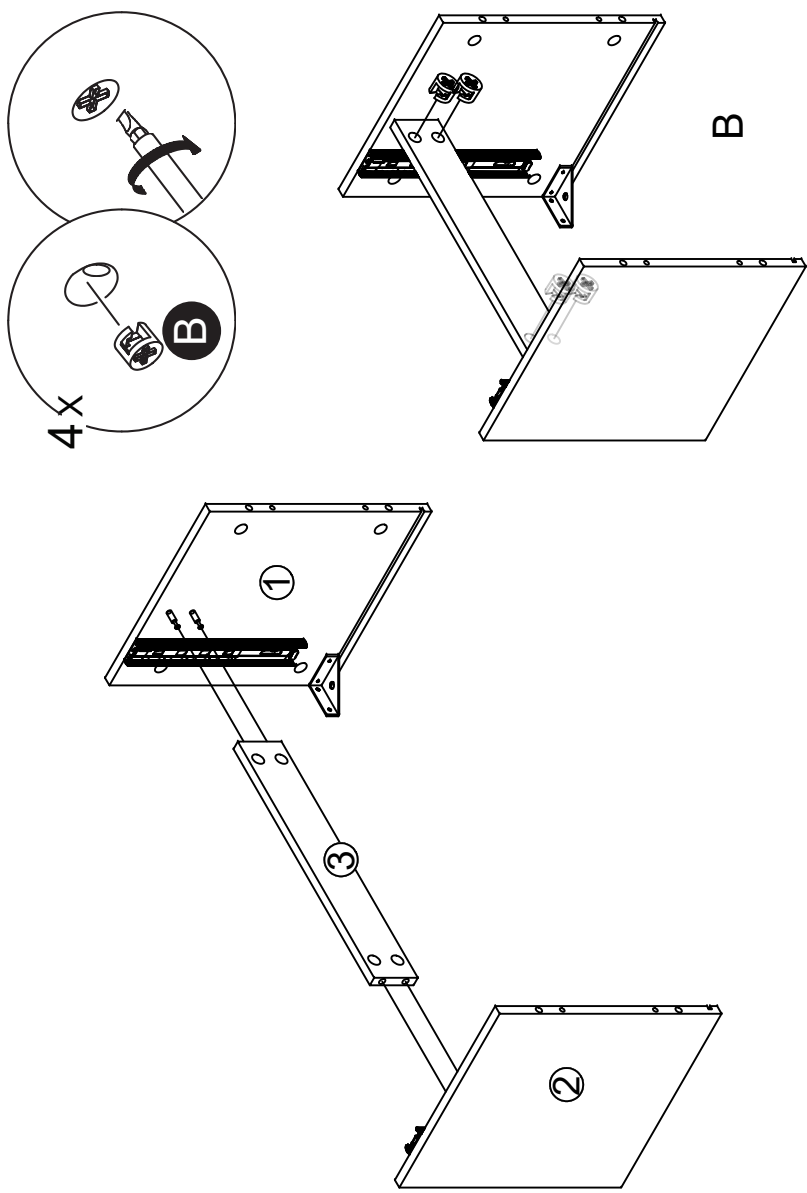


BX4

05

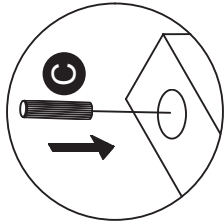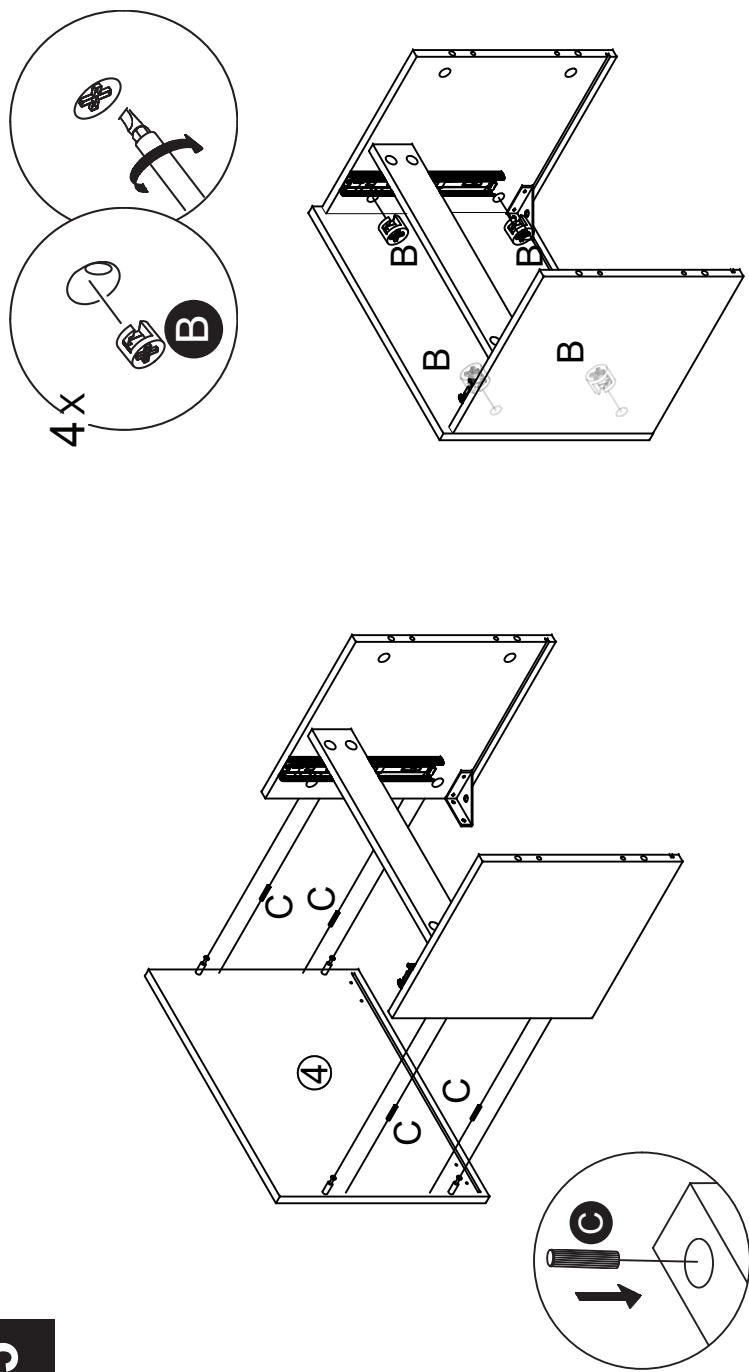



	BX4
	CX4

06




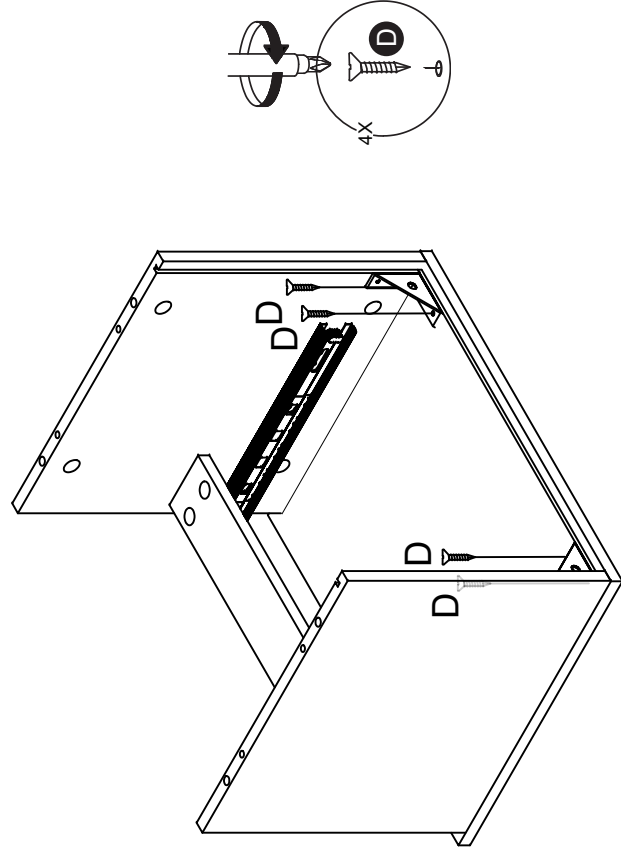


 DX4

07

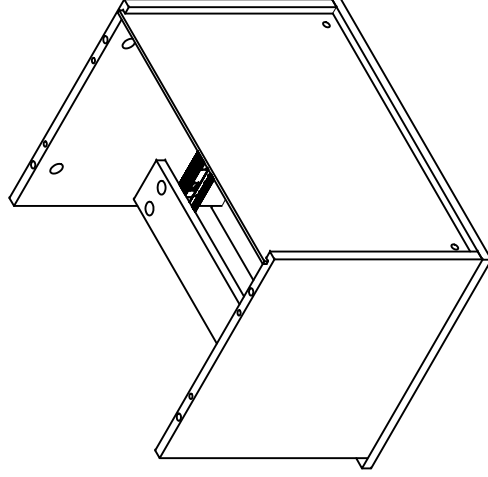
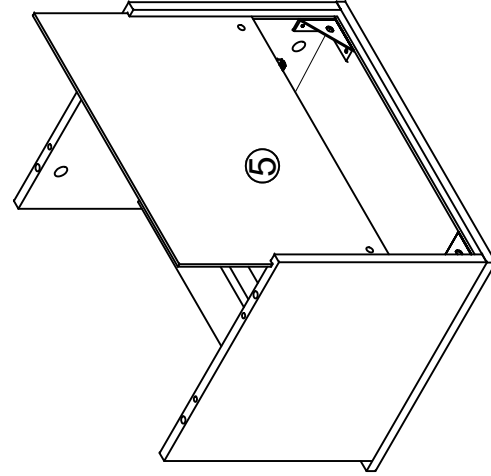


08

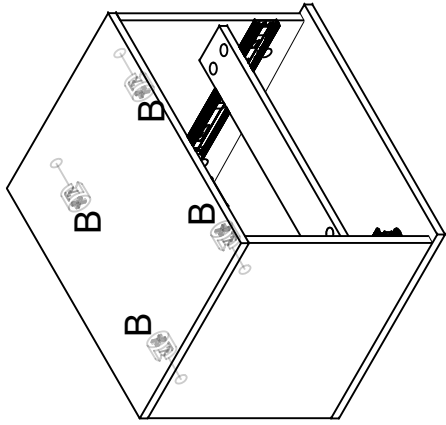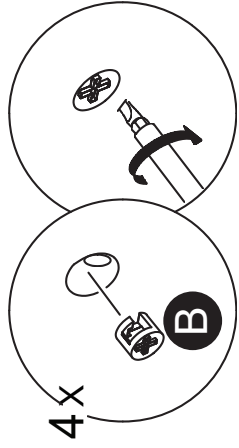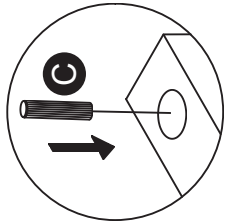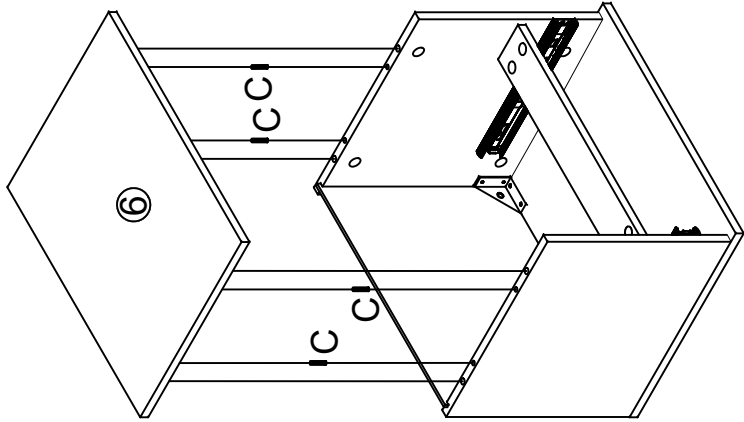

	BX4
	CX4

09

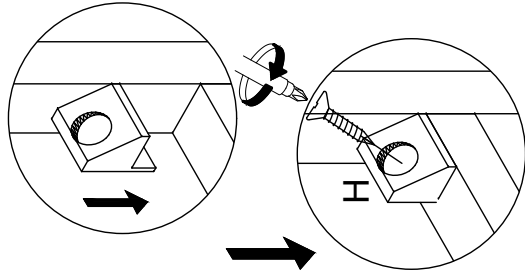
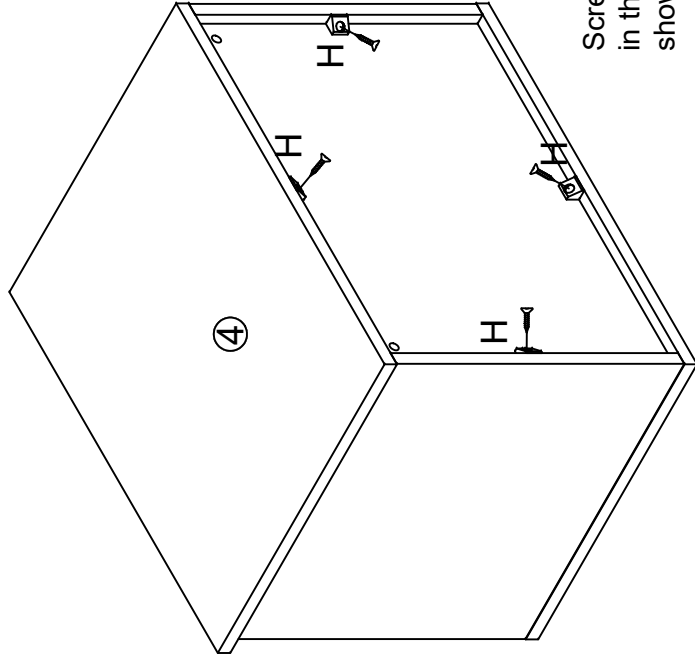


Screw type I can be installed in the approximate location shown in the diagram.



	HX4
---	-----

10


Drill 2 holes on the wall at the required position for anti-falling device installation.

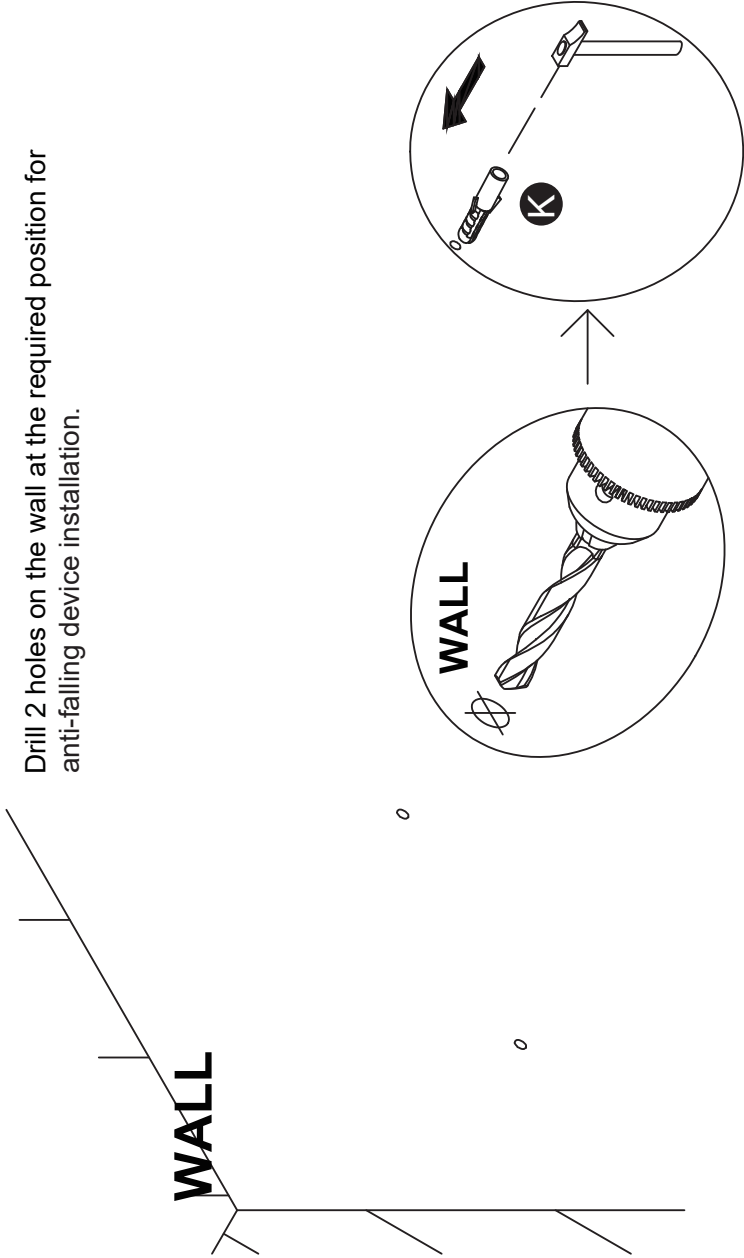


11

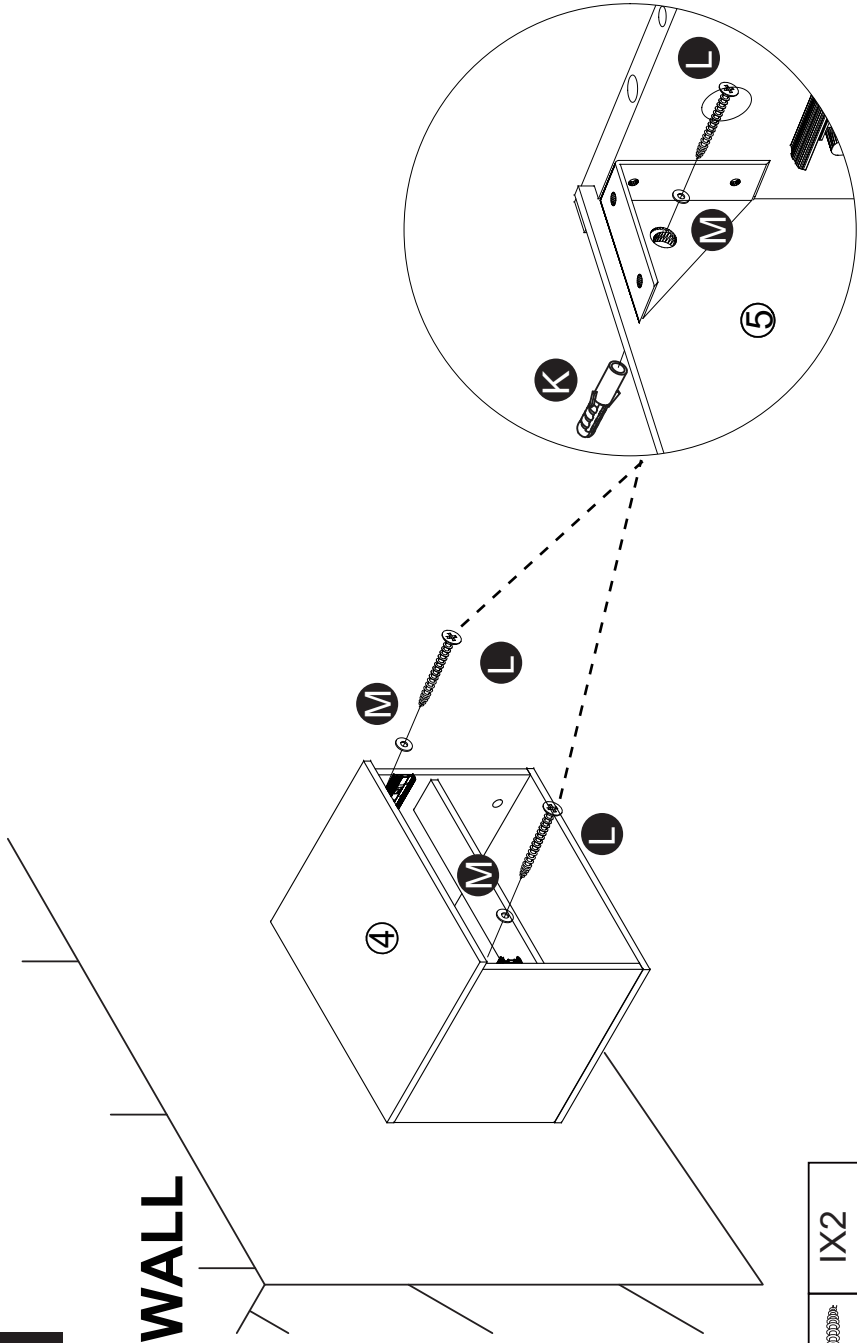




12

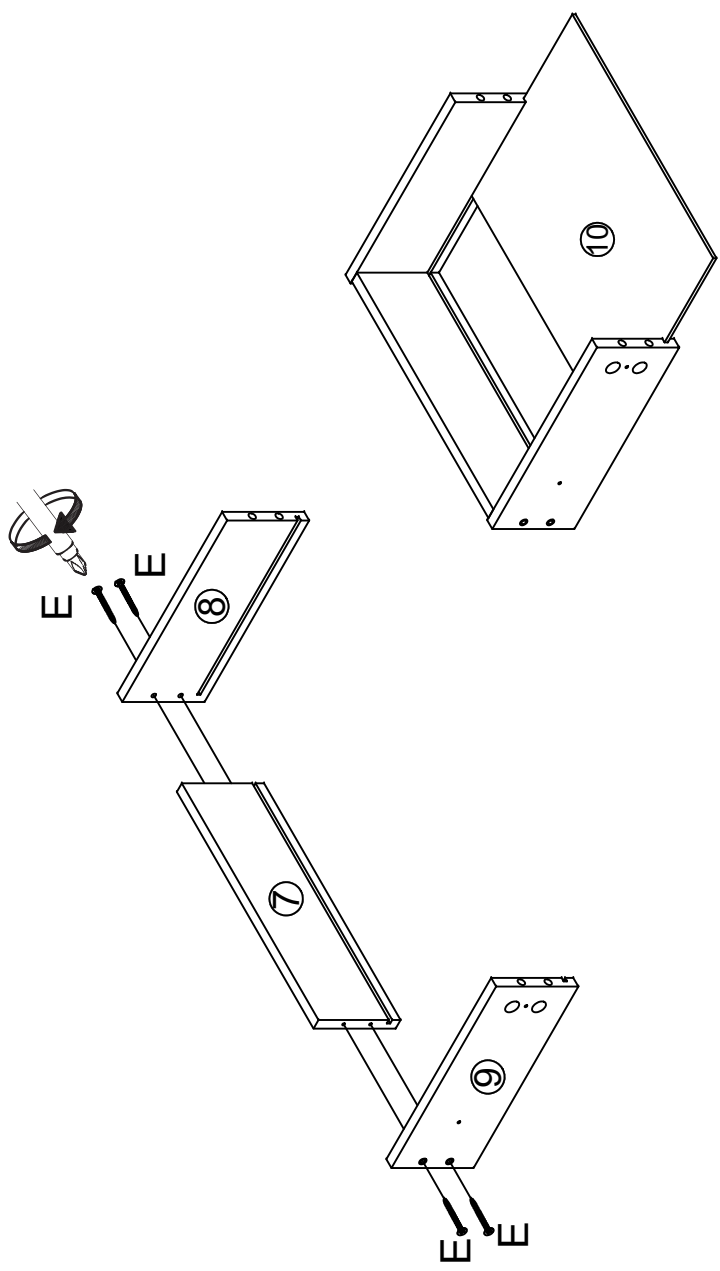

13

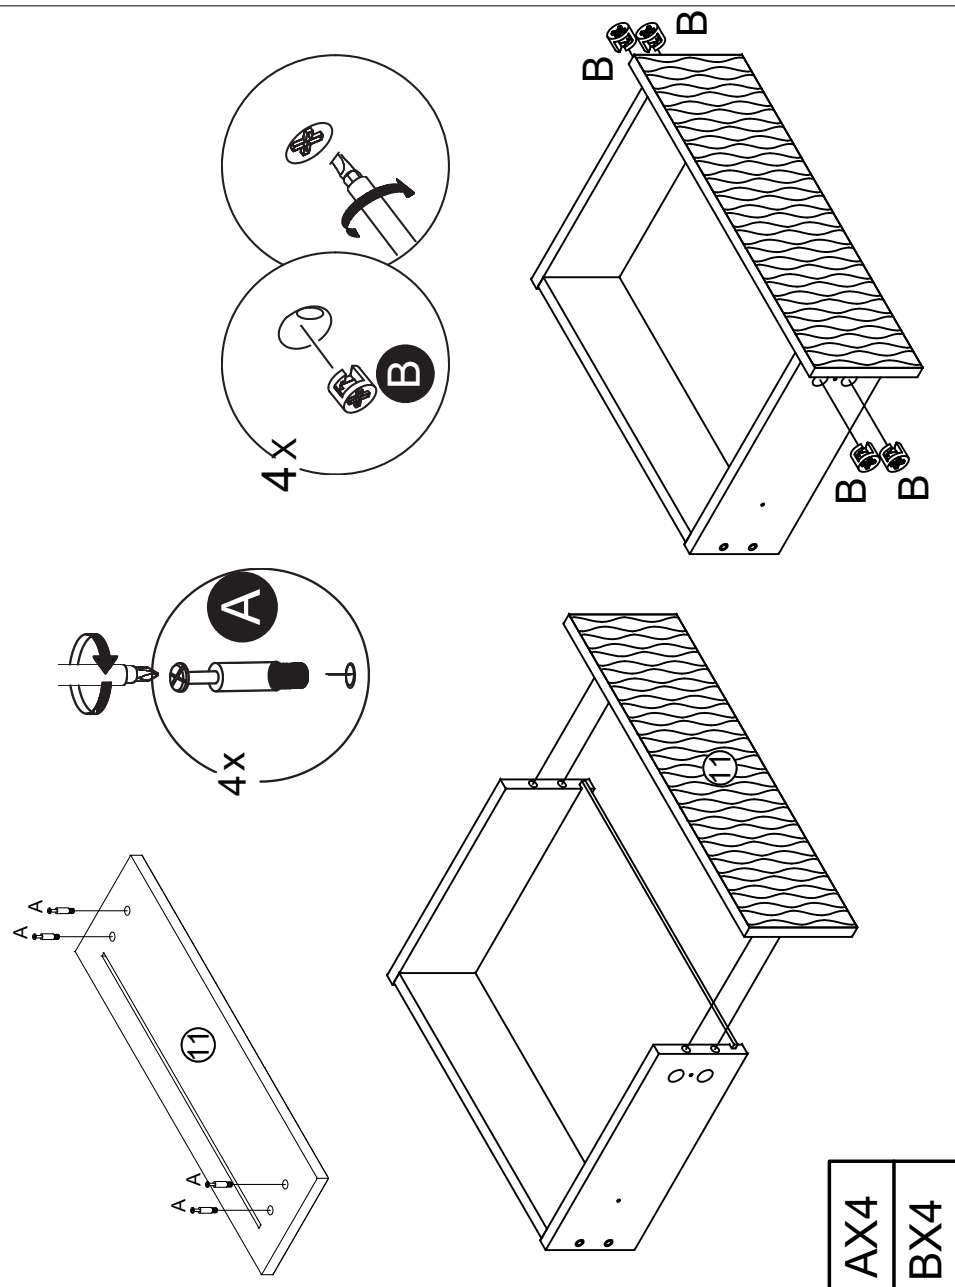

	AX4
	BX4

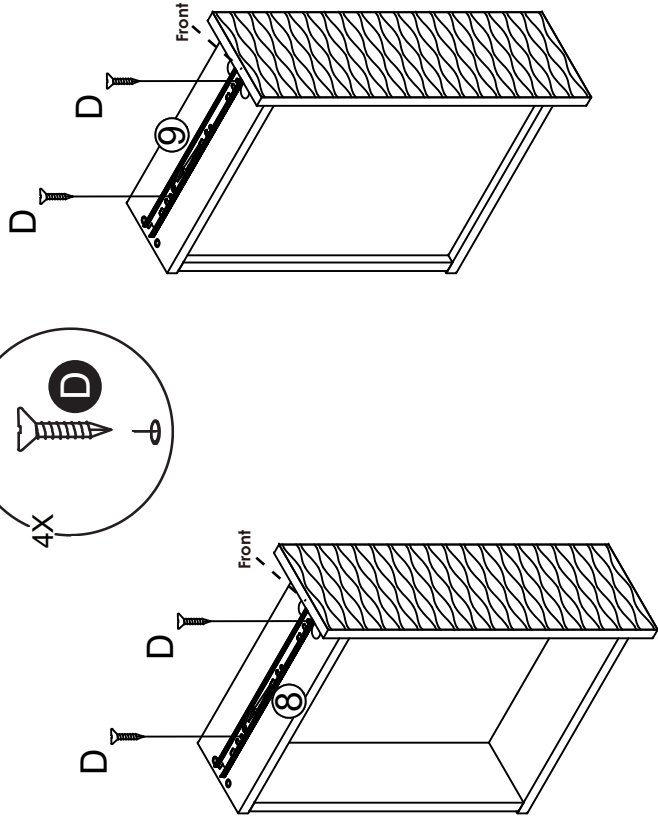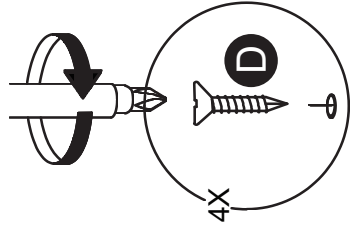

	DX4
	G2X2

