

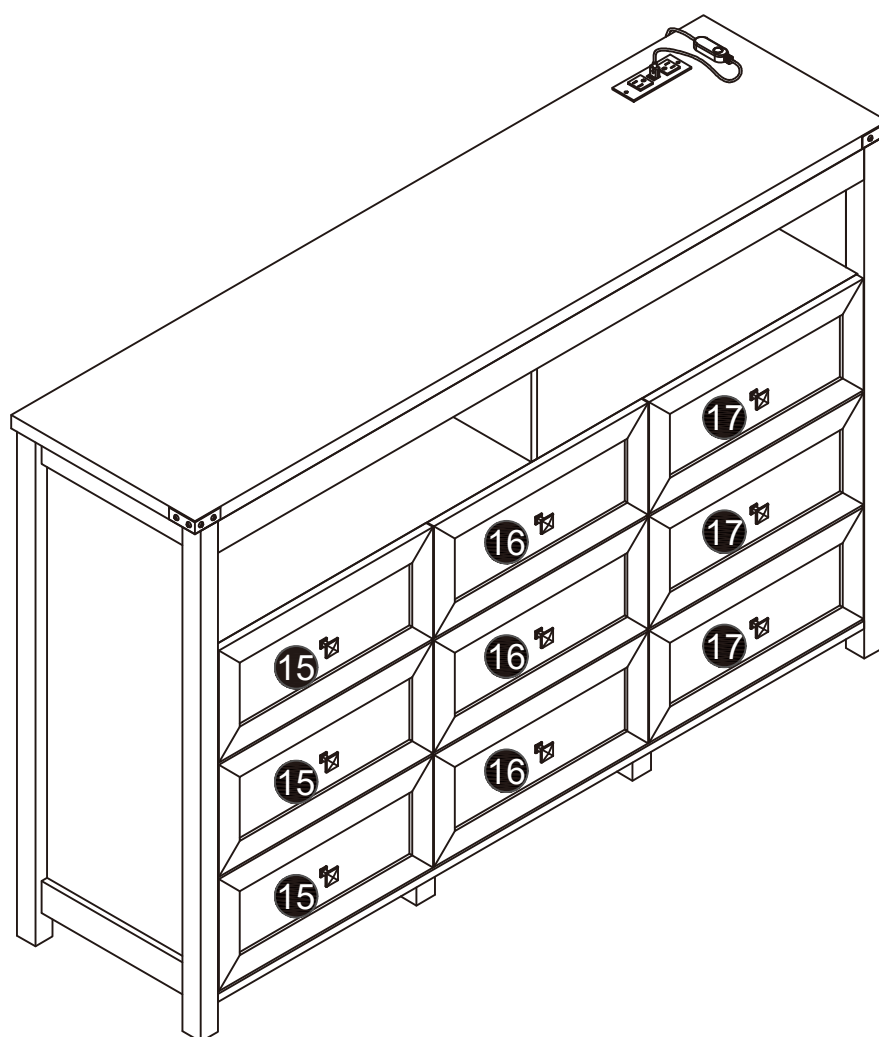
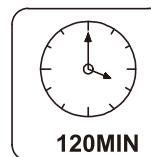



Installation & Assembly

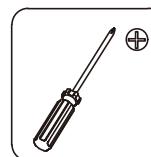

IT IS RECOMMENDED
TO USE POWER TOOLS

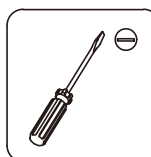

120MIN

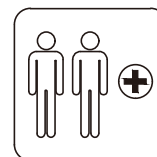

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!




---NEED HELP WITH YOUR FURNITURE?---

If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US ?

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

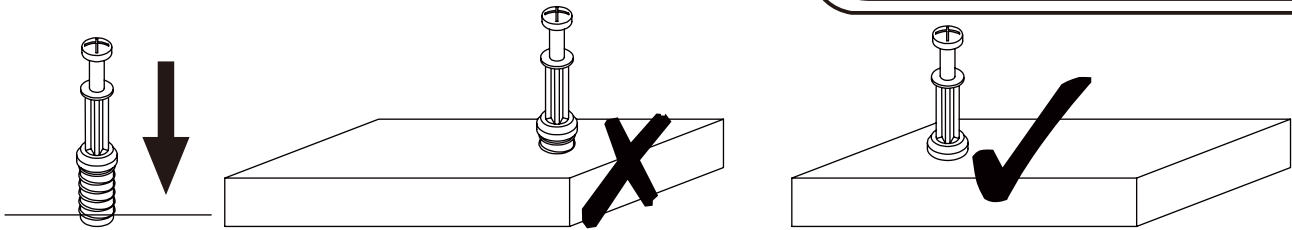


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

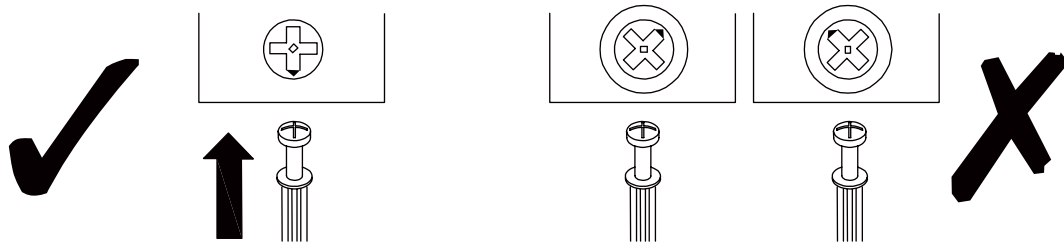






EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










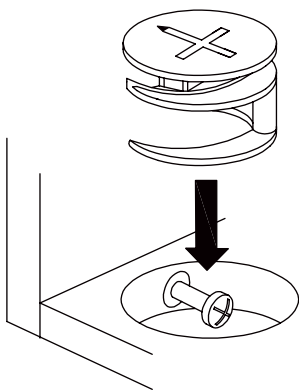









EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.




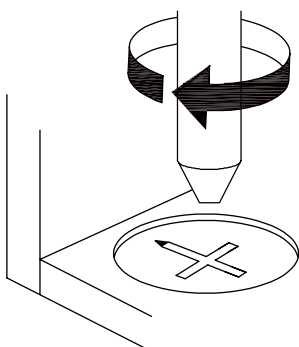


EN_Turn cam lock clockwise to tighten.

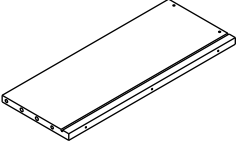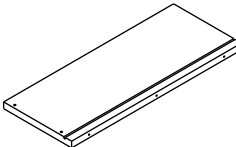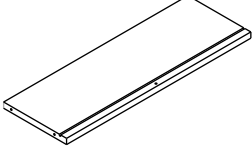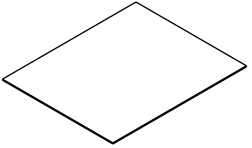Carton A			
NO.	PARTS	QTY	SPARE
14		x4	
18		x9	
19		x9	
20		x9	
21		x9	
	 Hardware Kit	x1	

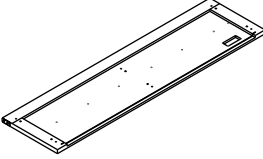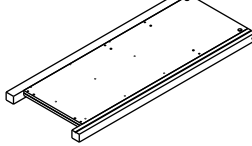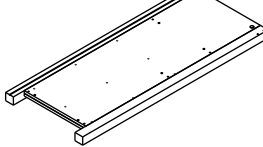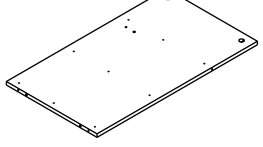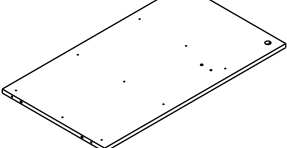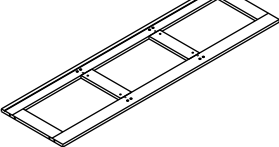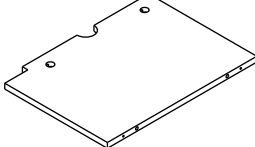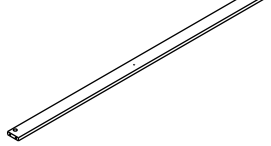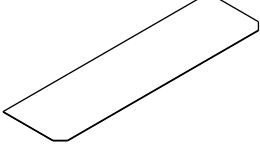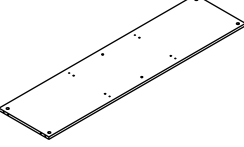
Carton B			
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	

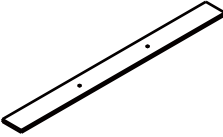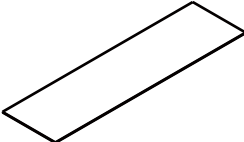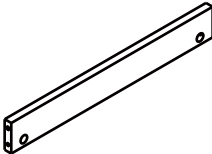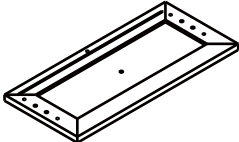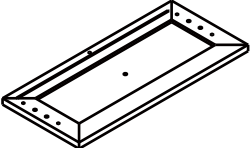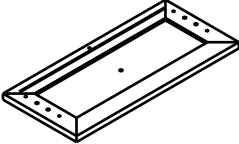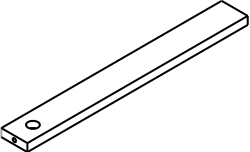Carton B			
NO.	PARTS	QTY	SPARE
11		x1	
12		x1	
13		x3	
15		x3	
16		x3	
17		x3	
22		x9	

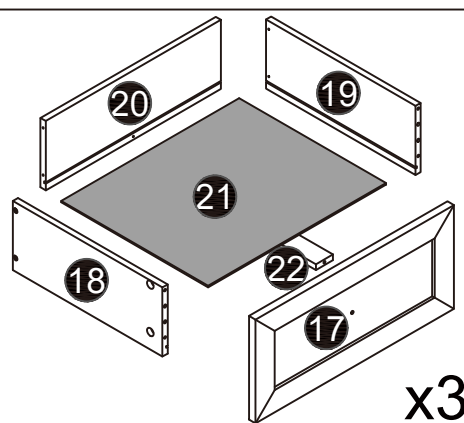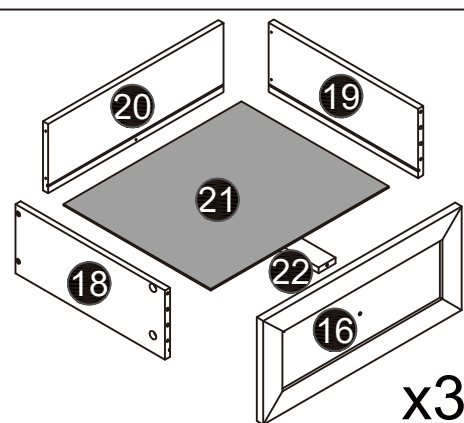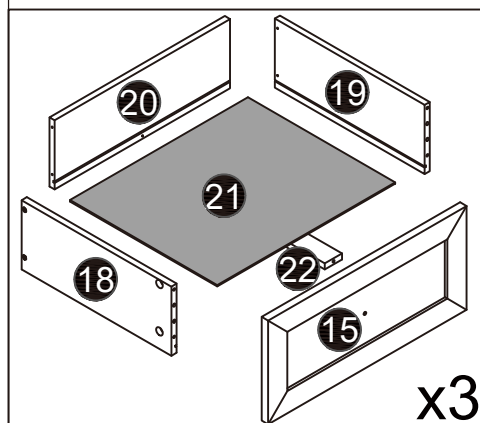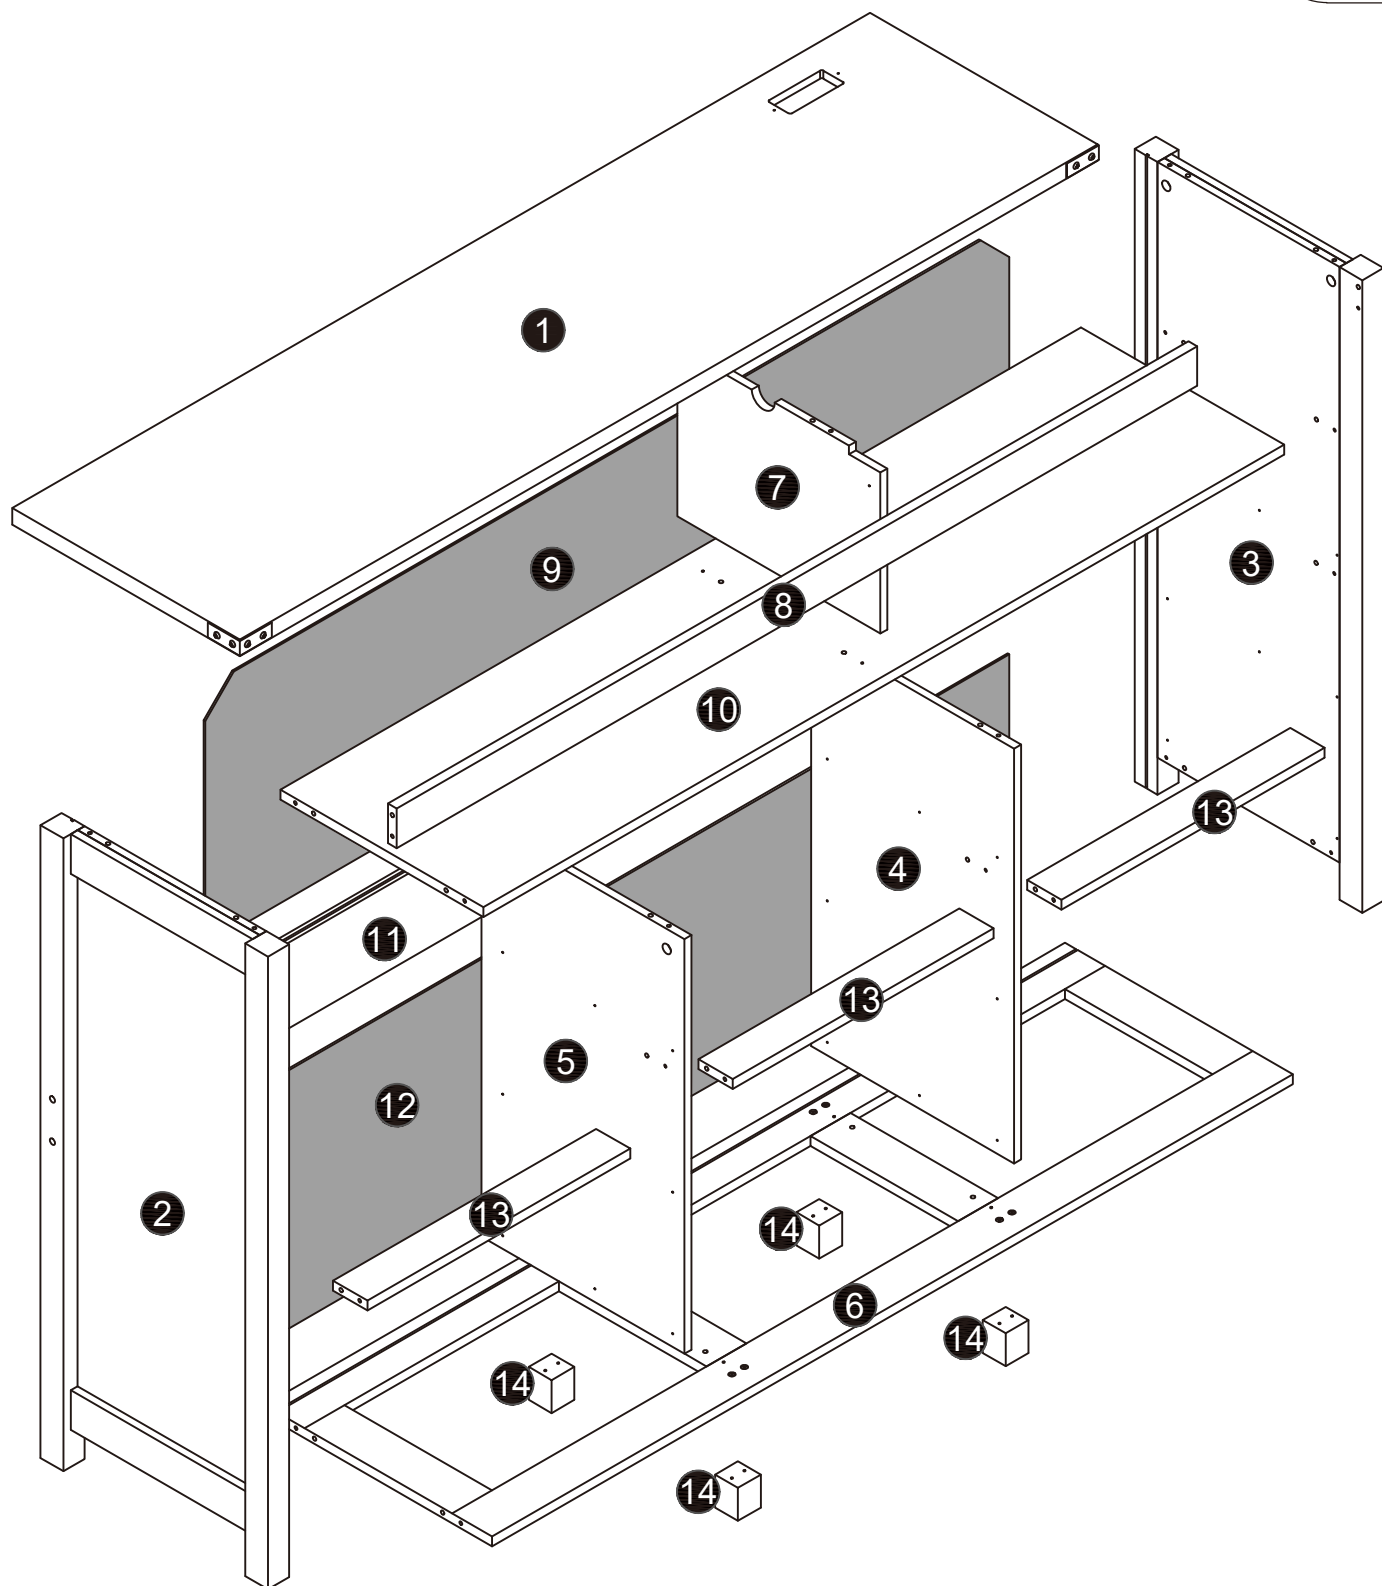


A x71 Ø6x35mm +3(spare)	B x71 Ø15x10mm +3(spare)	C x68 Ø6x30mm +3(spare)	D x63 Ø4x35mm +3(spare)	E x110 Ø3.5x12mm +4(spare)	F x4 Ø4x50mm
G x4	H x9 H-1 H-2	I x2 I-1 I-2 I-3	J x14 +1(spare) J-1 J-2	K x1	L x4
M x1	N x4	O x1	P x2	Q x6 Q-1 Q-2	R x1 R-1 R-2
S x4 S-1 S-2	CL x9 L350mm	CR x9 L350mm	DL x9 L350mm	DR x9 L350mm	

D x45








01

x9

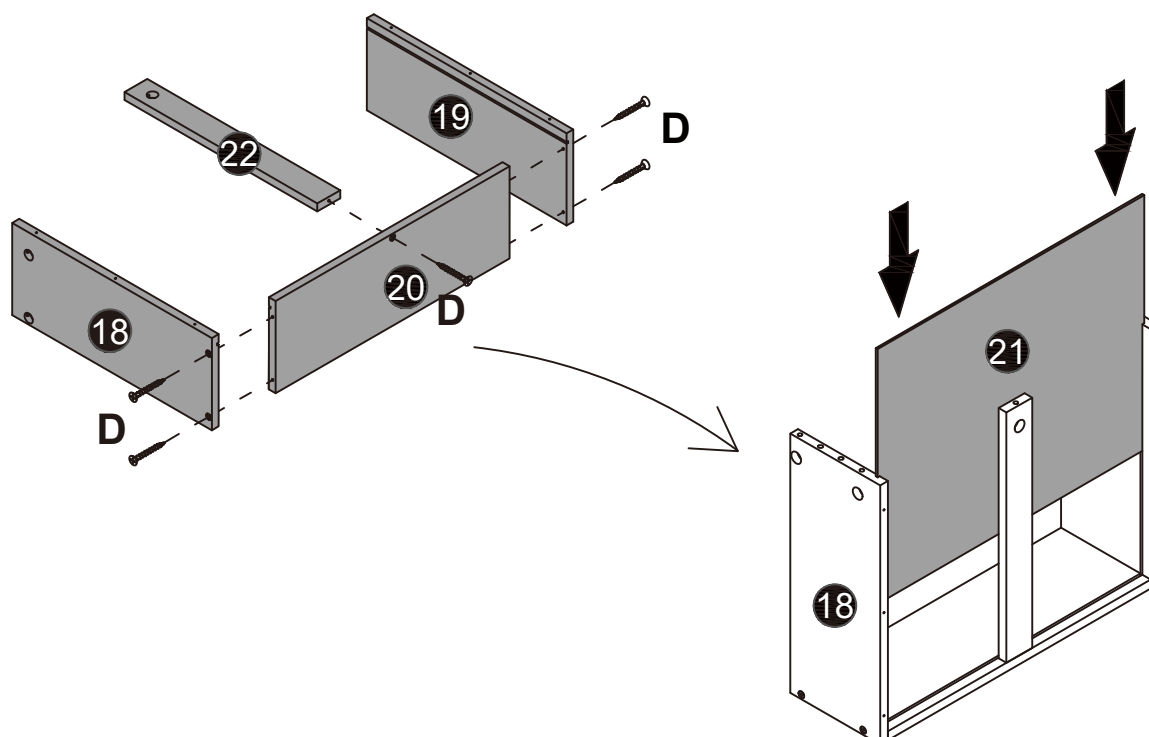


x3

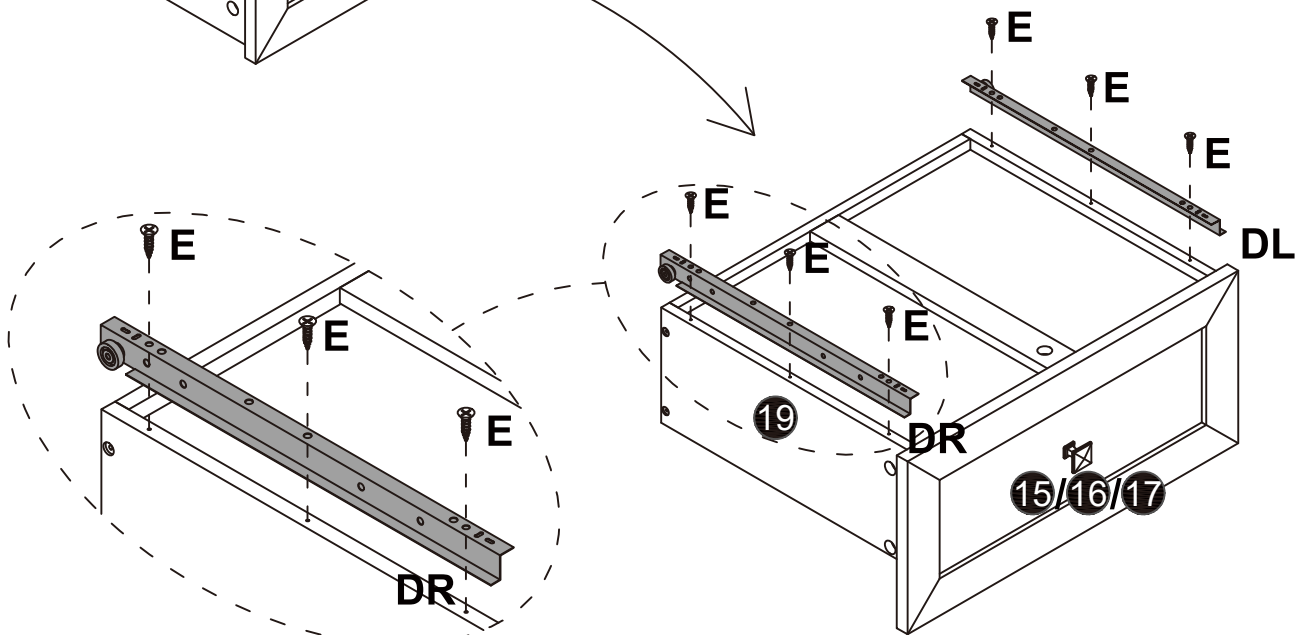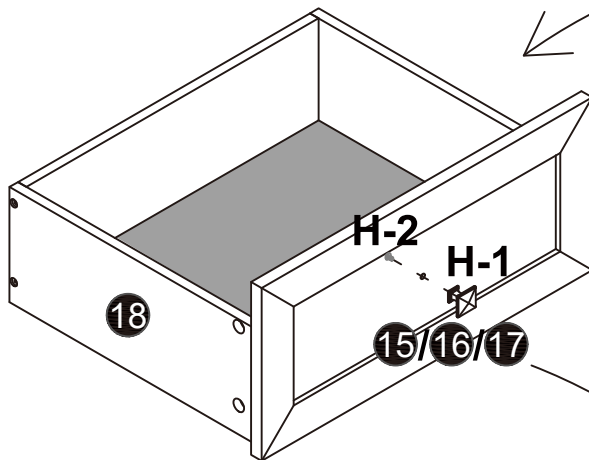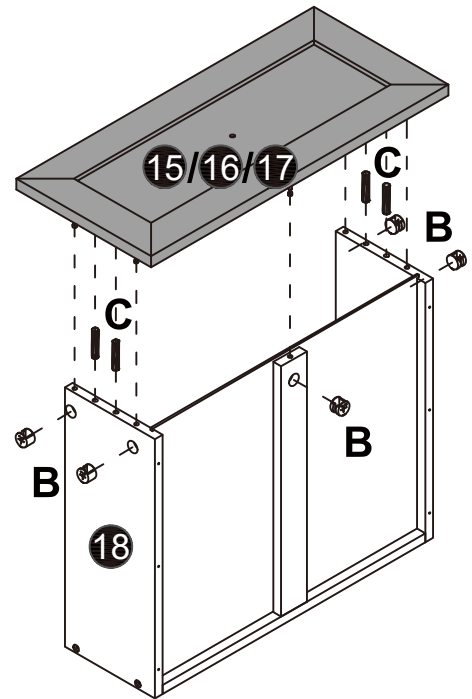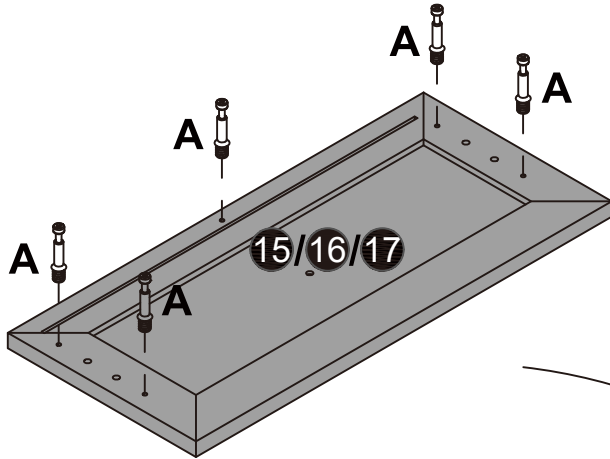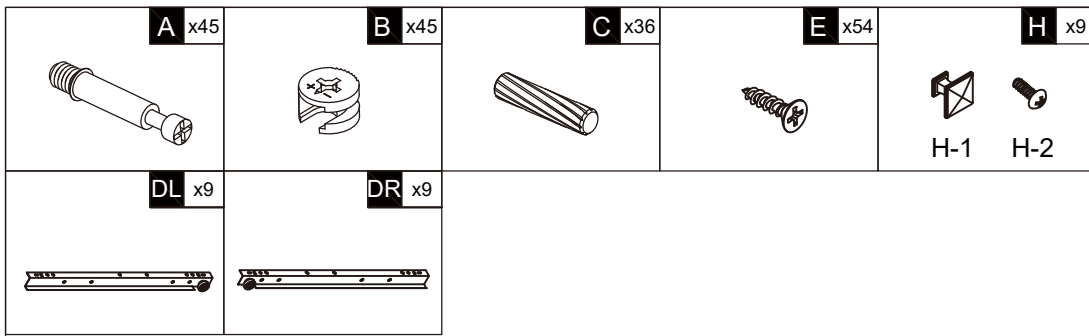

E x9

CL x3


03

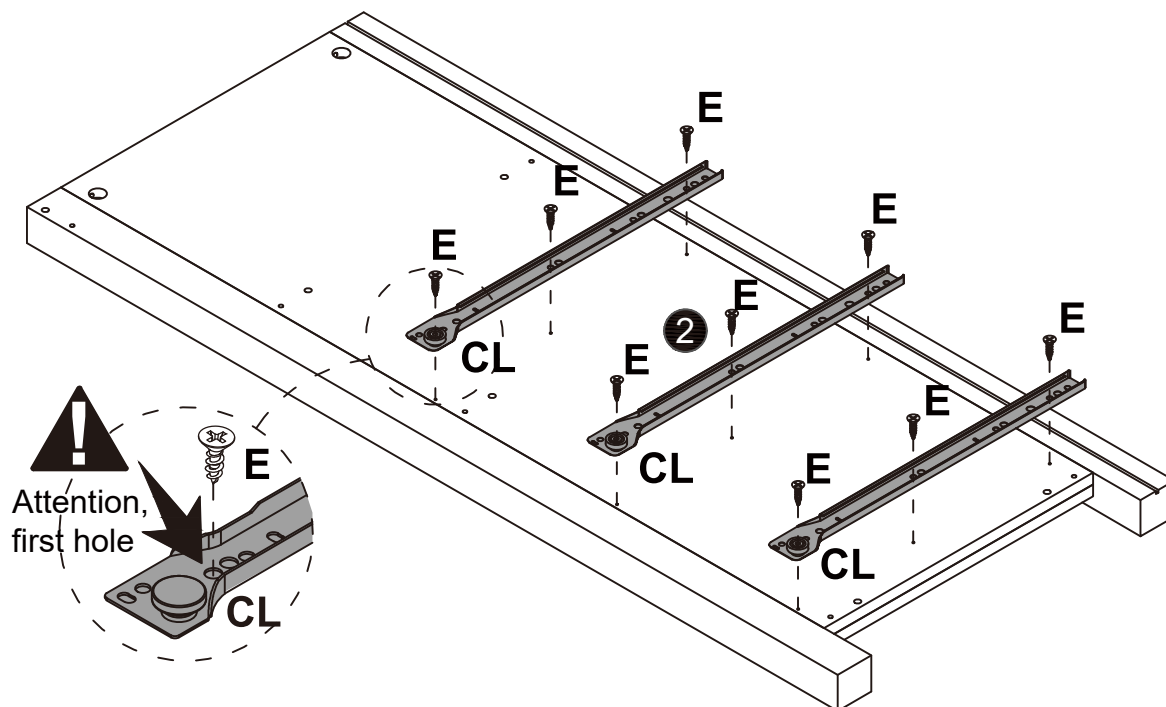

E x9

CR x3



04

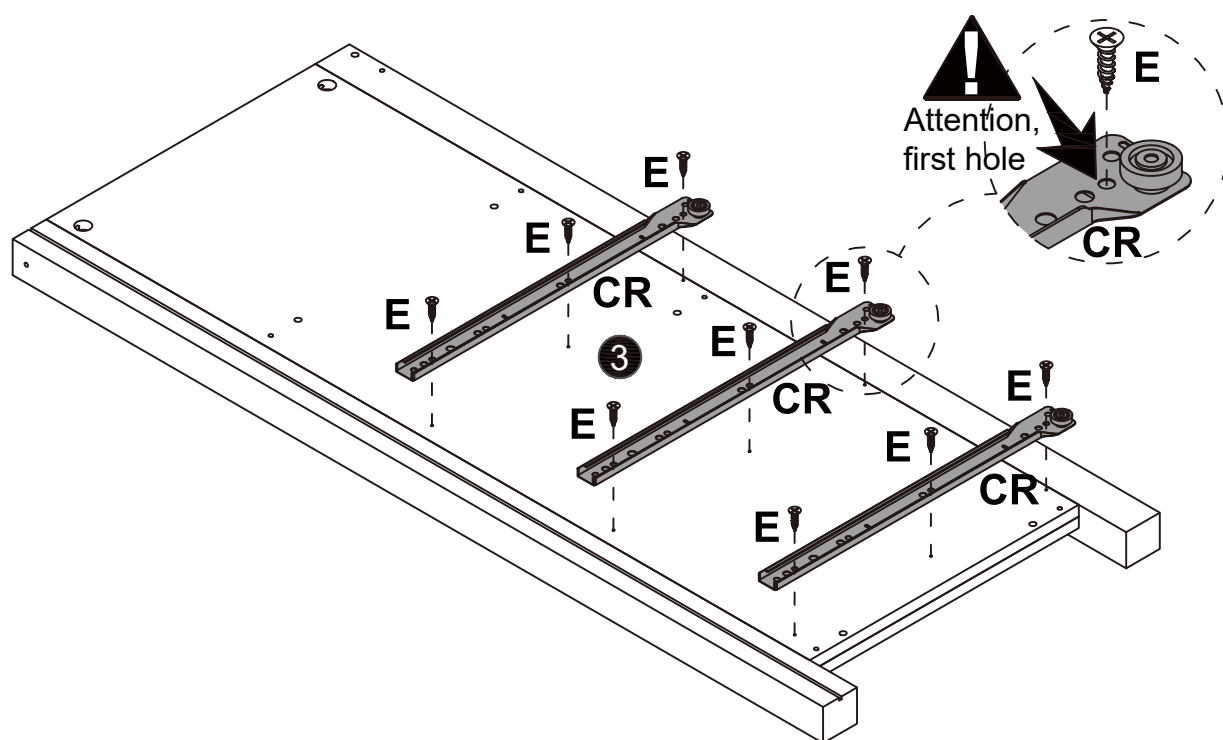

05

A x6



L x2

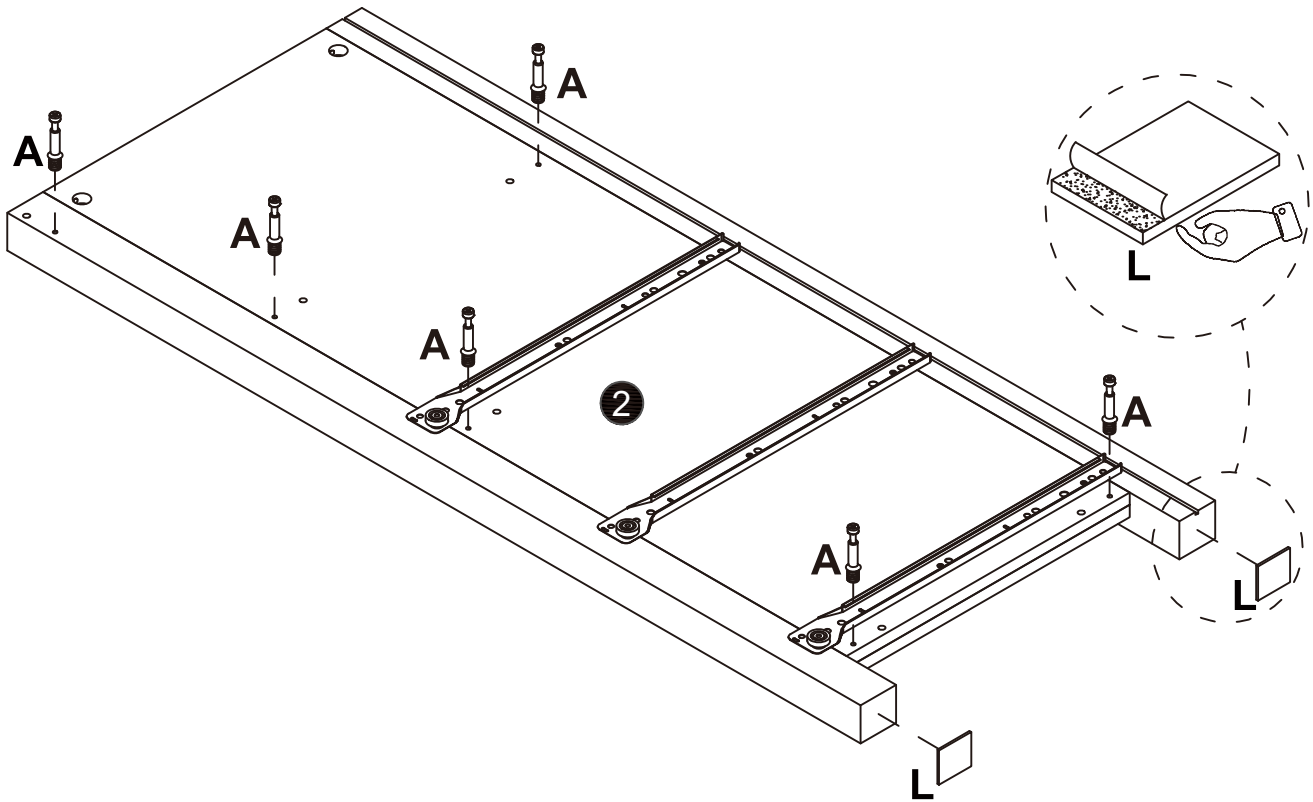

06

A x6

L x2



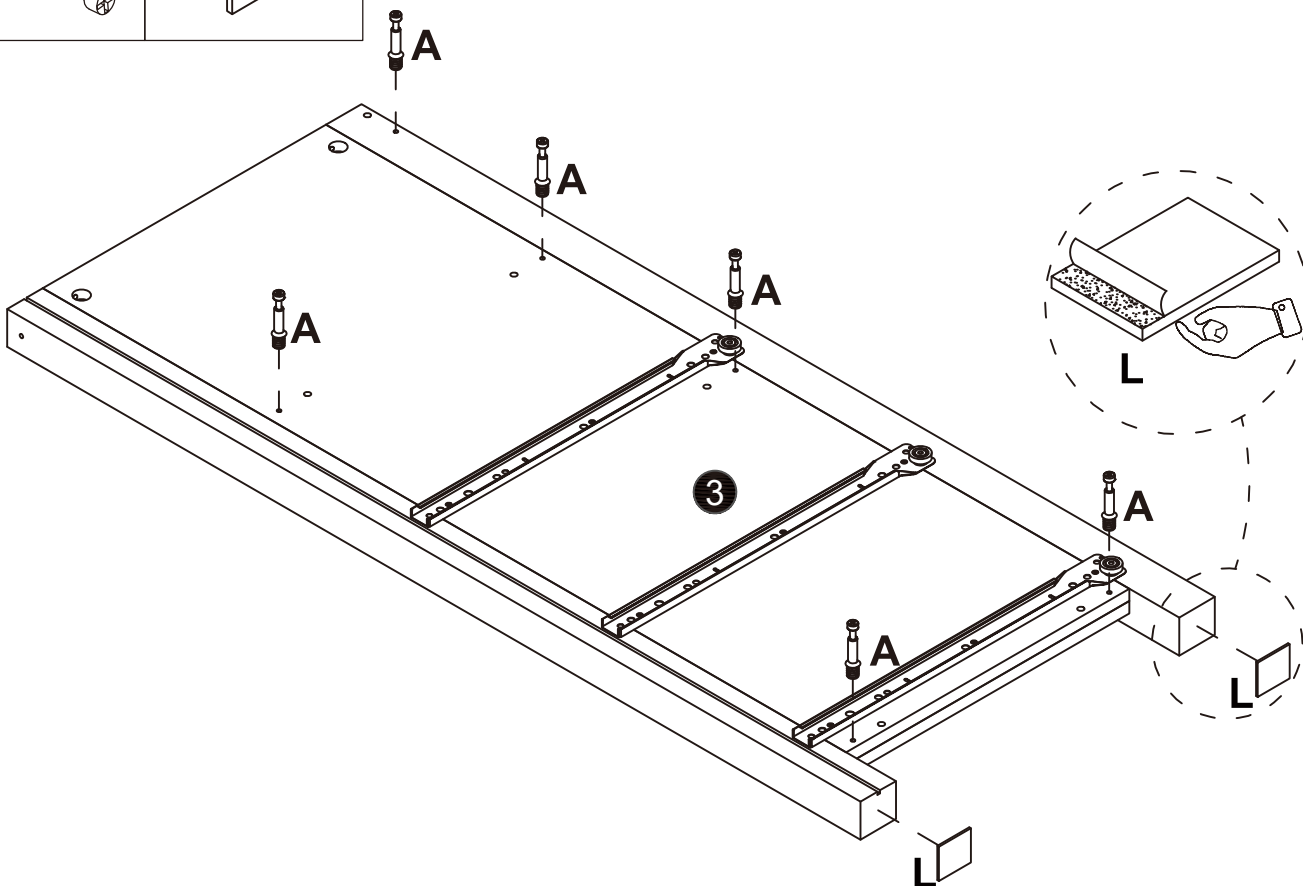



A x2

E x18

CL x3

CR x3

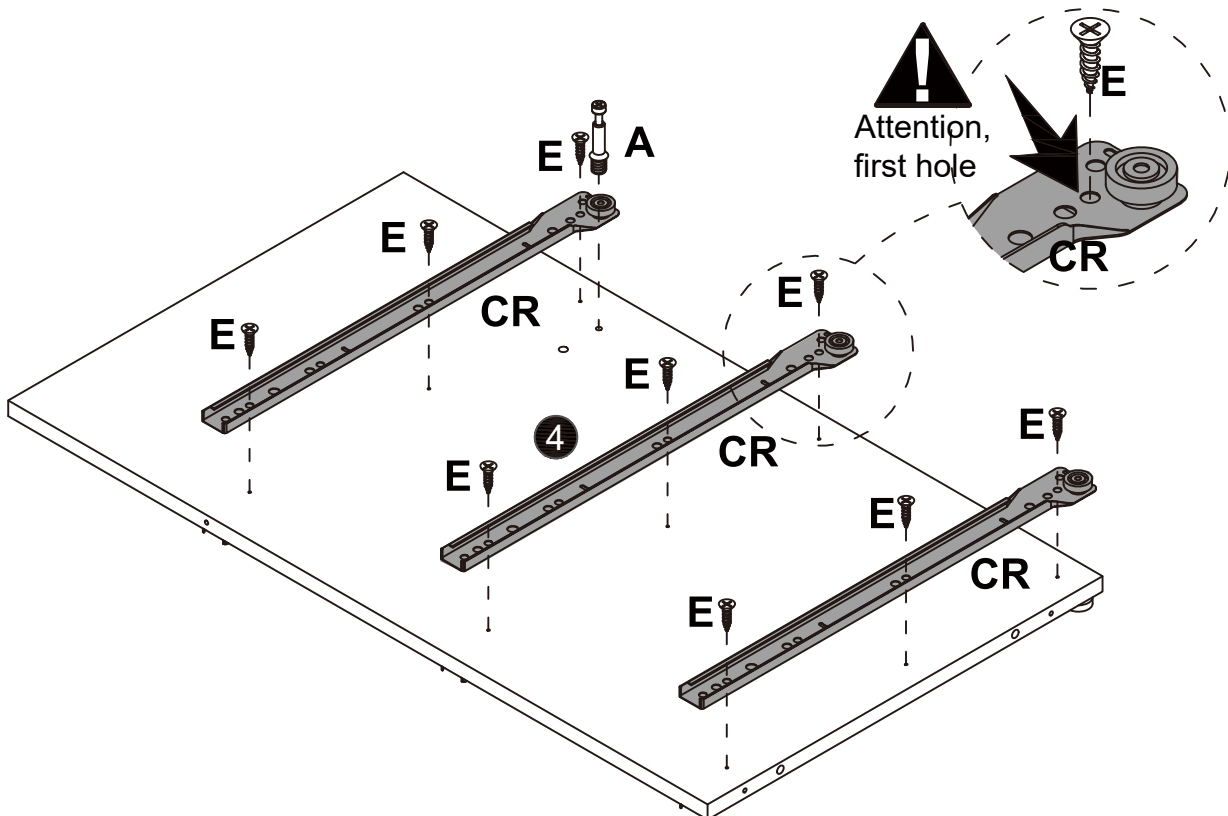
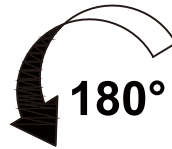
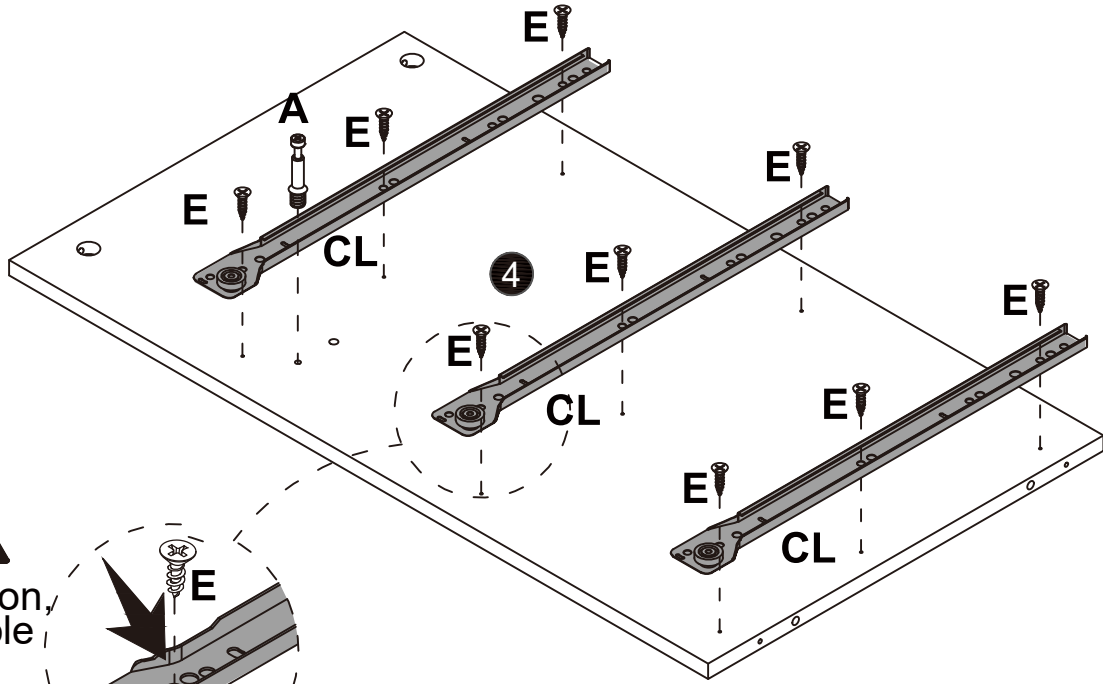





A x2

E x18

CL x3

CR x3

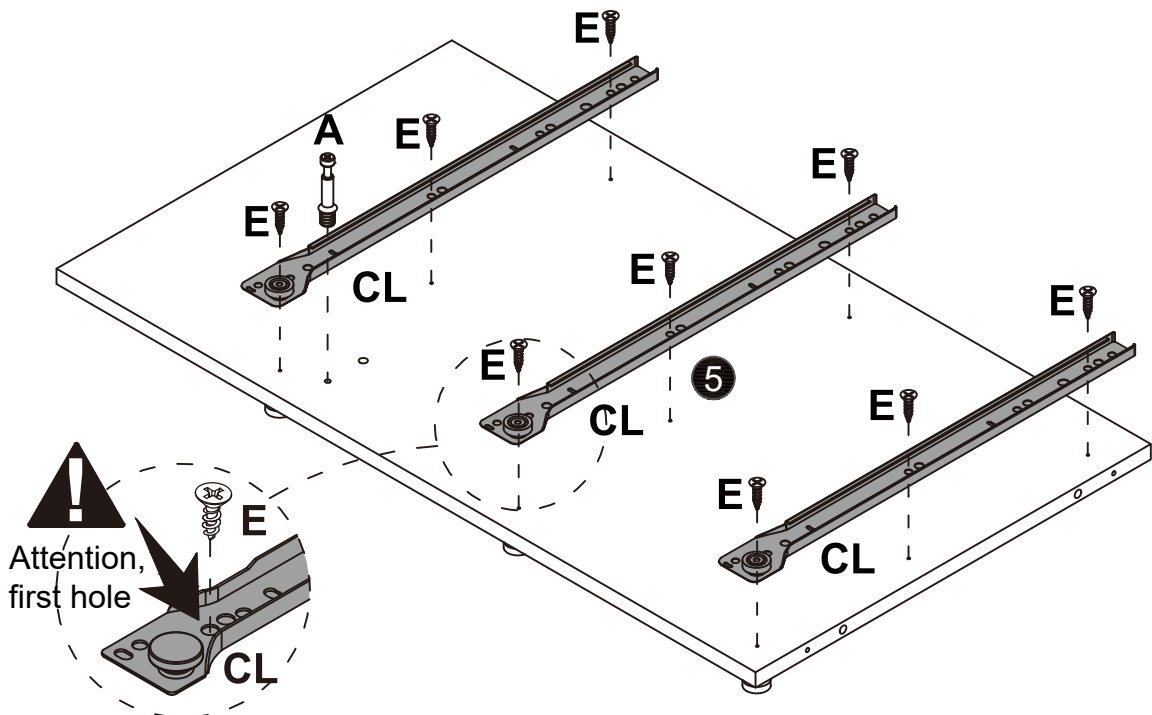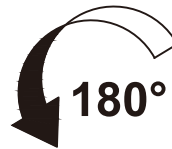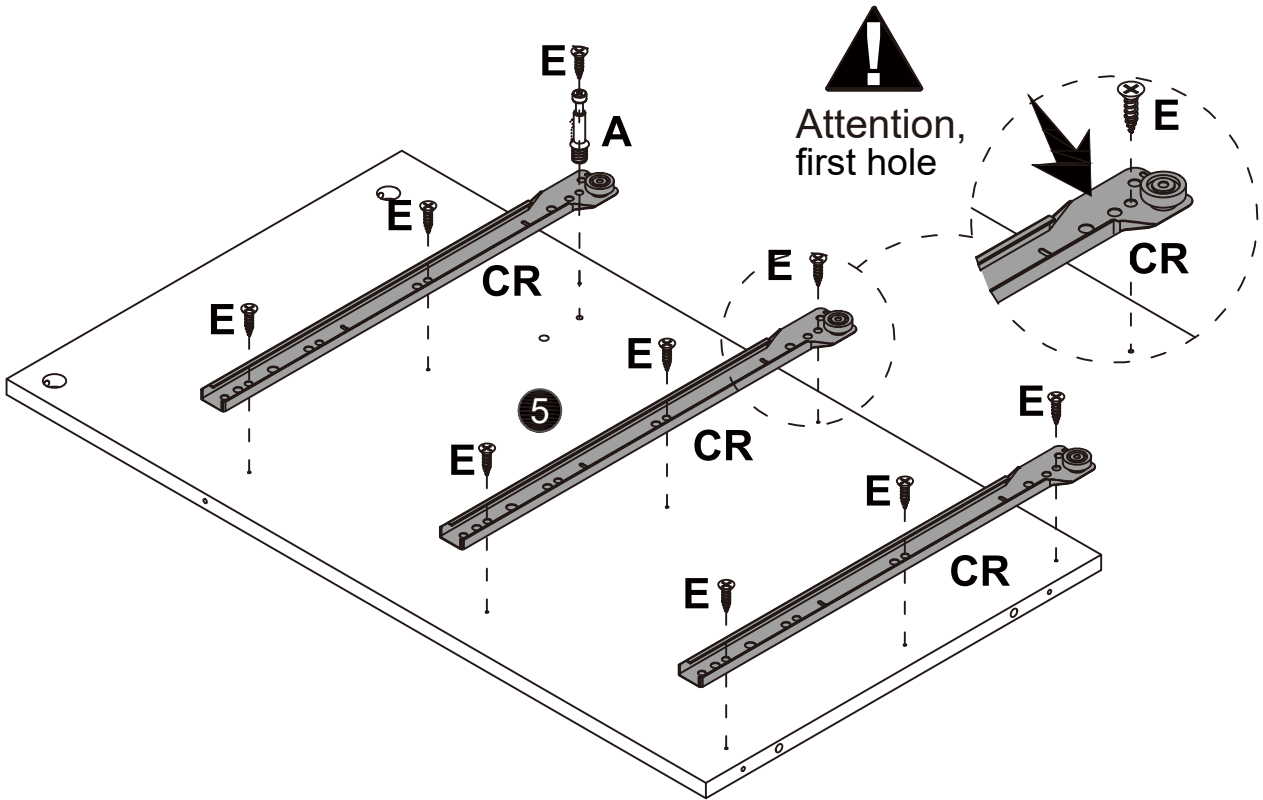


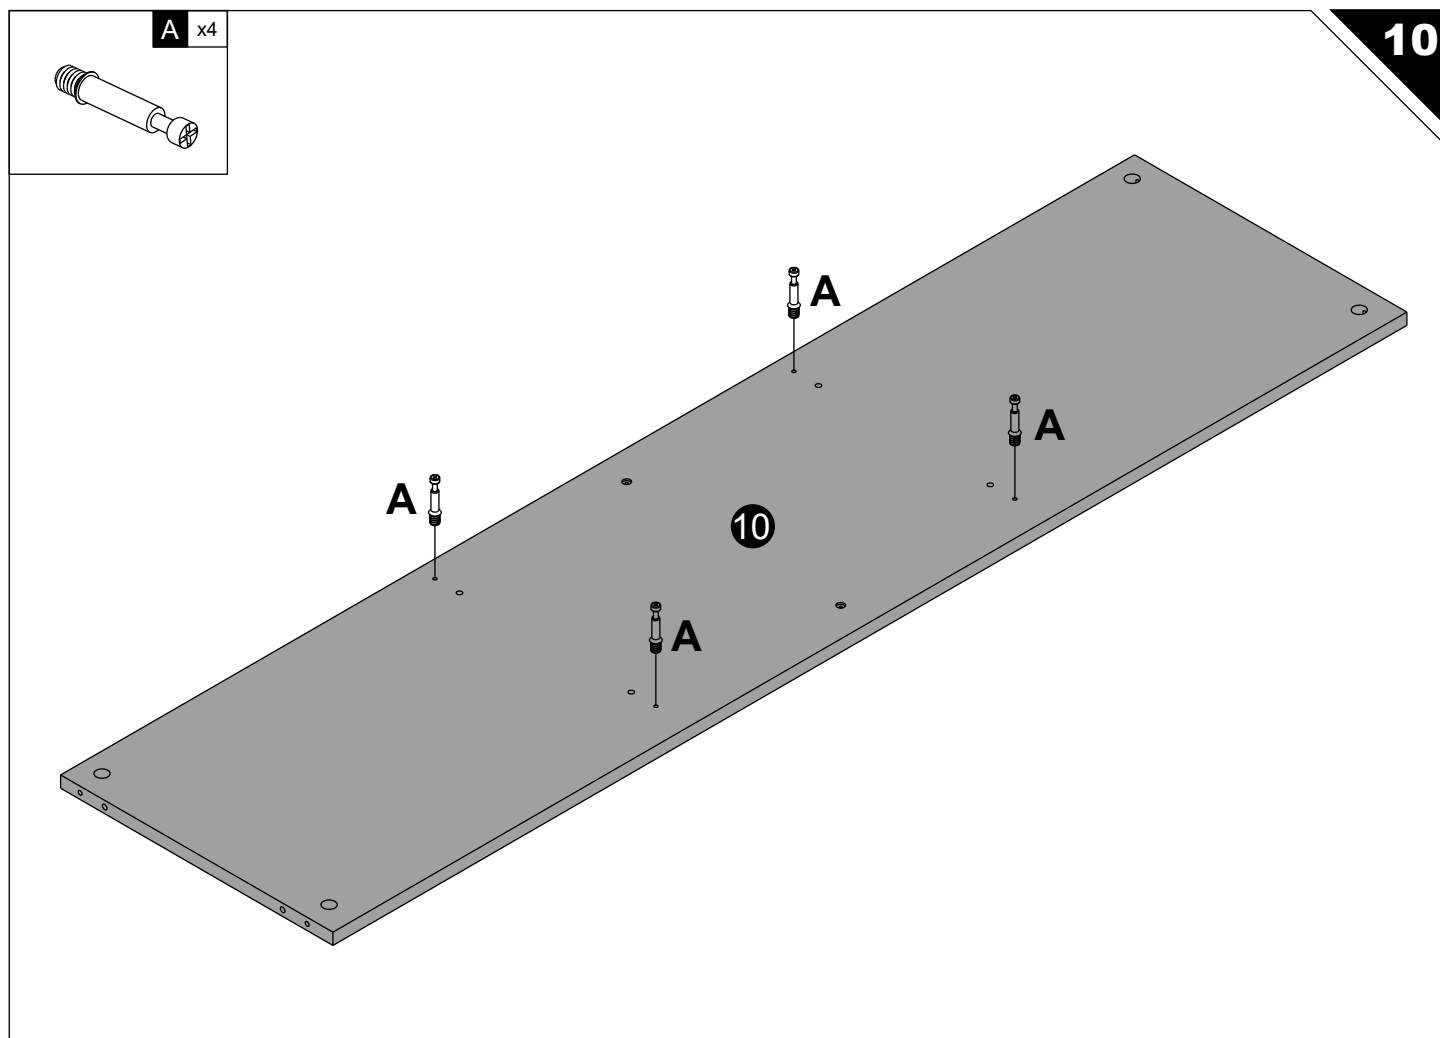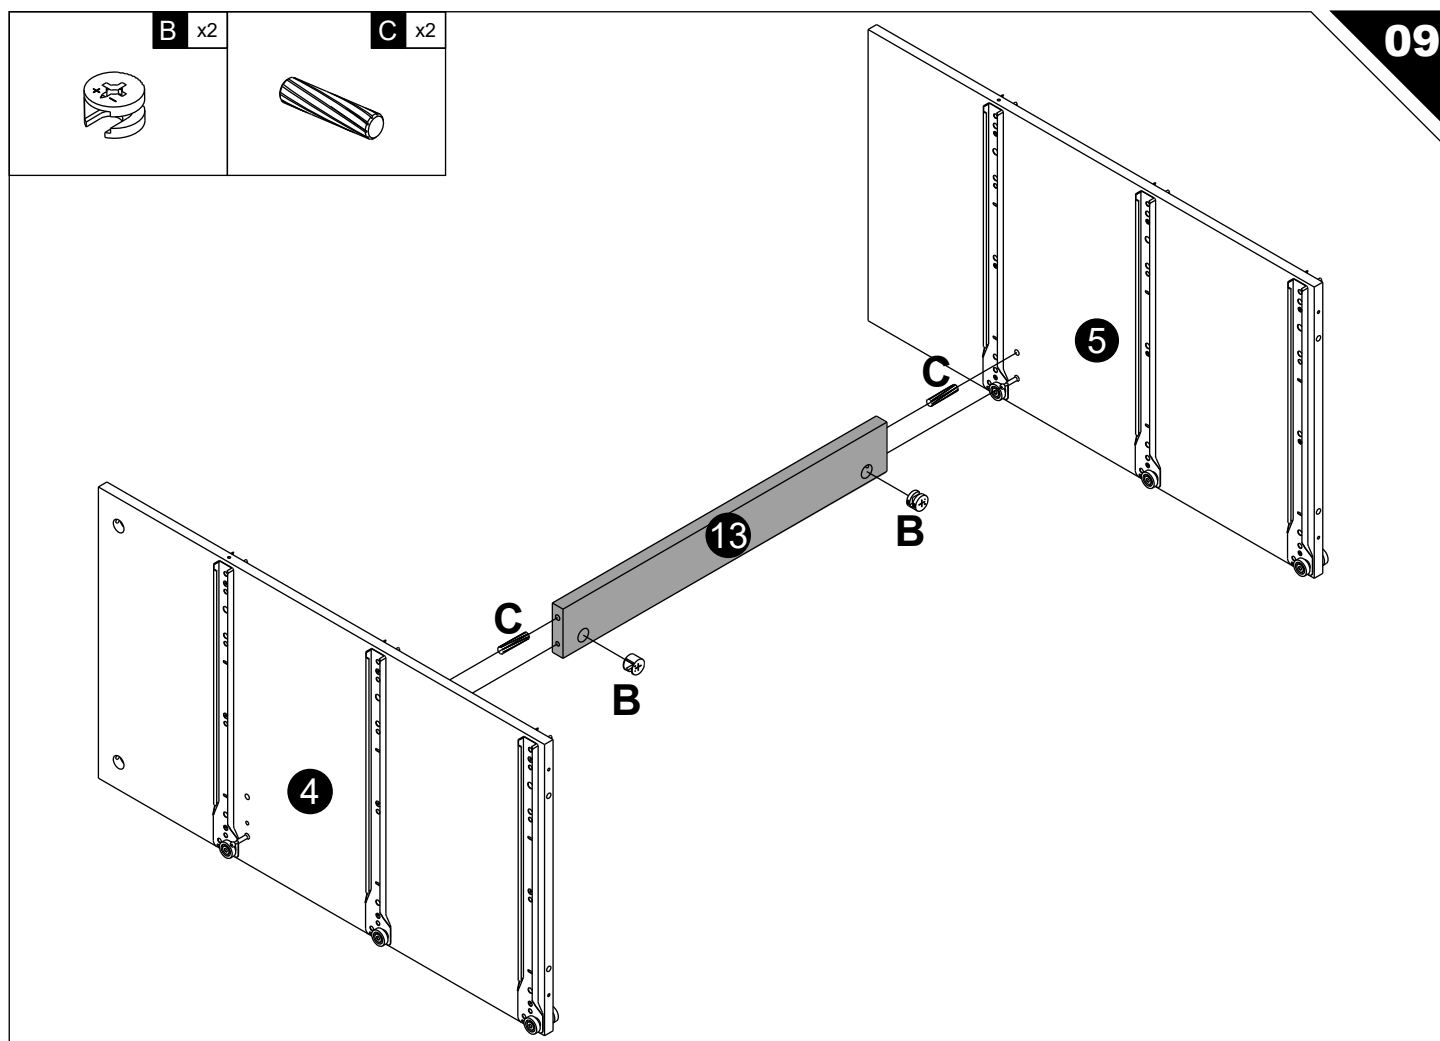

B x4





C x4

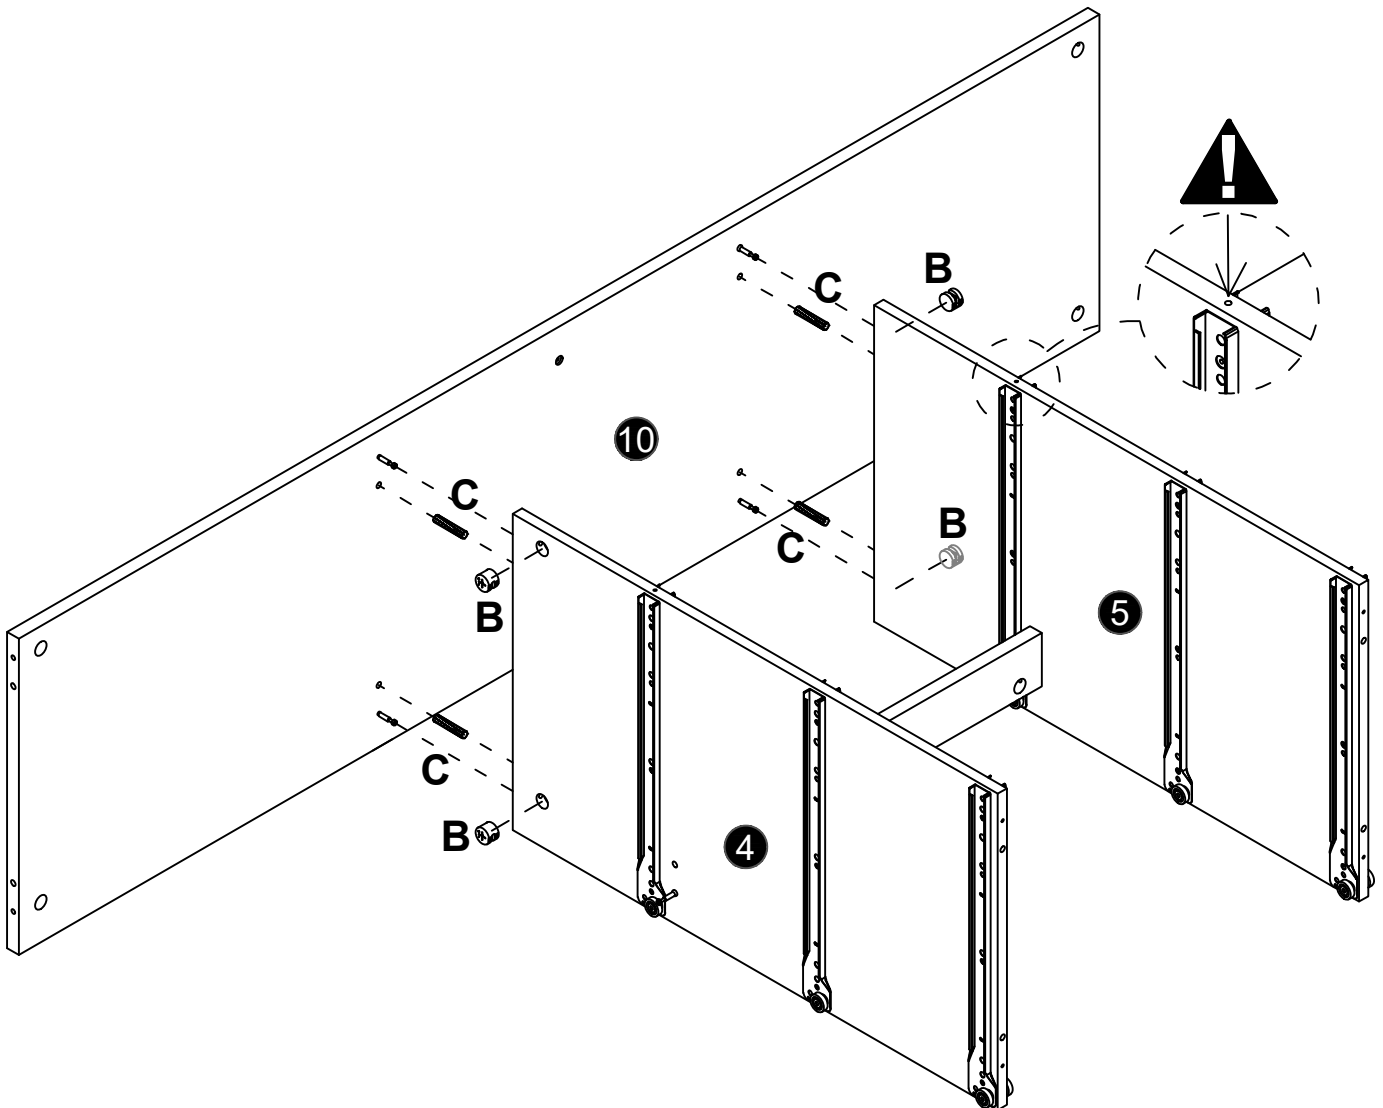


E x2





M x1

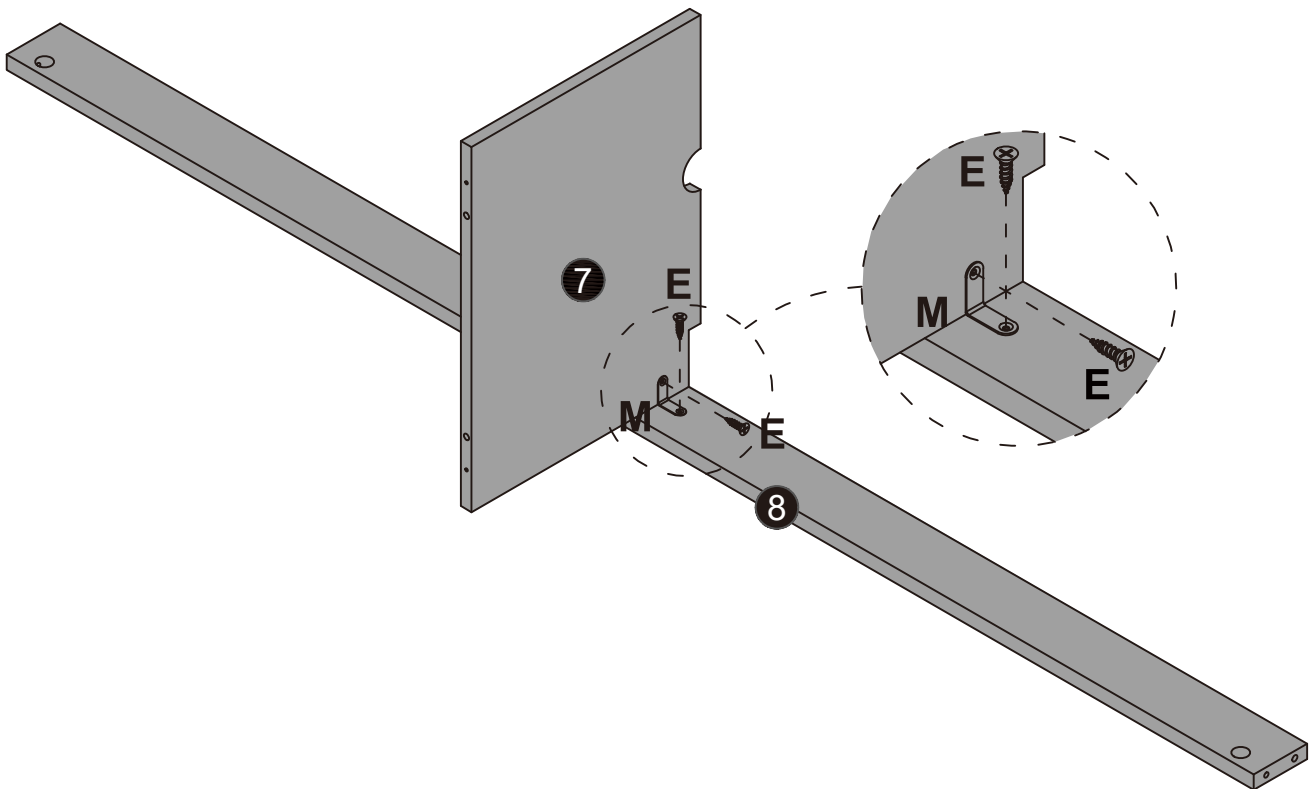

C x2



D x2

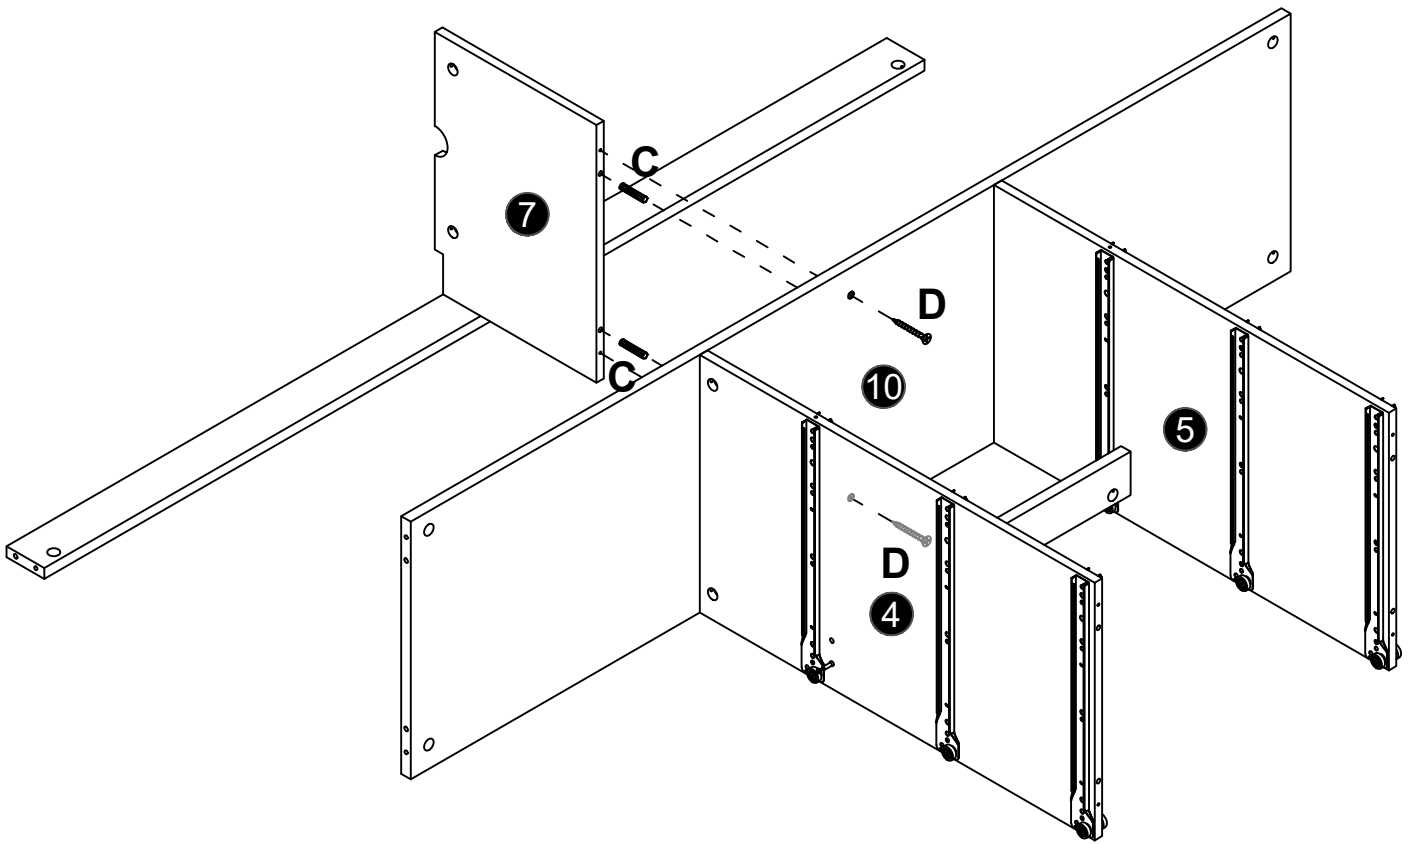



B x2



C x2





D x2

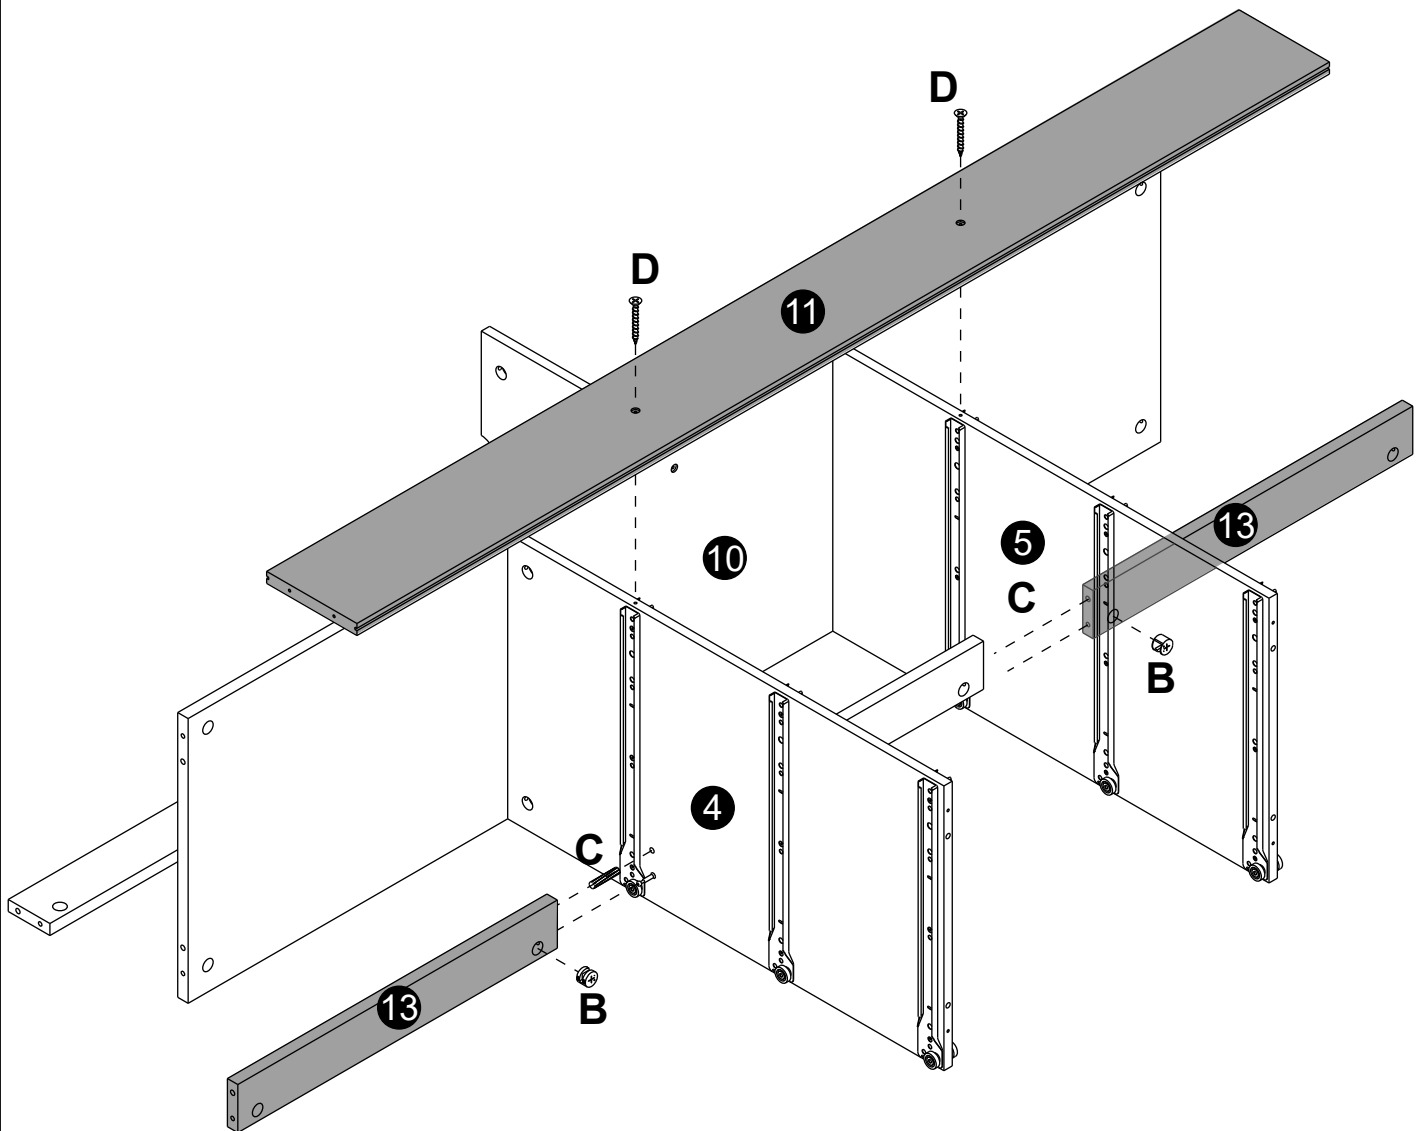

D x8


N x4

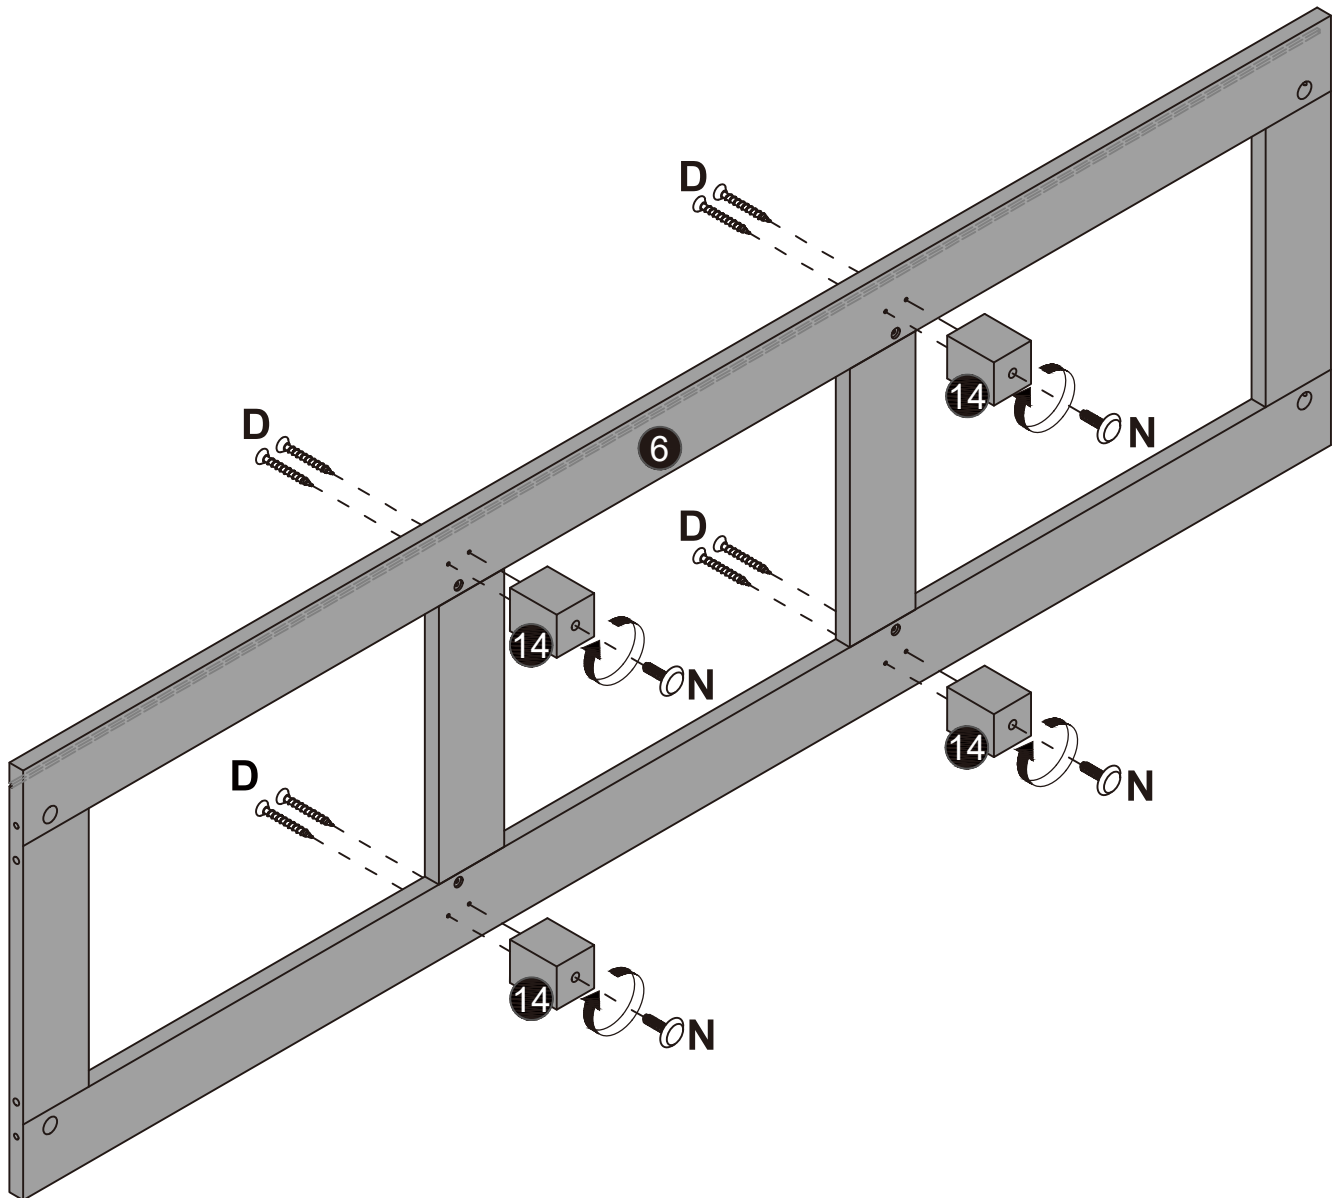

C x4



D x4

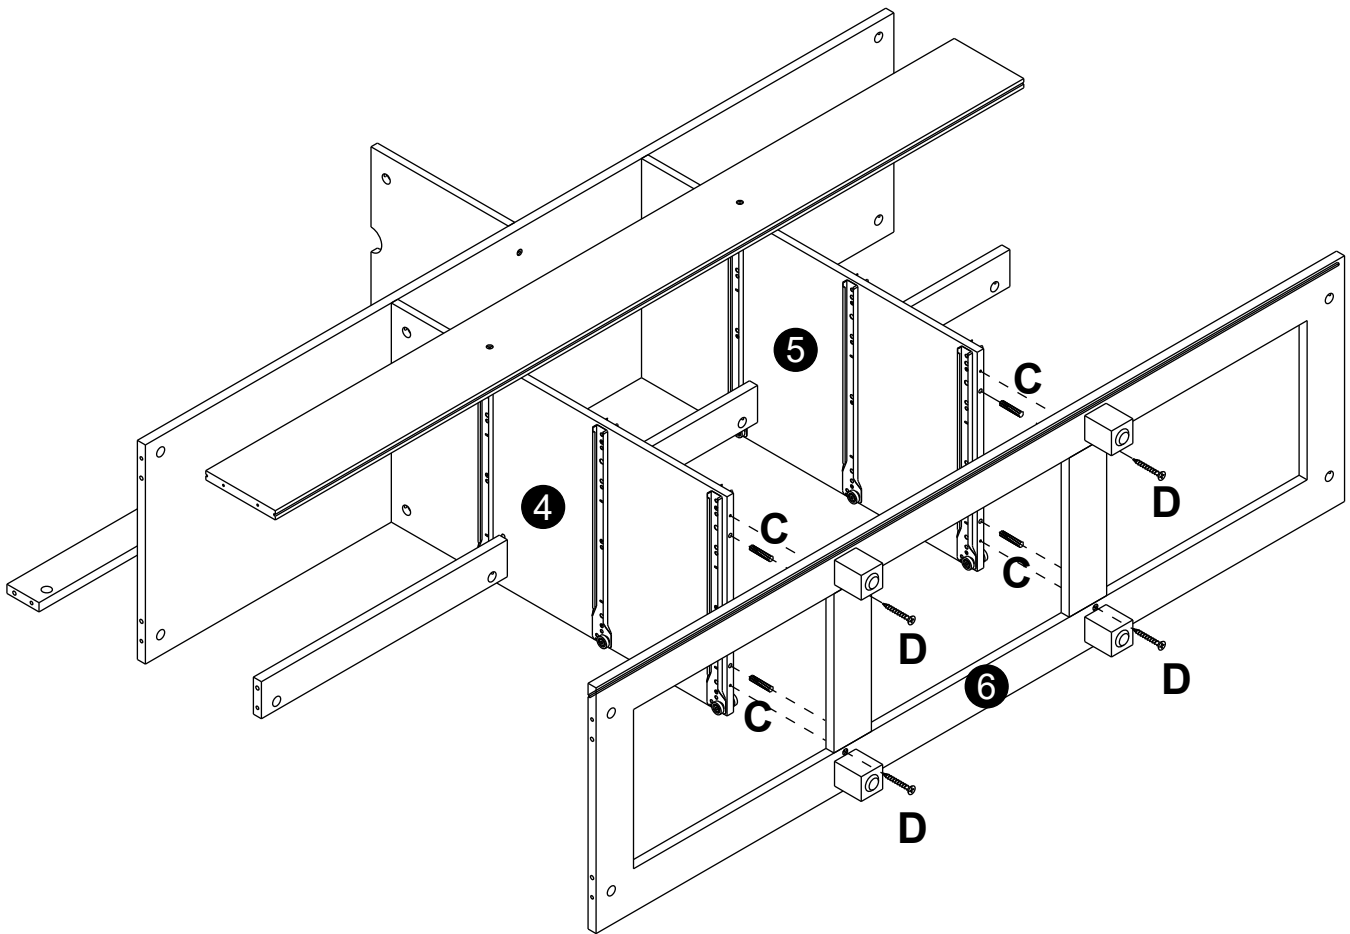

Please pay attention to the orientation of the backplane slot.


B x6




C x6



F x2

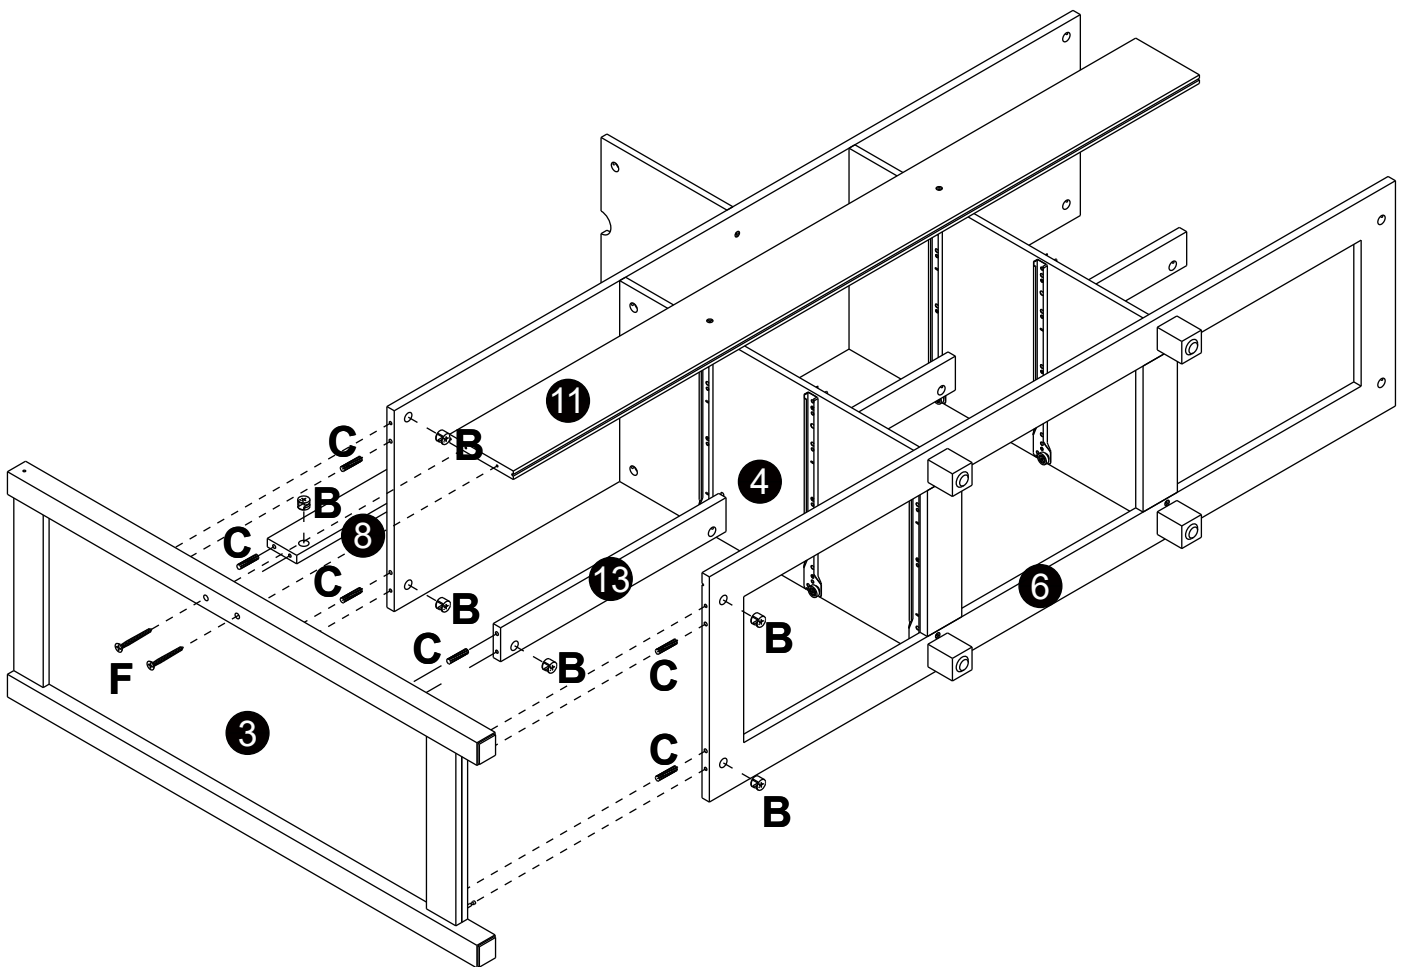

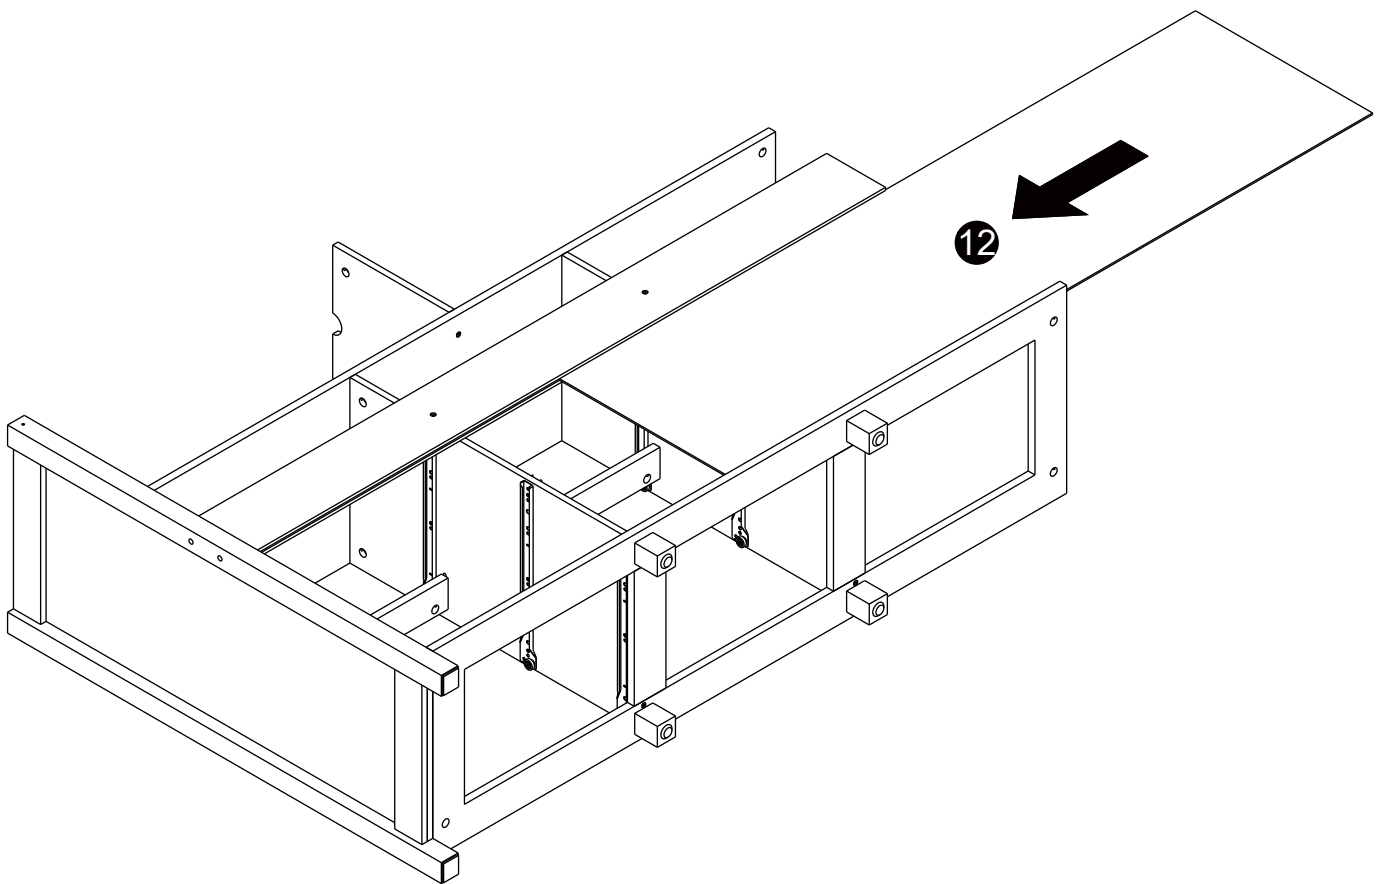


B x6




C x6





F x2

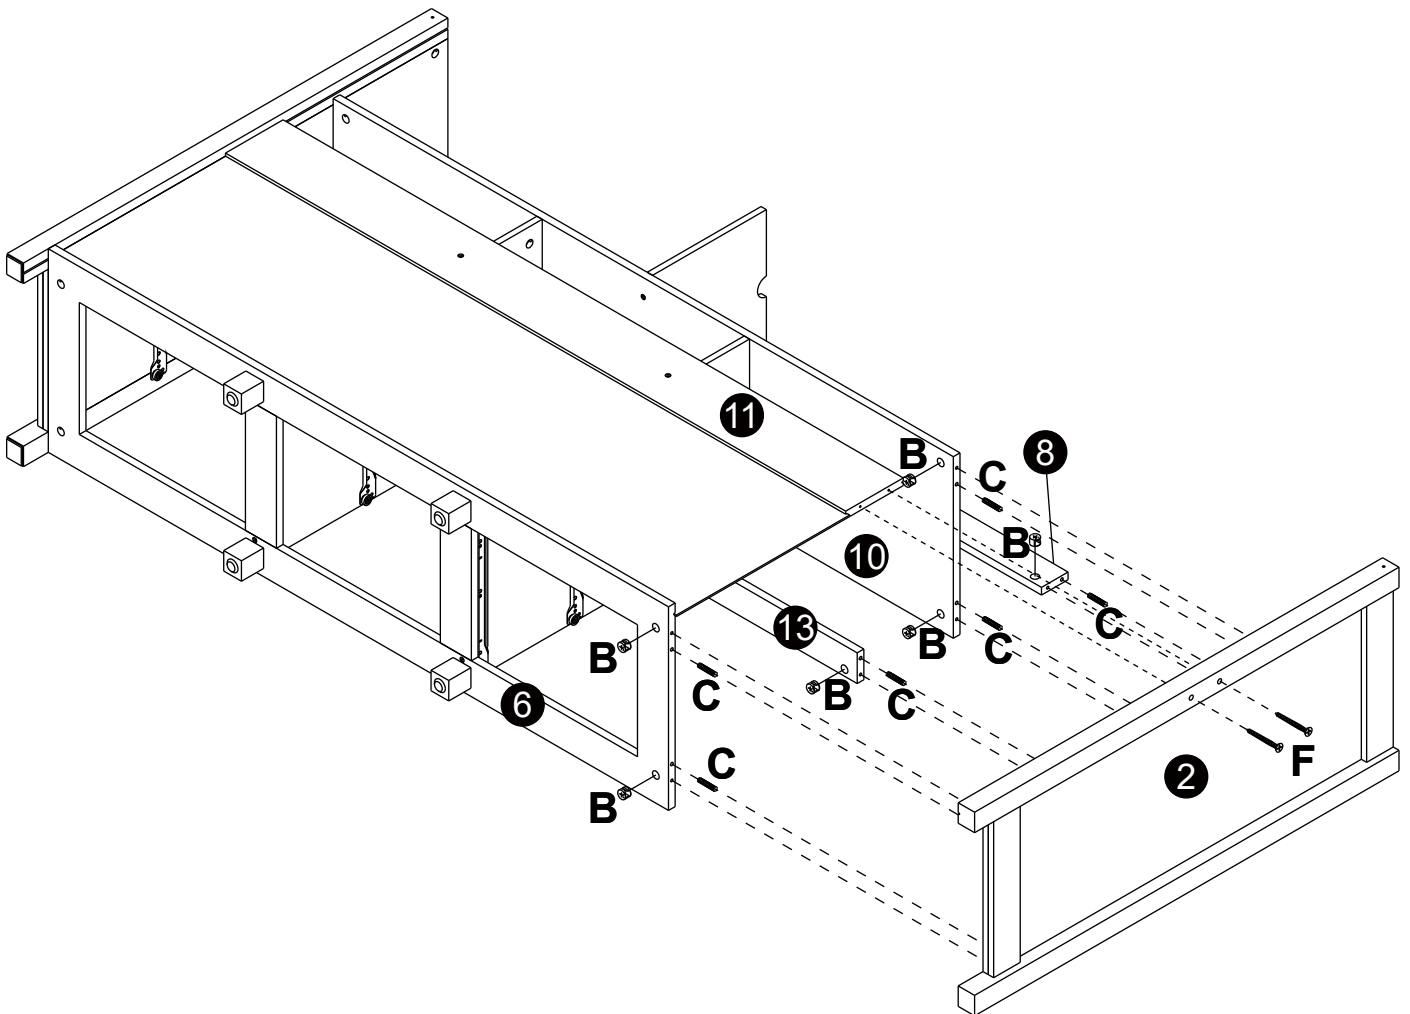

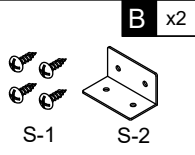


To make the furniture more sturdy, we only marked the positioning holes under the base. After securing the positioning holes, the side panels can be directly fastened

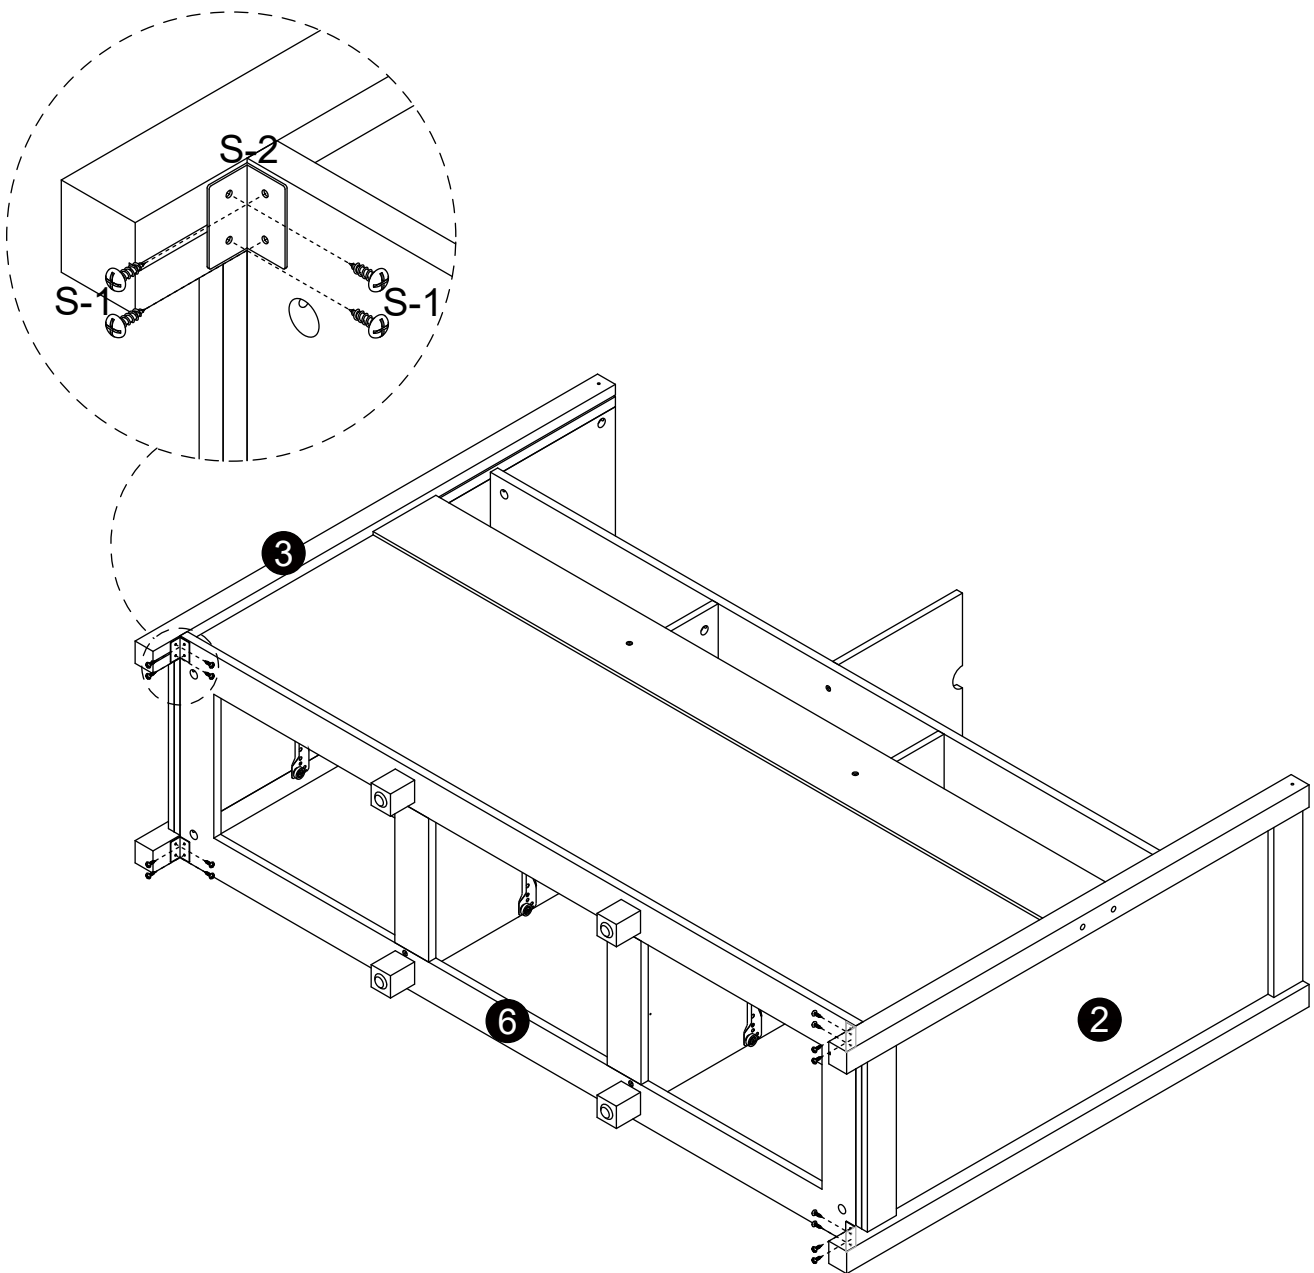


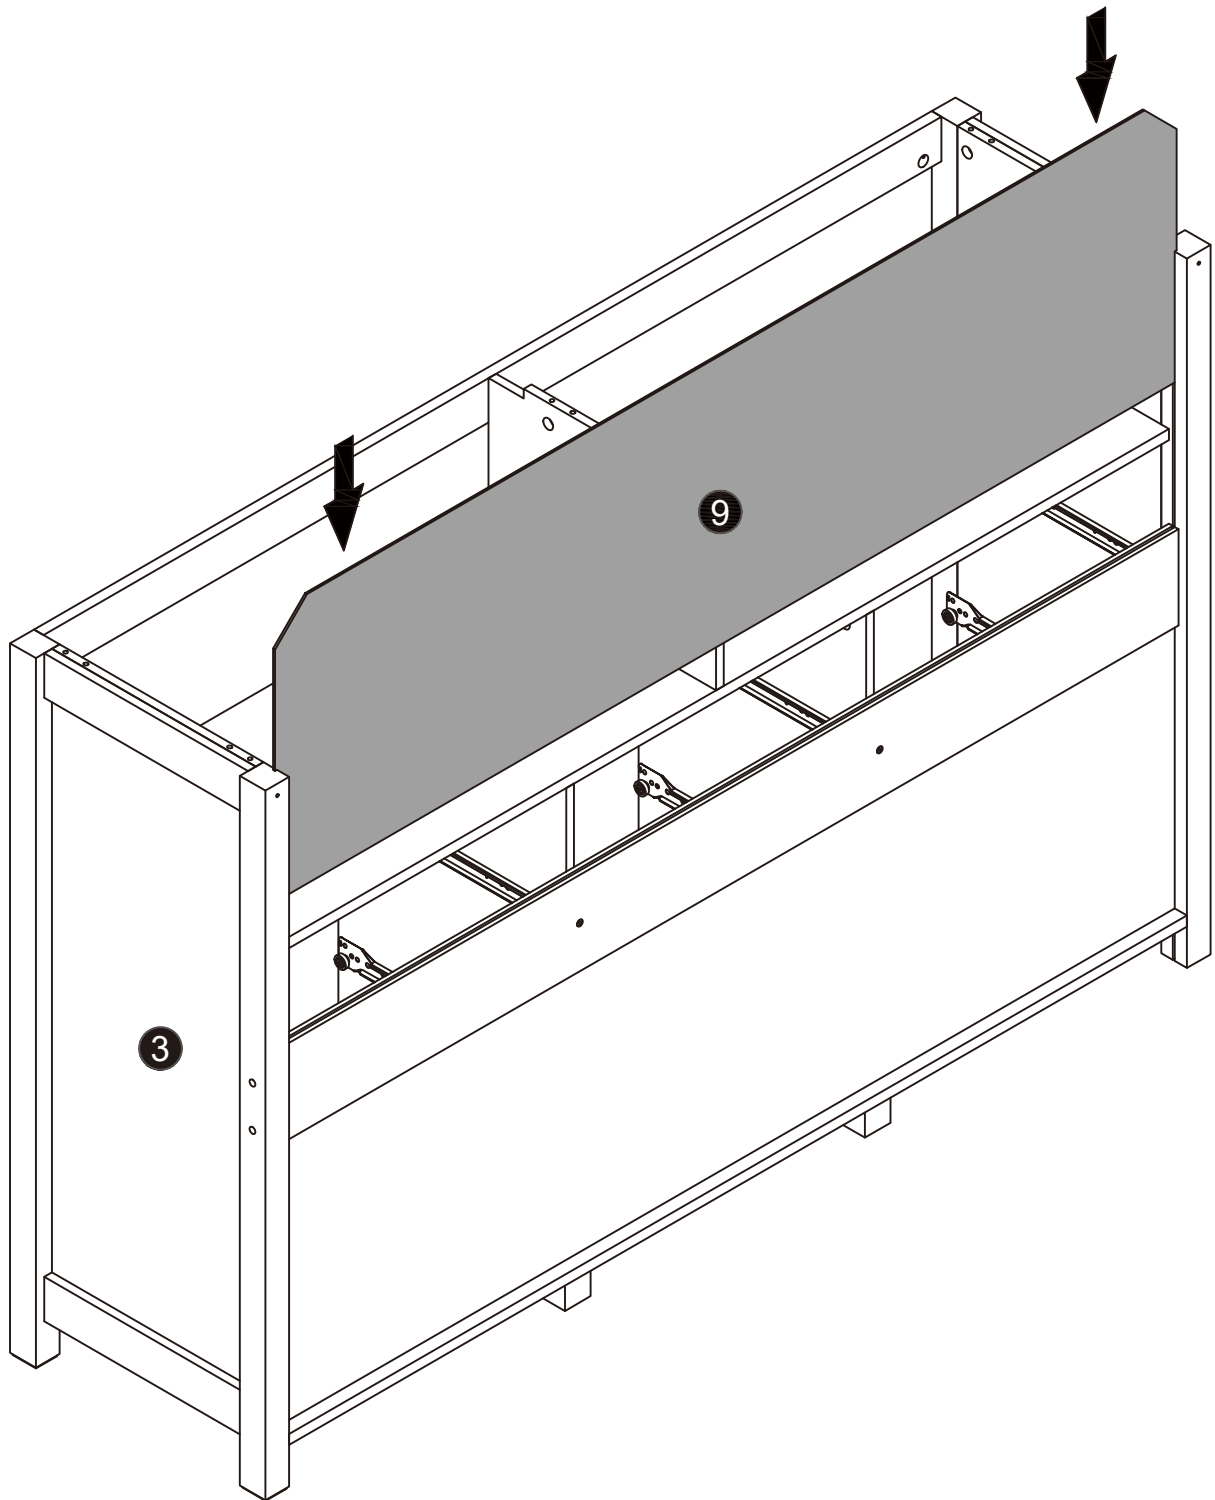


A x6

K x1



Tear off the back
glue of the light strip

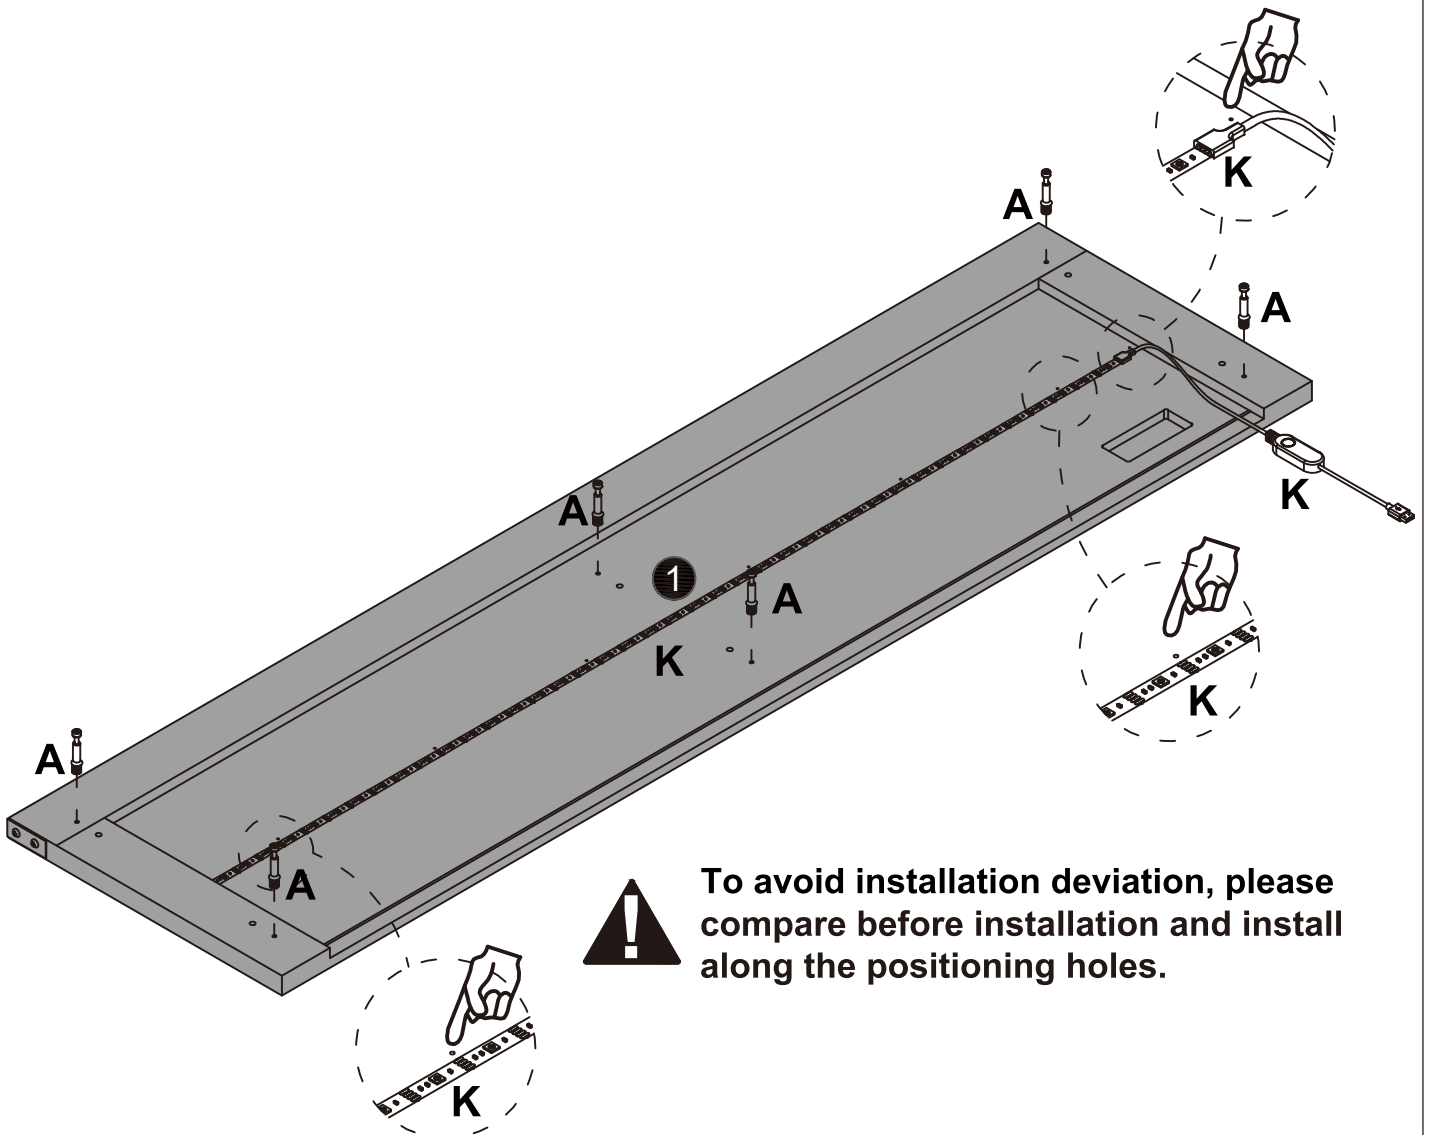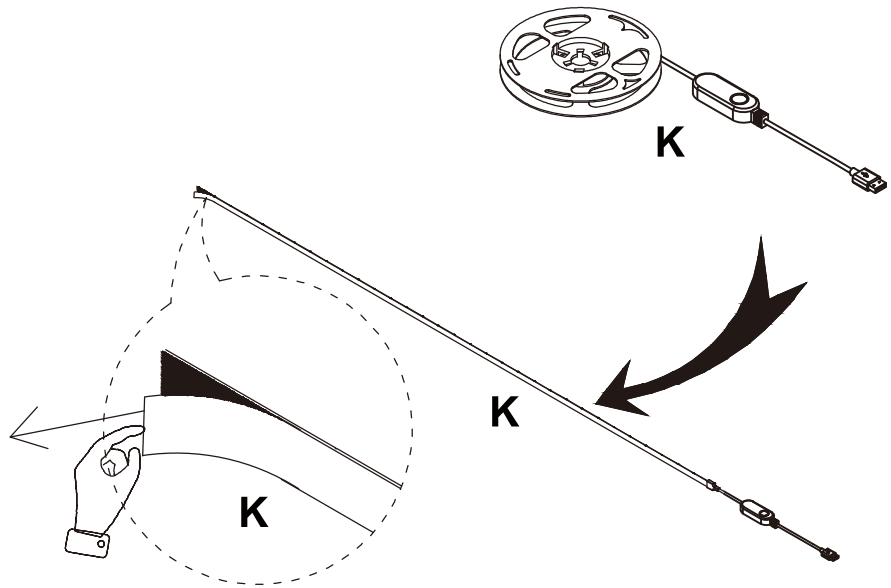

Q x6

R x1



Q-1




Q-2



R-1




R-2

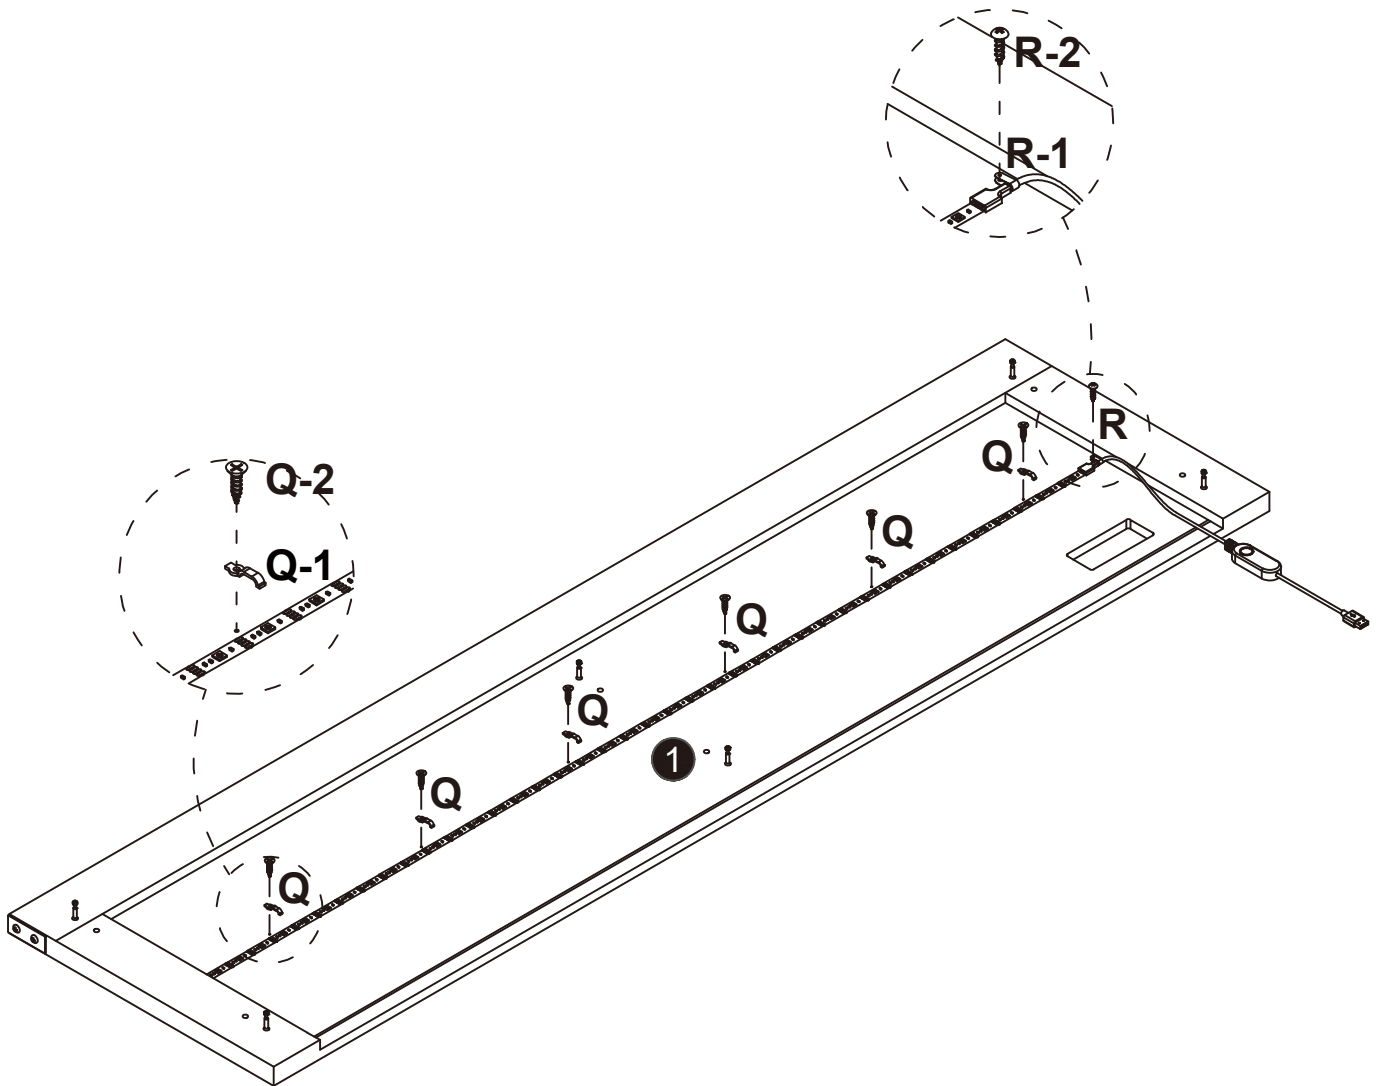

B x6



C x6

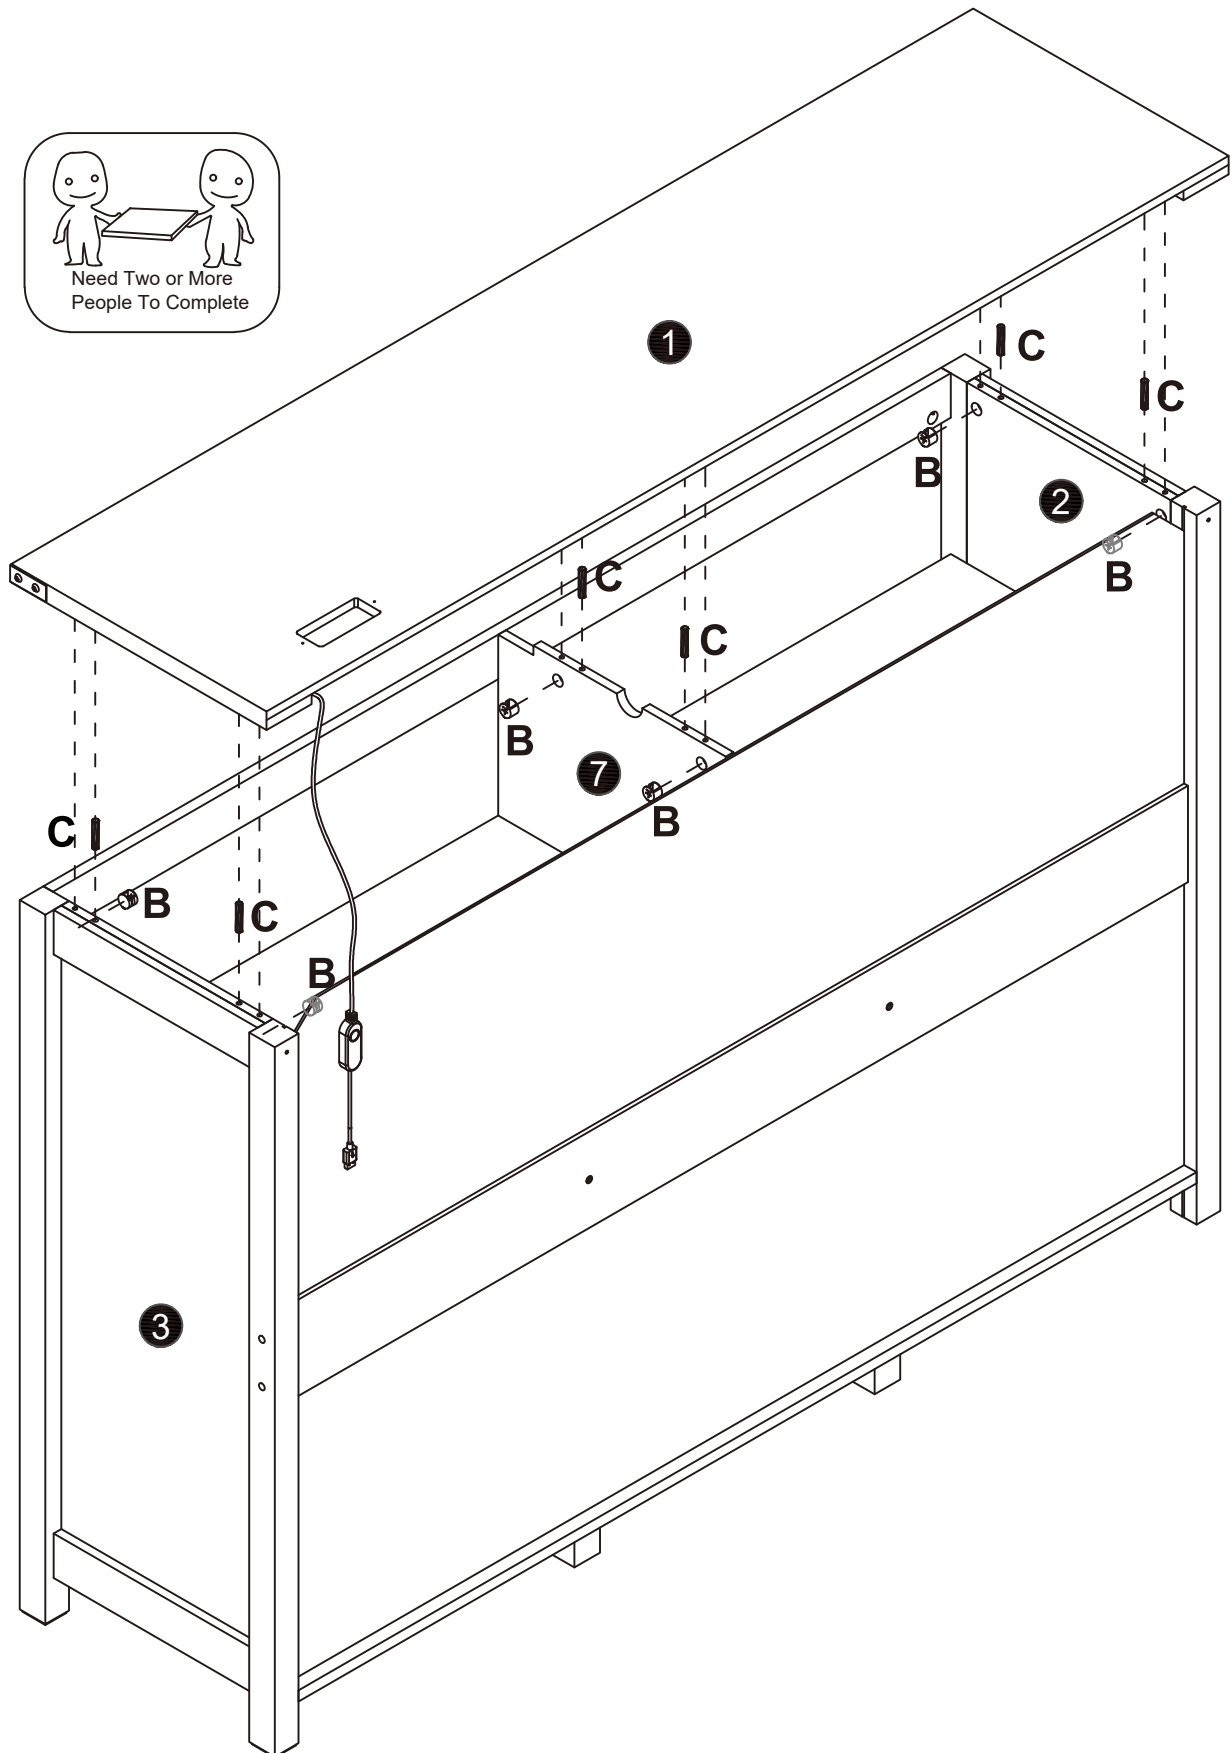



G x4


J x14





J-1






J-2

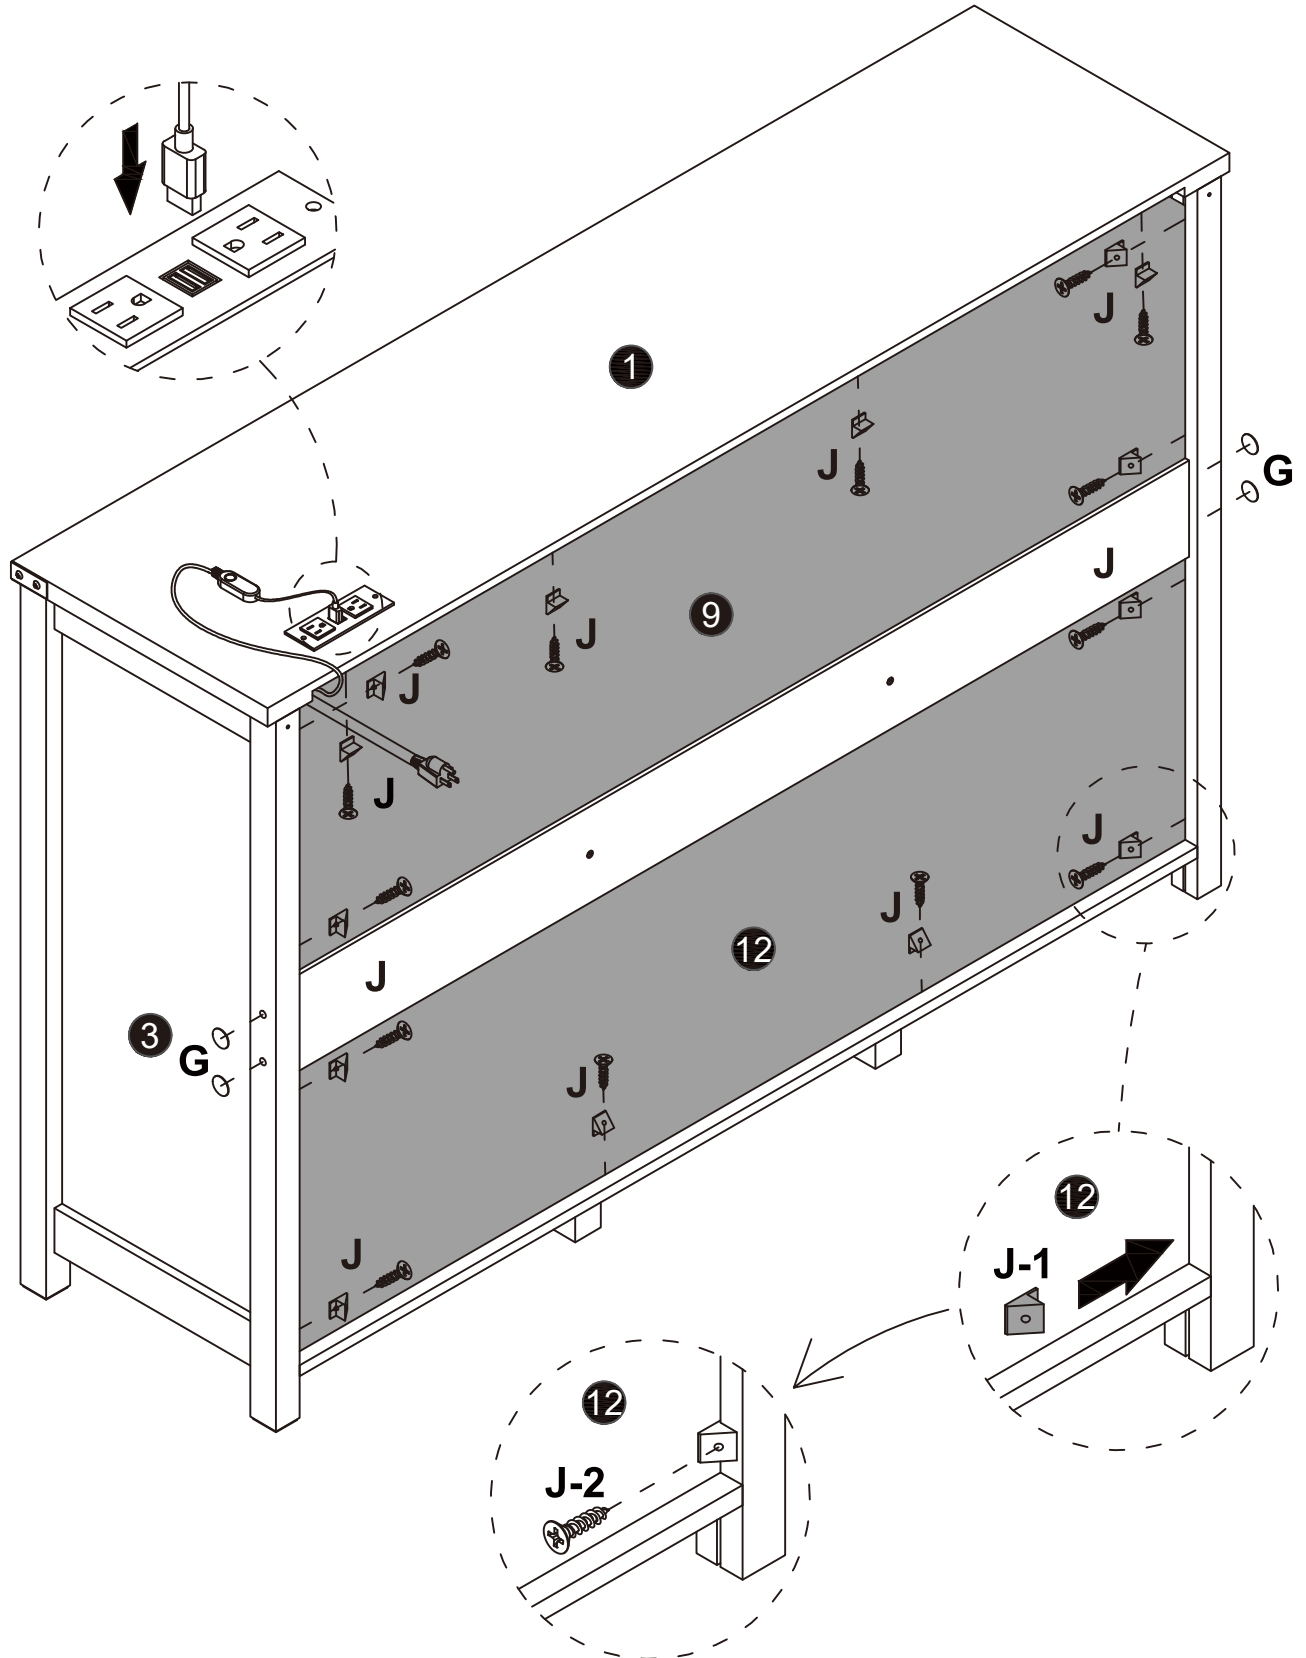

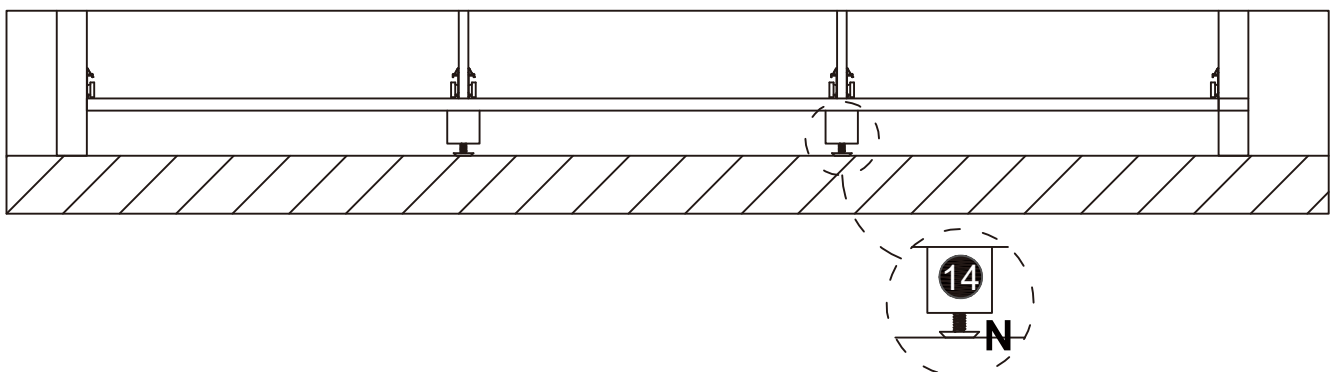
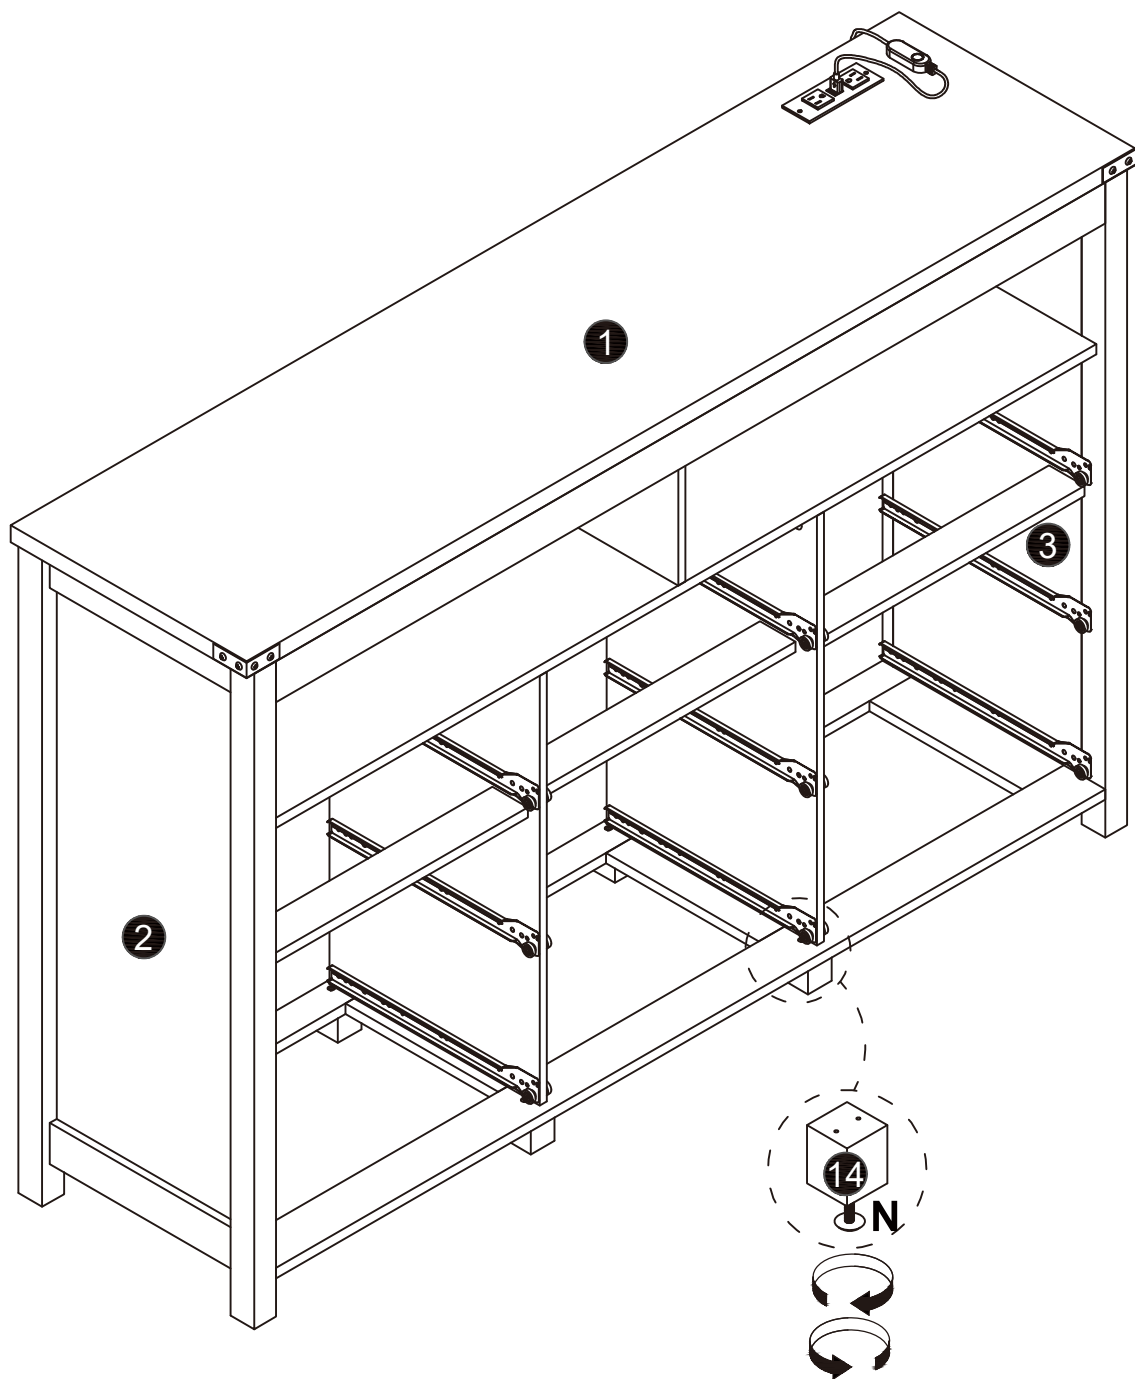


If the cabinet is unstable on the ground, please rotate the (N) adjustment foot pad on the No.14 support leg.


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the left drawer installed in the cabinet.

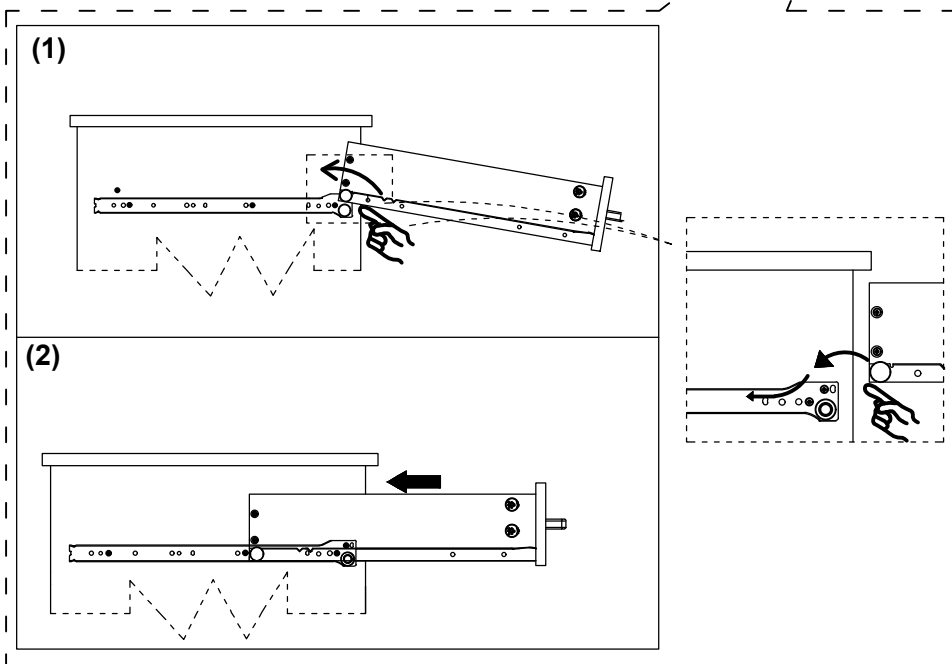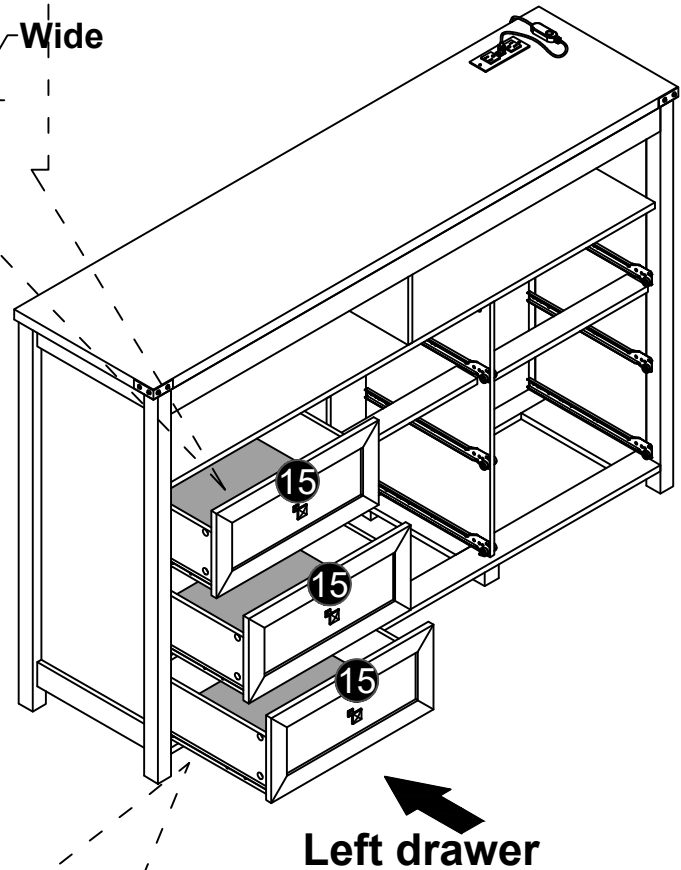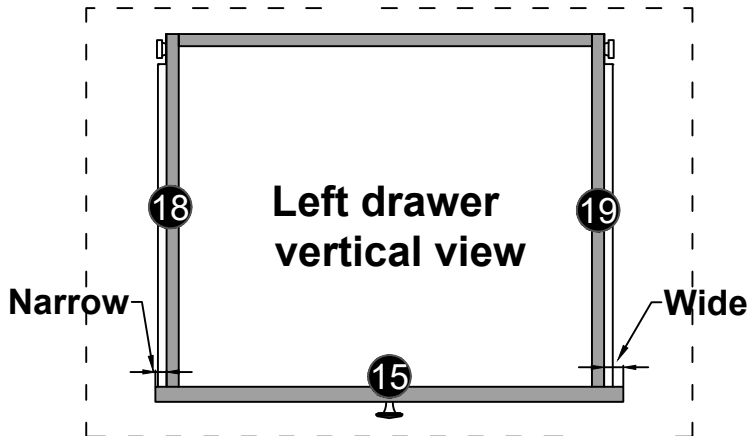



Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the right drawer installed in the cabinet.

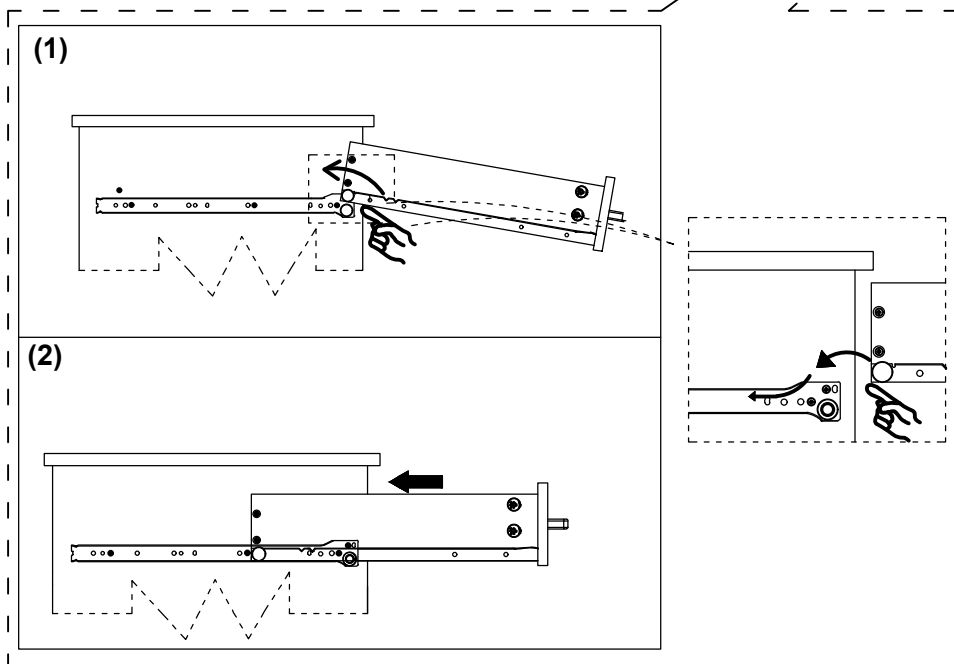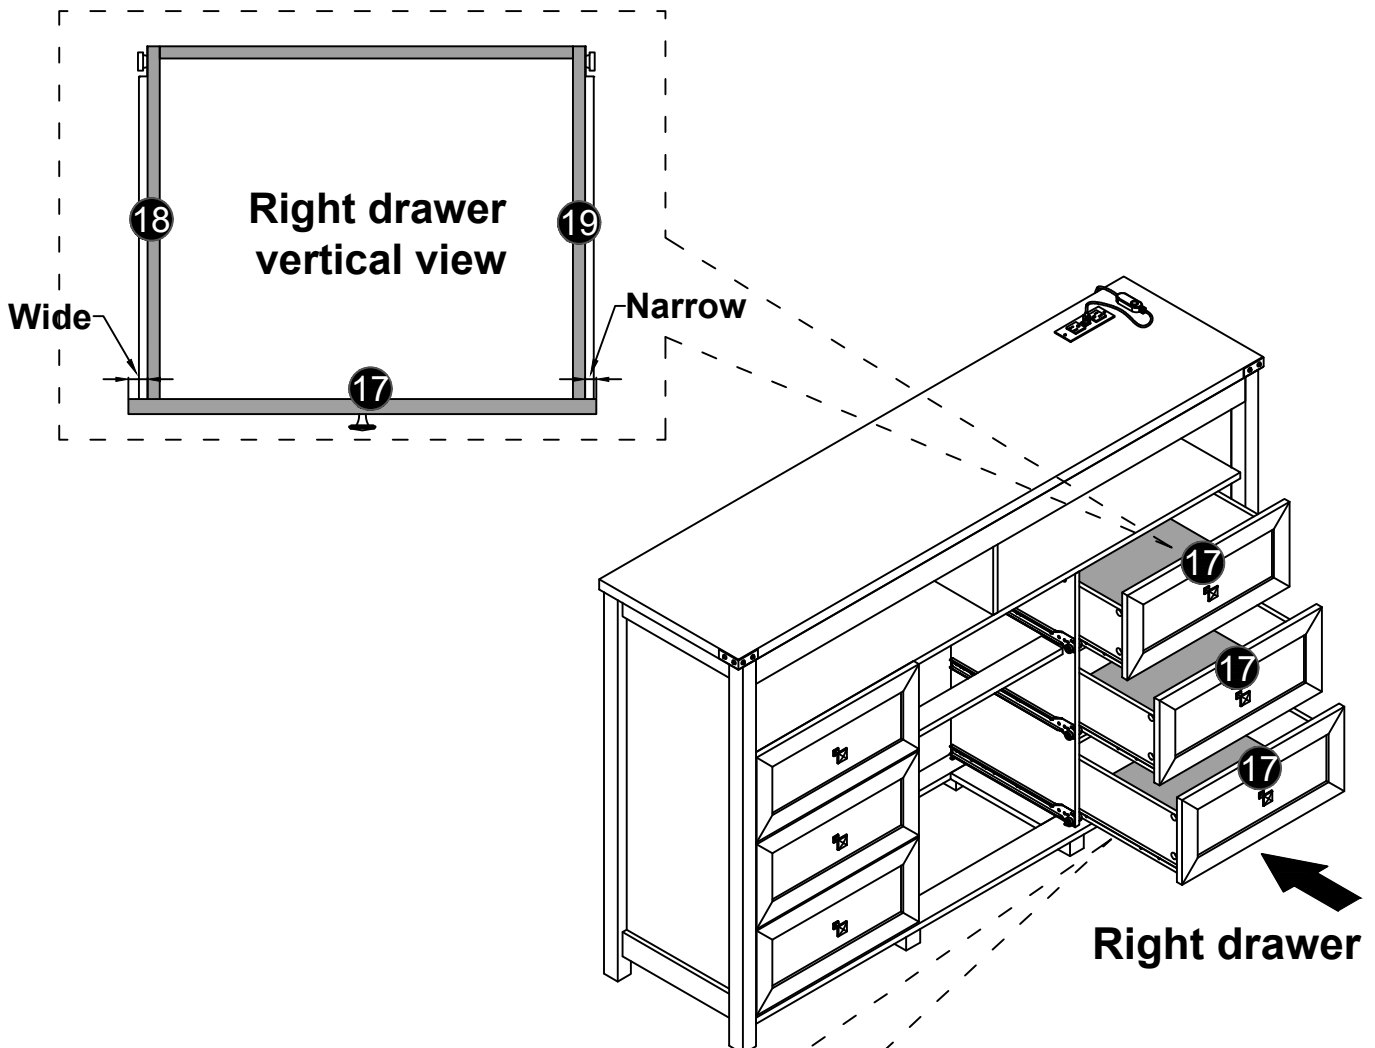


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the middle drawer installed in the cabinet.

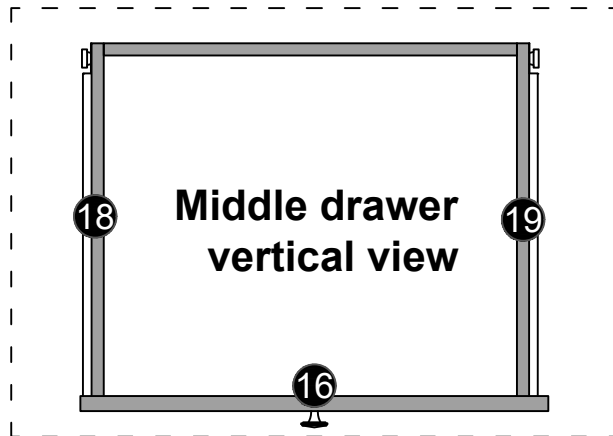

The distance between the left and right is the same.

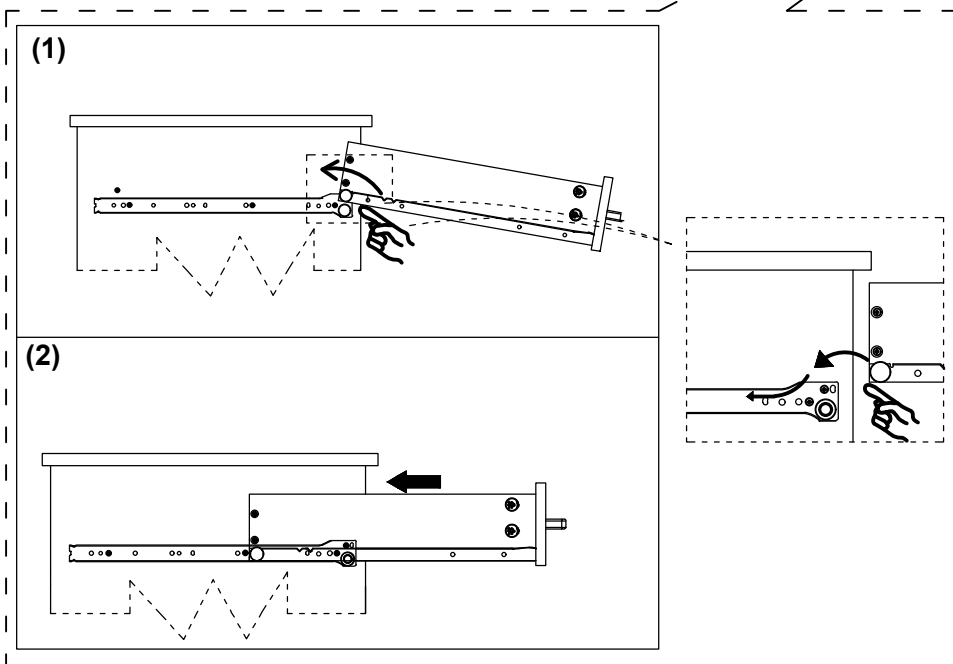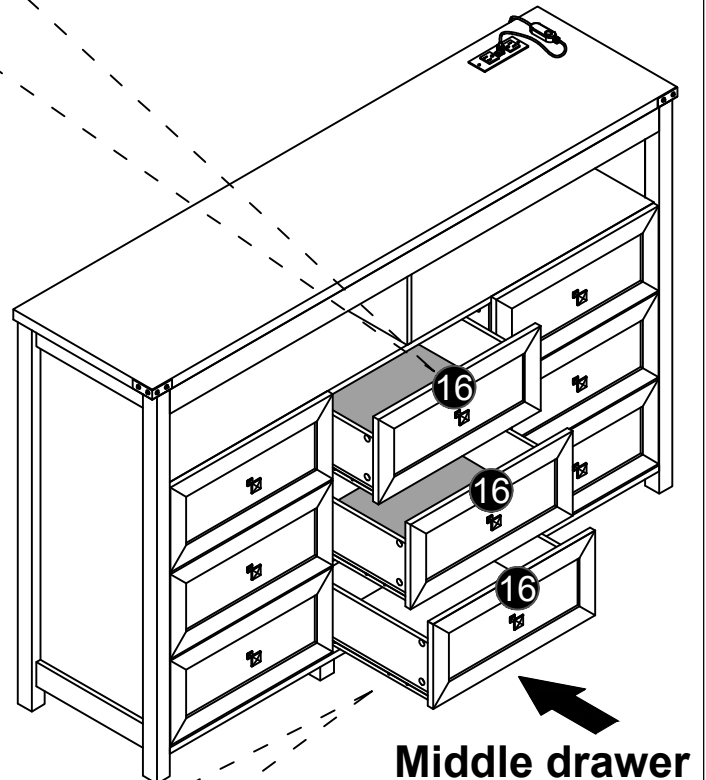

D x2



I x2



I-1



I-2



I-3

I-1

I-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

WALL

I-3

(4)x2

Then, put the expansion bolt into the hole

WALL

I-3

D

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

(2)x2

WALL


+
drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

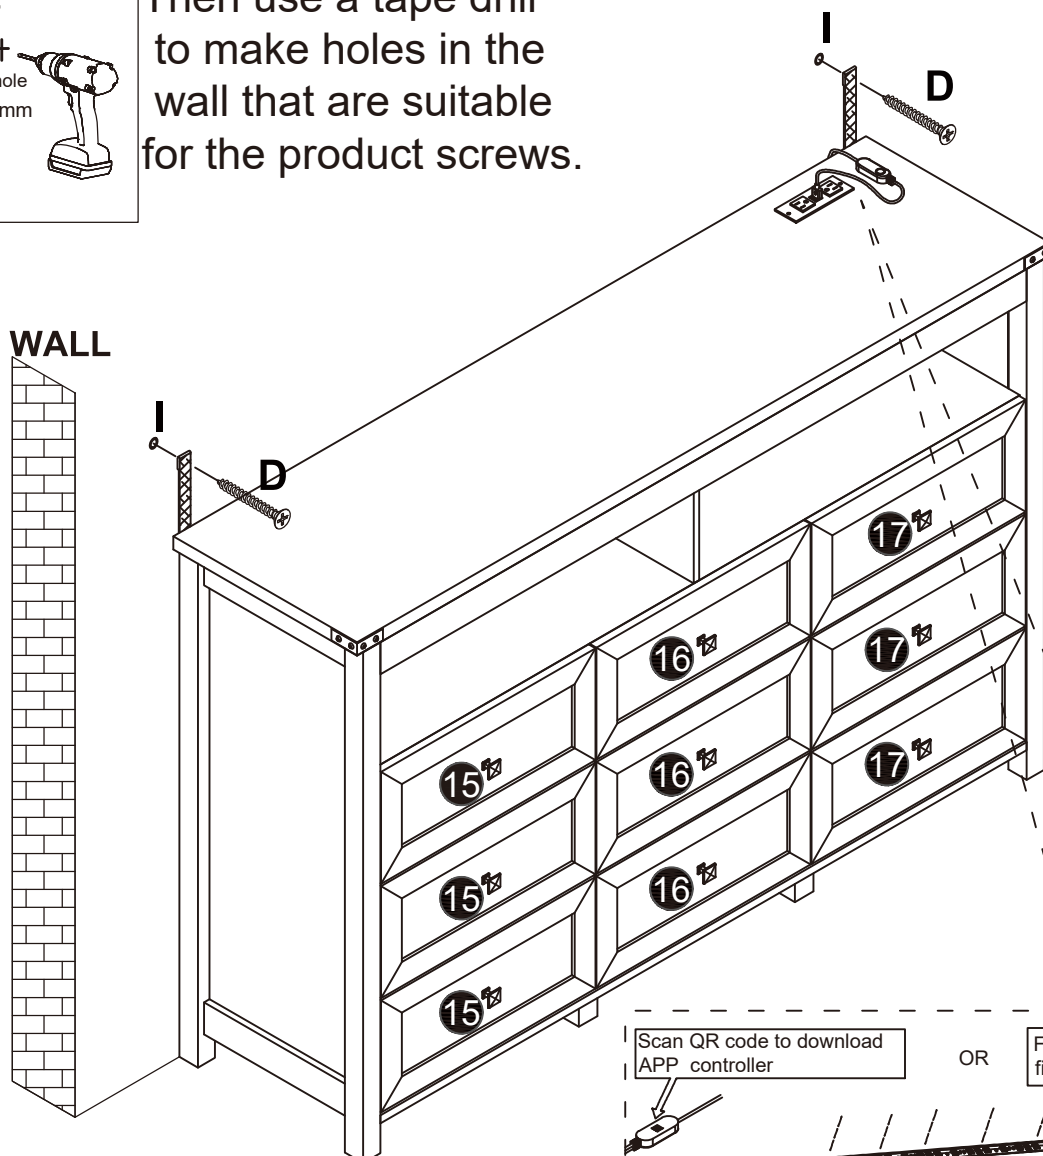

Scan QR code to download
APP controller

OR

Flip to the other side to
find the control button

