


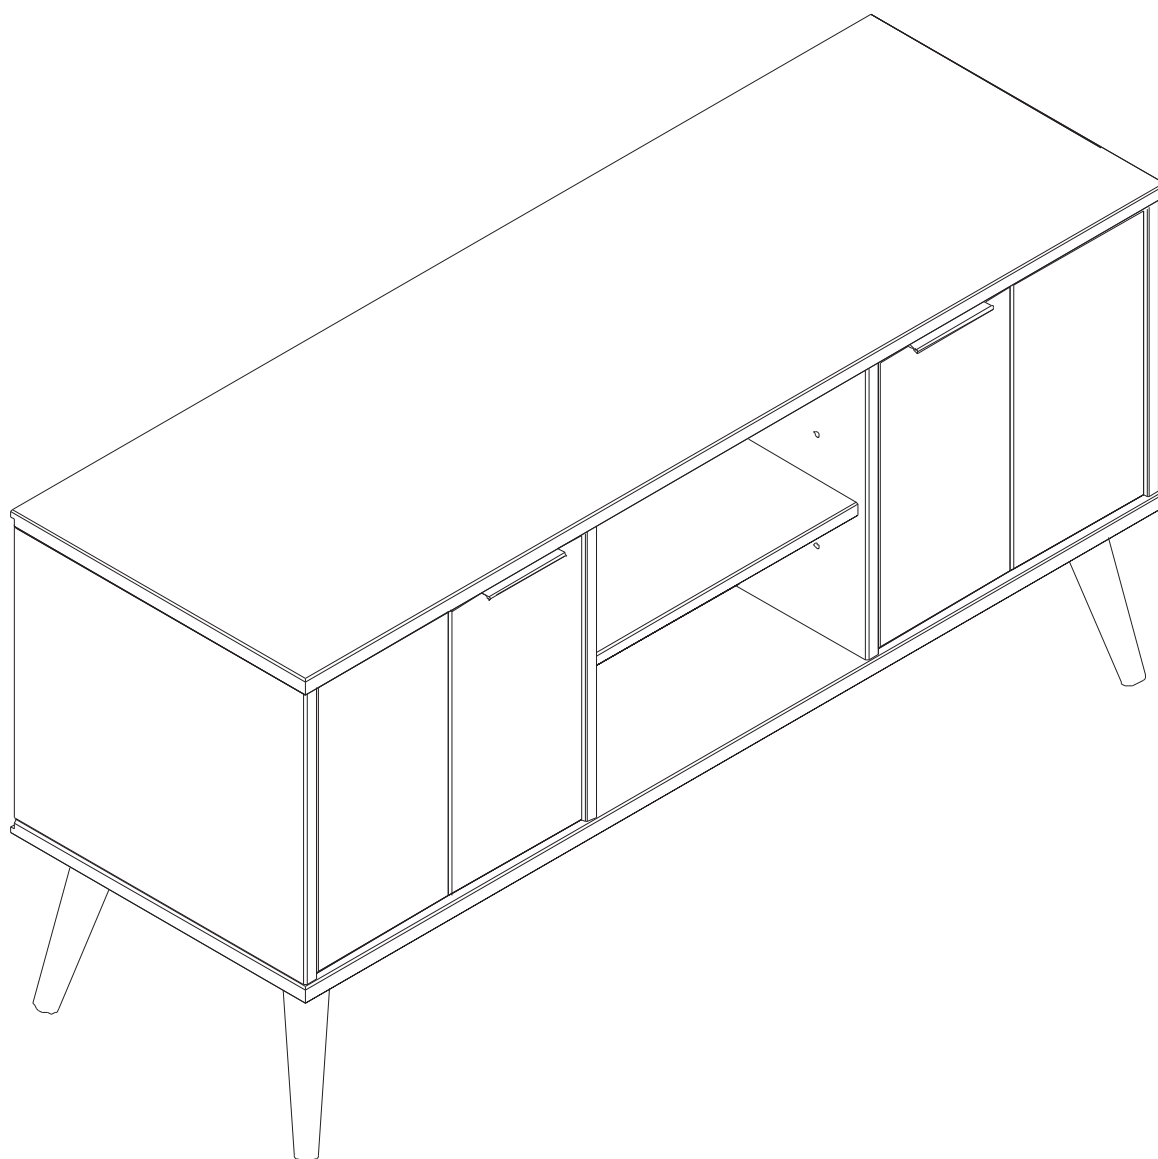
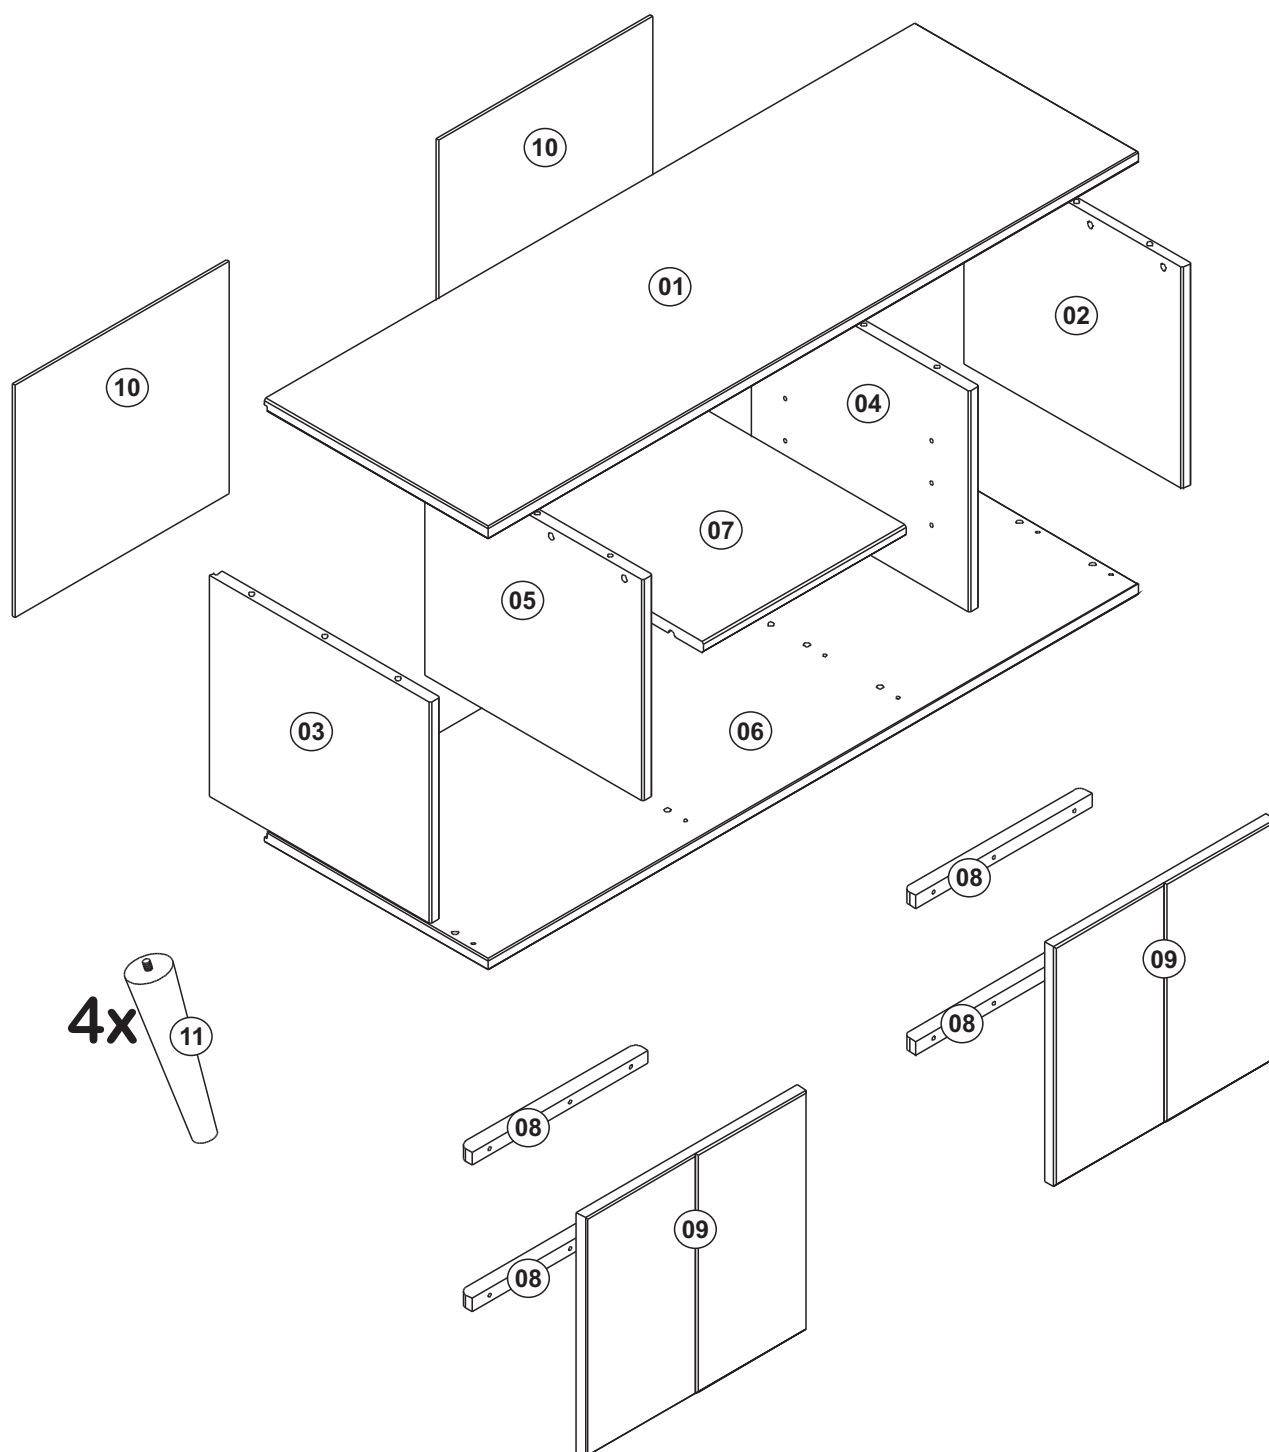



ALICE TV STAND

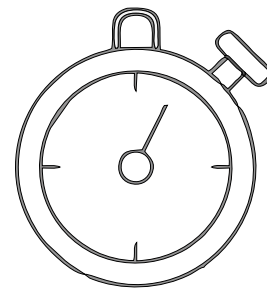


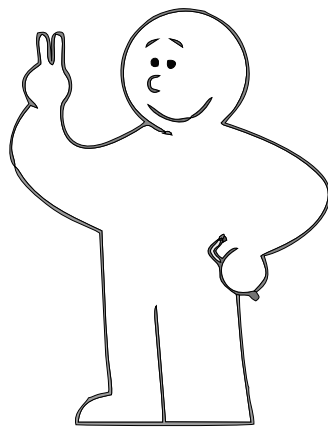


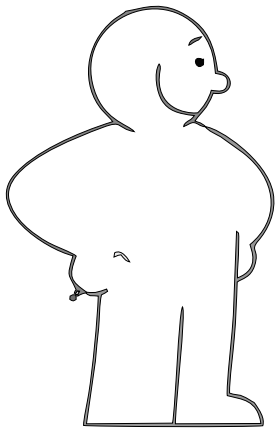


60 Min

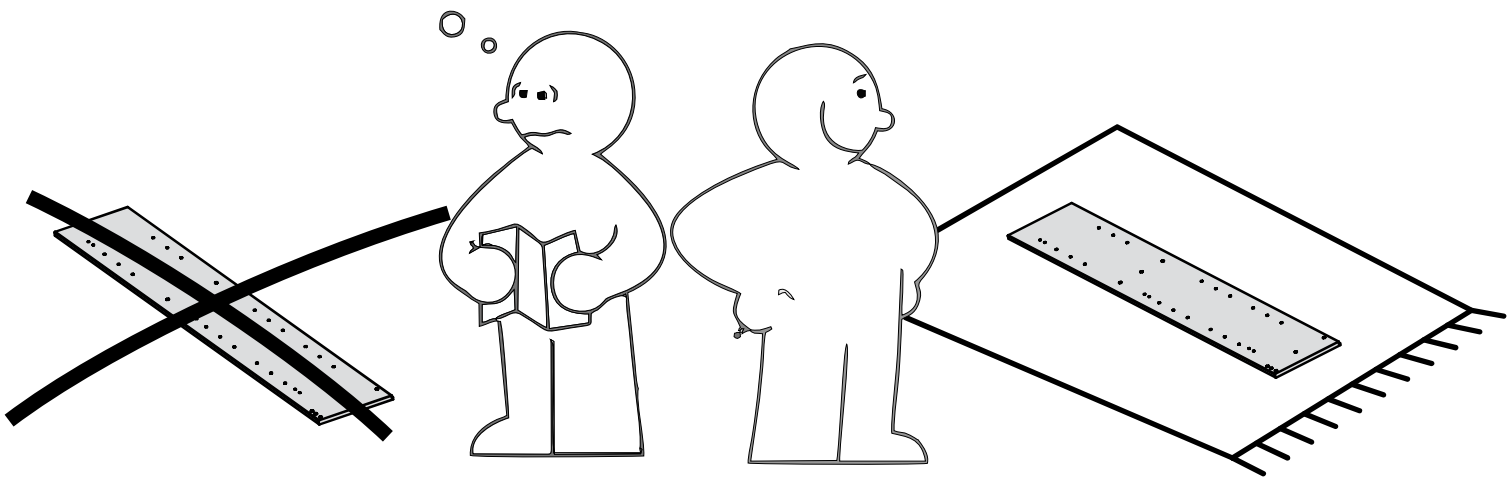

Tools required

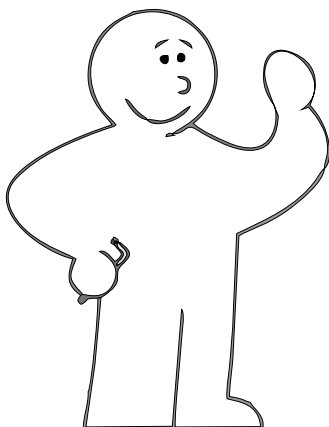

Phillips screwdriver
(medium & large)

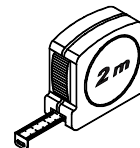









Ruler/tape
measure



Small
hammer




Eye protection
(when using a
hammer or glue)

A	 8x25mm	24	B	 4,0x25mm	24
C	 4,0x40mm	12	D	 3,5x14mm	39
E		04	F		12
G		04	H		04
I		24	J		02
K		02	L		04
M	 3,5x30mm	01	N		02
O		01			









HARDWARE IS LOCATED INSIDE A CARDBOARD BOX ! CHECK FOR IT BEFORE DISPOSING PACKAGING


Ruler - Use this ruler to help correctly identify the screws










01

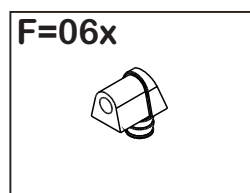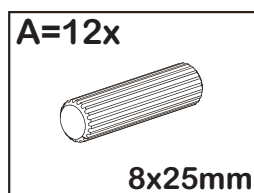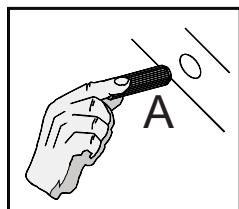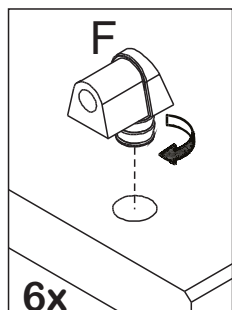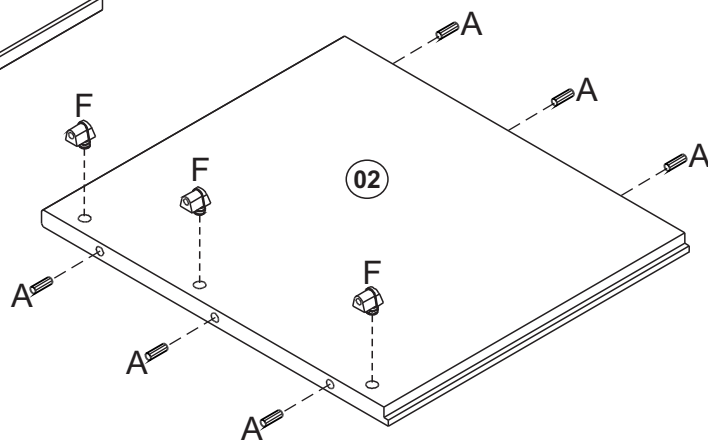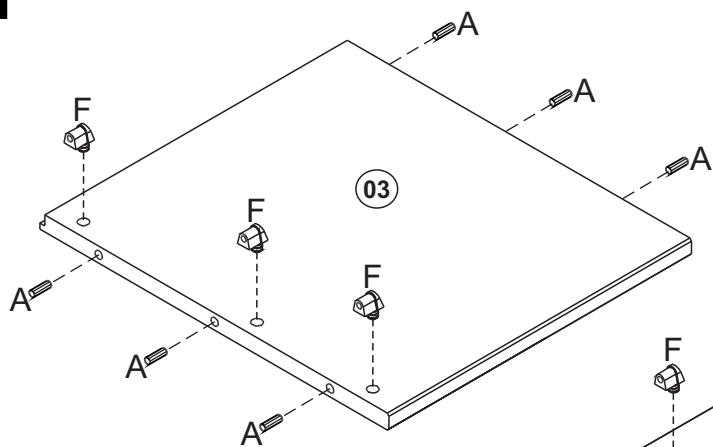

02

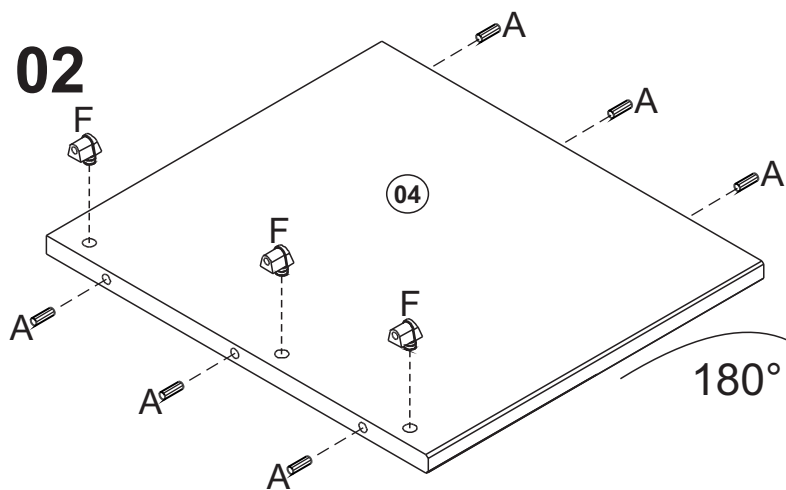

180°

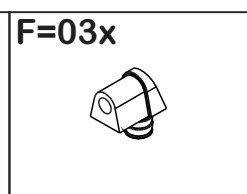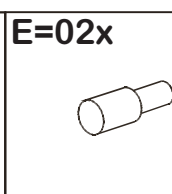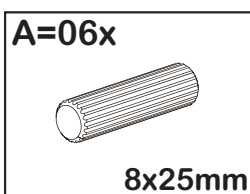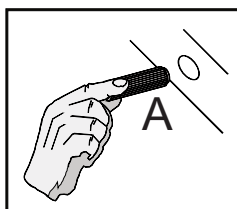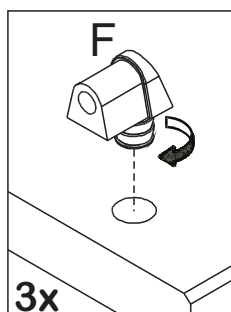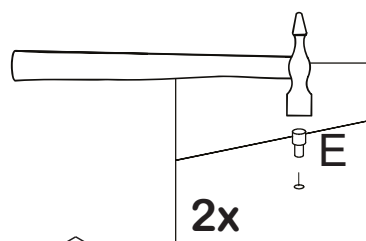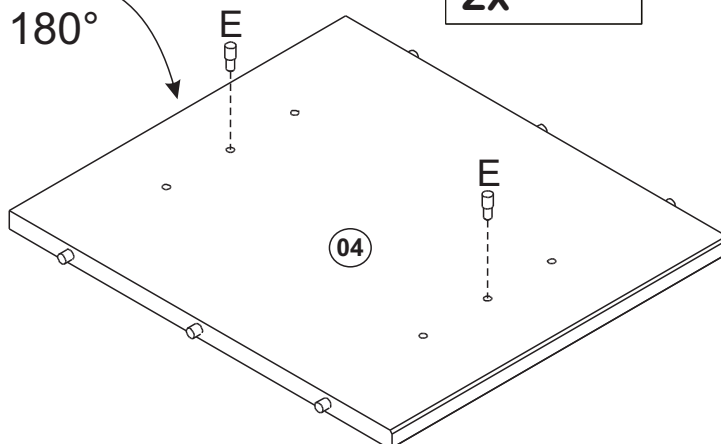

03

03

180°

2x

3x

A

F

E




05

A=06x
8x25mm




E=02x

F=03x





05

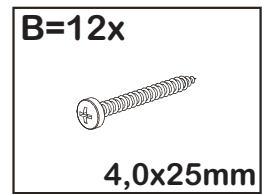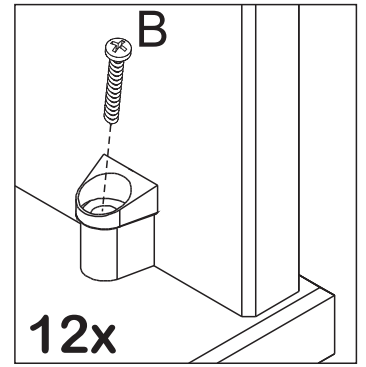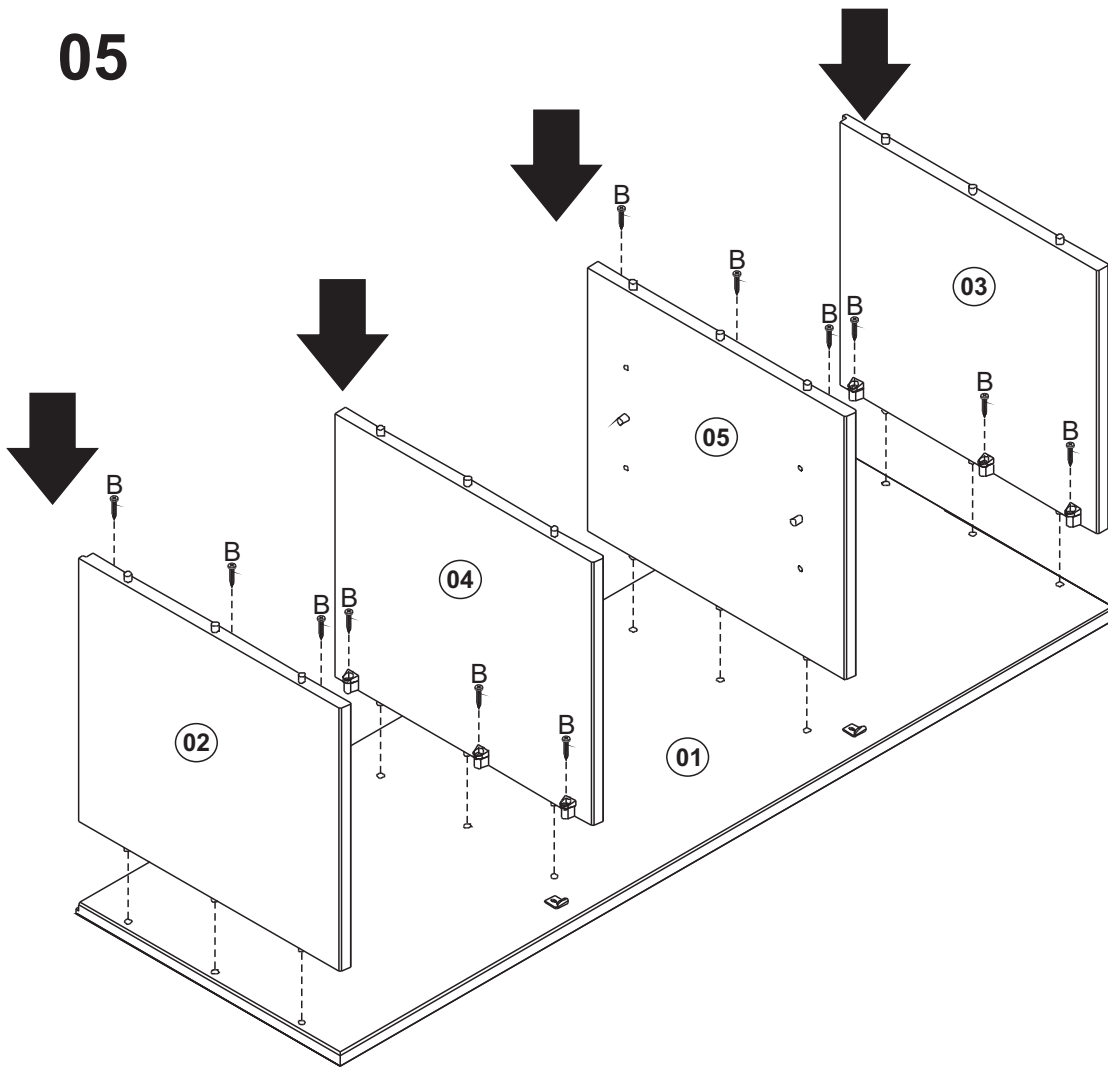



06

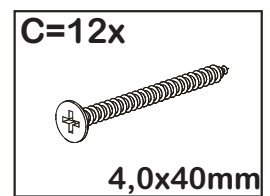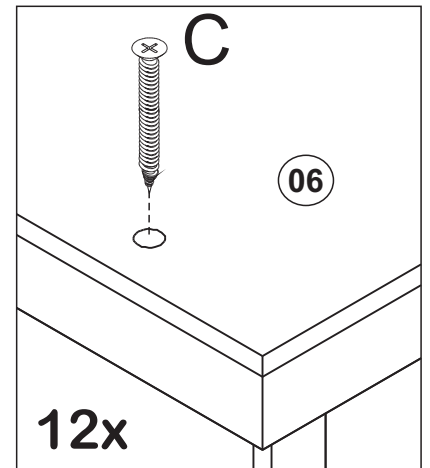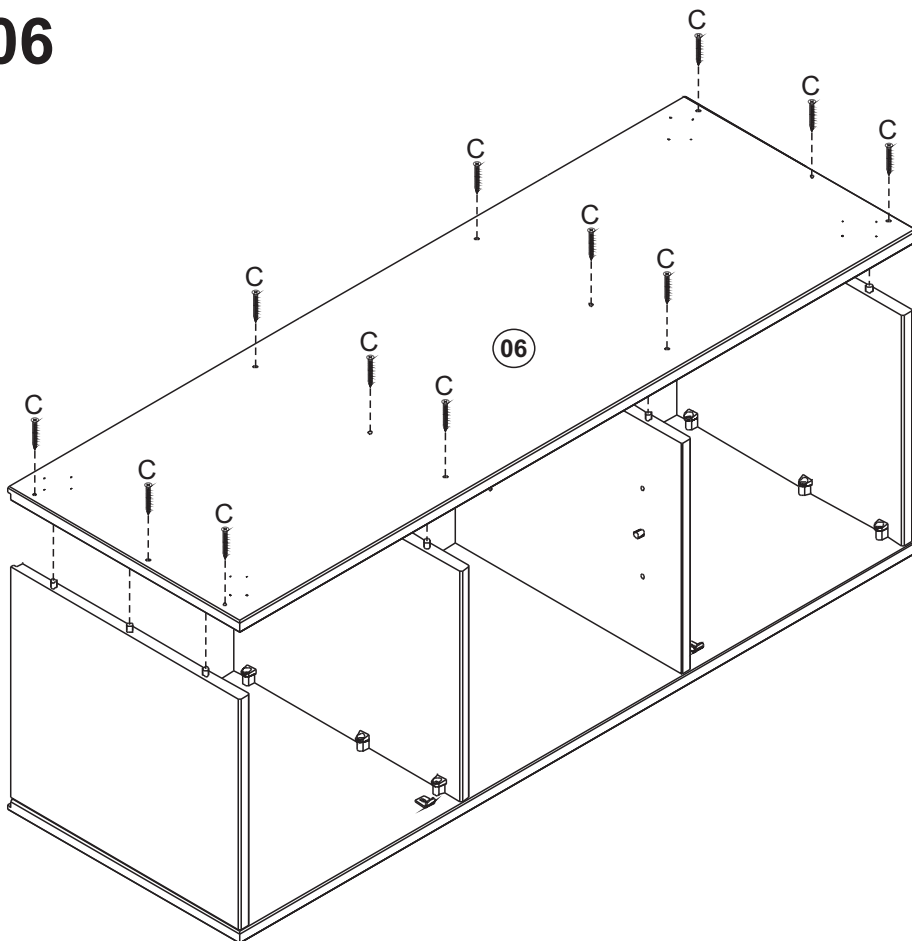

07

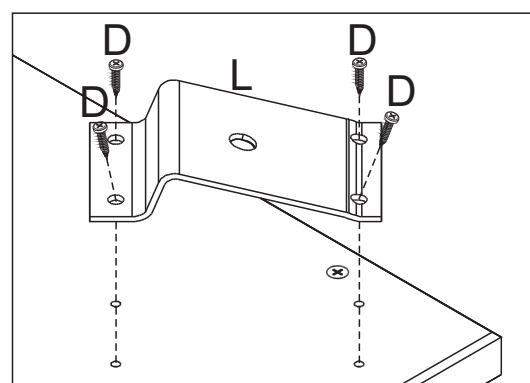
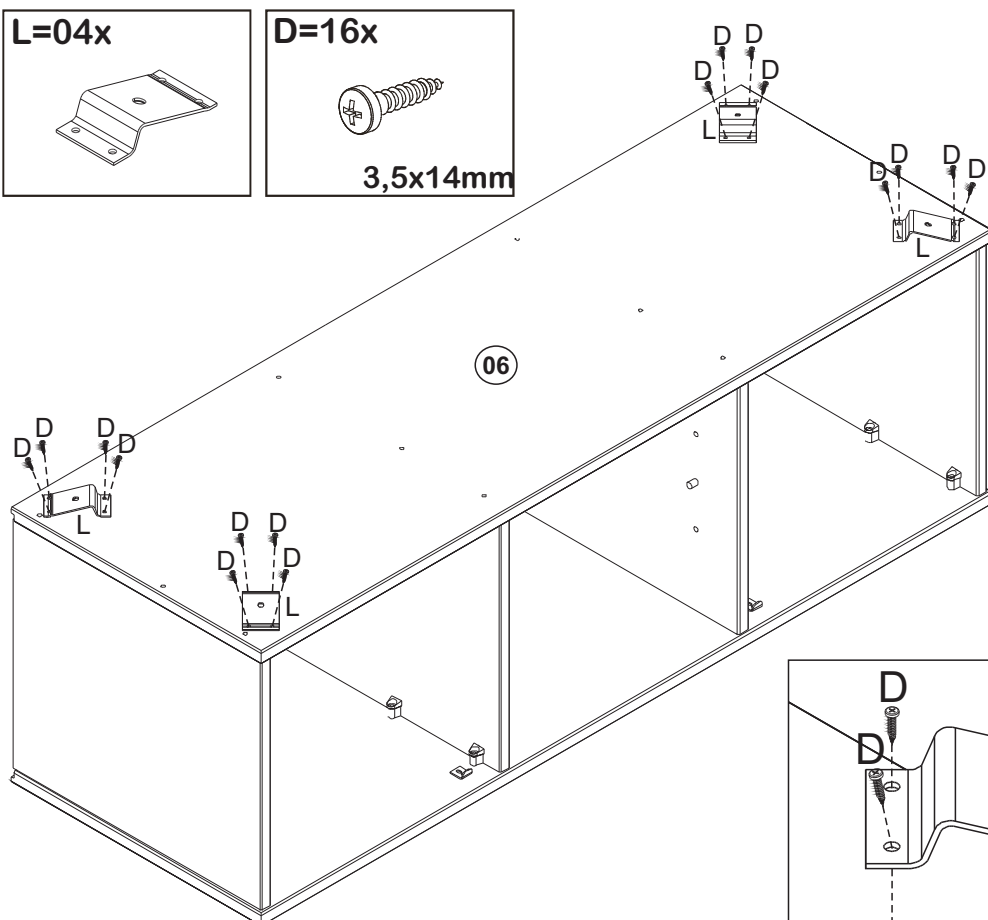
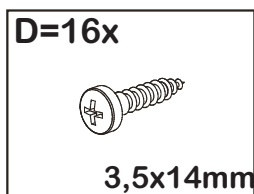
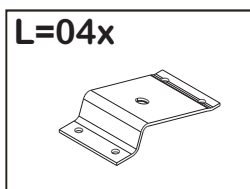


08

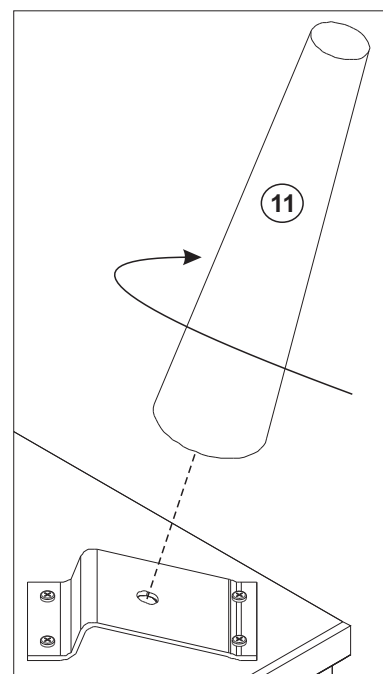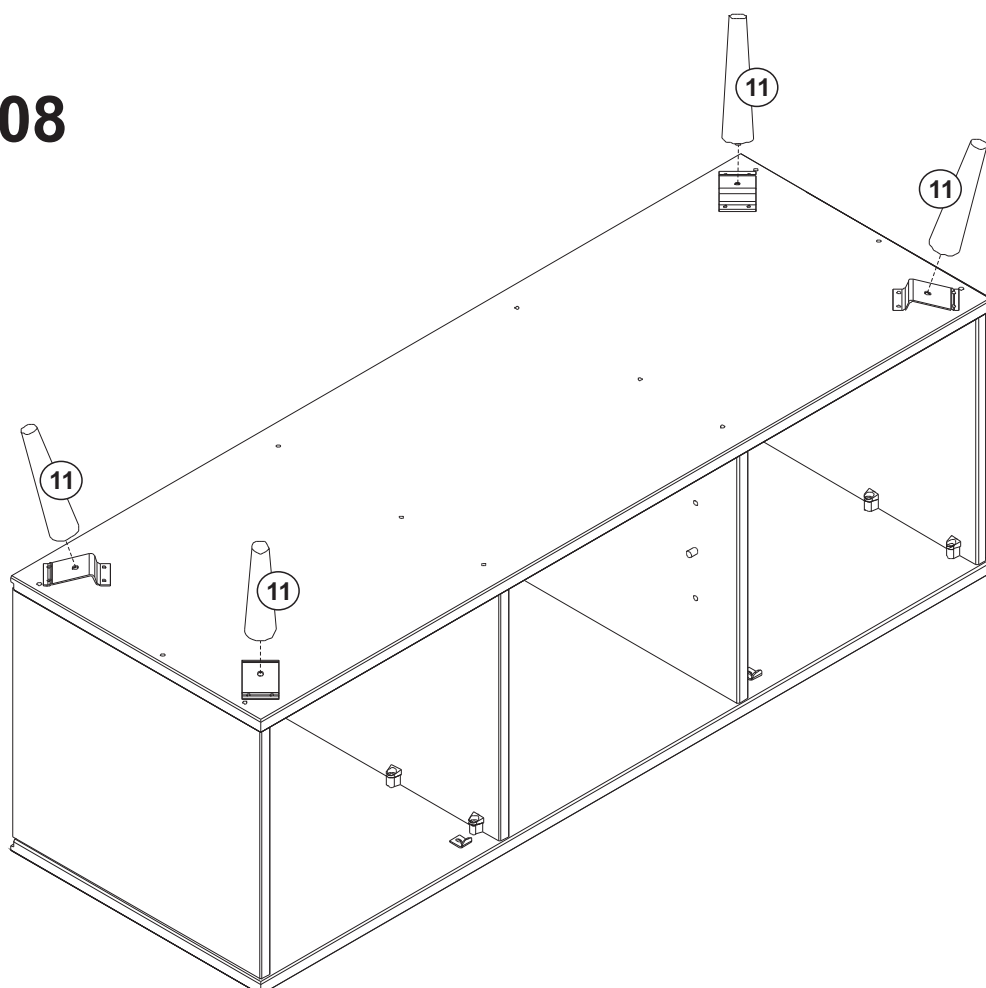




Use all back panels nails.
Evenly spaced, they help
make the unit strong.

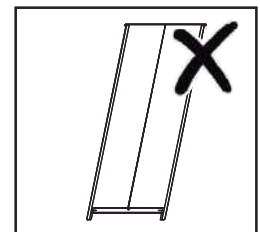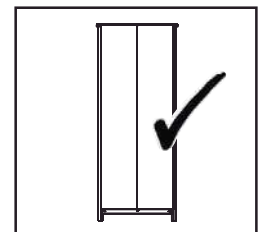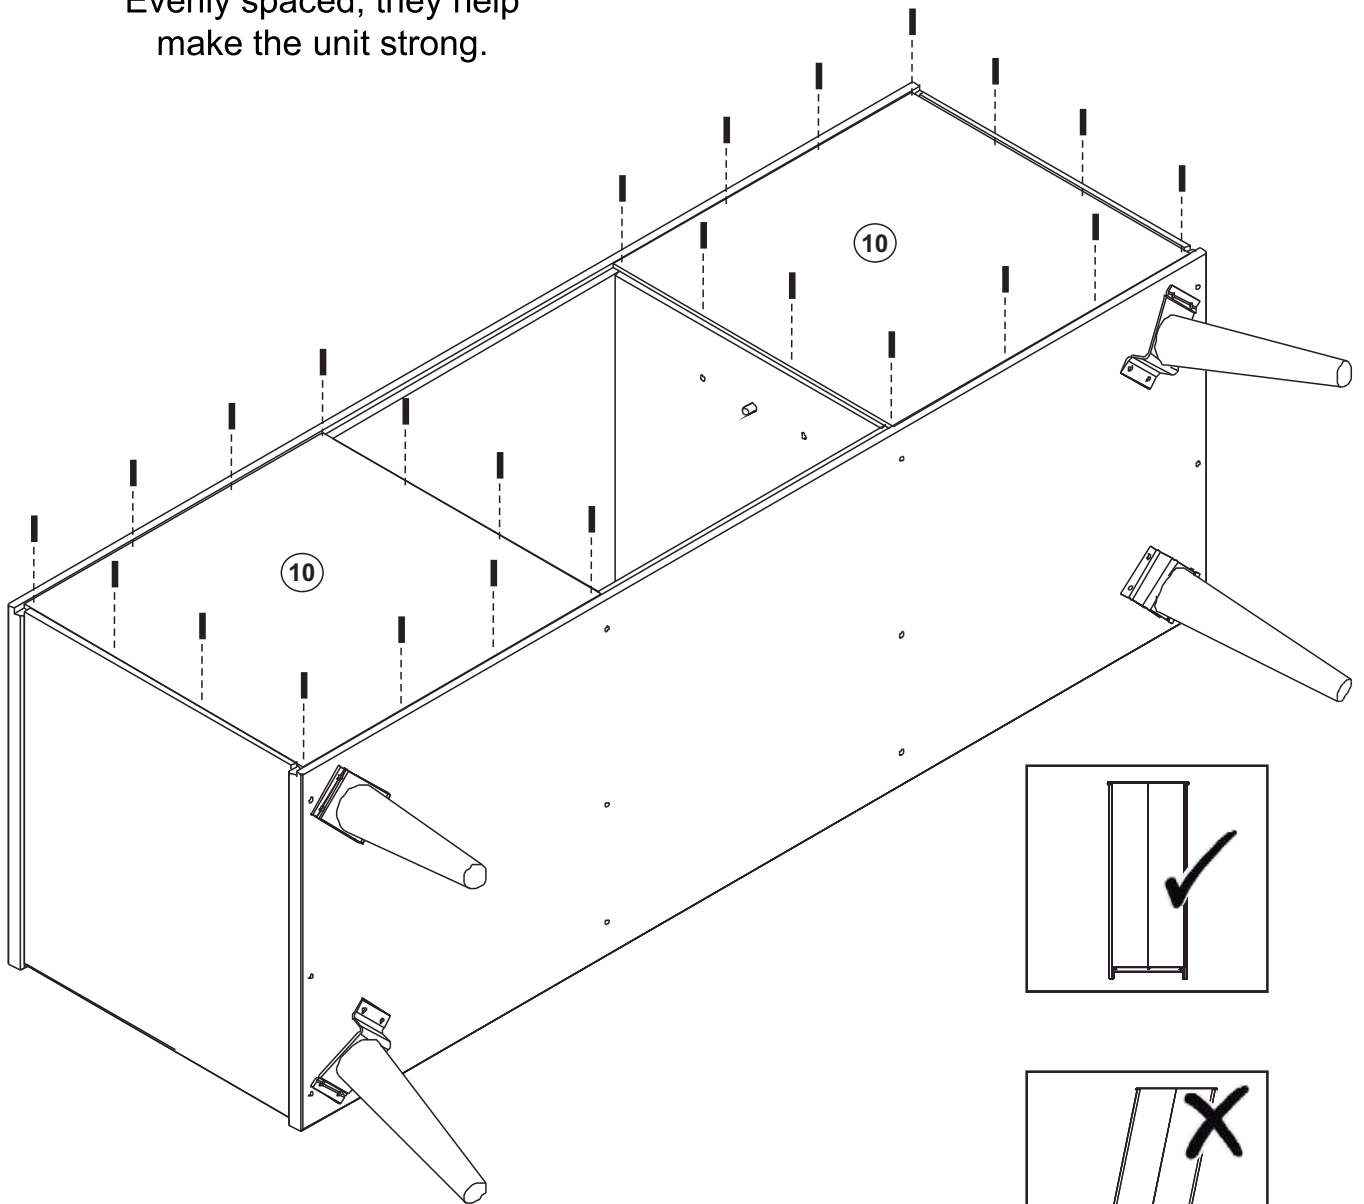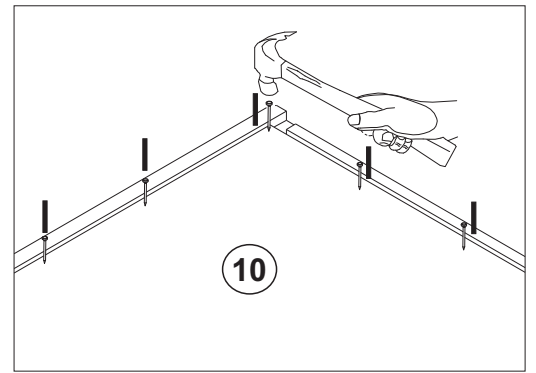


Important:
Cabinet **MUST** be
'square' when back panel
is attached.

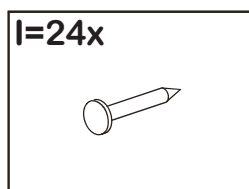


10



Position the furniture into place and make a mark to the wall, as shown.

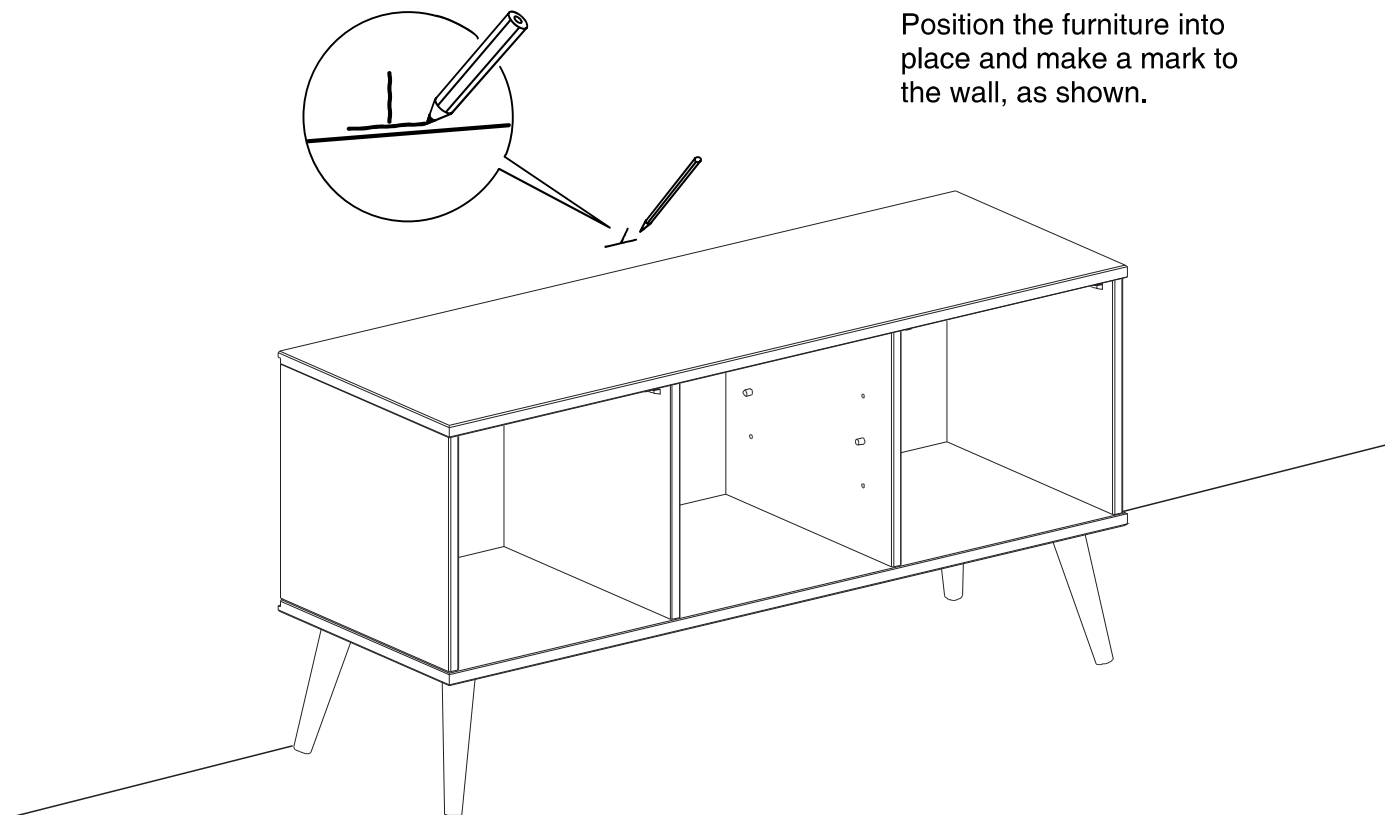

11

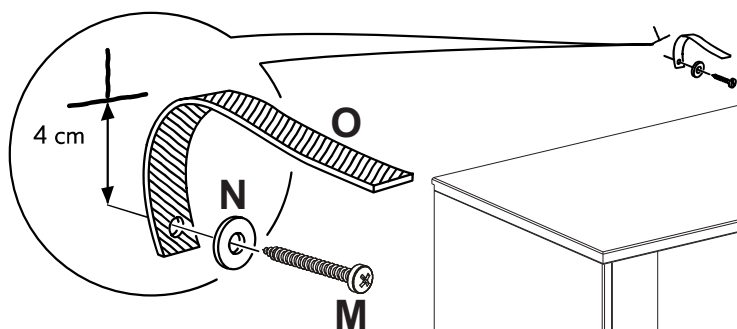


With help, carefully move the furniture away to access the mark in the wall.


Drill hole on wall 4cm bellow the mark, as shown in the diagram.




Before drilling, check wall for hidden pipes and cables.

M=01x	N=01x	O=01x
		
3,5x30mm		



12

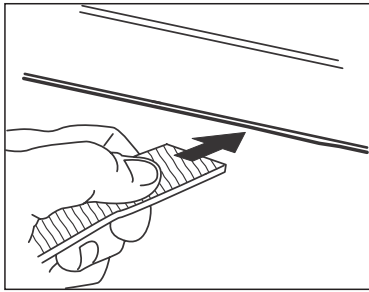


With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.

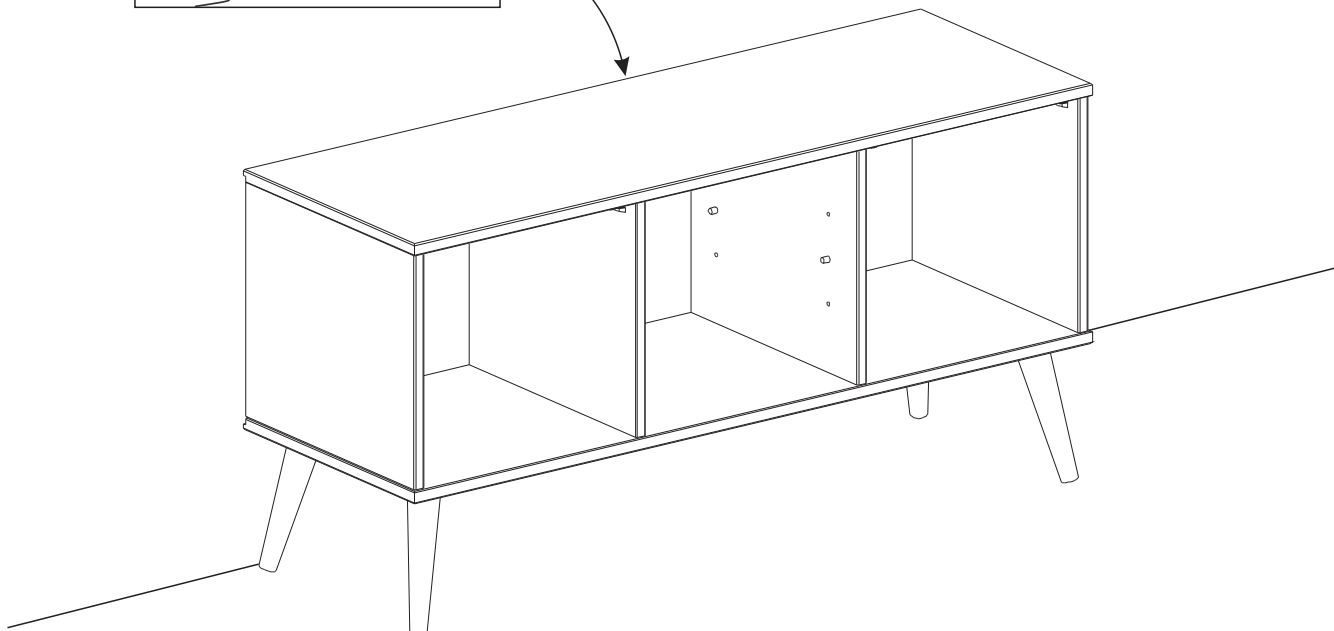



13

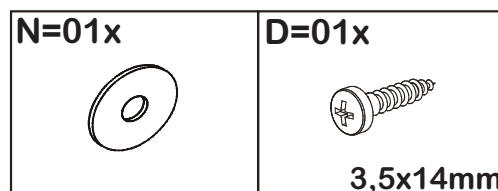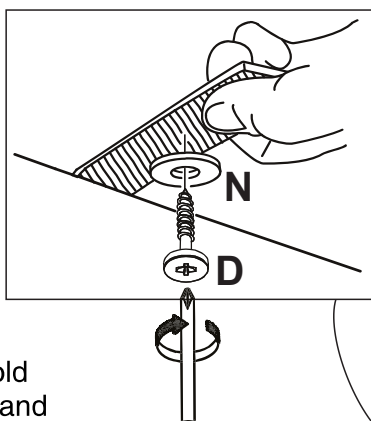

Inside the cabinet, hold wall strap in position and fix it using washer and screw, as shown.

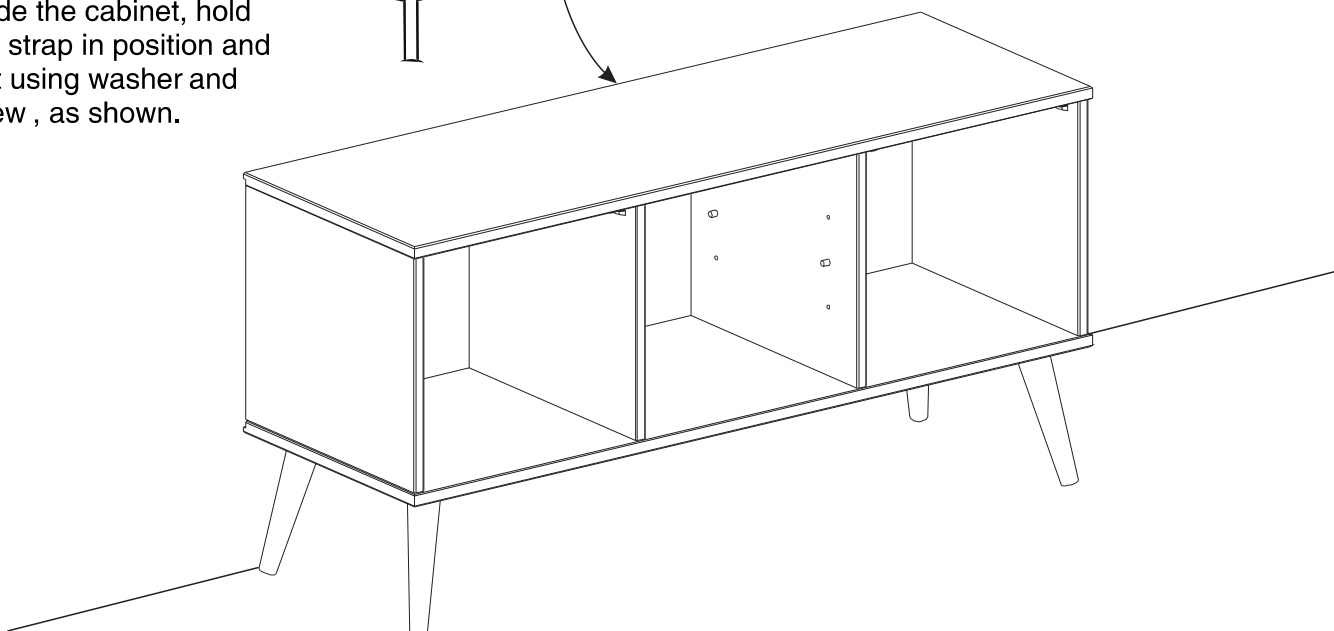

14

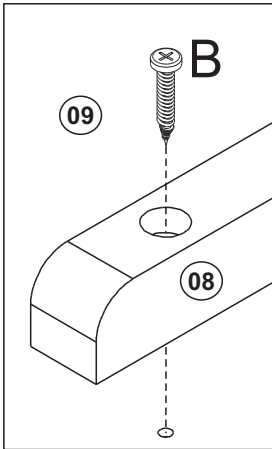
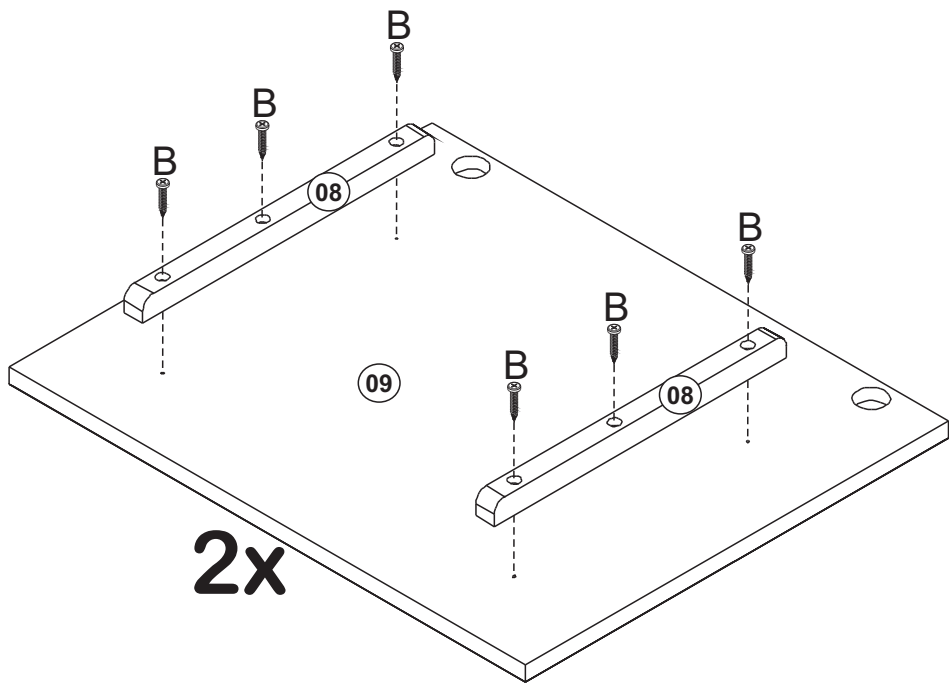


B=12x



4,0x25mm

15

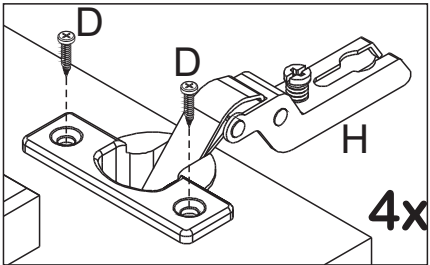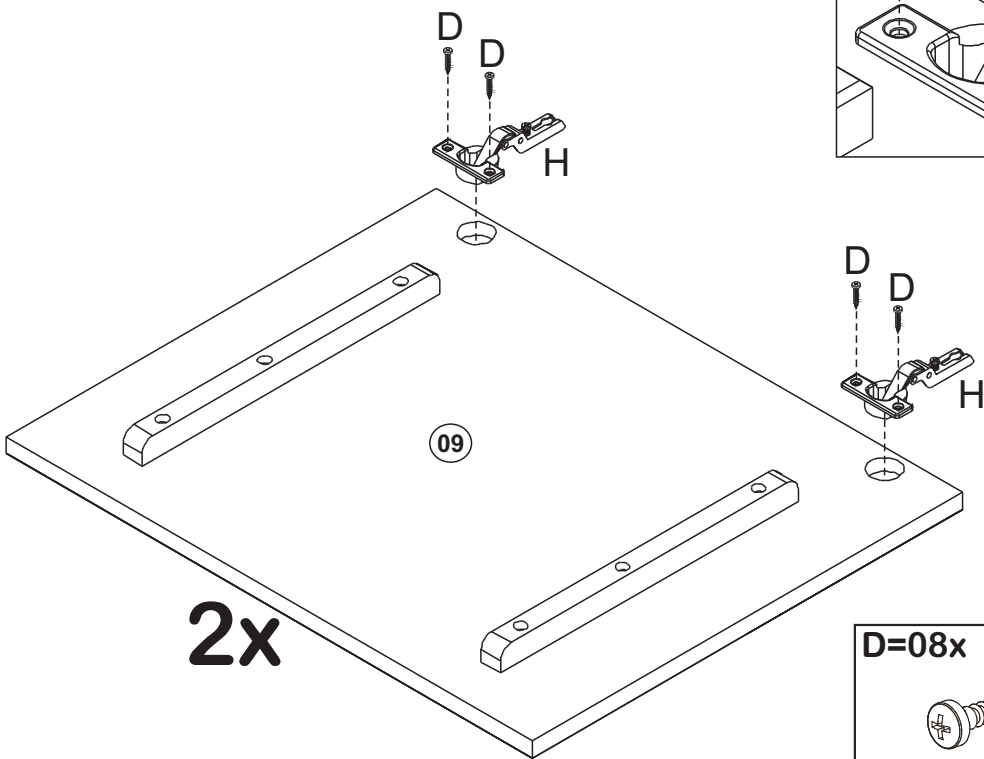

D=08x




3,5x14mm

H=04x






26mm

16

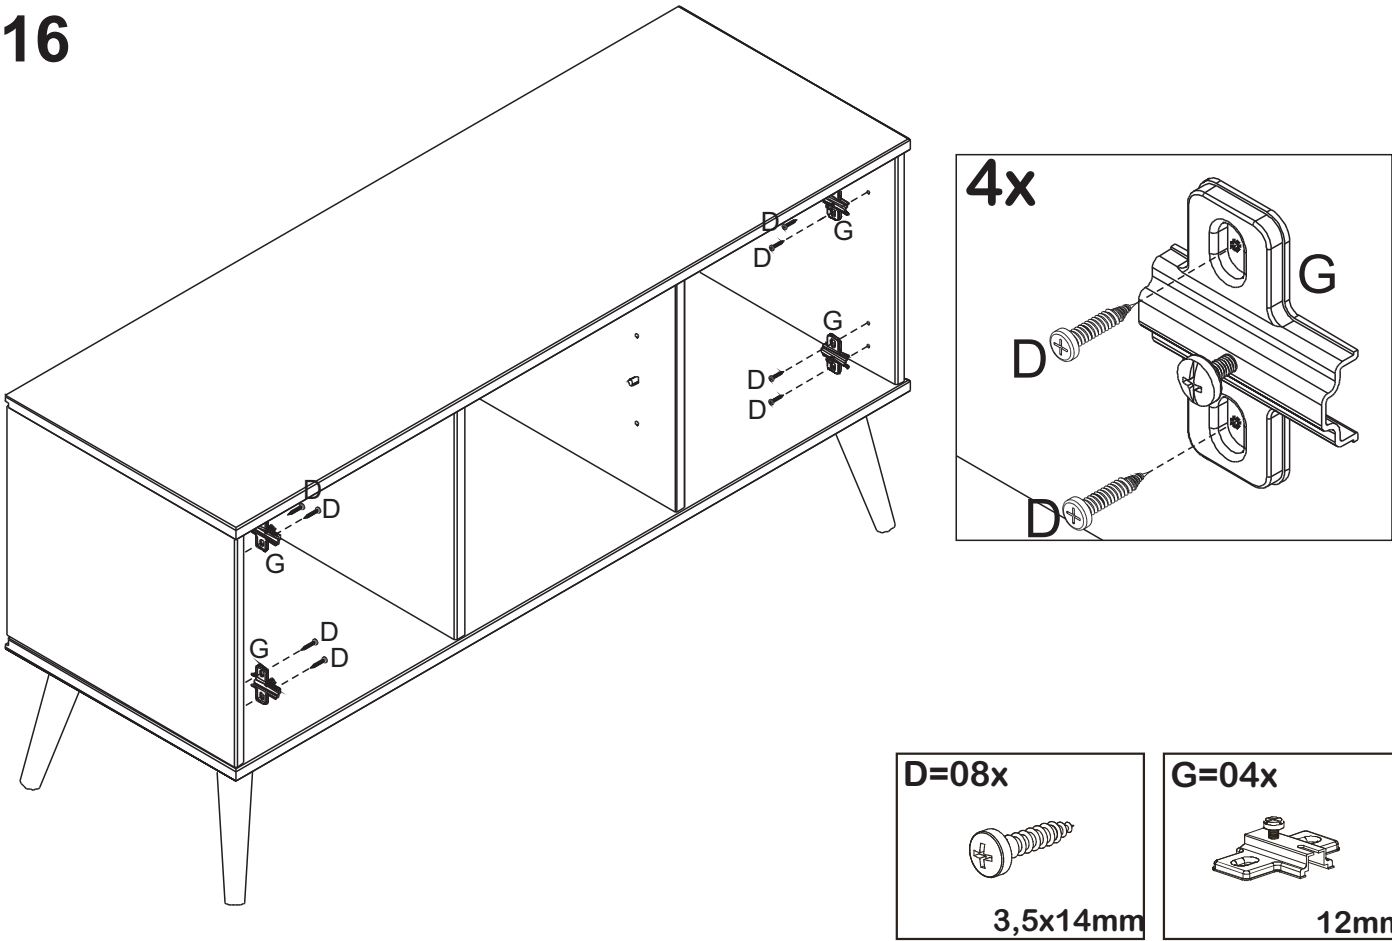


17

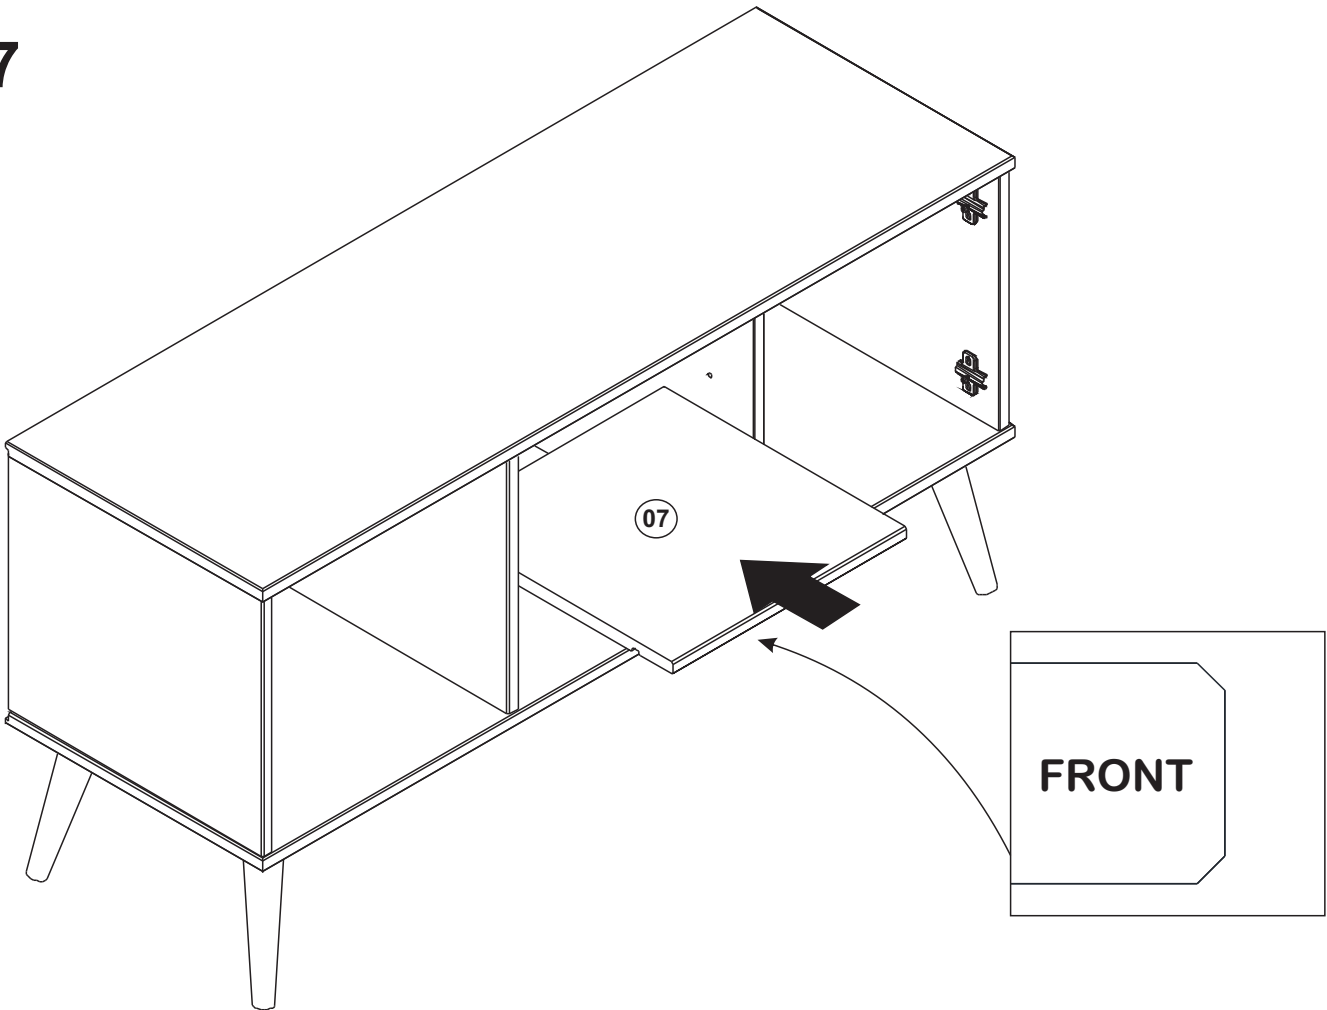

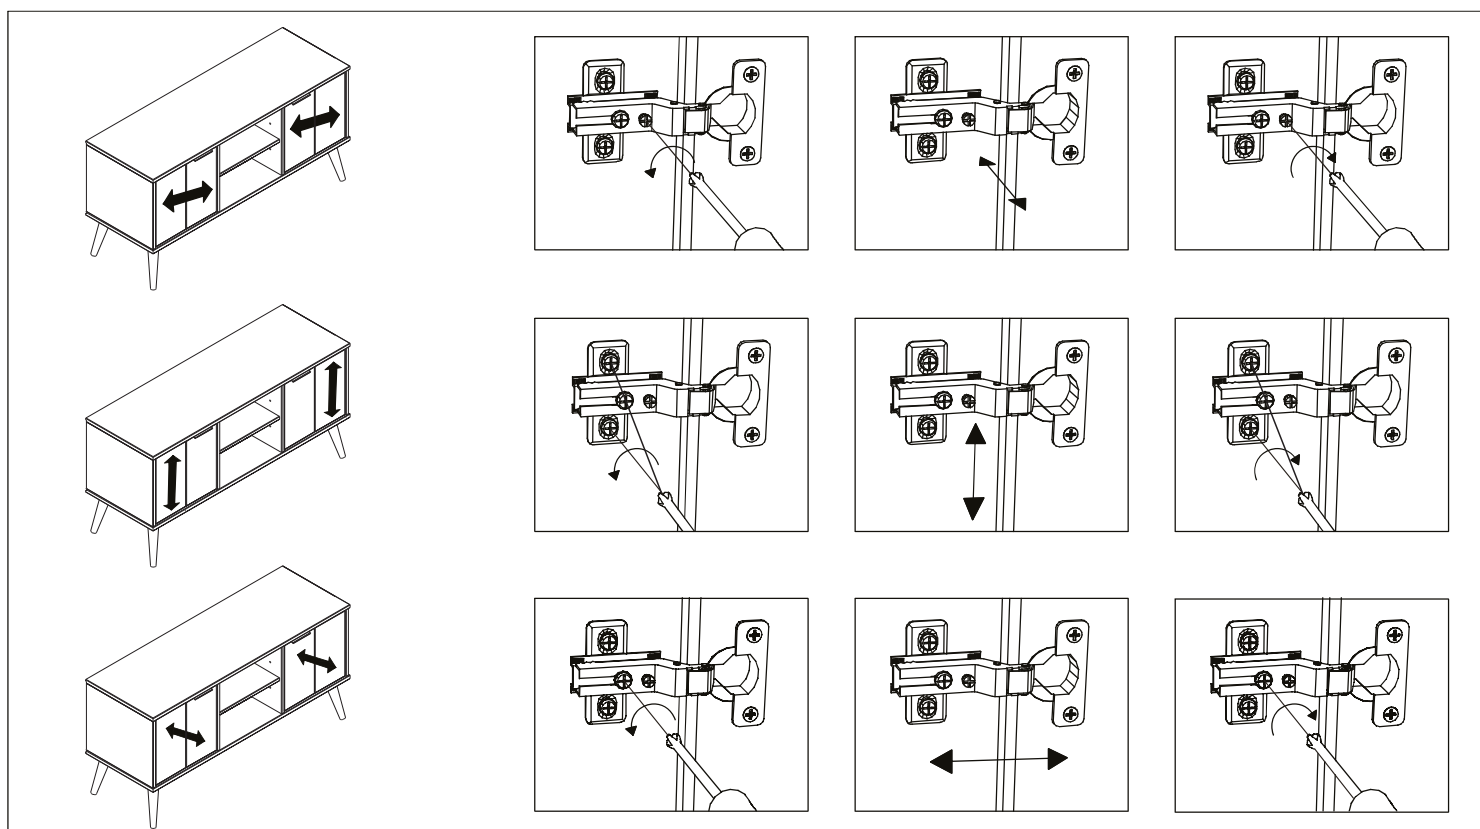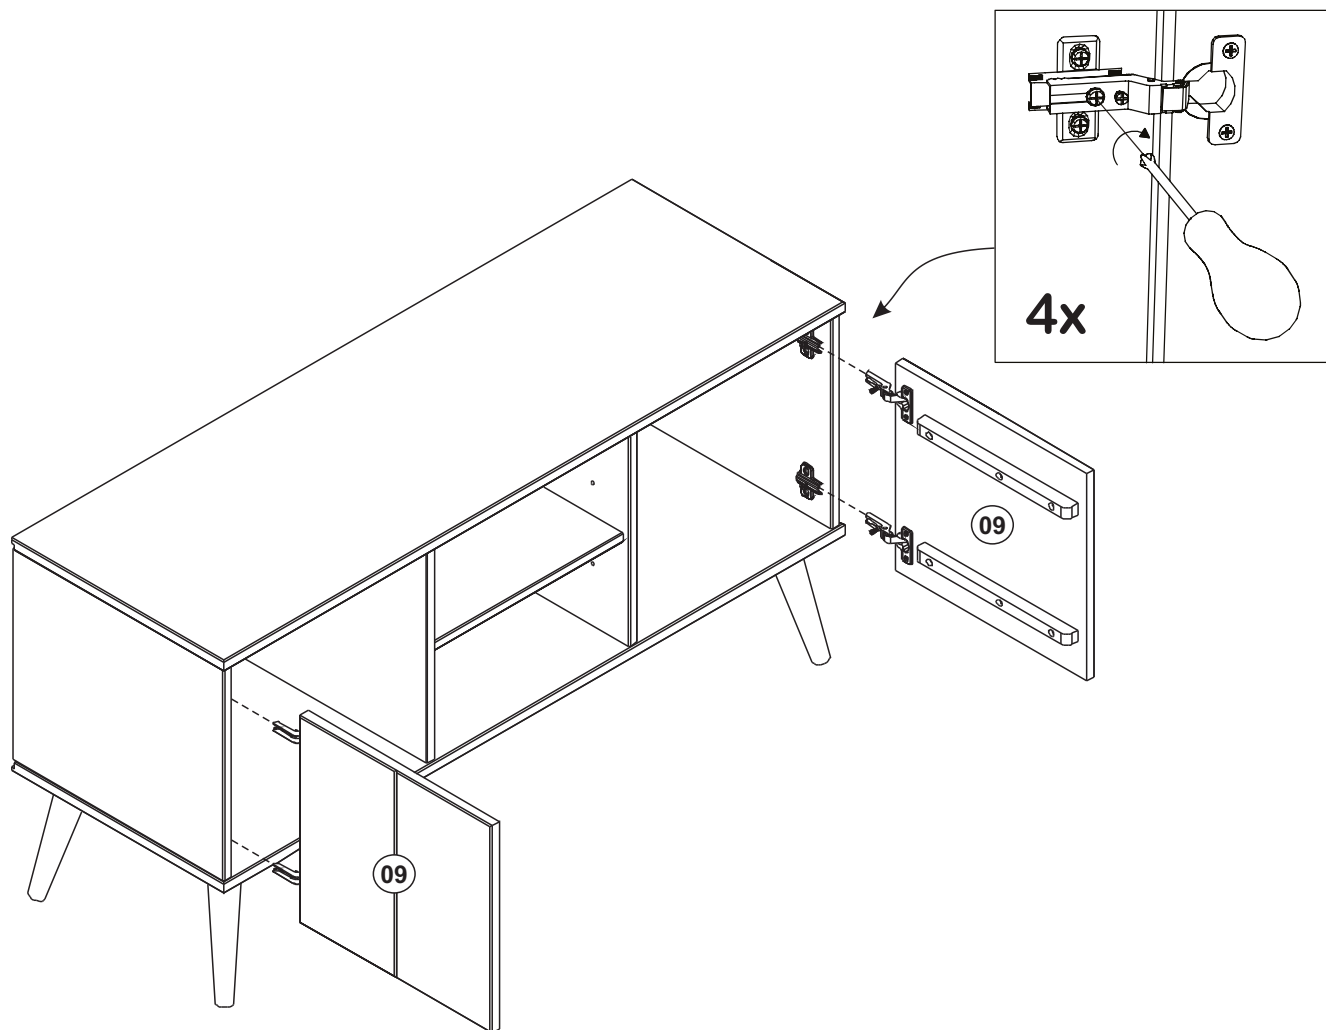

19

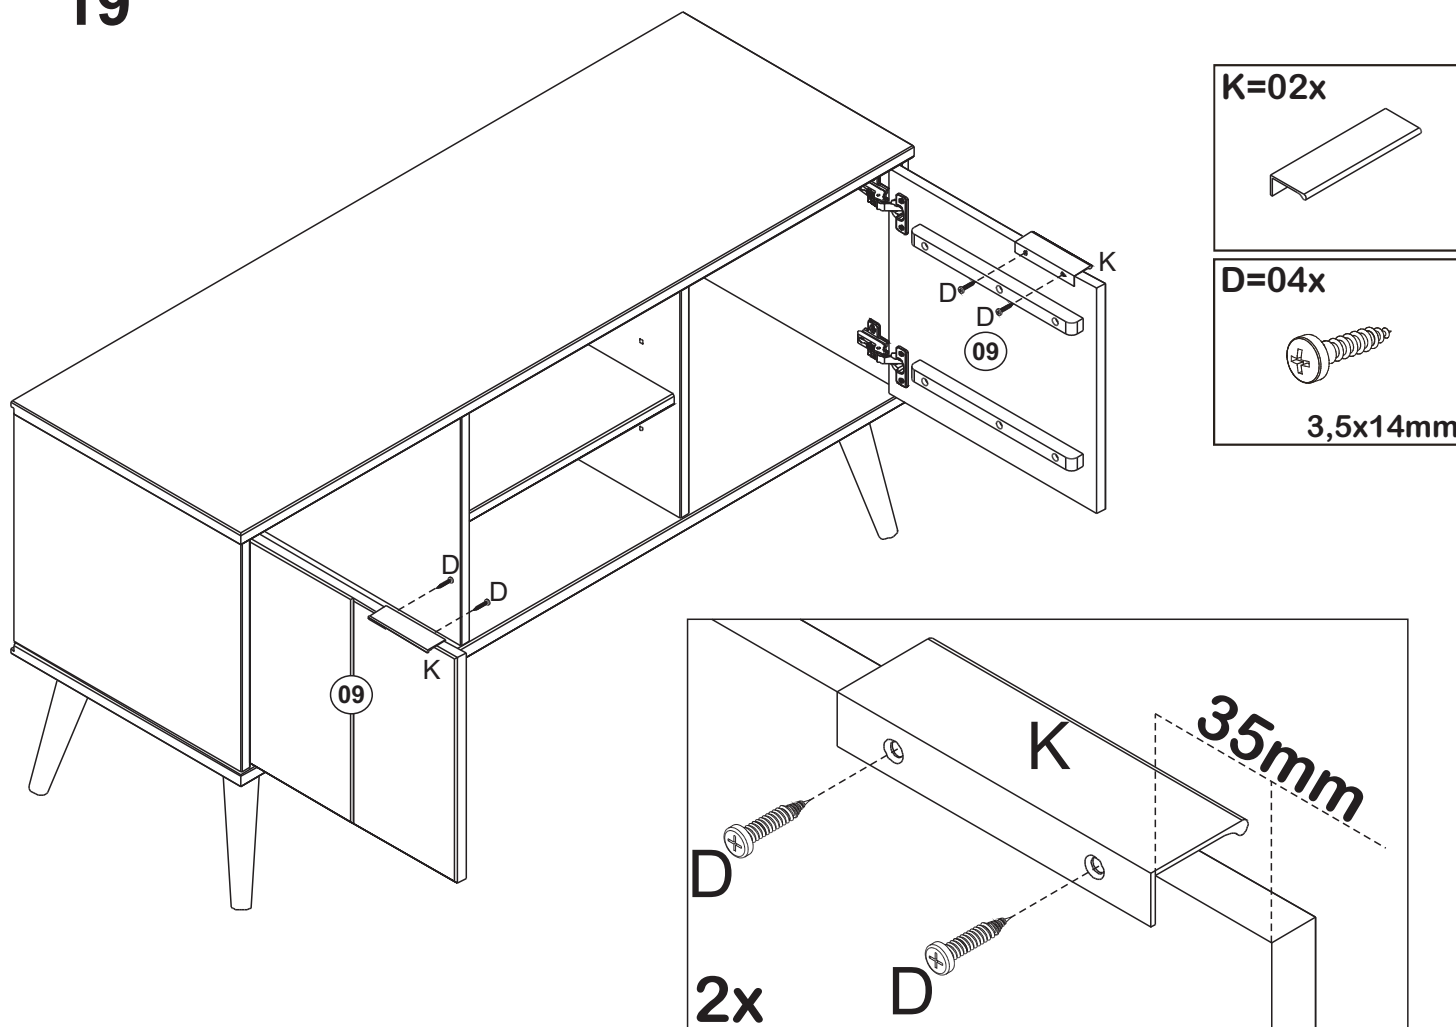

20

