


ASSEMBLY INSTRUCTIONS


PF035

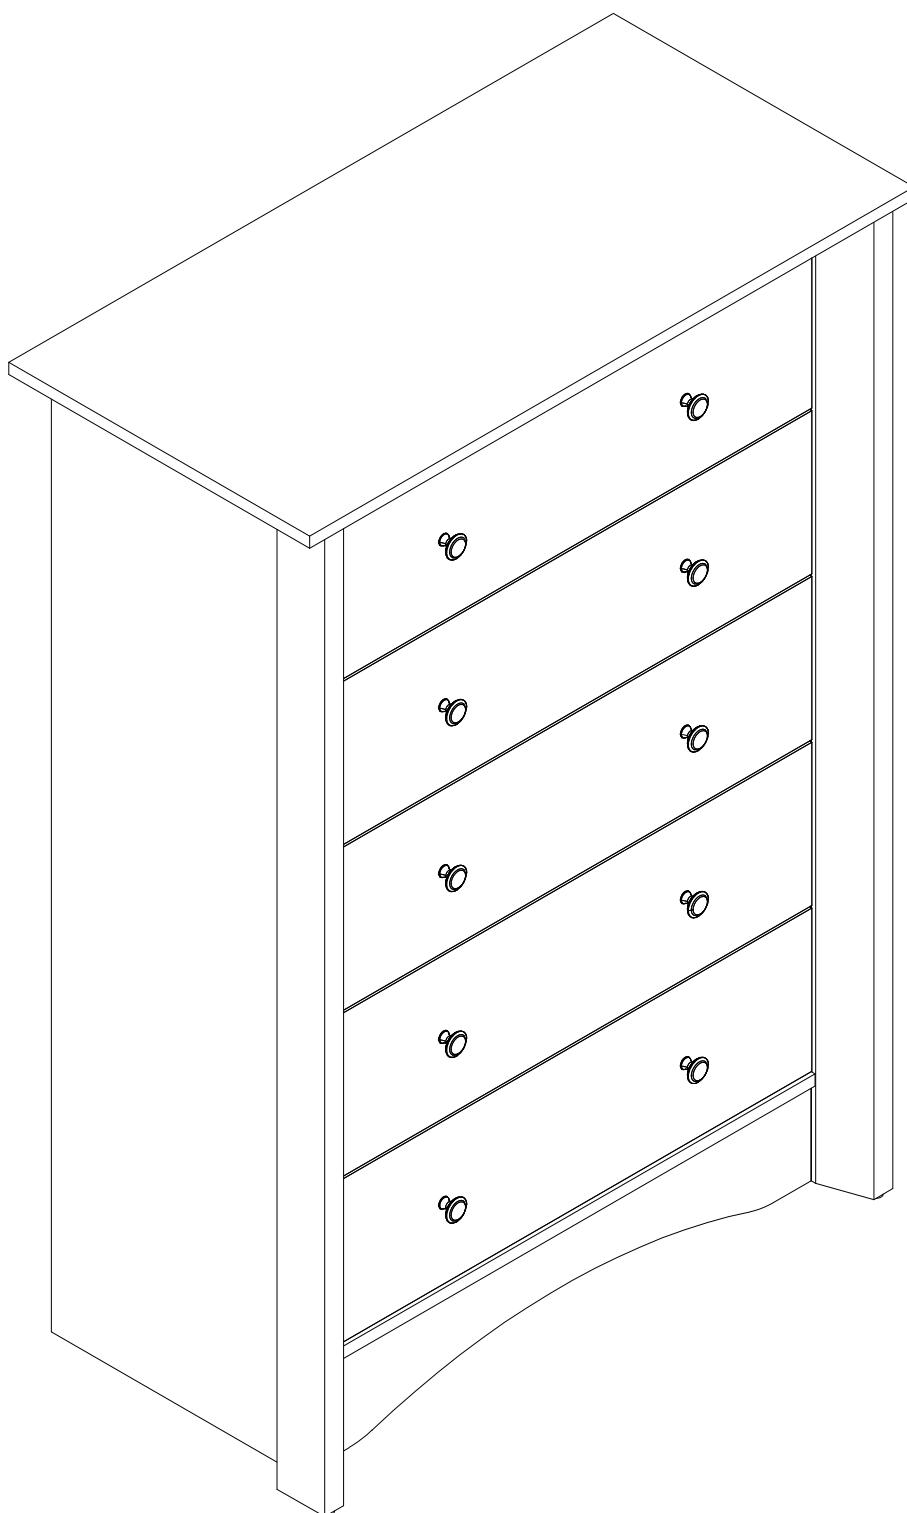

WARNING !

PF035


MAXIMUM LOAD
220 lb/ 100kg

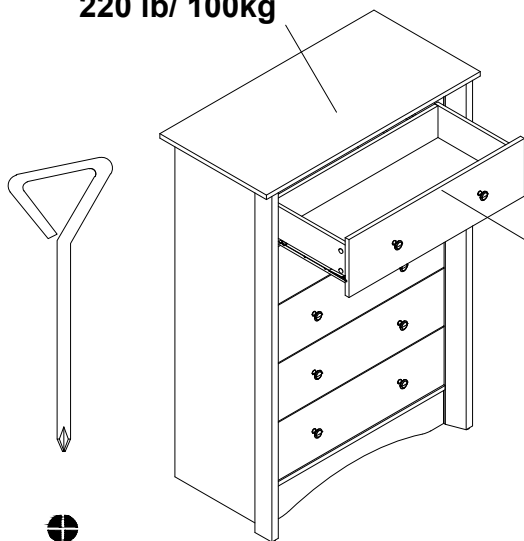


Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

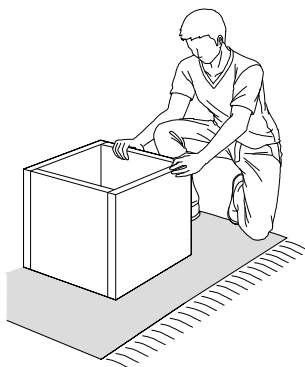

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

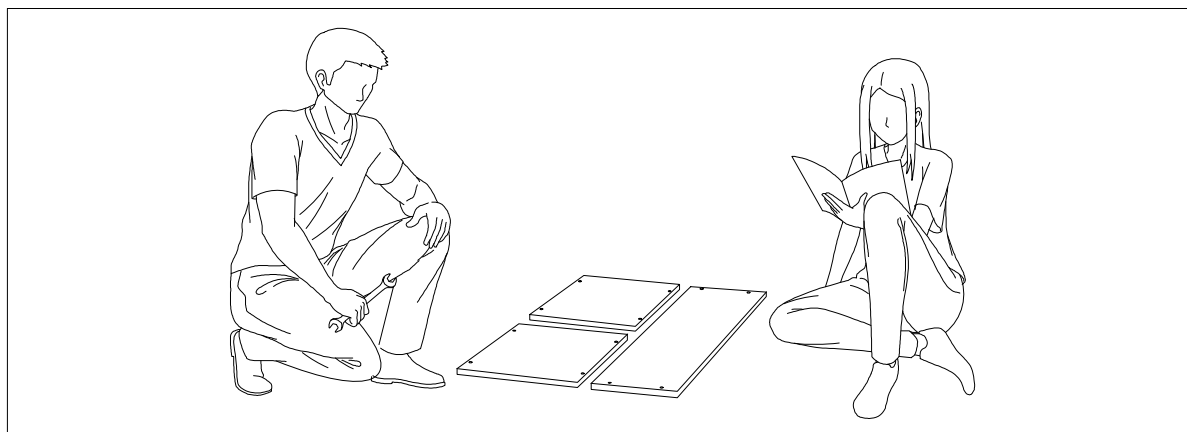


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

Board Identification

PF035


Not actual size

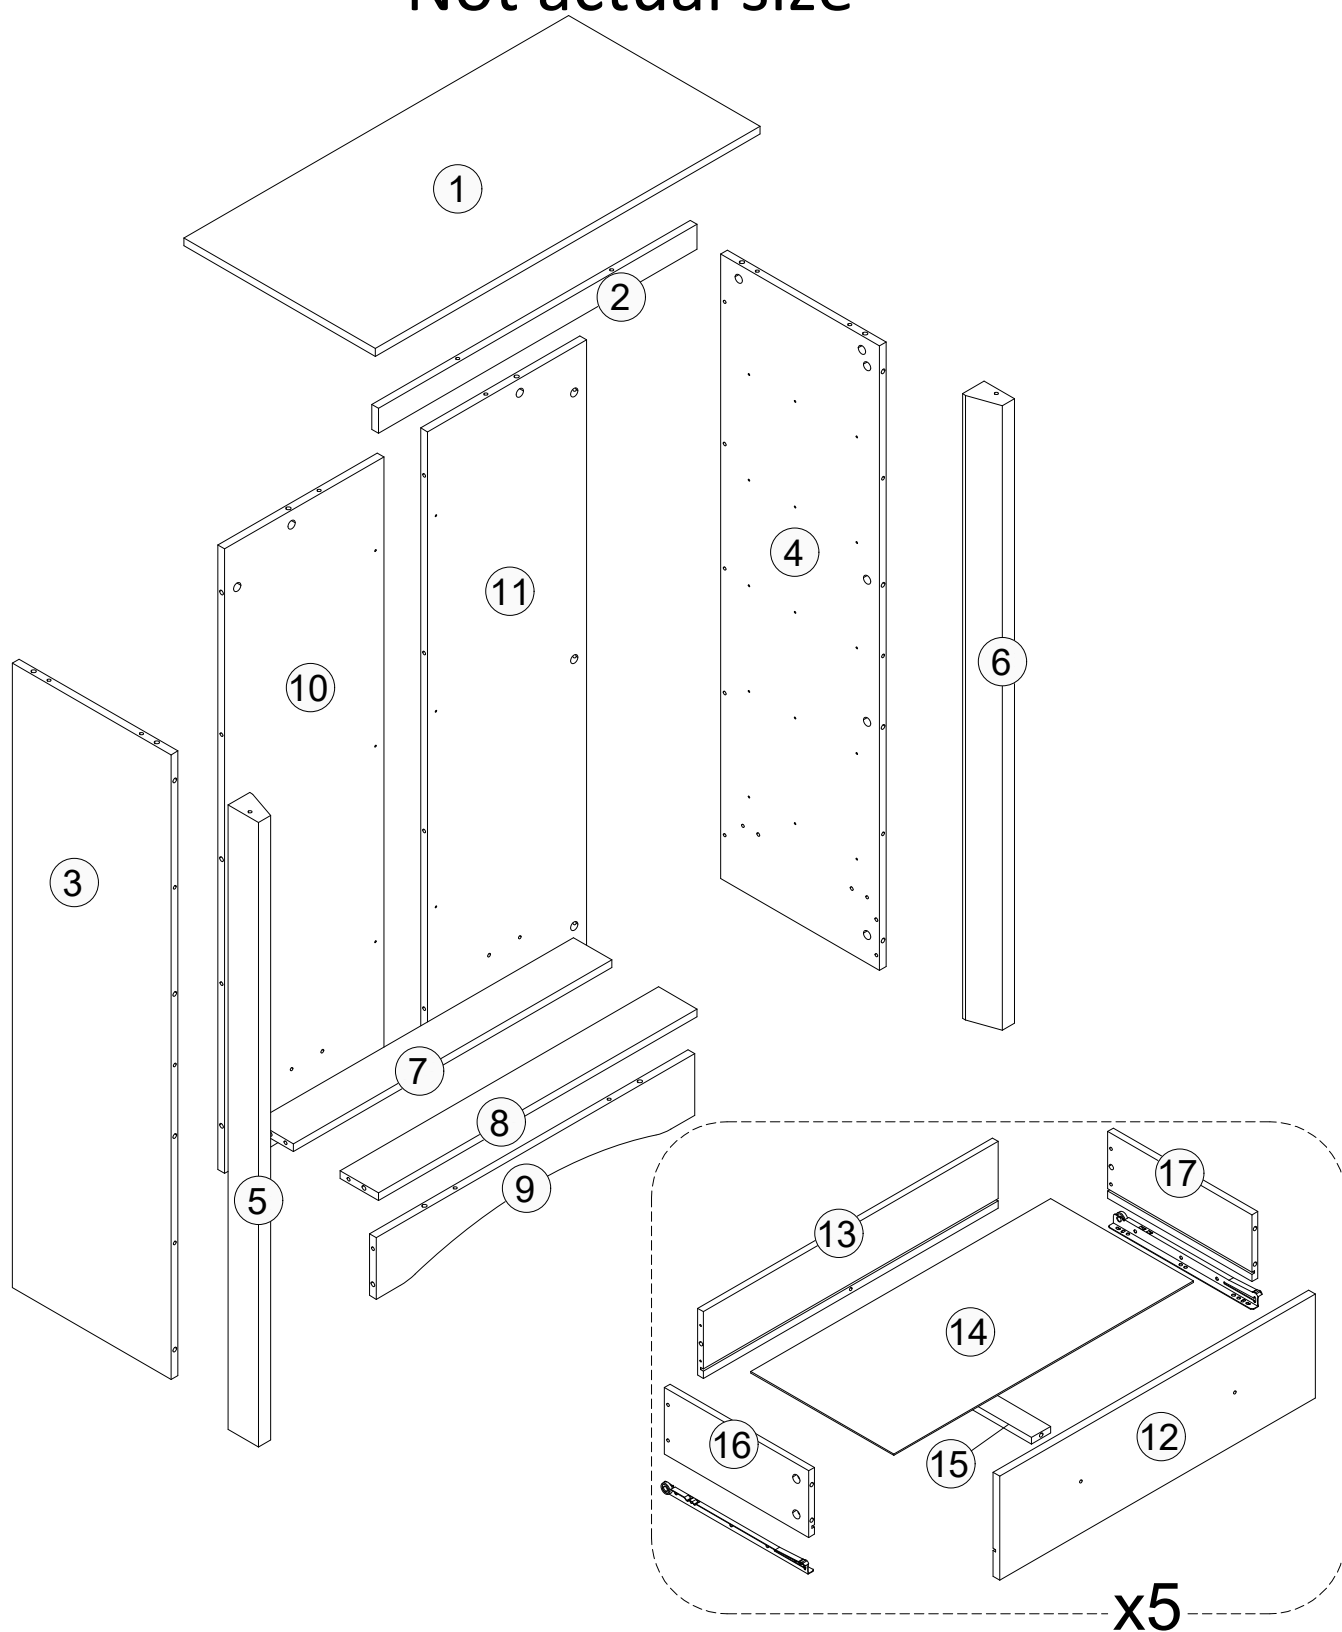


BOARD IDENTIFICATION

PF035


Not actual size

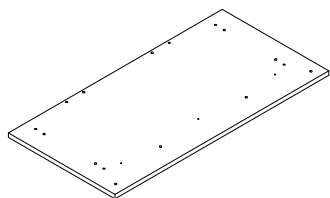


① x1

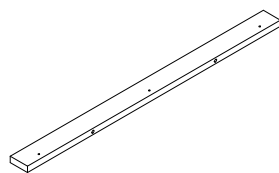


② x1

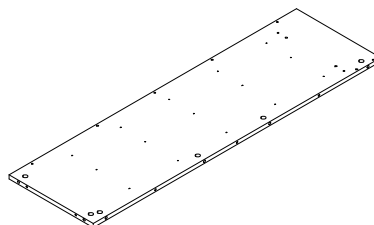


③ x1

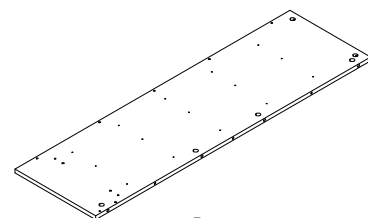


④ x1

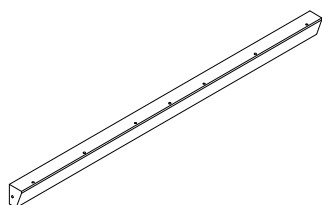


⑤ x1

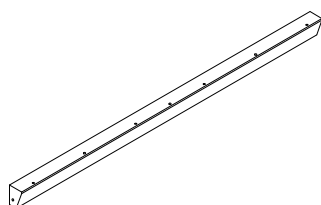


⑥ x1

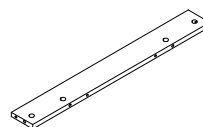


⑦ x1

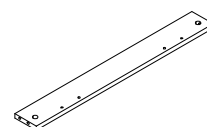


⑧ x1

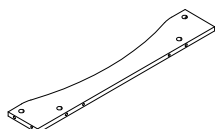


⑨ x1

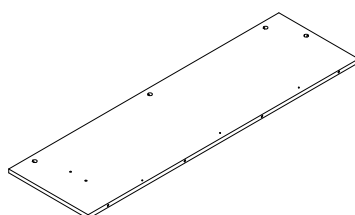


⑩ x1

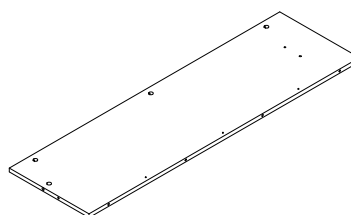


⑪ x1

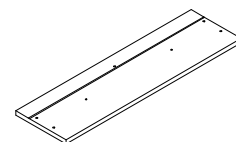


⑫ x5

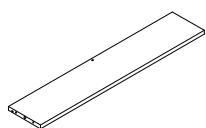


⑬ x5

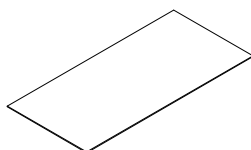


⑭ x5



⑮ x5

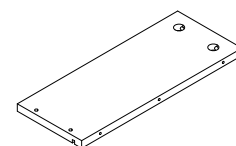


















⑯ x5

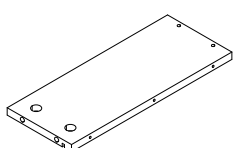

⑰ x5





HARDWARE LIST

PF035

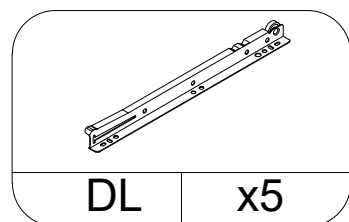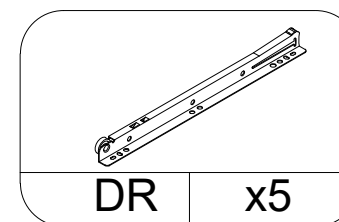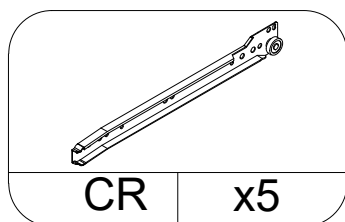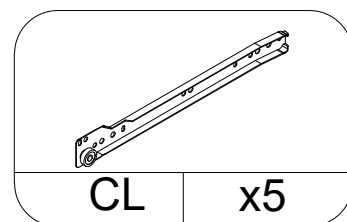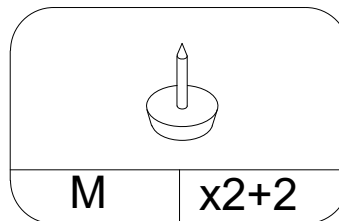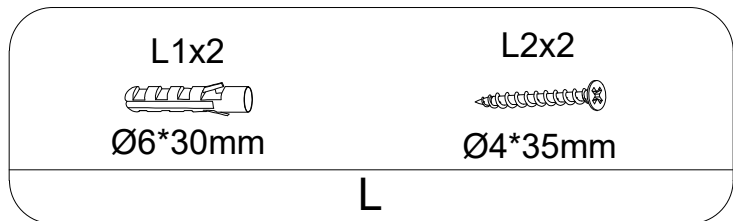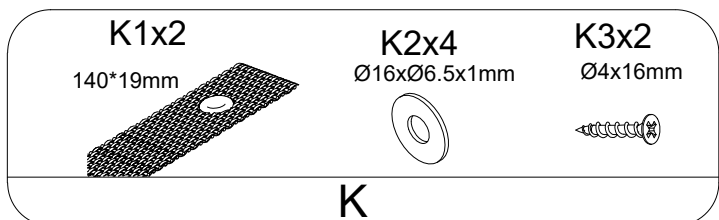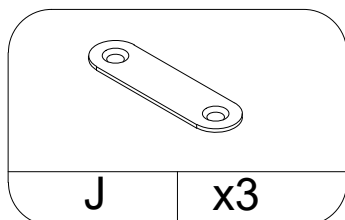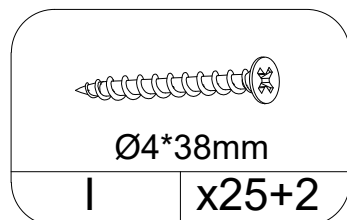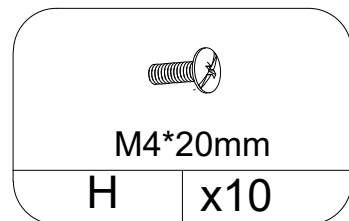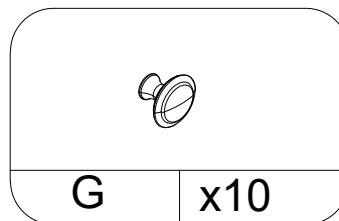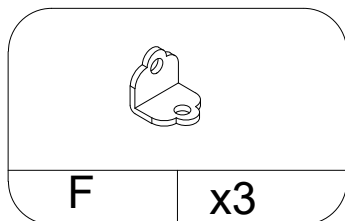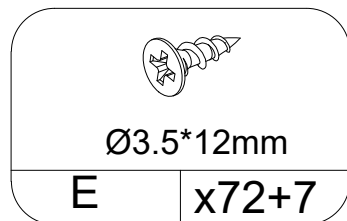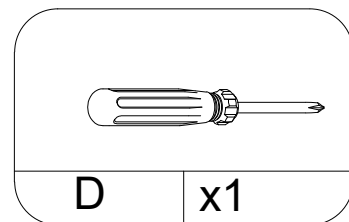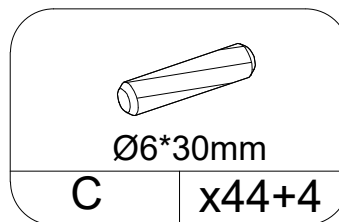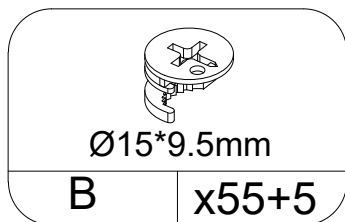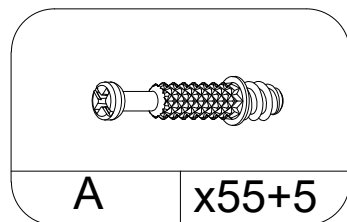


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

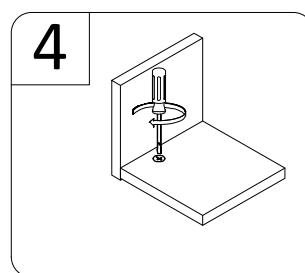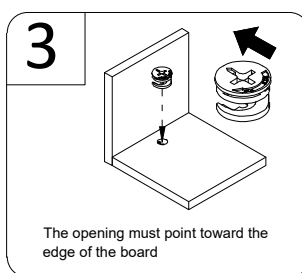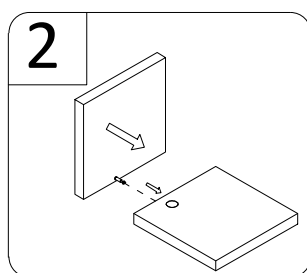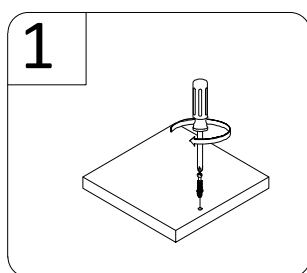


STEP 1

PF035

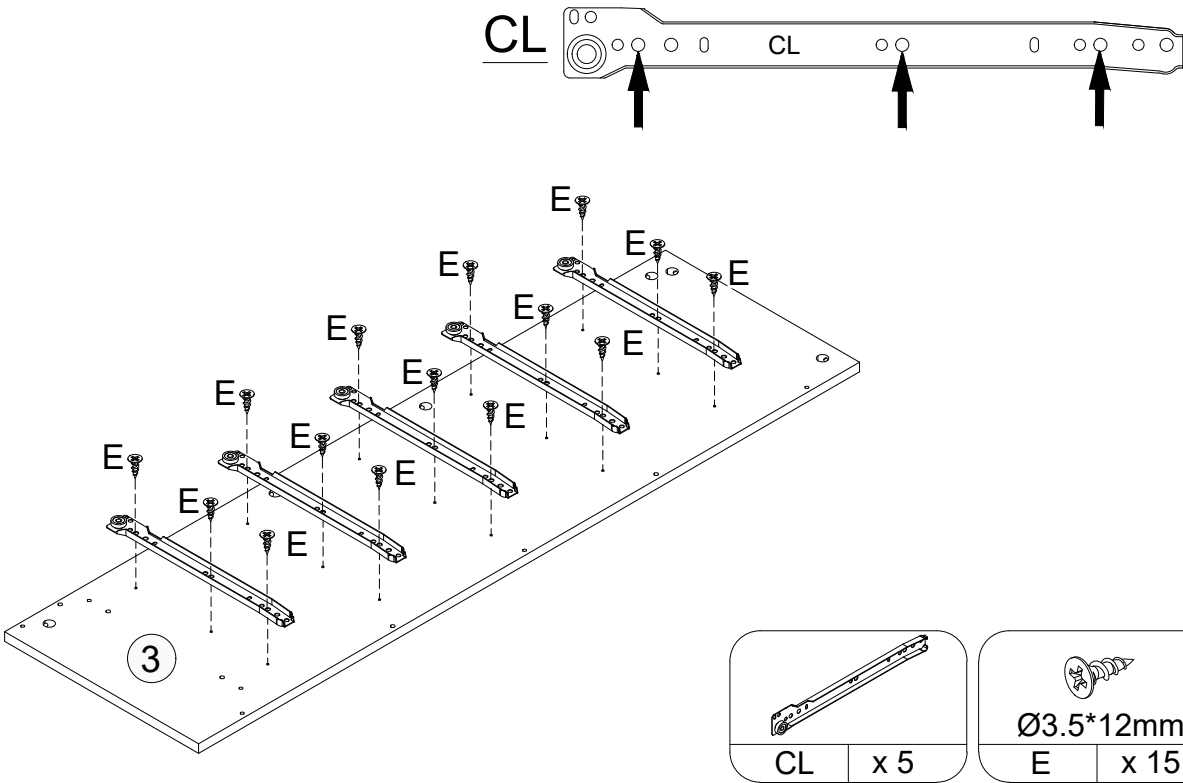


STEP 2




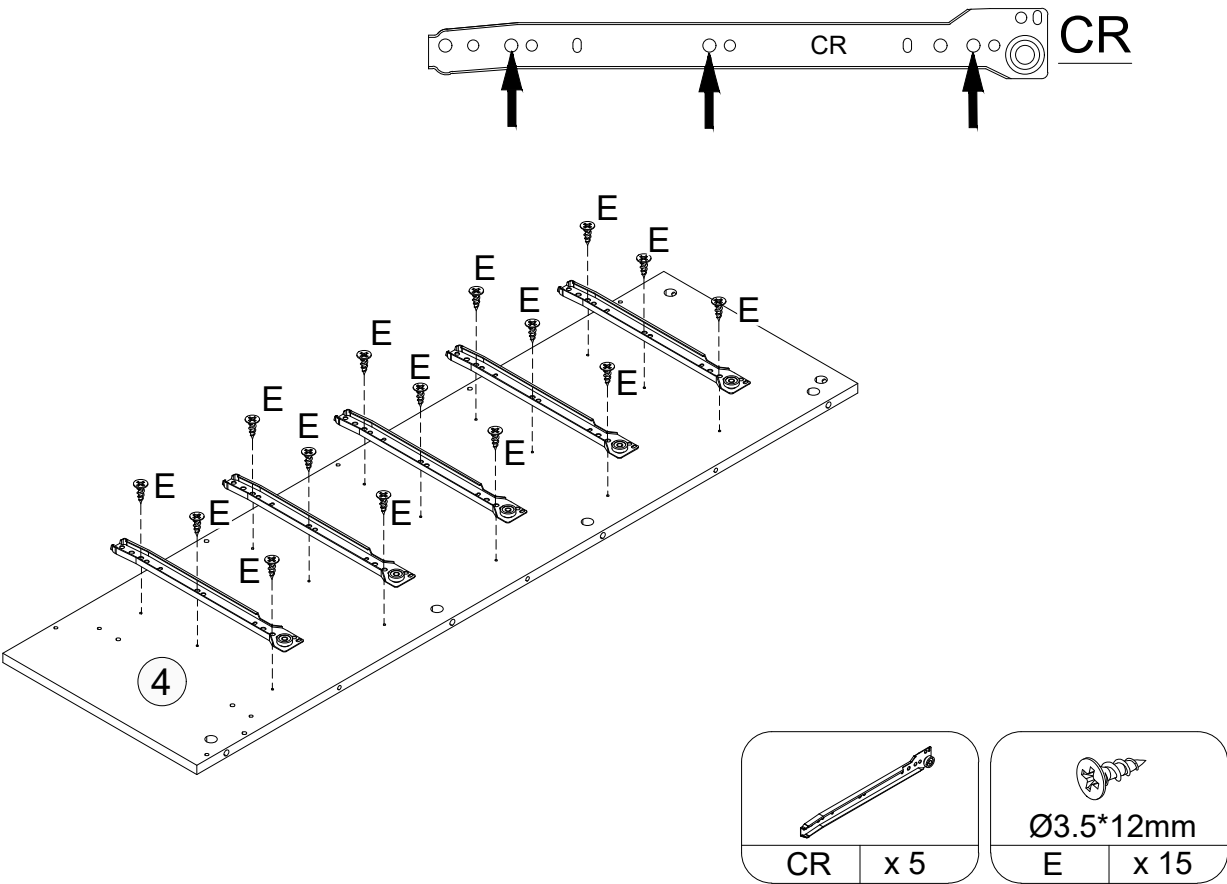


STEP 3

PF035

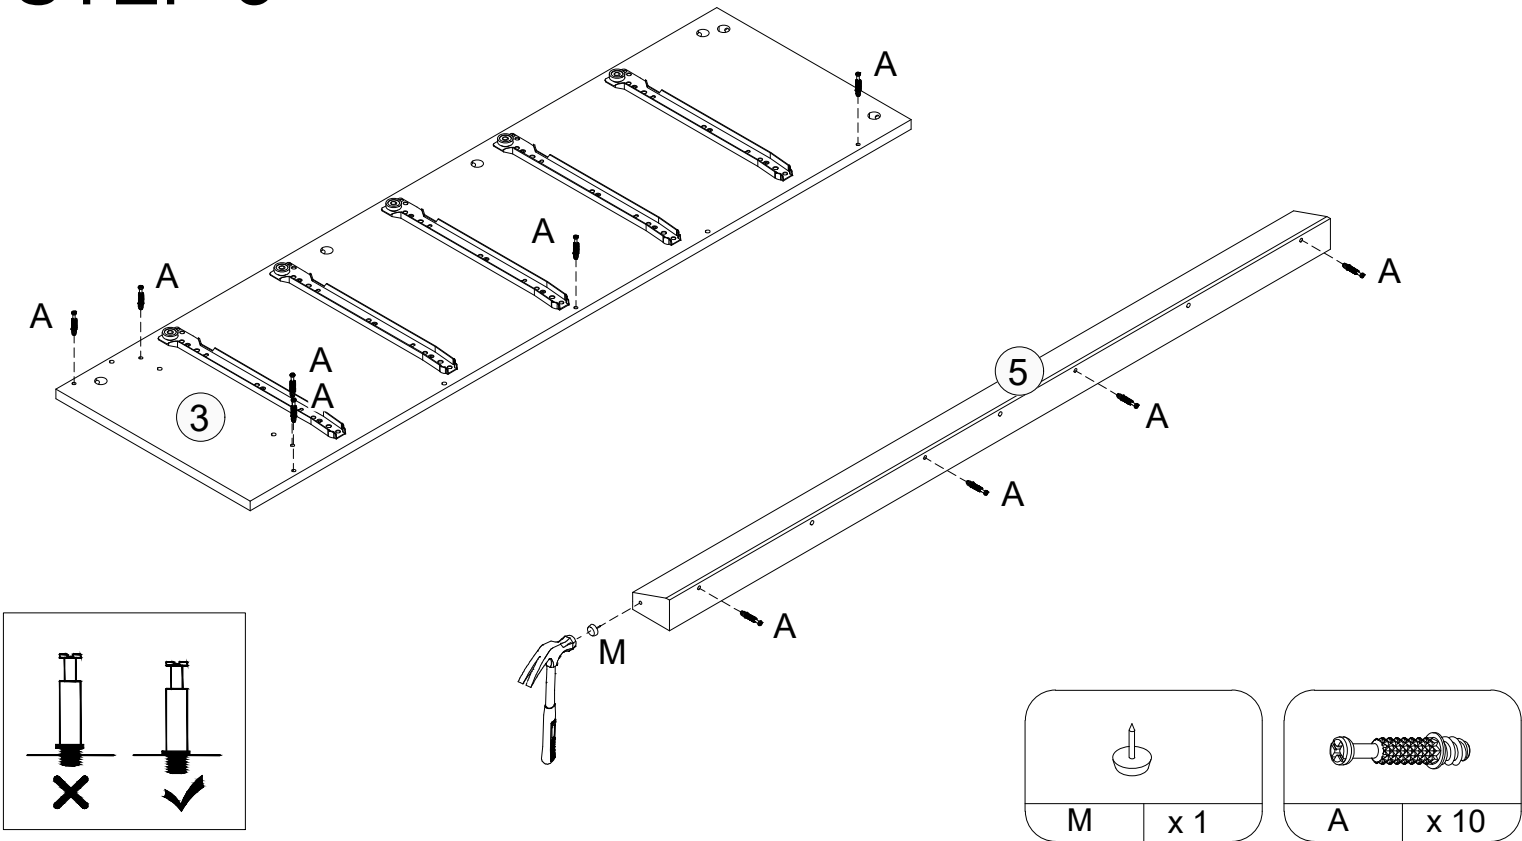


STEP 4

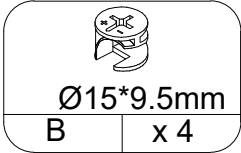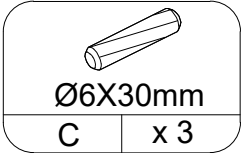
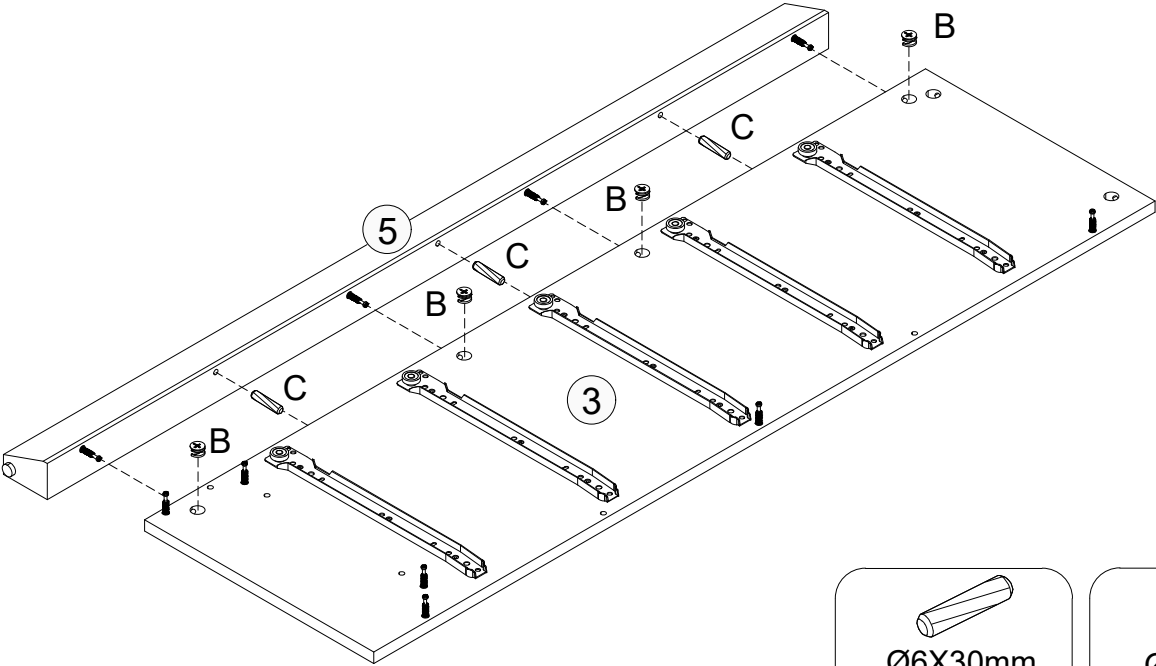
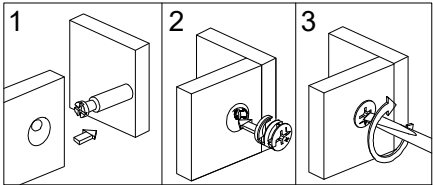


STEP 5

PF035

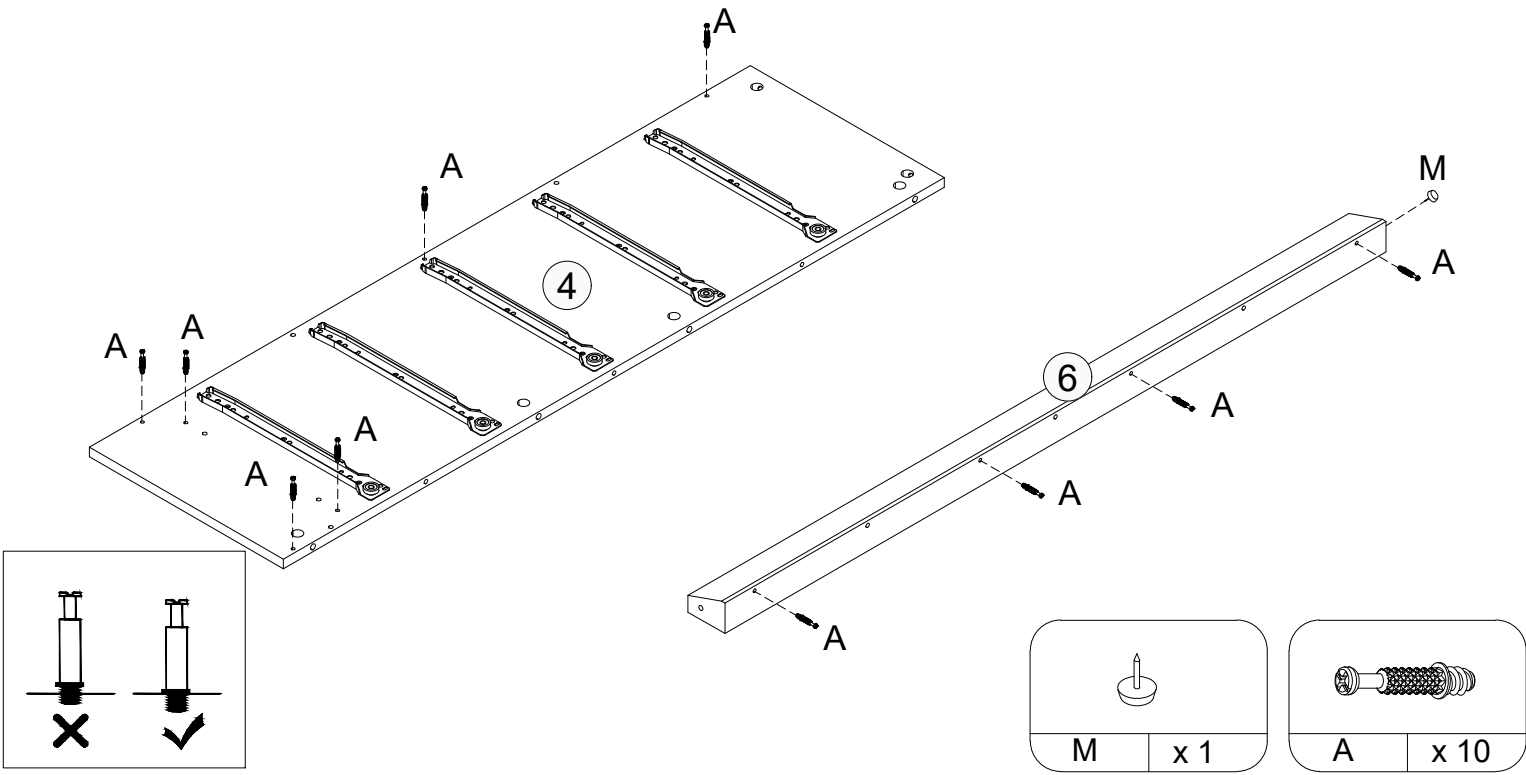


STEP 6

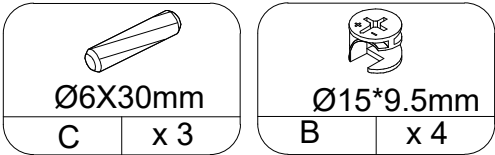
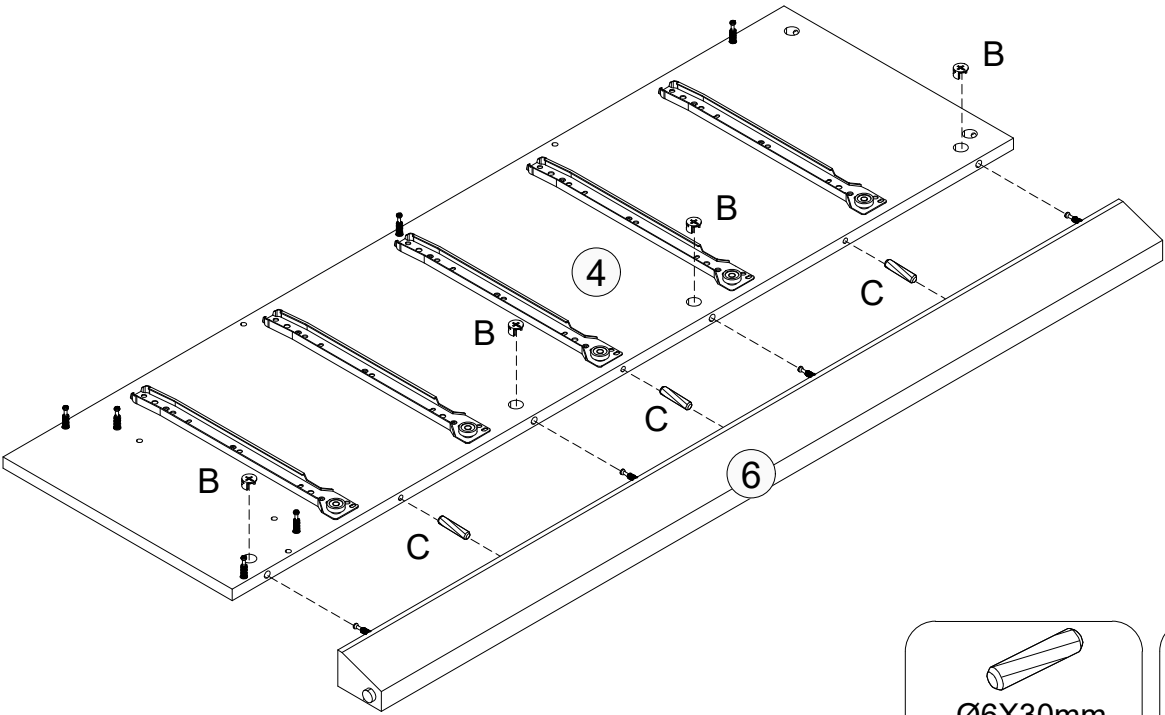
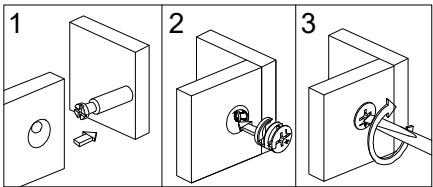


STEP 7

PF035

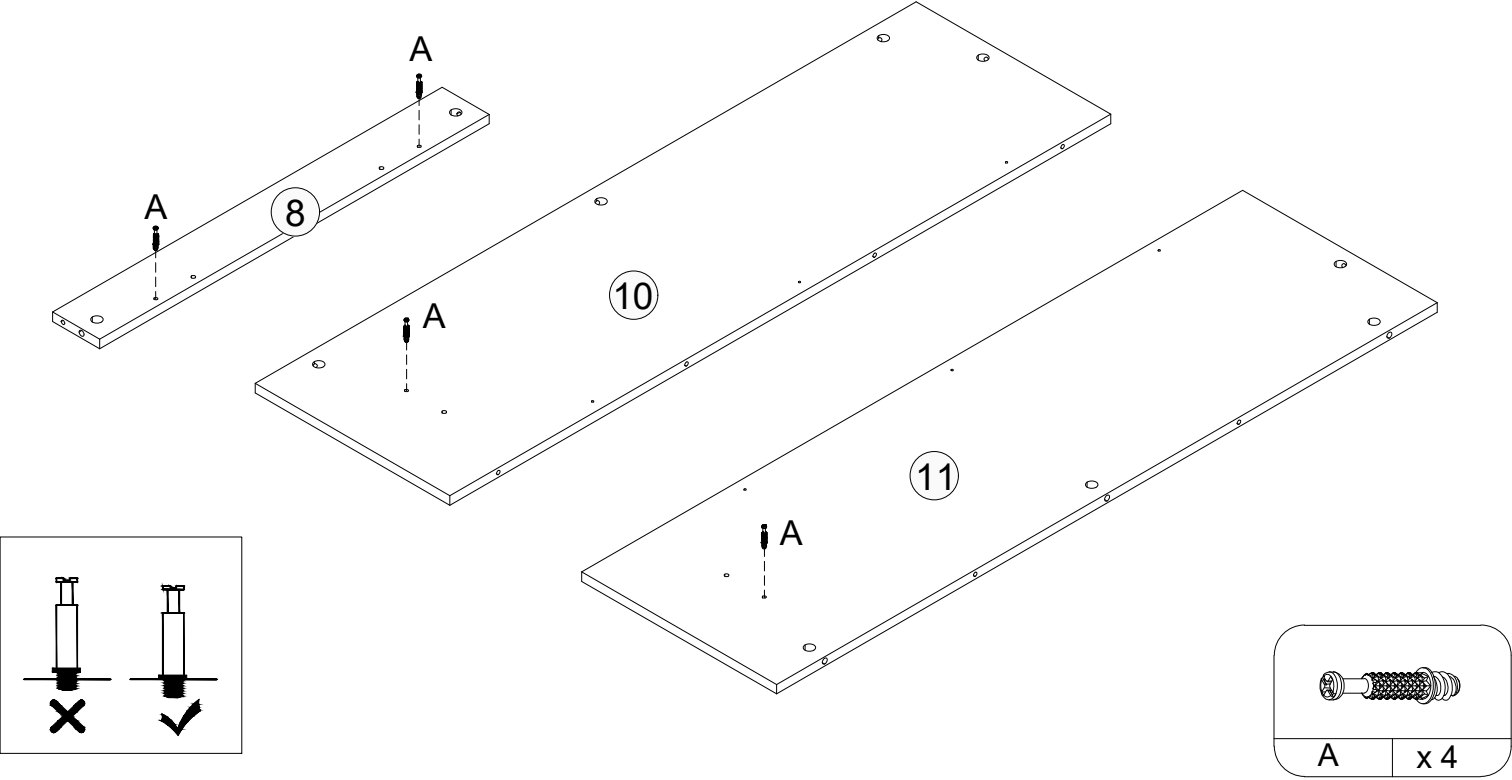


STEP 8

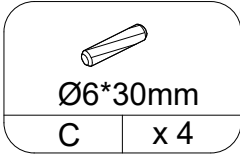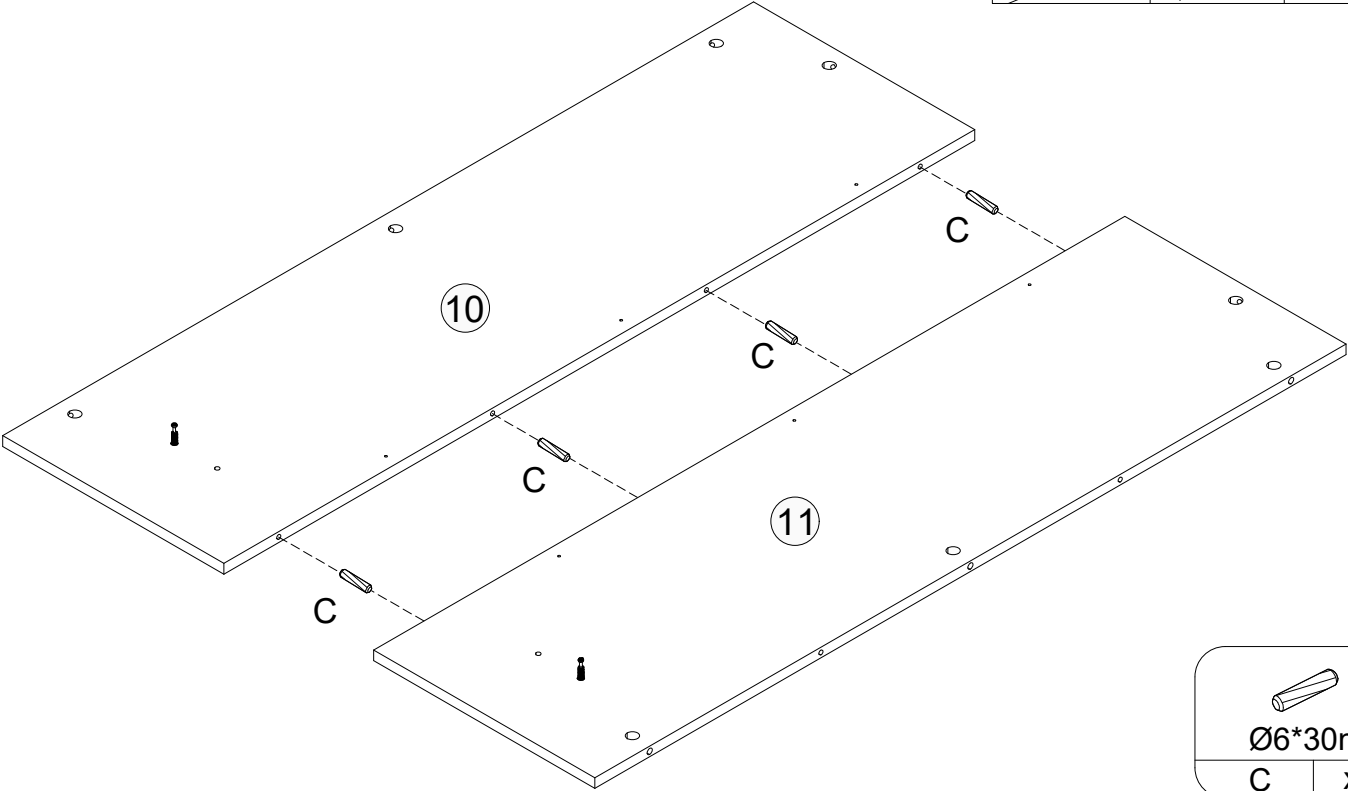
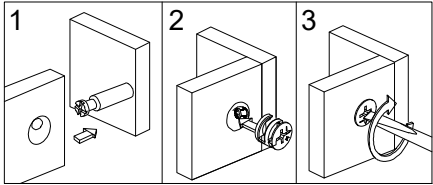


STEP 9

PF035

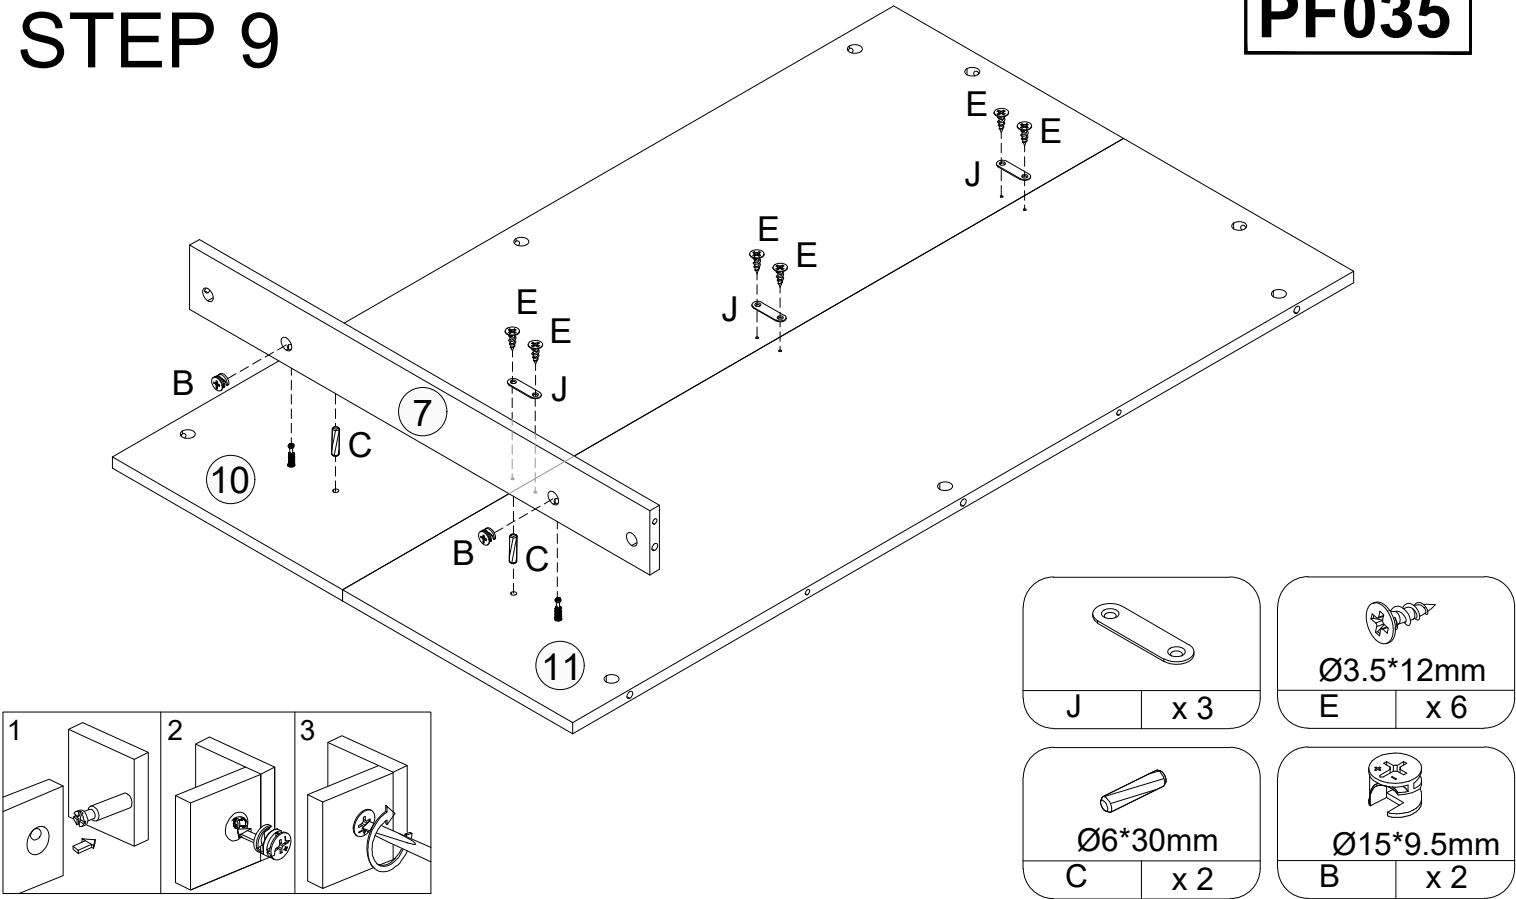





STEP 10

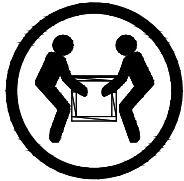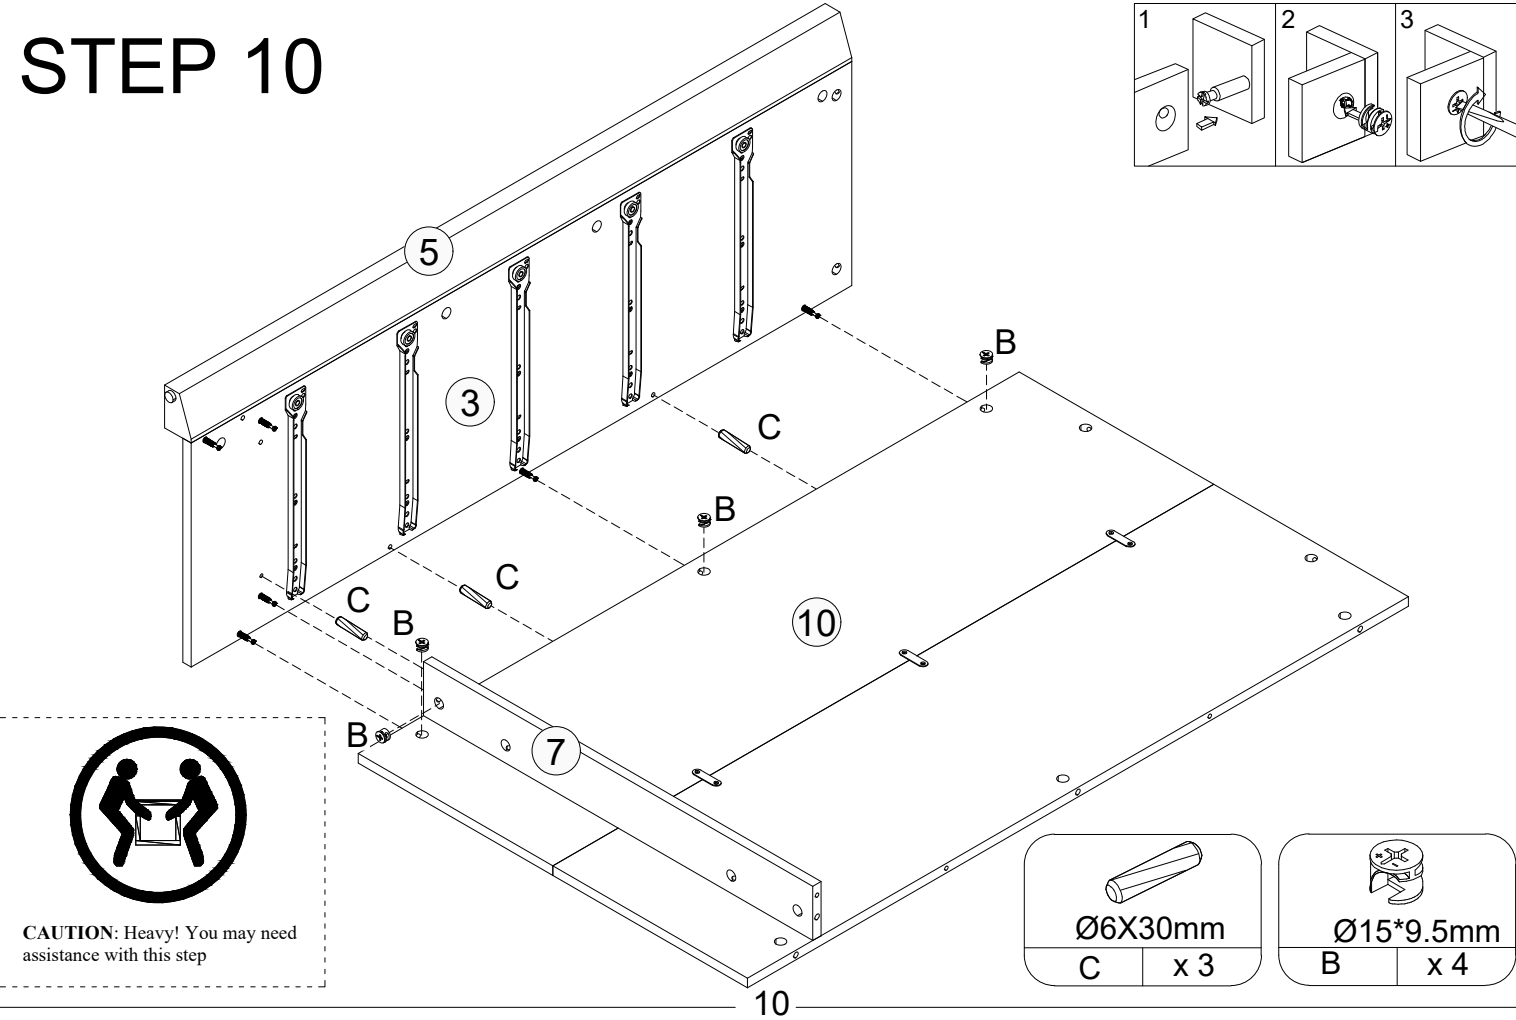





CAUTION: Heavy! You may need assistance with this step

STEP 11

PF035

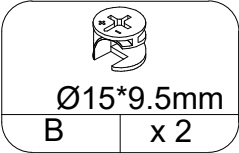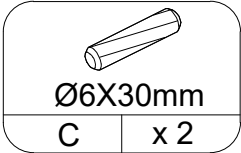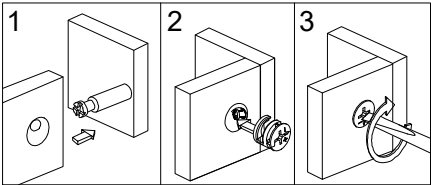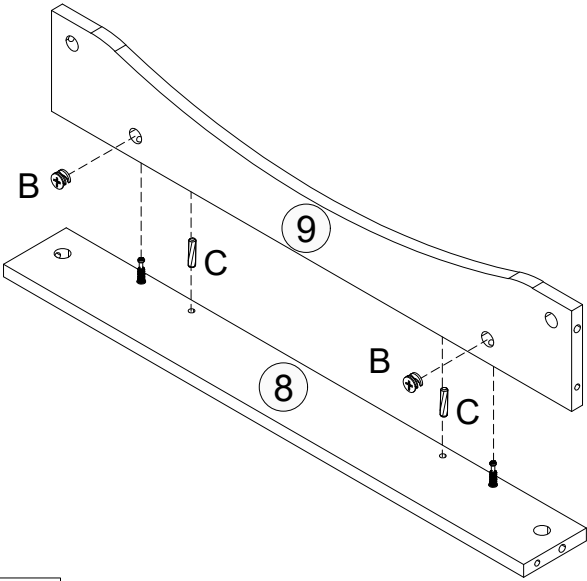


STEP12

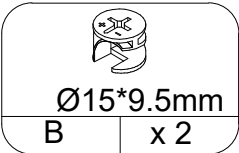
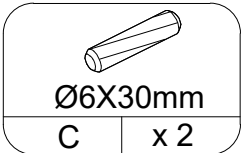
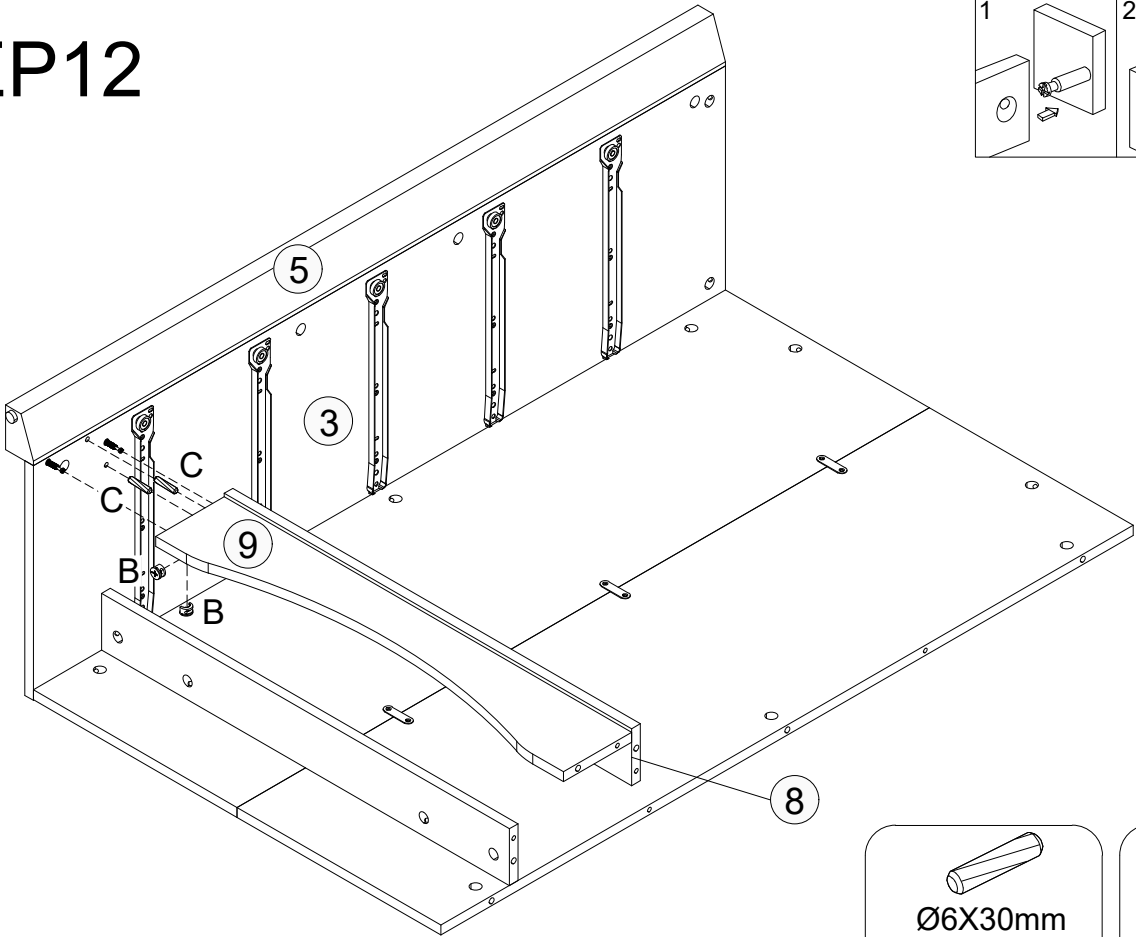
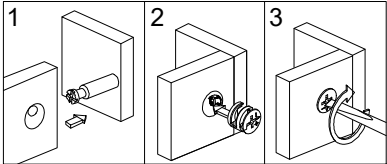


STEP 13

PF035



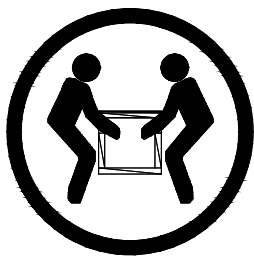


CAUTION: Heavy! You may need assistance with this step

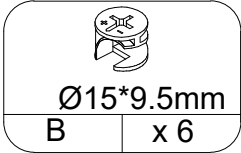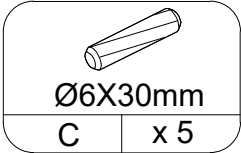
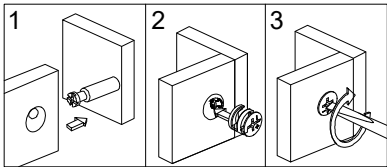
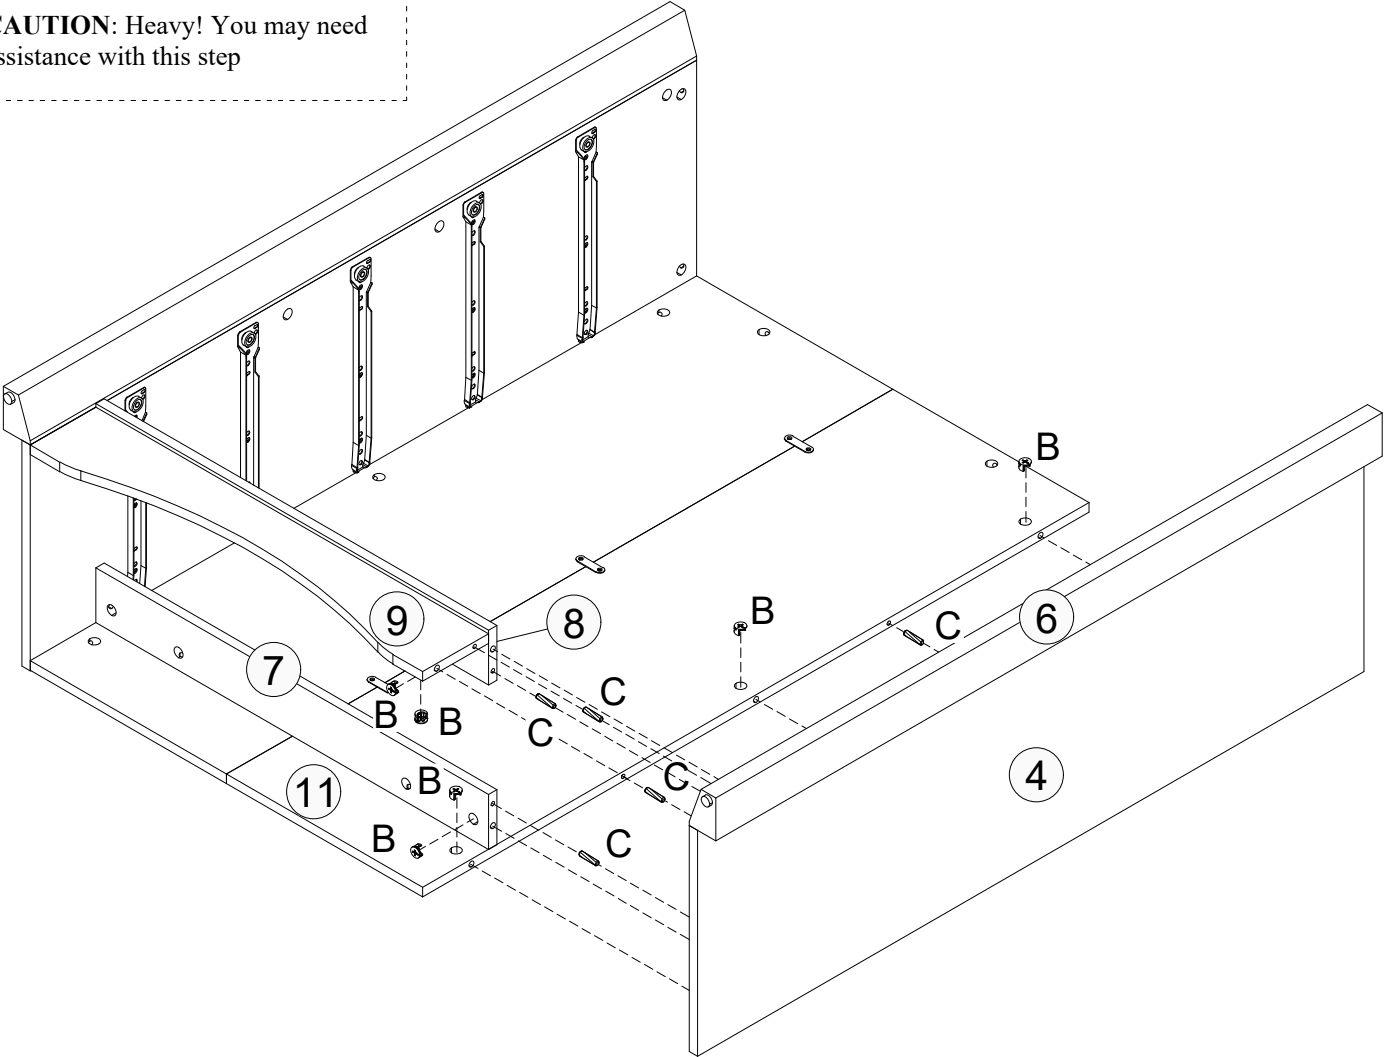


STEP 14

PF035

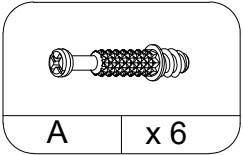
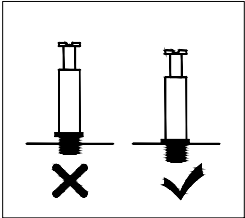
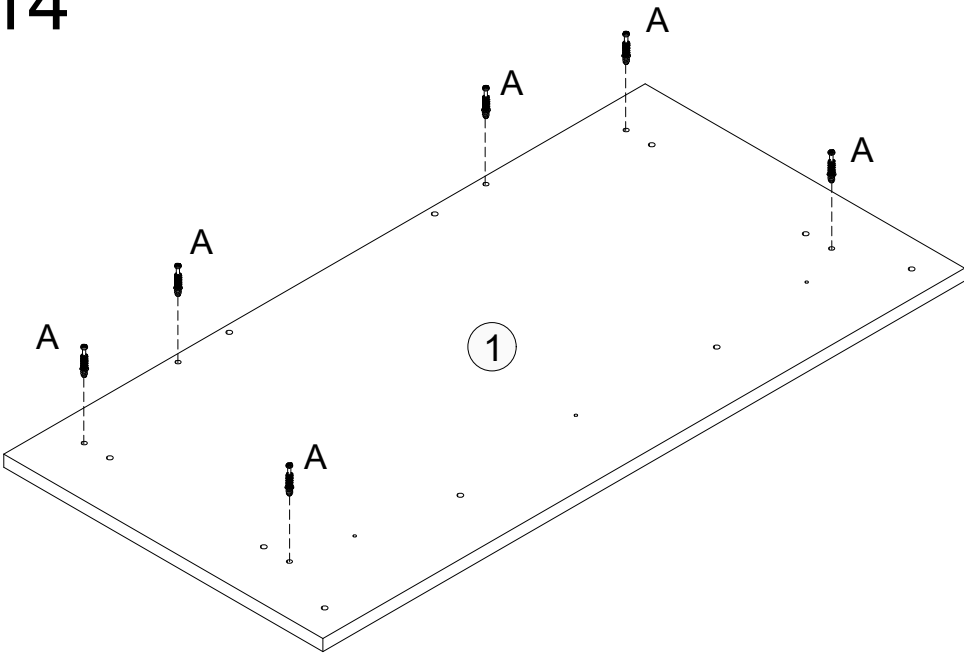


STEP 15


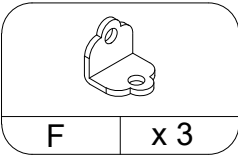
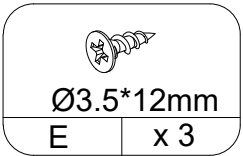
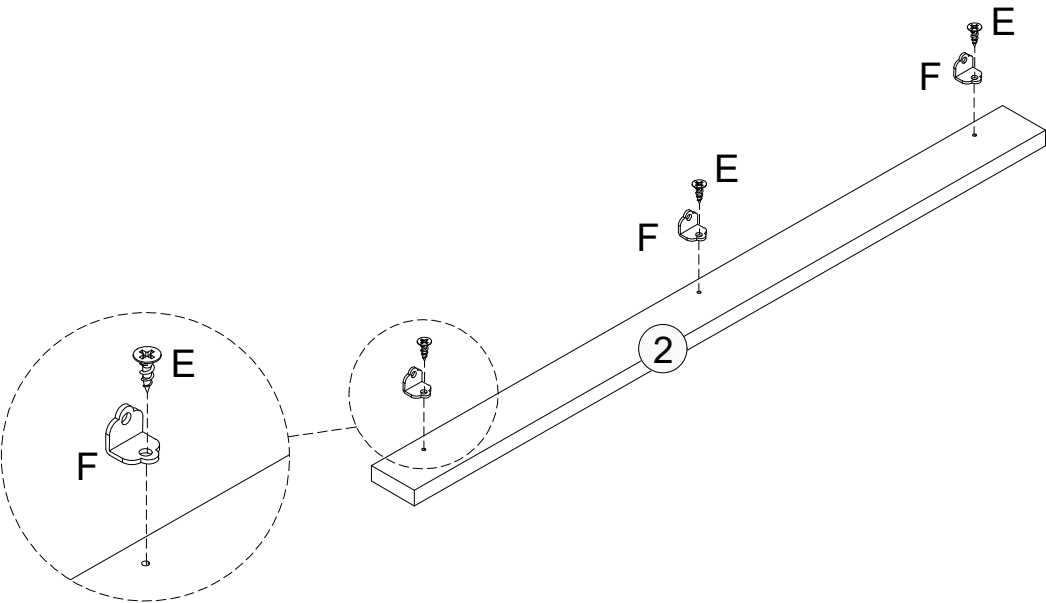


STEP 16

PF035

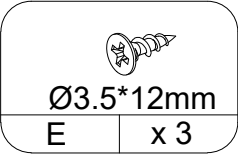
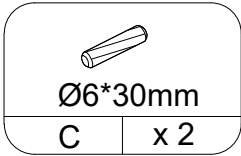
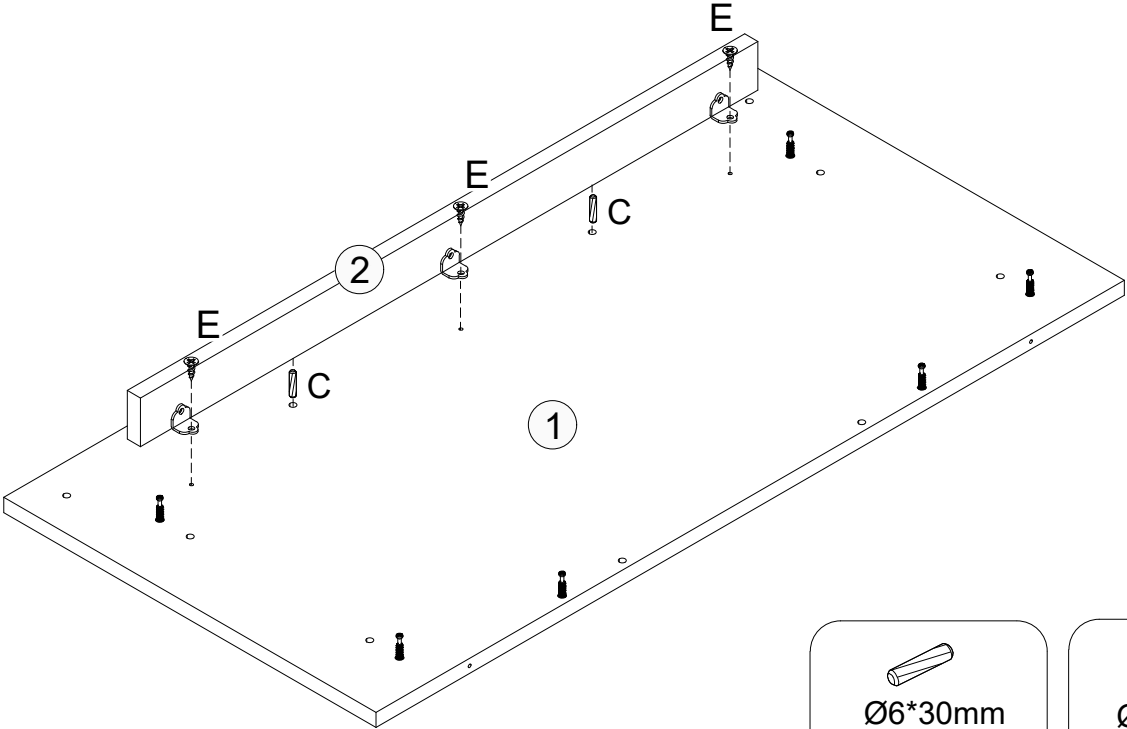


STEP 17

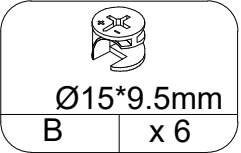
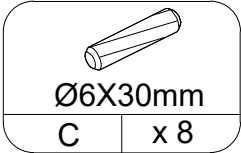
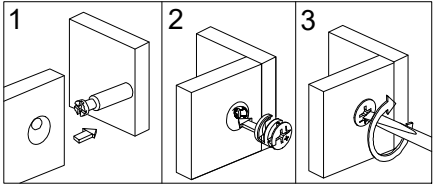
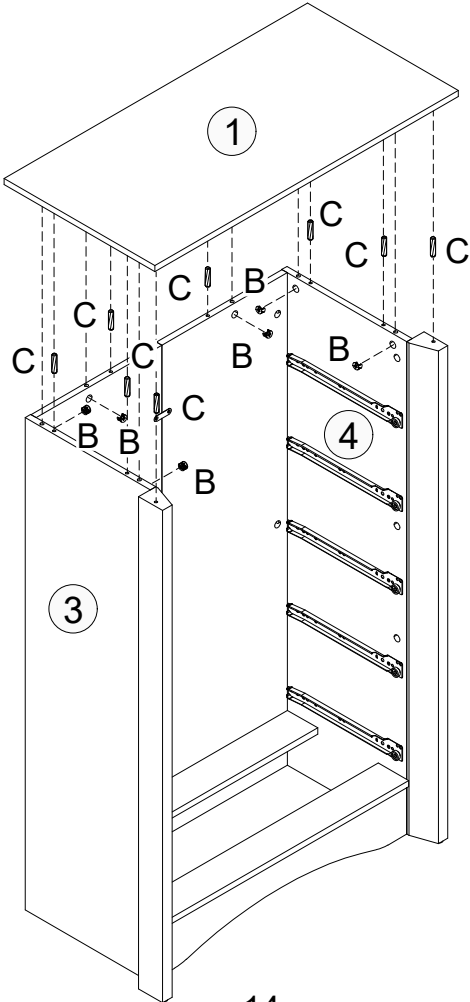


STEP 18

PF035

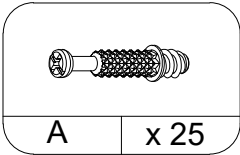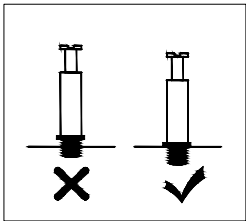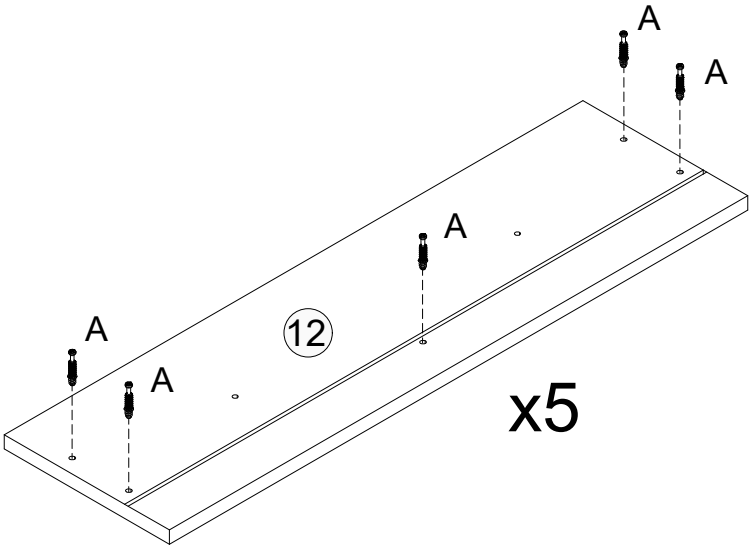


STEP 19

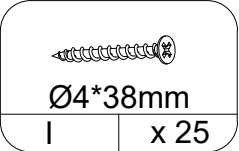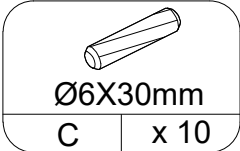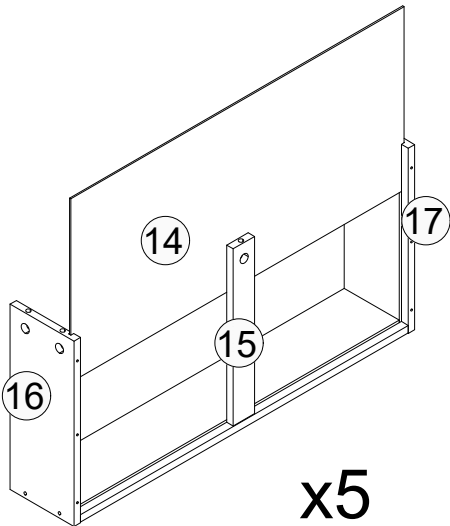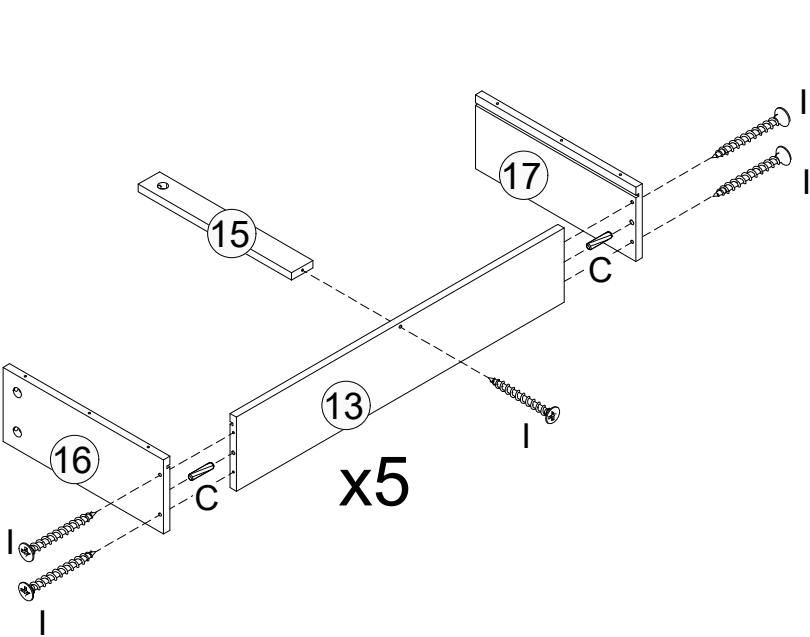


STEP 20

PF035



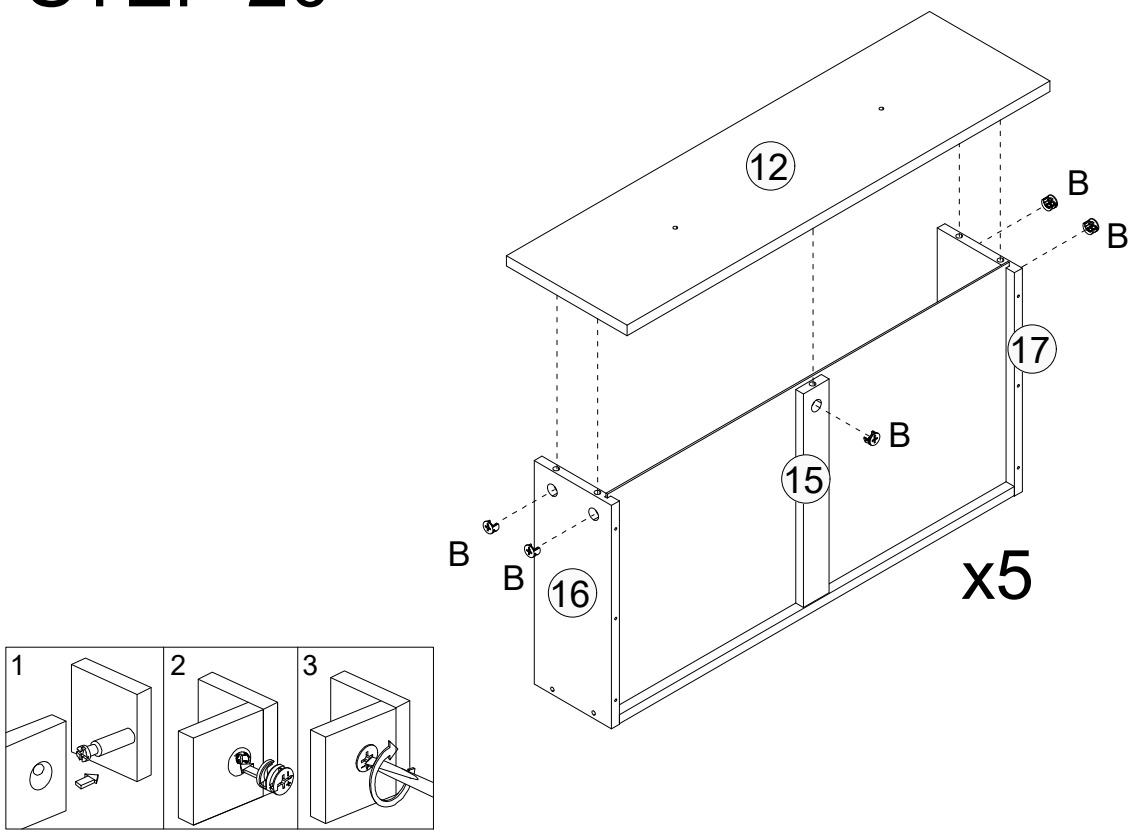


STEP 21

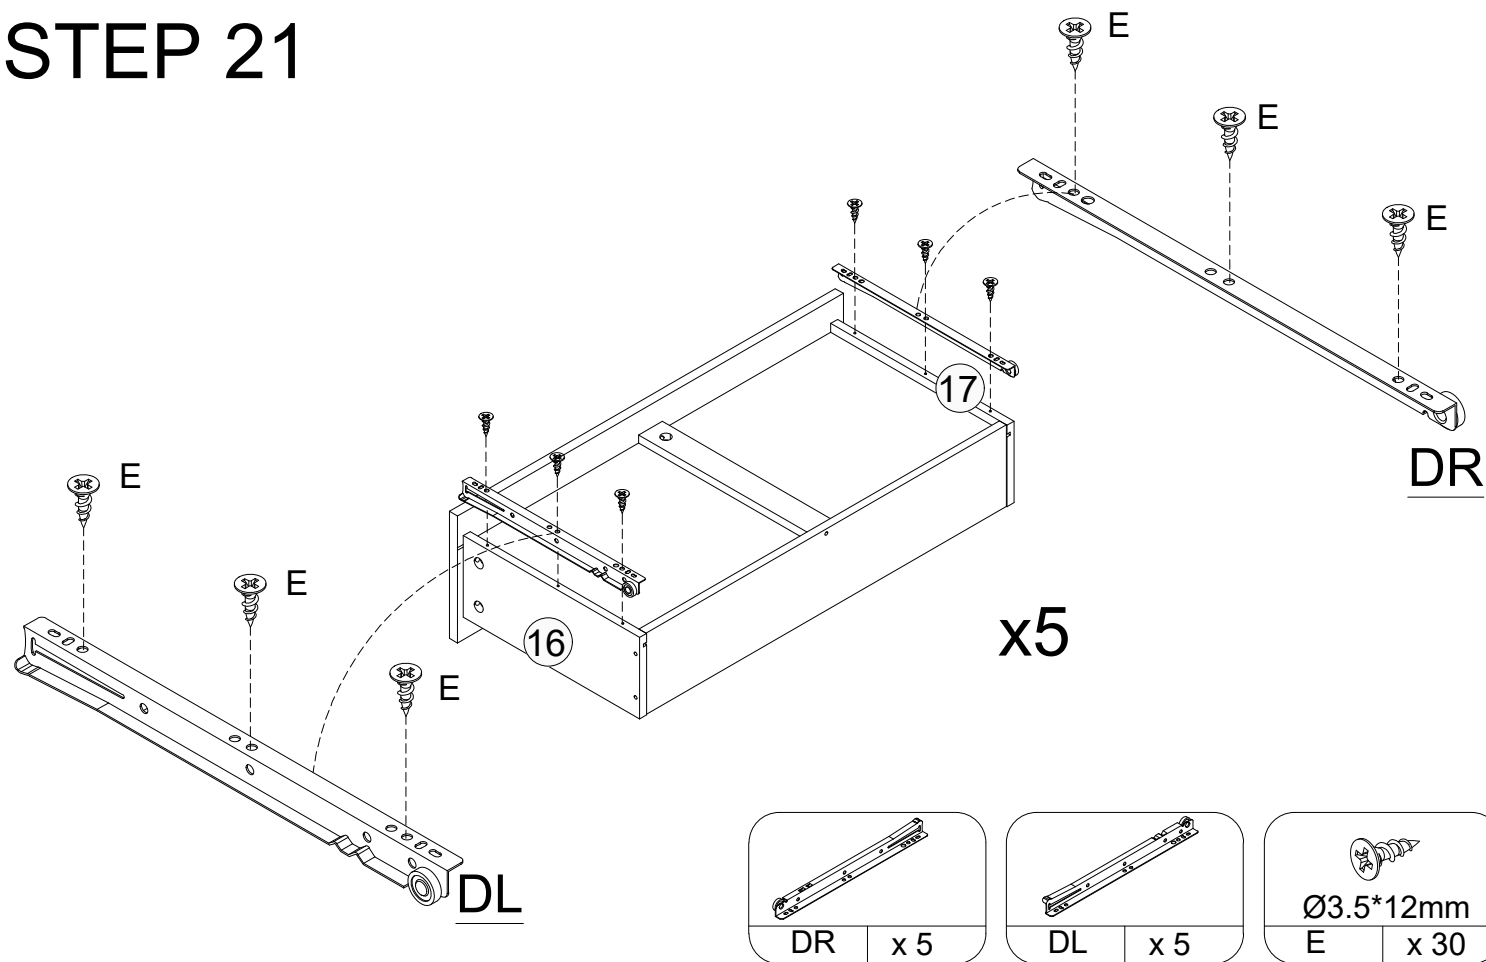


STEP 22

PF035

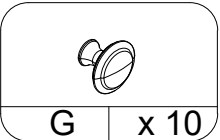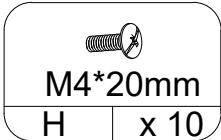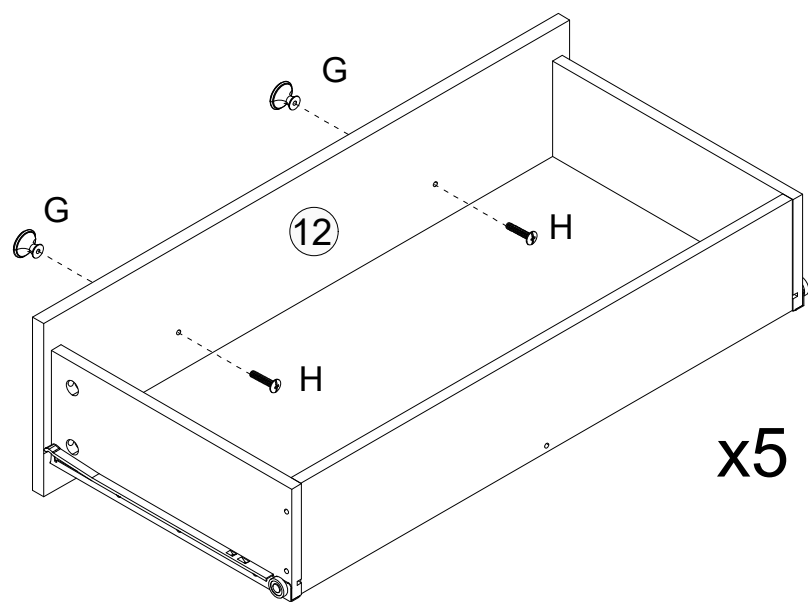


STEP 23

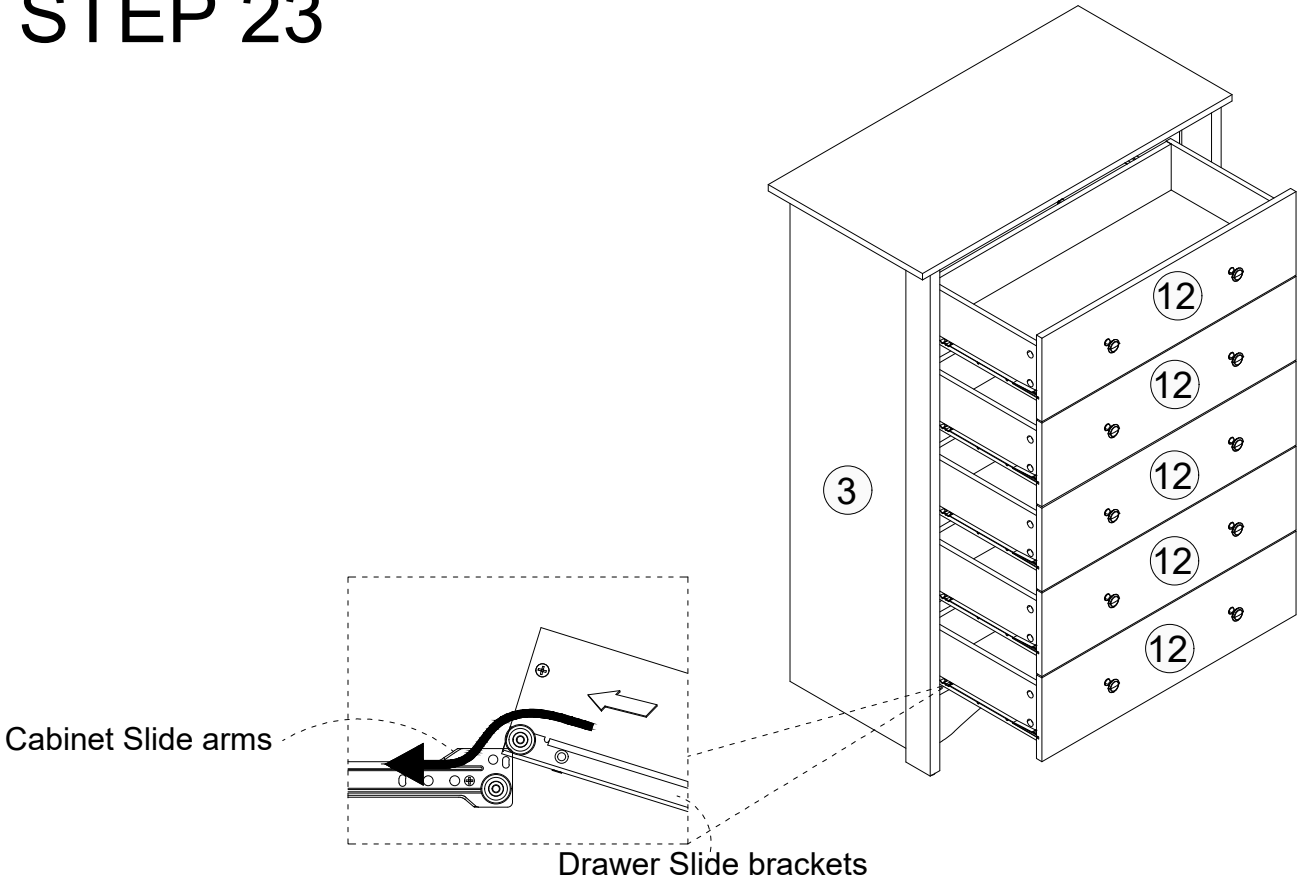

STEP 24

PF035

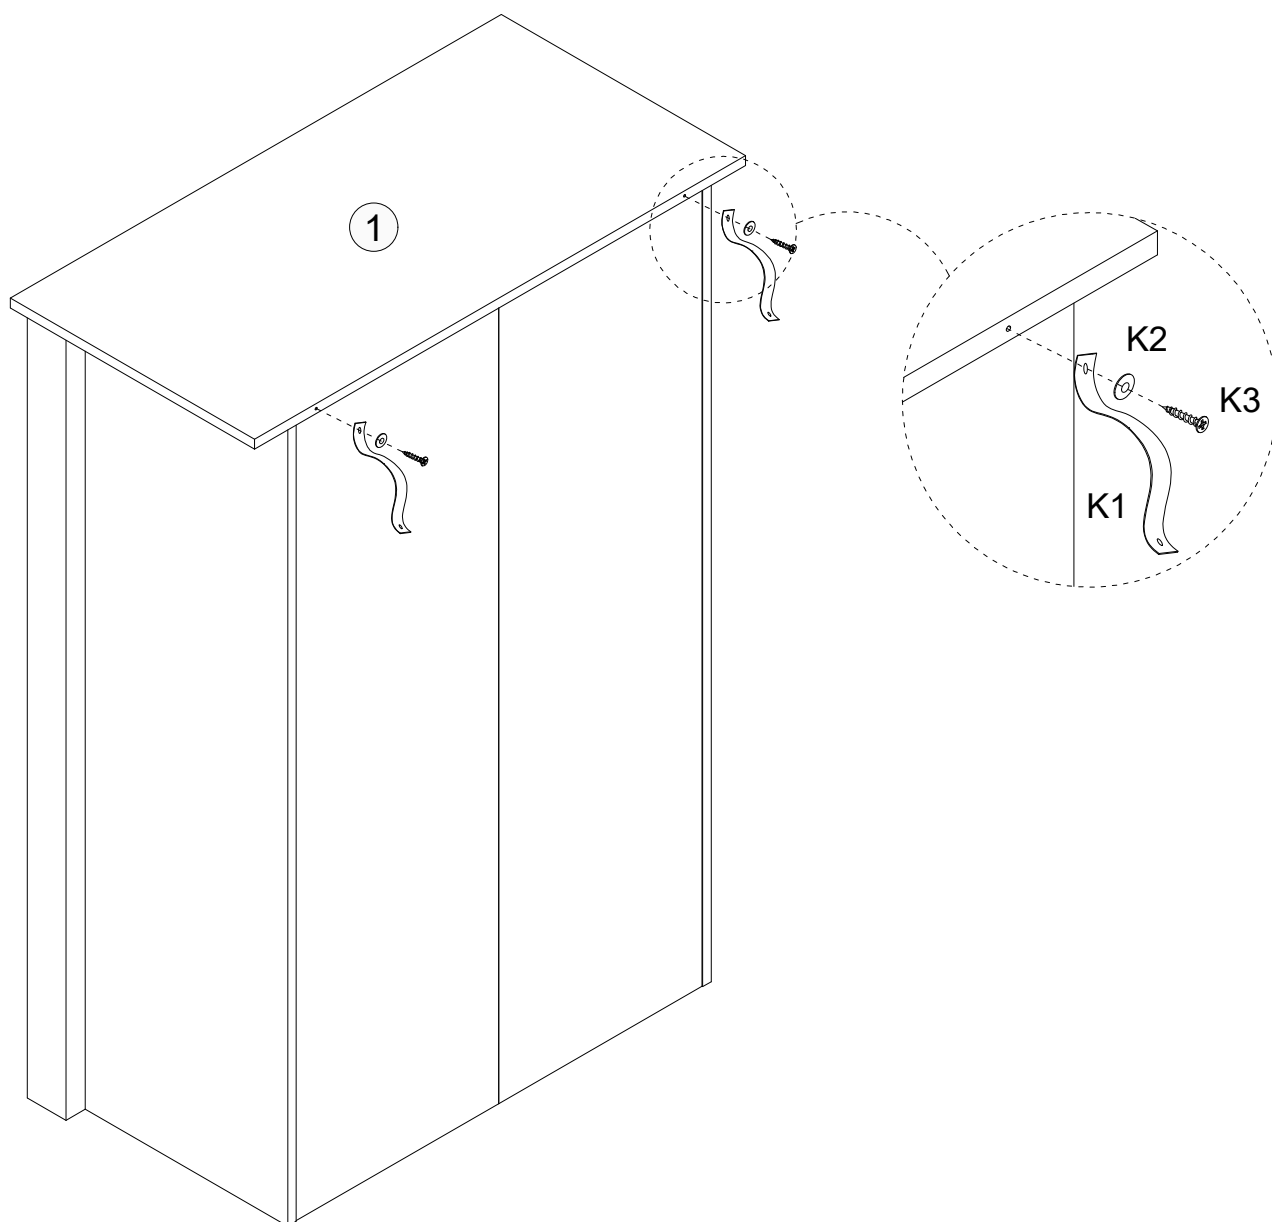


Use screw (K3) and washer (K2) to fix the strap (K1)
follow position of holes on the peice 1.


K1 x 2
K2 x 2
K3 x 2

STEP 25


PF035

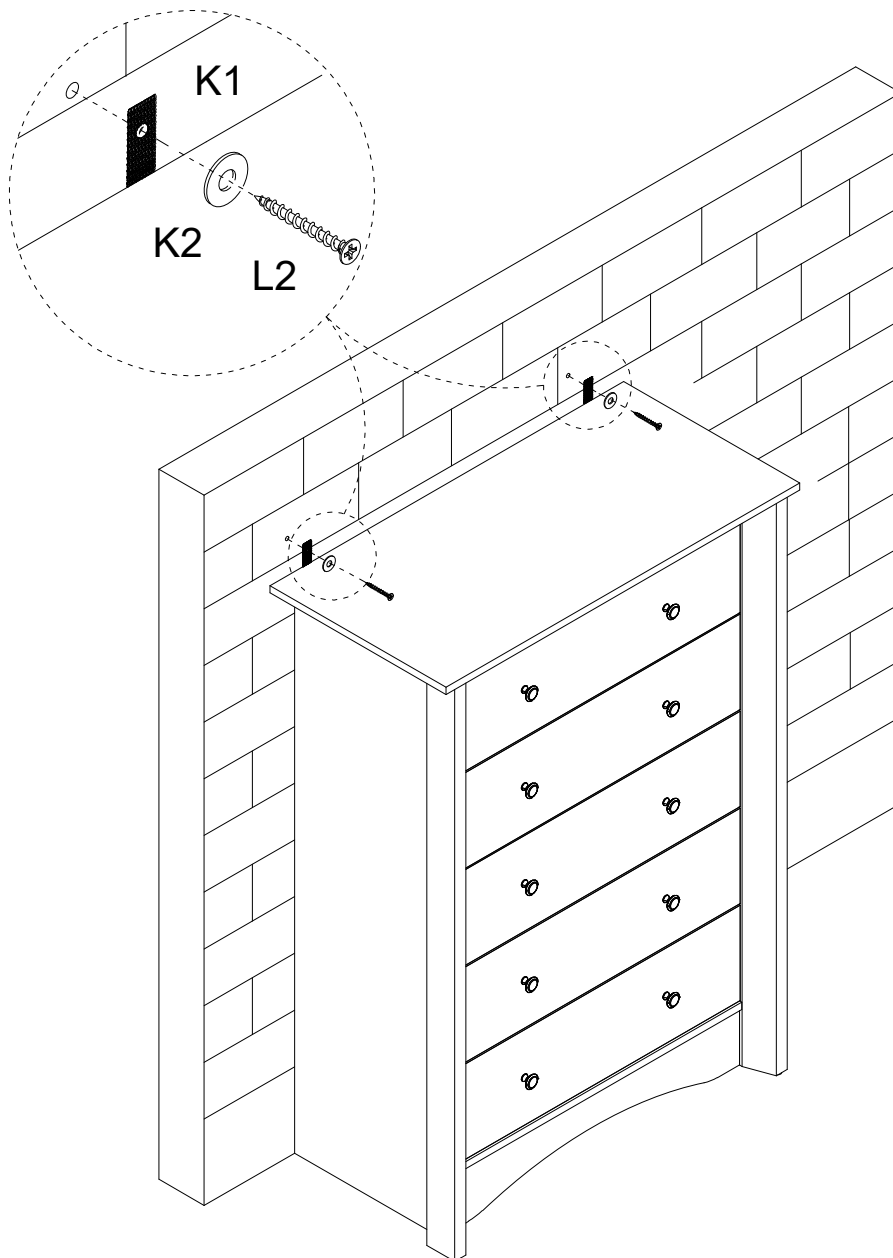


WALL

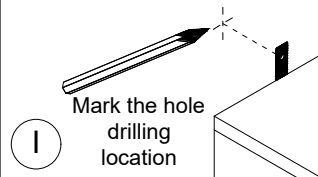

WALL

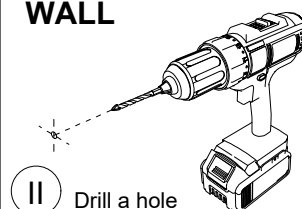

WALL

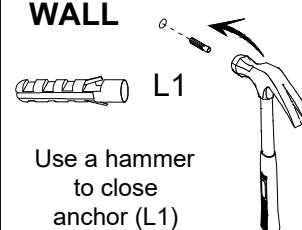

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (L1) on the wall.

Step 3: use screw (L2) to fix the strap (K1), (K2) on the wall .

L1 x2

L2 x2

K2 x2

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning