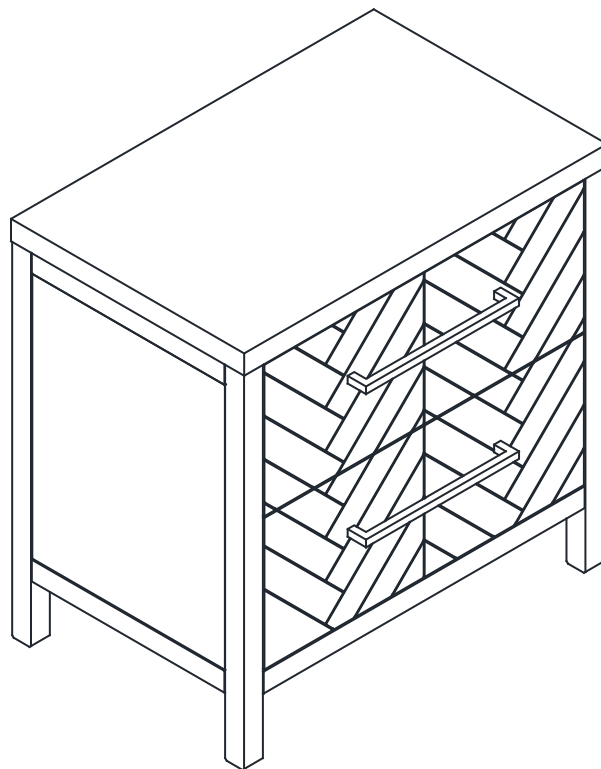













CROSLEY

FURNITURE






Nightstand CF9402



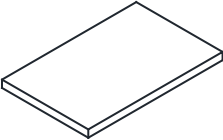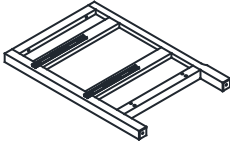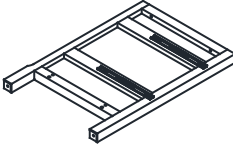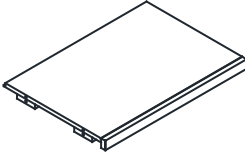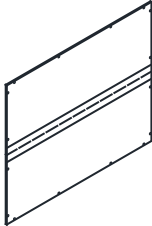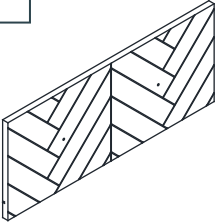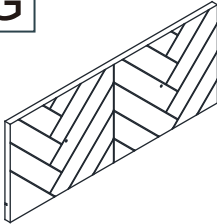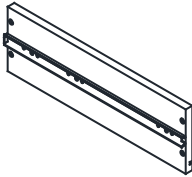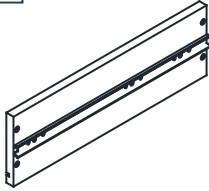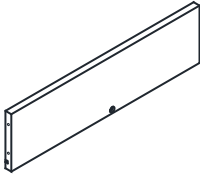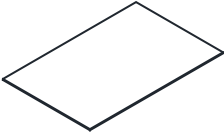PART LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Back Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
Top Drawer Front 1 PC	Bottom Drawer Front 1 PC	Drawer Right Panel 2 PCS	Drawer Left Panel 2 PCS	Drawer Back Panel 2 PCS
<div>K</div> 	<div>L</div> 			
Drawer Bottom Panel 2 PCS	Drawer Support 2 PCS			

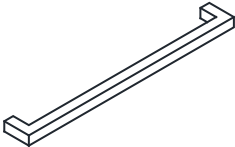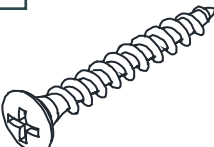HARDWARE LIST

#1  Ø8mm*1-1/8"	#2  Handle 2 PCS	#3  Ø5/32"*25mm Round Head Bolt 4 PCS (Extra 1)	#4  Ø1/4"*2" Long Bolt 4 PCS (Extra 1)	#5  Ø1/4"*1-1/4" Short Bolt 4 PCS (Extra 1)
#6  Ø1/4" Spring Washer 8 PCS (Extra 1)	#7  Ø1/4"*16mm Flat Washer 8 PCS (Extra 1)	#8  Ø3*15mm Round Head Screw 16 PCS (Extra 1)	#9  Ø3.5*25mm Screw 18 PCS (Extra 1)	#10  Adjustable Leveler 4 PCS
#11  4mm Allen Wrench 1 PC	#12  Cam Bolt 2 PCS	#13  Cam Lock 2 PCS	#14  Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

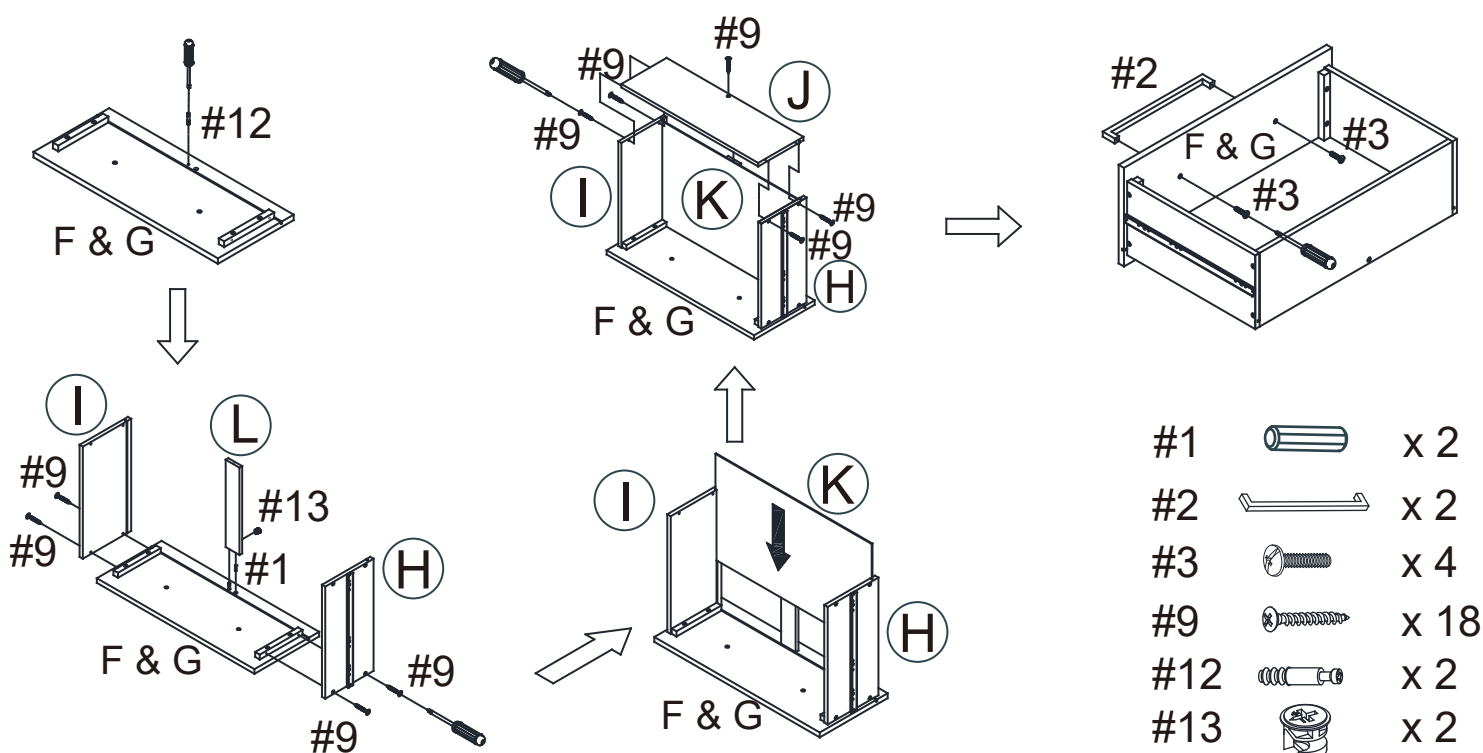
Step 1. Attach cam bolts (part #12) to drawer fronts (parts F & G) using phillips head screwdriver.

Attach panels (parts H & I) and drawer supports (part L) to drawer fronts (parts F & G) using wood dowels (part #1), screws (part #9), cam locks (part #13) and phillips head screwdriver.


Slide drawer bottom panels (part K) into grooves of assembled unit (parts F, G, H & I).

Attach drawer back panels (part J) to assembled unit (parts H, I, K & L) using screws (part #9) and phillips head screwdriver.


Attach handles (part #2) to drawer fronts (parts F & G) using round head bolts (part #3) and phillips head screwdriver.



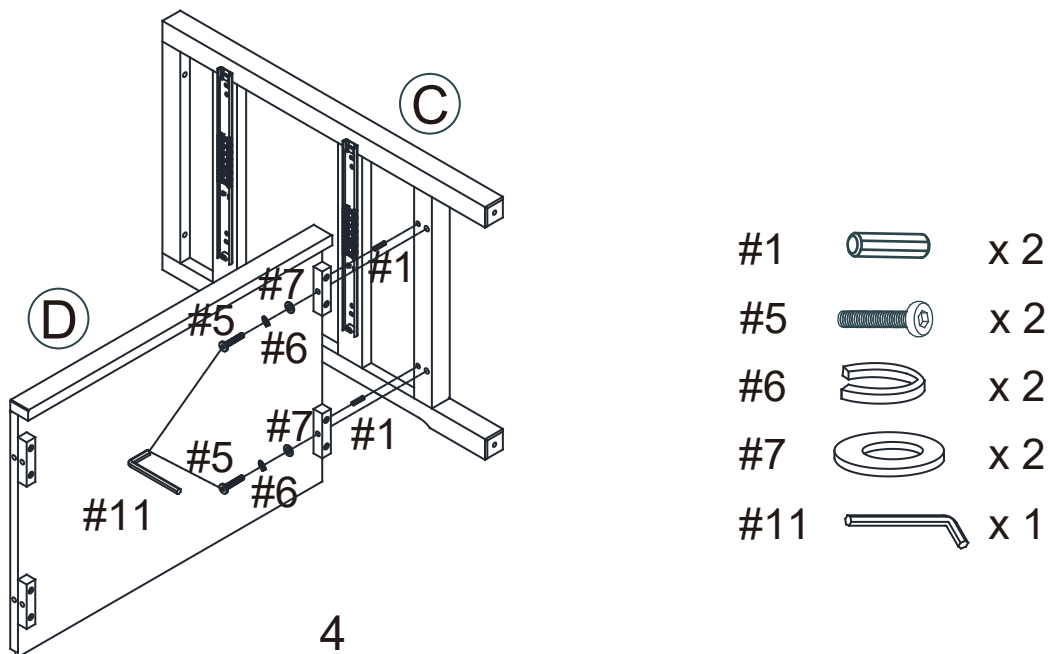Step 2. Attach bottom panel (part D) to right panel (part C) using wood dowels (part #1), short bolts (part #5), spring washers (part #6), flat washers (part #7) and allen wrench (part #11).




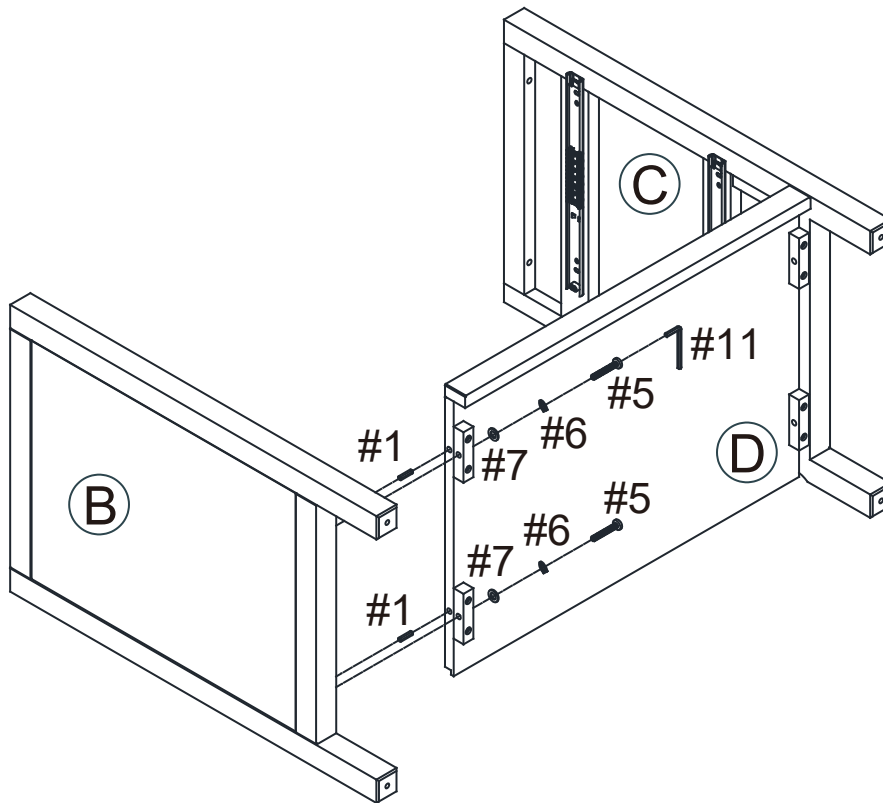Step 3. Attach left panel (part B) to bottom panel (part D) using wood dowels (part #1), short bolts (part #5), spring washers (part #6), flat washers (part #7) and allen wrench (part #11).




#1		x 2
#5		x 2
#6		x 2
#7		x 2
#11		x 1

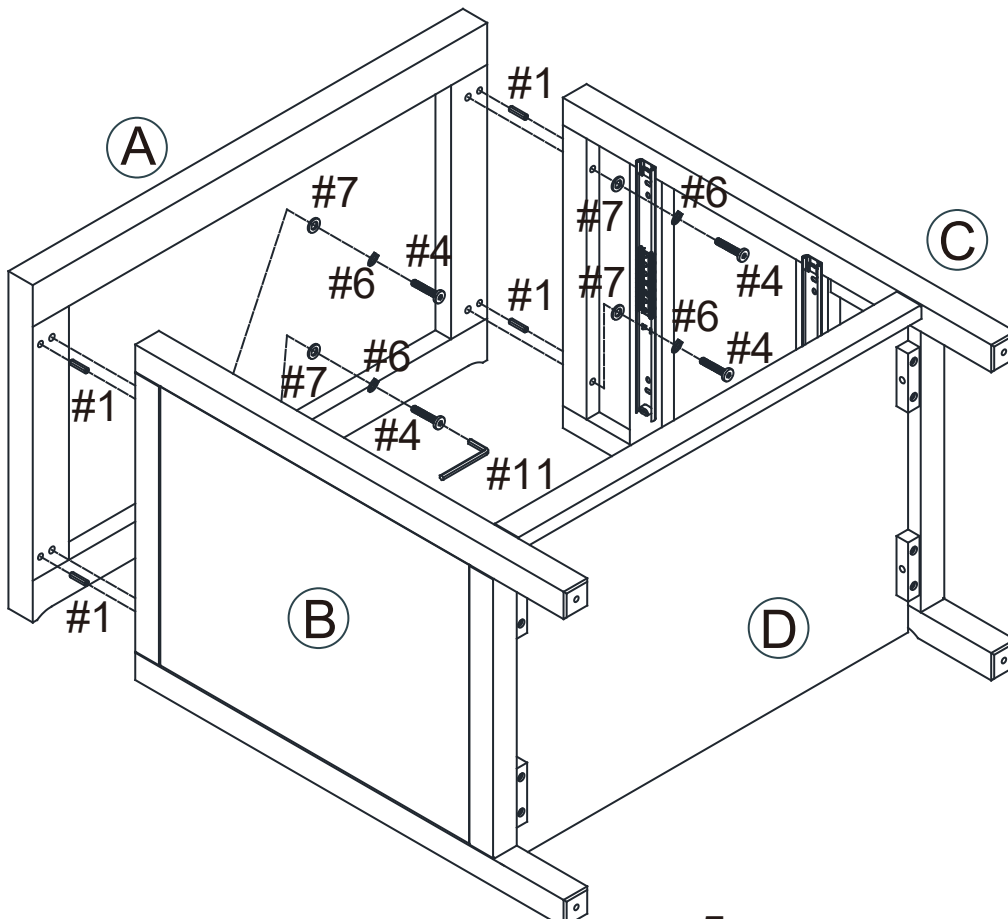Step 4. Attach top panel (part A) to assembled unit (parts B & C) using wood dowels (part #1), long bolts (part #4), spring washers (part #6), flat washers (part #7) and allen wrench (part #11).




#1		x 4
#4		x 4
#6		x 4
#7		x 4
#11		x 1

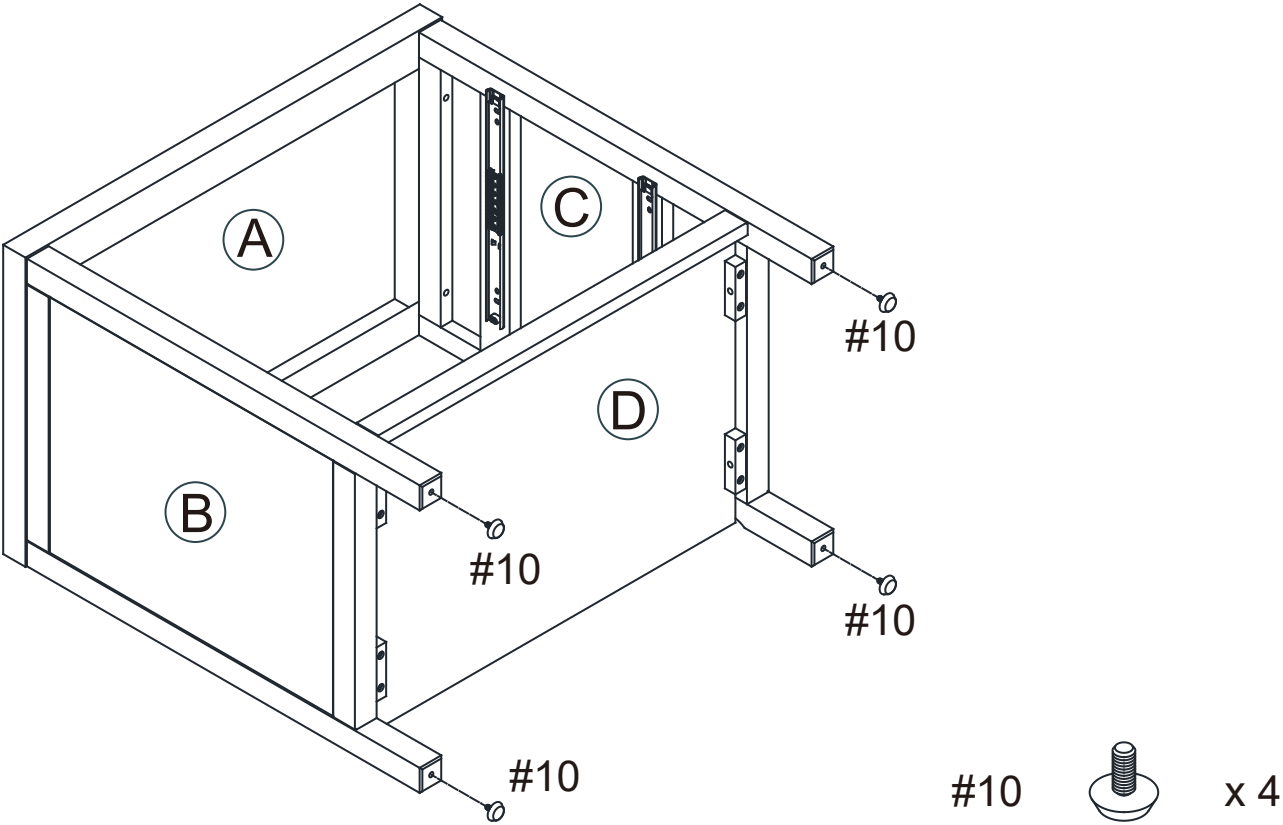Step 5. Insert adjustable levelers (part #10) into panels (parts B & C).




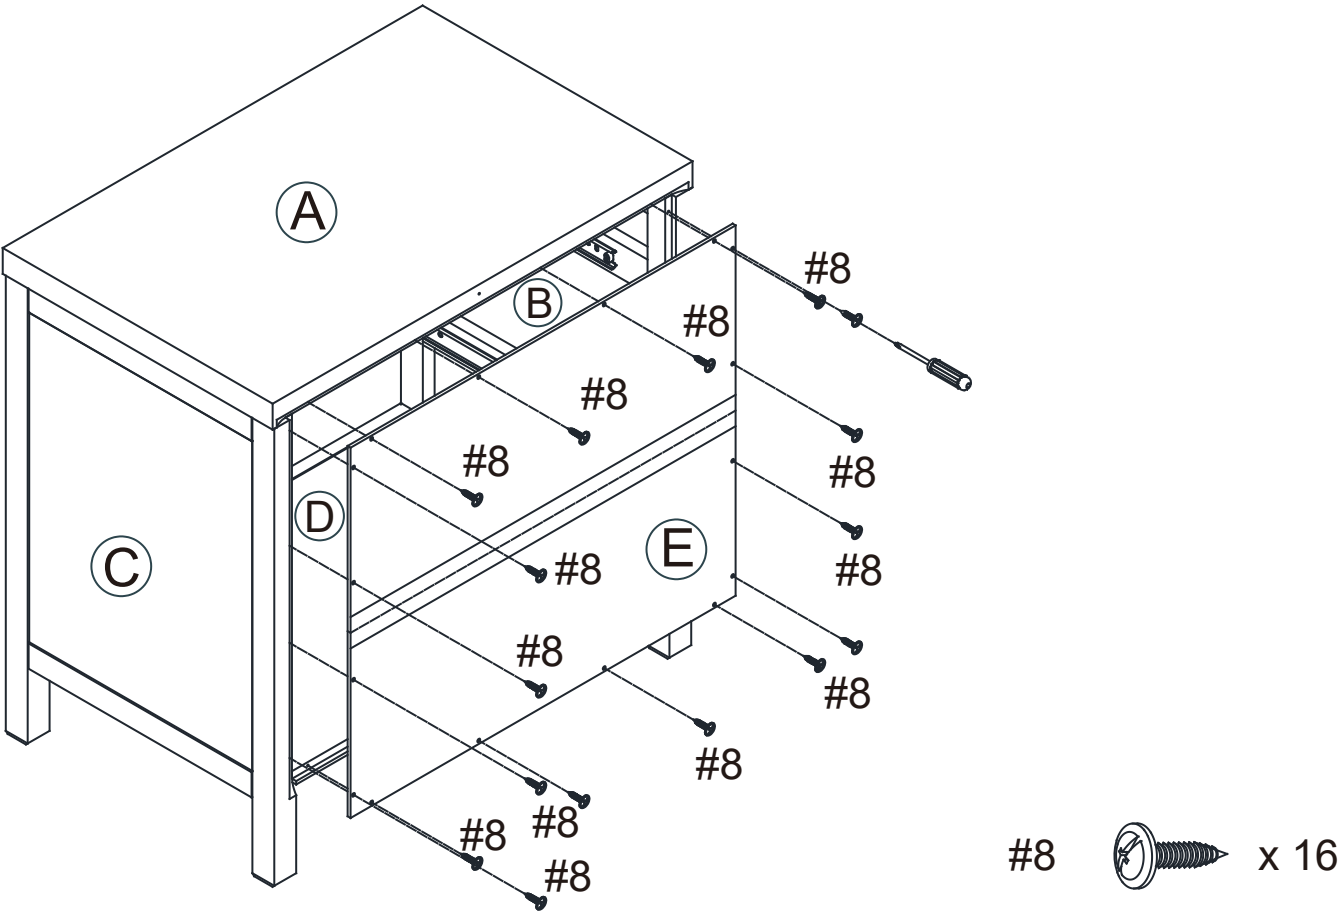Step 6. Carefully turn unit upright.
Attach back panel (part E) to assembled unit (parts A, B, C & D) using round head screws (part #8) and phillips head screwdriver.





Step 7. Slide assembled drawers into place.

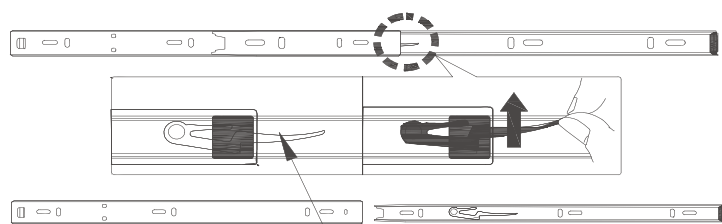NOTE: To release trigger disconnect levers push one side up and the other down.





Trigger Disconnect Lever

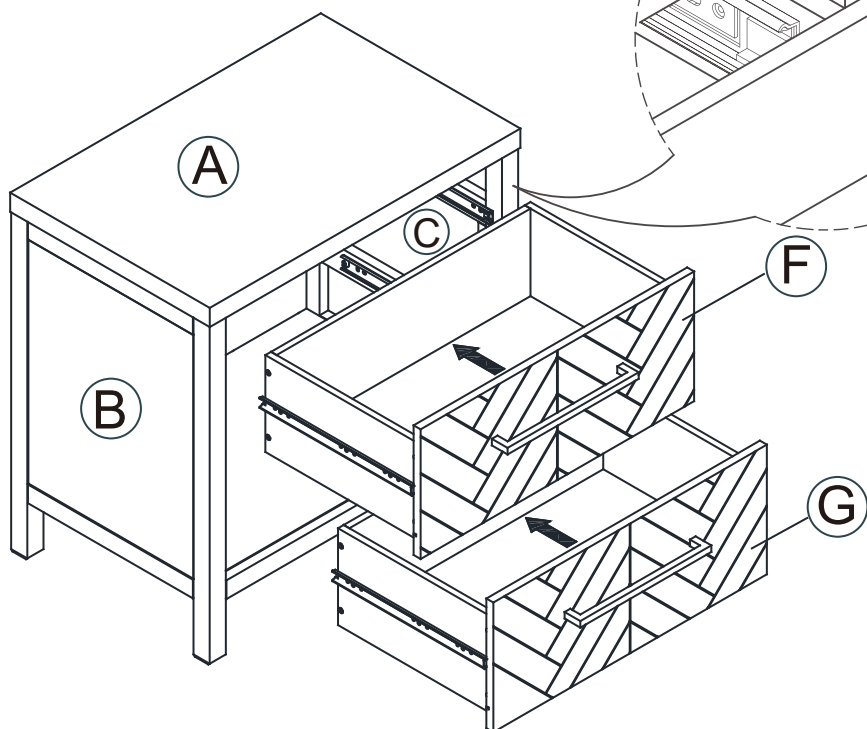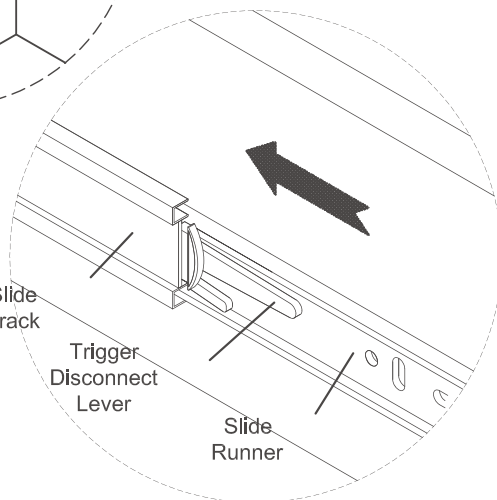

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

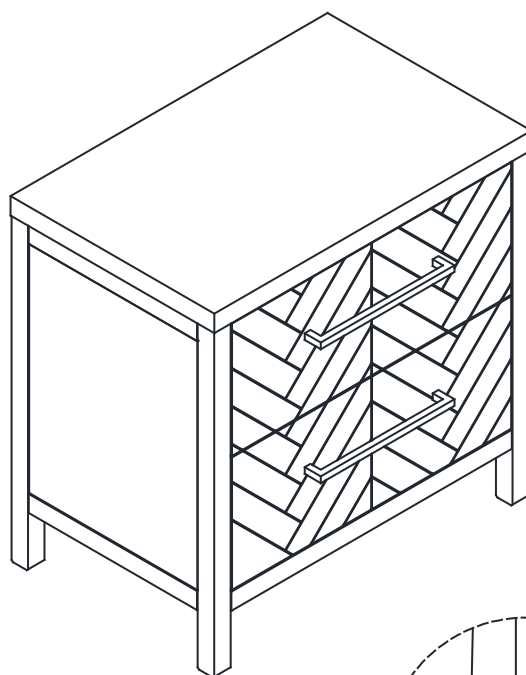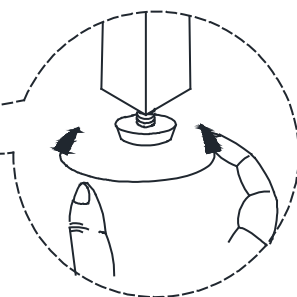Important: Safety strap kit (part #14) must be installed to prevent tipping, damage and/or injury.




#14	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

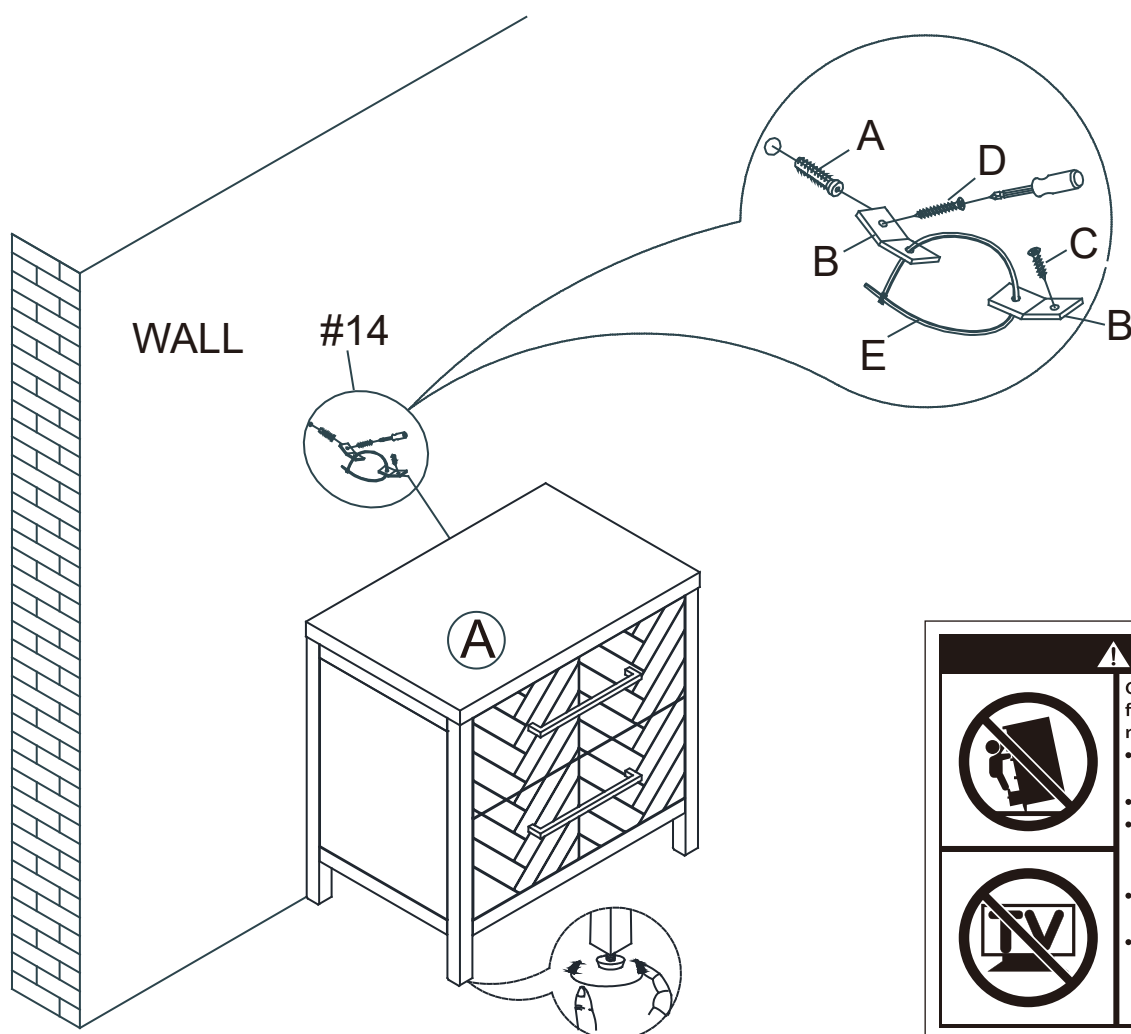Note: This item is not intended for clothing storage use.



⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<p><i>This is a permanent label. Do not remove!</i></p>