

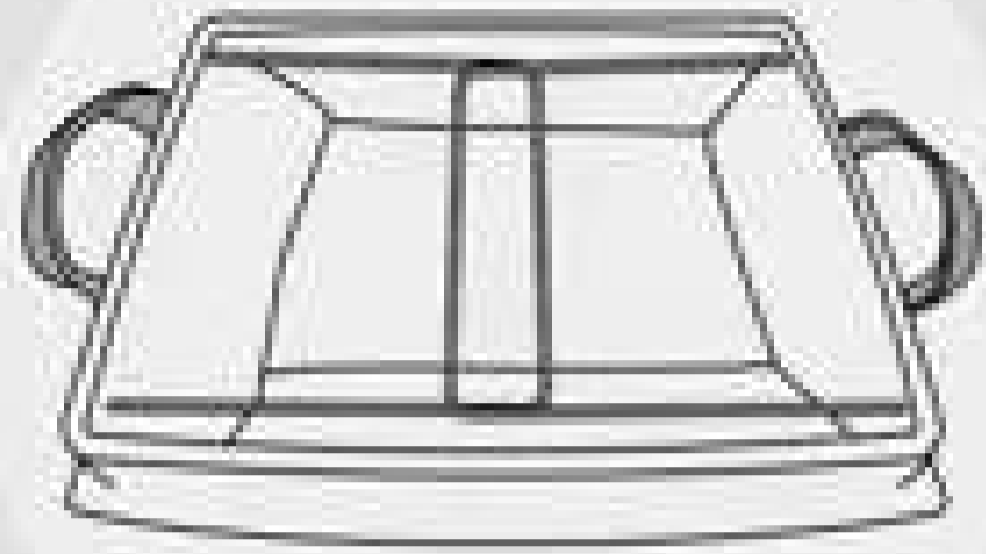


# Simple Installation Process

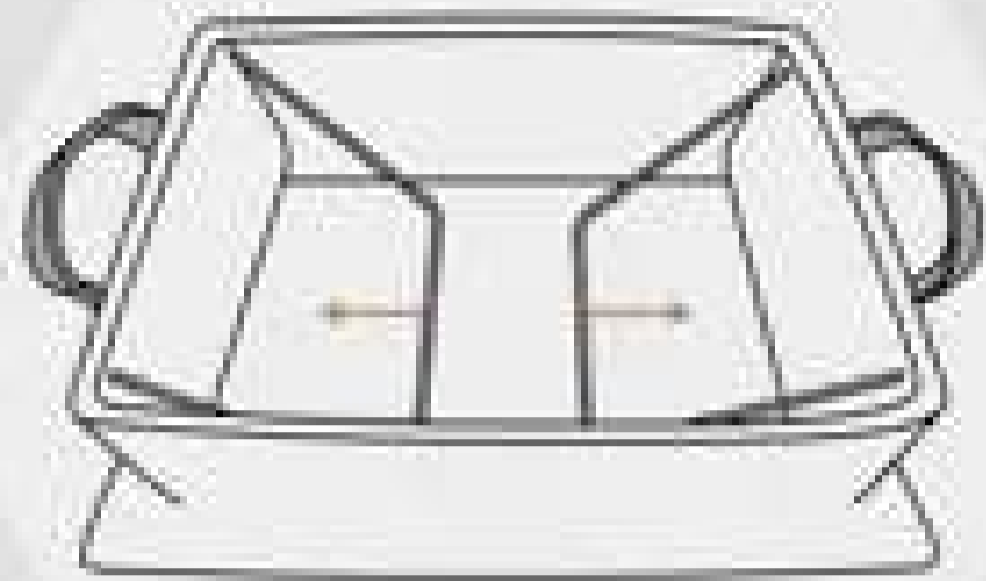


1 Unfold metal frame



2 Push inward firmly



4 Gently iron for instant smoothness

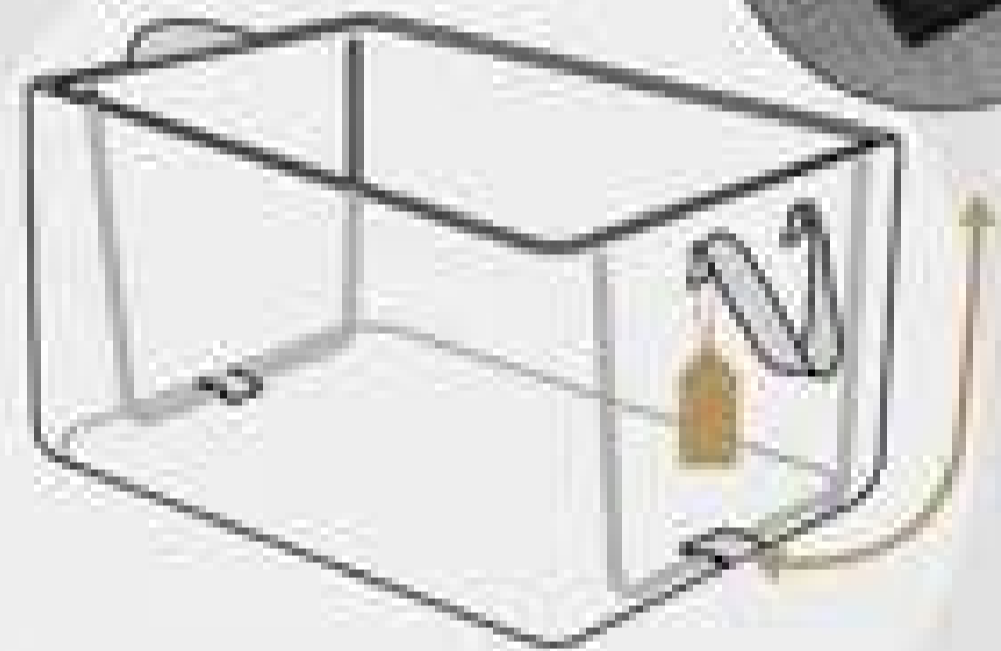

3 Expand to 90° for Secure Lock