

Care and Maintenance

Dust with a soft, dry cloth. Do not use abrasive cleaner. To clean mirror, spray a small amount of glass cleaner onto a lint-free cloth and wipe mirror clean.






Notice

* Please make sure that you have all parts indicated before you begin assembly of this item.

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top-Front Frame		1X	HW1	Allen Wrench		1X
B	Top-Back Frame		1X	HW2	Socket Screw 1/4" x 1.2mm x 12mm		38X
C	Bottom-Front Frame		1X	HW3	Socket Screw 1/4" x 1.2mm x 38mm		2X
D	Bottom-Back Frame		1X	HW4	Phillips Screw 4 x 1.2mm x 38mm		2X
E	Cross Tube		14X	HW5	Leveler		4X
F	Inner Tube		4X	HW6	Glass Holder		36X
G	Large Glass		4X	HW7	L-Shape Bracket		2X
H	Small Glass		2X	HW8	Flat Washer		2X
I	Square Glass		1X	HW9	Anchor		2X


SAFAVIEH

COUTURE

Model# SFV1102A

Product Dimensions: 39.37"W x 13.78"D x 90.55"H

Weight Capacity: 33lbs per shelf

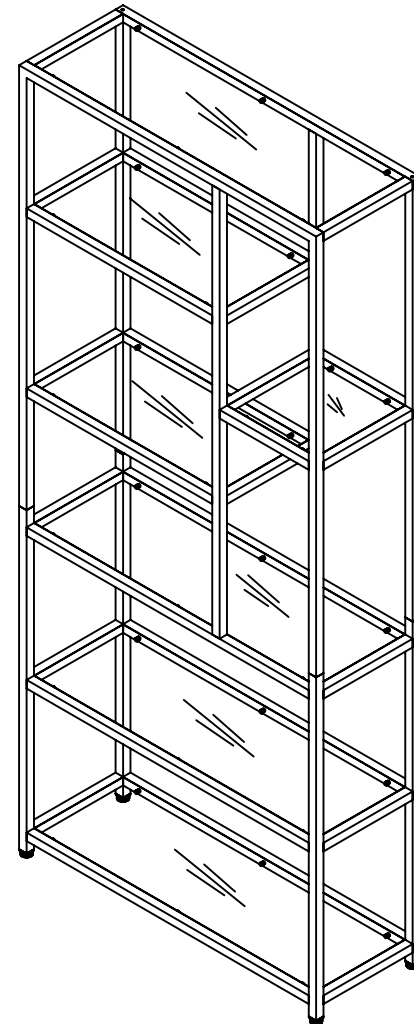


Preparation

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

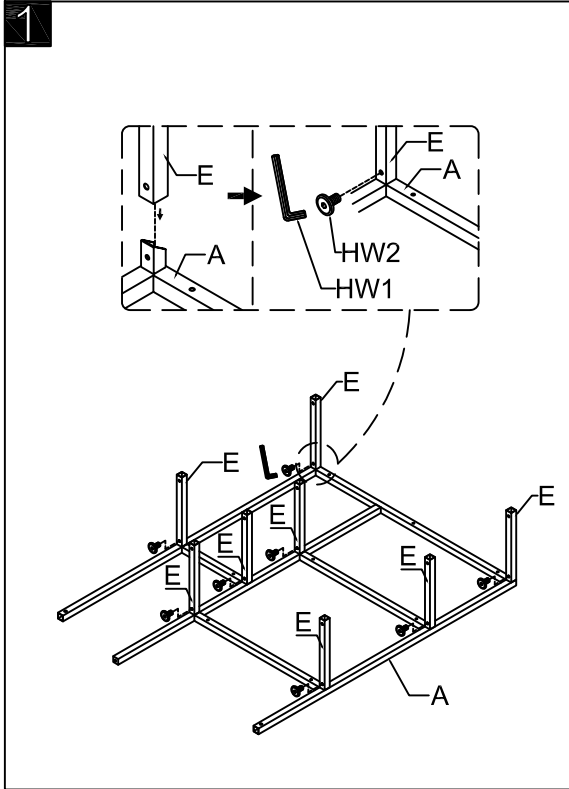


Step 1

Insert the U-connector on the top-front frame (A) into the cross tube (E). Assemble cross tube (E) to top-front frame (A) with bolts (HW2) by use of Allen wrench (HW1) as shown in drawing.

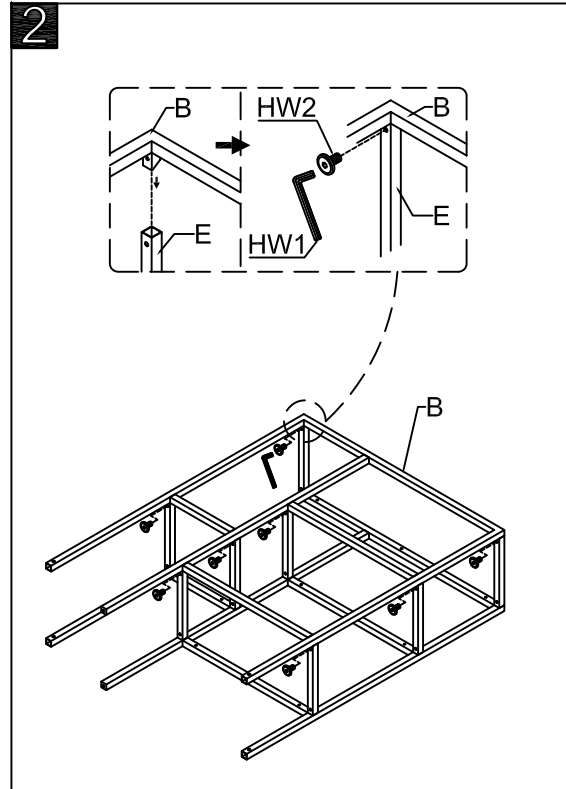

Step 2

Insert the U-connector on the top-back frame (B) into the cross tube (E). Assemble cross tube (E) to top-back frame (B) with bolts (HW2) by use of Allen wrench (HW1) as shown in drawing.

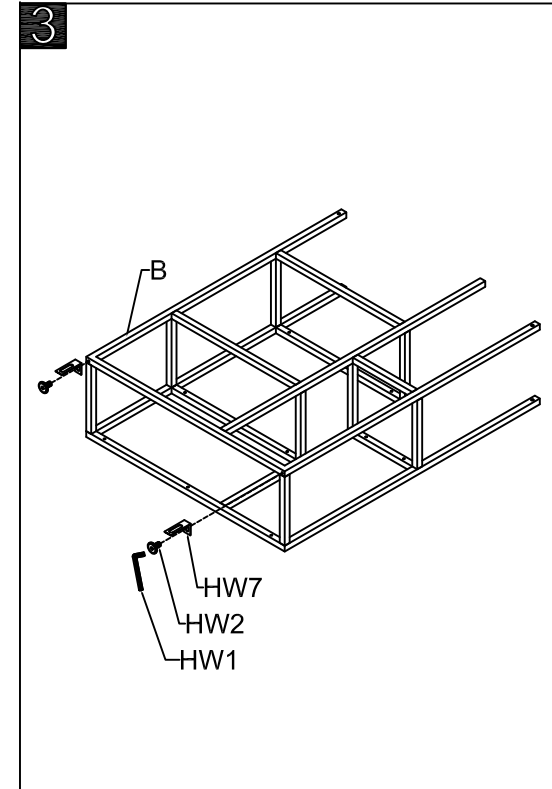

Step 3

Assemble L-shape bracket (HW7) to top-back frame (B) with bolts (HW2) by use of Allen wrench (HW1) as shown in drawing.


Preparation

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.


4

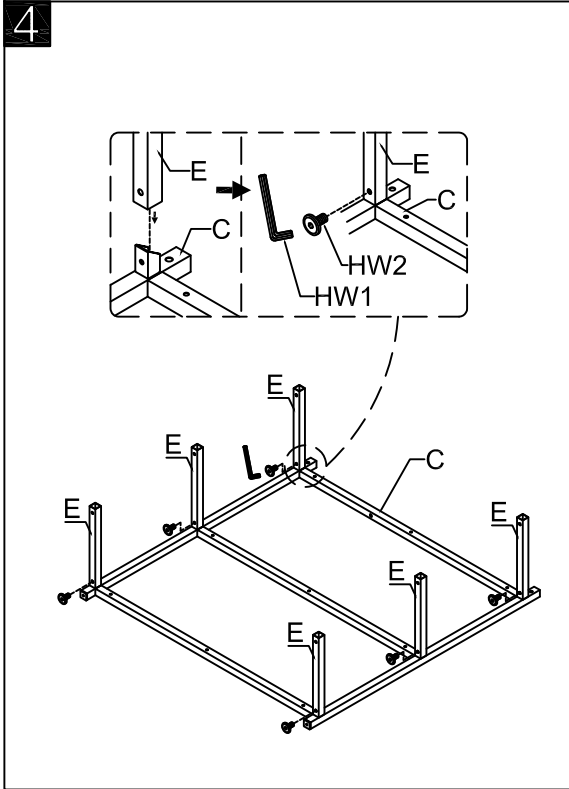

Step 4

Insert the U-connector on the bottom-front frame (C) into the cross tube (E). Assemble cross tube (E) to bottom-front frame (C) with bolts (HW2) by use of Allen wrench (HW1) as shown in drawing.


5

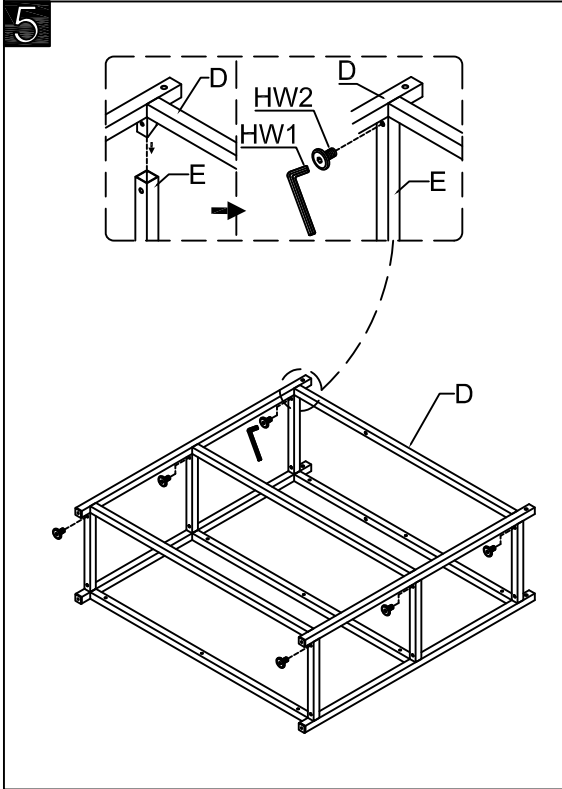

Step 5

Insert the U-connector on the bottom-back frame (D) into the cross tube (E). Assemble cross tube (E) to bottom-back frame (D) with bolts (HW2) by use of Allen wrench (HW1) as shown in drawing.

6

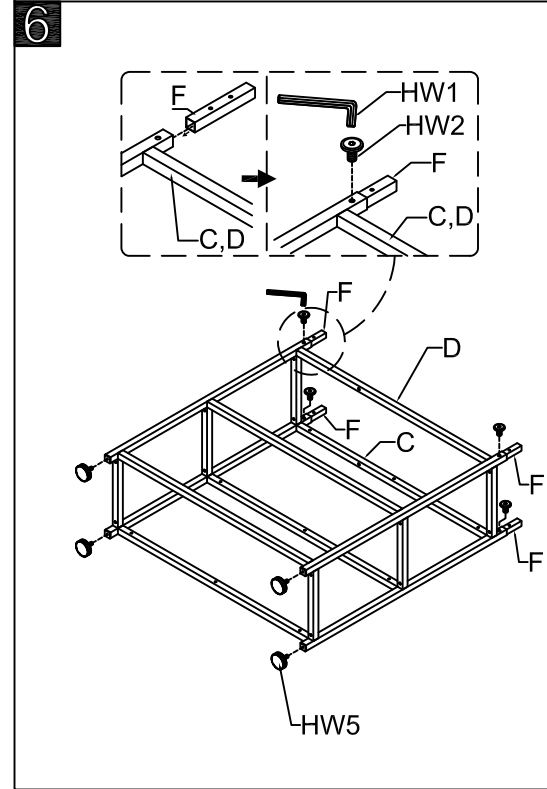

Step 6

Insert inner tube (F) into the bottom frame (C,D), then assemble inner tube (F) to bottom frame (C,D) with bolts (HW2) by use of Allen wrench (HW1) as shown in drawing.


Screw in leveler (HW5) into threaded nut on the tube end of bottom frame (C,D).

Preparation

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

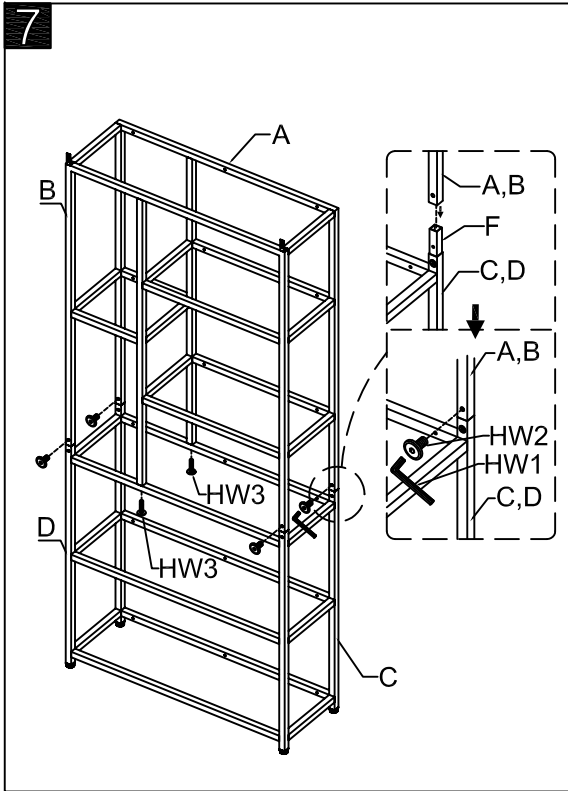


Step 7

Insert the top assembled frame (A,B) into the bottom assembled frame (C,D). Then, assemble top frame (A,B) to bottom frame (C,D) with bolts (HW2) and (HW3) by use of Allen wrench (HW1) as shown in drawing.

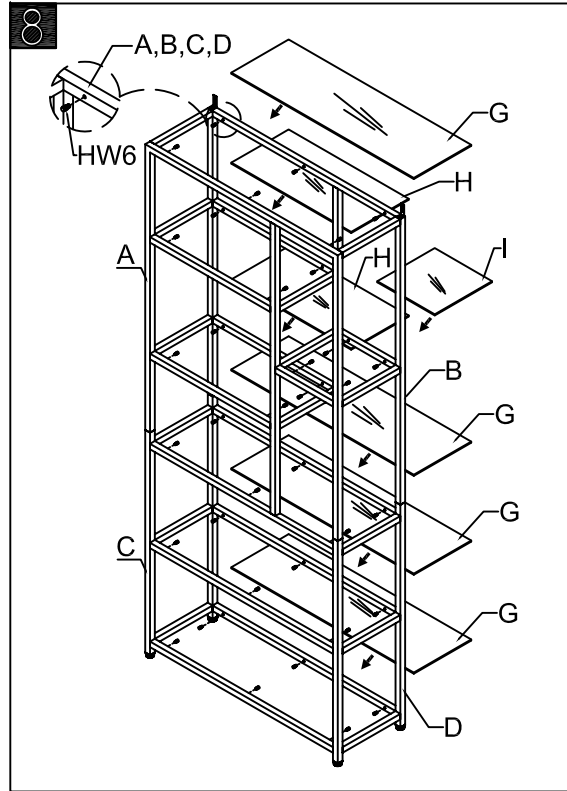

Step 8

Insert glass holder (HW6) in the threaded holes on the top frame (A,B), bottom frame (C,D) as shown in drawing and place glass (G,H,I) onto the frames.

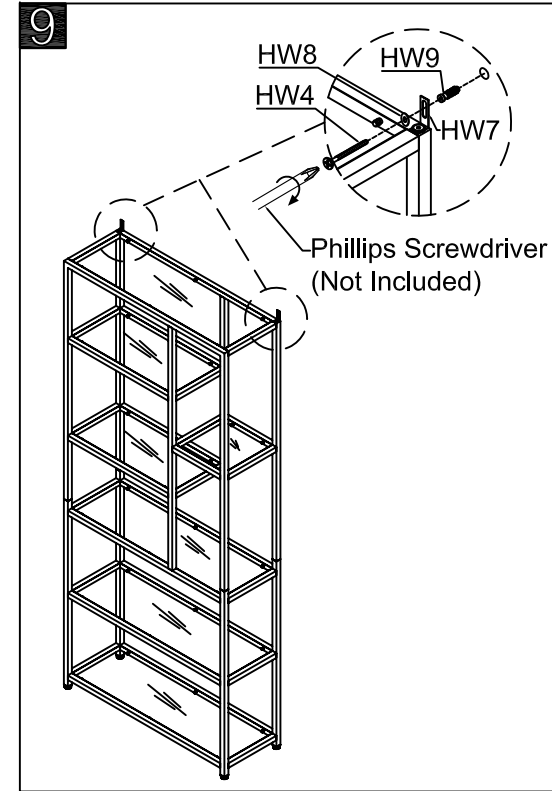

Step 9

Drill pilot hole on the wall, tap anchors (HW9) into pilot holes. Fasten L-shape bracket (HW7) to wall with screw (HW4), flat washer (HW8) by use of Phillips screwdriver as shown in drawing.