






Item No. DT666

Assembly Instructions





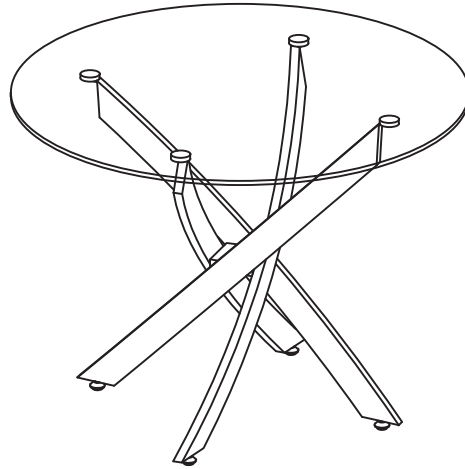


Please install the products on carpet or soft place

Parts List


NO.	Sketch	Description	Qty
A		Glass Top	1
B		Leg	4
C		Iron Box	1
D		Adjustable Feet	4

Hardware List


NO.	Sketch	Description	Qty
1		Bolts M8x16	8
2		Bolts M8x8	4
3		Offset Ring Spanner	1
4		Allen Key	1
5		Washer 8x18	4

STEP 1


The hole spacing corresponds to the leg

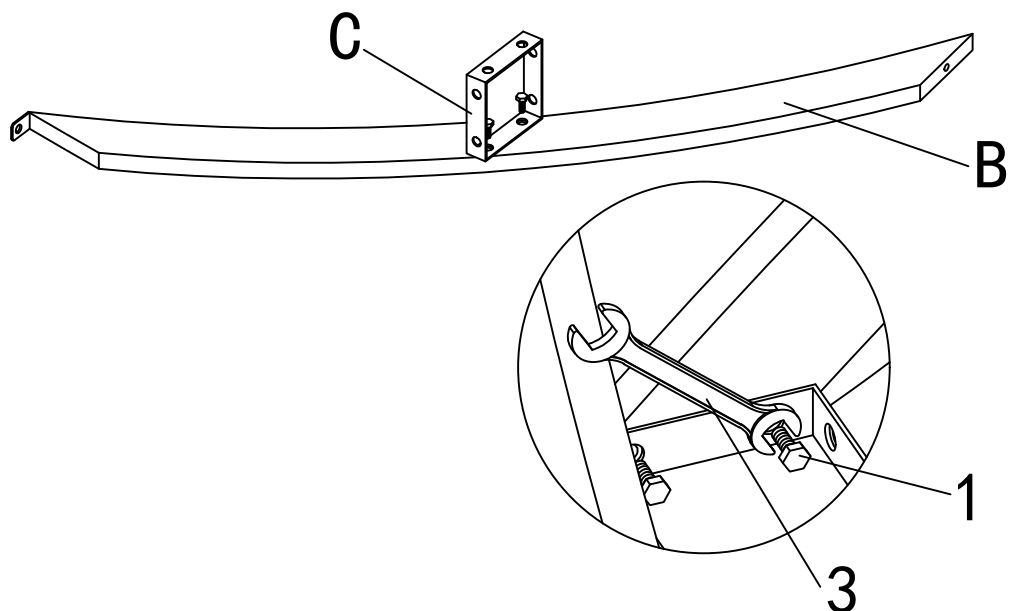


Note: The opening direction of the box should be consistent with the picture

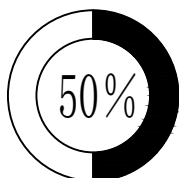


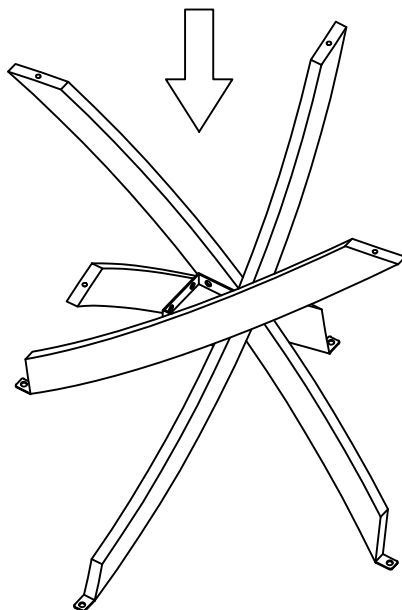




50% tighten all the screws

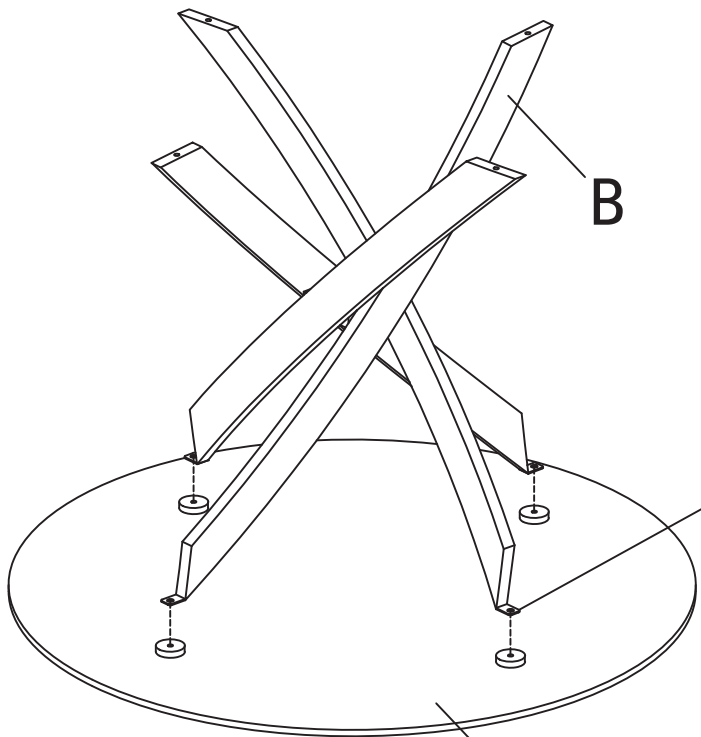


STEP 2



- 4 
- 2 
- 5 

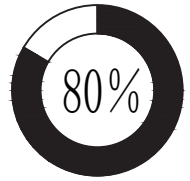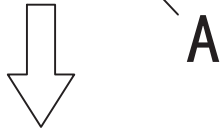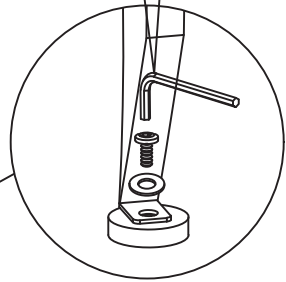


80% tighten all the screws


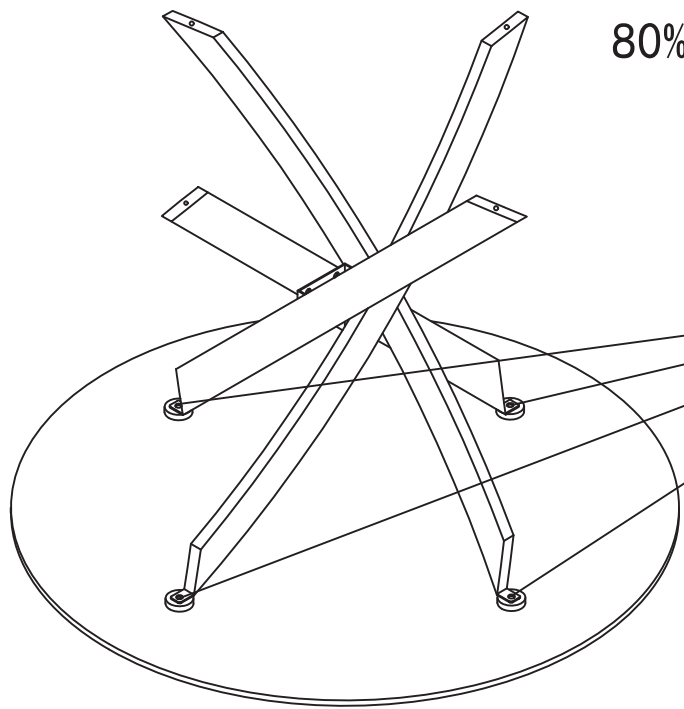


STEP 3

1.

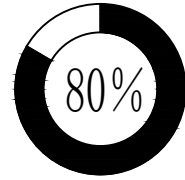


80% tighten all the screws

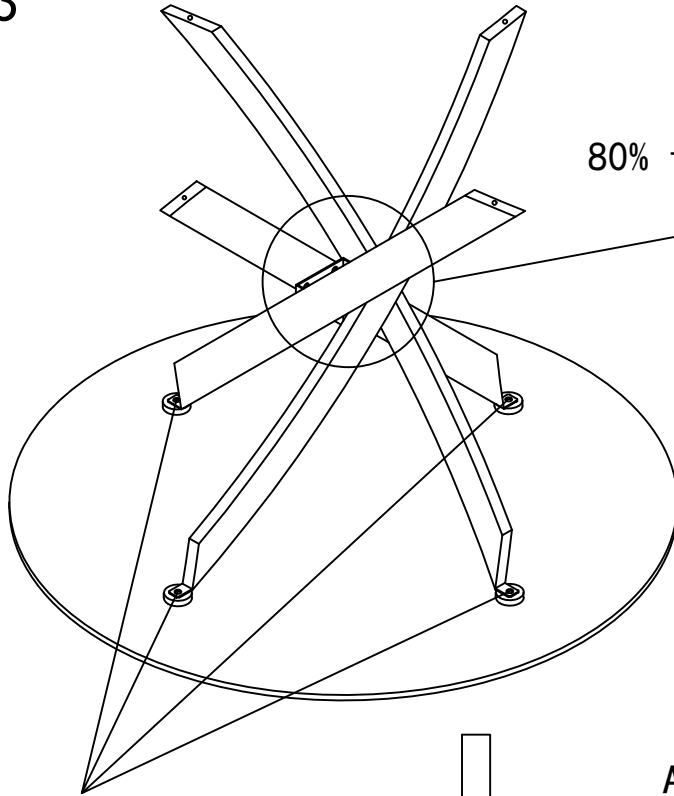


After aligning feet


2.

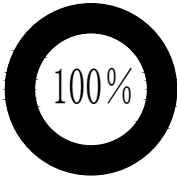

Tighten all the screws

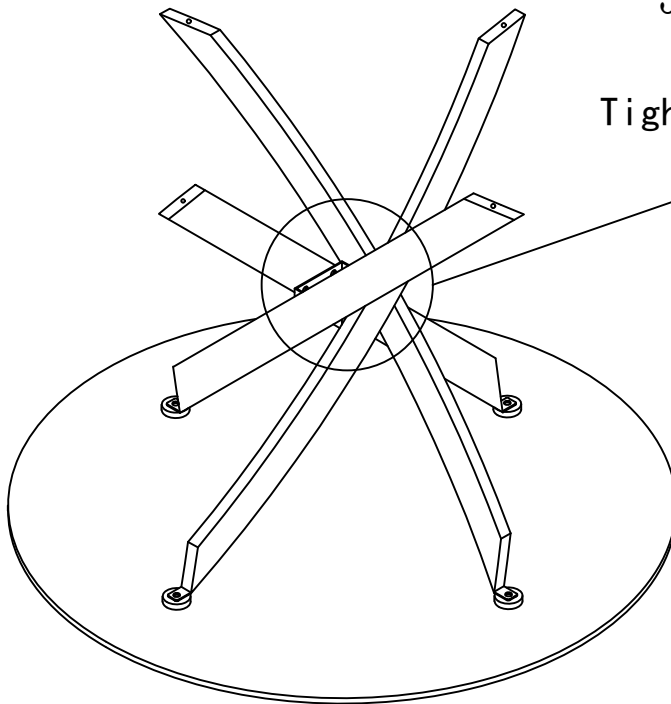


3.

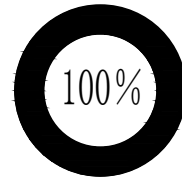

Tighten all the screws

STEP 4

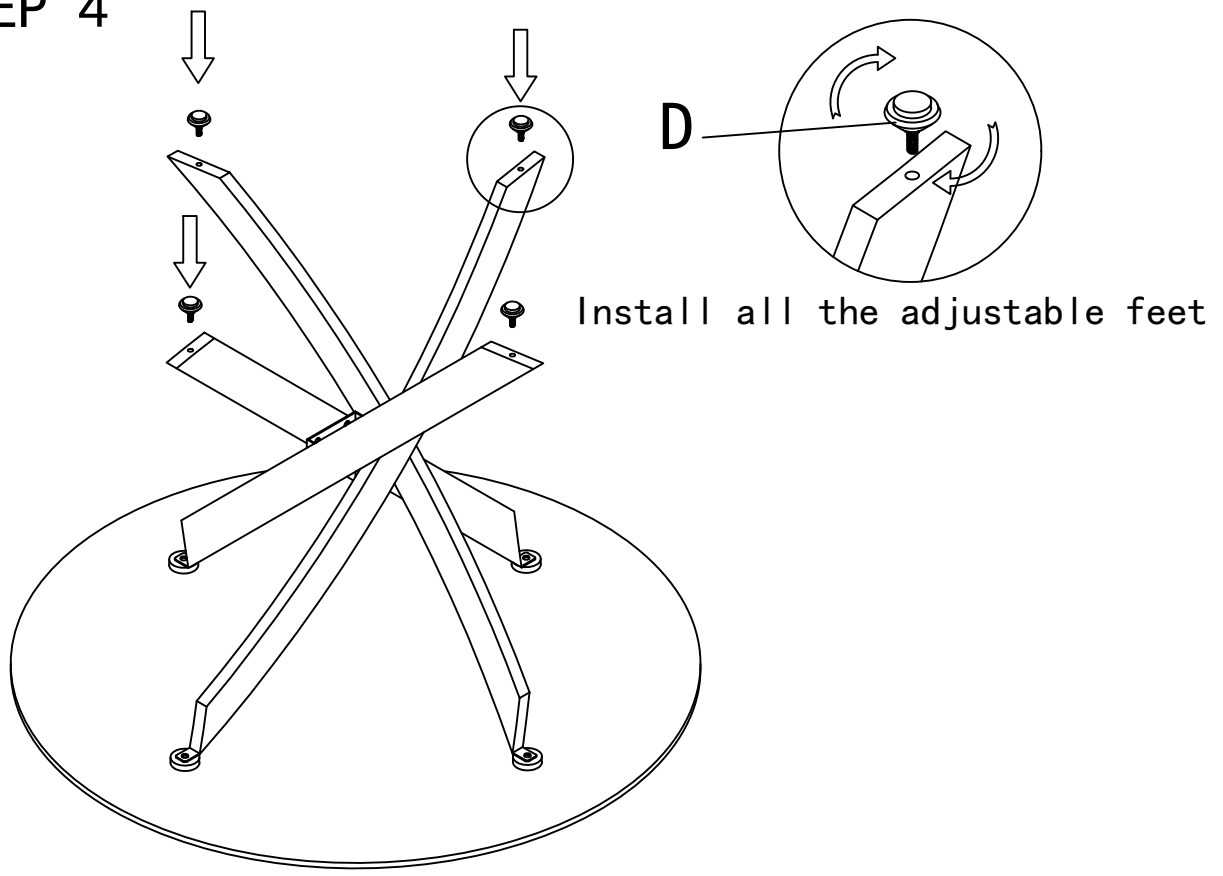

COMPLETED

