


PLASTIC GARDEN SHED 8x10FT


Instructions for Assembly

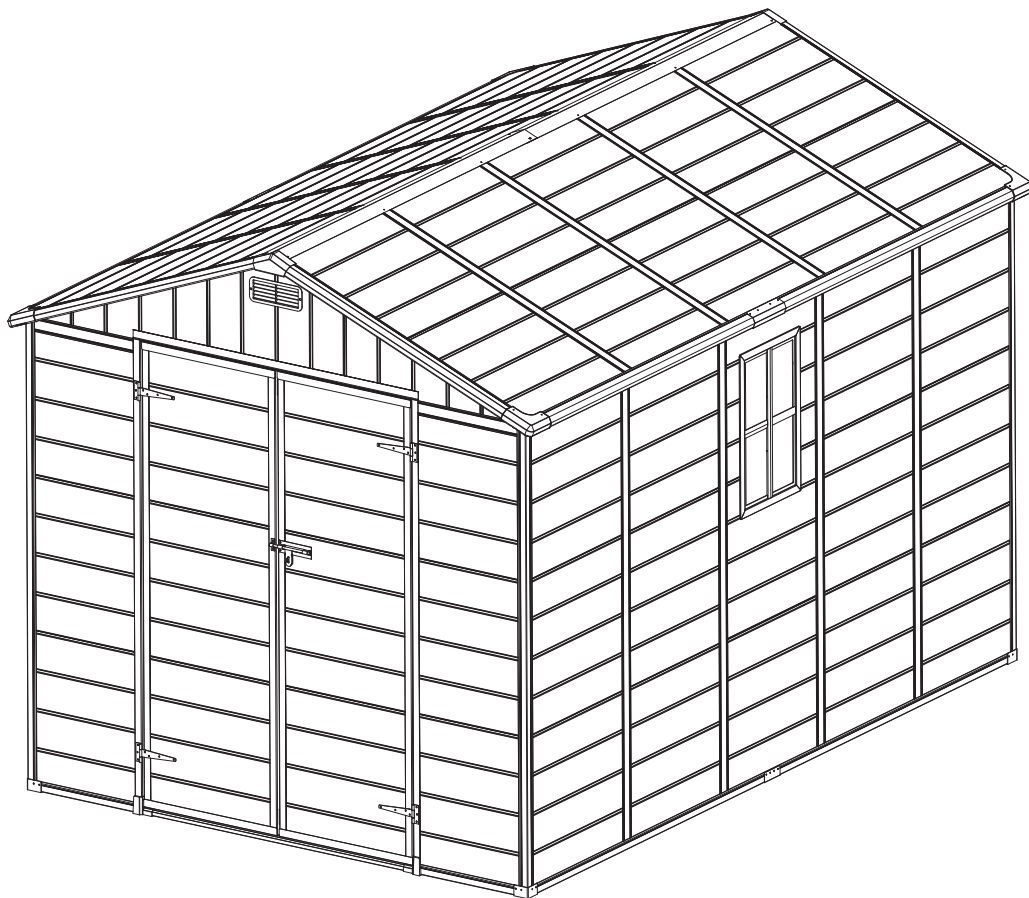

WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo

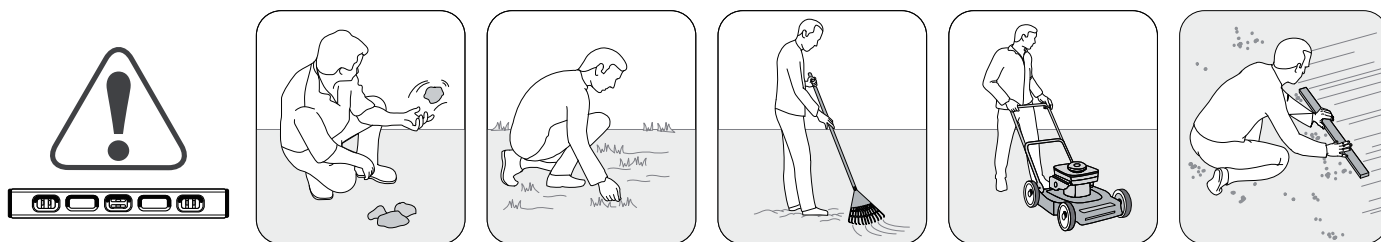

Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação


Option | Opción | optie | opzione | opção

A

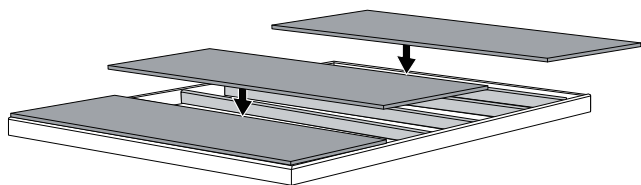


Option | Opción | optie | opzione | opção

B

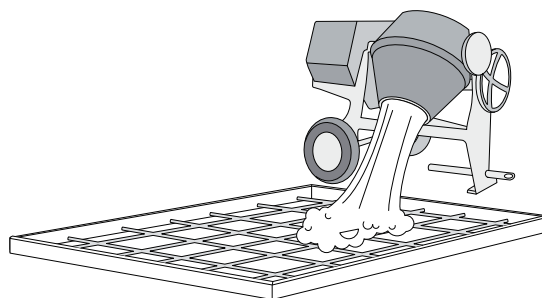

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:

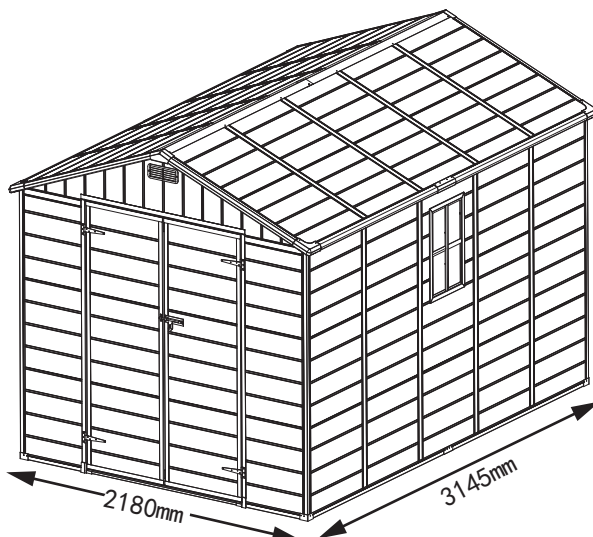

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | ANTES DE EMPEZAR EL ARMADO | VOR MONTAGEBEGINN | VOORDAT U BEGINT TE MONTEREN | PRIMA DI INIZIARE L'ASSEMBLAGGIO | ANTES DE INICIAR A MONTAGEM

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.


Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | HERRAMIENTAS NECESARIAS | BENÖTIGTE WERKZEUGE | BENODIGD GEREEDSCHAP | ATTREZZATURA OCCORRENTE | FERRAMENTAS NECESSÁRIAS



SPATULA | SPATULE | ESPÁTULA | SPACHTEL | SPATEL | SPATOLA | ESPÁTULA

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.



SG8 x2



ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | SE NECESITAN DOS PERSONAS PARA ARMARLO | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | MONTAGE VEREIST TWEE PERSONEN | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | A MONTAGEM EXIGE DUAS PESSOAS

PARTS LIST

NO.	PART.	Qty.
QF1-2		5
QF1-1		15
QP2		4
QP1		2
QP3		2
DP4		1
QP8		8
SG19		3
SG6		4
SG7-1		1
SG7-2		1
QW1-2		2
QW1-3		2
QW1-1		26
QW2-2		2
QW2-1		4
QW3-1		4
QW3-2		2
QT1-1		1
QT1-2		1
QT1-3		1
QT1-4		1
QT1-5		1
QT1-6		1
QT1-7		1
QT1-8		1
QT1-9		1
QT1-10		1



NO.	PART.	Qty.
DP5		4
PS1		8
PPA1		8
QAP1		2
PPA2		1
QAP3		2
QA3		1
DA1L		1
DA1R		1
SS4		1
SS3		1
SS6		1
PS5		2
QS2		1
BY		2
SG27		2
SG14		4
SG10		2
SG101		2
SG102		2
QR1-2		12
QR1-1		8
QP5		4
QP4		4
QAP2		8
CS2-2		8
CS4-1		4
10-1		2

NO.	PART.	Qty.
10-2		2
SG1		2
SG2		4
DD1-1		1
DD1-2		1
DD1-3		1
DD1-4		1
DD1-5		1
DD1-6		1
DA4		2
DS1		2
DA1		1
DA2		1
DA2R		1
DA2L		1
SG9		5
SG8		2
M01		4
M03-6L		1
M03-7		1
M04		1
Drill		1
DC		2
Z410		233
Z420		182
ZW413		120
Z425		4
RF7		4
SG20		2




- Use spatula  (part "SG8") for easier insertion of panel into profile.
- Please ensure the panels are all installed on position before screwing.
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.




FLOOR ASSEMBLY

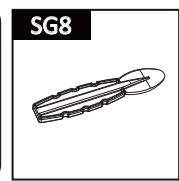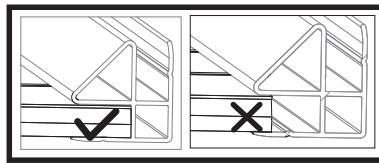



● Fully fit the panel inside the profile

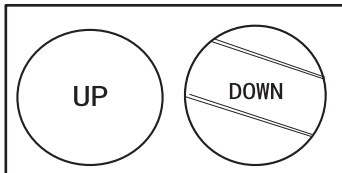

● The crease line of the floor must be underneath

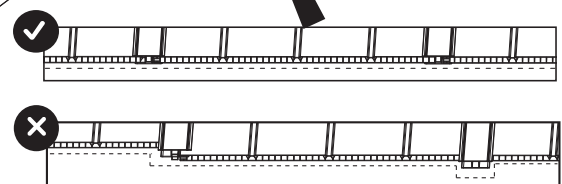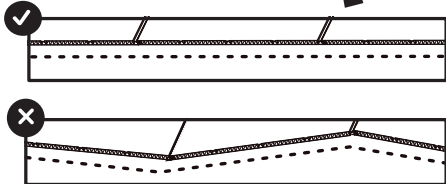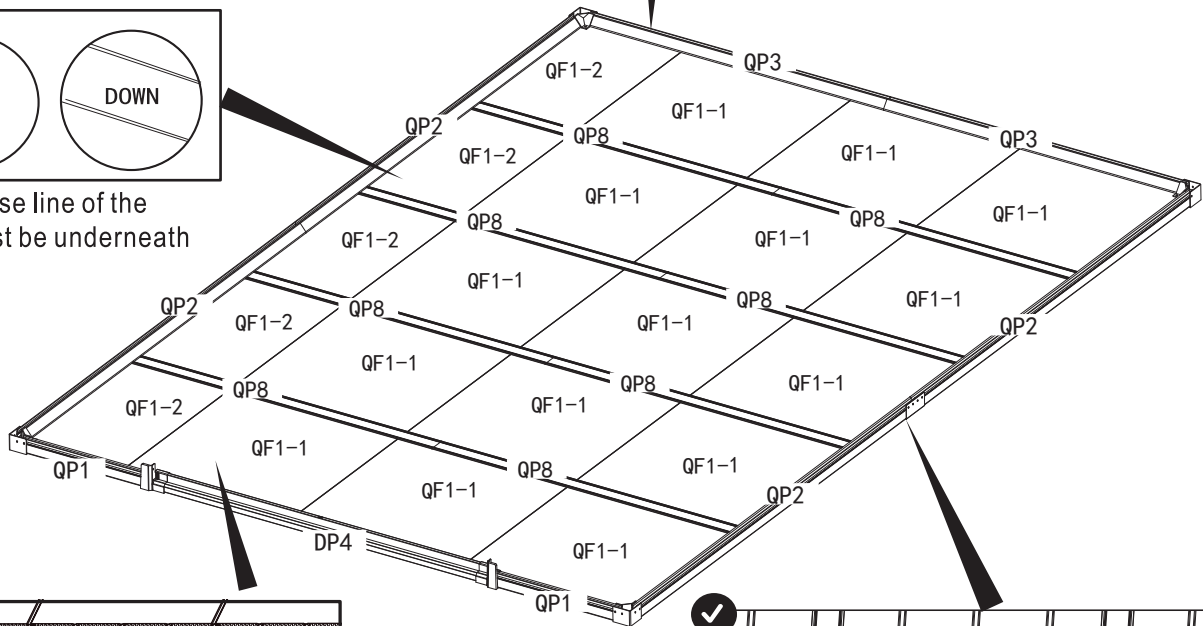


When installing the floor, when the textured face up to have the floor installed in a flat state.

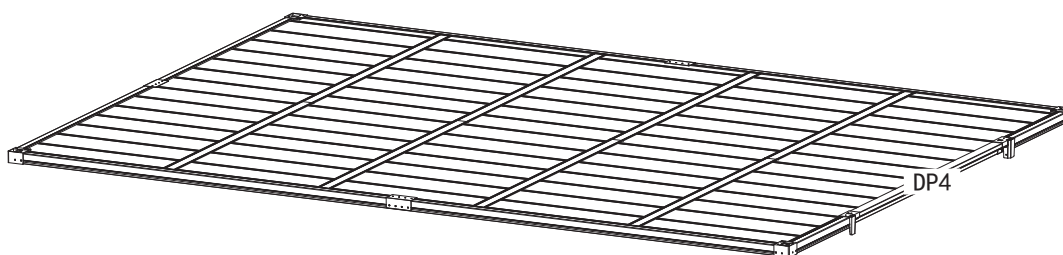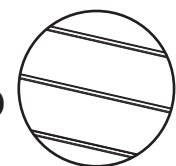

Step 1


1-1

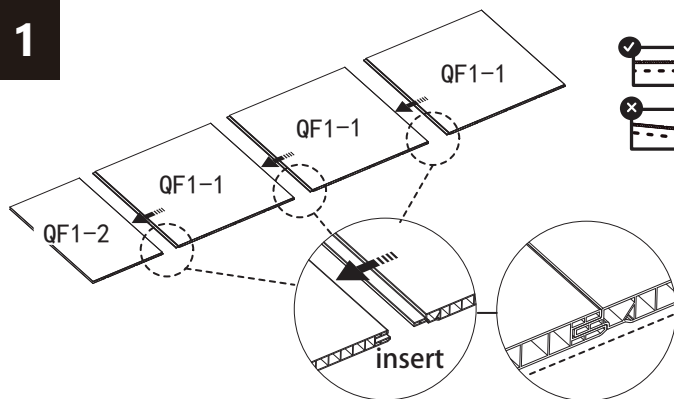

SG8




QF1-1



3 PC

QF1-2



1 PC

QP3




2 PC

SG6




2 PC

1-2

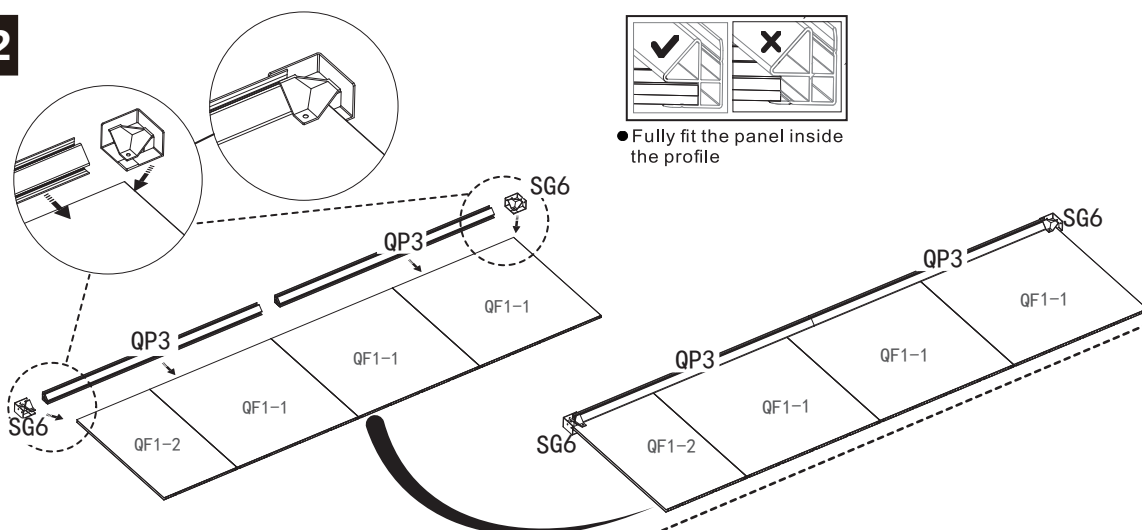

Step 2

2-1

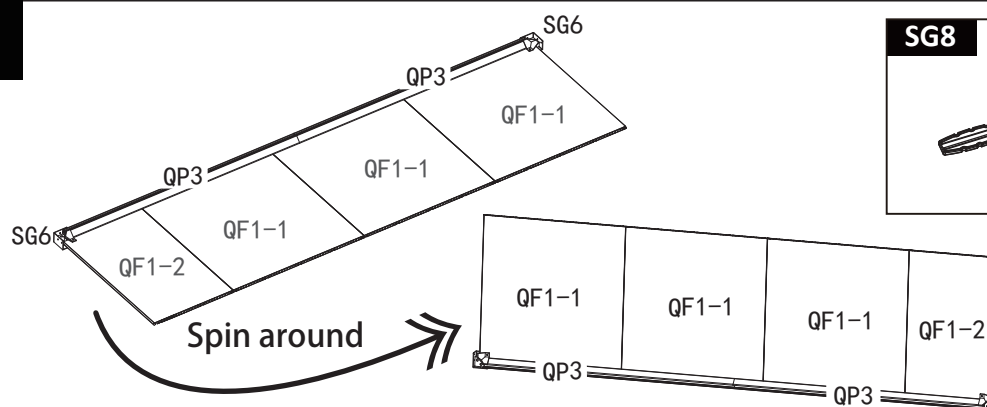

SG8



QP2




1 PC

QP8




2 PC


2-2




• Fully fit the panel inside the profile

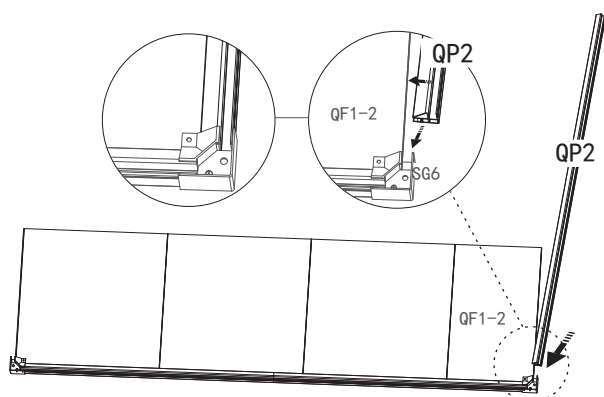

2-3




• Fully fit the panel inside the profile

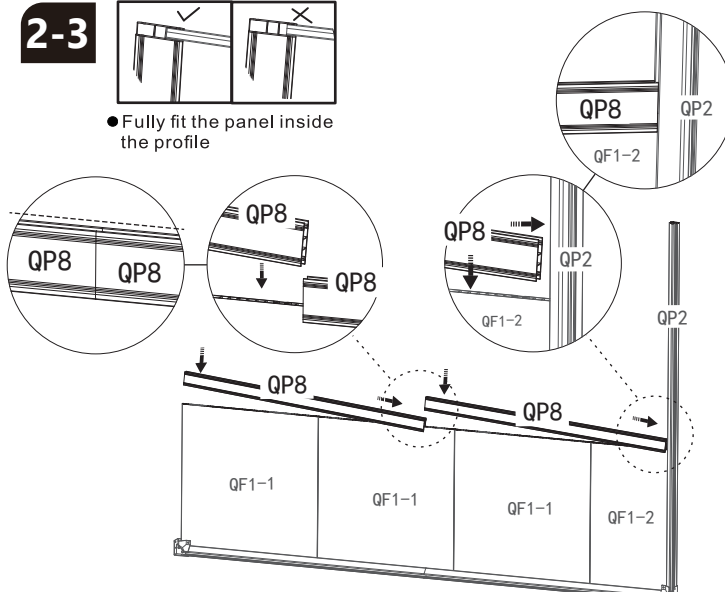


Step 3


3-1

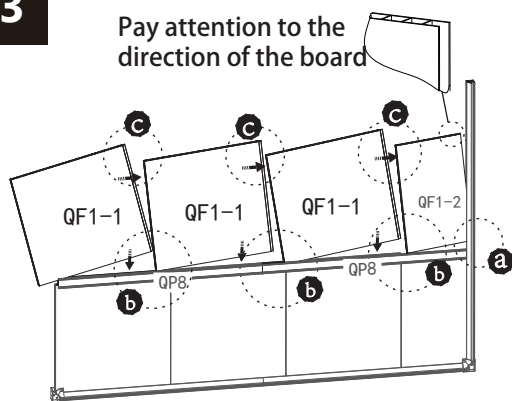

3-2

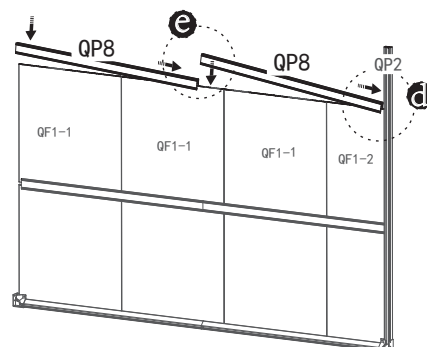


QF1-1



6 PC

QF1-2



2 PC

QP8



2 PC

QP2




1 PC

SG8




3-3

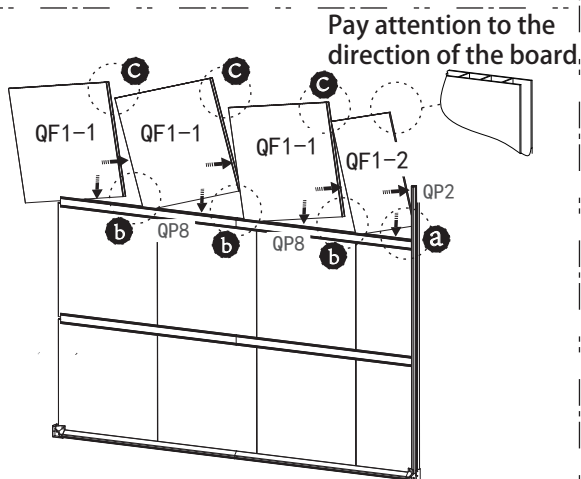


3-4



Make sure the sheet is installed in place

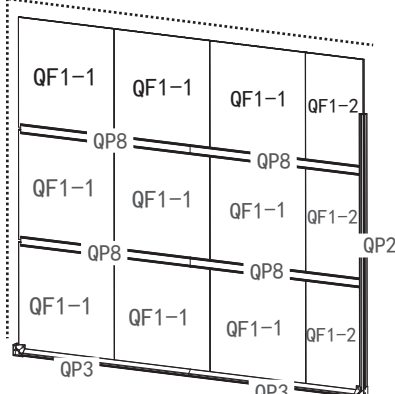


3-5

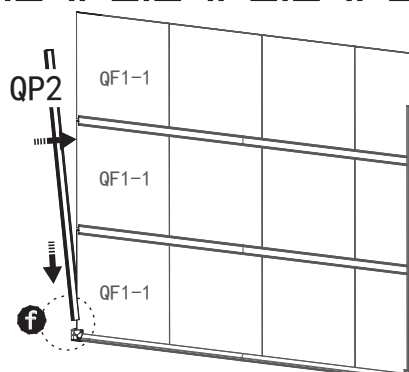








3-6

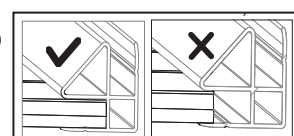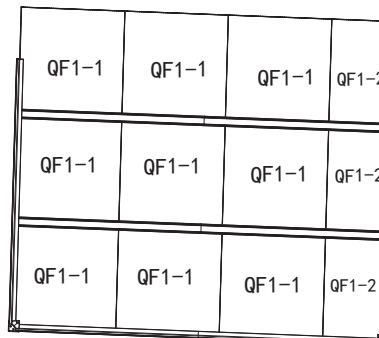

● Fully fit the panel inside the profile

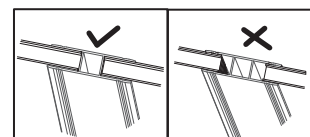


● Fully fit the panel inside the profile

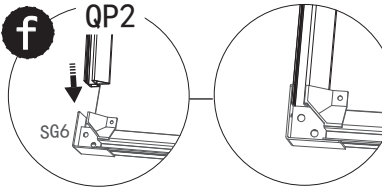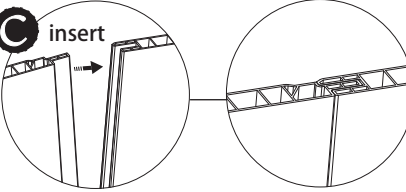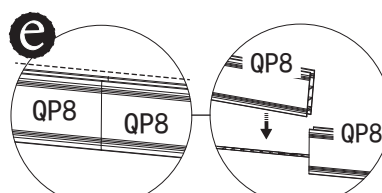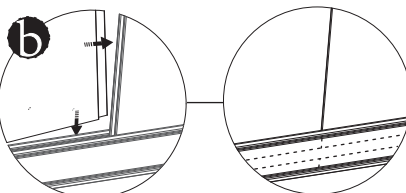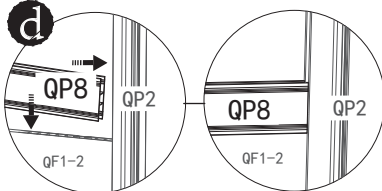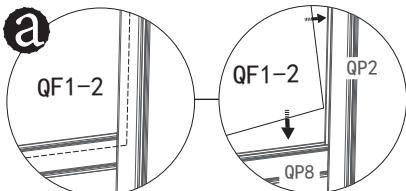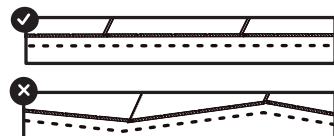


Step 4

4-1

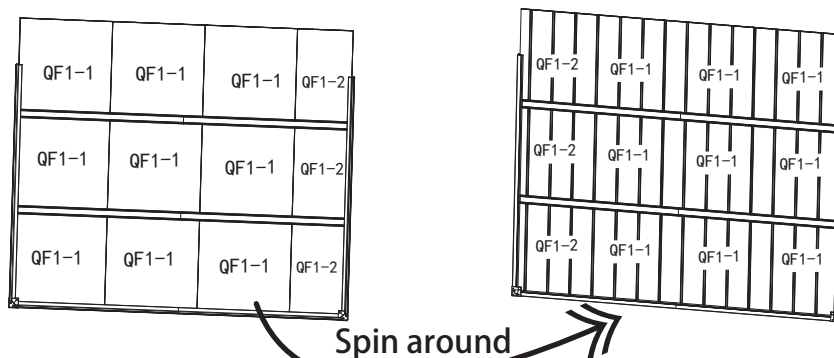


4-2

● This step is crucial, otherwise it may result in incorrect installation.

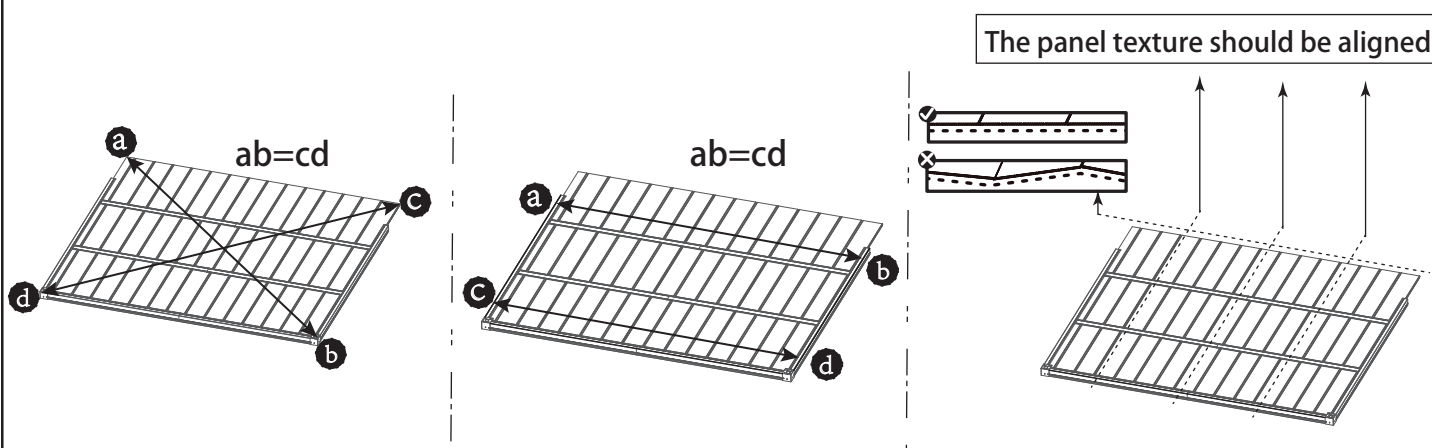

Step 5

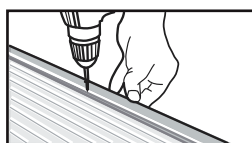


Screw along the marked lines in profile

Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.



SG19



1 PC

Z410




16 PC

Z420




18 PC




5-1

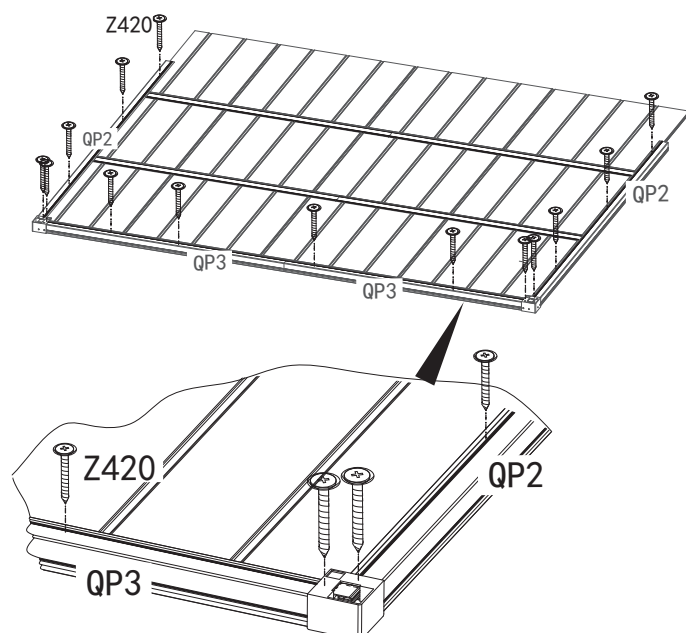


5-2

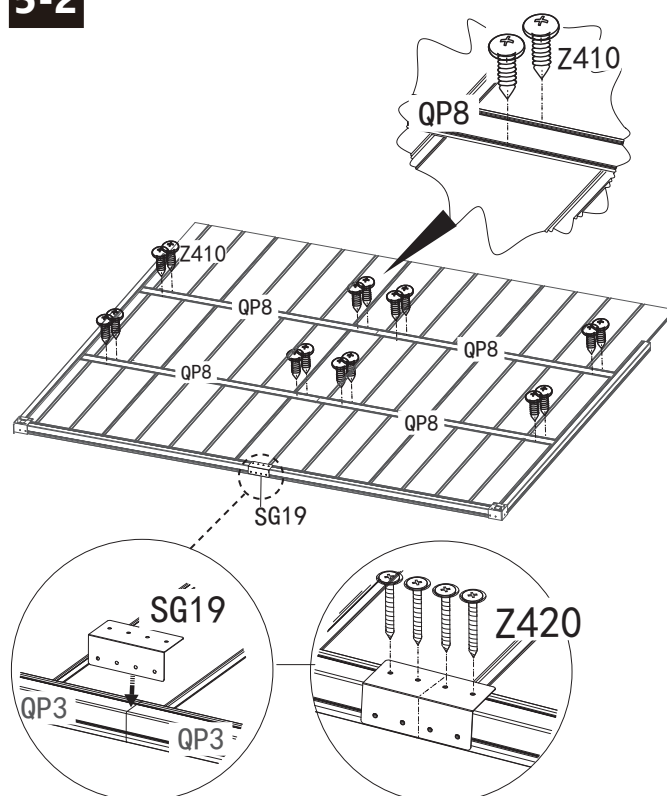


Step 6

Z420	SG19	QP2	QF1-2	QF1-1	QP8
					
4 PC	1 PC	2 PC	2 PC	6 PC	4 PC


6-1

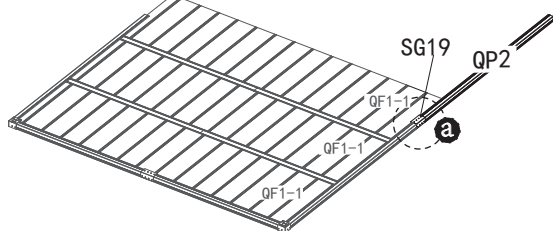


6-2

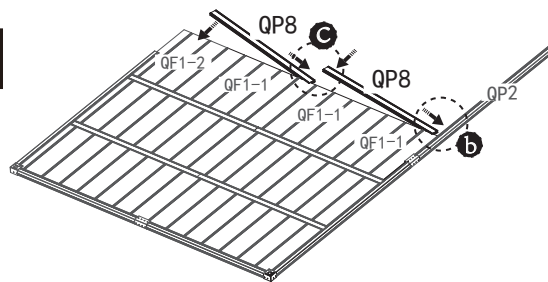


6-3

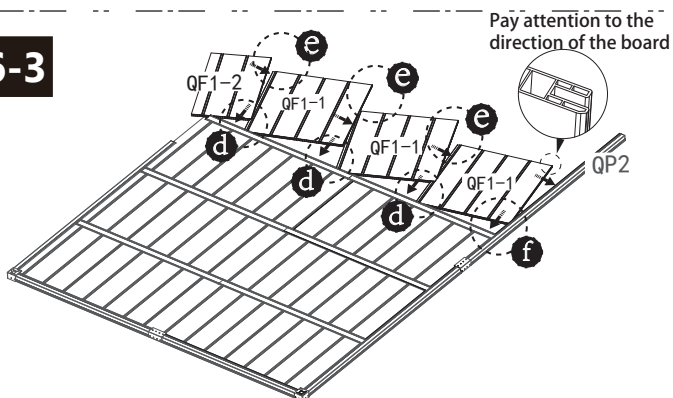



6-4

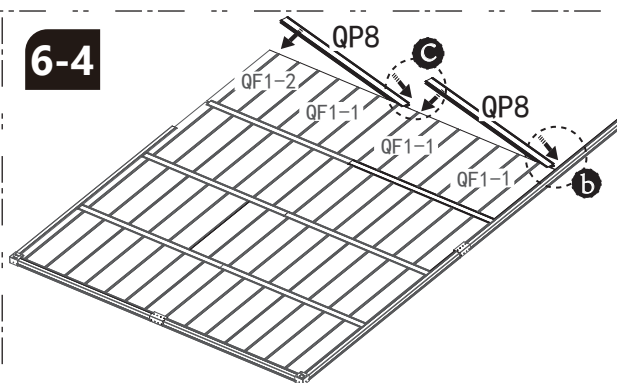

6-5




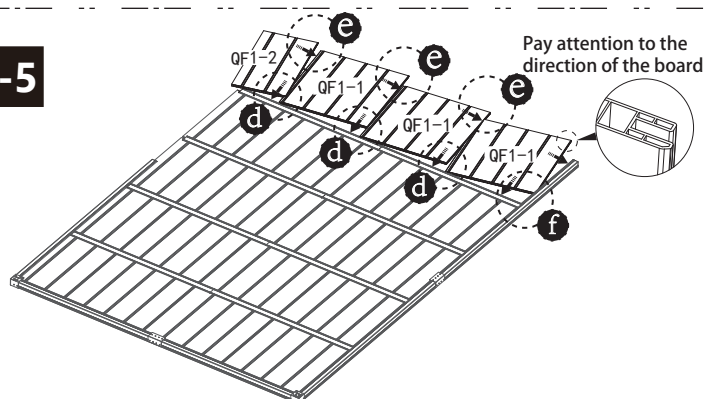


6-6

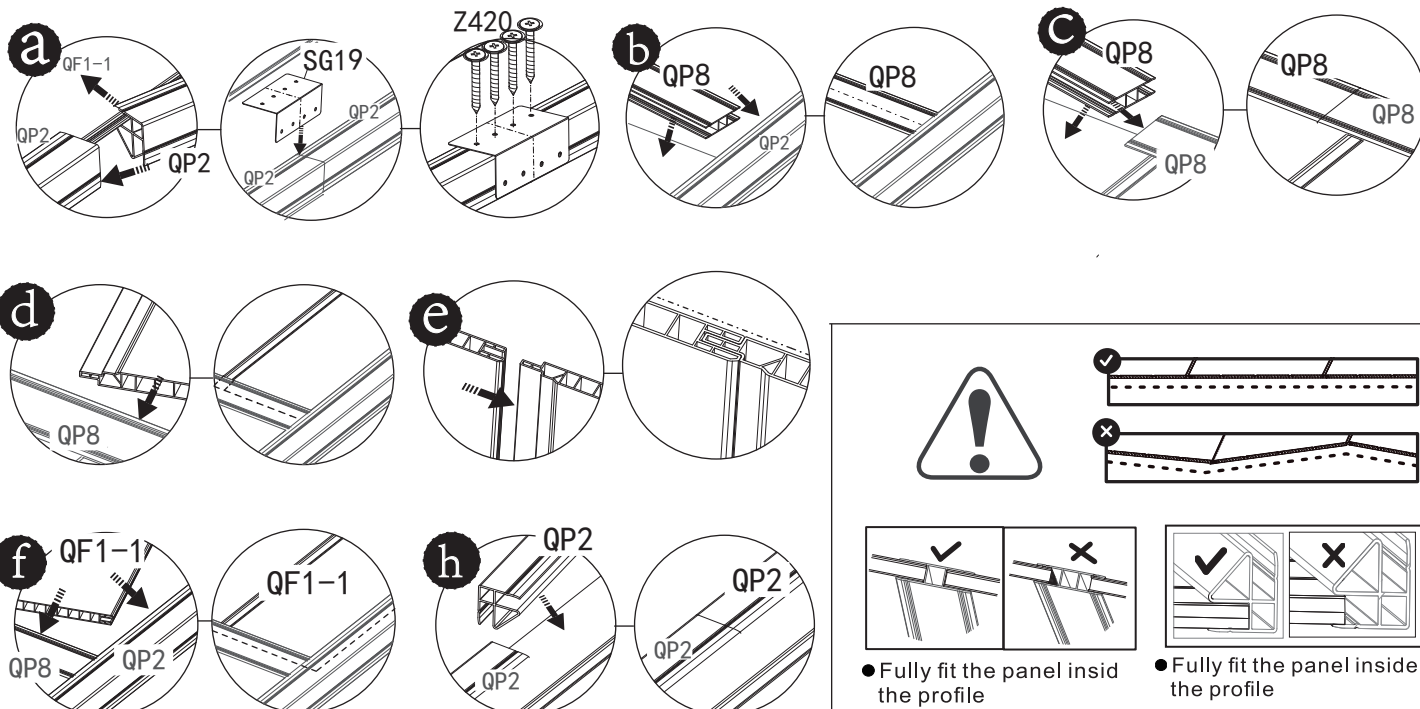
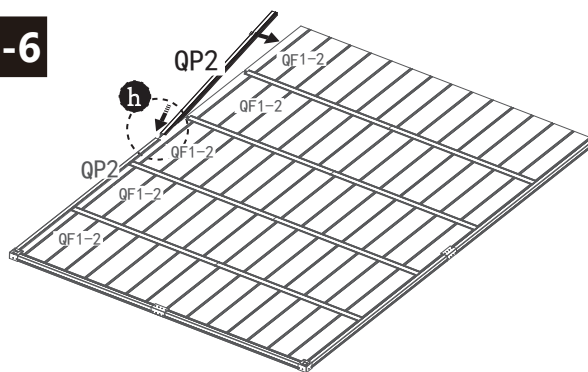


Step 7


● This step is crucial, otherwise it may result in incorrect installation.

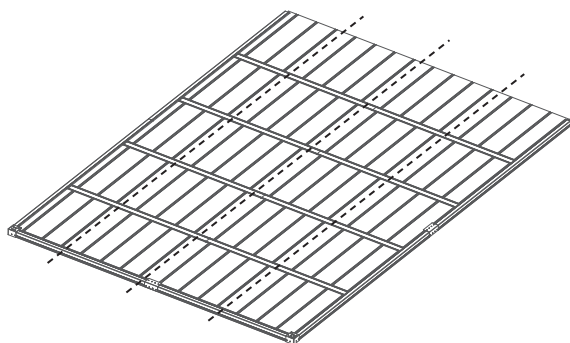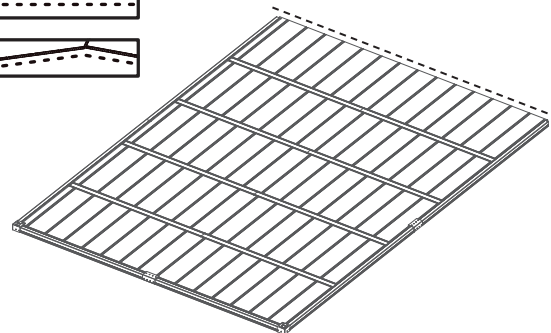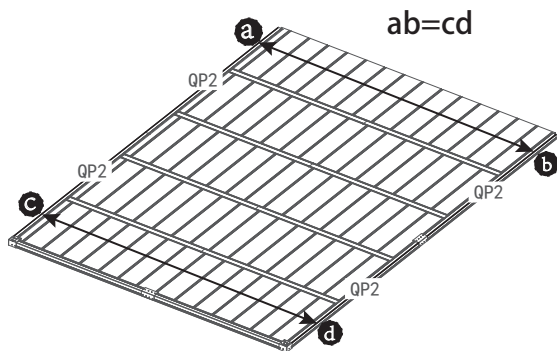

The panel texture should be aligned

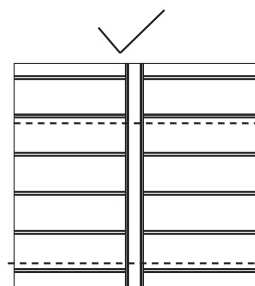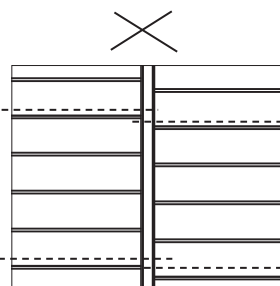

Step 8

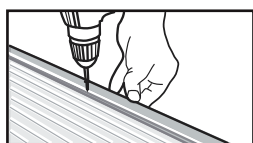


Screw along the marked lines in profile

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.



SG19



1 PC

Z410





16 PC

Z420



10 PC

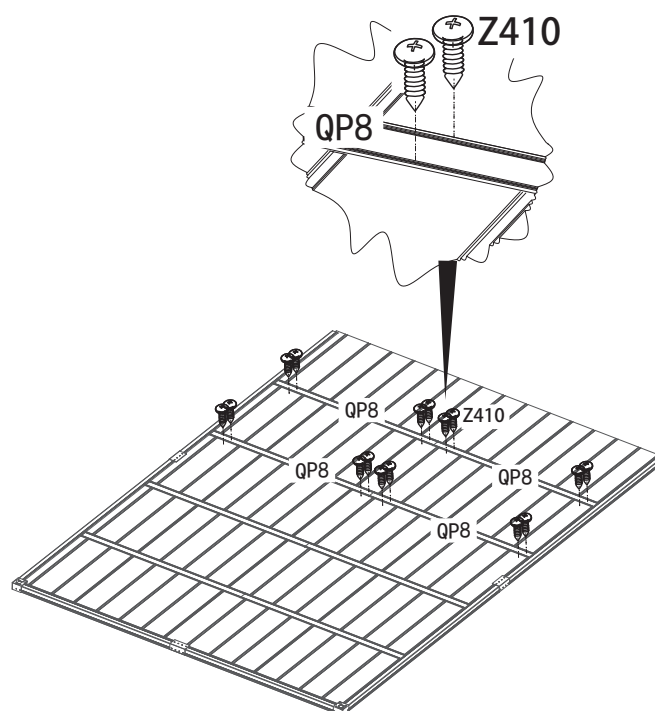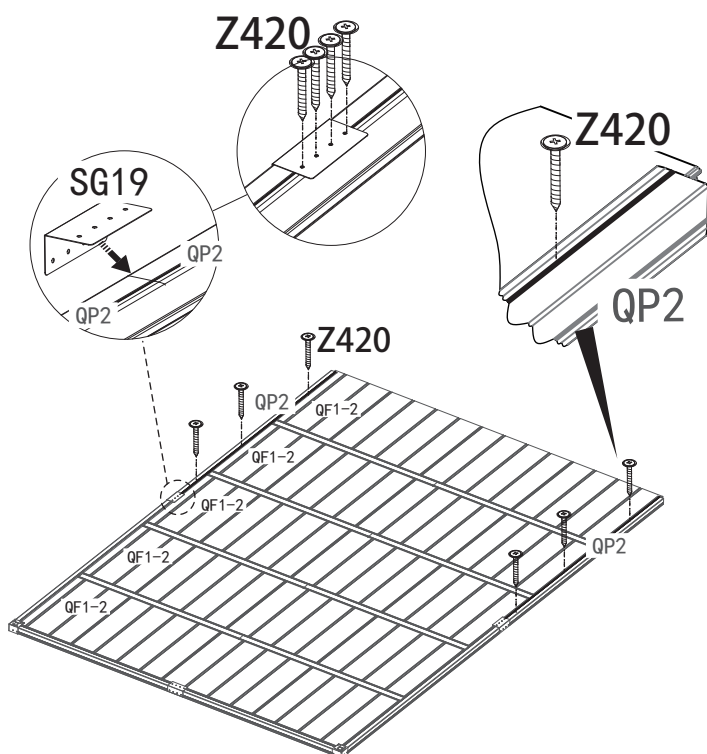

Step 9

SG8



SG7-2



1 PC

DP4



1 PC

SG7-1



1 PC

QP1






2 PC

SG6




2 PC


9-1

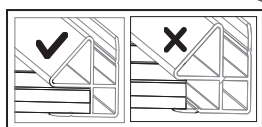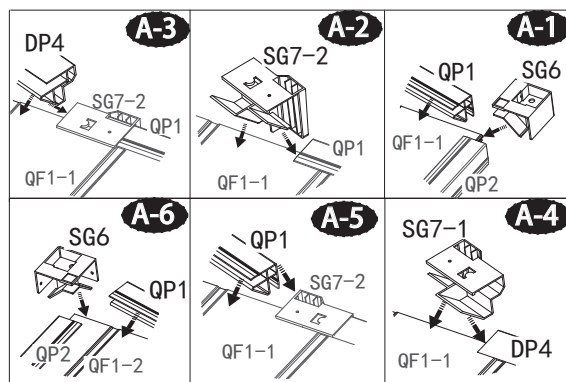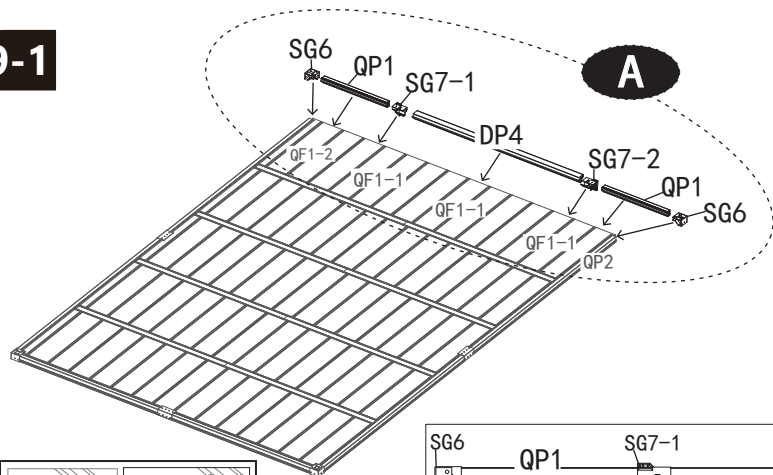

● Fully fit the panel inside the profile

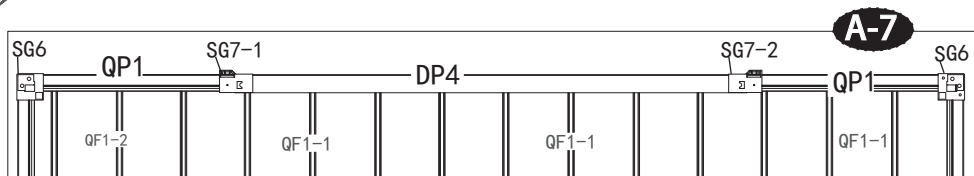

9-2

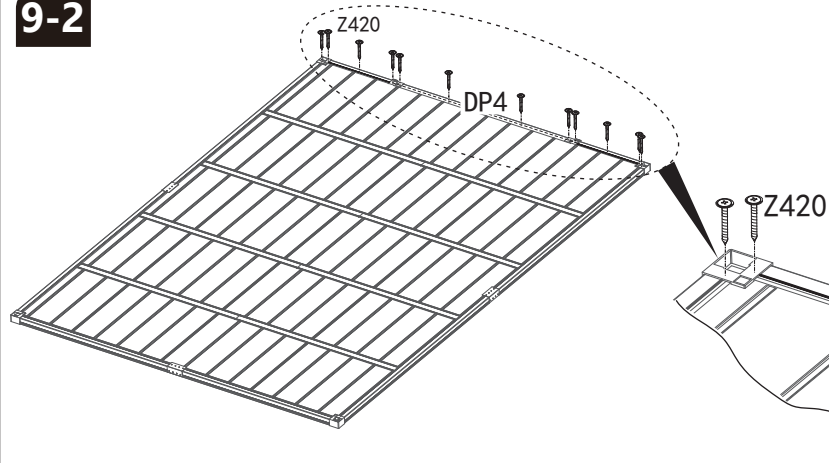

Caution:
Please use Drill to predrill a hole at depth 1mm before screw.




Z420




12 PC

9-3

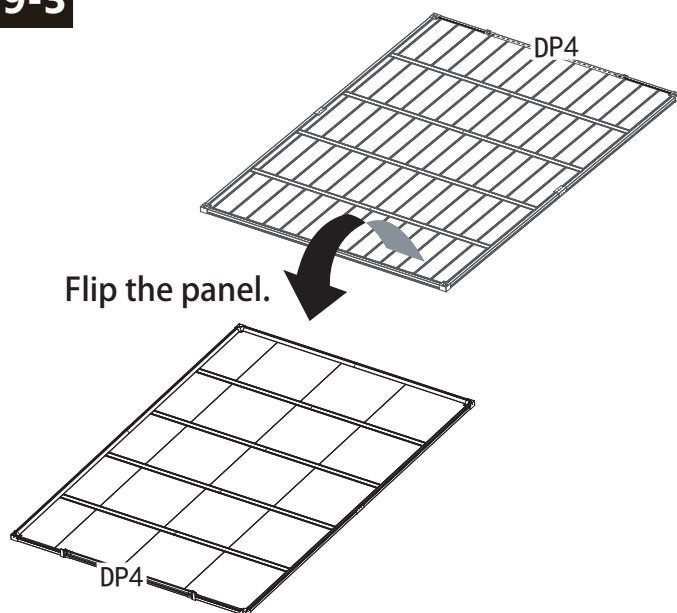

Flip the panel.

9-4

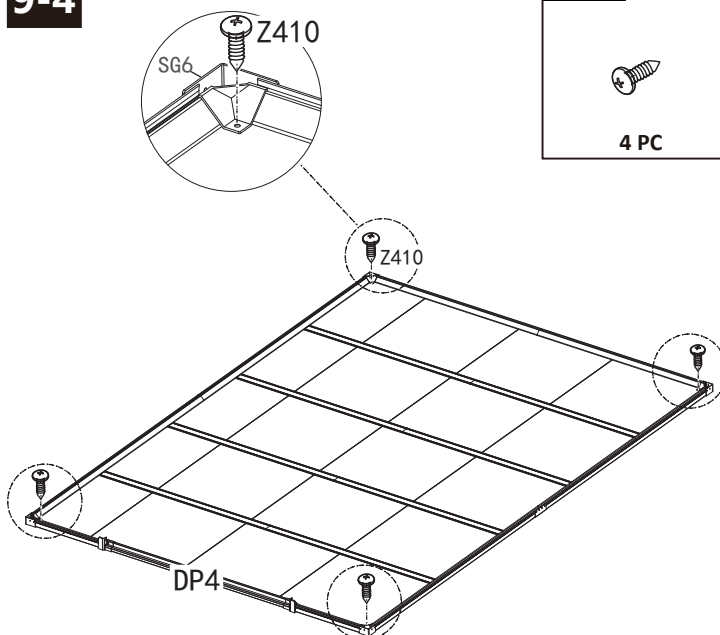


Z410



4 PC

WALL ASSEMBLY

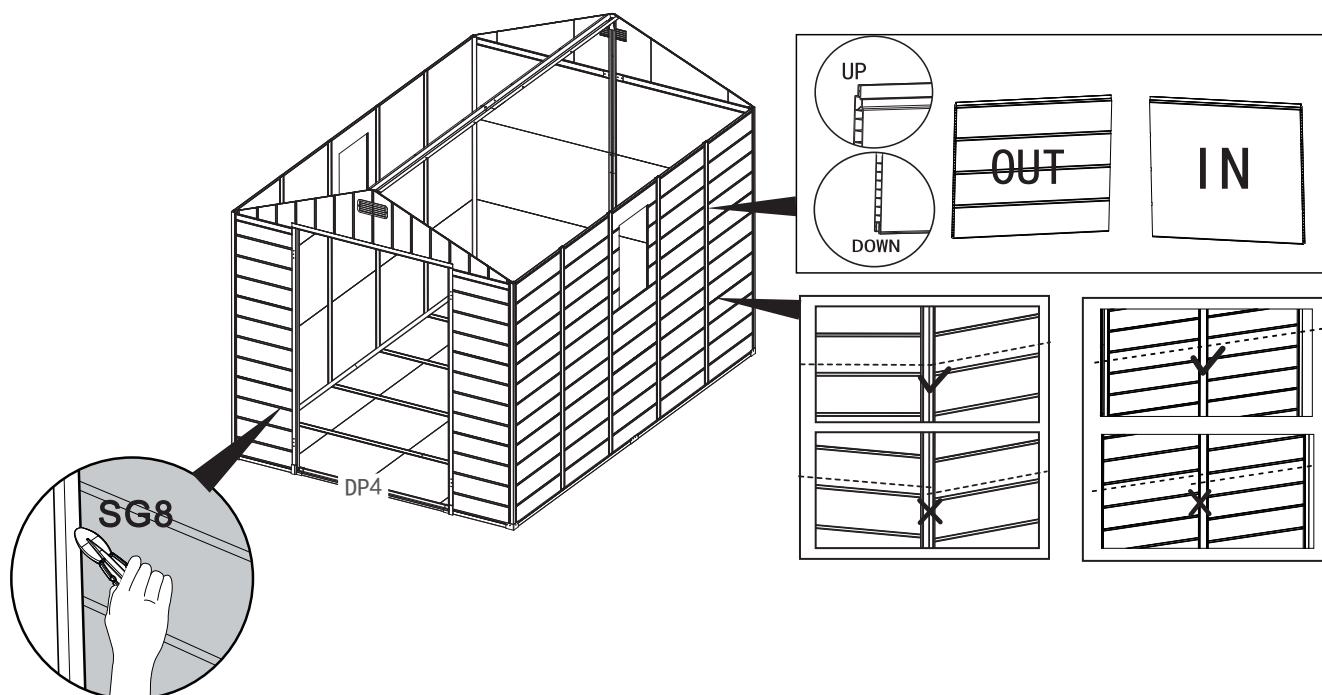

Step 10


SG8



DP5



1 PC

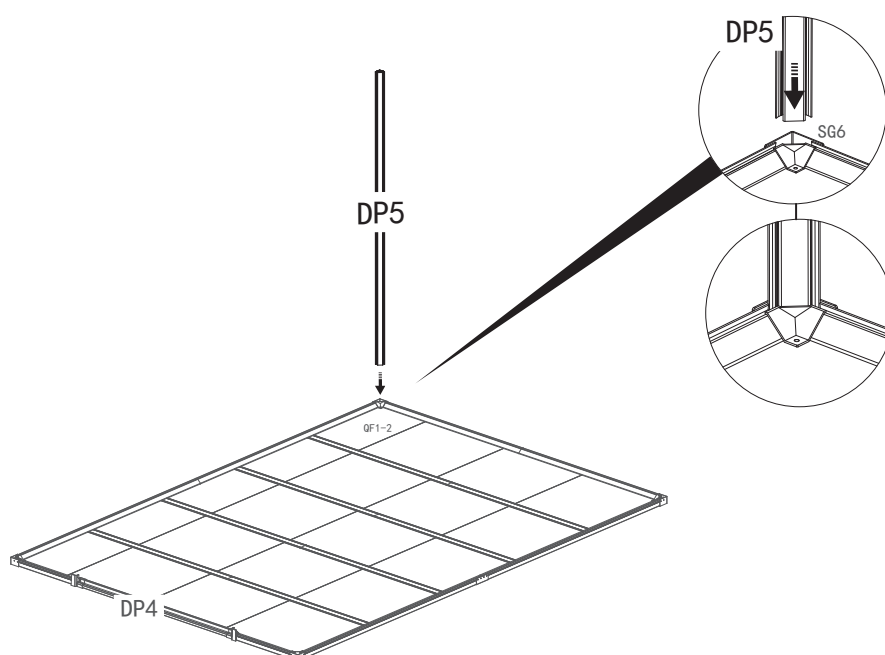

Step 11

DP5



1 PC

PPA2



1 PC

PPA1



1 PC

QW2-2




2 PC

QW2-1




4 PC


QW1-1



6 PC

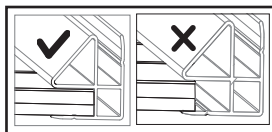

● Fully fit the panel inside the profile

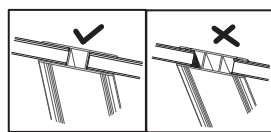


● Fully fit the panel inside the profile


SG8




11-1

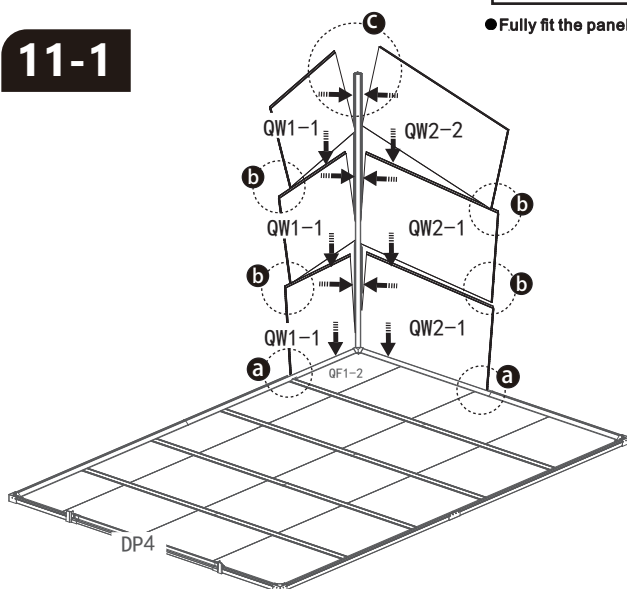










11-2

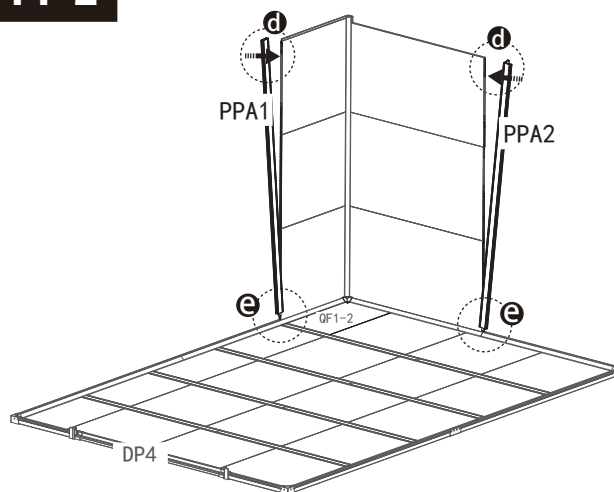


11-3

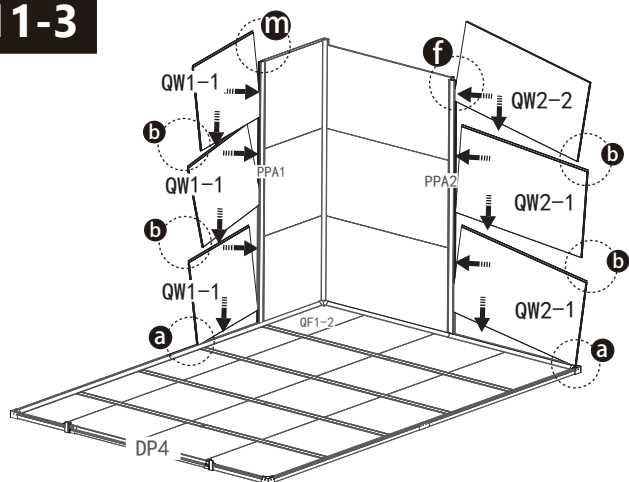


11-4

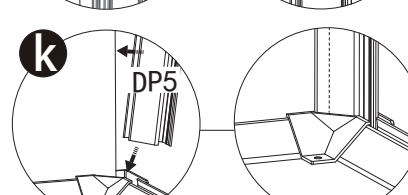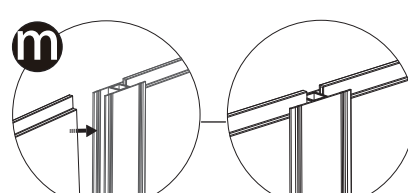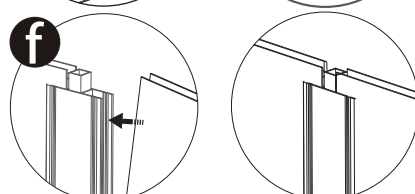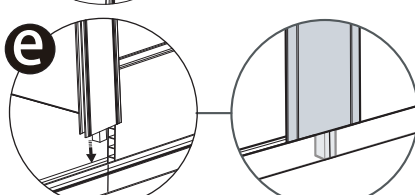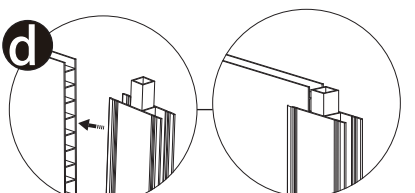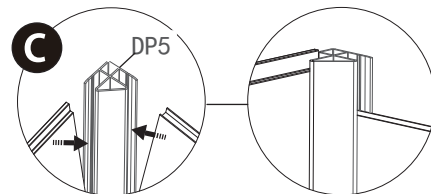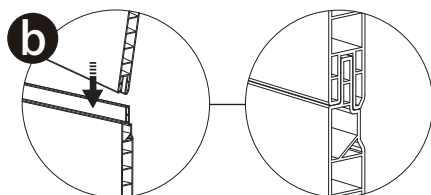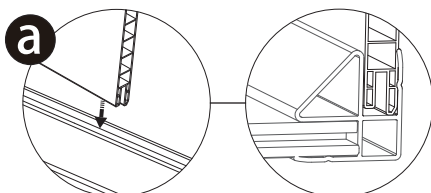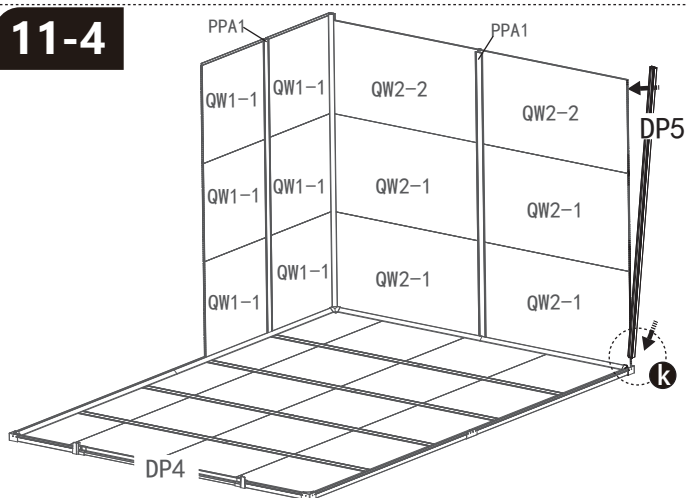

Step 12

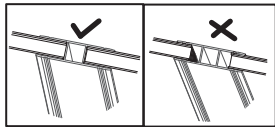

● Fully fit the panel inside the profile

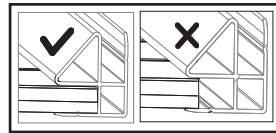

● Fully fit the panel inside the profile

PPA1



5 PC

QW1-2



2 PC

QW1-3



2 PC

QW1-1




8 PC


SG8




12-1

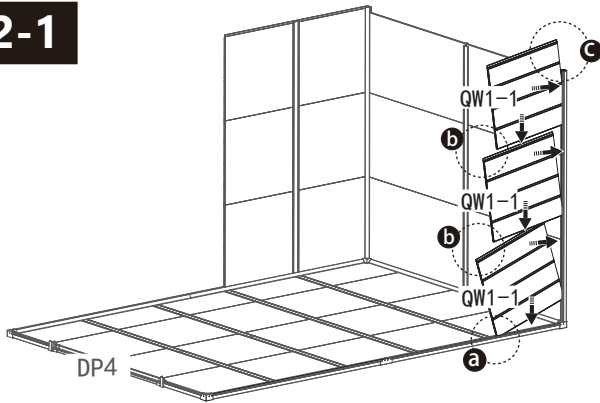


12-2

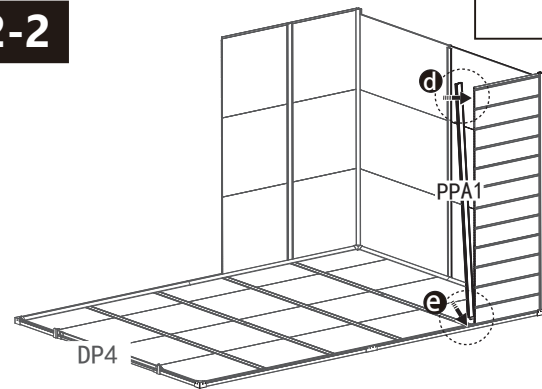


12-3

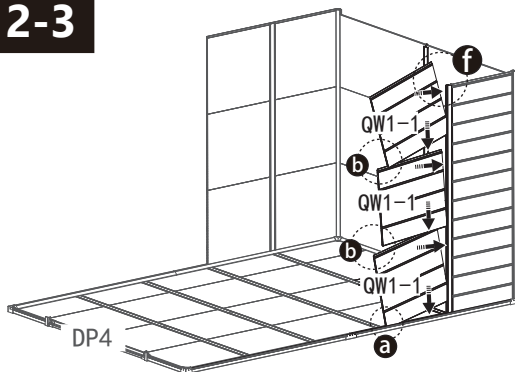














12-4

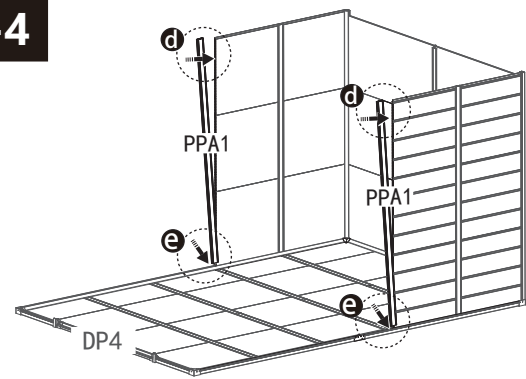


12-5

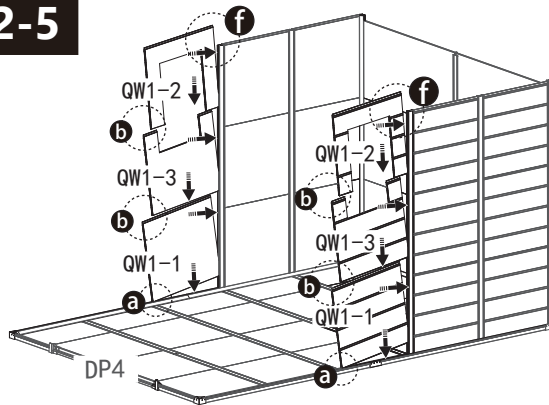

12-6

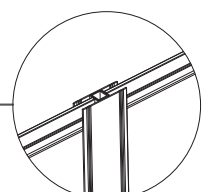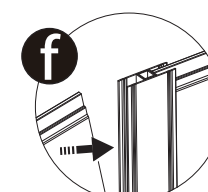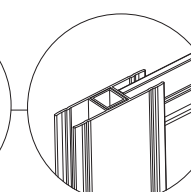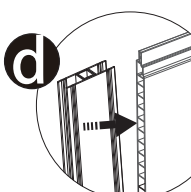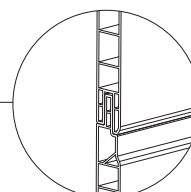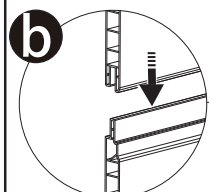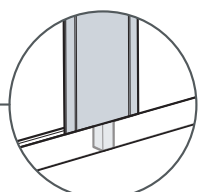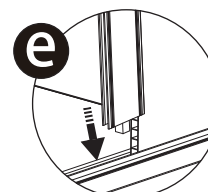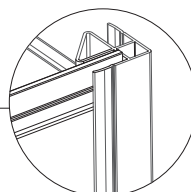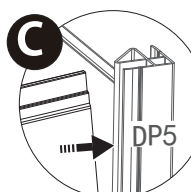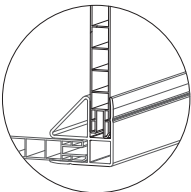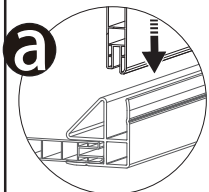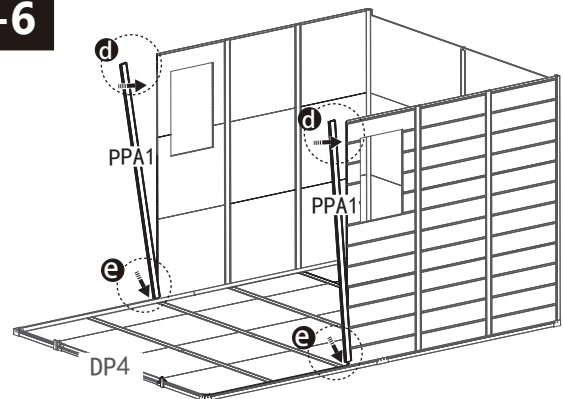

Step 13

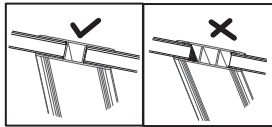

● Fully fit the panel inside the profile

SG8



QPA1




2 PC

PPA1




2 PC

DP5




2 PC

QW1-1




12 PC

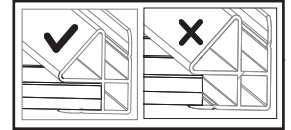


● Fully fit the panel inside the profile


13-1

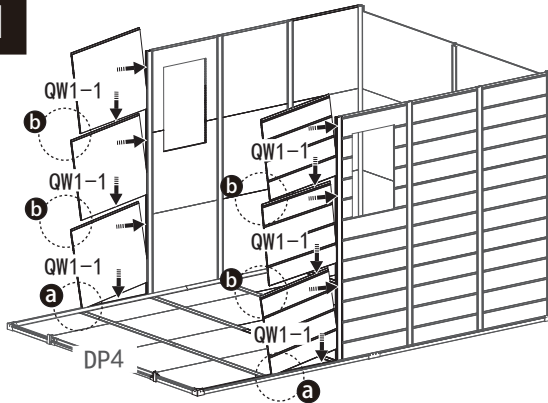


13-2

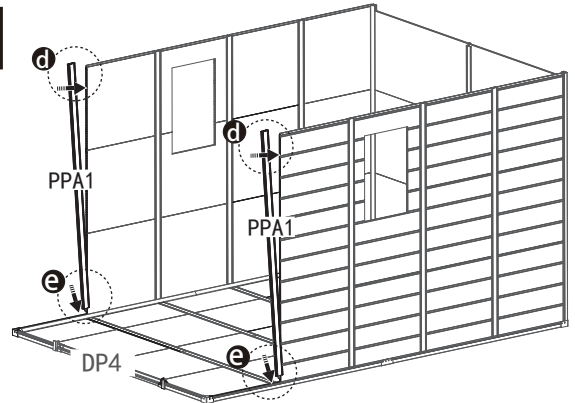














13-3

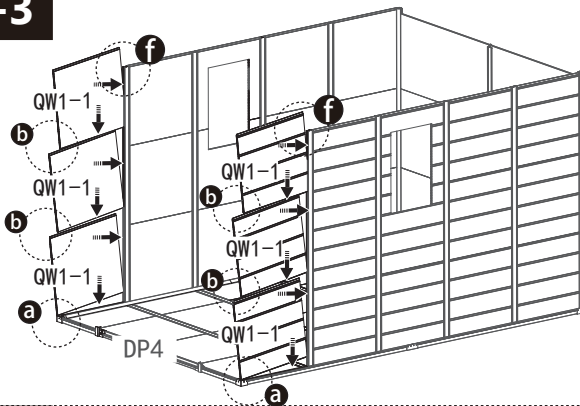



13-4

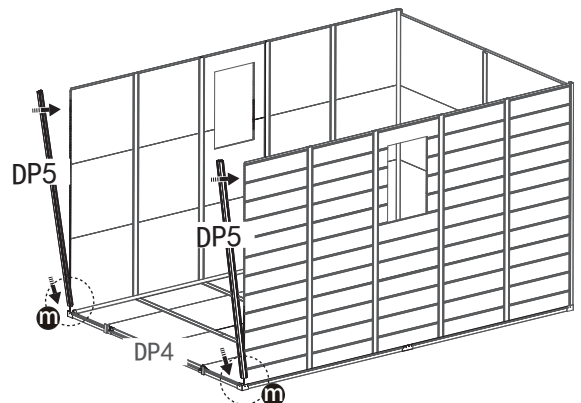

13-5

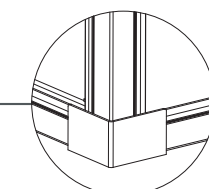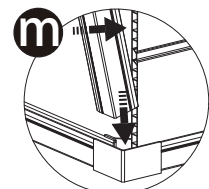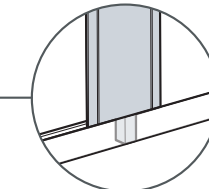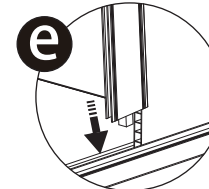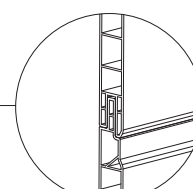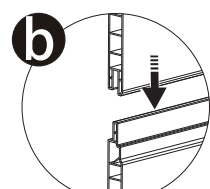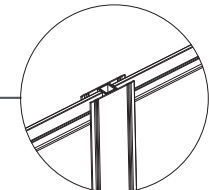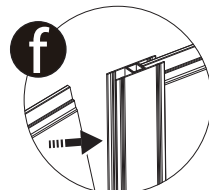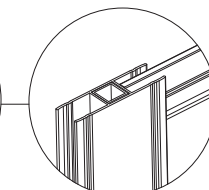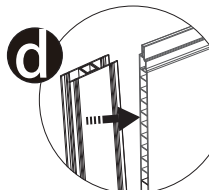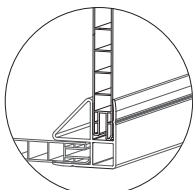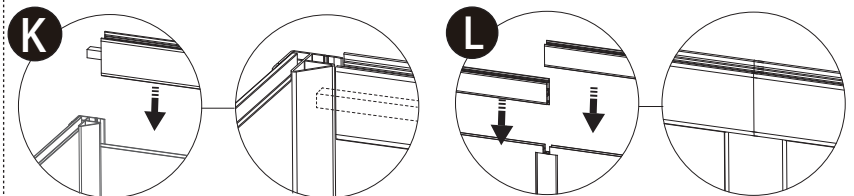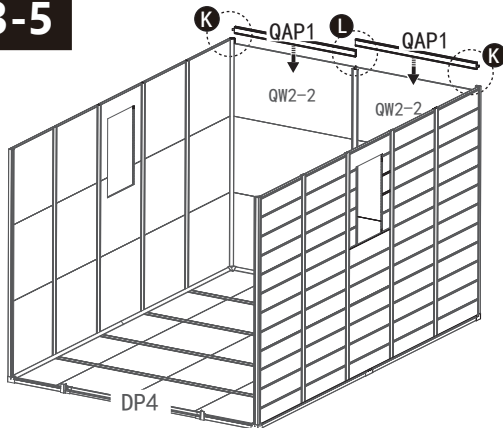


Step 14

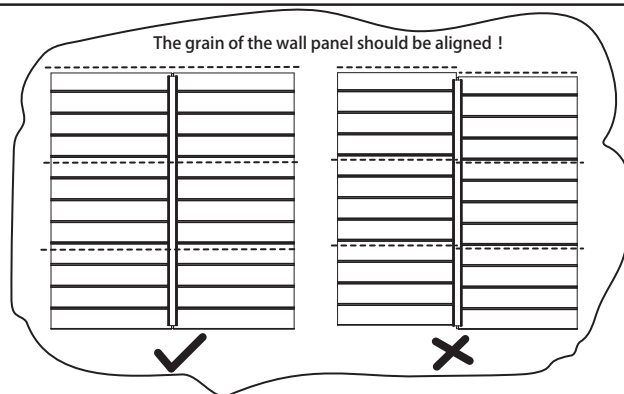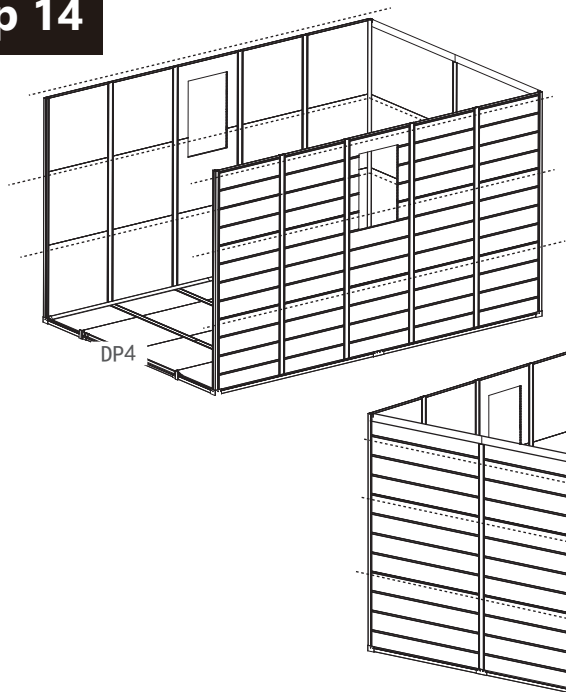


Step 15

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

15-1

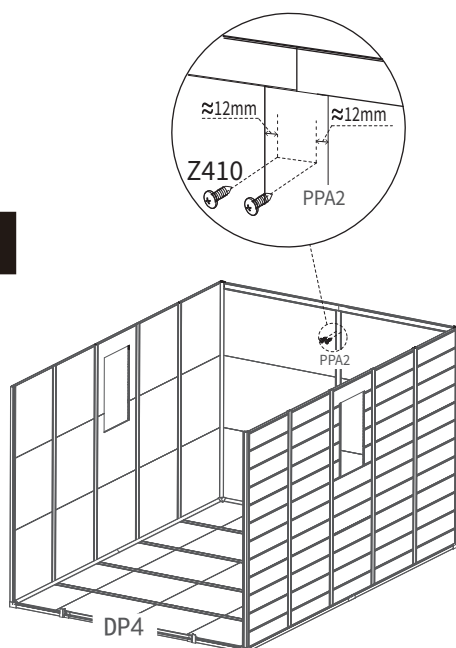

15-2

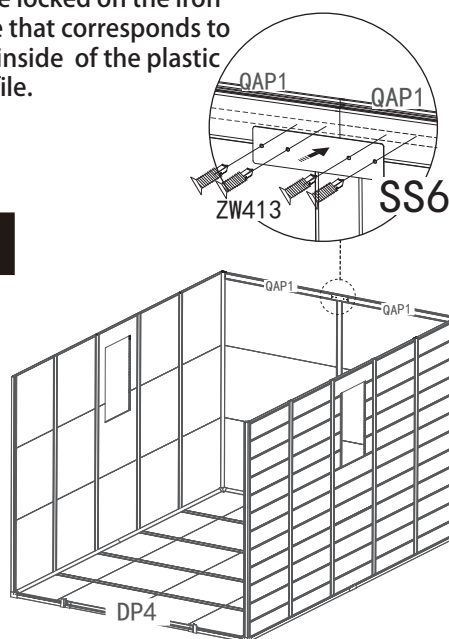

SS6



1 PC

ZW413






4 PC

Z410



18 PC

15-3

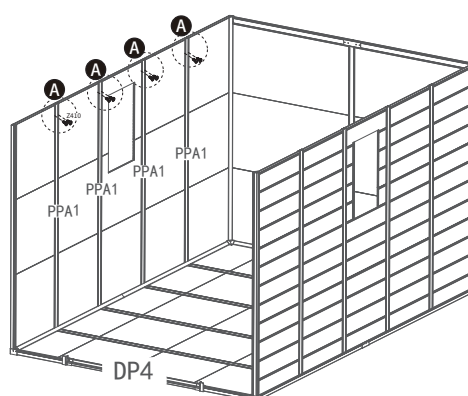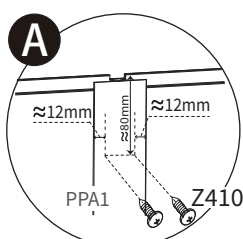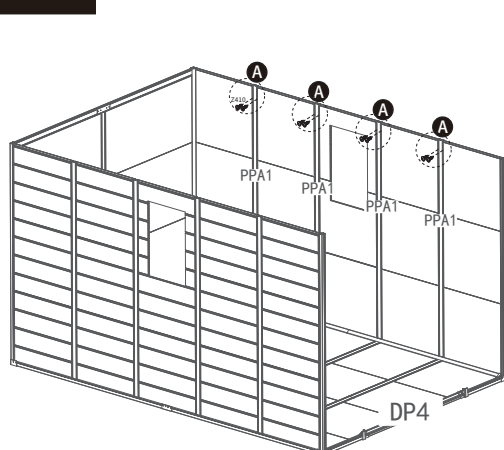

Step 16

16-1

Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.



ZW413






2 PC

Z420





46 PC


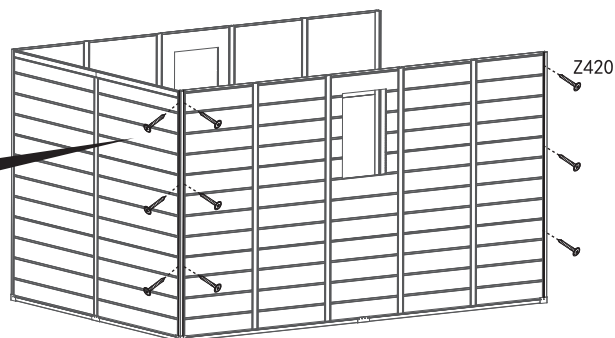
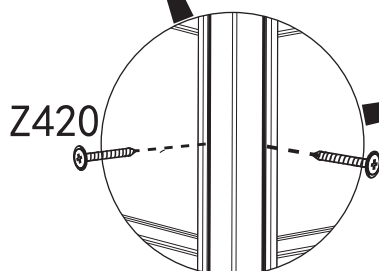
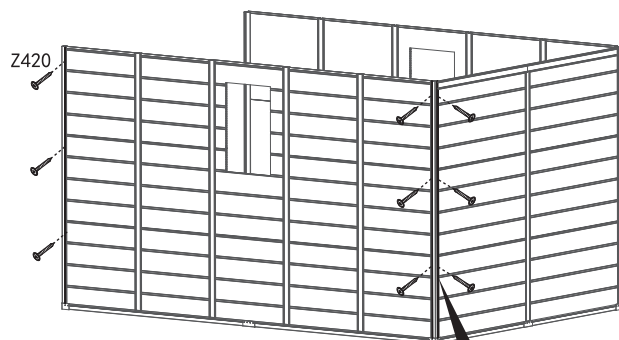


16-2

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

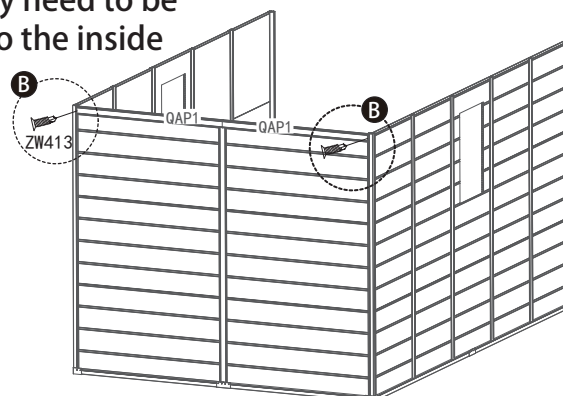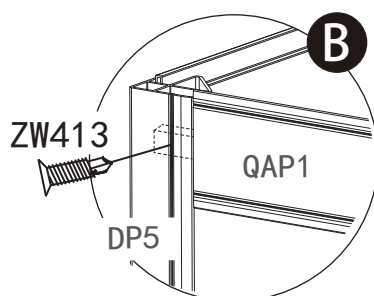


16-3

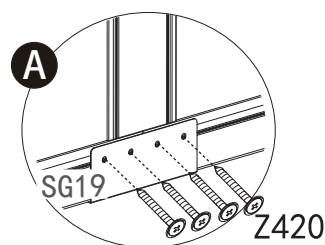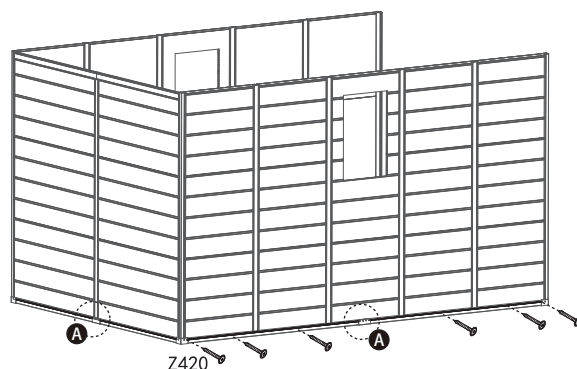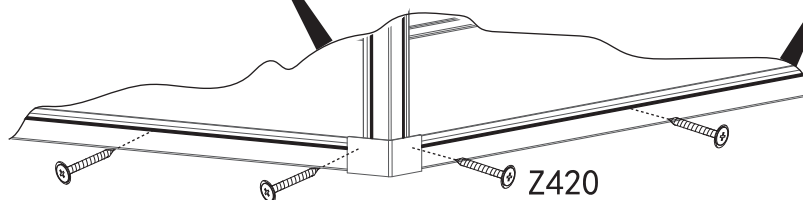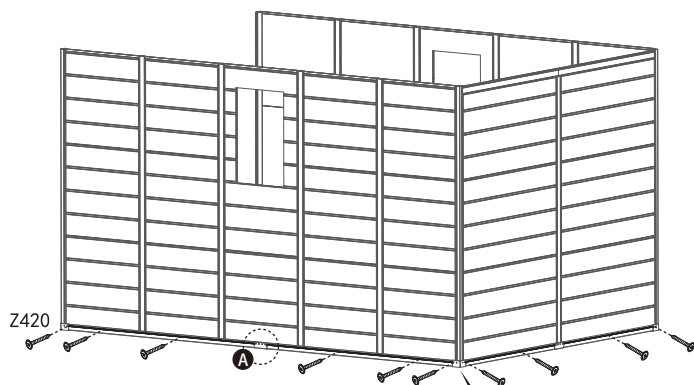


Step 17

17-1

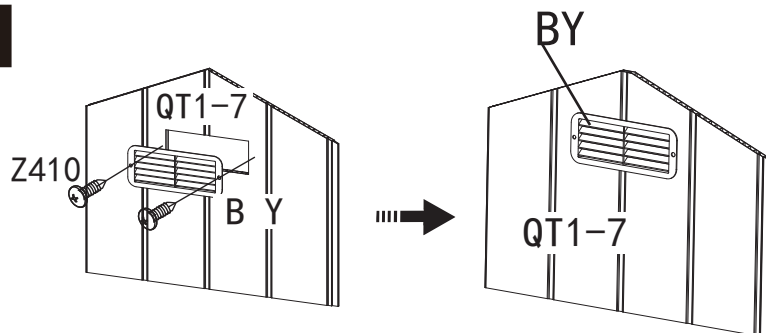


QT1-8

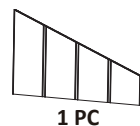


QT1-7




QT1-10

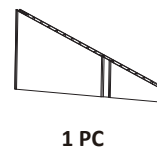

B Y




QT1-9




Z410




QT1-6

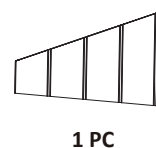


17-2

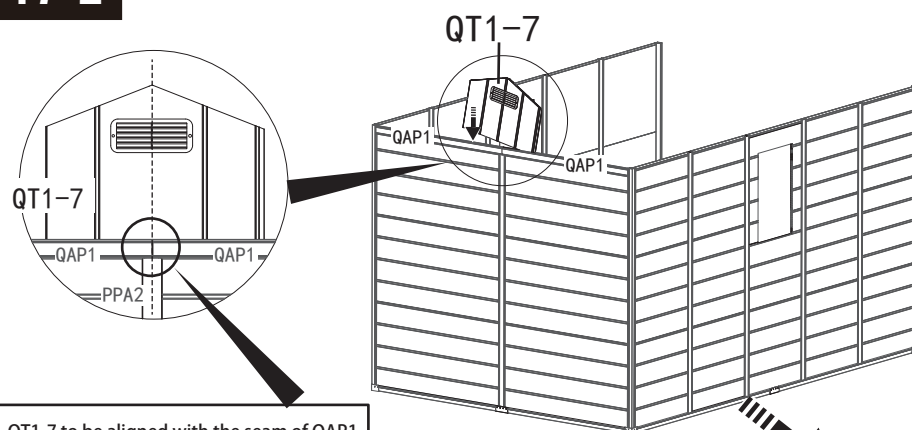

QT1-7 to be aligned with the seam of QAP1.

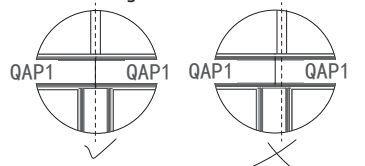


17-3

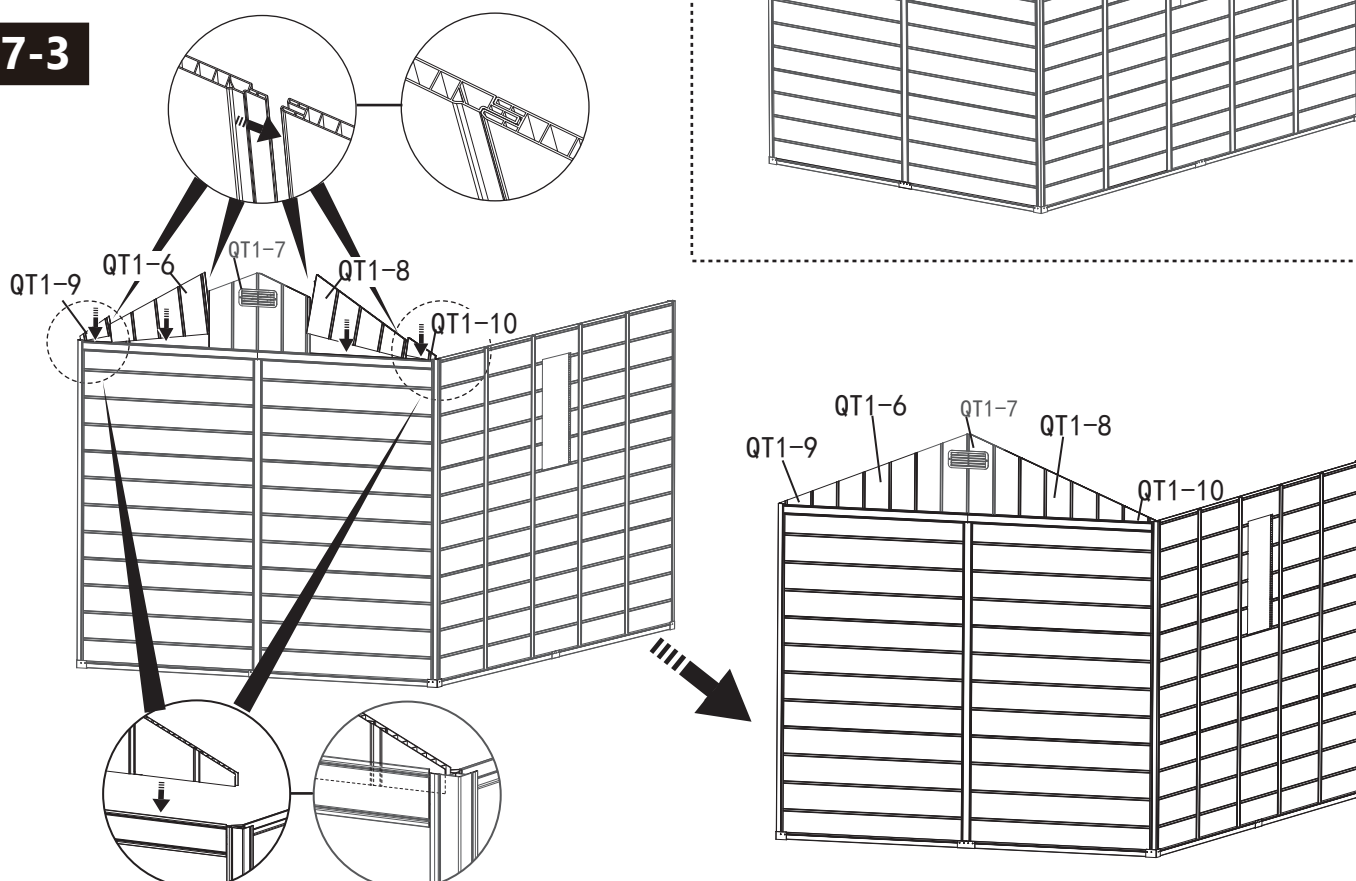

Step 18

18-1

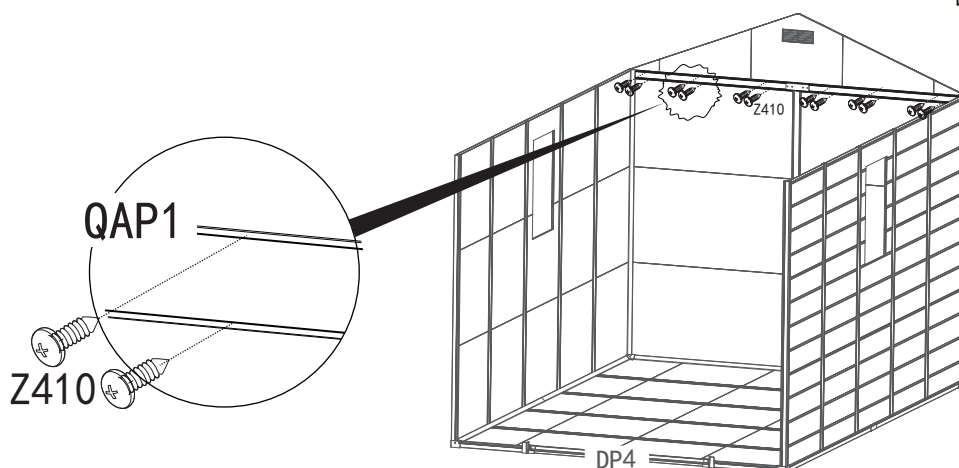

SG8



Z410



14 PC

QW3-2



2 PC

QW3-1



4 PC

DA1L



1 PC

DA1R




1 PC

QAP3




2 PC




18-2

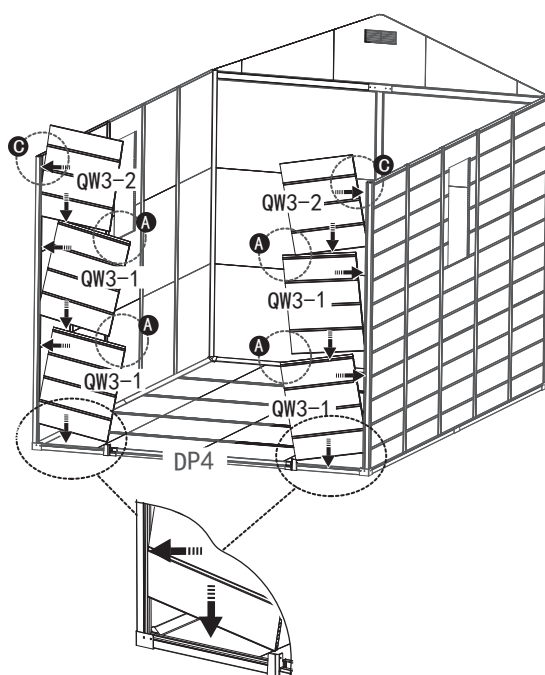

18-3





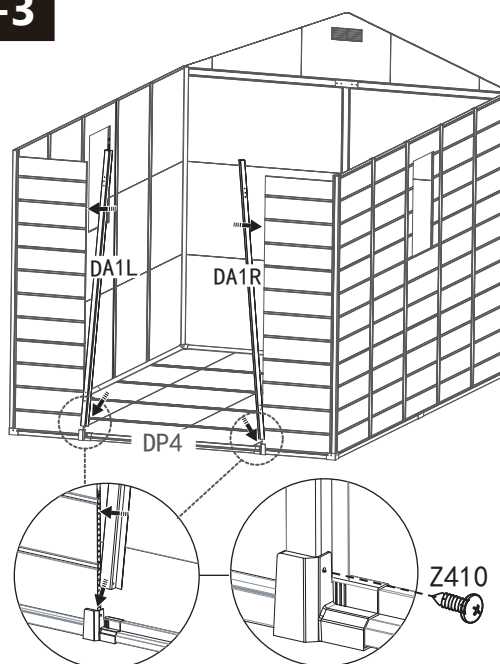


18-4

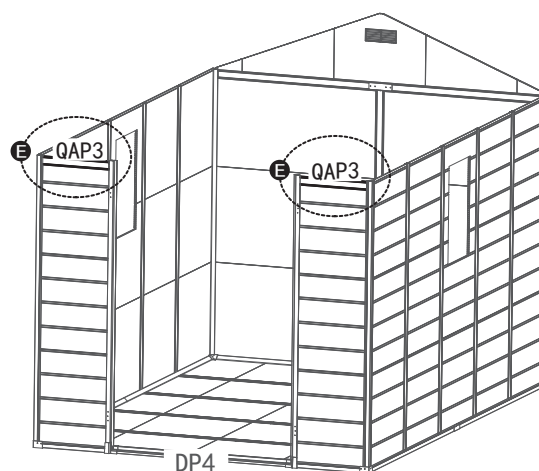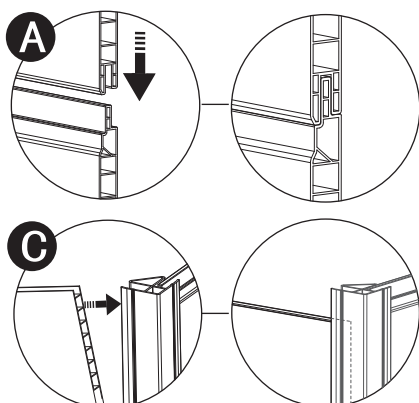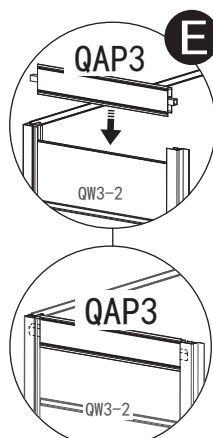


Step 19


19-1

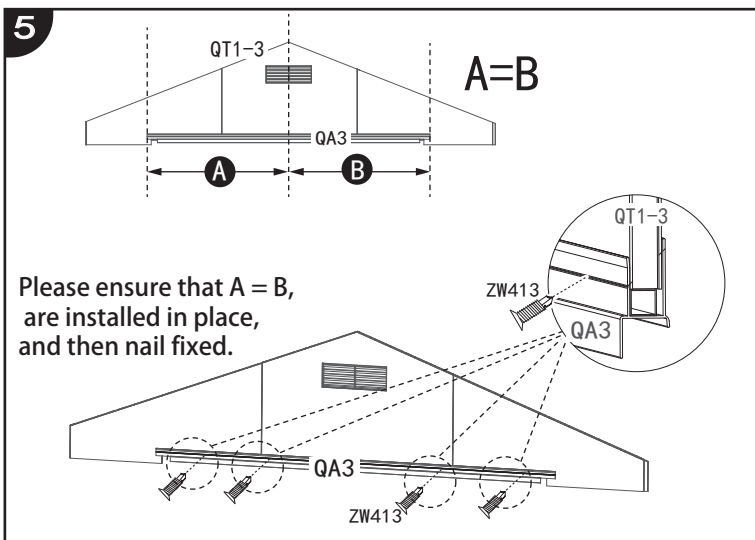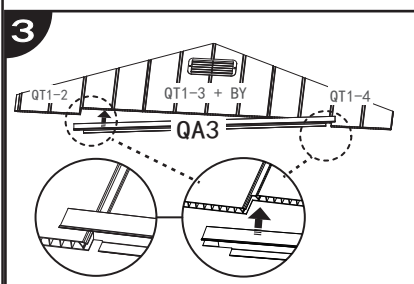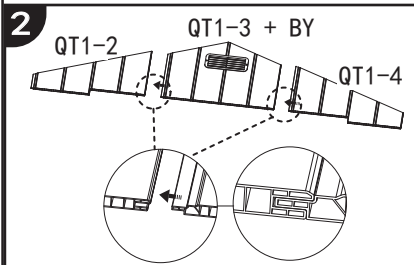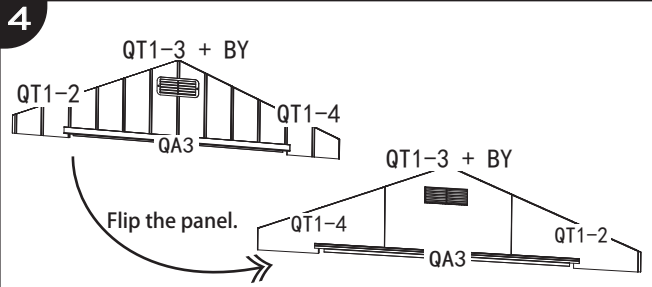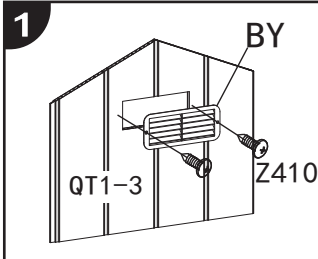


19-2

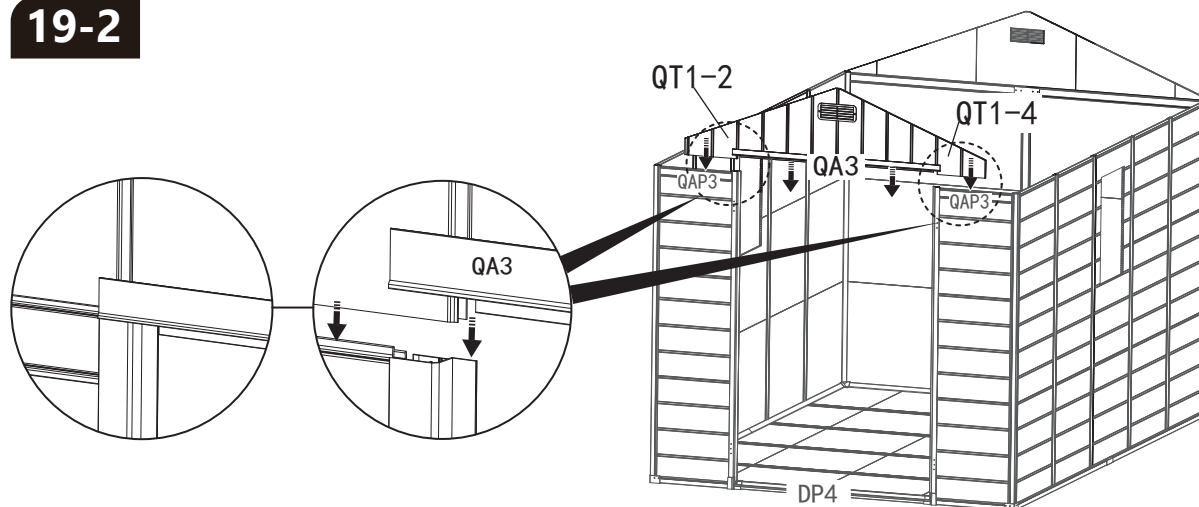

19-3

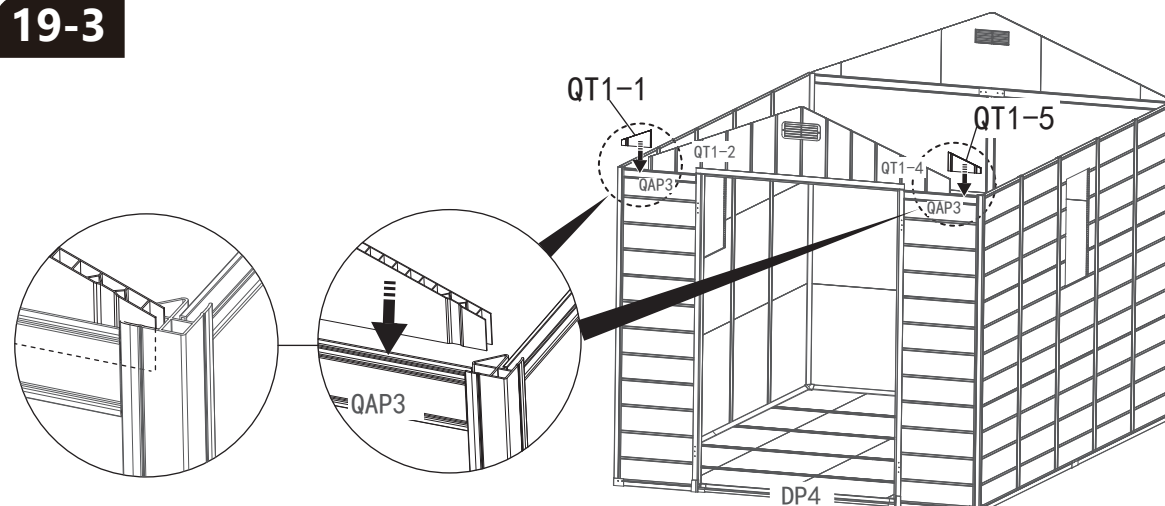

QT1-3



1 PC

Z410



2 PC

BY




1 PC

QT1-2



1 PC

QT1-4



1 PC

QA3



1 PC

QT1-1



1 PC

QT1-5



1 PC

ZW413



4PC

Step 20

20-1

Caution:
Please use Drill  to predrill
a hole at depth 1mm before screw.



Z420



10 PC

ZW413




8 PC


SG27








2 PC

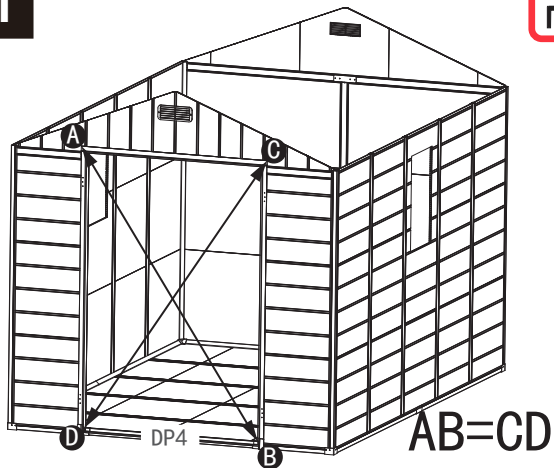

Please keep both
sides QAP3 on a line




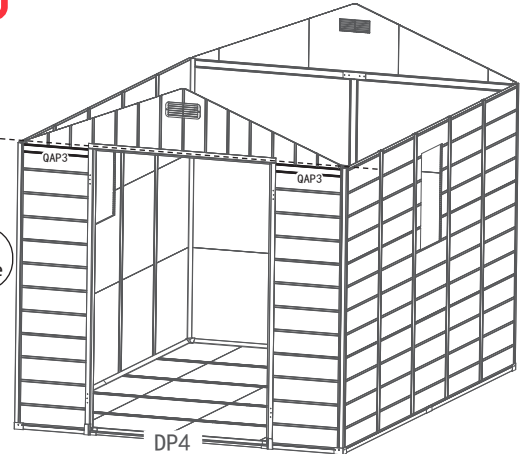


20-2

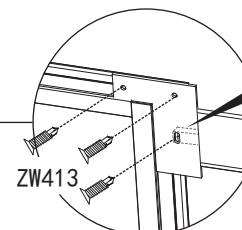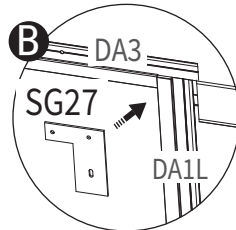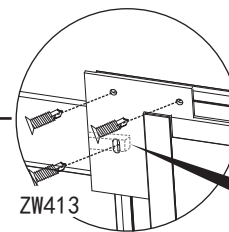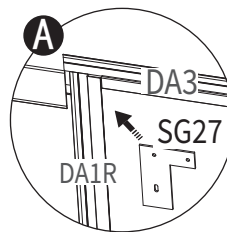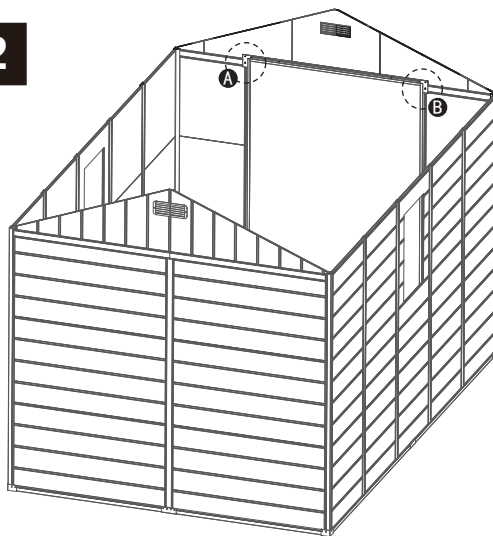


Attention to the location
of the screws: they need
to be locked on the iron
pipe that corresponds
to the inside of the
plastic profile.

20-3

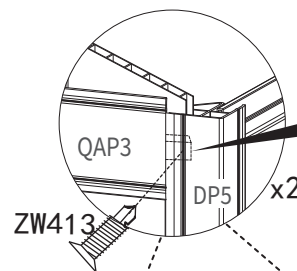
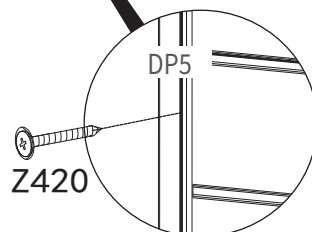
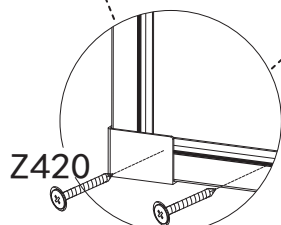
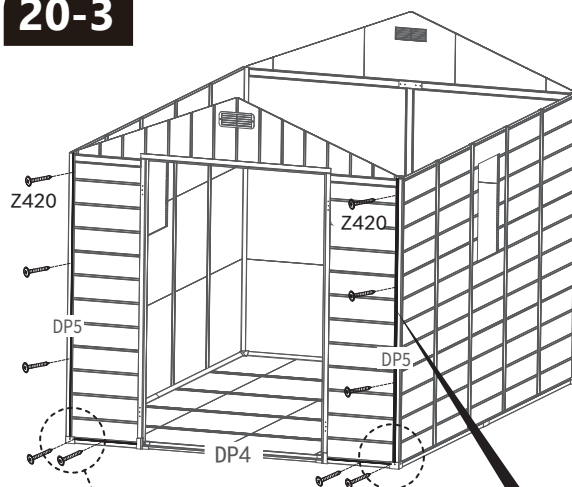


Attention to the location
of the screws: they need
to be locked on the iron
pipe that corresponds
to the inside of the
plastic profile.


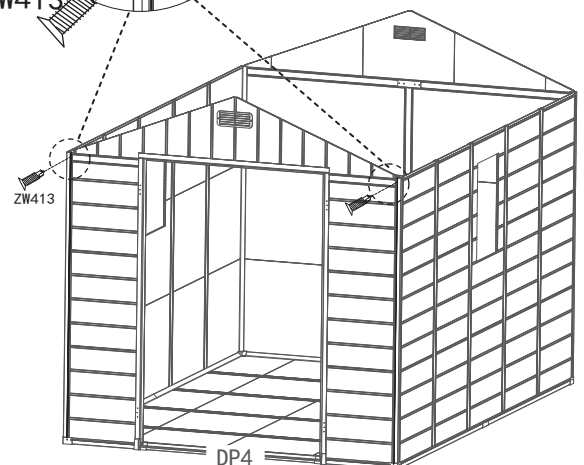


Step 21

21-1

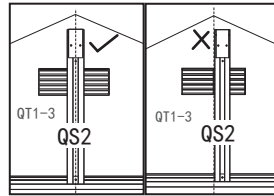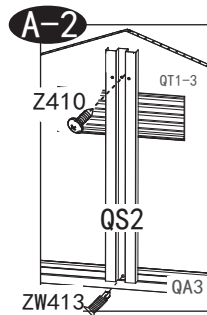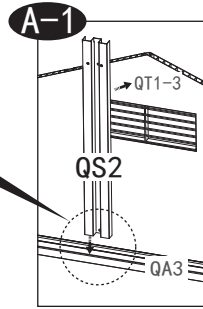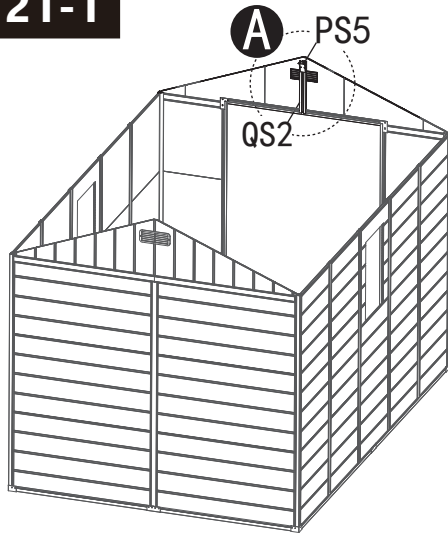

Pay attention to the placement of QS2

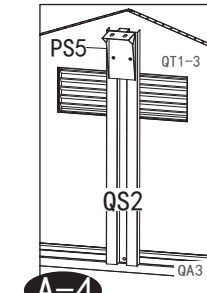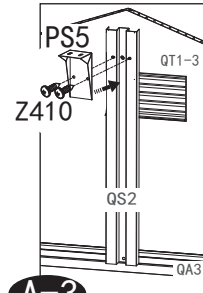

Z410



7 PC

ZW413



8 PC

PS5




2 PC

QS2



1 PC

SS4




1 PC

SS3








1 PC

21-2

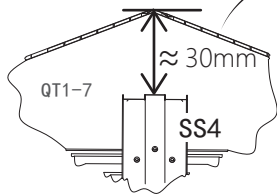


Pay attention to the placement of SS4

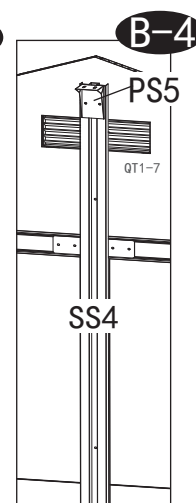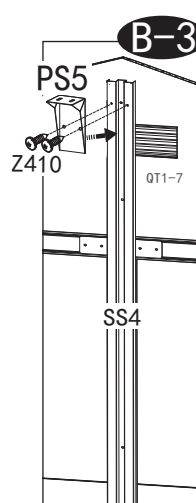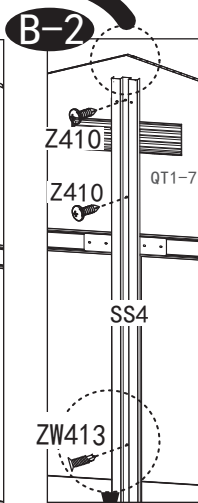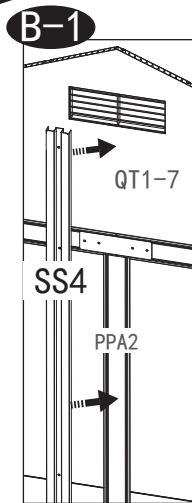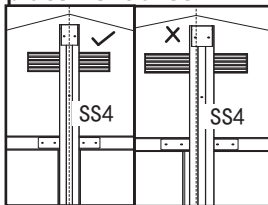


Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.


B-5

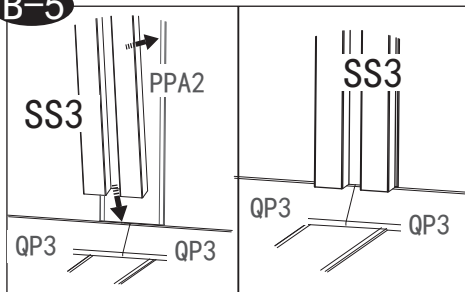


B-7

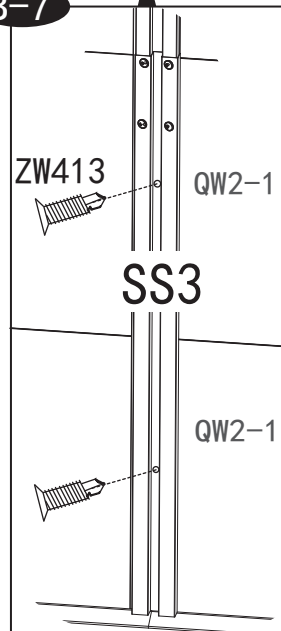

B-6

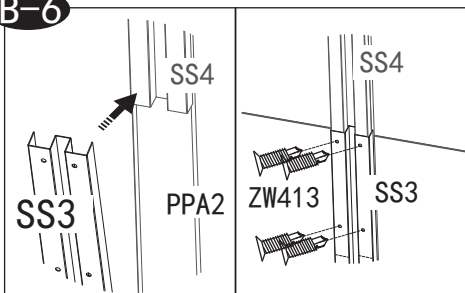


B

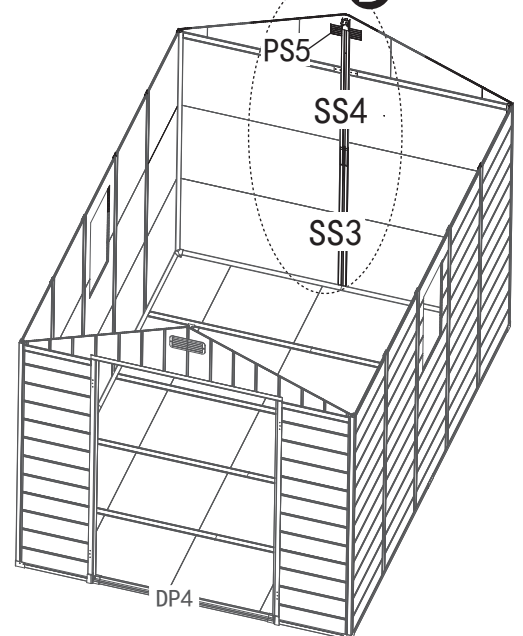

Step 22

22-1

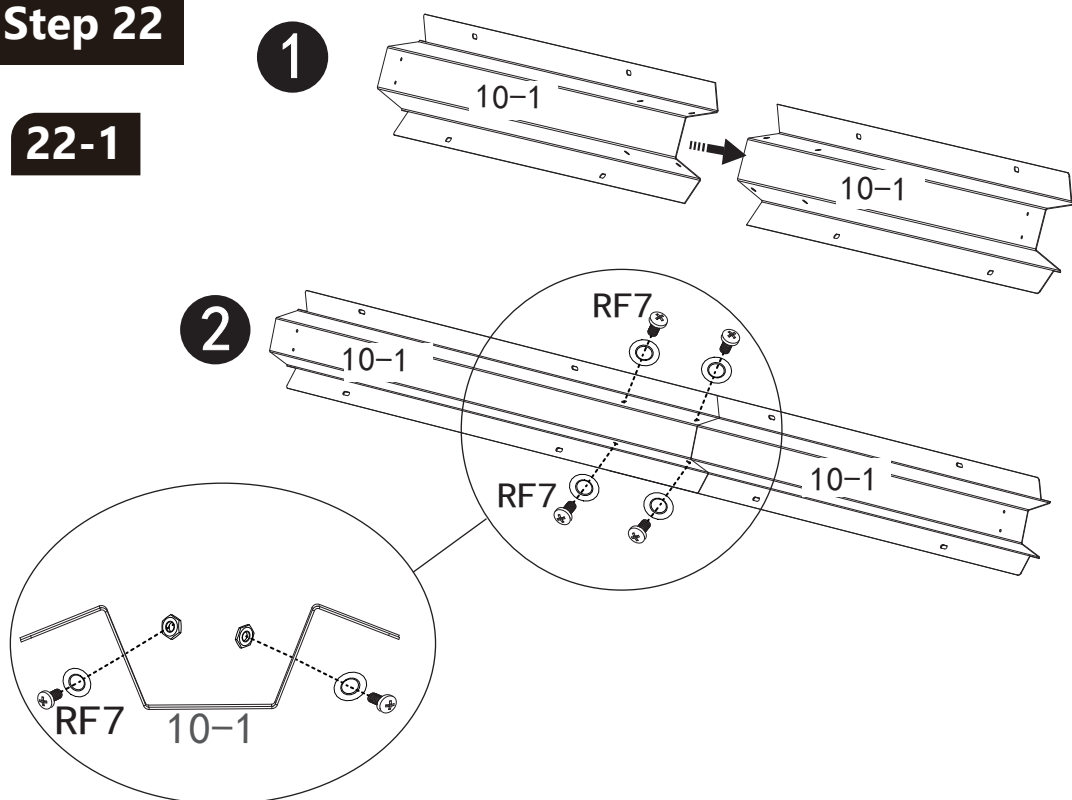


10-1



2 PC

RF7




4 PC

Z410




4 PC




22-2

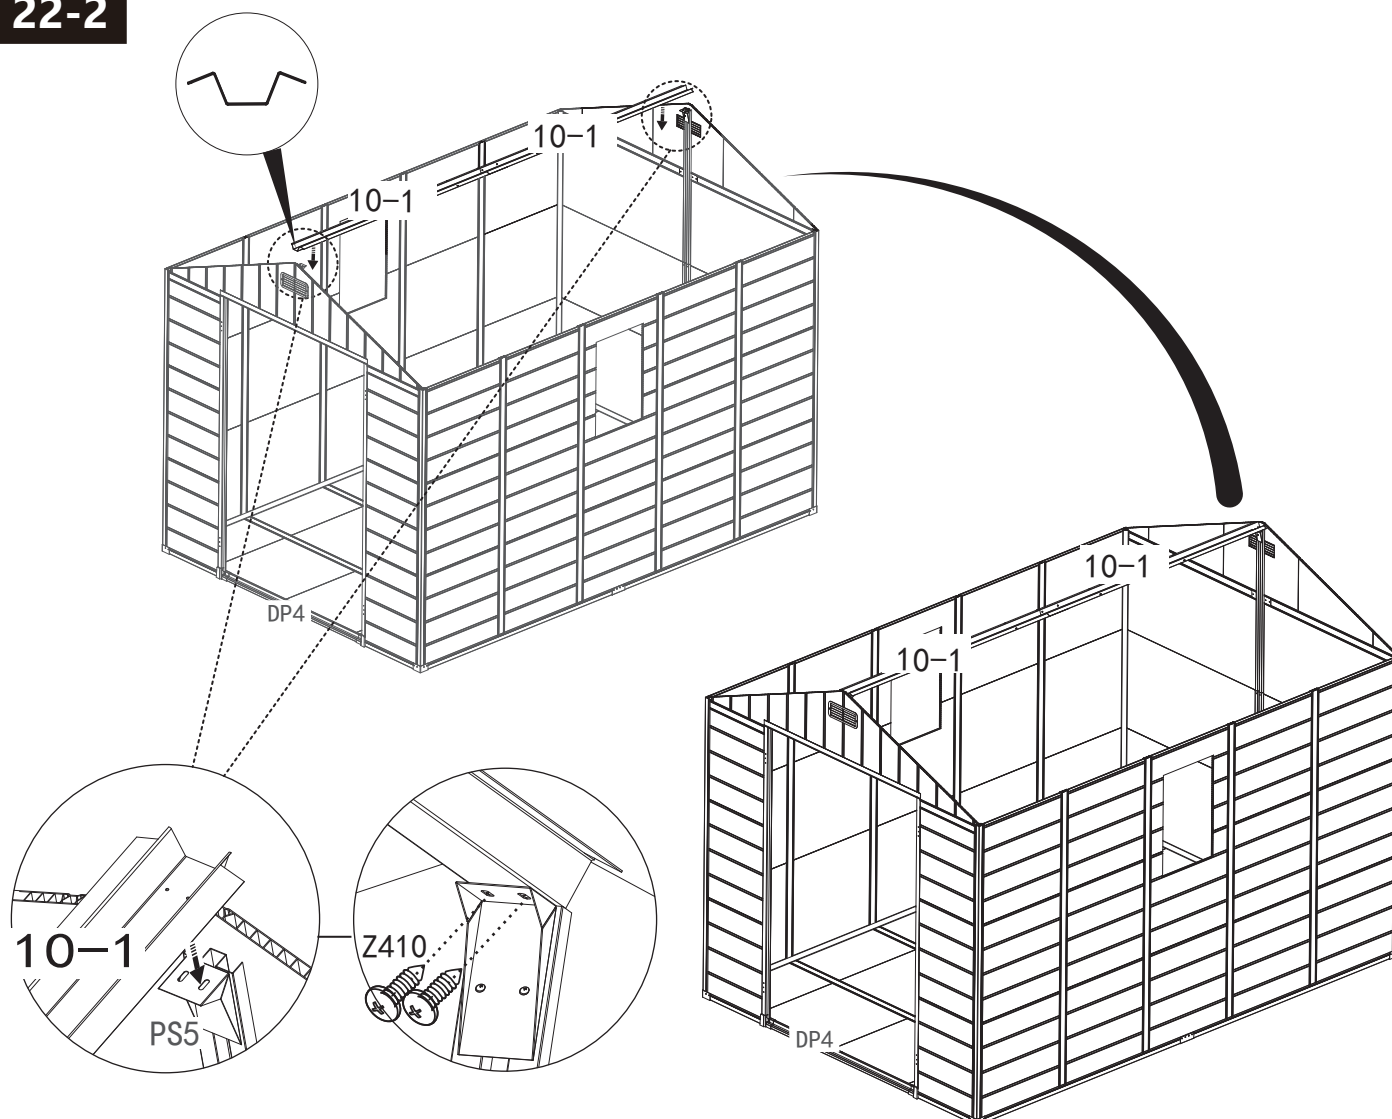


ROOF PARTS

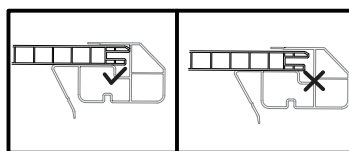



Fully fit the panel inside the profile

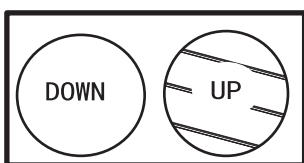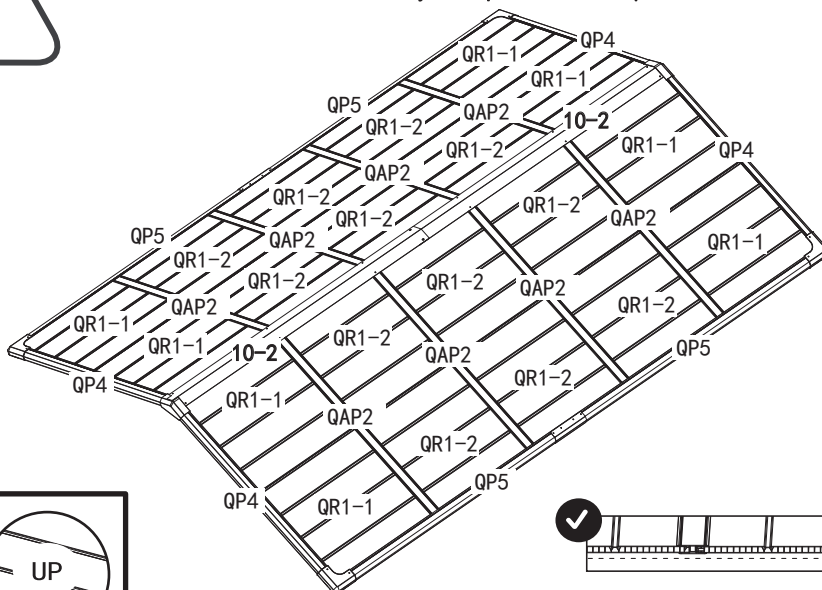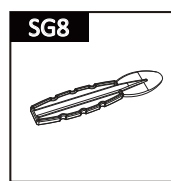




The stripes should be upwards

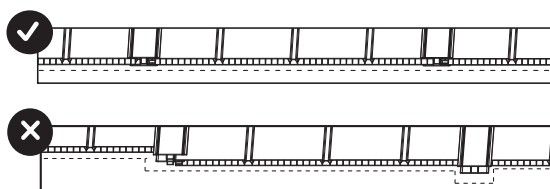

Step 23

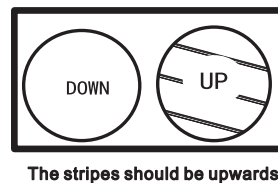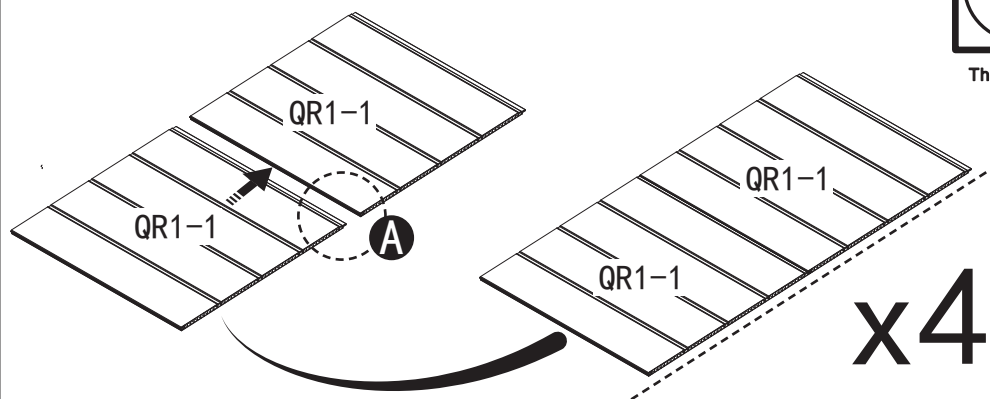

The stripes should be upwards

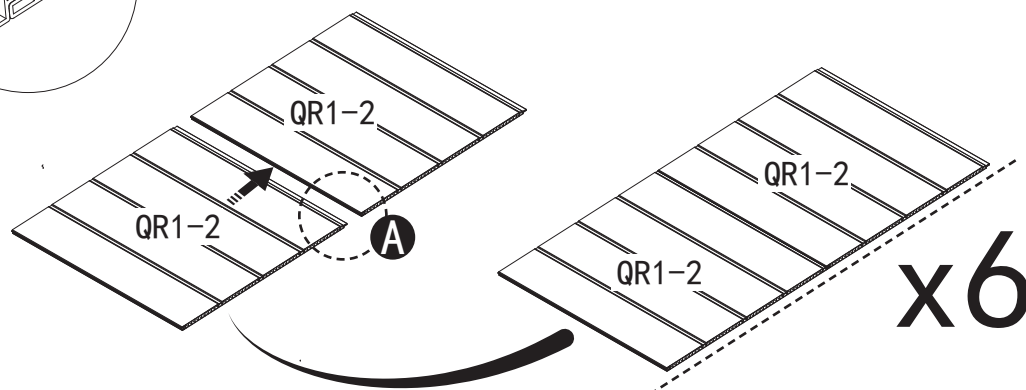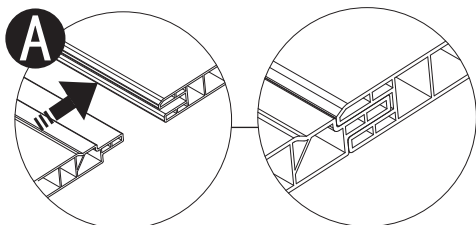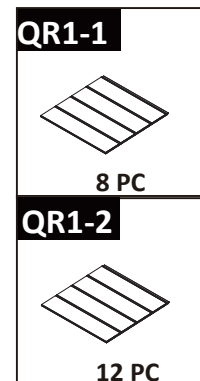


Step 24


QAP2






8 PC

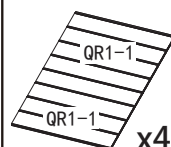

x4

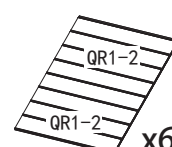

x6

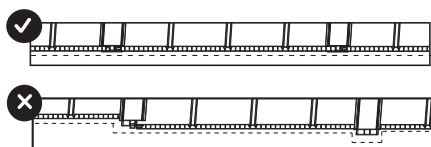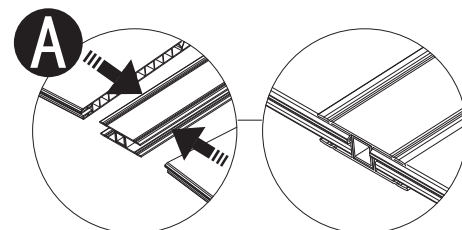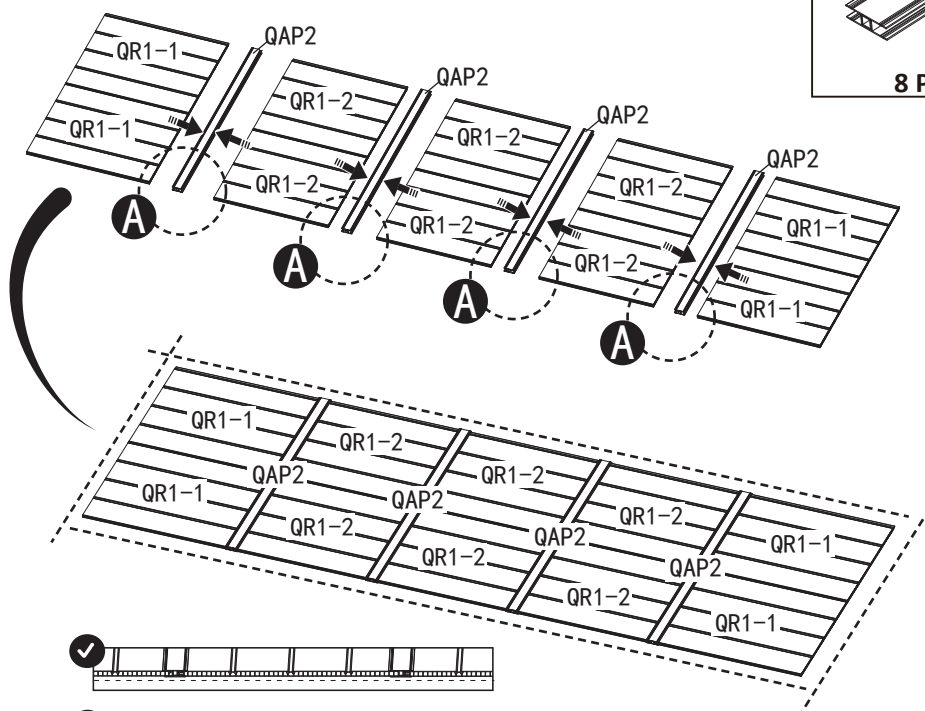

x2


Step 25

$AB=CD$


Z410



32 PC


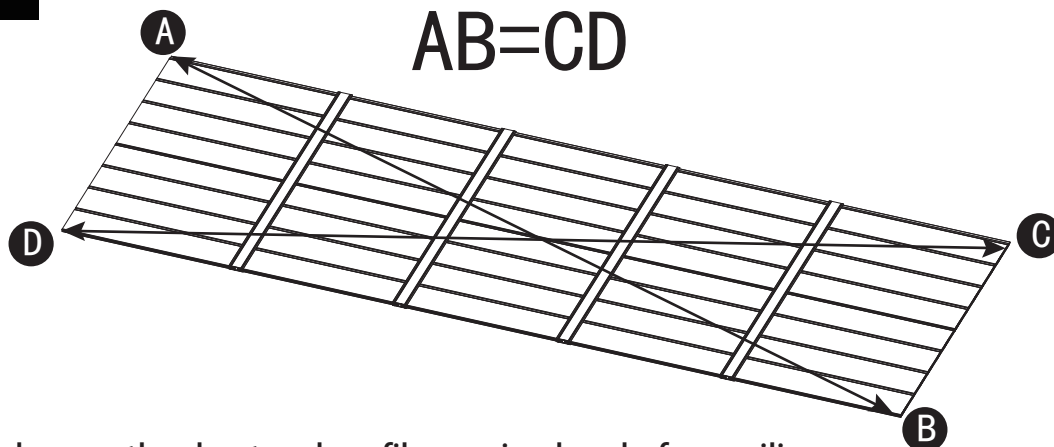


Make sure the sheet and profiles are in place before nailing

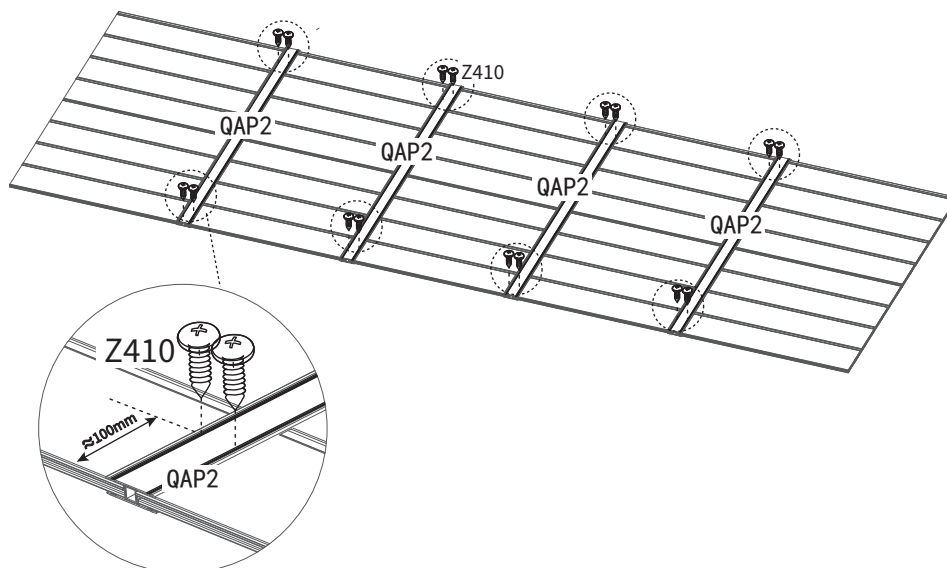


x2

Step 26

QP5  4 PC	Z410  8 PC
QP4  4 PC	SG20  2 PC
SG2  4 PC	SG8  2 PC
Z420  8 PC	 Fully fit the panel inside the profile


26-1

Flip the panel.

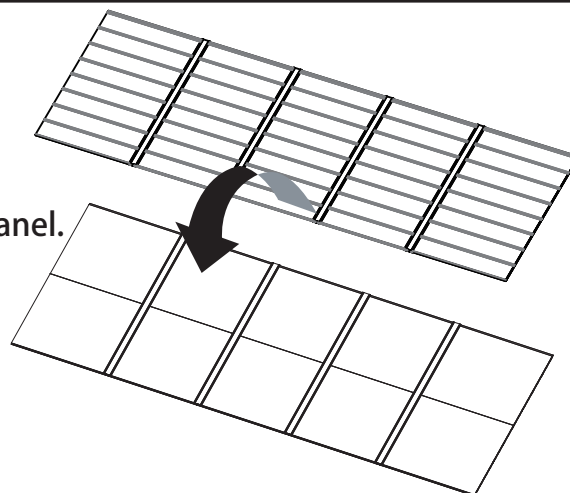


x2


26-2

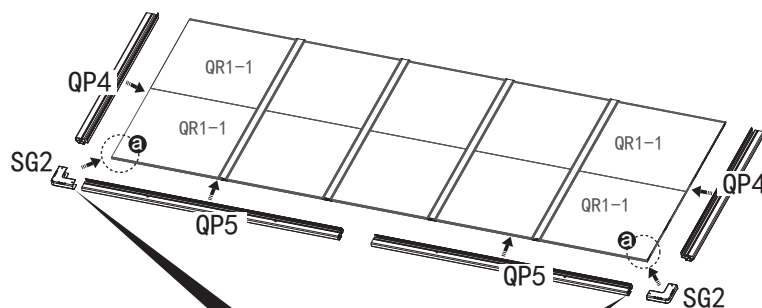

x2

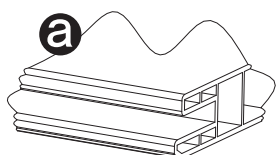


Please note the installation location

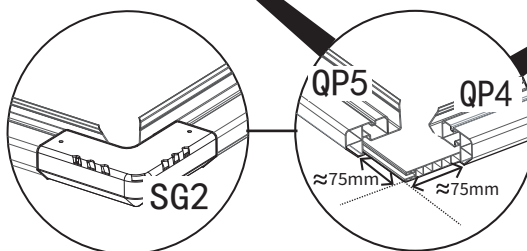


26-3

A=B
C=D



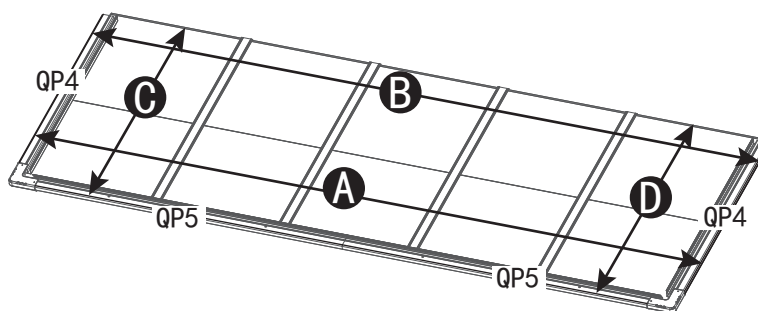


x2

26-4

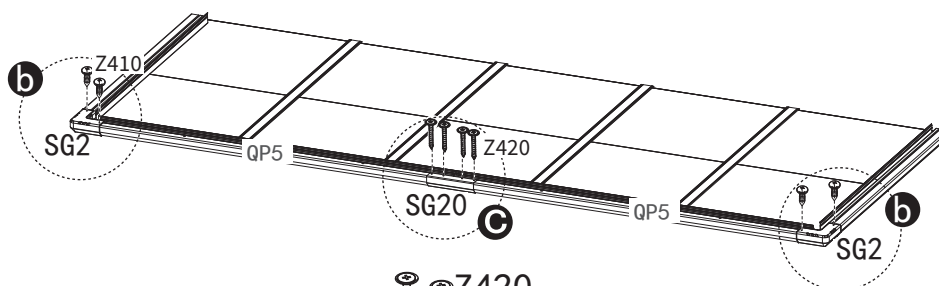


x2

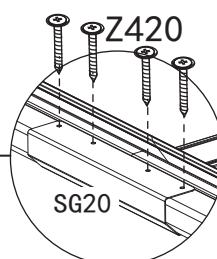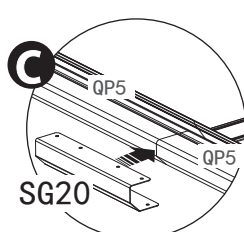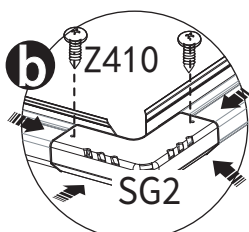

Step 27

27-1

Flip the panel.

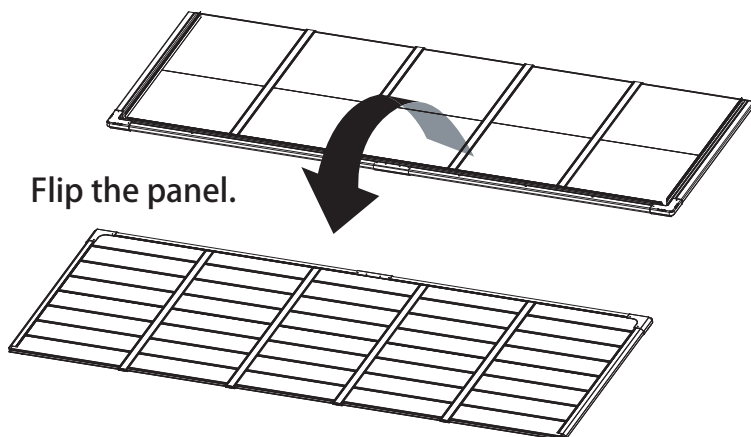

Z420




32 PC

x2

27-2




Caution:

Please use Drill to predrill a hole at depth 1mm before screw.

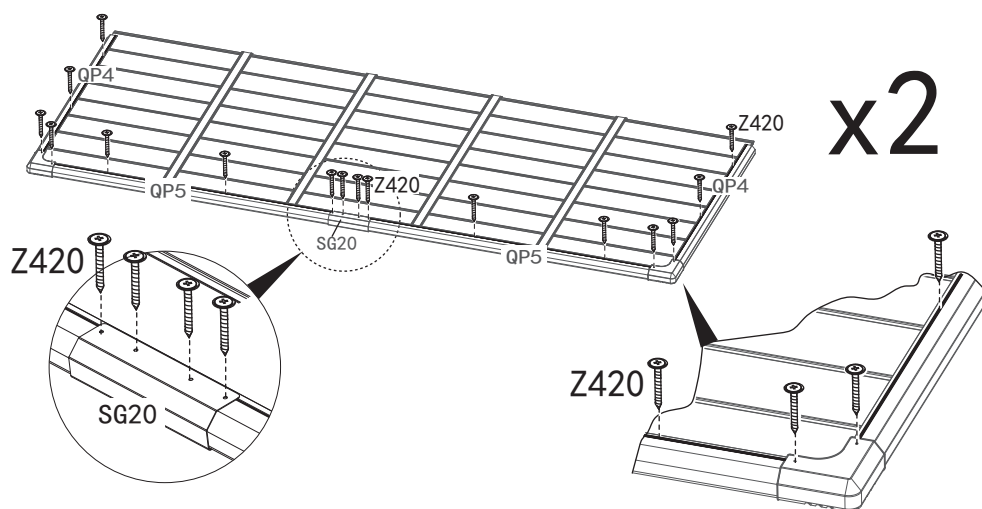


x2

27-3

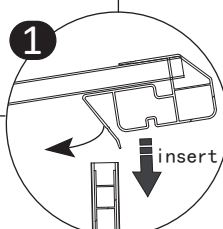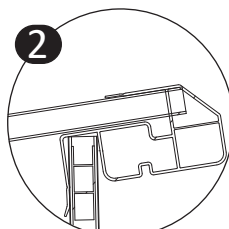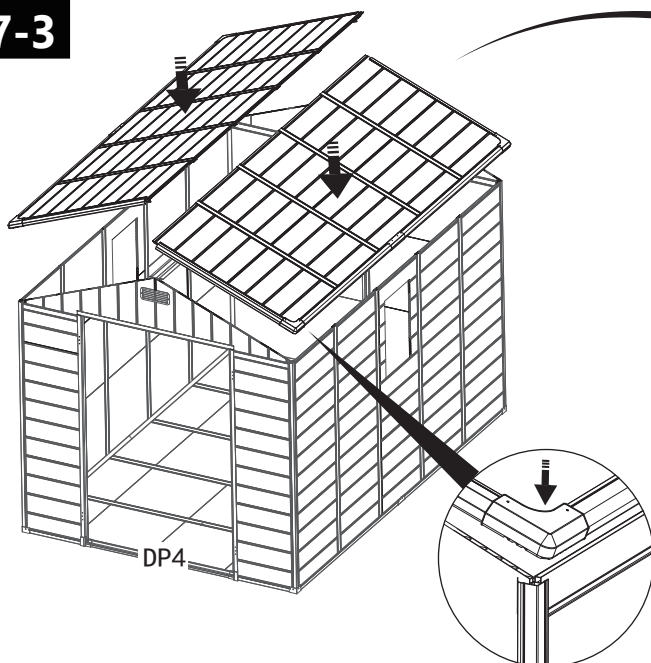

Fully fit the panel inside the profile

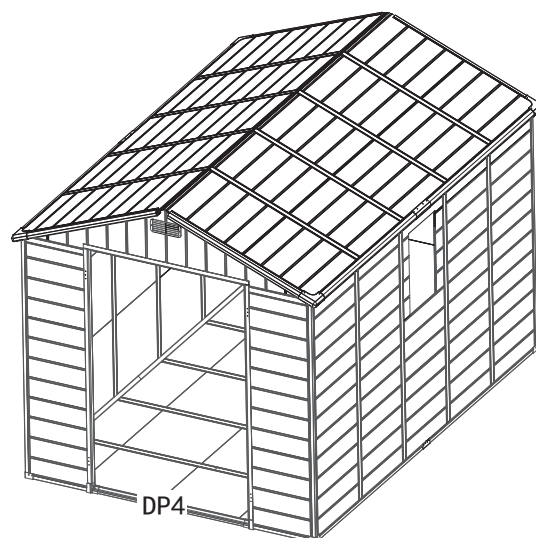


Step 28

Fully fit the panels inside the profiles of roof



SG8



28-1



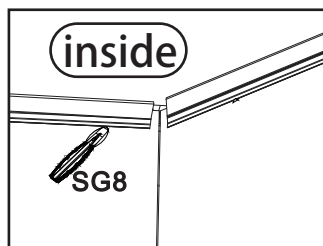


outside

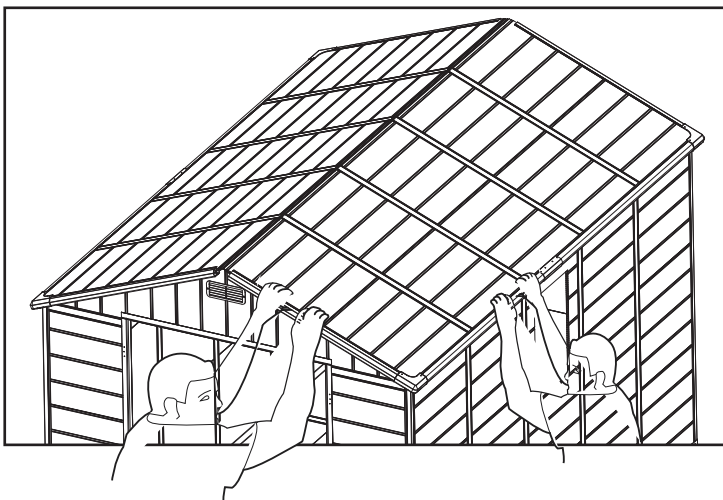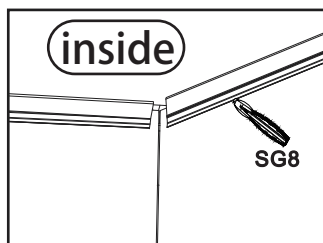


28-2

QAP2 and PPA1 should be aligned once the roof is installed.

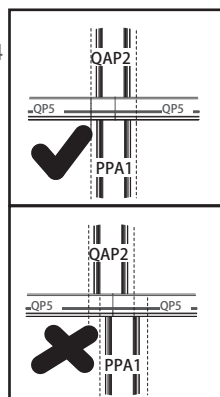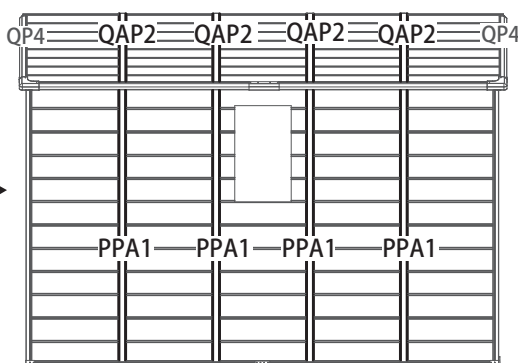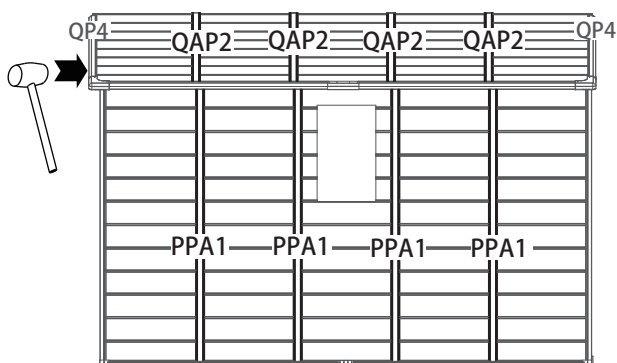


28-3

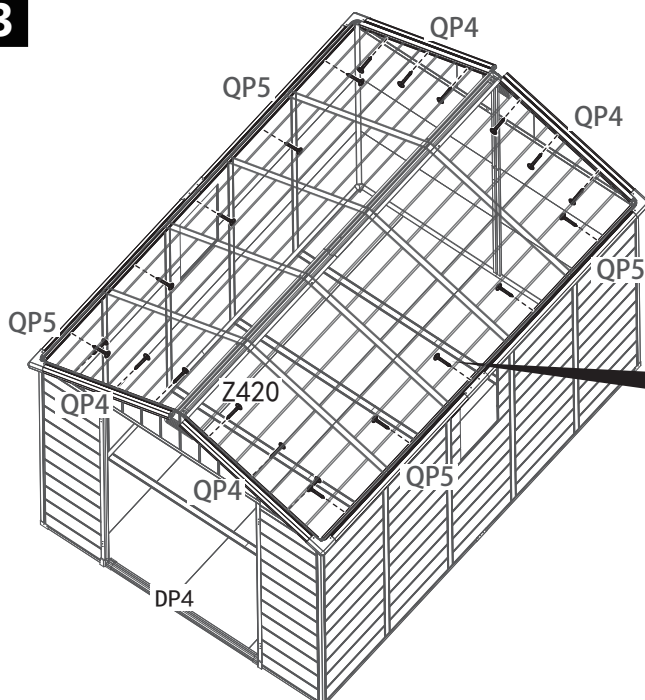


Caution:


Please use Drill to predrill a hole at depth 1mm before screw.

**Z420**

22 PC

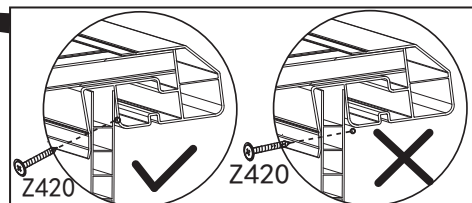


Step 29

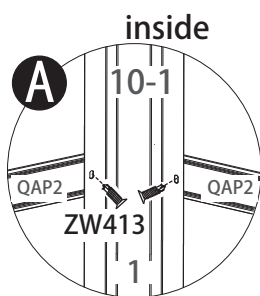

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

Attention : for the convenience of screwing, please press the board when you screw.

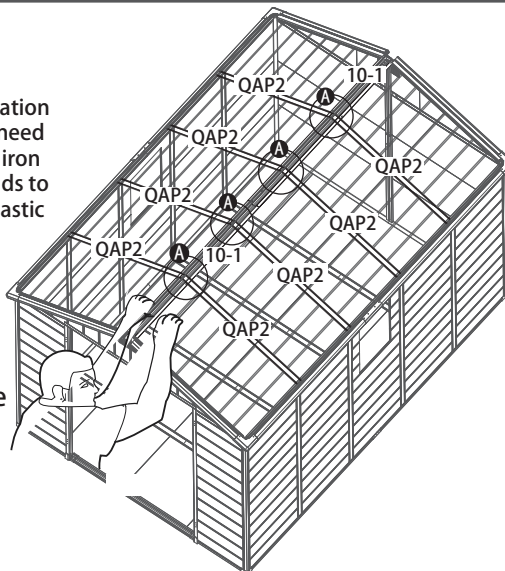


ZW413




8 PC

Step 30

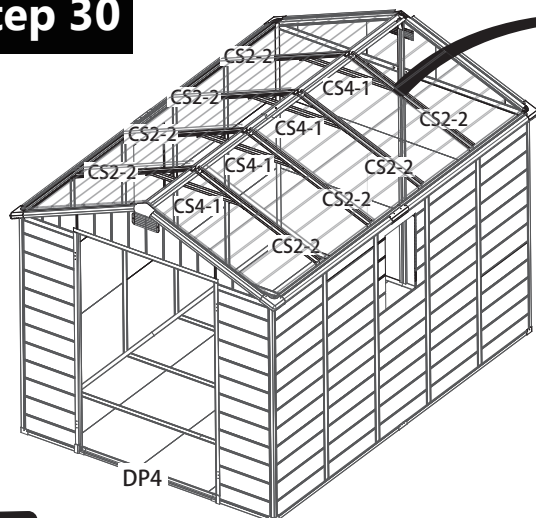

inside

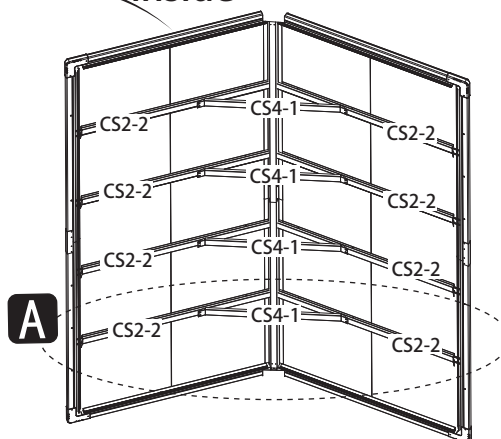

CS4-1



4 PC

Z420



16 PC

ZW413



32 PC

CS2-2




8 PC

Z410




32 PC


A-1

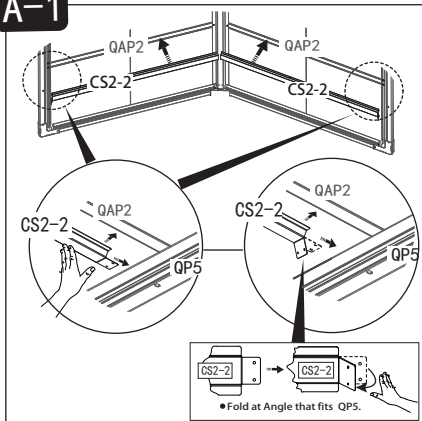


A-2

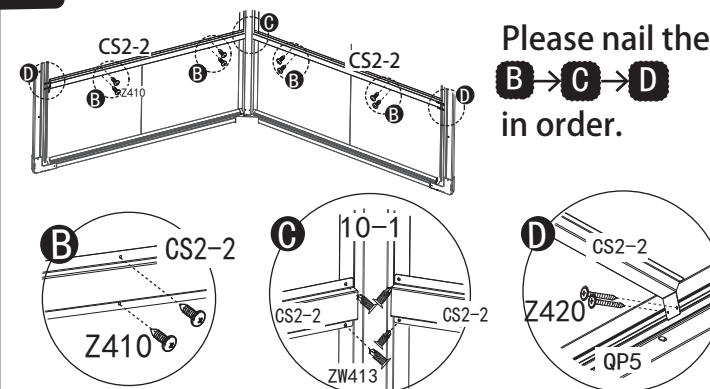

A-3

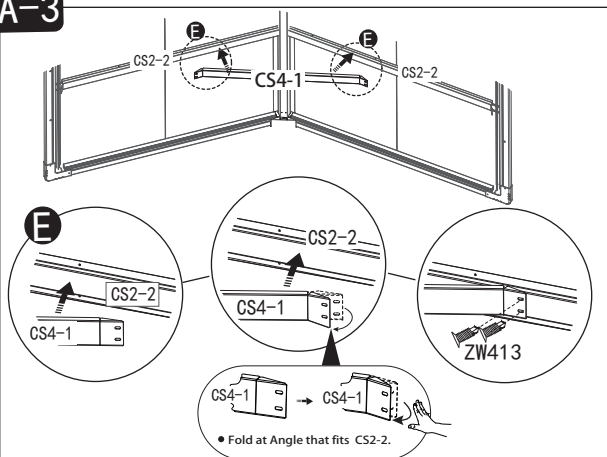



A

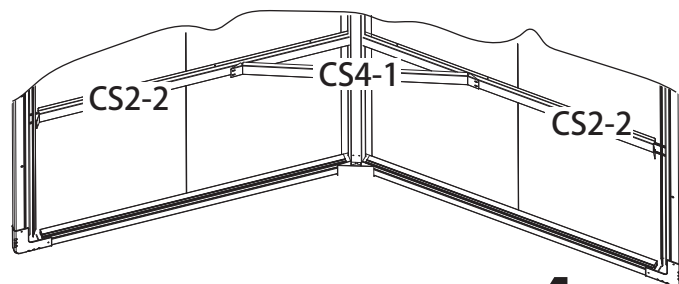



x4

Step 31

31-1

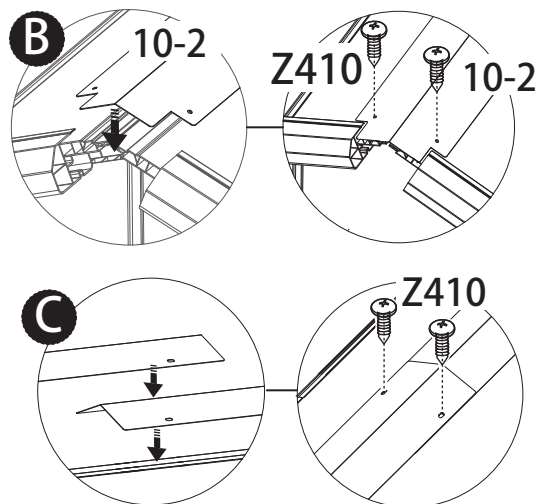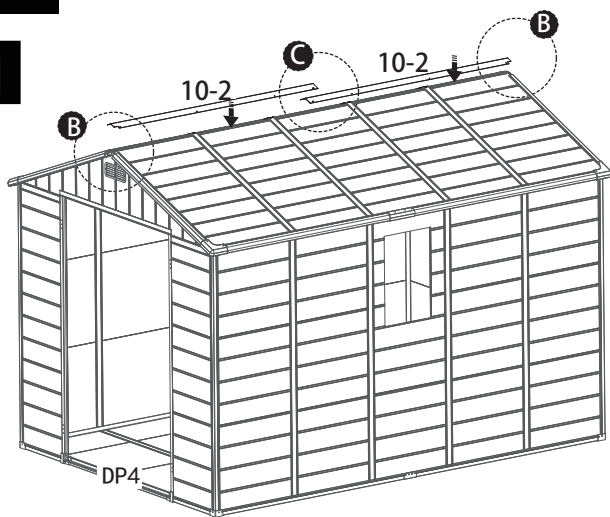


10-2

2 PC
Z410

6 PC
SG1

2 PC
Z425


4 PC
ZW413

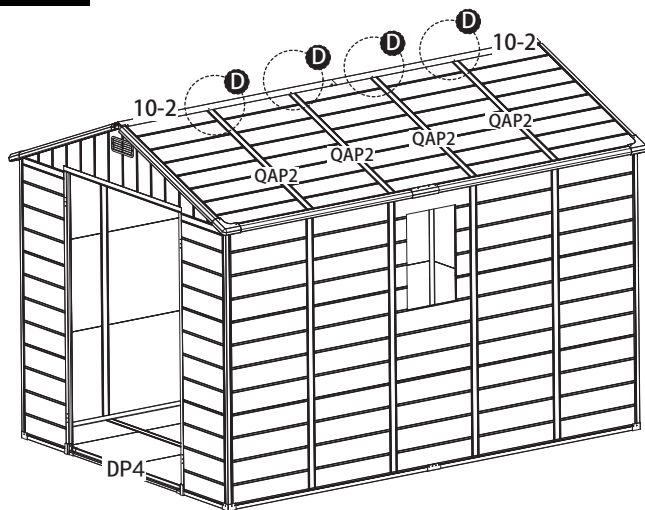8 PC




31-2




Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

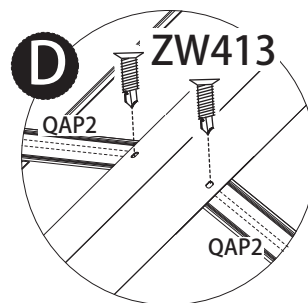


31-3

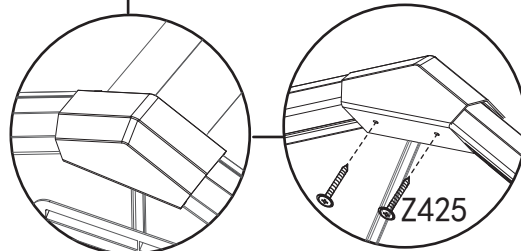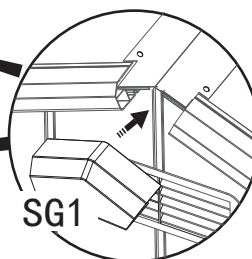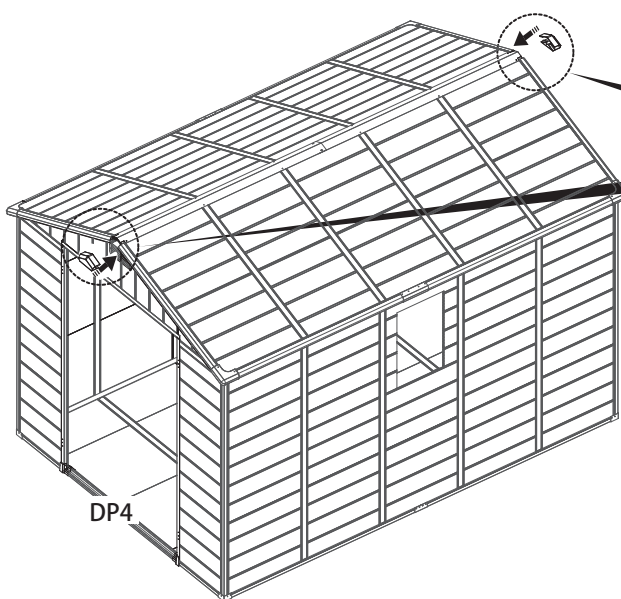

Step 32


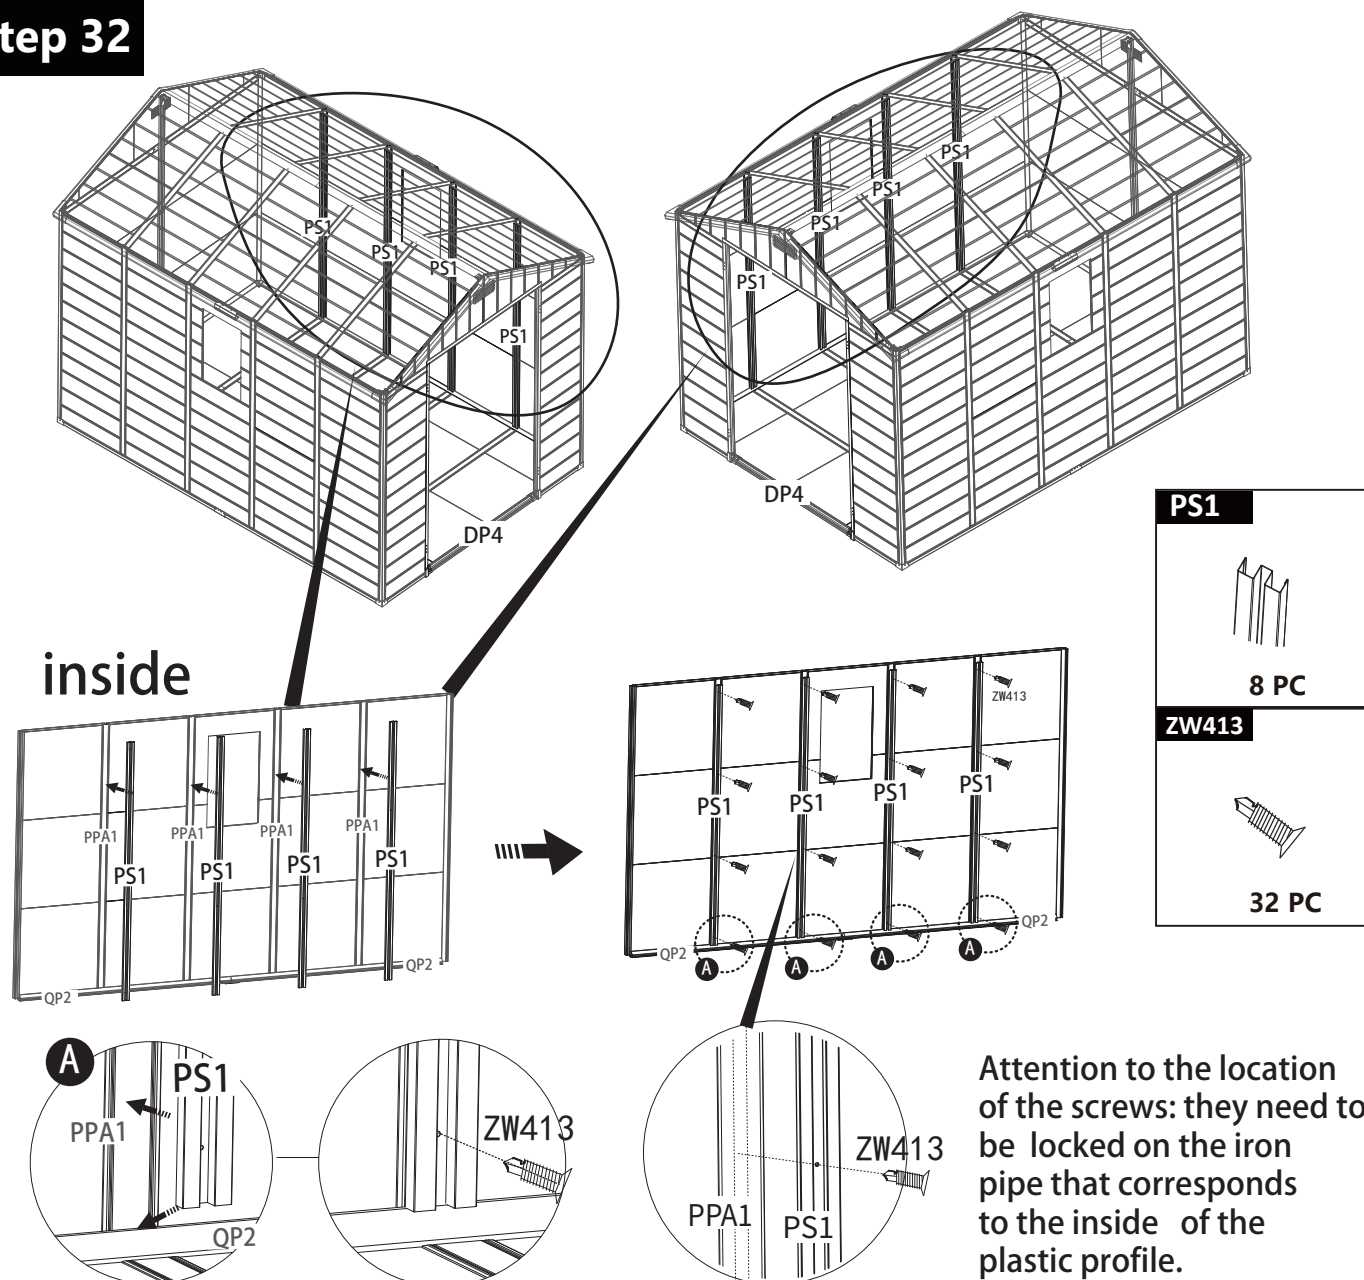


Step 33

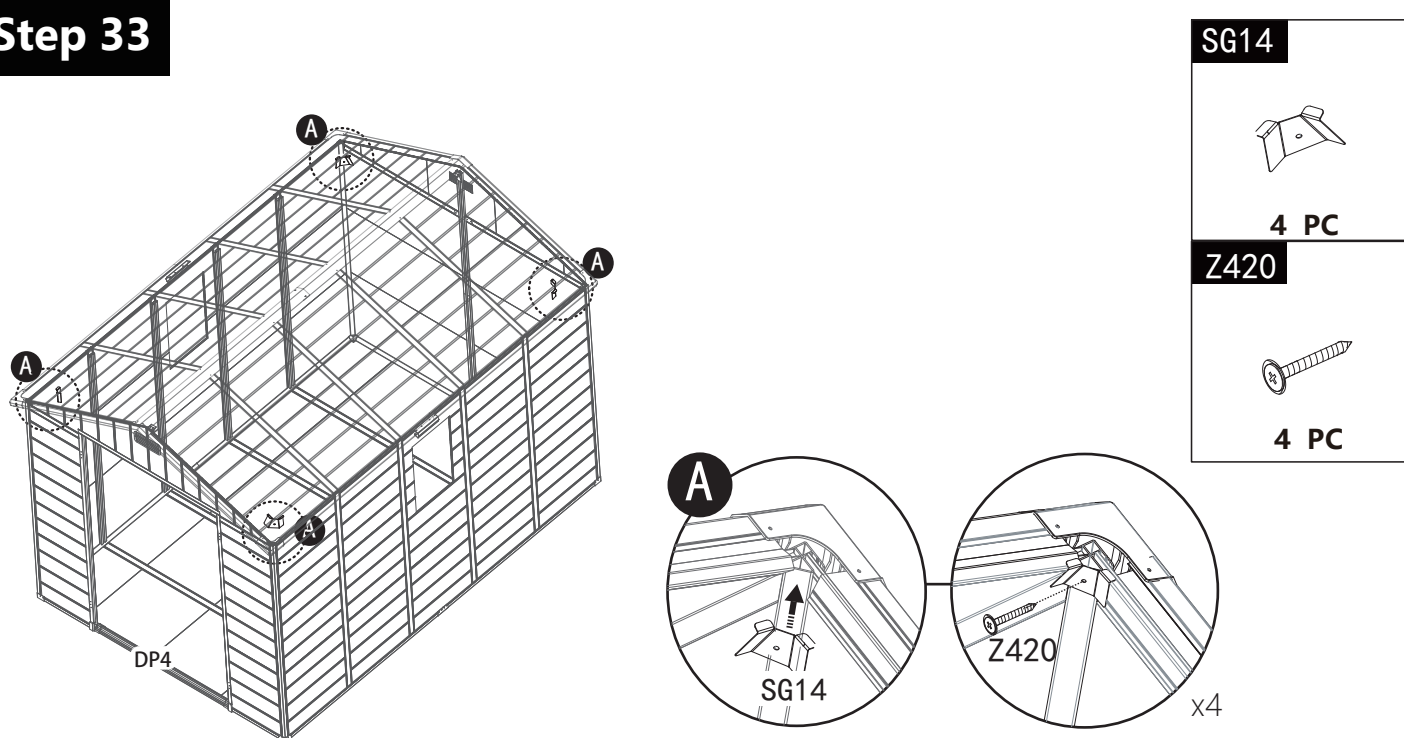


Step 34

Window section

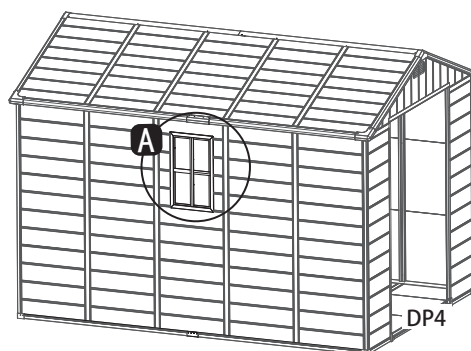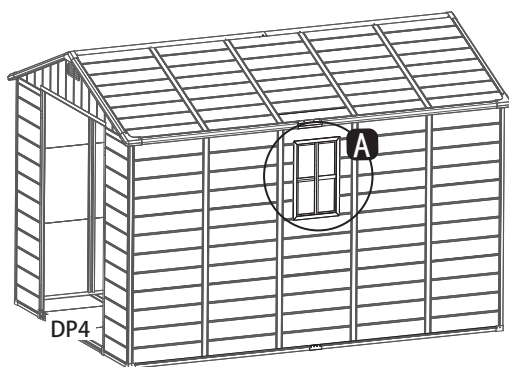

SG10



2 PC

SG101



2 PC

SG102




2 PC

Z410




32 PC

A-1

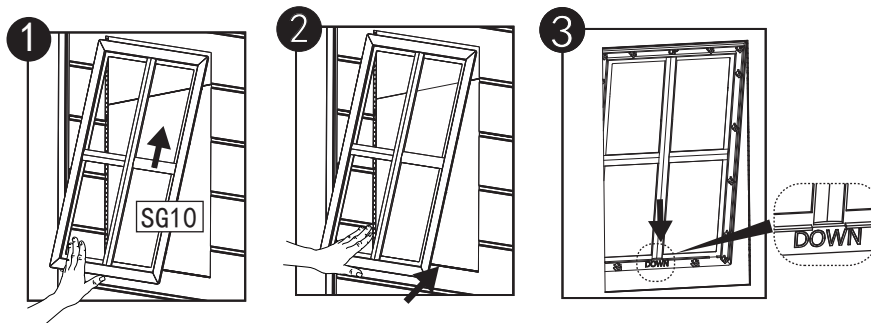


A-2




- Remove the film before fixing SG101

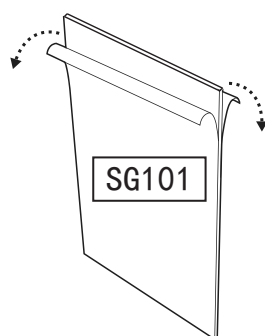

- Two persons are needed for this step, to press SG10 from outside and inside.

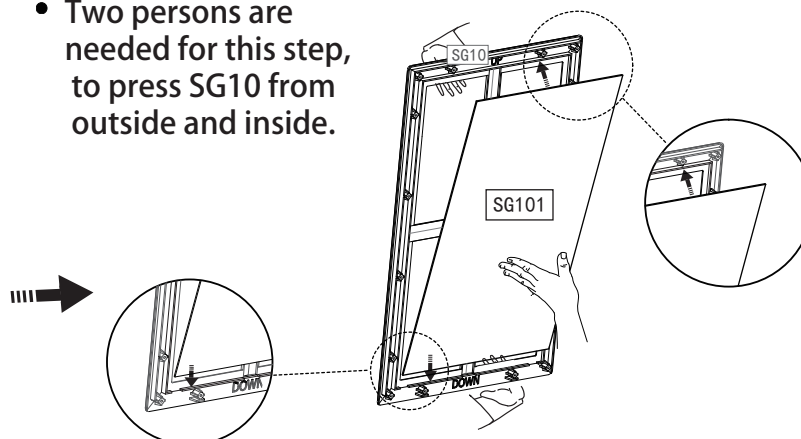

A-3

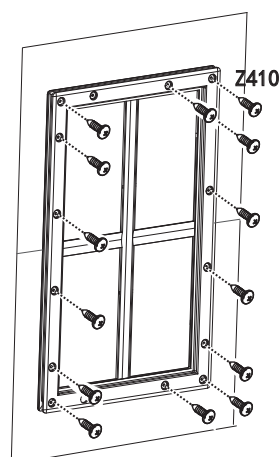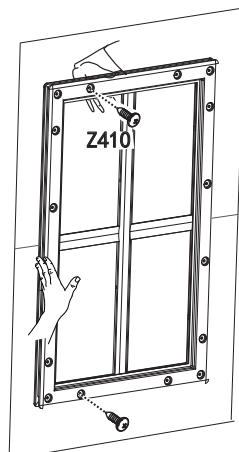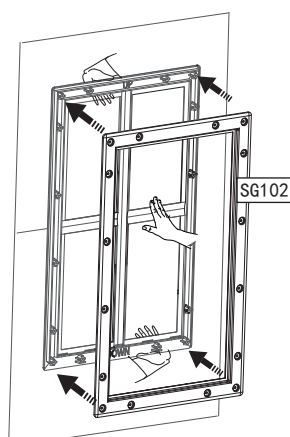



DOOR SECTION



Door mount this is above



SG8

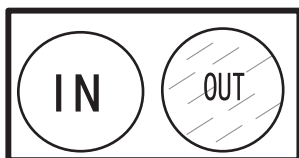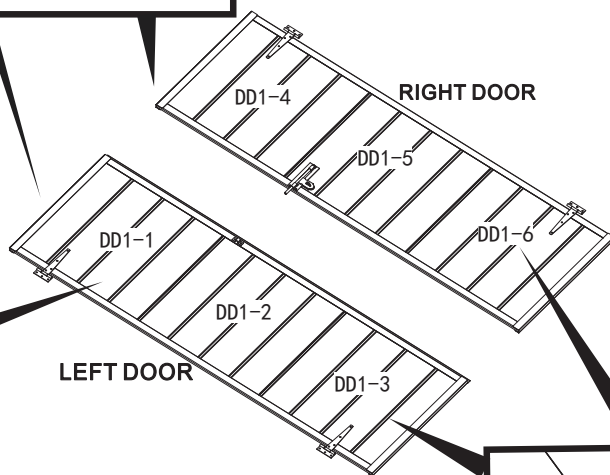




The stripes should be outside



The boards must be straight



Step 35

35-1

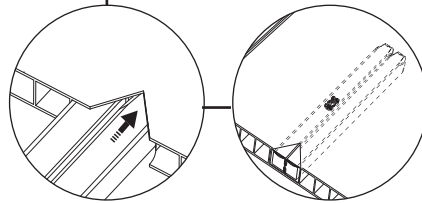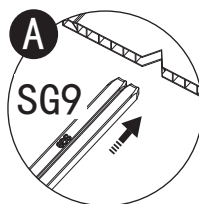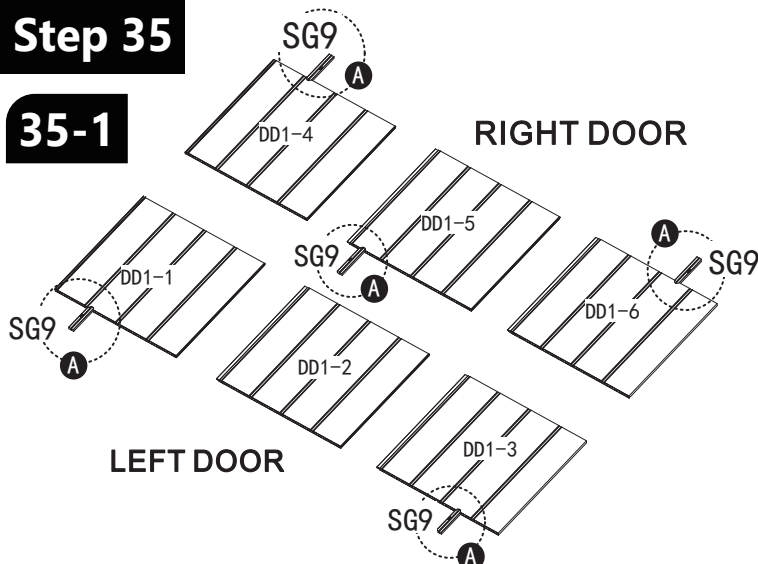


DD1-3 1 PC	DD1-2 1 PC
DD1-5 1 PC	DD1-6 1 PC
DD1-1 1 PC	DD1-4 1 PC
SG9 5 PC	


35-2

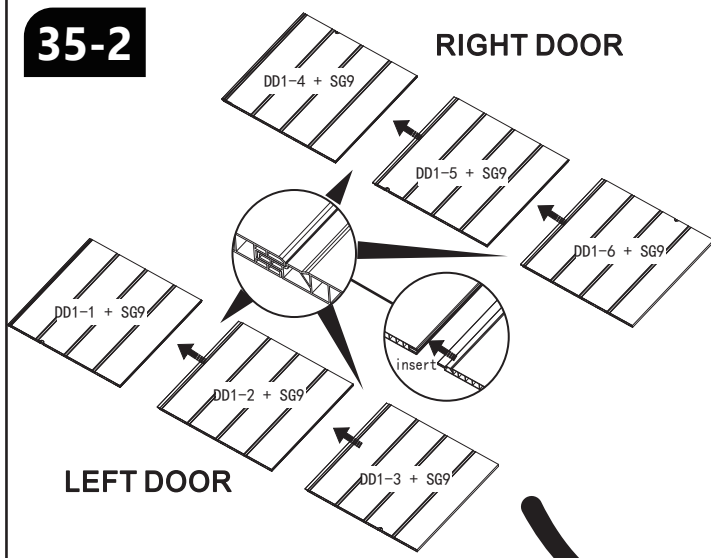

The boards must be straight

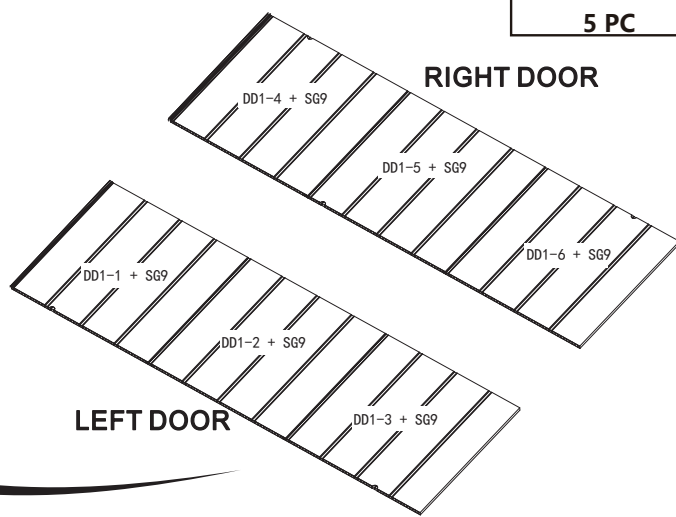


Step 36

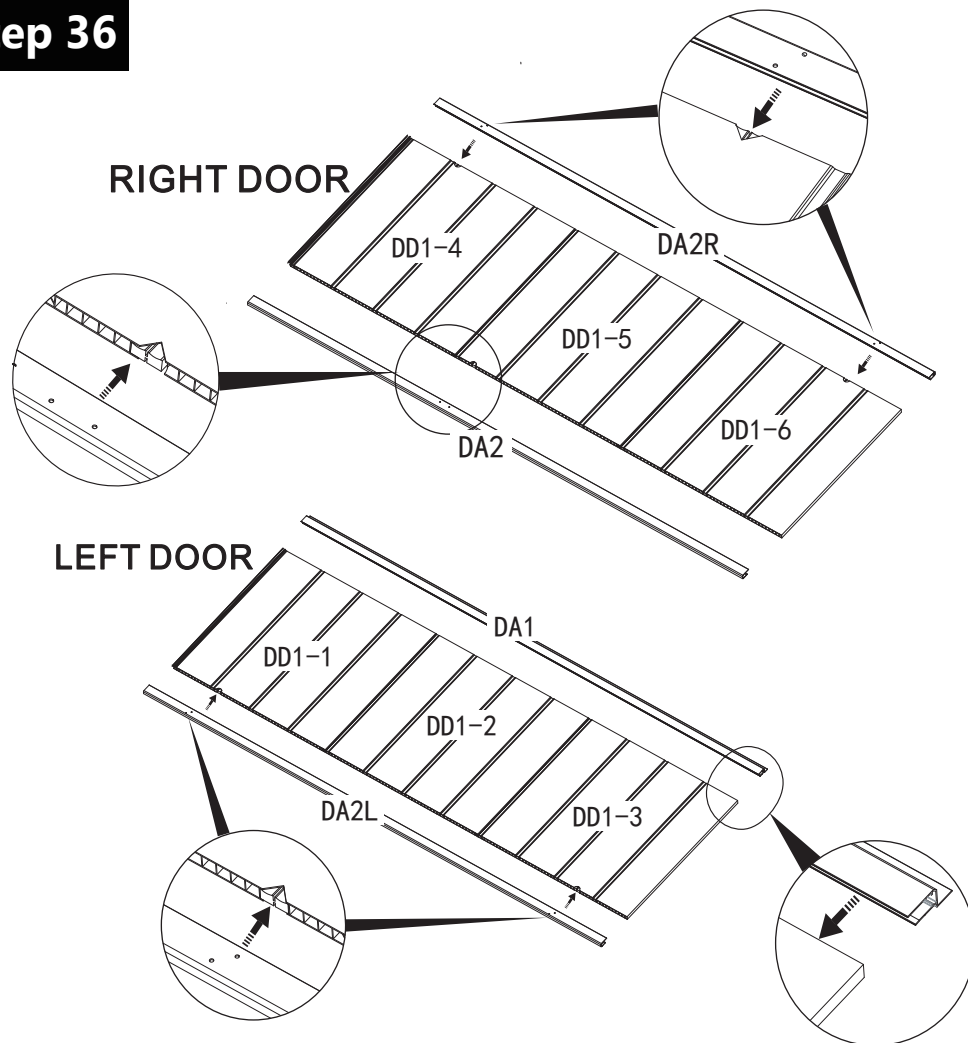

DA2R
1 PC
DA2
1 PC
DA2L
1 PC
DA1
1 PC

Step 37

LEFT DOOR

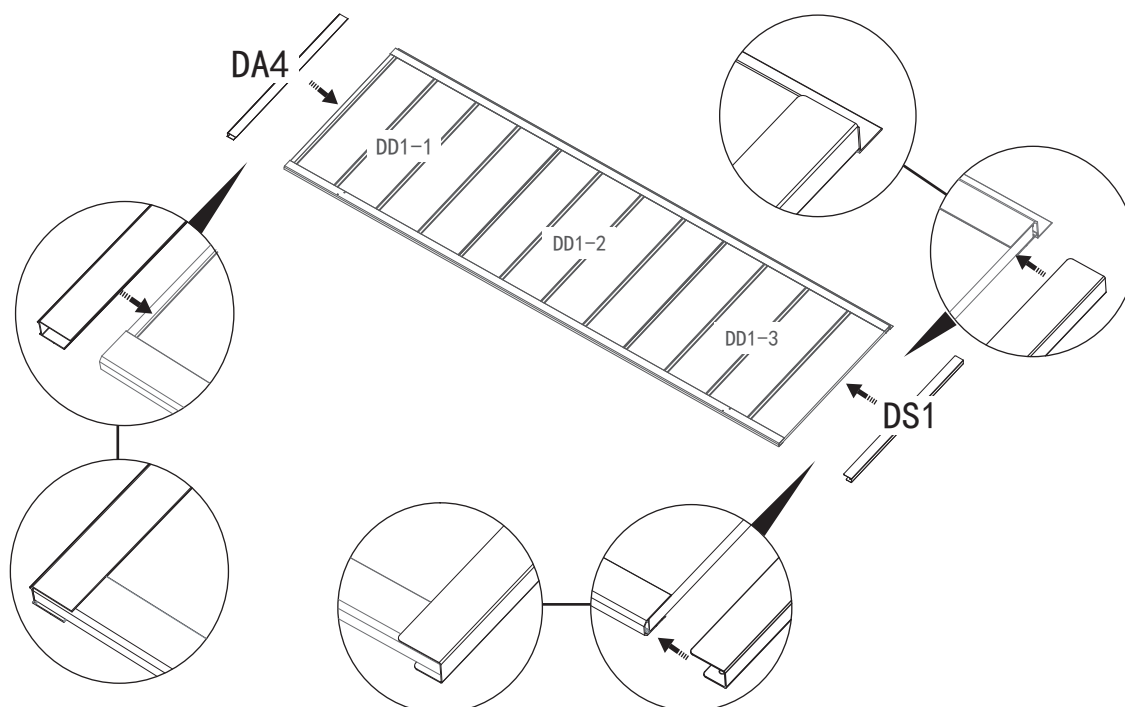

DA4
1 PC
DS1
1 PC

Step 38

RIGHT DOOR

38-1

DA4




1 PC

DS1



1 PC

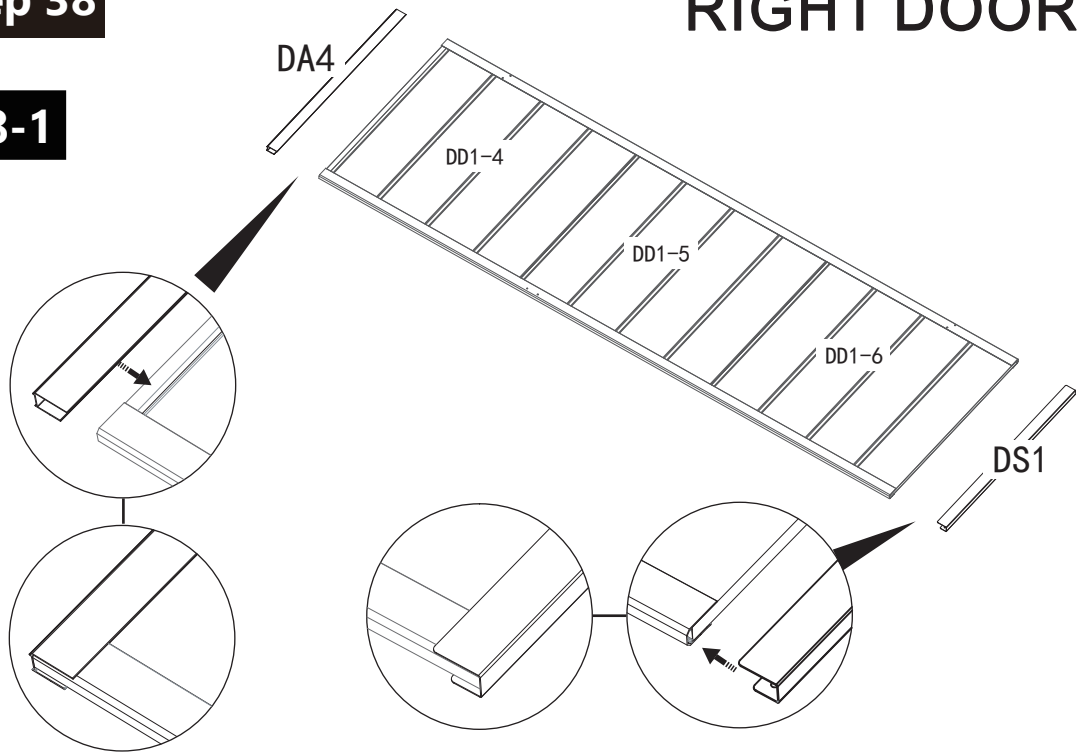


38-2


RIGHT DOOR

LEFT DOOR


Flip the panel.

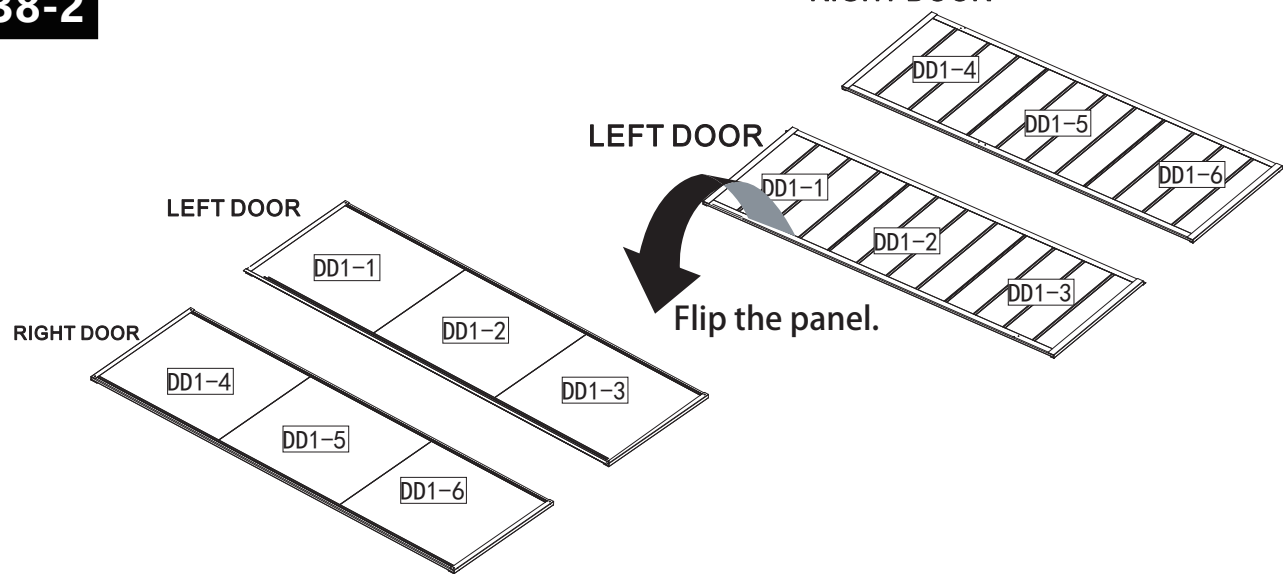


38-3

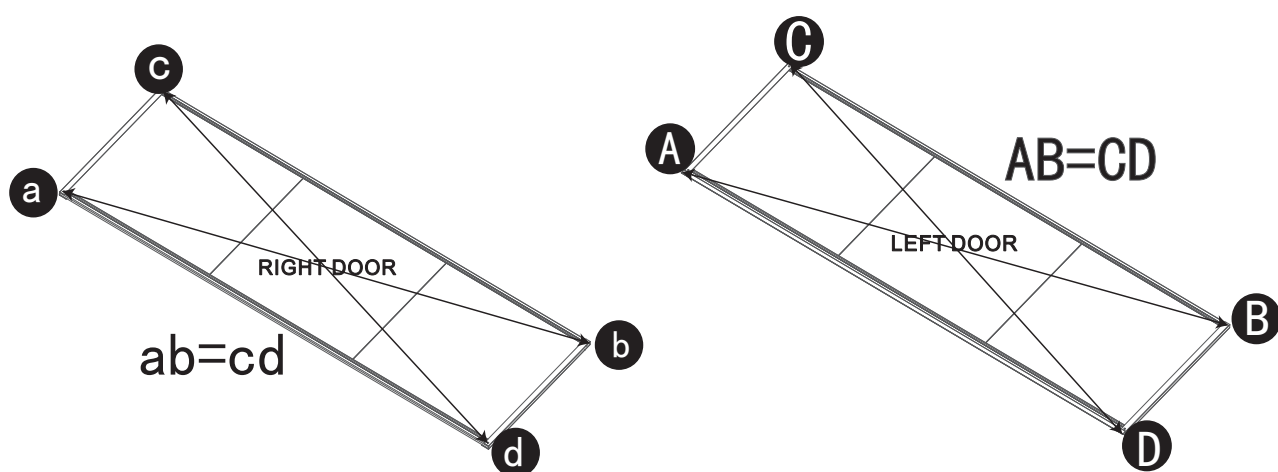

Step 39

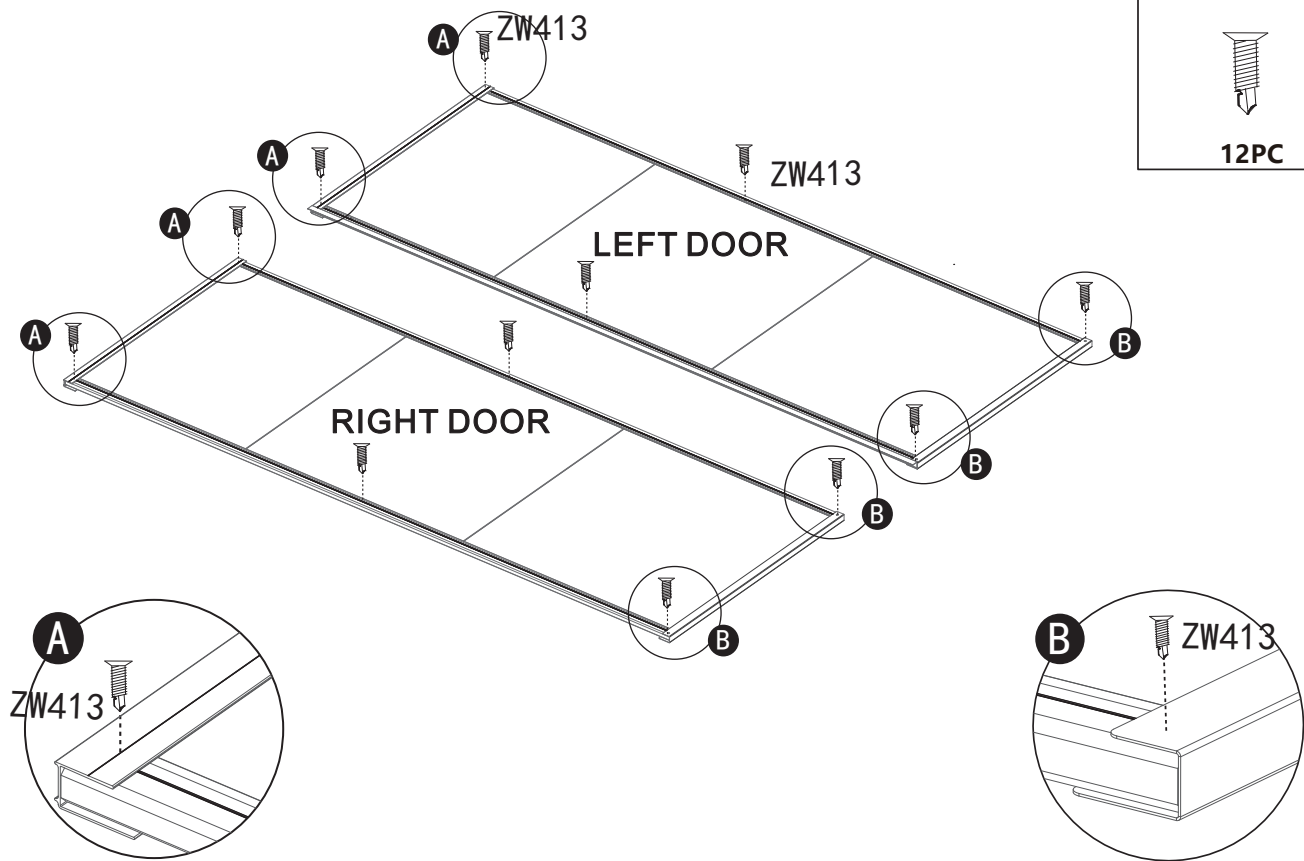


Step 40

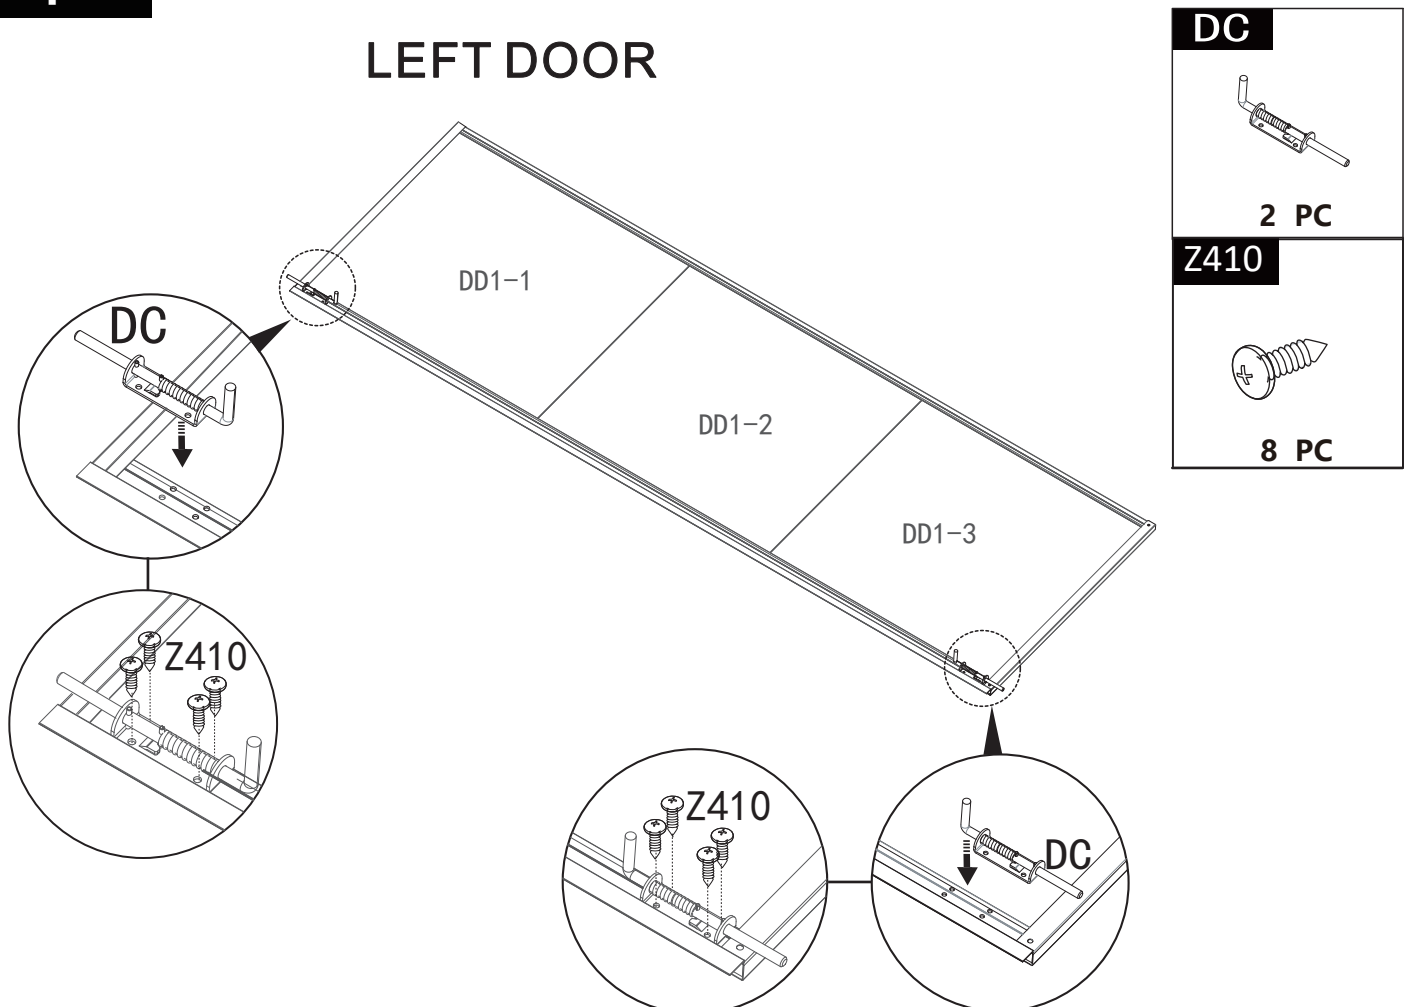


Step 41


41-1

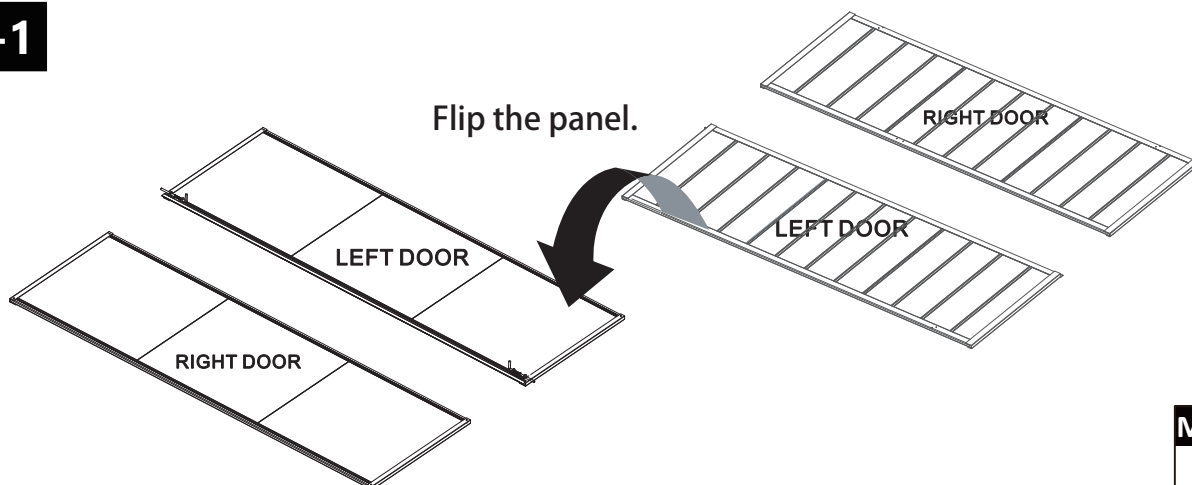

41-2

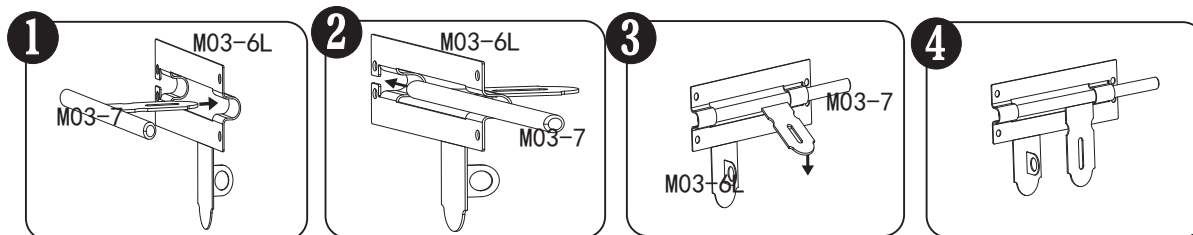


M03-6L



1 PC

M03-7




1 PC

Z410




12 PC

MO1






4 PC






M03-6L + M03-7

41-2

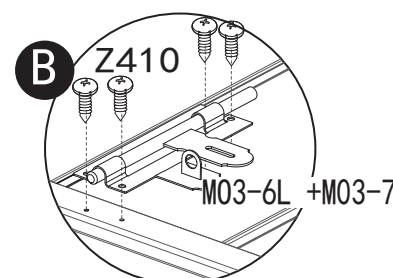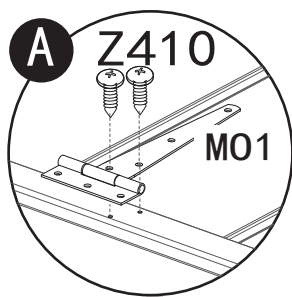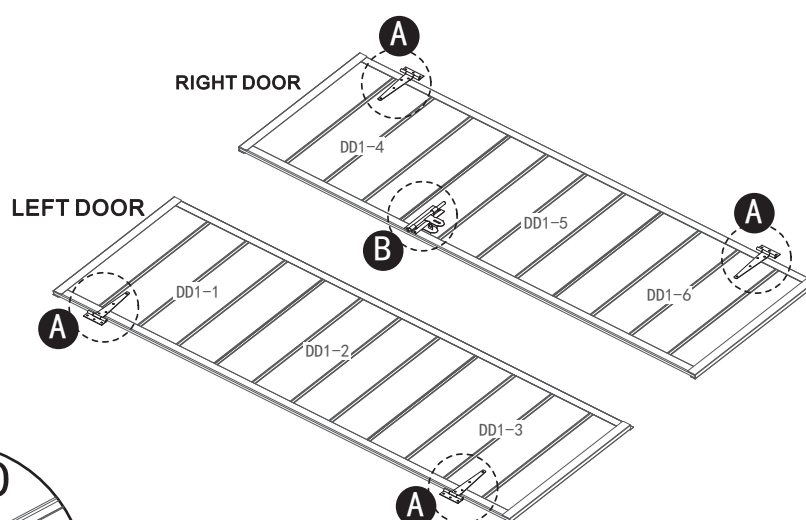


Don't fasten the screws in this step to adjust the positions of doors

Step 42

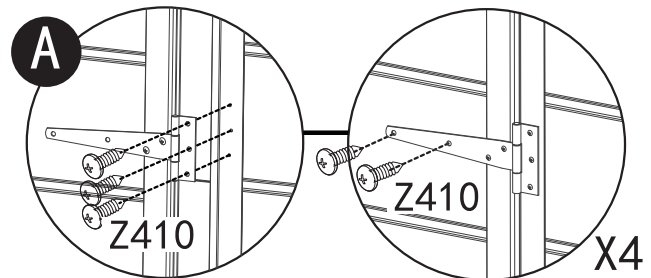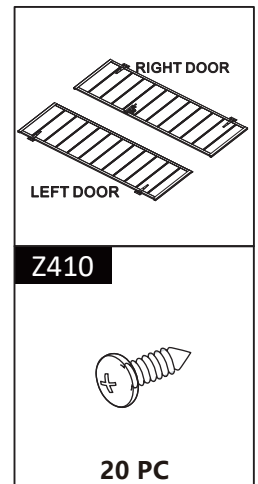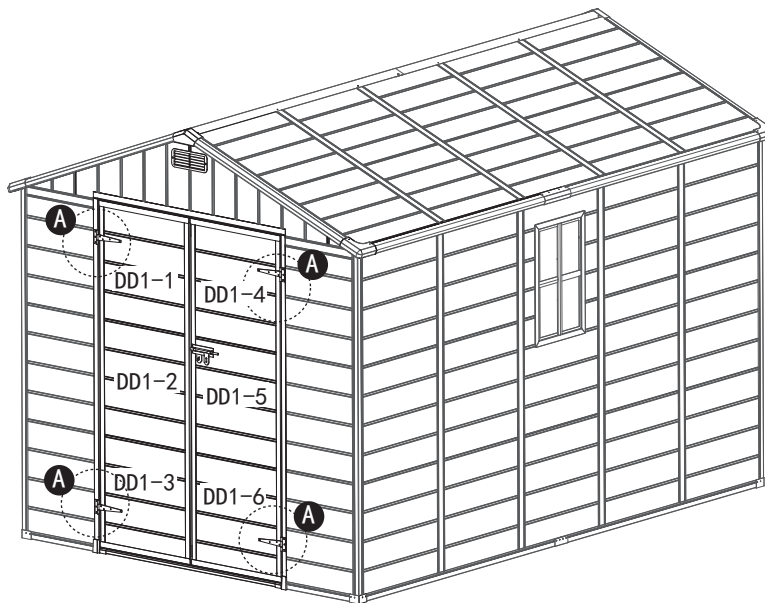

Nail the door after place adjustment and fasten all the screws.

Step 43

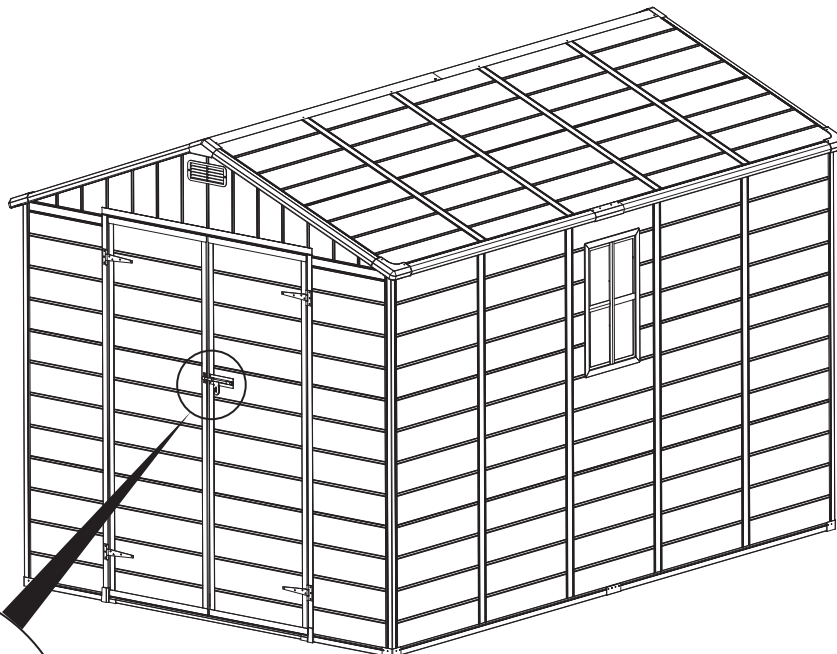

ZW413



2 PC

MO4



1 PC

