

INSTRUCTION GUIDE



①

Install the three in one screws and wooden pins into the board holes



②

Install the small wooden board on top of the layer board



③



Install the wide wooden strip on Figure 2, as shown in Figure 4



④



⑤


Install the other side screws in Figure 5 and install them on Figure 1

Install the middle layer board on Figure 1



⑥

Install the curved layer board at the bottom of Figure 1

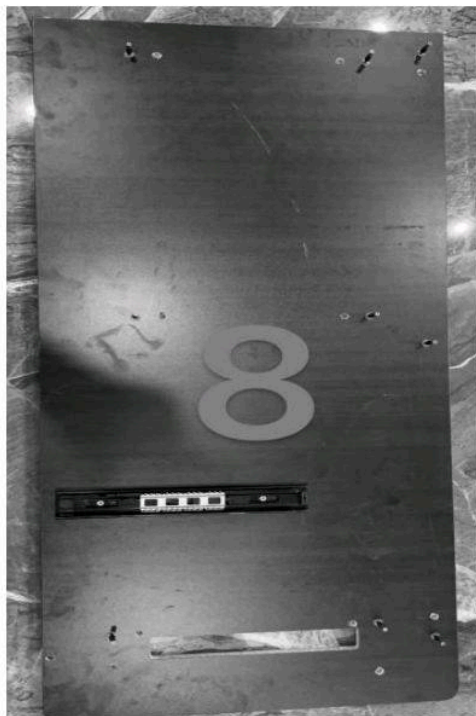


⑦

Install the three in one screws and wooden pins into the board holes and put on the guide rails




⑧

Combine the Figure 7 and the Figure 8

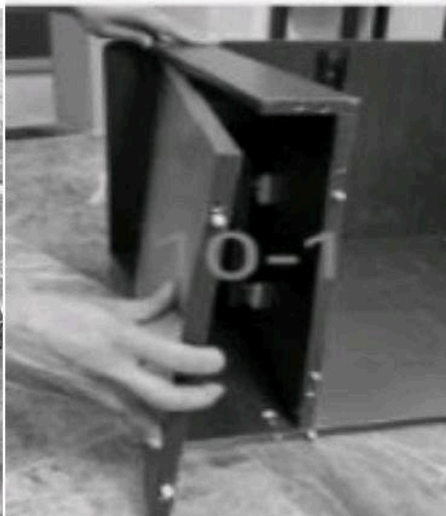

⑨

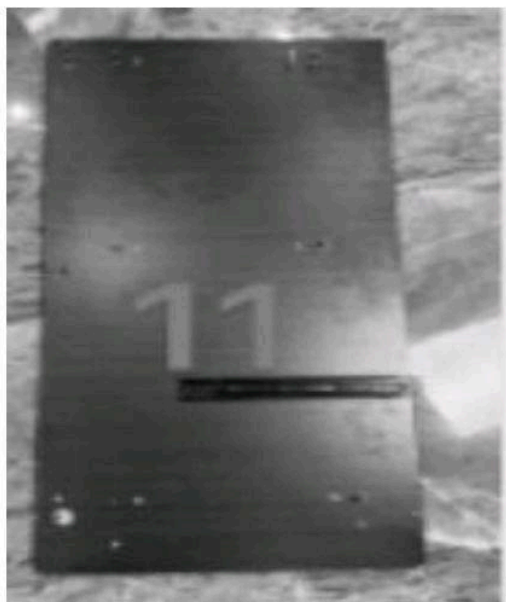


⑩

Install the side board



⑪

Install the drawer

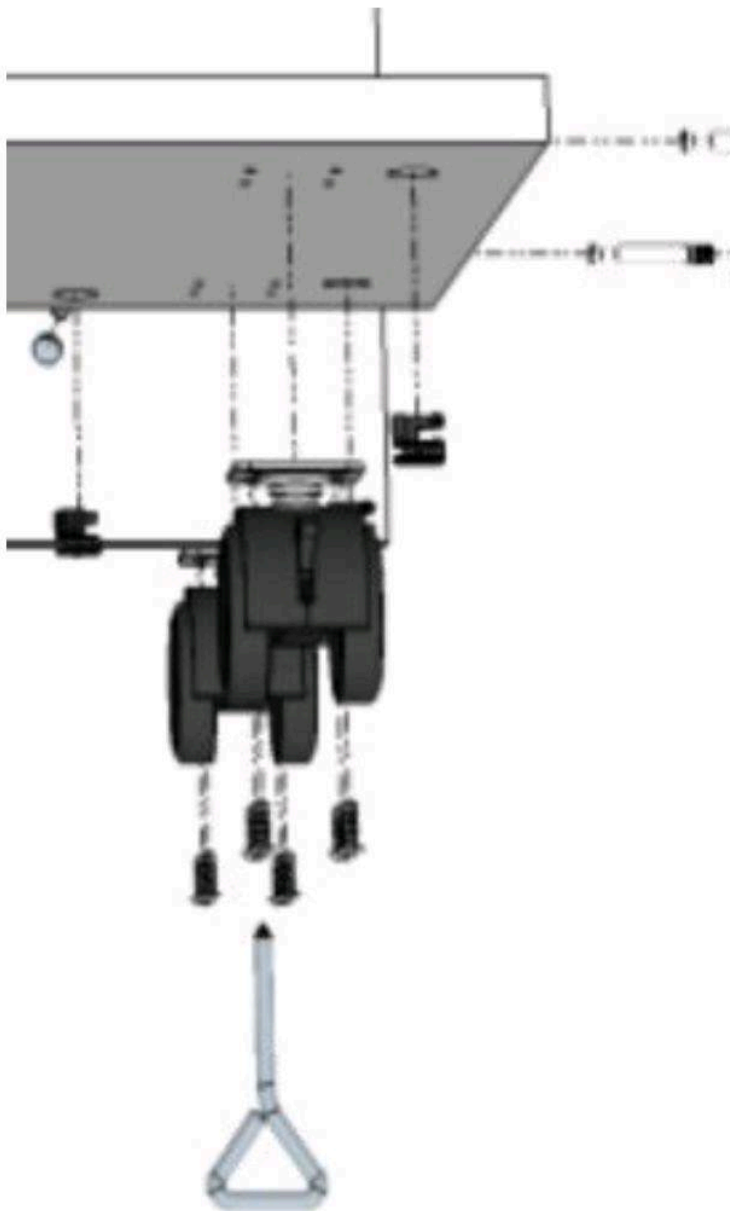

⑫

Install the wheels