## **RUSTIC Desk 120**

Assembly Instruction



# **Vicissitudes**

#### INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


#### **PRECAUTIONS**

- 1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
- 2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
- 3. The main components of the product are relatively heavy. Please pay attention to safety during installation.
- 4. The product is not stable during installation. Please do not move it randomly until it is completely installed.
- 5. If you have any questions during installation, please contact the customer service in time.

\*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.

\*IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.

#### Parts List

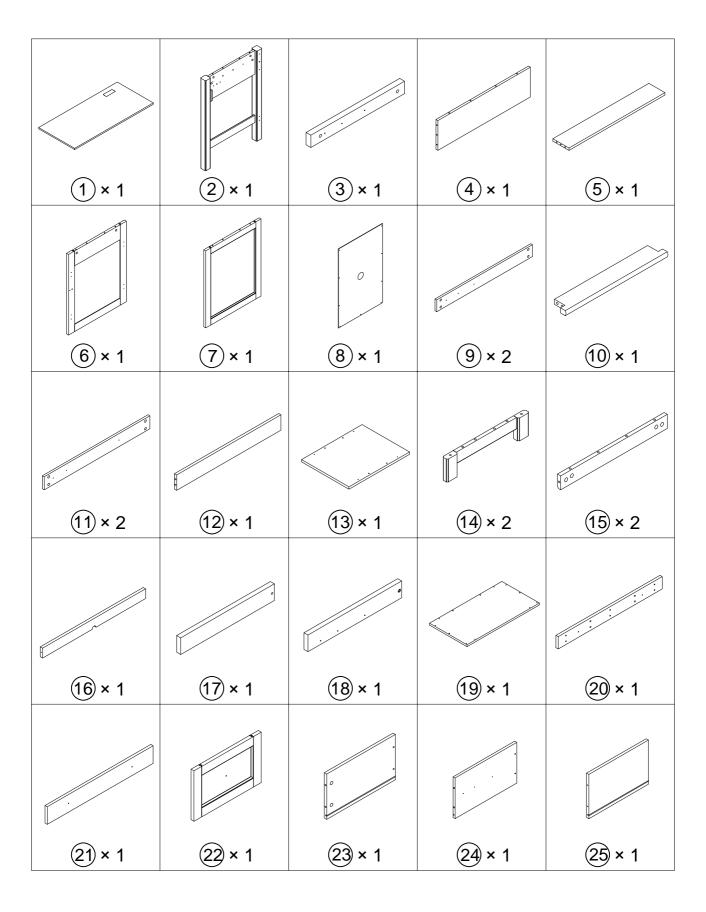


#### Parts List


26 × 1	27 × 1	28 × 1	29 × 1	③0 × 1
③1) × 1				
9, 1				


#### Hardware List

			Donath	
A × 34	B × 34	C × 34	D × 24	E×8
		E DODO	13 B	
F × 8	G × 4	H × 45	I × 1	J × 20
K × 1	L×6	M × 4	N × 2	O × 5
P × 2	Q × 3	R × 2	S × 2	T × 2
[]				

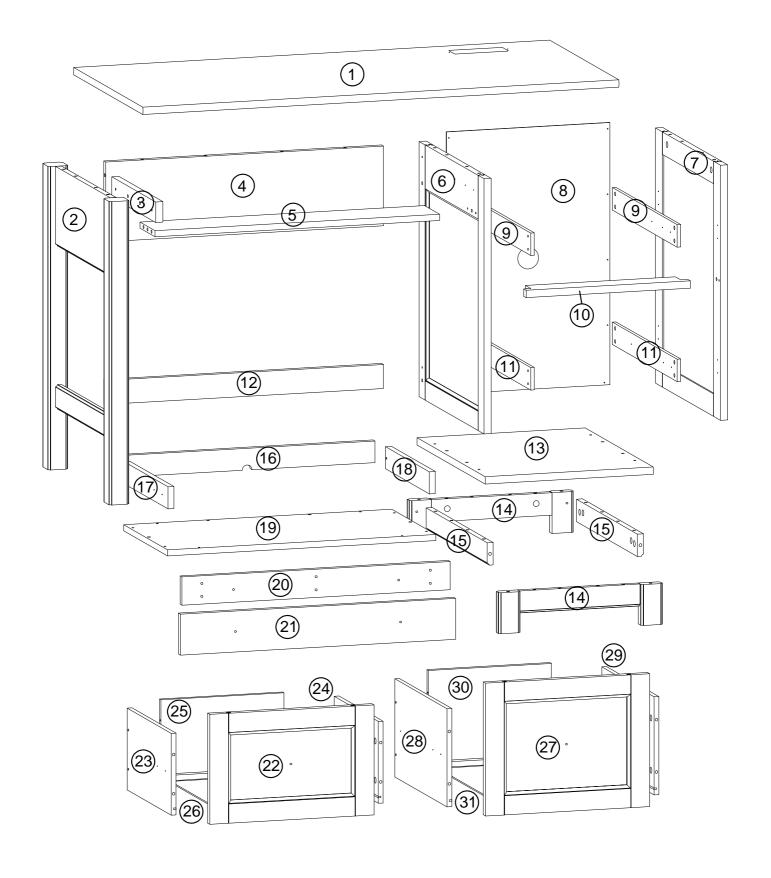




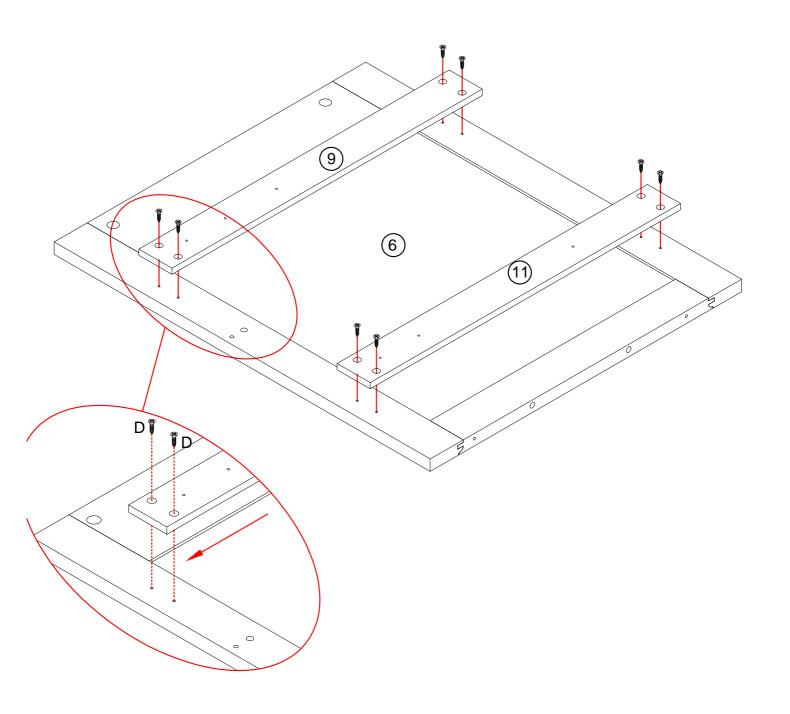

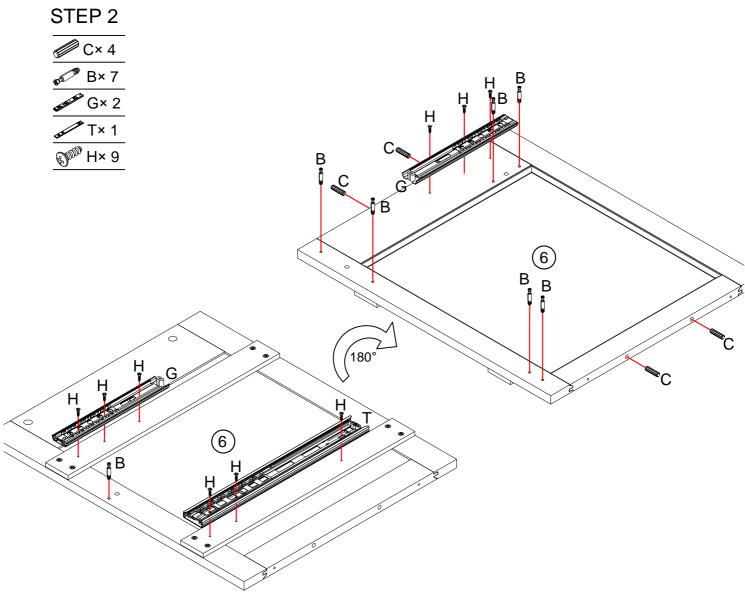


#### **Detaching the Slide**

Press lever to disconnect and separate the Extension Slide (G-2) from the Slide (G-1). Do this for both drawer Slides.




Adjust SLIDE to align with the screw holes.

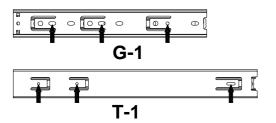


#### **Detaching the Slide**


Press lever to disconnect and separate the Extension Slide (W-2) fron the Slide (W-1). Do this for both drawer Slides.









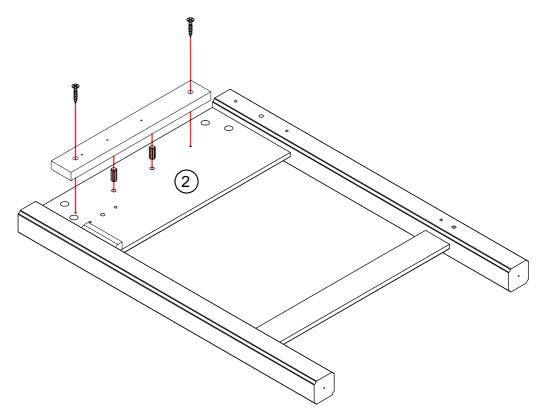


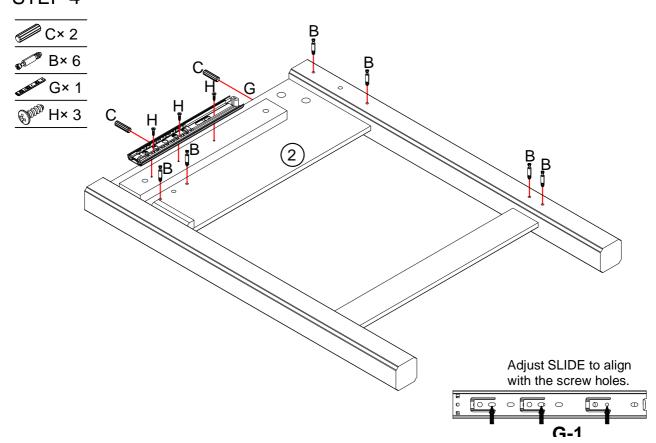




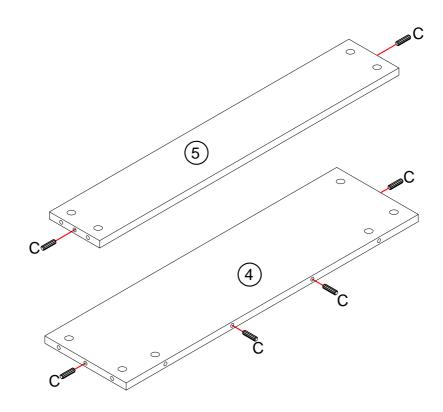

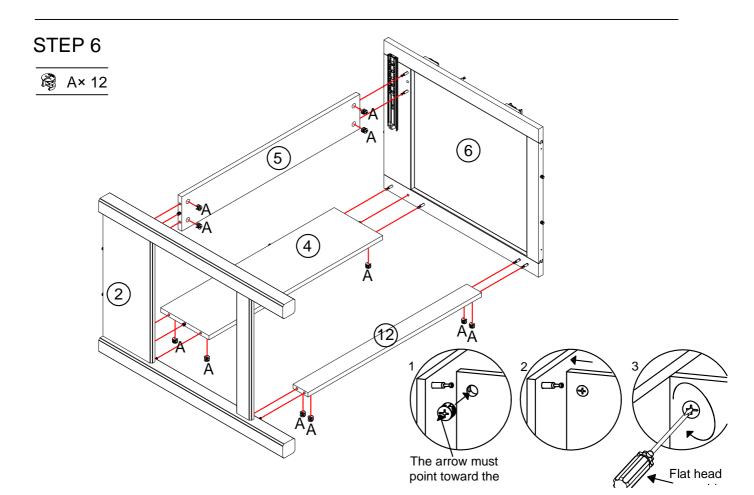

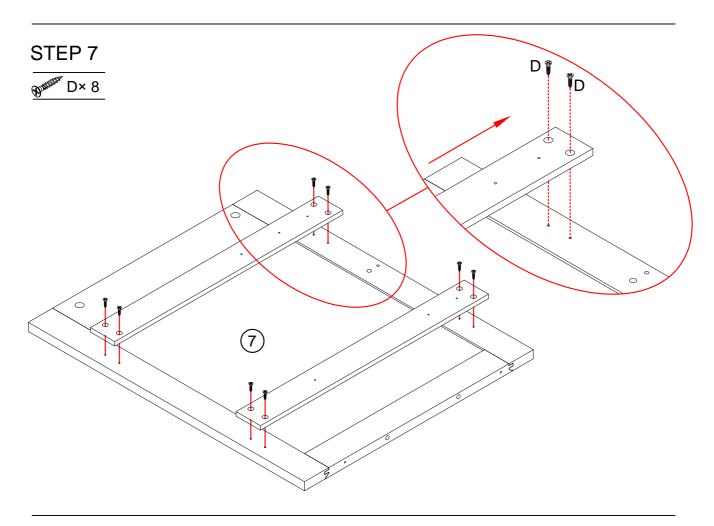

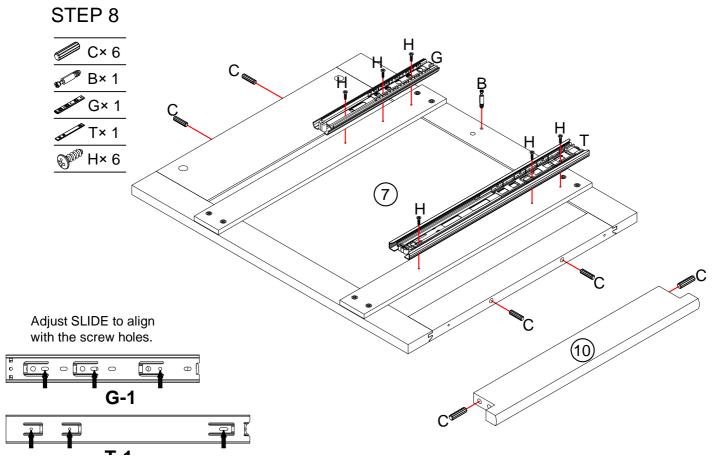





•

Flat head


The arrow must point toward the

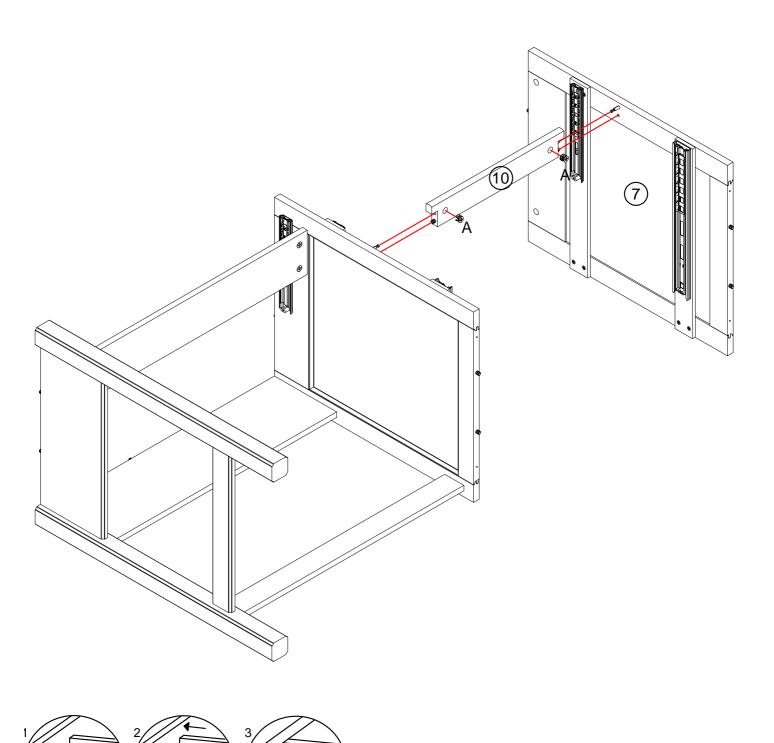



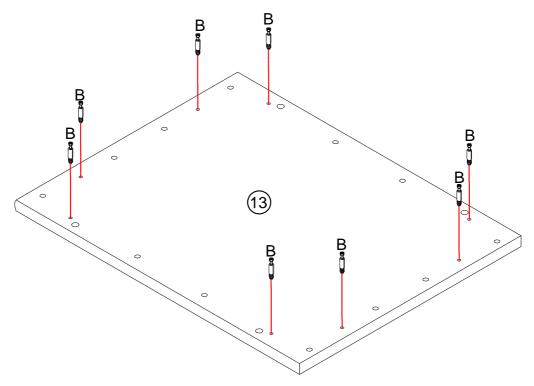




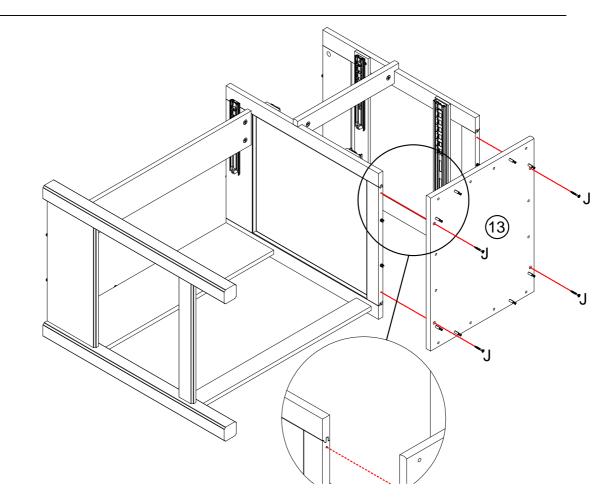


STEP 12



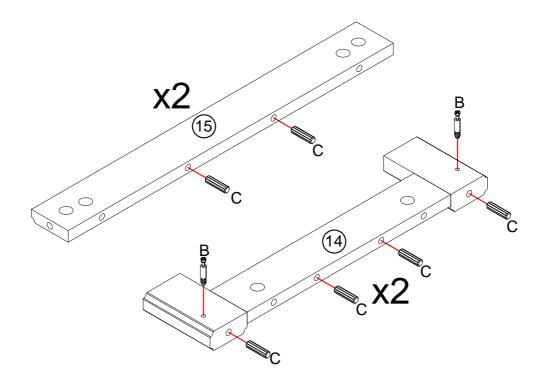


STEP 13




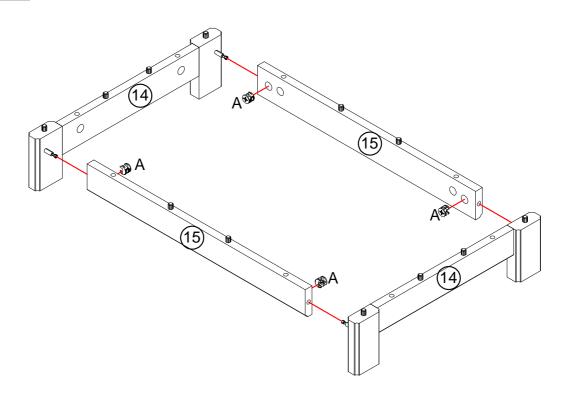


# STEP 14 A×8 The arrow must point toward the edge of the board. Flat head screwdriver

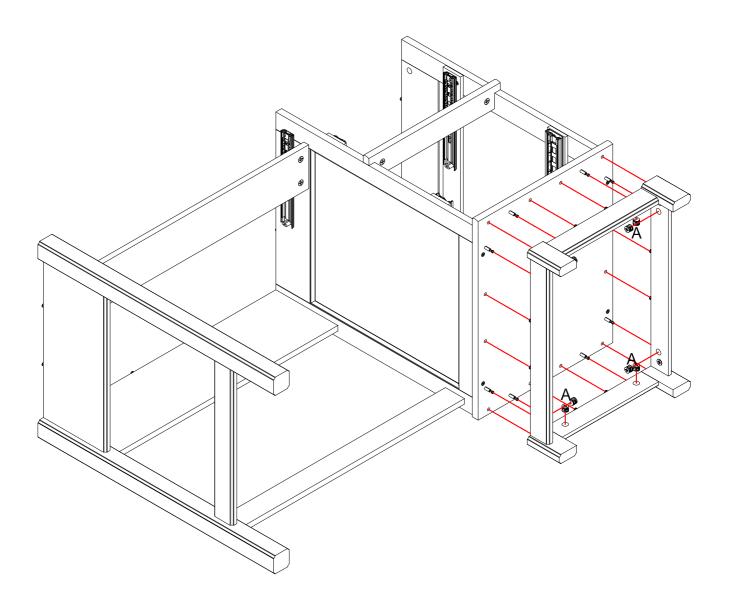



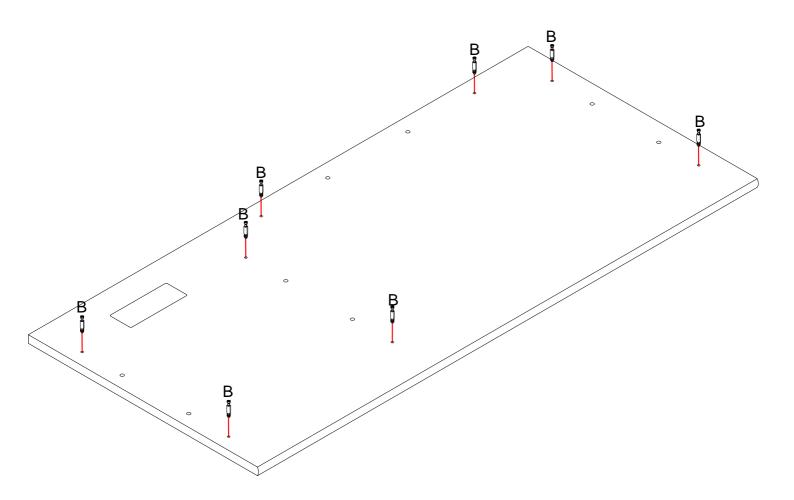



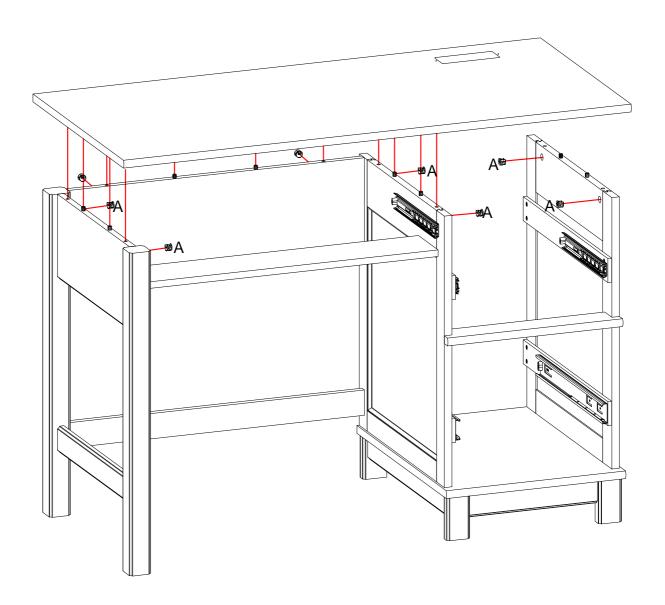





l× 1



N× 2

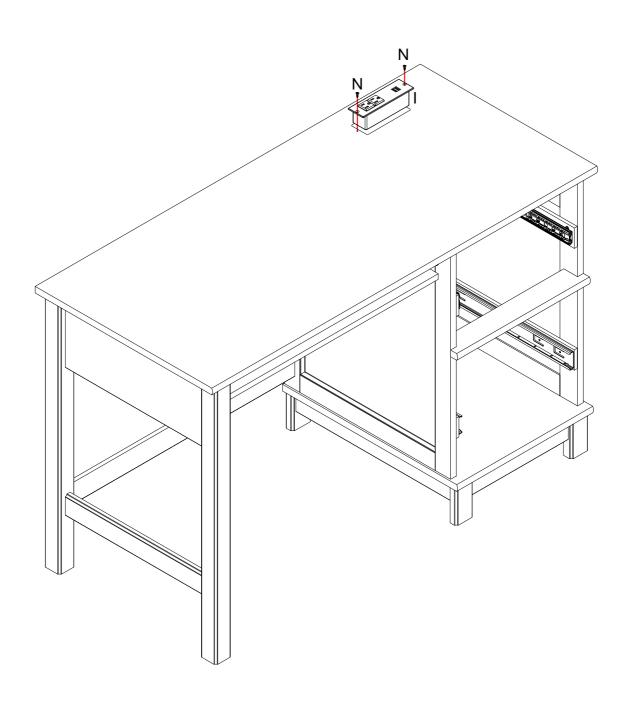




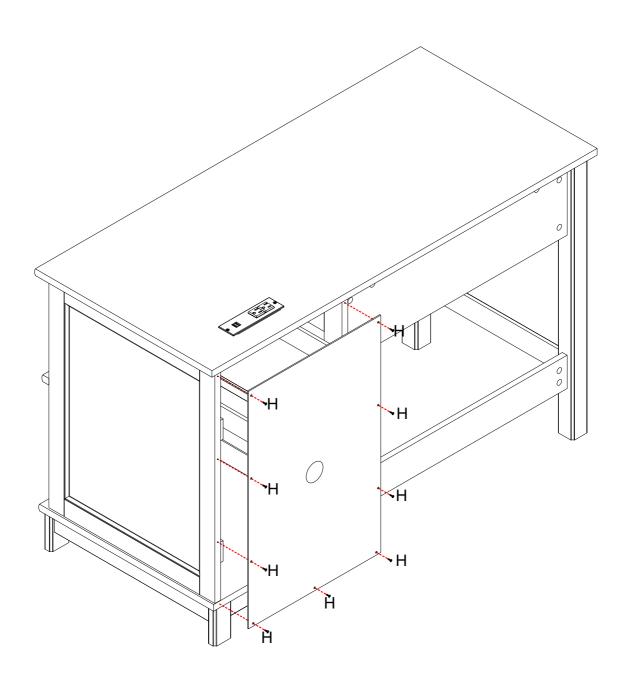


STEP 19




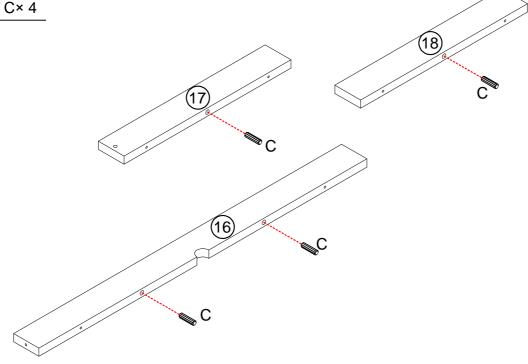




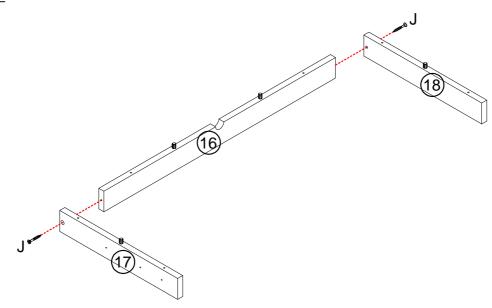



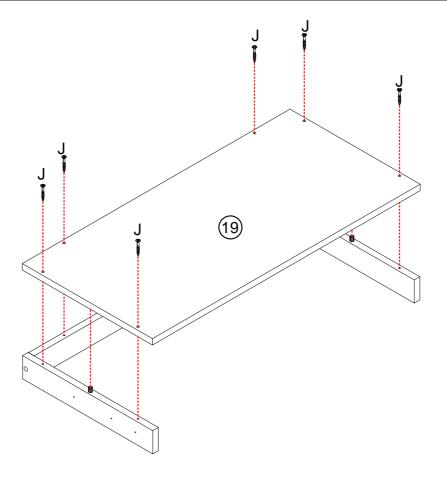





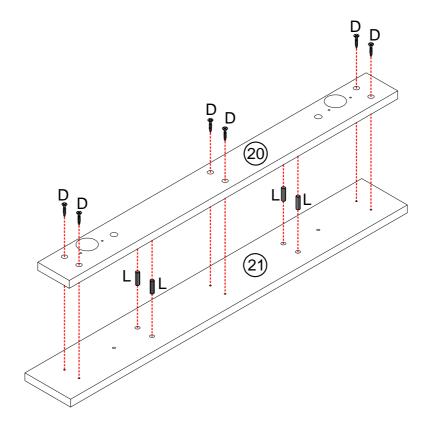





**S** × 2

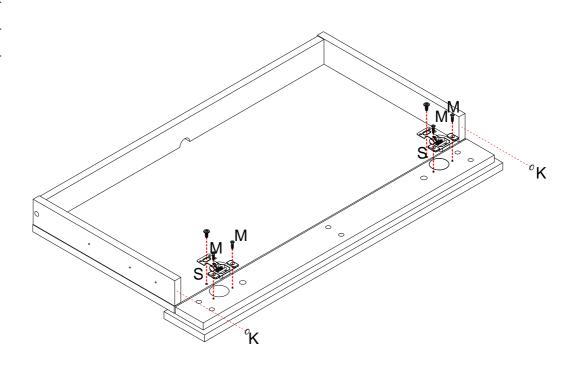




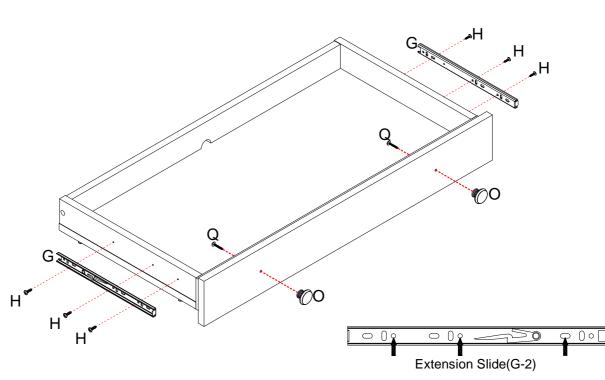




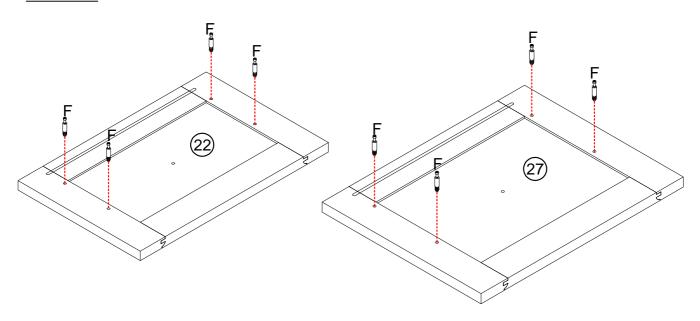

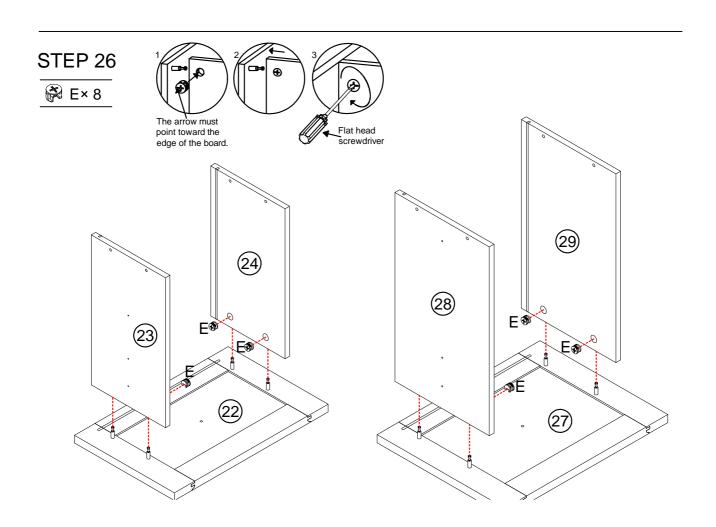

STEP 27

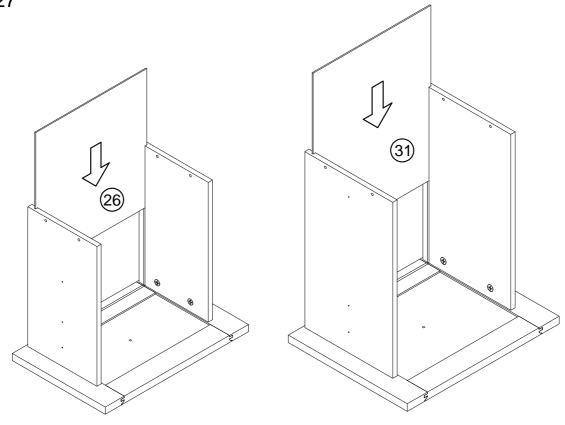

STEP 28



