

83370 Sideboard Tomahawk

EAN: 4025621833703



Email: info@kare.de


KARE Design GmbH Zeppelinstraße 16, 85748 Garching-Hochbrück Germany

Geschäftsführende Gesellschafter: Jürgen Reiter, Peter Schönhofen


KARE Design GmbH HRB 164 249 Amtsgericht München Sitz: München Steuernummer: Finanzamt München für Körperschaften, 143/153/40064 USt-ID: DE 250 622 249

www.kare.de www.kare-design.de


#1

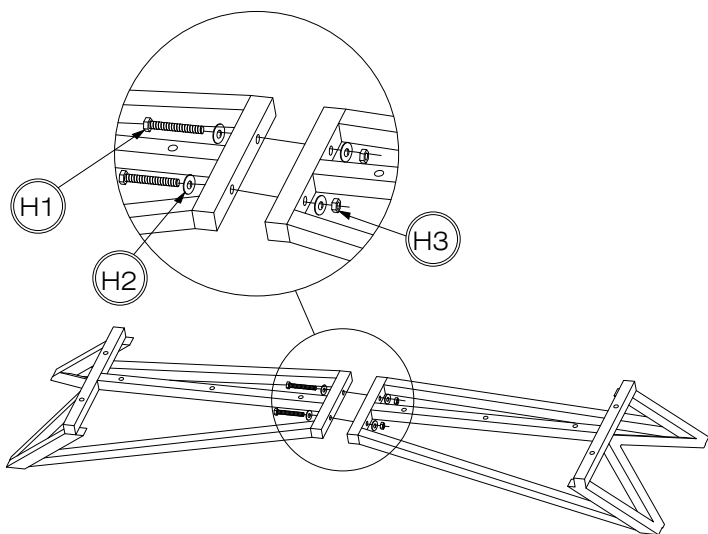


#2

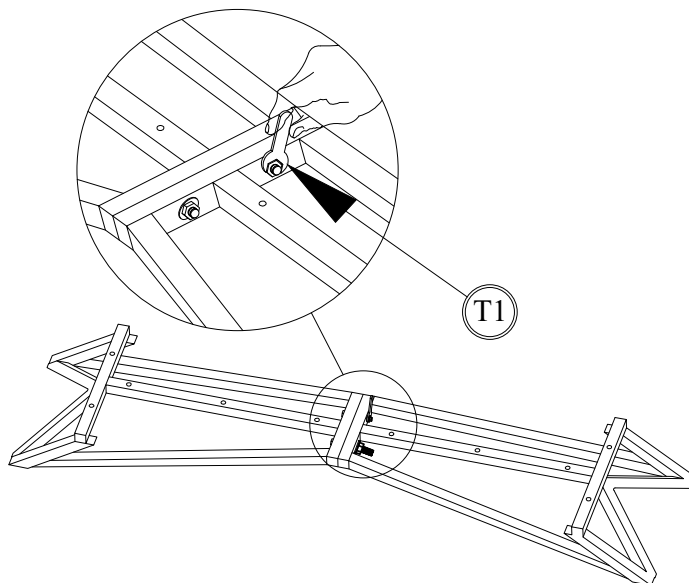


#3

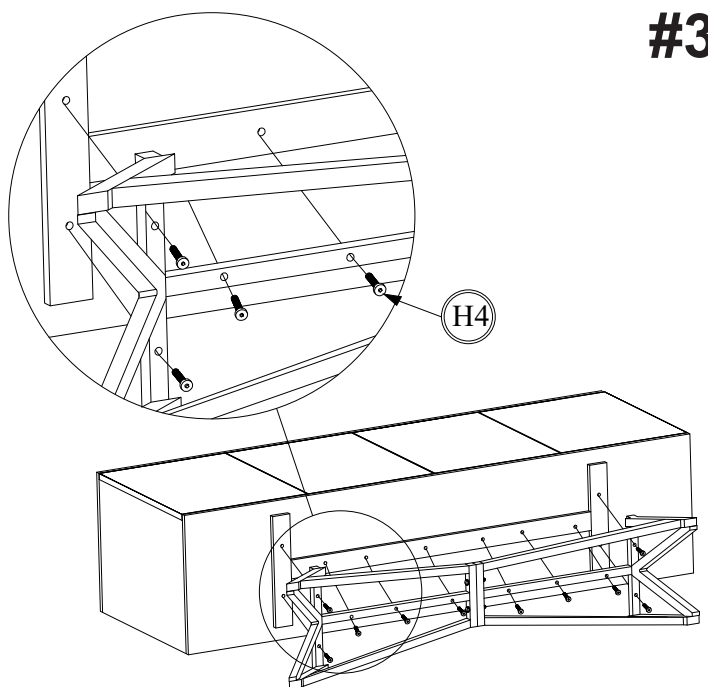

#4

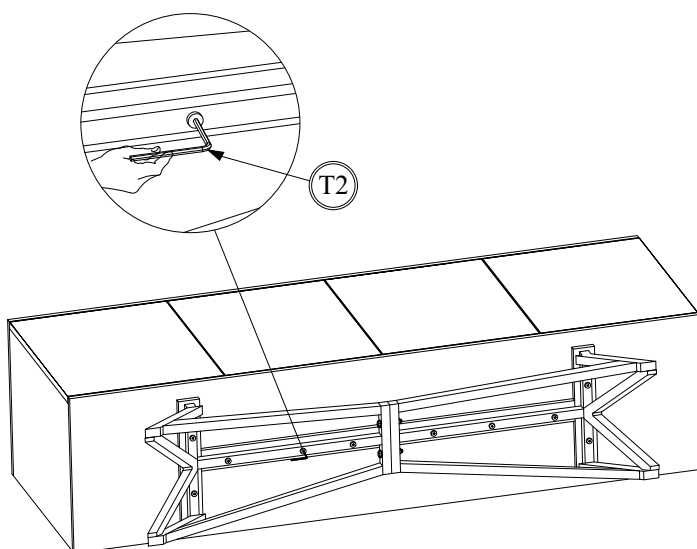


A

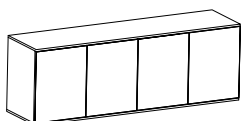


1 Pc

B



2 Pcs

H1




2 Pcs

H2




4 Pcs

H3

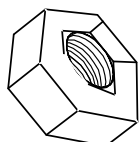

2 Pcs

H4



10 Pcs

T1




1 Pc


T2



1 Pc

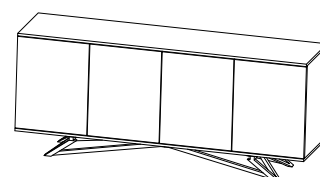


TIP STRAP FITTING INSTRUCTIONS

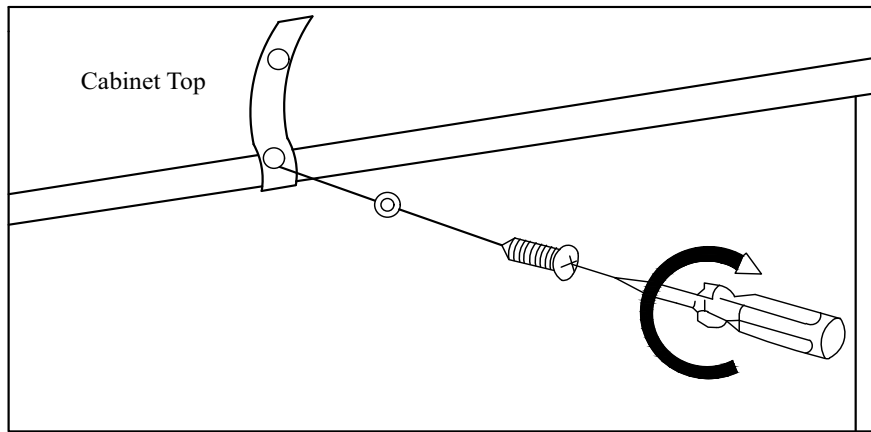


STEP : 2

Make a mark on the wall through the strap .

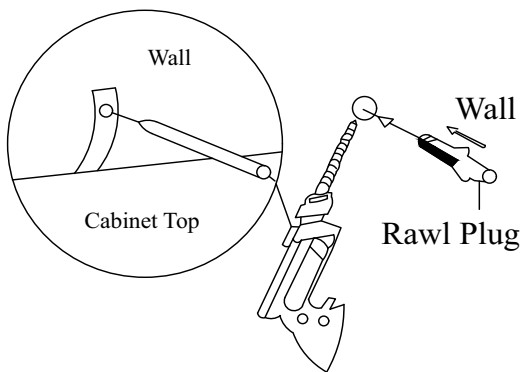


Drill a hole in the wall and insert the rawl plug .

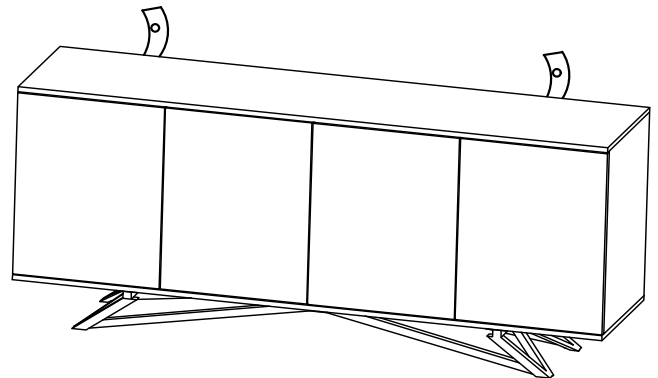

STEP : 3

Insert screw through washer into hole in wall

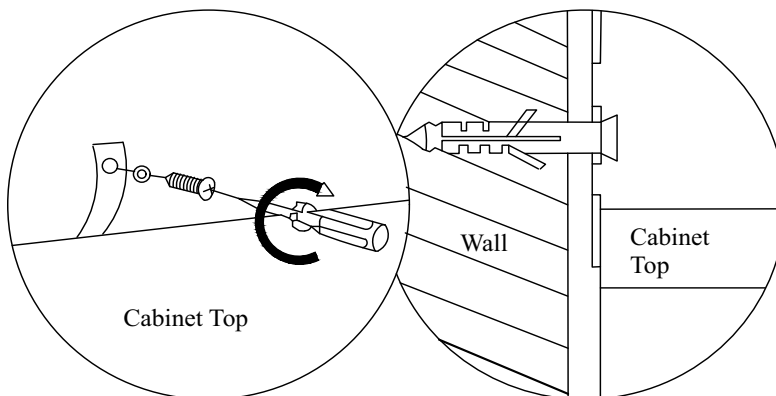

NOTE: Wall Fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work) You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The strap and screw which to fix the strap on to the furniture are provided only.

HARDWARE LIST

