


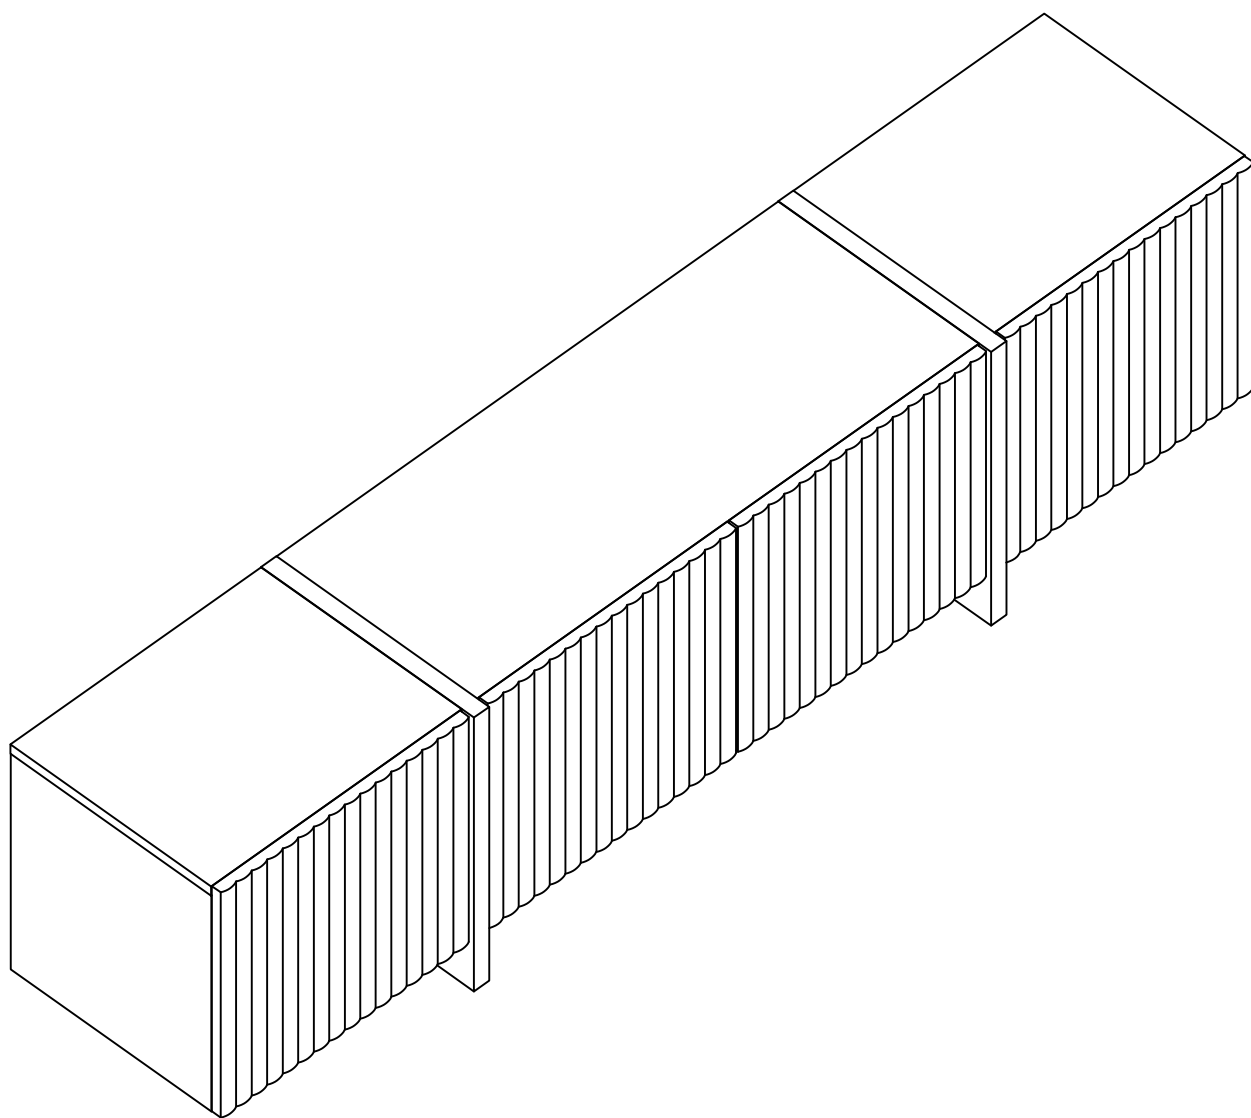

TV Stand

Made In China

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.




WARNING







Children have died from furniture tipover. To reduce the risk of furniture tipover:













- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Parts List (EN) / Teile Liste (DE)




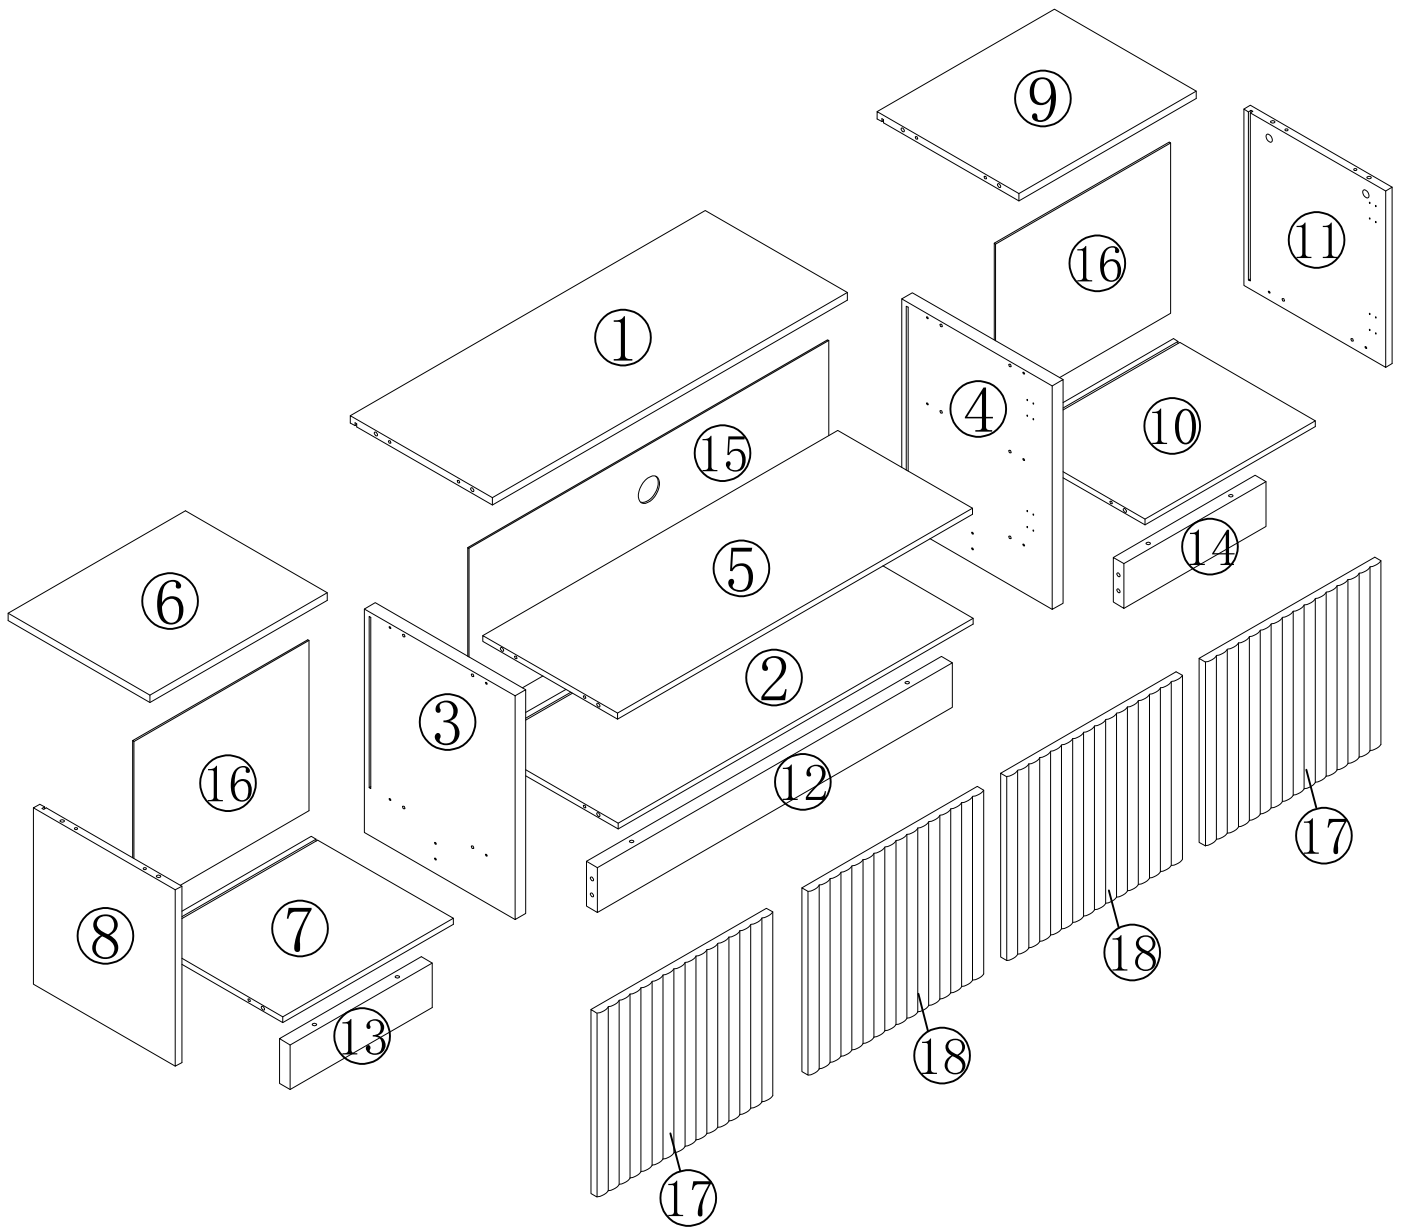








Parts List (EN) / Teile Liste (DE)

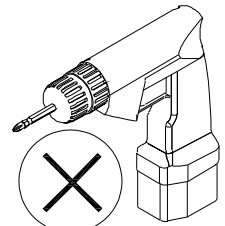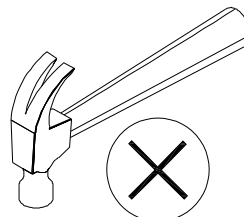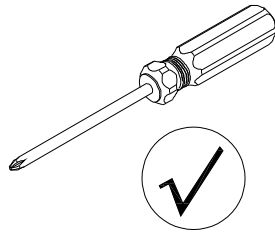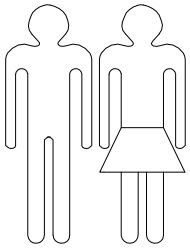

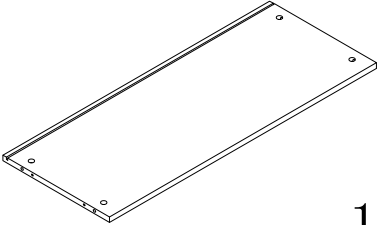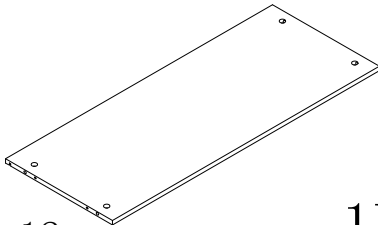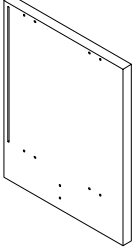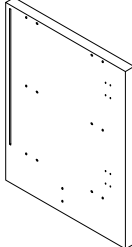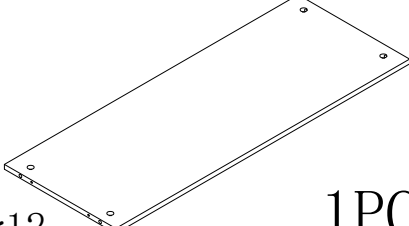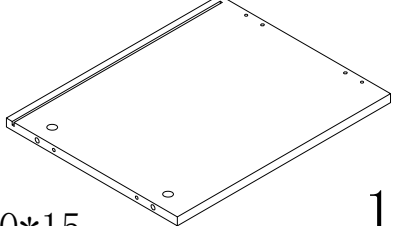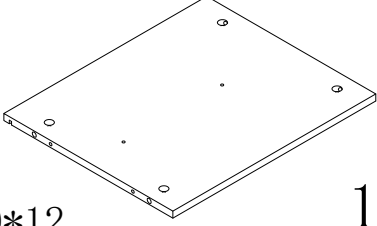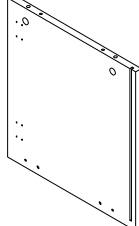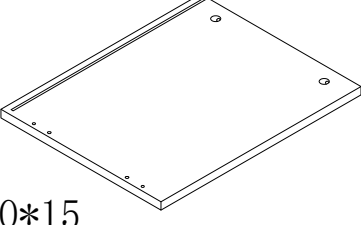
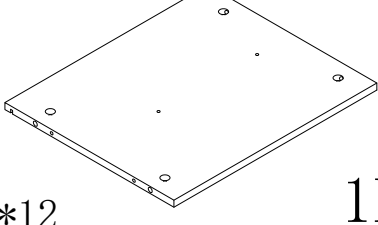
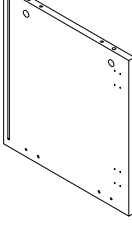
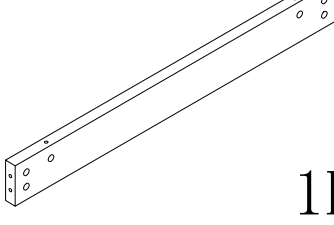
①  825*330*15 1PC	②  825*330*12 1PC
③  450*350*25 1PC	④  450*350*25 1PC
⑤  825*313*12 1PC	⑥  412*330*15 1PC
⑦  396*330*12 1PC	⑧  355*330*15 1PC
⑨  412*330*15 1PC	⑩  396*330*12 1PC
⑪  355*330*15 1PC	⑫  825*90*25 1PC







Parts List (EN) / Teile Liste (DE)

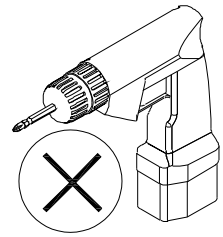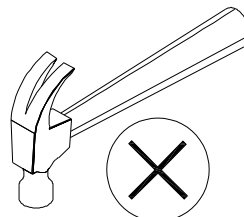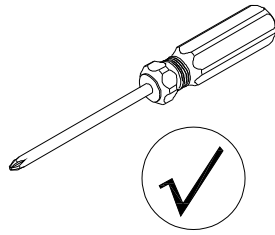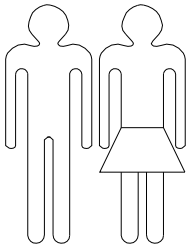

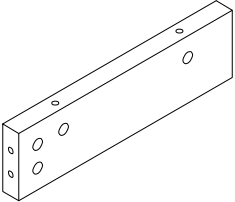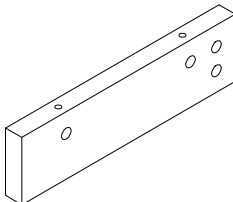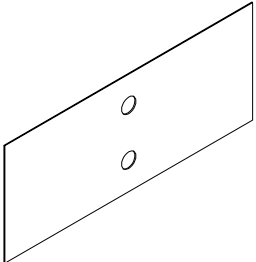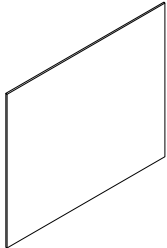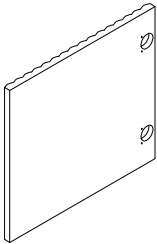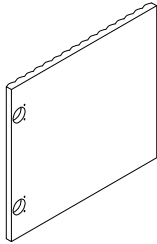⑬  330*90*25 1PC	⑭  330*90*25 1PC
⑮  836*343*3 1PC	⑯  407*343*3 2PCS
⑰  370*408*18 2PCS	⑱  370*408*18 2PCS




Hardware List (EN) / Teile Liste (DE)

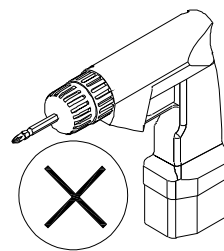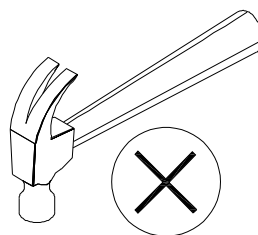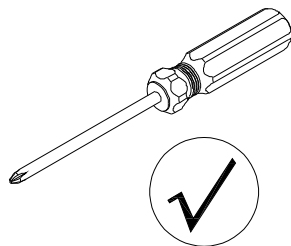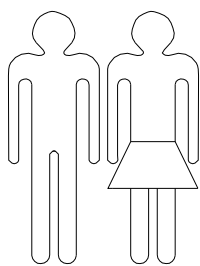

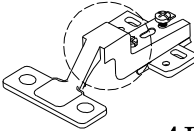
A  Ø15*9mm 42PCS	B  Ø6*35mm 42PCS	C  Ø6*30mm 28PCS	D Full overlay  Ø35 4PCS
E Insert  Ø35 4PCS	F  Ø3.5*14mm 48PCS	G  Ø3*16mm 16PCS	H  14*13*9mm 16PCS

Assembly (EN) /Montageschritte (DE)

CAM BOLT INSTALLATION AS BELOW:

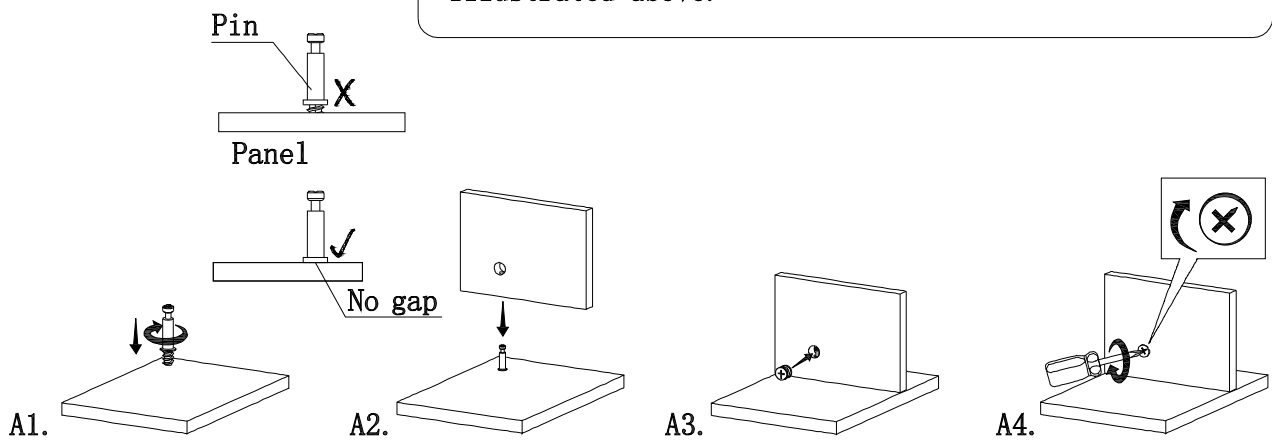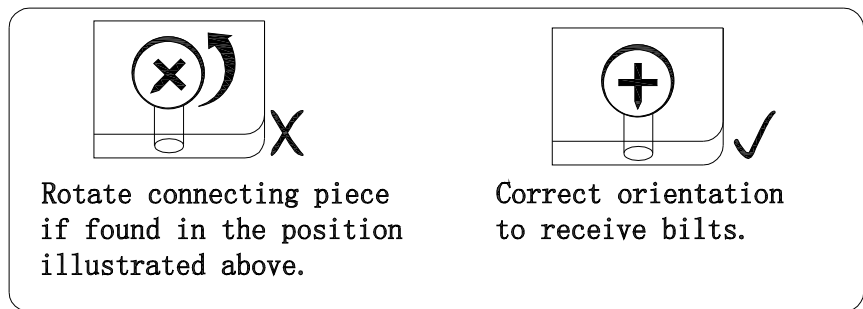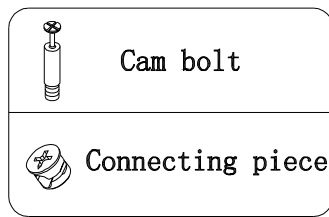



STEP 1

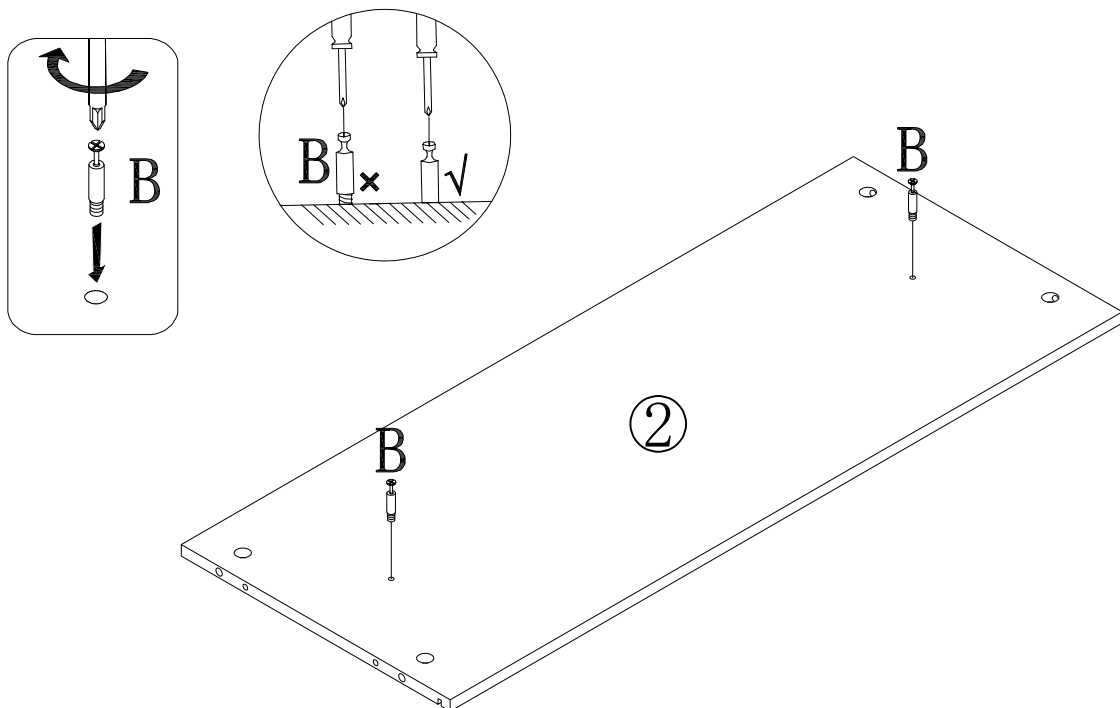

	B * 2PCS
--	----------





Assembly (EN) /Montageschritte (DE)

STEP 2

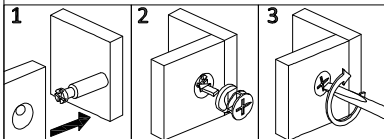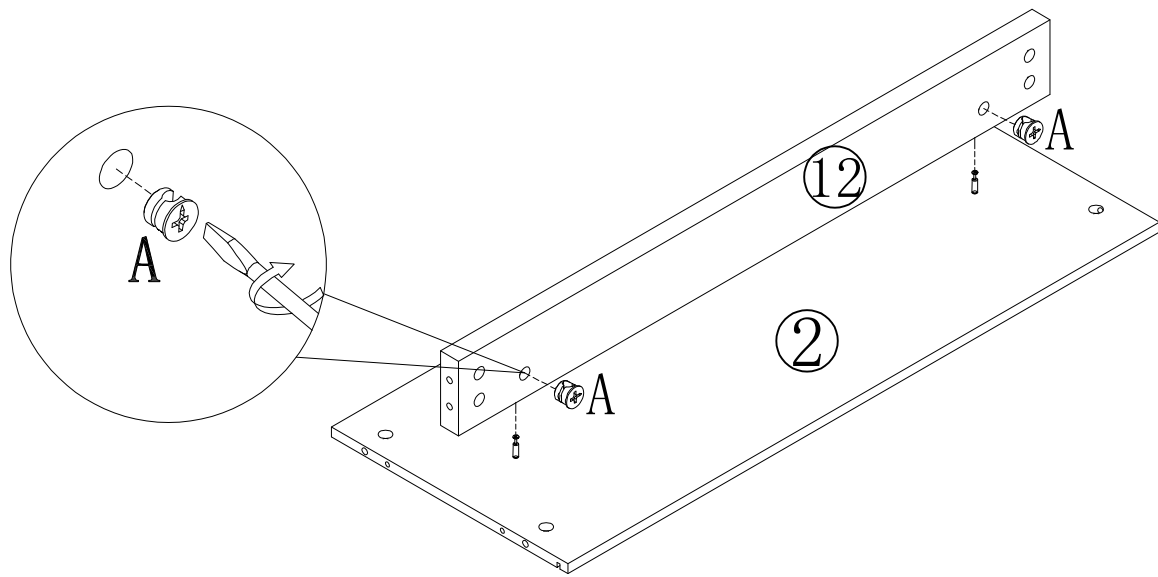

A * 2PCS



STEP 3

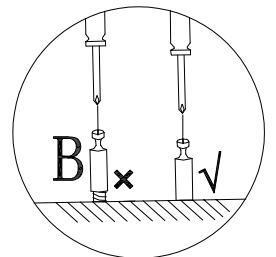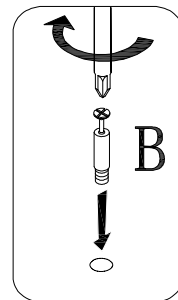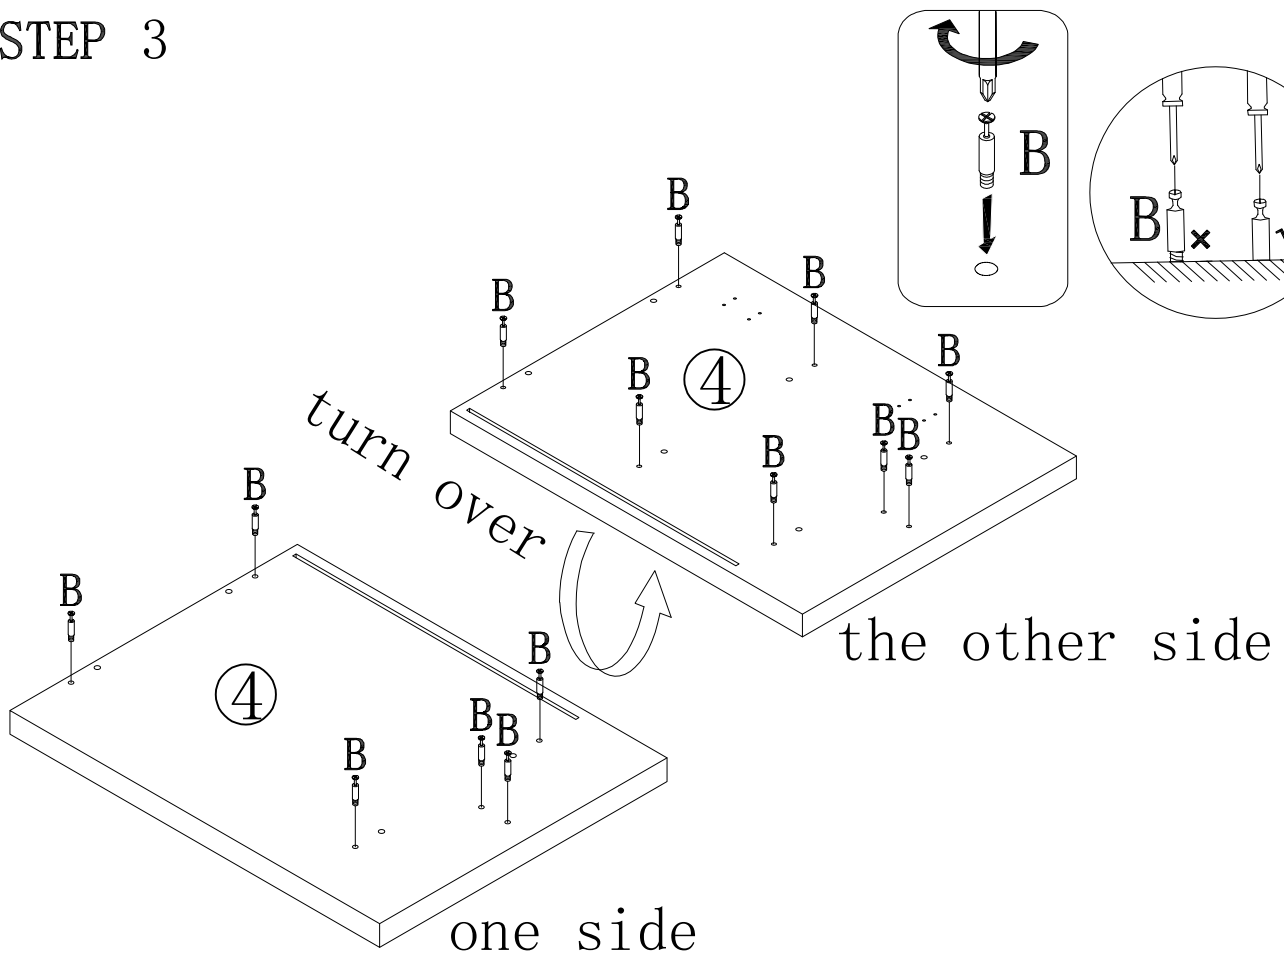


B * 14PCS


Assembly (EN) /Montageschritte (DE)

STEP 4

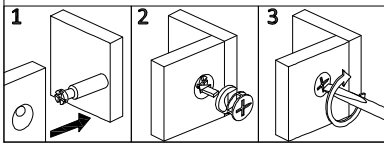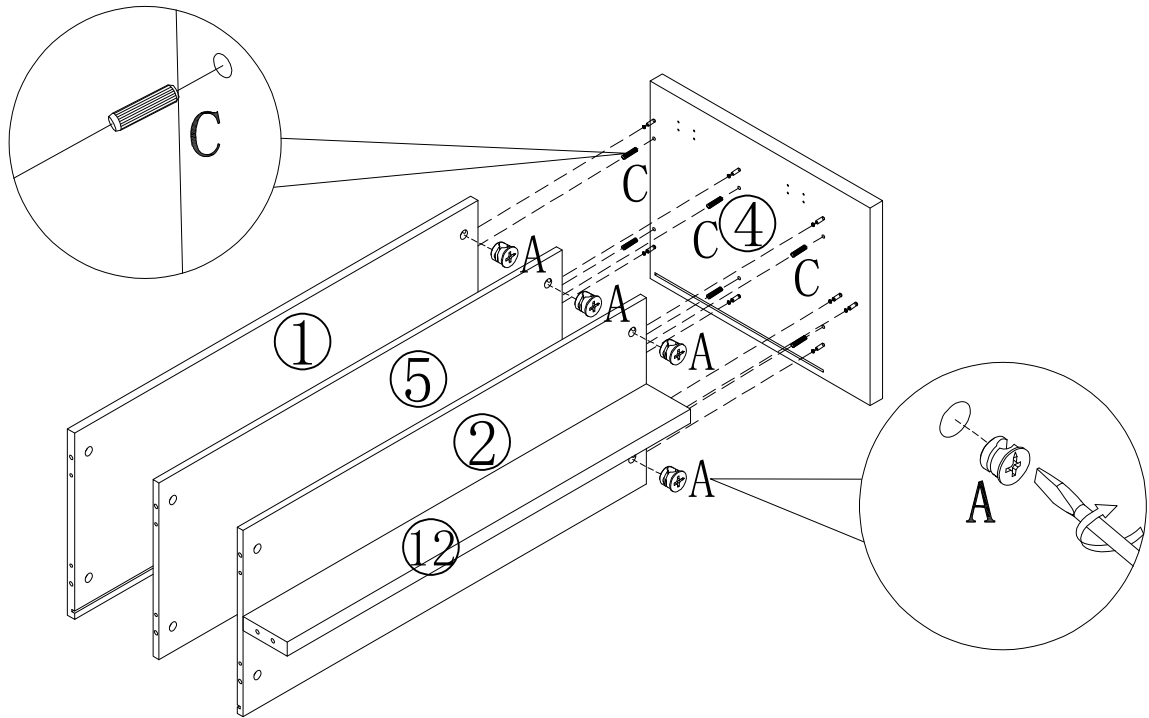

	A * 8PCS
	C * 6PCS



STEP 5

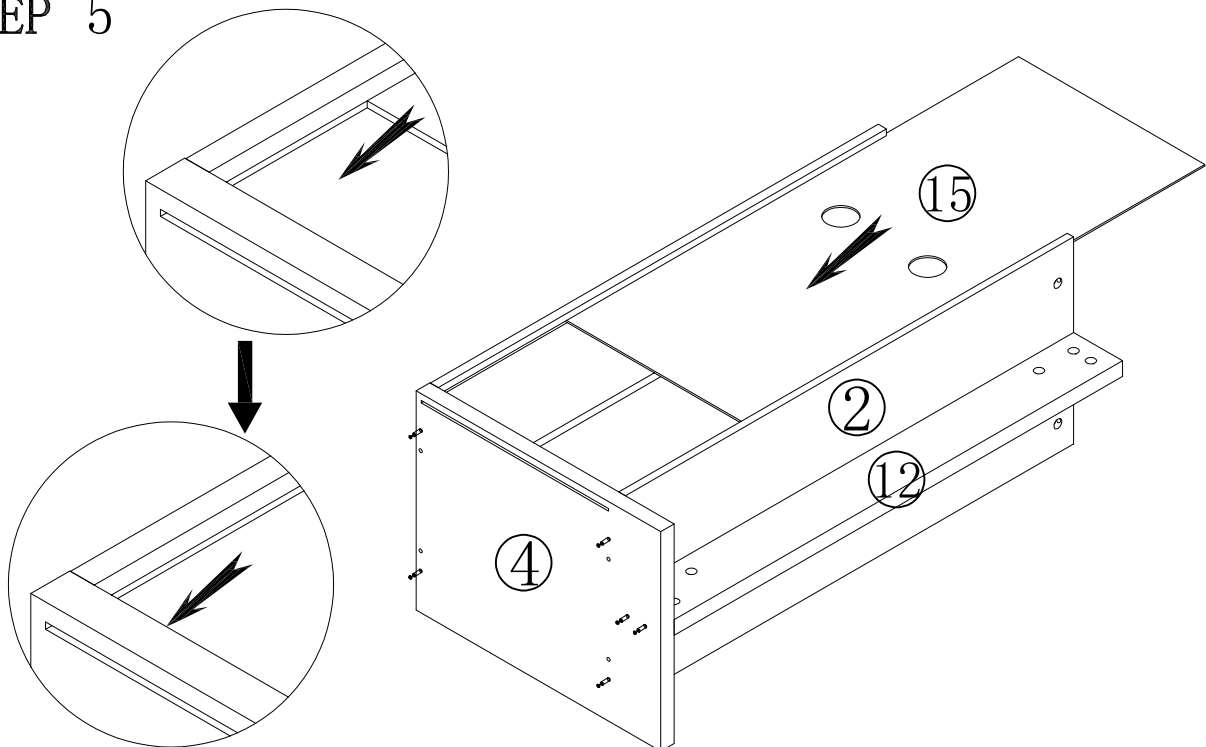

Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.


Assembly (EN) /Montageschritte (DE)

STEP 6

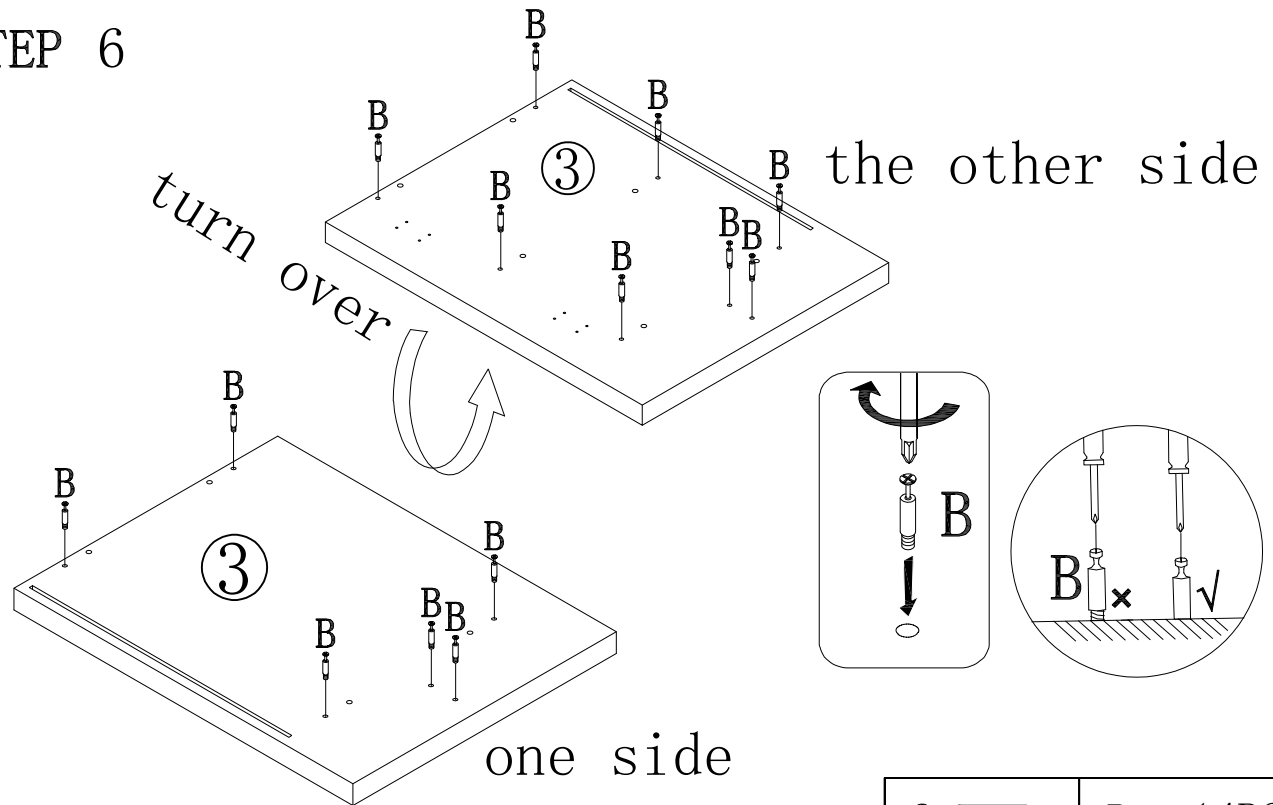


B * 14PCS


STEP 7

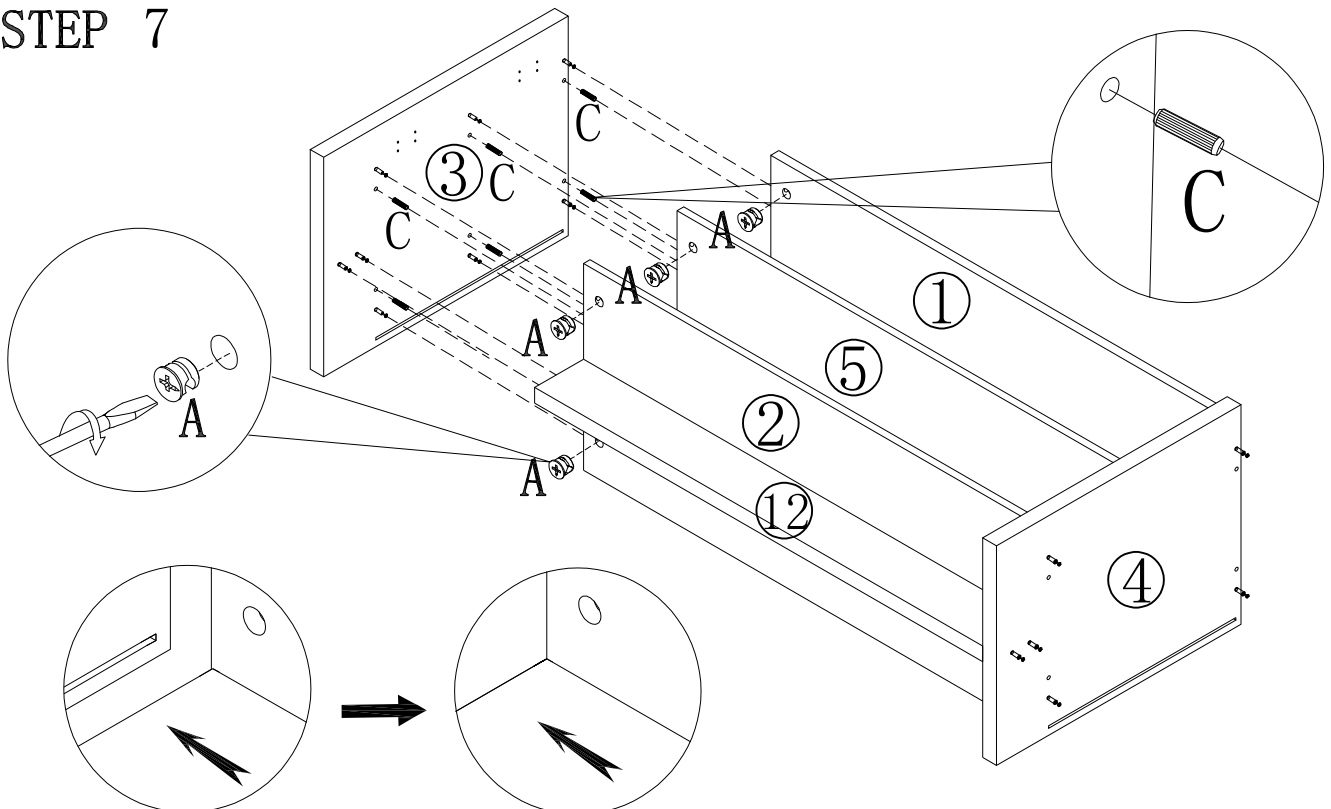

Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

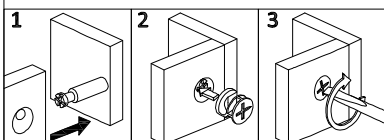


A * 8PCS




C * 6PCS

Assembly (EN) /Montageschritte (DE)

STEP 8


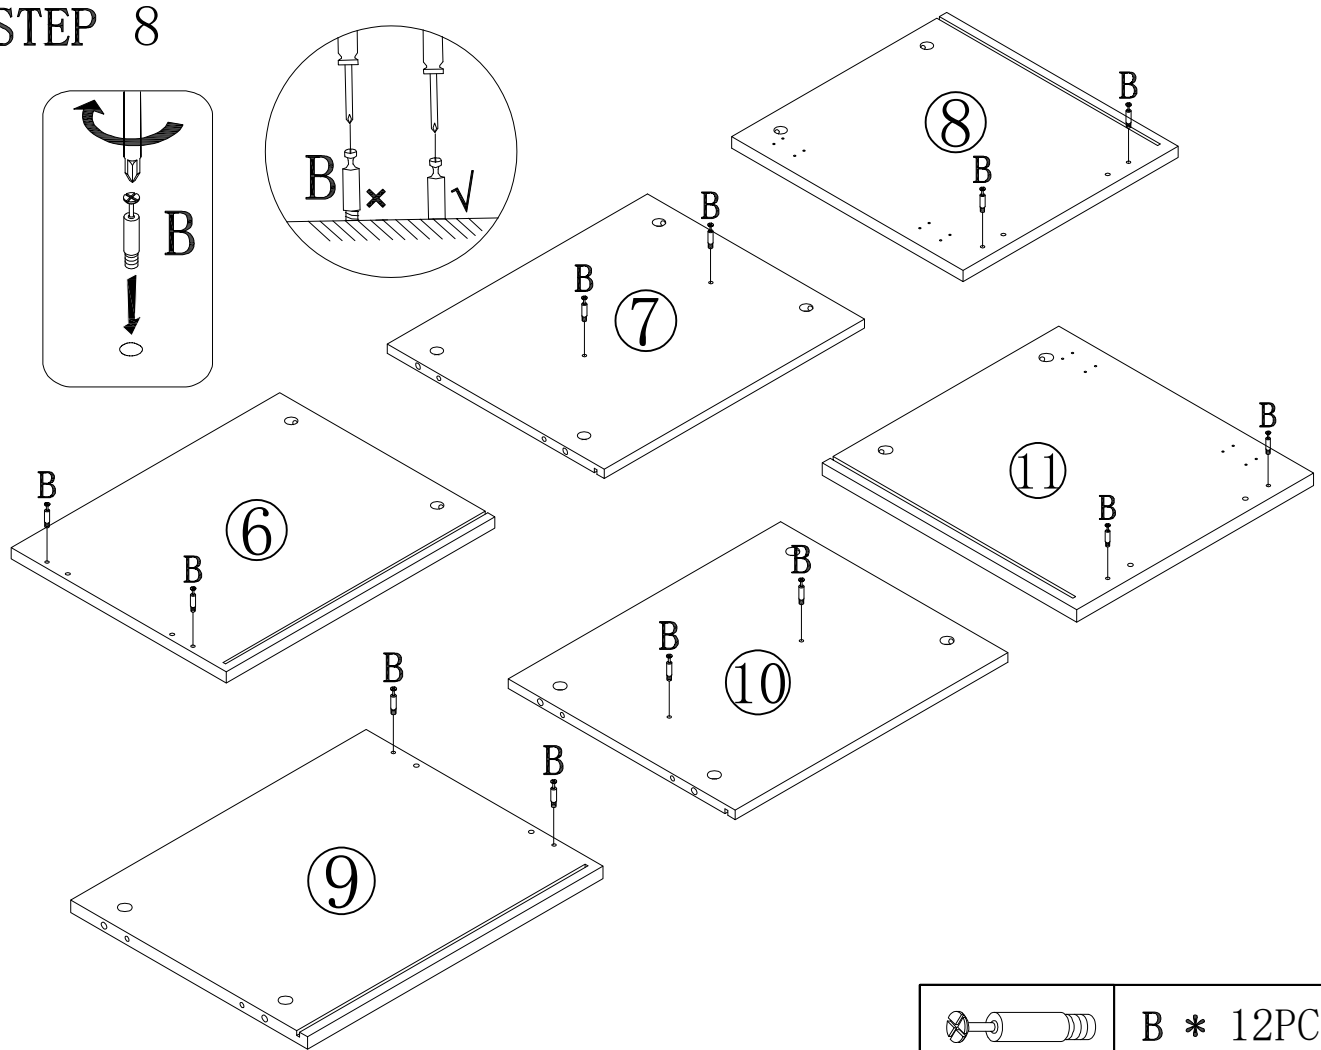



STEP 9

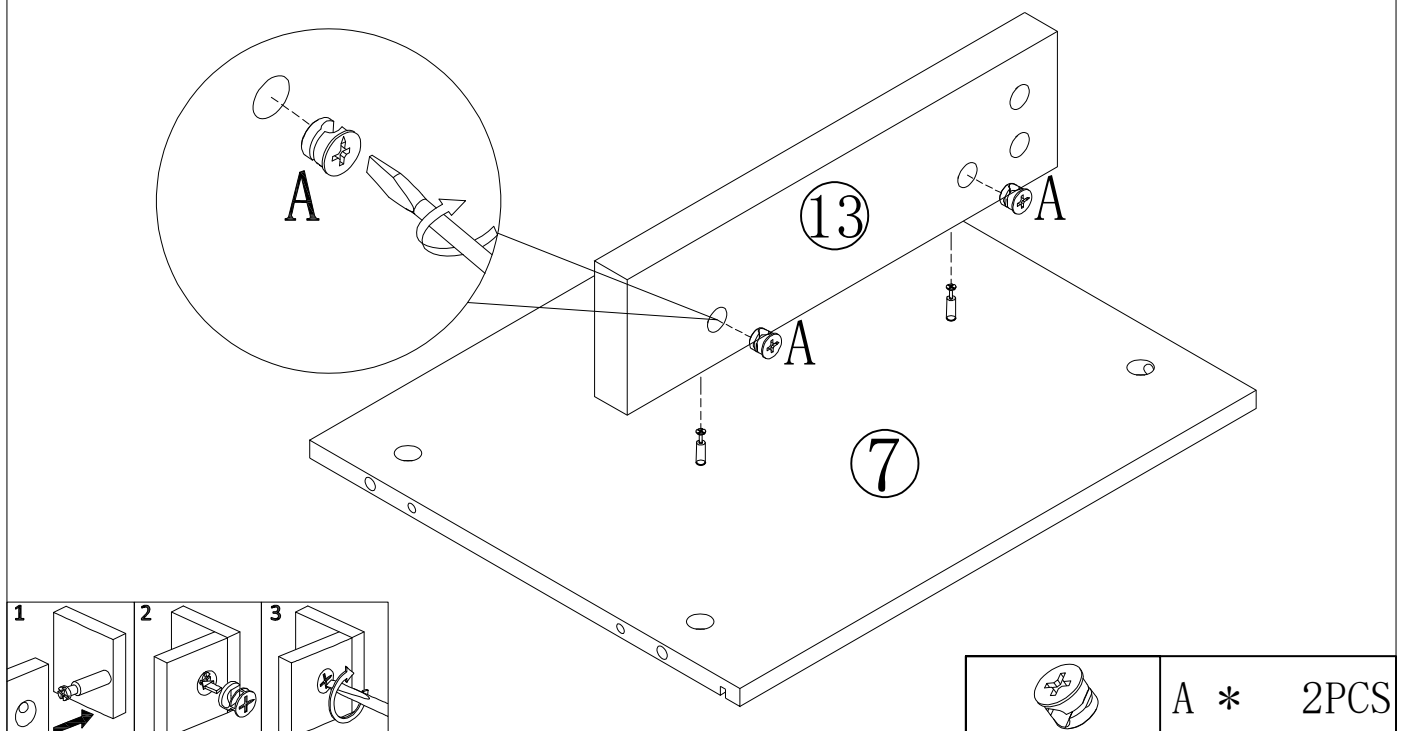



Assembly (EN) /Montageschritte (DE)

STEP 10

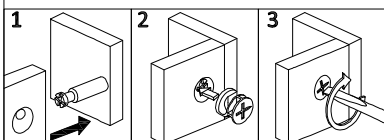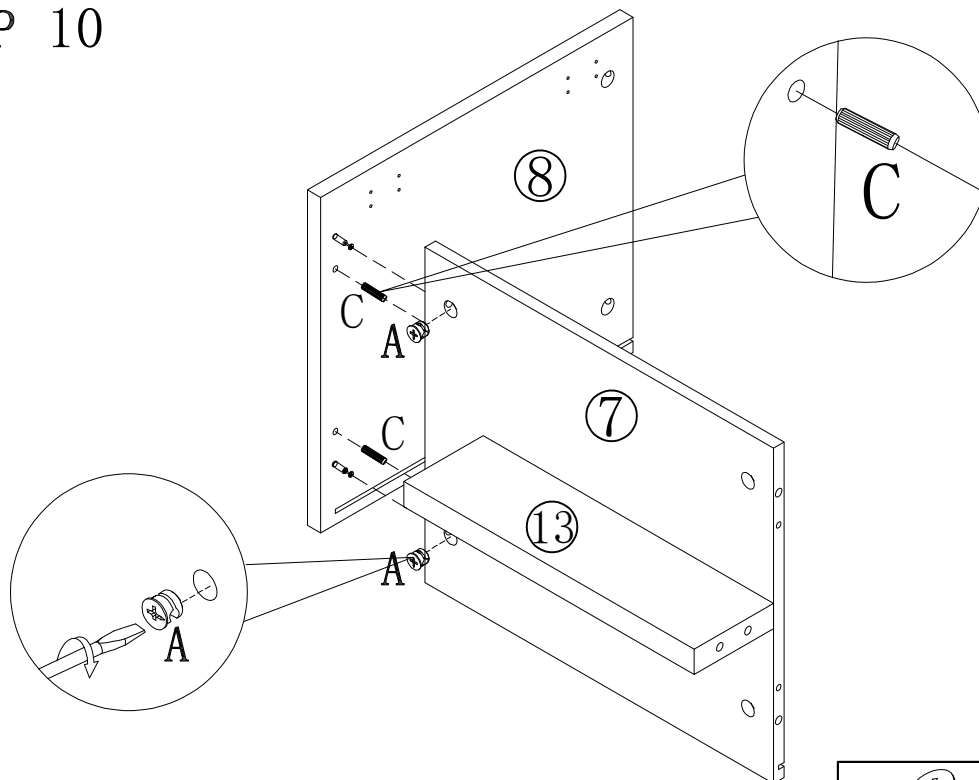

	A * 2PCS
	C * 2PCS


STEP 11

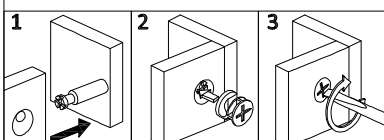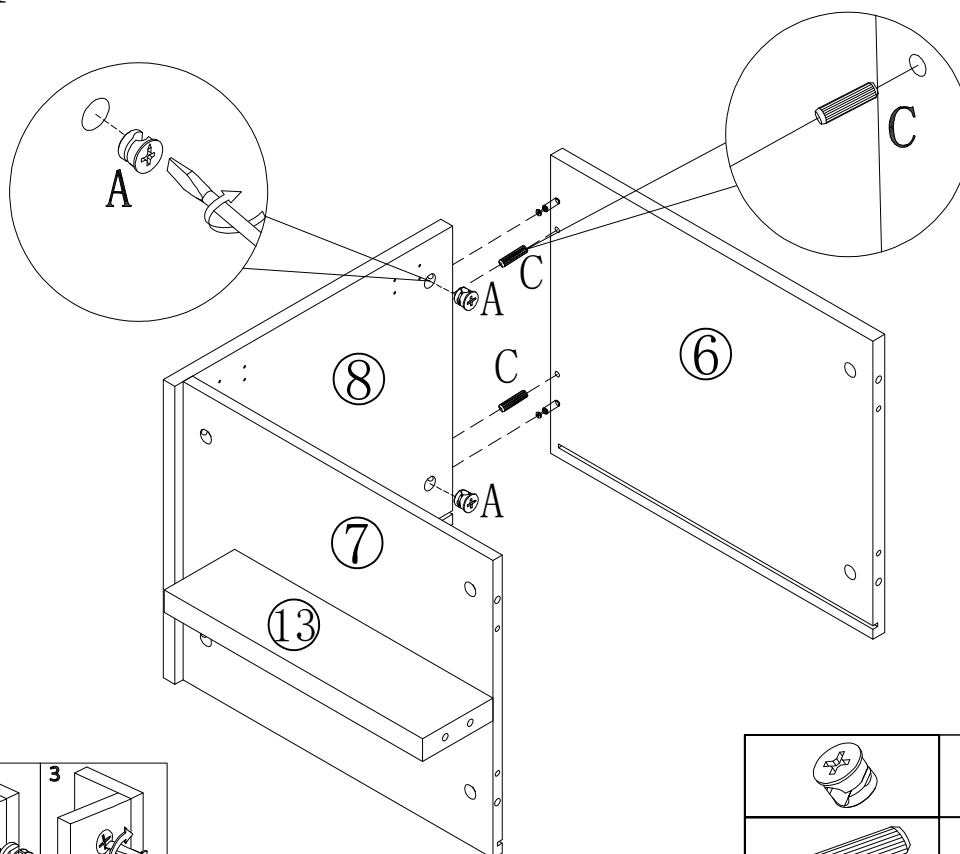

	A * 2PCS
	C * 2PCS




Assembly (EN) /Montageschritte (DE)

STEP 12

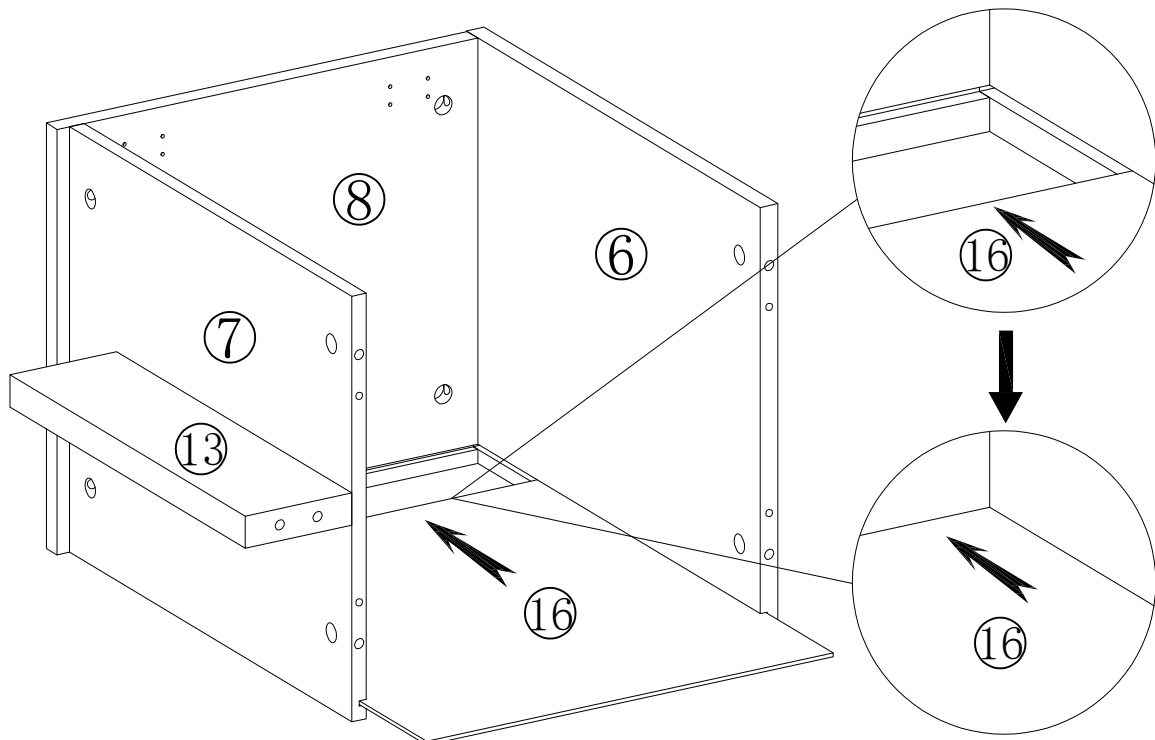



Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

STEP 13

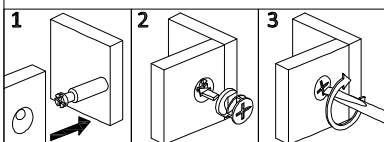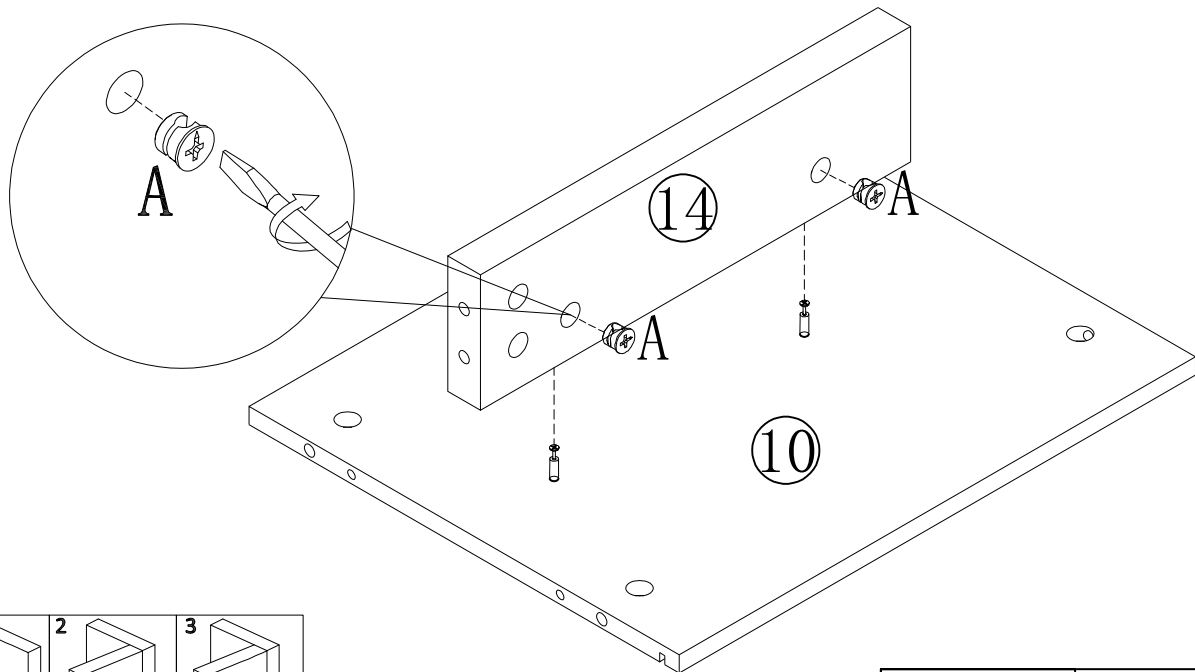



Assembly (EN) /Montageschritte (DE)

STEP 14

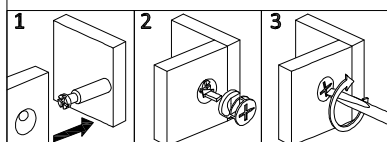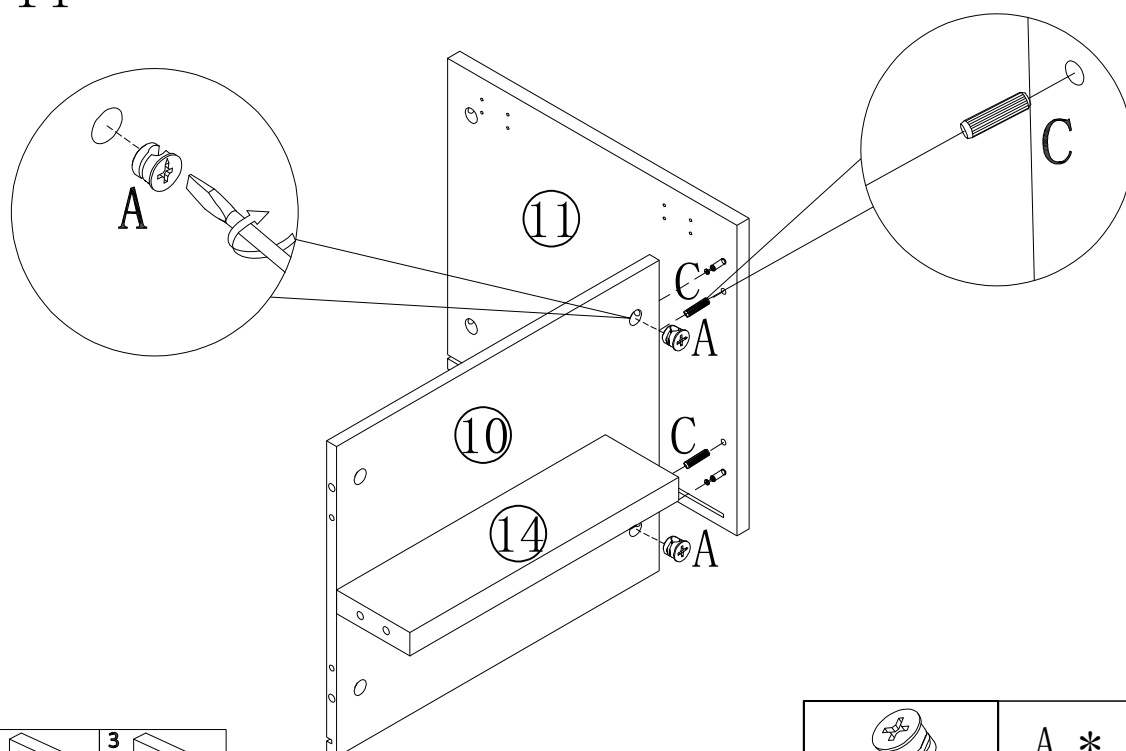

	A * 2PCS
	C * 2PCS


STEP 15

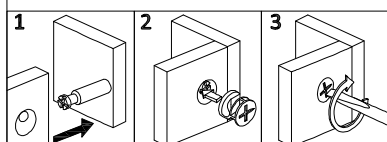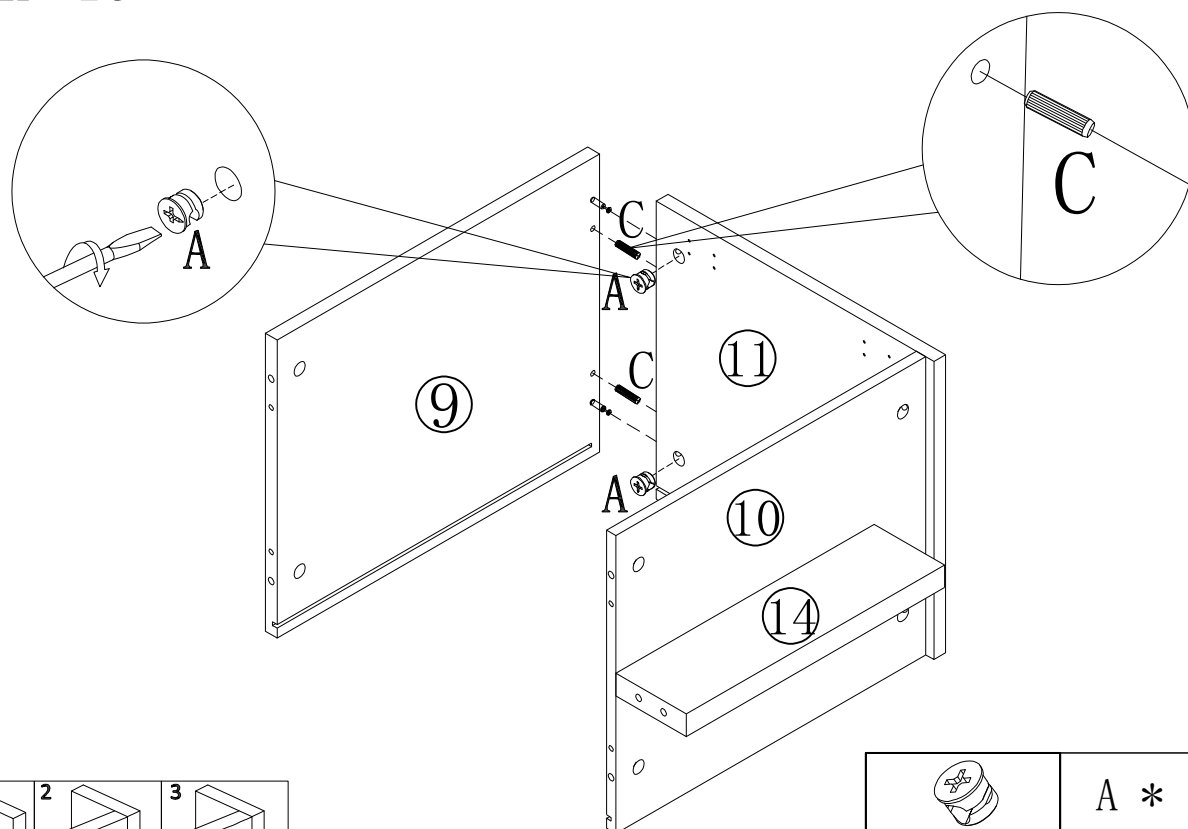

	A * 2PCS
	C * 2PCS


Assembly (EN) /Montageschritte (DE)

STEP 16

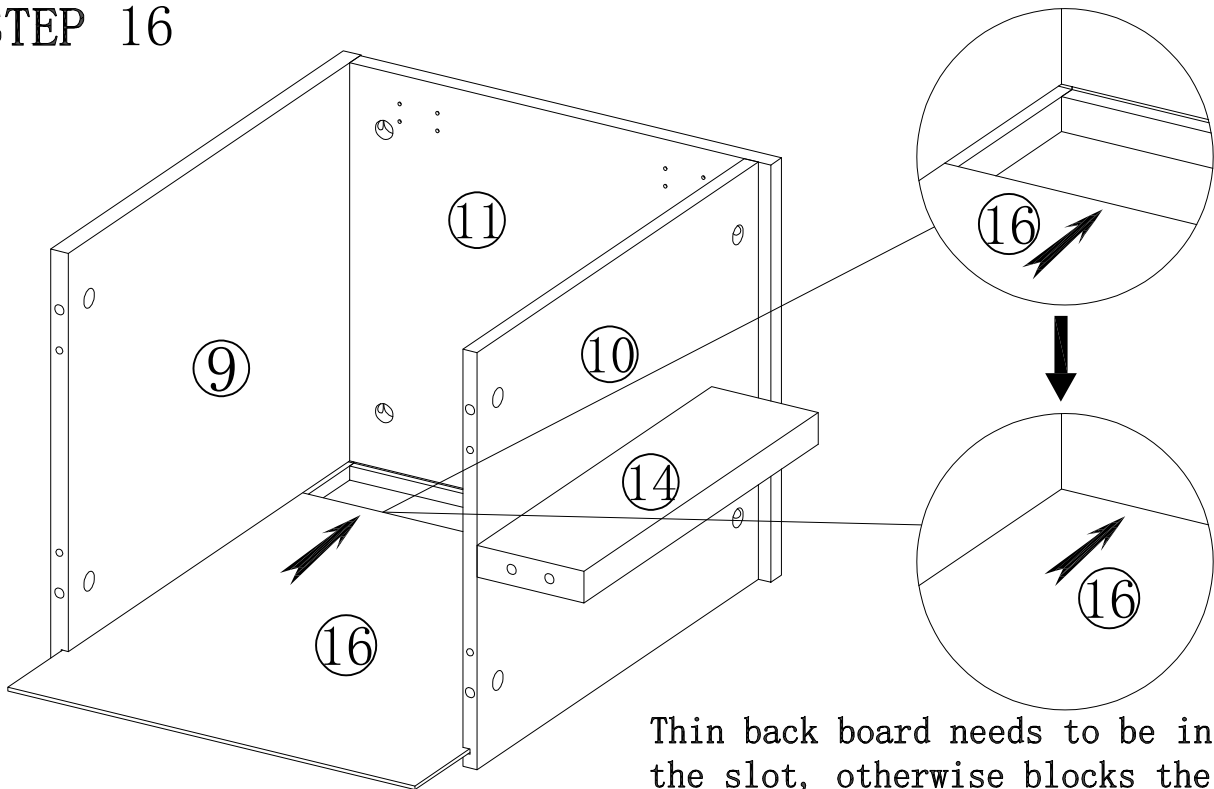


Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

STEP 17

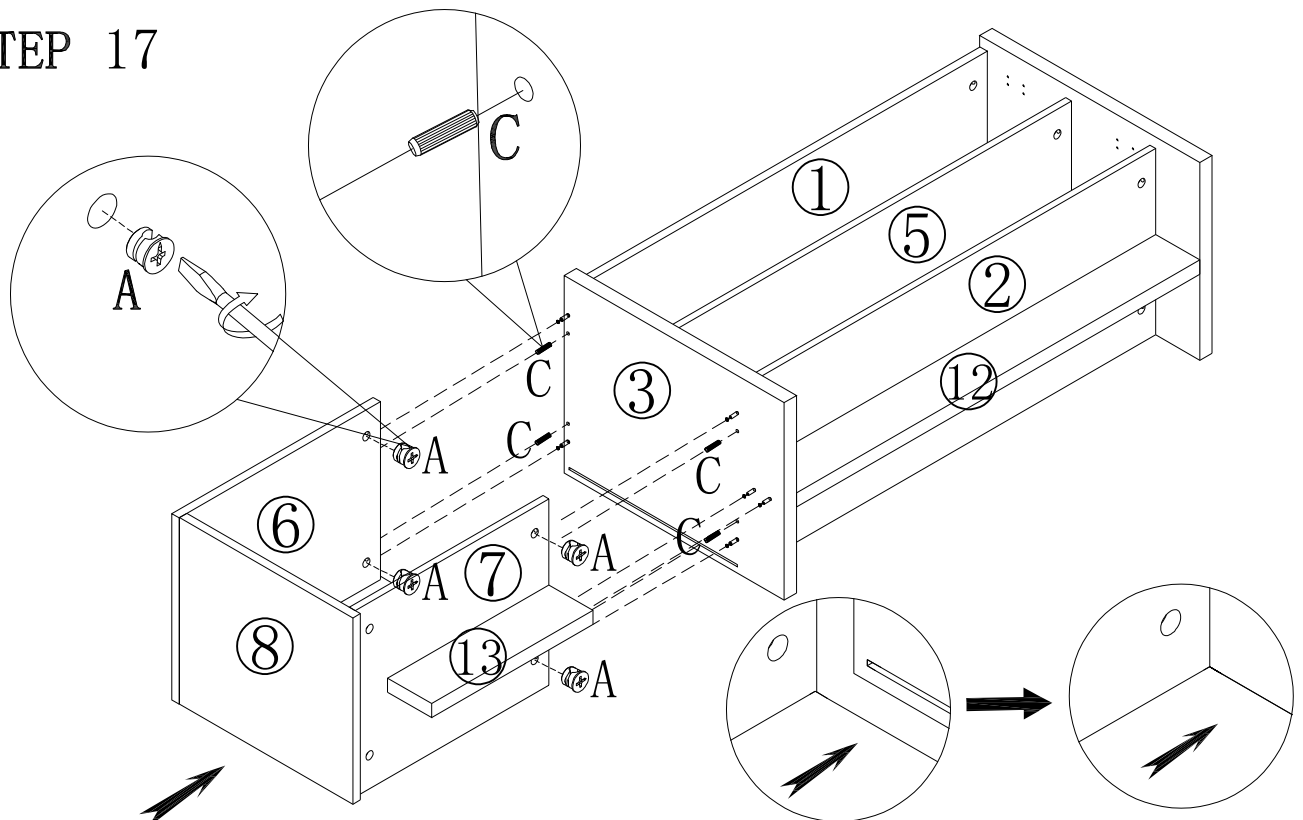


Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

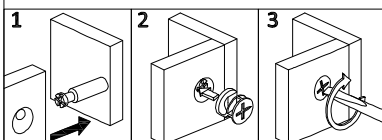


	A * 6PCS
	C * 4PCS

STEP 18

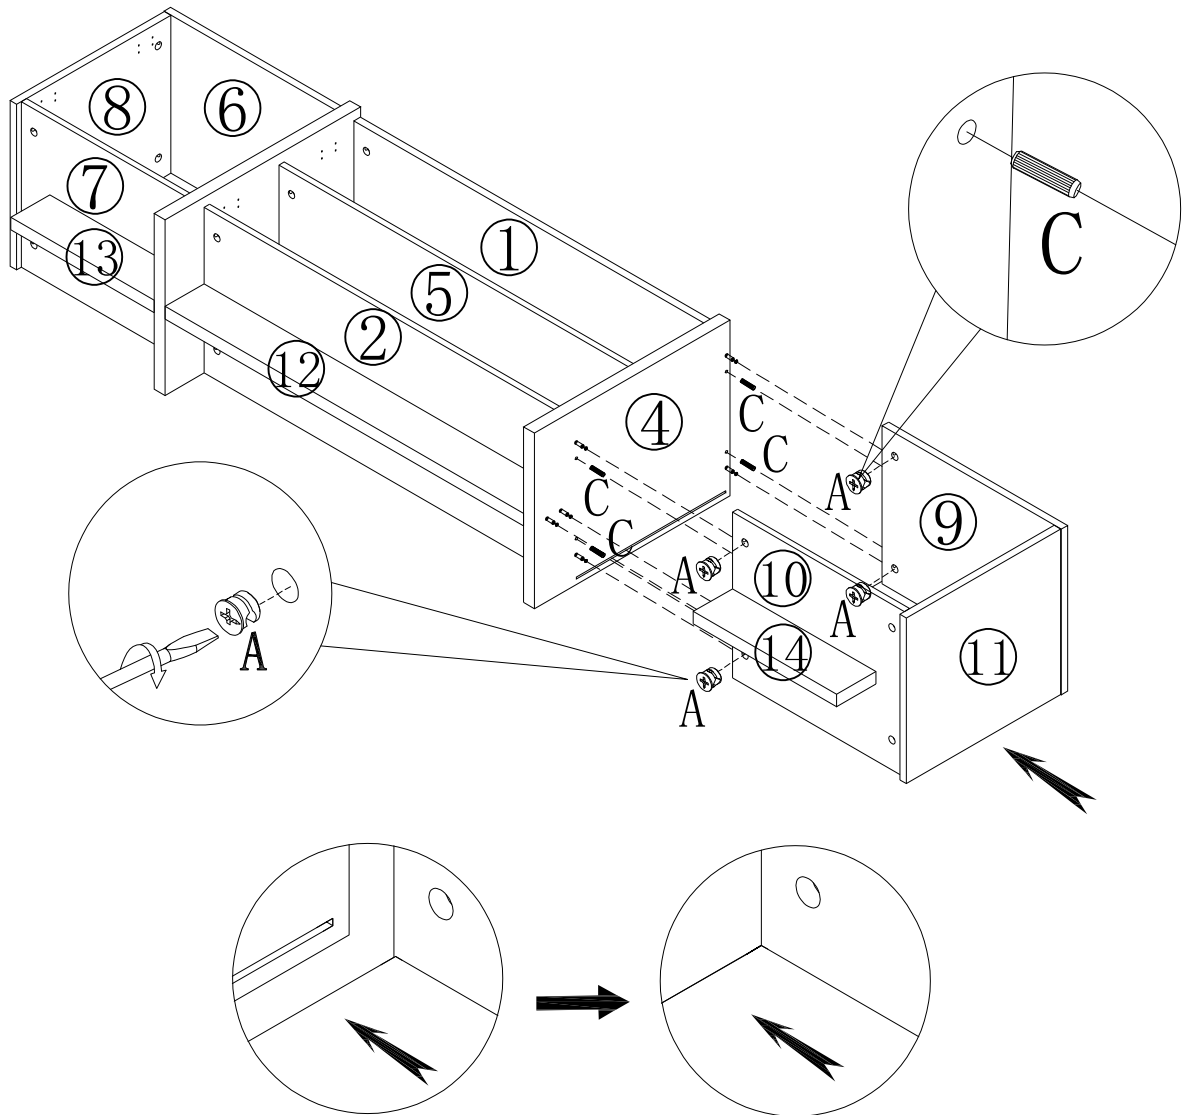



Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

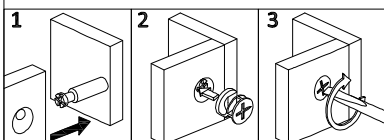

	A * 6PCS
	C * 4PCS


STEP 19

Full overlay

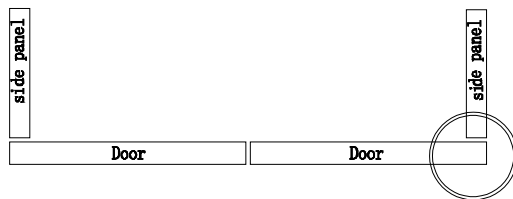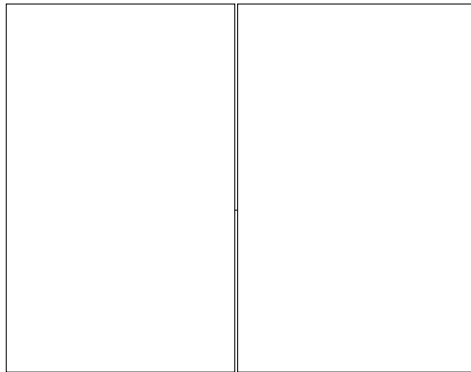


Door fully covers the panel

Insert

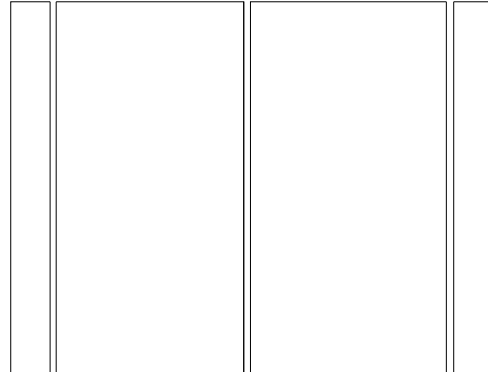


Doors was into the panel

D

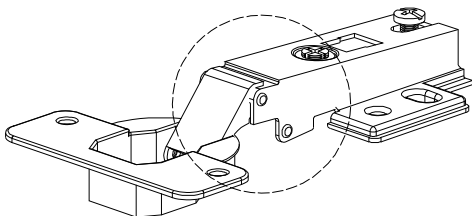

Full overlay
(For L/R Door #17)


E

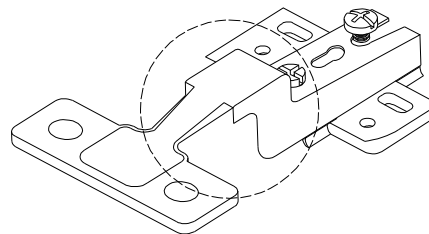


Insert
(For Middle Door #18)

STEP 20


D hinge ONLY for
L/R Door #17

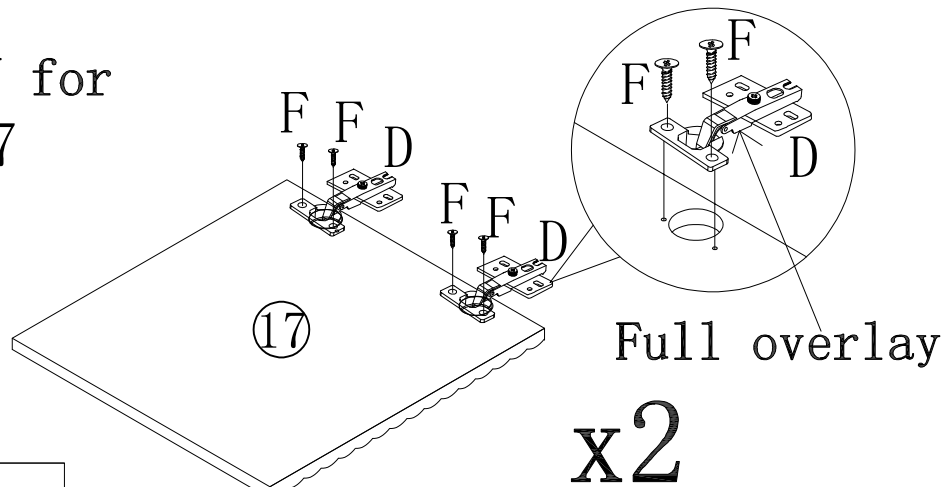


Full overlay 	D * 4PCS
	F * 8PCS

STEP 21


D hinge ONLY for
L/R Door #17

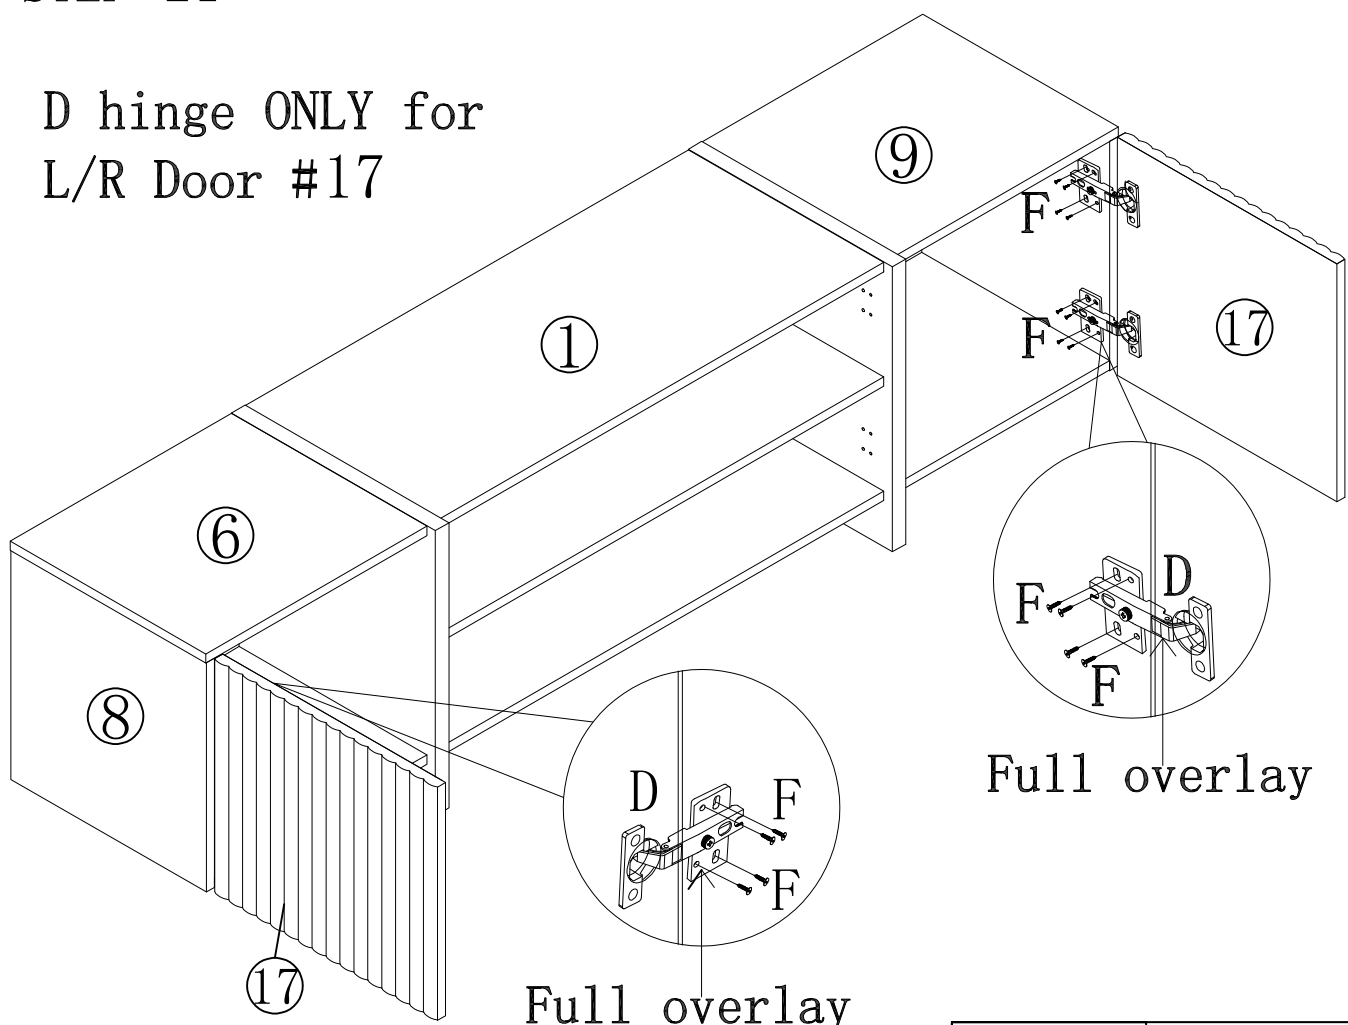

	F * 16PCS
---	------------------

STEP 22

E hinge ONLY for
Middle Door #18

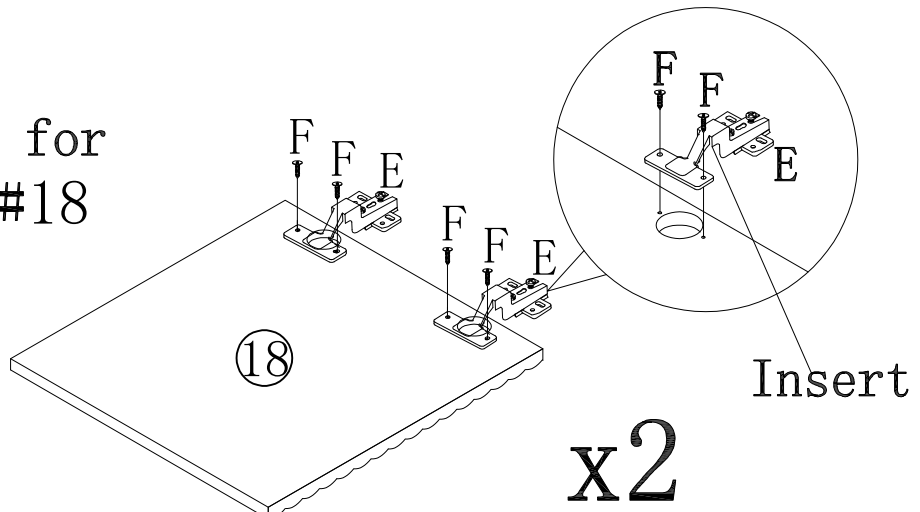


Insert

	E * 4PCS
	F * 8PCS

STEP 23

E hinge ONLY for
Middle Door #18

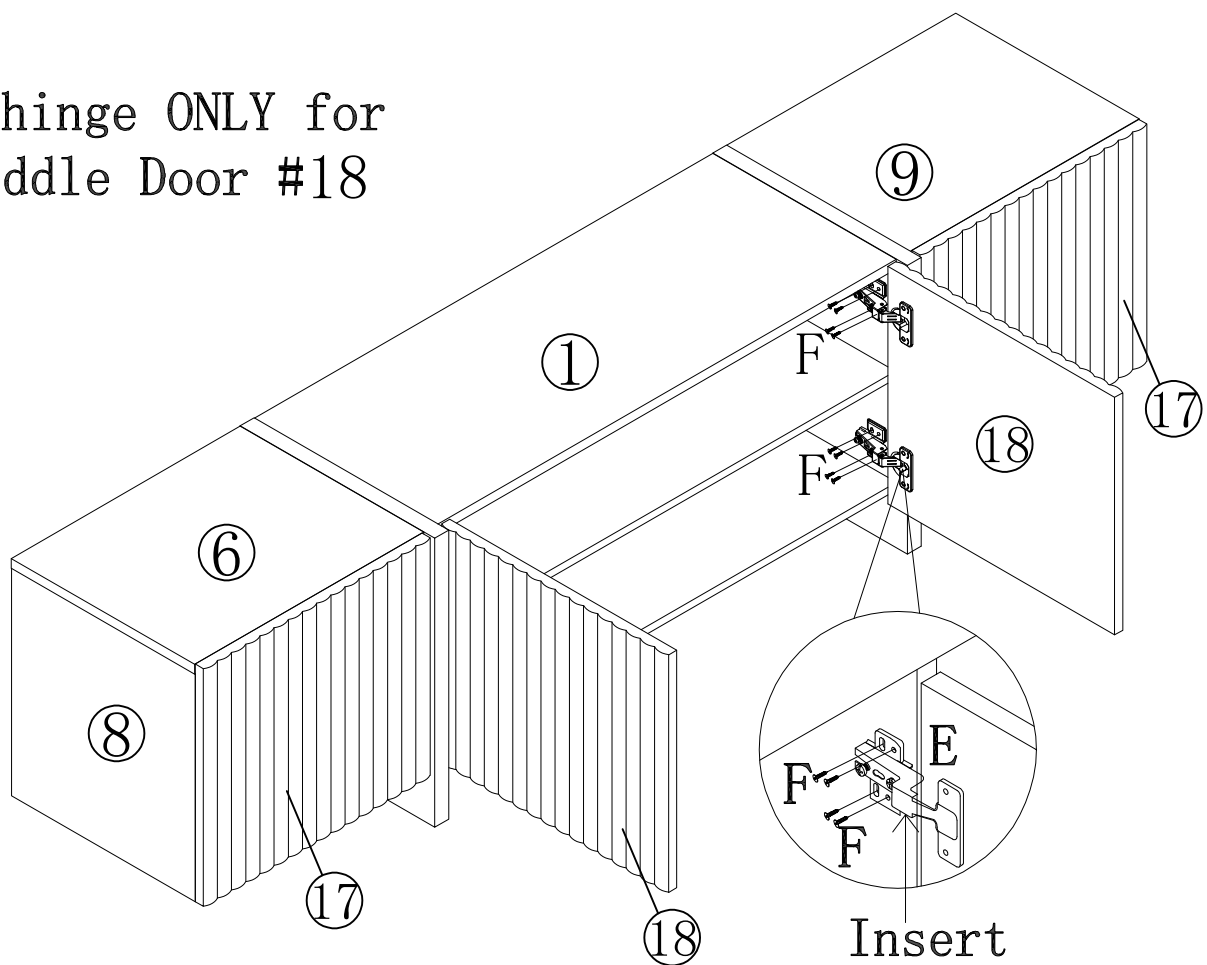

Insert





	F * 16PCS
--	-----------

Assembly (EN) /Montageschritte (DE)

STEP 24







NOTE : If you notice that the cabinet doors are not properly aligned, such as significant gaps or vertical or horizontal misalignment, please adhere to the following adjustment instructions.

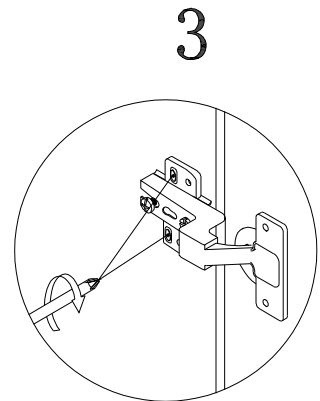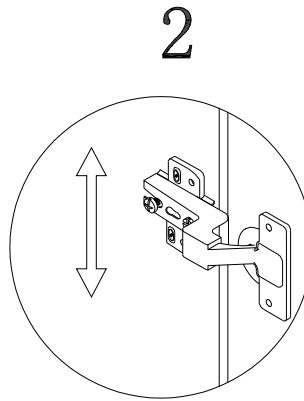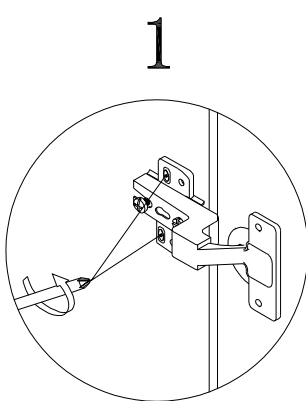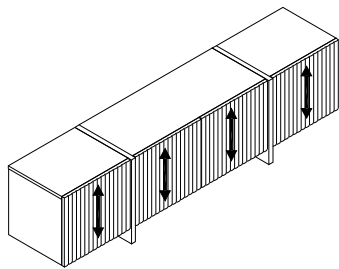

lose these 2 screws

move hinge up/down




tighten these 2 screws again

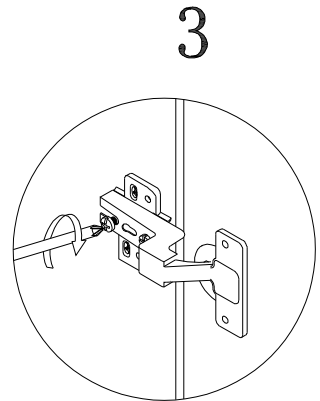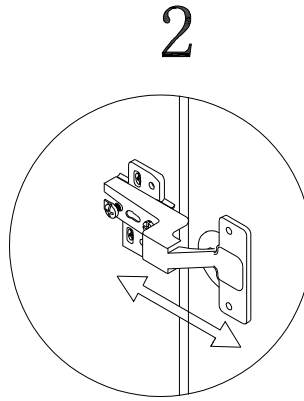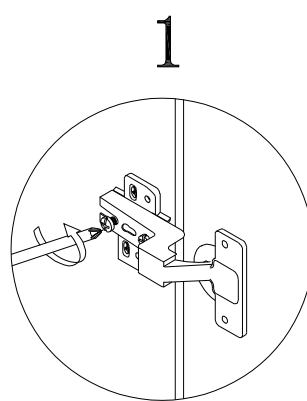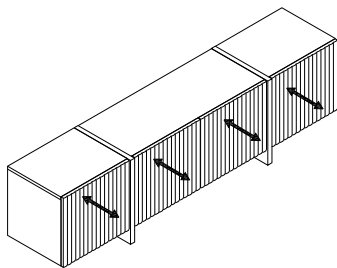

lose this screw

shift hinge in/out

tighten this screw again

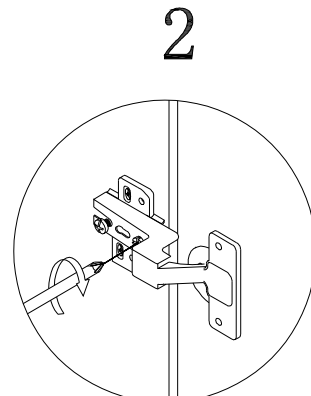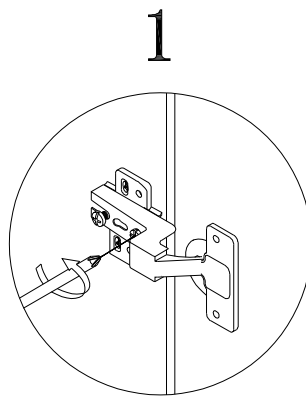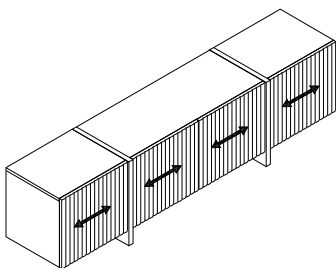


lose this screw would get hinge/door closer to side board

tighten this screw would get hinge/door away from side board

Assembly (EN) /Montageschritte (DE)

STEP 25

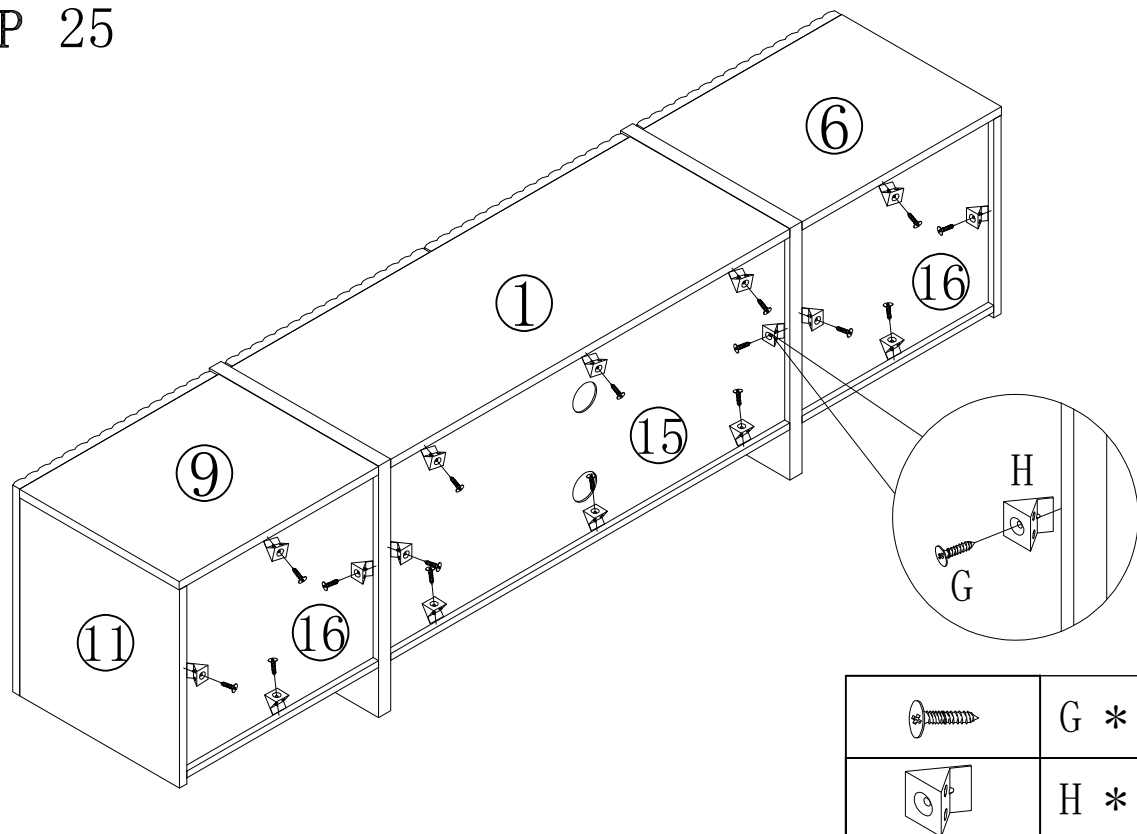

STEP 26

