

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.









- Dust and pick-up spills using a clean, non-colored, lint-free cloth.











Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.


TABLE

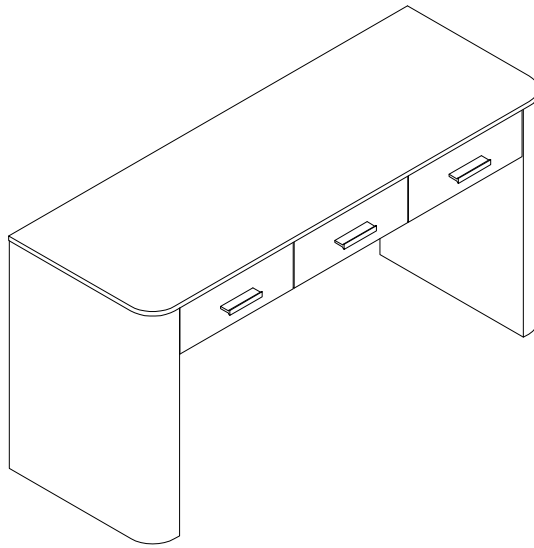

Parts List

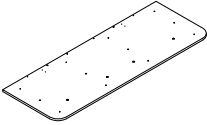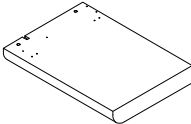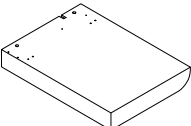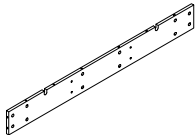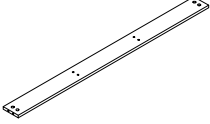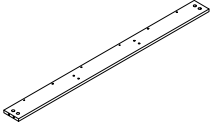
Label	Picture	Description	QTY
①		Desk top	1
②		Left side panel	1
③		Right side panel	1
④		Backplate	1
⑤		Front reinforcement strip	1
⑥		Rear reinforcement strip	1

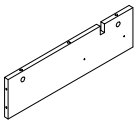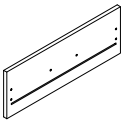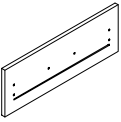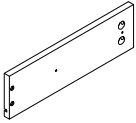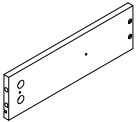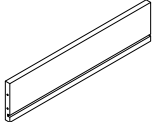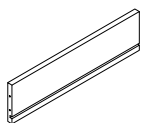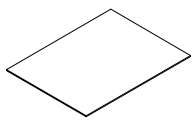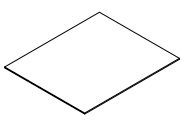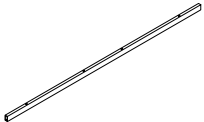⑦		Middle side panel	2
⑧		Side drawer front panel	2
⑨		Middle drawer front panel	1
⑩		Left side panel of the drawer	3
⑪		Right side panel of the drawer	3
⑫		Side drawer back panel	2
⑬		Middle drawer back panel	1
⑭		Bottom of the side drawer	2
⑮		Bottom of the middle drawer	1
⑯		Square iron bar	1

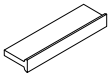Hardware			
Label	Picture	Description	QTY
A		Cam Lock Dowel	40
B		Cam Nut	40
C		Sticker	40
D		Dowel(8*30mm)	12
E		Drawer Slider	6
F		Drawer Slider	6
G		Screw(M3.5*12mm)	28
H		Screw(M4*30mm)	14
I		Foot Pad	4
J		Handle	3
K		Screw(M4*20mm)	6
L		Screw(M6*40mm)	8
M		Screw(M6*40mm)	4
N		Wrench(4#)	1
Restraint Device Hardware			
O		Restraint Bracket	2
P		Wall Anchor Screw (M8*40mm)	2

Assembly Preparation

Before
Beginning
Assembly:

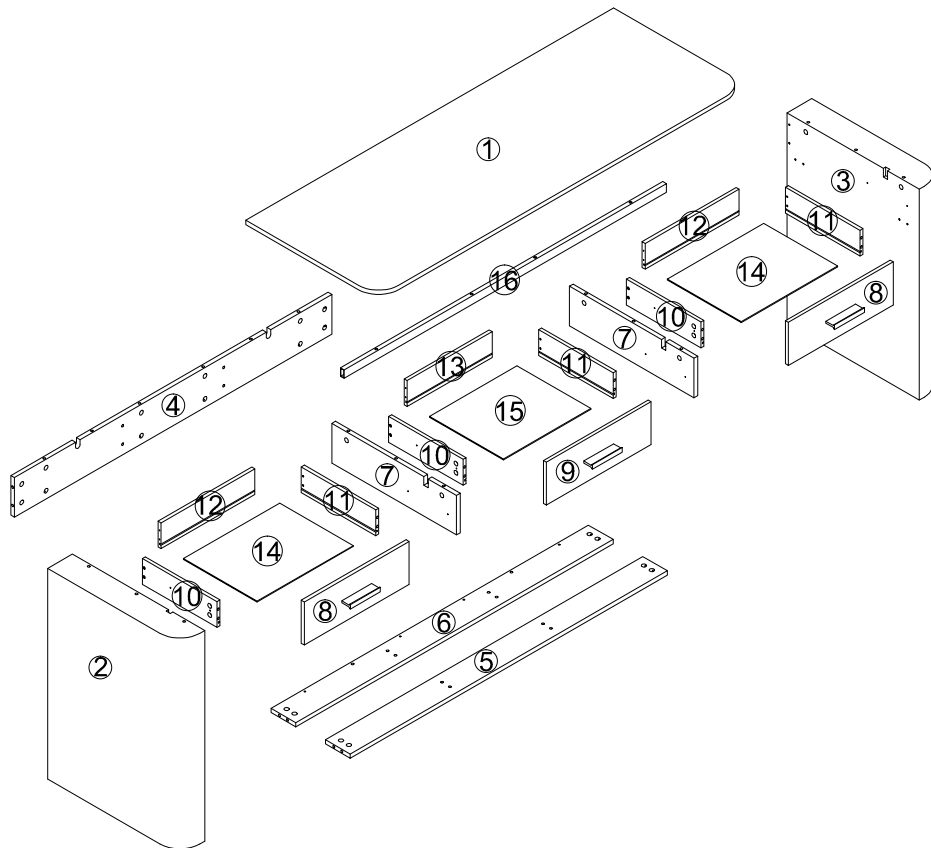

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps

This Table has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


STEP 1

How to separate the drawer slider:

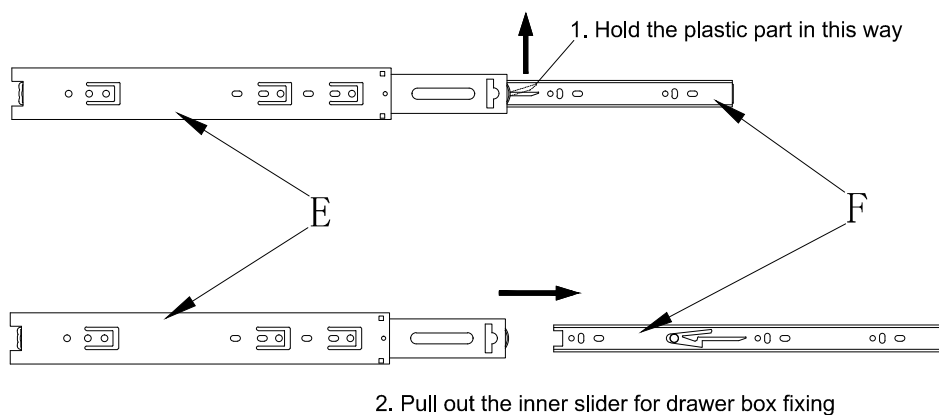


Pull (F) out of (E).

STEP 2

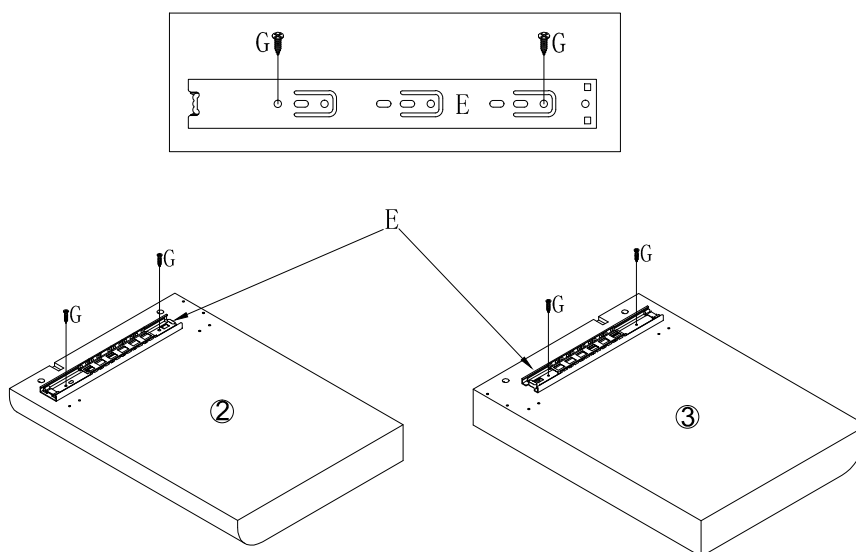


Use screws (G) to attach the drawer slides (E) to the left side panel (②) and the right side panel (③). Please install the guide holes according to the instructions in the enlarged diagram.

STEP 3

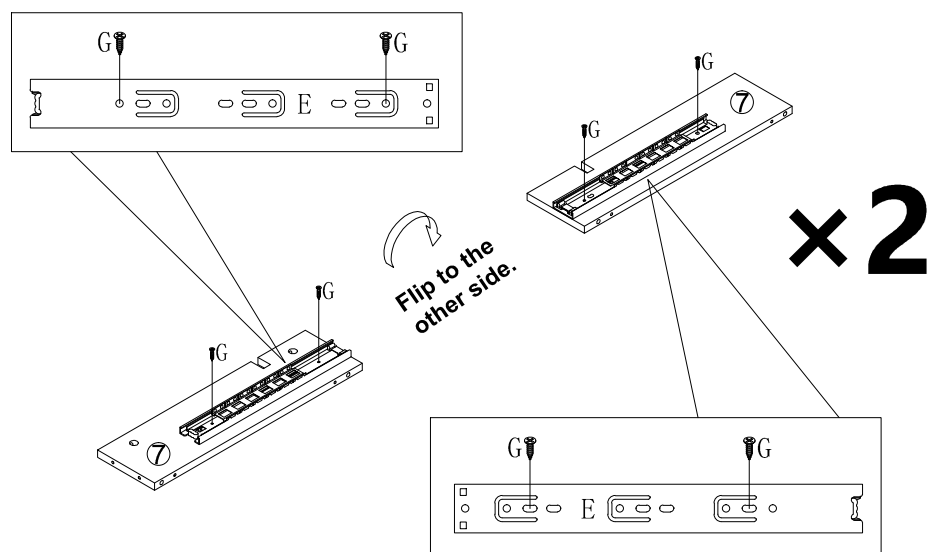


Use screws (G) to secure the drawer slides (E) to both sides of the middle side panel (⑦). Please install the guide holes according to the instructions in the enlarged diagram.

STEP 4

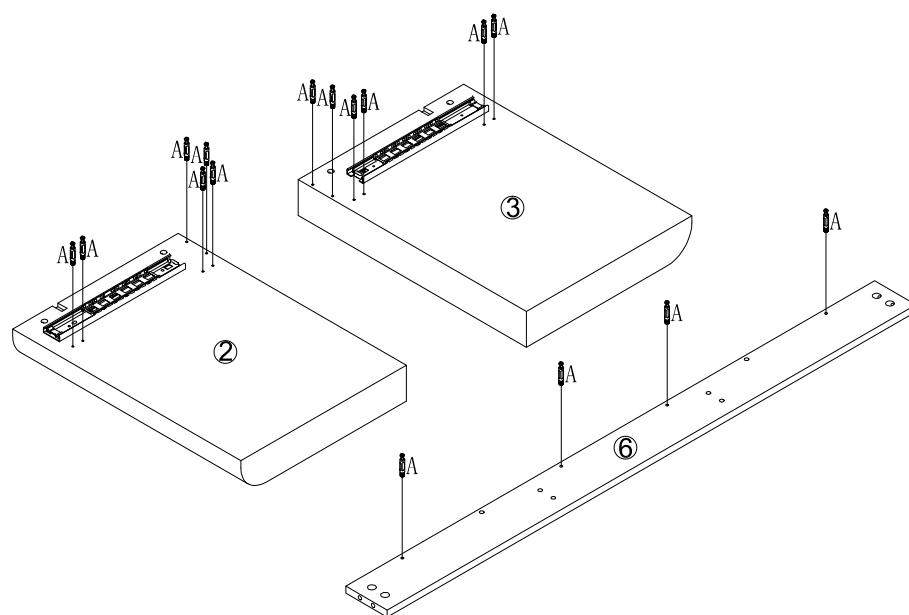


Fix the Cam Lock Dowel (A) to the (②), (③) and (⑥) panel.

STEP 5

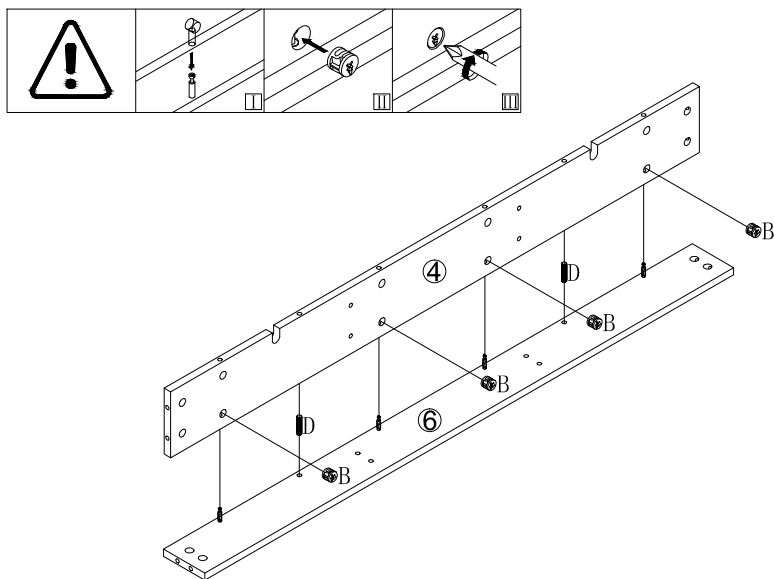


Connect the assembled rear reinforcement plate (⑥) and the Backplate (④) with wooden dowels (D), and tighten them with cam nuts (B).

STEP 6

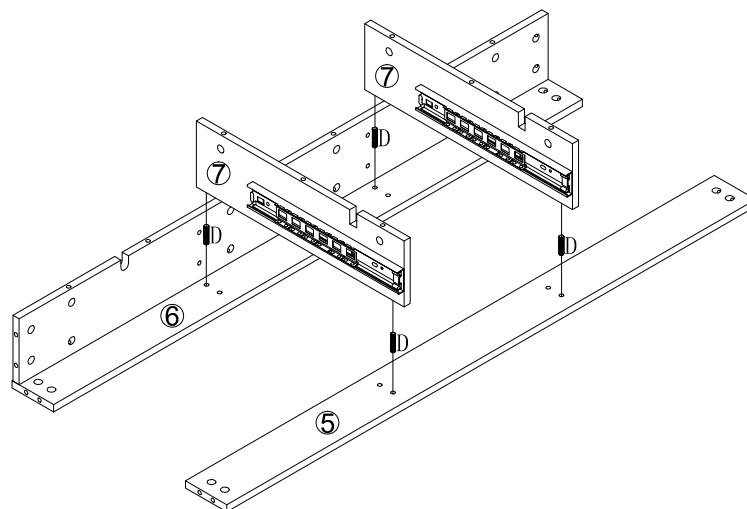


Use wooden dowels (D) to connect (⑦), (⑥), and (⑤).

STEP 7

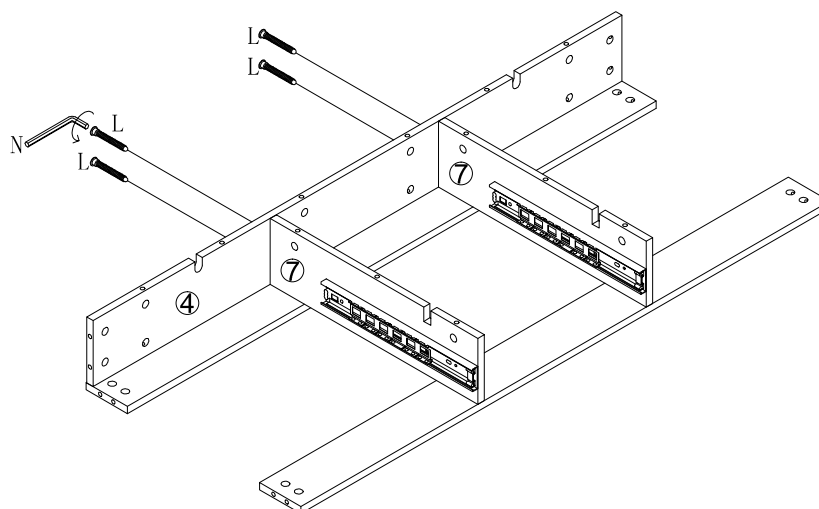


Use a Wrench (N) to fasten the screws (L) through the back panel (④) to connect and secure the middle side panel (⑦).

STEP 8

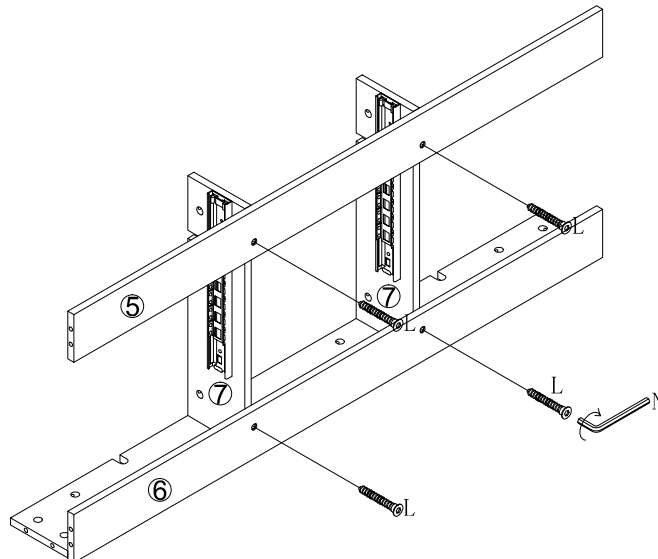


Use a wrench (N) to pass the screws (L) through (⑤) and (⑥) respectively to connect and reinforce the middle side panel (⑦).

STEP 9

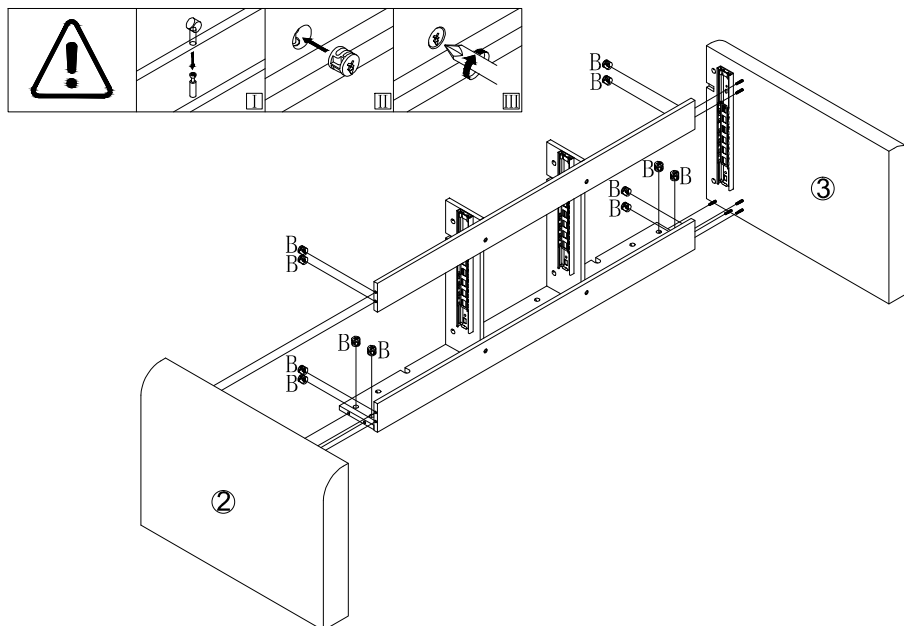


Connect the Left side panel (②) and the Right side panel (③) to the small assembly in the middle that has just been assembled, and use the cam nut (B) to lock and reinforce it.

STEP 10

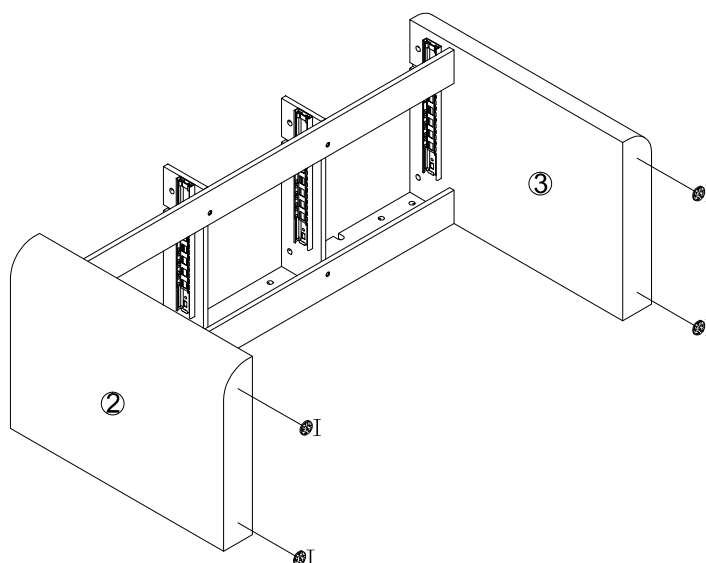


Attach the foot Pad (I) sequentially under (②) and (③).

STEP 11

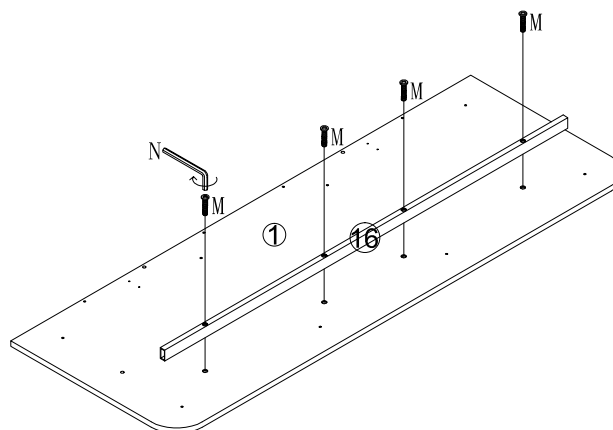



Use a wrench (N) to tighten (①) and (⑩) through the screw (M).

STEP 12

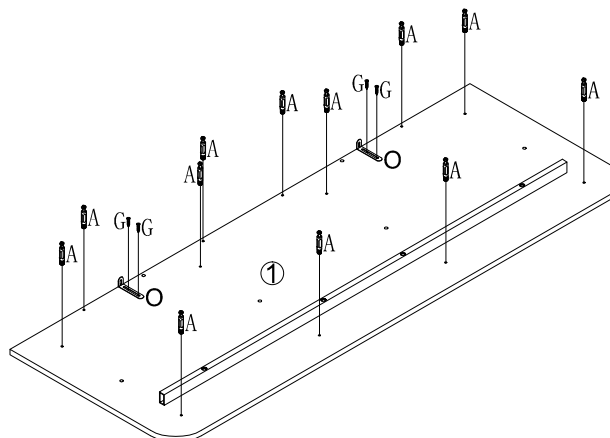



Fix the Cam Lock Dowel (A) to the panel ①).
Use screws (G) to attach the Restraint Bracket (O) to the panel (①).

STEP 13

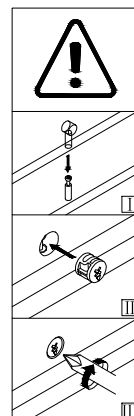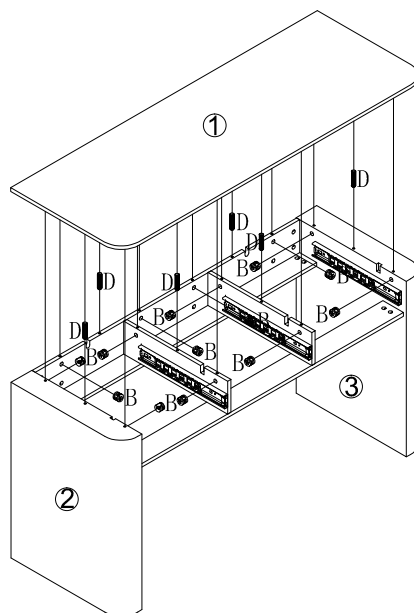


Use wooden dowels (D) to connect the assembled panel (①) and the cabinet, then secure it with (B) cam nuts.

STEP 14

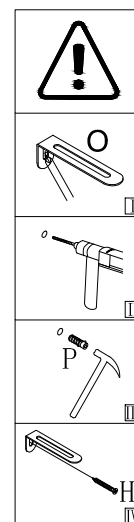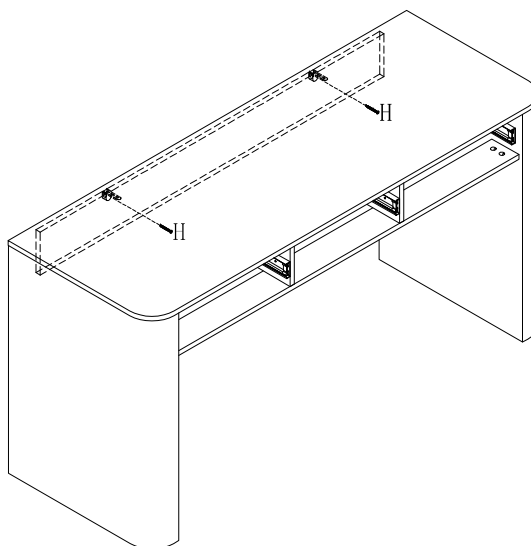


Place the assembled desk against the wall to install the fasteners to prevent the cabinet from tipping over. Please install the fasteners according to the steps in the enlarged diagram.

STEP 15

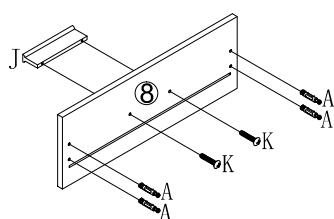

×2


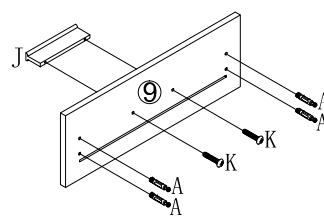


×1


Secure the Cam Lock Dowel (A) on drawer panels (⑧) and (⑨).

Use screw (K) to fix the handle (J) on drawer panels (⑧) and (⑨).

STEP 16

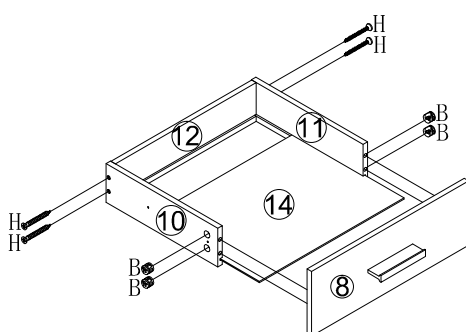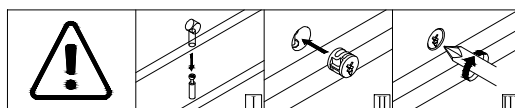


×2

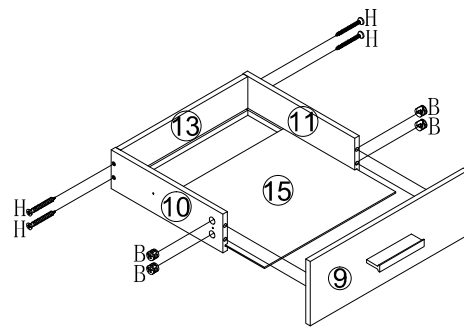

×1


1. Use screws (H) to secure and tighten (⑩), (⑪), (⑫), and (⑬).
2. Install the drawer bottom panels (⑭) and (⑮) into the newly assembled drawer frame.
3. Install the assembled side drawer front panel (⑧) and middle drawer front panel (⑨) onto the corresponding drawer frames, and secure them with Cam Nut (B).

STEP 17

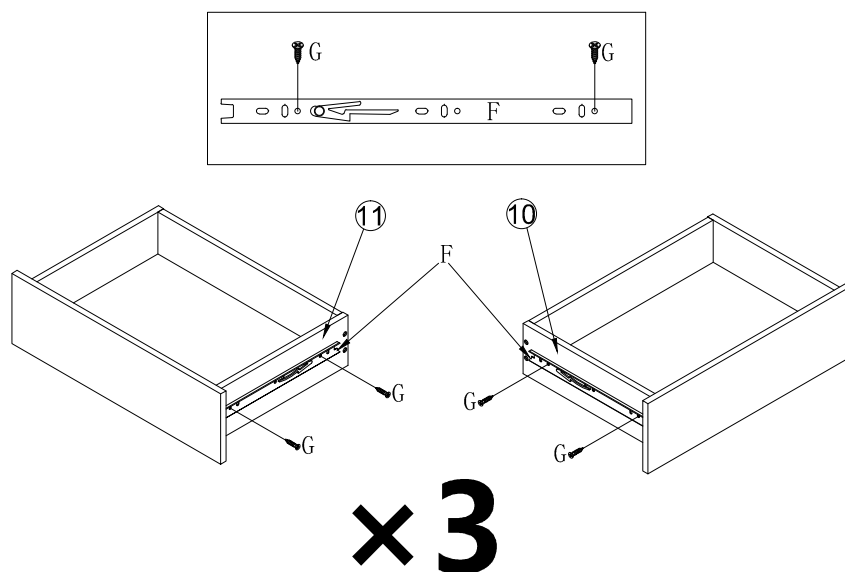

Use screws (G) to attach the drawer slide (F) to the left drawer side panel (10) and the right drawer side panel (11).

STEP 18

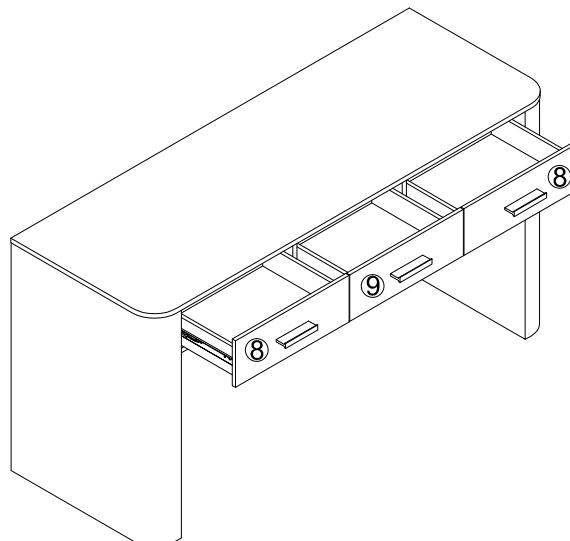

Place the two assembled drawer front panels (8) drawers on both sides, then place the drawer with front panel (9) in the middle. Next, slide the drawer rails (F) into the drawer rails (E) to complete the assembly.