

END TABLE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !!!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

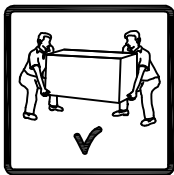

ASSEMBLY TIME PER UNIT: 30 MINUTES


PARTS IDENTIFICATION

(A) TOP

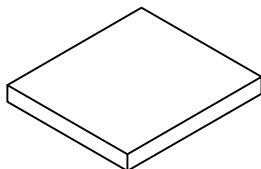


1 PC

(B) SHELF

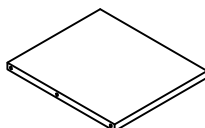


1 PC

(C) LEFT LEG FRAME

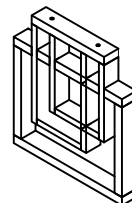




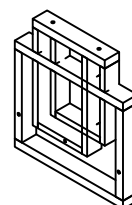


1 PC

(D) RIGHT LEG FRME



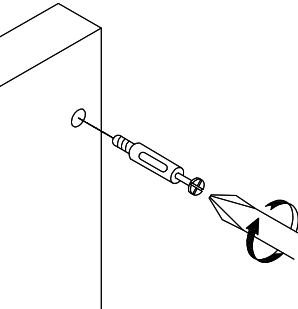
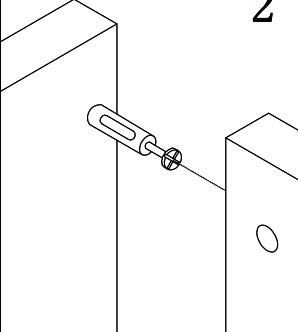
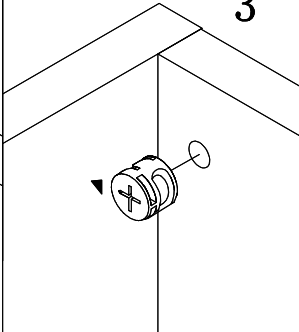
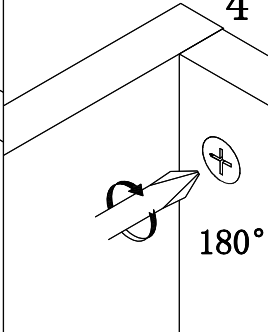



1 PC

ASSEMBLY INSTRUCTION

| Z | HARDWARE PACKAGE | | |
|----|----------------------------|--|-------|
| NO | DESCRIPTION | FIGURE | Q' TY |
| 1 | CAMBOLT L=29mm |  | 6pcs |
| 2 | CAMLOCK Ø15mm |  | 6pcs |
| 3 | WRENCH M5mm |  | 1pc |
| 4 | LASTICKER Ø22mm |  | 10pcs |
| 5 | WASHER Ø8X16X2mm |  | 4pcs |
| 6 | INNER HEX SCREW M8x35mm |  | 4pcs |

ASSEMBLY INSTRUCTION

| HOW TO | 1 | 2 | 3 | 4 |
|--|--|--|--|--|
|  Cam Bolt  Cam Lock |  1. Screw Cam Bolt into panel. |  2. Insert Cam Bolt into bolt hole of joining panel. |  3. Insert Cam Lock. arrow facing bolt. |  4. Gently turn Cam Lock clockwise to lock position. |

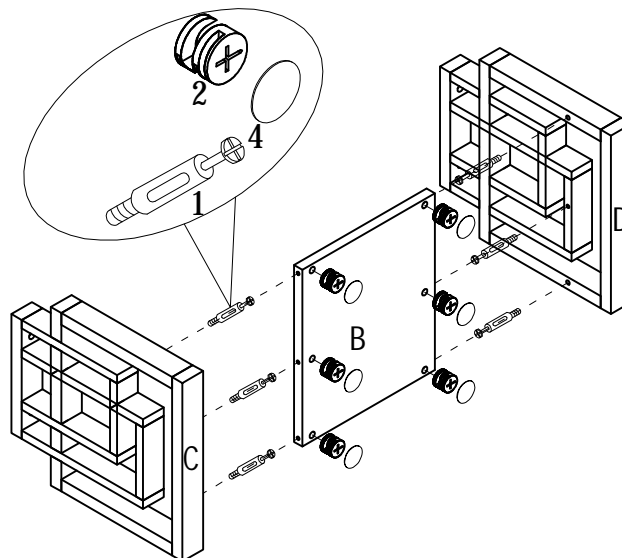

STEP1

STEP2

