

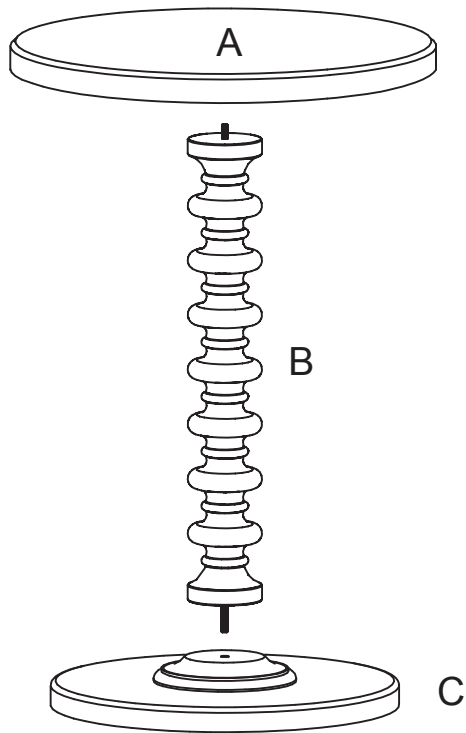


ASSEMBLY INSTRUCTIONS

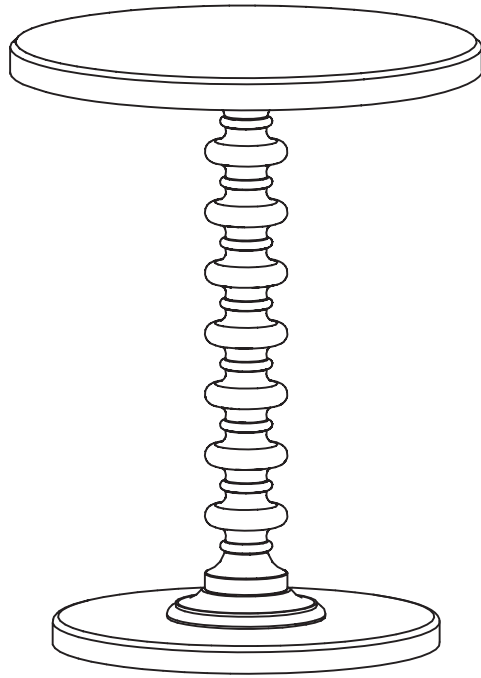

Step 1

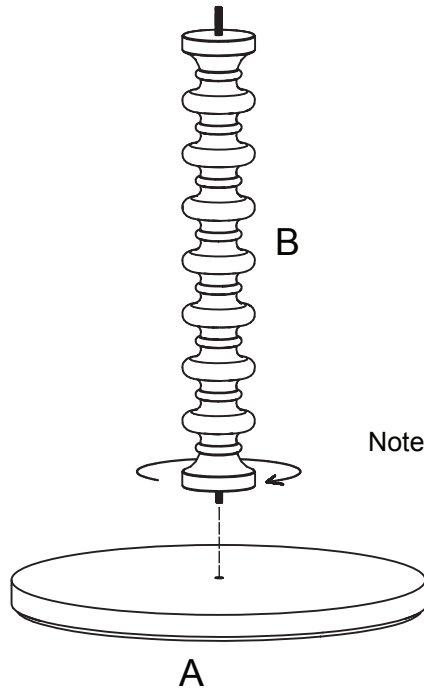

Note: The end of Post B with short exposed hardware is for connecting to Top A.

Step 2

