
Daybed Installation Instructions




NV037-XXWJ

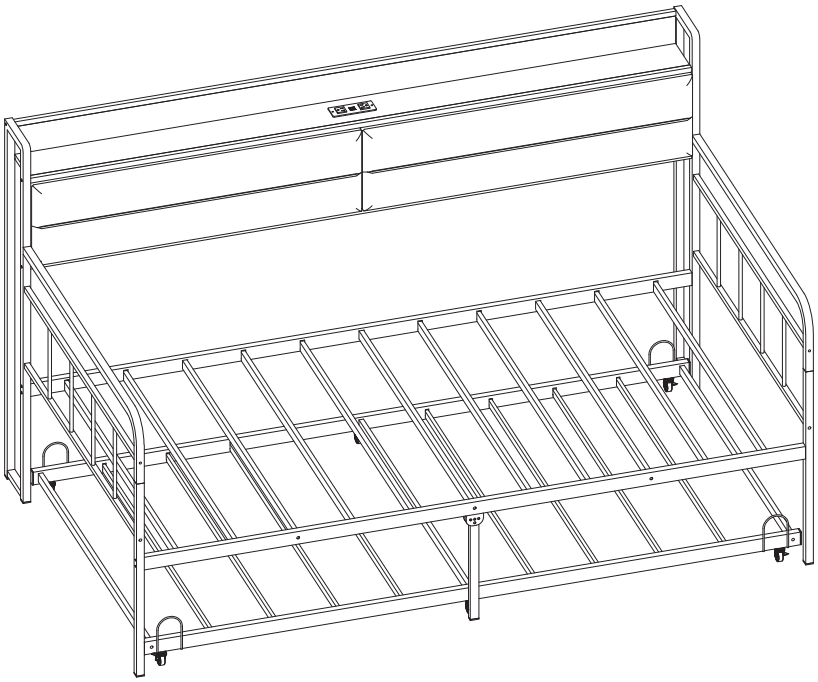

Customer Service Email:help@EverythingSupport.com
Toll Free TEL:(855)208-0668(MON-FRI 9:00am-6:00pm Eastern Time)

PARTS LIST

- Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until each part is properly assembled.


Number	Parts	Quantity
A		1PC
B		1PC
C		1PC
D		1PC
E		2PCS
F		1PC
G		1PC
H		2PCS
I		2PCS
J		2PCS
K		2PCS
L		1PC
M		3PCS
N		8PCS
O		2PCS
P		3PCS
Q		8PCS

Number	Parts	Quantity
①	 M6*12	16PCS
②	 M6*18	12PCS
③	 M6*35	24PCS
④	 M5*45	4PCS
⑤	 M4*15	2PCS
⑥	 M4	1PC
⑦	 14-14	1PC
⑧	 Philips head screwdriver	1PC
⑨	 Wheels	2PCS
⑩	 Wheels with brakes	4PCS
⑪	 socket	1PC

STEP 1

Use a No. 6 wrench and No. 3 screws to assemble square tube A, square tube B, square tube C, and square tube D on the side iron frame E.


Required Tools		③	⑥
	A 1PC	M6*35 10PCS	M4 1PC
	B 1PC		
	C 1PC		
	D 1PC		
	E 2PCS		

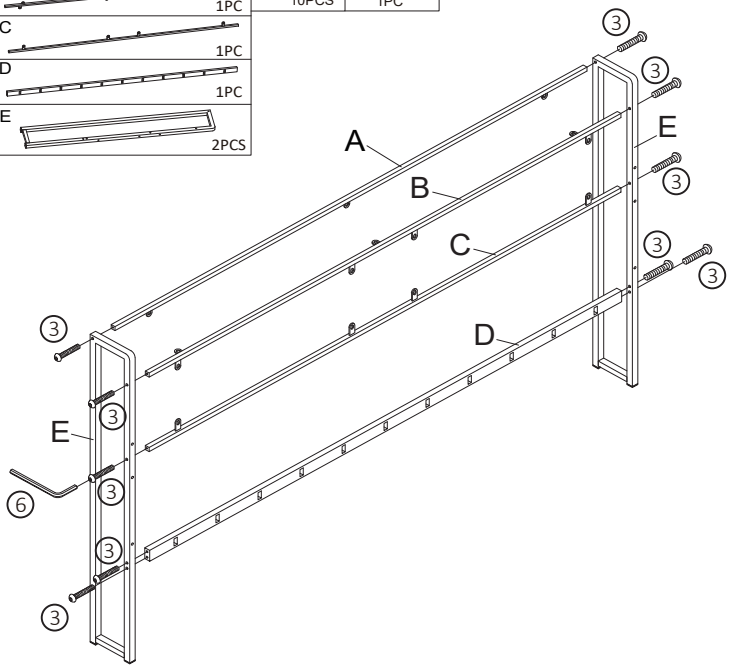

STEP 2


Required Tools	F	①	⑥
	1PC	M6*12 3PCS	M4 1PC

Use a No. 6 wrench and No. 1 screw to assemble the back plate F on the square tube A.

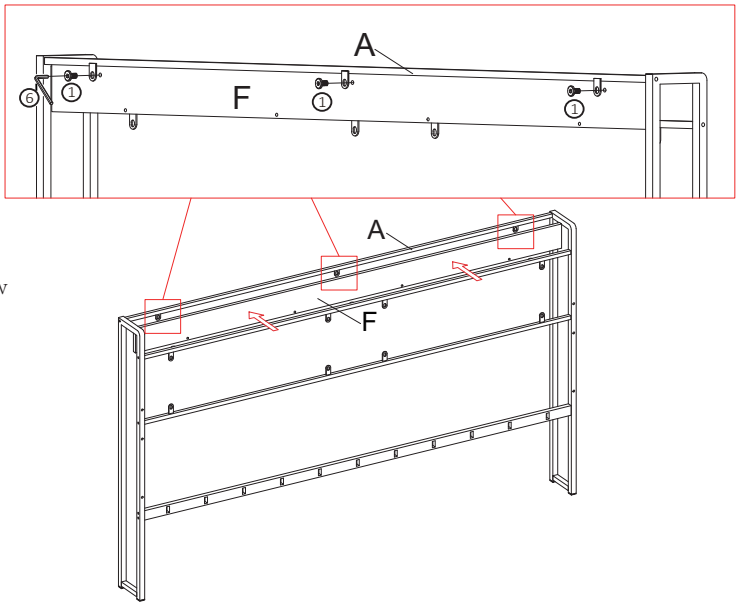


☆ Please pay attention to the hole position in the picture and screw it in vertically


STEP 3

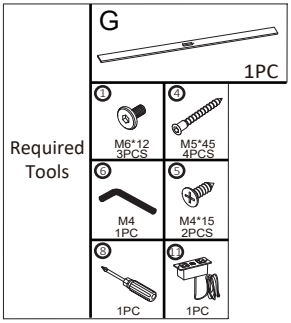


Use a No. 6 wrench and No. 1 screw to assemble the panel G on the square tube B, and use a No. 6 wrench and No. 4 screws to assemble the back panel F on the panel G.

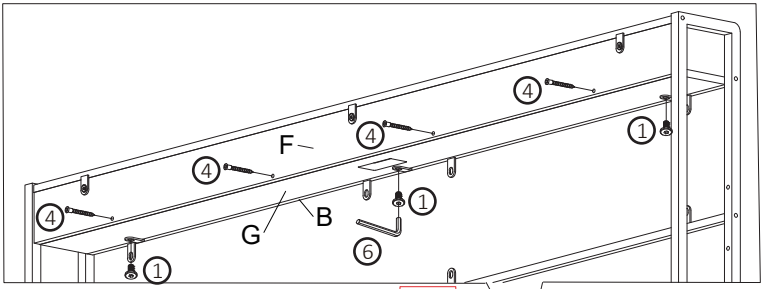


First, pass the plug board cable through the square slot on the panel, and then use a No. 8 Phillips screwdriver and No. 5 screws to assemble the plug board on panel G.

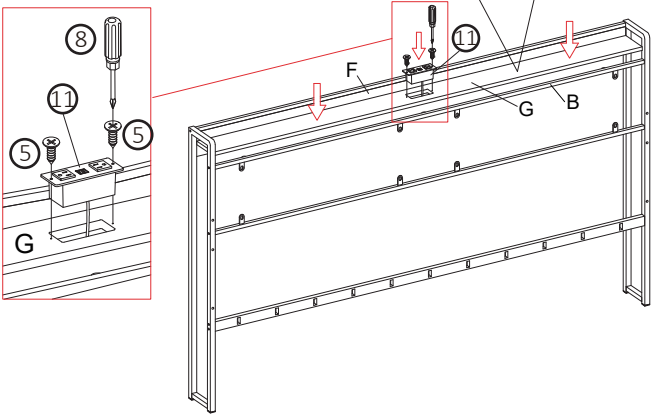


STEP 4

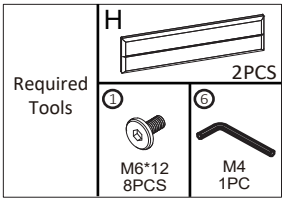

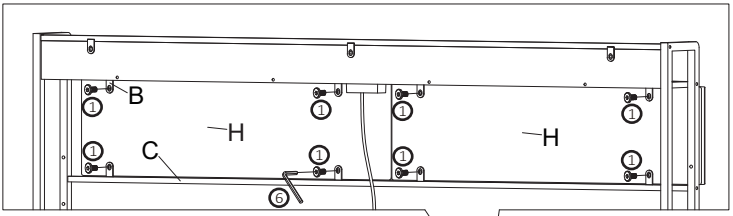


Use a No. 6 wrench and No. 1 screw to assemble the 2PCS soft pack H on the square tubes B and C.

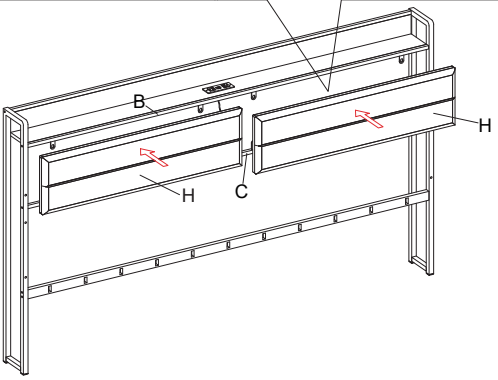

☆ Please pay attention to the hole position in the picture and screw it in vertically


STEP 5

Use a No. 6 wrench and No. 1 screw to assemble the handrail square tube I on the square tube J, use a No. 6 wrench and No. 3 screws to assemble the square tube (I+J) on the side piece iron frame E, and use a No. 6 wrench and No. 3 screws to assemble the square frame K on the side piece iron frame E and the iron tube (I+J).

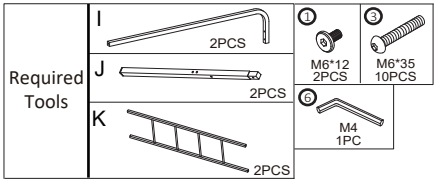


STEP 6

First insert the square tube M into the square tube D, and then use the No. 6 wrench and No. 2 screws to assemble the square tube M on the square tube D.

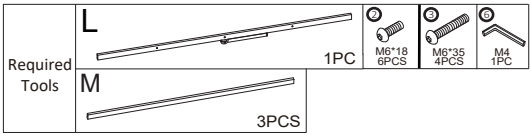

First insert the square tube L into the square tube M, then use a No. 6 wrench and 3 No. screws to assemble the L tube to the square tube J, and use a No. 6 wrench and 2 screws to assemble the square tube L to the square tube M.

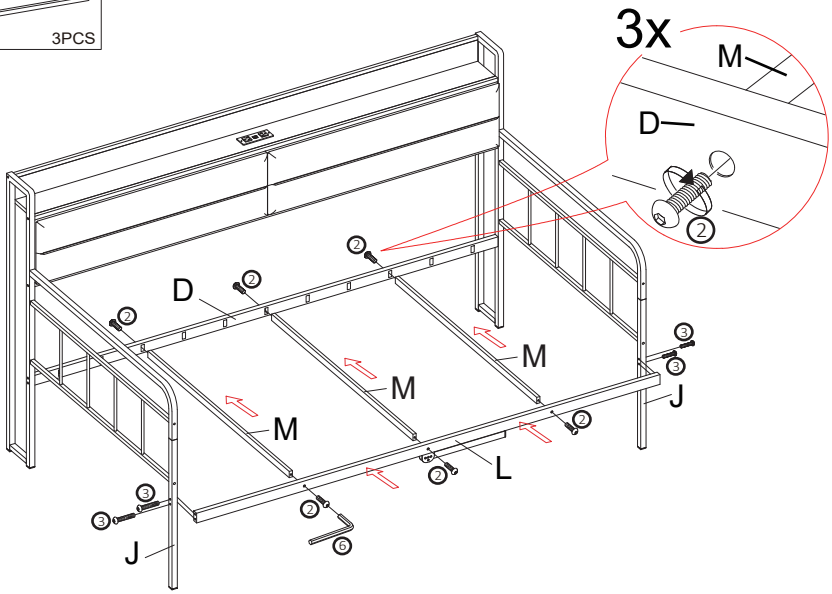


☆ Please pay attention to the hole position in the picture and screw it in vertically

STEP 7

Required Tools	N 8PCS

Insert square tube N obliquely into square tube D, then insert square tube N backward into square tube L, and then clamp square tube N downward on square tube D and square tube L.

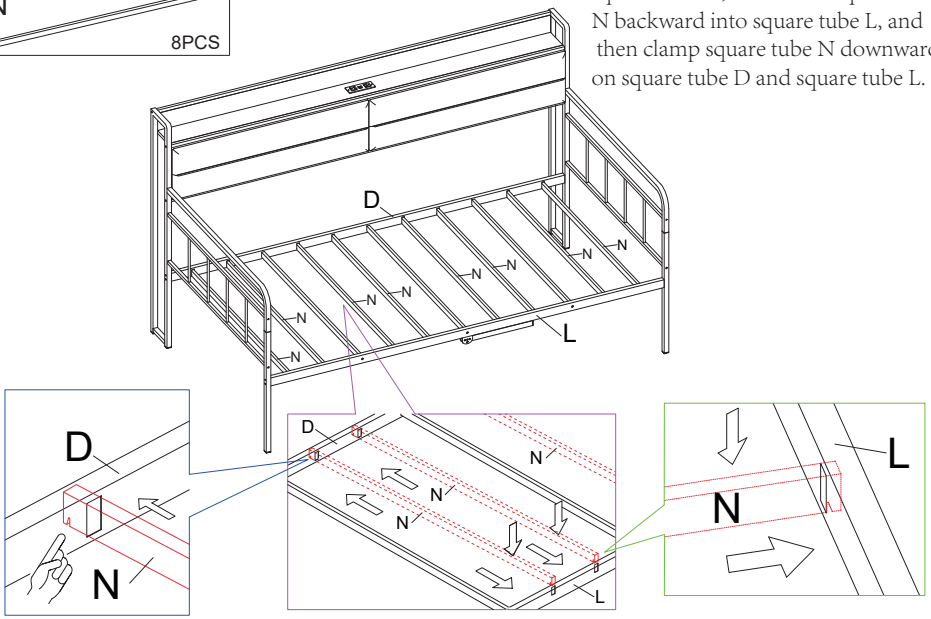


STEP 8

First insert the square tube P into one side of the square tube O, and assemble the square tube P onto the square tube O on one side with a No. 6 wrench and No. 2 screws. Then, insert the square tube O on the other side into the square tube P, and assemble the square tube P onto the square tube O on the other side with a No. 6 wrench and No. 2 screws.

Required Tools	O 2PCS	② M6*18 6PCS	⑥ M4 1PC	⑦ 14-14 1PC
	P 3PCS	⑨ 2PCS	⑩ 4PCS	

Use a No. 7 wrench to assemble wheels 9 and 10 onto square tube O.

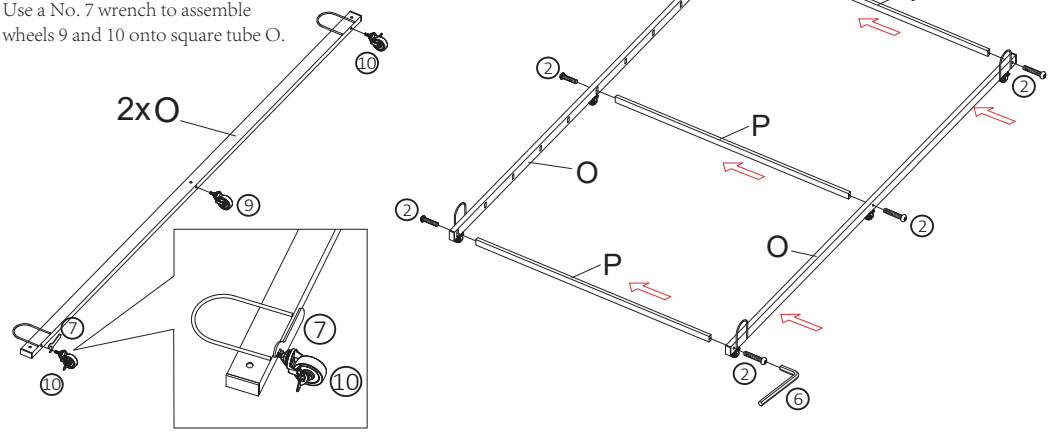


☆ Please pay attention to the hole position in the picture and screw it in vertically

STEP 9


Required Tools	Q 8PCS

Insert the square tube Q obliquely into one side of the square tube O, then insert the square tube Q backward into the other side of the square tube O, and then clamp the square tube Q downward on the square tubes O on both sides.

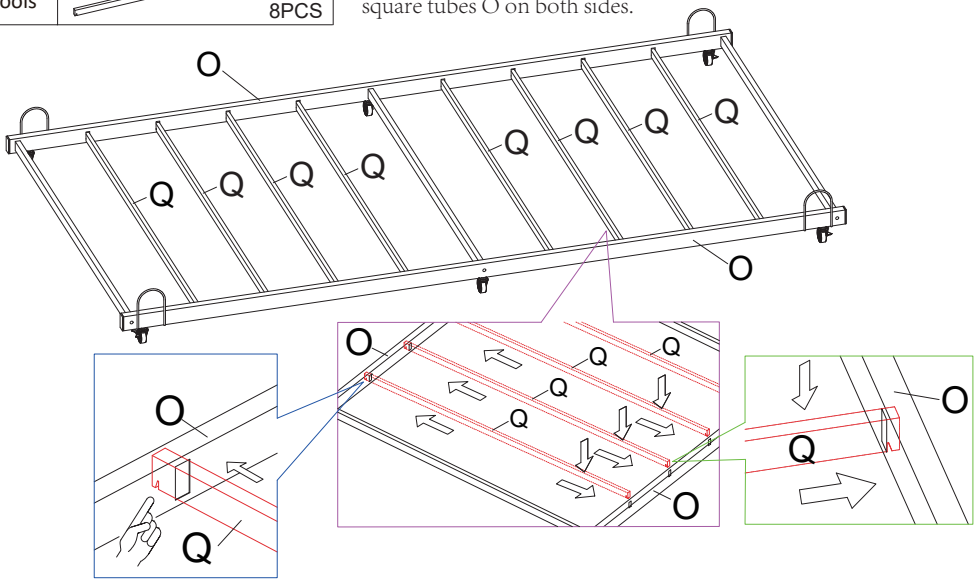


STEP 10

After pushing the assembled lower bed frame into the bottom of the upper bed, press the support feet on the square tube L to open to 90° according to the buckles to support the upper bed frame.

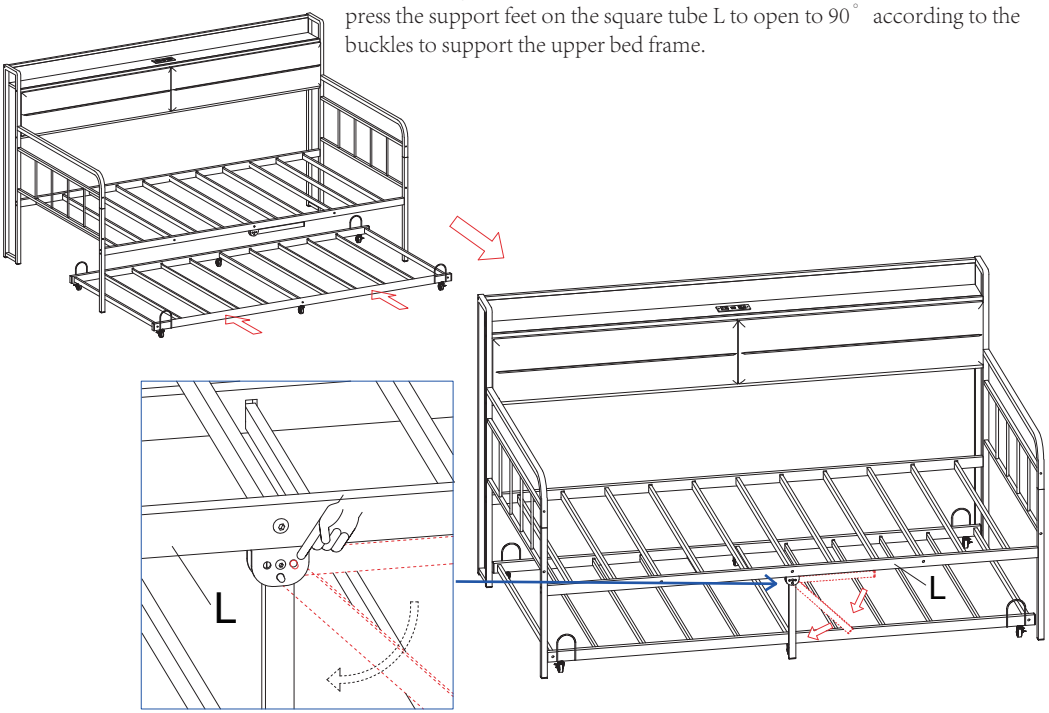

STEP 11

Press the buckle to open the support foot on the square tube L to 90 degrees. After taking out the lower bed frame for use, press the buckle to open the support foot on the square tube L to 90 degrees to support the upper bed frame.

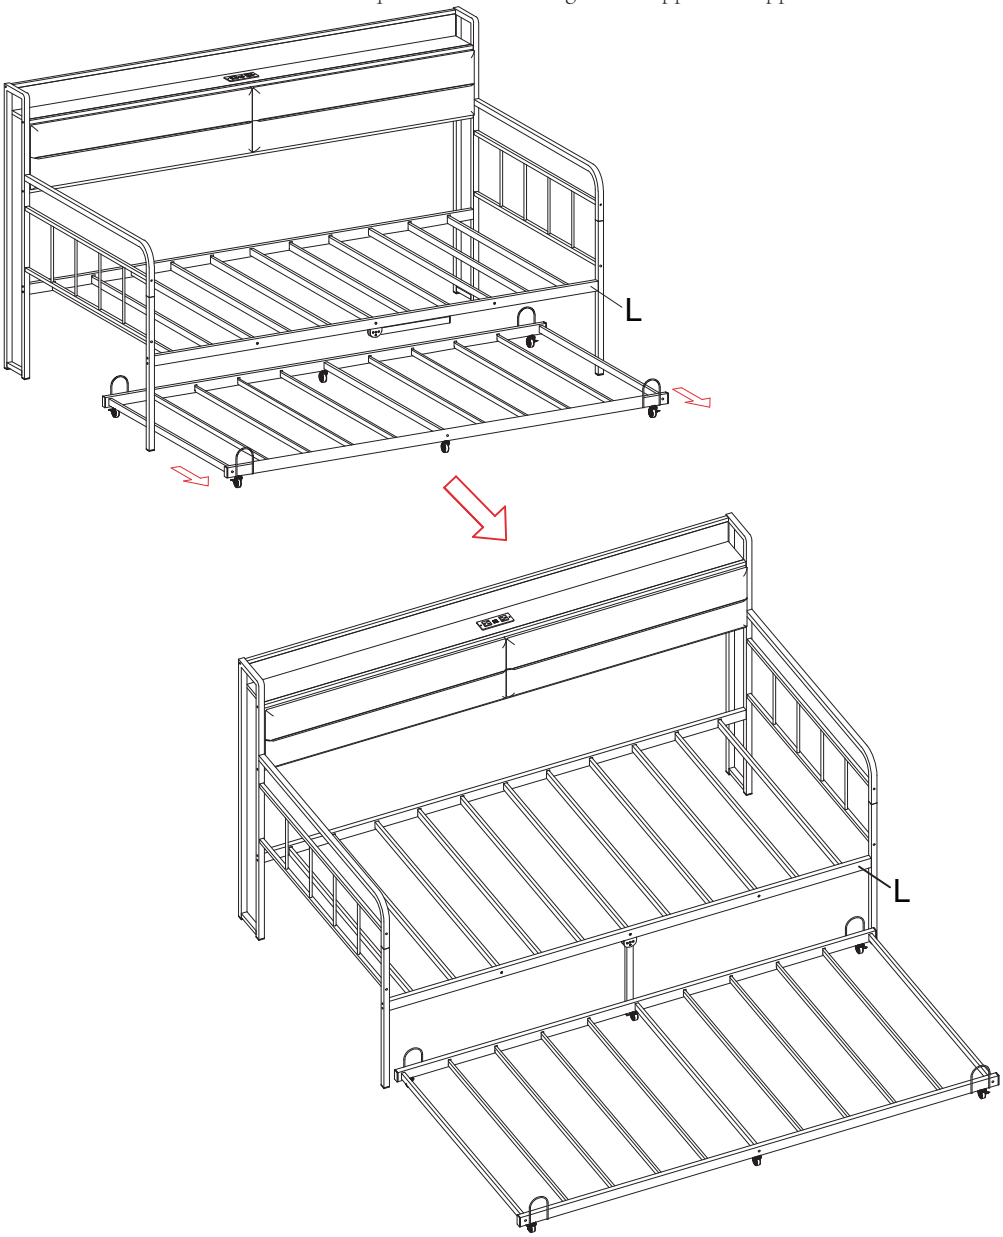

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.
Yours Sincerely

- Please avoid harsh, corrosive and abrasive cleaners.
- Keep dry and avoid damp environments.

Installation guide video

Customer Service Email:help@EverythingSupport.com
Toll Free TEL:(855)208-0668(MON-FRI 9:00am-6:00pm Eastern Time)

If you have any questions or concerns please feel free to contact us.
We're committed to providing our customers with the quality service.