

Assembly Instructions


Decorate your home，Brighten wonderful life

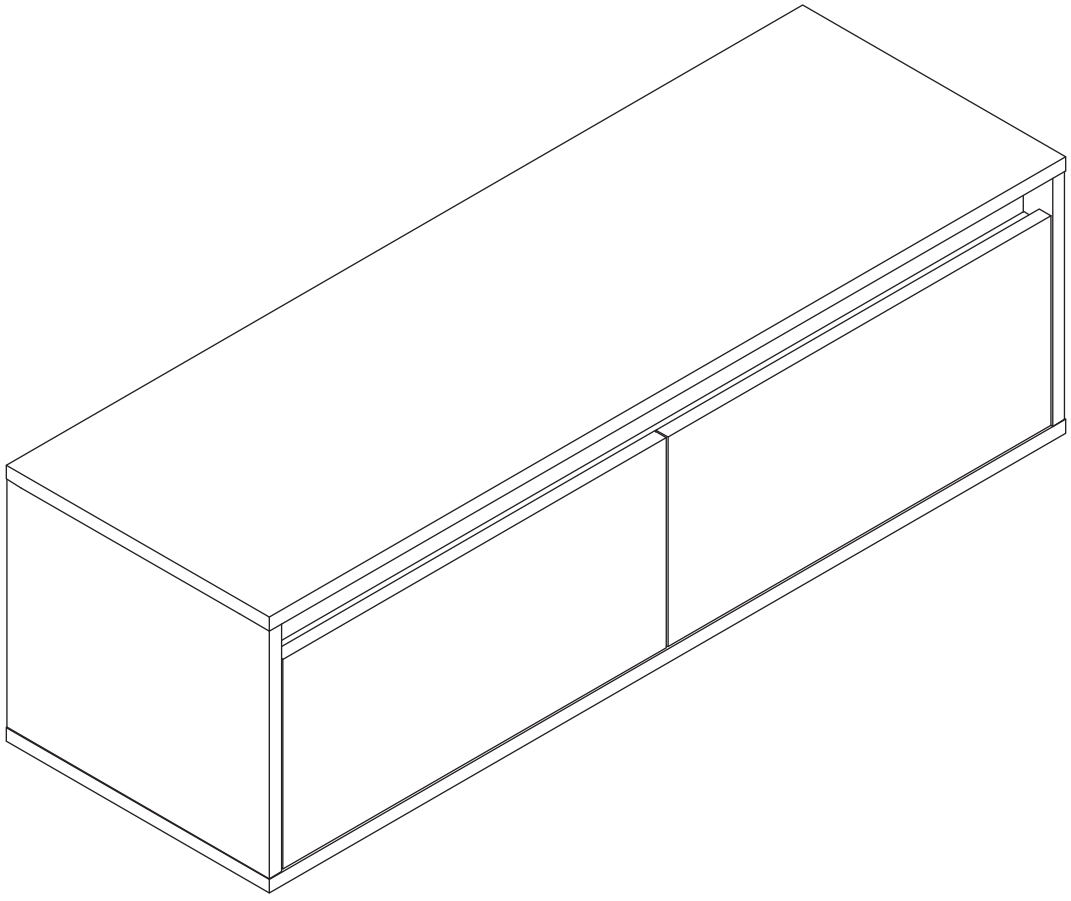

Part List


Open the package，and
put the item on the mat with care.
Please install it carefully to ensure
your fingers will not be scratched.

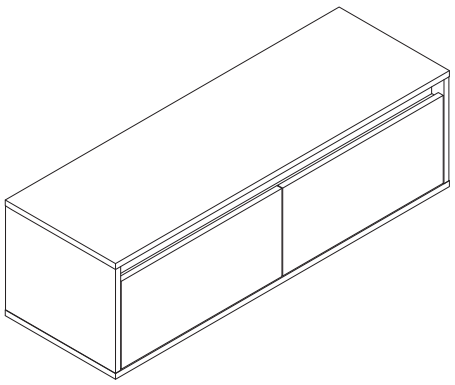

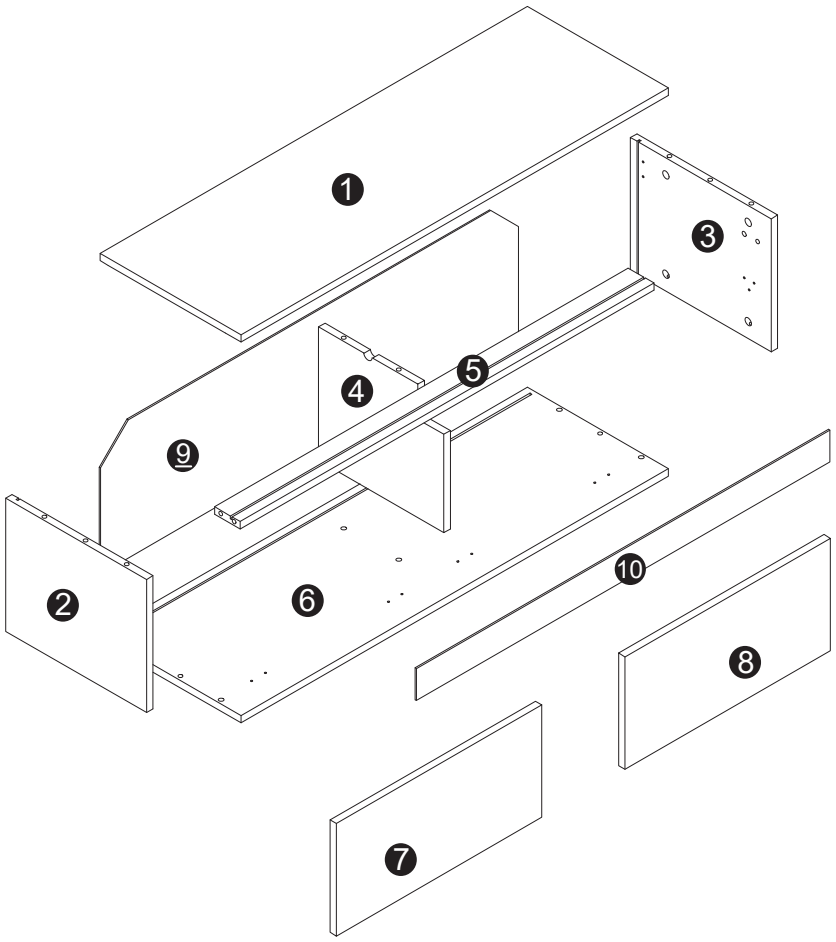

Hardware List

A




φ15*10mm
M6*40mm
×14 (+1)

B




M8*30mm
×6 (+1)

D2



×4

K




900mm
×1

L



×5 (+1)

M




M3.5*14mm
×42 (+1)

G




×2

T




×14 (+1)

W

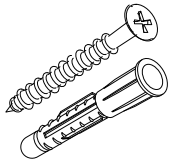

×2 (+1)

X



×2


Extra white cam




×2


Start...

Step1

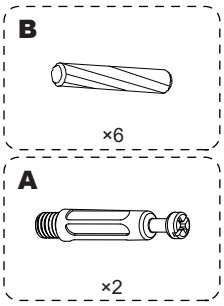



Make sure the Wooden Dowel Pins is fully immersed in the holes to avoid causing the top of the panel to penetrate during the next step of installation.

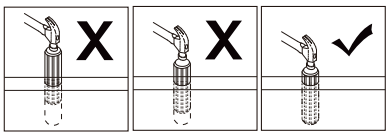


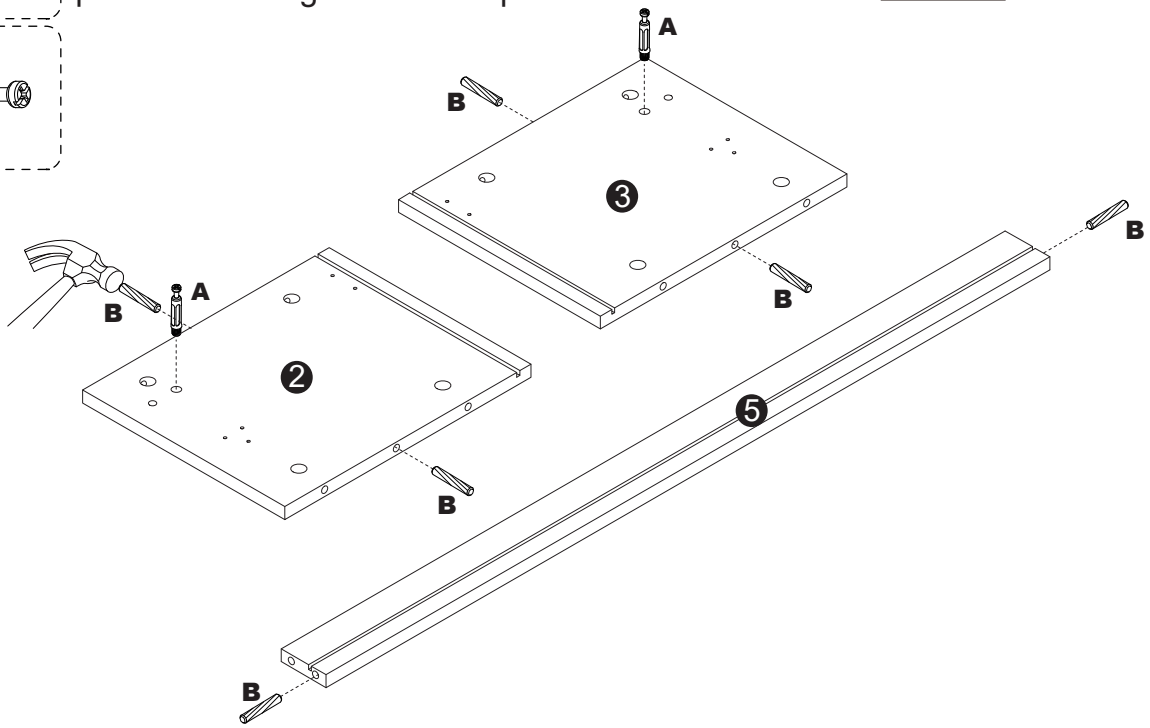


Step2

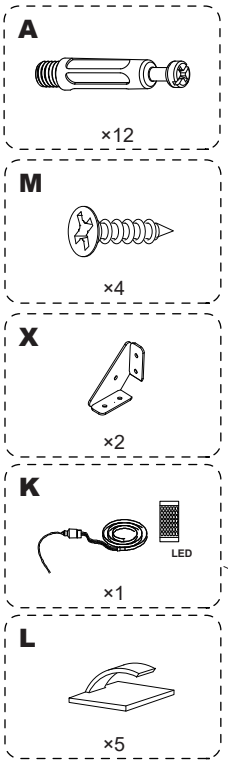


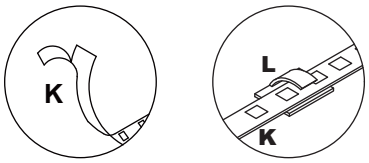


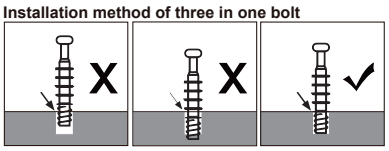


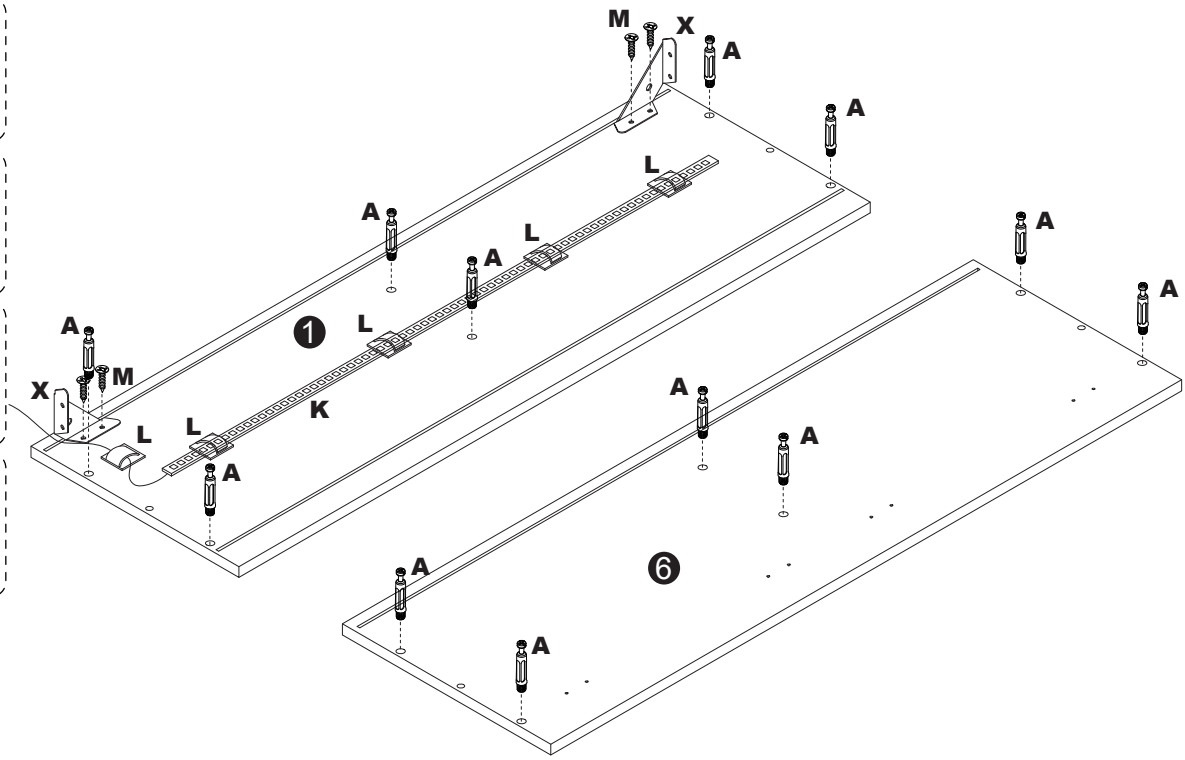


Step3

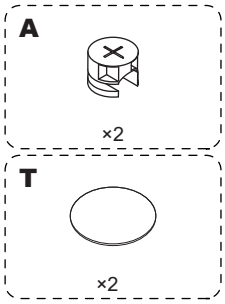


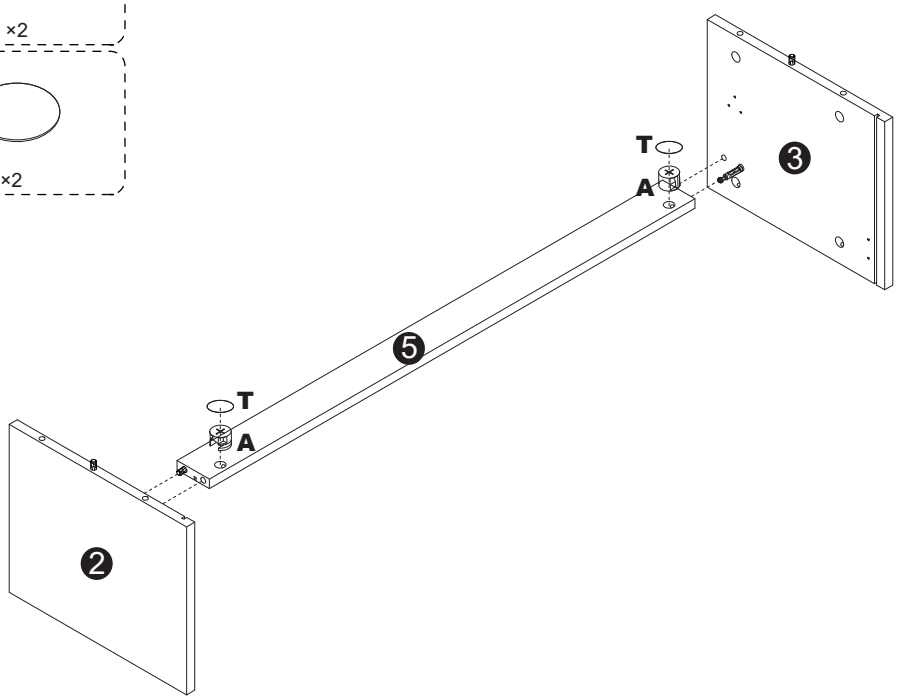

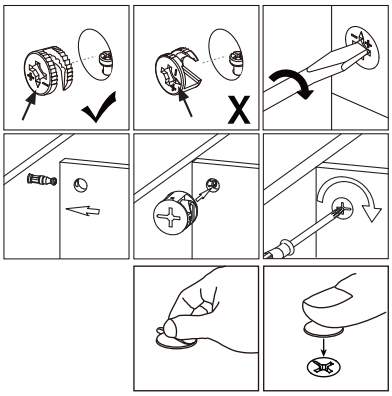


Step4

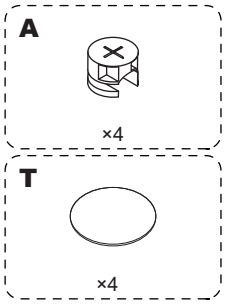


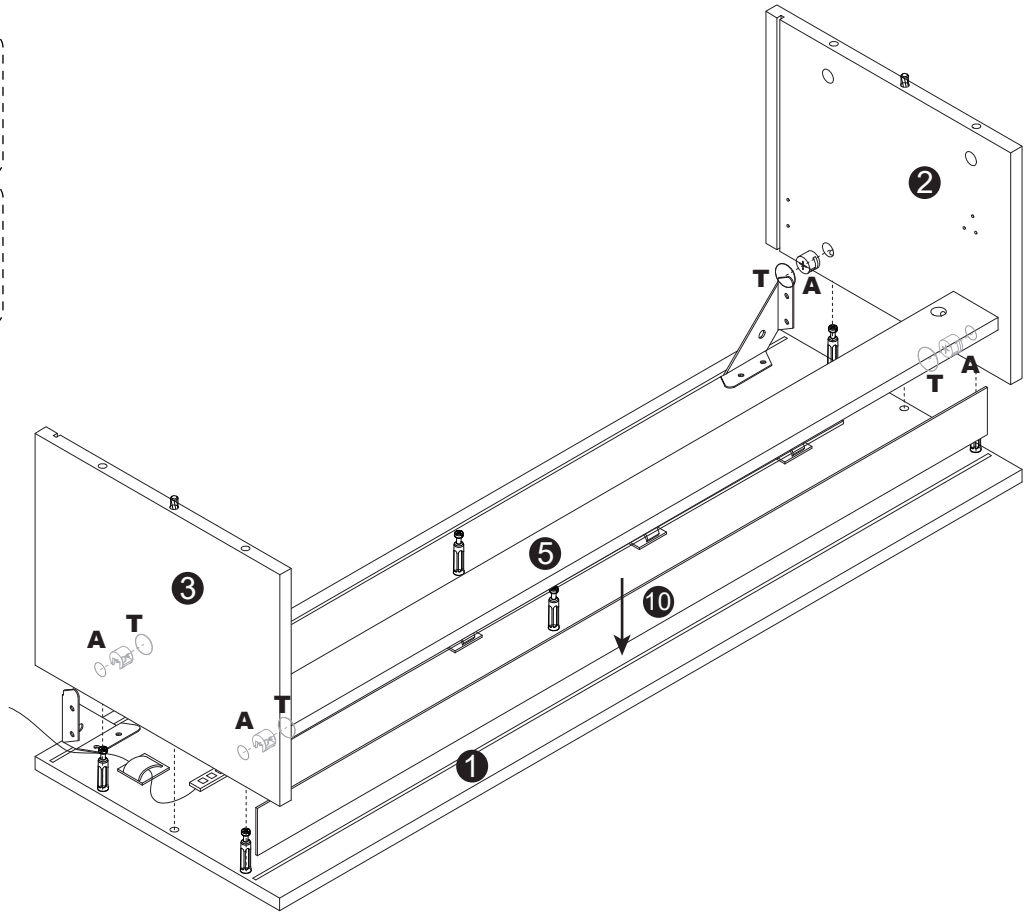


Step5

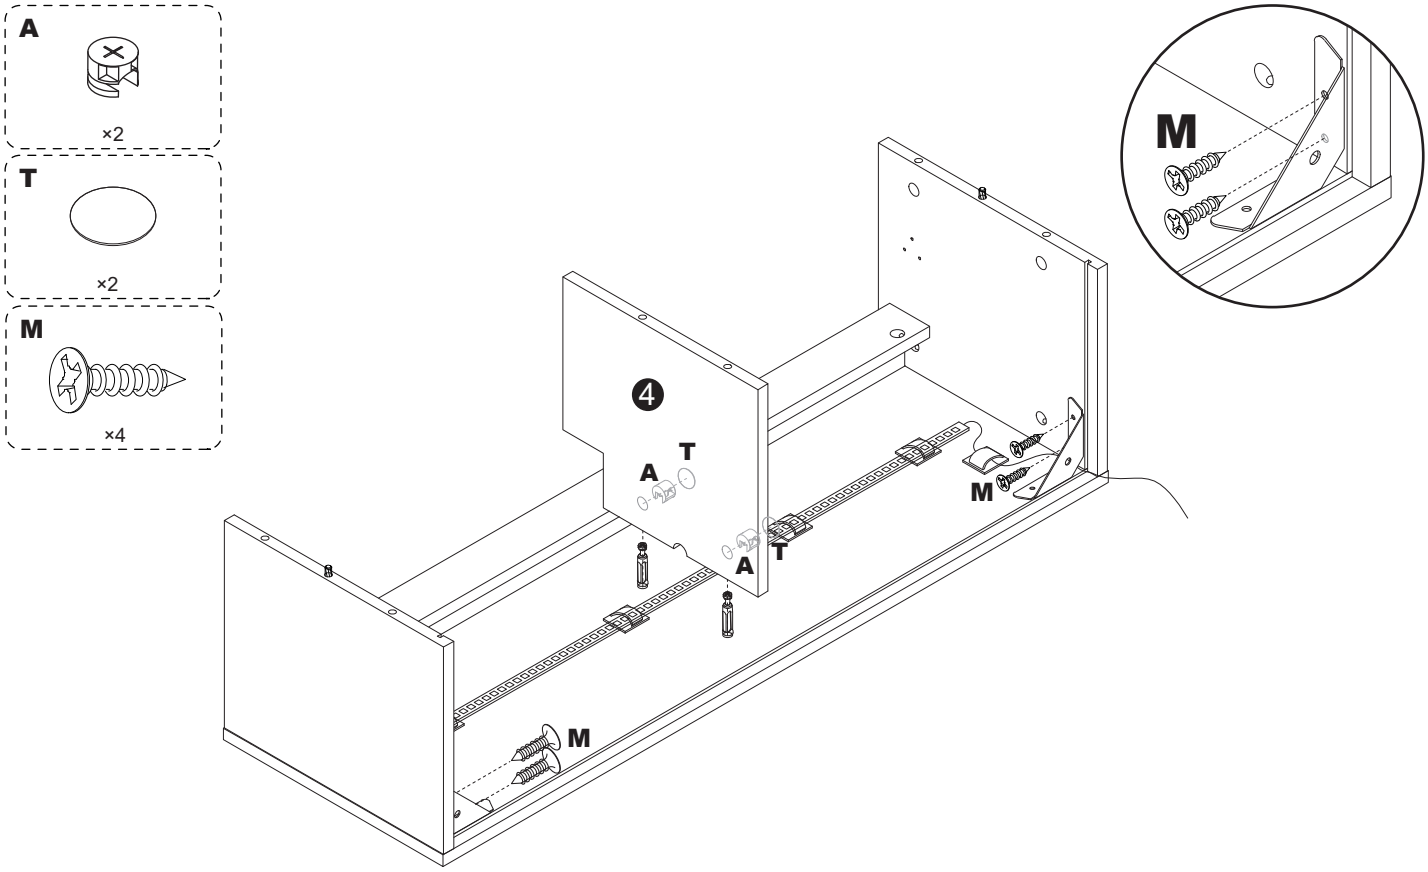


Step6

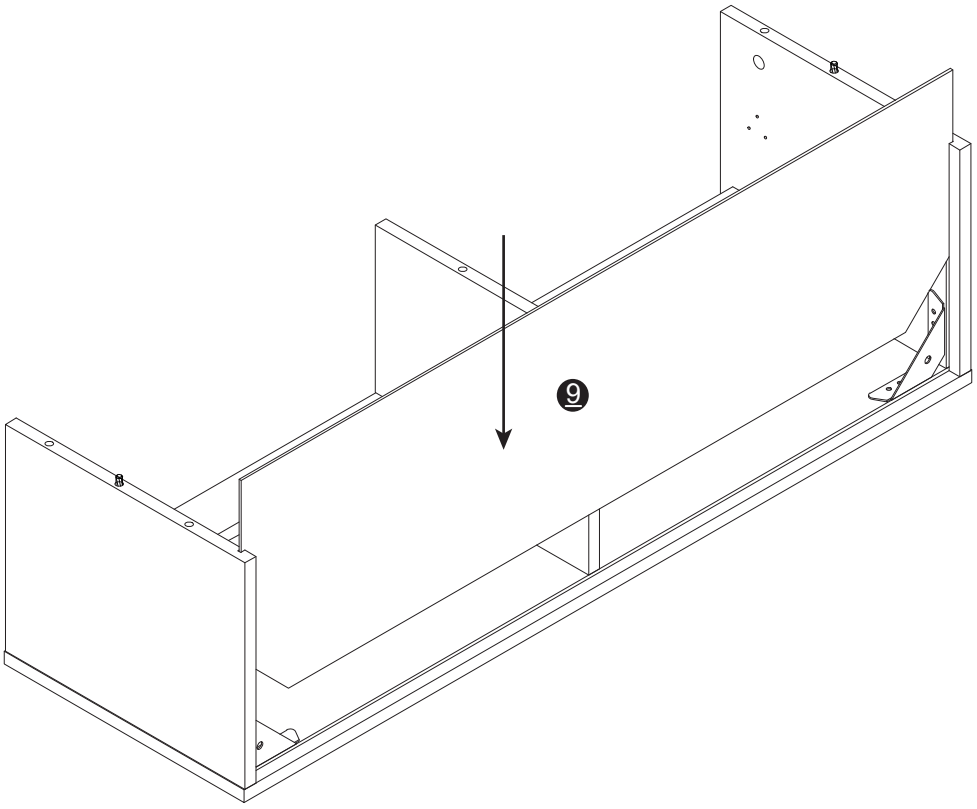


Step7

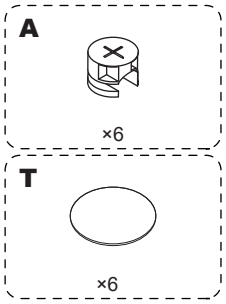


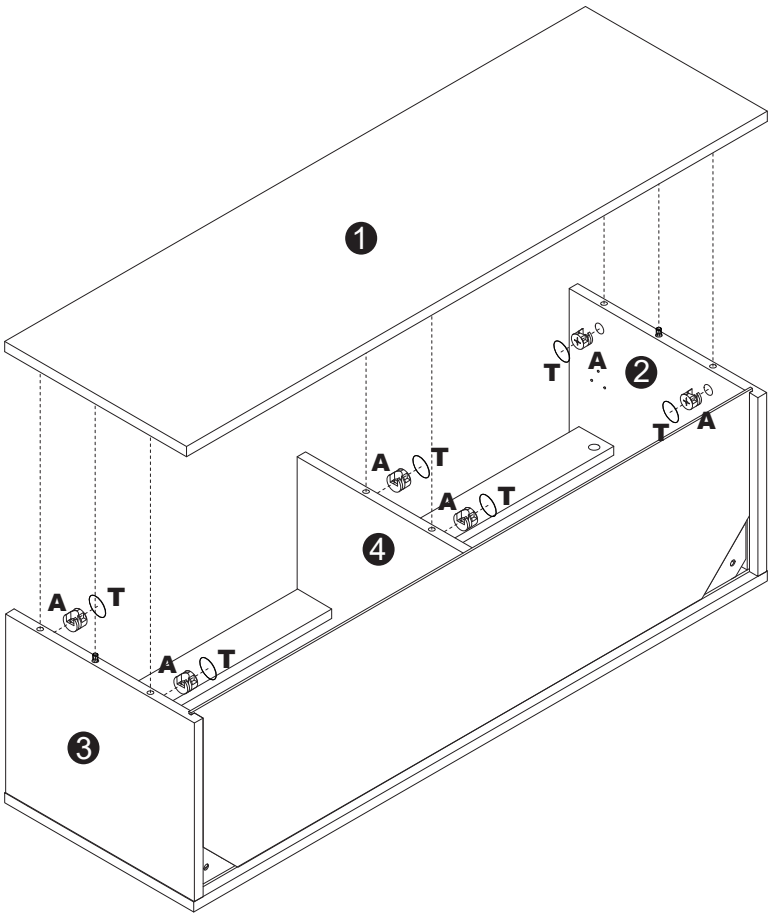

Step8

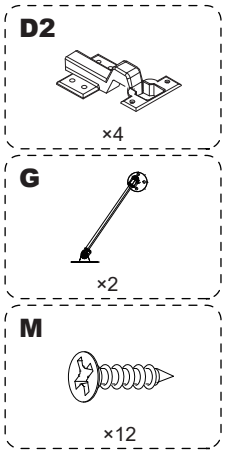

Step9

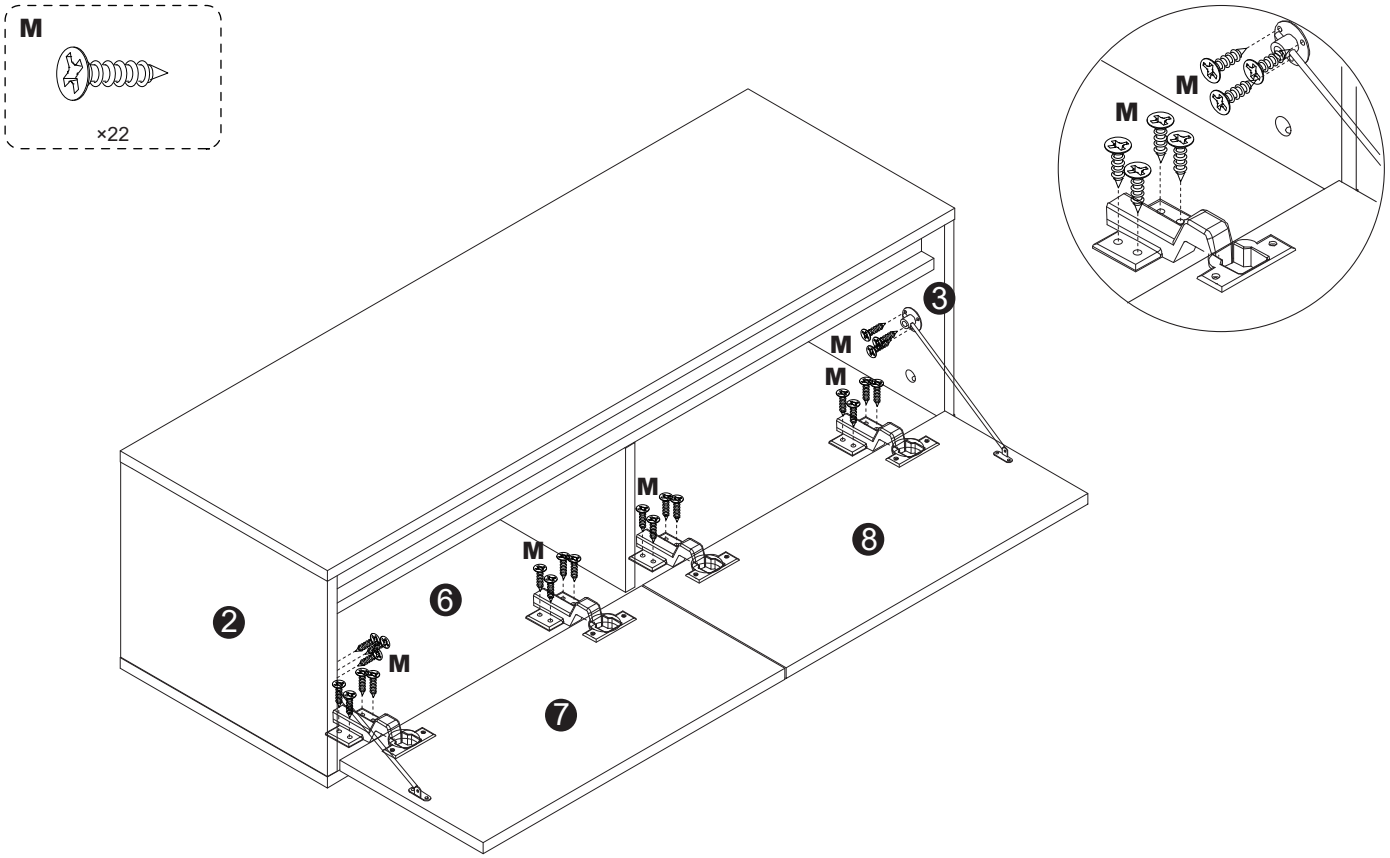

Step10

