


Floating TV Stand

Installation & Assembly

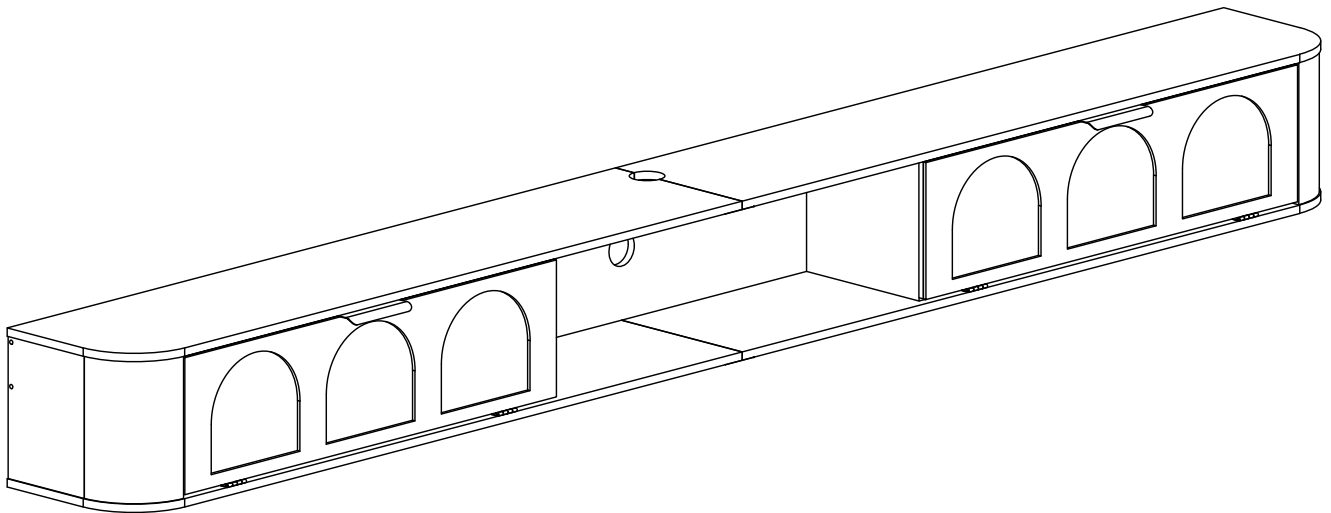

If you have any questions about assembly or use, please feel free to contact us


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

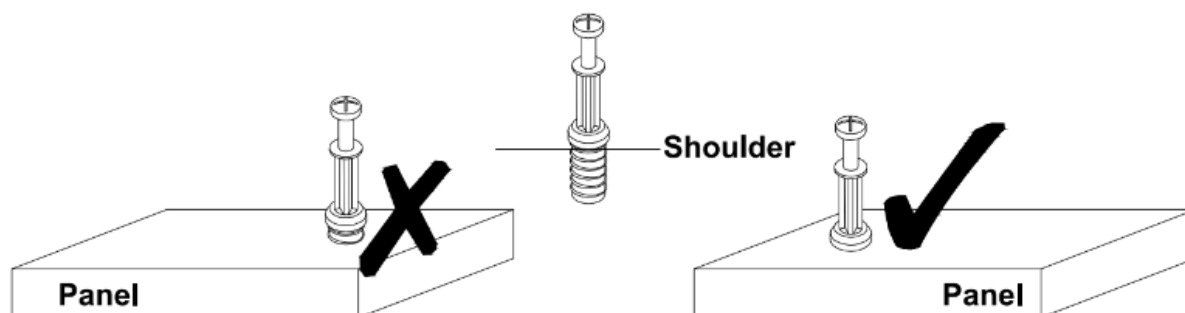

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

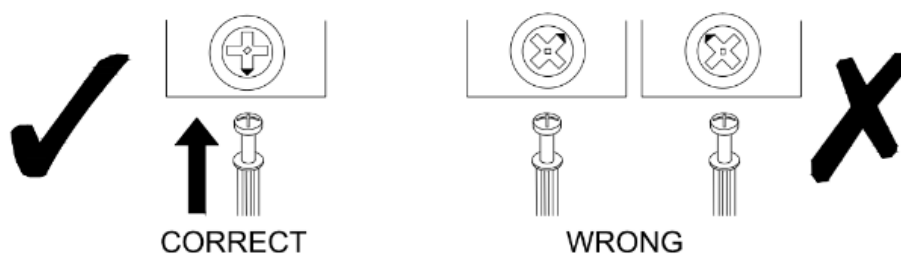

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT
















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

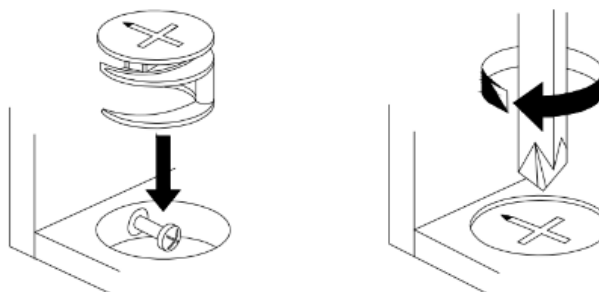


Turn cam lock clockwise to tighten.



Part List

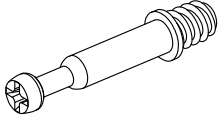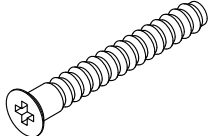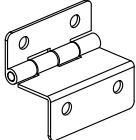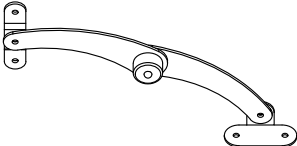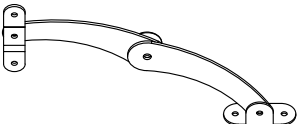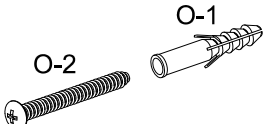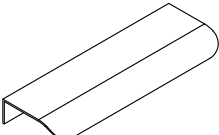No. A Quantity: 18+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 18+1 PCS Cam ø15x9.5mm 	No. C Quantity: 18+1 PCS Sticker ø20mm 	No. D Quantity: 28+2 PCS Dowel ø6x30mm 
No. E Quantity: 32+2 PCS Screw ø3.5x12mm 	No. F Quantity: 2 PCS Bolt M5 	No. G Quantity: 8+1 PCS Bolt M6x10mm 	No. H Quantity: 26+1 PCS Screw ø5x38mm 
No. I Quantity: 1 PCS Hex Key 4mm 	No. J Quantity: 2 PCS Iron Plate 60x60mm 	No. K Quantity: 2 PCS Iron Plate 19x19*18mm 	No. L Quantity: 4 PCS Hinge 
No. M Quantity: 1 PCS telescopic device - left 	No. N Quantity: 1 PCS telescopic device - right 	No. O Quantity: 10 SET plastic plug : Ø8*40 screw : Ø4*55 	No. P Quantity: 2 PCS Handle 38x15*120mm 
No. Q Quantity: 1 PCS level gauge 			

Product Structure

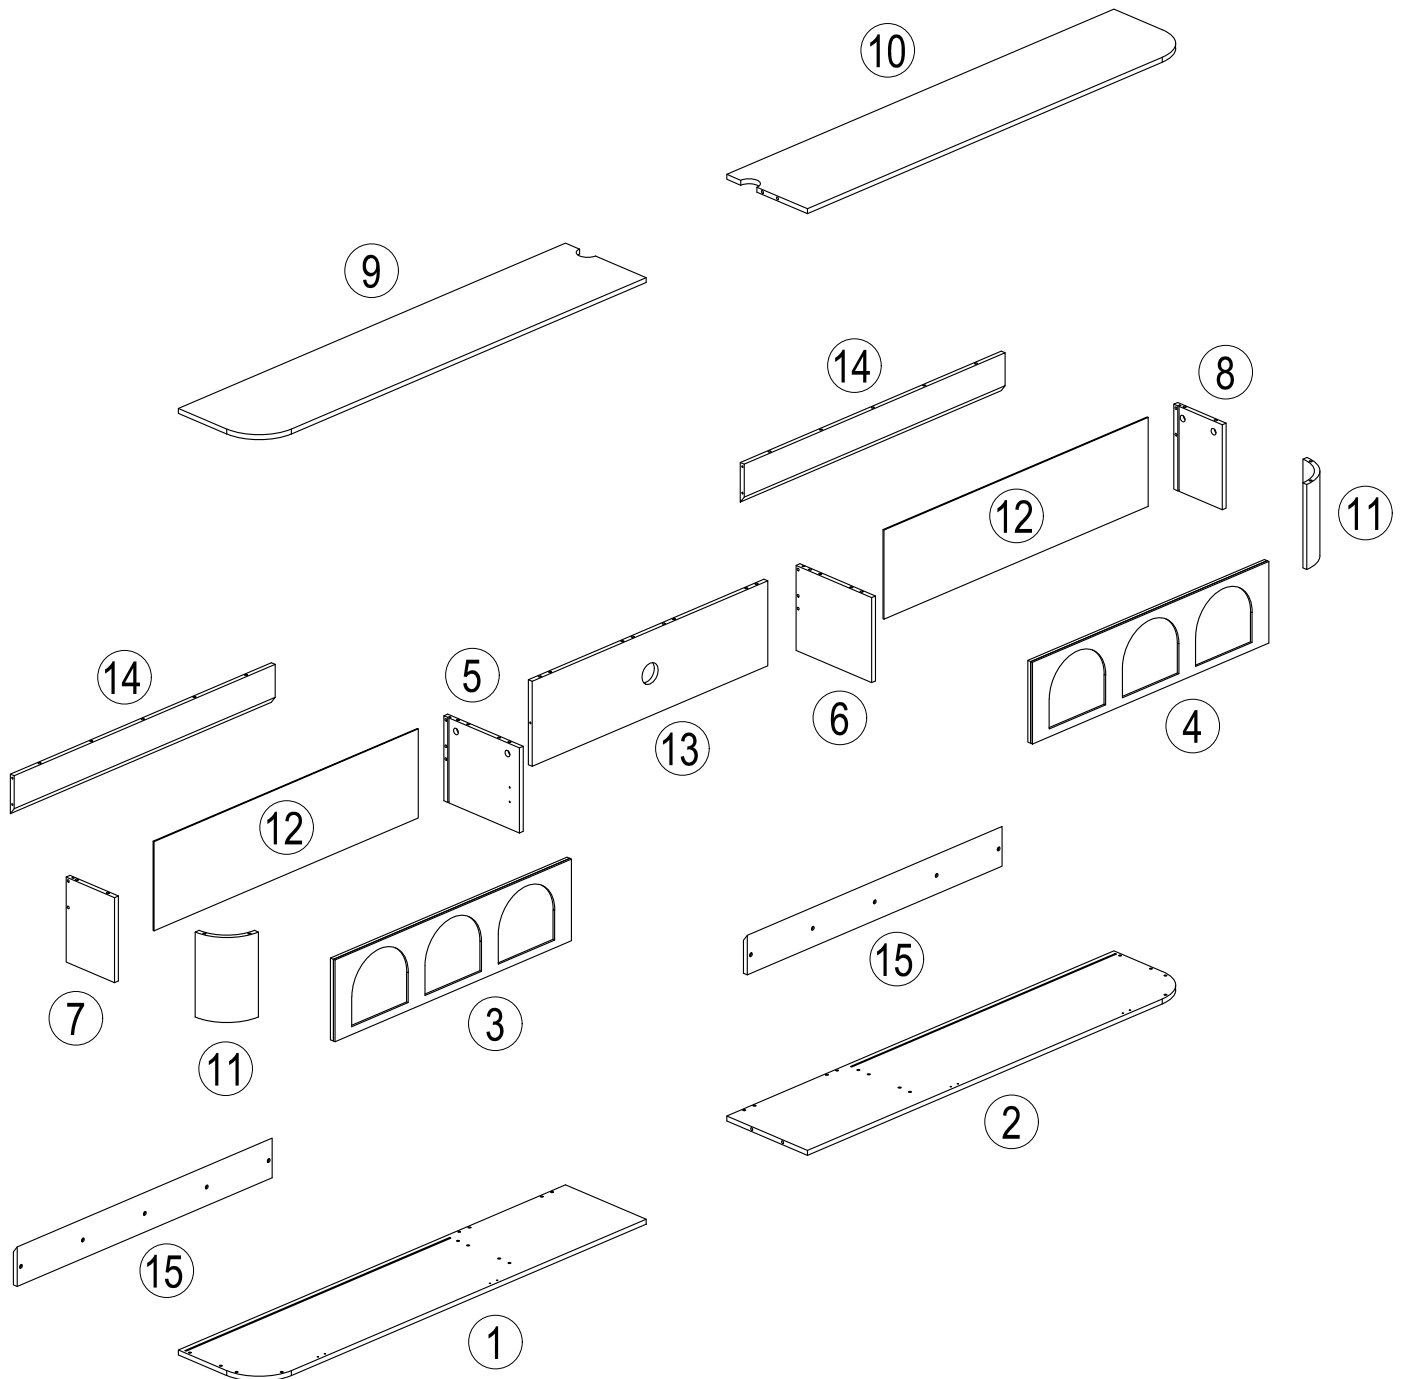


STEP 1

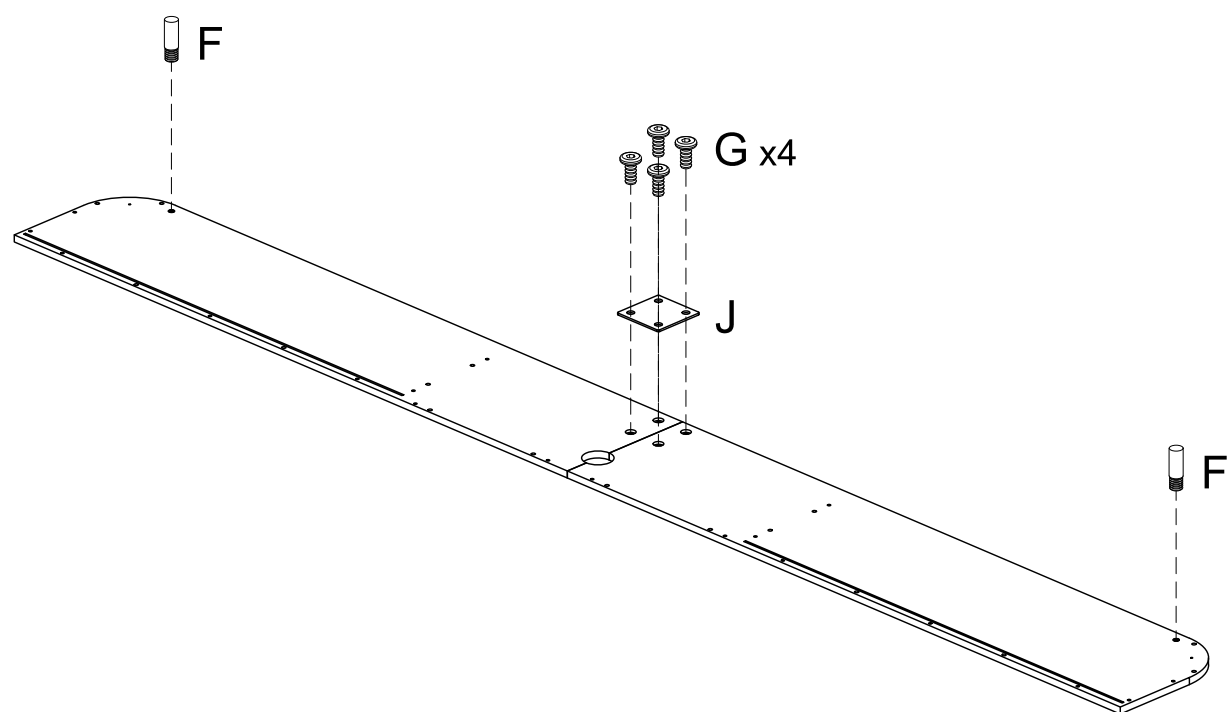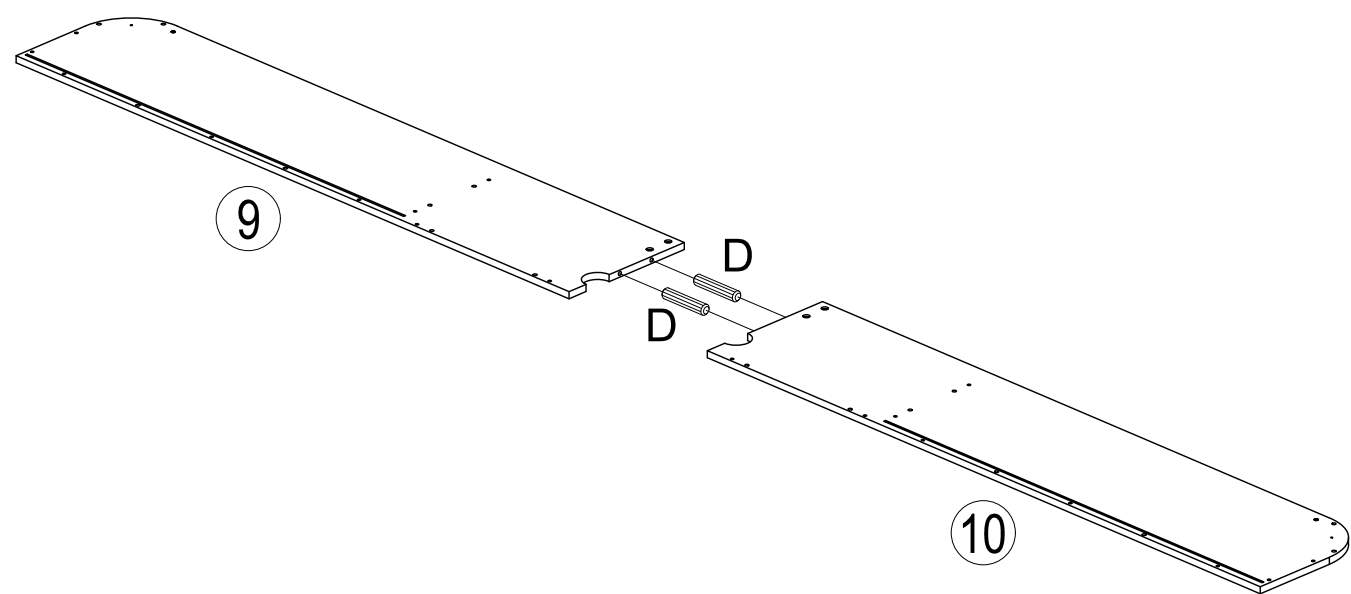


No. D

Quantity: 2 PCS
Dowel
ø6x30mm




No. F

Quantity: 2 PCS
Bolt
M5




No. G

Quantity: 4 PCS
Bolt
M6x10mm




No. J


Quantity: 1 PCS
Iron Plate
60x60mm





STEP 2

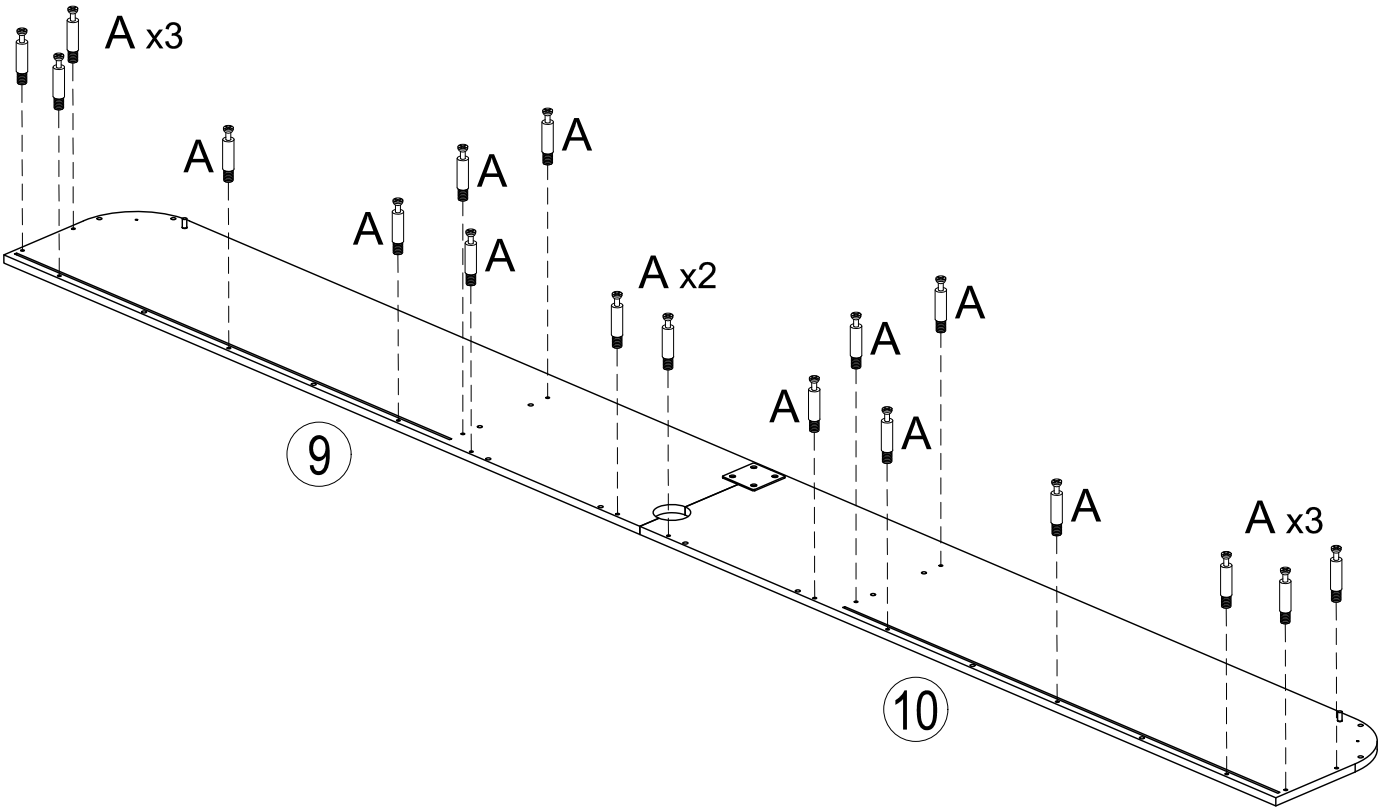


No. A
Quantity: 18 PCS
Cam Bolt
ø6x33.5mm





STEP 3

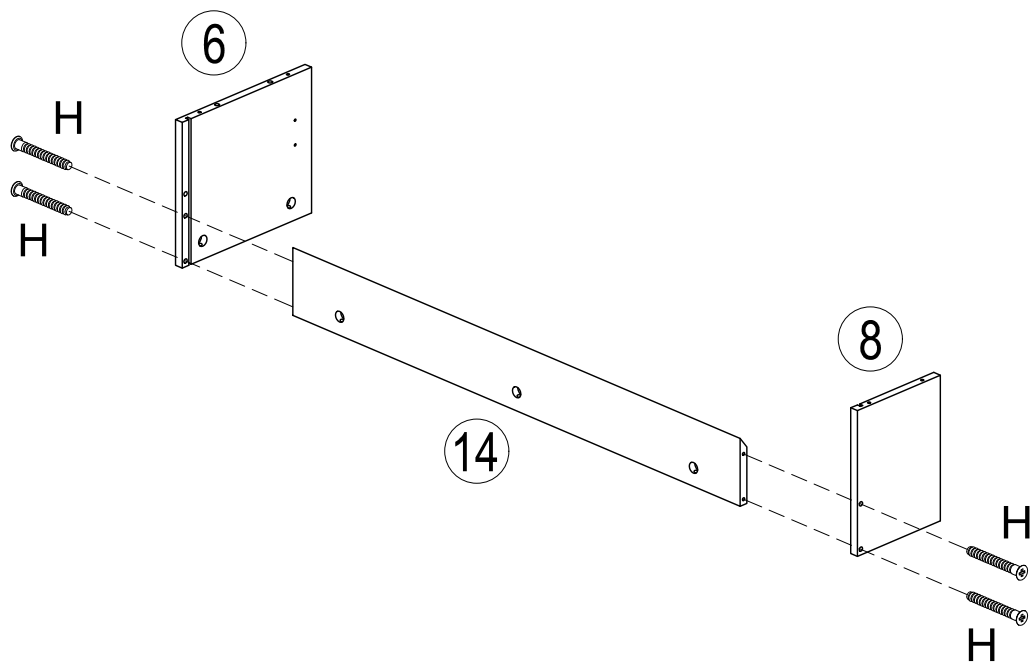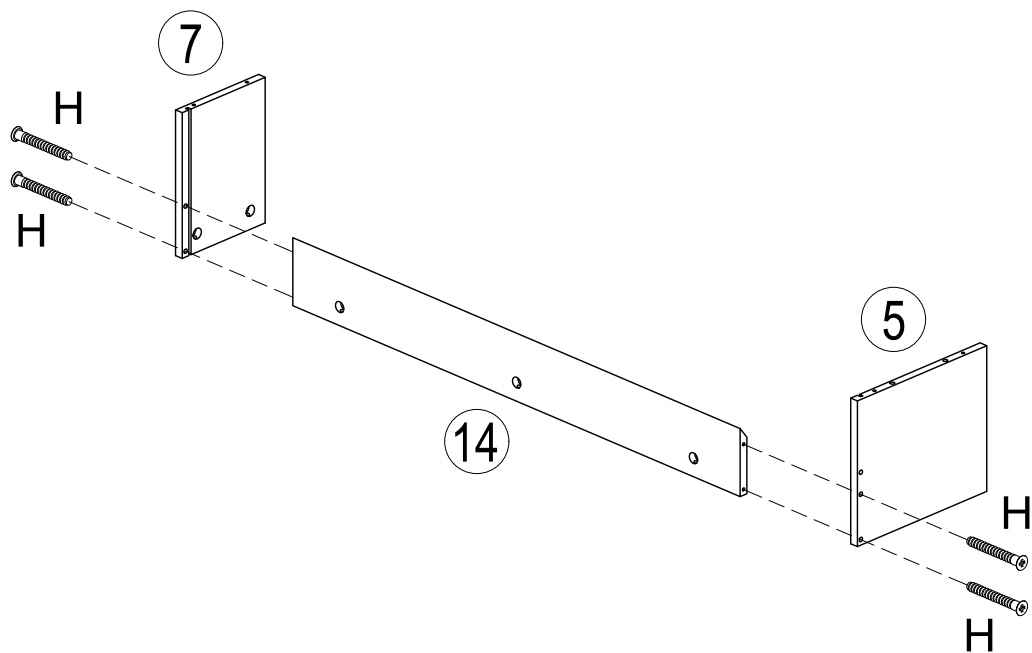

No. H
Quantity: 8 PCS
Screw
ø5x38mm

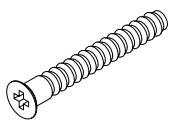


STEP 4

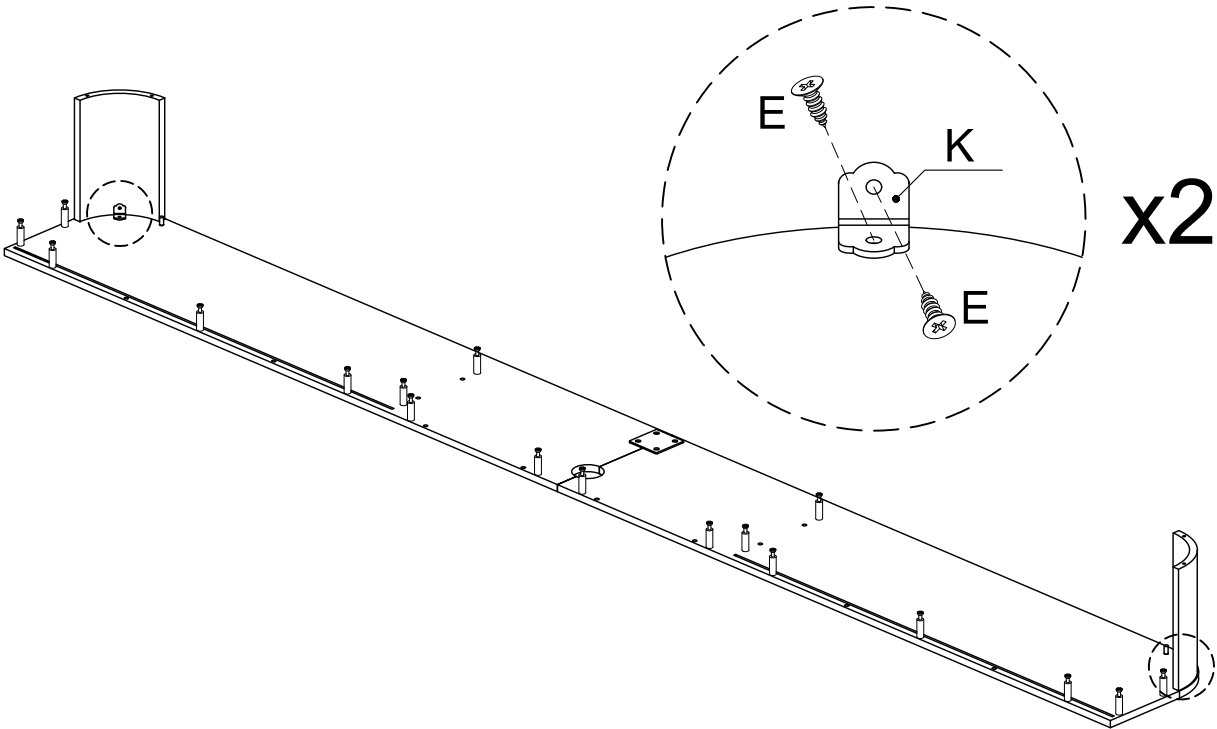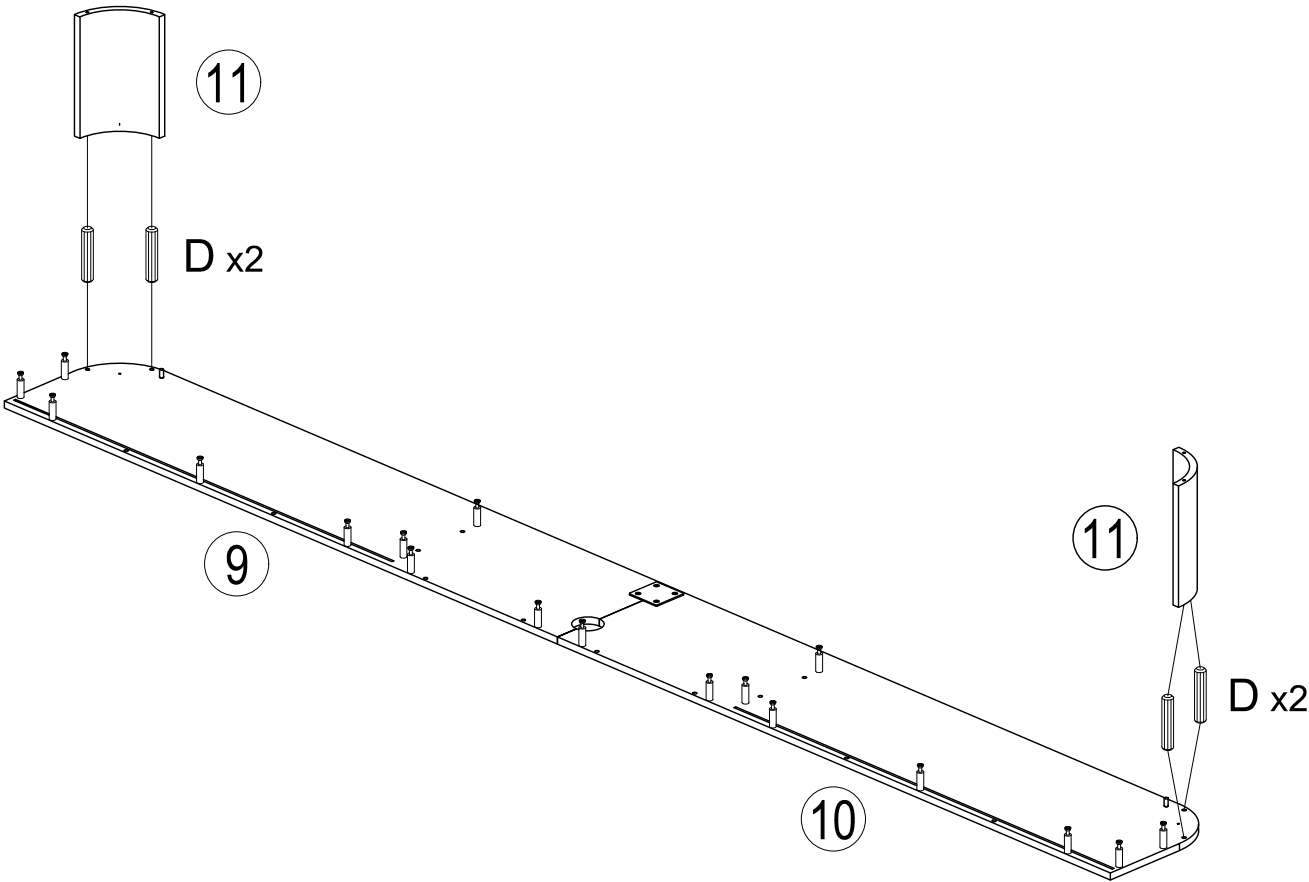

No. D

Quantity: 4 PCS
Dowel
ø6x30mm



No. E

Quantity: 4 PCS
Screw
ø3.5x12mm




No. K


Quantity: 2 PCS
Iron Plate
19x19*18mm



STEP 5

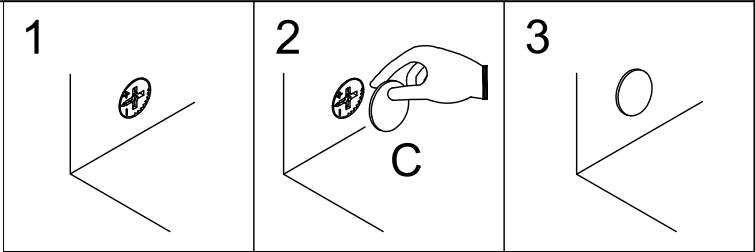

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

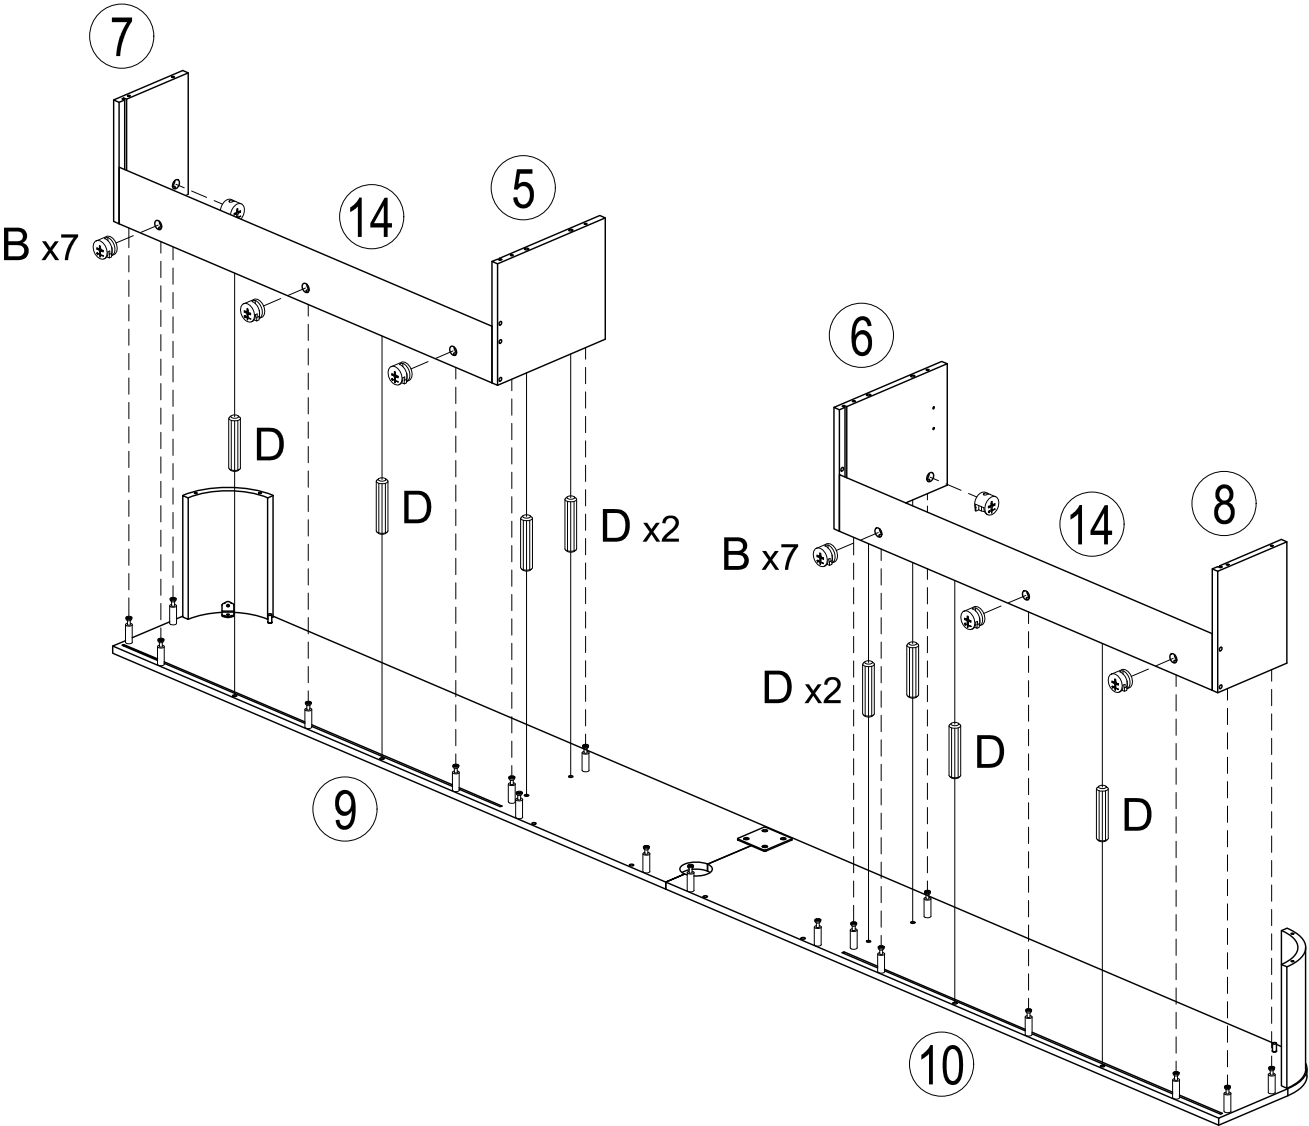


No. B
Quantity: 14 PCS
Cam
ø15x9.5mm




No. C
Quantity: 14 PCS
Sticker
ø20mm




No. D
Quantity: 8 PCS
Dowel
ø6x30mm



STEP 6

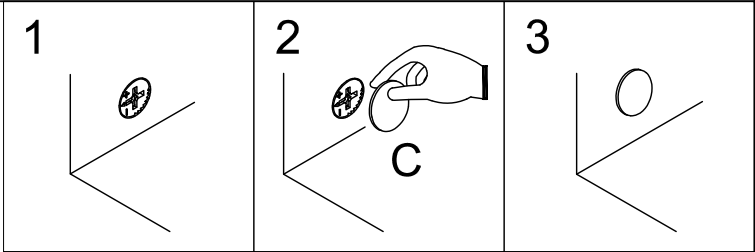

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

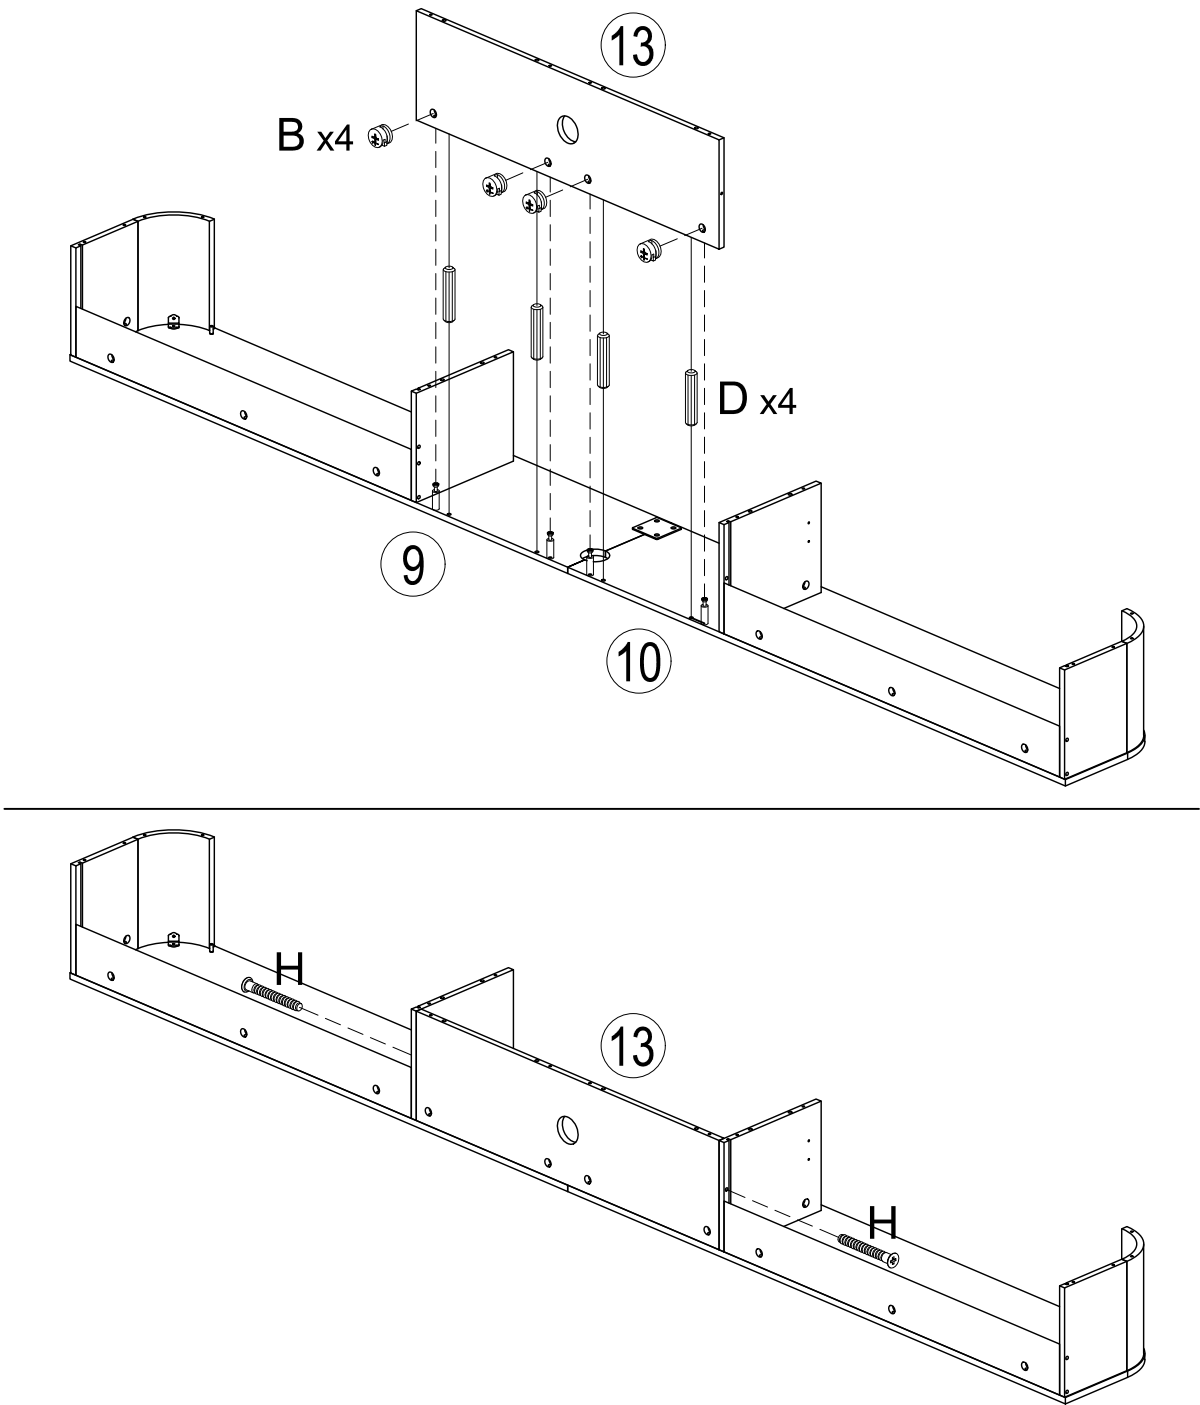

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. D

Quantity: 4 PCS
Dowel
ø6x30mm




No. H



Quantity: 2 PCS
Screw
ø5x38mm



STEP 7

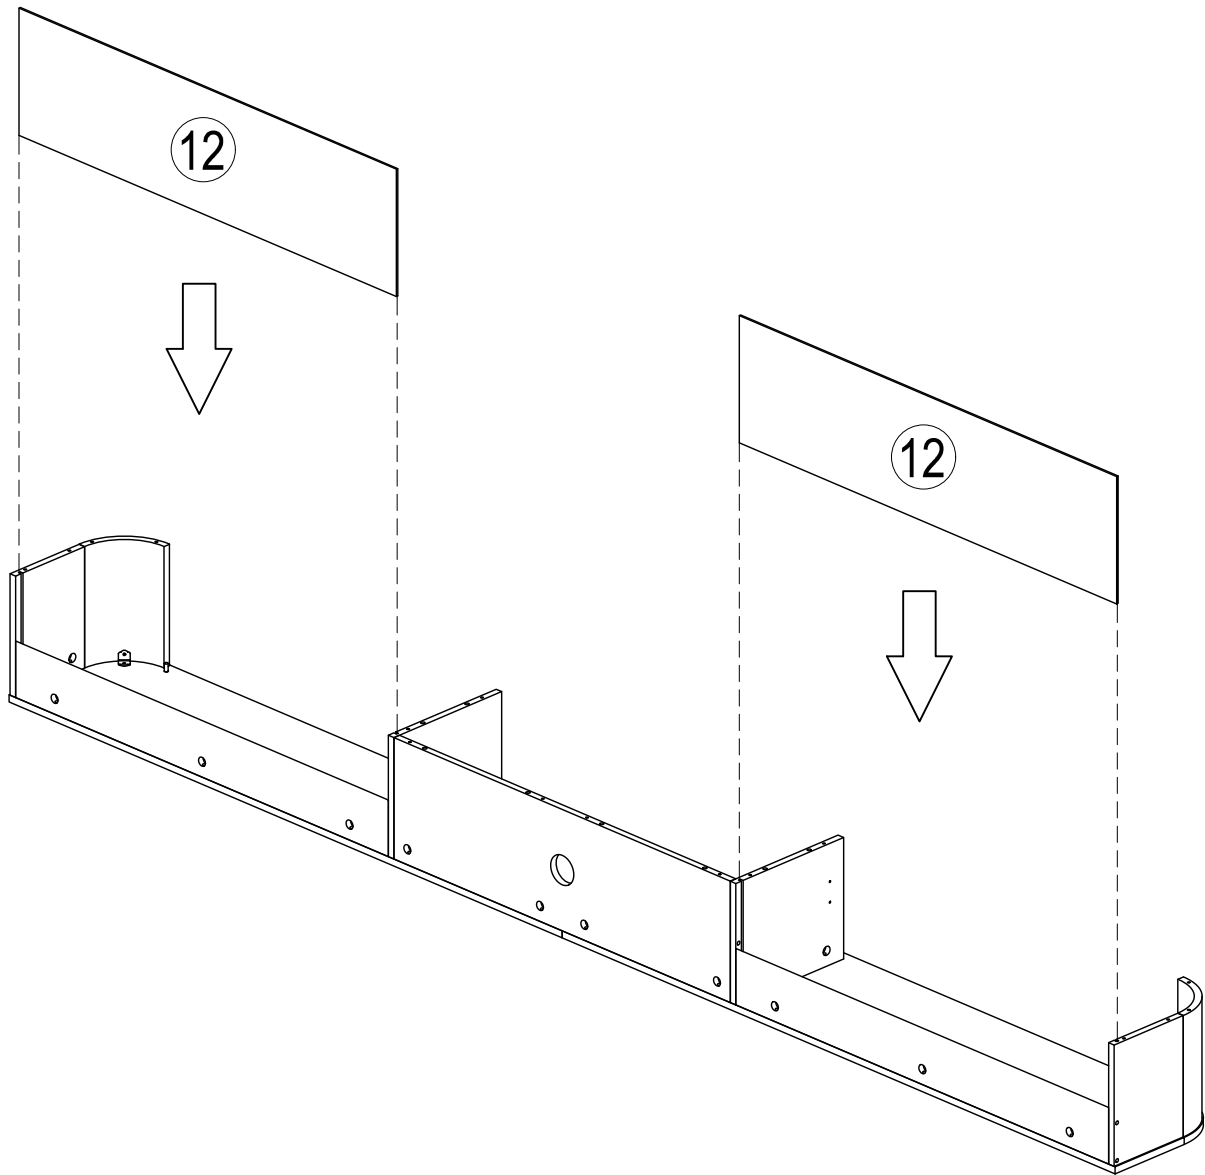


STEP 8

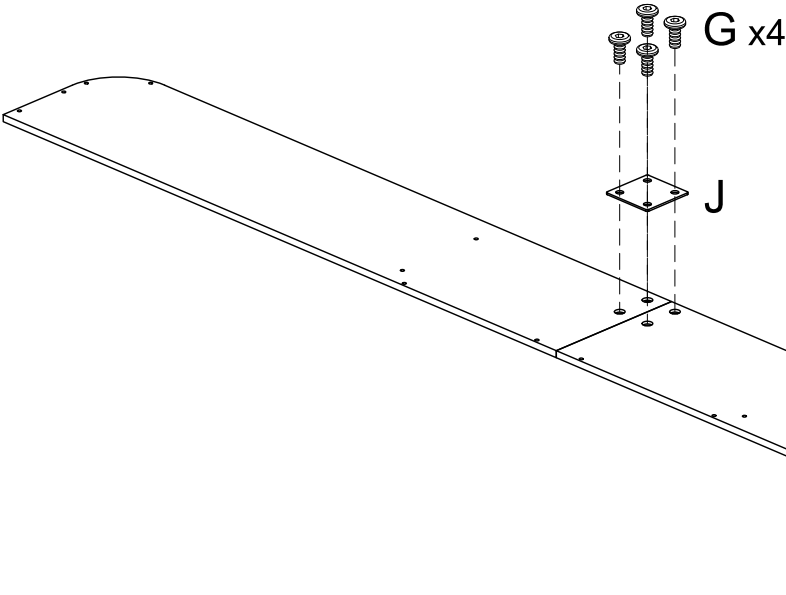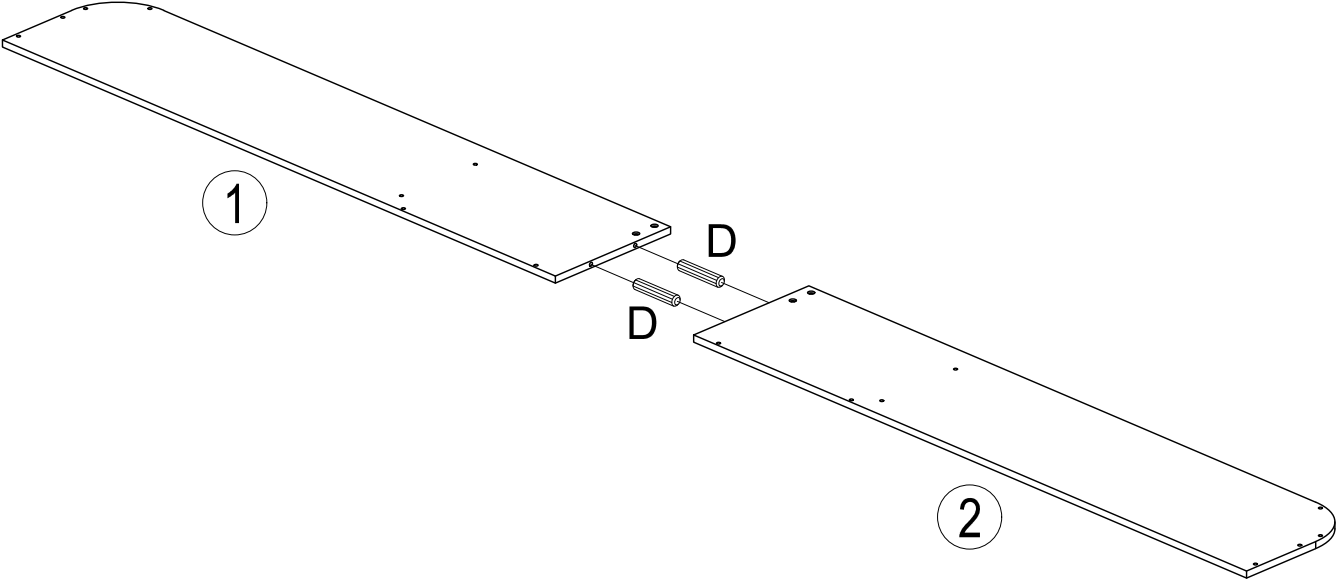

No. D

Quantity: 2 PCS
Dowel
ø6x30mm




No. G

Quantity: 4 PCS
Bolt
M6x10mm




No. J

Quantity: 1 PCS
Iron Plate
60x60mm




STEP 9

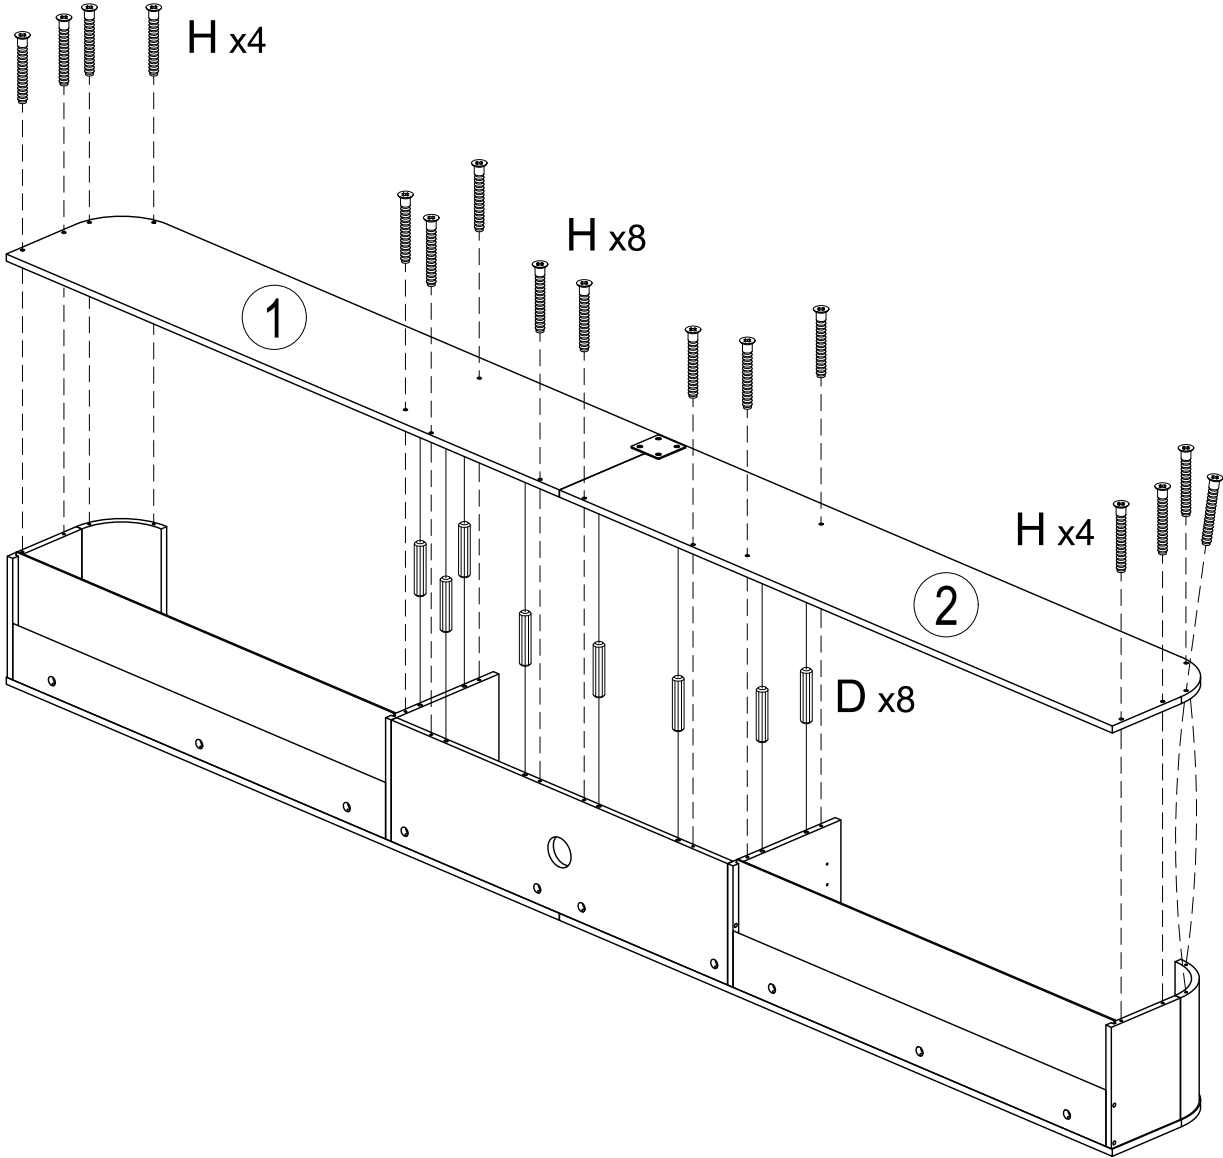


No. D

Quantity: 8 PCS
Dowel
ø6x30mm








No. H

Quantity: 16 PCS
Screw
ø5x38mm





STEP 10

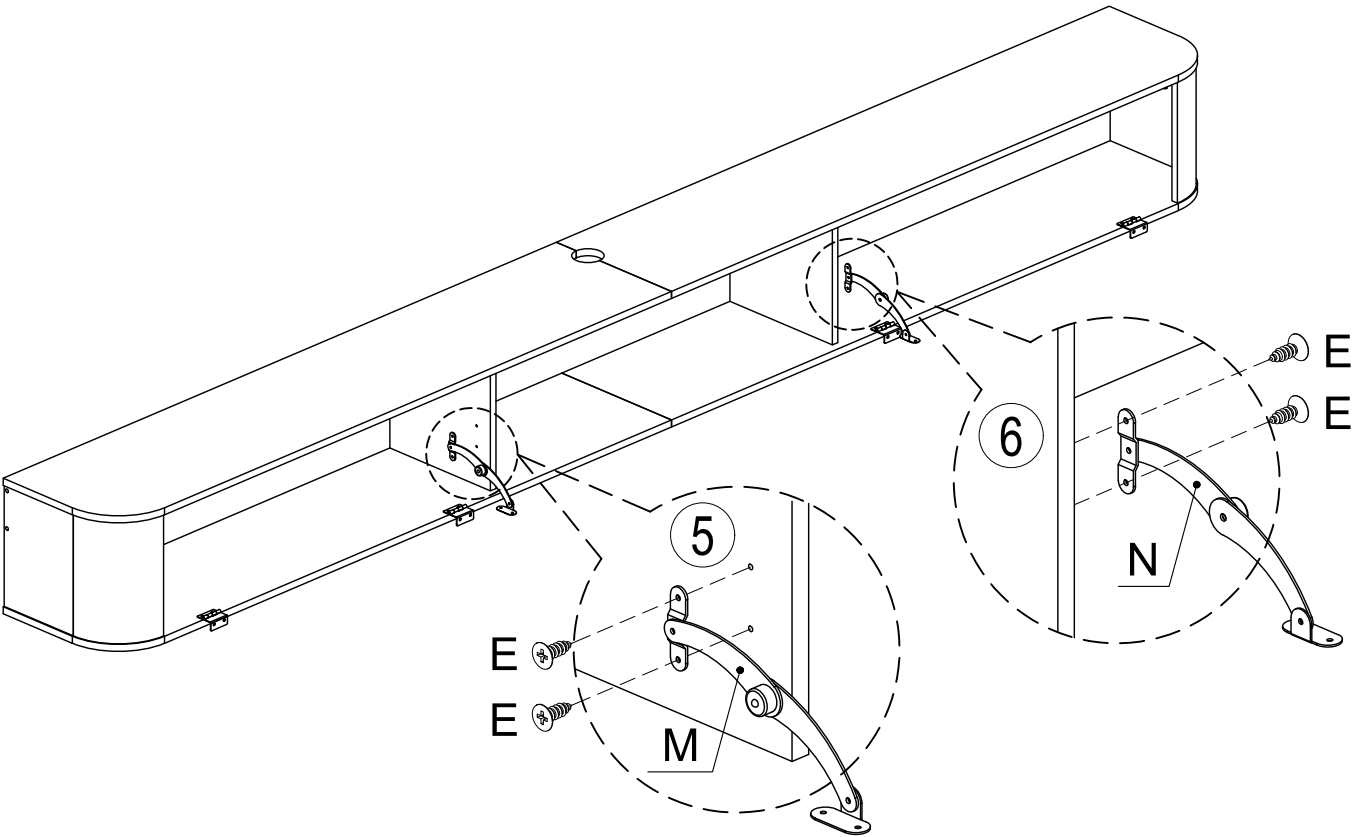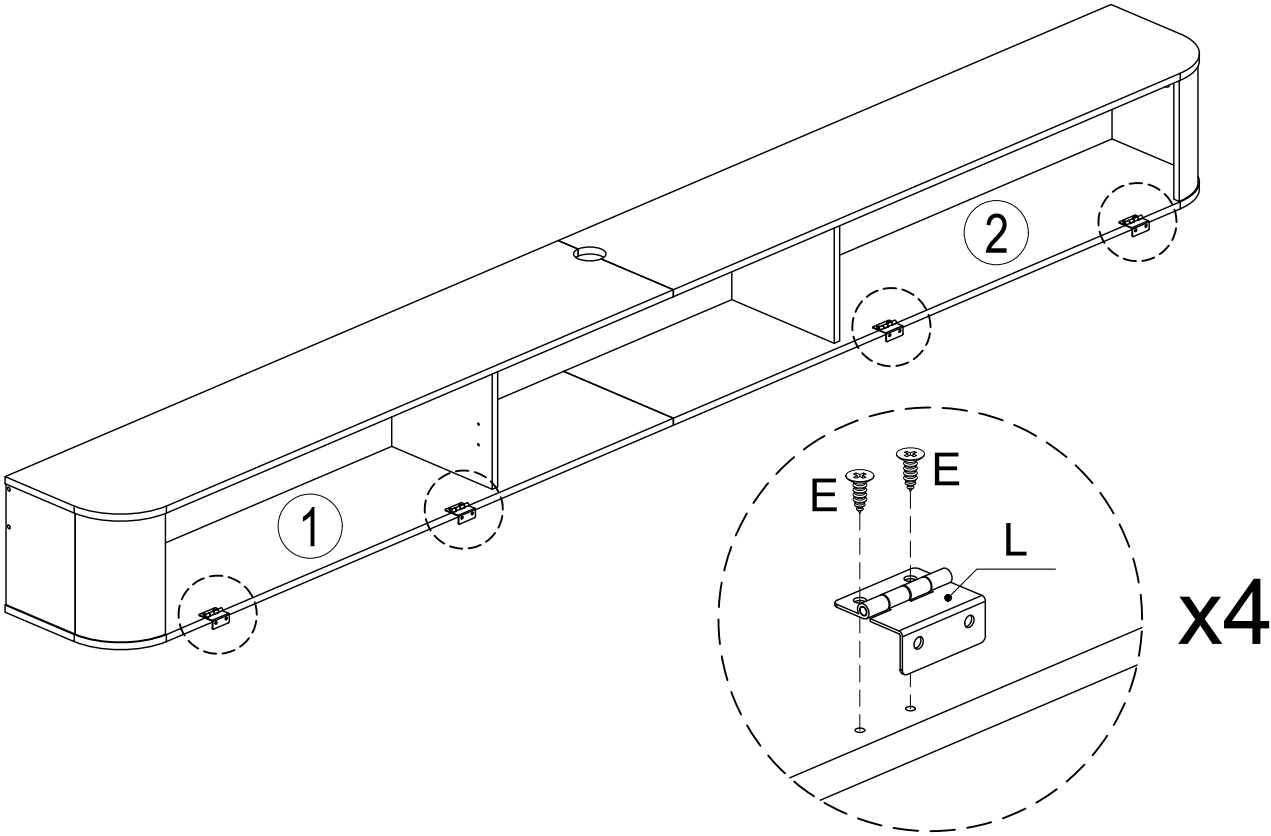

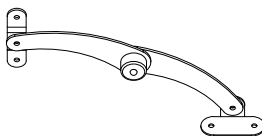No. E Quantity: 12 PCS Screw ø3.5x12mm 	No. L Quantity: 4 PCS Hinge 	No. M Quantity: 1 PCS telescopic device - left 	No. N Quantity: 1 PCS telescopic device - right 	Page 14 of 20
---	--	---	---	----------------------


STEP 11

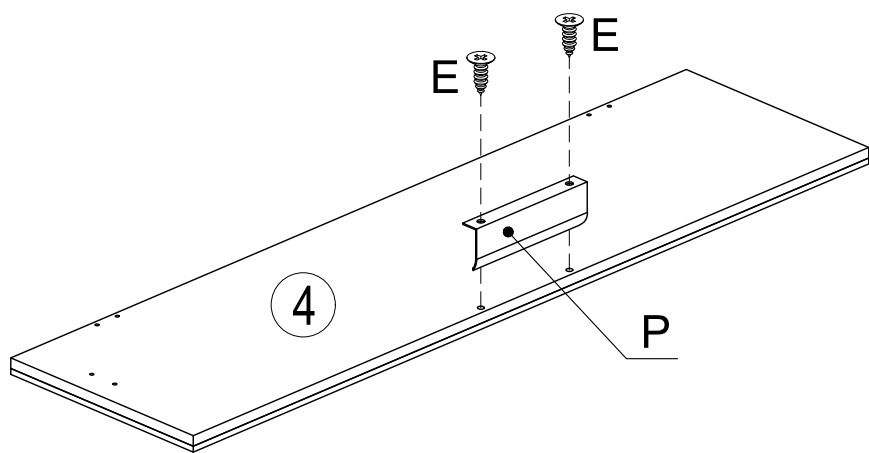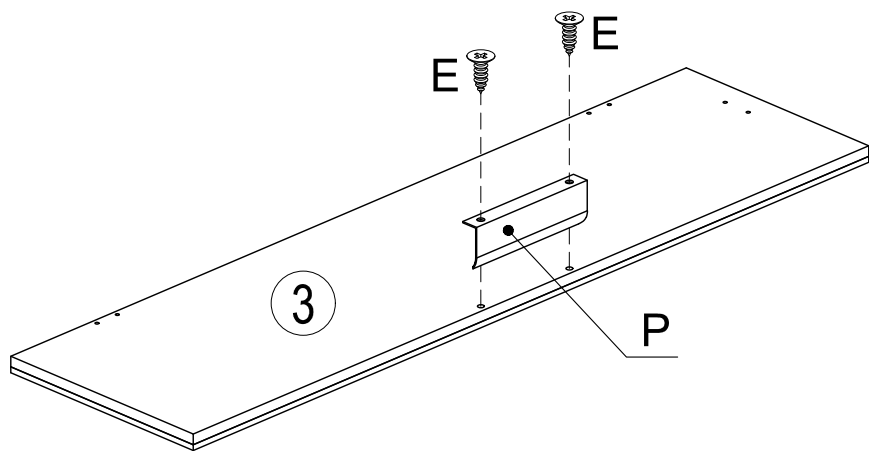


No. E
Quantity: 4 PCS
Screw
ø3.5x12mm



No. P
Quantity: 2 PCS
Handle
38x15*120mm

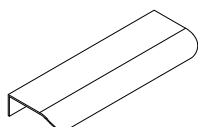


STEP 12

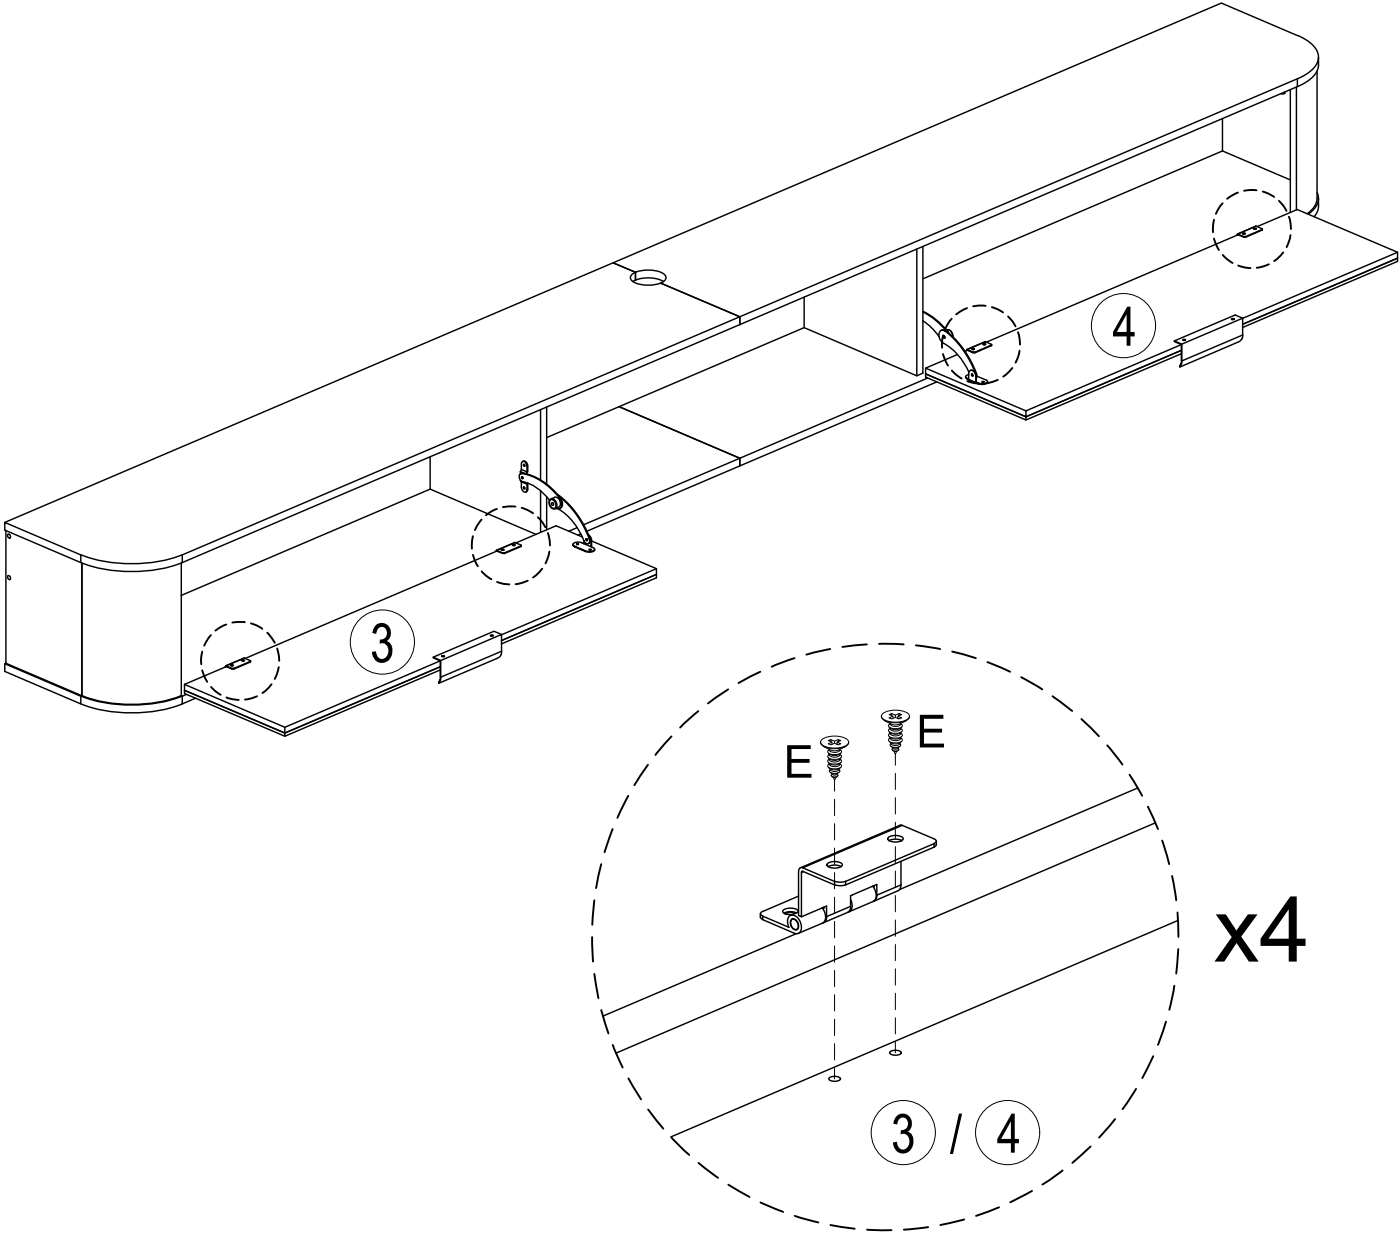

No. E
Quantity: 8 PCS
Screw
ø3.5x12mm






STEP 13

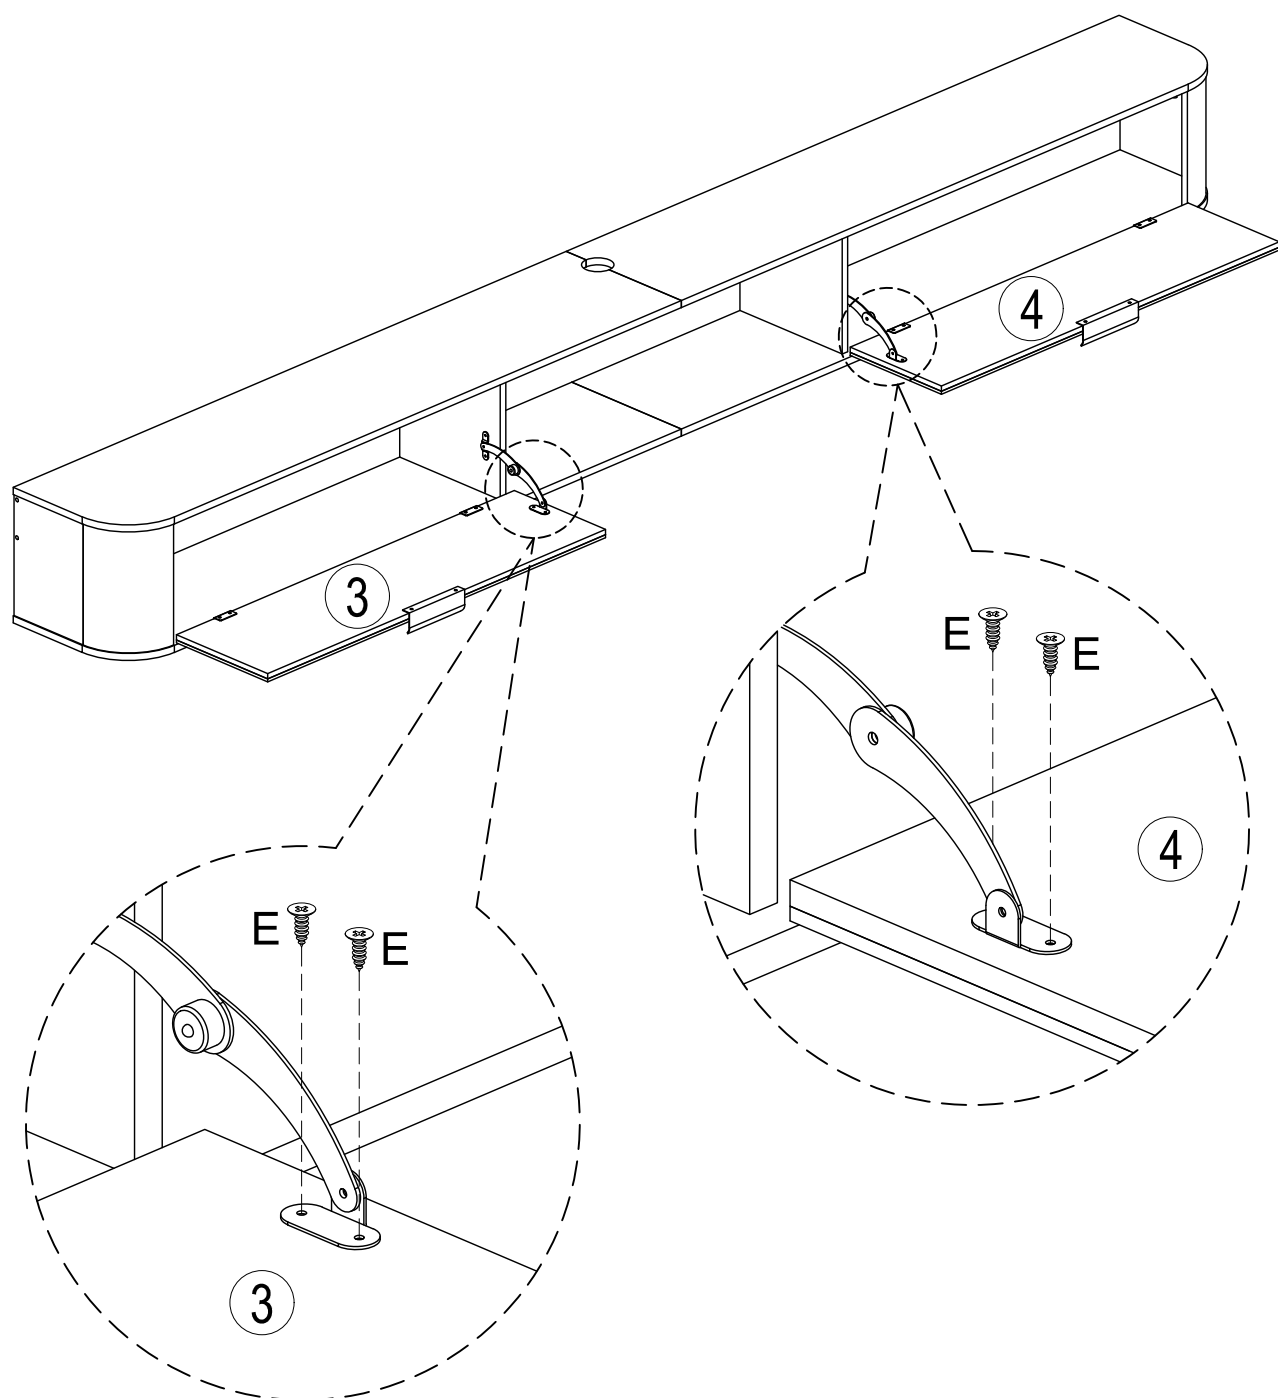

No. E
Quantity: 4 PCS
Screw
ø3.5x12mm




STEP 14

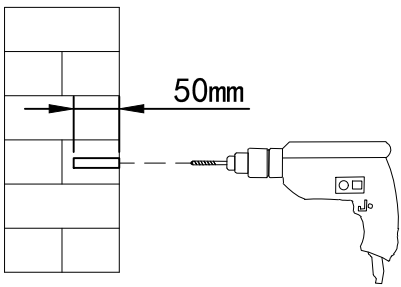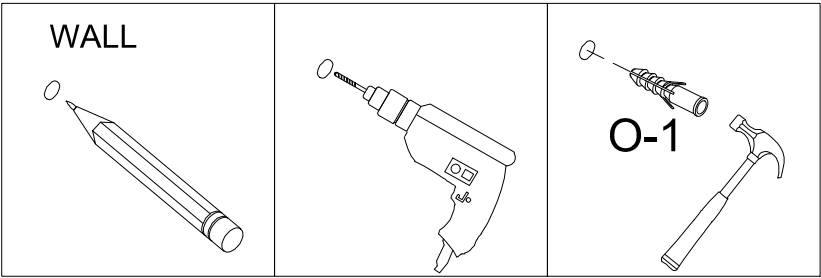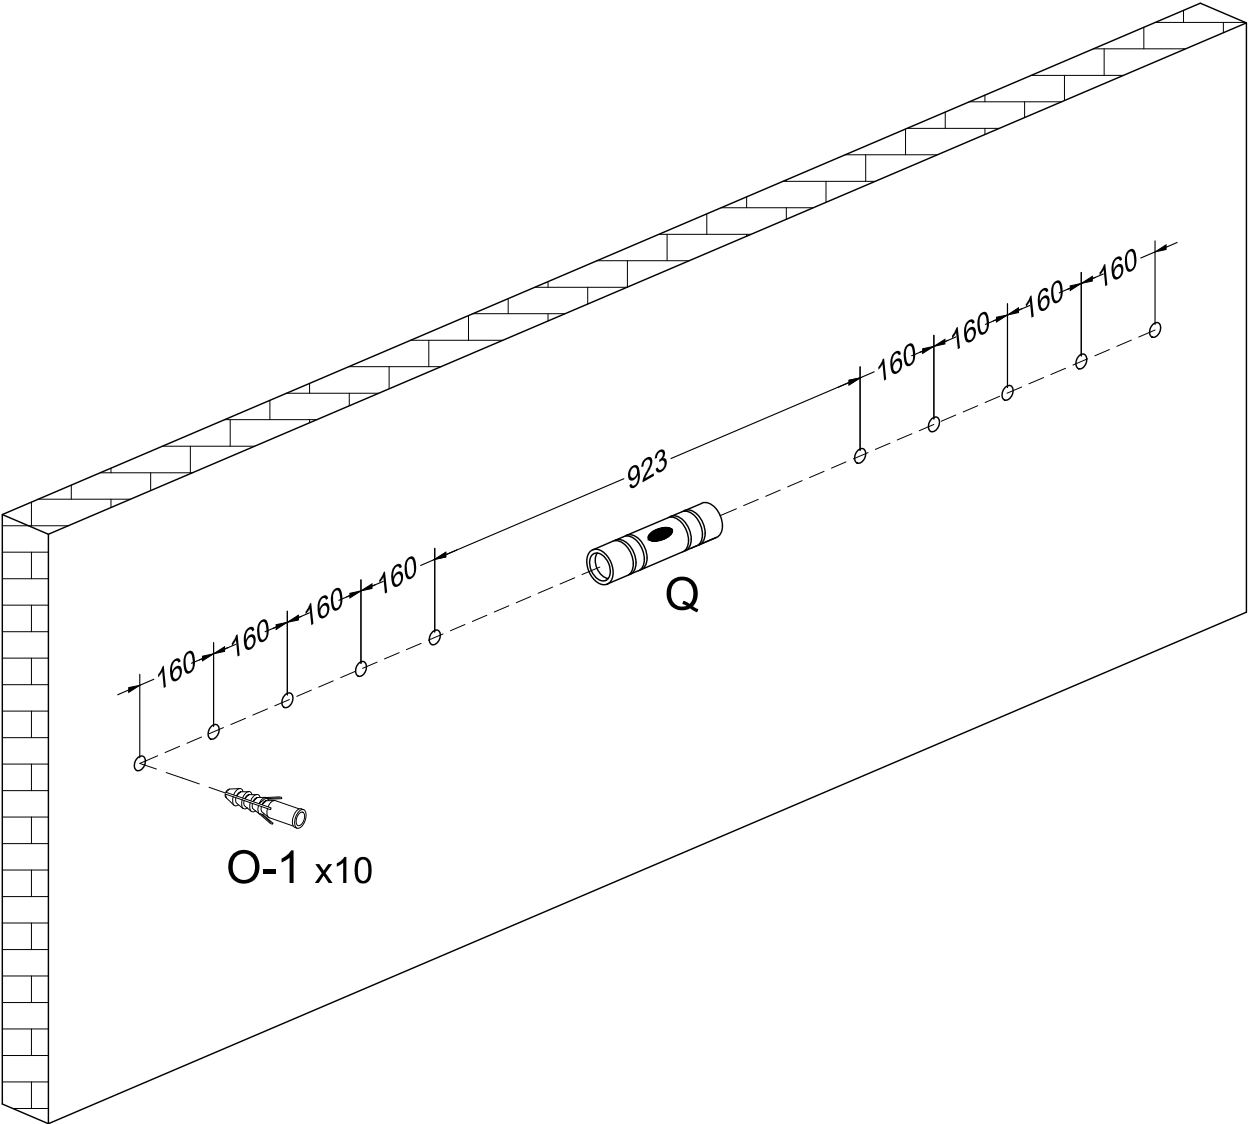


No. O-1 Quantity: 10 PCS plastic plug : Ø8*40	No. Q Quantity: 1 PCS level gauge
--	--

STEP 15

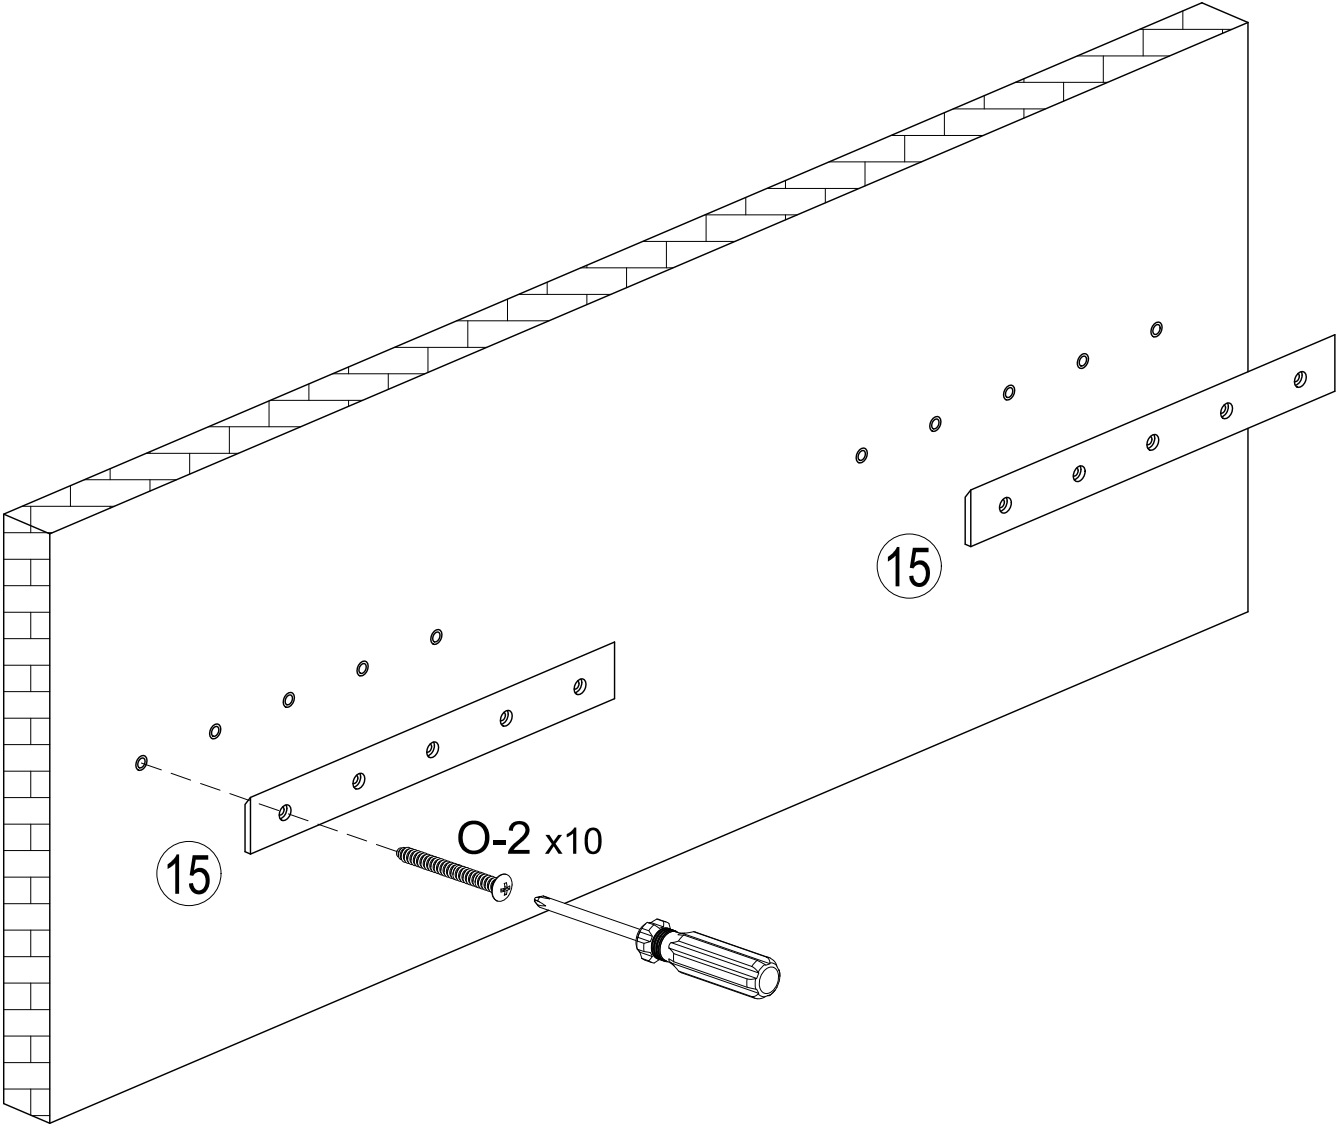

No. O-2
Quantity: 10 PCS
screw : Ø4*55



STEP 16

