



N704P277398D
N704P277399D

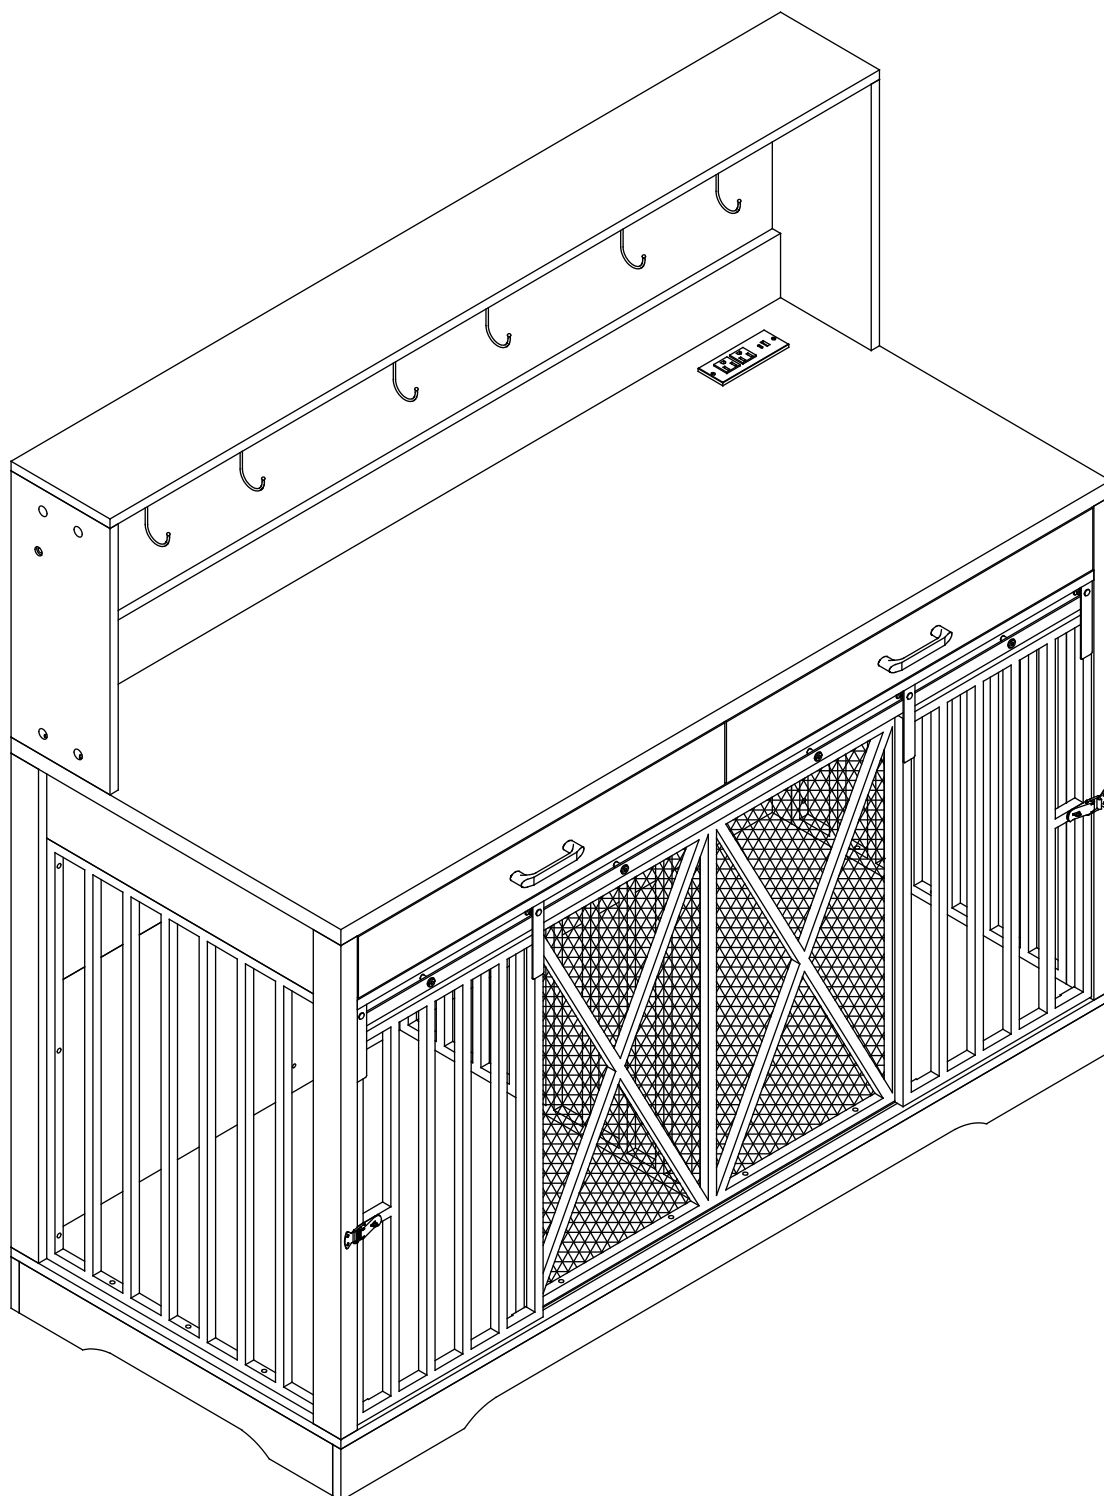


2PERS

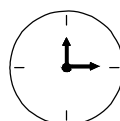

45 MIN

Tool Required Not Provided

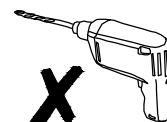



[EN]

Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.

Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.


Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.

Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.





















Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.


Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

Warning: This product is equipped with an anti-tilt device. Please be sure to install this device to prevent unnecessary injuries caused by tipping.

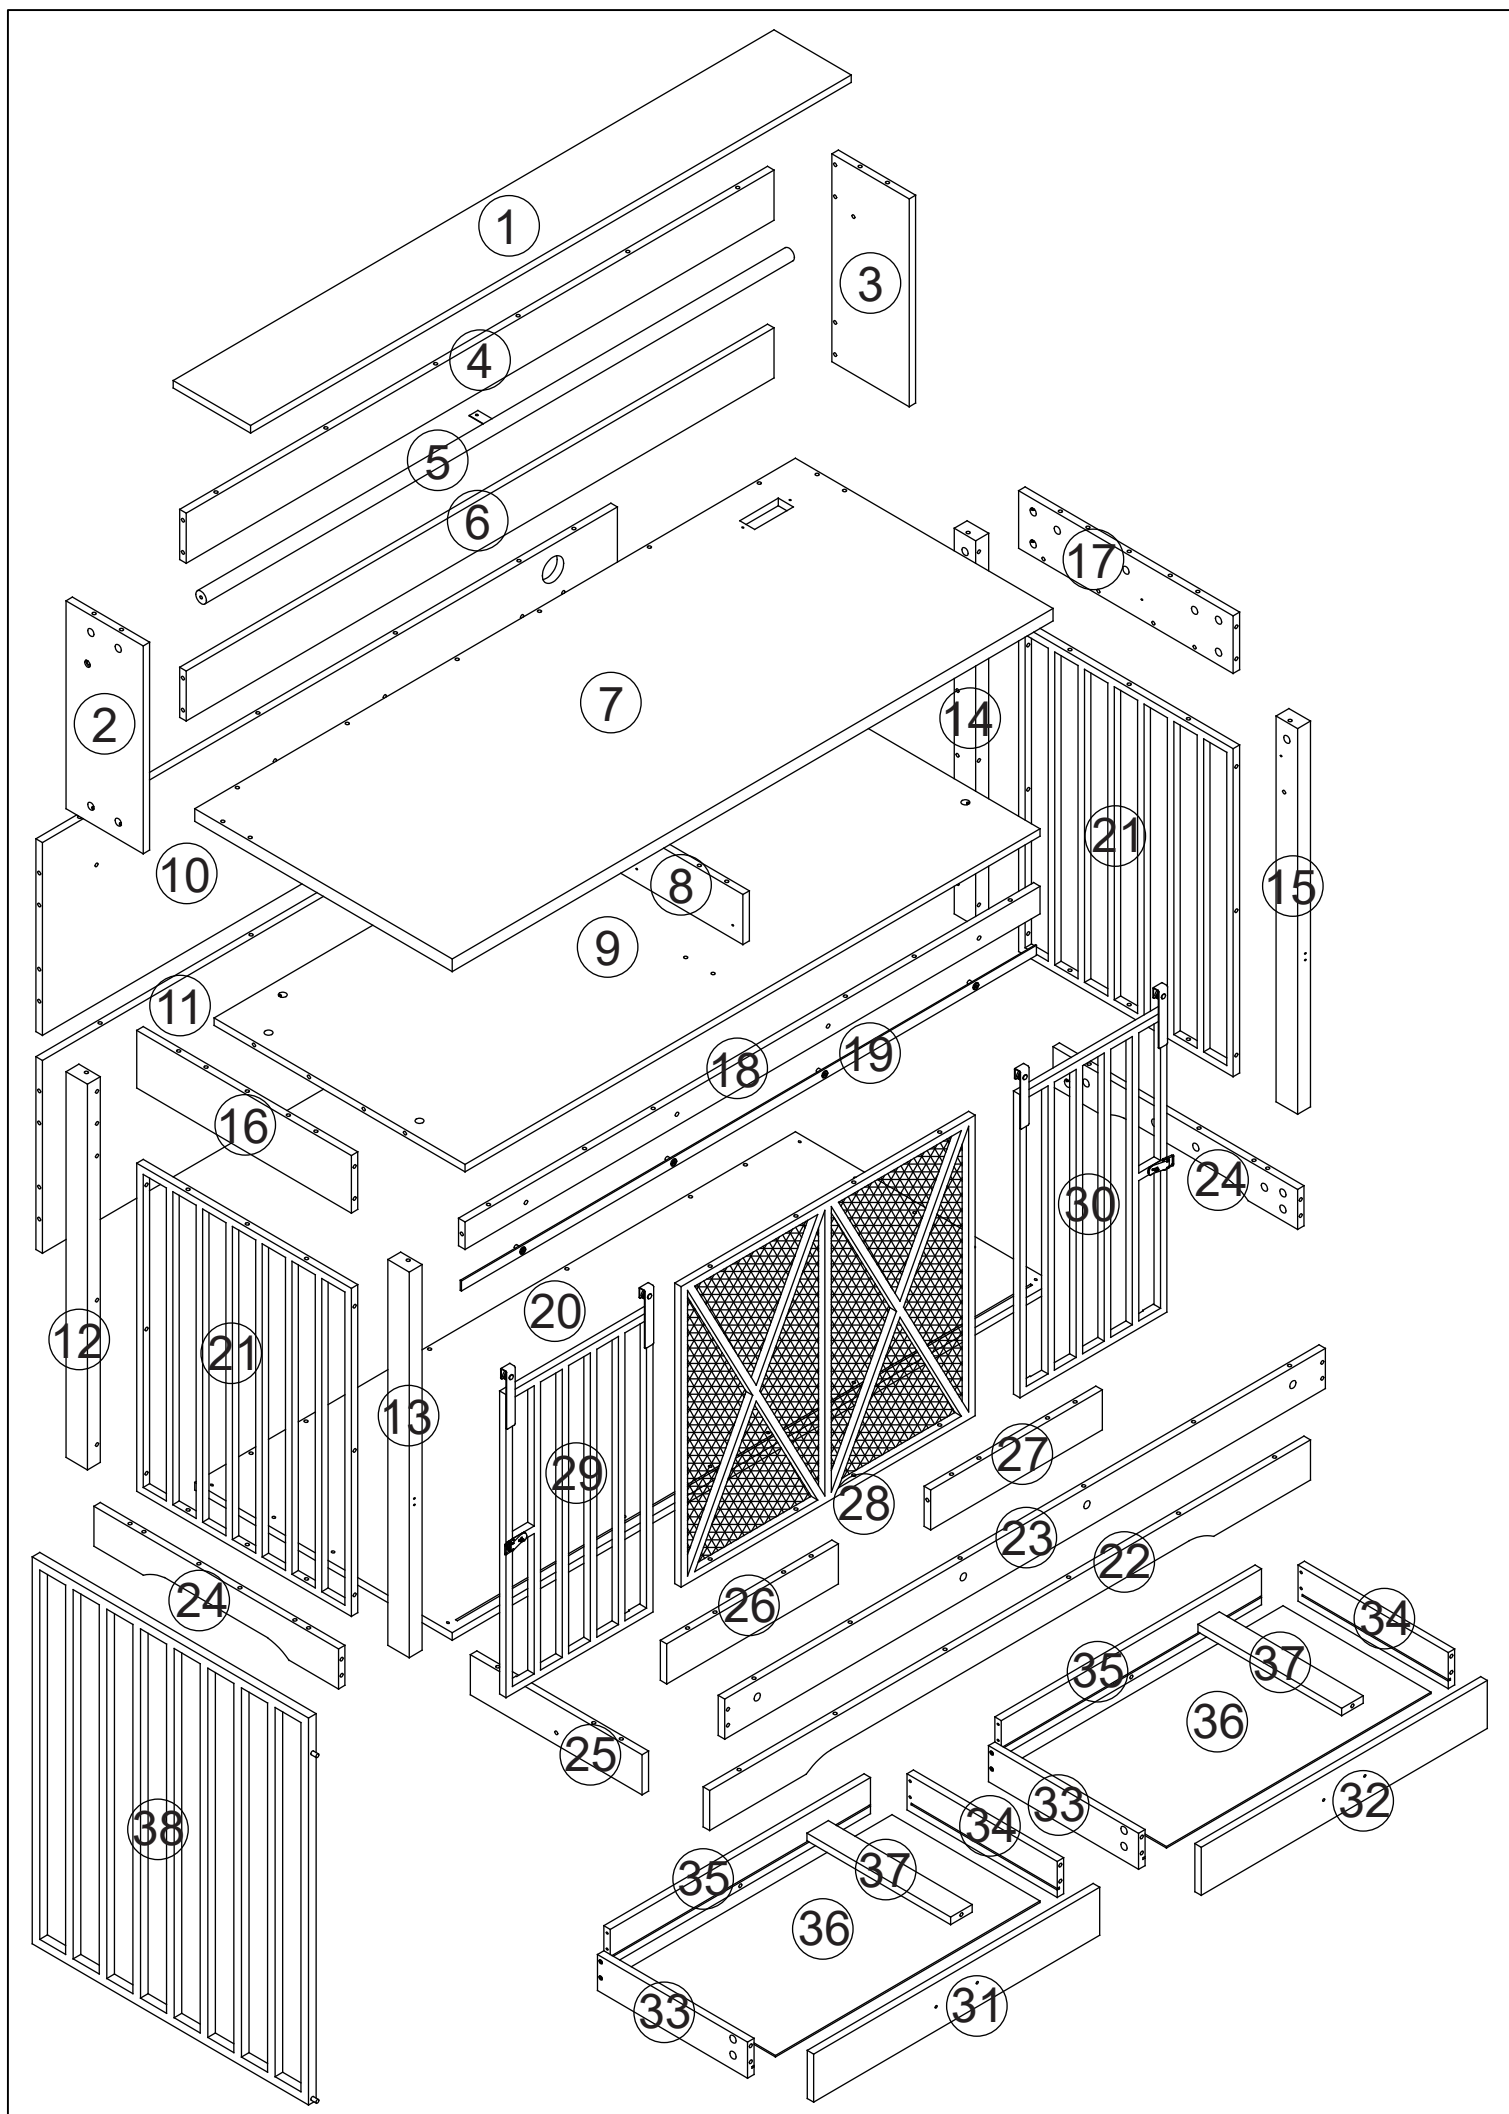


Hardwareliste

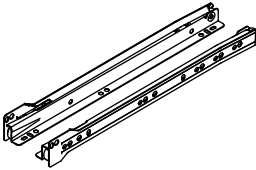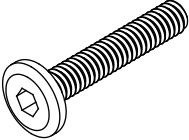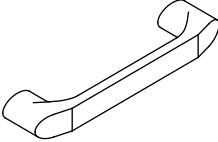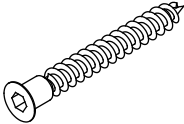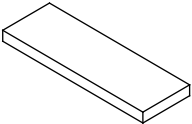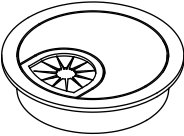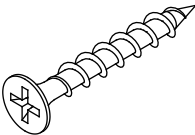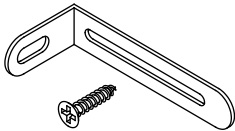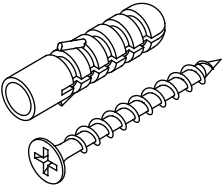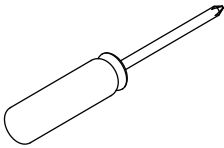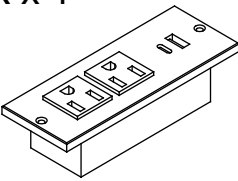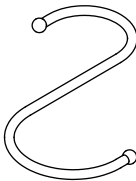
A x 120+2  7x40mm	B x 120+2  15x10mm	C x 50+2 	D x 23+2 	E x 2 
F x 24+1 	G x 6 	H x 4 	I x 2 	J x 14+1 
K x 4 	L x 1 	M x 8+1 	N x 120+2 	O x 2 
P x 2 	Q x 1 	R x 1 	S x 2 	T x 6 
U x 1 				

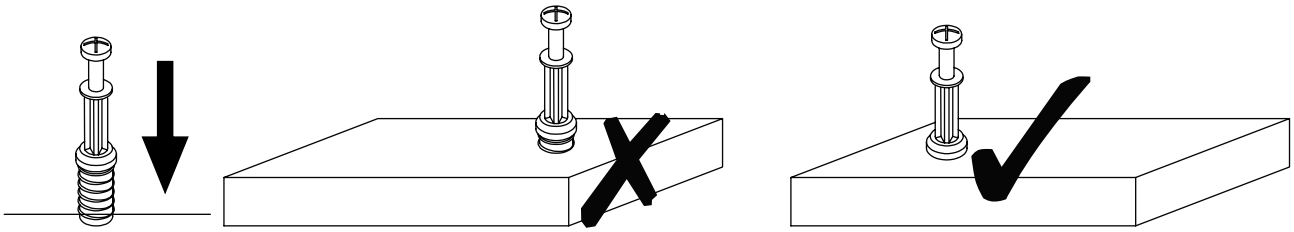


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

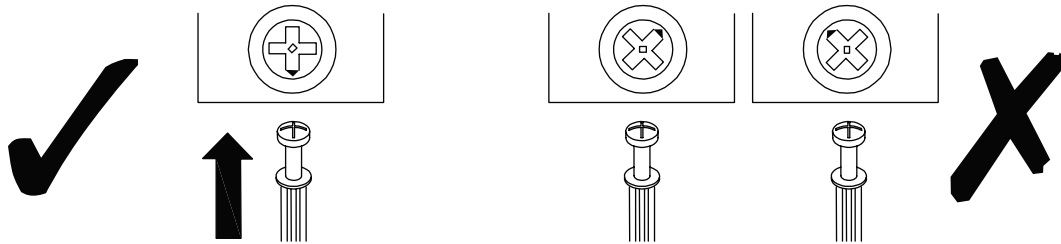

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

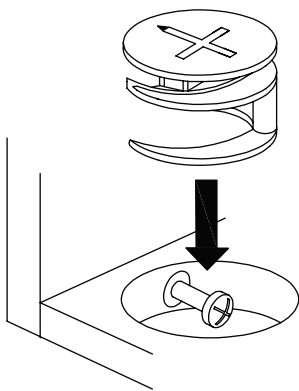























EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

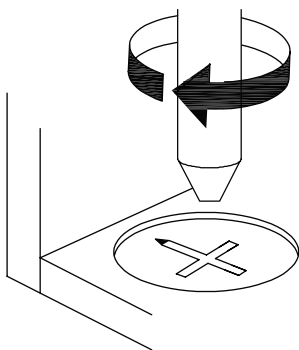

















EN_Turn cam lock clockwise to tighten.

Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%.


N704P277398D

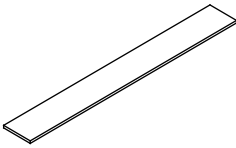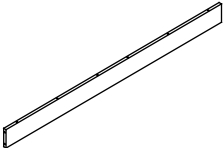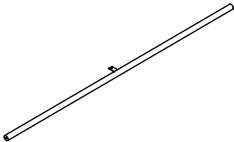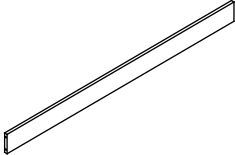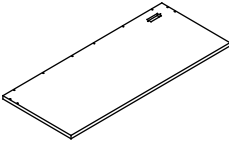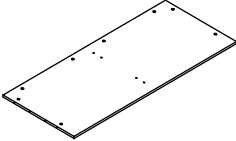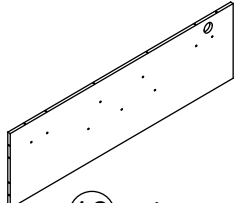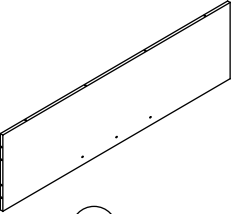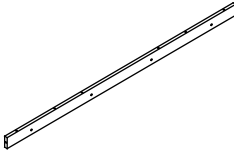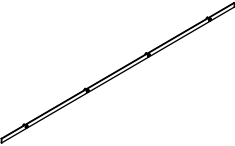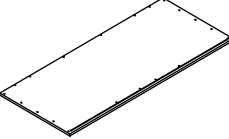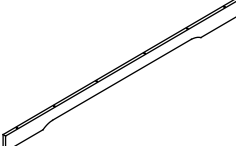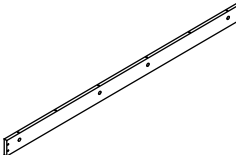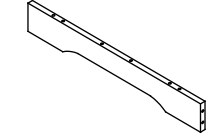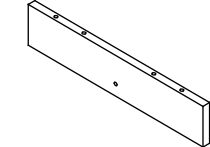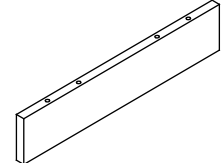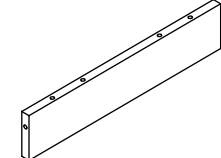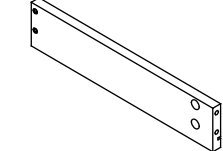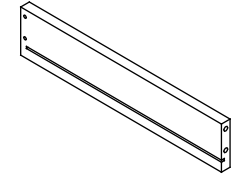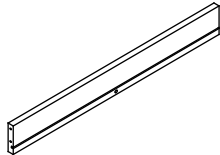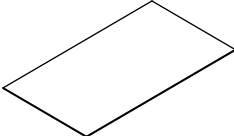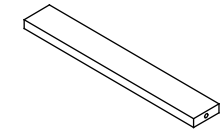 ① x1	 ④ x1	 ⑤ x1	 ⑥ x1	 ⑦ x1	 ⑨ x1
 ⑩ x1	 ⑪ x1	 ⑱ x1	 ⑲ x1	 ⑳ x1	 ㉒ x1
 ㉓ x1	 ㉔ x2	 ㉕ x1	 ㉖ x1	 ㉗ x1	 ㉓ x2
 ㉔ x2	 ㉕ x2	 ㉖ x2	 ㉗ x2		


N704P277399D

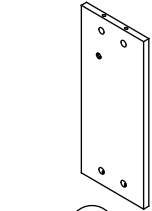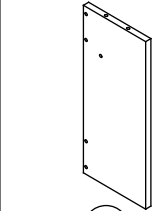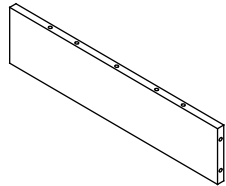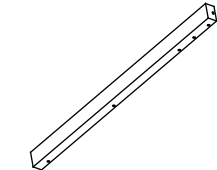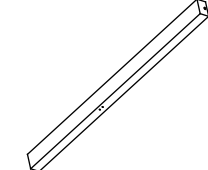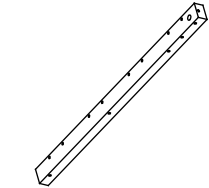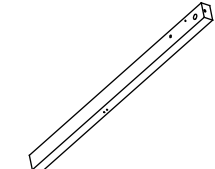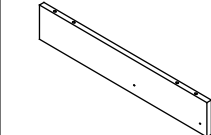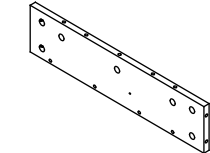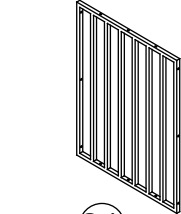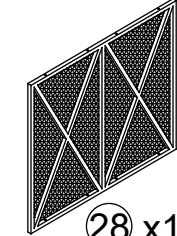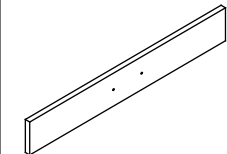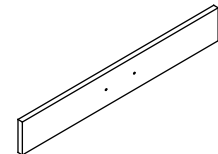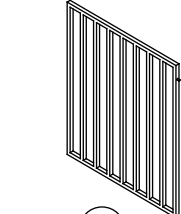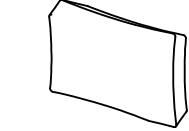 ② x1	 ③ x1	 ⑧ x1	 ⑫ x1	 ⑬ x1	 ⑭ x1
 ⑮ x1	 ⑯ x1	 ⑰ x1	 ㉑ x2	 ㉘ x1	 ㉙ x1
 ⑳ x1	 ㉑ x1	 ㉒ x1	 ㉘ x1	 Hardware	


1

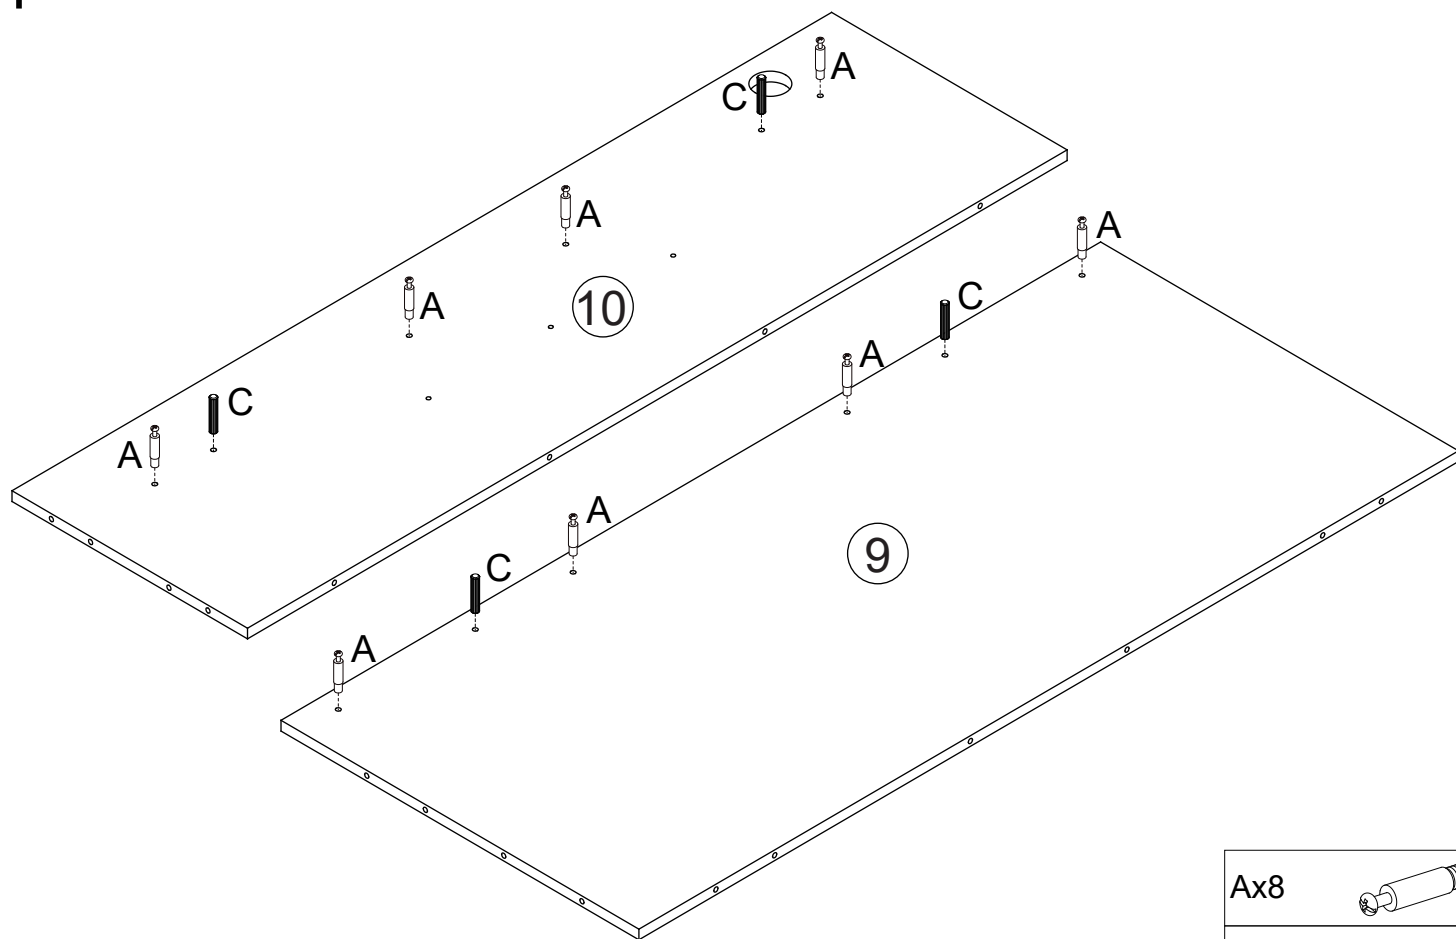

2

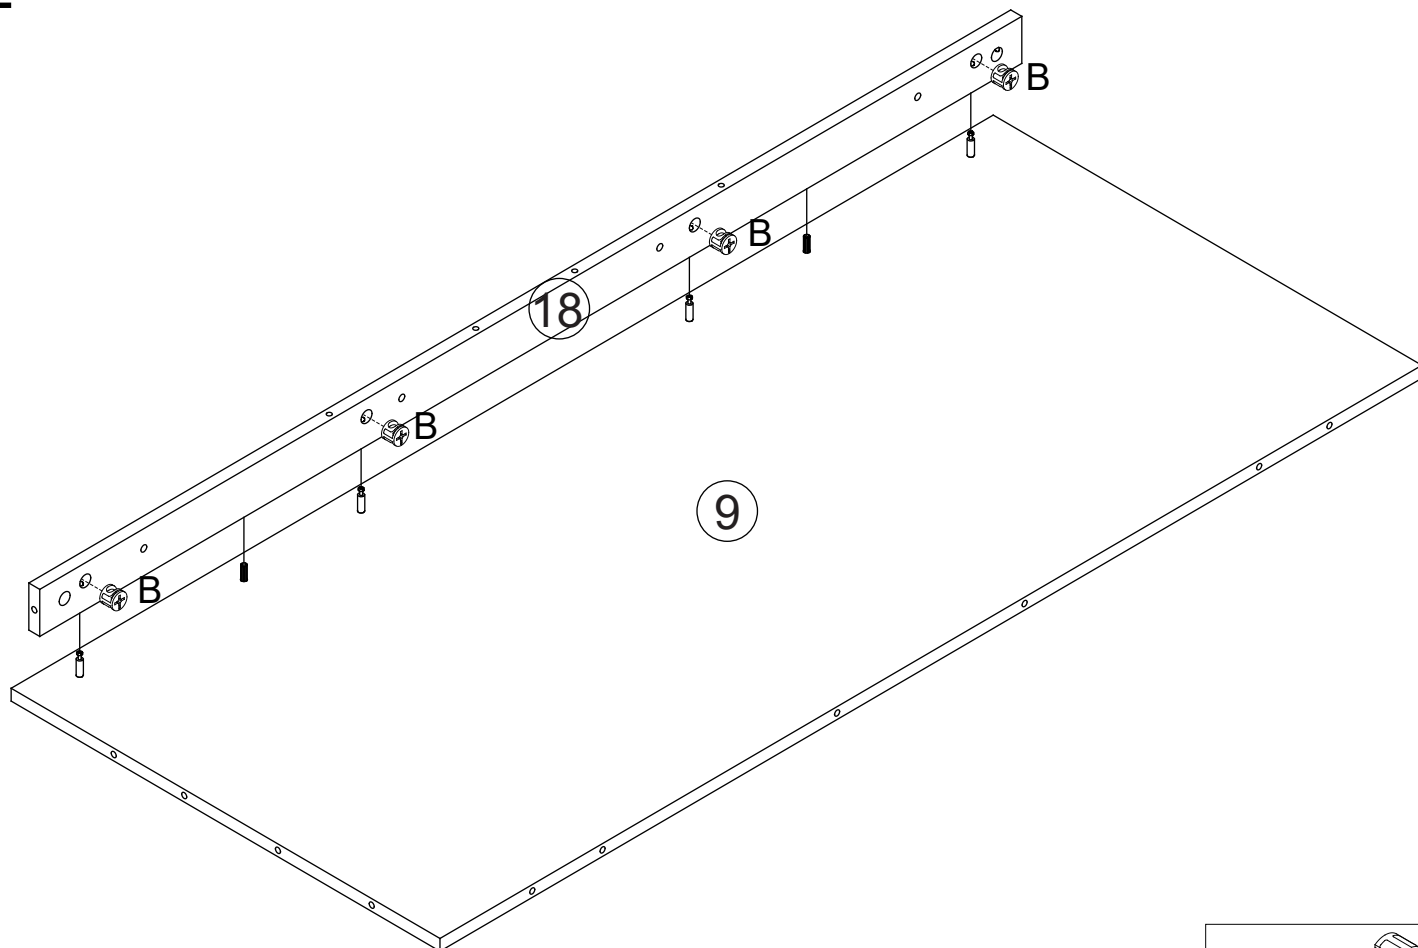


3

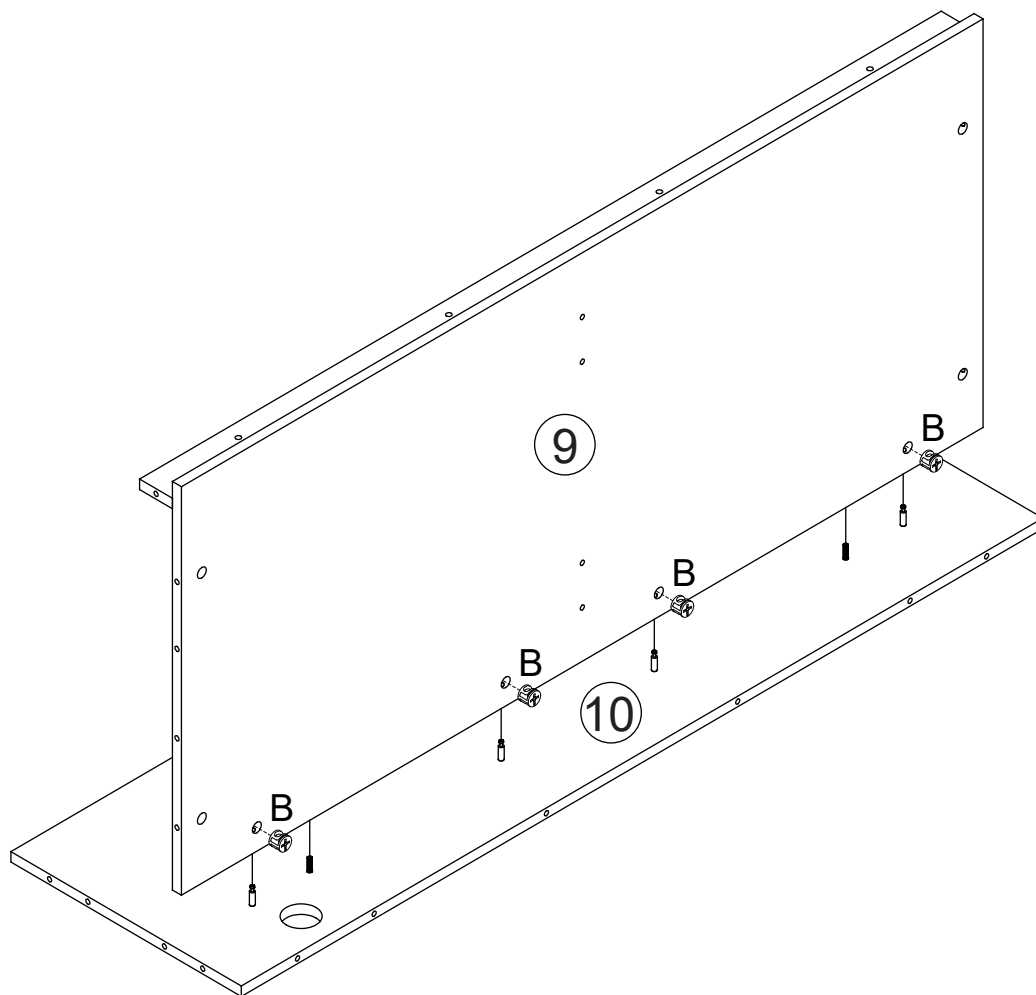


Bx4




4

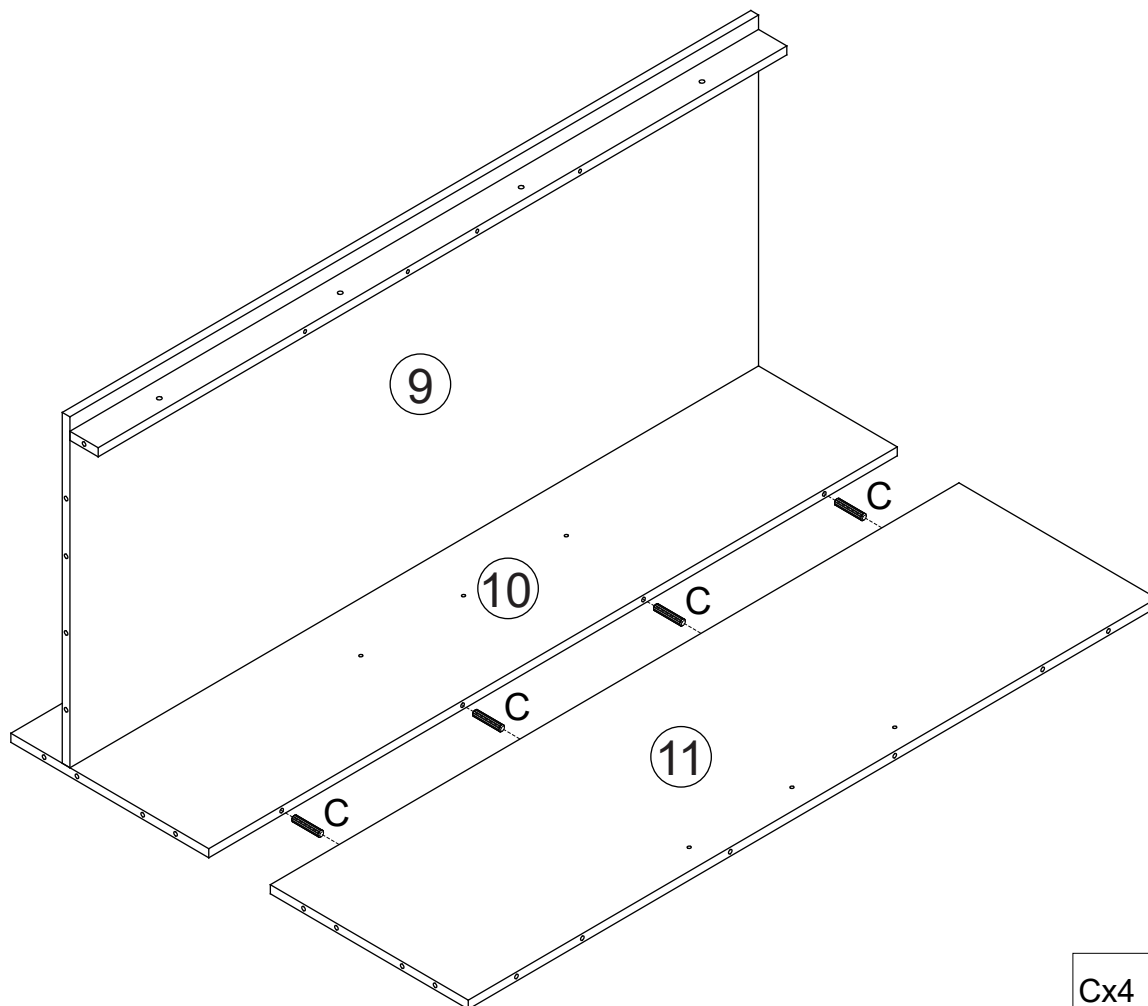


Cx4



5

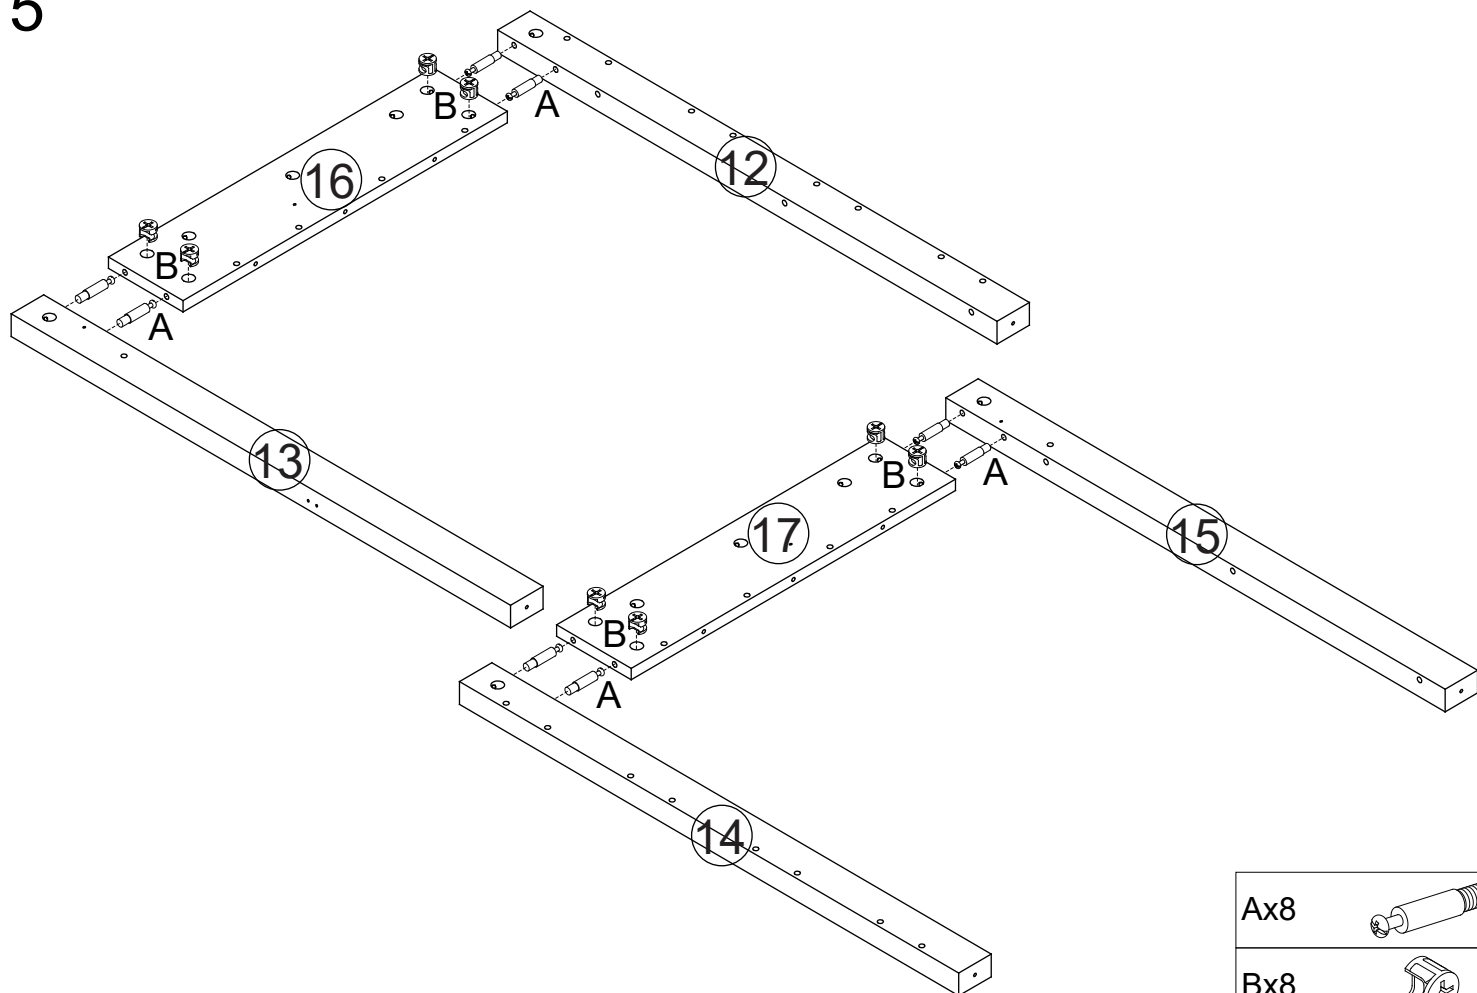

6

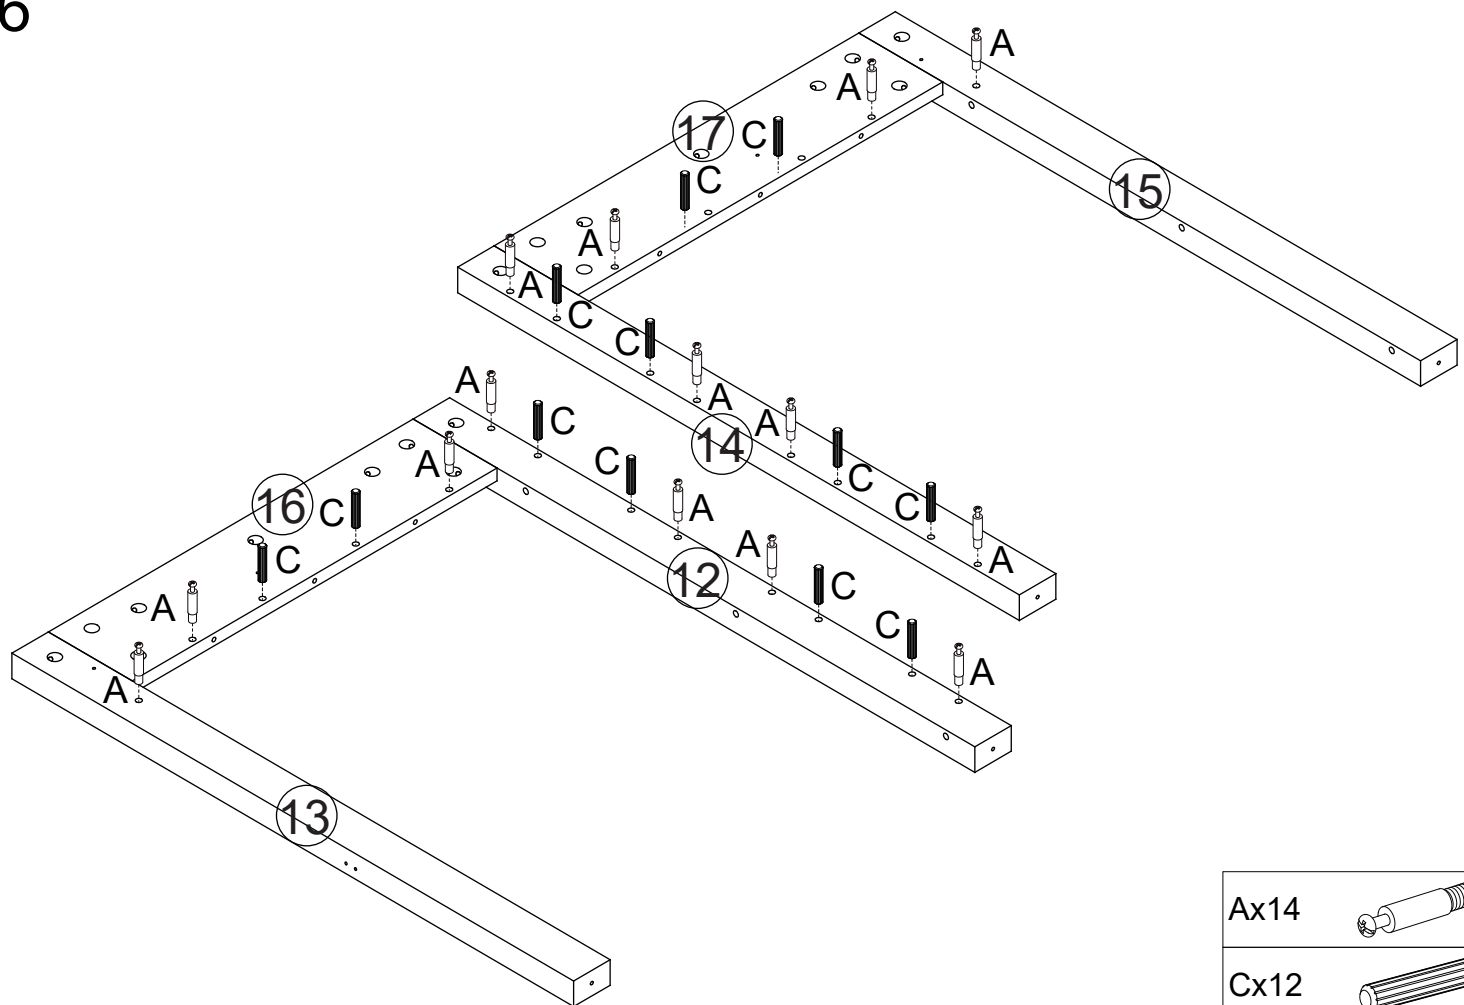

7


Diagram illustrating the assembly of the top rail (15) and side rails (12, 13, 14) using screws (D) and clips (CR, CL). The diagram shows the top rail (15) being attached to the side rails (12, 13, 14) using screws (D). The side rails (12, 13, 14) are also attached to the frame using screws (D). The diagram includes a detail view of the top rail (15) showing the internal components and the location of the screws (D) and clips (CR, CL).

Dx4	
Ex1	

8

Diagram 8 illustrates the assembly of the top frame. The top rail (13) is shown being attached to the side rails (12 and 16) using screws (B). The side rails are already attached to the vertical panels (9, 10, 11).


9

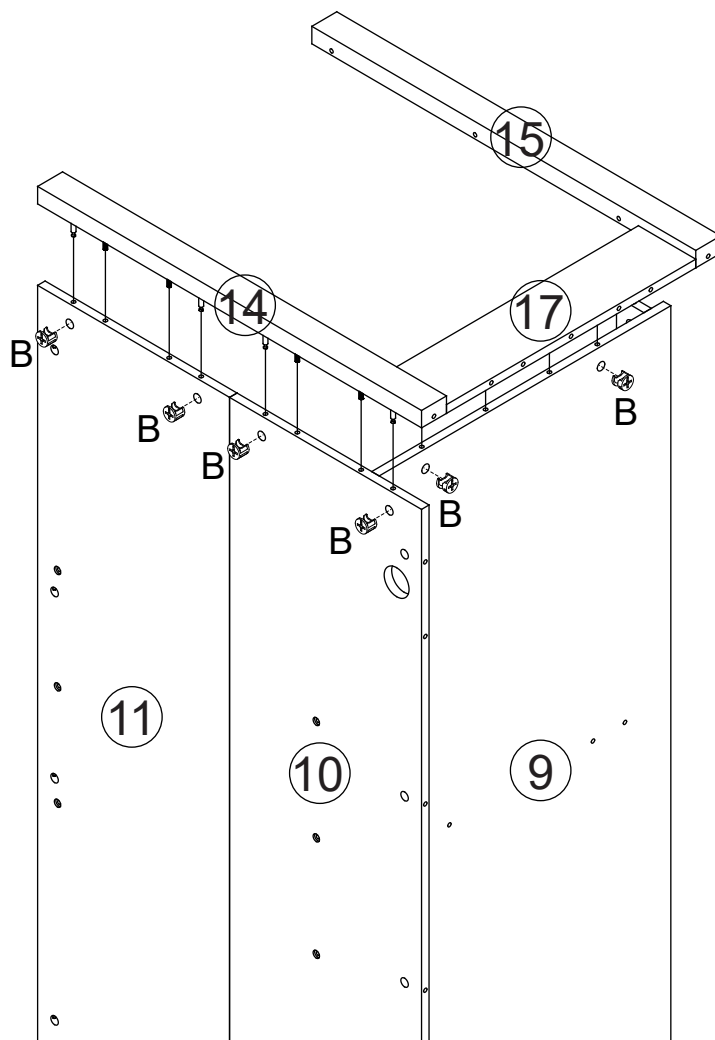

Bx7



10

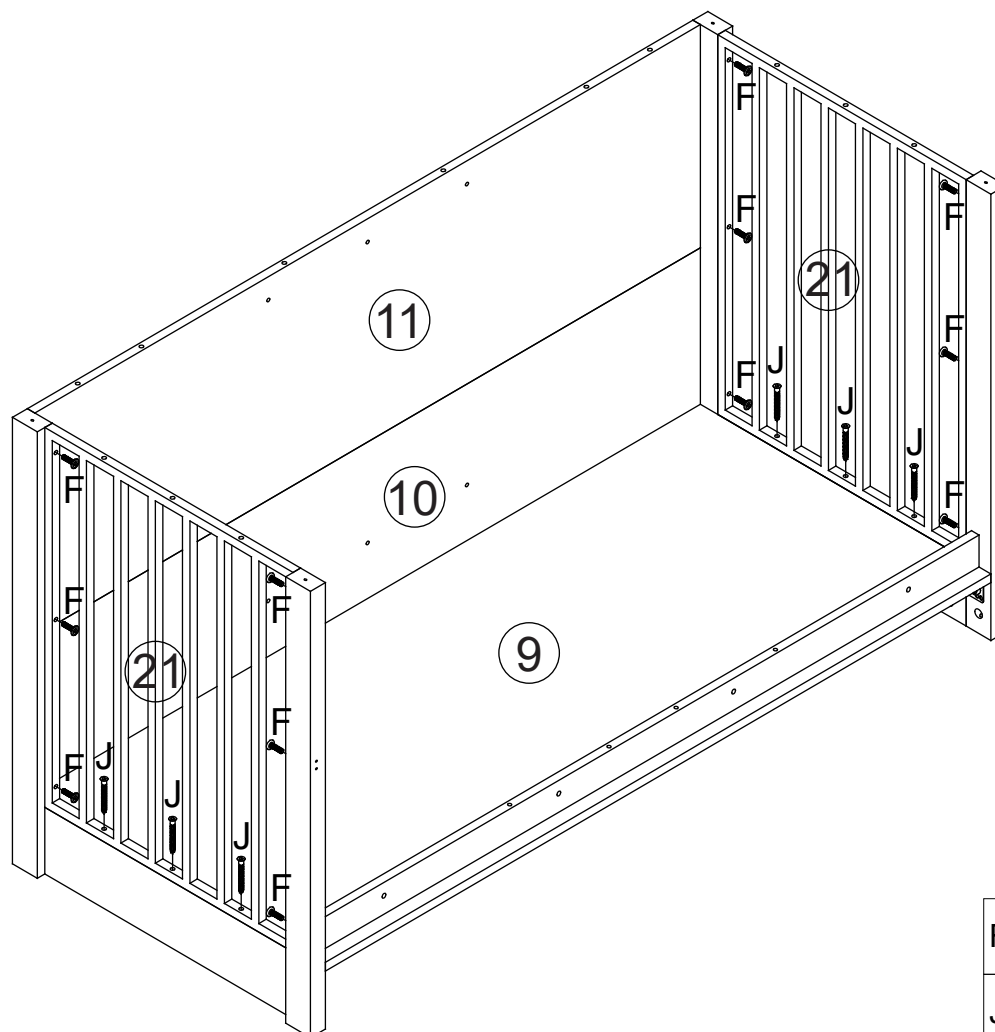


Fx12




Jx6




11

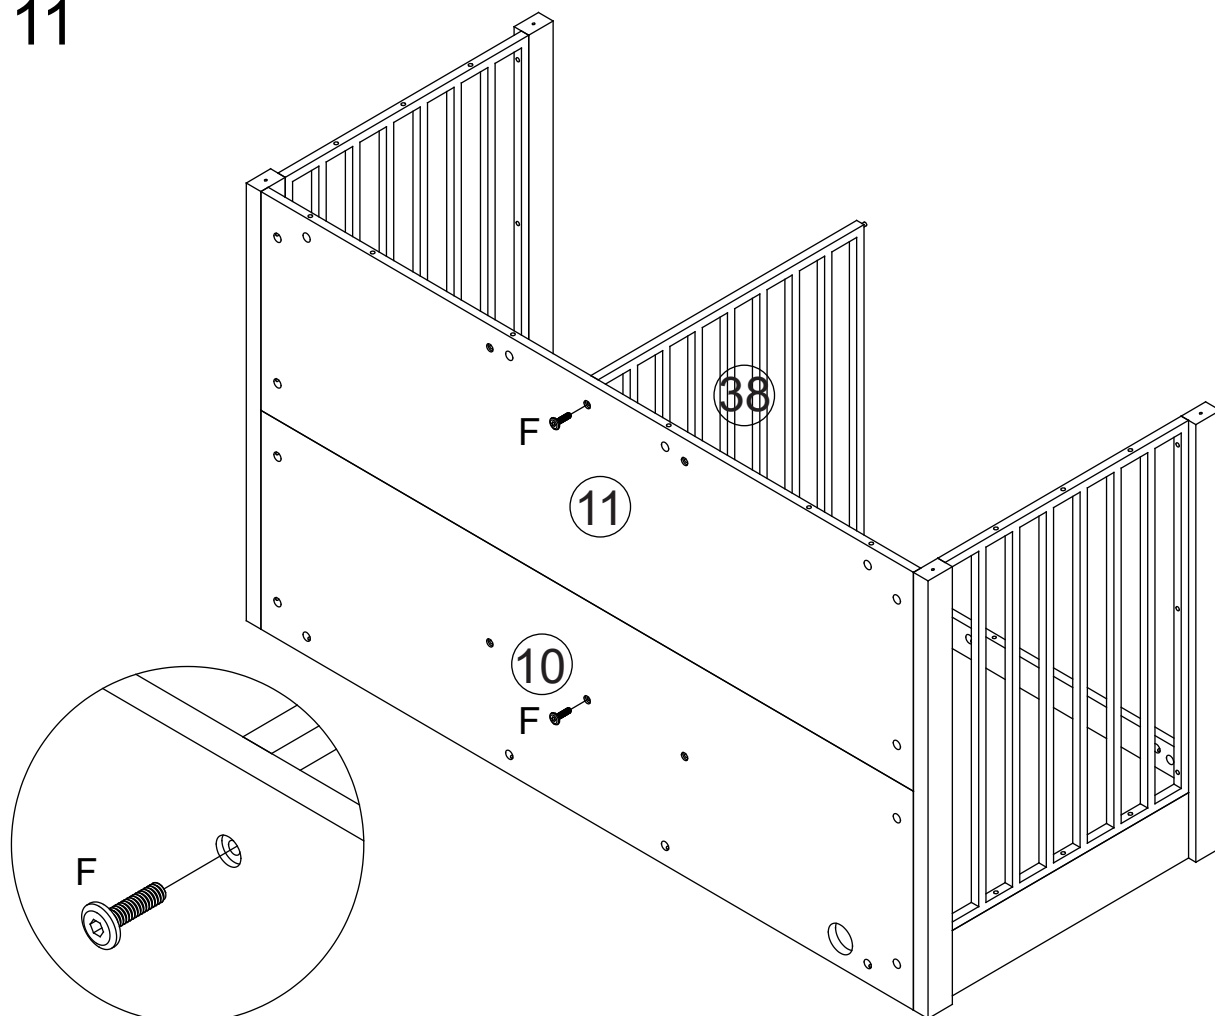

Fx2




12

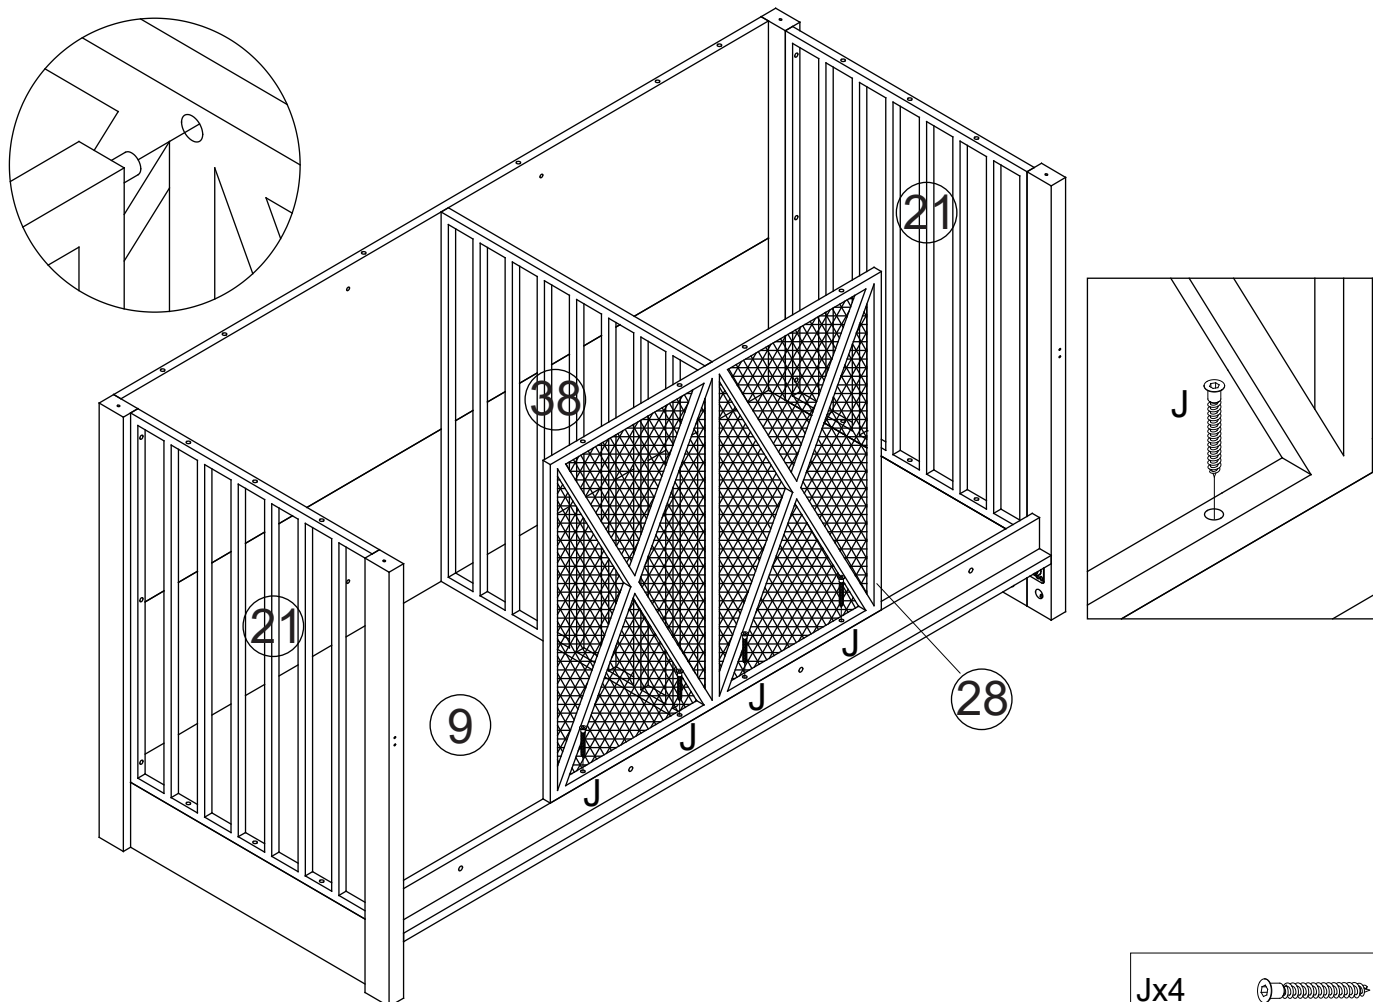


Jx4




13

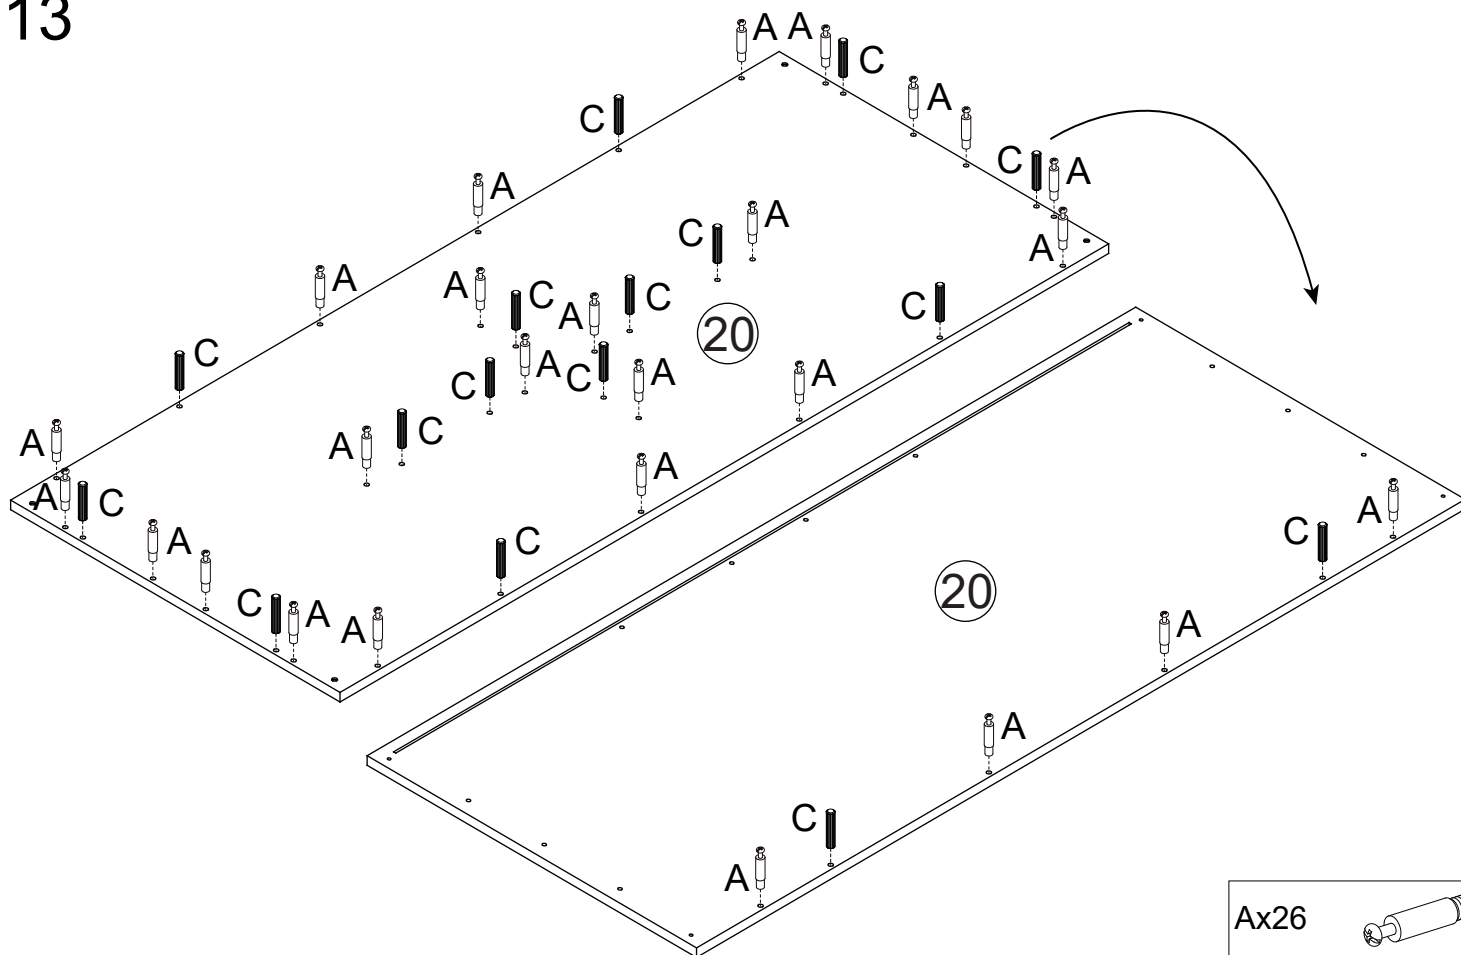


Ax26



Cx16



14

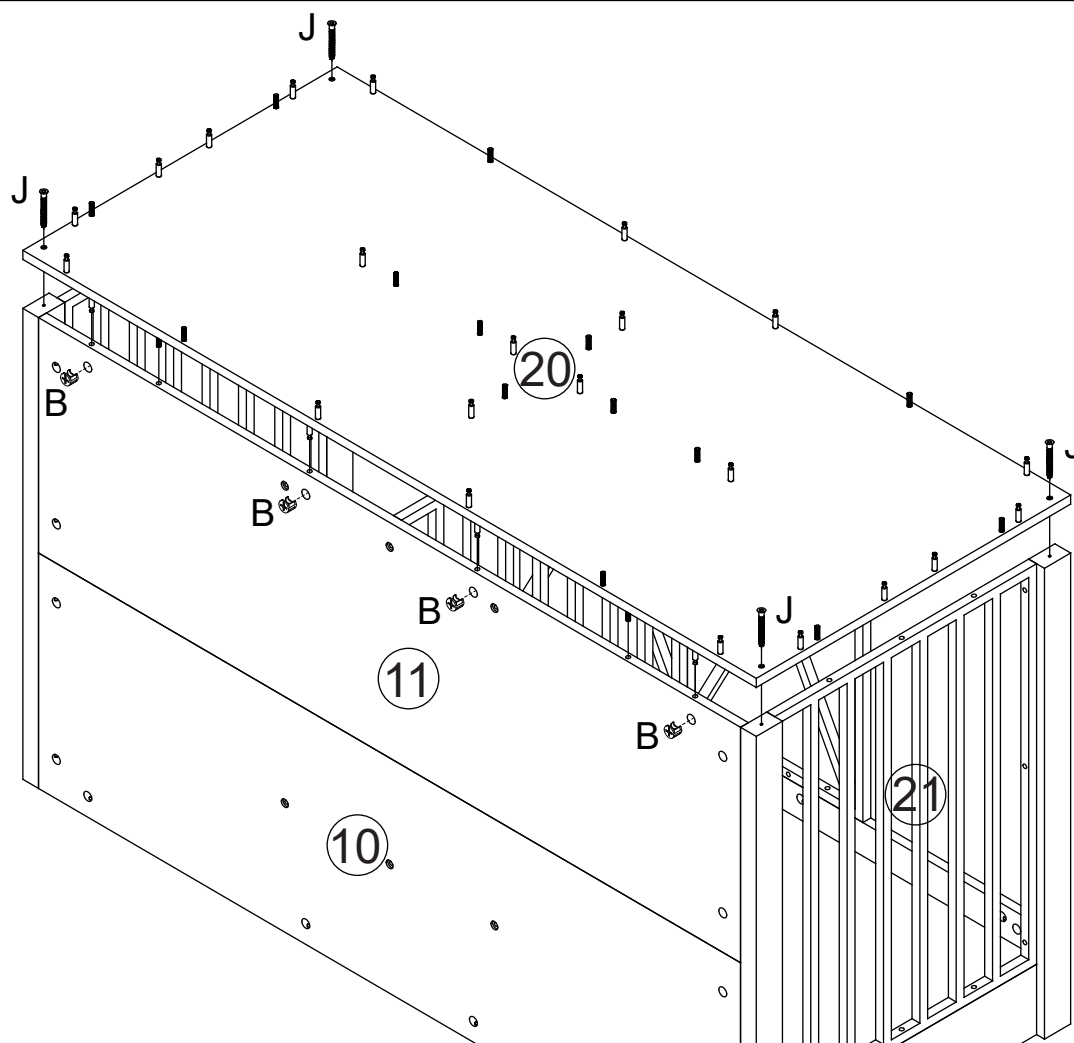




Bx4




Jx4




15

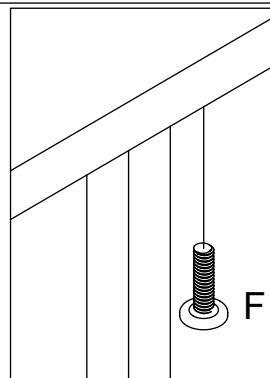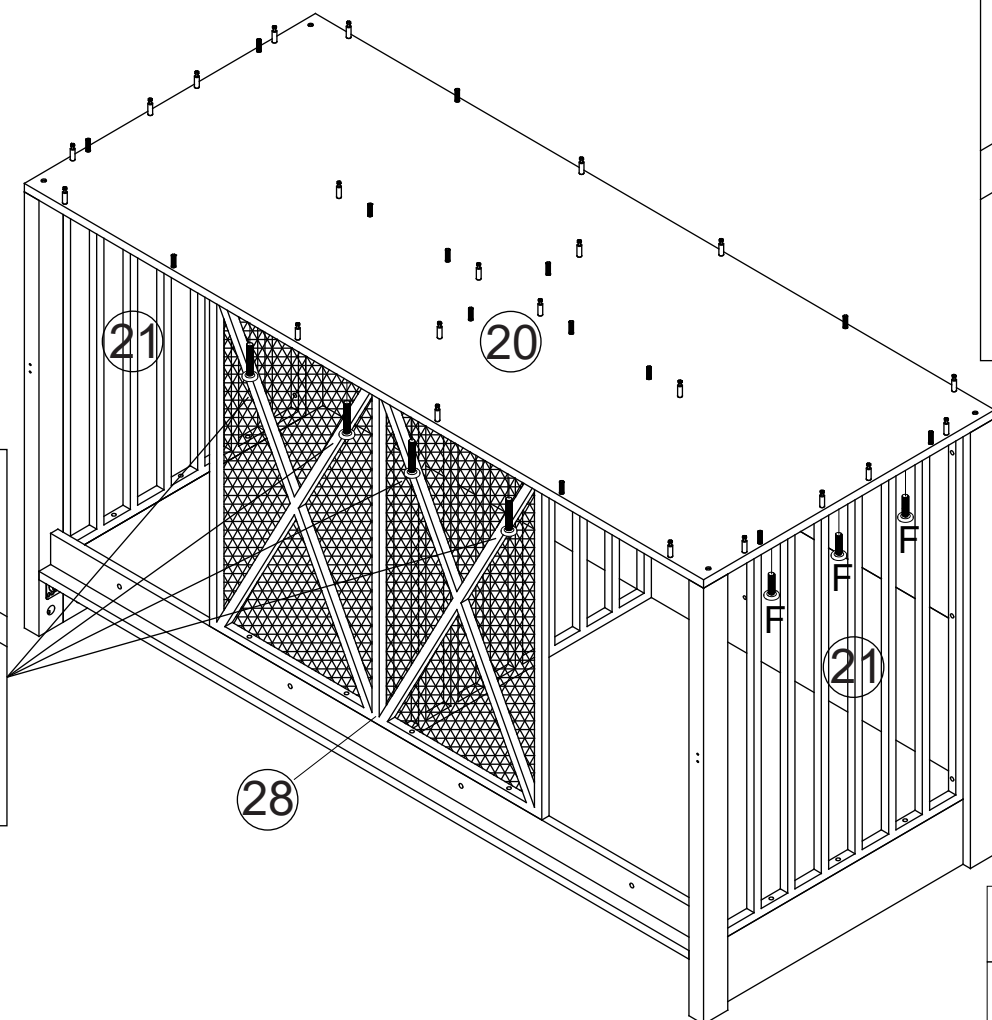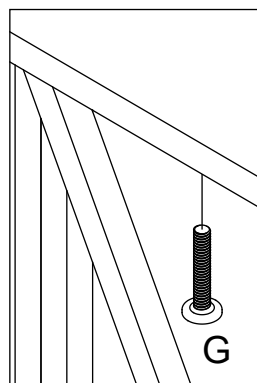


Fx3




Gx4



16

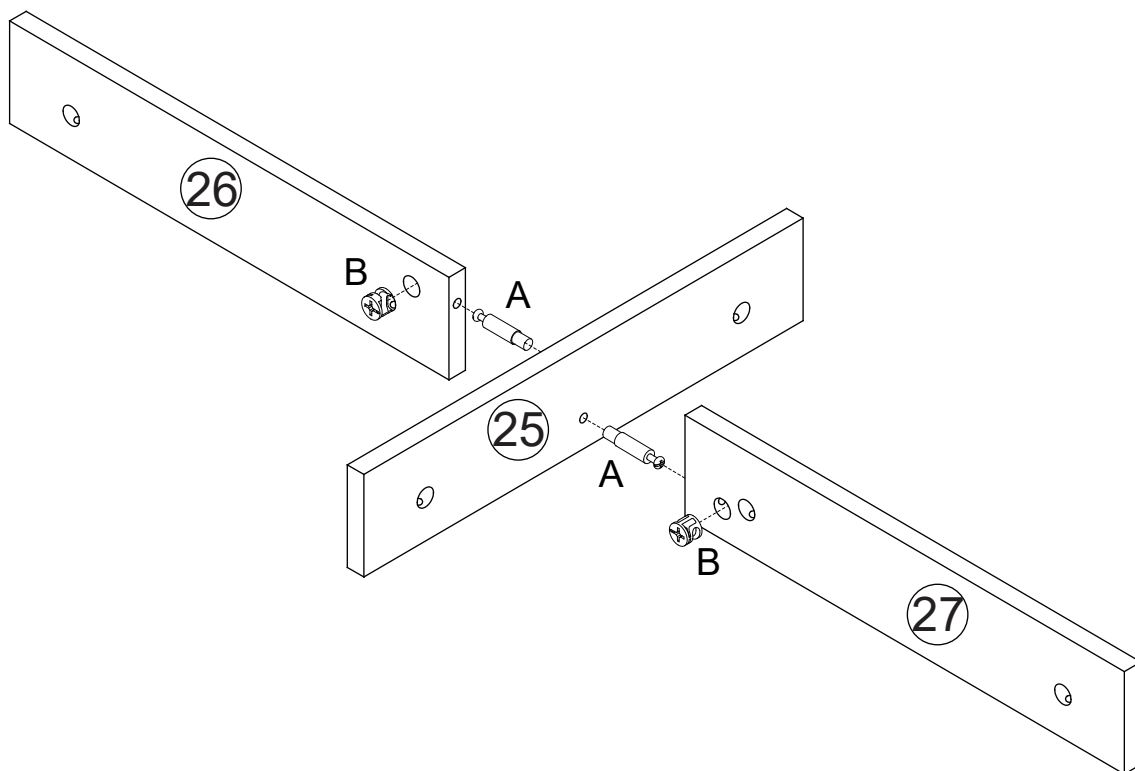


Ax2



Bx2





17

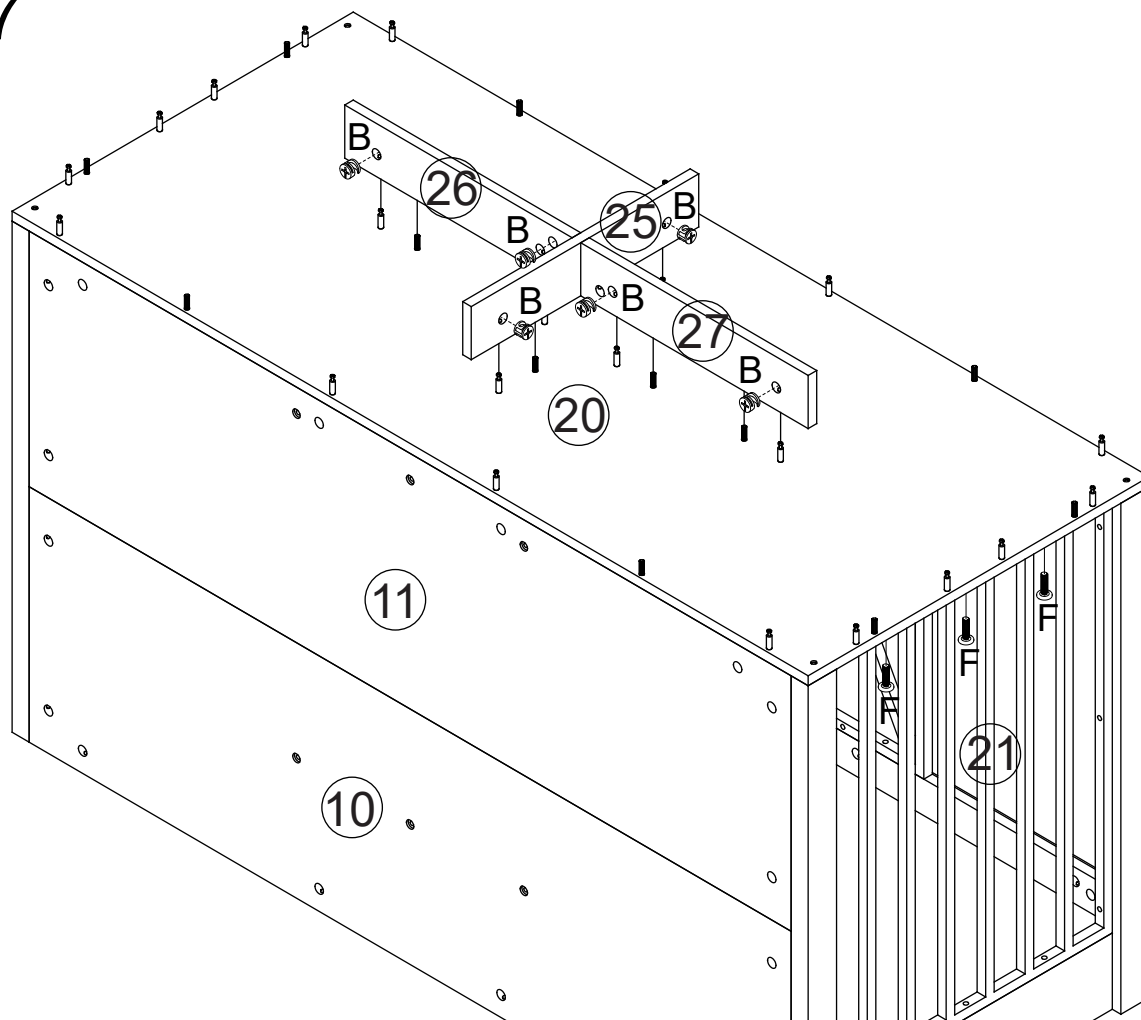


Fx3	
Bx6	

18

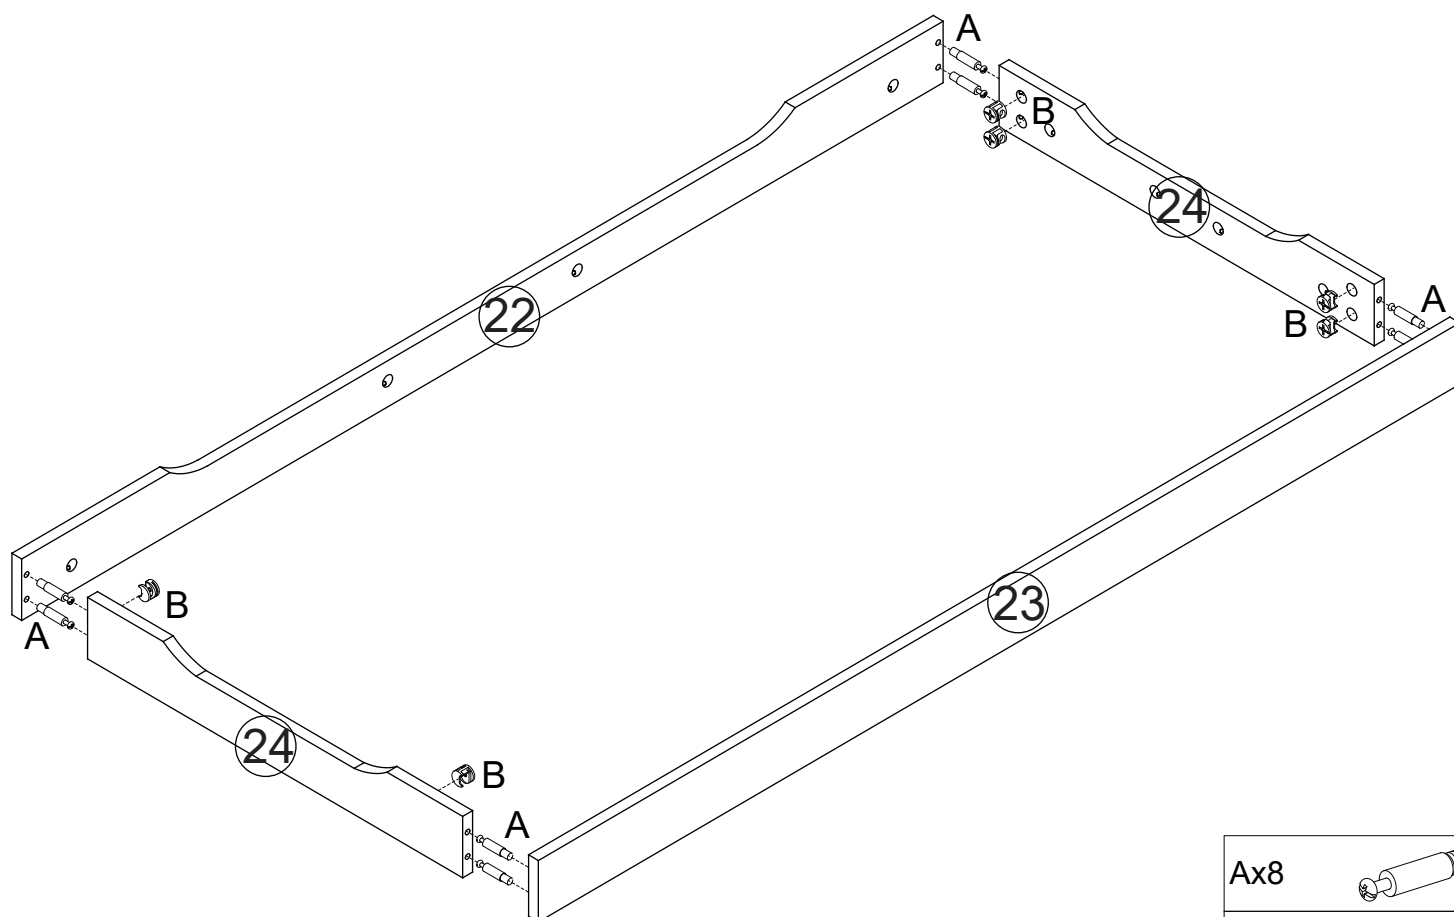


Ax8	
Bx8	


19

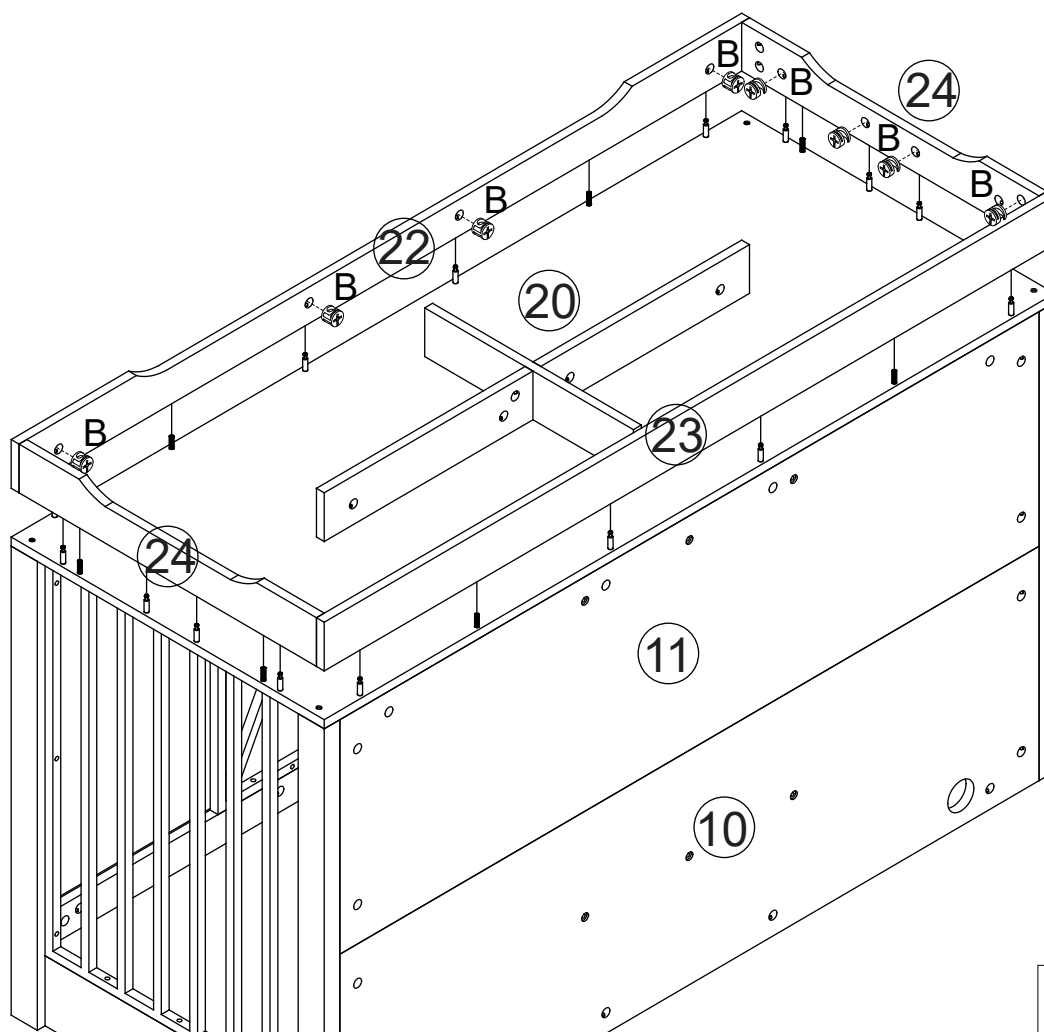


20

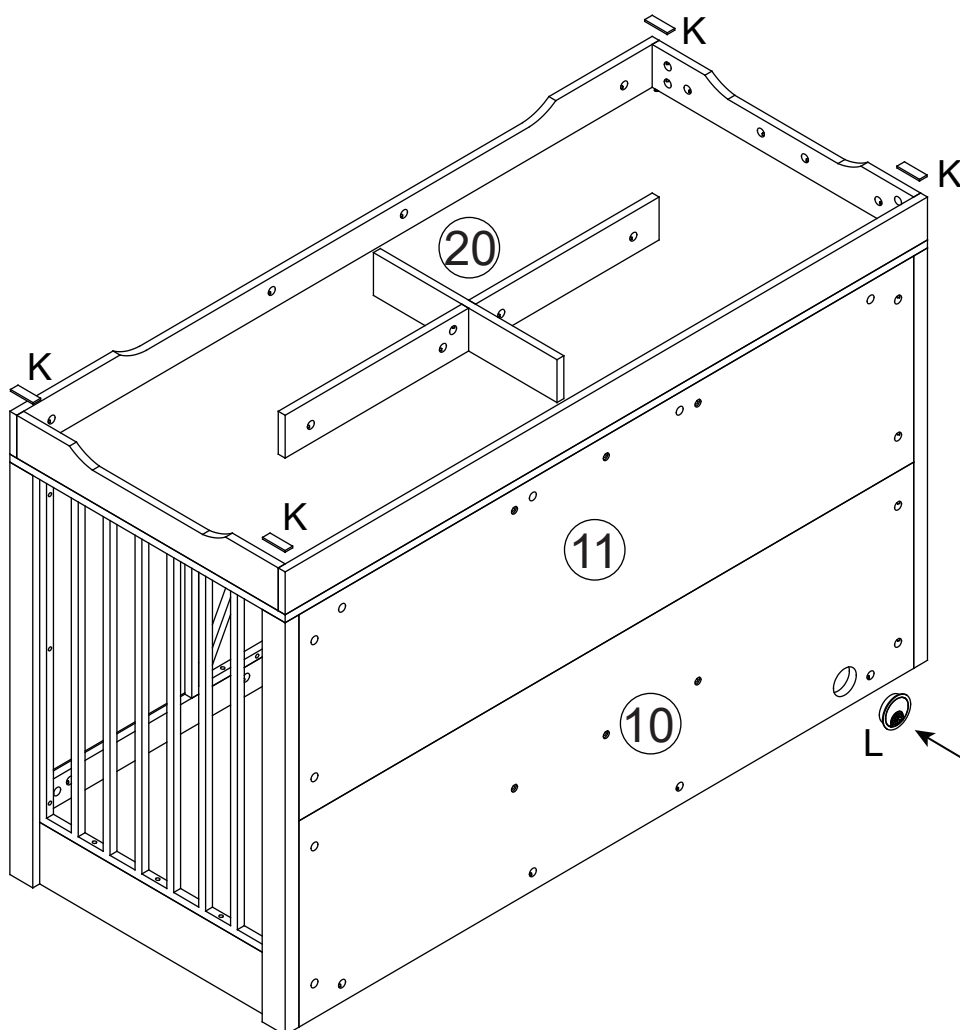


21

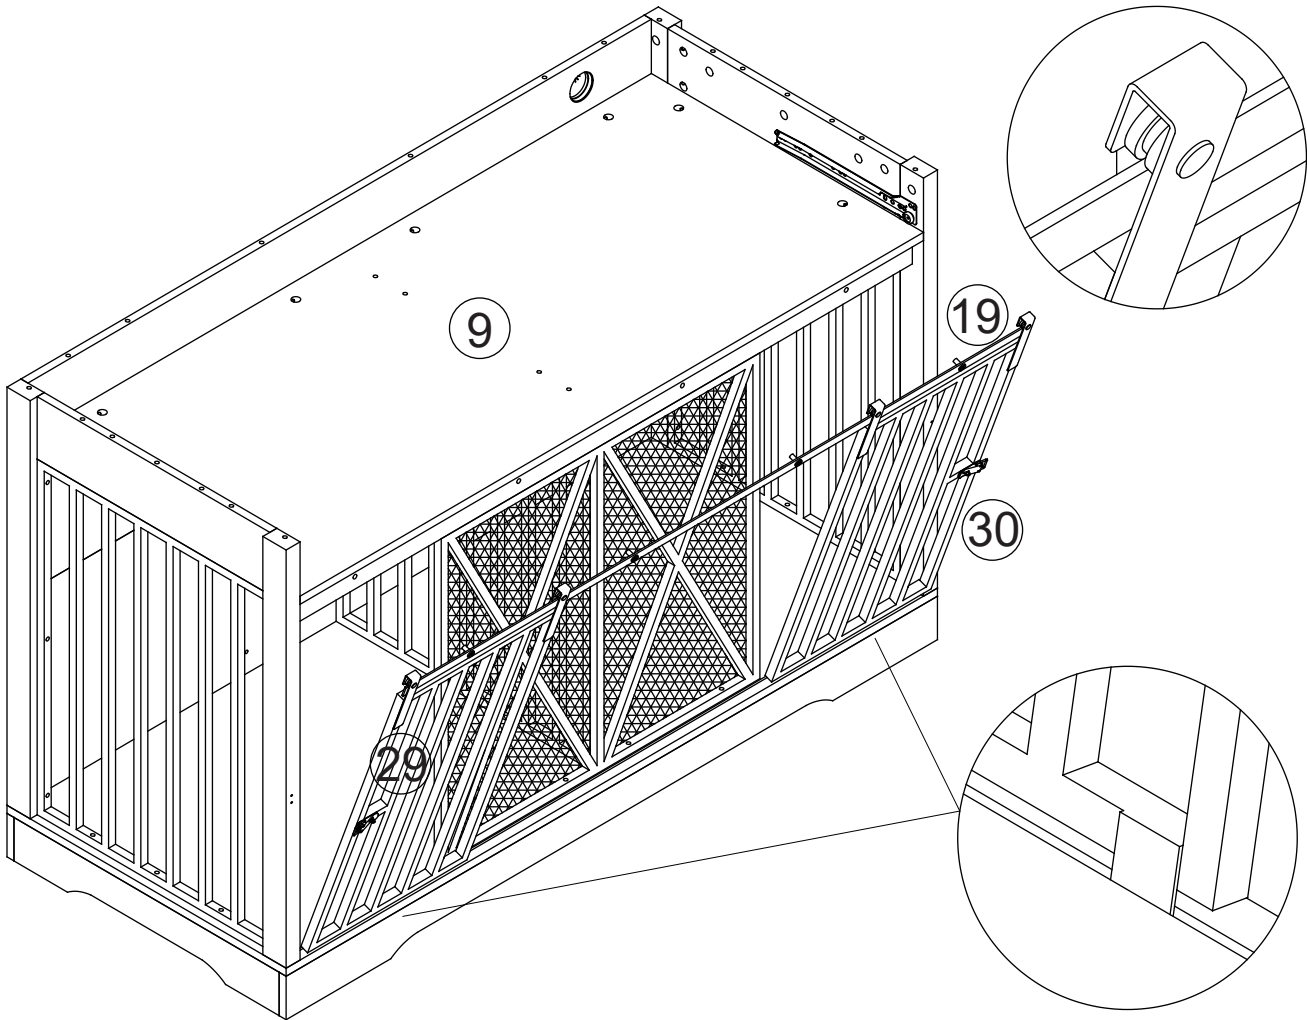


22

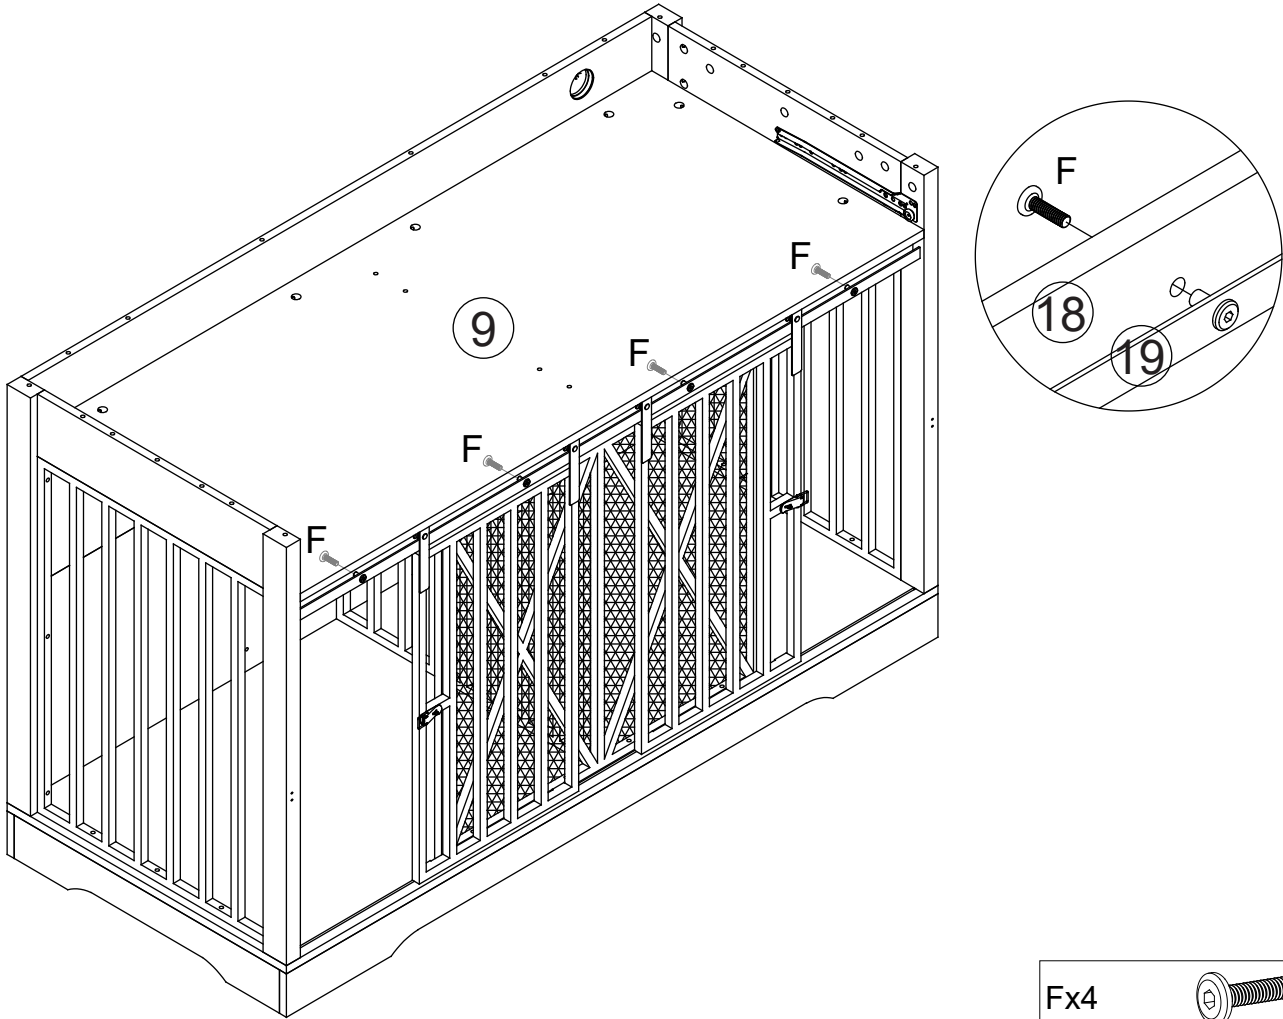


Fx4



23

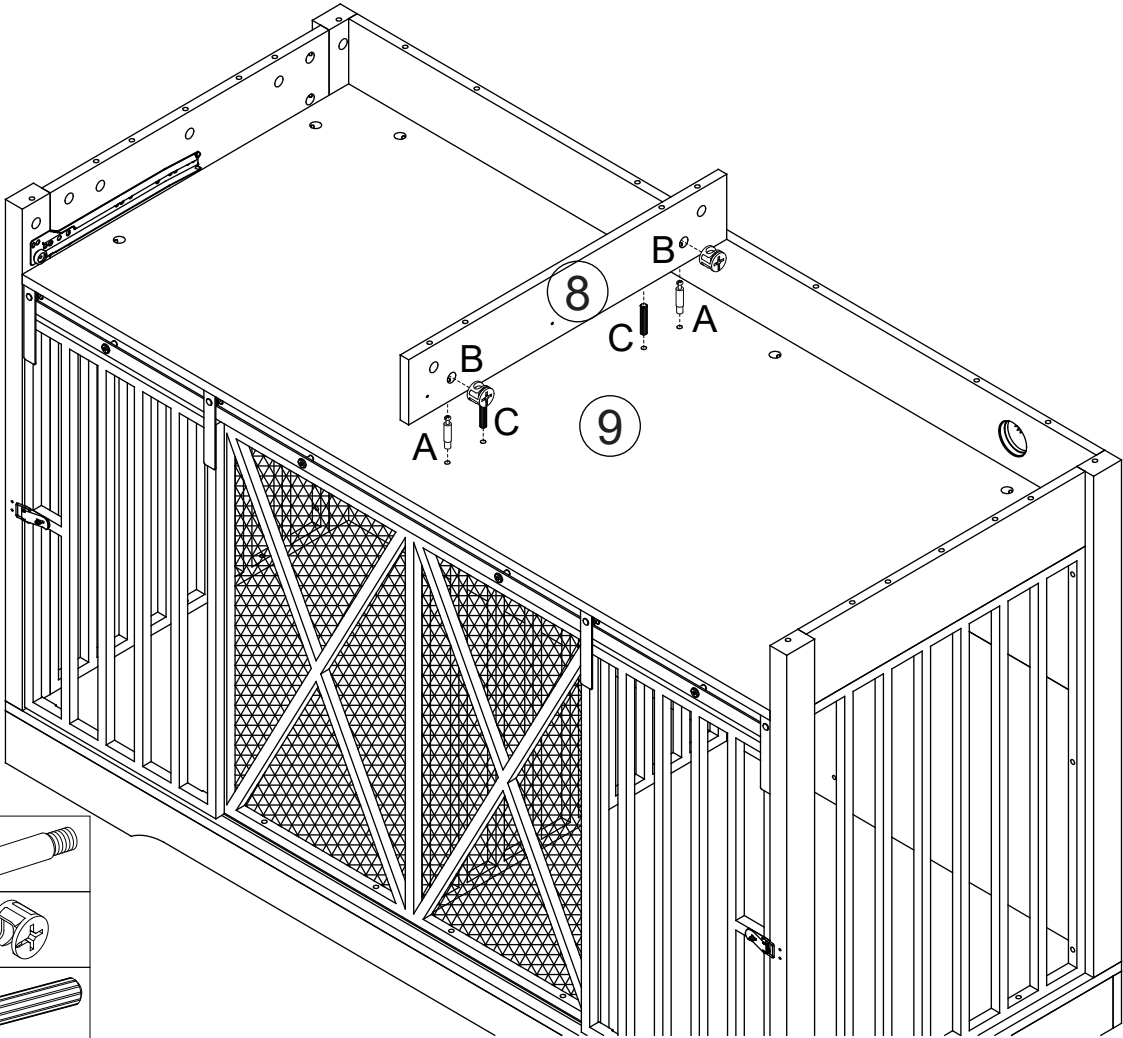


Ax2





Bx2



Cx2



24

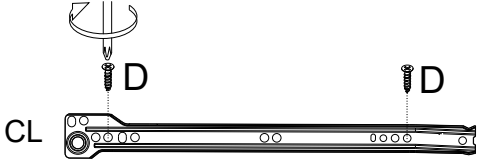


Dx4




Ex1




25

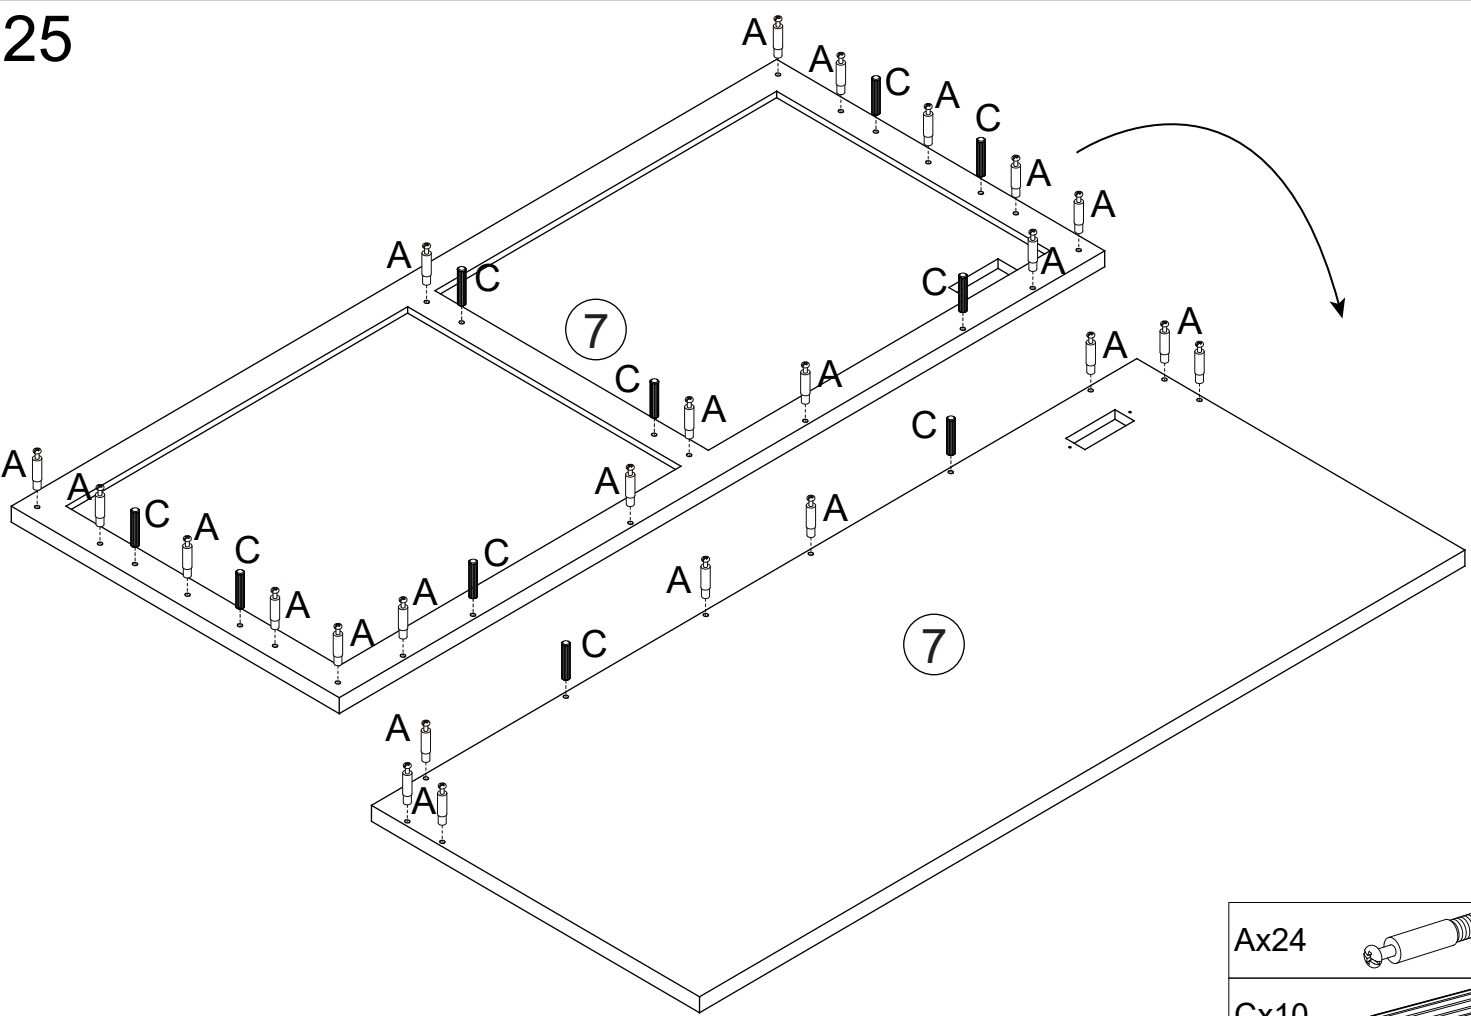


26

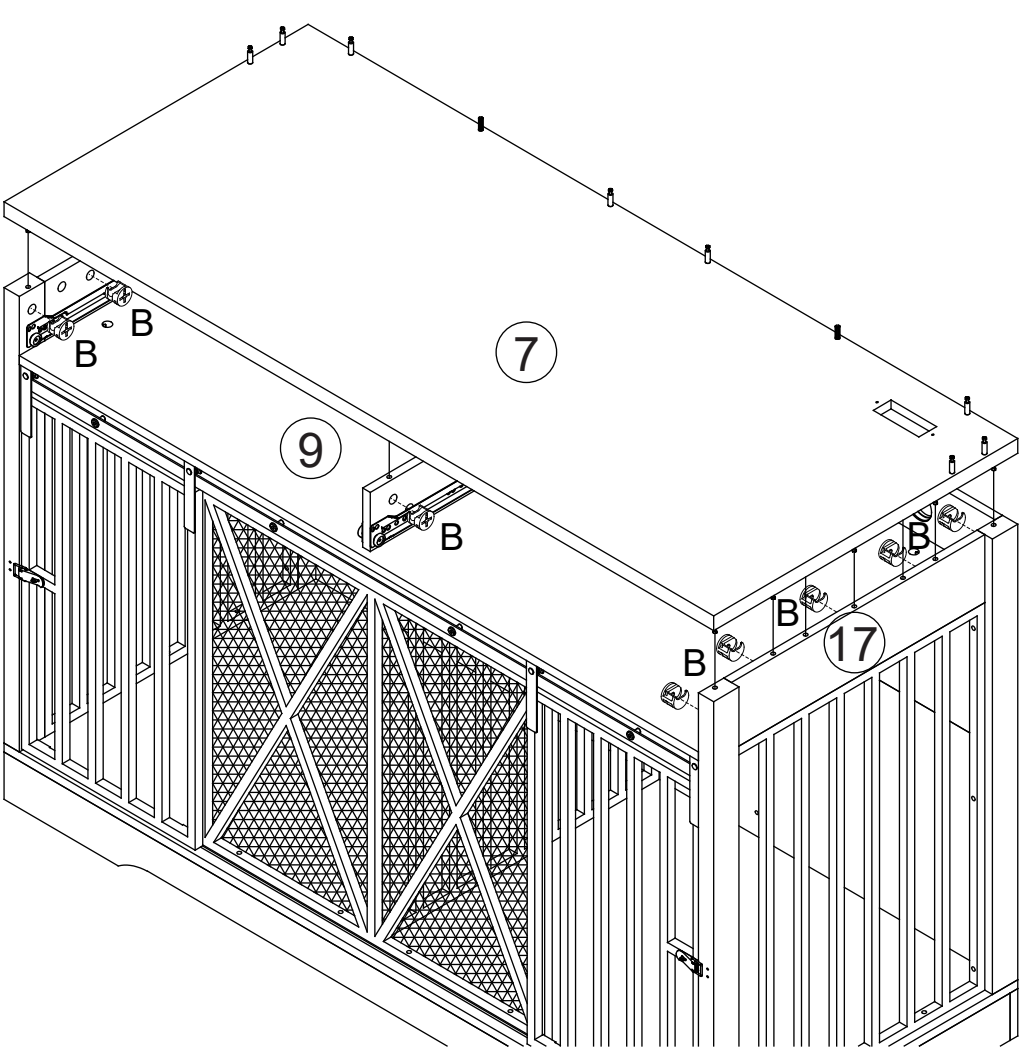


27

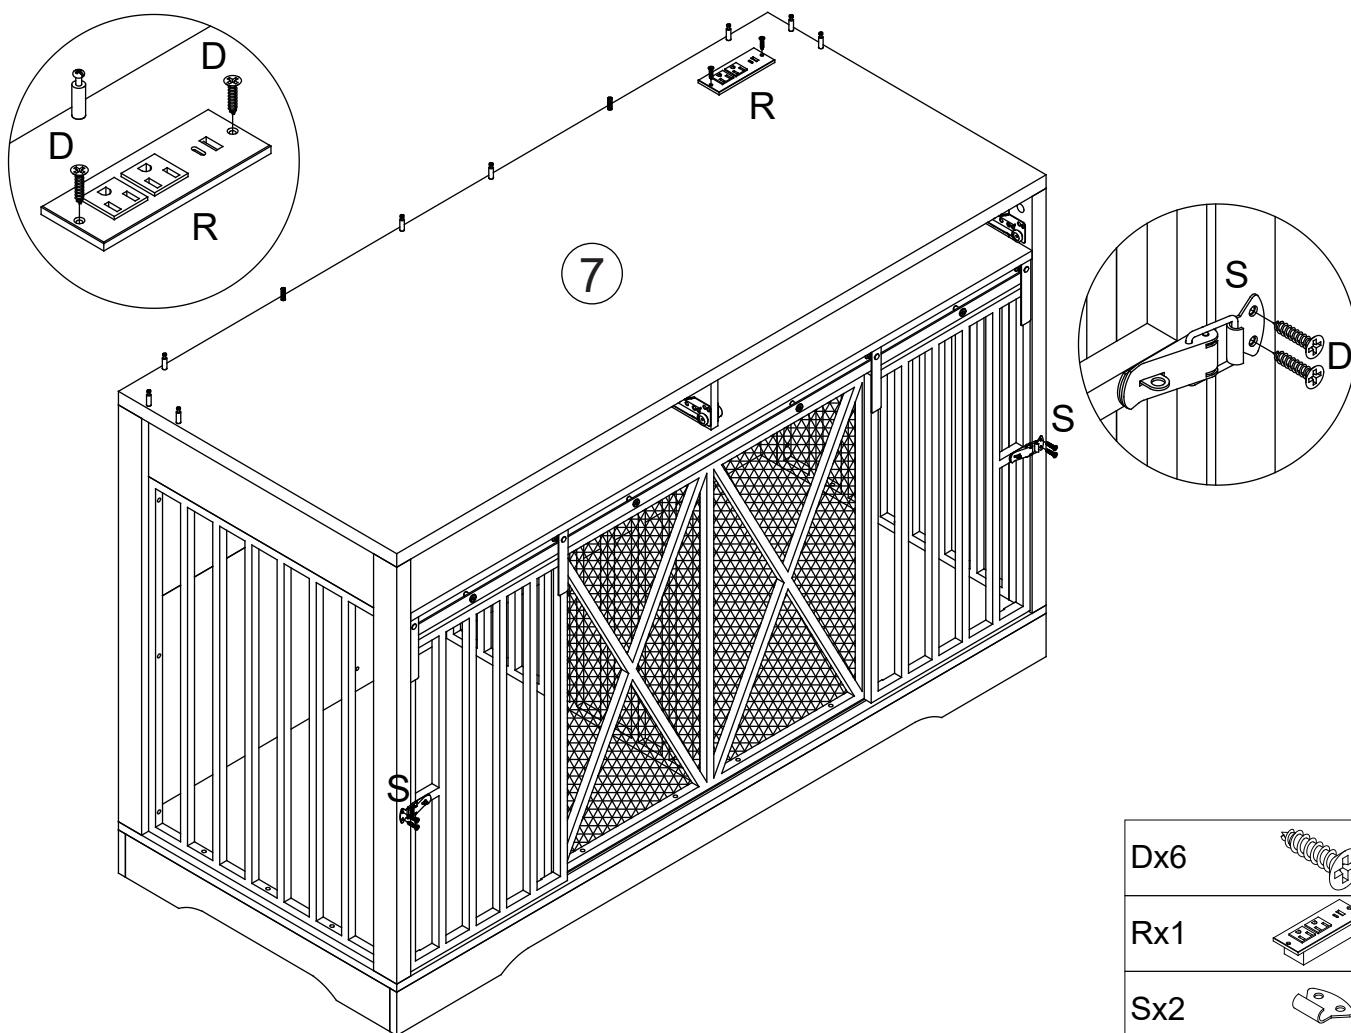


28

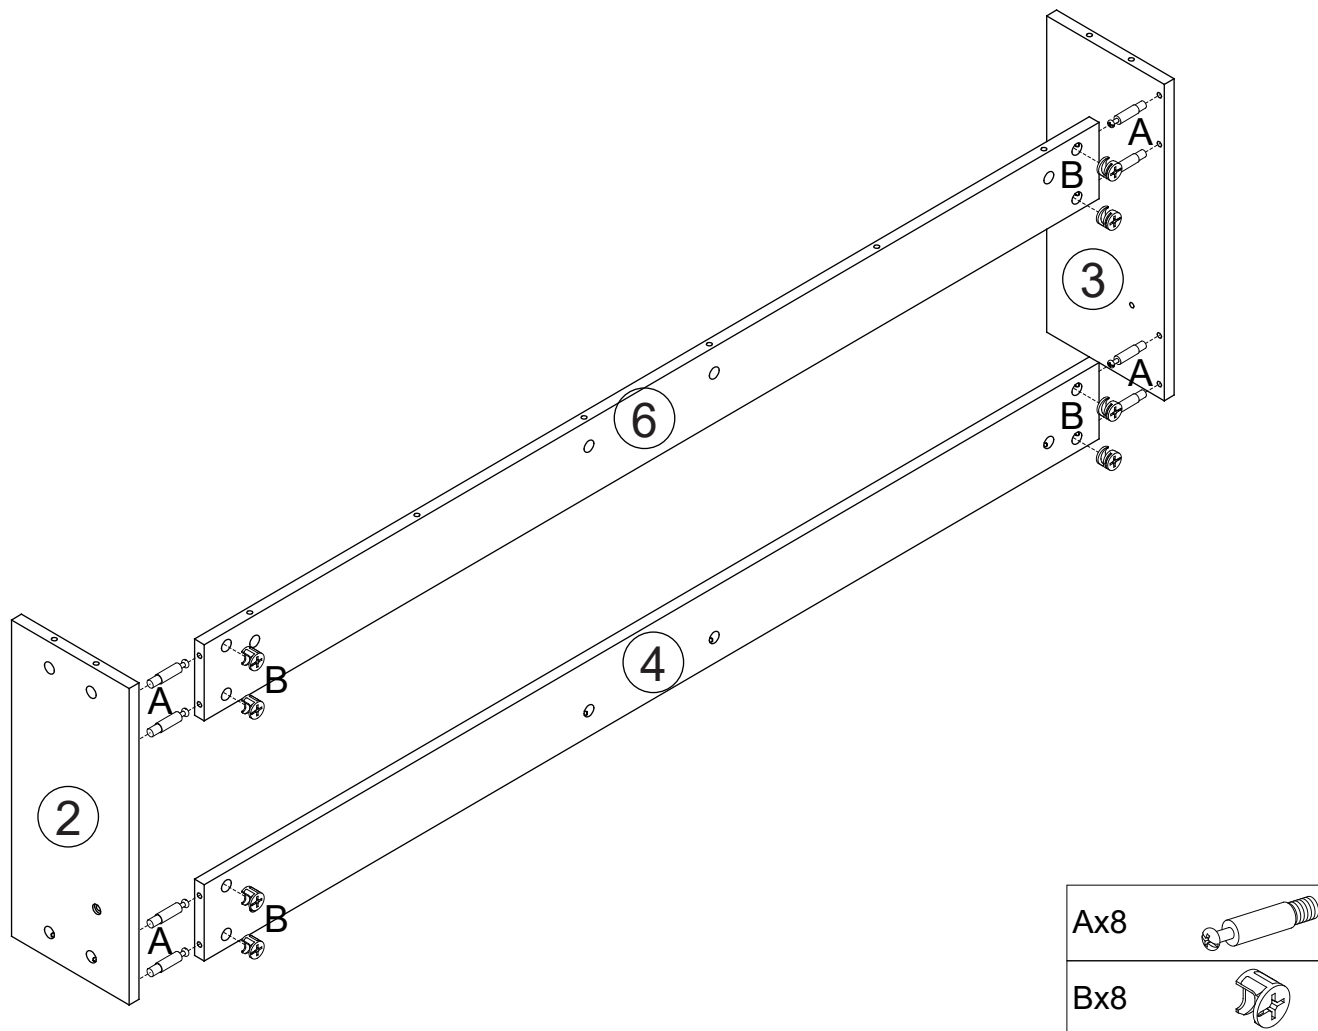



29

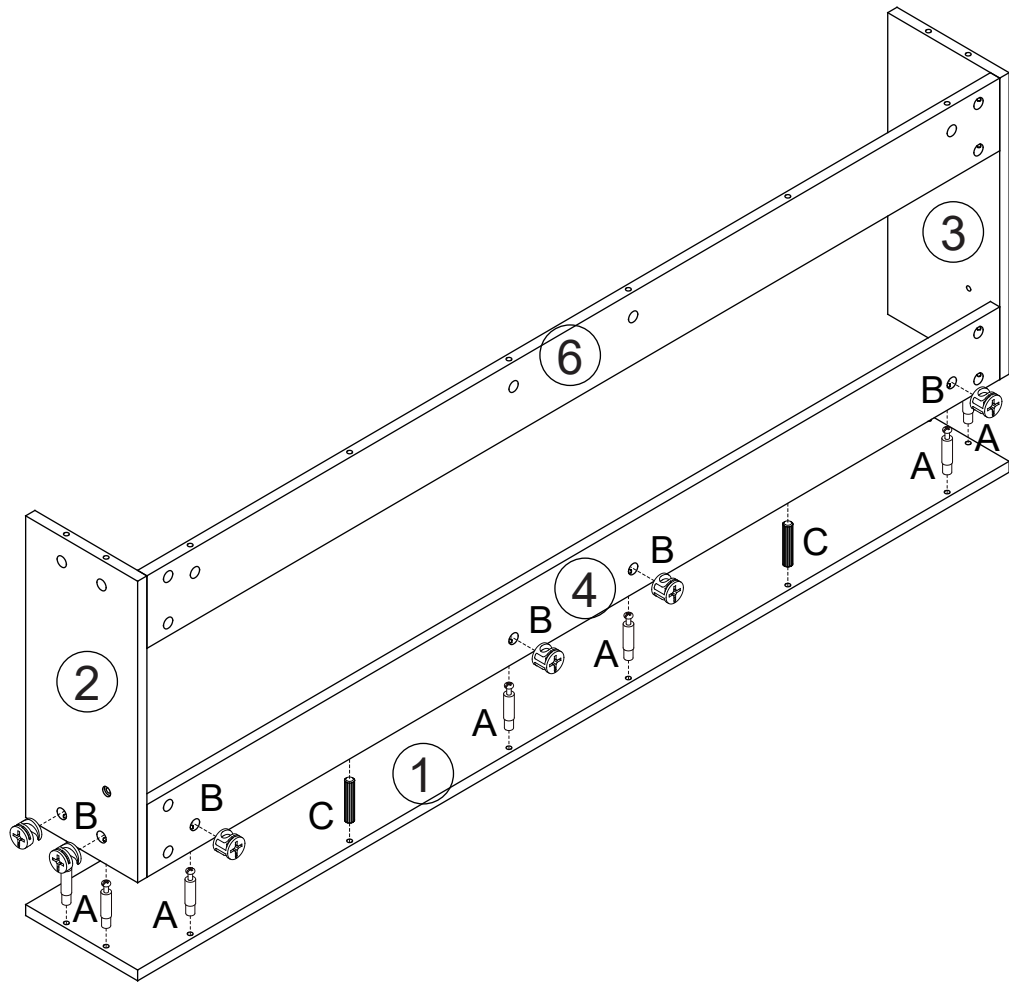


Ax8	
Bx8	
Cx2	

30

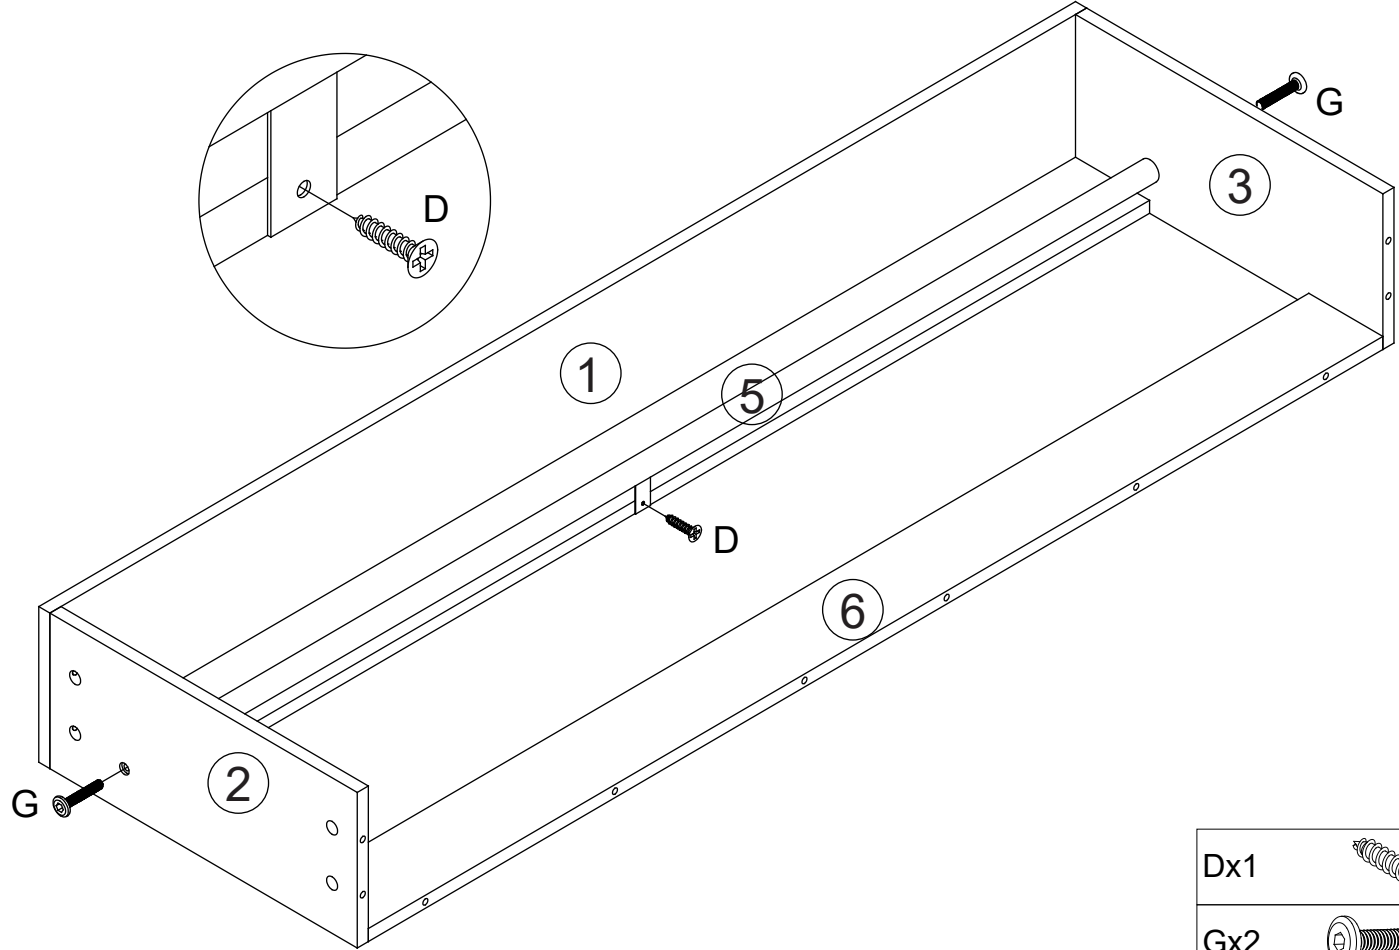

Dx1	
Gx2	



31

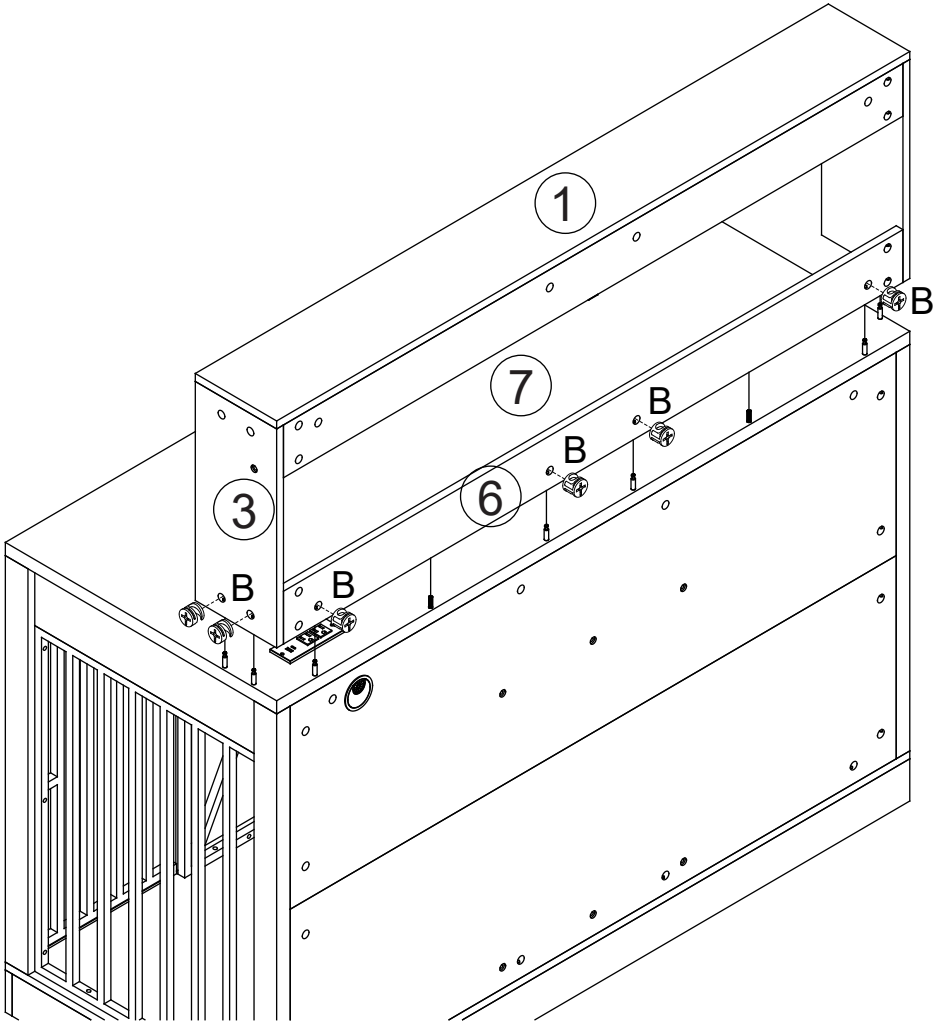


Bx8




32

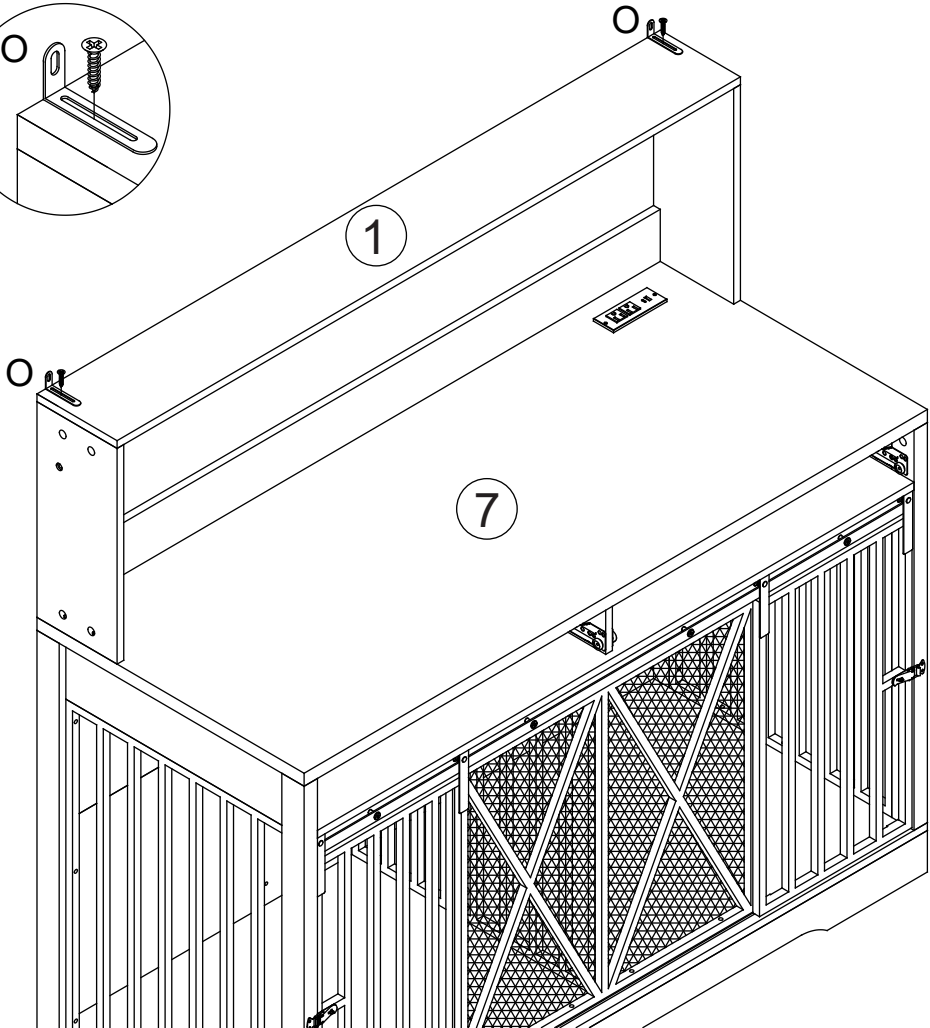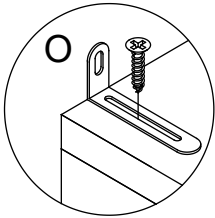


Ox2




33

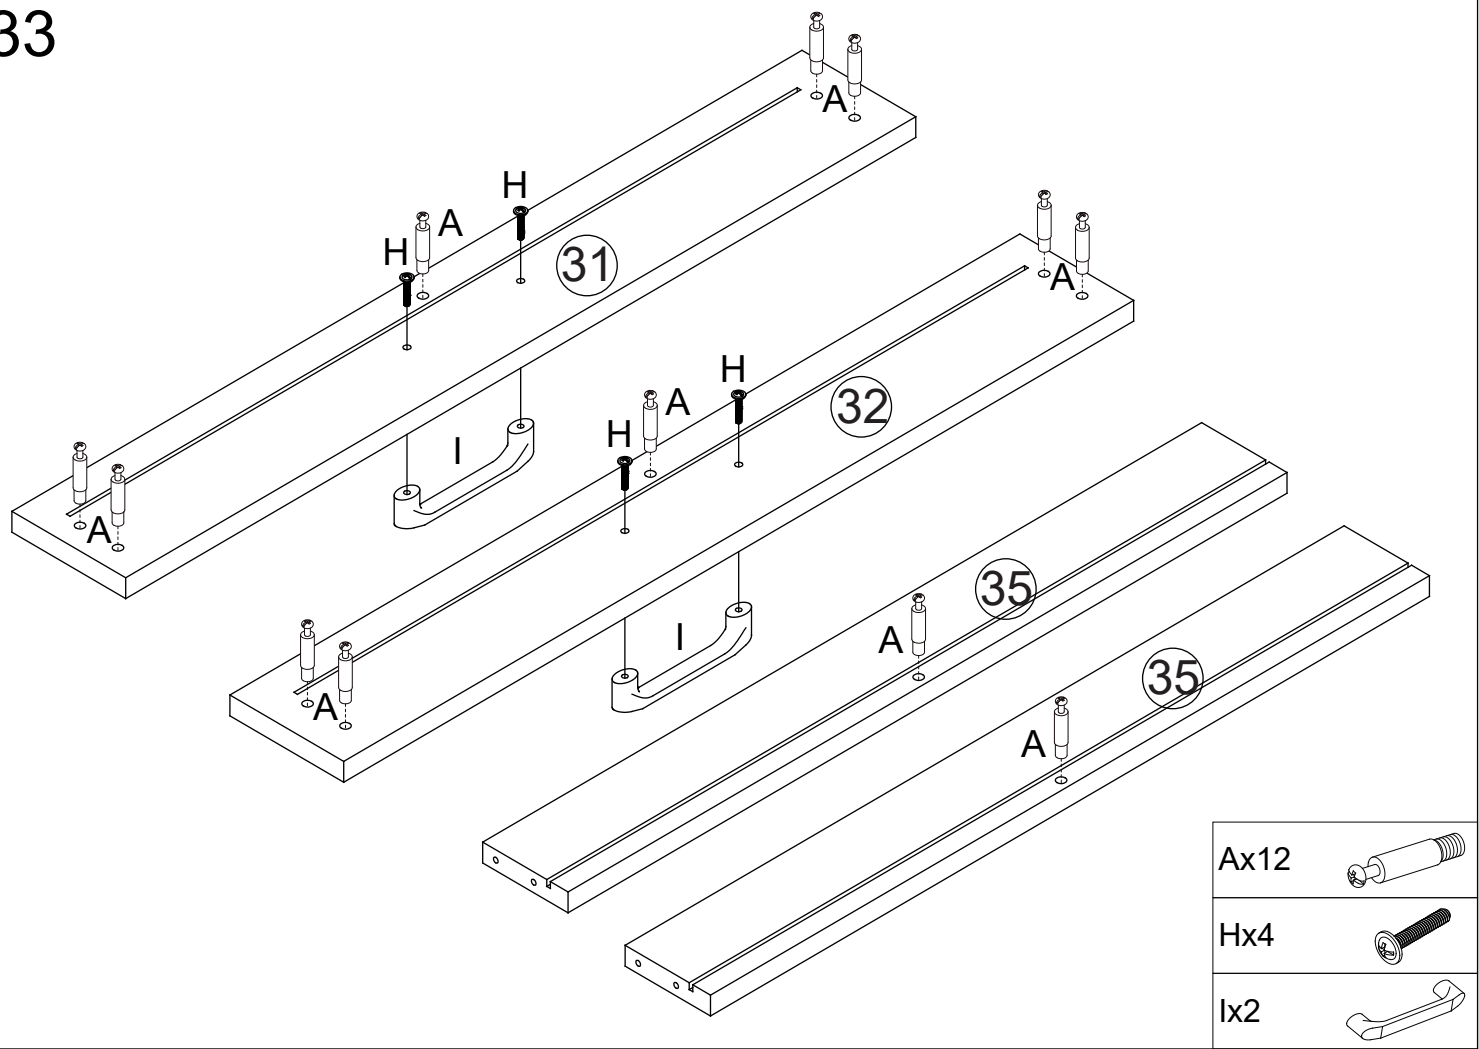

34

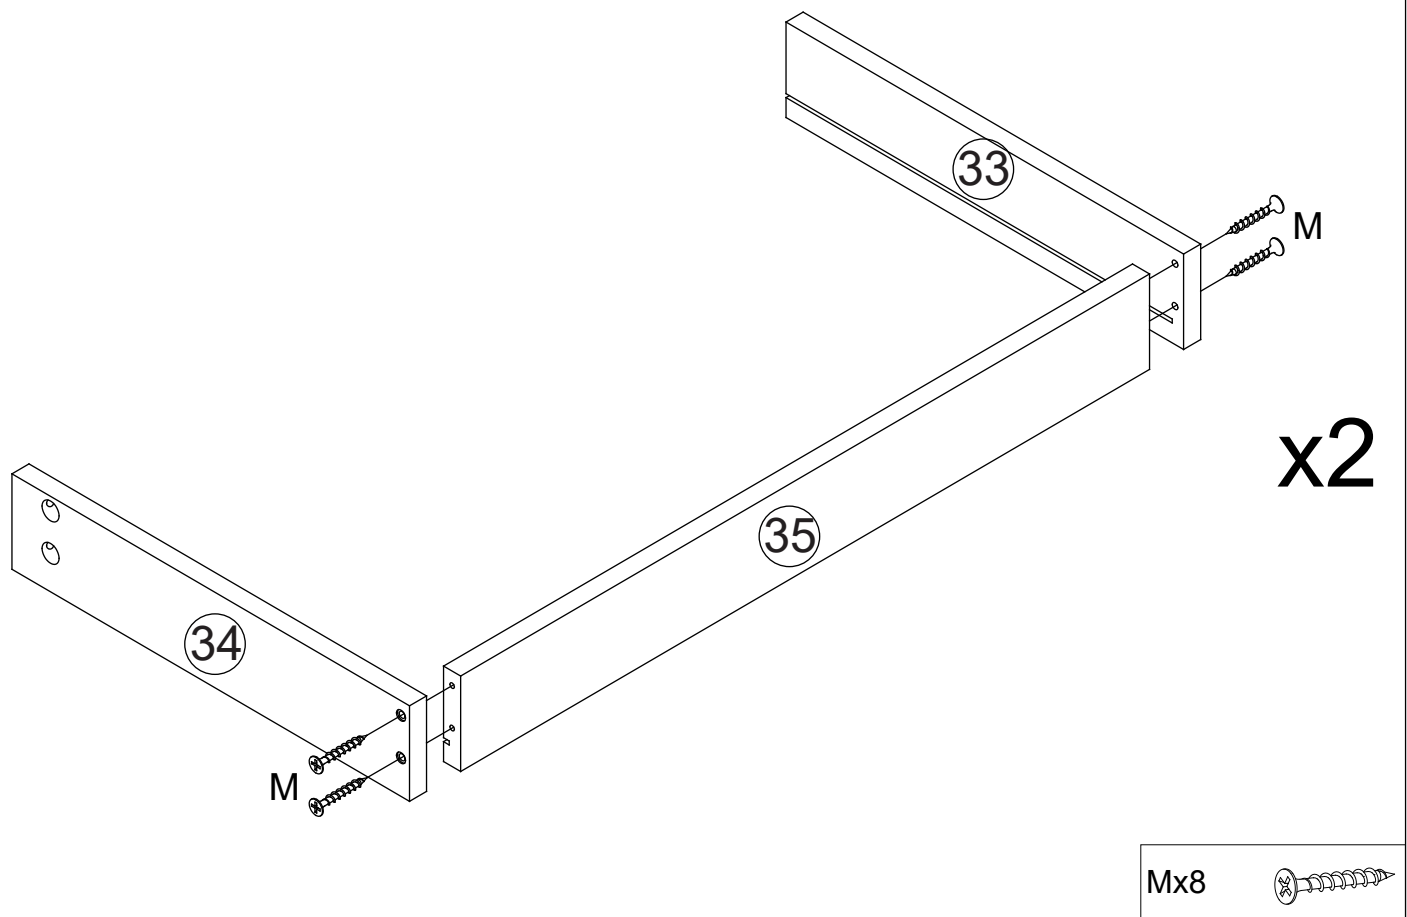


35

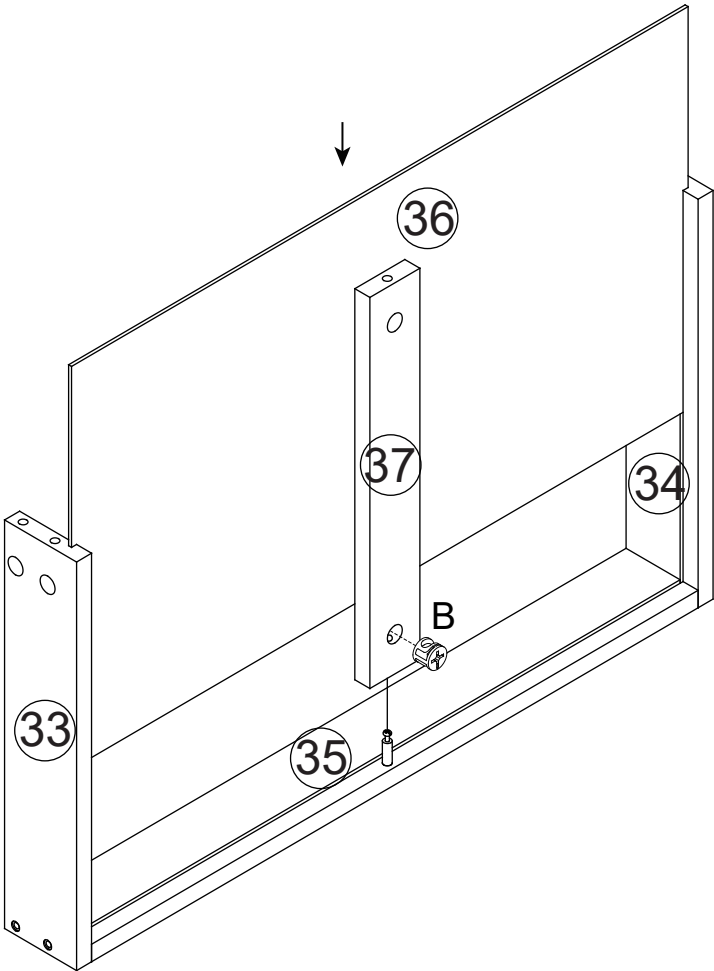

x2


Bx2 

36

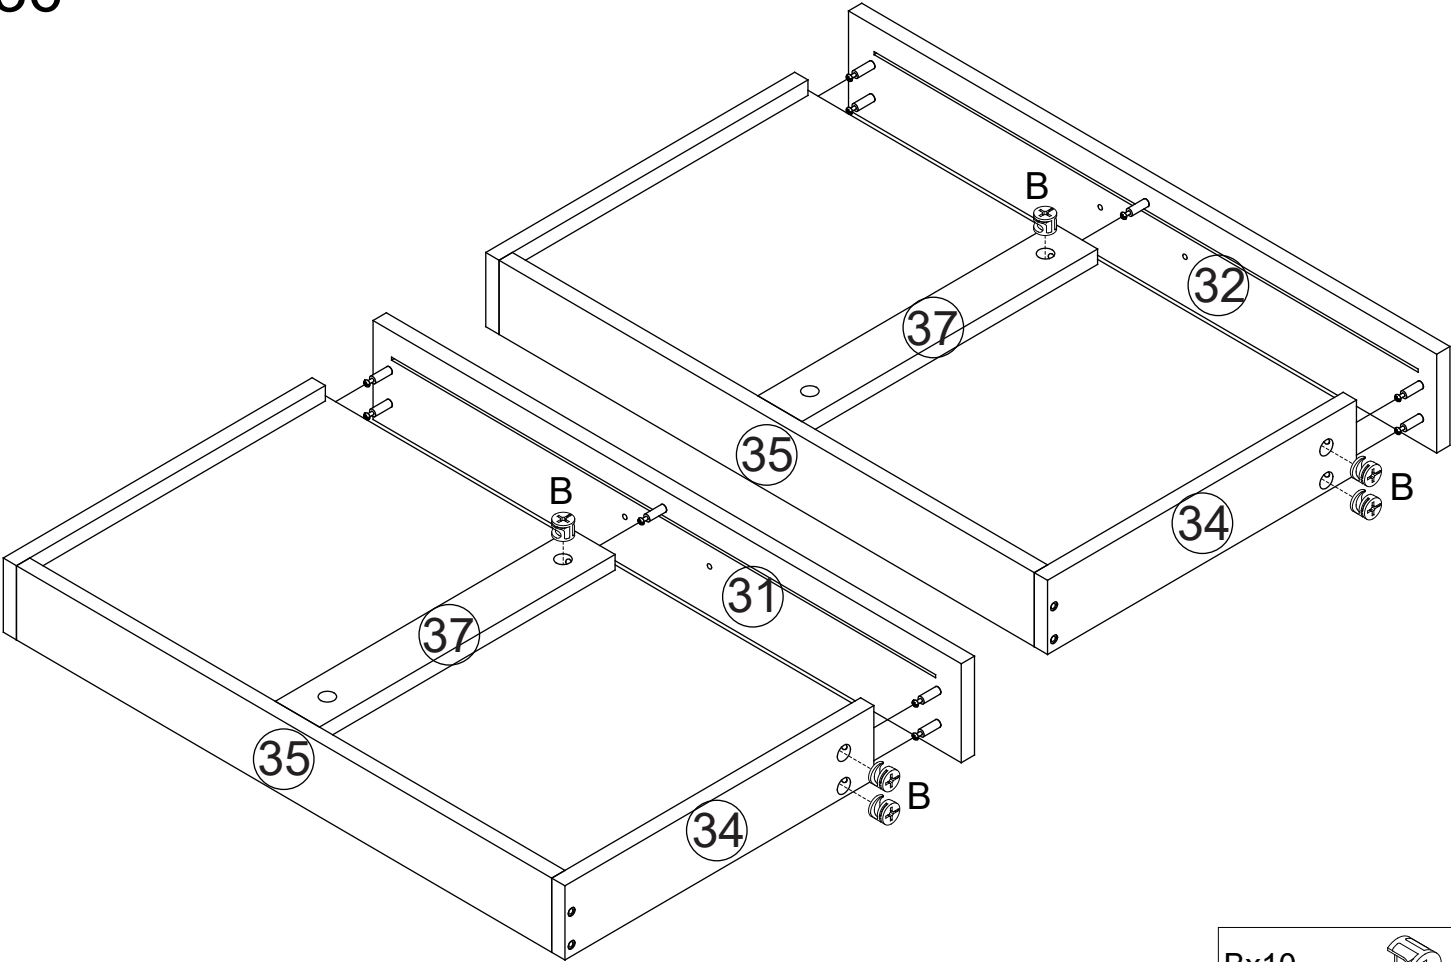






Bx10 

37

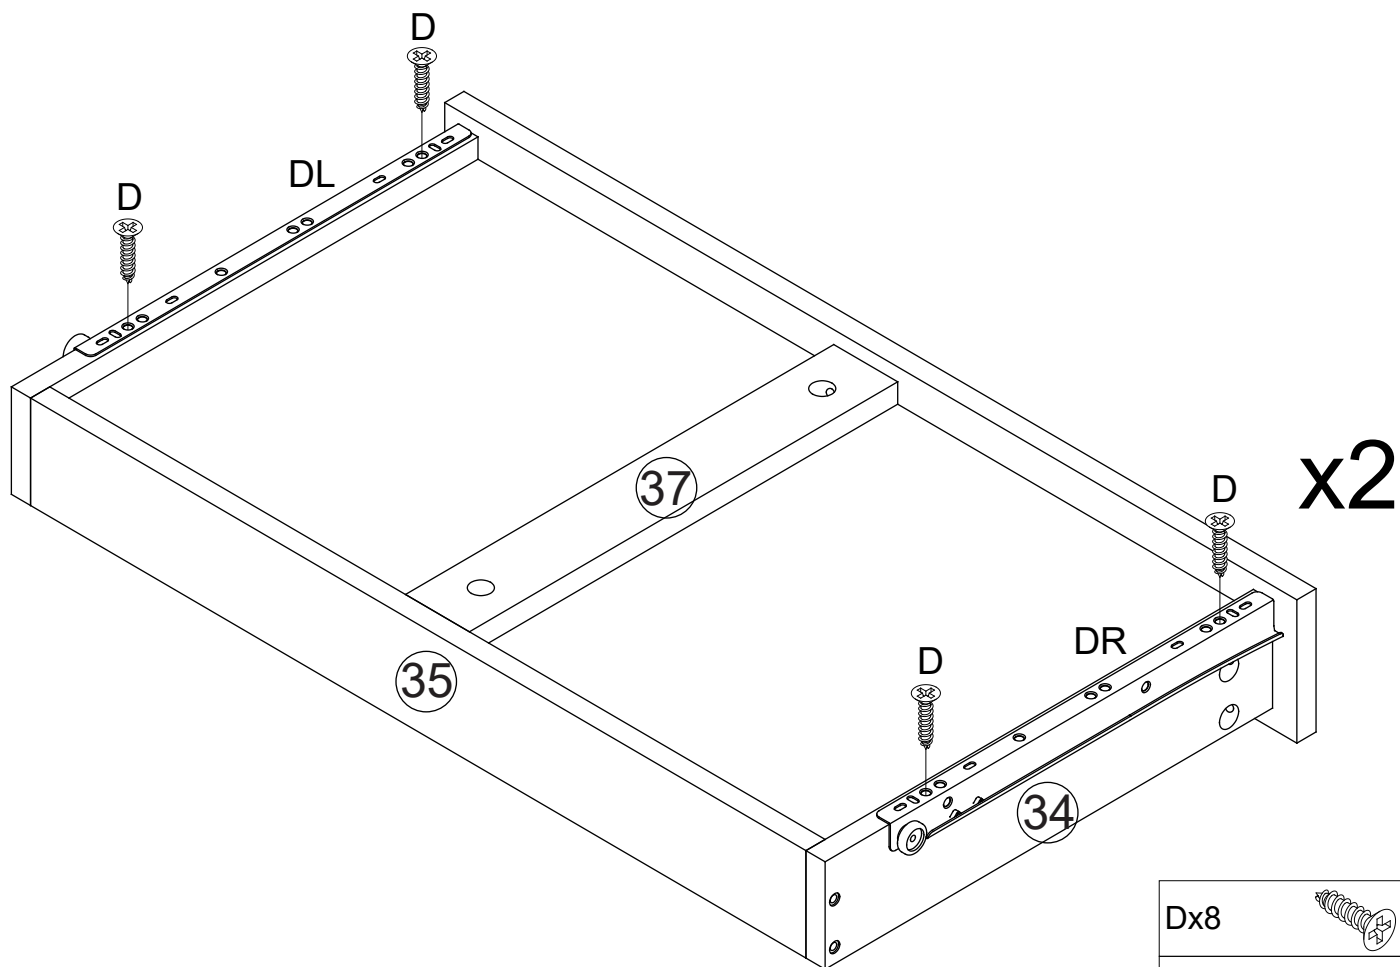

38

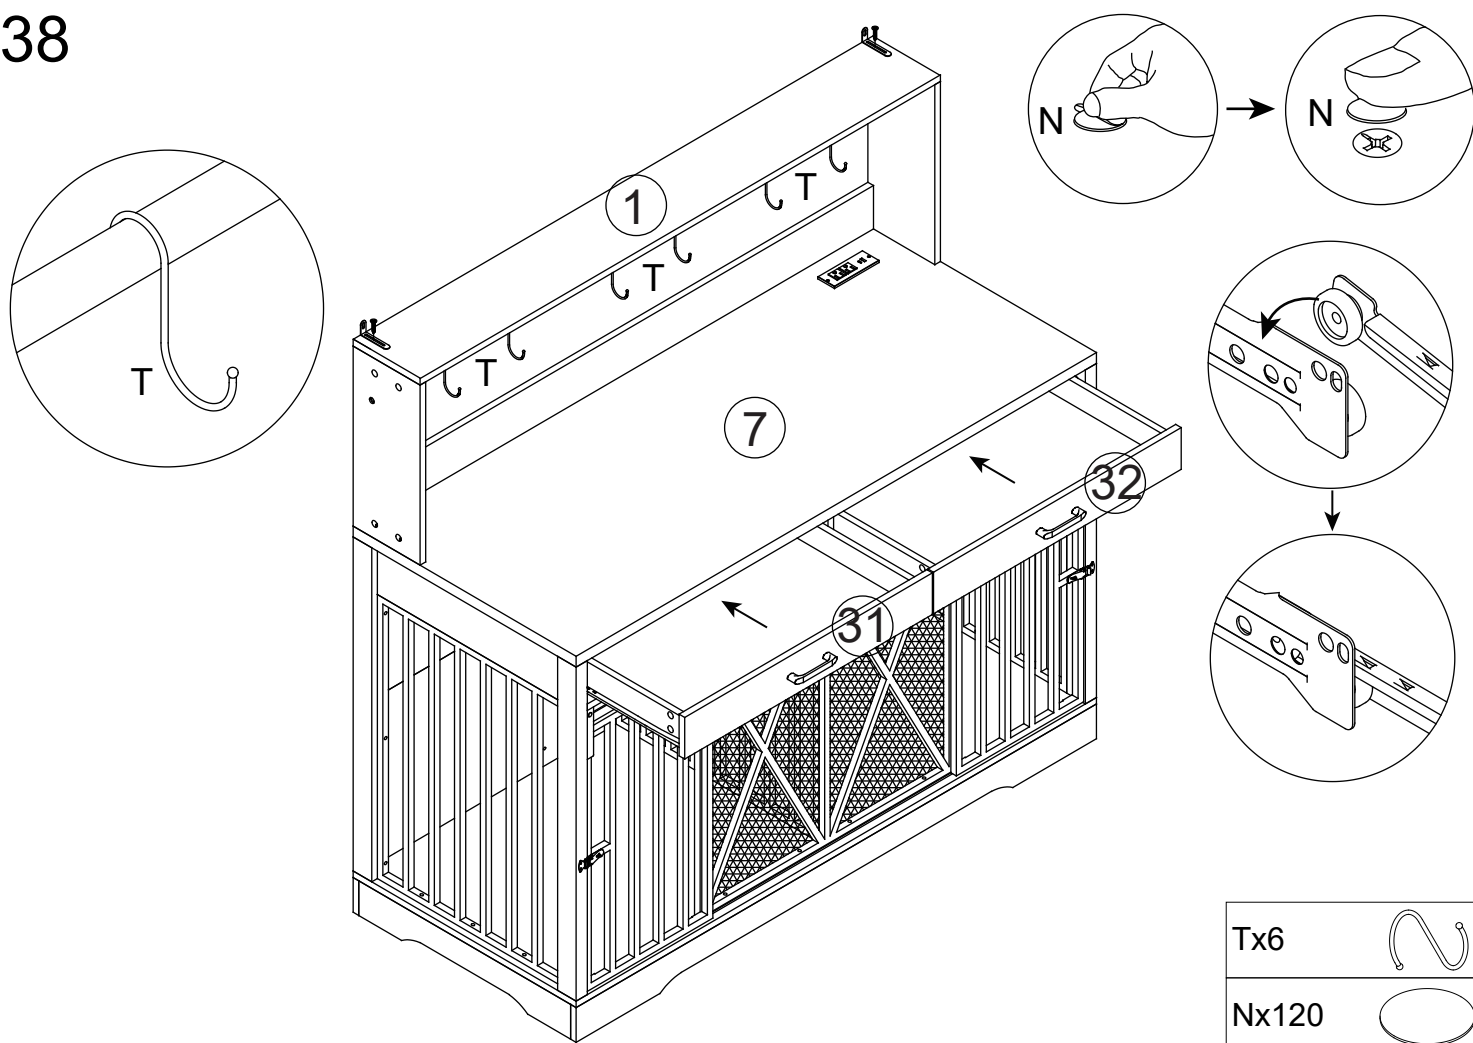

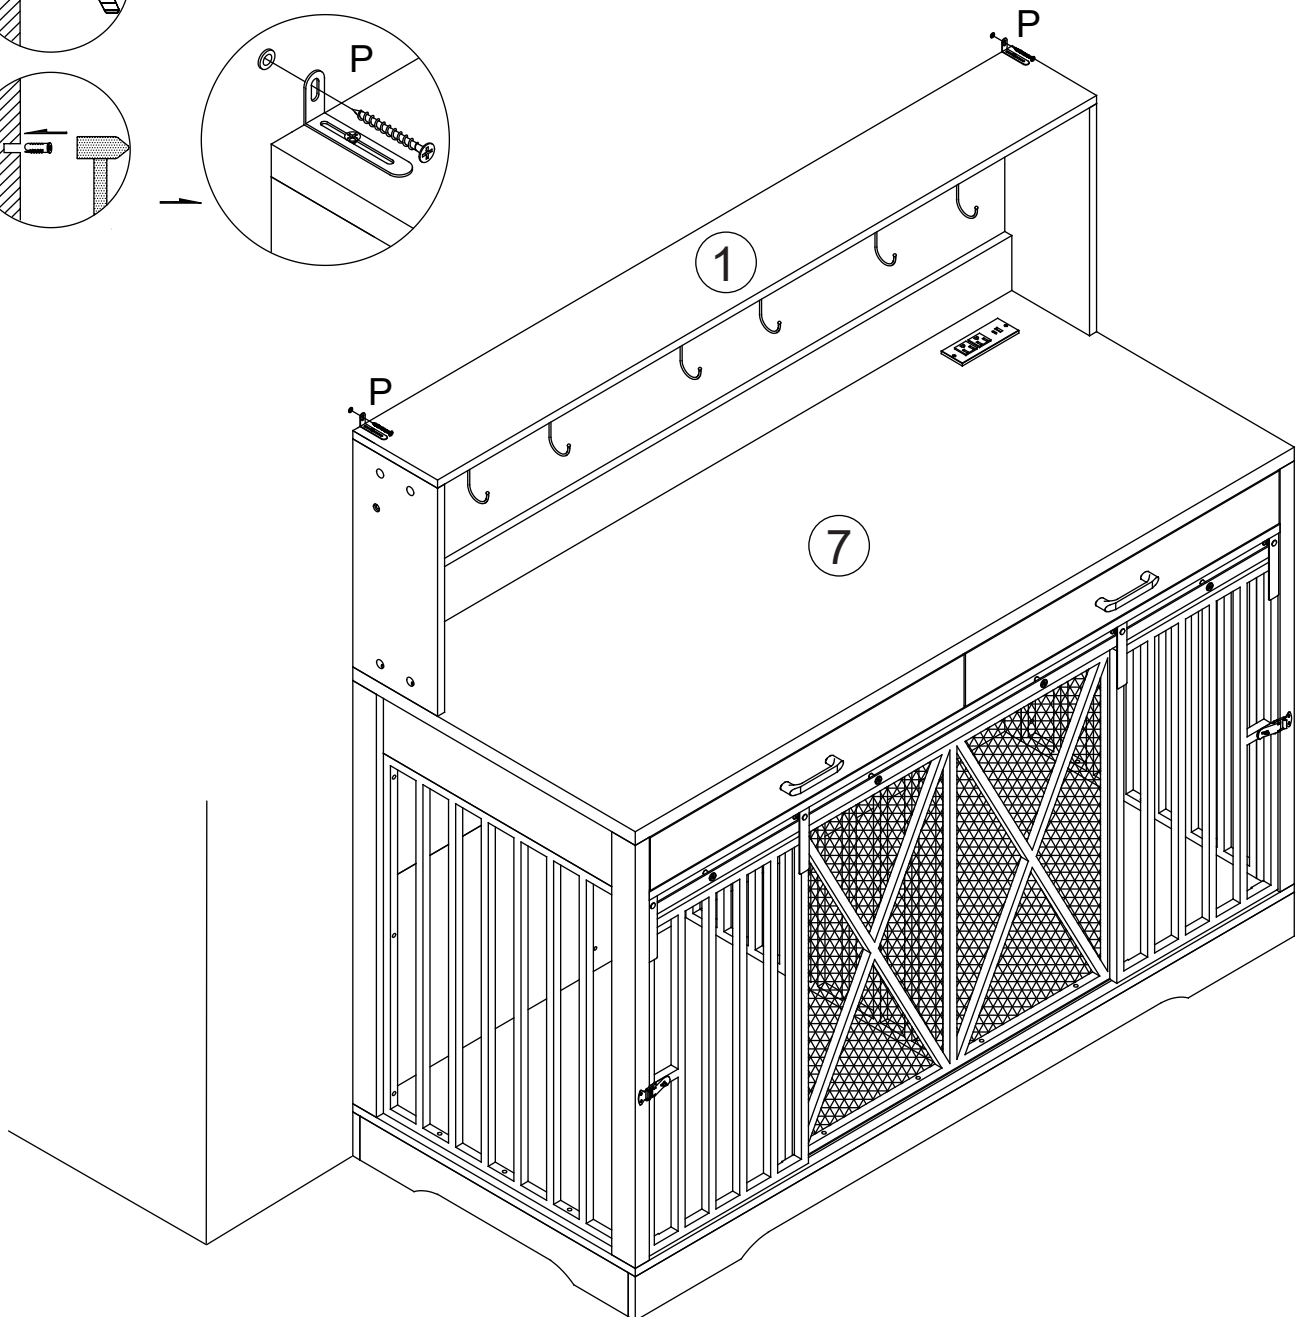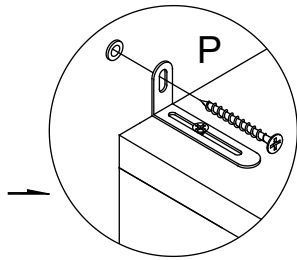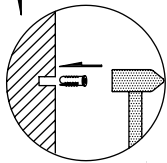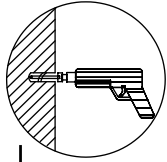

Px2

