
Domi outdoor living

domi
outdoor living

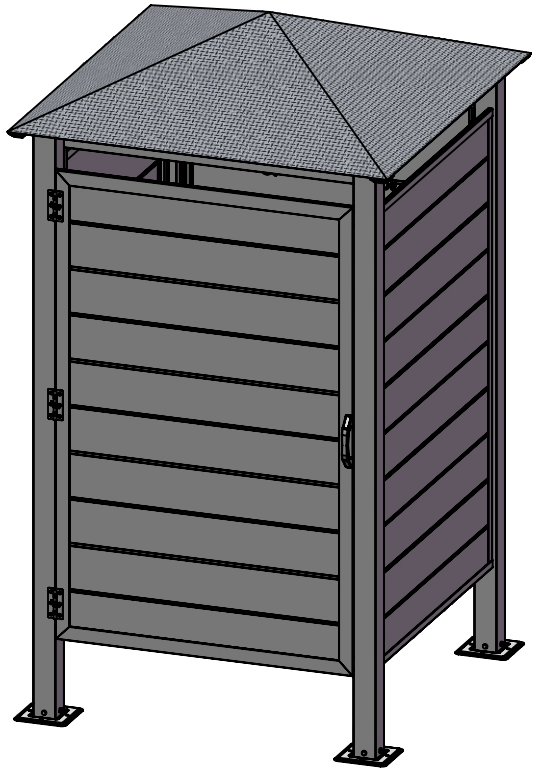



SKU：LNFZ0652

Outdoor Shower Enclosure


Outdoor Shower Enclosure Assembly Manual


© Copyright 2024-2026 Domi Outdoor Living LLC.All Rights Reserved.

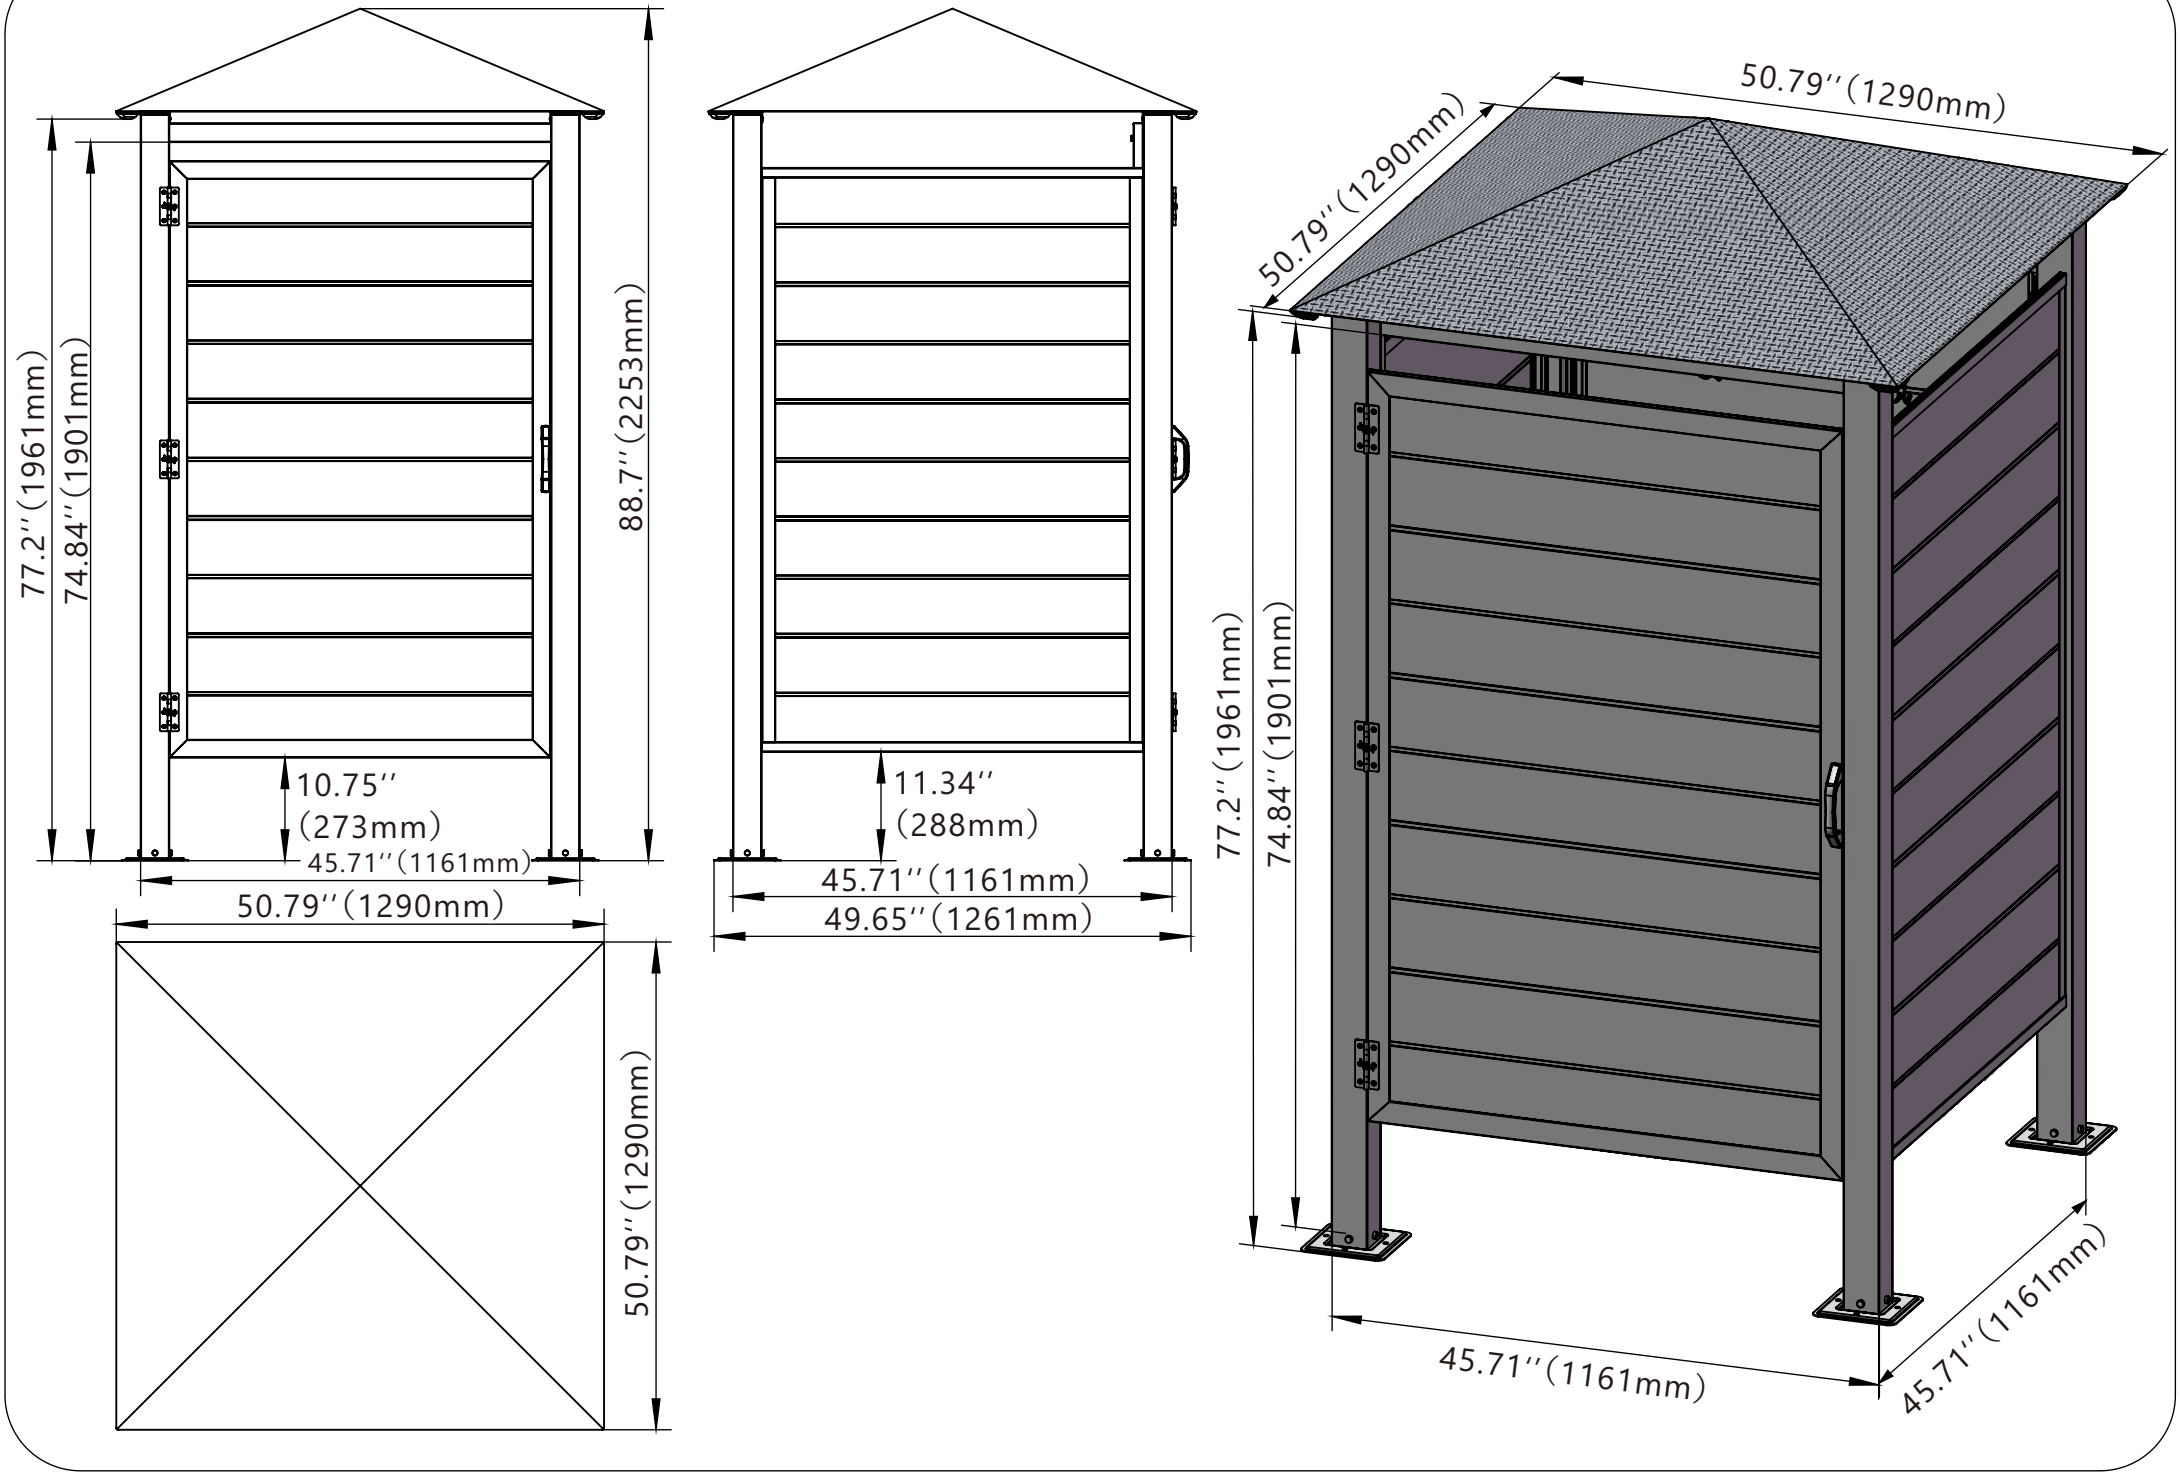
77.2''(1961mm)
74.84''(1901mm)
88.7''(2253mm)
10.75''
(273mm)
45.71''(1161mm)
50.79''(1290mm)
50.79''(1290mm)
11.34''
(288mm)
45.71''(1161mm)
49.65''(1261mm)
50.79''(1290mm)
50.79''(1290mm)
77.2''(1961mm)
74.84''(1901mm)
45.71''(1161mm)
45.71''(1161mm)

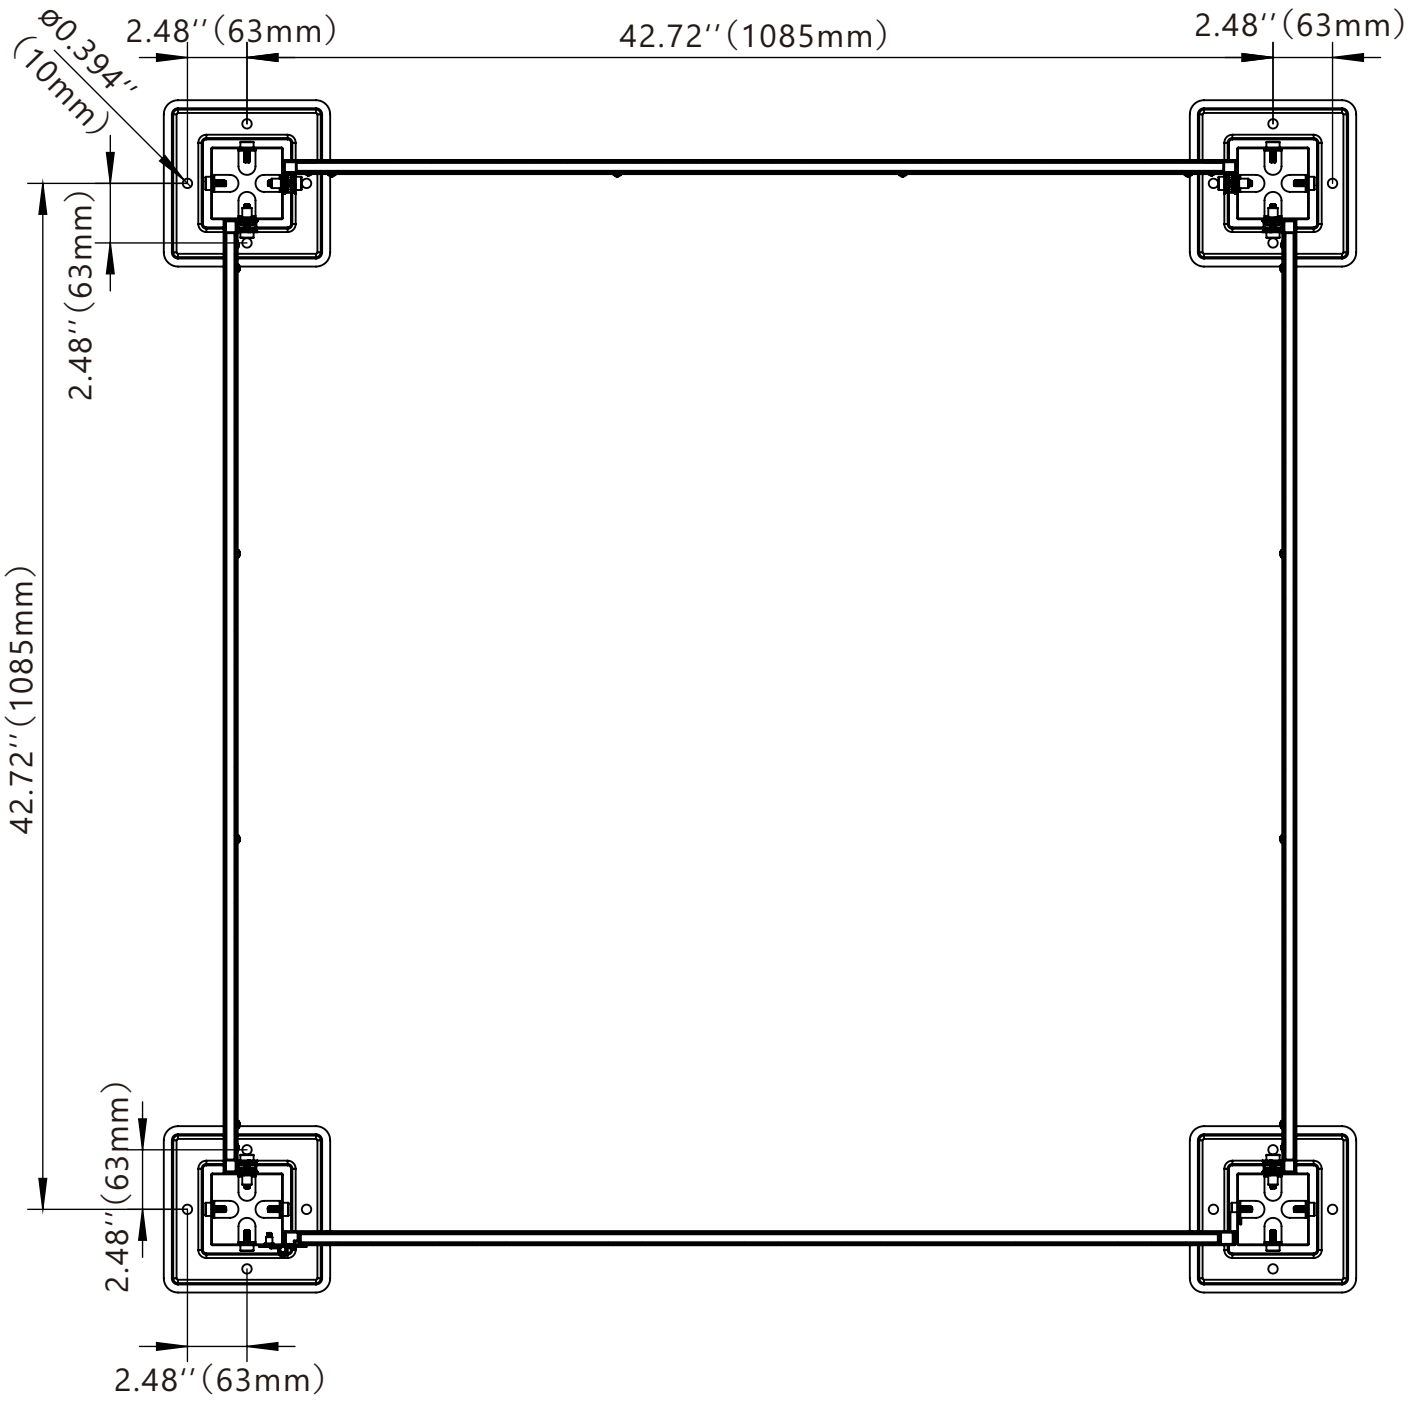
ø0.394''
(10mm)
2.48''(63mm)
42.72''(1085mm)
2.48''(63mm)
2.48''(63mm)
42.72''(1085mm)
2.48''(63mm)
2.48''(63mm)


1

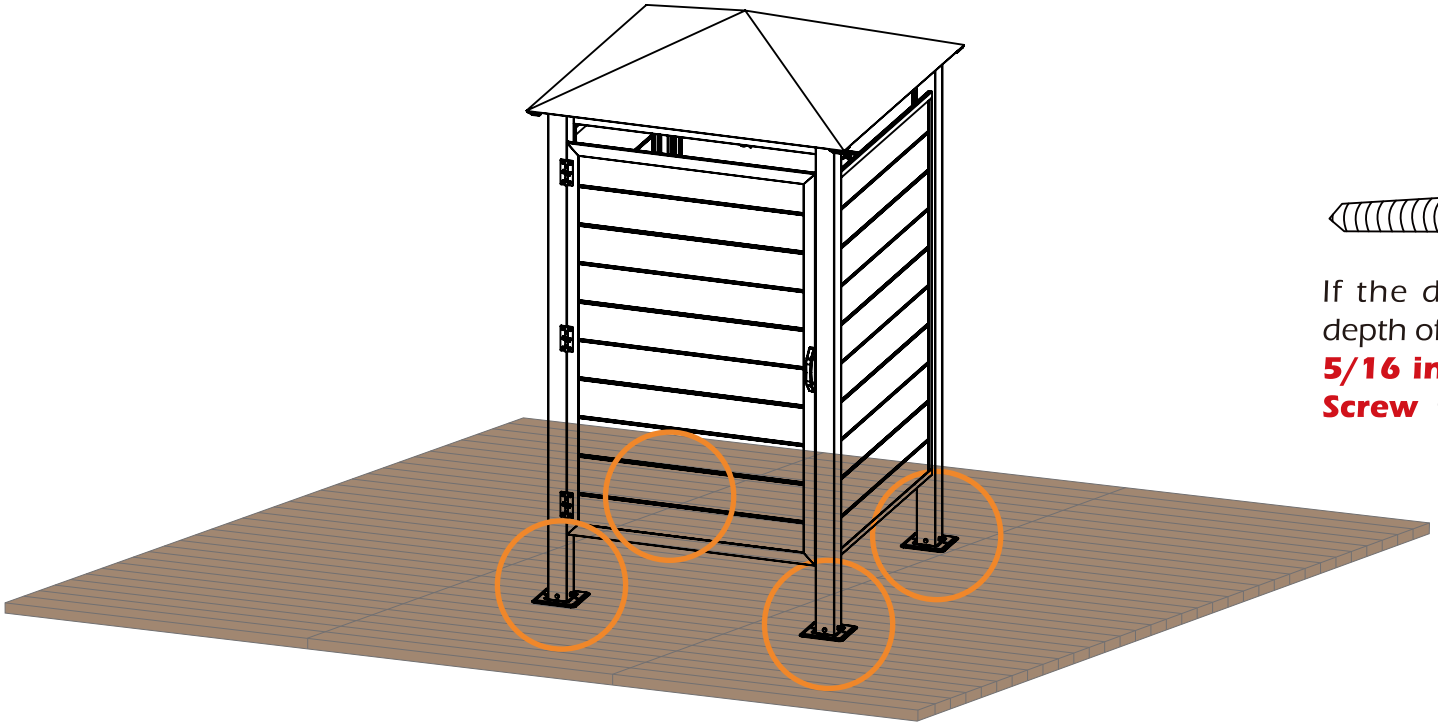





× 16


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount it.

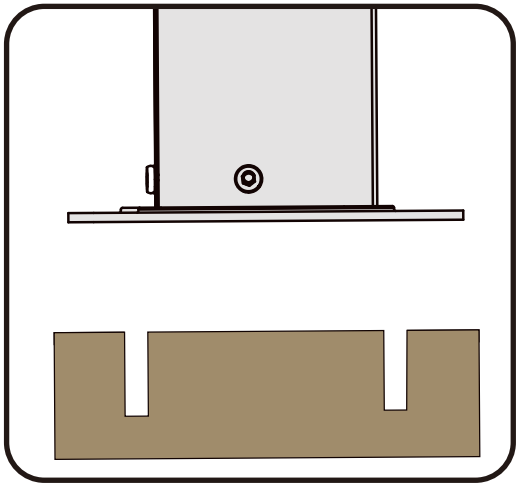

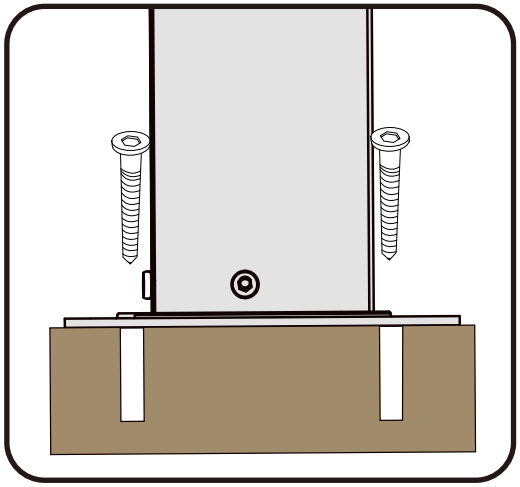


2

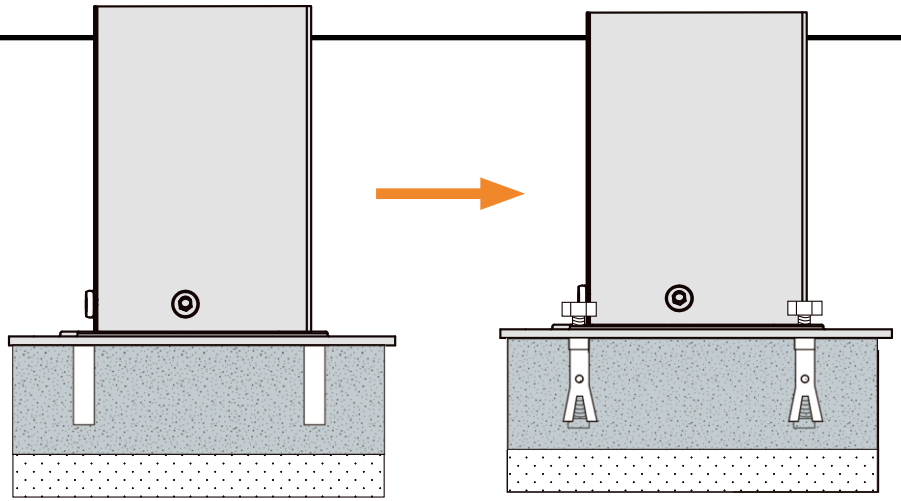

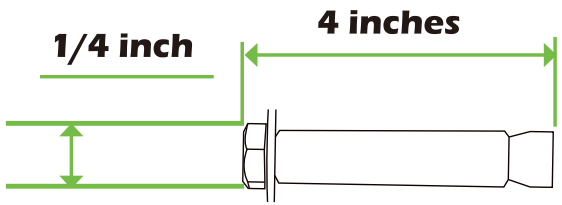


× 16


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount it.

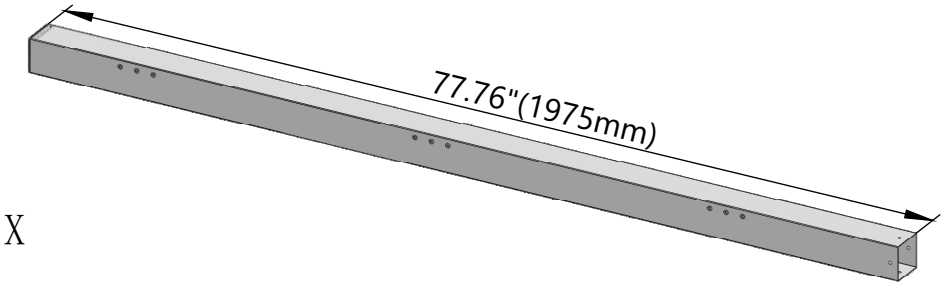


A1 1X

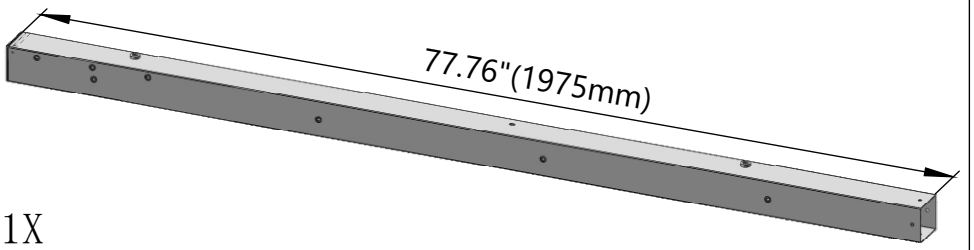

A2 1X

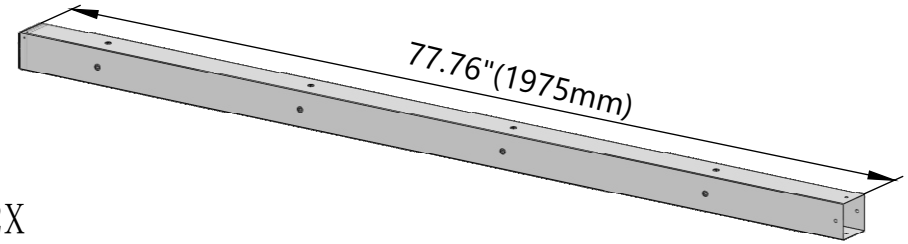


A3 2X

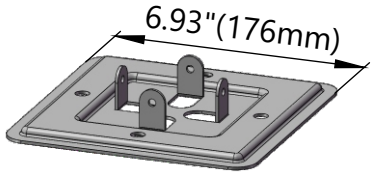


A4 4X




A5 4X

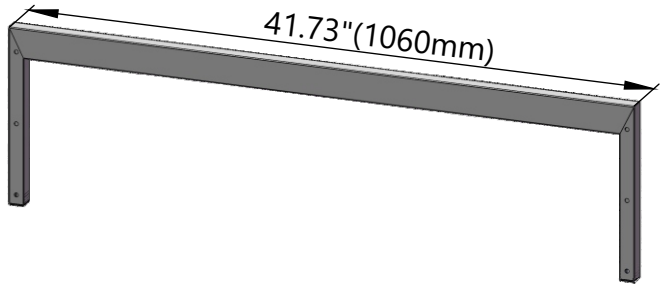


B 1X

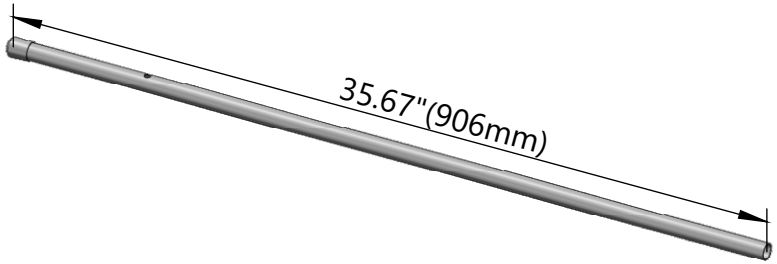


C1 4X

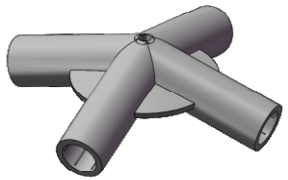


C2 1X

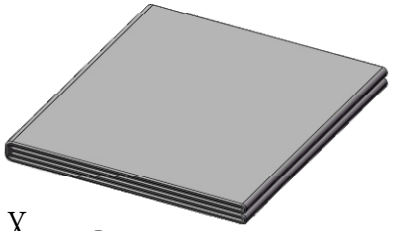


C3 1X Canopy

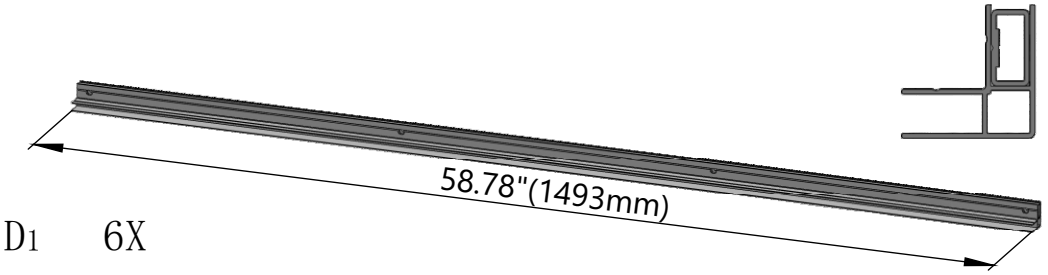


D1 6X

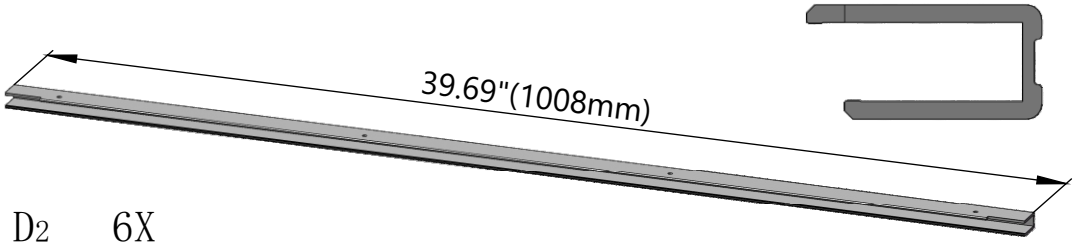


D2 6X

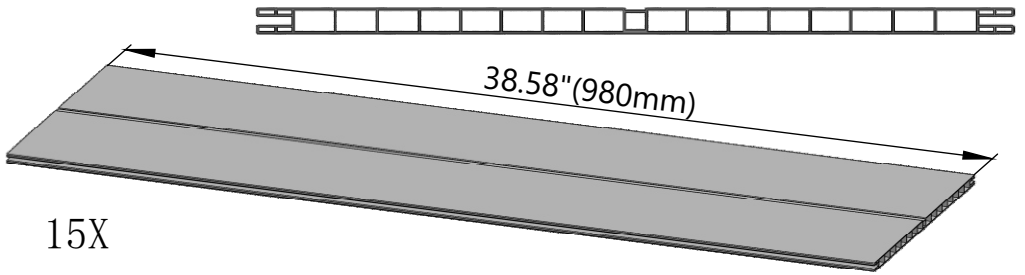


D3 15X

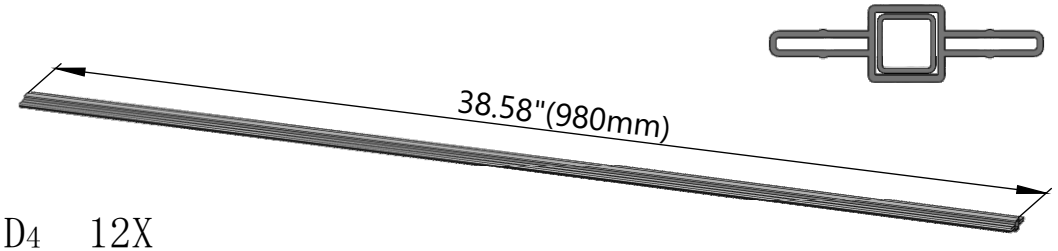


D4 12X

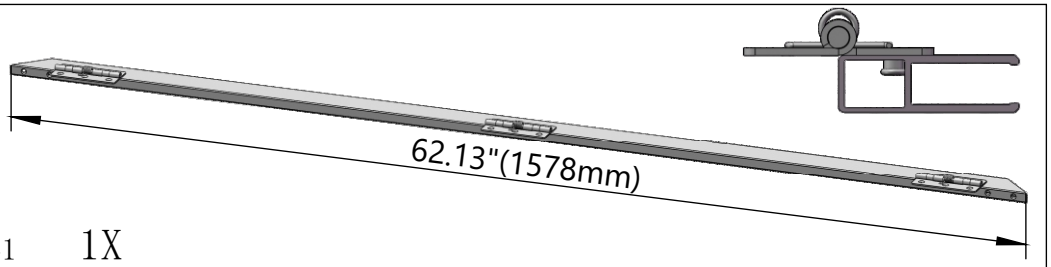


E1 1X

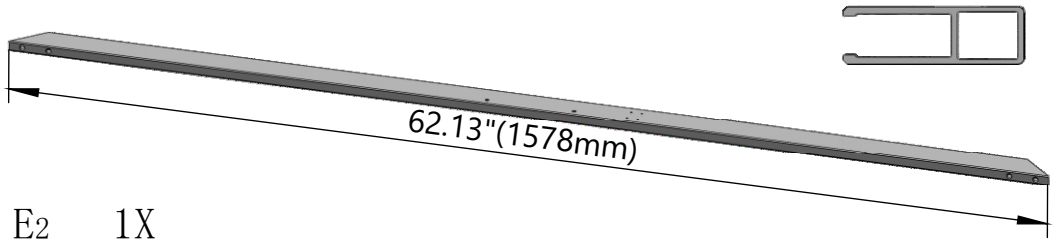


E2 1X

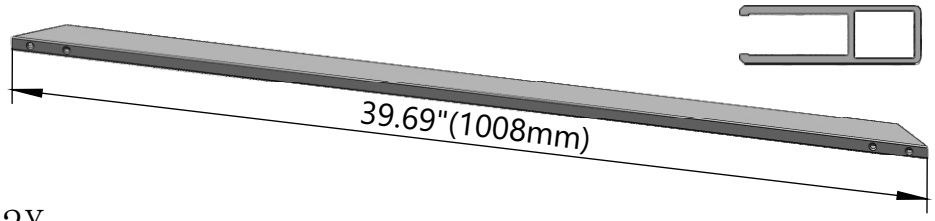


E3 2X

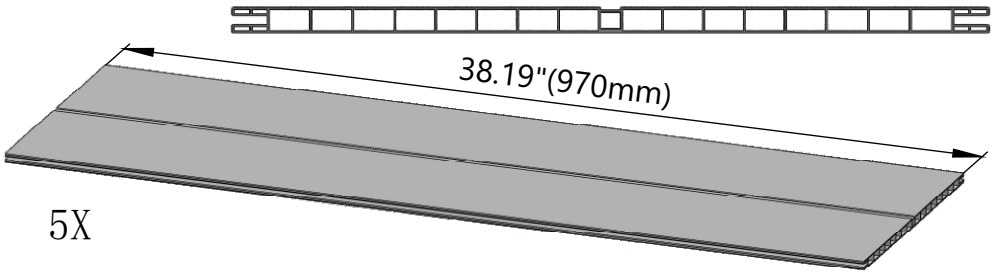

E4 5X

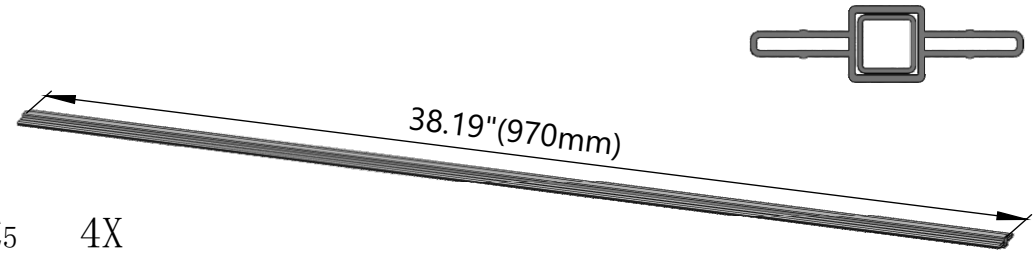


E5 4X

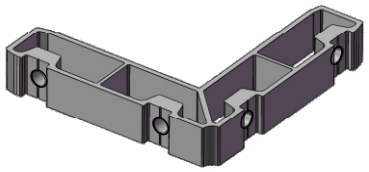


E6 4X



E7 1X

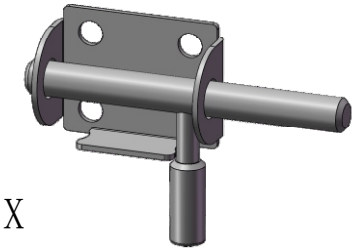









E8 1X

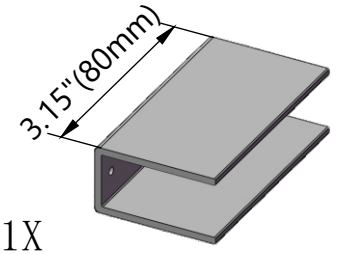

F1 1X



F2 2X

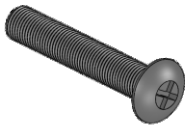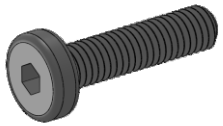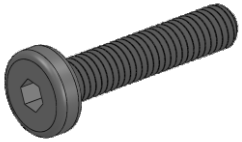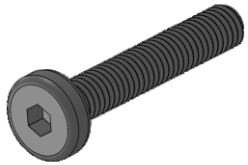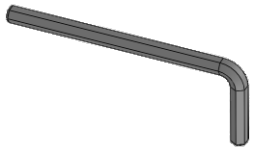 1# 4X St3.5X13	 2# 54X St4.0X10	 3# 4X St4.0X14	 4# 8X St4.8X15
 5# 25X M5X12	 6# 2X M5X28	 7# 16X M6X16	 8# 24X M6X25
 9# 4X M6X30	 10# 6X M6X35	 11# 2X M5	 12# 2X M5
 13# 4X M6	 14# 50X	 15# 1X S4	 16# 1X M5


Important Installation & Safety Notes


1 . Follow the installation steps in order.
Do not force assembly, as this may damage components .

2 . Two people are required for mode conversion .
Applying force to only one side can cause parts to deform .


3 . For outdoor use, regularly check and tighten all bolts to extend the product ’s service life .


4 .The plastic cover (Part 14#) can be placed over the bolts after all assembly steps are completed.

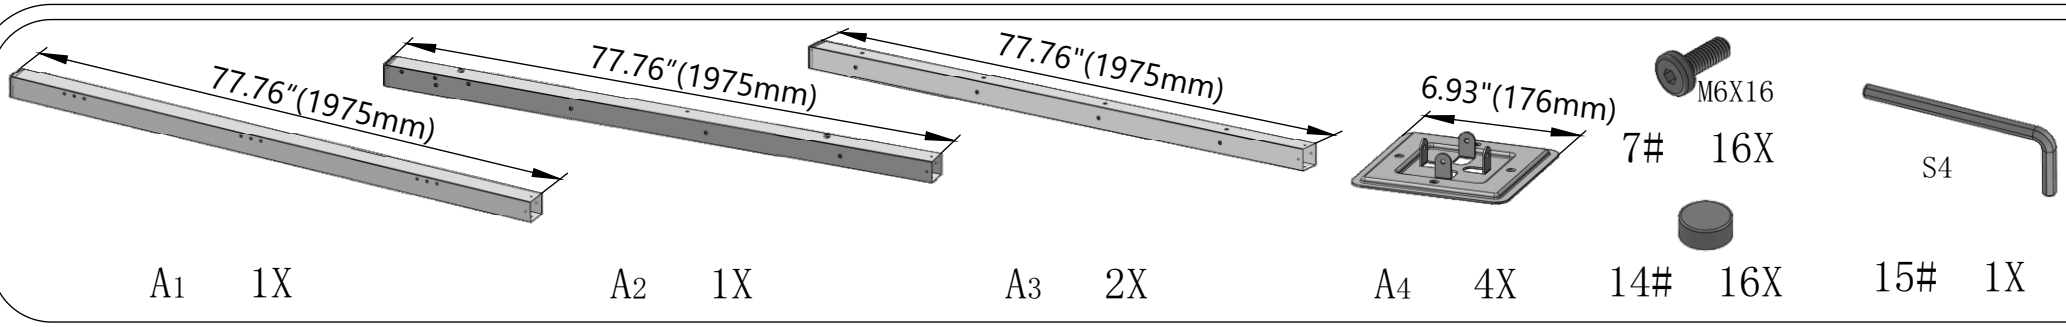
77.76"(1975mm)
77.76"(1975mm)
77.76"(1975mm)
6.93"(176mm)
M6X16
7# 16X
S4
A1 1X
A2 1X
A3 2X
A4 4X
14# 16X
15# 1X

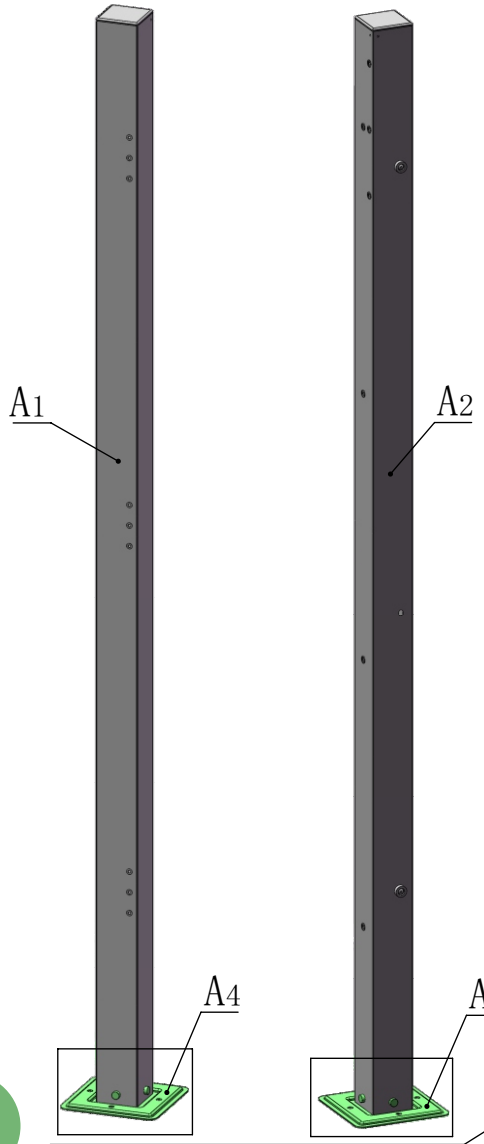
A1
A4

A2
A4

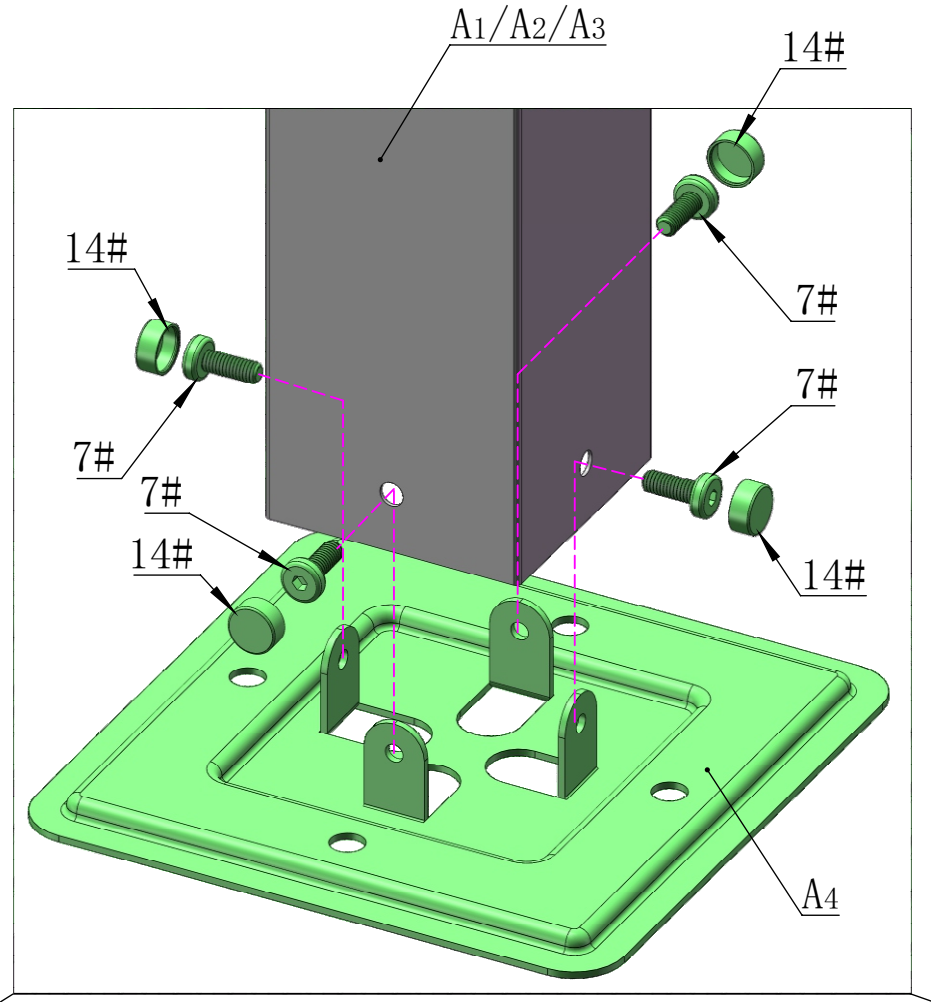
A1/A2/A3
14#
14#
7#
7#
7#
7#
14#
14#
A4

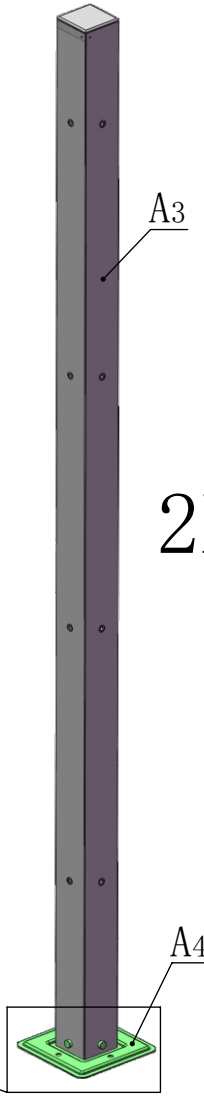

A3
A4

2X

1





A5 4X




St4.8X15

4# 8X

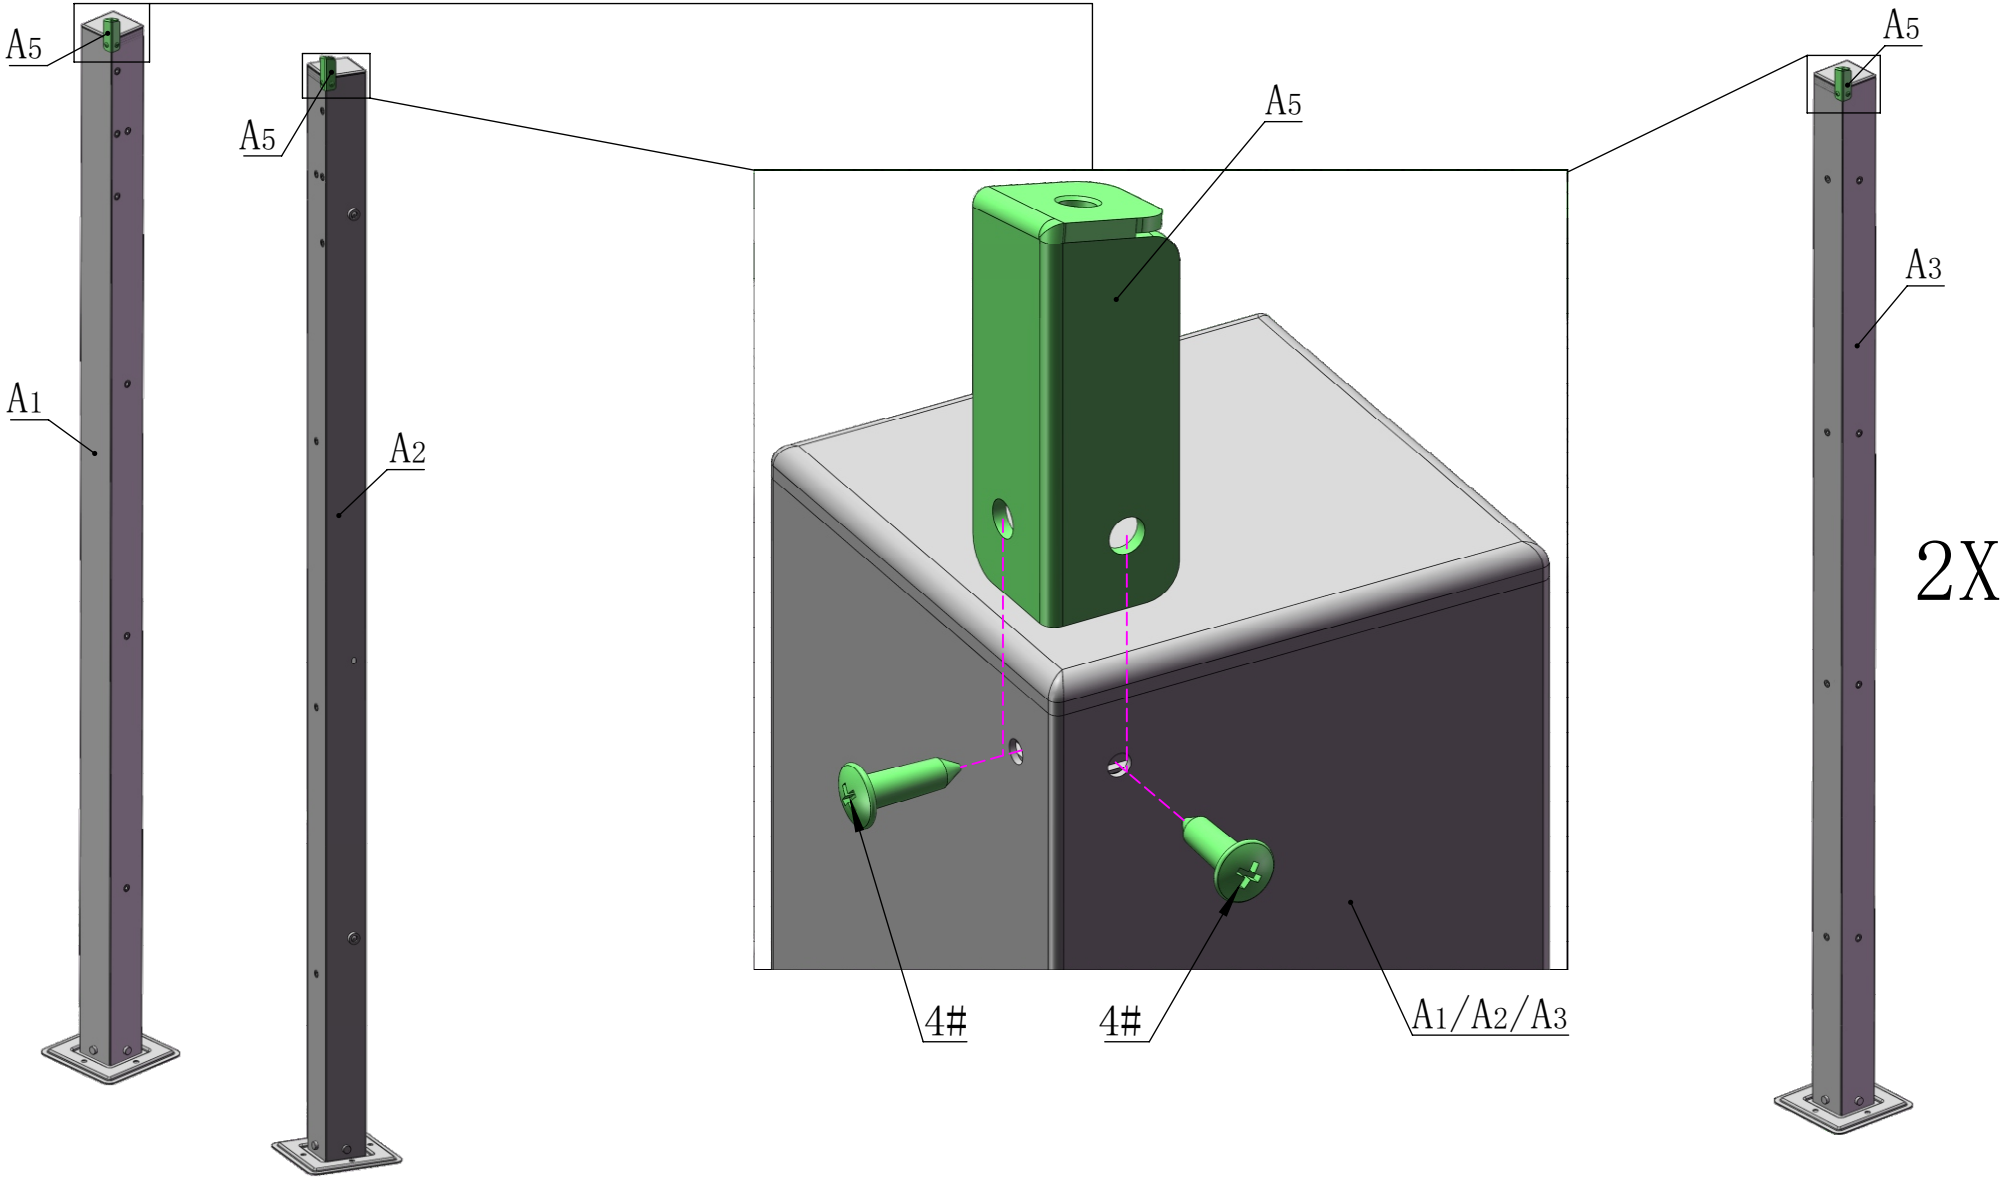


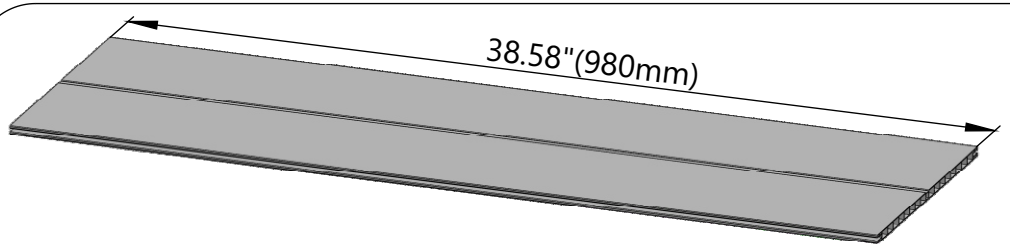

D3 15X

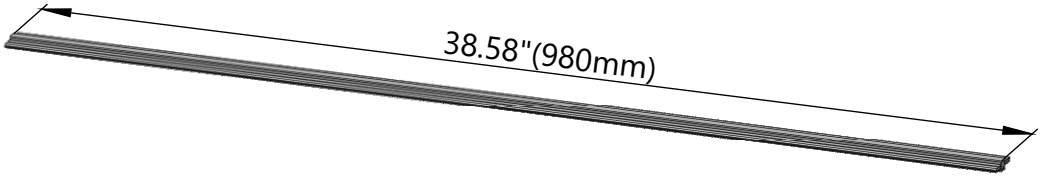



D4 12X

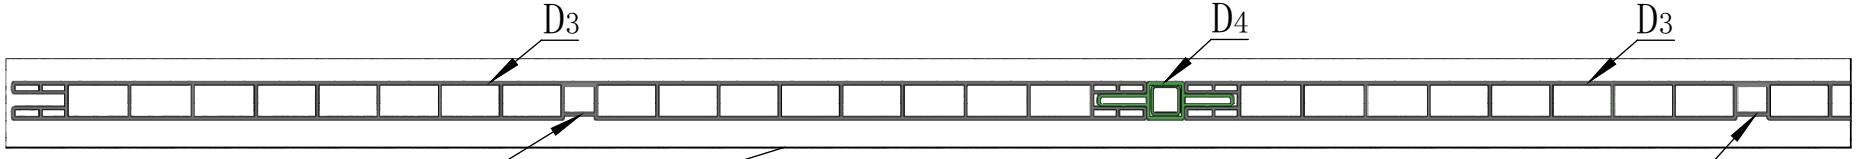


NOTE: Each wall panel has decorative grooves on one side. Install all panels with decorative grooves facing the same direction.



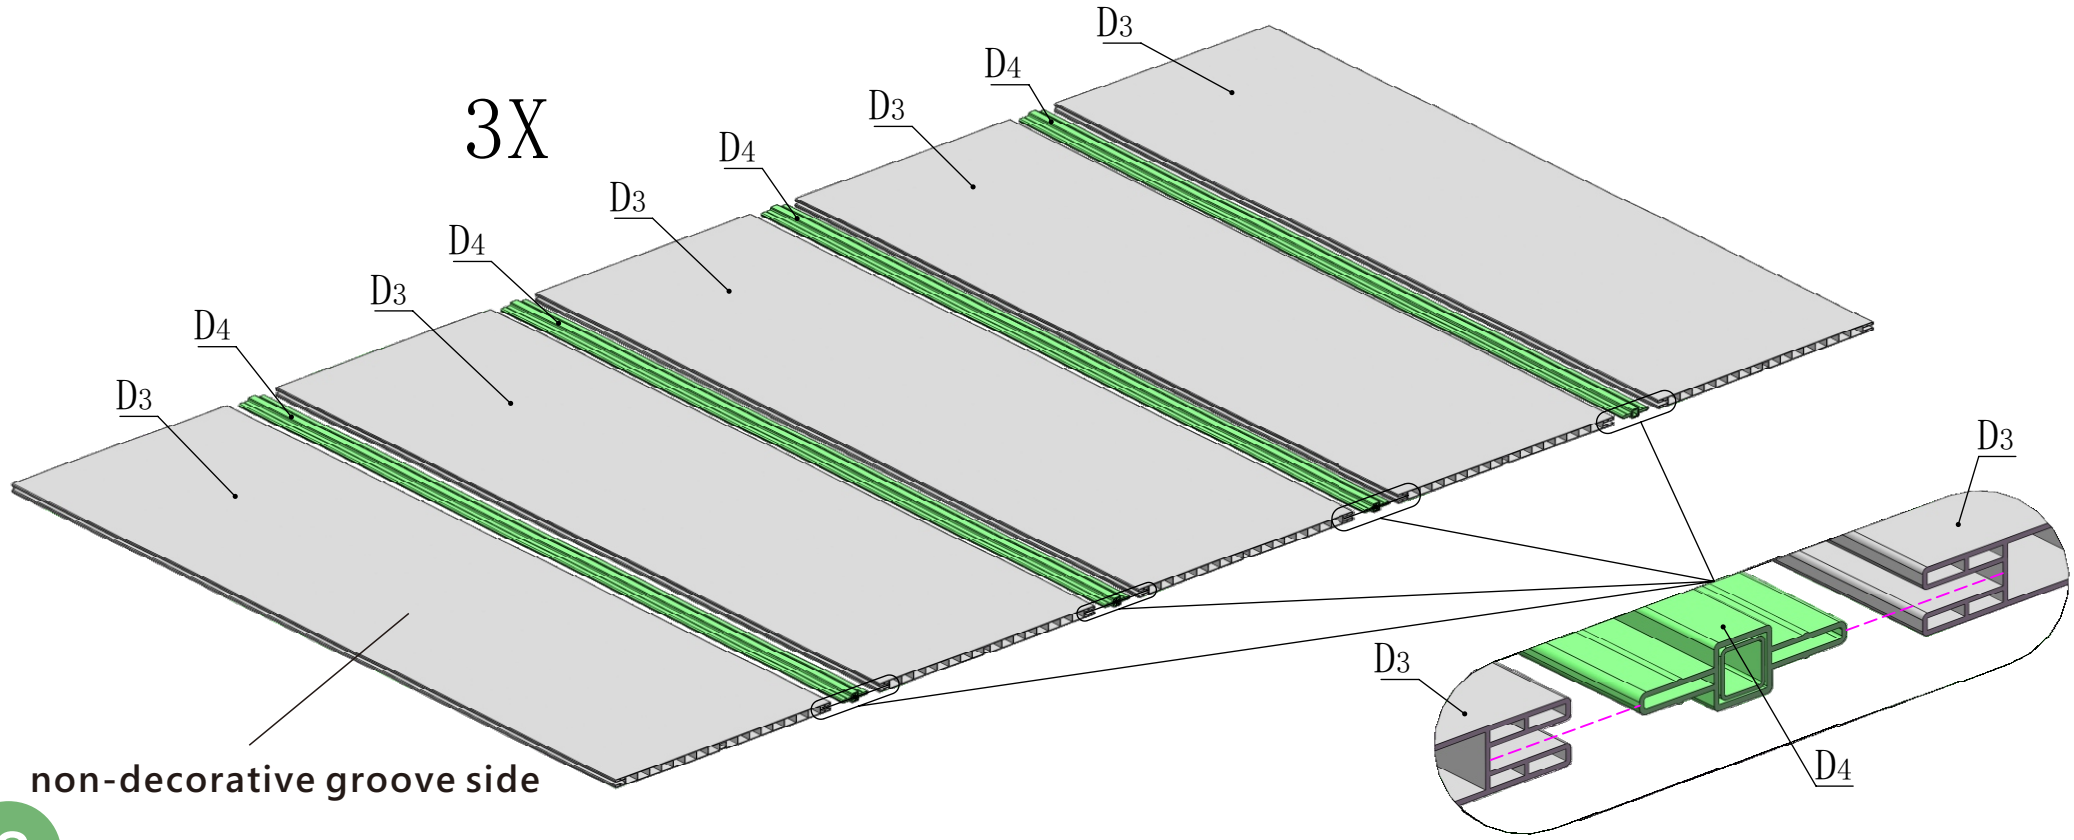

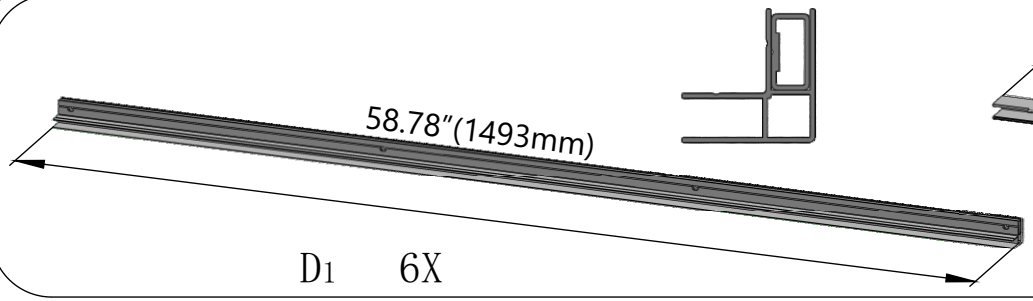



D1 6X

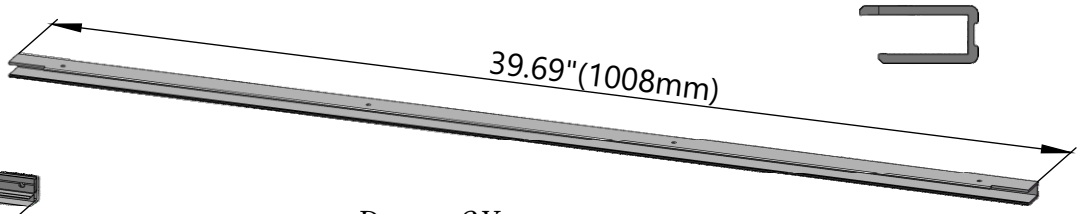

D2 6X


NOTE: Measure diagonals to confirm wall panel frame is square before fastening screws.

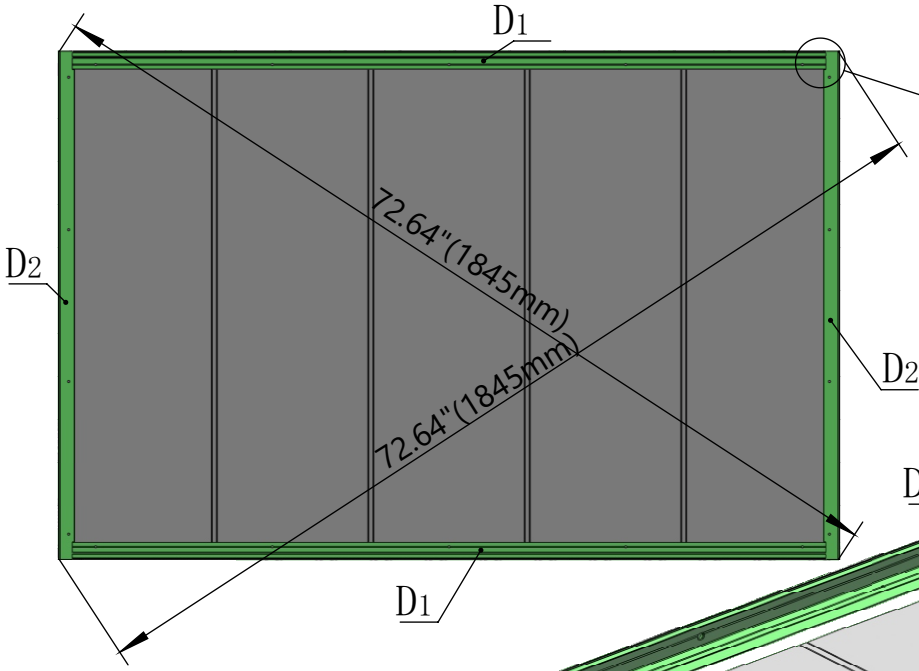

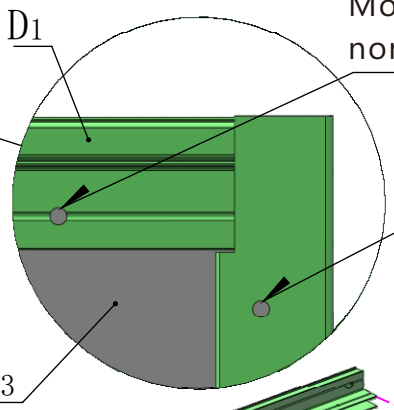

Mount the perforated side of (D1) flush with the non-decorative groove side of wall panel (D3).

Mount the perforated side of (D2) flush with the non-decorative groove side of wall panel (D3).

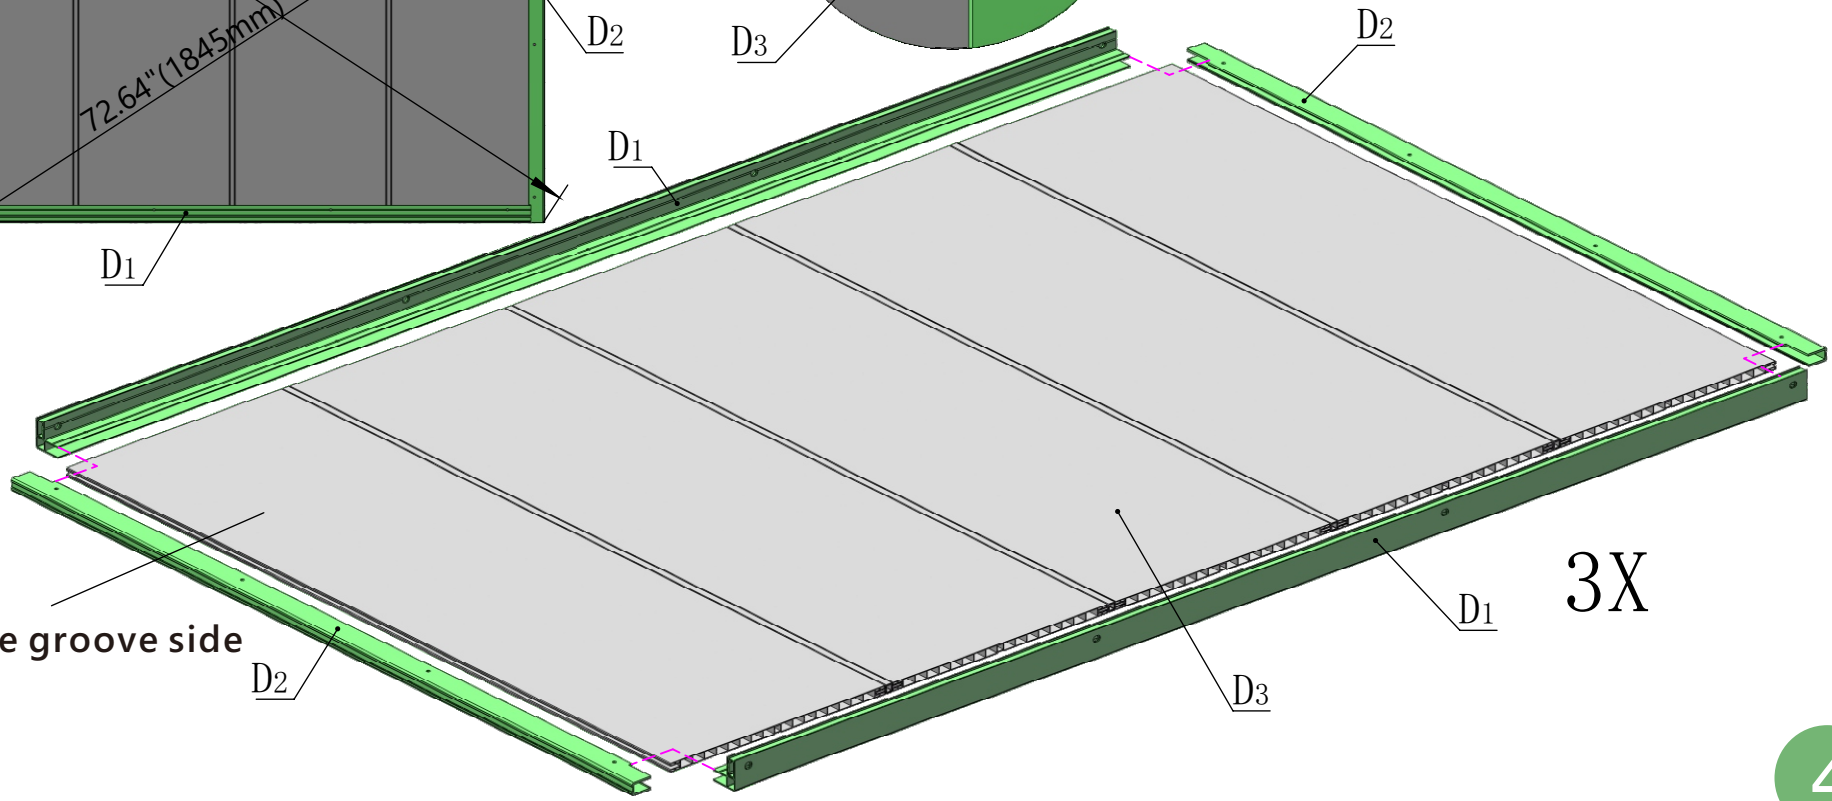



3X



St4.0X10


2# 54X

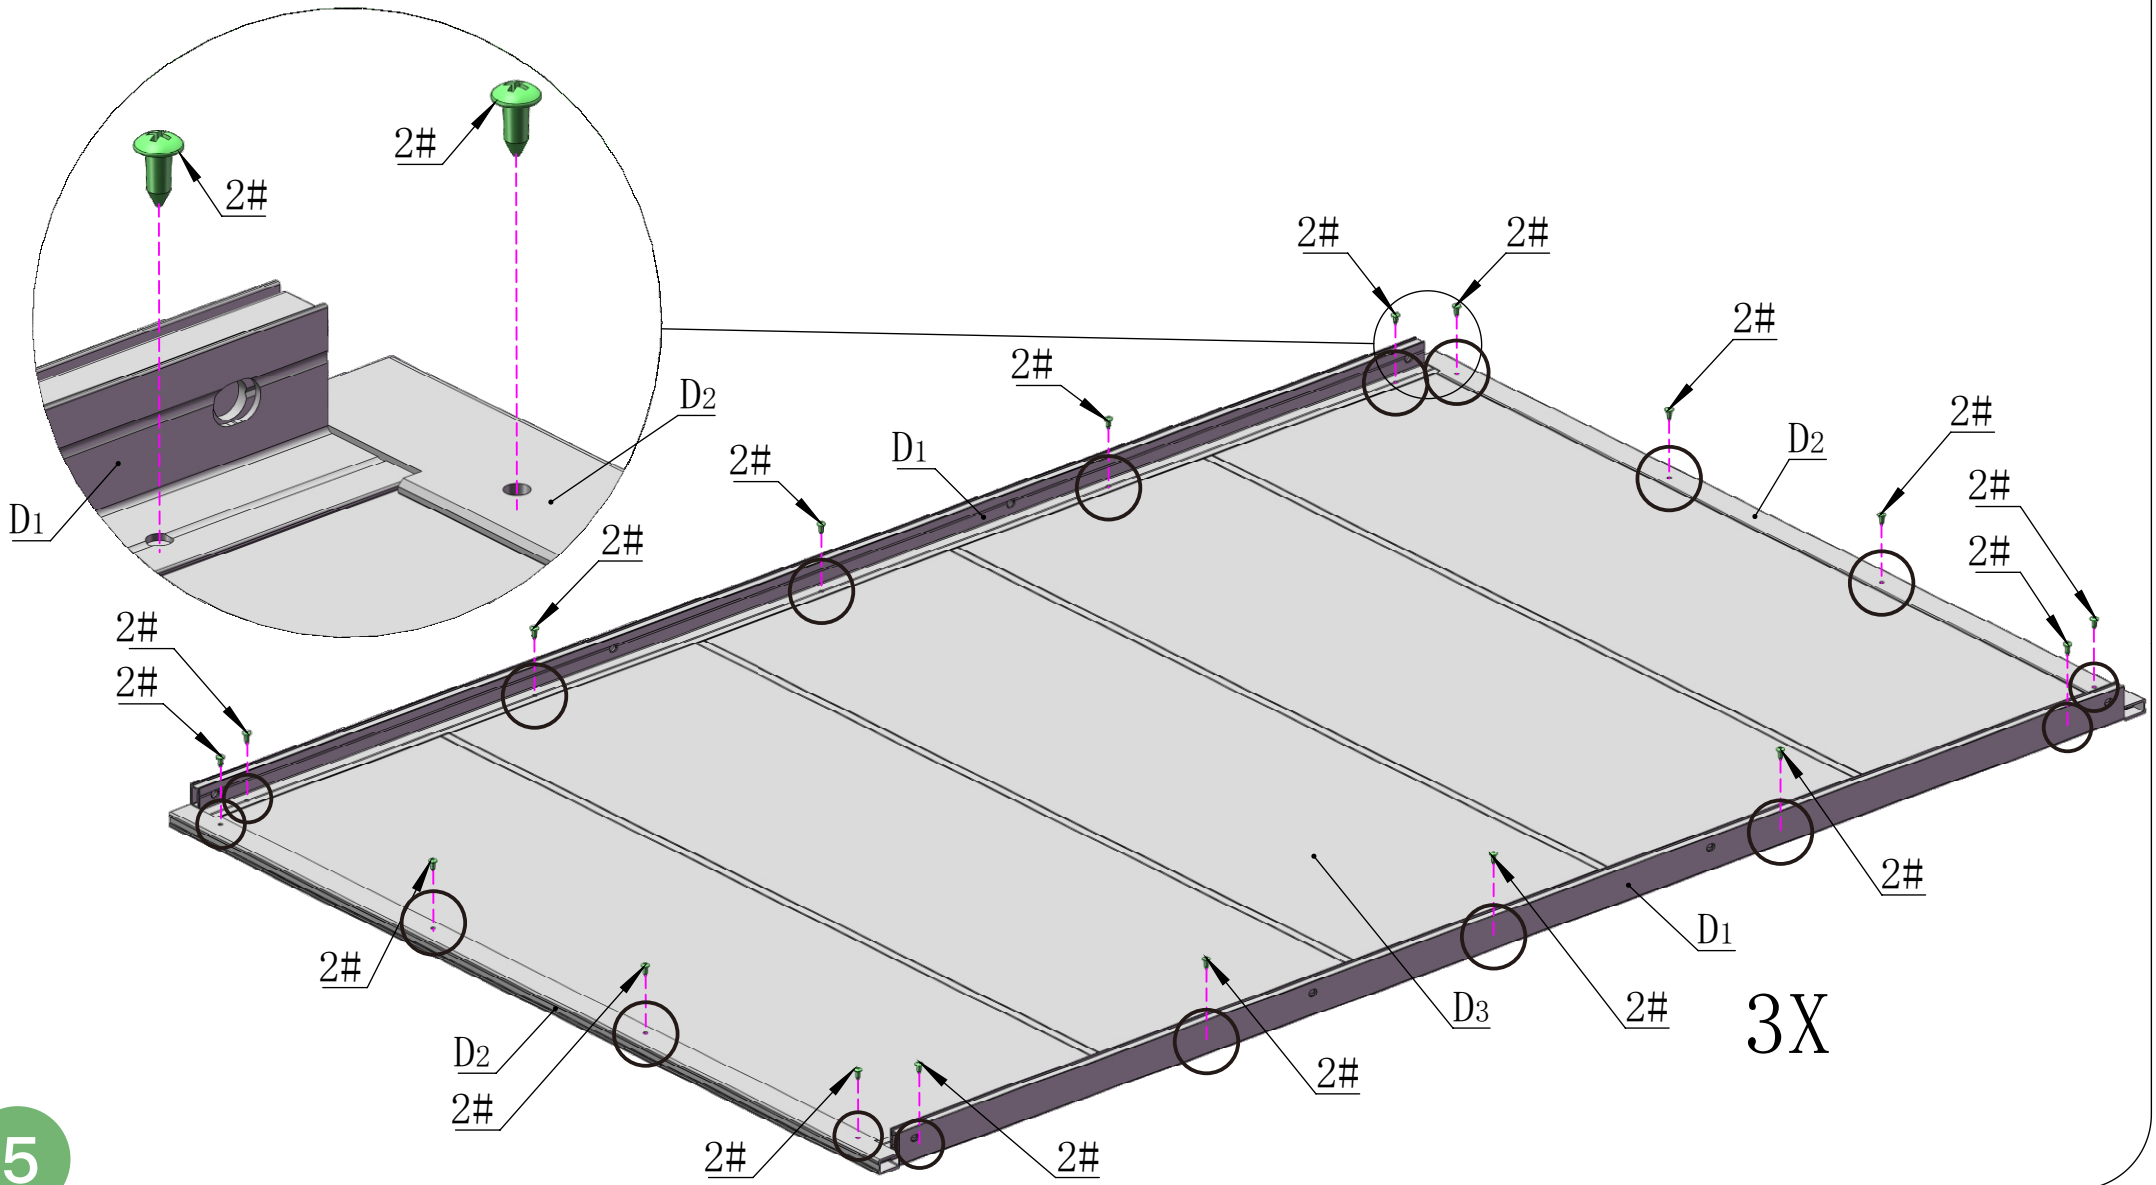

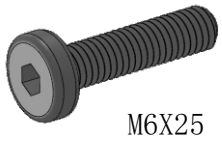


M6X25

8# 8X





14# 8X

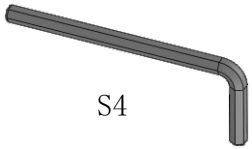

S4

15# 1X

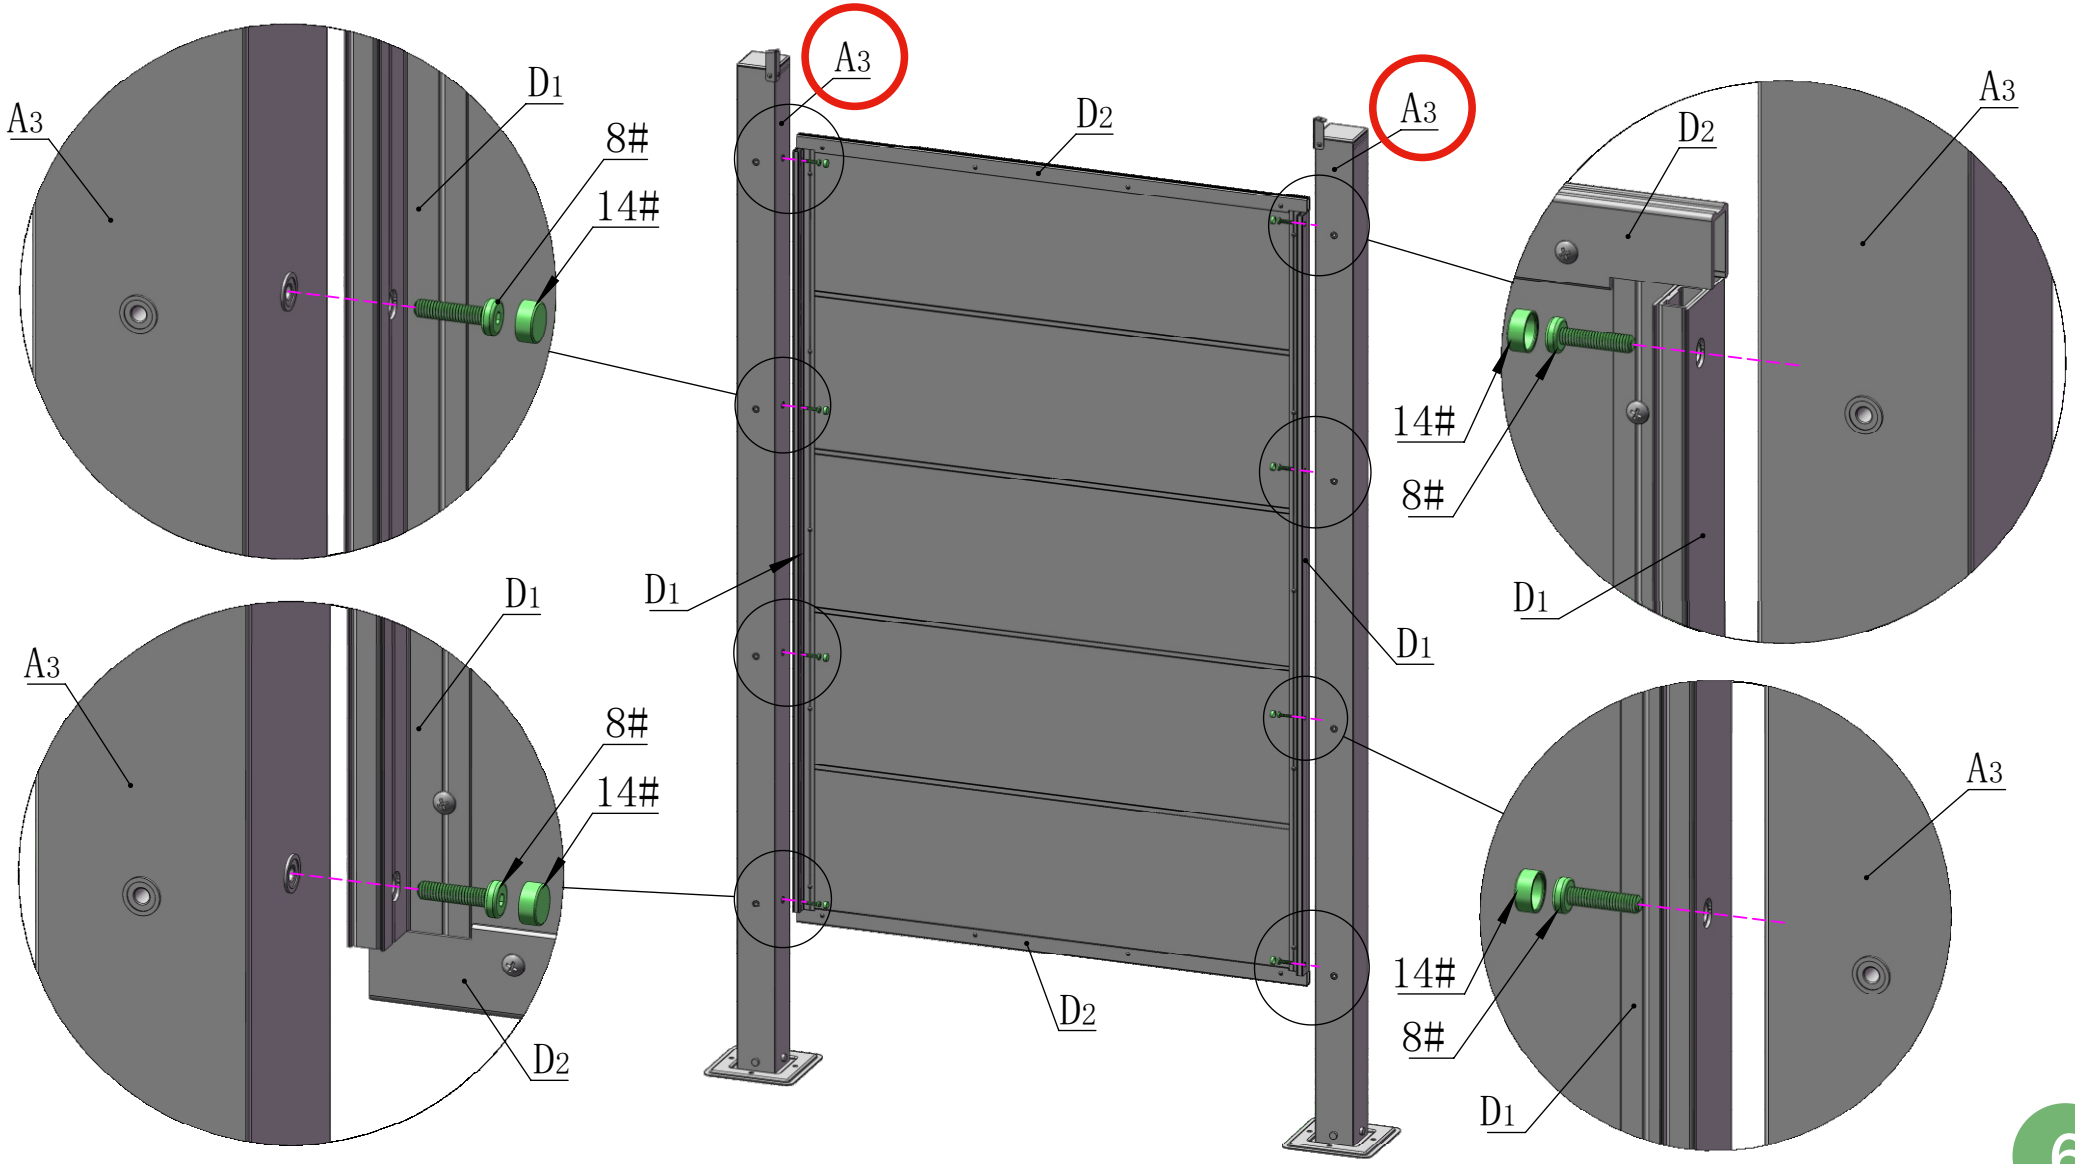

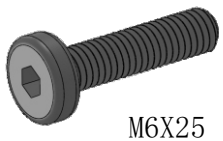


M6X25

8# 8X





14# 8X

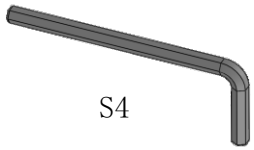

S4

15# 1X

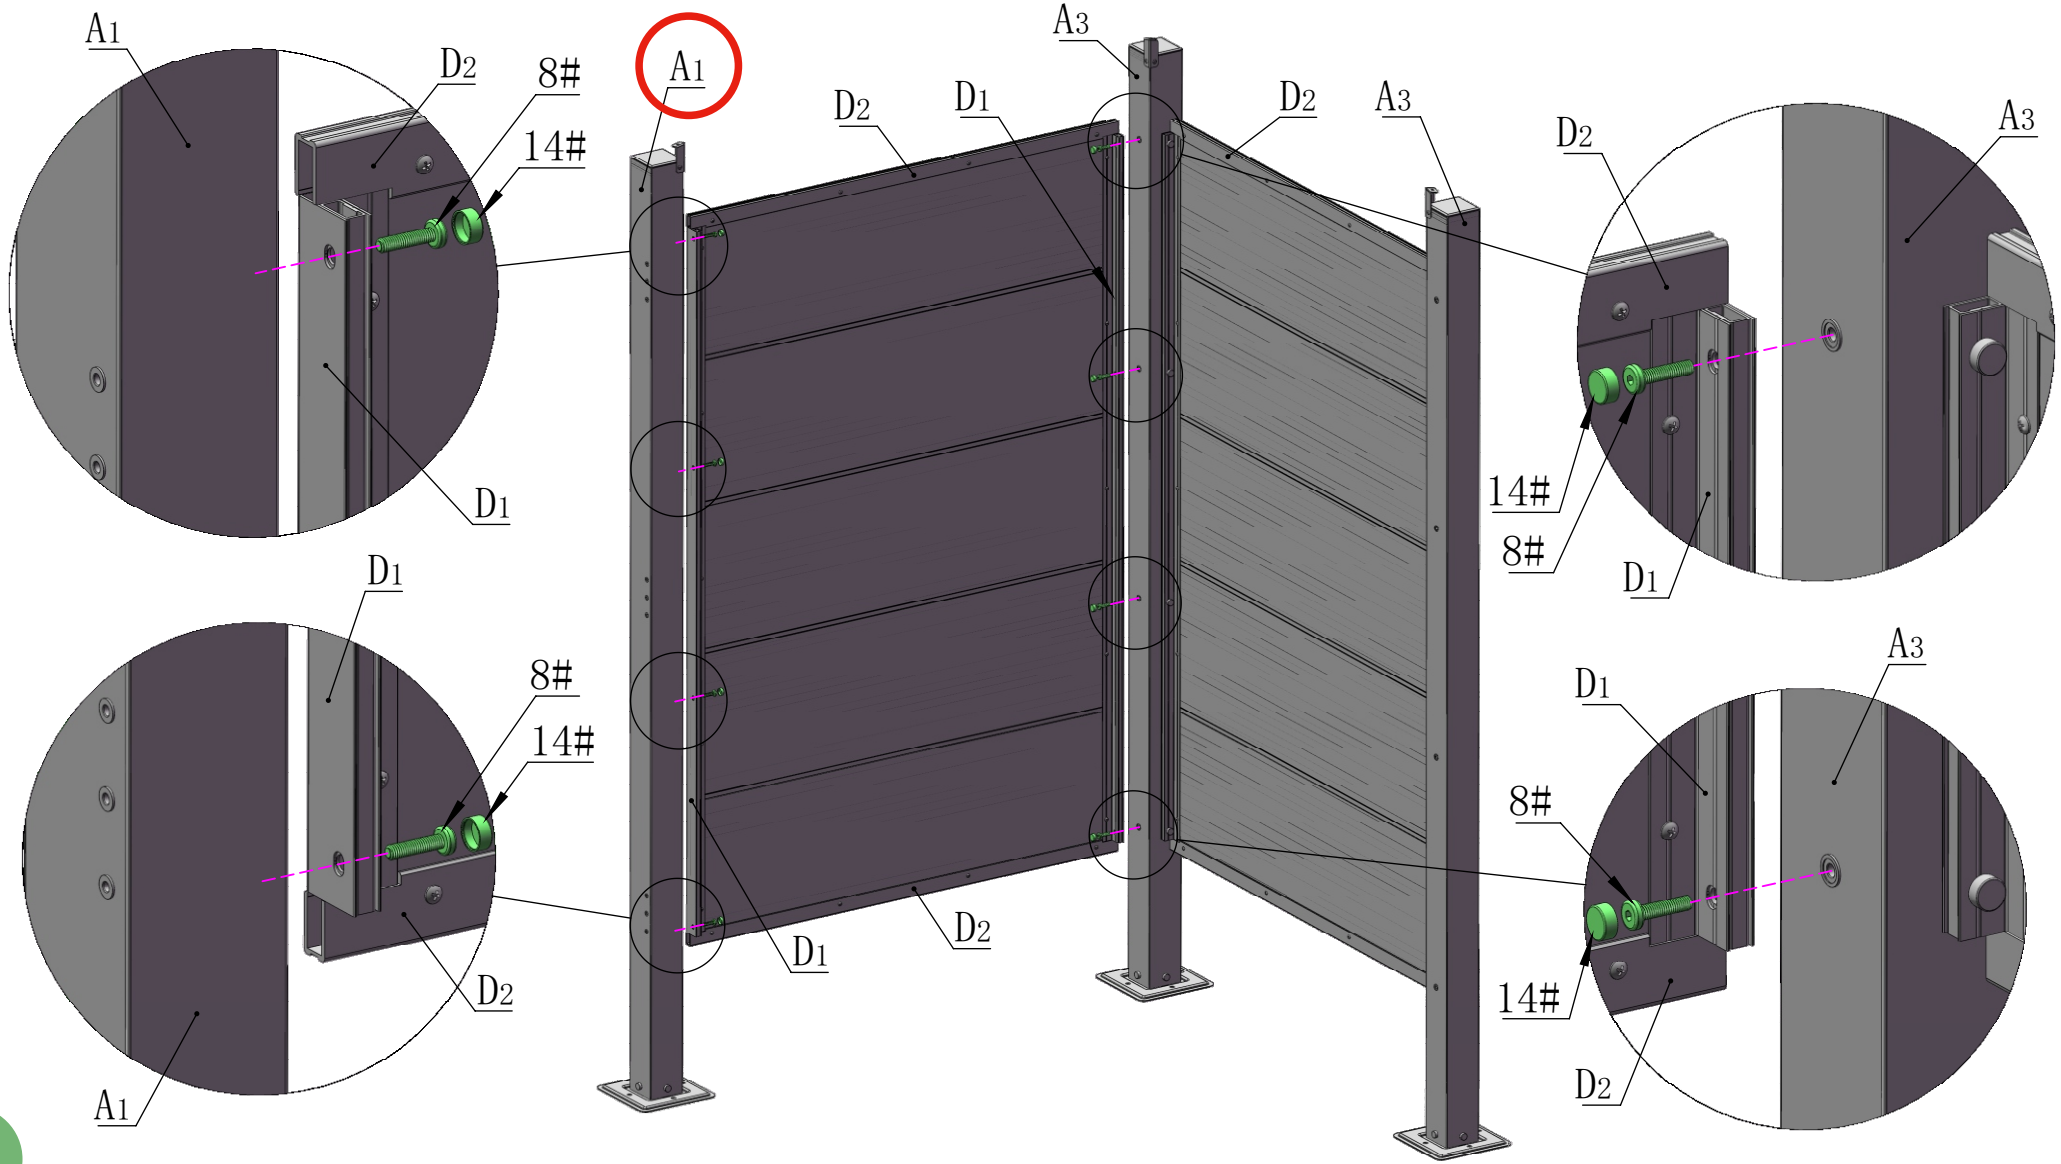


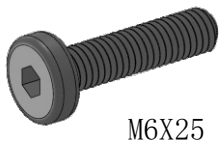


8# 8X




14# 8X

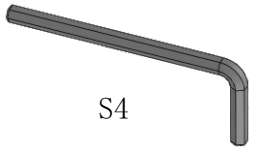


15# 1X

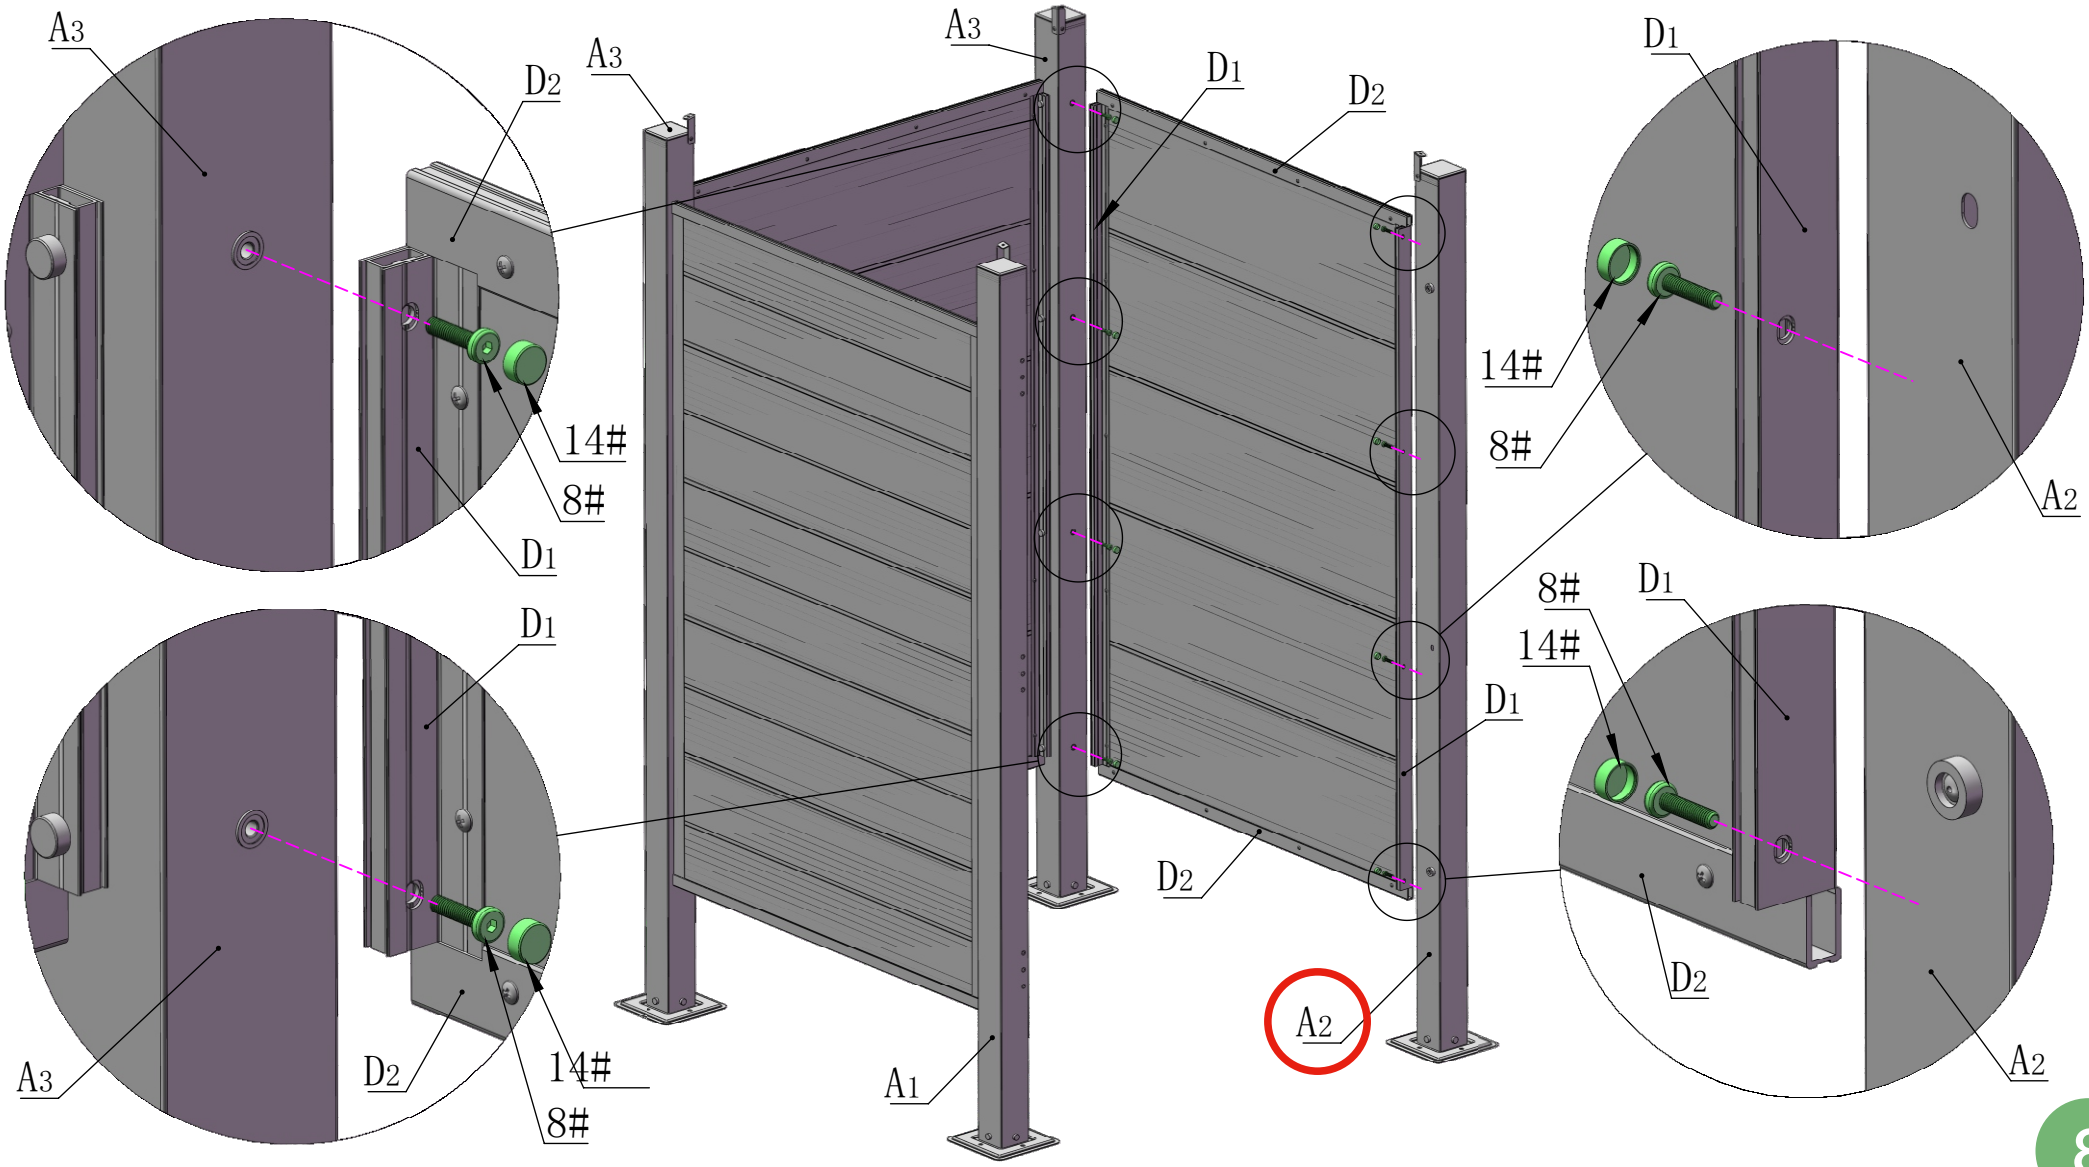


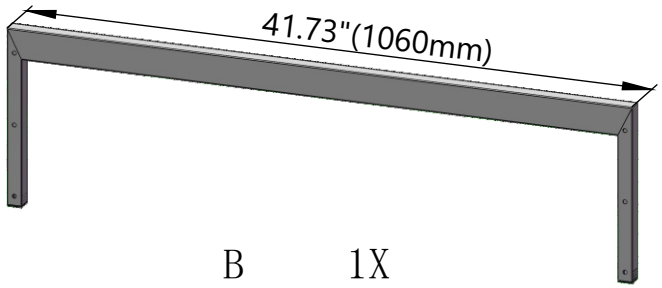


B 1X

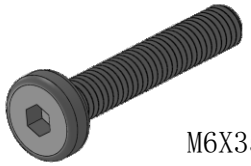


10# 6X



14# 6X

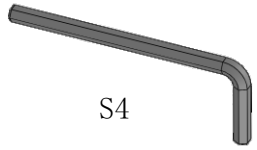

15# 1X

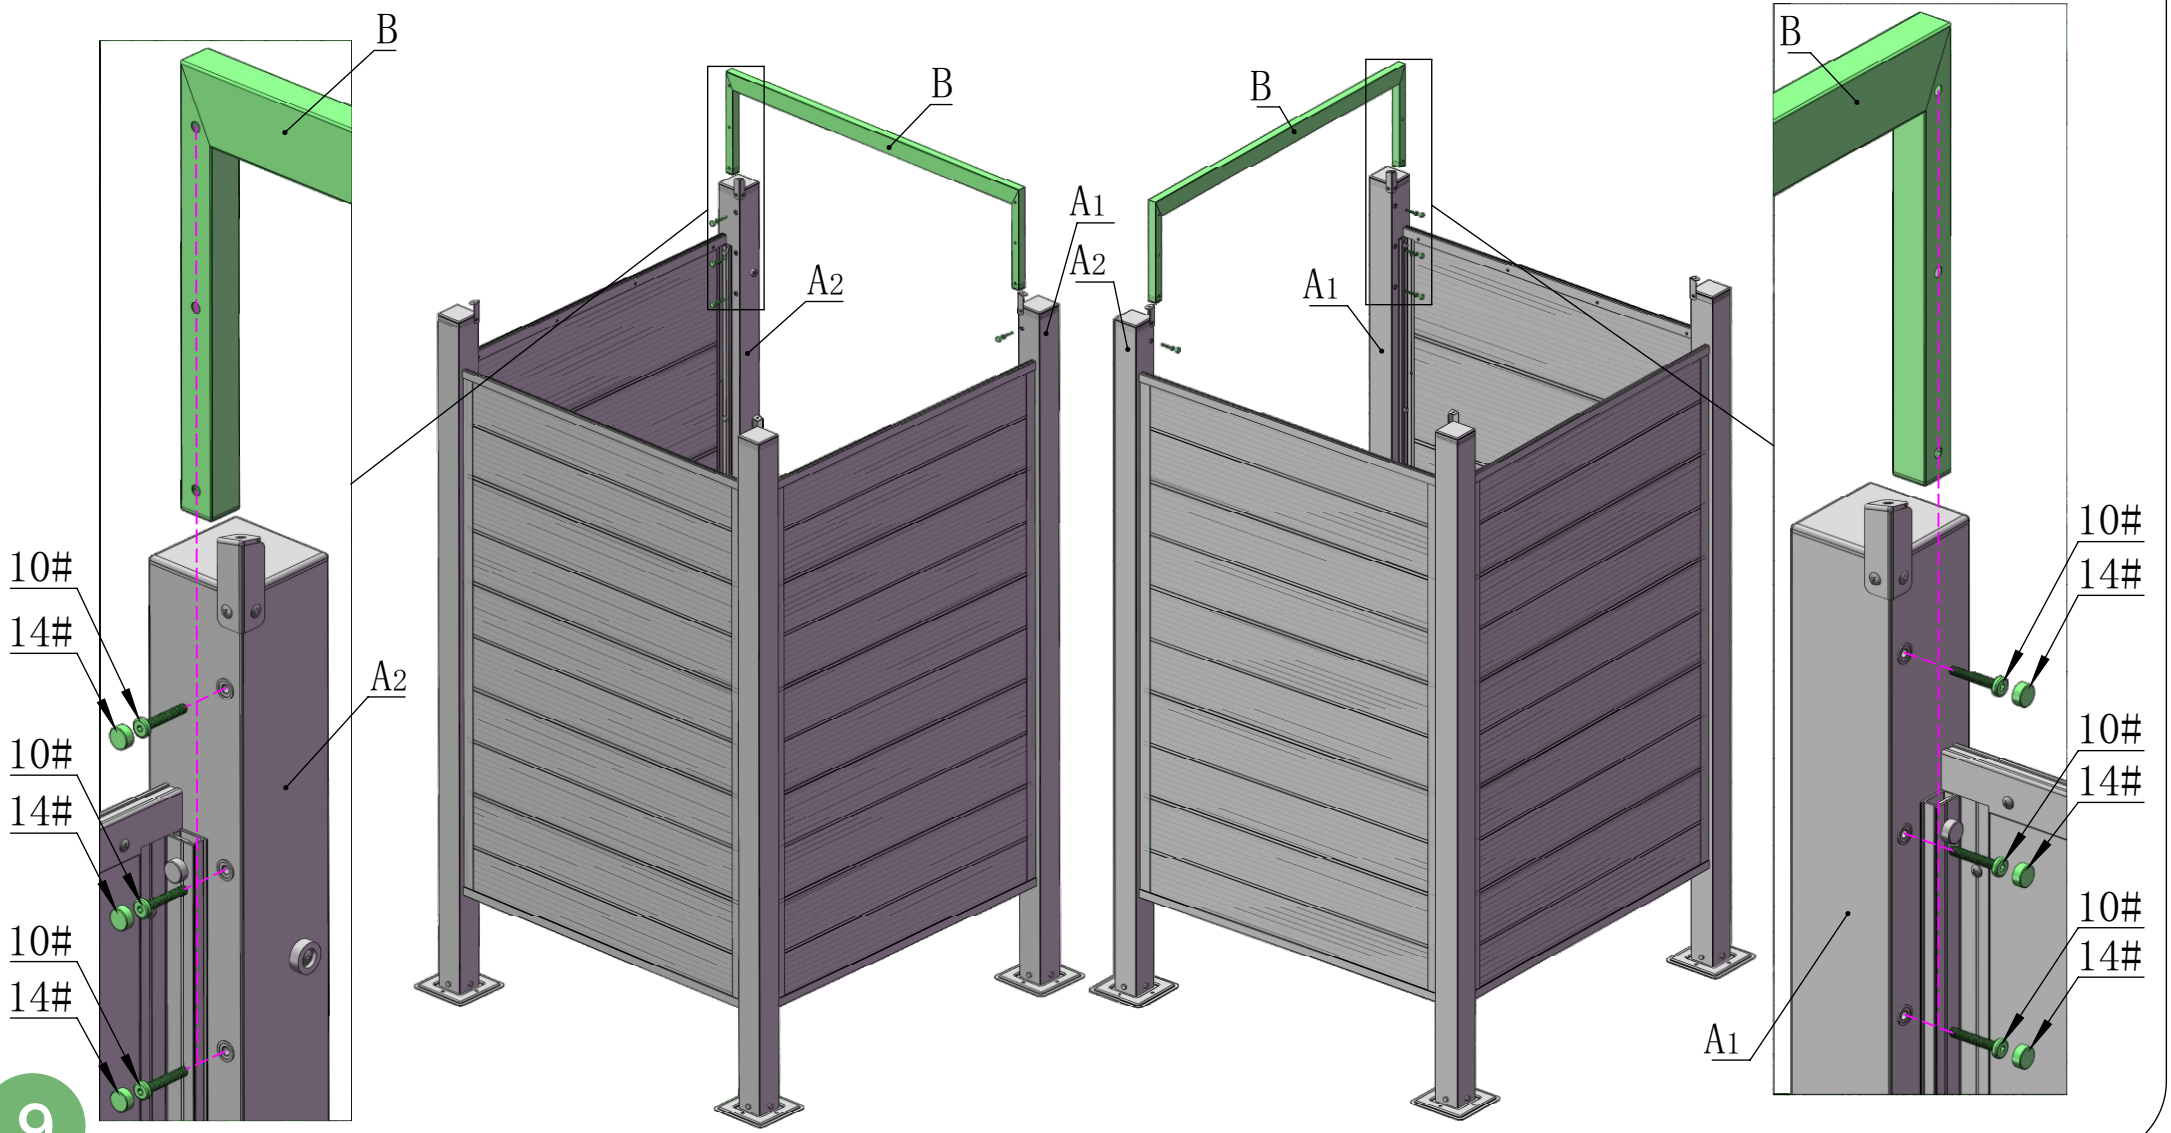




F2 2X




St4.0X14

3# 4X

NOTE: The maximum load capacity of hook (F2) is 5 lbs

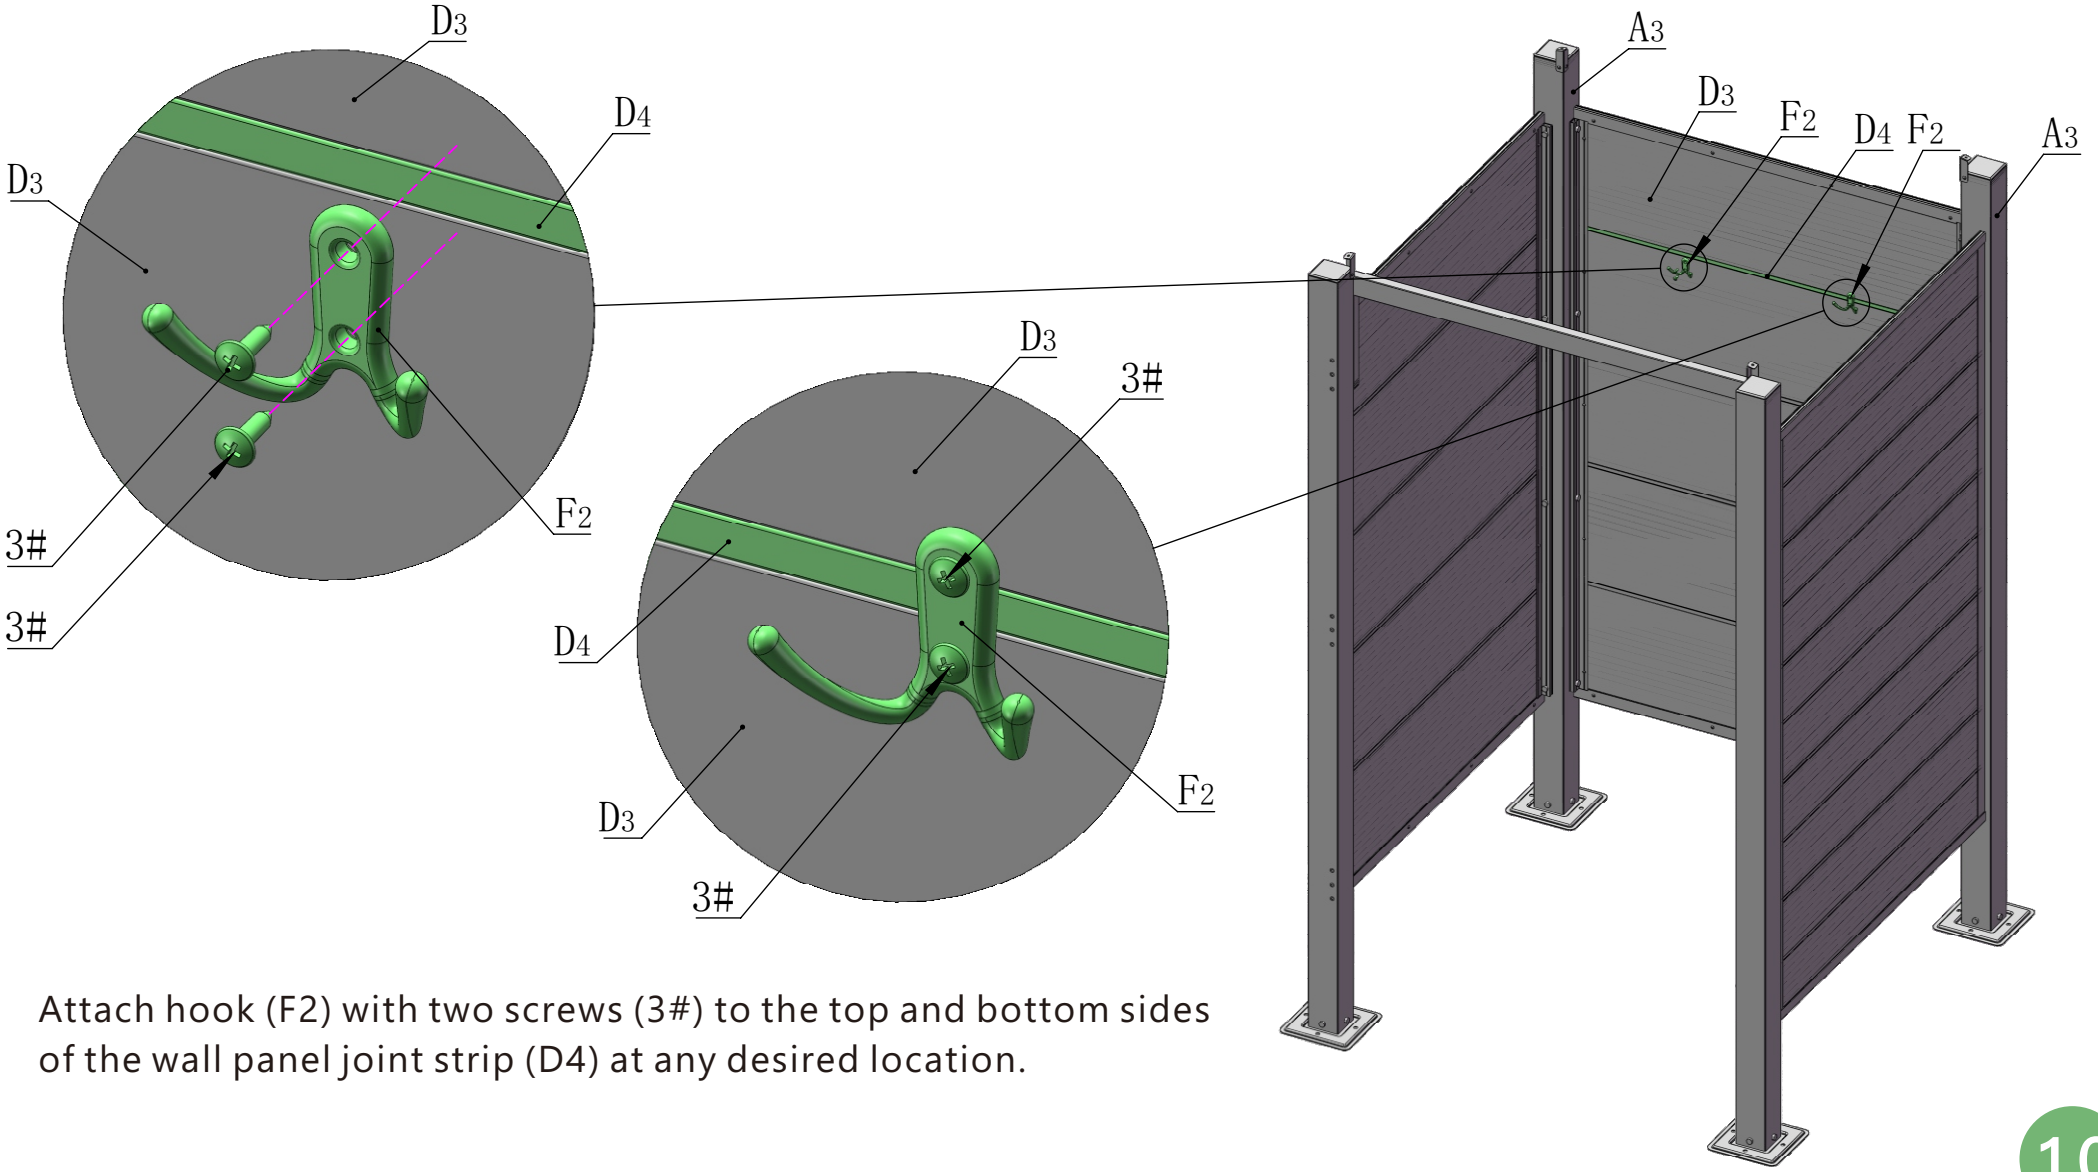

Attach hook (F2) with two screws (3#) to the top and bottom sides of the wall panel joint strip (D4) at any desired location.

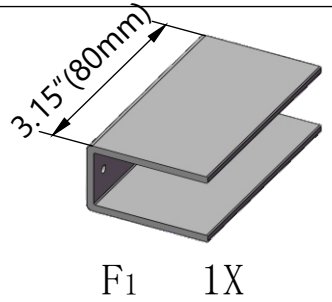


F1 1X


NOTE: The maximum load capacity of the wall panel is 33 lbs (please take the weight of the shower head into consideration).


Skip this step if no shower head is to be installed.
This step also can be performed later.

To install the wall-mounted showerhead, drill through-hole on part (F1) and secure it to the wall panel frame (D2) to mount the showerhead bracket. You may need to prepare bolts and nuts to secure the showerhead bracket.

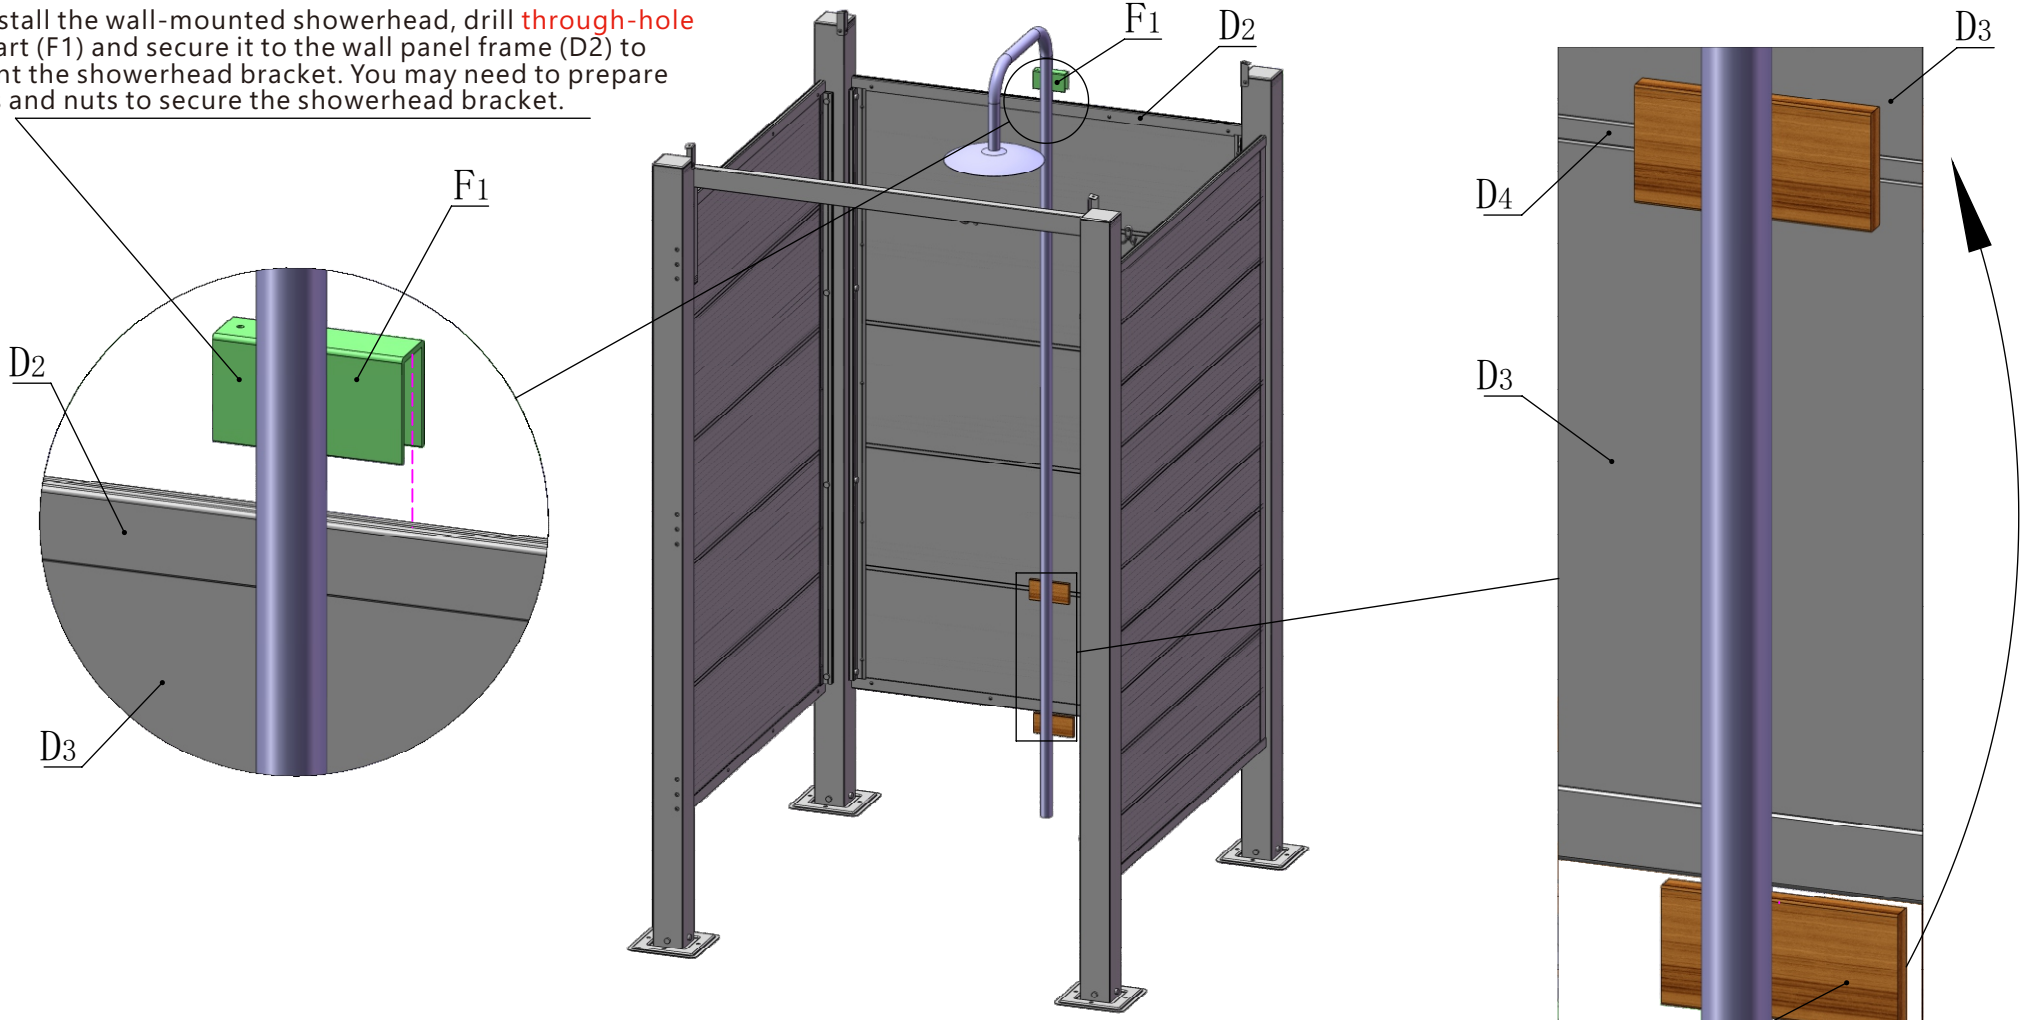

To mount the long shower head bracket, install two rigid plates (metal/wood recommended) on both inner and outer sides of the wall panel lower section. Fasten them to the top and bottom of (D4), or secure at least two screws into (D4).

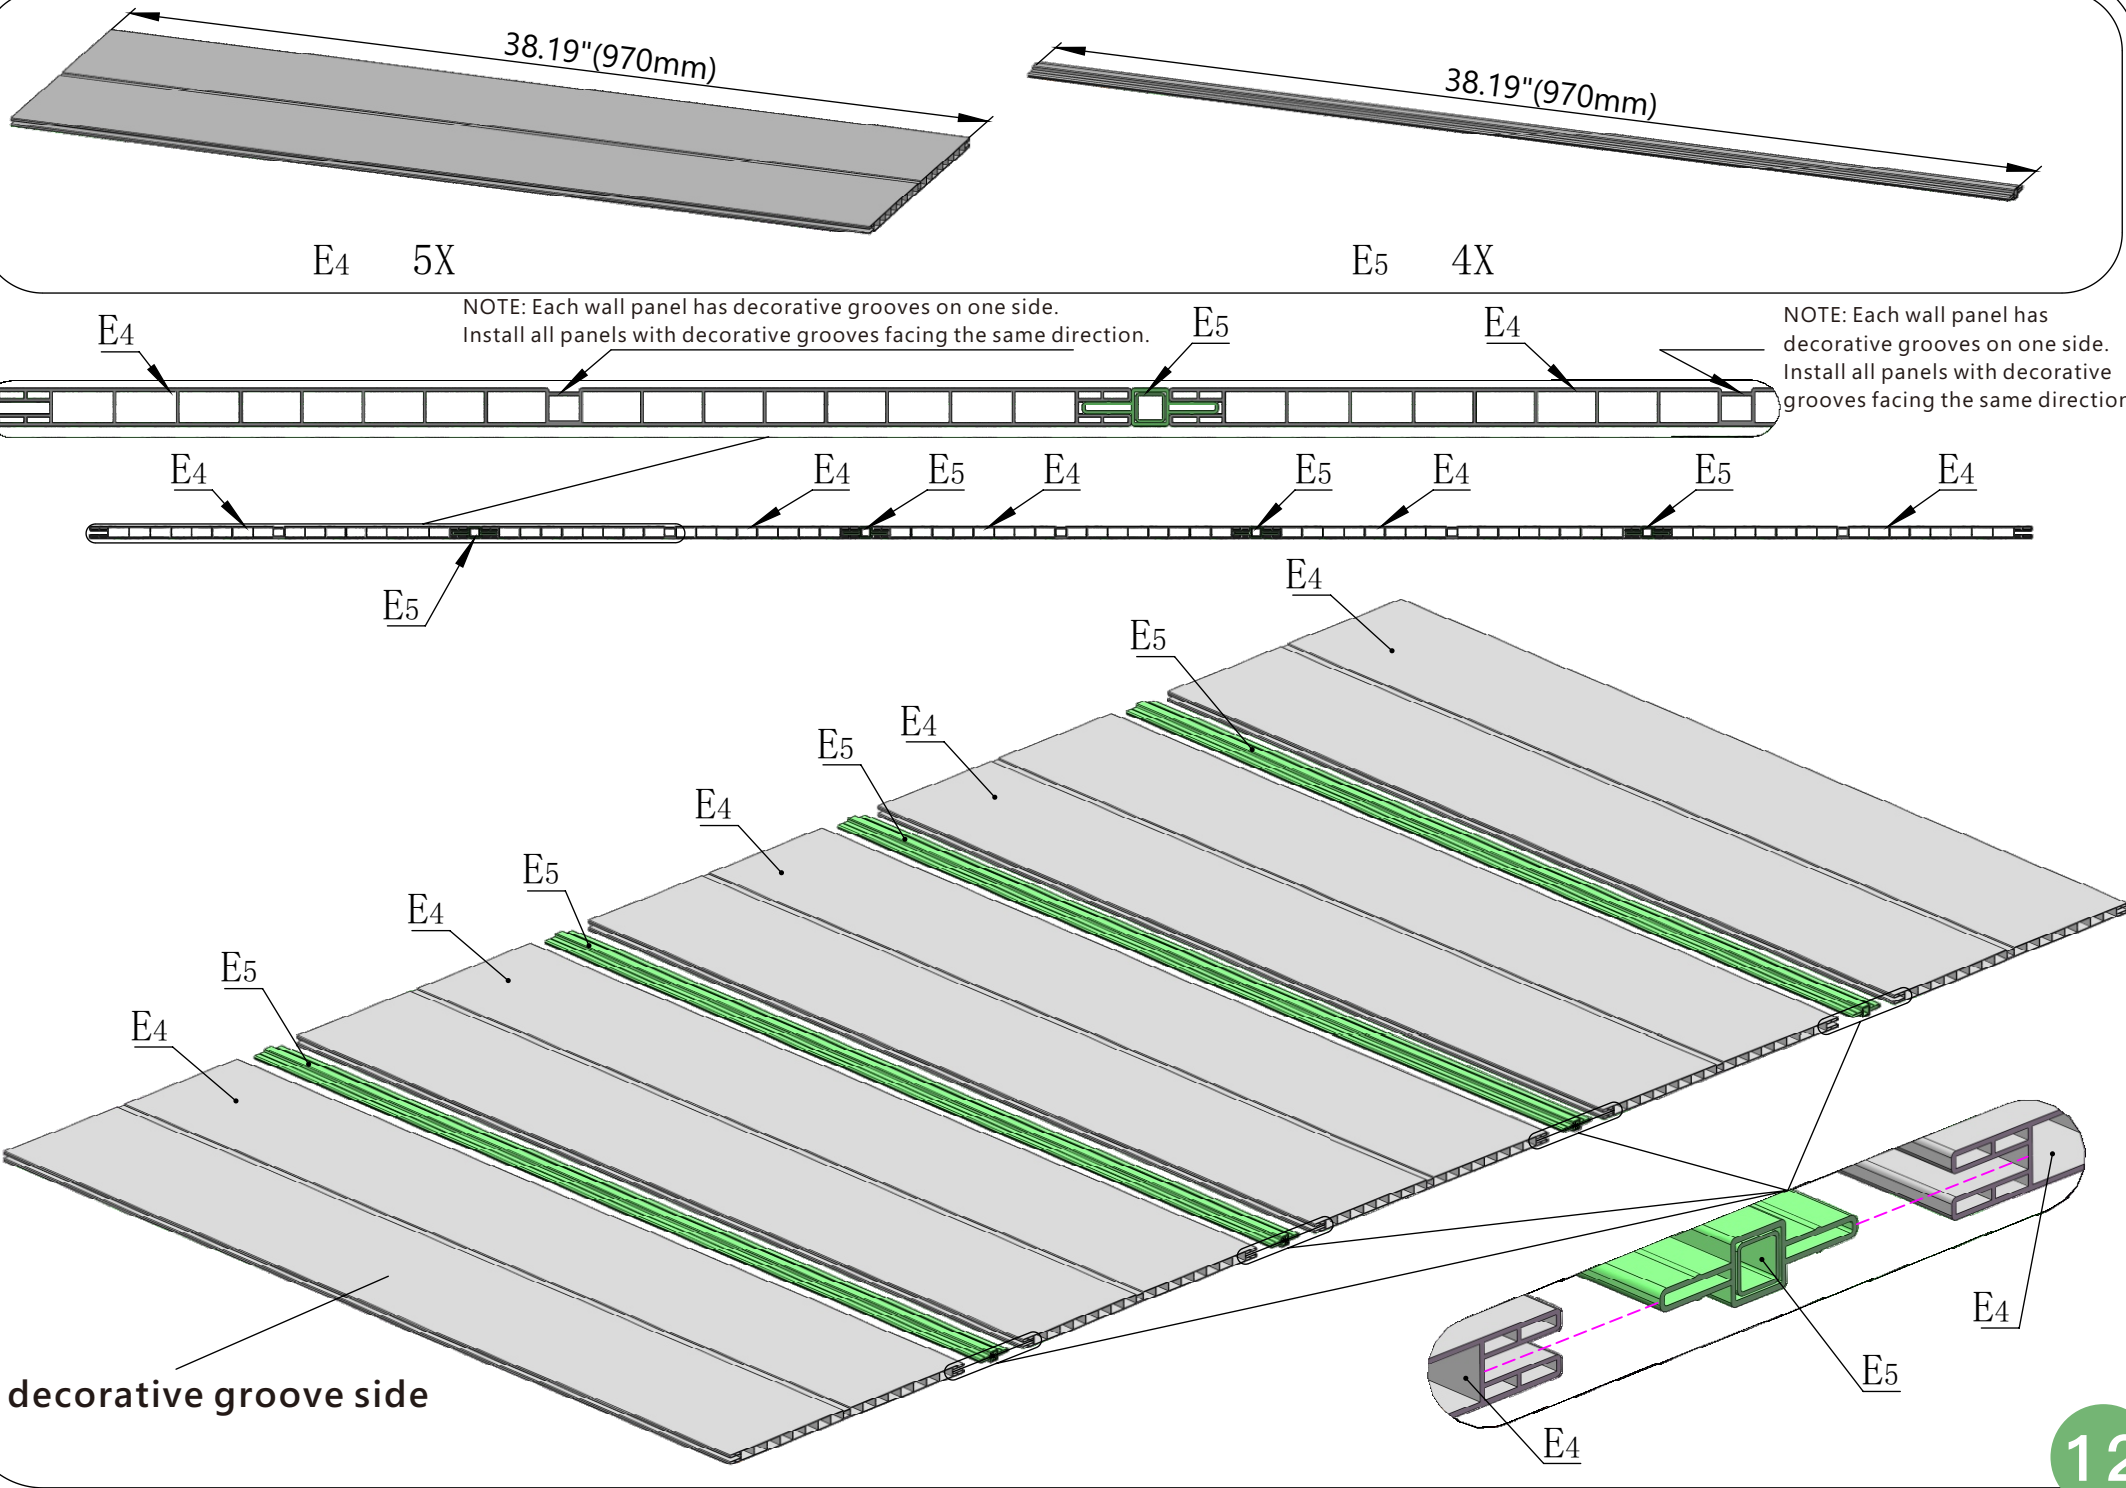

38.19"(970mm)
38.19"(970mm)
E4 5X
E5 4X
NOTE: Each wall panel has decorative grooves on one side.
Install all panels with decorative grooves facing the same direction.
NOTE: Each wall panel has decorative grooves on one side.
Install all panels with decorative grooves facing the same direction.
E4
E5
decorative groove side

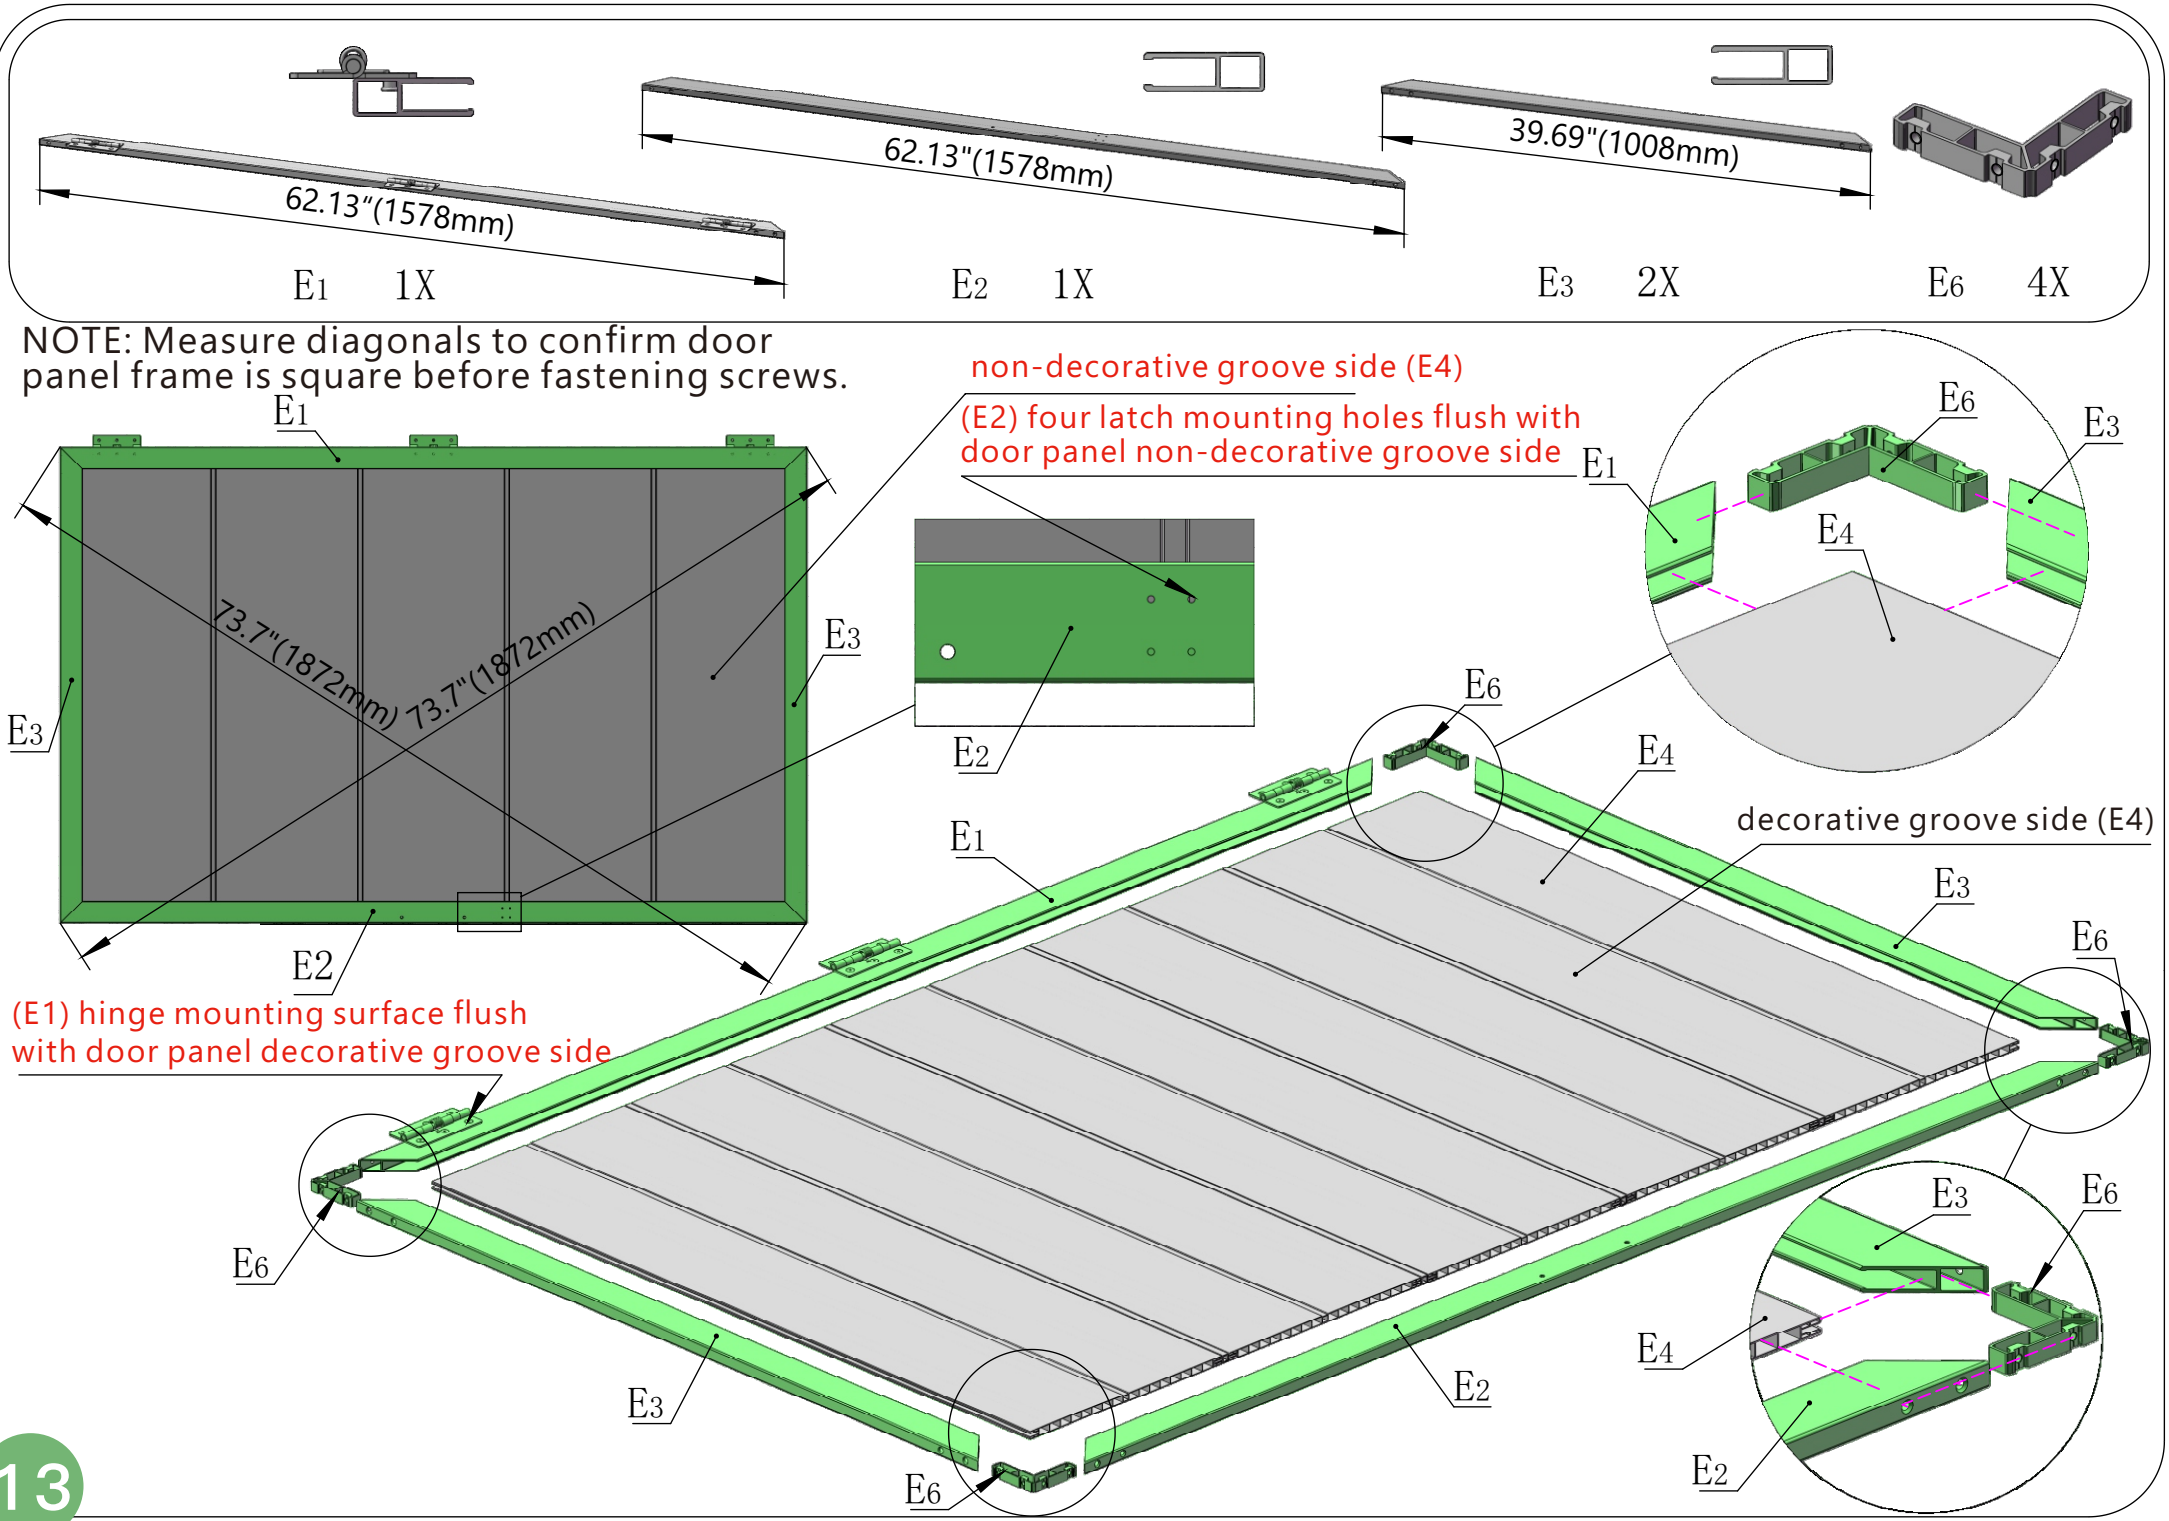
62.13"(1578mm)
E1 1X
62.13"(1578mm)
E2 1X
39.69"(1008mm)
E3 2X
E6 4X
NOTE: Measure diagonals to confirm door panel frame is square before fastening screws.
E1
E3
73.7"(1872mm)
73.7"(1872mm)
E3
E2
non-decorative groove side (E4)
(E2) four latch mounting holes flush with door panel non-decorative groove side
E2
E6
E3
E1
E4
E6
E4
decorative groove side (E4)
E1
E3
E6
(E1) hinge mounting surface flush with door panel decorative groove side
E6
E3
E6
E2
E3
E6
E4
E2



M5X12

5# 16X

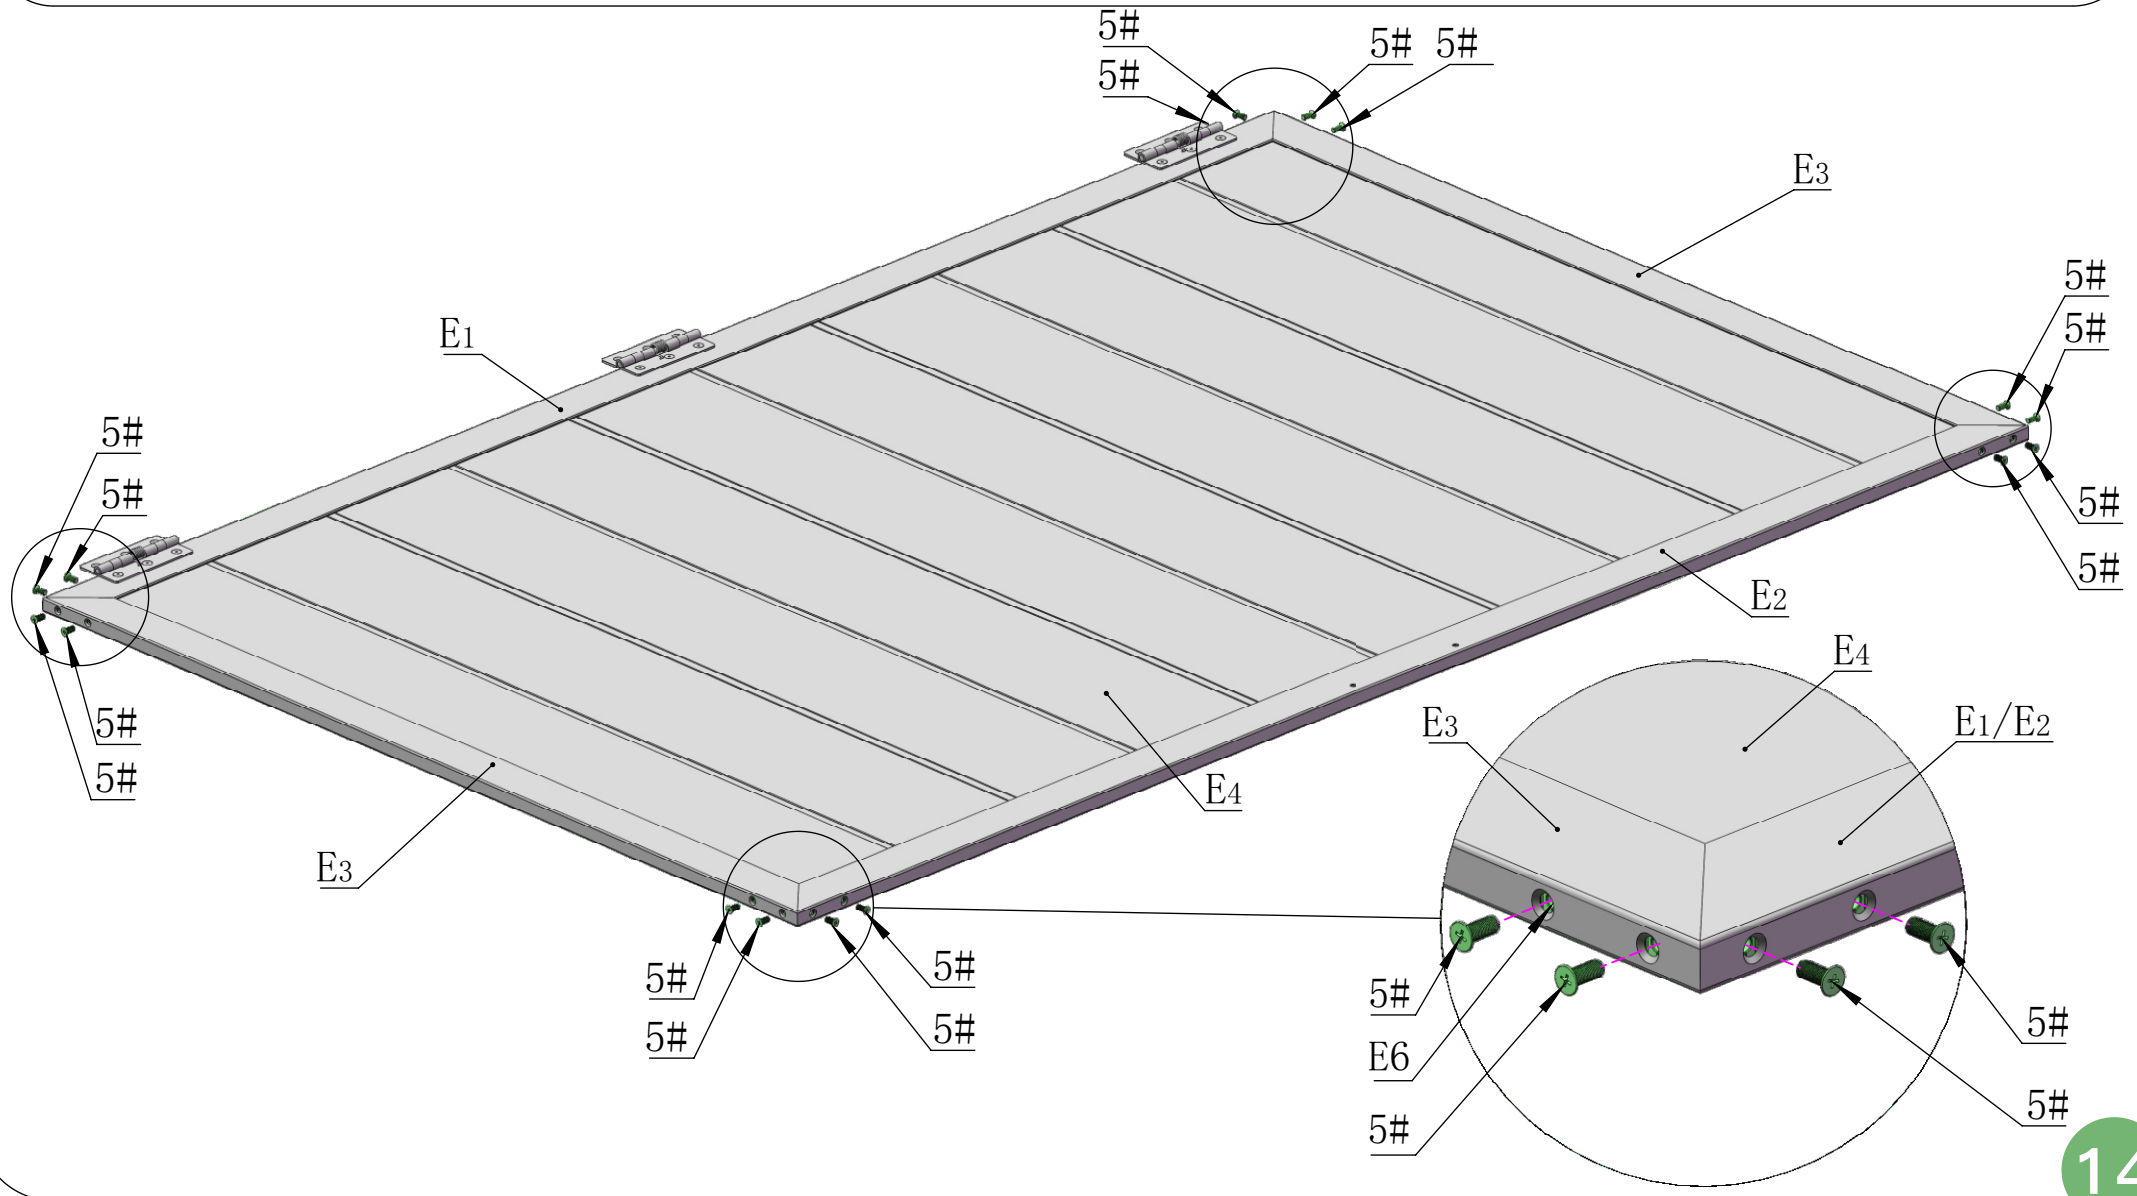



E7 1X



M5X28

6# 2X




M5

11# 2X




M5


12# 2X



M5

16# 1X

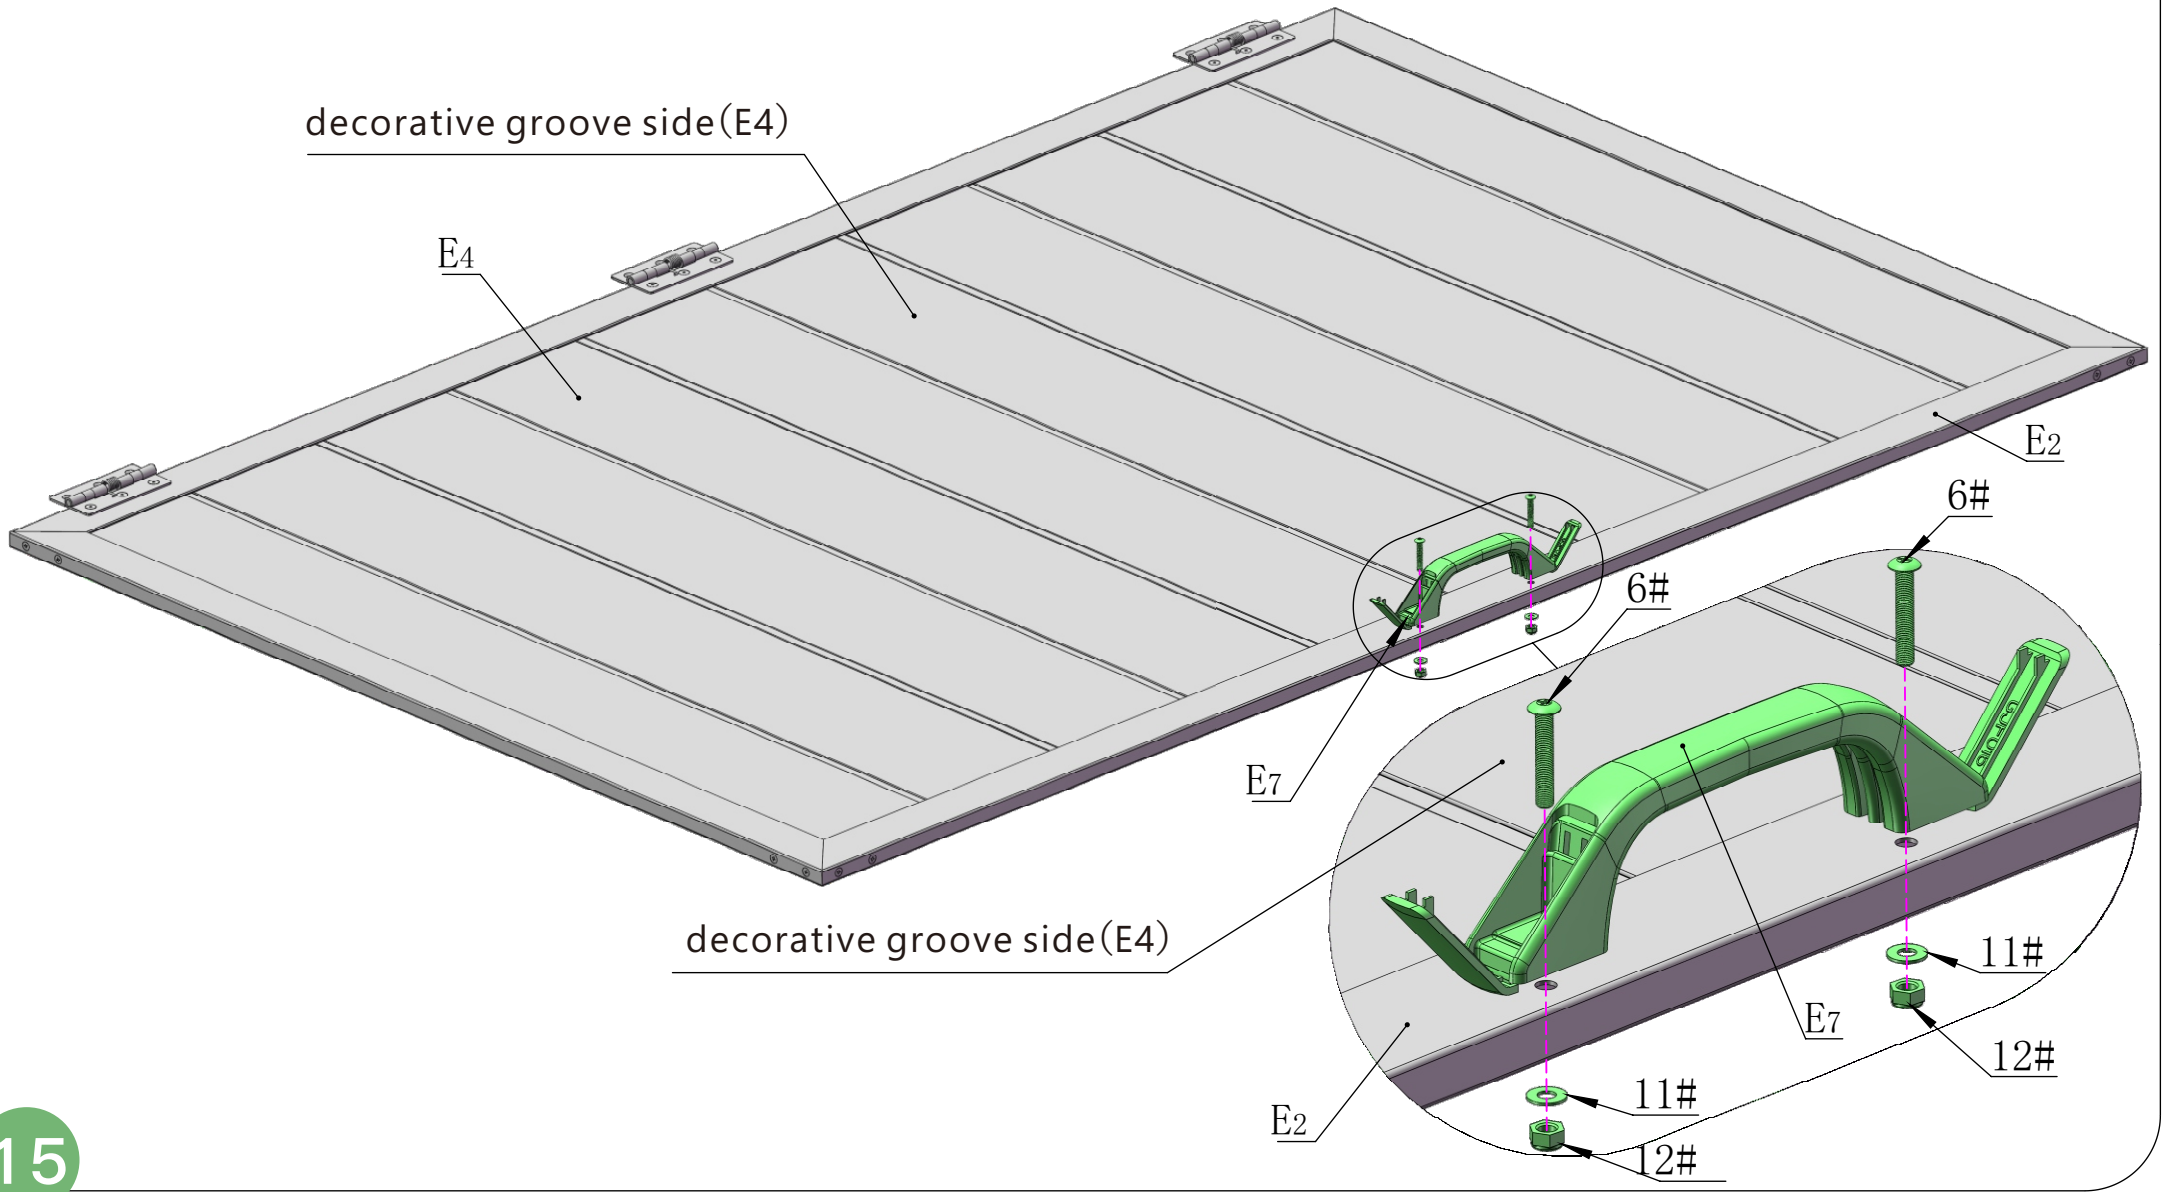

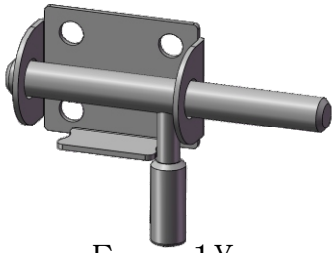


E8 1X



St3.5X13

1# 4X

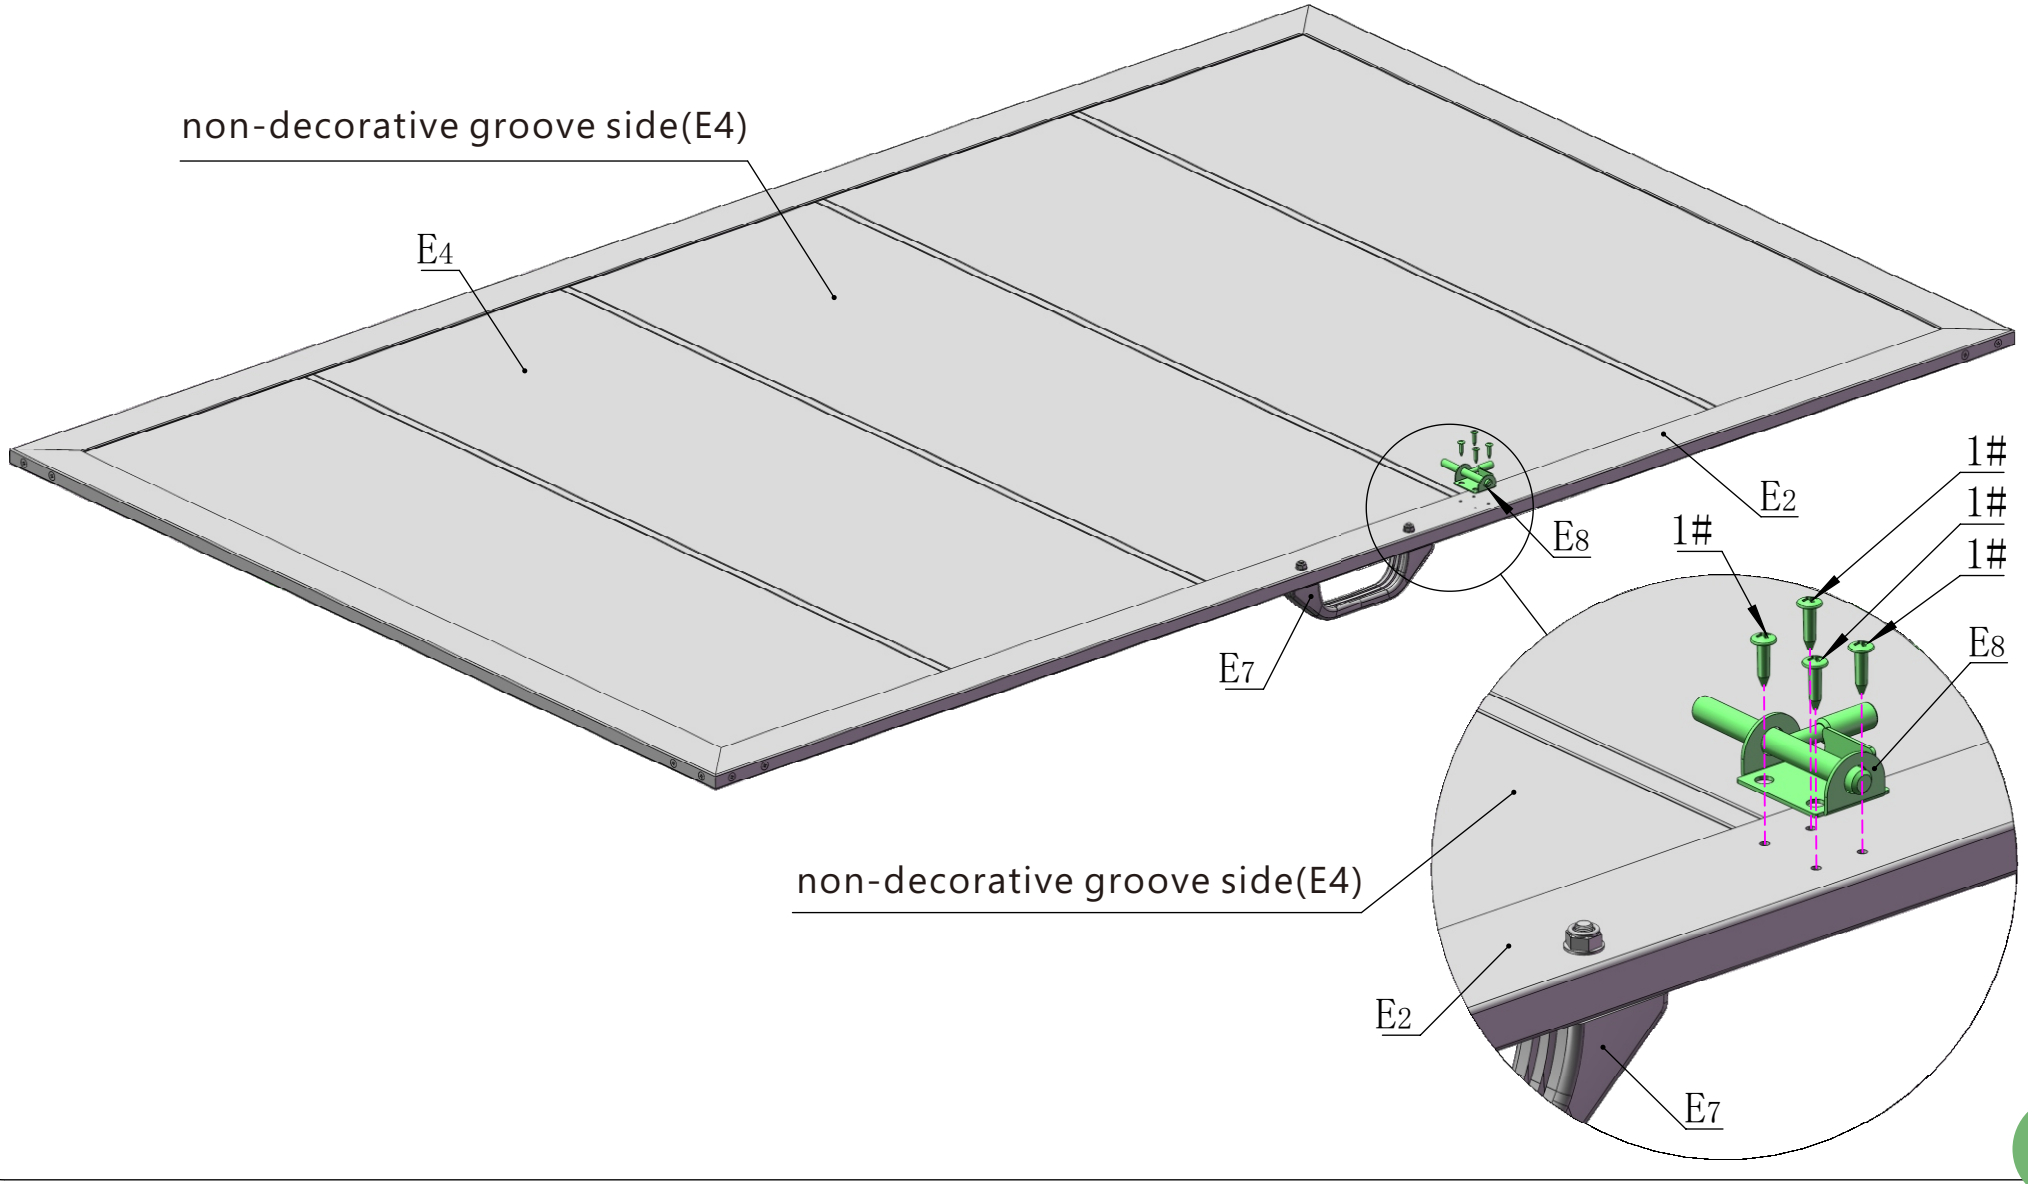





M5X12

5# 9X


NOTE: After mounting swing door, check door closure,
edge gaps and internal latch (E8) operation.
Adjust door top bar (B) screws to align A1/A2 posts if needed.

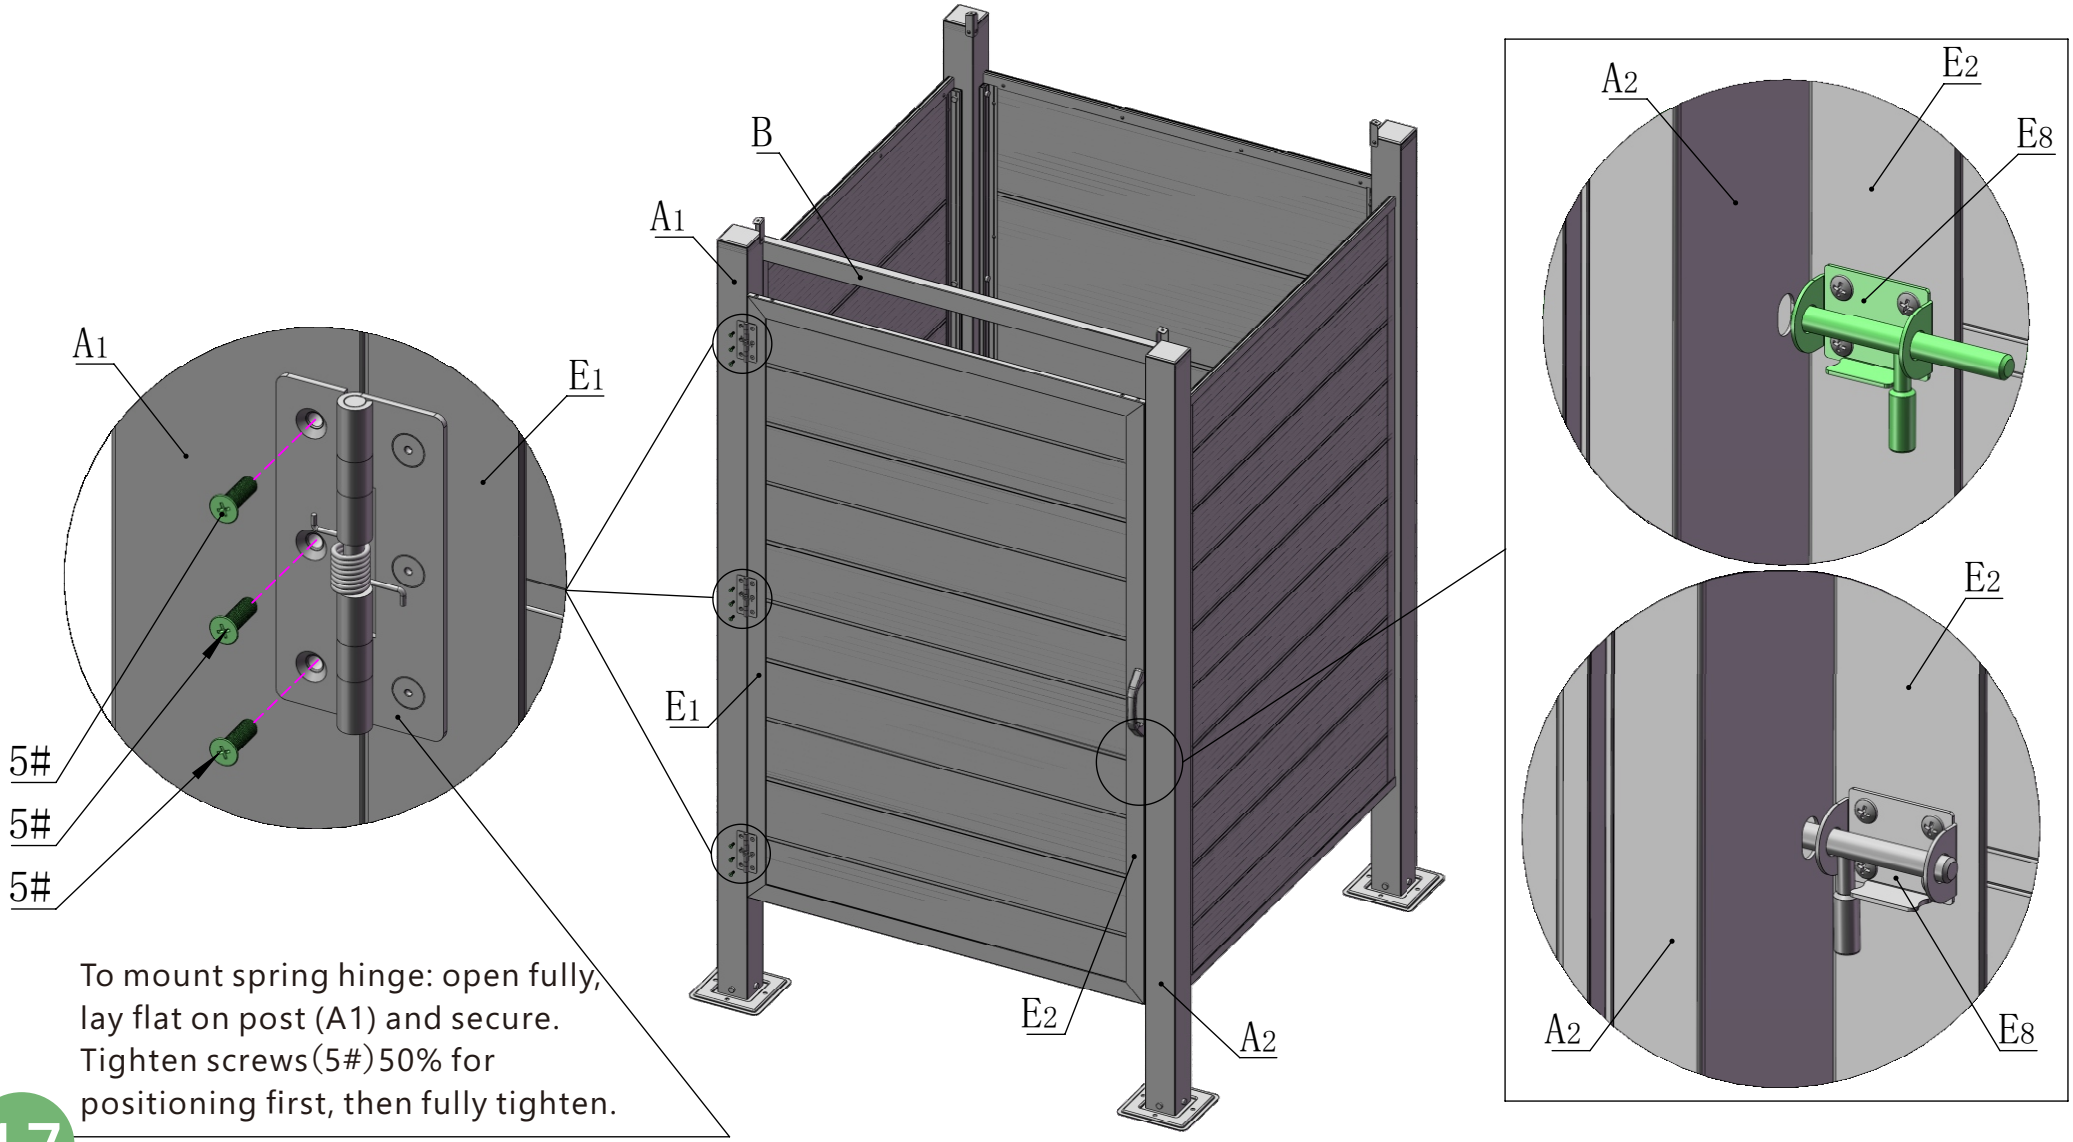

To mount spring hinge: open fully,
lay flat on post (A1) and secure.
Tighten screws(5#)50% for
positioning first, then fully tighten.

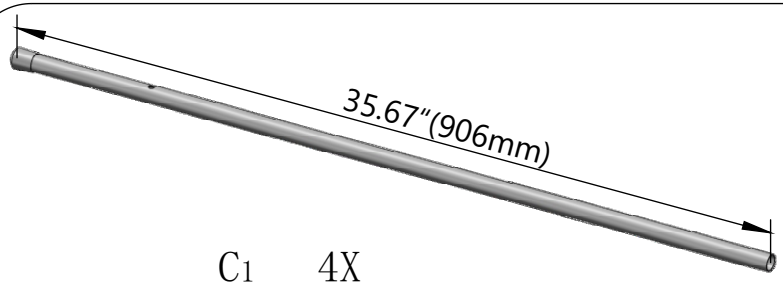



C1 4X

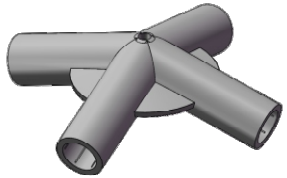

C2 1X

NOTE: The maximum load capacity of the 4-way X-cross tube connector (C2) is 6.5 lbs

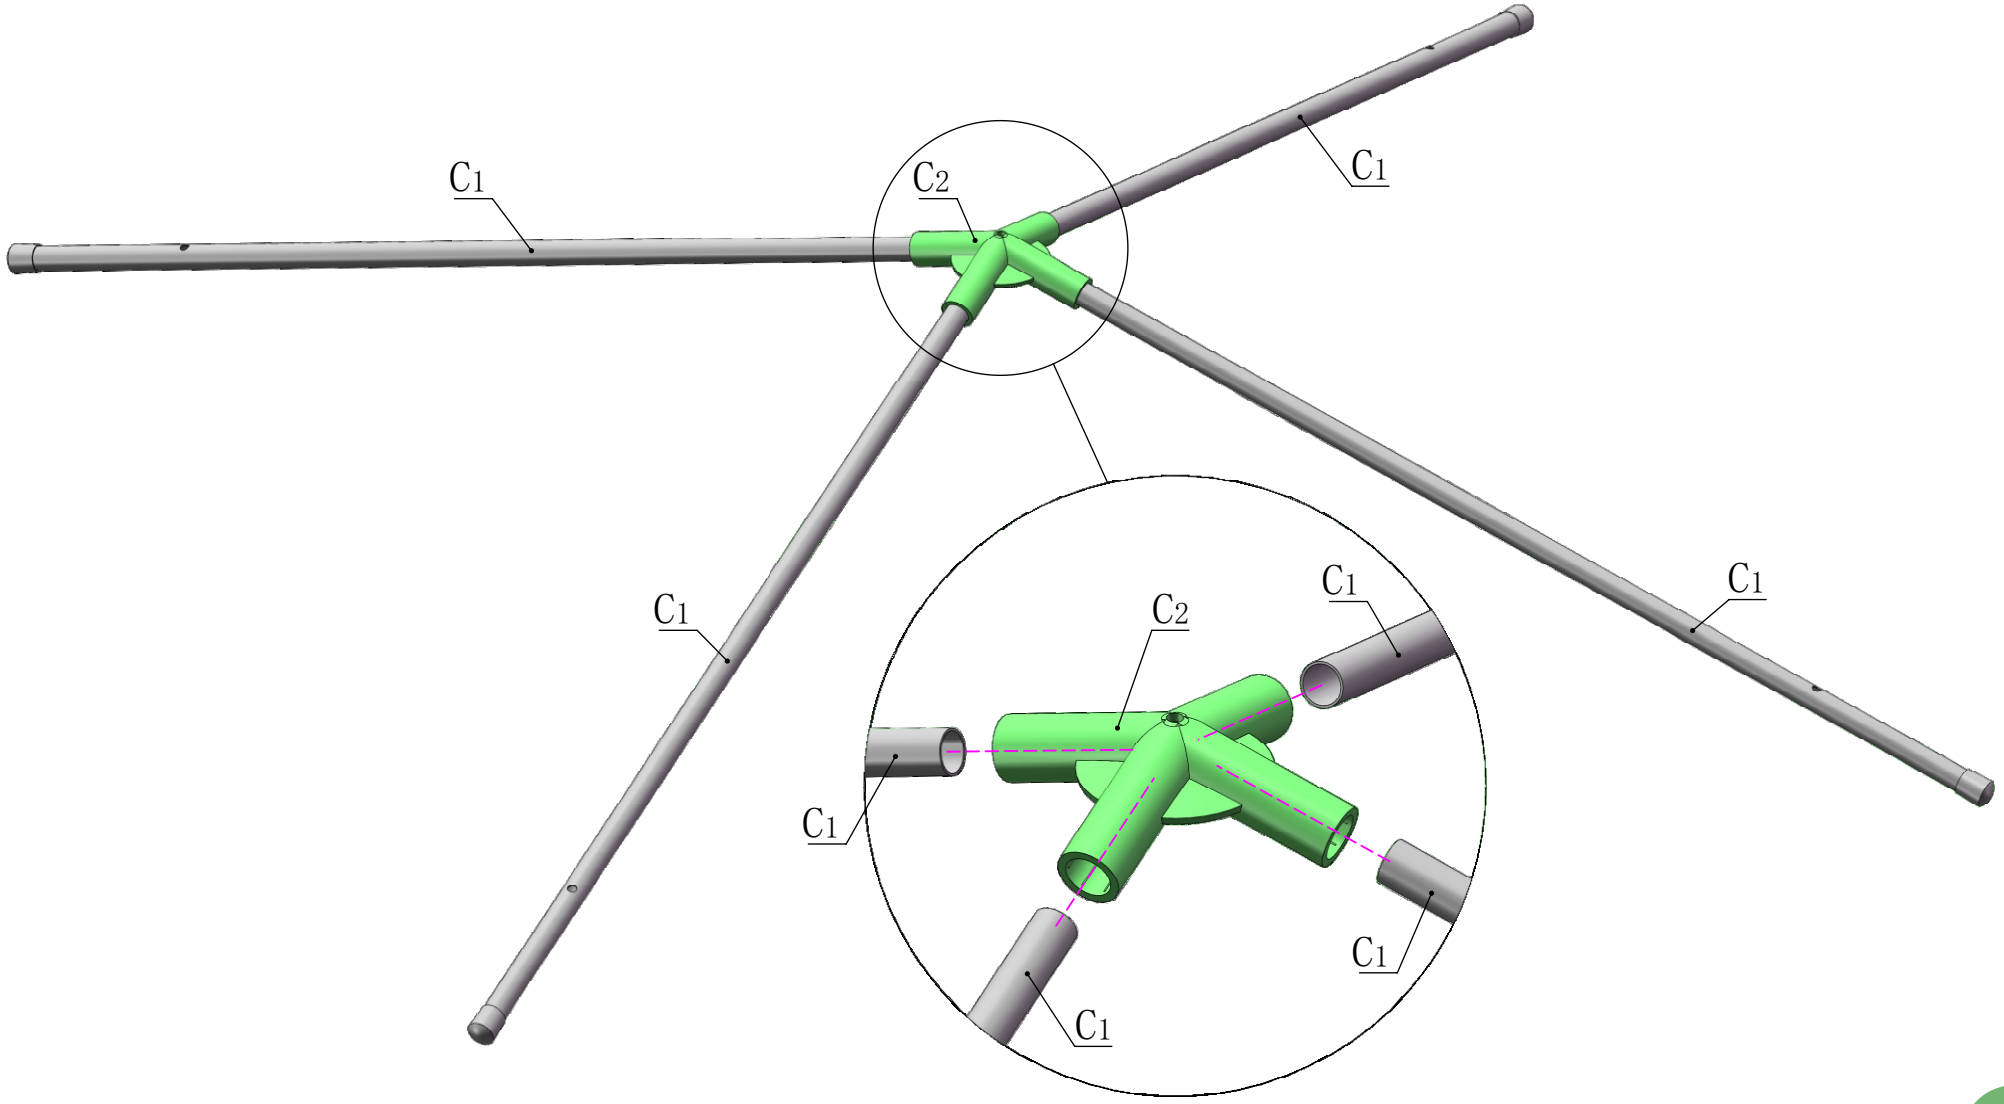

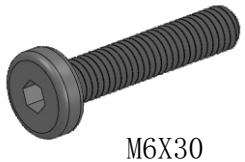


M6X30

9# 4X




M6

13# 4X





14# 4X

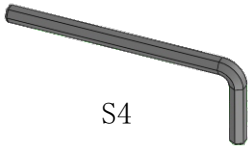


S4

15# 1X

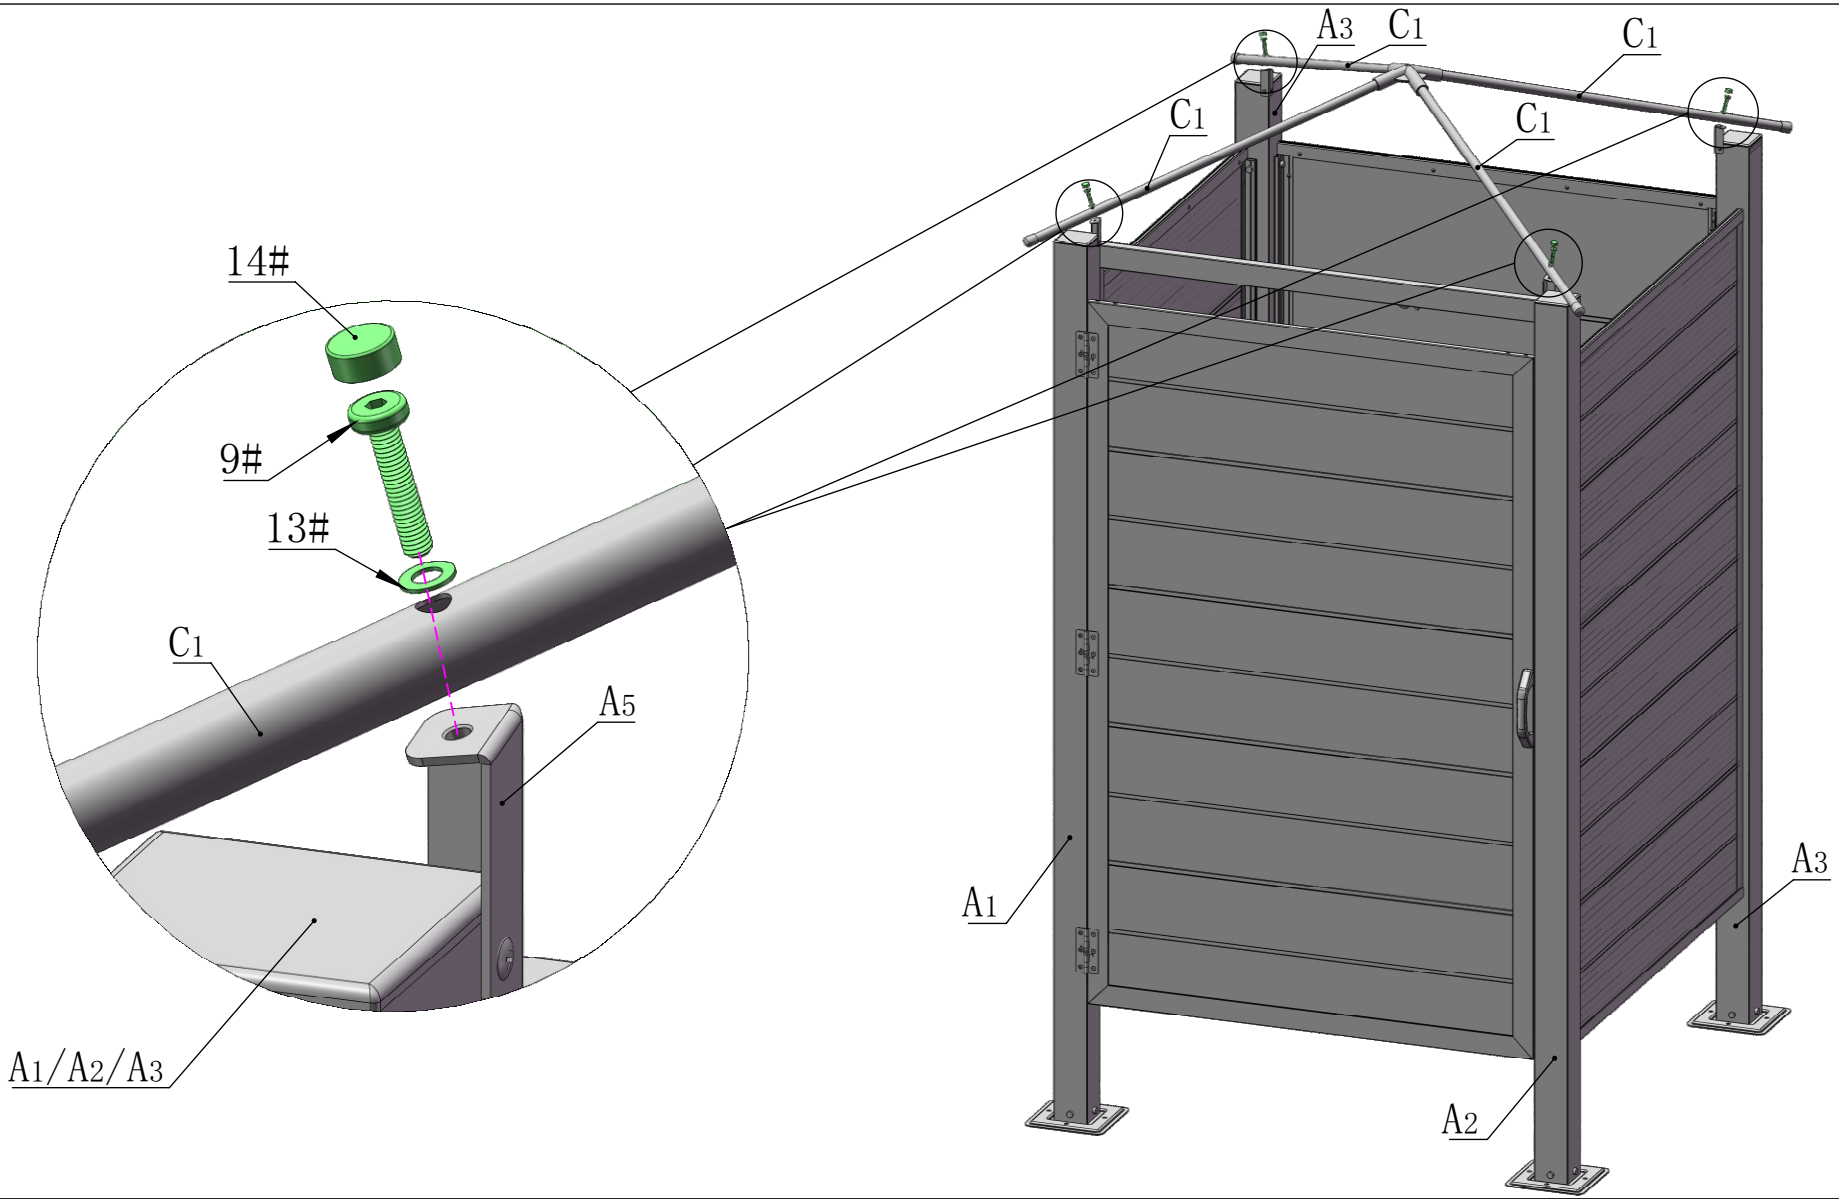

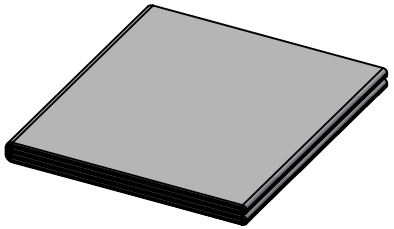

C3 1X

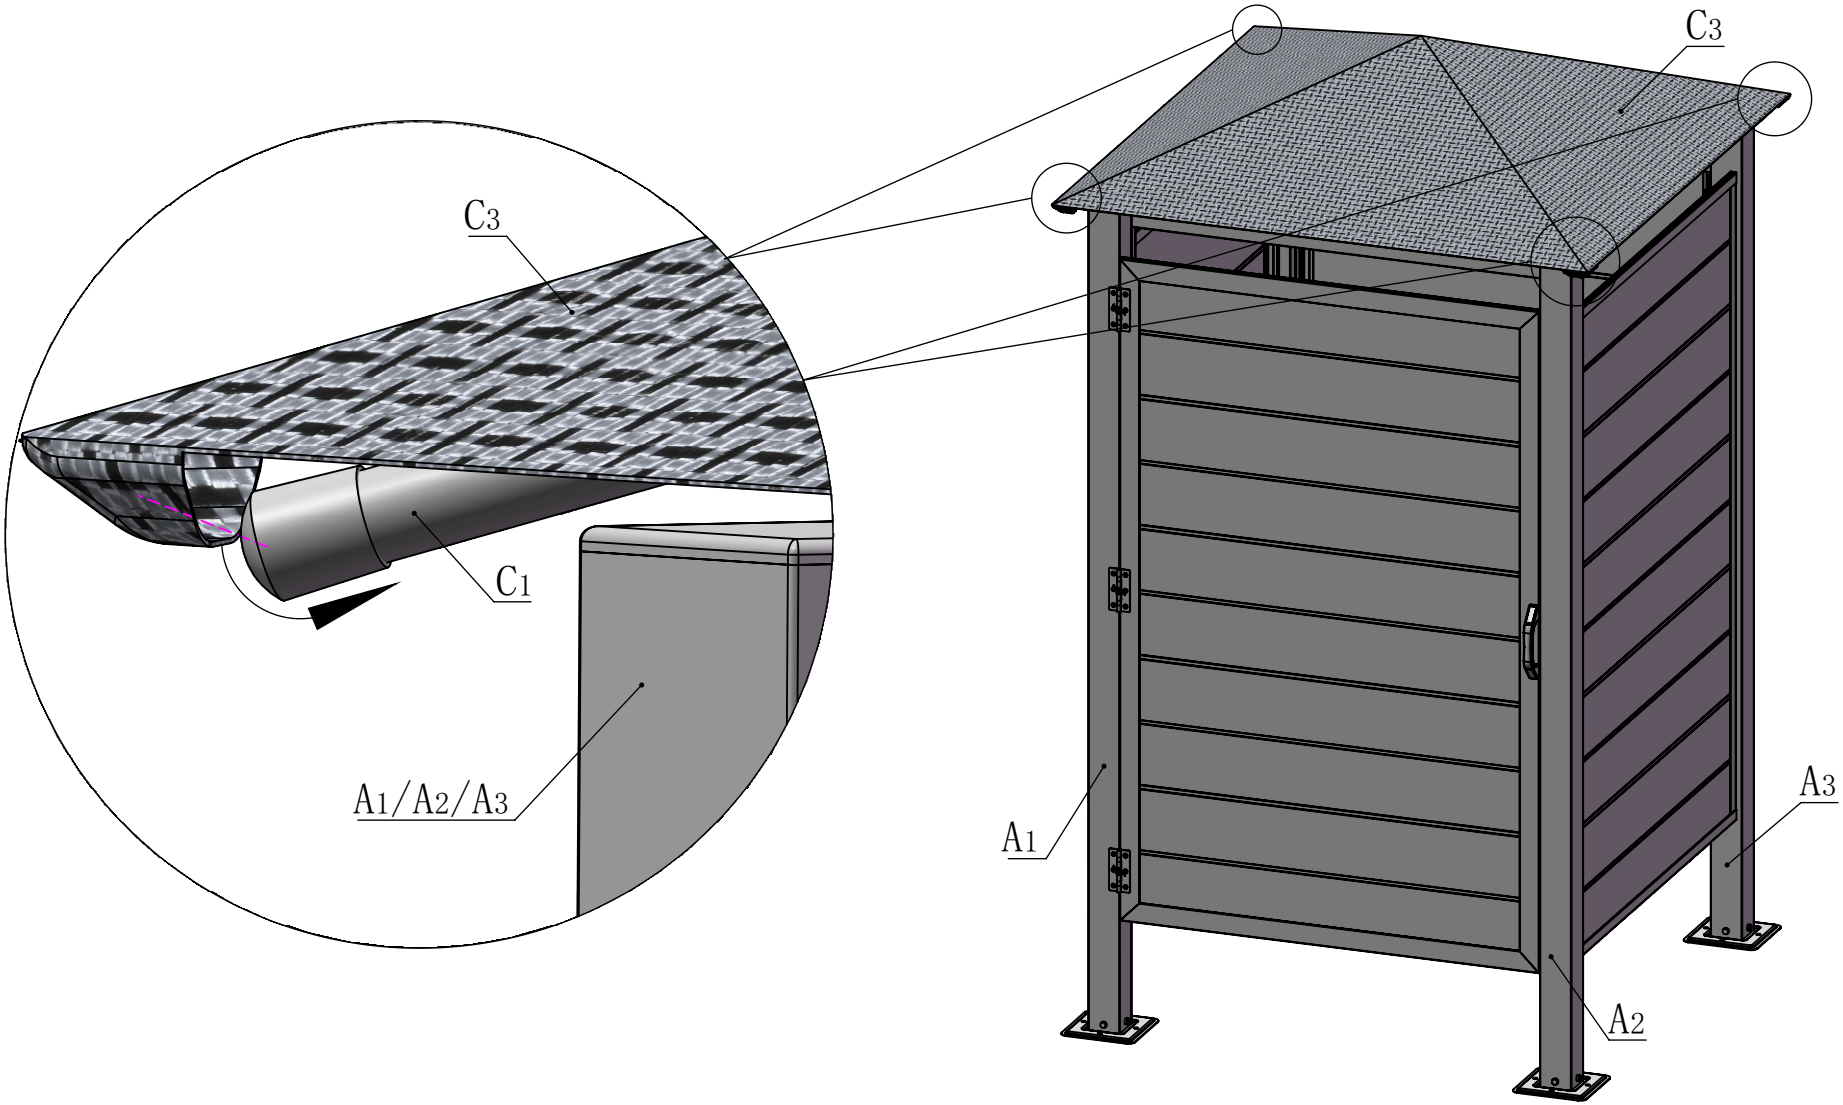

Care and Cleaning

Wash frame parts and fabric with mild soap and water, rinse thoroughly.

Dry frame completely and allow the fabric to drip dry.

Do not use bleach, acid, or other solvents on the fabric or frame parts.

Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your gazebo.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Netting

Netting are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage from exposure to chemicals (including but not only oils ,spills, fluids) won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and worksmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.

domi
outdoor living

RESORT COMFORT IN YONR

OWN BACKYARD

Support:

Business cooperation contact email:
marketing@domioutdoorliving.com

After-sales contact email:
service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.