

"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"



Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | **PREPARACIÓN DEL LUGAR** | VORBEREITUNG DES AUFSTELLUNGSORTES |
VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | **PREPARAÇÃO DO LOCAL**


Level the ground surface | Nivelez la surface du sol | **Nivele la superficie del suelo** | Ebenen Sie die Bodenoberfläche
| **Maak de bodem vlak** | Livellare la superficie del terreno | **Nivele a superfície do solo**



Recommendation: Construct a wooden or concrete base as a foundation | Recommendation: fabriquez une base en bois ou en béton en guise de fondation | **Recomendación: construya una base de madera o de cemento a modo de cimiento** | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | **Aanbeveling: maak een houten of betonnen ondergrond als fundering** | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | **Recomendação: Construa uma base de madeira ou de cimento como fundação**


Option | Opción | optie | opzione | opção

A

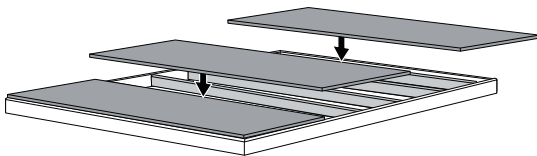


Option | Opción | optie | opzione | opção

B

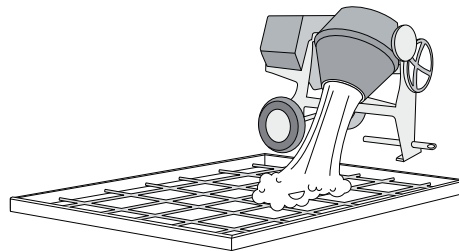

External floor measurements are: | Les mesures externes de la étage sont: | **Las medidas del suelo externo son:** | Die Außen-Bodenmaße betragen: | **De afmetingen van de externe vloer zijn:** | Le dimensioni esterne del pavimento sono: | **As medidas externas do chão são:**

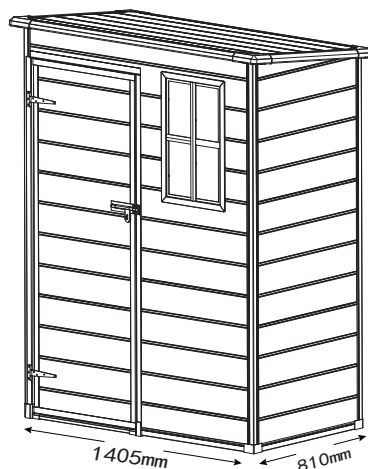



WARNING

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | **ANTES DE EMPEZAR EL ARMADO** | VOR MONTAGEBEGINN | **VOORDAT U BEGINT TE MONTEREN** | PRIMA DI INIZIARE L'ASSEMBLAGGIO | **ANTES DE INICIAR A MONTAGEM**

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts **BEFORE** starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées **AVANT** de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas **ANTES** de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte **VOR** dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, **VOORDAT** u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze open op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate **PRIMA** di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas **ANTES** de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | **HERRAMIENTAS NECESARIAS** | BENÖTIGTE WERKZEUGE | **BENODIGD GEREEDSCHAP** | ATTREZZATURA OCCORRENTE | **FERRAMENTAS NECESSÁRIAS**



SPATULA | SPATULE | **ESPÁTULA** | SPACHTEL | **SPATEL** | SPATOLA | **ESPÁTULA**

- Use spatula (part “**SG8**”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “**SG8**”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “**SG8**”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “**SG8**”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel **SG8**) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte **SG8**) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “**SG8**”) para facilitar a inserção do painel no perfil.











SG8 x2








ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | **SE NECESITAN DOS PERSONAS PARA ARMARLO** | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | **MONTAGE VEREIST TWEE PERSONEN** | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | **A MONTAGEM EXIGE DUAS PESSOAS**

ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
AW1-1		X6	AP1		X1
AW1-2		X1	AP2		X2
AW1-3		X1	AP3		X2
AW2-1		X1	AP4		X1
AW2-2		X1	AP5		X1
AW2-3		X1	AA3		X1
AW3-1		X3	AA1R		X1
AW3-3		X1	AAP1		X1
AD1-1		X1	AA2R		X1
AD1-2		X1	AA2L		X1
AD1-3		X1	AA4		X1
AR1-1		X1	AS1		X1
SG12		X1	AR1-2		X1

ASSEMBLY INSTRUCTIONS


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
AF1-2		X1	ZW413		X12
AF1-1		X1	Z420		X88
SG10		X1	AP7		X1
SG101		X1	AP8		X2
M01		X2	AP9		X2
M03-6R		X1	SG7-2		X1
M03-7		X1	SG7-3		X1
M04		X1	SG2		X4
SG8		X2	SG6		X3
SG9		X3	SG102		X1
Drill		X1	SG14		X4
Z410		X47			

ASSEMBLY INSTRUCTIONS


- Use spatula  (part "SG8") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.




Floor Assembly

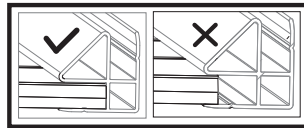

- Fully fit the panel inside the profile

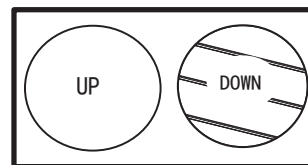

- Note: The crease line of the floor must be underneath

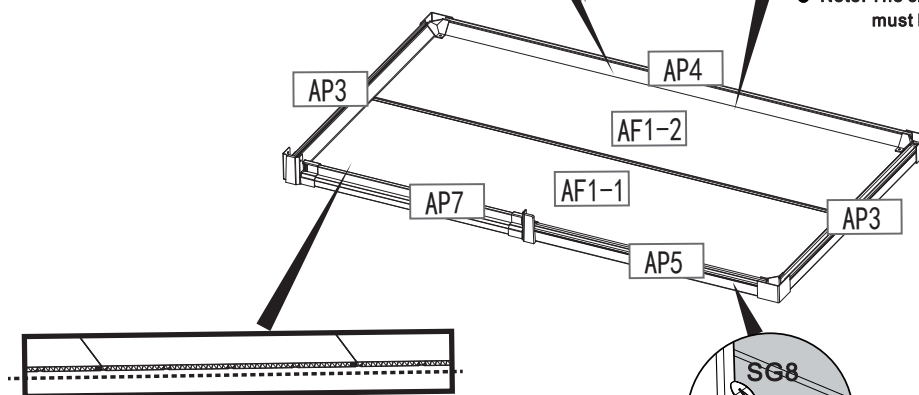


- The floor panels must be straight

- Use spatula  (part "SG8") for easier insertion of panel into profile

ASSEMBLY INSTRUCTIONS

1



AF1-1 1pc



AF1-2 1pc



SG6 2pcs





AP3 2pcs




AP4 1pc


1

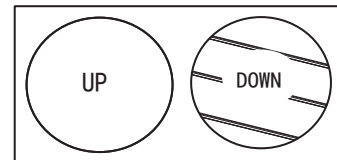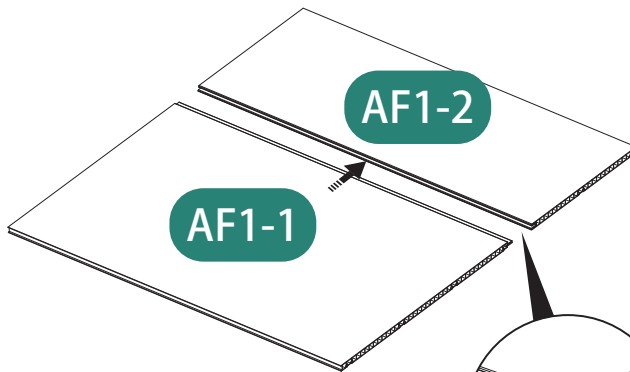



● Grain should be down



● Panels are in a straight line after installation.

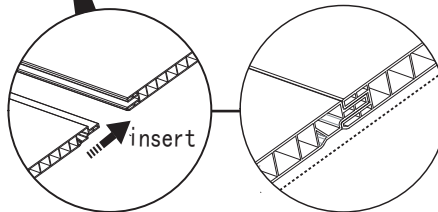

2

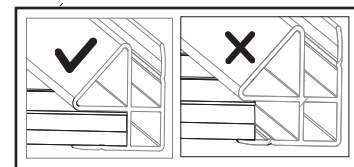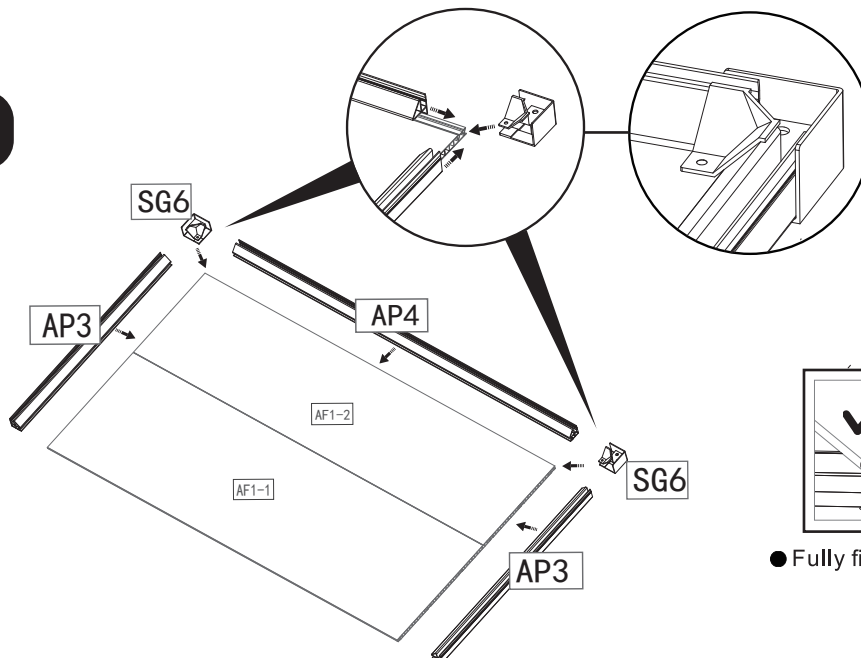

● Fully fit the panel inside the profile

ASSEMBLY INSTRUCTIONS

2



SG6 1pc



AP5 1pc



SG7-2 1pc




AP7 1pc




SG7-3 1pc




SG8

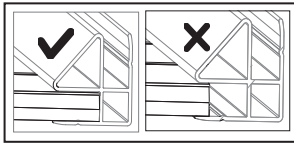


● Fully fit the panel inside the profile

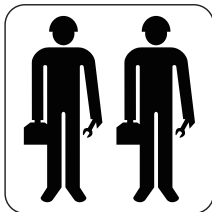


A-1

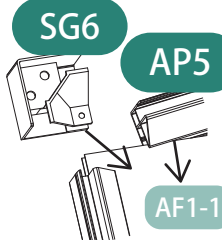


A-2

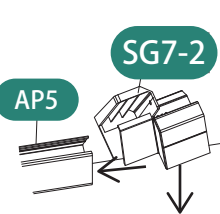


A-3

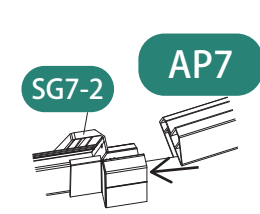


A-4

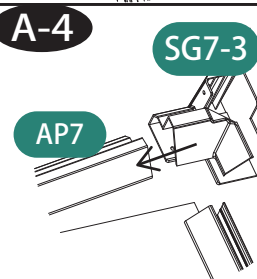



A-5

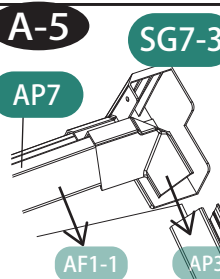

A-6

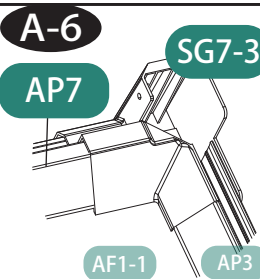


A

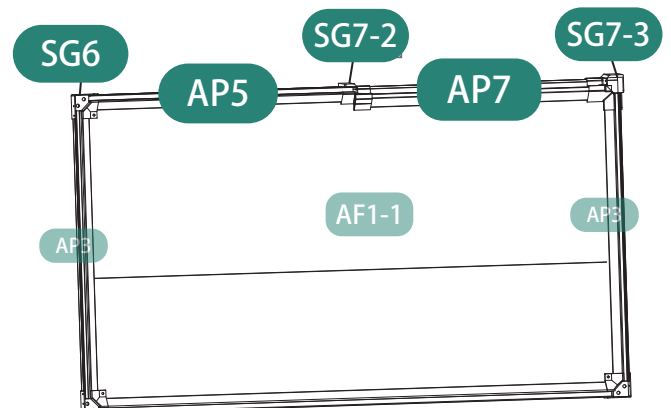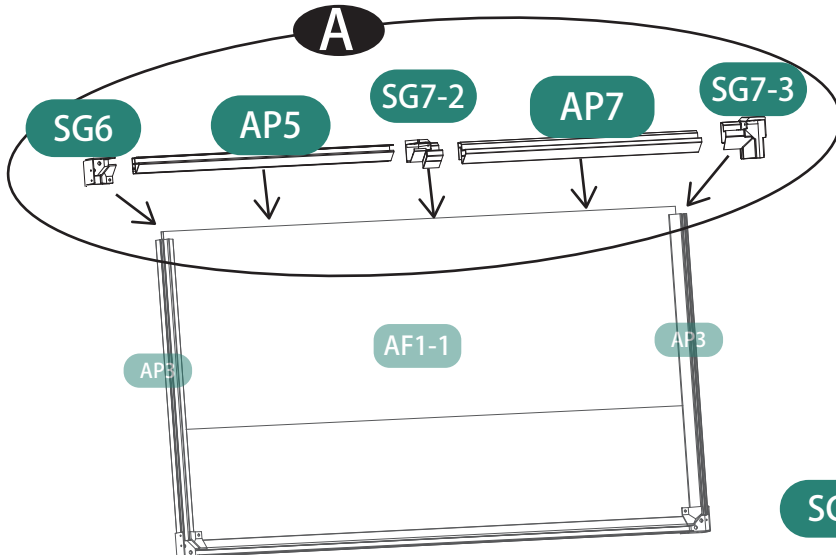


ASSEMBLY INSTRUCTIONS

3




Z410 3pcs


1

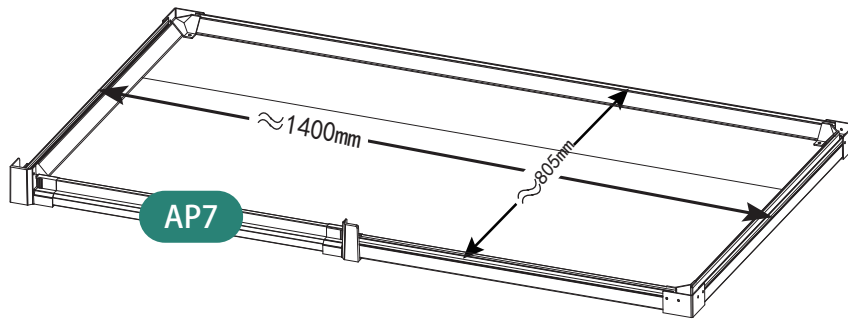

2

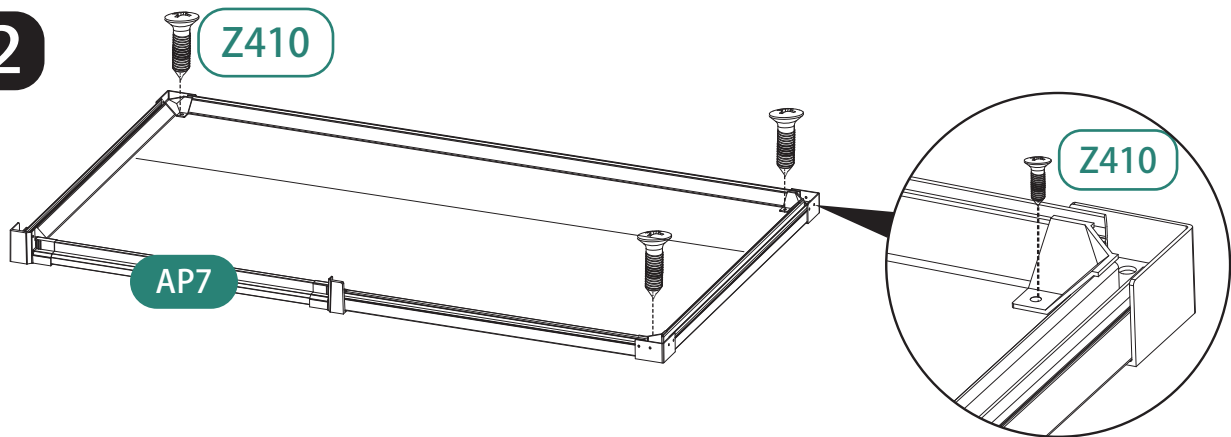


3

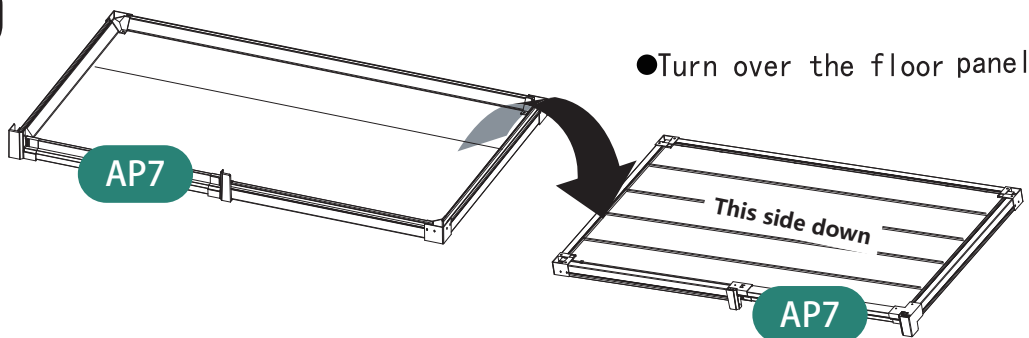


ASSEMBLY INSTRUCTIONS


4



Z420 17pcs

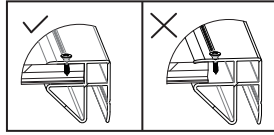


- Fully fit the panel inside the profile; then screw on mark line

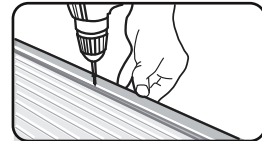


- Nail along the marked line on profile


1

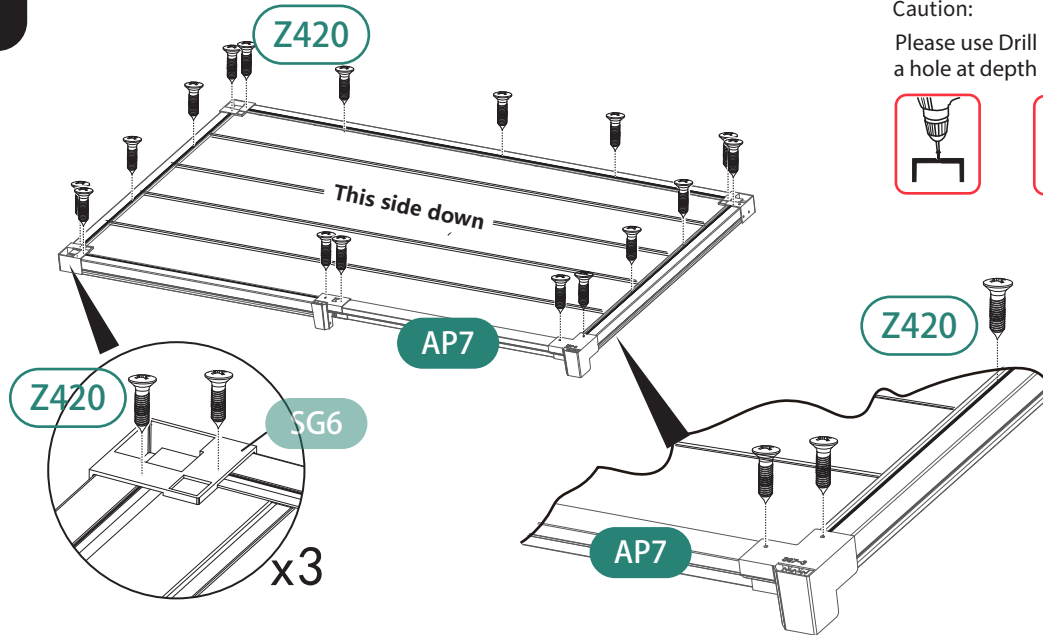

2

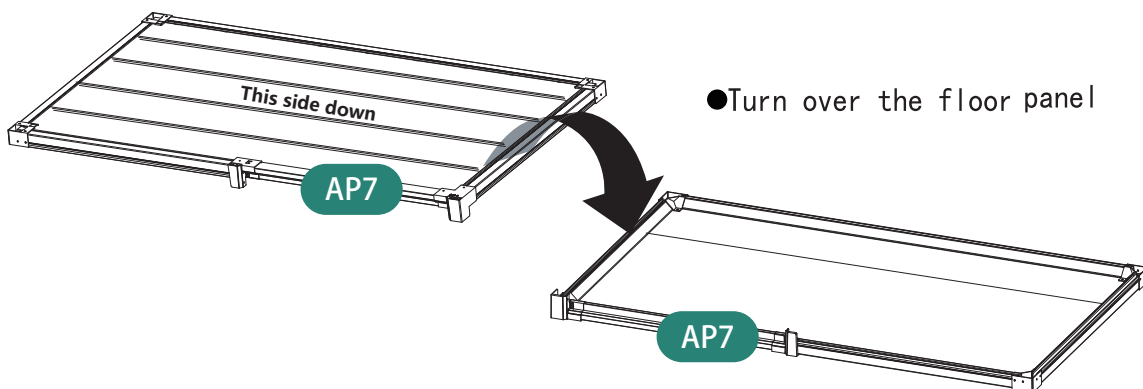


Wall Assembly



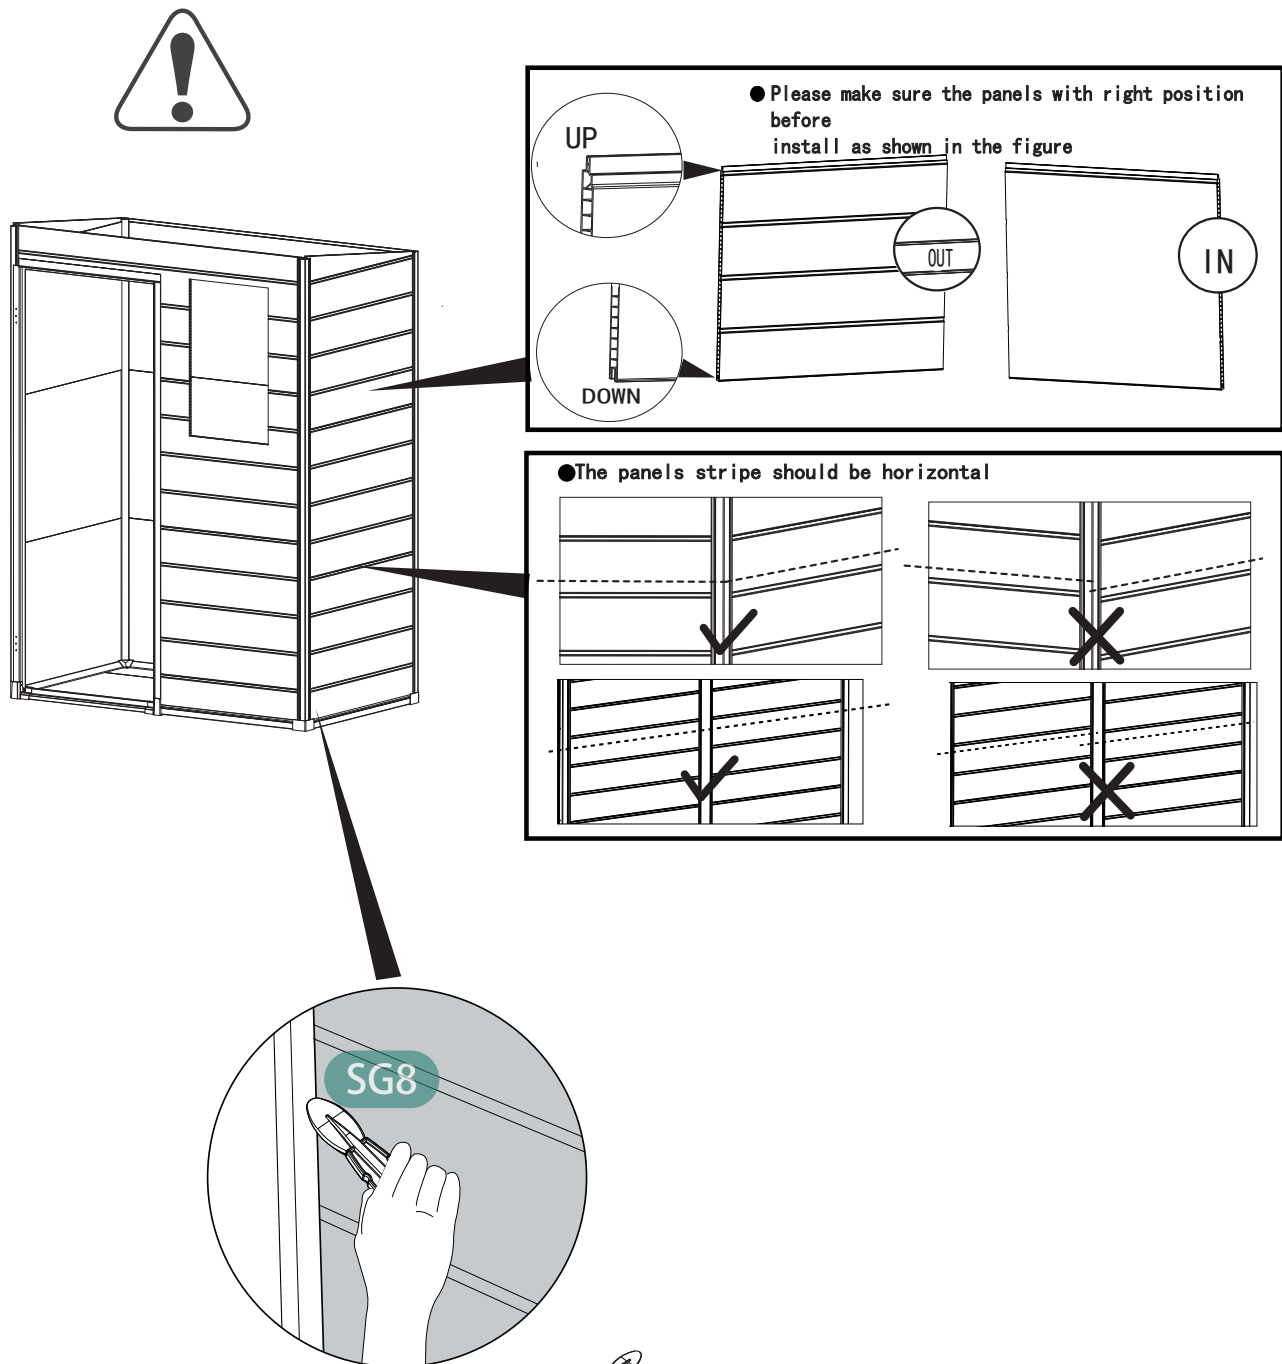


- Use spatula  (part "SG8") for easier insertion of panel into profile


5



AP2 1pc

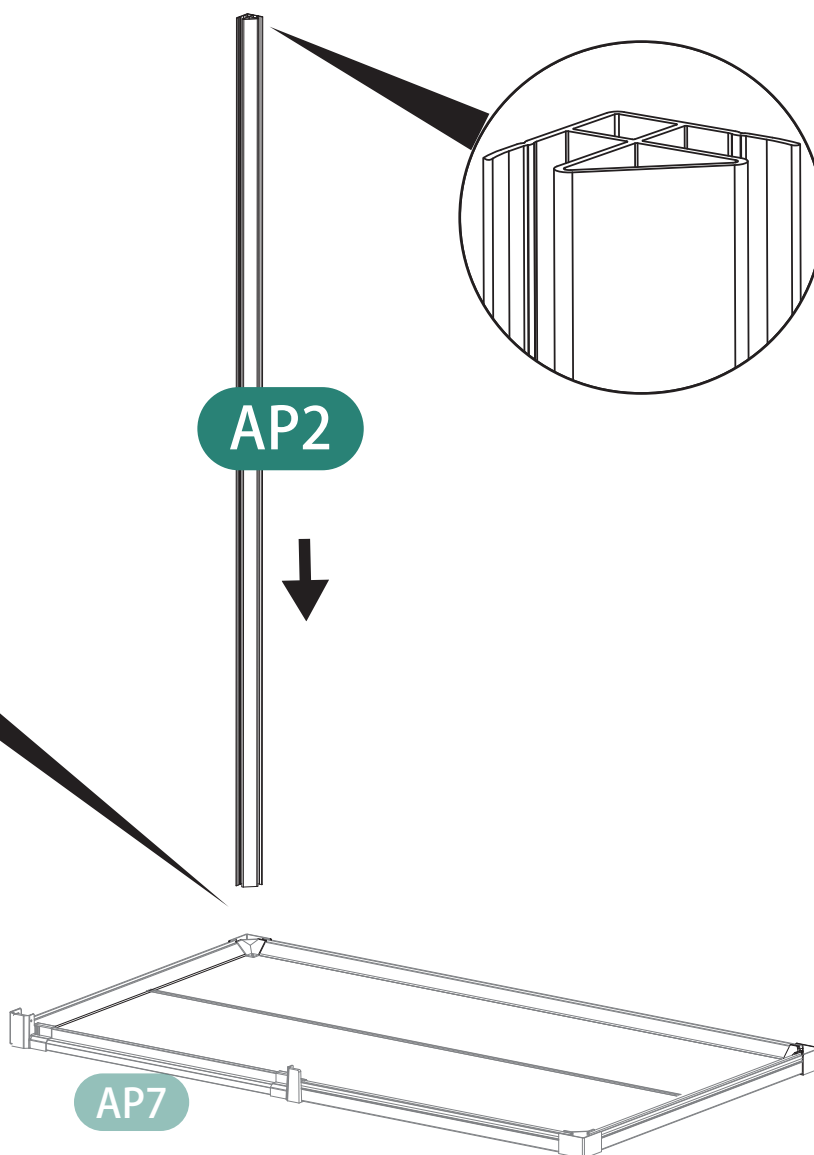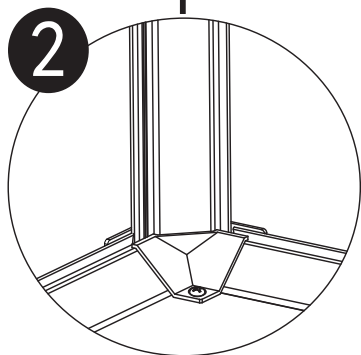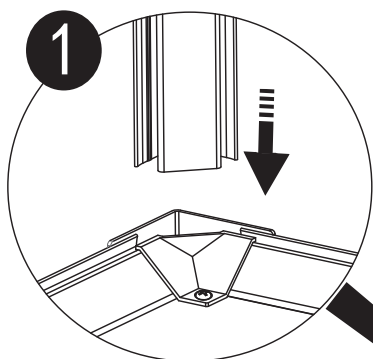

6

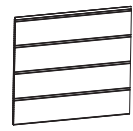


AW1-1 3pc








AW3-1 3pc




SG8

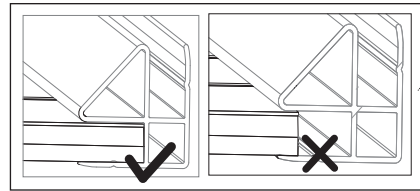


● Fully fit the panel inside the profile

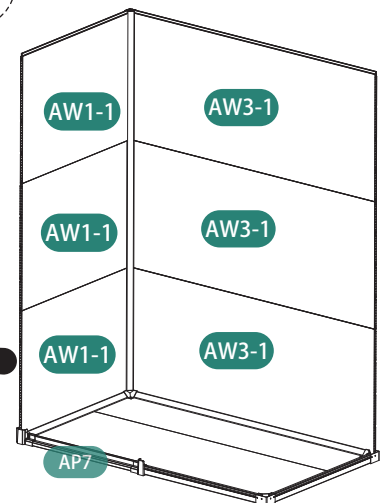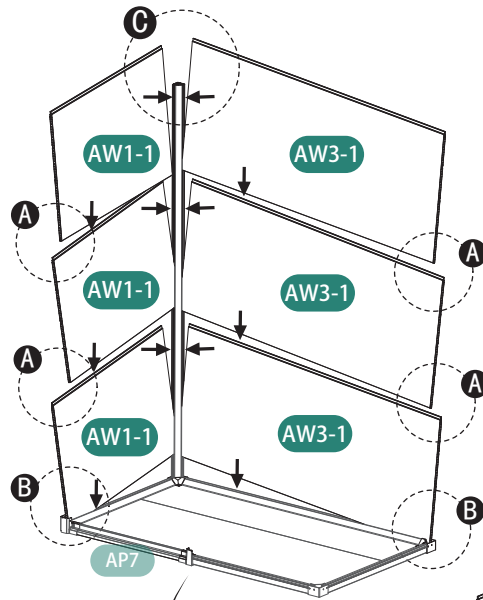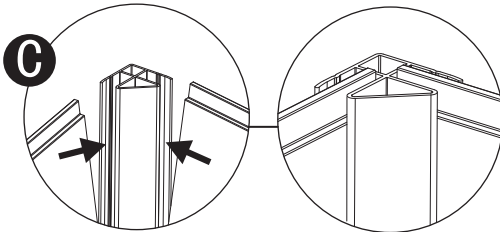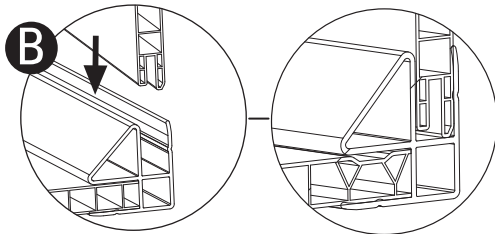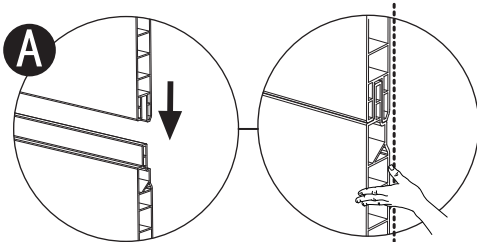


7

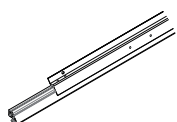




AAP1 1pc



Z410 1pc



AP2 1pc

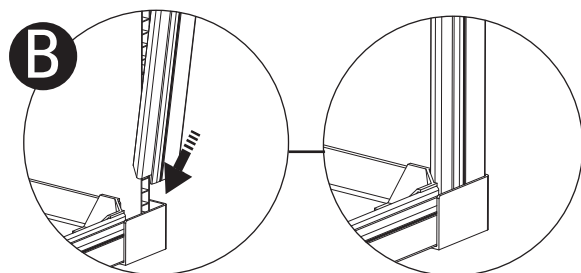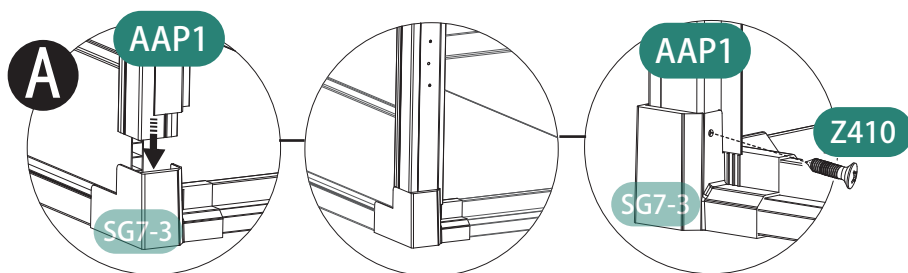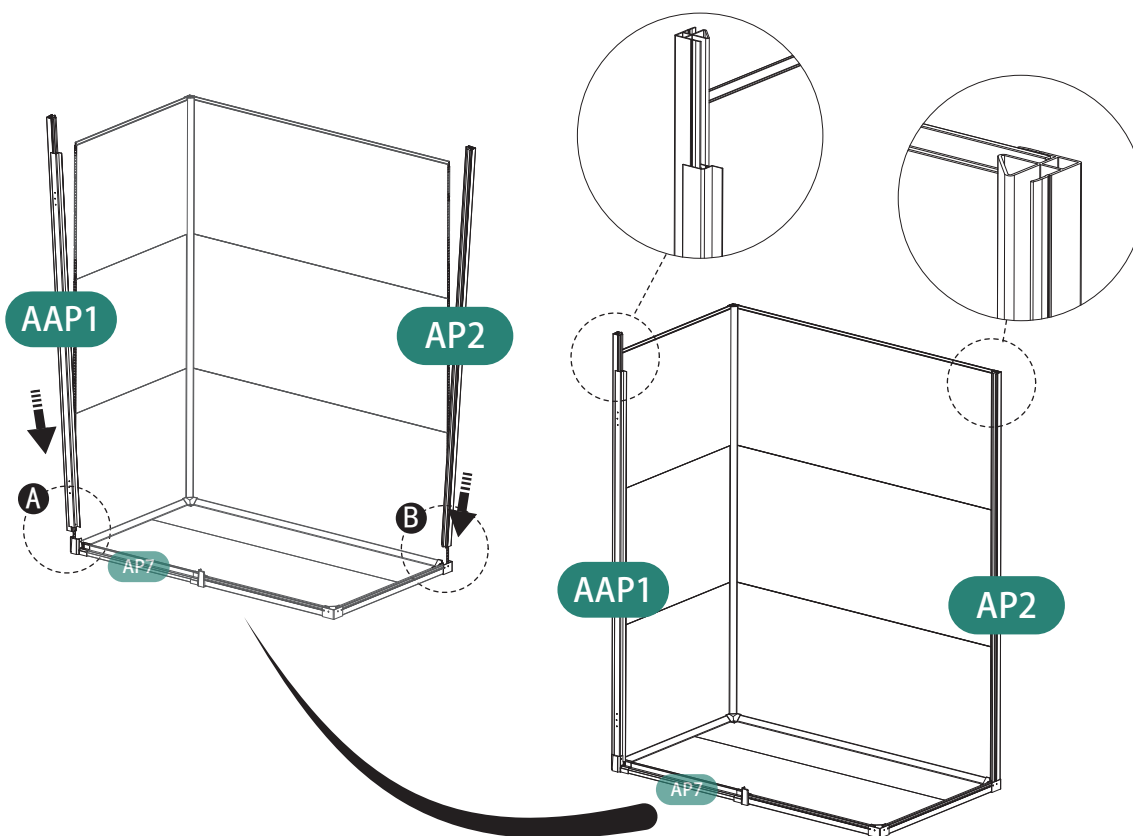


8







AW1-1 3pcs




SG8

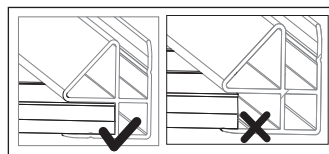

● Fully fit the panel inside the profile

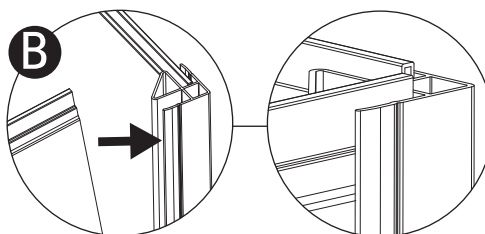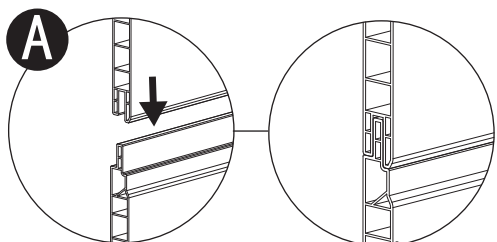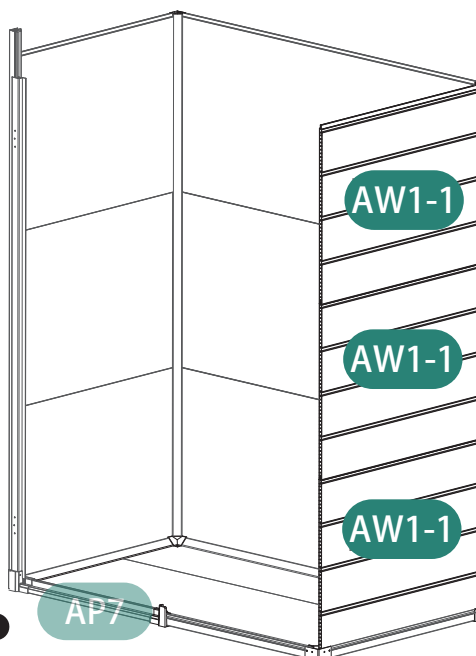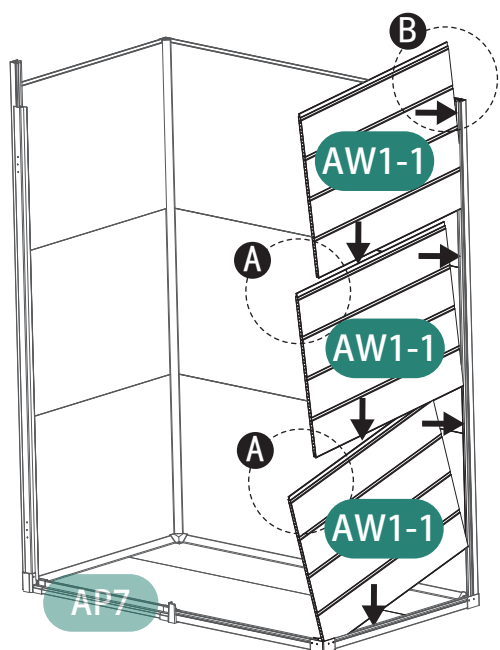

9



(AP1) 1pc





(AW1-2) 1pc




(AW1-3) 1pc





(SG8)

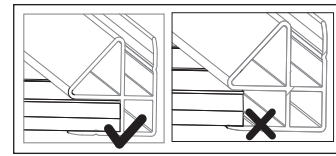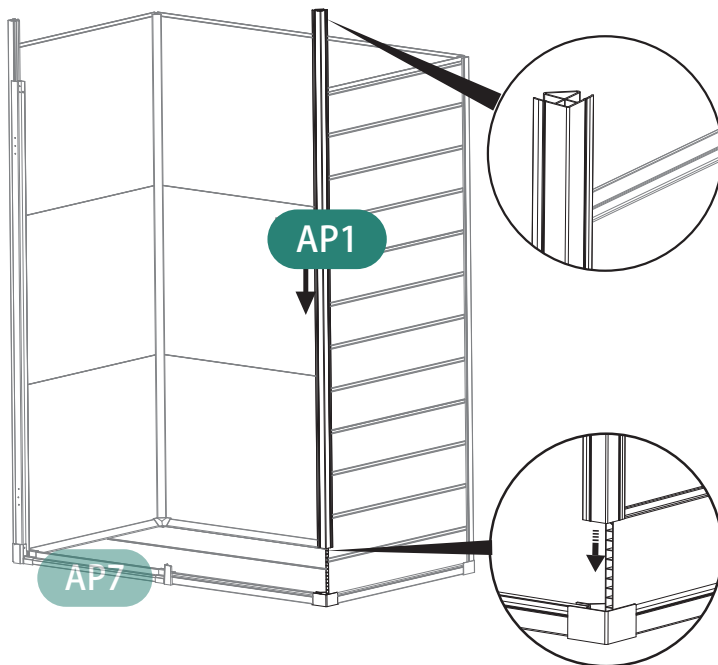

● Fully fit the panel inside the profile

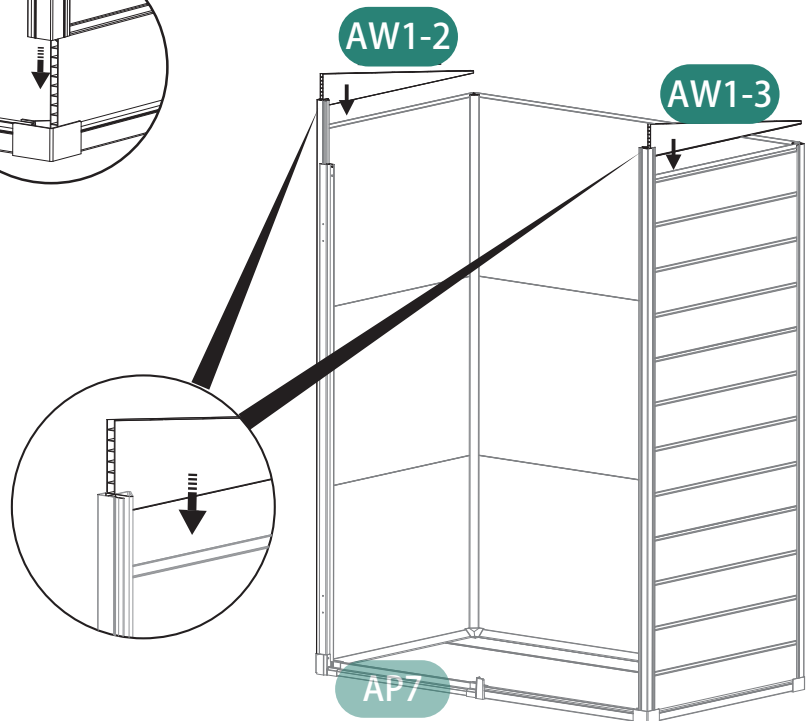


10

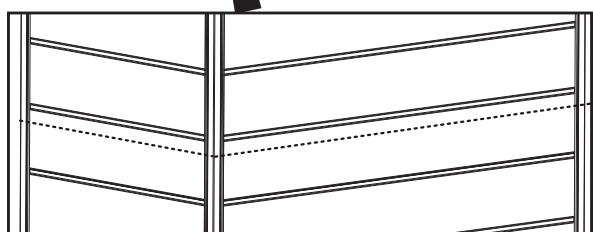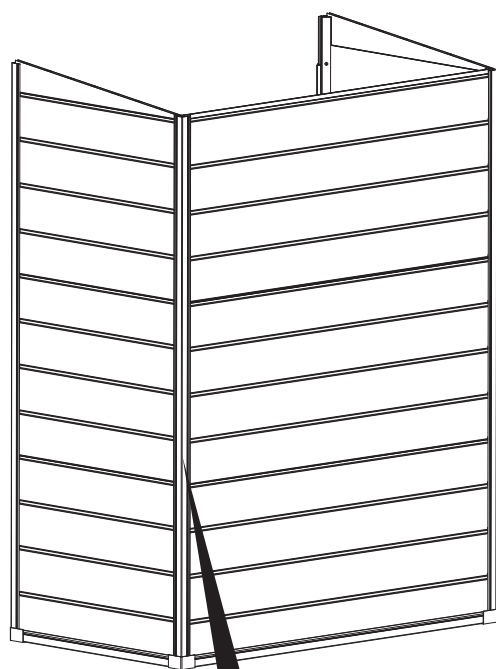

● The panels stripe should be horizontal


A B = C D

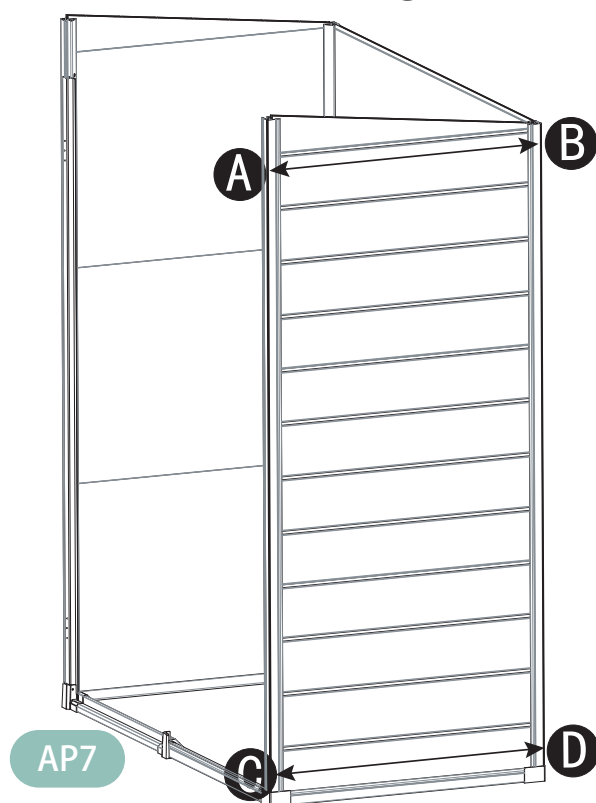


11



AW2-3 1pc




AW2-1 1pc




AW2-2 1pc




SG8

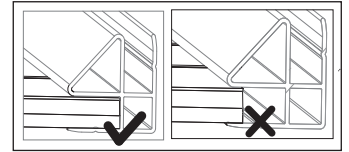


● Fully fit the panel inside the profile

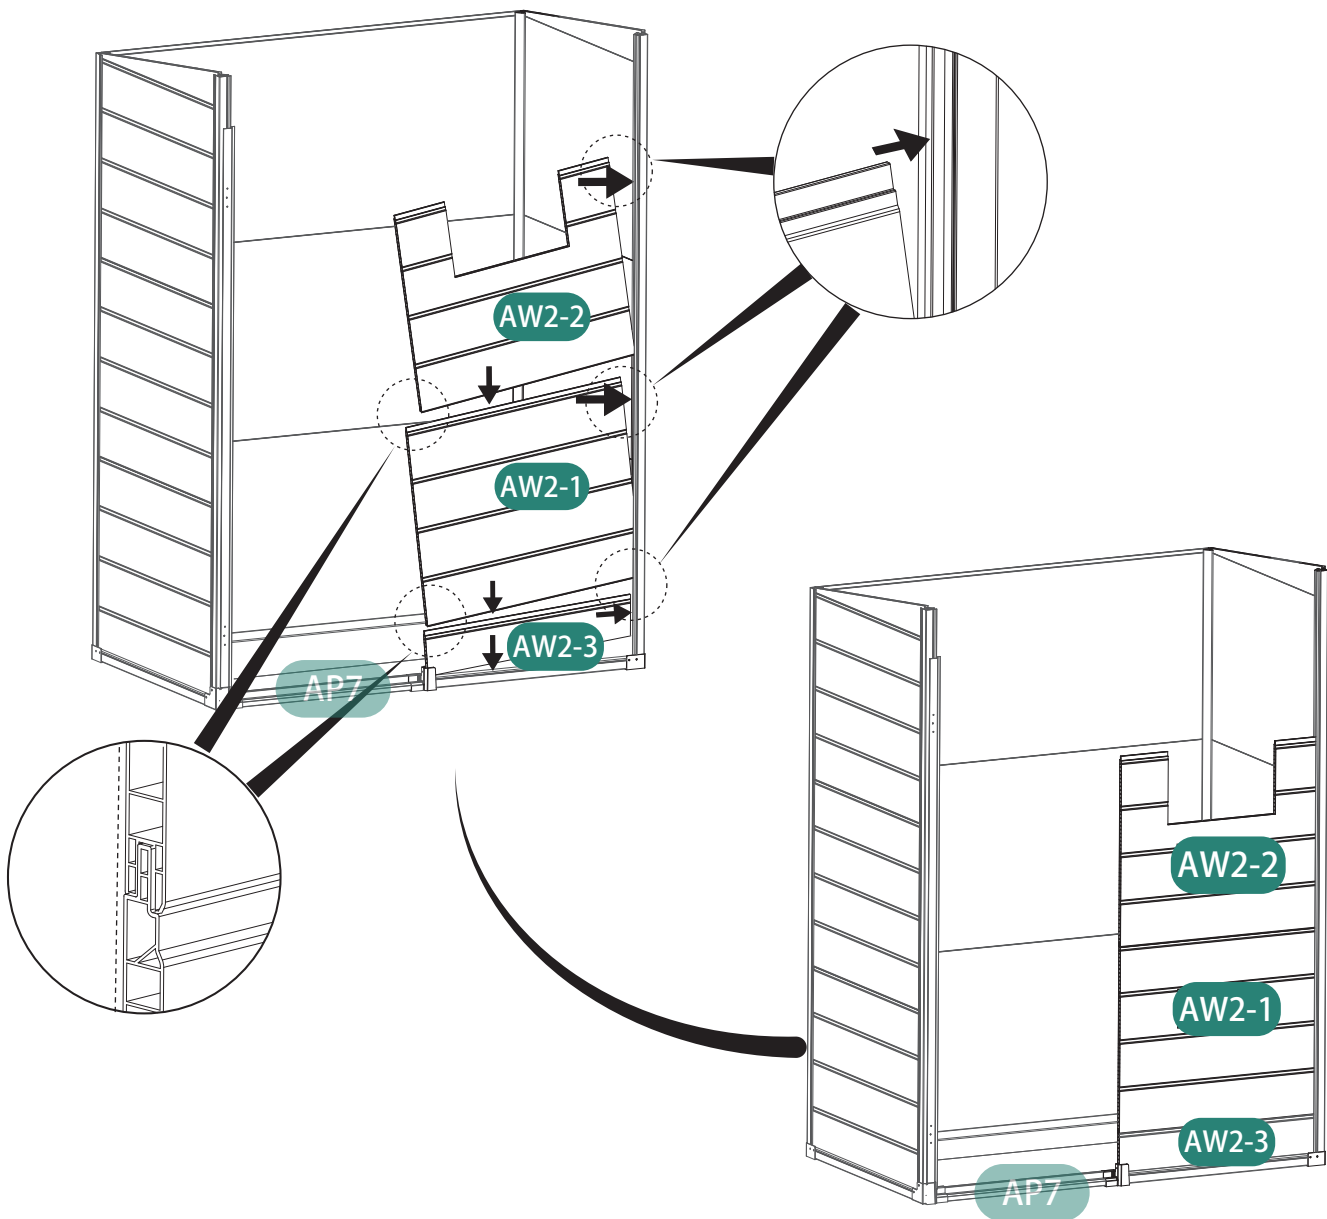





12






AA1R 1pc




Z410 1pc

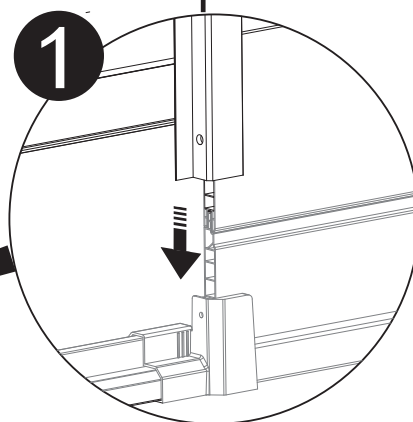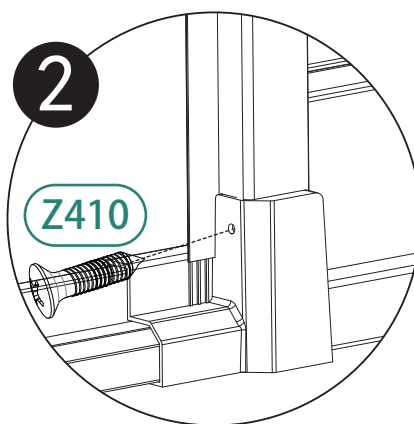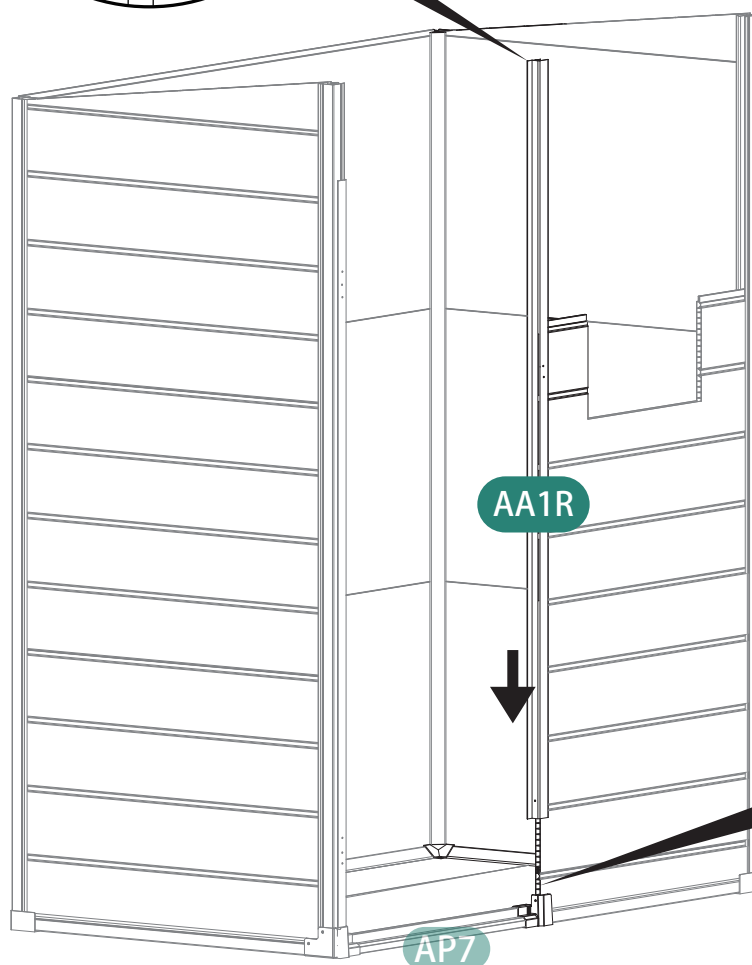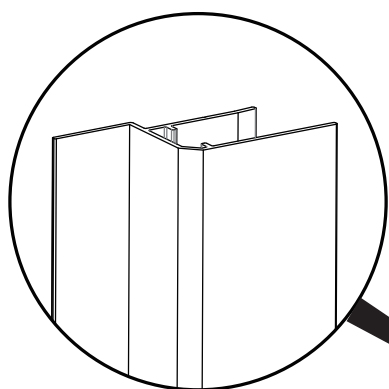


13

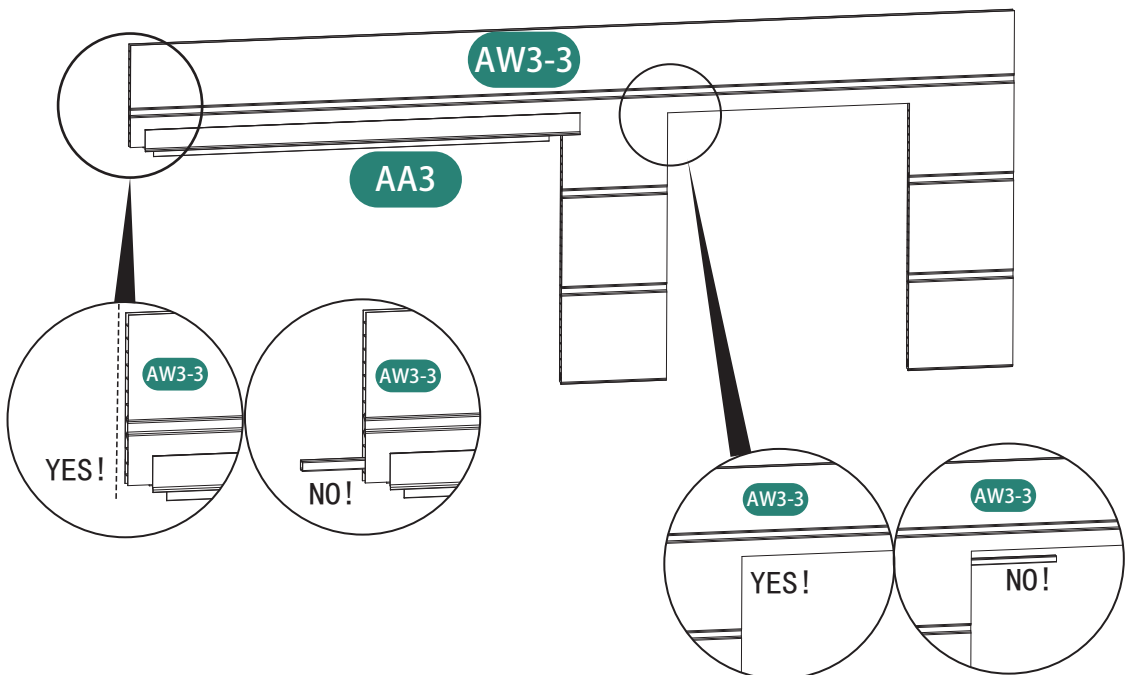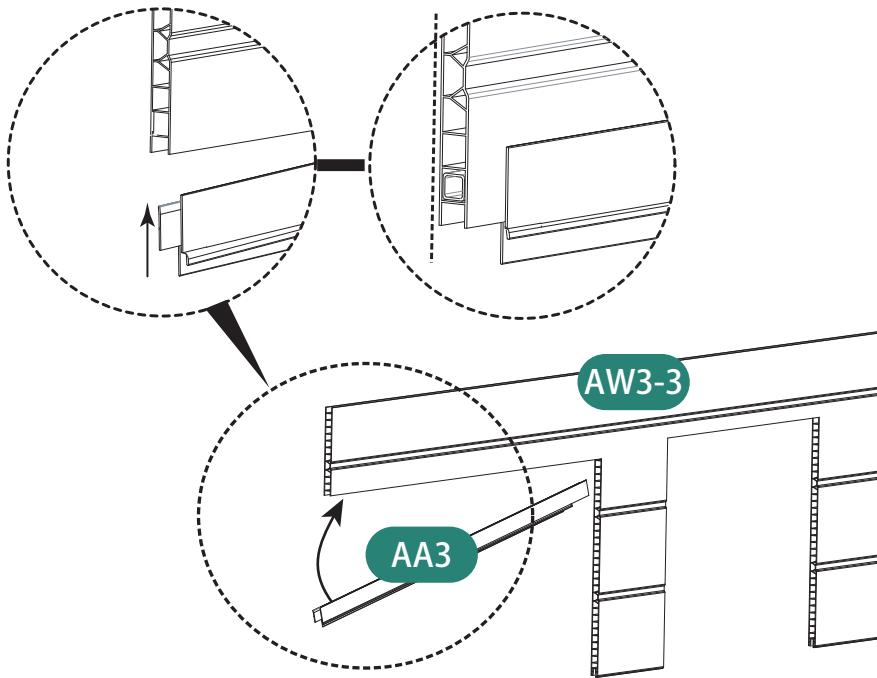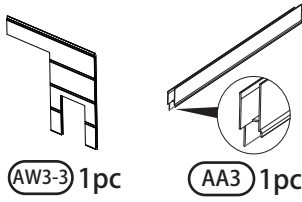

14






AW3-3 1pc

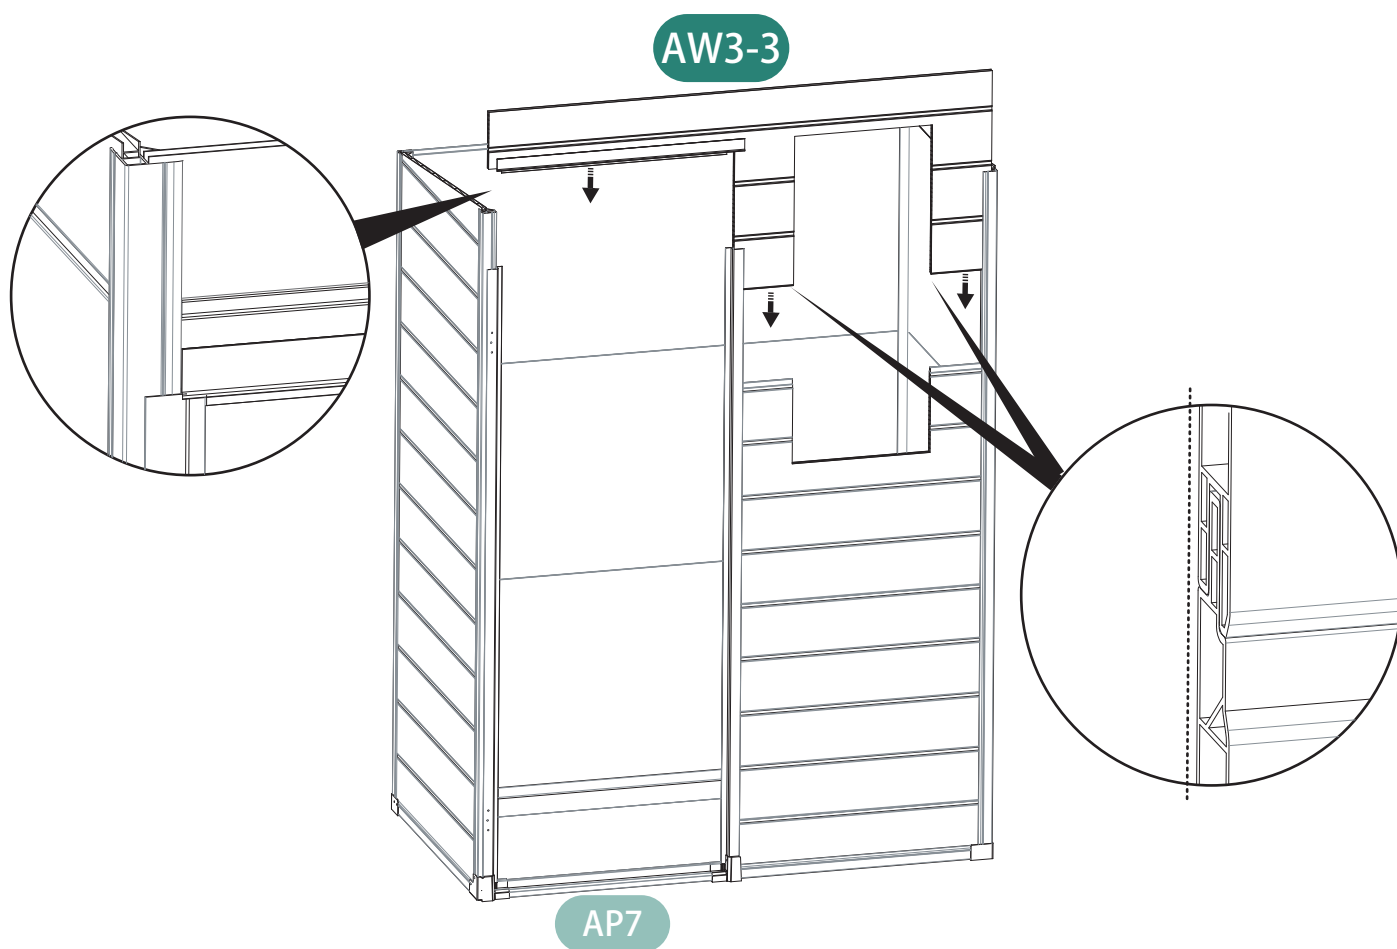


15


Determine seam alignment.

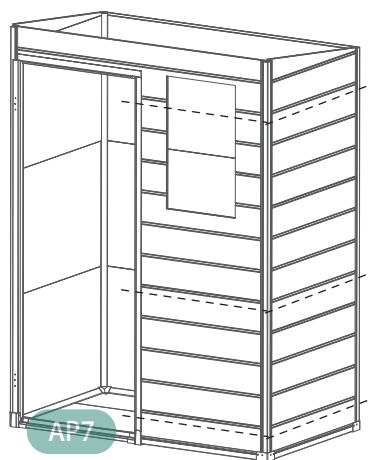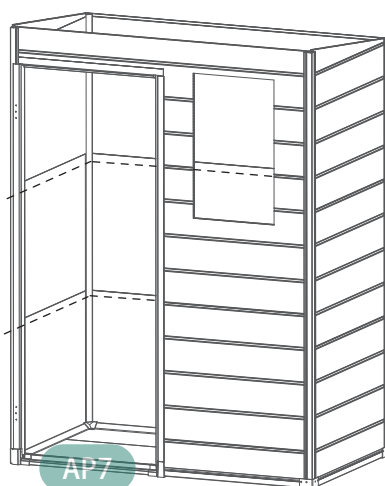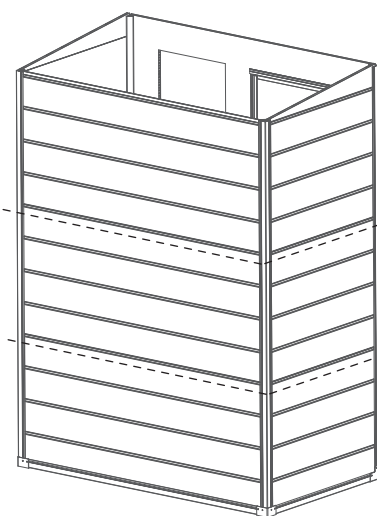


$AB=CD$

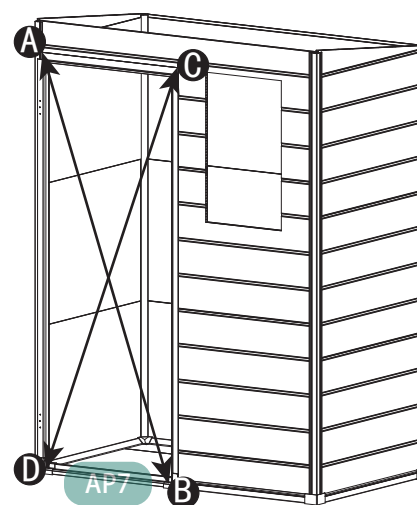


16







SG12 1pc



ZW413 4pcs

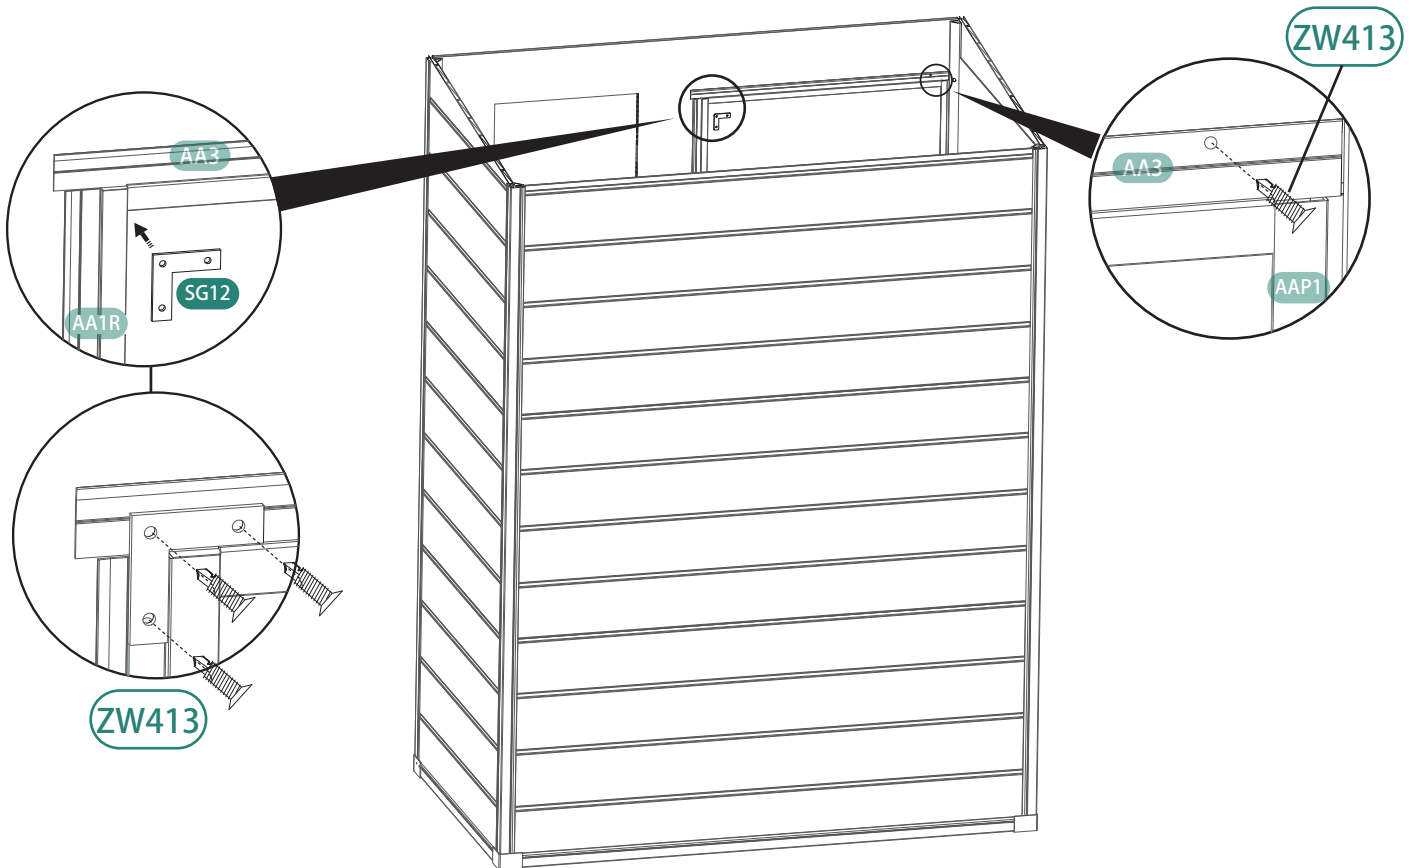


• fixation after aligning!

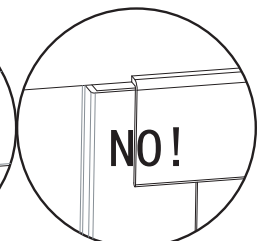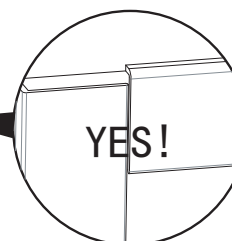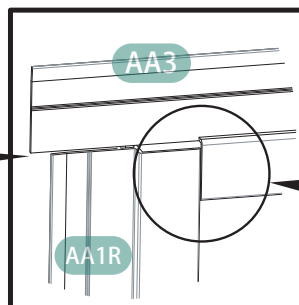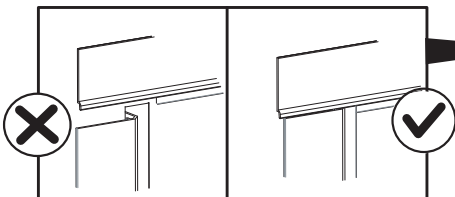

ASSEMBLY INSTRUCTIONS




17



Z420 24pcs


Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.

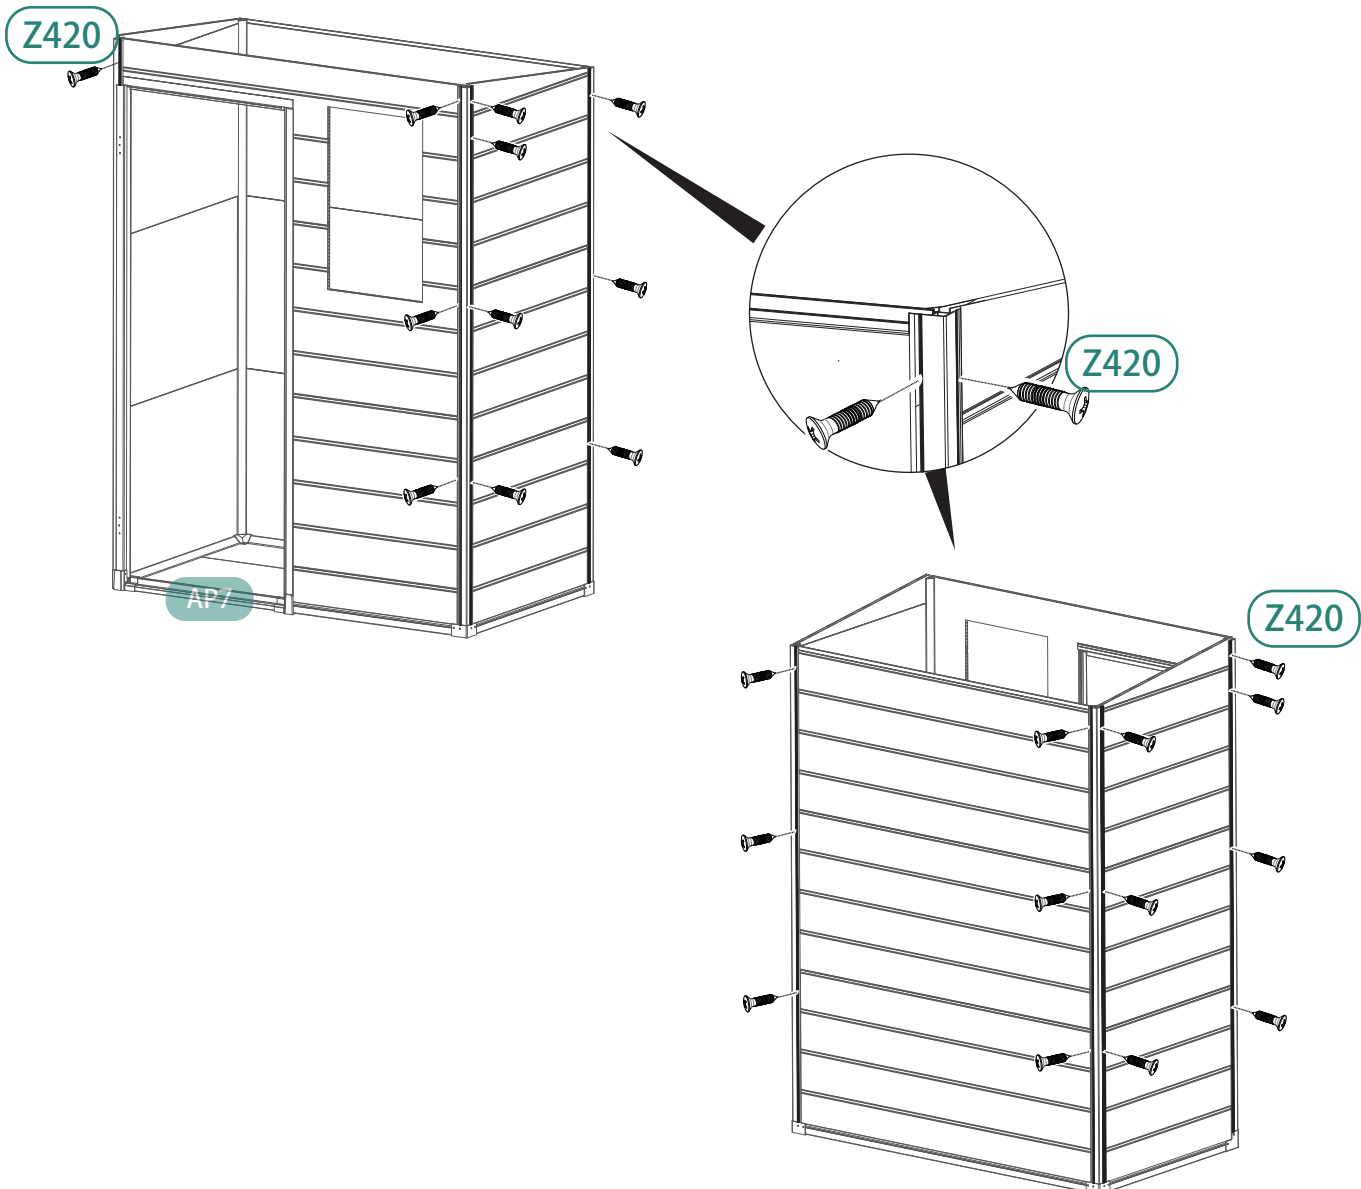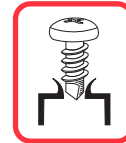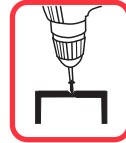

ASSEMBLY INSTRUCTIONS



18




(Z420) 13pcs

Caution:


Please use Drill  to predrill a hole at depth 1mm before screw.

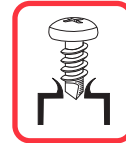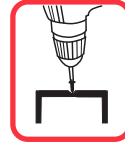


● Fully fit the panel inside the profile

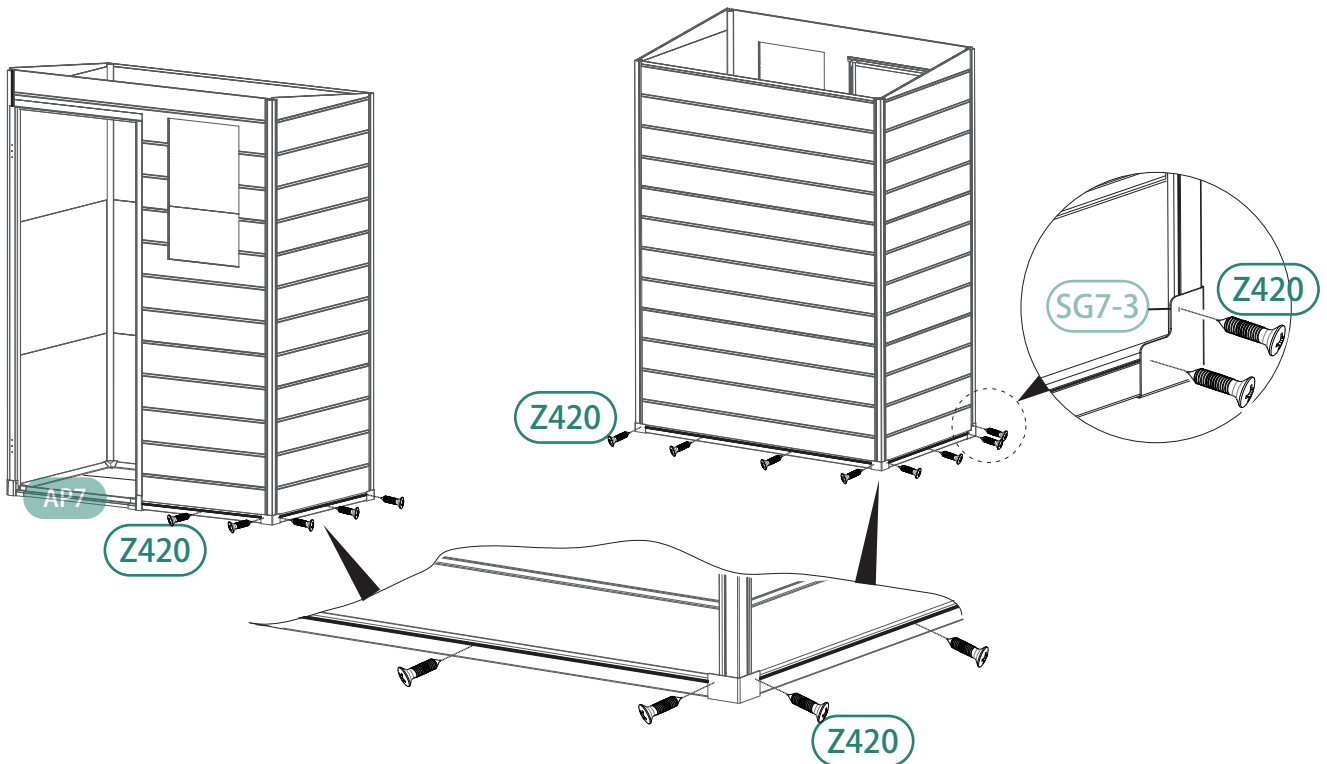

Roof Assembly

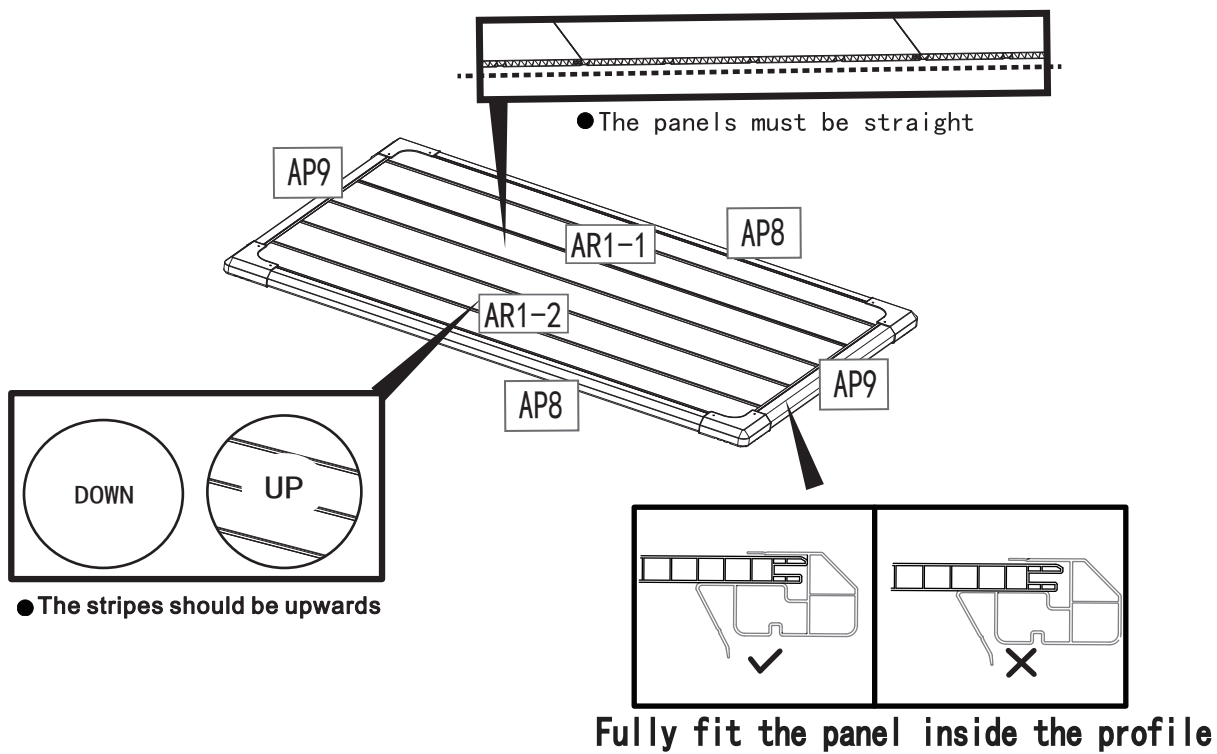

19

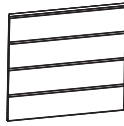

AR1-1 1pc




AR1-2 1pc




AP8 2pcs



AP9 2pcs





SG2 4pcs




SG8



1

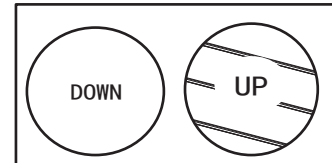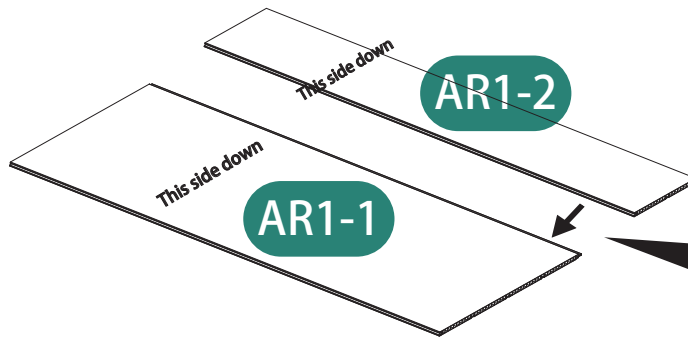


● The stripes should be upwards

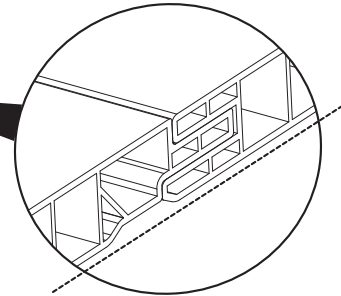

2

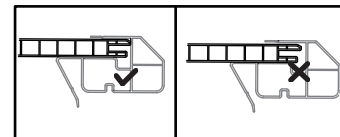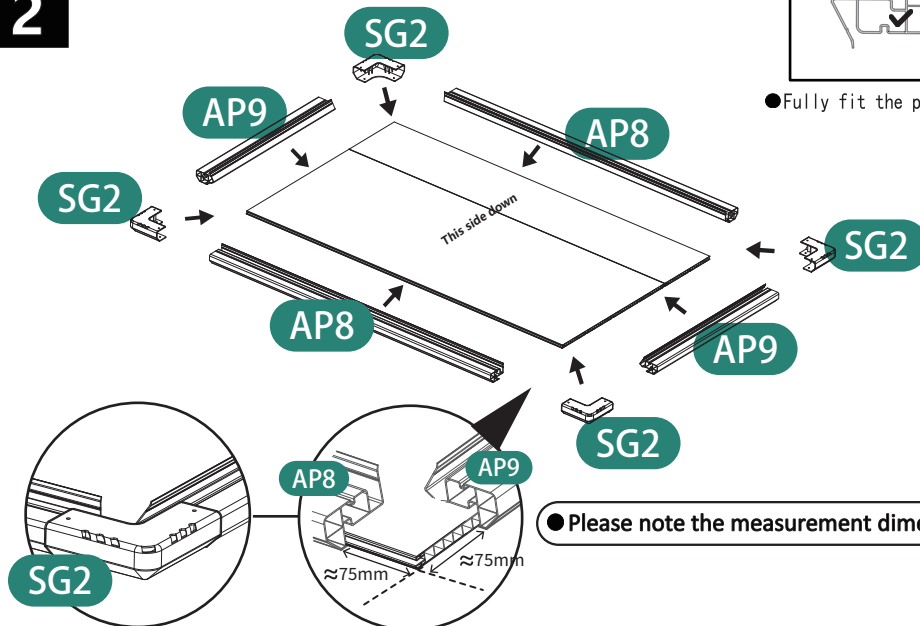


● Fully fit the panel inside the profile

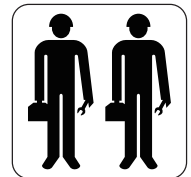


● Please note the measurement dimensions


20




(Z410) 8pcs

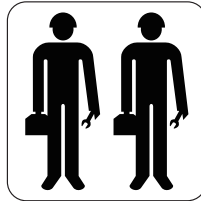


1

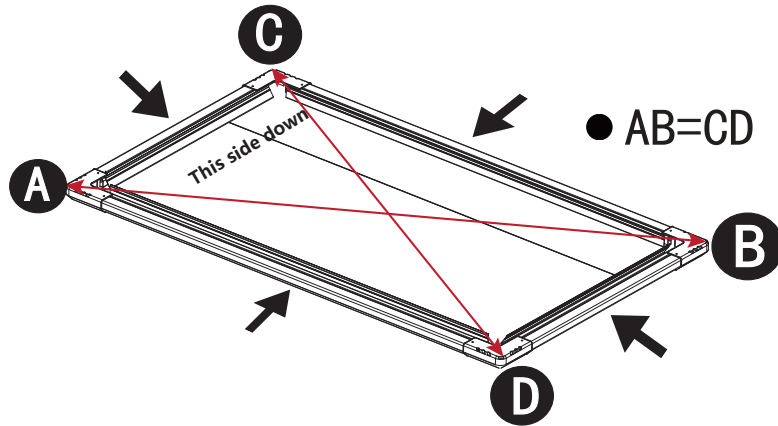

2

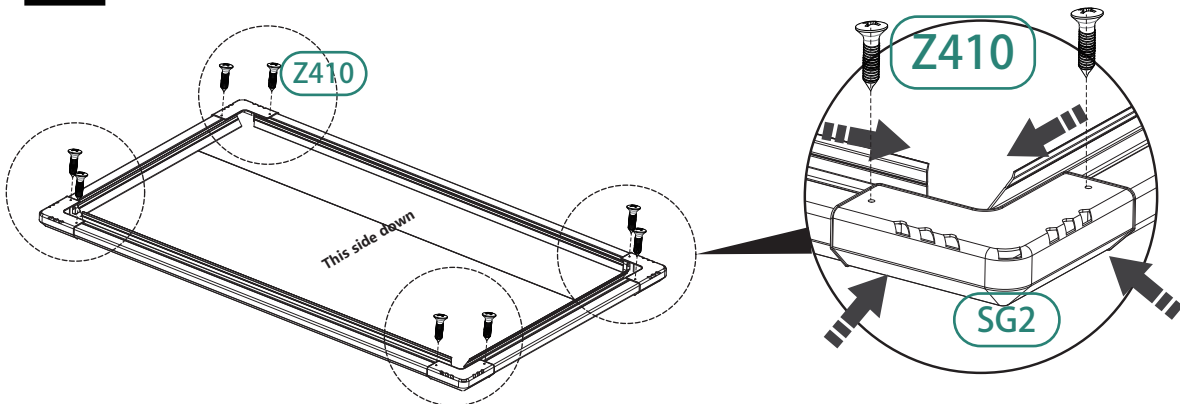


3

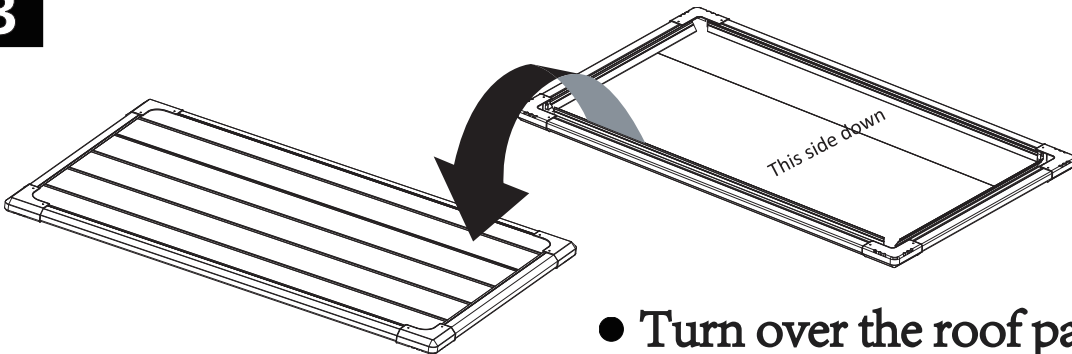


● Turn over the roof panel

ASSEMBLY INSTRUCTIONS

21



Z420 18pcs

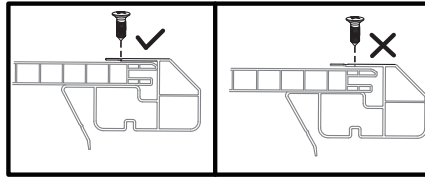


● Nail along the marked line on profile.

Caution:






Please use Drill to predrill a hole at depth 1mm before screw.



1

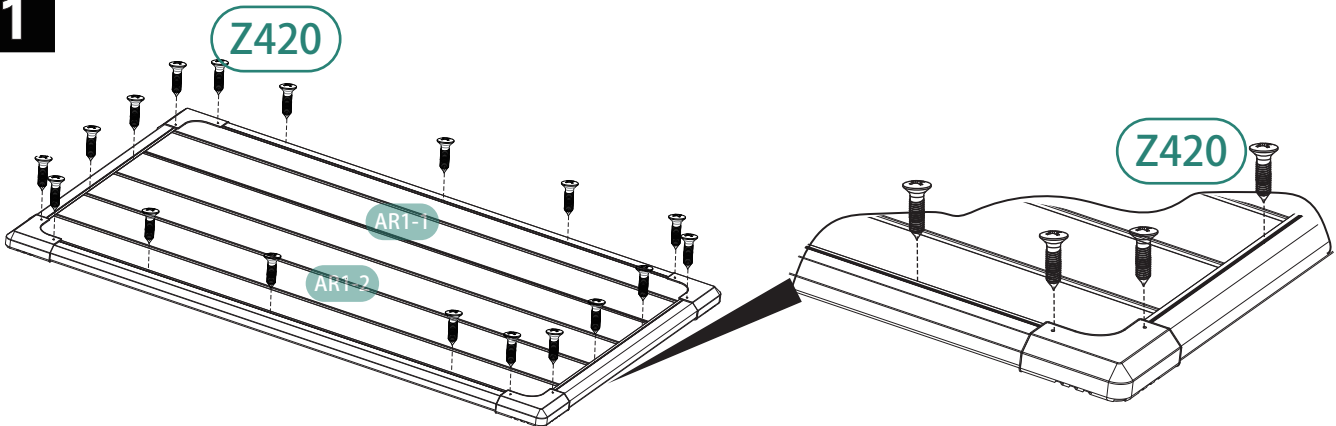


2

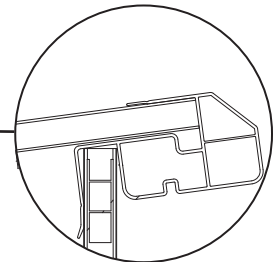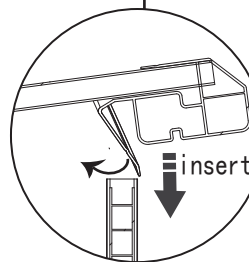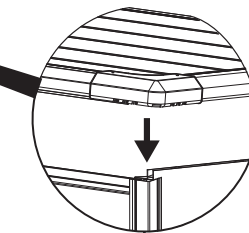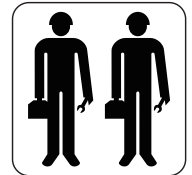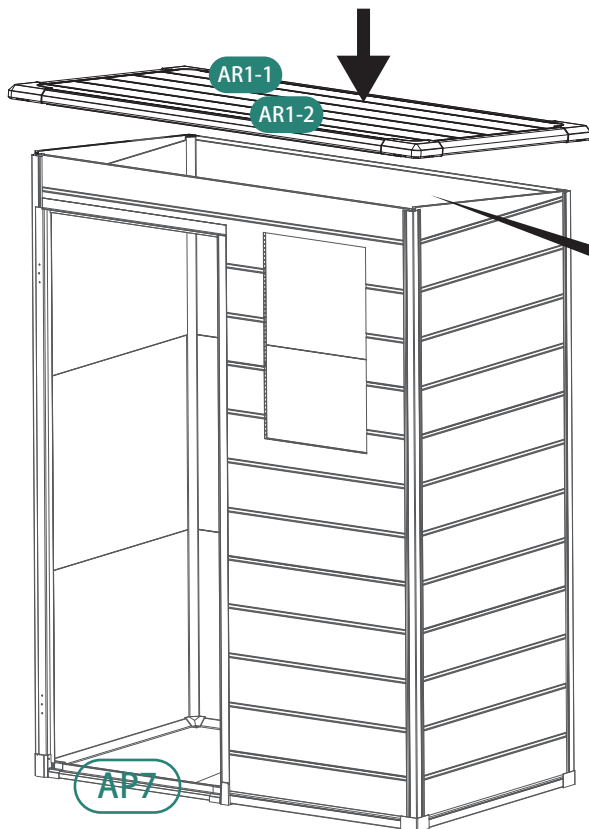

● Fully fit the panel inside the profile

ASSEMBLY INSTRUCTIONS


22



Z420 12pcs





SG8

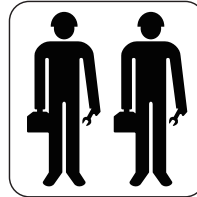


1


- Ensure fully fit the panels inside the profiles of the roof, using the spatula according to the following picture.

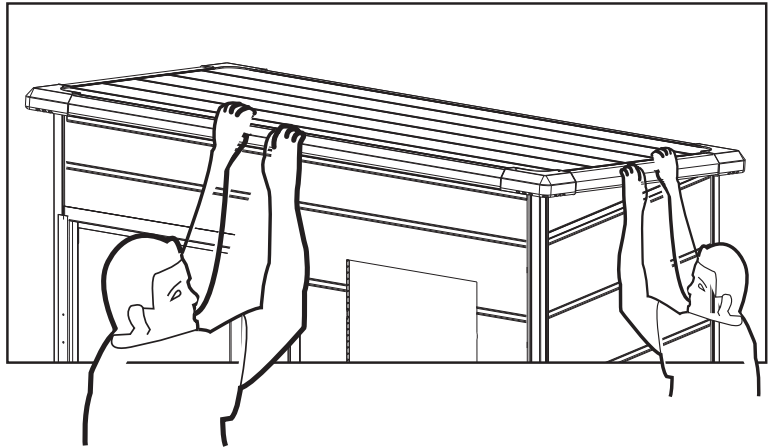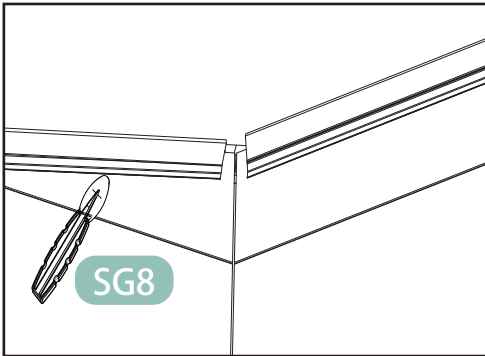

2

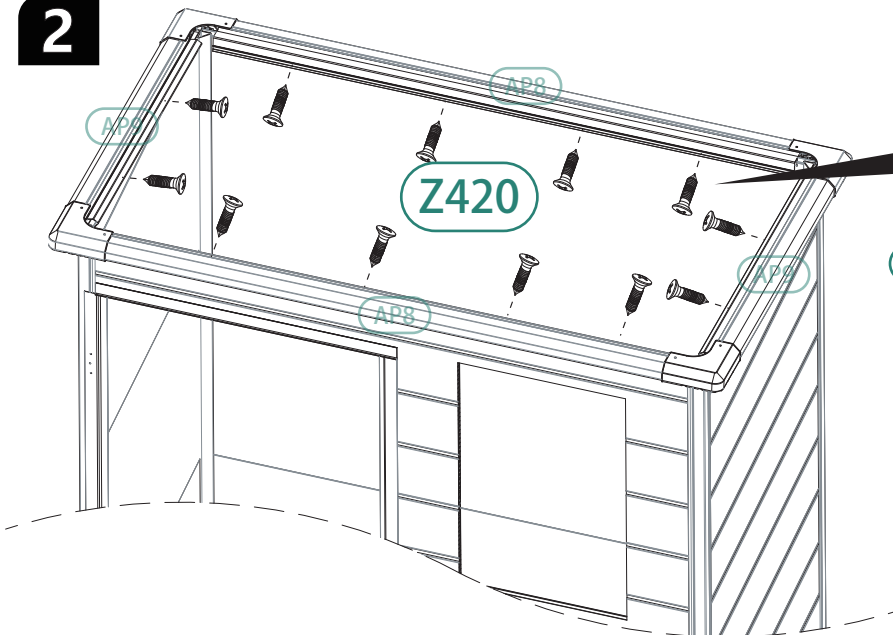

- Please note the nailing direction.

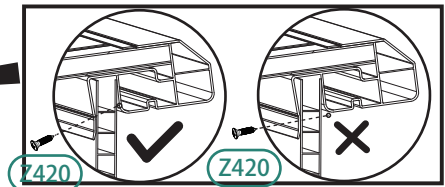


Caution:




Please use Drill to predrill a hole at depth 1mm before screw.




23



SG10 1pc

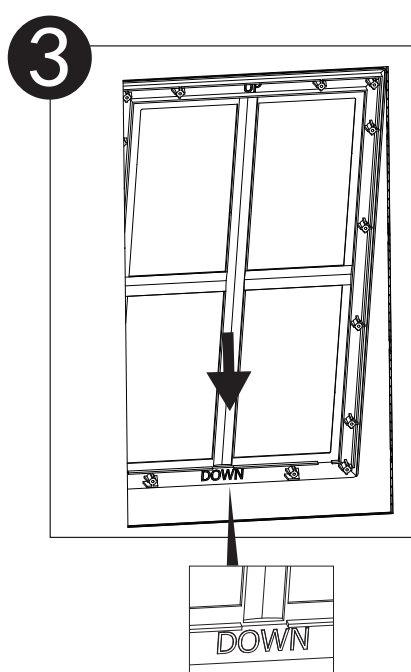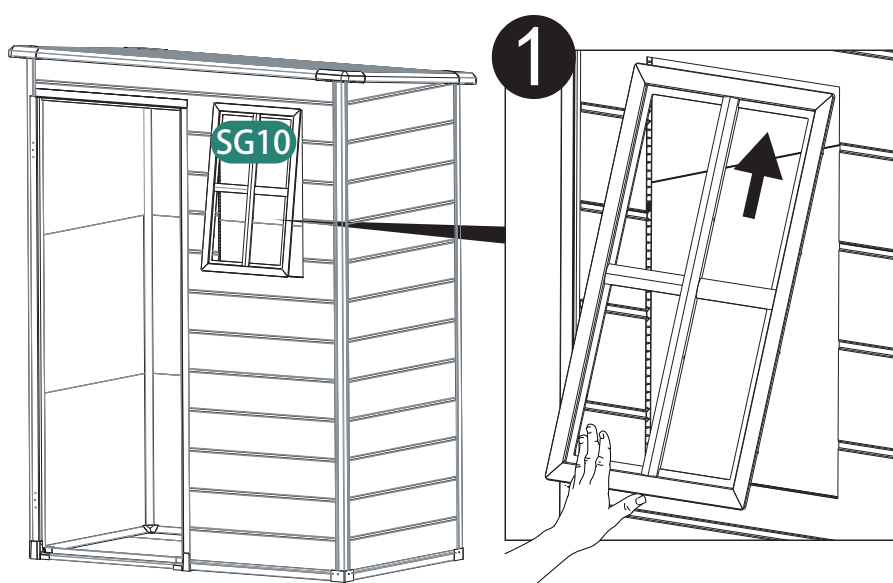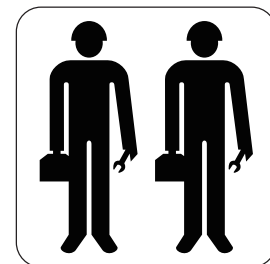


24

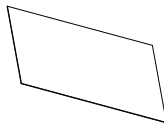


SG101 1pc

- Remove the film before fixing SG101

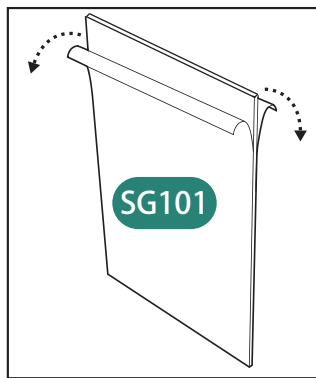

SG101

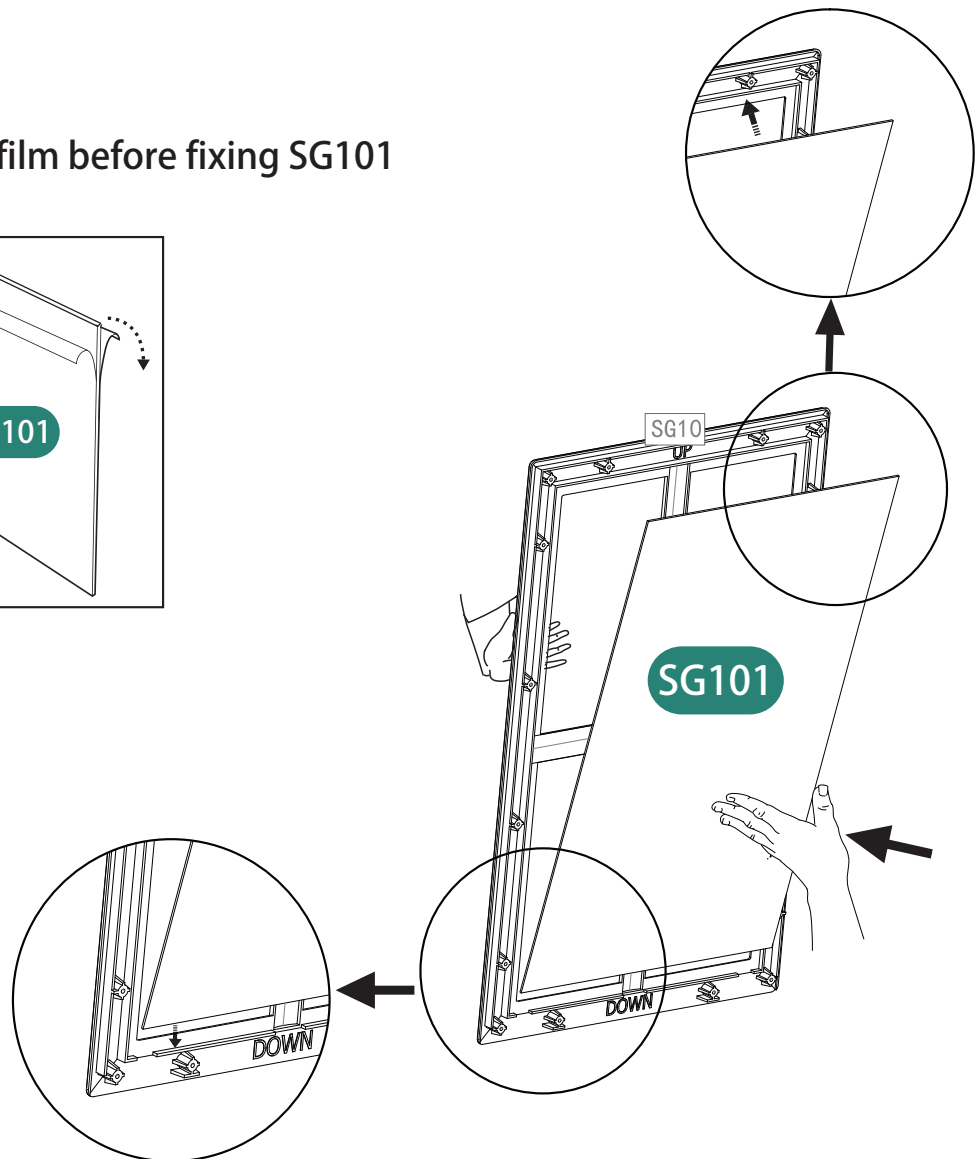


- Need two persons to fix SG101,
one person presses it,
and the other person assembles it.

25




SG102 1pc




Z410 16pcs


1

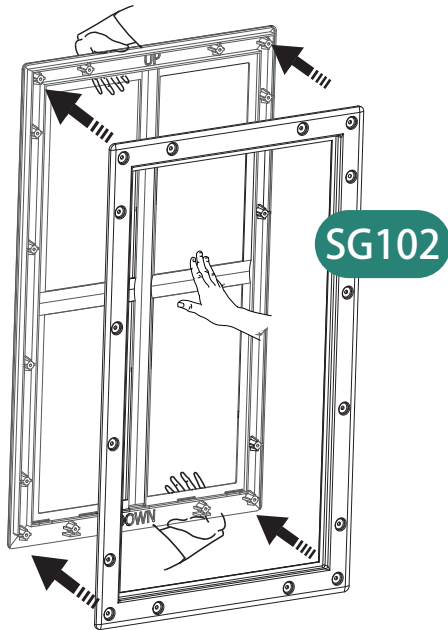


2

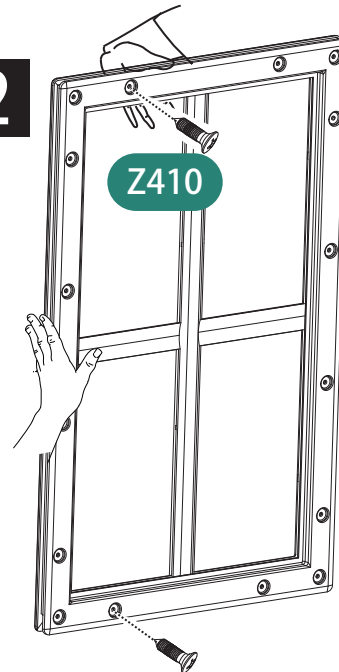


3

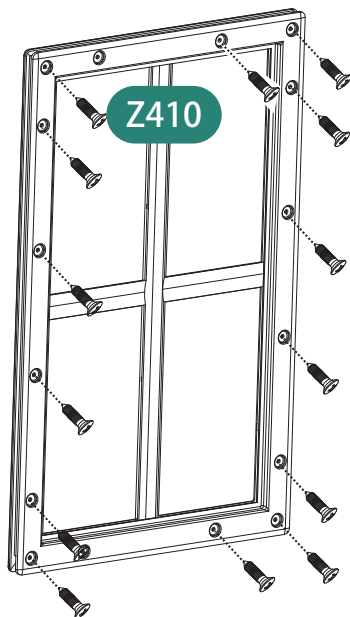


4

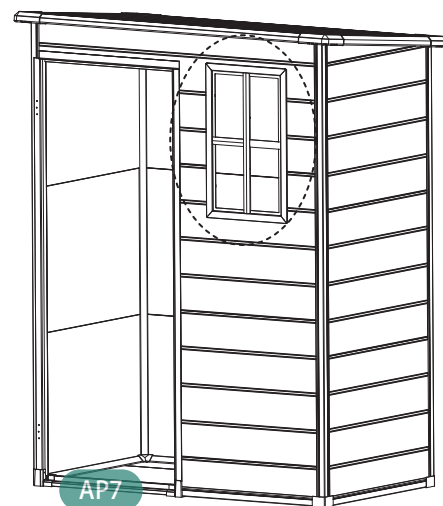



26




SG14 4pcs



Z420 4pcs

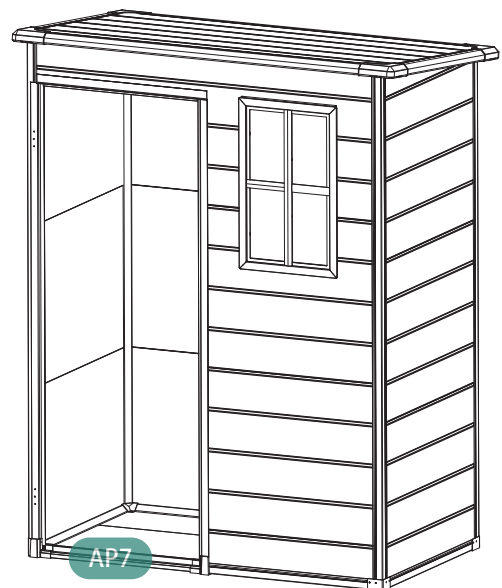
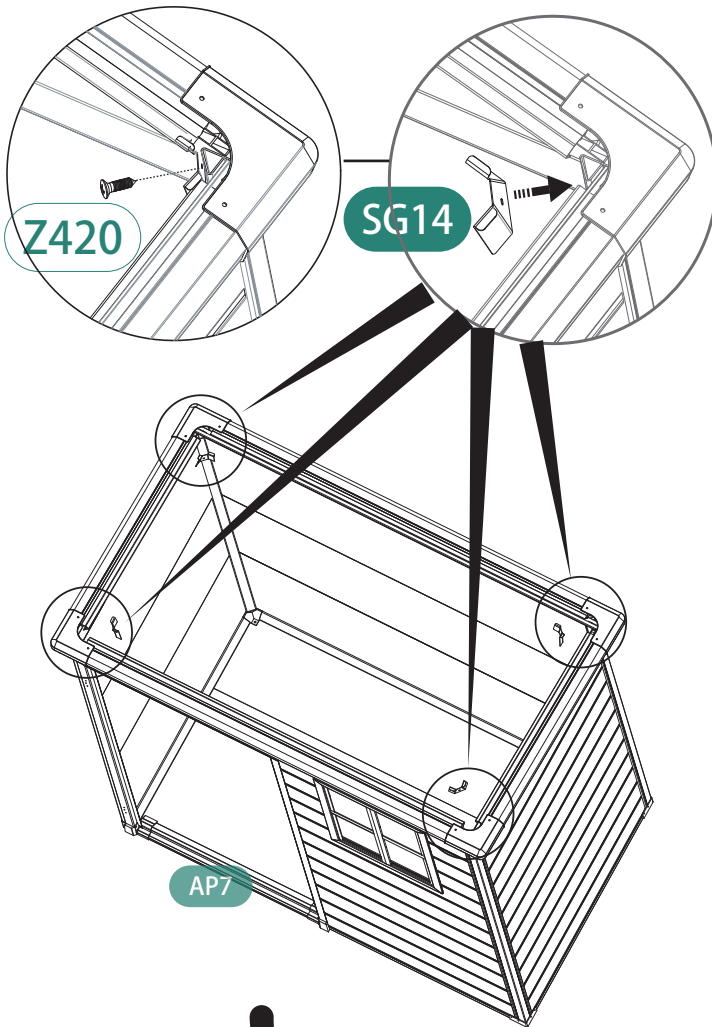


DOOR SECTION

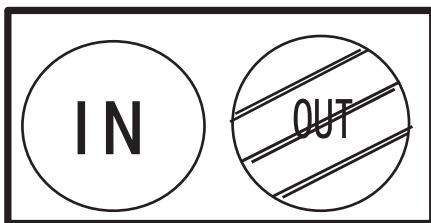



The stripes should be outside

Door mount this is above

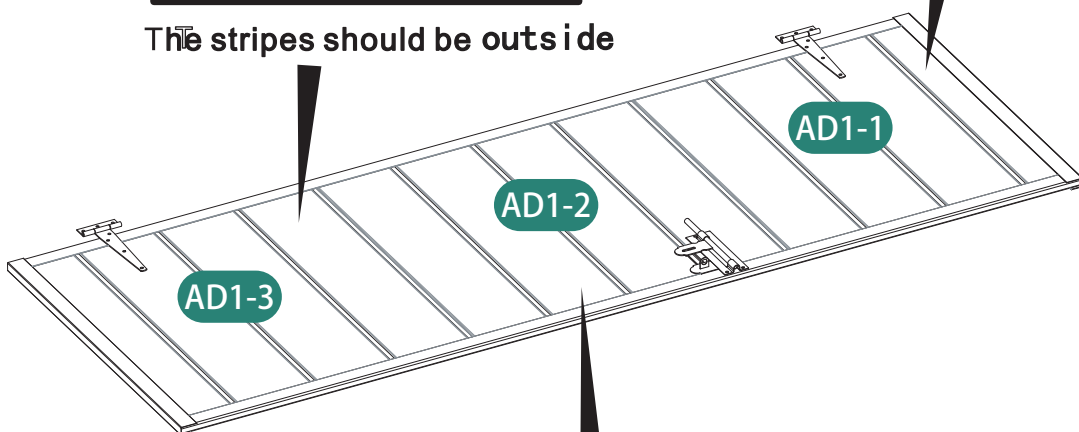


The boards must be straight


27

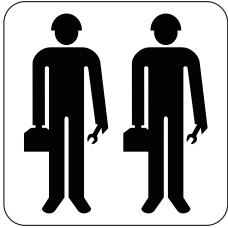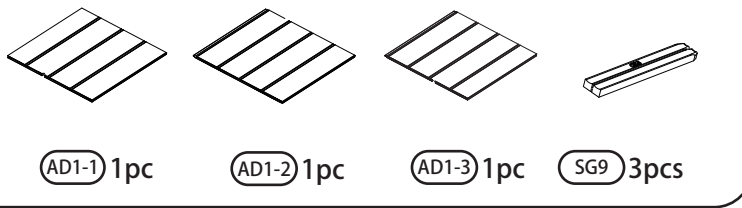


1

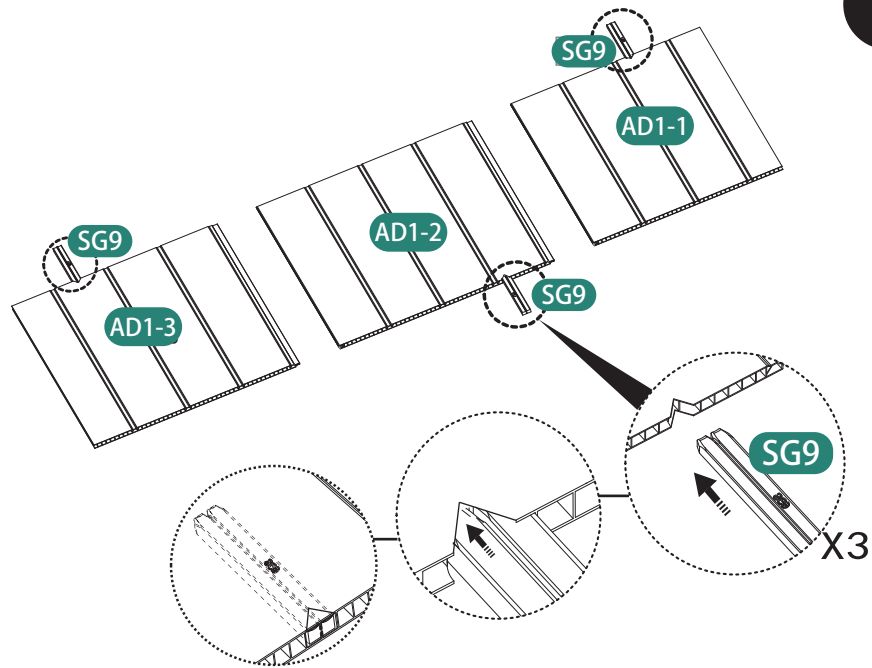

2

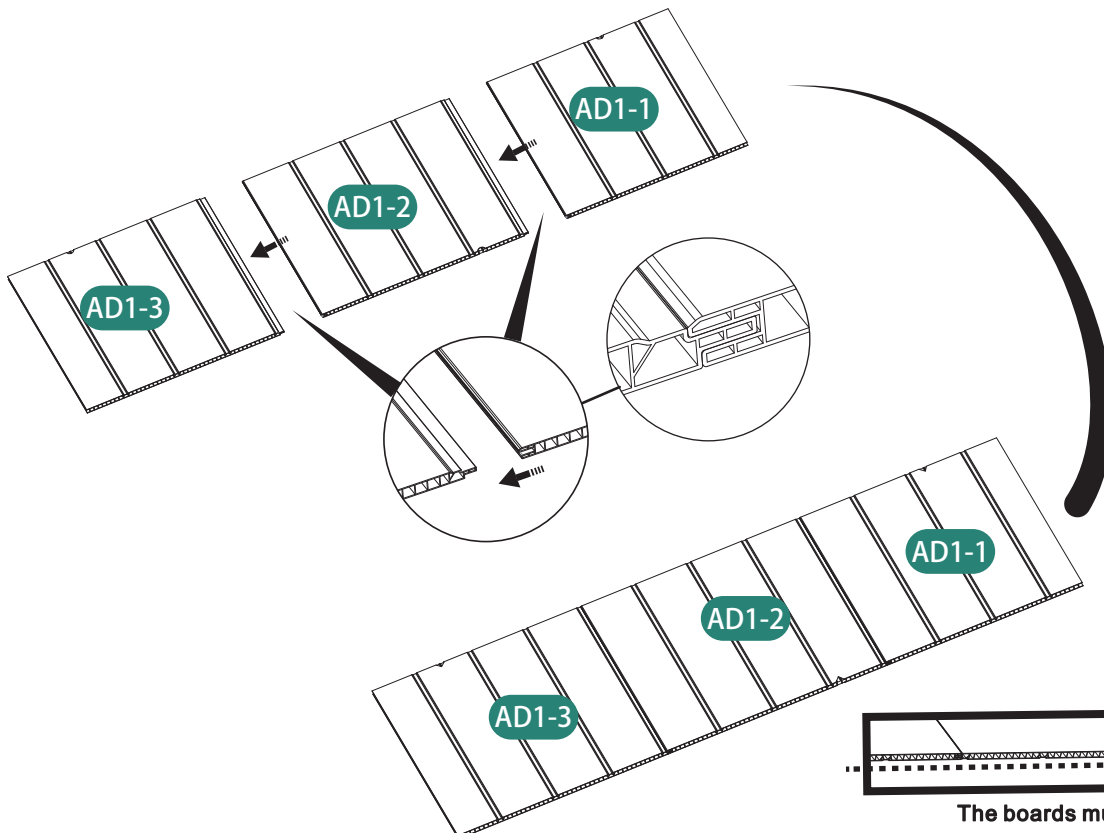


28



AA2R 1pc




AA2L 1pc

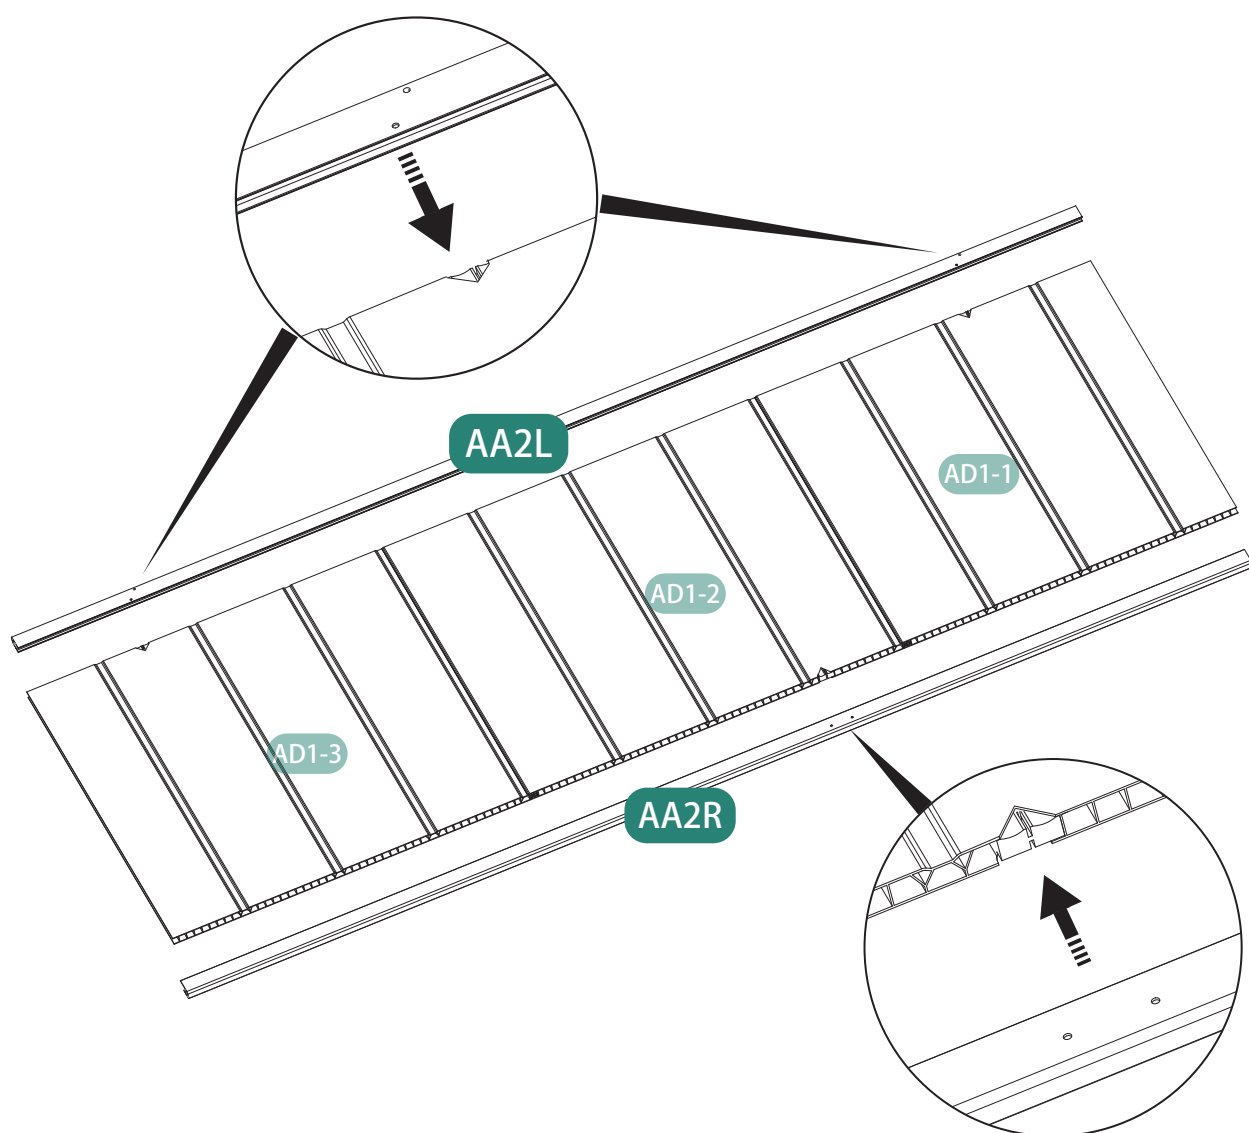


29





AA4 1pc



AS1 1pc

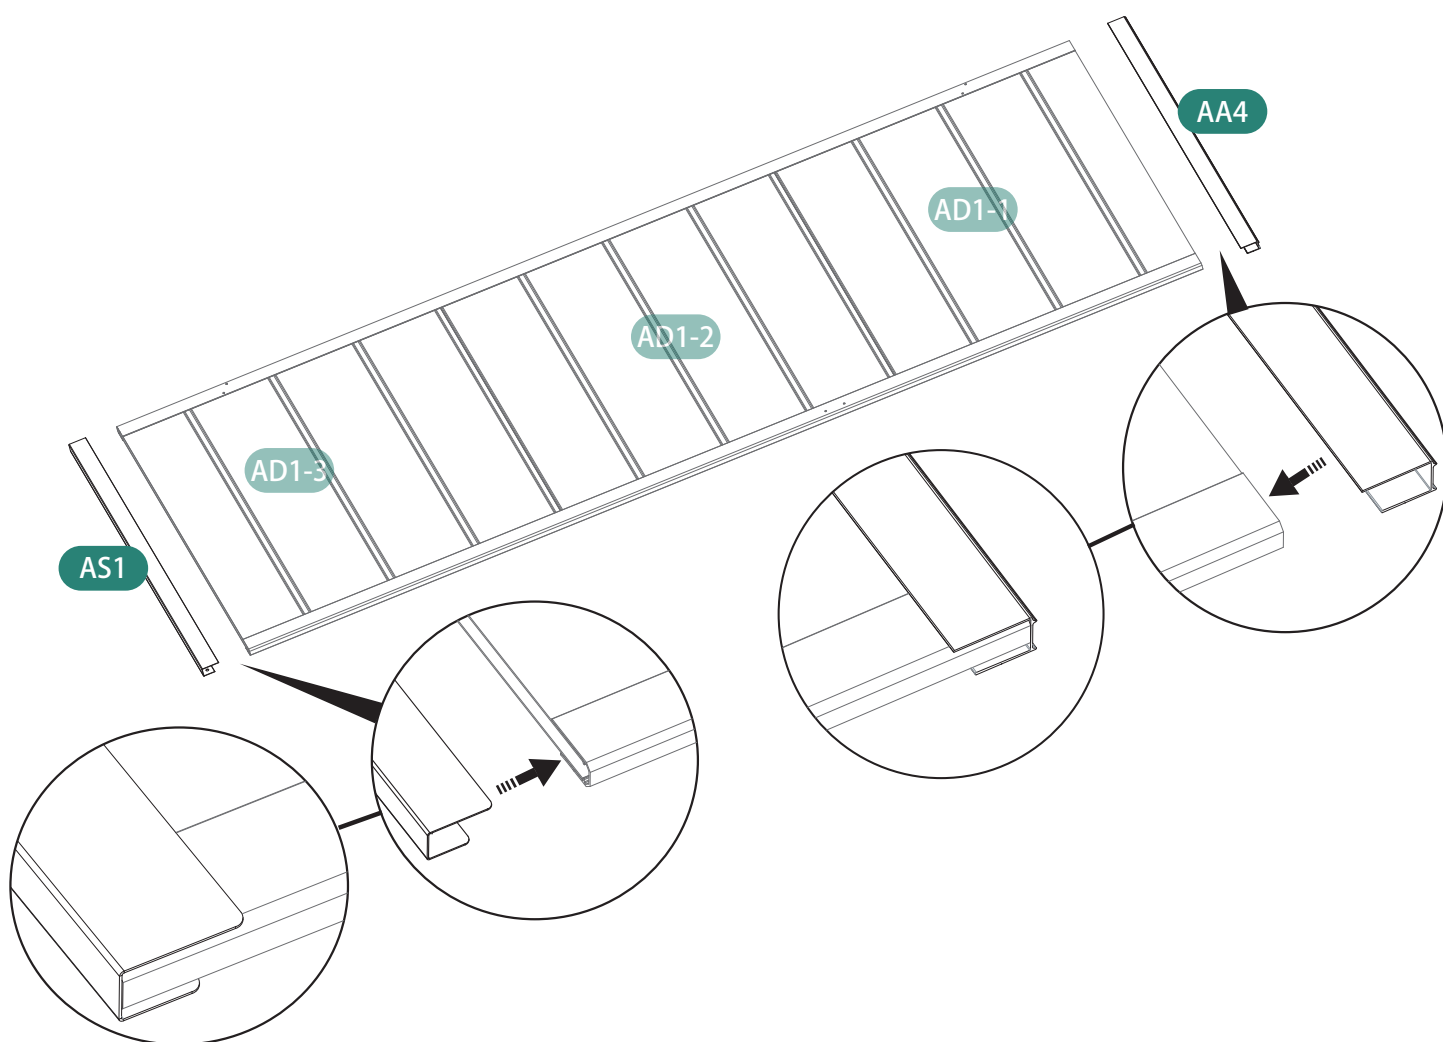


30

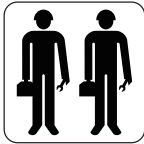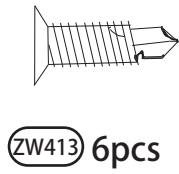


1

Turn the doors over

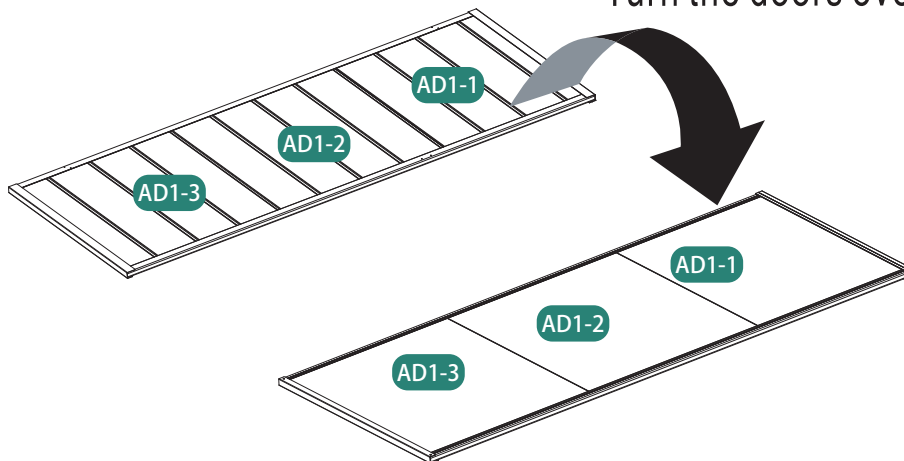


2


$AB=CD$

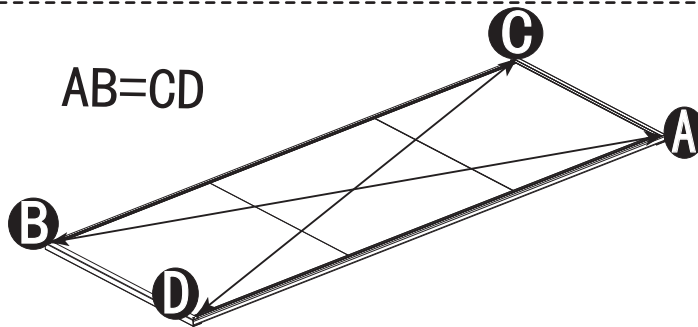


3

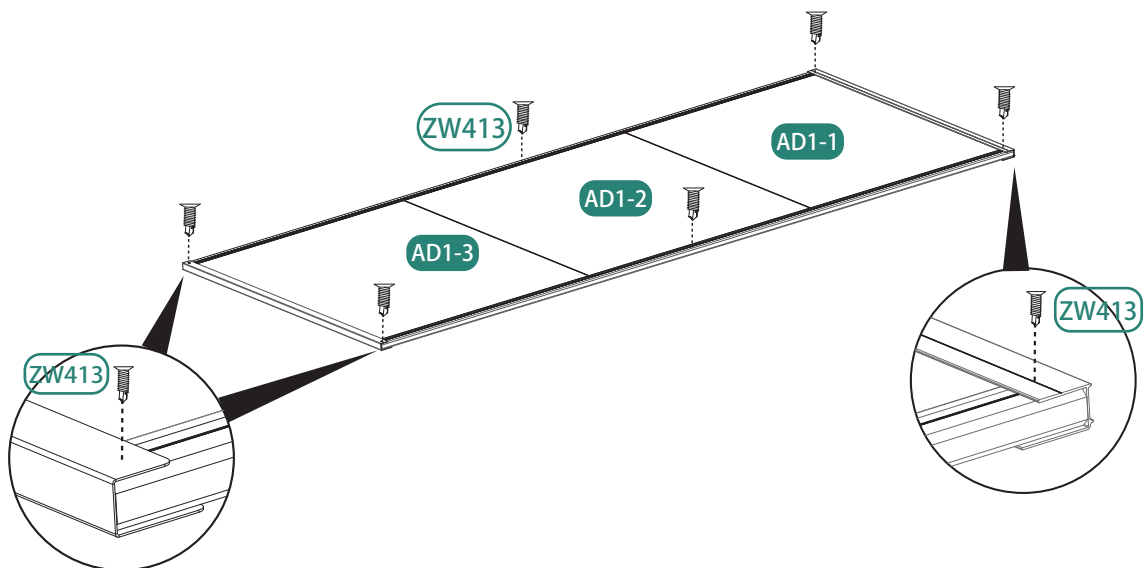


31




(Z410) 4pcs




(MO1) 2pcs

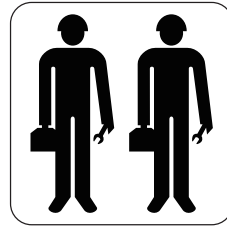

1

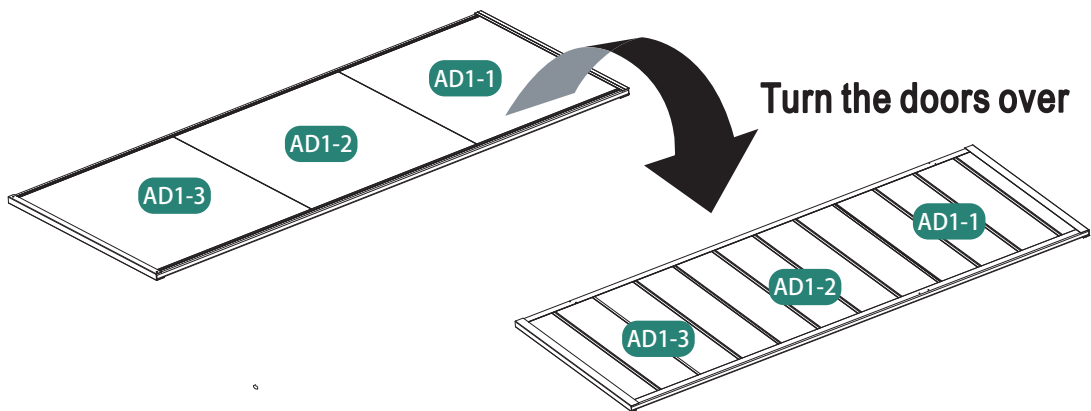


2

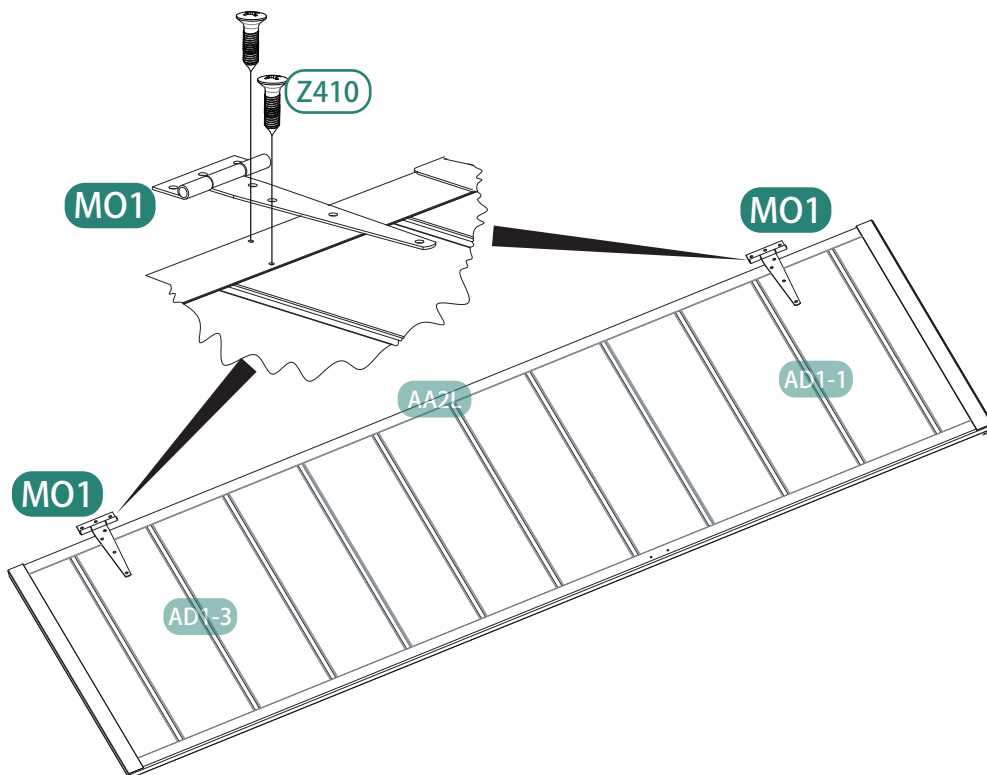


ASSEMBLY INSTRUCTIONS


32



M03-6R 1pc




M03-7 1pc




Z410 4pcs

1


1-1

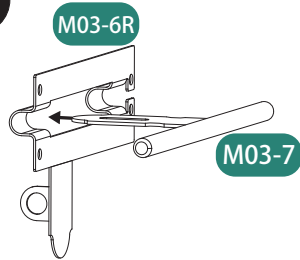


1-2

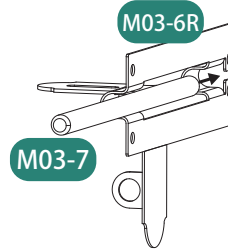


1-3

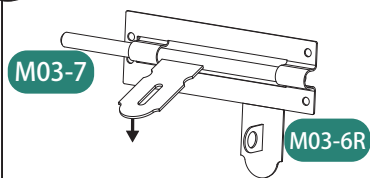

1-4

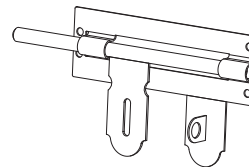

2

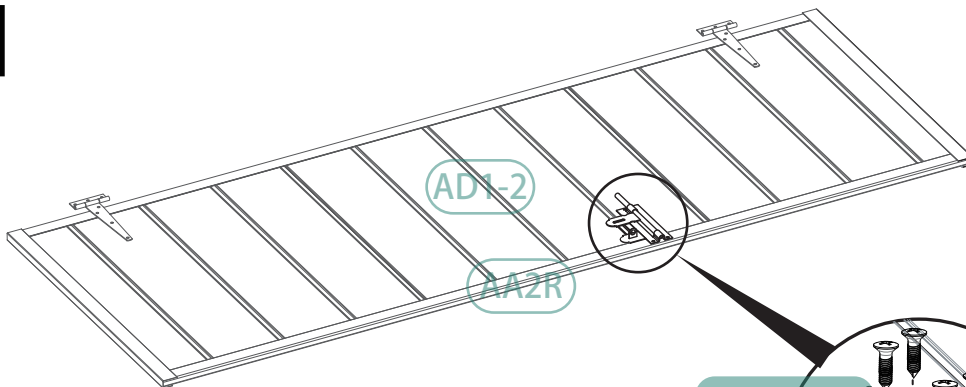

AD1-2




AA2R

M03-6R M03-7

Z410



AA2R

ASSEMBLY INSTRUCTIONS

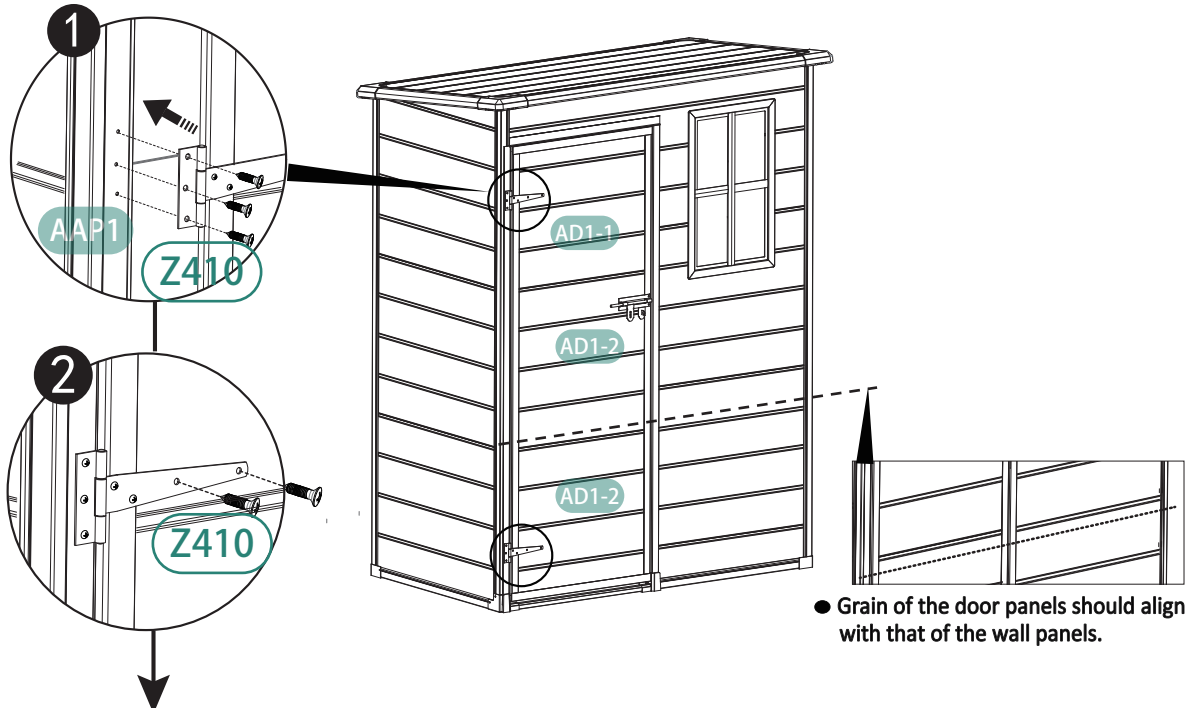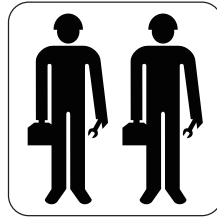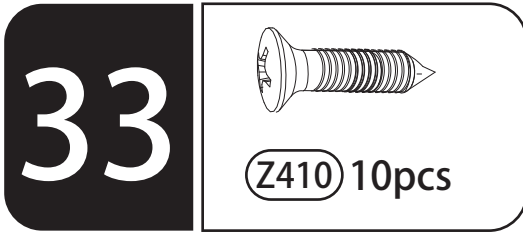


- Grain of the door panels should align with that of the wall panels.

Nail the door after place adjustment and fasten all the screws.

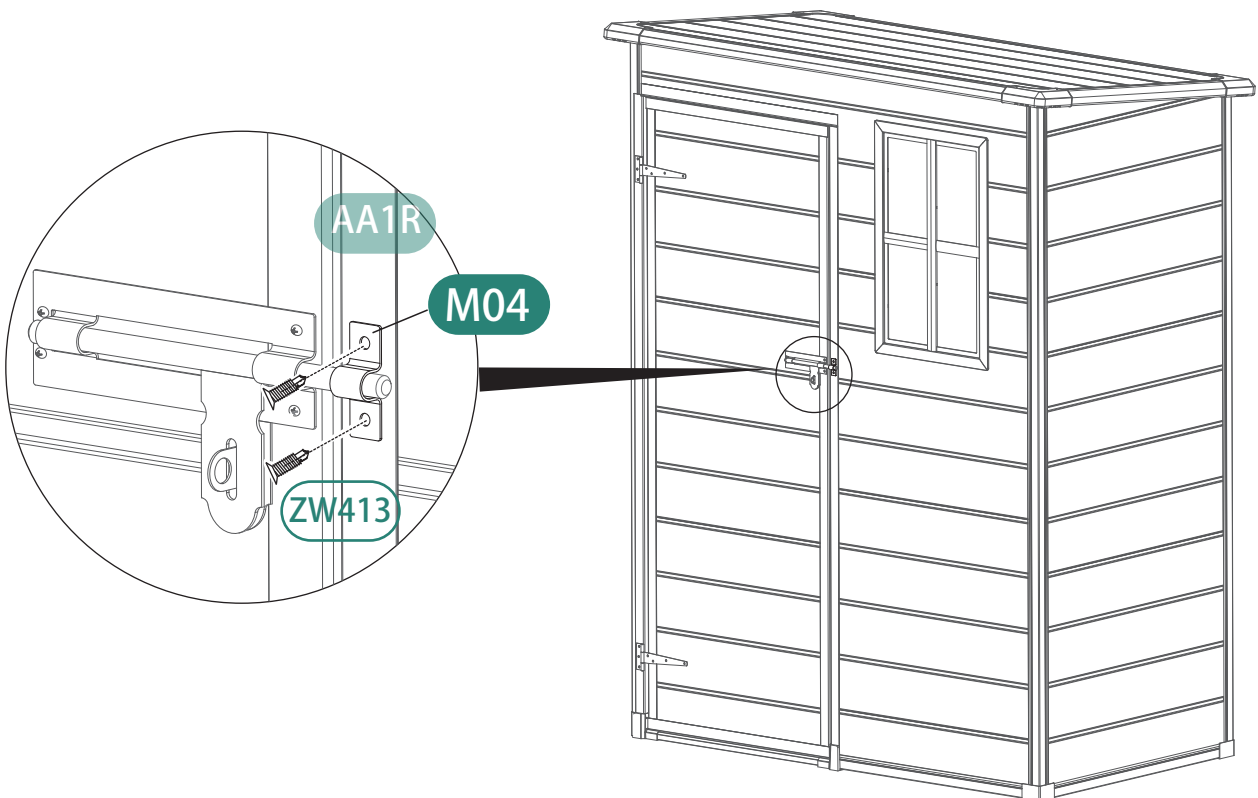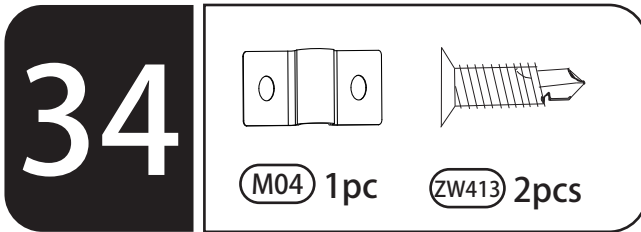

PARTS SCHEMATIC

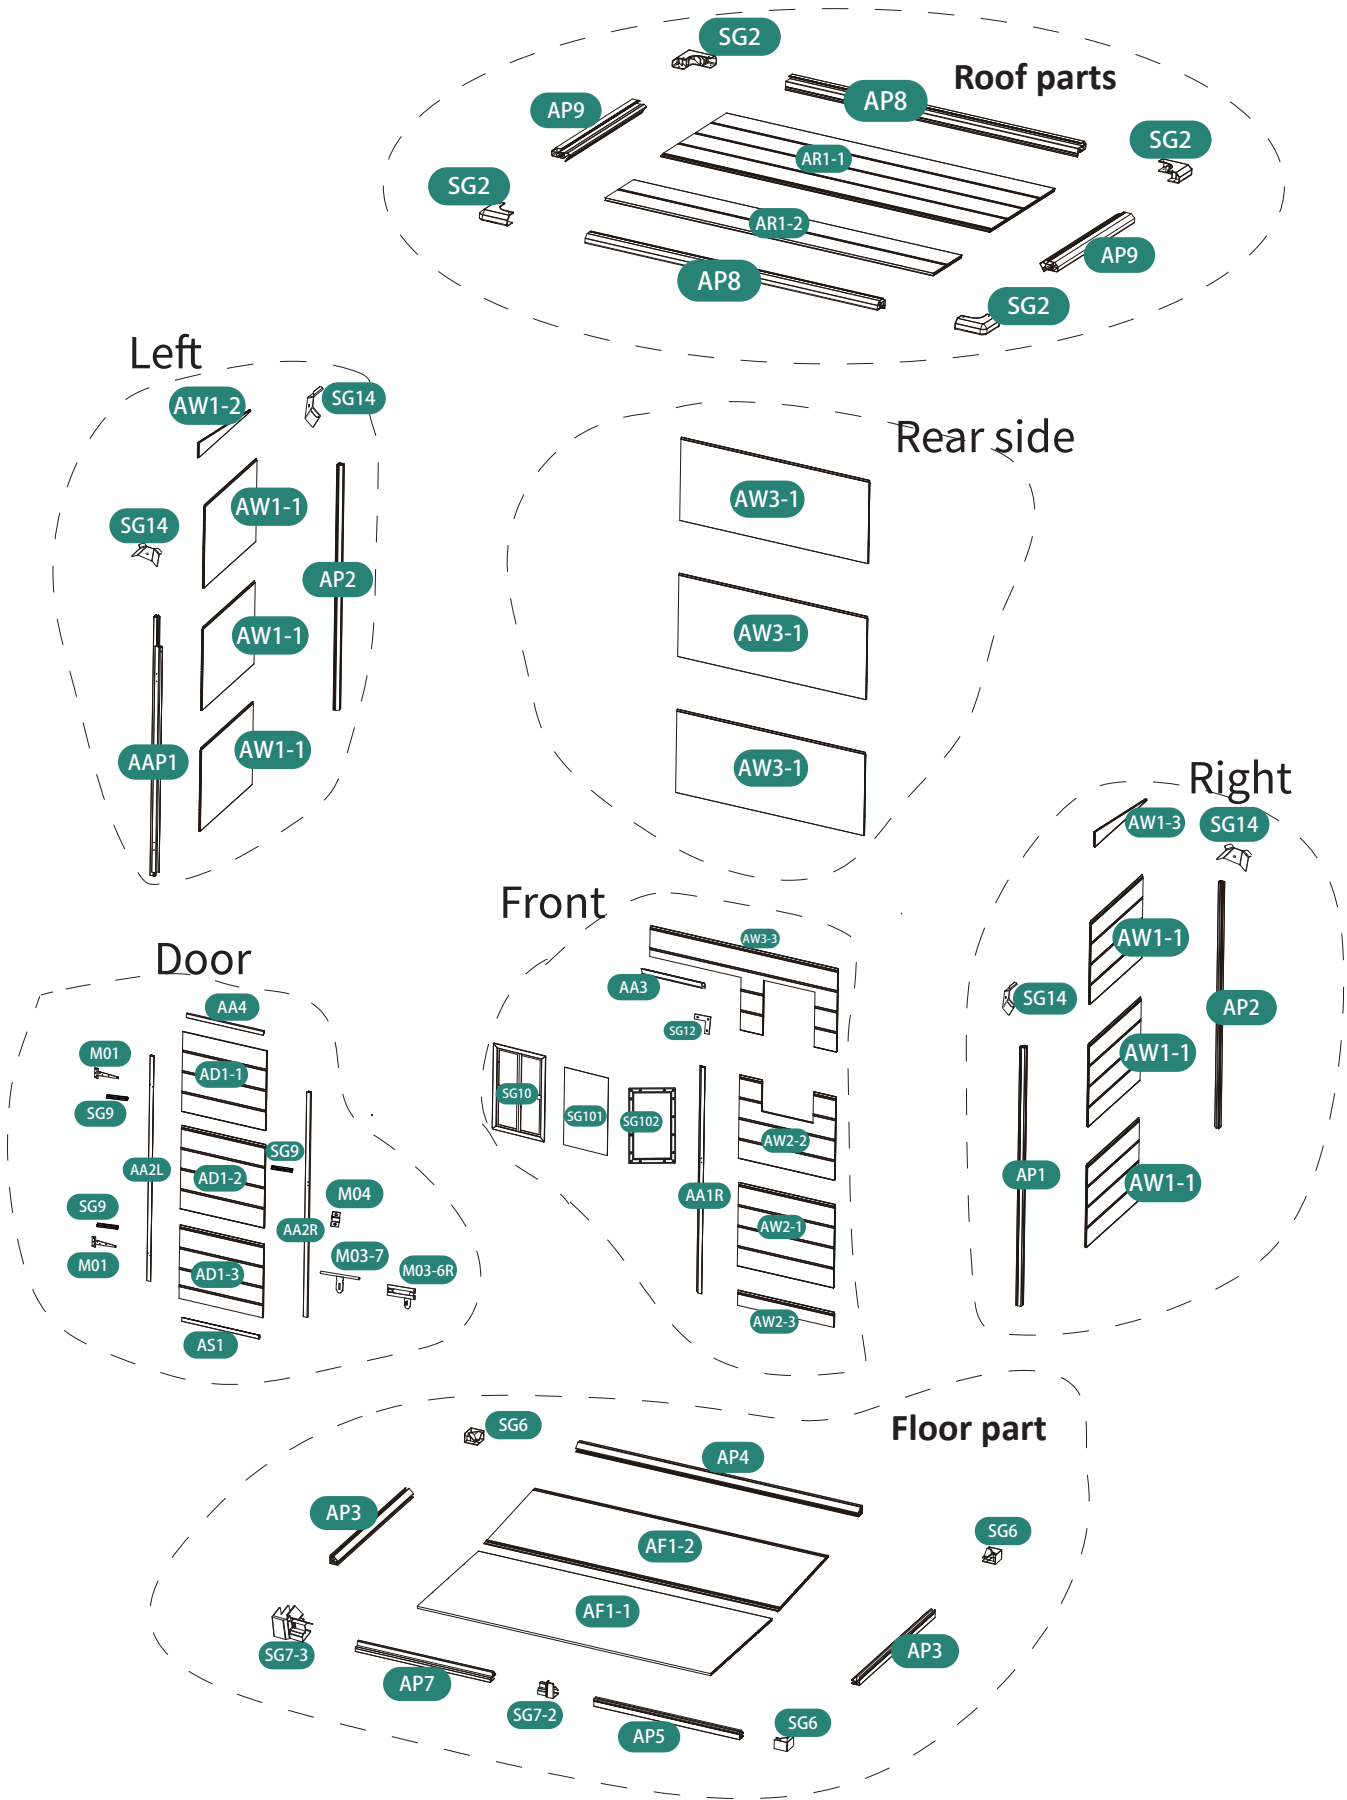

35



Installation Completed