

ASSEMBLY INSTRUCTIONS:

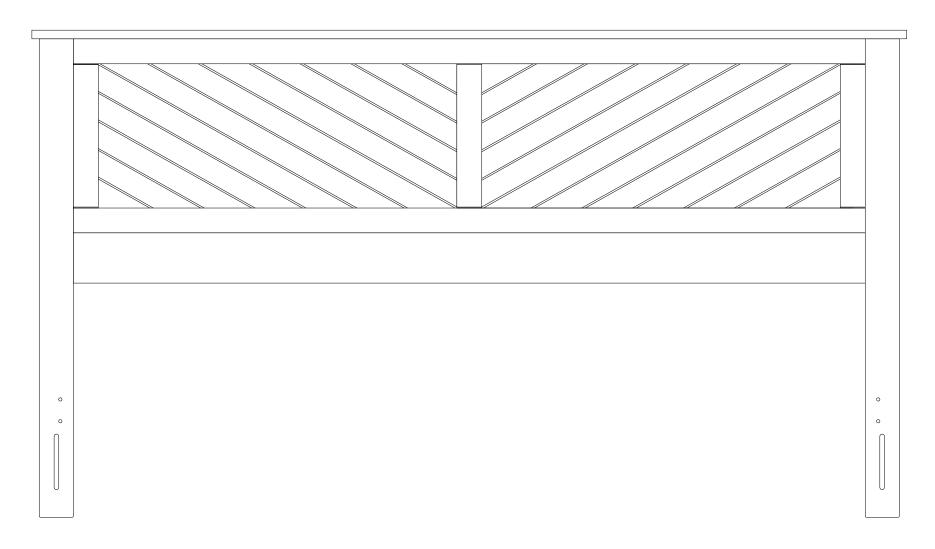

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

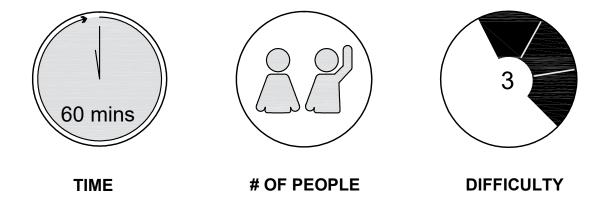



Important: Use hand tools for assembly. Power tools can lead to over-tightening and damage.

Parts List		Hardware List			
CODE	DESCRIPTION	QTY	CODE D	ESCRIPTION	QTY
A1 Headboard Top	(· · · · · · · · · · · · · · · · · · ·	1 pc	1 Dowel Ø8x1-1/8"		7 pcs
B1 Crossbar Top		1 pc	2 Cam Lock Bolt Ø1/4"	x1-3/8"	20 pcs
F1 Headboard		1 pc	3 Cam Lock Ø15		20 pcs
C1 Crossbar		1 pc	4 Flat Head Screwdrive	er	1 pc
D1 Crossbar Bottom		1 pc	5 Philips Head Screwdr	river	1 pc
G-R Right Leg	⟨· · · · · · · · · · · · · · · · · · ·	1 pc			
G-L Left Leg	· · · · · · · · · · · · · · · · · · ·	1 pc			

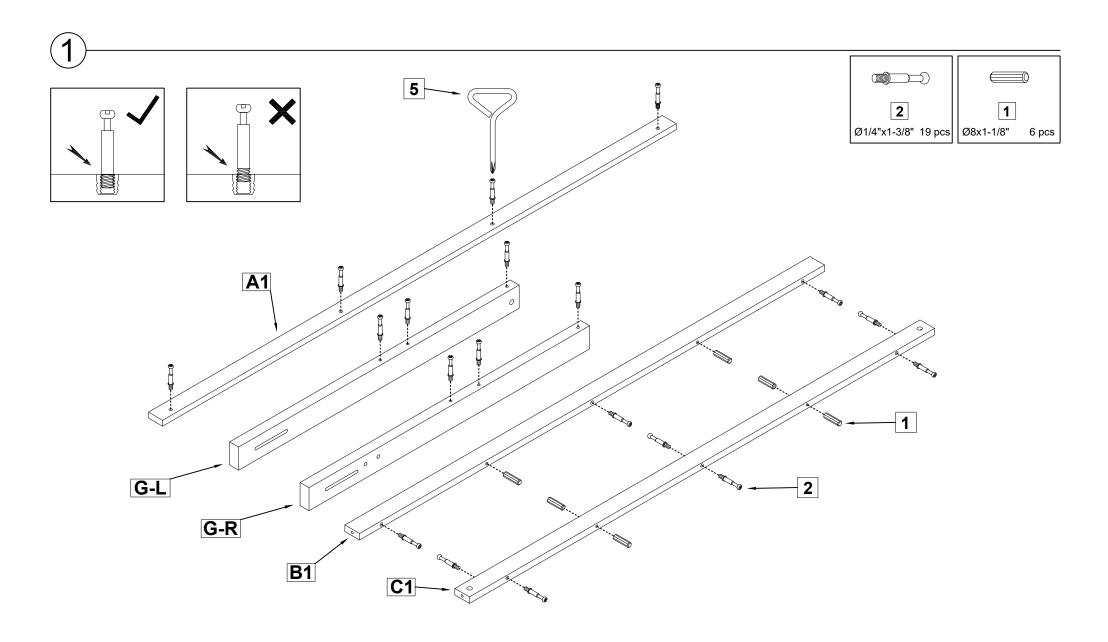


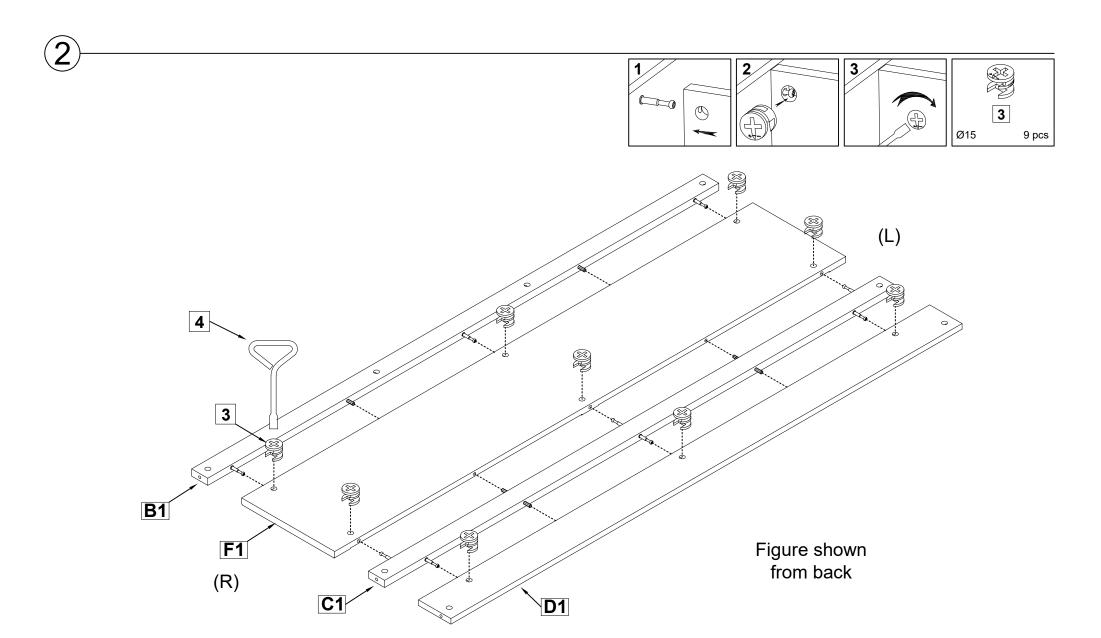

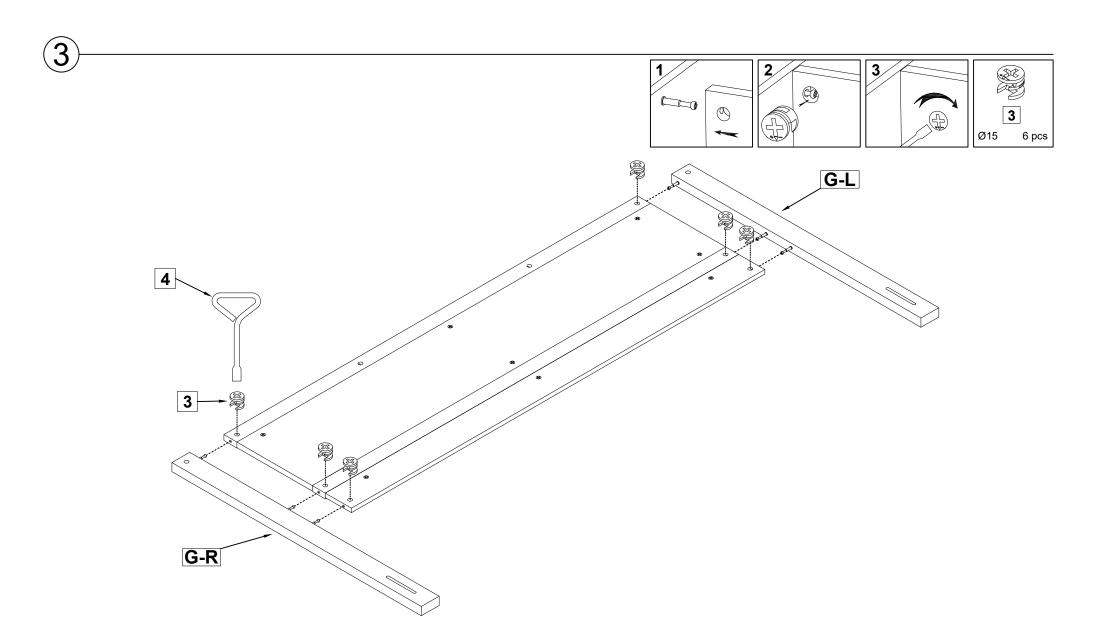

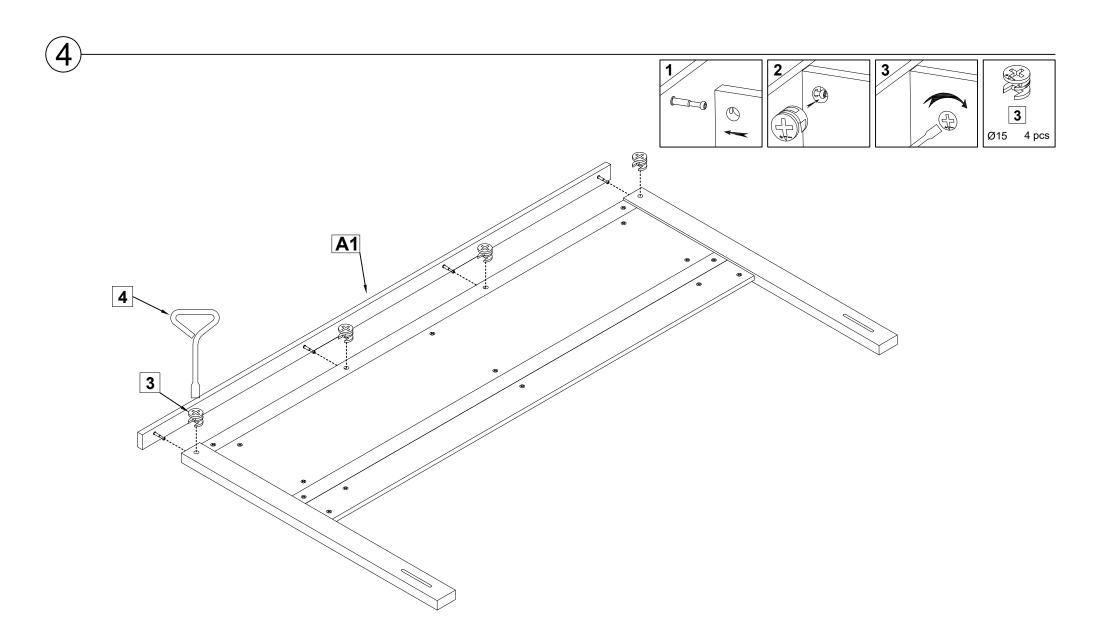



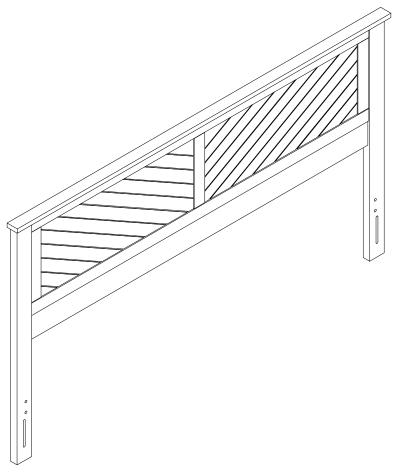

Attach the frame to the headboard using the long slots located on the lower portion of the legs of the headboard (hardware not included), these are designed to accommodate varying height bed frames. The holes with inserts are used with the bed frame that We produce for the headboard only.

Hardware/Assembly Tips:

With the headboard in position to be mounted to the frame, measure the length from the back of the headboard to the inside of the bedframe, allow enough additional length to add a couple of washers and a nut to secure the headboard to the frame.