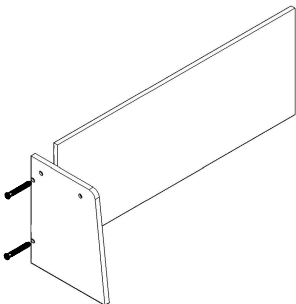
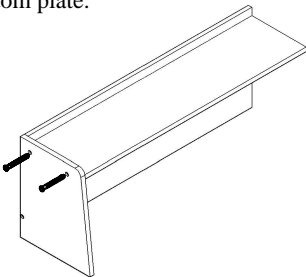
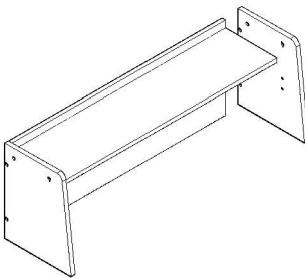
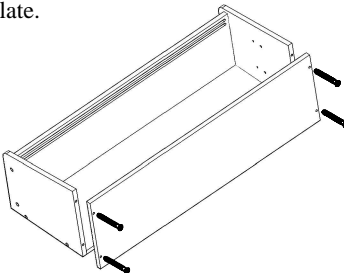
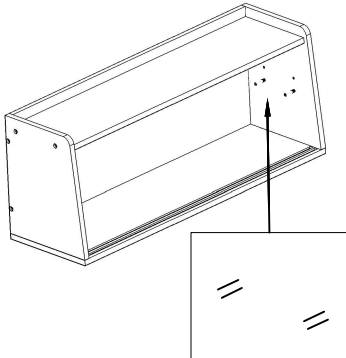
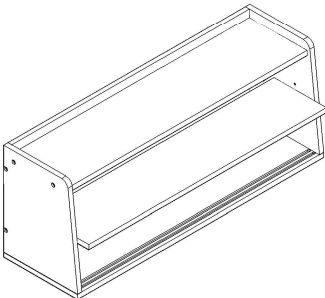
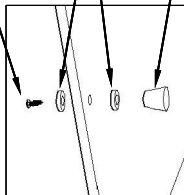
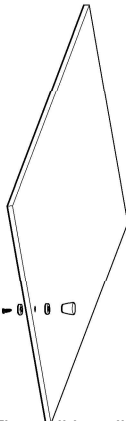
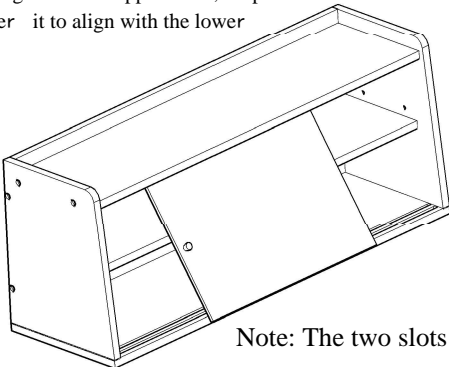


Installation Instructions

<p>step 1</p> 	<p>step 2</p> <p>Note: The top plate is a slotted plate and is smaller in width than the bottom plate.</p> 	<p>step 3</p> 	<p>step 4</p> <p>Note: The base plate is a slotted plate and is wider than the top plate.</p> 
<p>step 5</p> 	<p>step 6</p> 	<p>step 7</p> <p>flathead screw gaskets hold hands</p>   <p>Note: The pull handle is installed on the smooth side of the Longhorn glass.</p>	
<p>step 8</p> <p>Tilt the glass to align with the upper slot, snap it in, and then lower it to align with the lower slot.</p>  <p>Note: The two slots should be inside-out and outside-in.</p>		<p>step 9</p> 