


Installation & Assembly

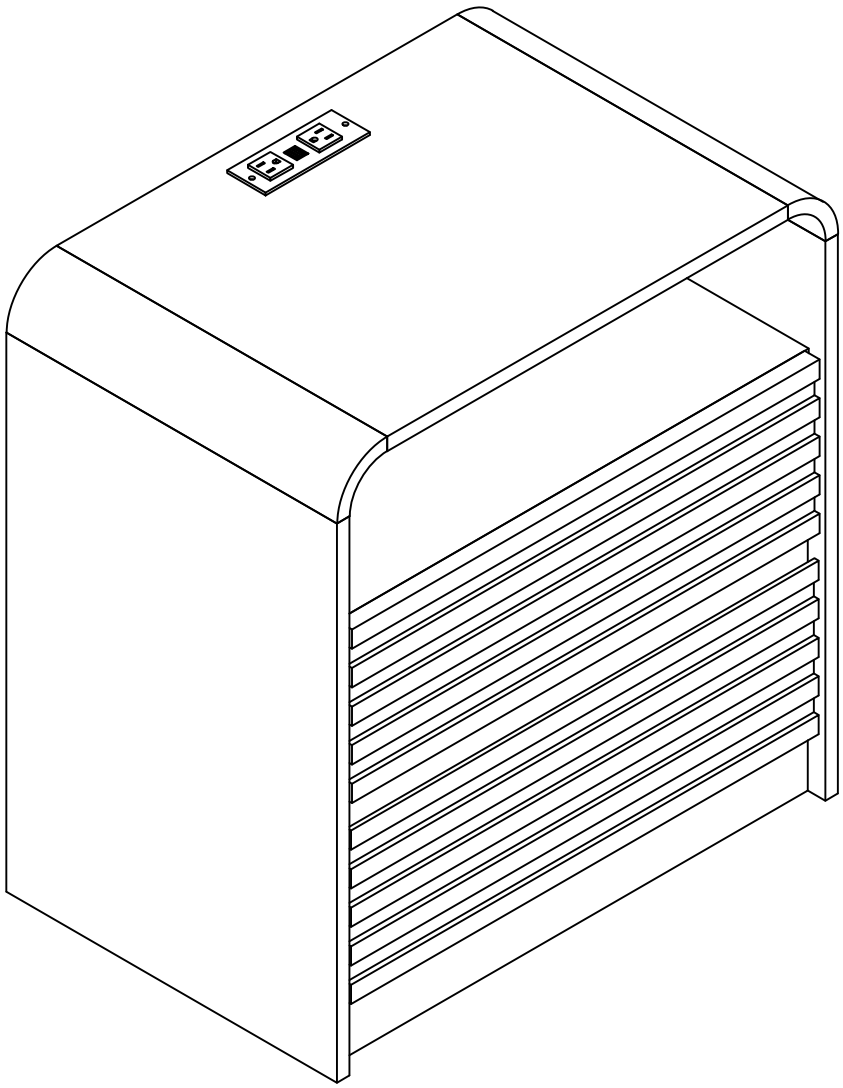


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.
If you have any questions about the product and installation, please contact us.
Our professional after-sales team will serve you online all day.

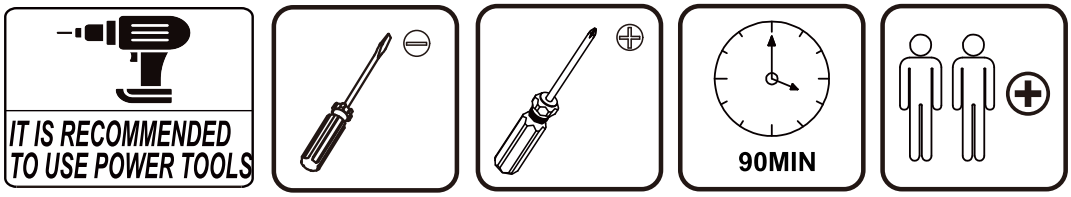


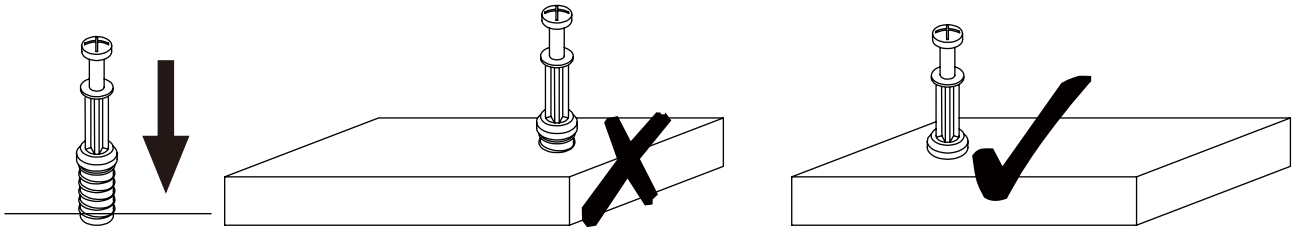


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

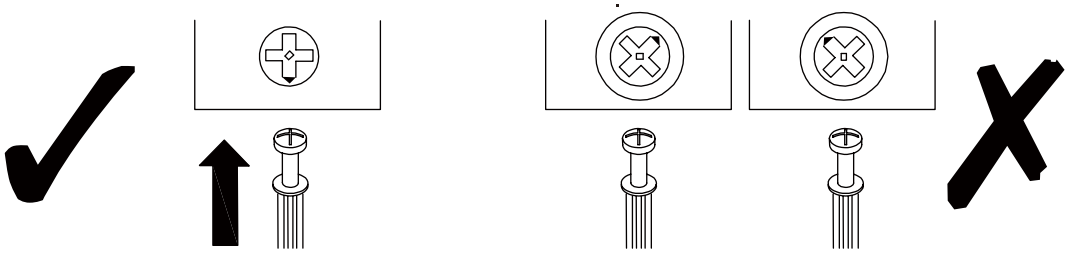











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






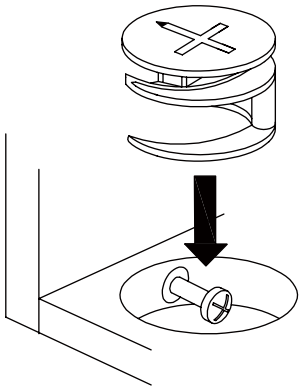



EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

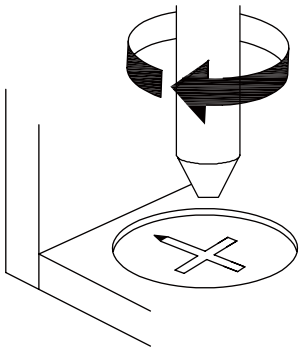



EN_ Turn cam lock clockwise to tighten.

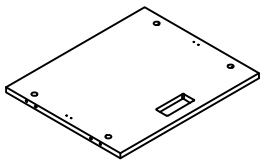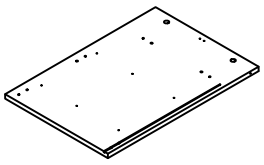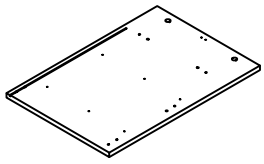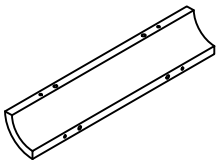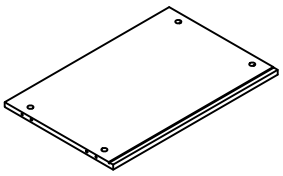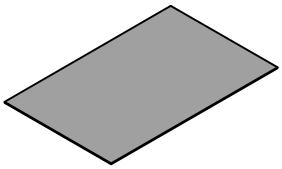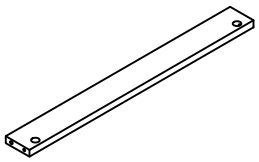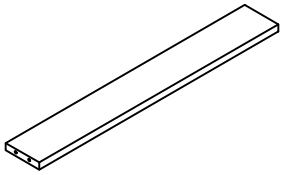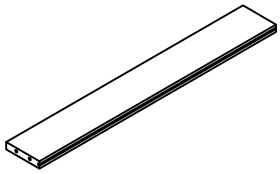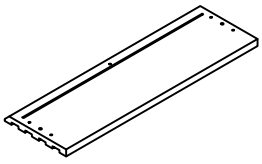NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x2	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

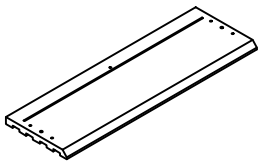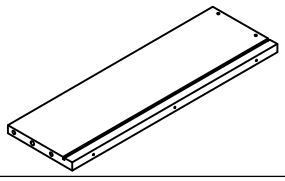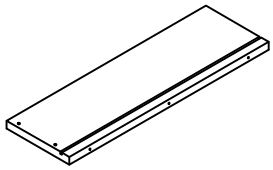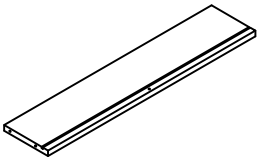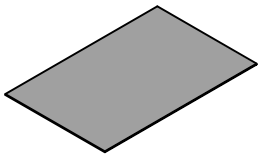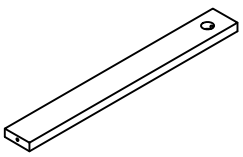NO.		QTY	SPARE
⑪		x1	
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x2	
	 Hardware Kit	x1	

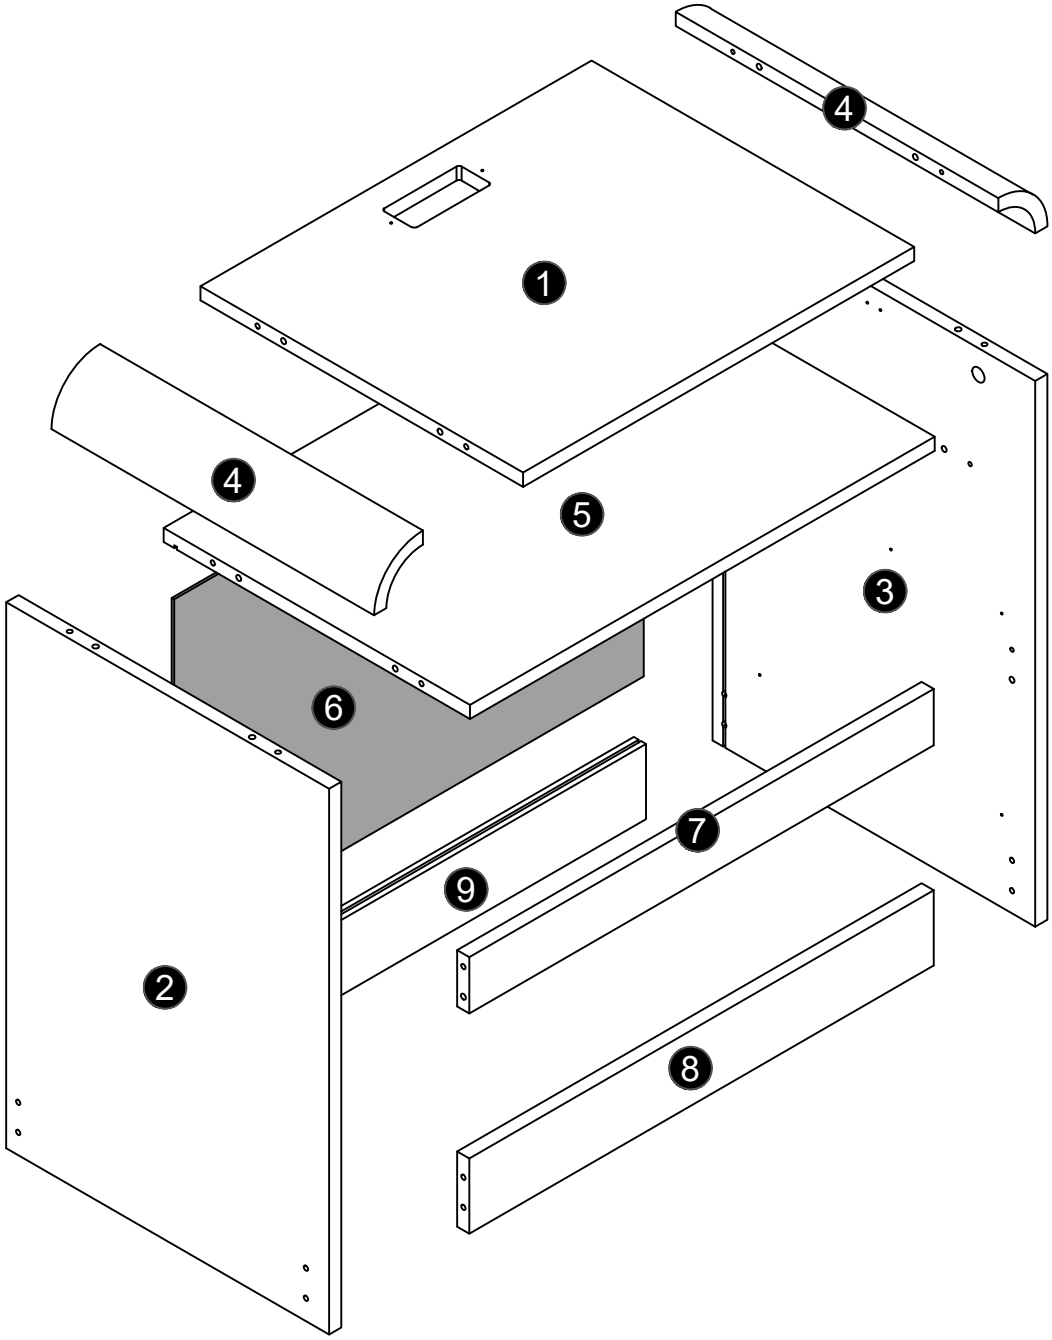
4
1
4
5
3
6
7
9
2
8

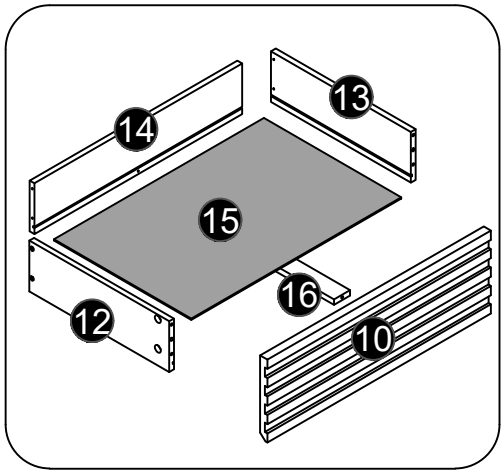
13
14
15
16
12
10

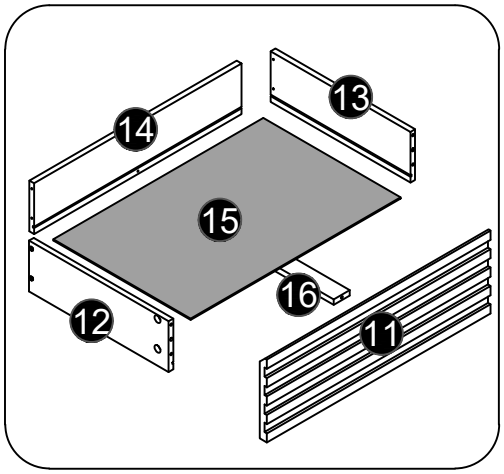

13
14
15
16
12
11

A x16 Ø6x35mm +1(spare)	B x24 Ø15x10mm +2(spare)	C x18 Ø6x30mm +2(spare)	D x12 Ø4x35mm +1(spare)	E x24 Ø3.5x12mm +2(spare)	F x8 Ø5x35mm +1(spare)
G x4 +1(spare) G-1 G-2	H x2 H-1 H-2 H-3	I x12 +2(spare)	J x8 Ø6x40mm	K x2	L x8 Ø4x14mm +1(spare)
M x1	N x2				
CL x2 L350mm	CR x2 L350mm	DL x2 L350mm	DR x2 L350mm		

D x10


01


x2

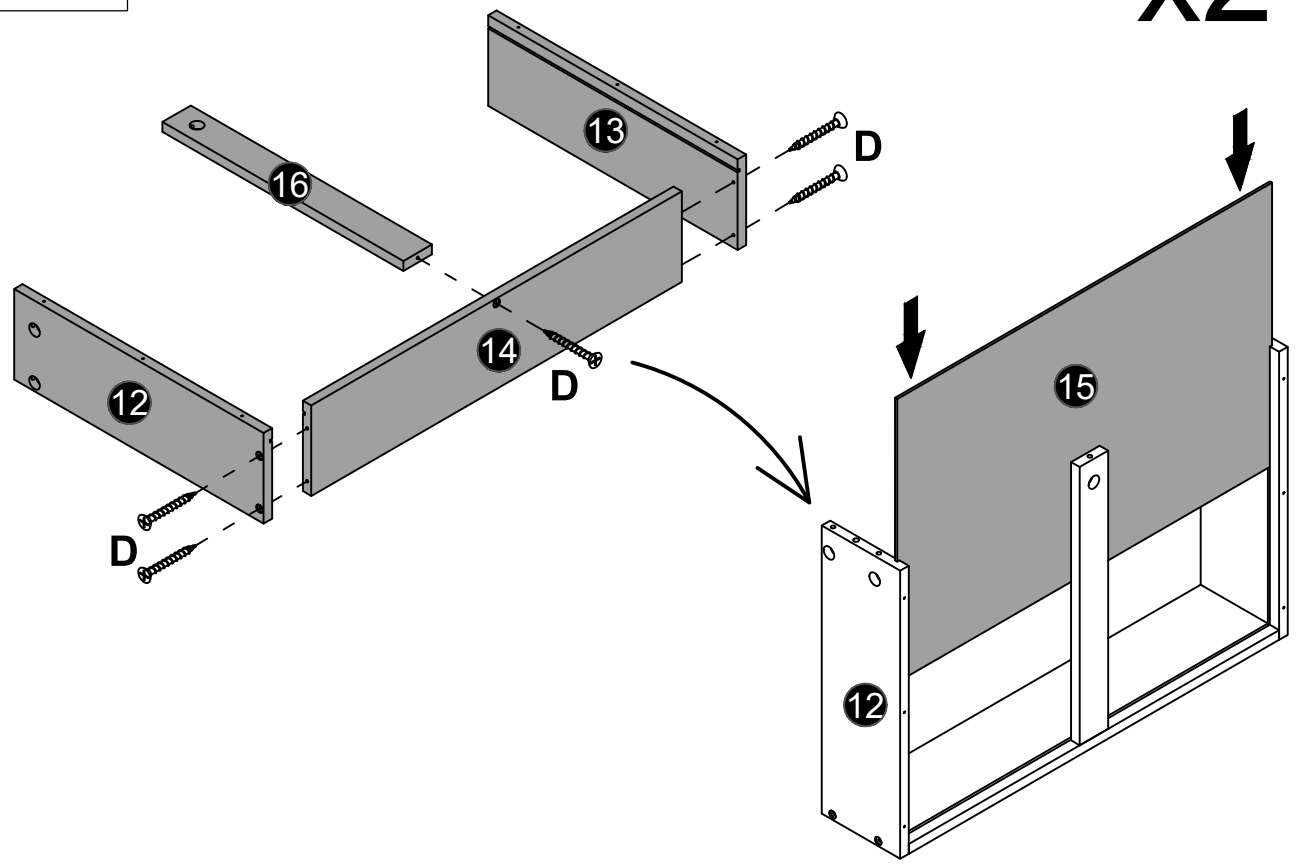

02

A x10



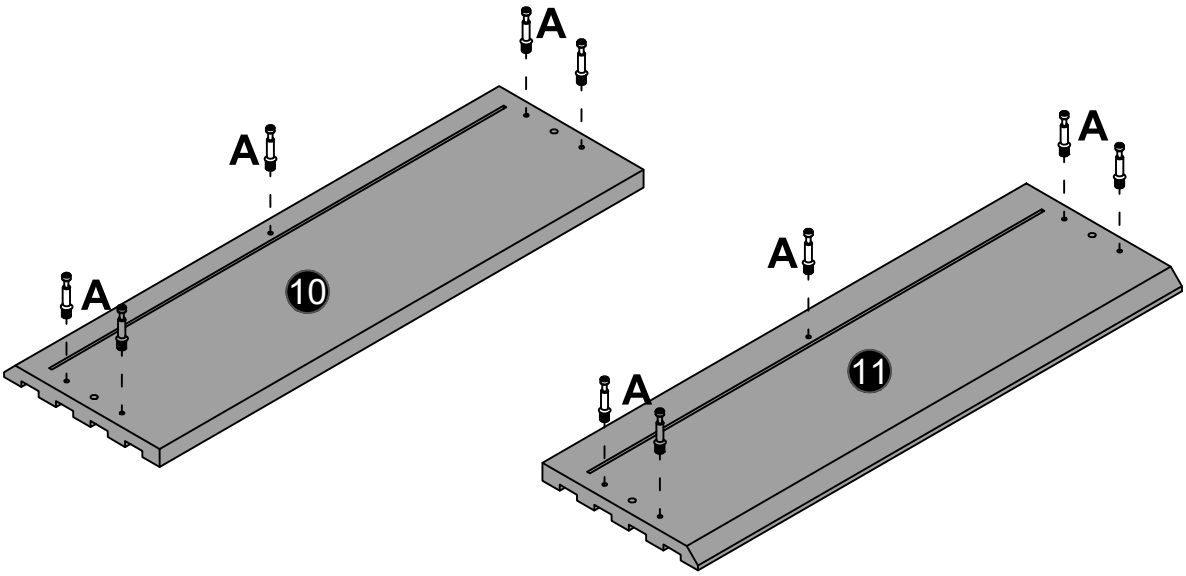



03


B x10





C x4




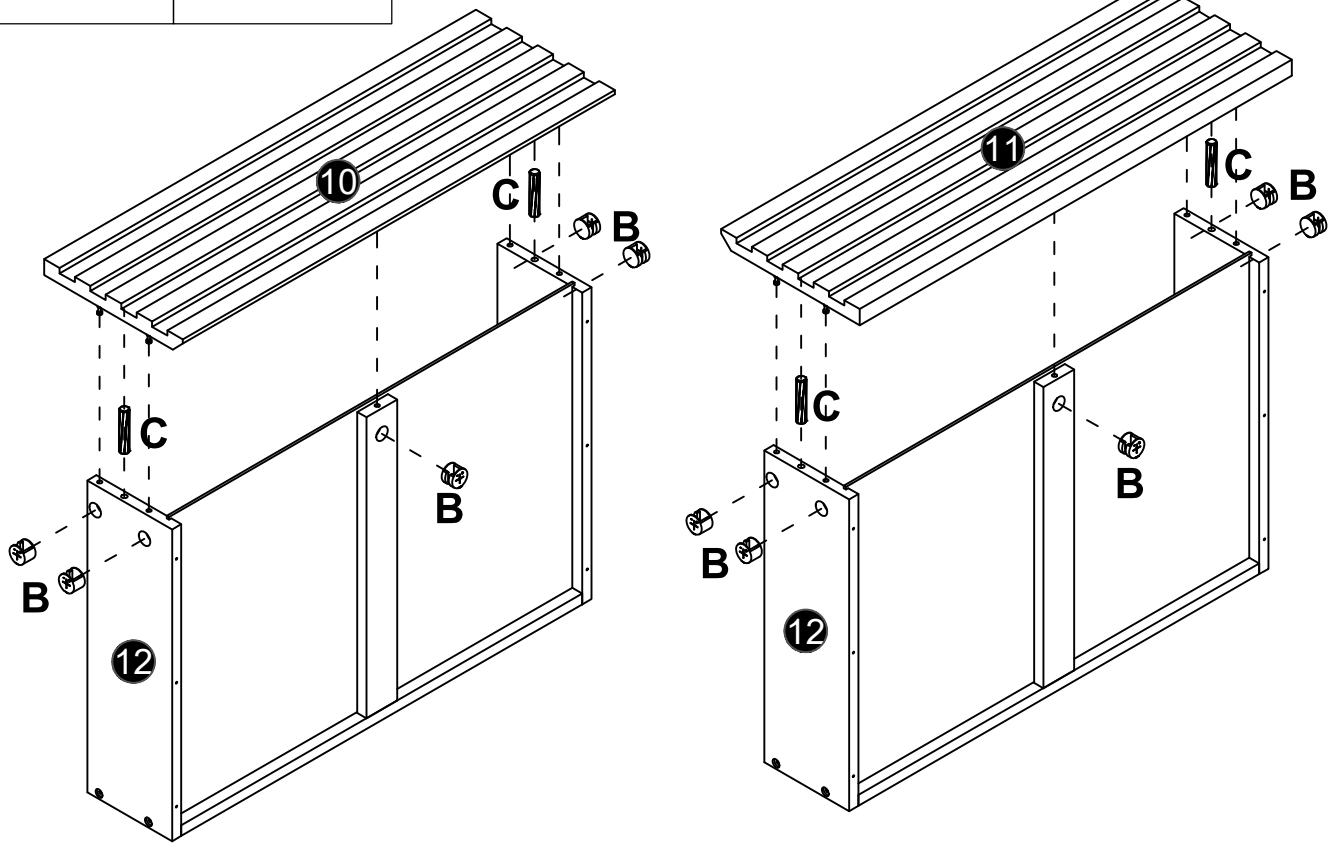

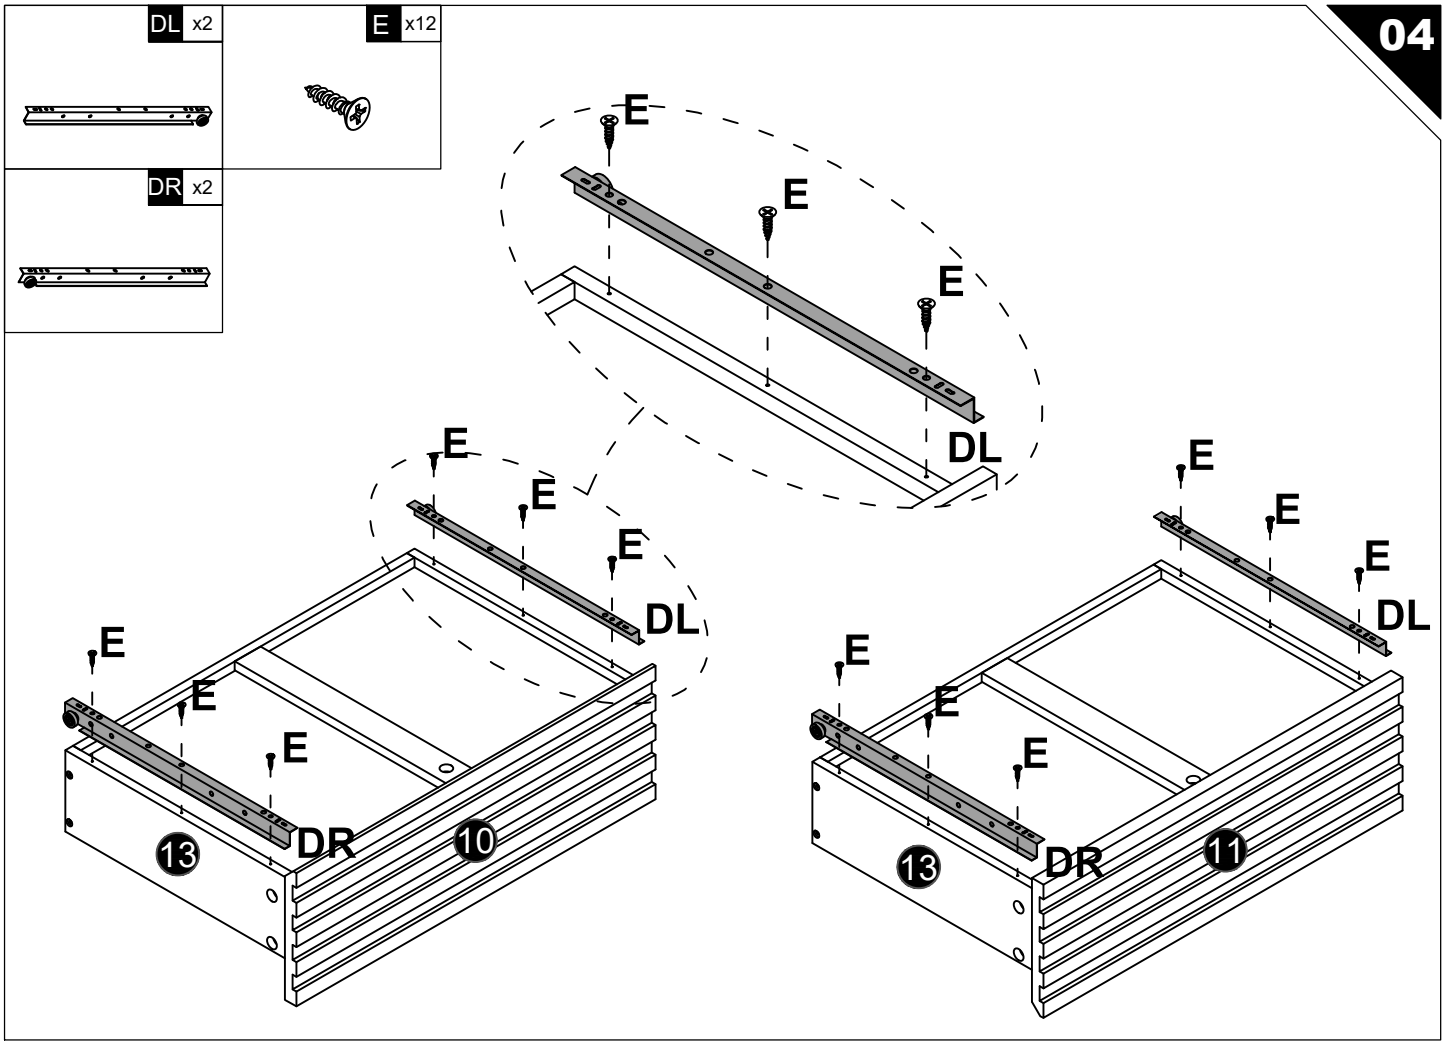
04
DL x2
E x12
DR x2
E
E
E
DL
E
E
E
DL
E
E
E
DR
13
10
E
E
E
DL
E
E
E
DR
13
11

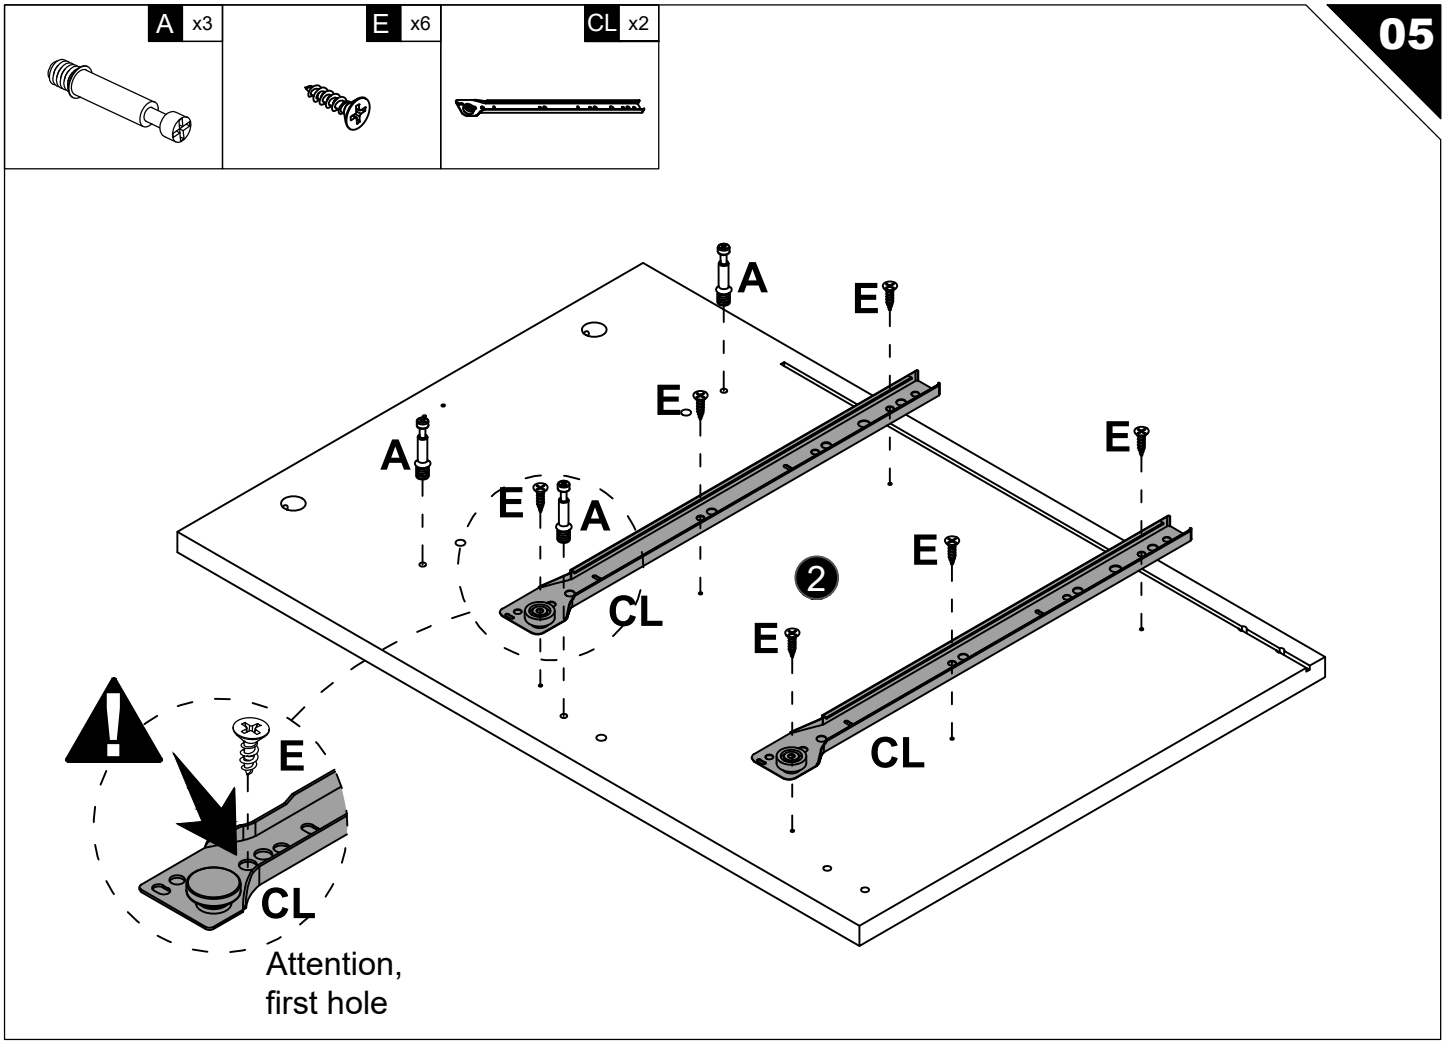
05
A x3
E x6
CL x2
A
E
E
A
E
E
A
CL
2
E
E
CL
E
CL
Attention,
first hole

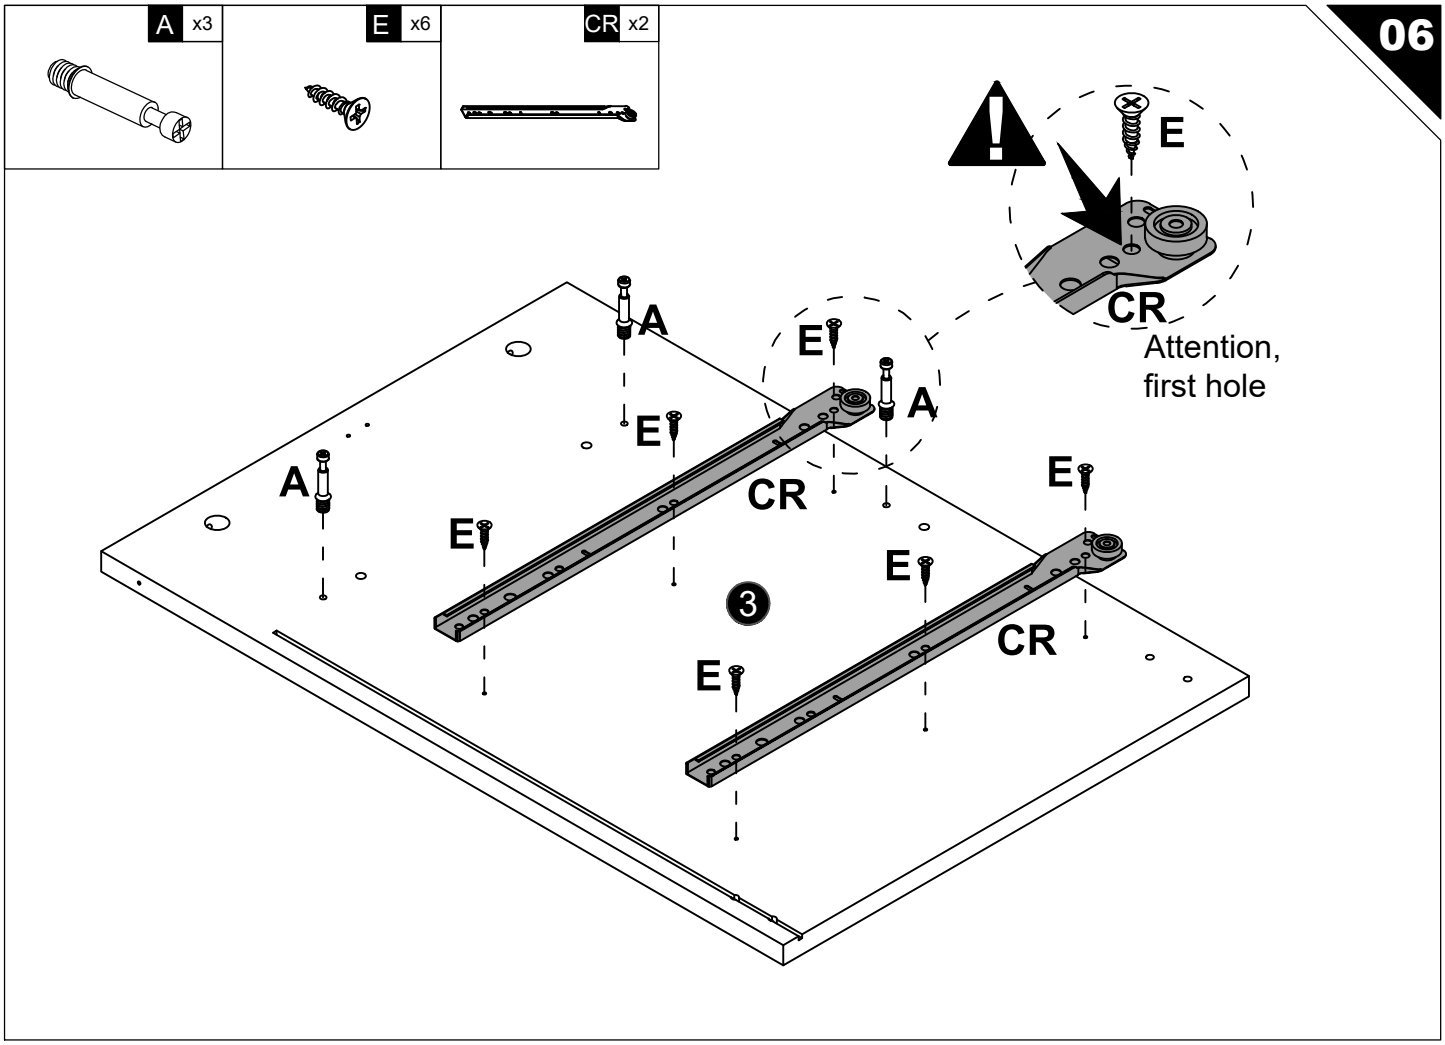

A x3
E x6
CR x2
06
E
CR
Attention,
first hole
A
E
A
E
CR
E
E
E
3
CR
E

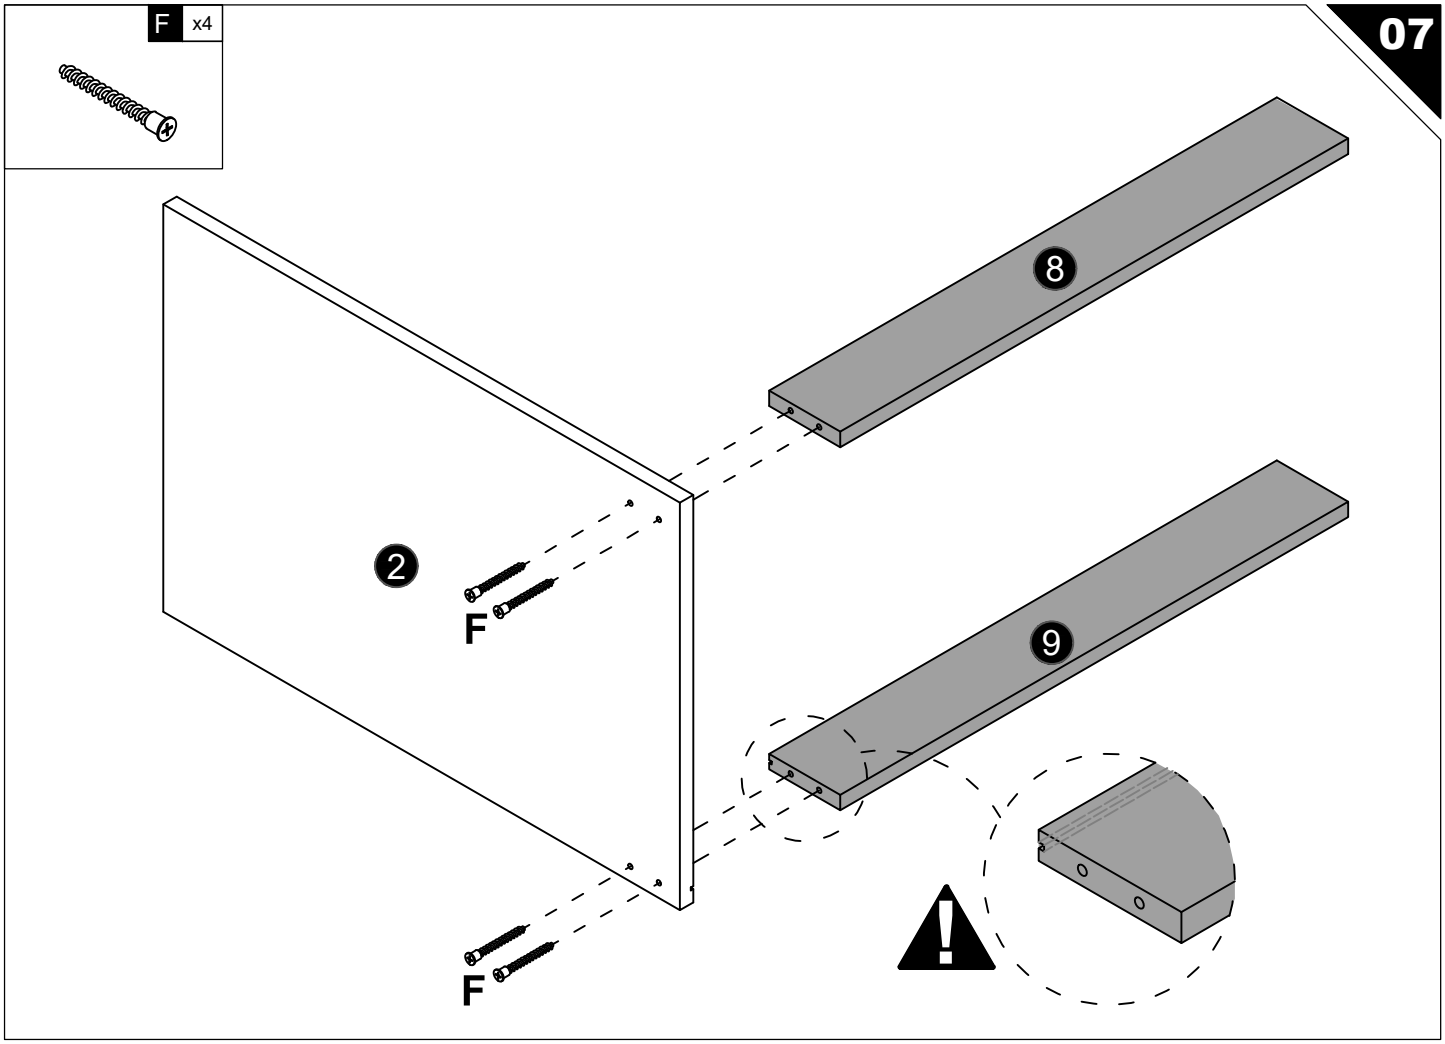
F x4
07
8
2
F
9
F


B x3




C x3




08

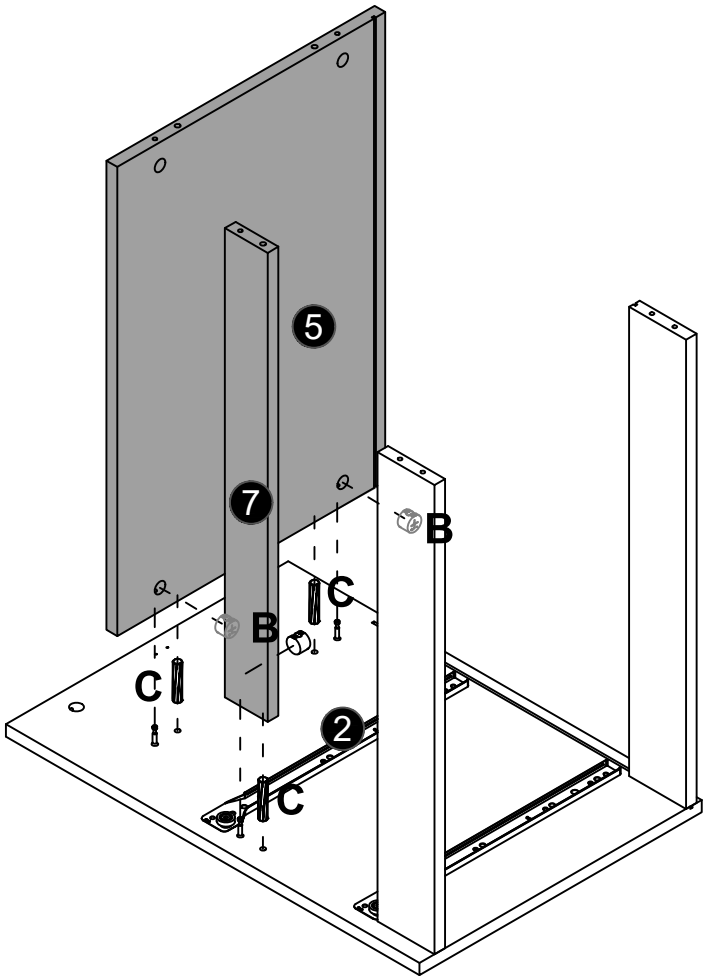



C x3




09

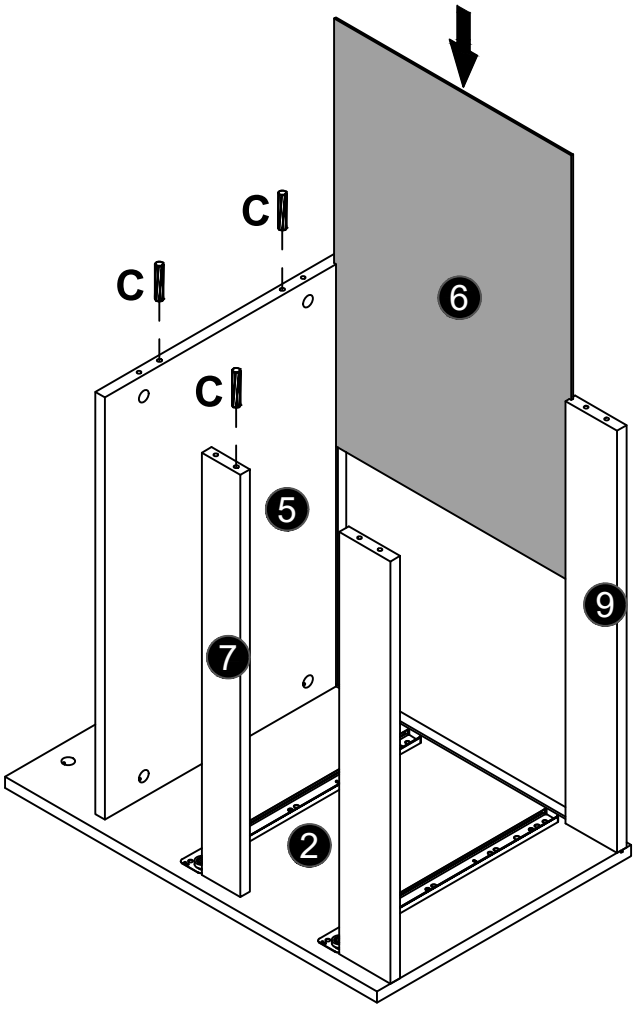


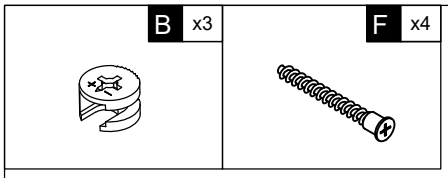

B x3
F x4

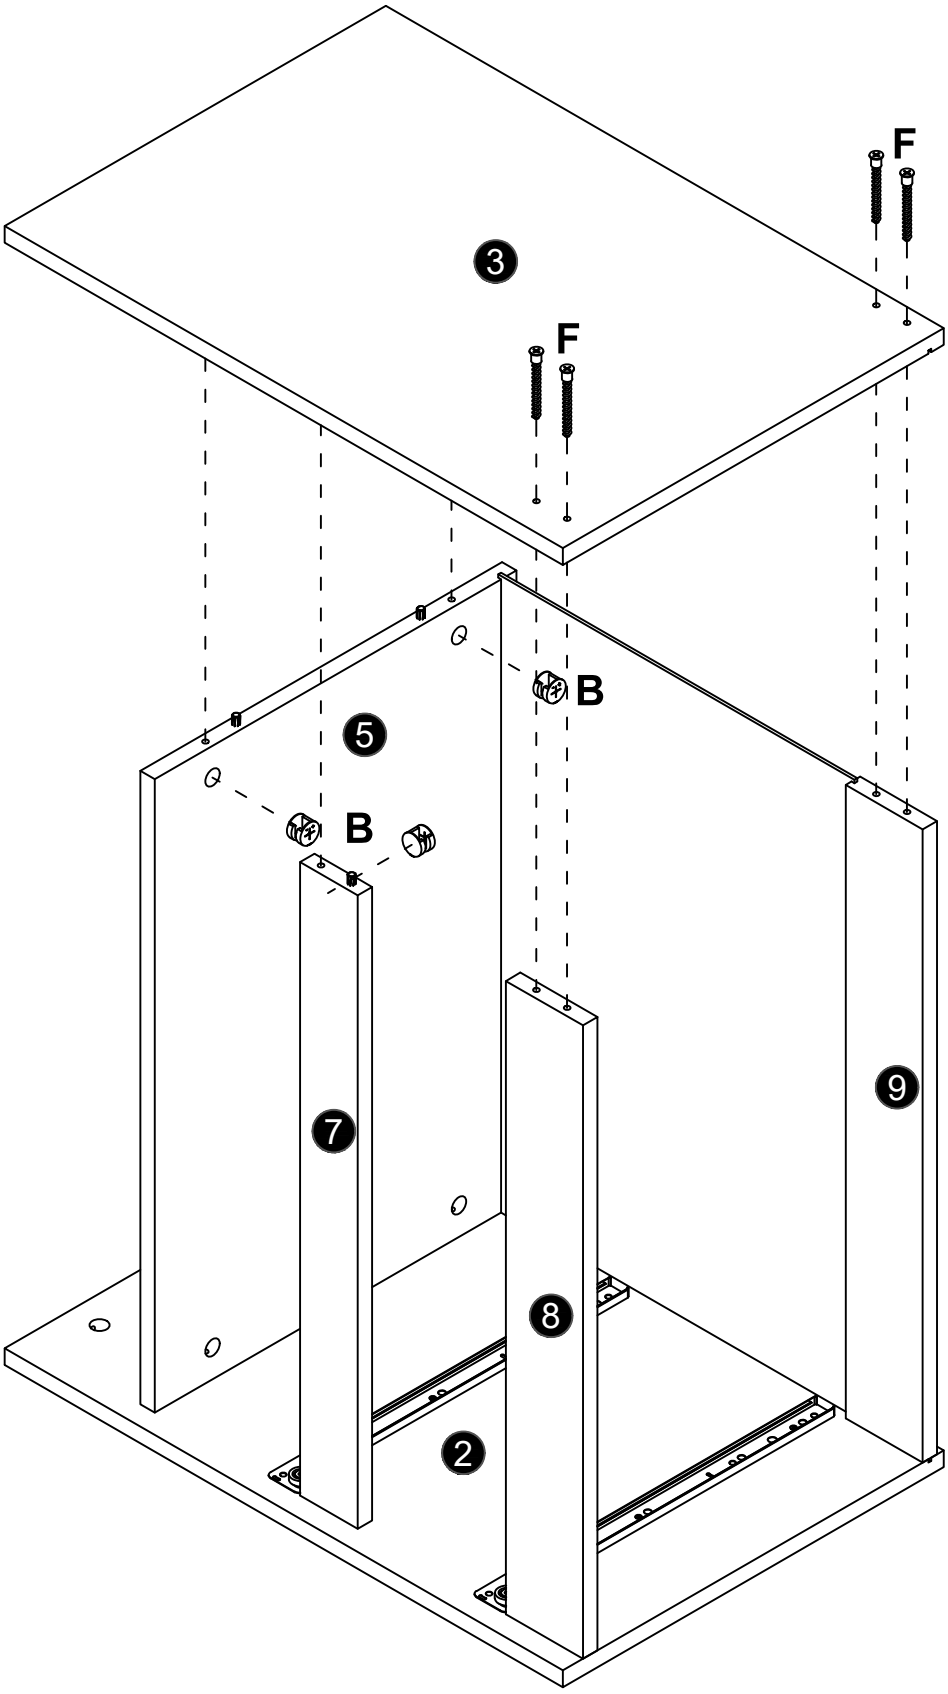

F
3
F
B
5
B
7
9
8
2

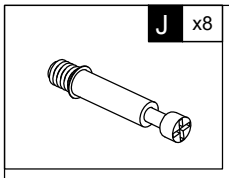


Caution :Need to use the correct part #J instead of part #A.

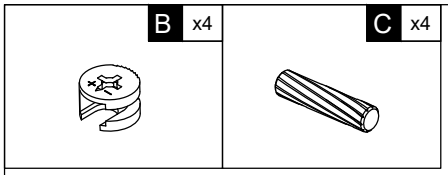

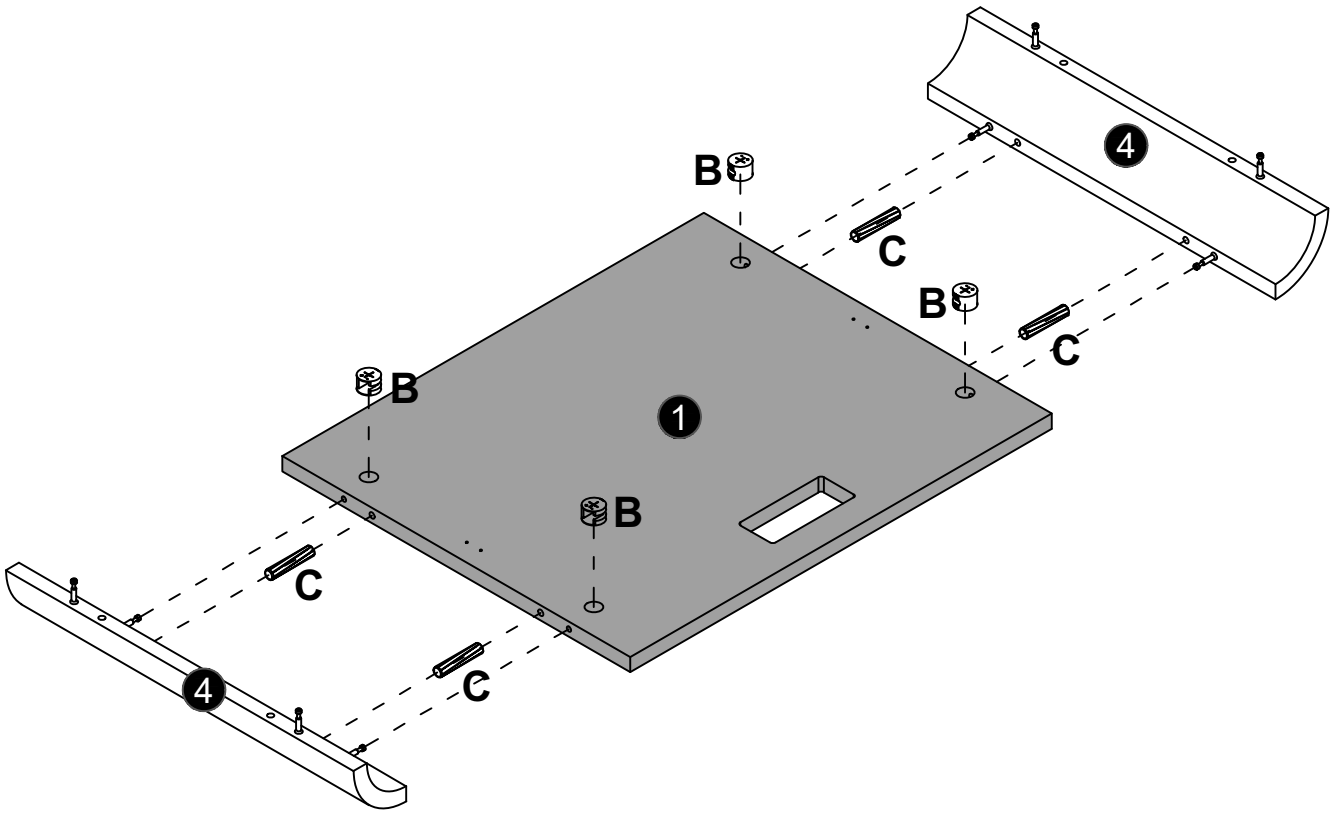


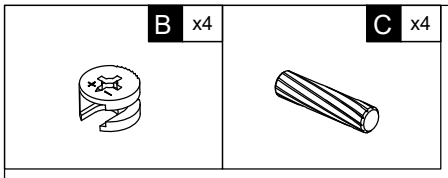


Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

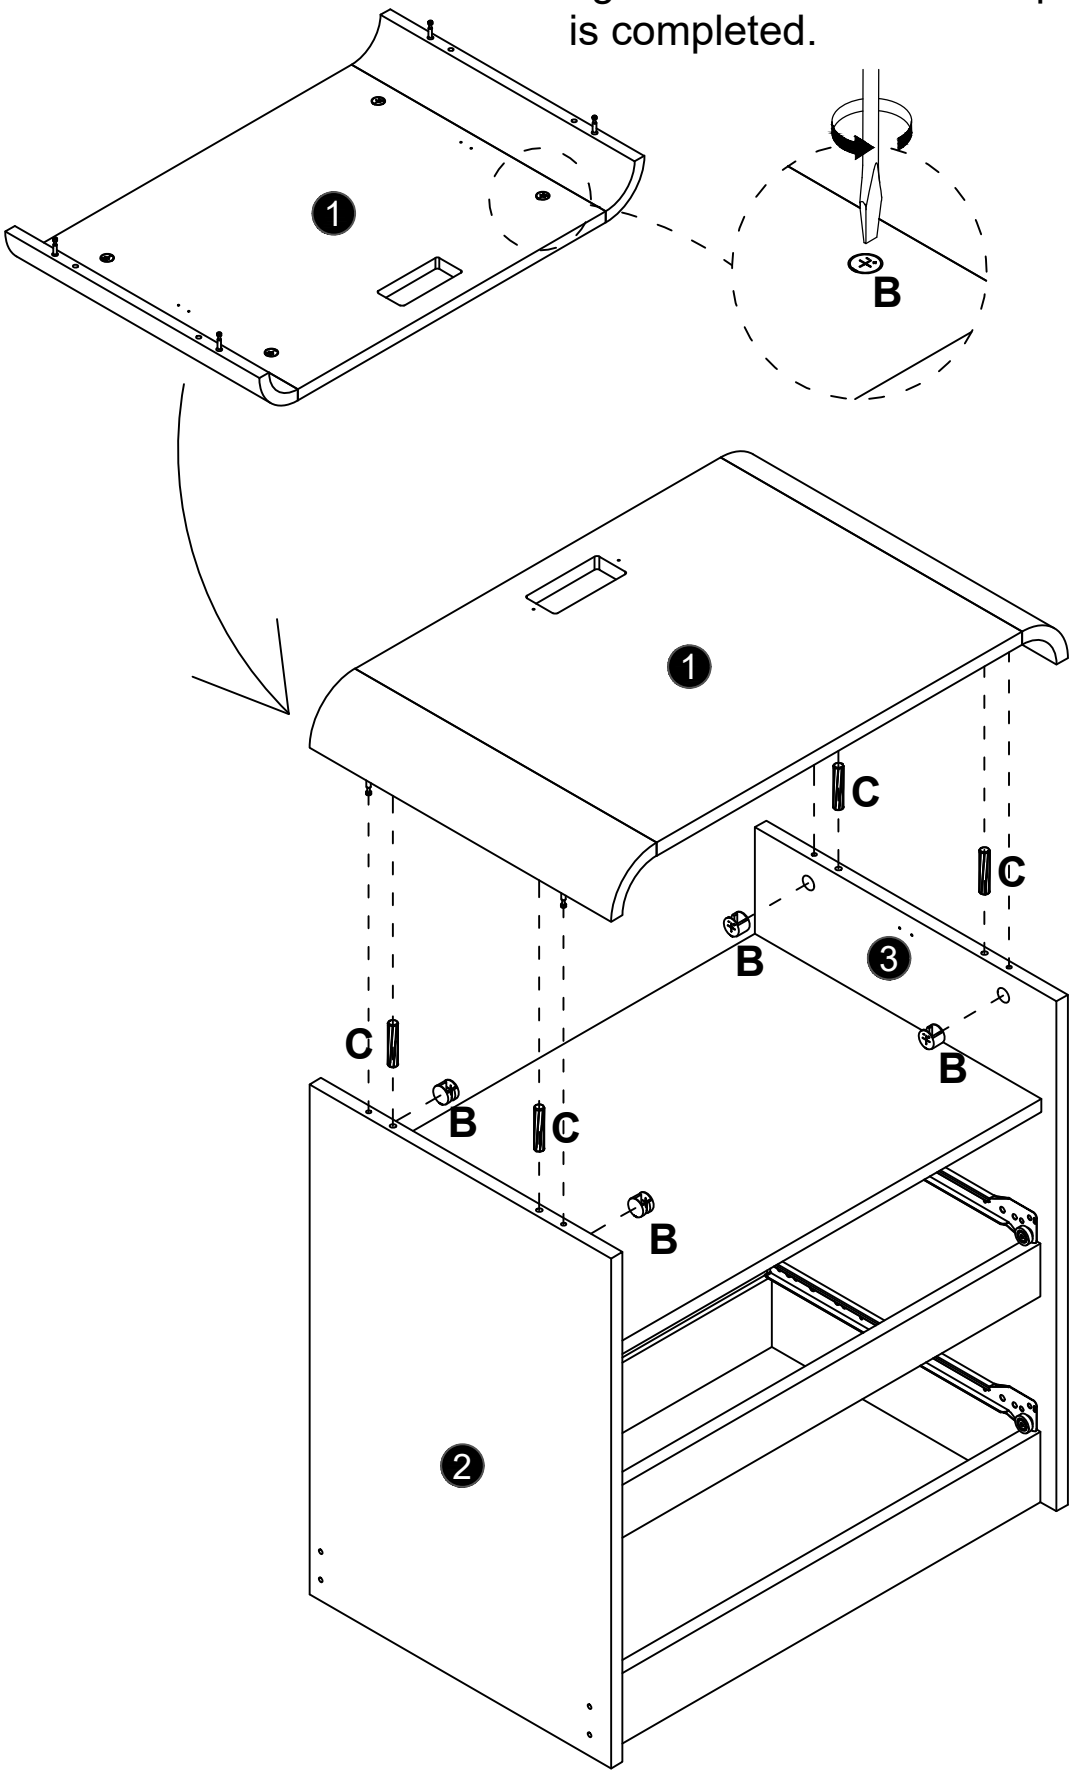



G x4	K x2	L x8
G-1 G-2		

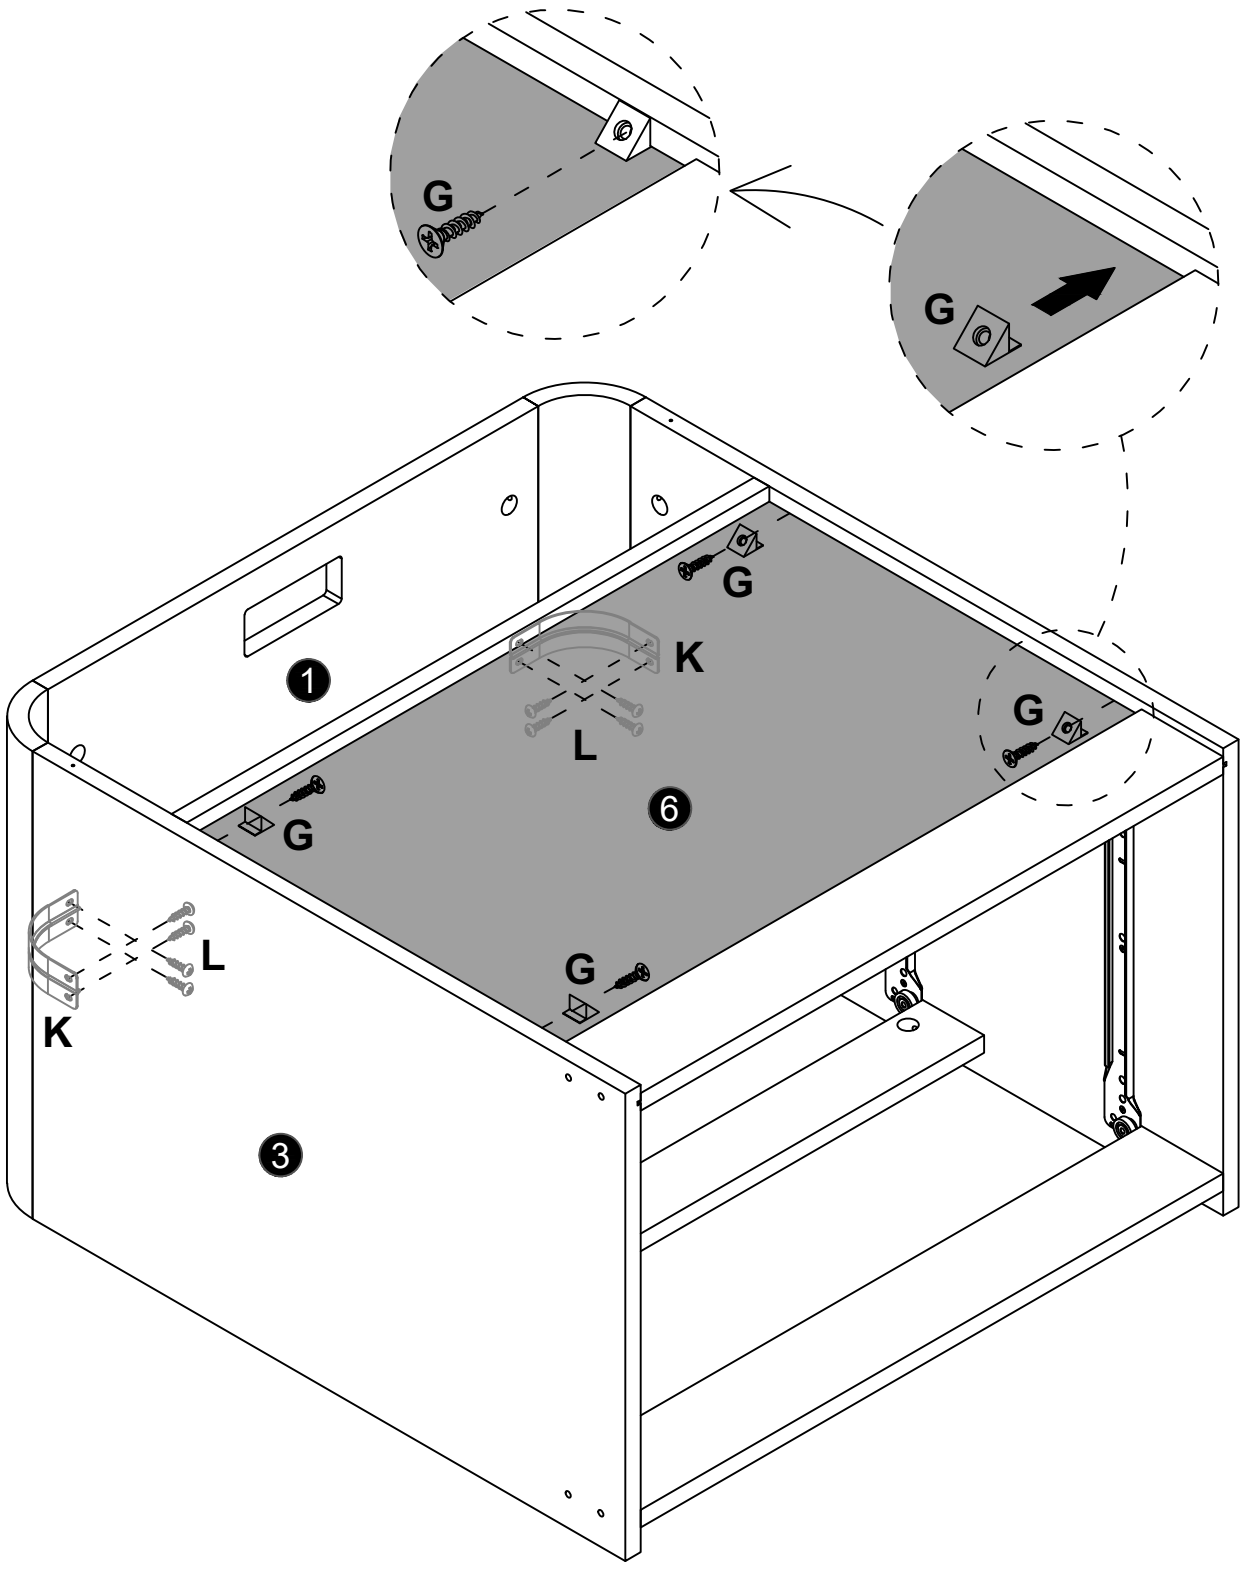


M x1	N x2
	

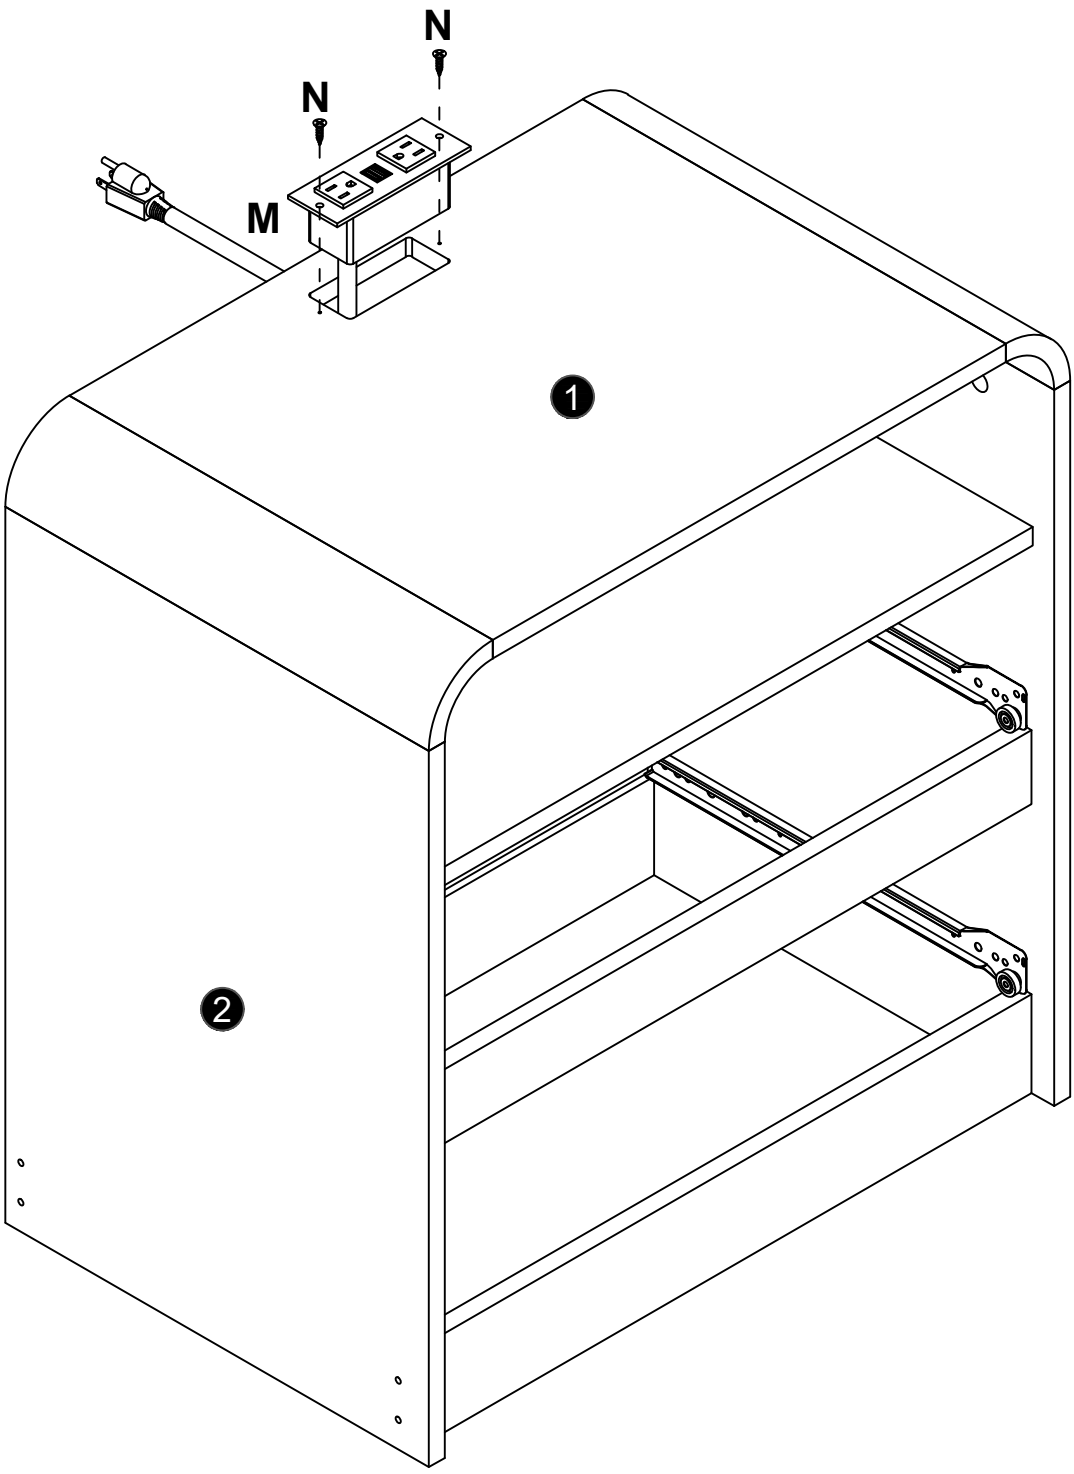


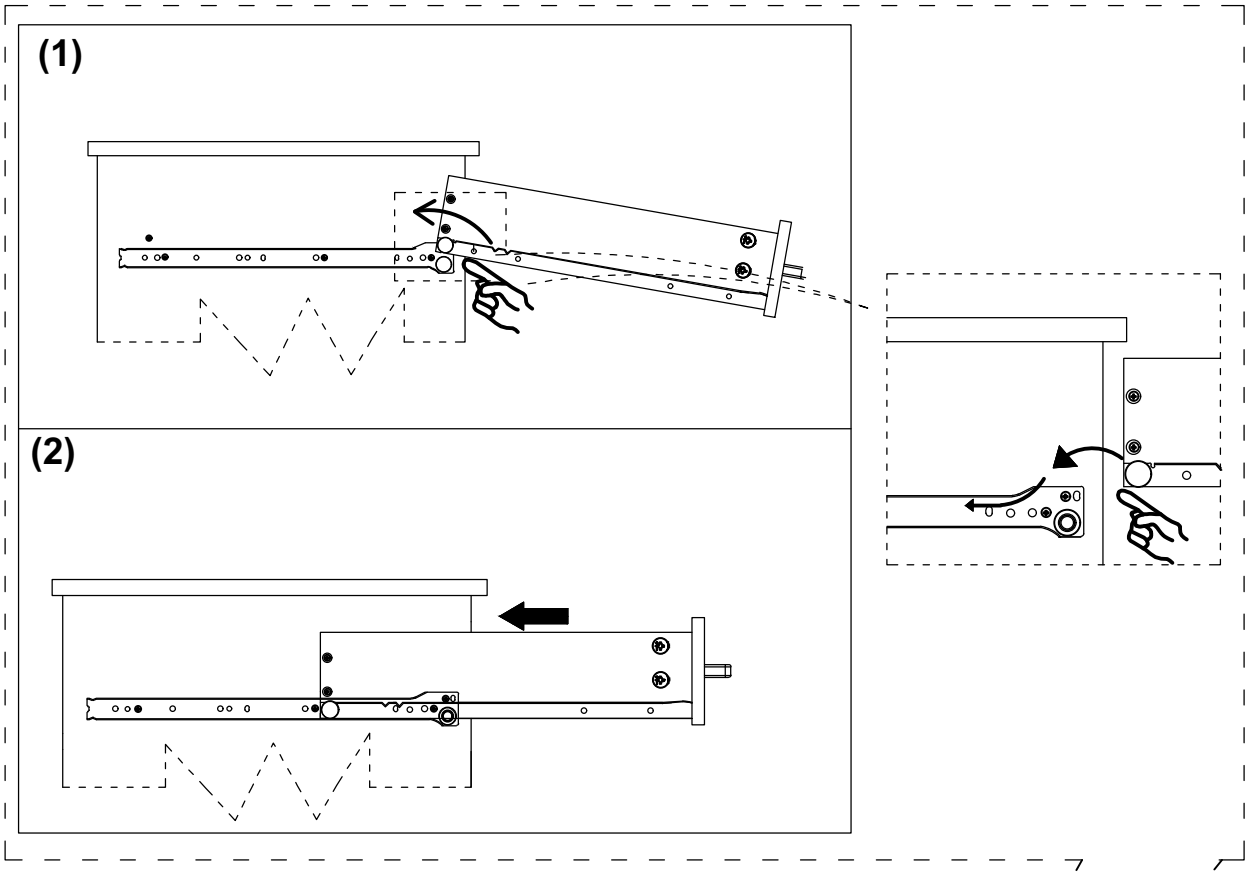
(1)
(2)

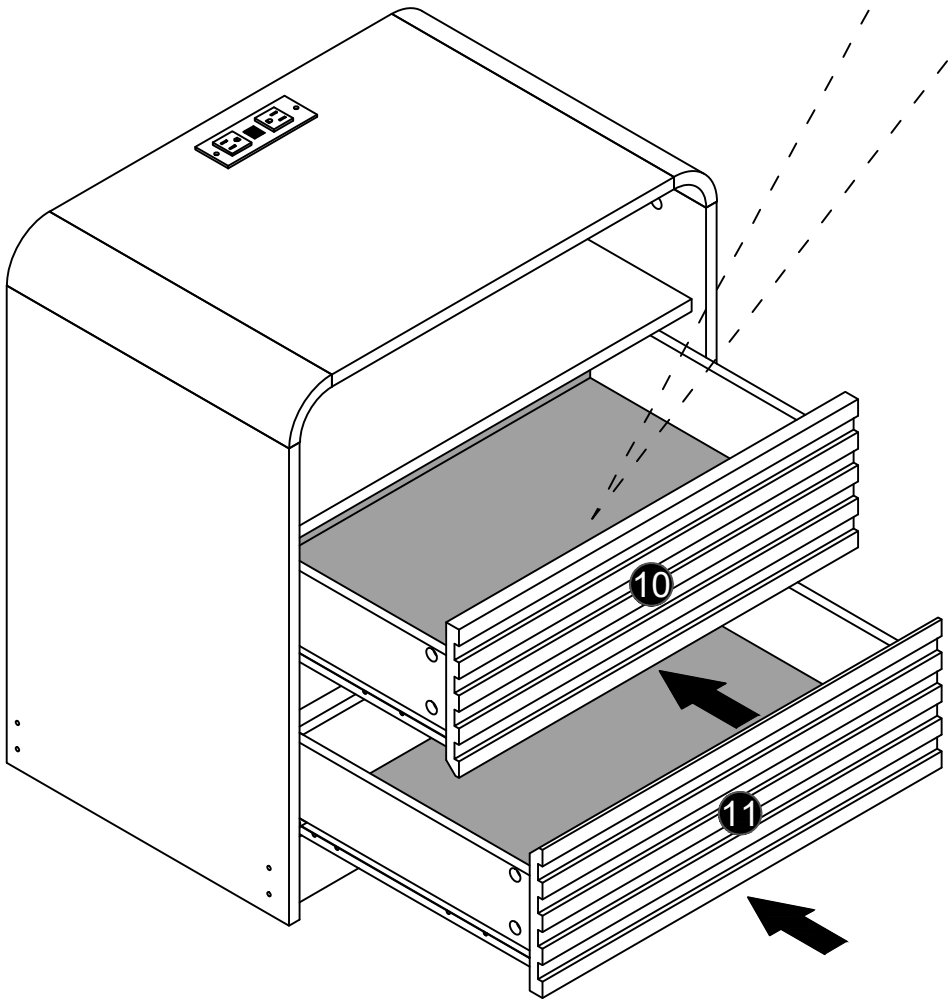

10
11

I x12

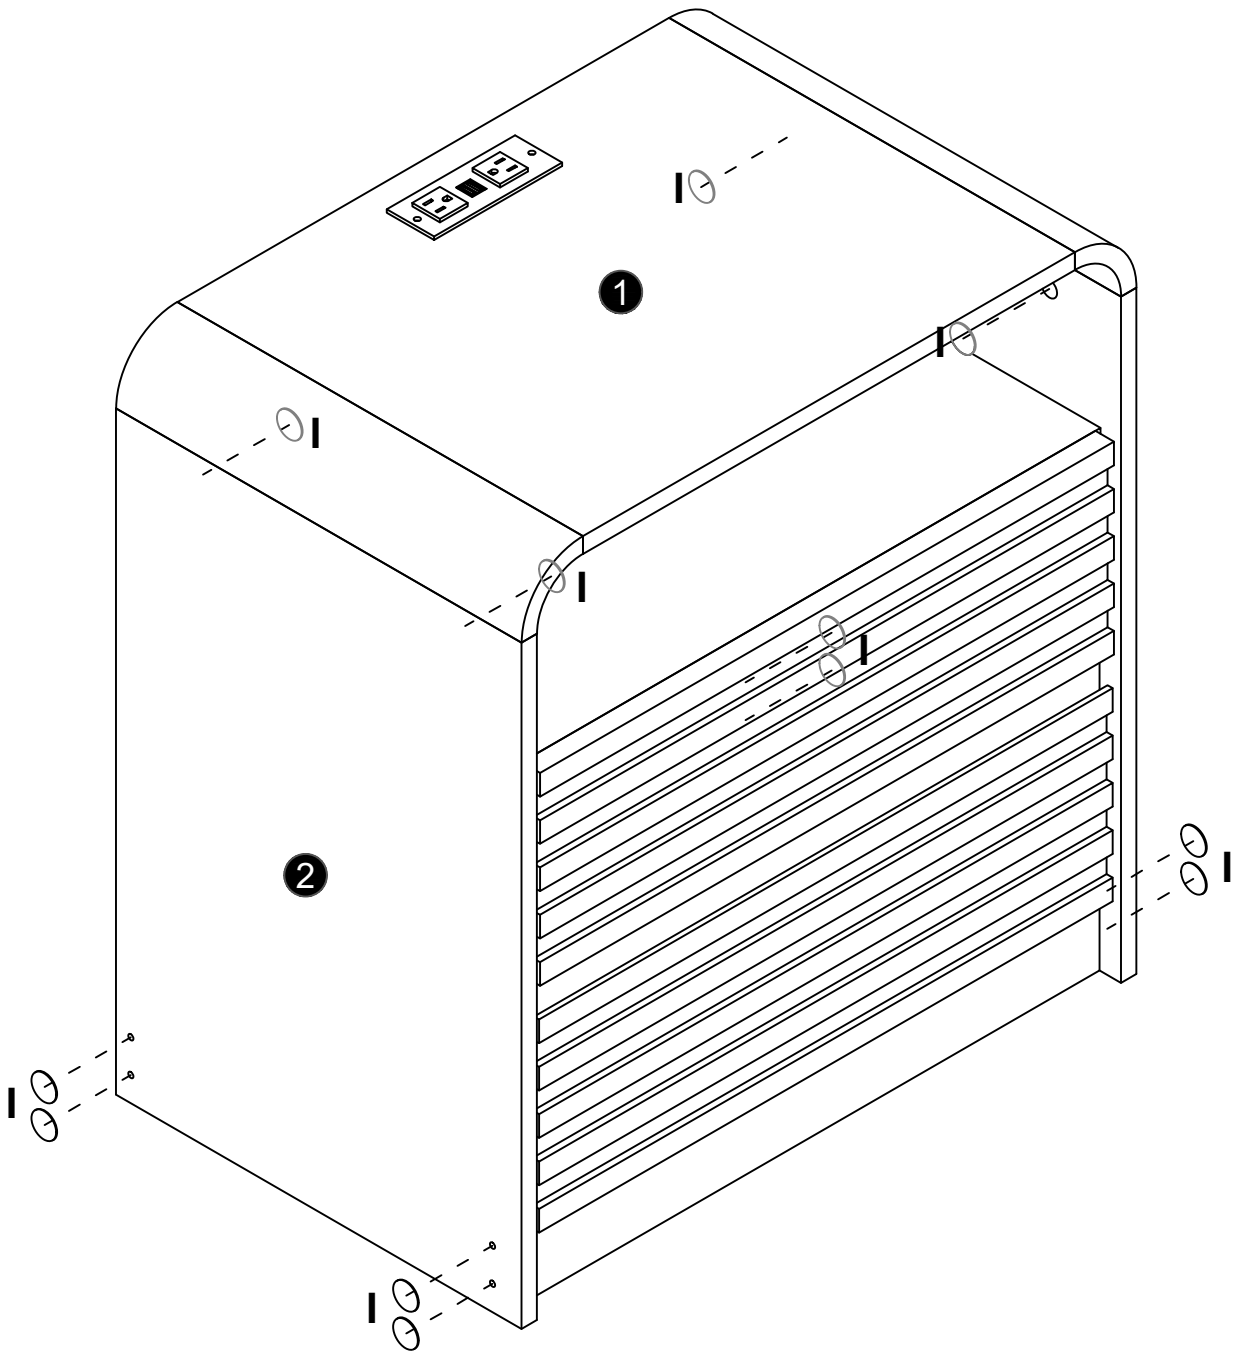


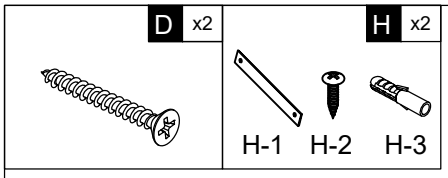


Done

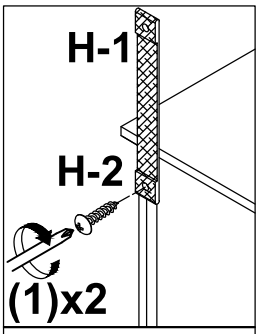


First fix the anti-rewind screw in the reserved hole of the product.

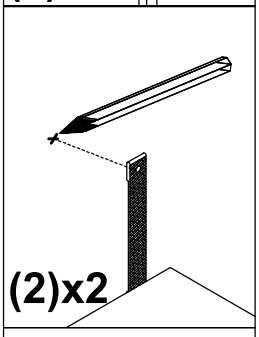


then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

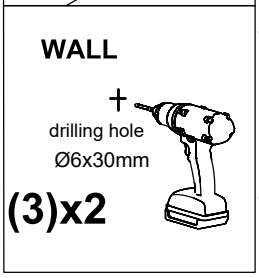

Then use a tape drill to make holes in the wall that are suitable for the product screws.

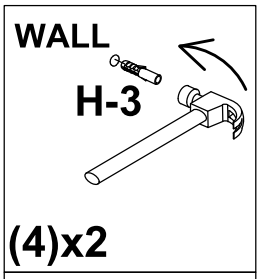

Then,put the expansion bolt into the hole

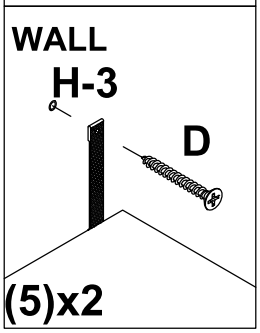

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

