

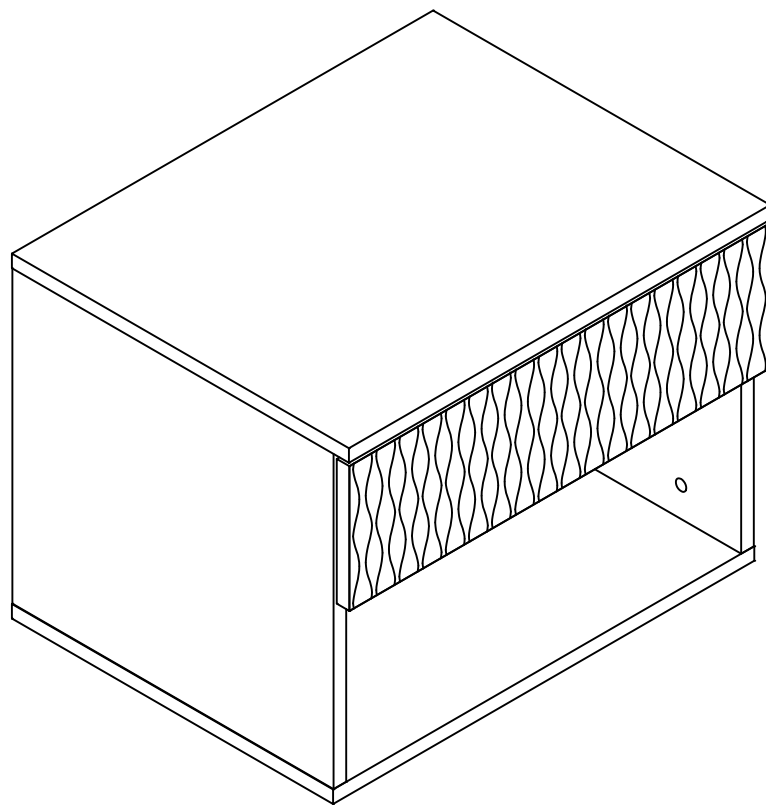
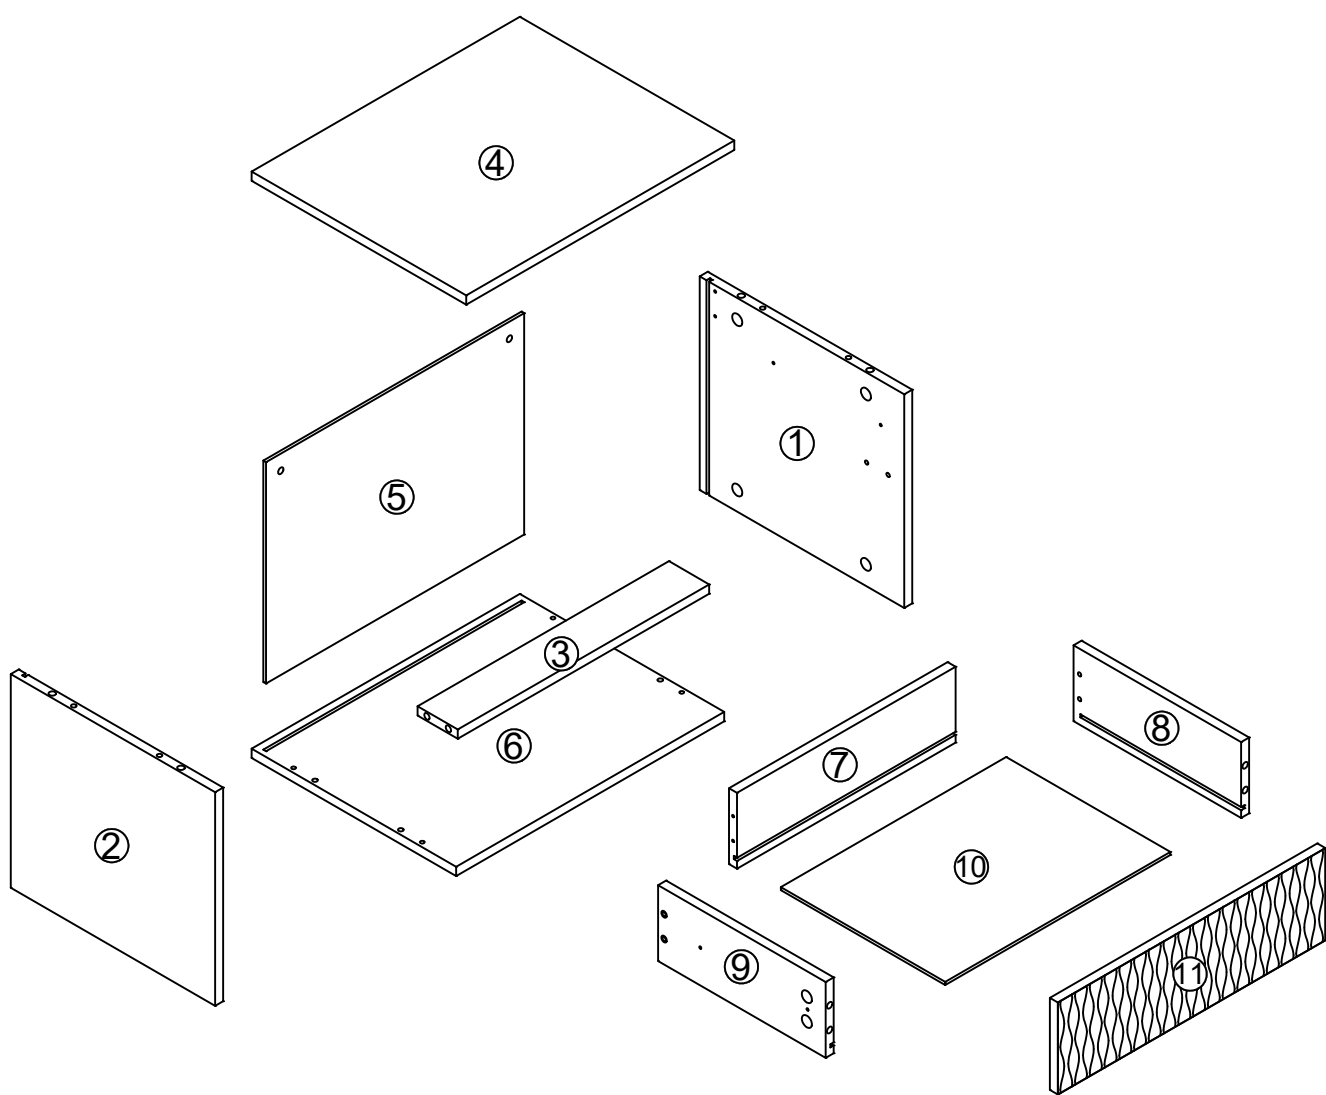

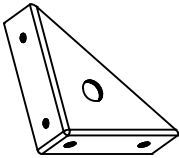


Installation & Assembly

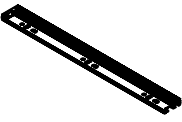


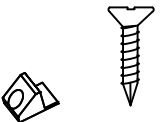


A  16+2PCS	B  16+2PCS	C  M6X30MM 8+2PCS	 M3.5X12M 16+2PCS
E  M3.5X30M 4+1PCS	F  2PCS	G  LX250mm 2PCS	H  (3.5*16mm) 4+1PCS
I  M4X45M 2PCS	J  2PCS	K  2PCS	

01

Warm Reminder:
Before installing the drawer rail,
you need to separate the G1 and G2 first.

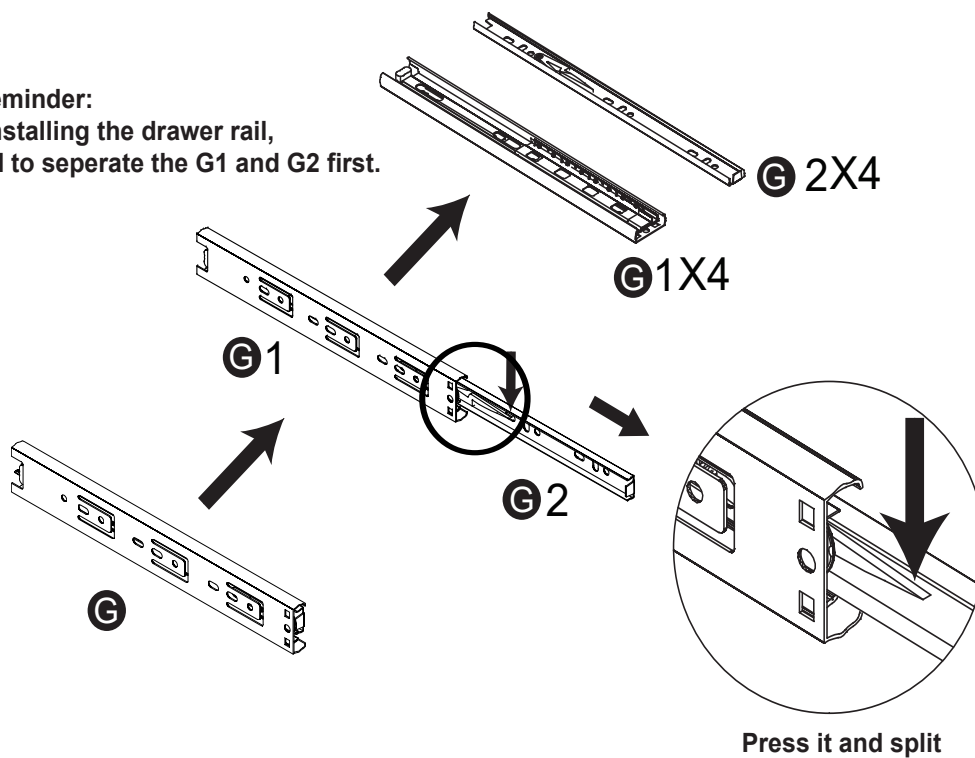


02

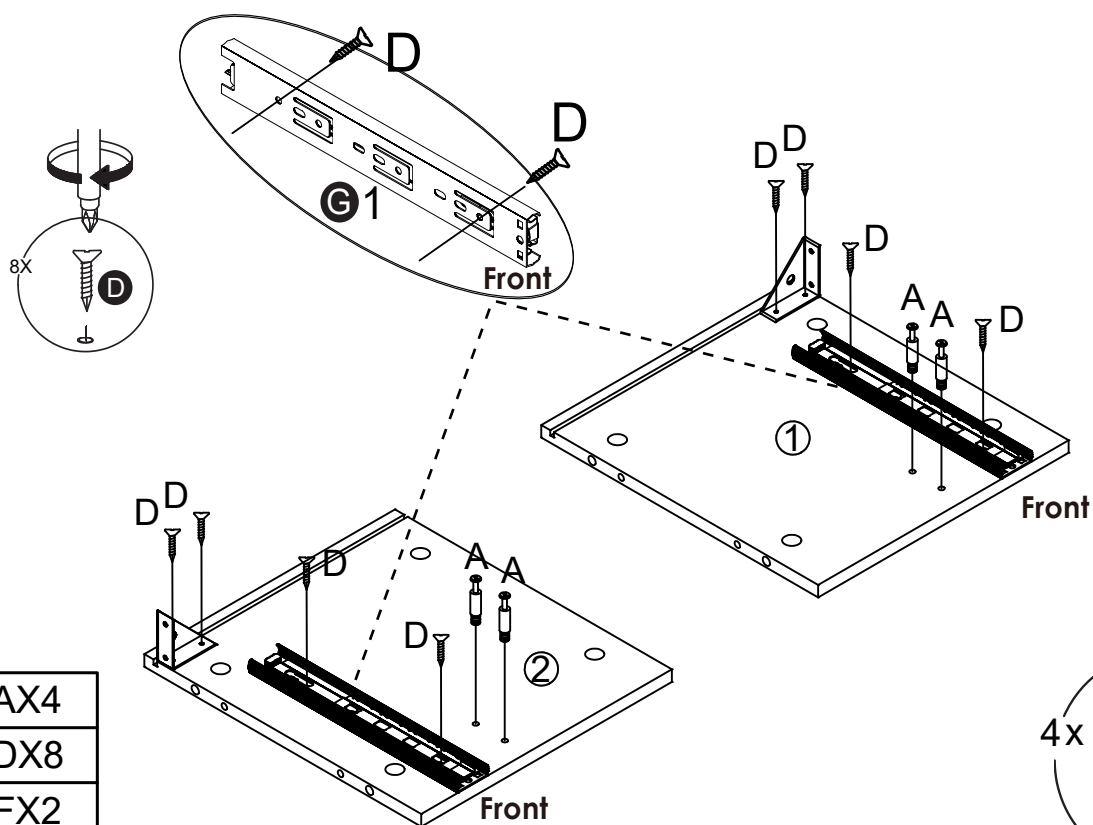



	AX4
	DX8
	FX2
	G1X2

03

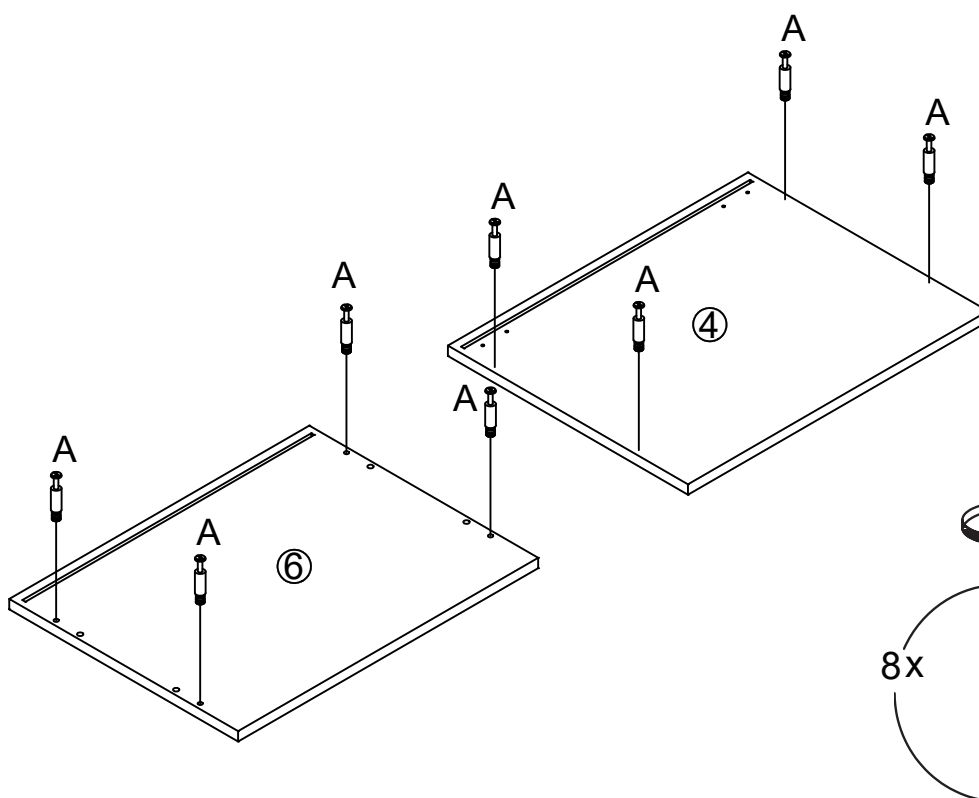




	AX8
---	-----

04

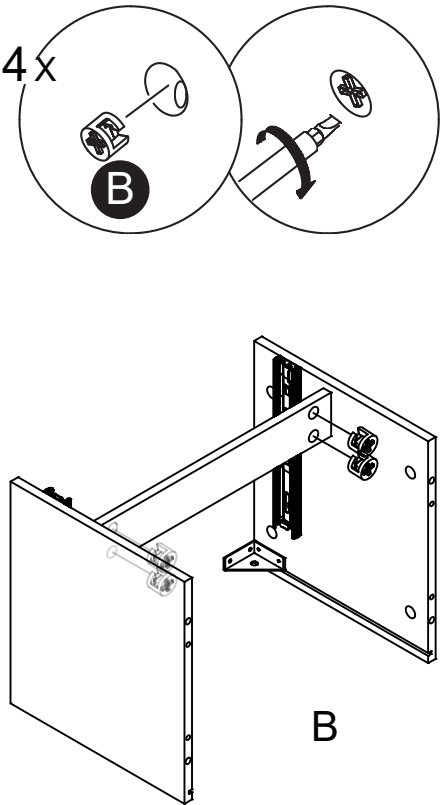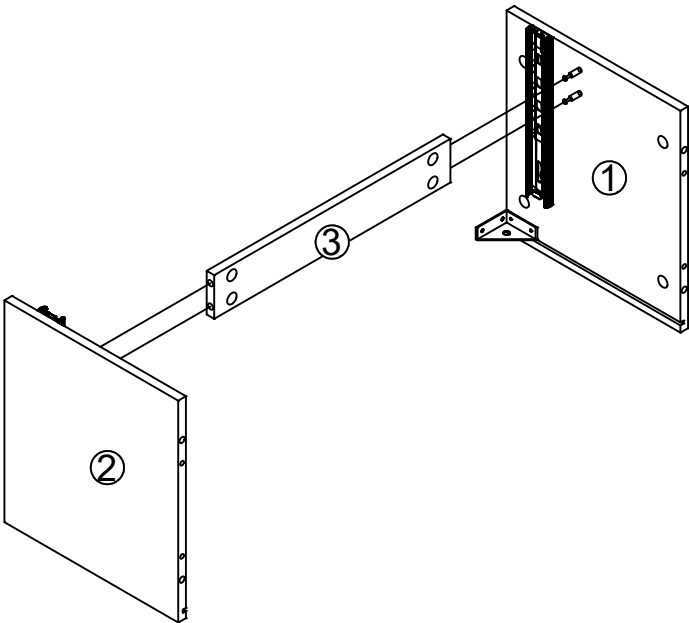



	BX4
--	-----

05

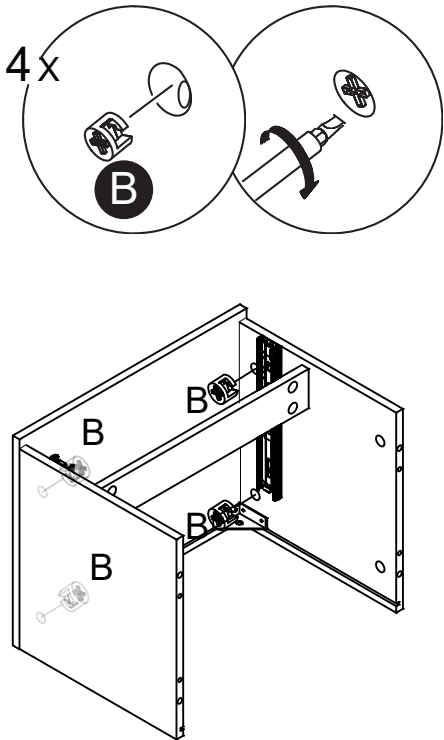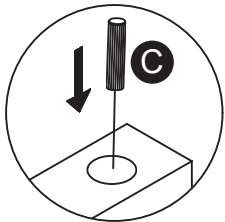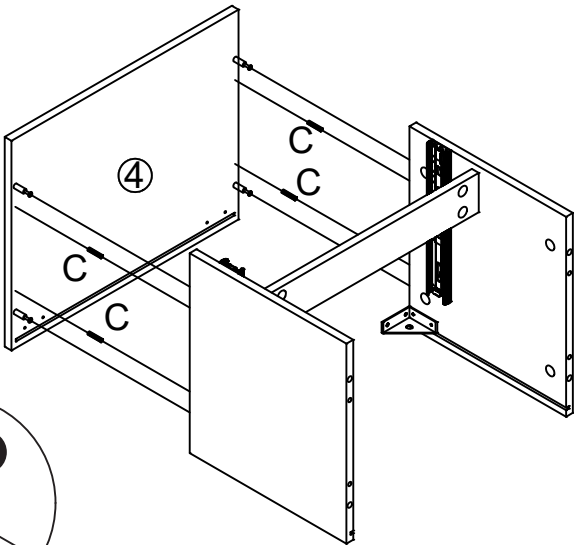



	BX4
	CX4

06



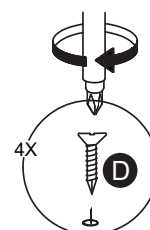
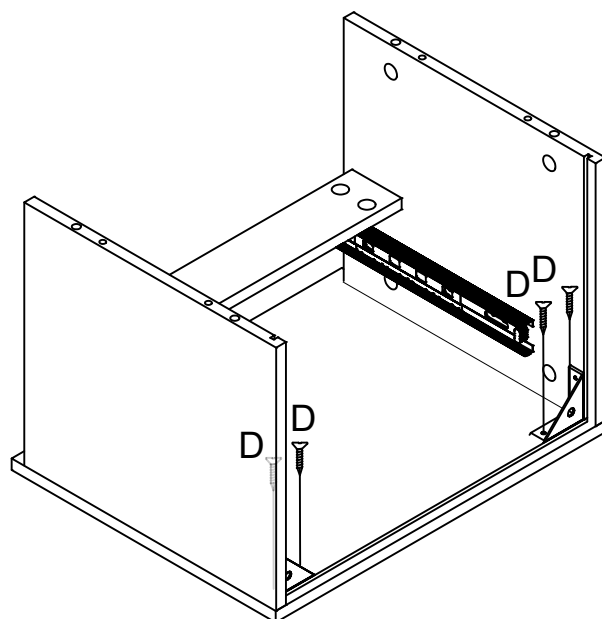


DX4

07

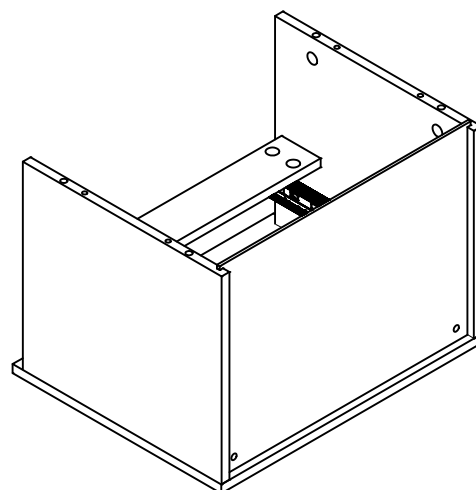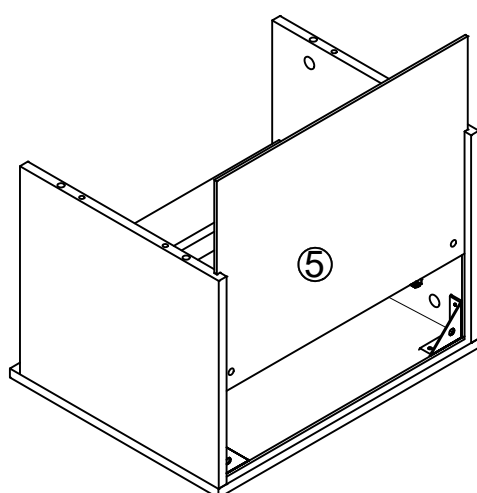

08

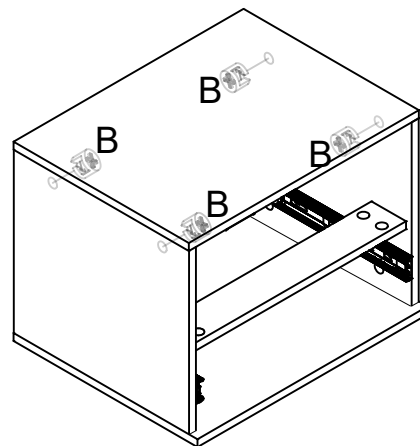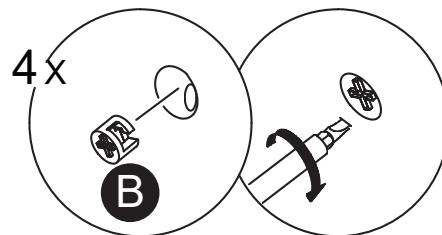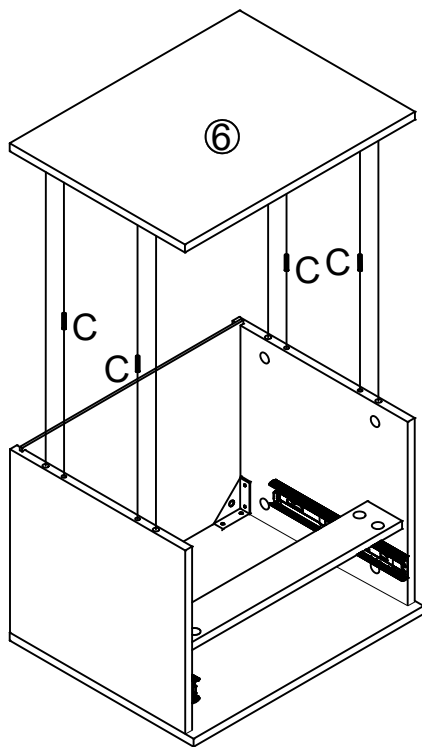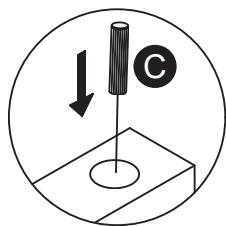


BX4




CX4

09

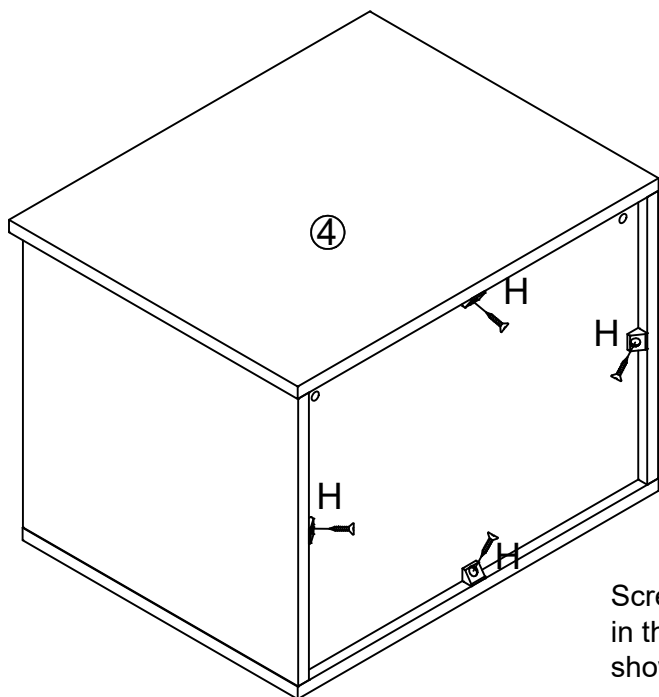


Screw type I can be installed in the approximate location shown in the diagram.


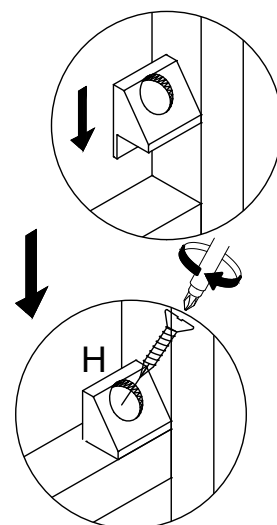


HX4

10



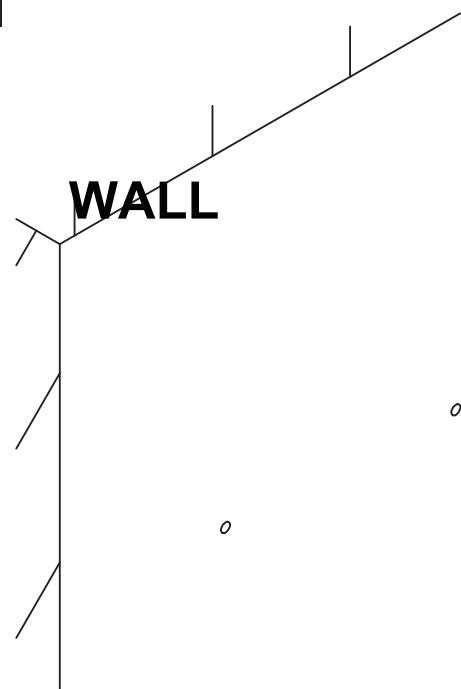


Drill 2 holes on the wall at the required position for anti-falling device installation.

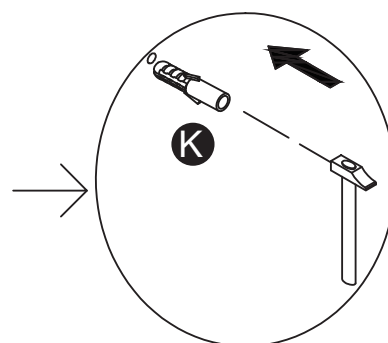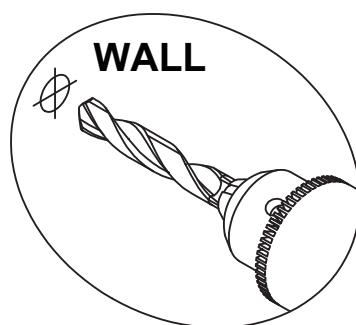

KX2

11

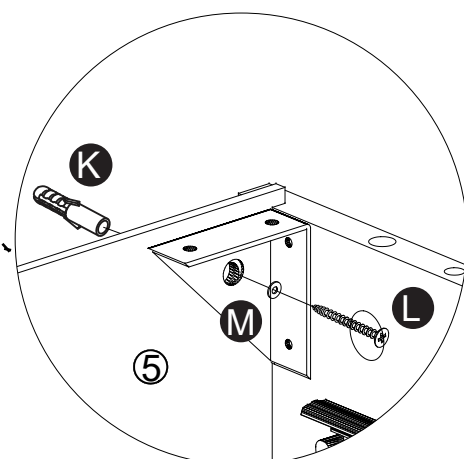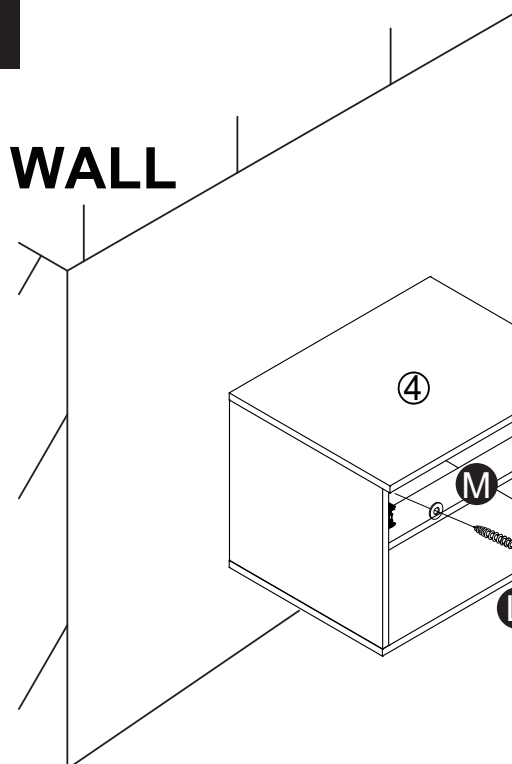


IX2




JX2

12

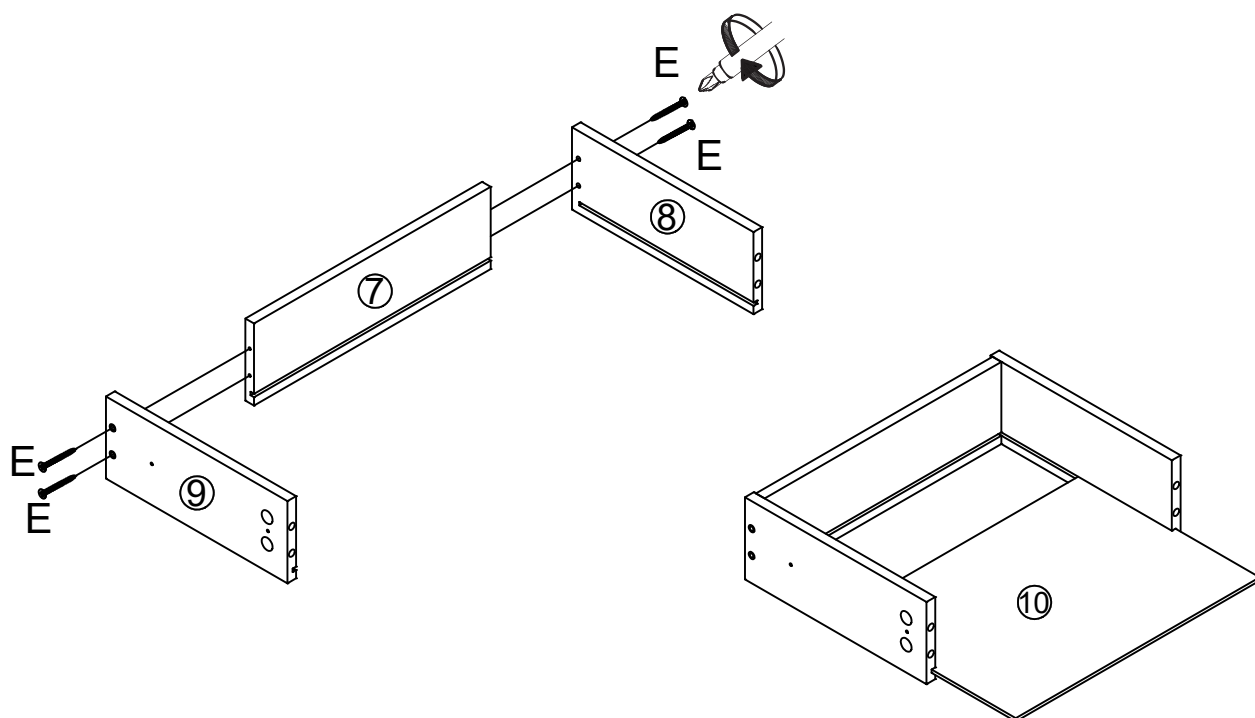

EX4

13




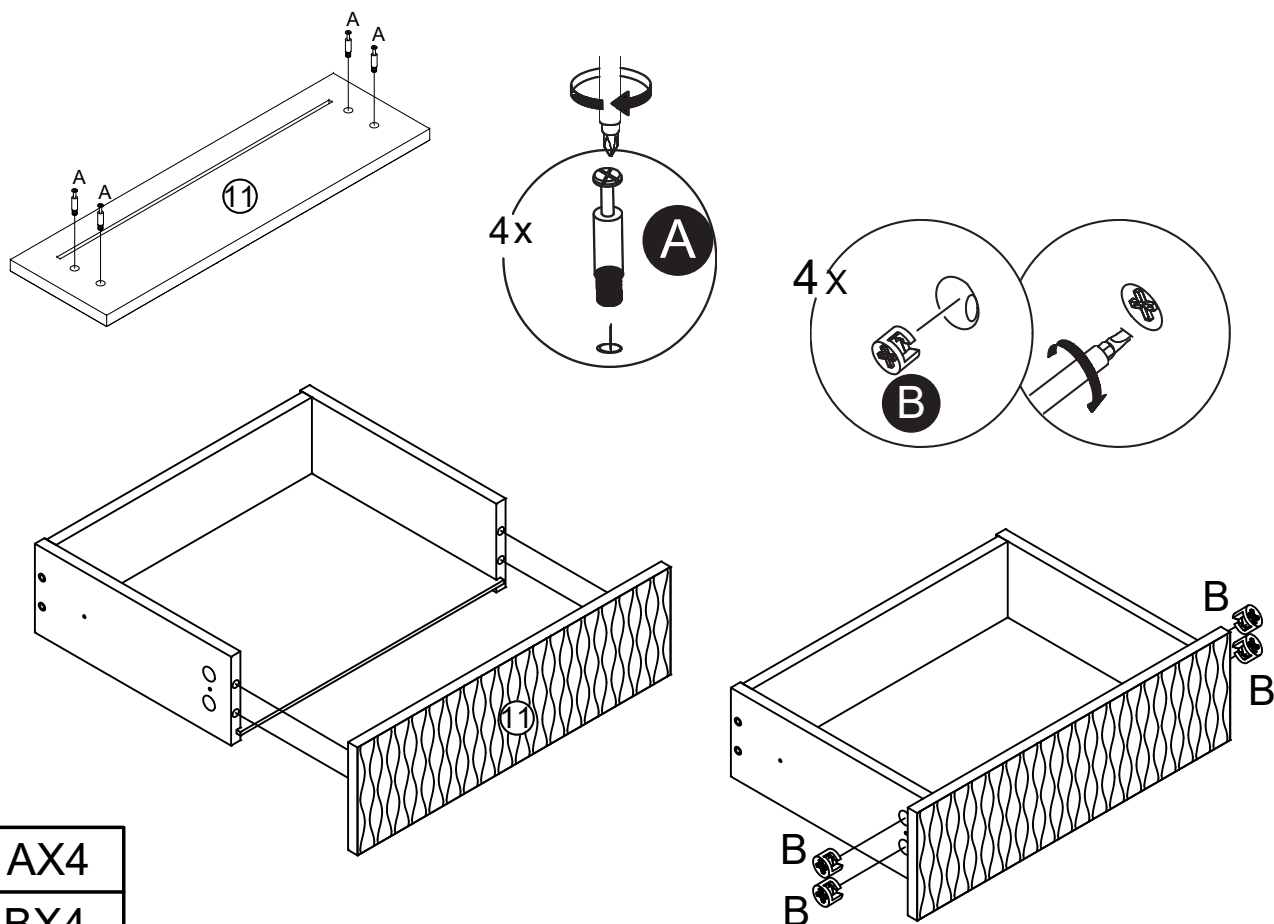


AX4



BX4

14

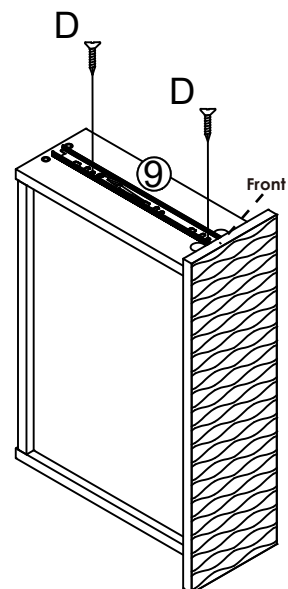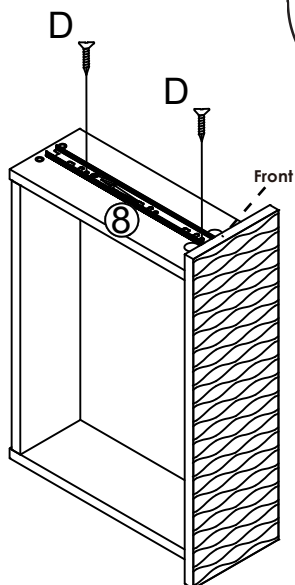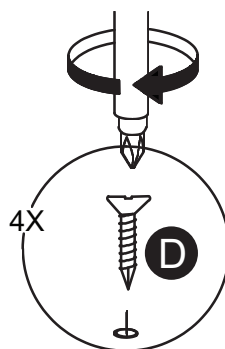

	DX4
	G2X2

15

