


ASSEMBLY INSTRUCTIONS

WF302969


IMPORTANT NOTES :




1. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG PR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
2. BEFORE YOU BEING, KINDLY FOLLOW THE ASSEMBLY INSTRUCTION STEP BY STEP.

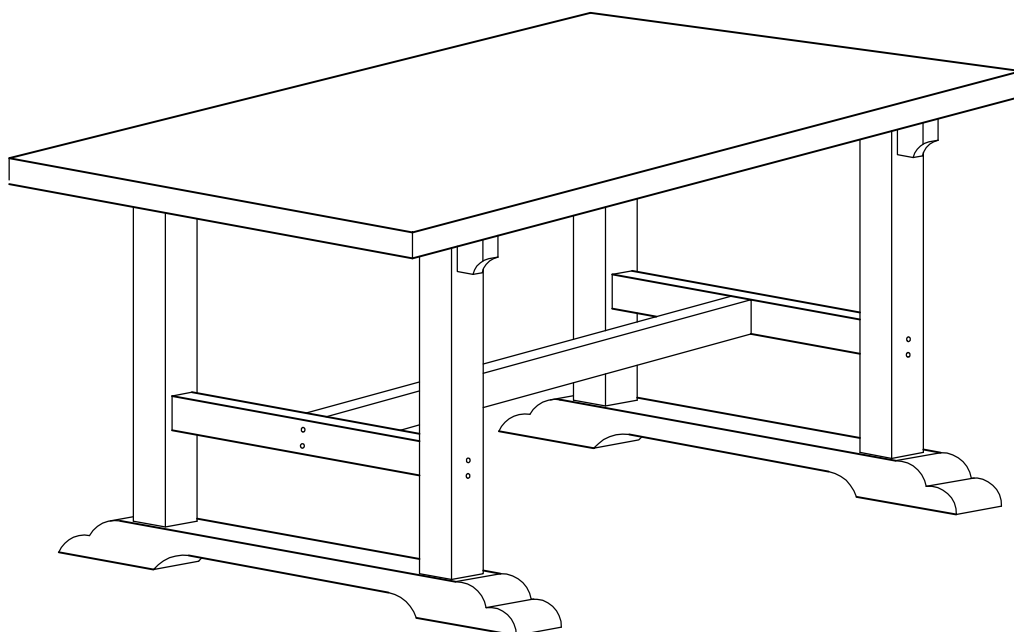


ASSEMBLY INSTRUCTIONS

WF302969

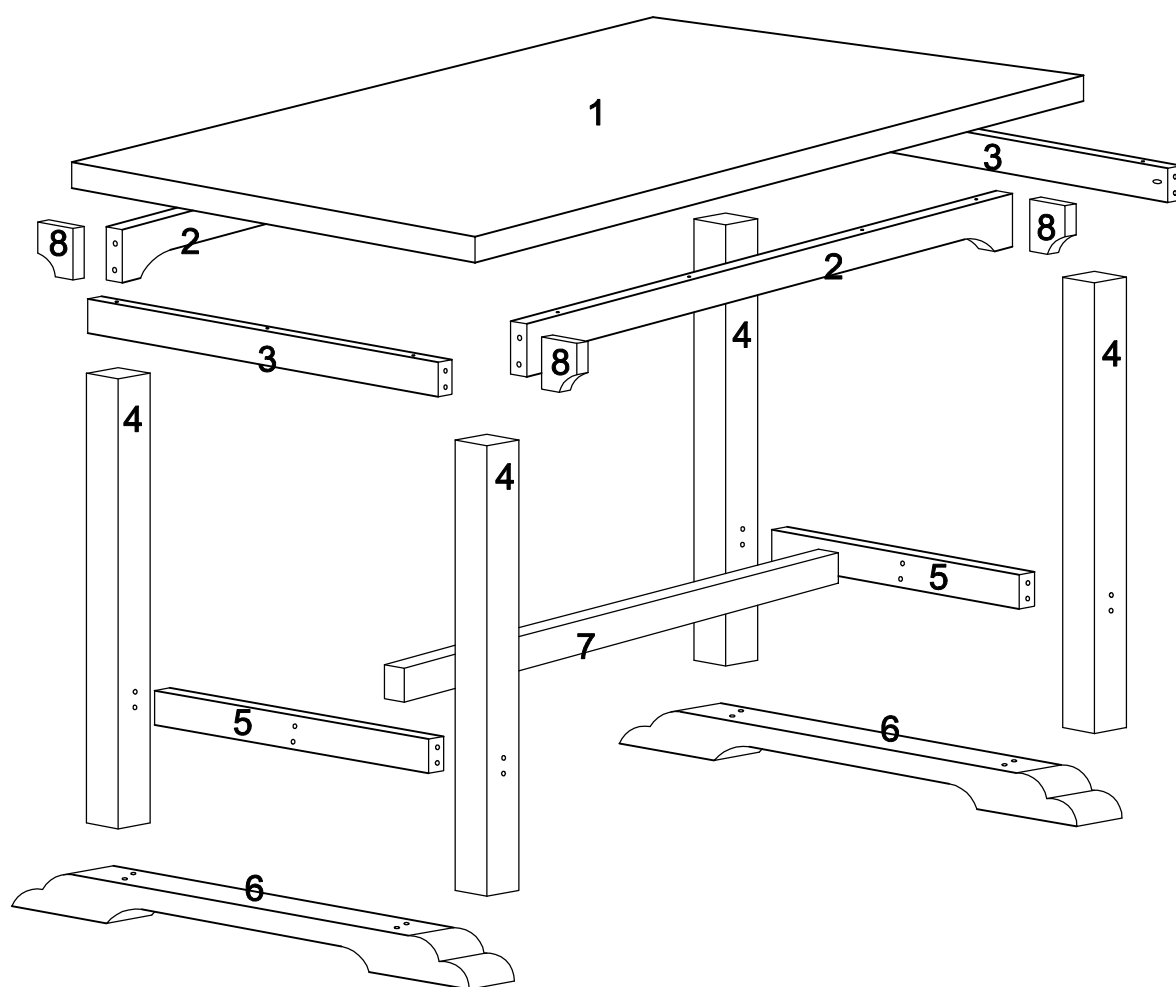


PARTS LIST		
NO.	COMPONENT	QTY.
1	Table Top 	1 pc
2	Long Apron 	2 pcs
3	Short Apron 	2 pcs
4	Table Leg 	4 pcs
5	Center Leg Support 	2 pcs
6	Bottom Leg 	2 pcs
7	Cross Bar 	1 pc
8	Side Leg Support 	4 pcs

HARDWARE LIST		
NO.	COMPONENT	QTY.
A	JCBC Bolt M6 x 40mm 	4 pcs
B	JCBC Bolt M6 x 80mm 	24 pcs
C	1/4" Spring Washer 	28 pcs
D	Wood Dowel M8 x 35mm 	8 pcs
E	Wood Dowel M10 x 35mm 	4 pcs
F	CB Screw M4 x 38mm 	4 pcs
G	CB Screw M4 x 50mm 	18 pcs
H	Adjuster M6 x 25mm 	4 pcs
I	Allen Key M4 x 110mm 	1 pc
J	Wood Button Ø14.5mm 	20 pcs


ASSEMBLY INSTRUCTIONS

WF302969


PAGE 3 OF 4.

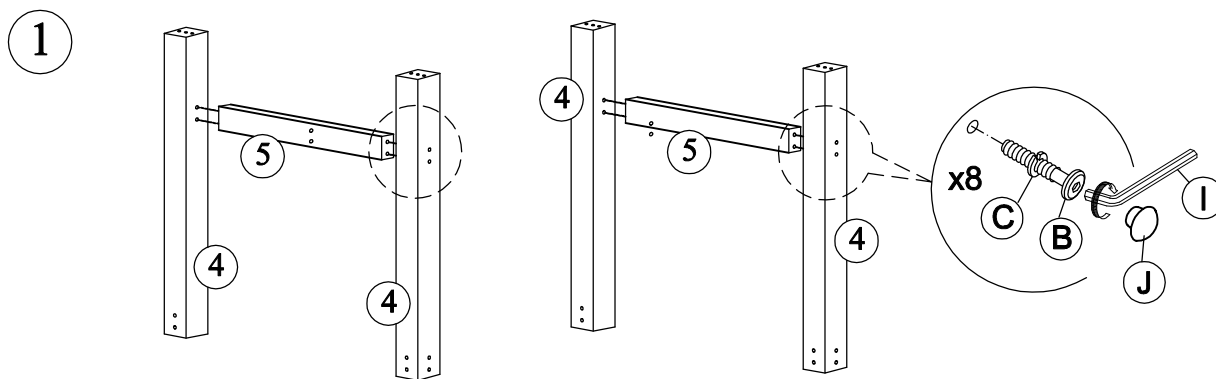

1. Attach Center Leg Support (5) onto the Table Leg (4). Insert JCBC Bolt (B), Spring Washer (C), using Allen Key (I) and insert Wood Button (J).

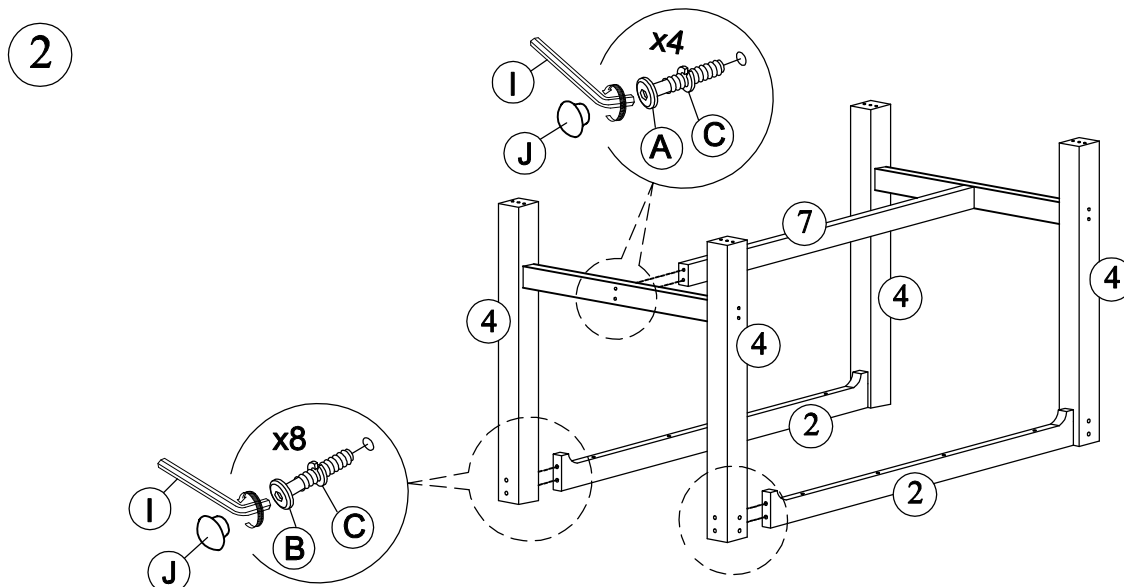

1. Attach Long Apron (2) onto the Table Leg (4). Insert JCBC Bolt (B), Spring Washer (C), using Allen Key (I) and insert Wood Button (J).
2. Attach Cross Bar (7) onto the Table Leg (4). Insert JCBC Bolt (A), Spring Washer (C), using Allen Key (I) and insert Wood Button (J).

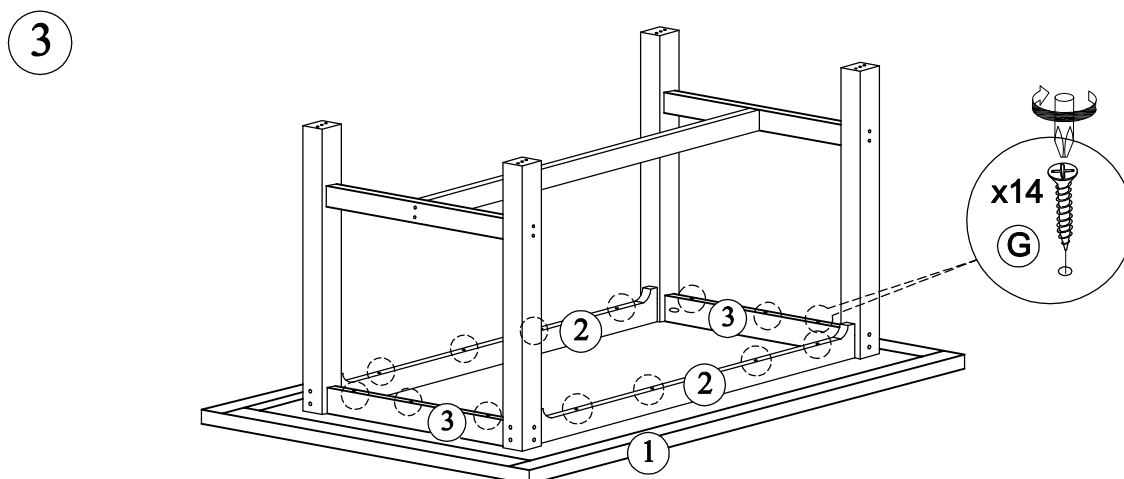


1. Insert Screw (G) in Long Apron (2) onto the Table Top (1) and tighten all the hole.
2. Insert Screw (G) in Short Apron (3) onto the Table Top (1) and tighten all the hole.

ASSEMBLY INSTRUCTIONS

PAGE 4 OF 4.


WF302969

4

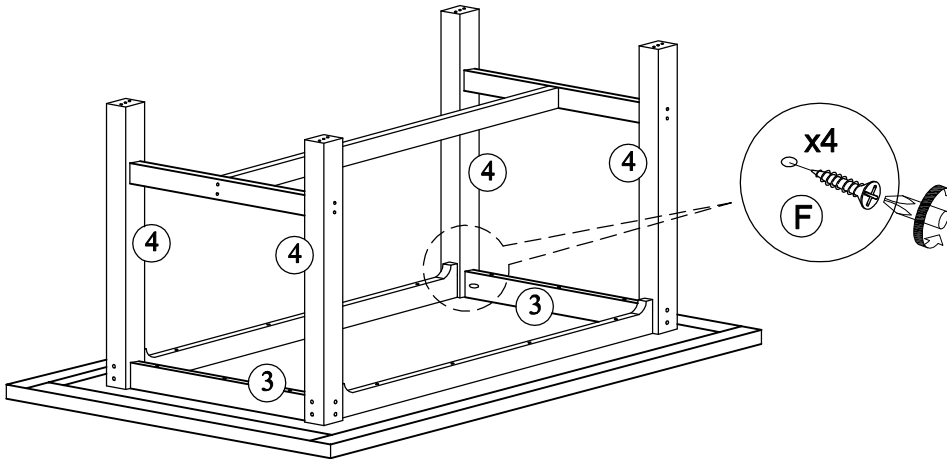


1. Insert Screw (F) in Short Apron (3) onto the Table Leg (4) and tighten all the hole.

5

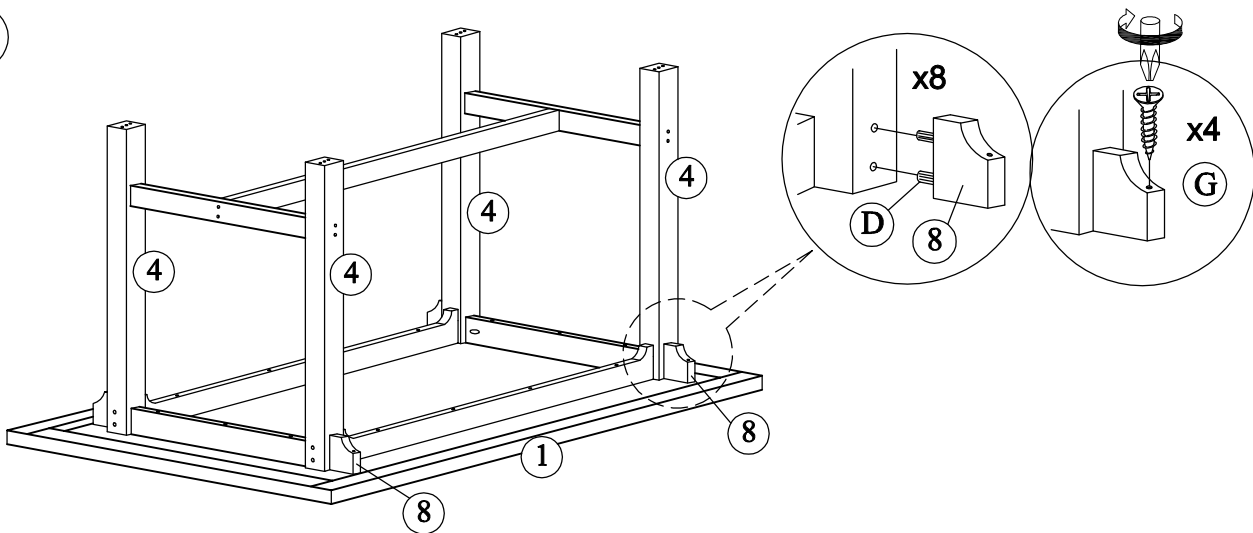

1. Insert Wood Dowel (D) onto the Side Leg Support (8) for each hole.
2. Attach Side Leg Support (8) onto the Table Leg (4), using Screw (G) tighten all the hole.

6

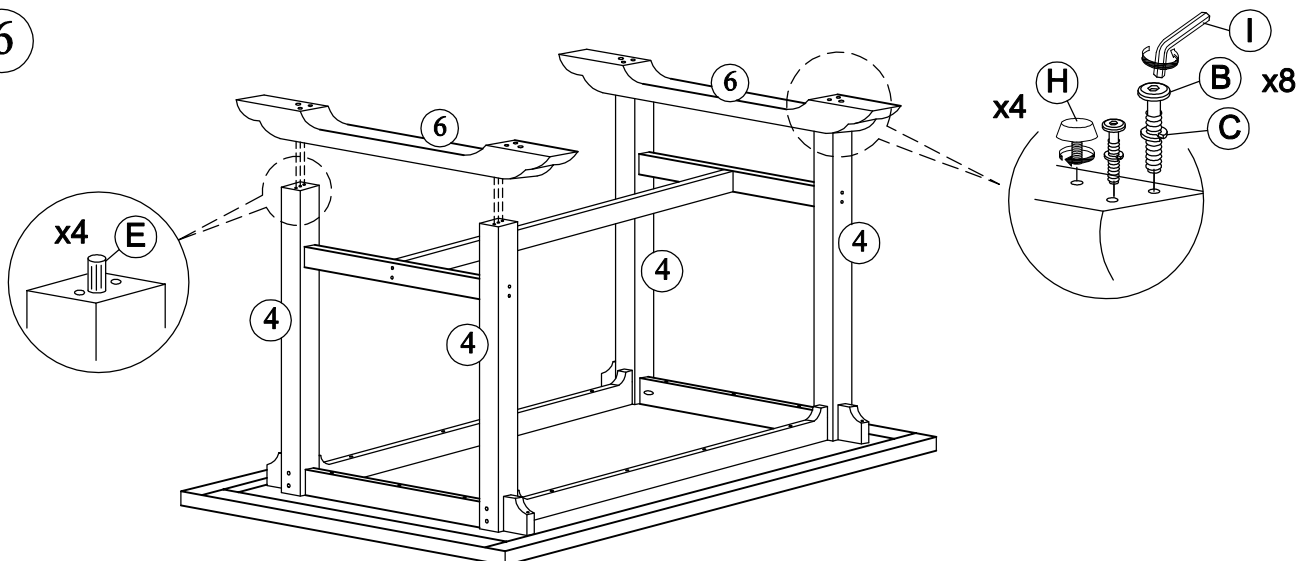

1. Insert Wood Dowel (E) onto the Table Leg (4) for each hole.
2. Attach Bottom Leg (6) onto the Table Leg (4) , Insert JCBC Bolt (B), Spring Washer (C), using Allen Key (I)
3. Tighten all the bolts and screw completely assembled.
4. Insert Adjuster (H) onto the Bottom Leg (6).


ASSEMBLY INSTRUCTIONS

PAGE 1 OF 3.

WF302970

IMPORTANT NOTES :


1. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG PR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
2. BEFORE YOU BEING, KINDLY FOLLOW THE ASSEMBLY INSTRUCTION STEP BY STEP.

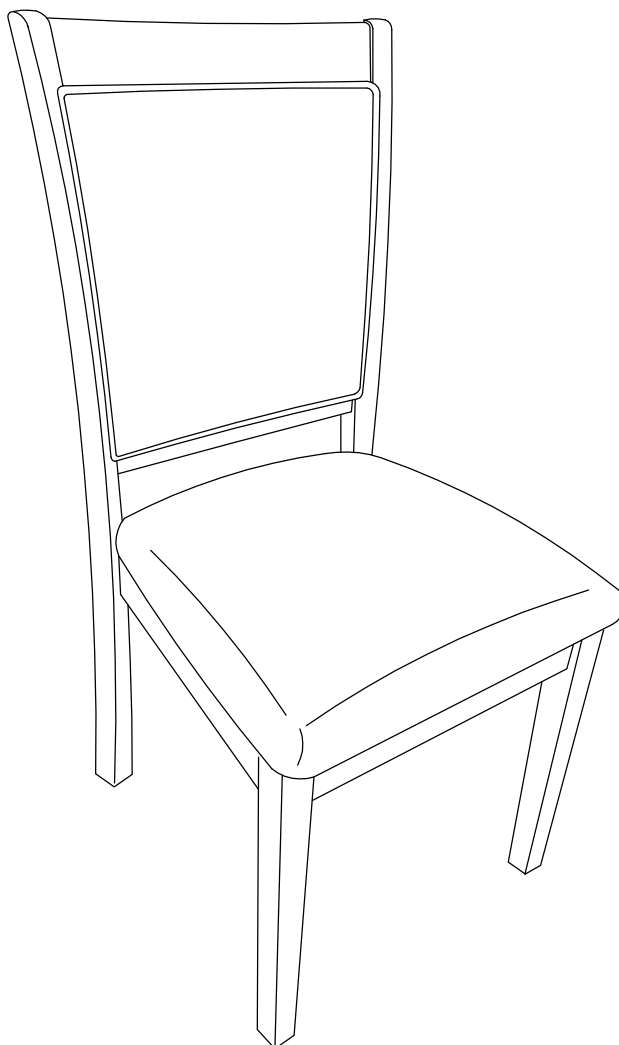

ASSEMBLY INSTRUCTIONS

PAGE 2 OF 3.

WF302970

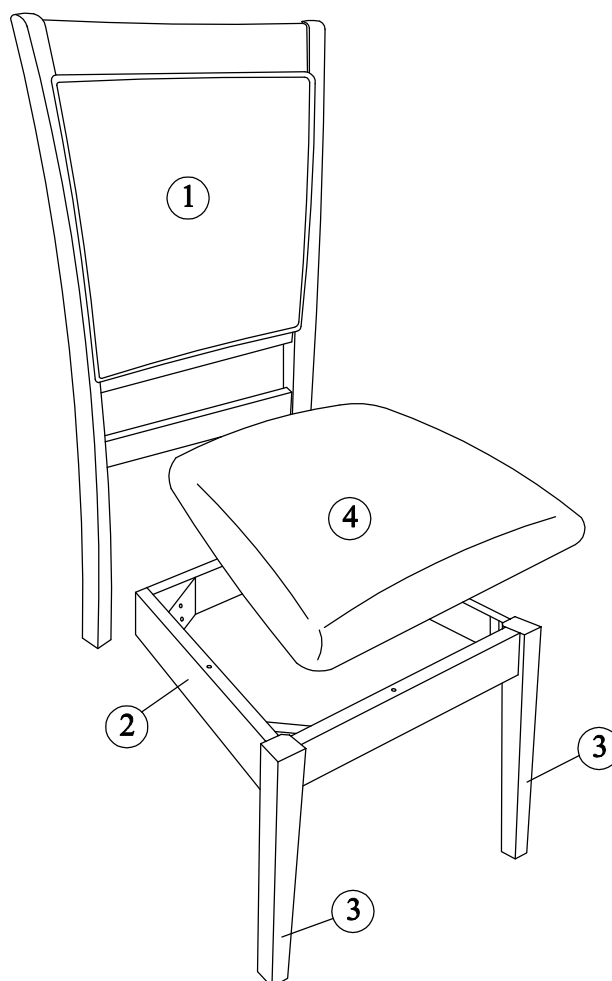


PARTS LIST		
NO.	COMPONENT	QTY.
1	Backrest 	1 pc
2	Box Frame 	1 pc
3	Front Leg 	2 pcs
4	Cushion Seat 	1 pc

HARDWARE LIST		
NO.	COMPONENT	QTY.
A	JCBC Bolt M6 x 40mm 	2 pcs
B	JCBC Bolt M6 x 60mm 	4 pcs
C	JCBC Bolt M6 x 70mm 	4 pcs
D	1/4" Spring Washer 	10 pcs
E	1/4" Flat Washer 	10 pcs
F	CB Screw M4 x 32mm 	3 pcs
G	Allen Key M4 x 110mm 	1 pc


WF302970

1

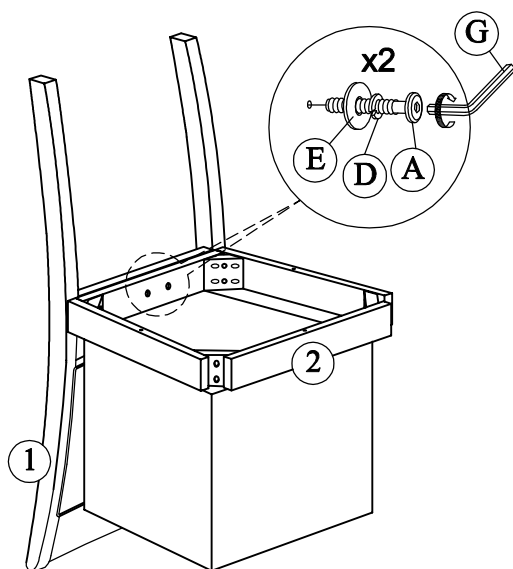


1. Attach Backrest (1) onto the Box Frame (2) . Insert JCBC Bolt (A) , Spring Washer (D) and Flat Washer (E) , using Allen Key (G).

2

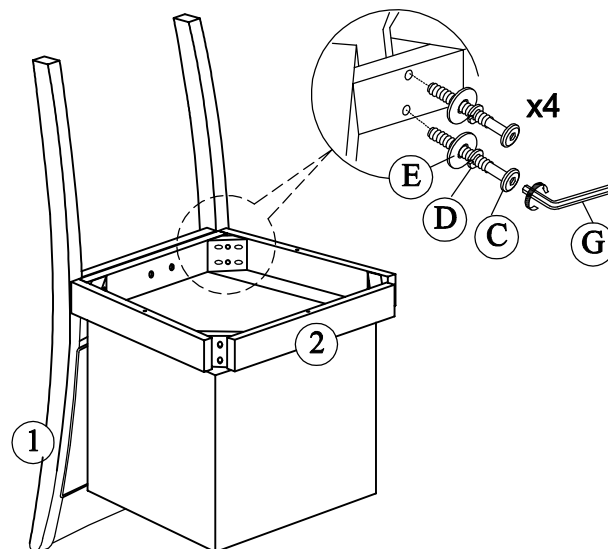


1. Insert JCBC Bolt (C) , Spring Washer (D) and Flat Washer (E) , using Allen Key (G).

3

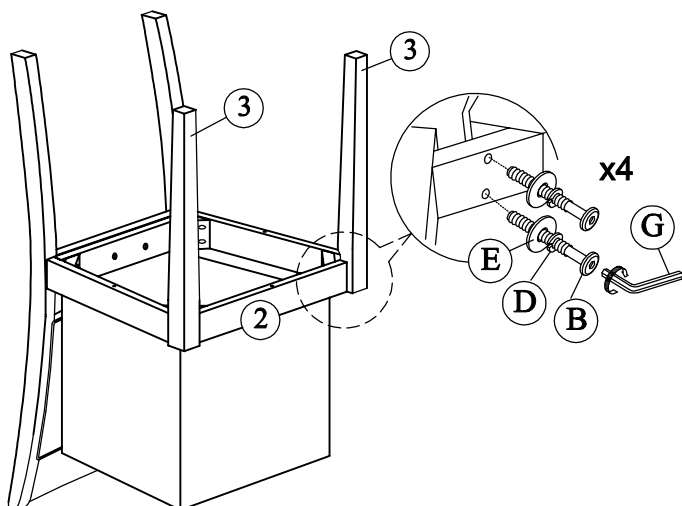

1. Attach Front Leg (3) onto the Box Frame (2) . Insert JCBC Bolt (B) , Spring Washer (D) and Flat Washer (E) , using Allen Key (G).

4

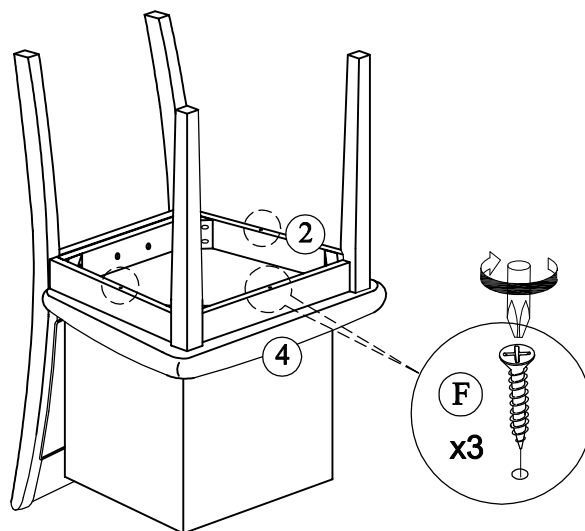


1. Attach Cushion Seat (4) onto the Box Frame (2) . Insert Screw (F) ,using Phillips Screwdriver (Not Provided).

ASSEMBLY INSTRUCTIONS

WF302971


IMPORTANT NOTES :


1. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG PR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
2. BEFORE YOU BEING, KINDLY FOLLOW THE ASSEMBLY INSTRUCTION STEP BY STEP.

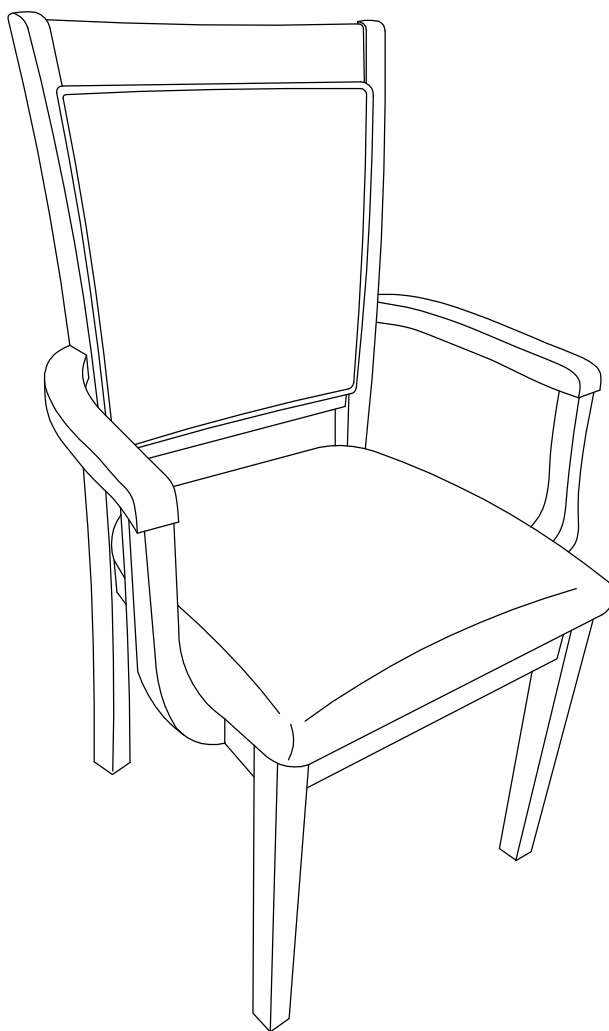

ASSEMBLY INSTRUCTIONS

WF302971

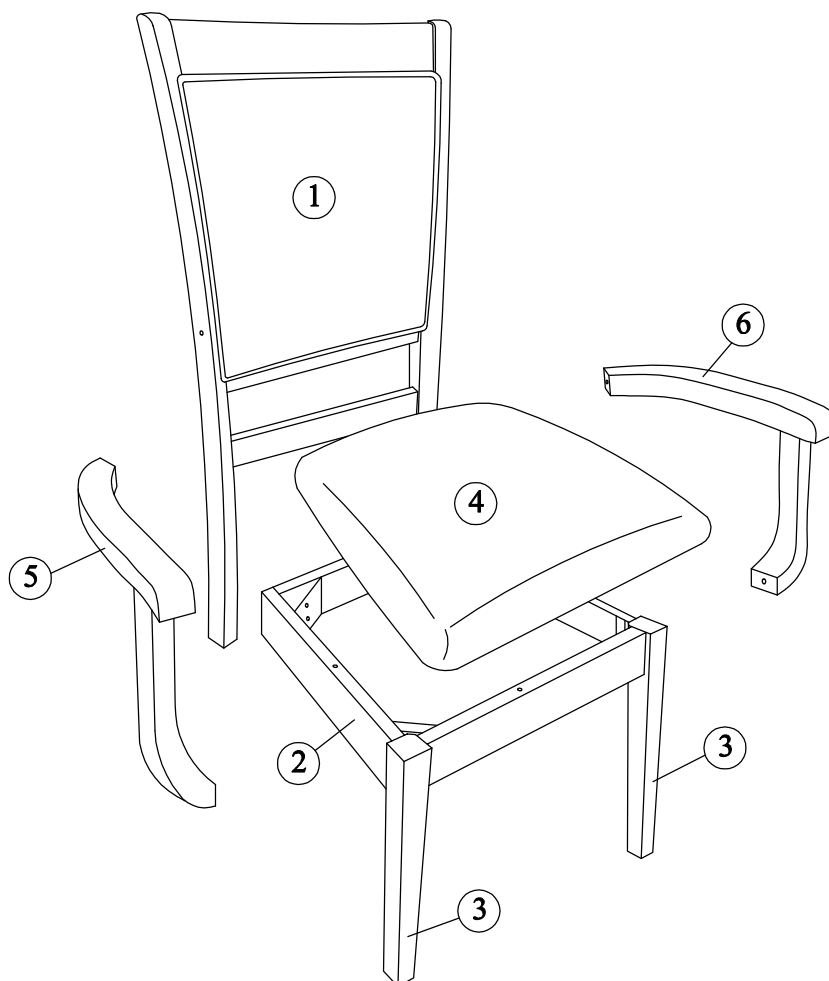


PARTS LIST			
NO.	COMPONENT		QTY.
1	Backrest		1 pc
2	Box Frame		1 pc
3	Front Leg		2 pcs
4	Cushion Seat		1 pc
5	Arm - Left		1 Set
6	Arm - Right		1 Set


HARDWARE LIST			
NO.	COMPONENT		QTY.
A	JCBC Bolt M6 x 40mm		6 pcs
B	JCBC Bolt M6 x 60mm		4 pcs
C	JCBC Bolt M6 x 70mm		4 pcs
D	1/4" Spring Washer		14 pcs
E	1/4" Flat Washer		12 pcs
F	CB Screw M4 x 32mm		3 pcs
G	Allen Key M4 x 110mm		1 pc

ASSEMBLY INSTRUCTIONS


WF302971

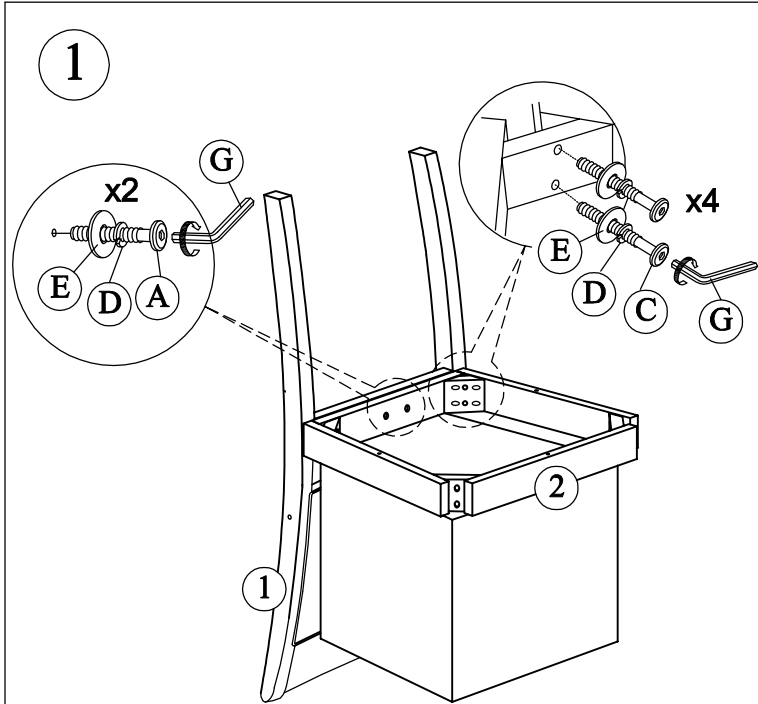


1. Attach Backrest (1) onto the Box Frame (2) . Insert JCBC Bolt (A) , Spring Washer (D) and Flat Washer (E) , using Allen Key (G).
2. Afterthan Insert JCBC Bolt (C) , Spring Washer (D) and Flat Washer (E) , using Allen Key (G).

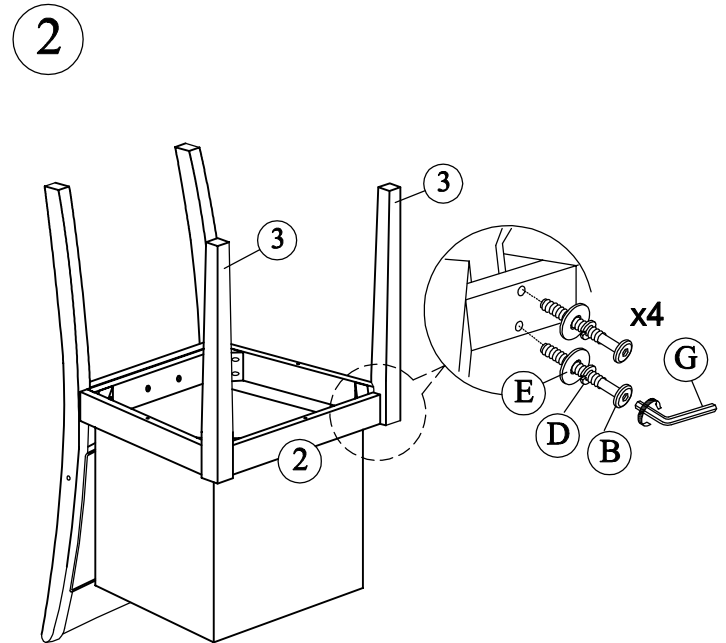

1. Attach Front Leg (3) onto the Box Frame (2) . Insert JCBC Bolt (B) ,Spring Washer (D) and Flat Washer (E) , using Allen Key (G).

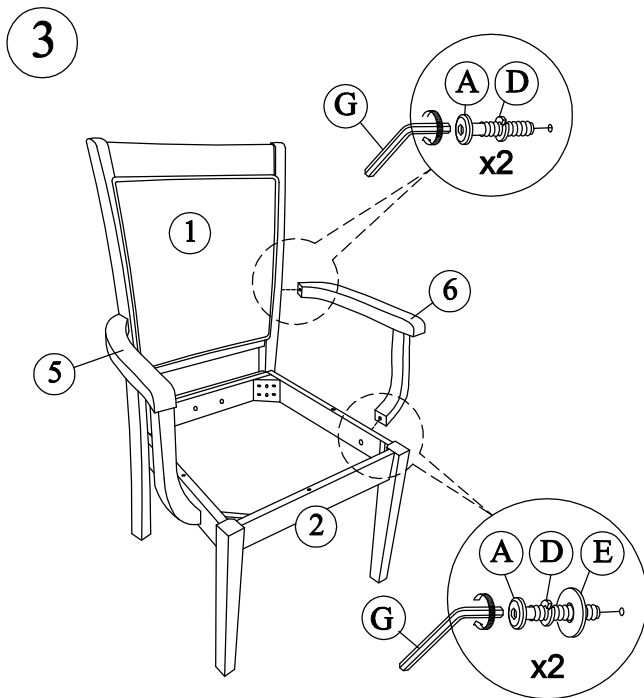

1. Attach Arm - Left (5) and Arm - Right (6) onto the Box Frame (2) , Insert JCBC Bolt (A) , Spring Washer (D) and Flat Washer (E) , using Allen Key (G).
2. Attach Arm - Left (5) and Arm - Right (6) onto the Backrest (1) , Insert JCBC Bolt (A) and Spring Washer (D) , using Allen Key (G).

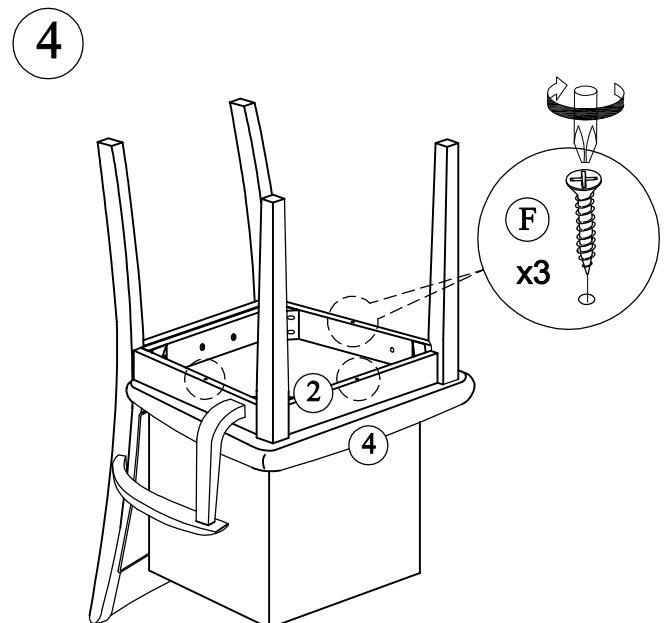

1. Attach Cushion Seat (4) onto Box Frame (2) . Insert Screw (F) ,using Phillips Screwdriver (Not Provided).