

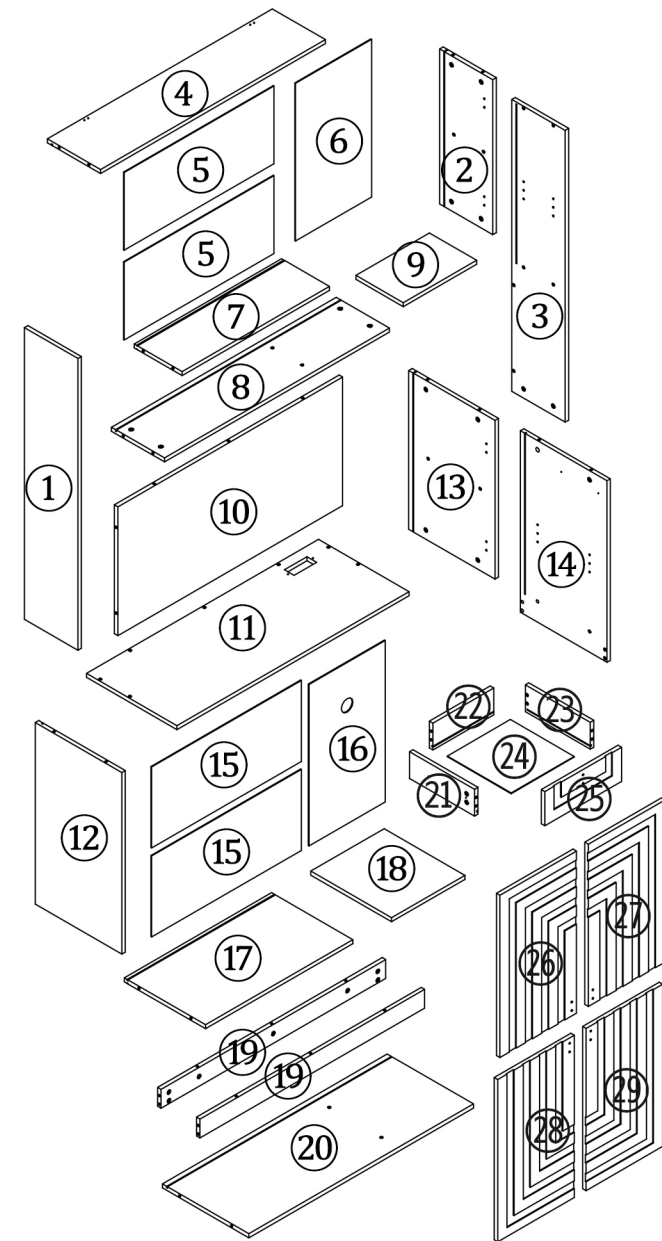


ASSEMBLY INSTRUCTION

- Please follow the instructions to assemble the items correctly.
- Please ensure the safety of the glass when assembling.
- Do not make the screws too loose or too tight.
- As shown in the figure, Insert the screw into the hole.
The arrow in the picture, Then rotate 90° or 180° clockwise.
- The accessory bag contains some small accessories, which should be kept away from children.
- The remaining parts are spare parts.
- Warm reminder white backboard please install the white side inward
- The operating instruction of RGB light is included in the package , please read it carefully when assembling


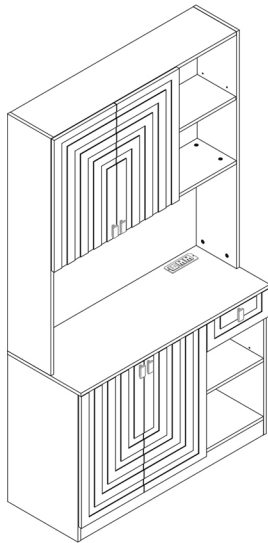


A  68pcs	B  68pcs	C  3.5*14 82pcs	D  8pcs	F  5pcs	F1  10pcs	G  8pcs
K  2pcs	R  1pcs	X  2pcs	Y  24pcs	AM  Decorative paper 24pcs		




Hardware installation demonstration

- Please make sure "A" hardware tightened and can't be pulled out

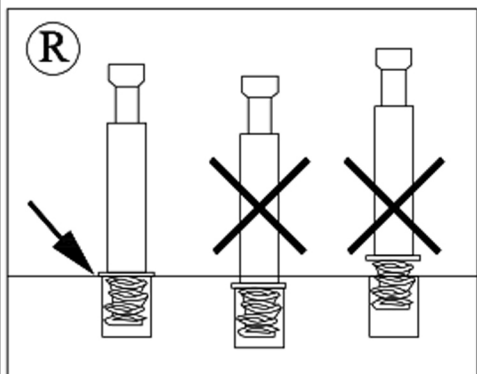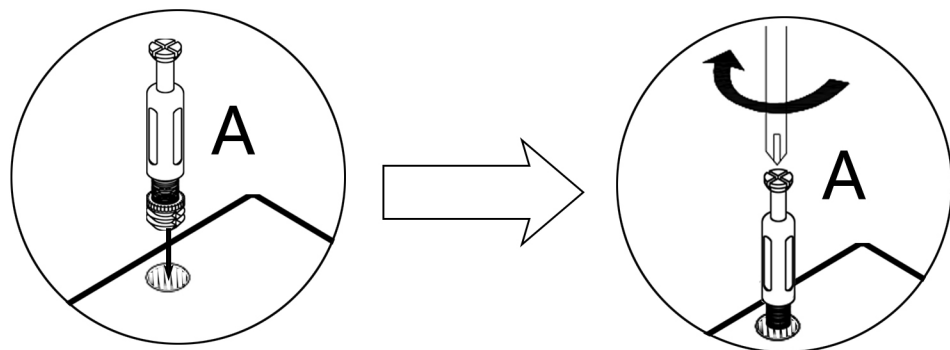

Hardware installation demonstration

- When inserting cam ensure arrowhead on cam points toward to the hole on the panel edge

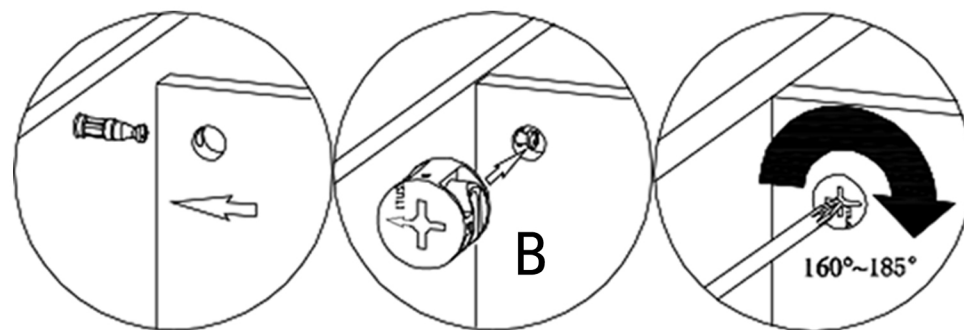




- Before installing the drawer rail, you need to separate the K1 and K2 first.



- 
- The first screw hole should corresponded with the board location hole




The first screw hole should corresponded with the board location hole

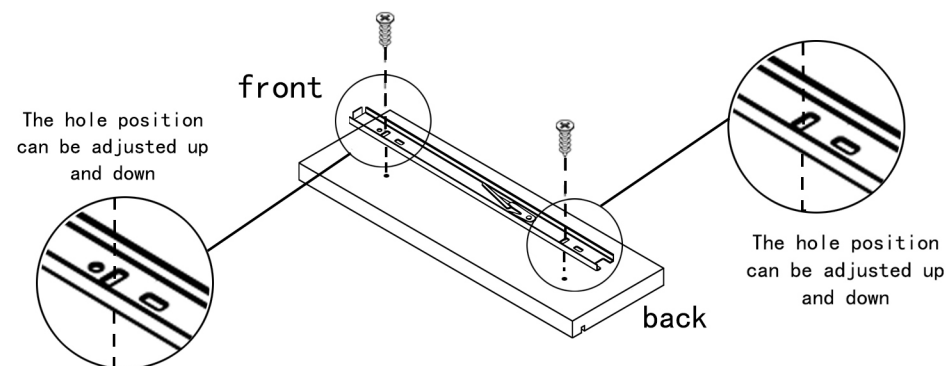




Hardware installation demonstration

Cabinet door front and rear adjustment

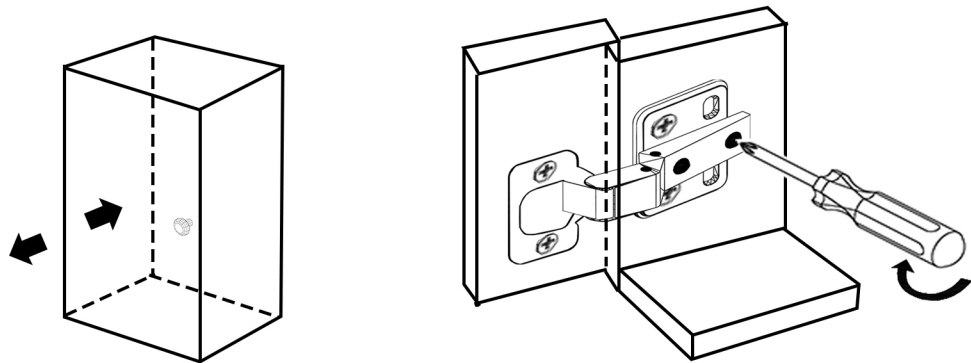

Adjusting screws can change the gap
between the door panel and the cabinet side

Cabinet door left and right adjustment


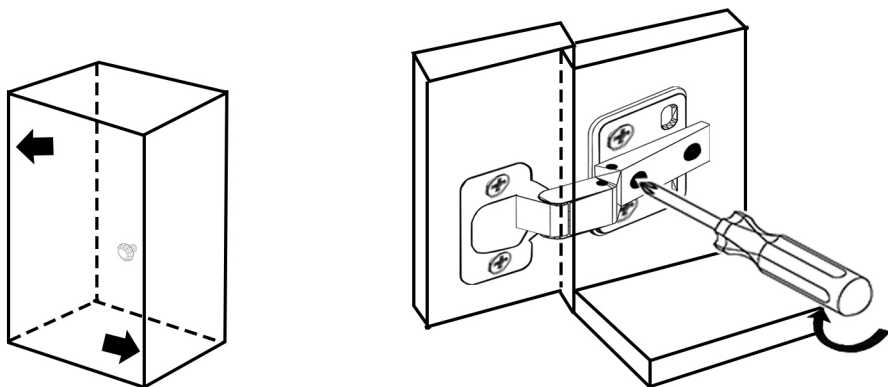


Adjusting screws can change the door panel
relative to the cabinet next to the coverage




Hardware installation demonstration

Cabinet door up and down adjustment

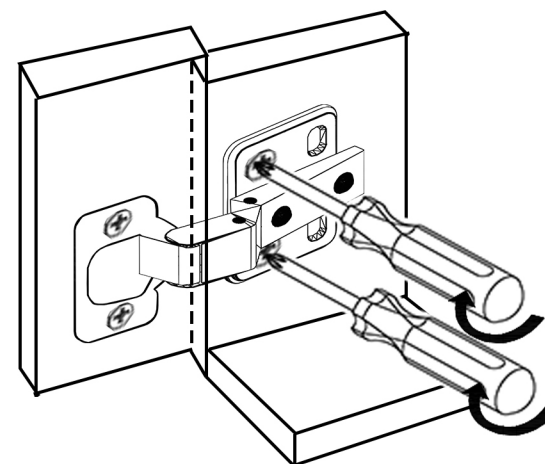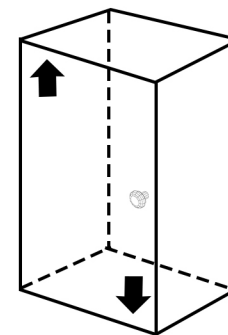


Adjusting screws can correct the upper and
lower clearance of the door panel

STEP 1

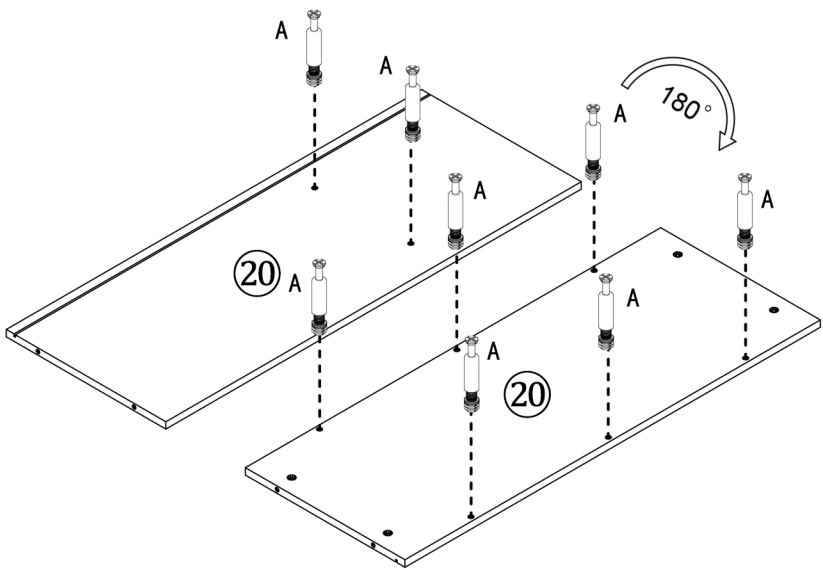


 A*8

STEP 2

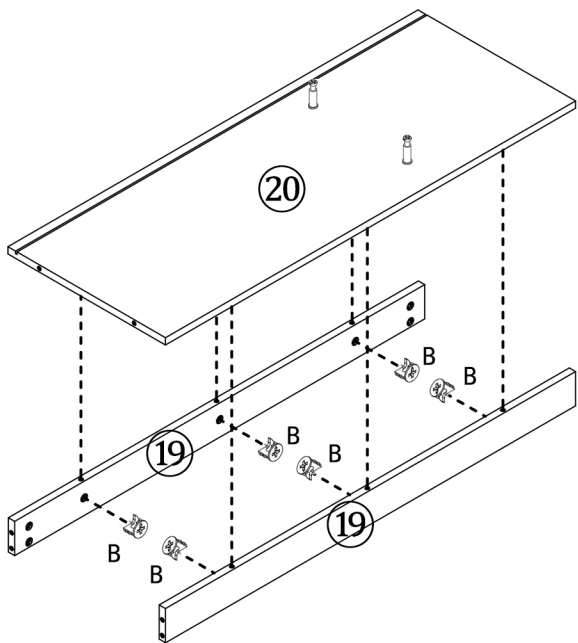


 B*6

STEP 3

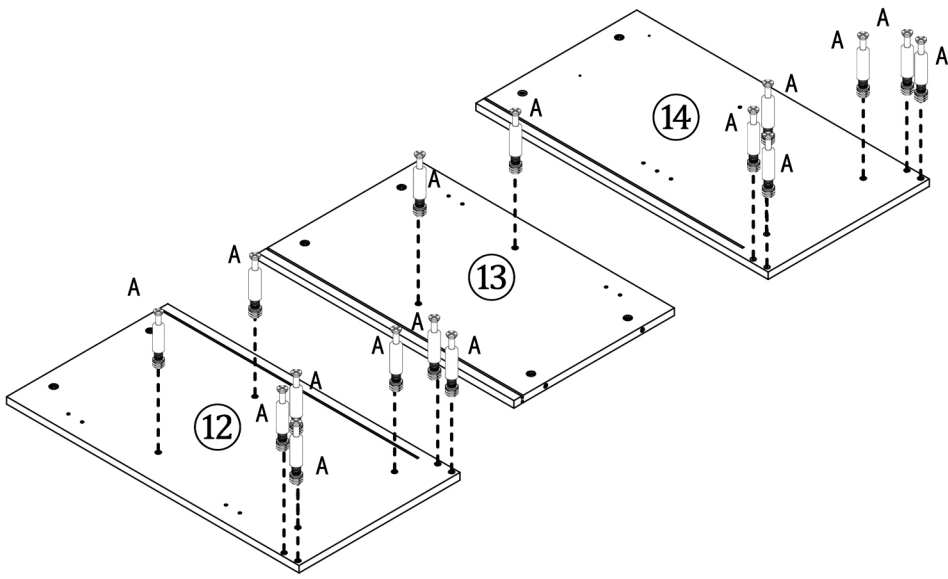


 A*16

STEP 4

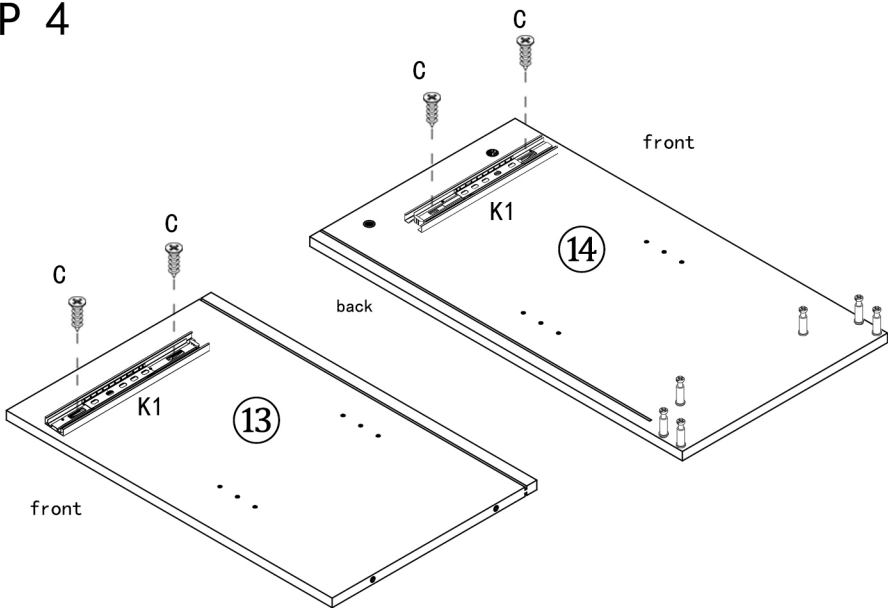


 C*4
 K1*2

STEP 5

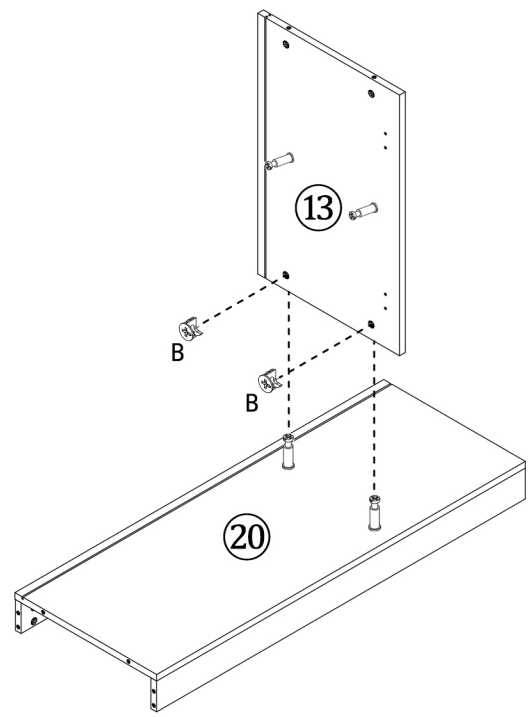


 B*2

STEP 6

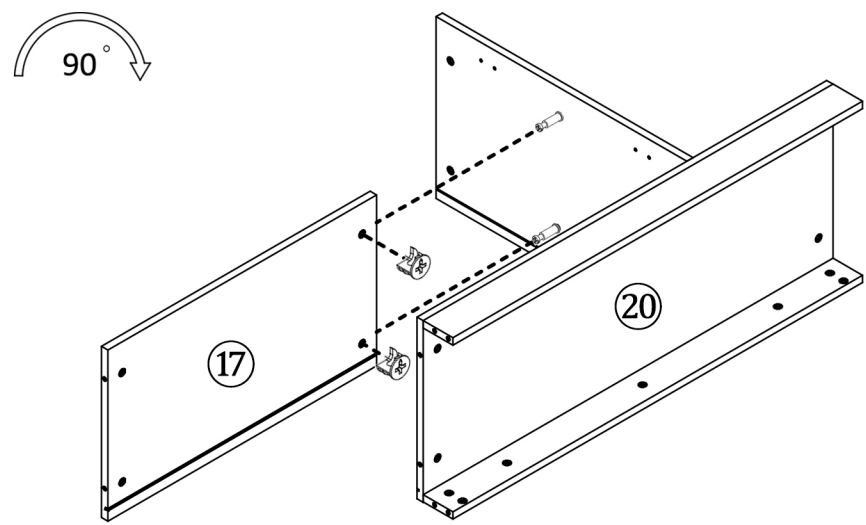


 B*2

STEP 7

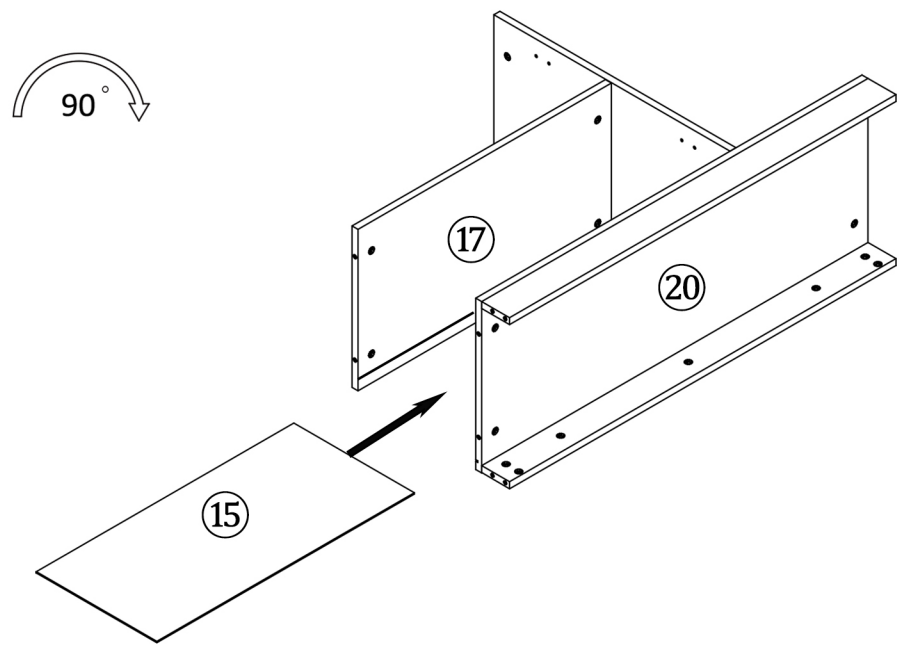


STEP 8

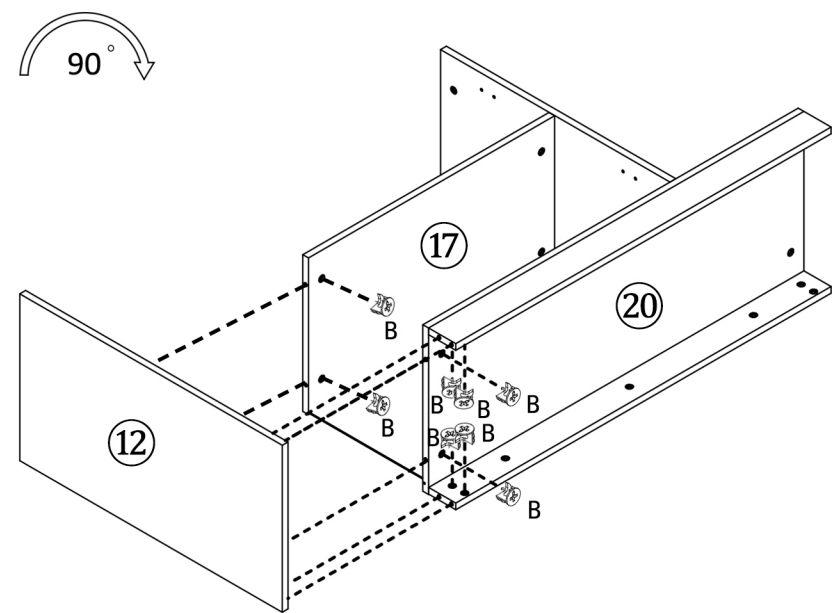


 B*8

STEP 9

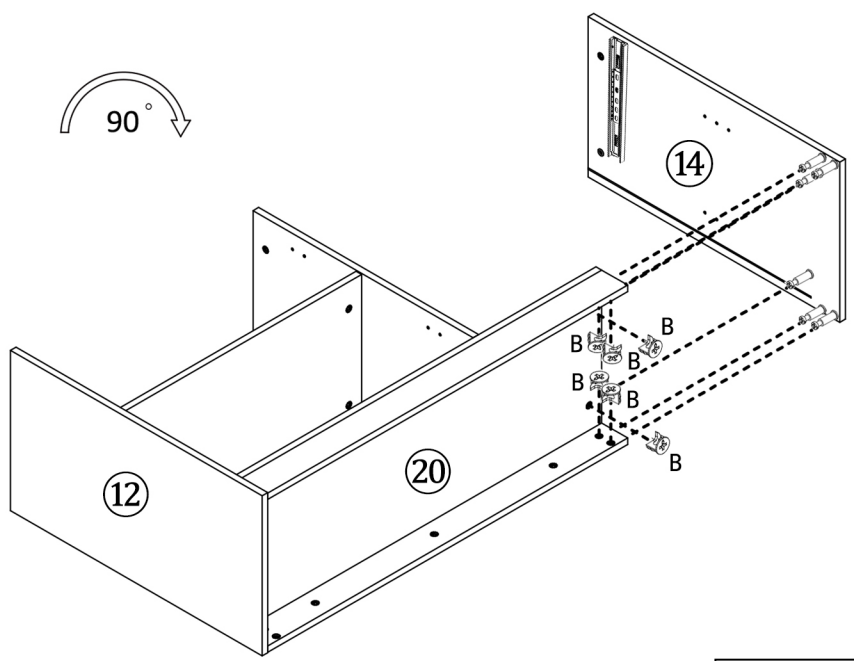


 B*6

STEP 10

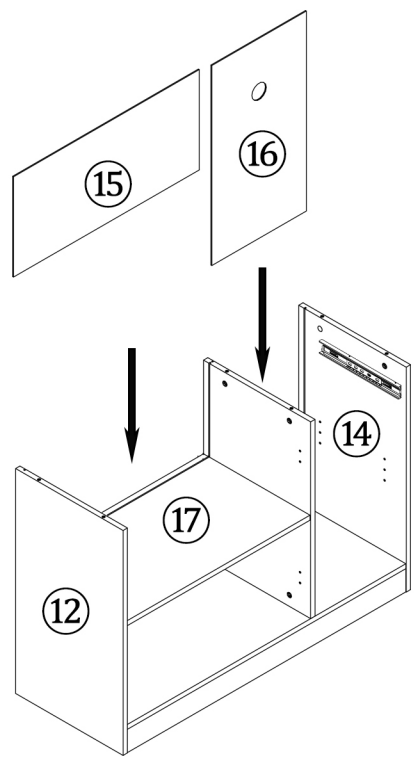


STEP 11

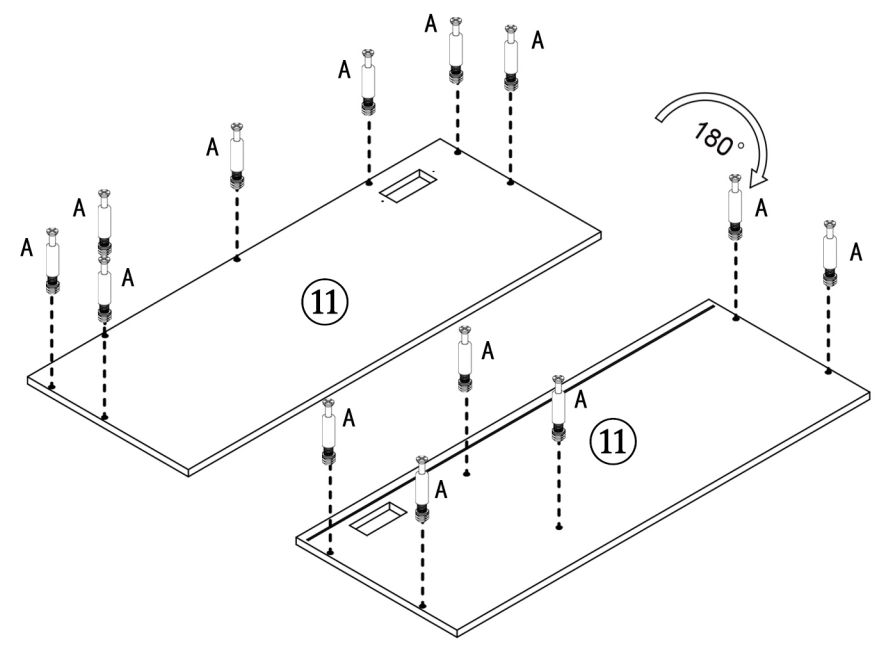


 A*13

STEP 12

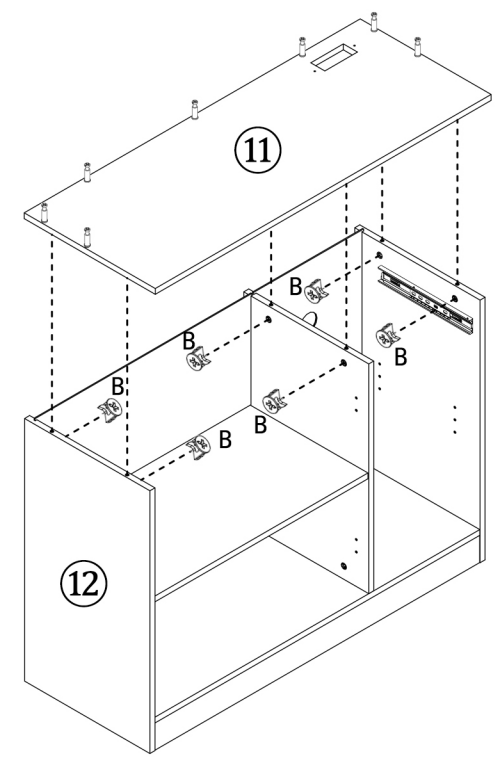


 B*6

STEP 13

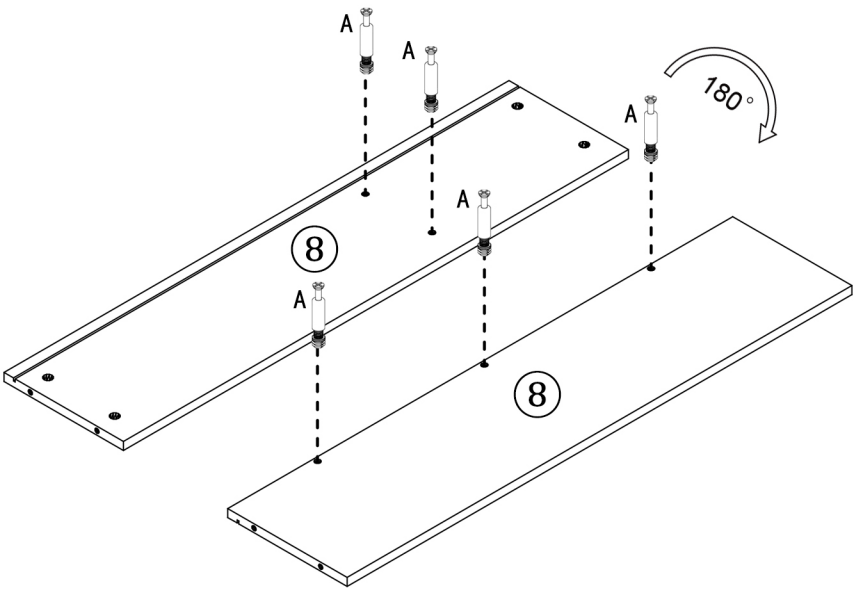


 A*5

STEP 14

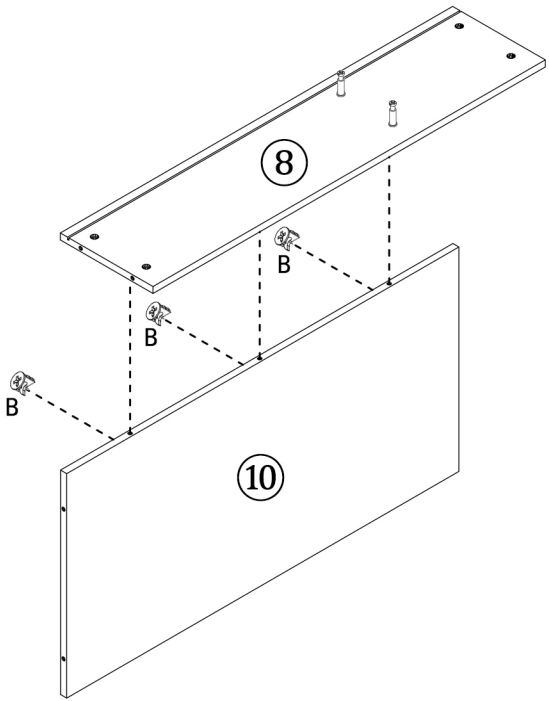


 B*3

STEP 15

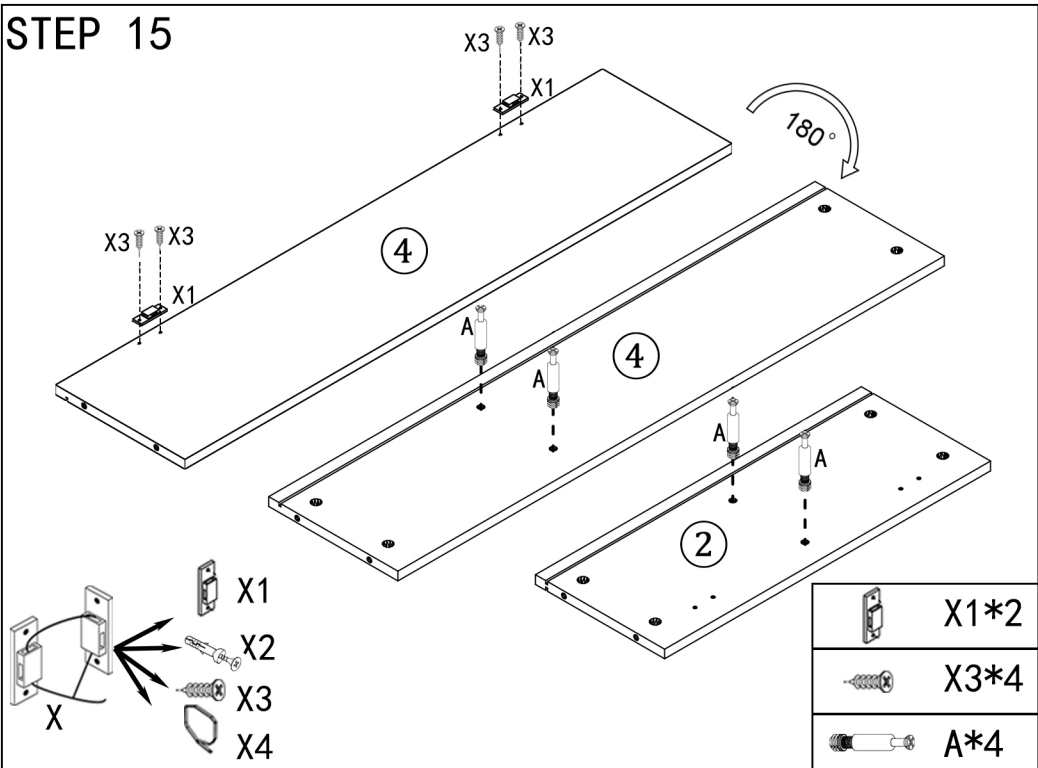


STEP 16

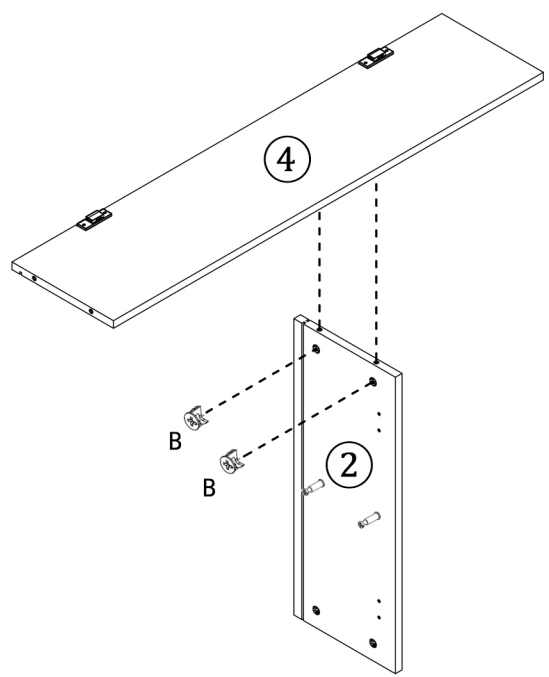


 B*2

STEP 17

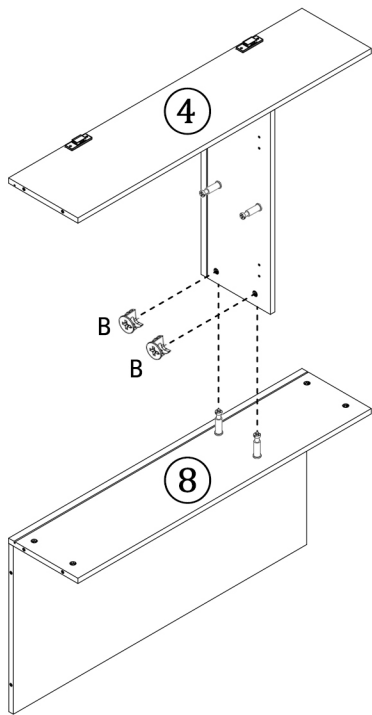


 B*2

STEP 18

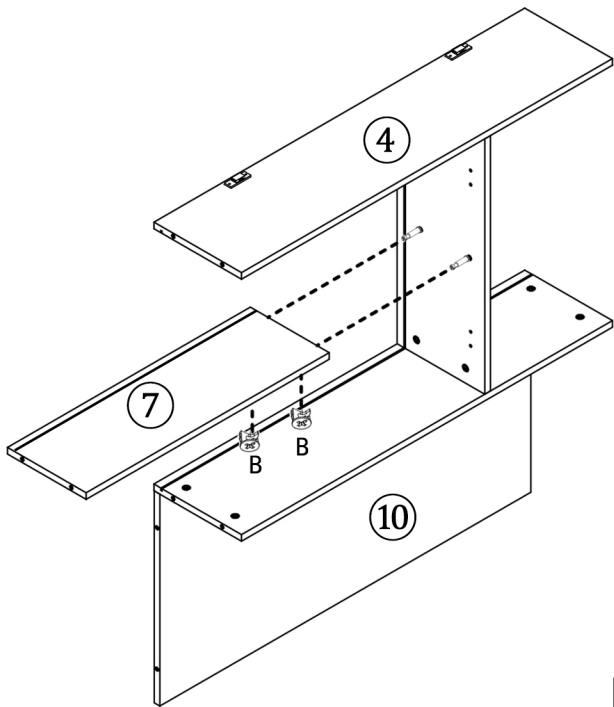


 B*2

STEP 19

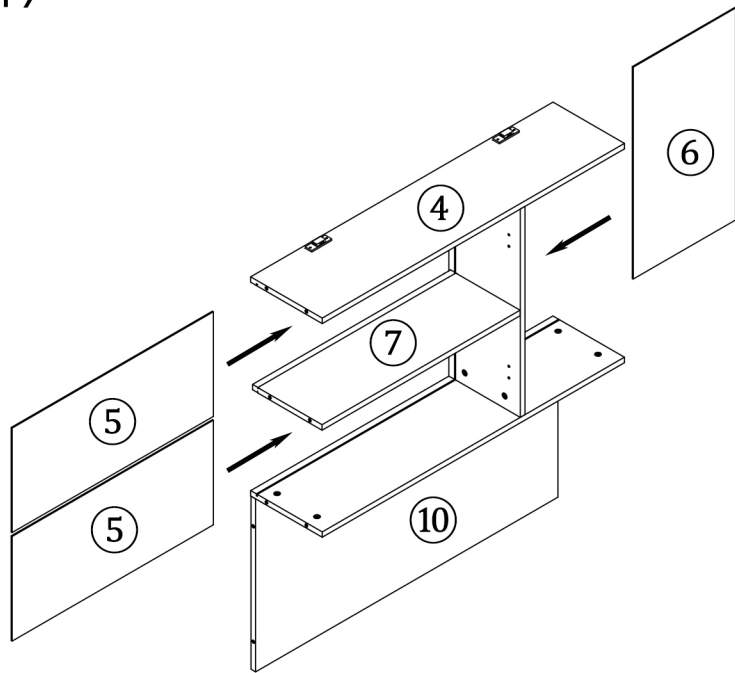


STEP 20

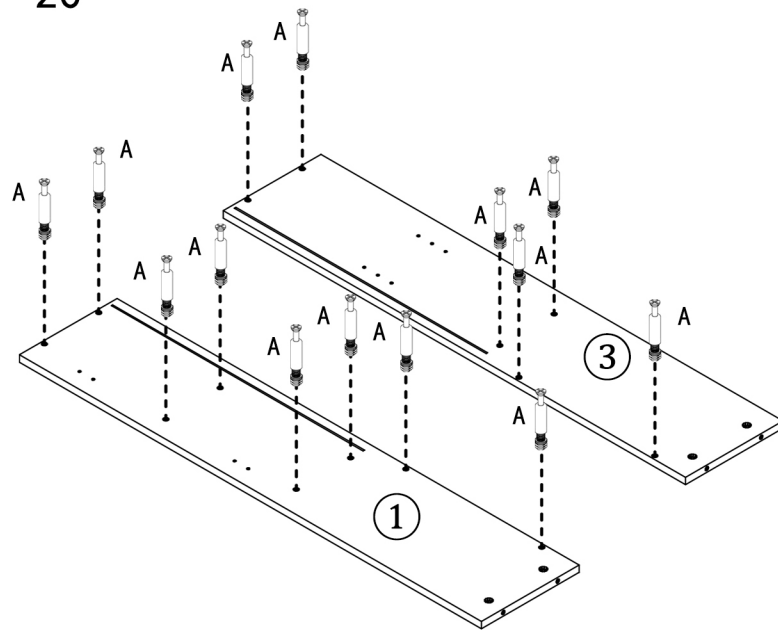


 A*14

STEP 21

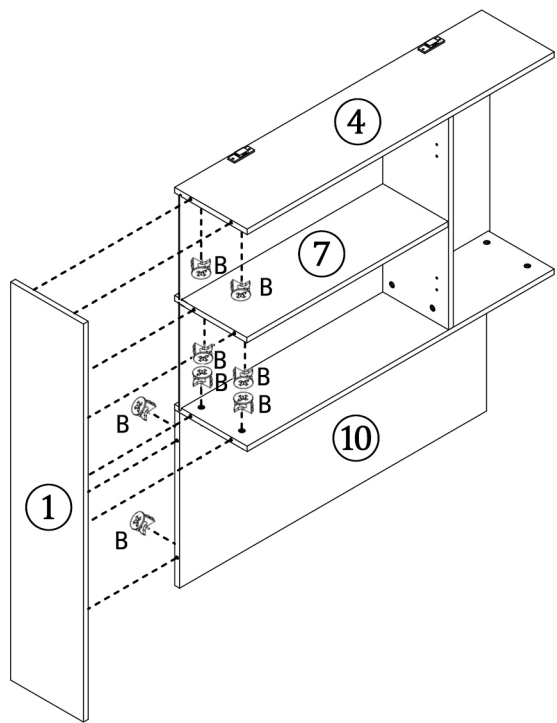


 B*8

STEP 22

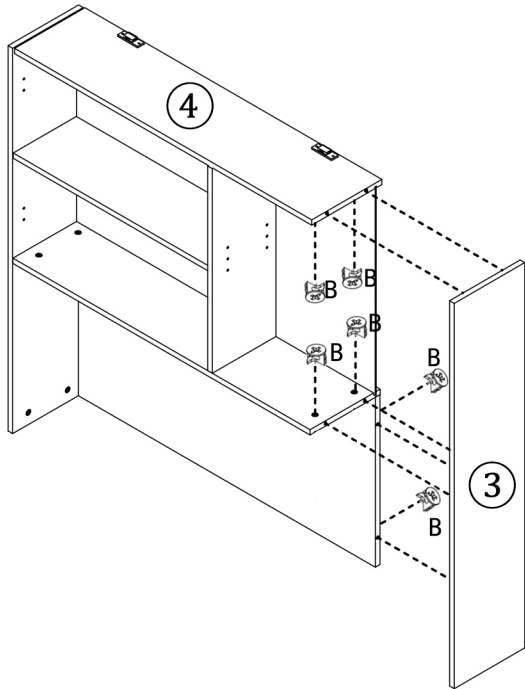


 B*6

STEP 23

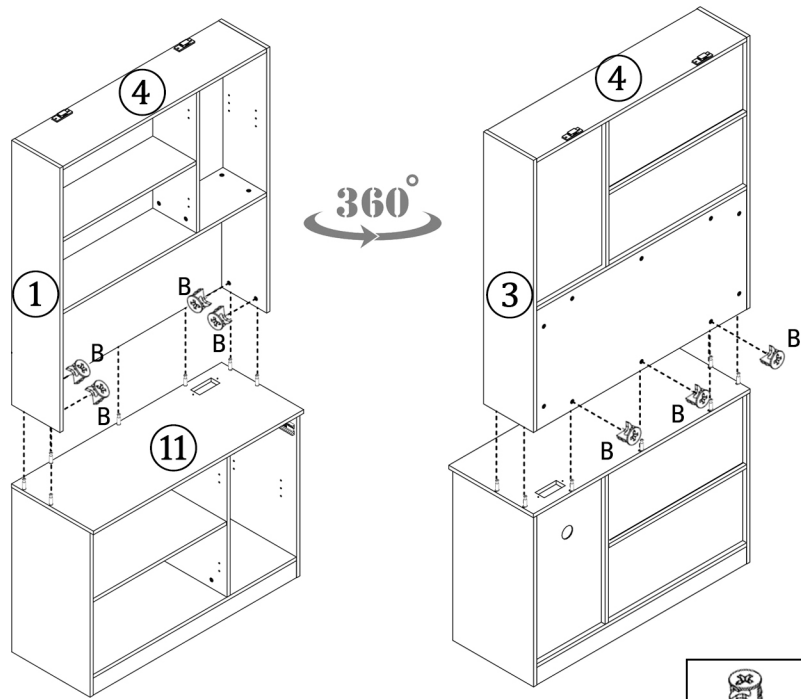


 B*7

STEP 24

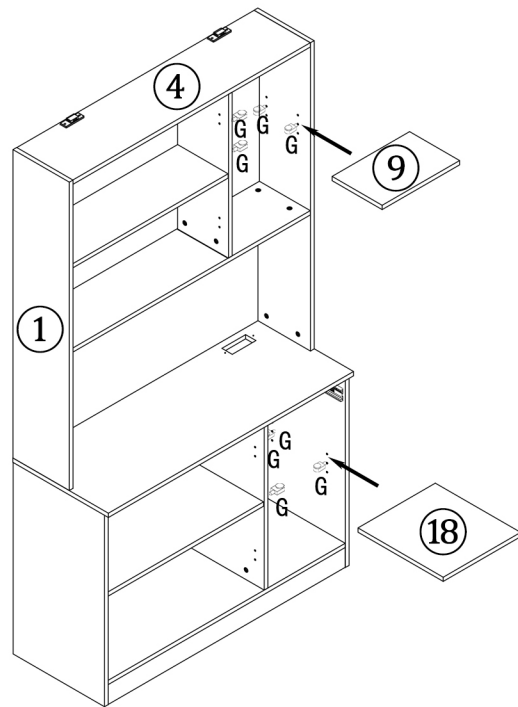


 G*8


STEP 25

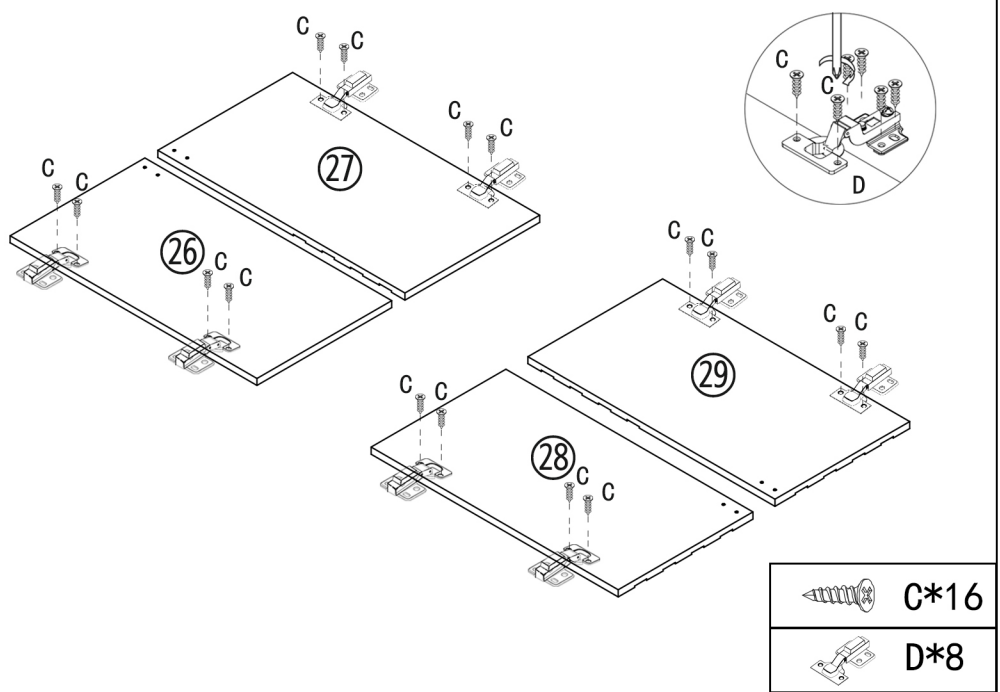


STEP 26

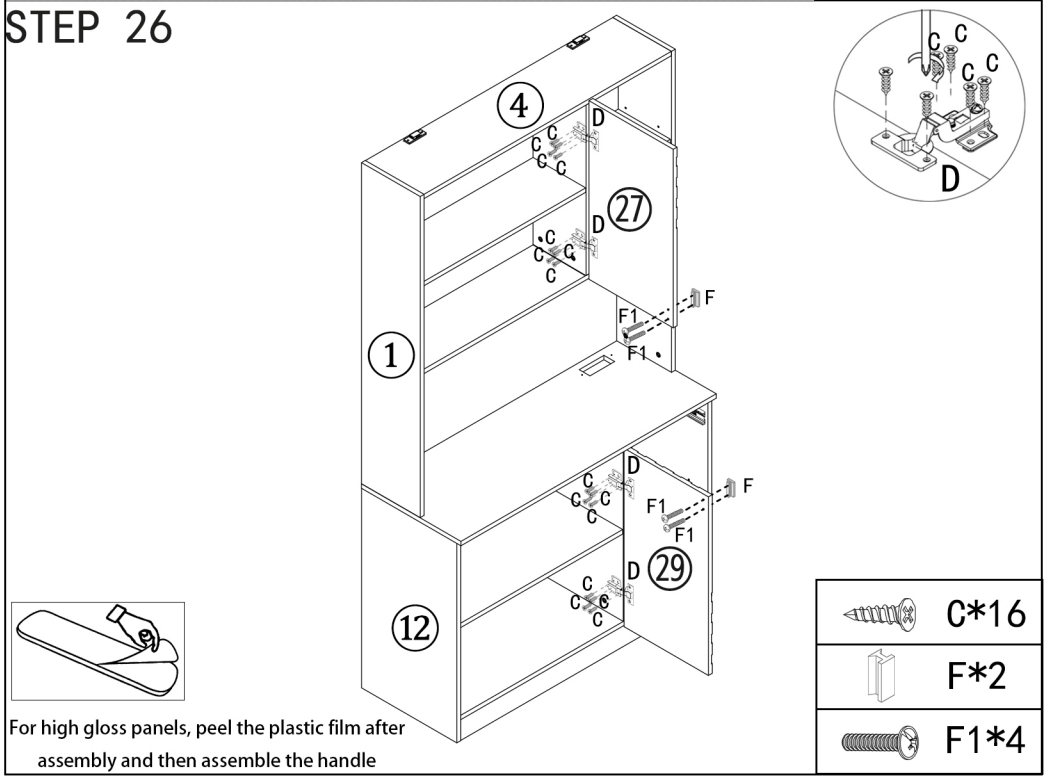


STEP 27

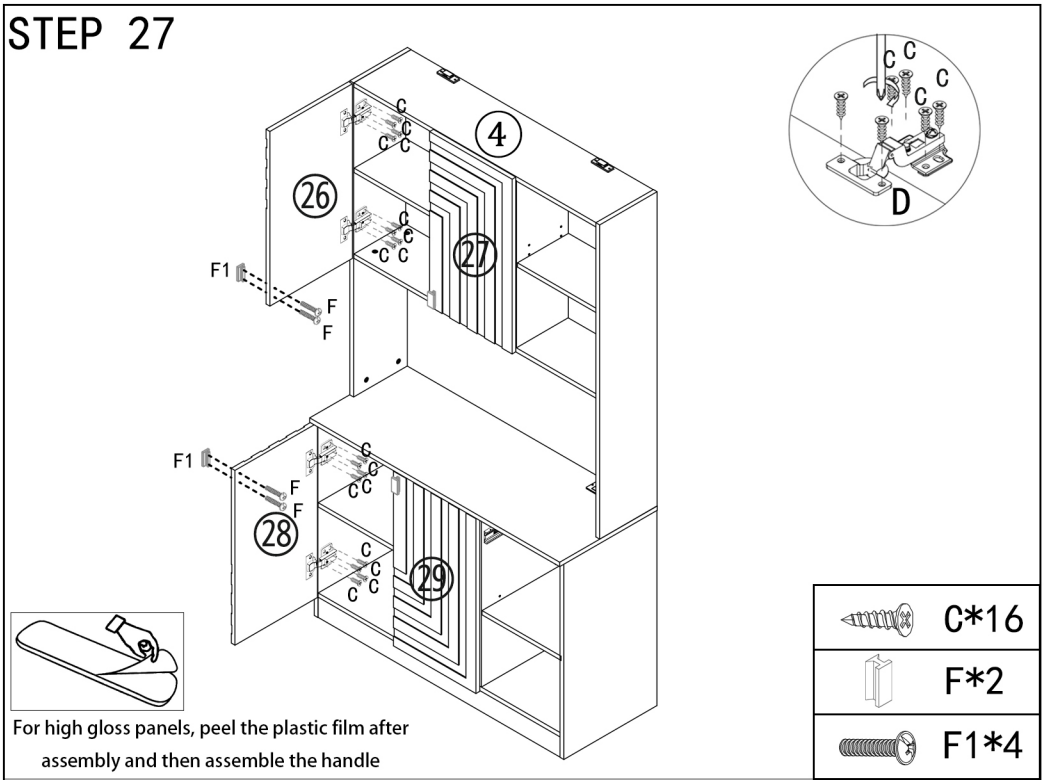

STEP 28

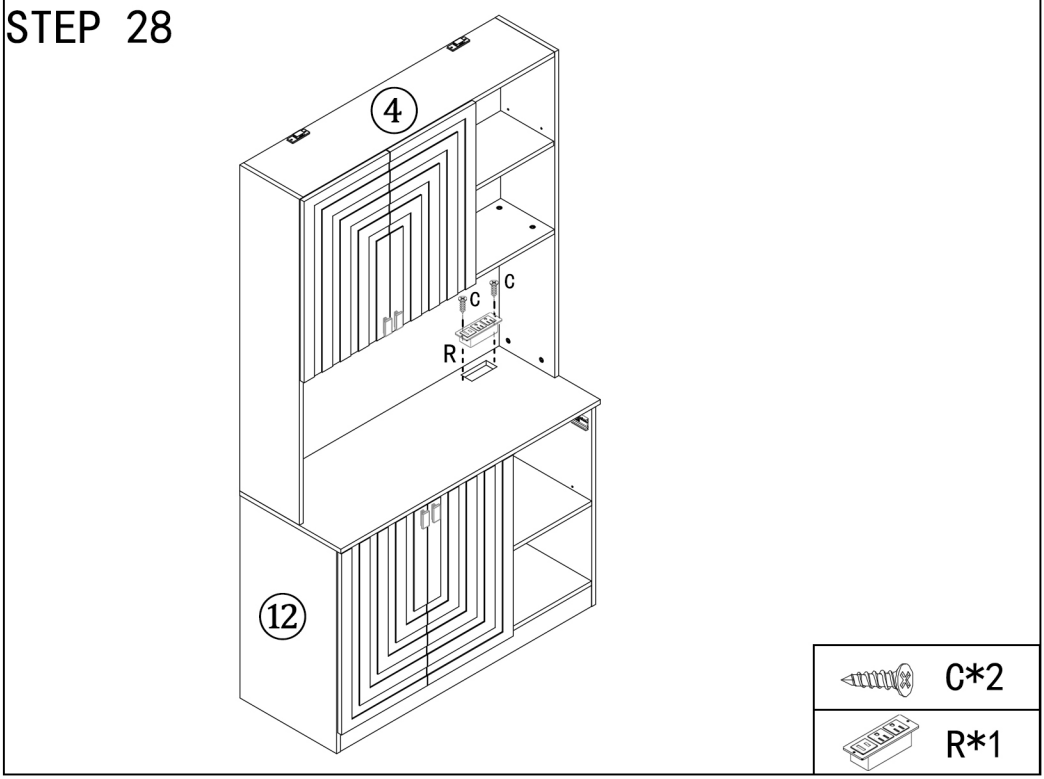


STEP 29

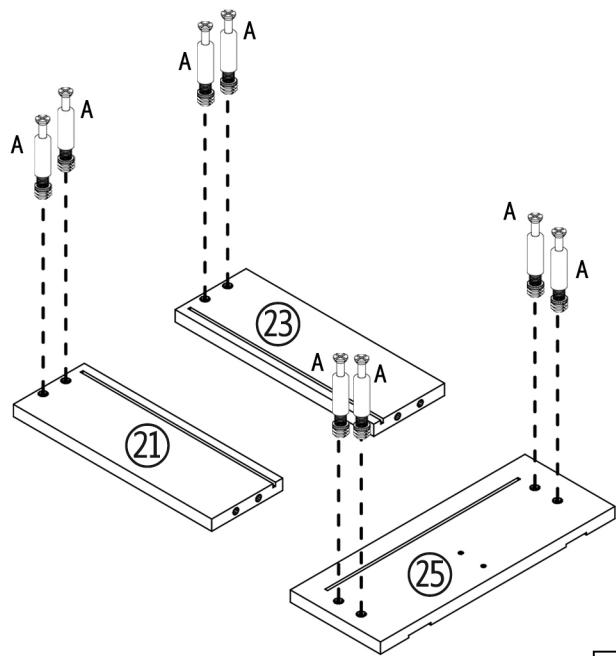


 A*8

STEP 30


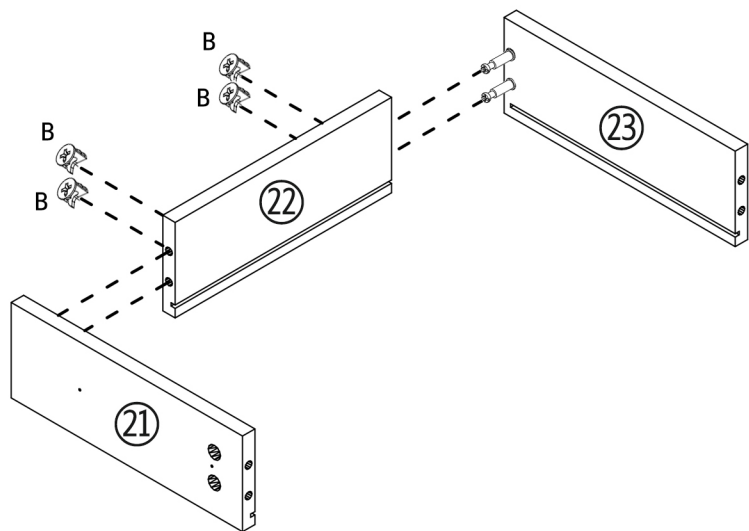


 B*4

STEP 31

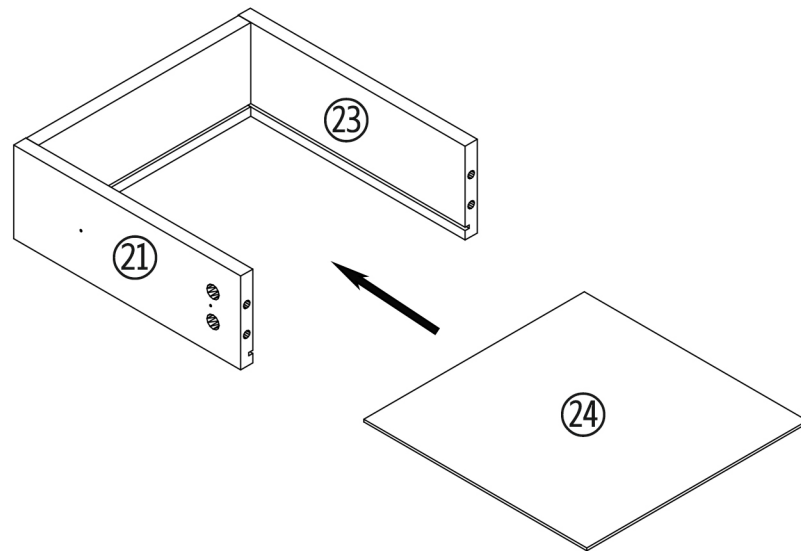


STEP 32

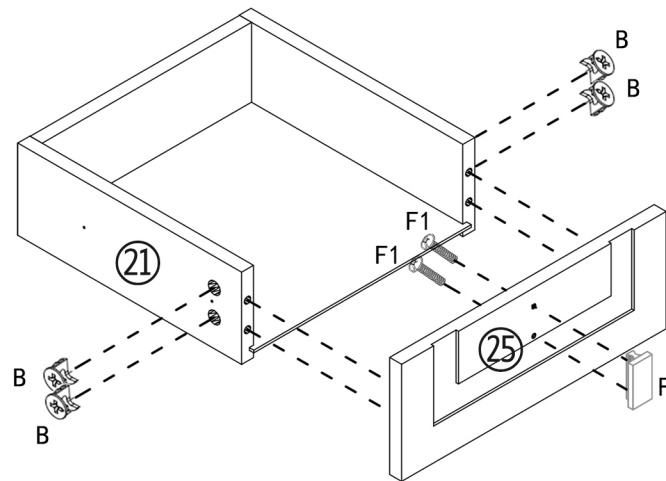

For high gloss panels, peel the plastic film after assembly and then assemble the handle


	B*4
	F*1
	F1*2

STEP 33


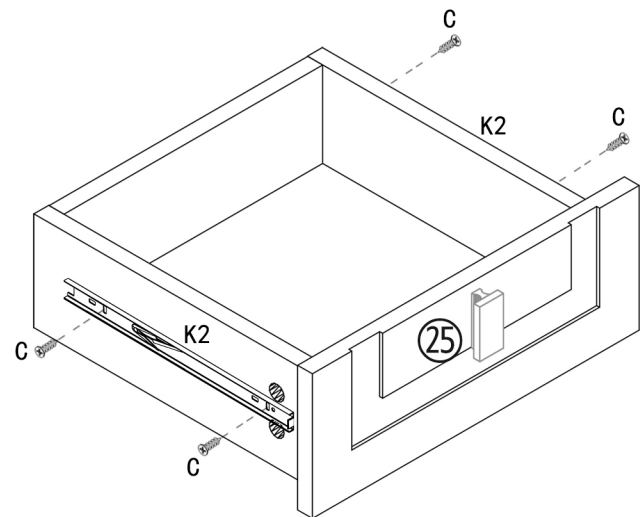


	C*4
	K2*2

STEP 34

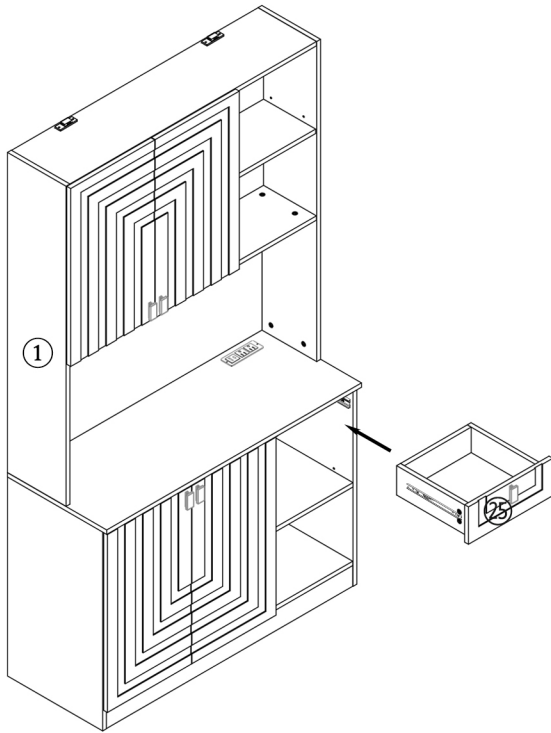

STEP 35


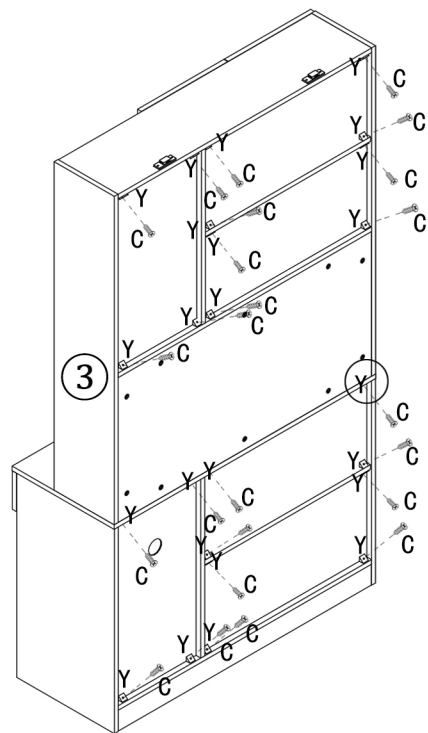
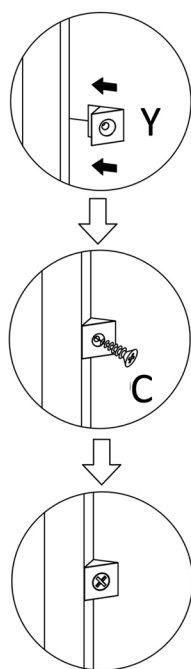


	C*24
	Y*24

STEP 36

1. One side of the anti-toppling safety belt is installed on the cabinet body
2. One side of the anti-toppling safety belt is mounted on the wall
3. The seat belt is fastened through both safety buckles and then tightened


Tips Please pay attention to safety

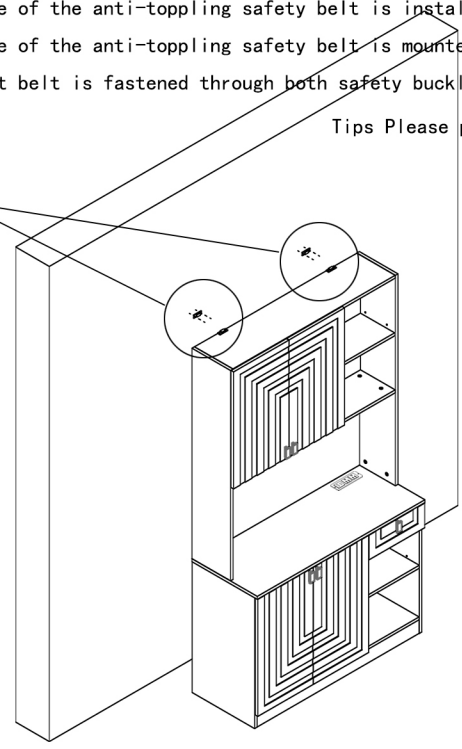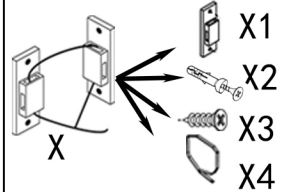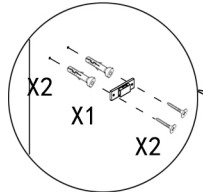

	X1*2
	X2*4

STEP 37

- 1. One side of the anti-toppling safety belt is installed on the cabinet body
- 2. One side of the anti-toppling safety belt is mounted on the wall
- 3. The seat belt is fastened through both safety buckles and then tightened


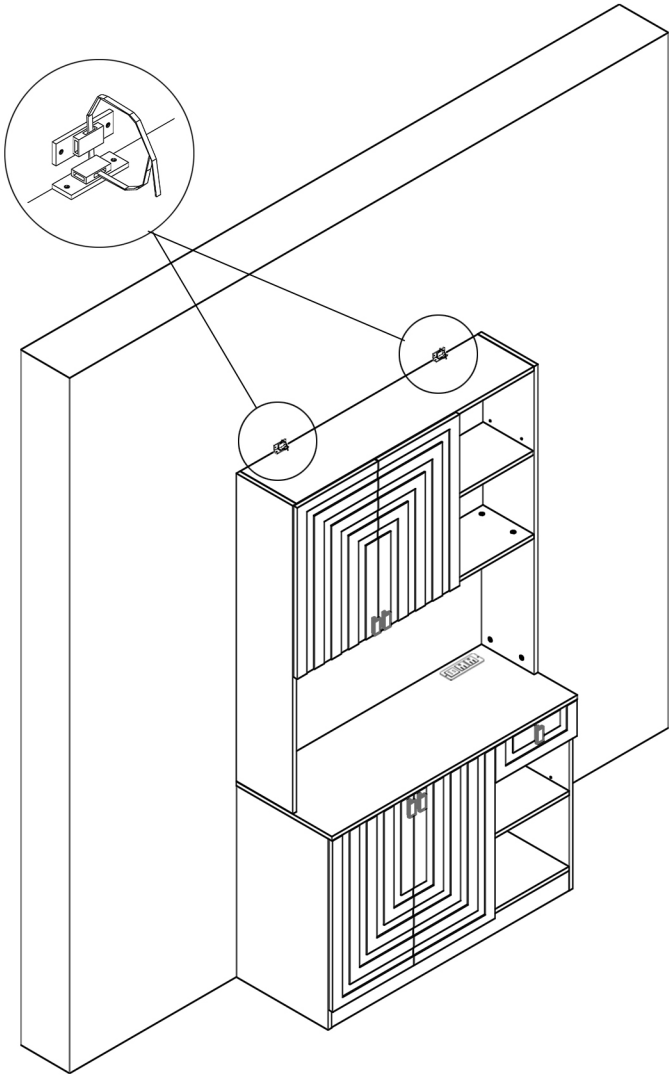


Tips Please pay attention to safety



X4*2

STEP 38

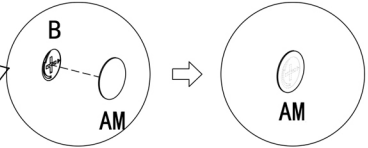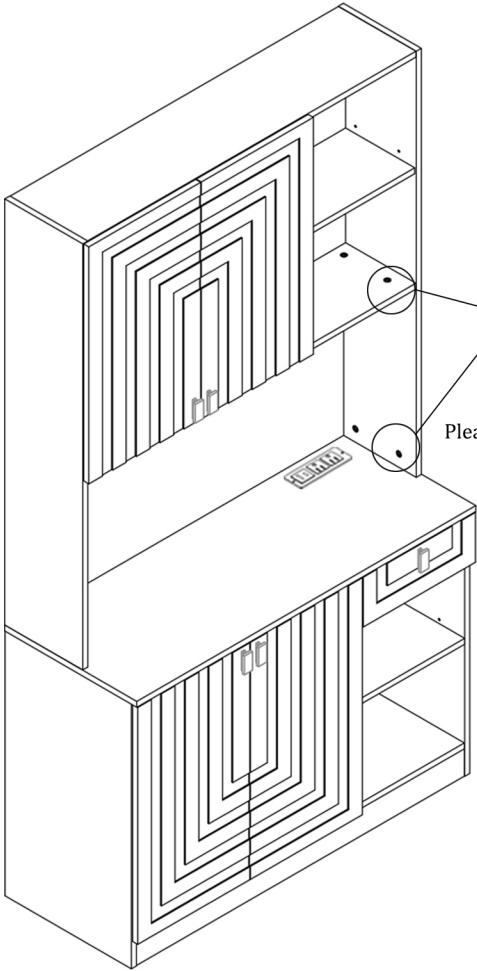

Please stick the Decorative paper on the ten holes