



ASSEMBLY INSTRUCTIONS

TWIN FLOOR BED, FENCE, WITHOUT DOOR





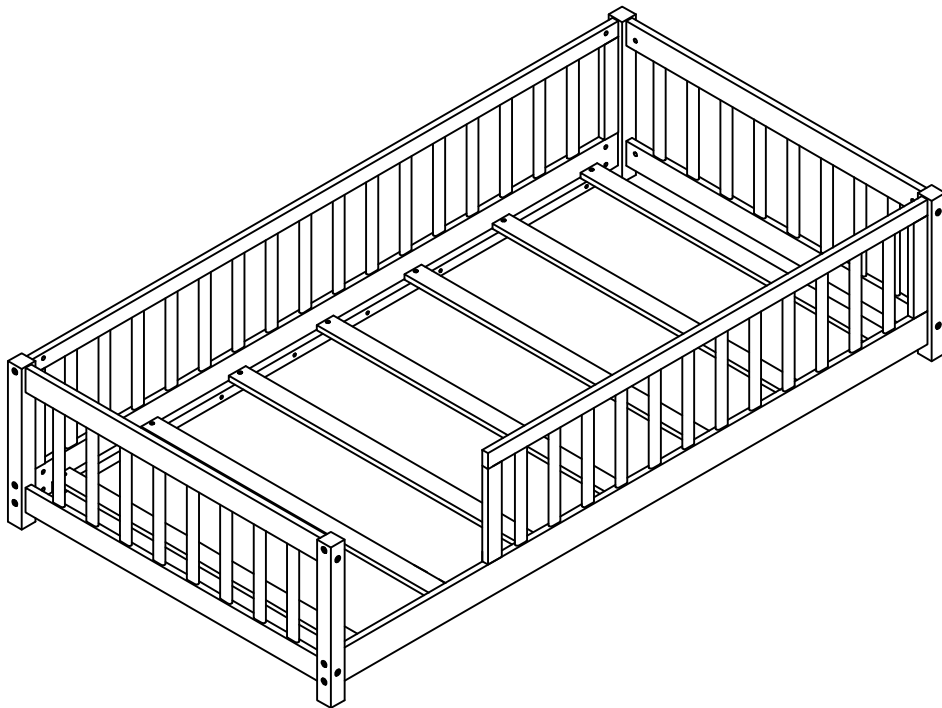



ILA33778






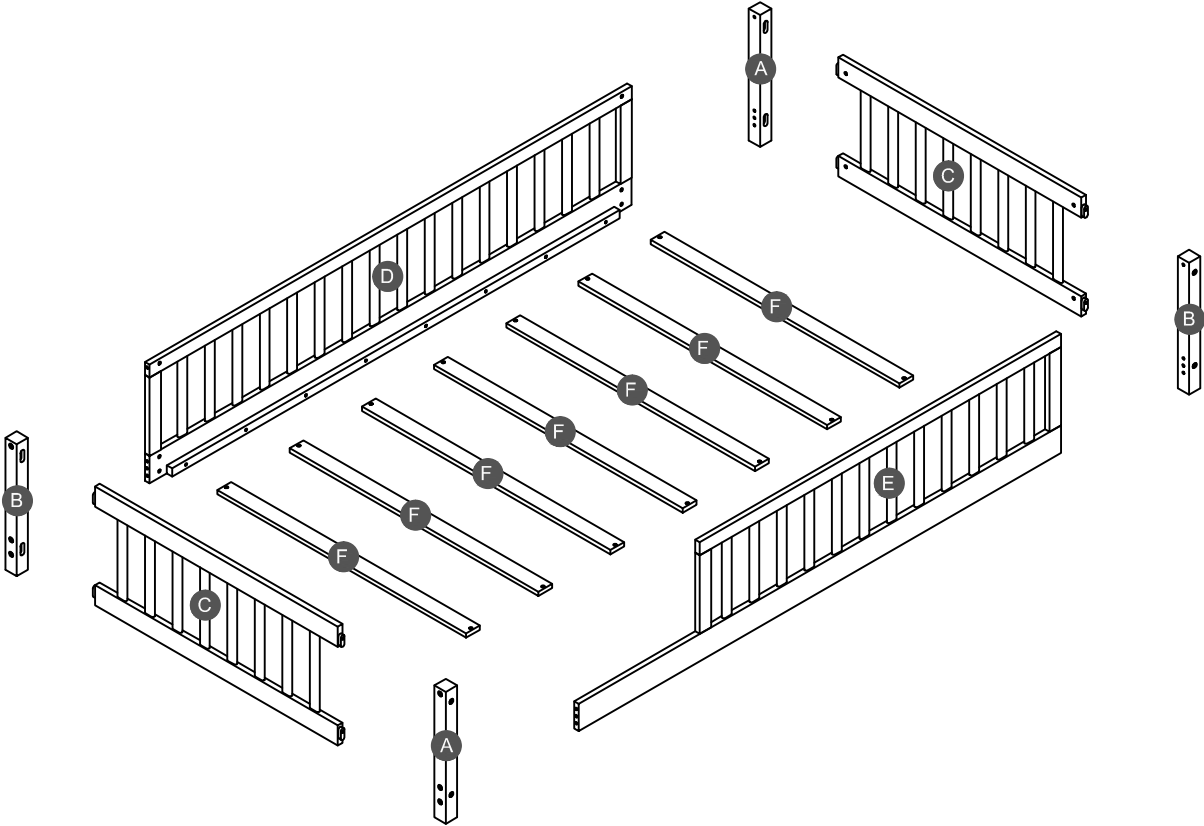
Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Right Front/Left Back) - 2pcs	C  Frame HB & FB - 2pcs
D  Side rail (Back) - 1pc	E  Side rail (Front) - 1pc	F  Slat - 7pcs

Hardware List


1  Ø8*30mm Wood dowel (4pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (11pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (8pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)	5  Ø4*30mm Wood screws (14pcs)	6  (1/4")4.5*58mm Allen key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

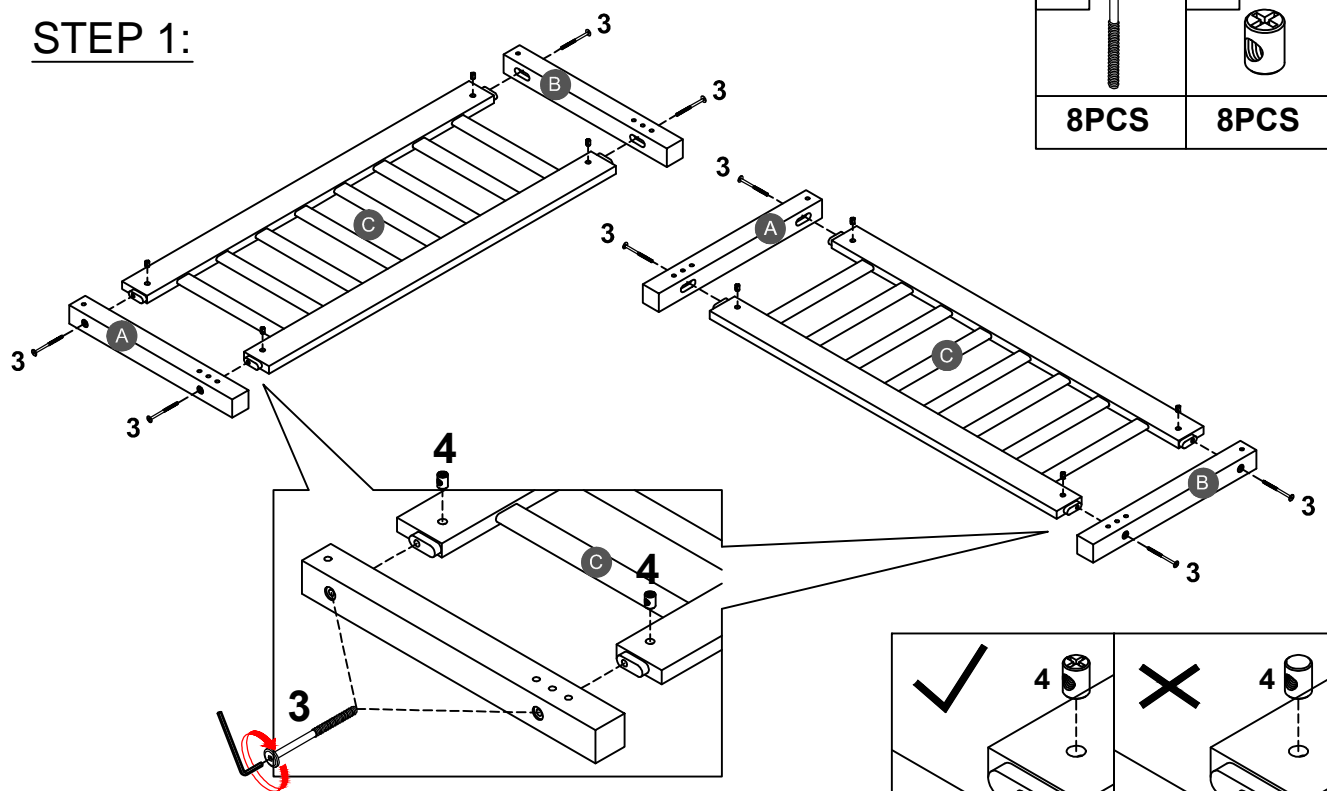

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:



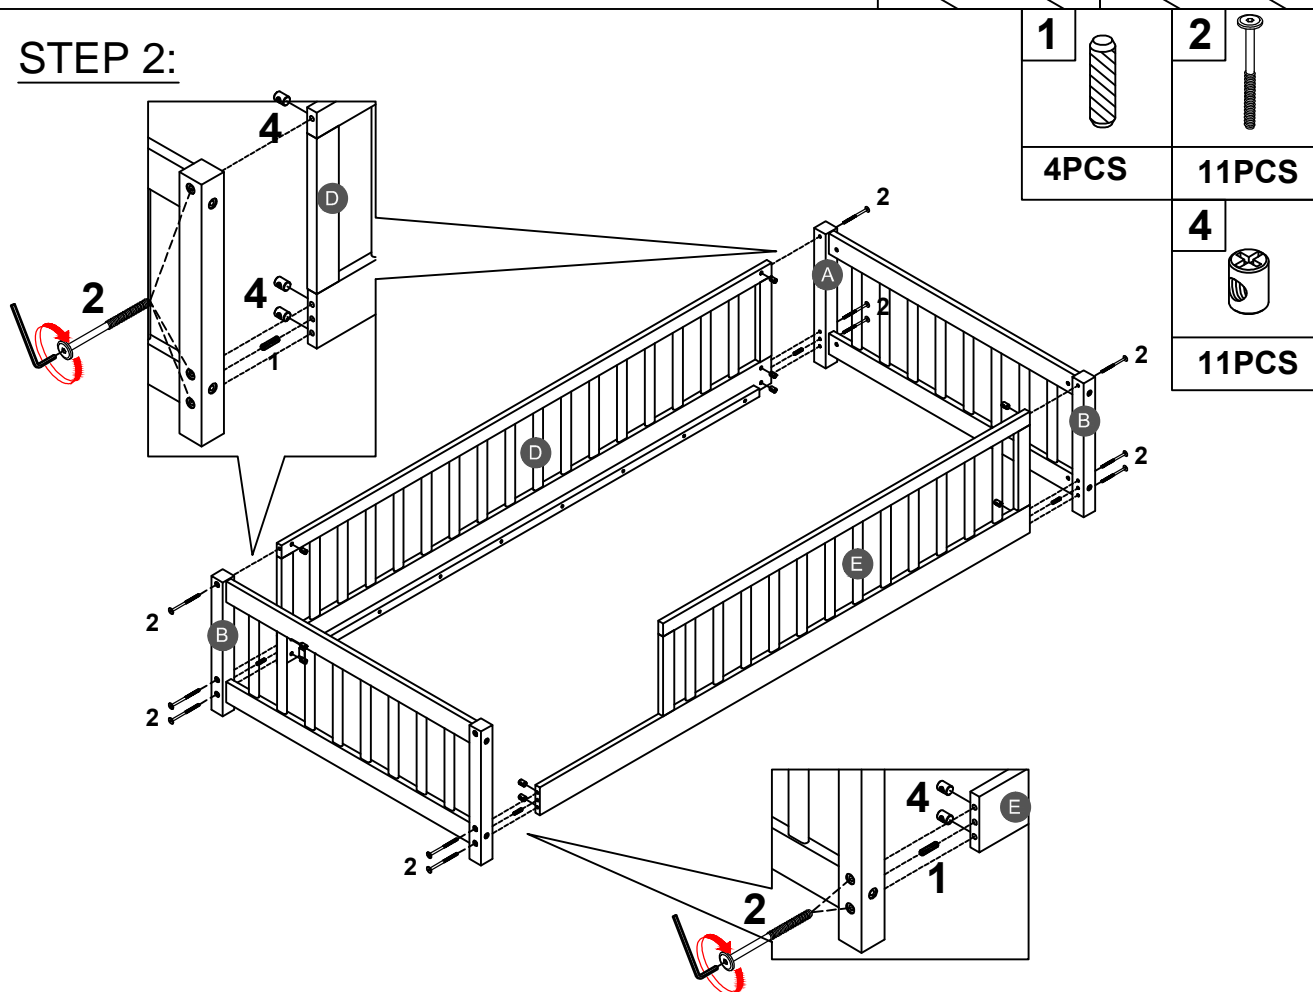


STEP 3:

5



14PCS

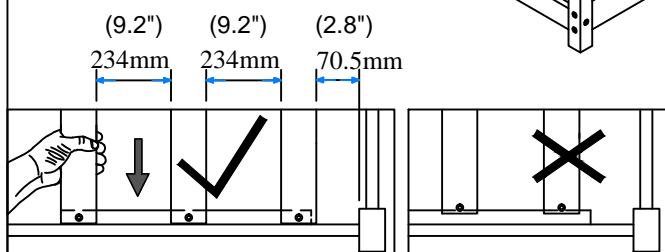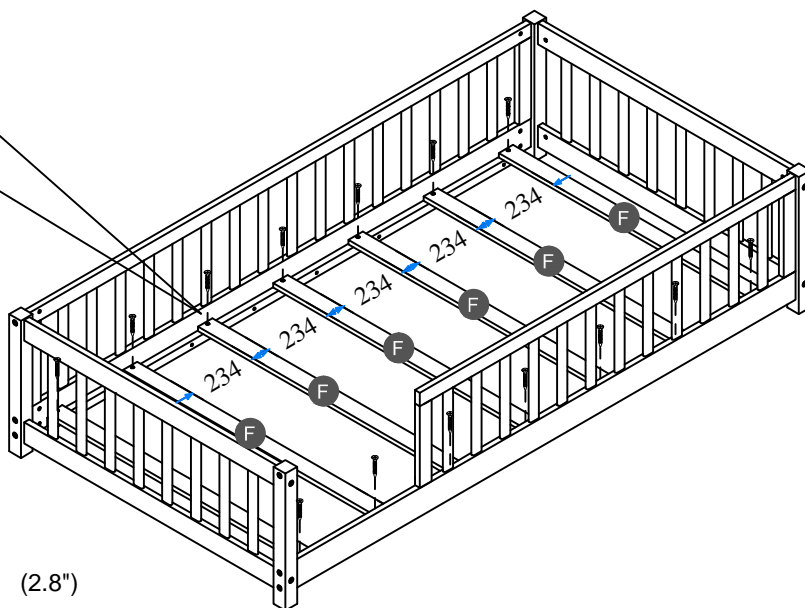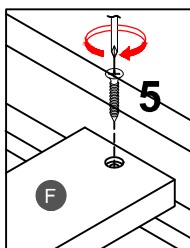

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

