


ASSEMBLY INSRUCTION

SKU: AP009S/010S/011S/016S/017S/018S

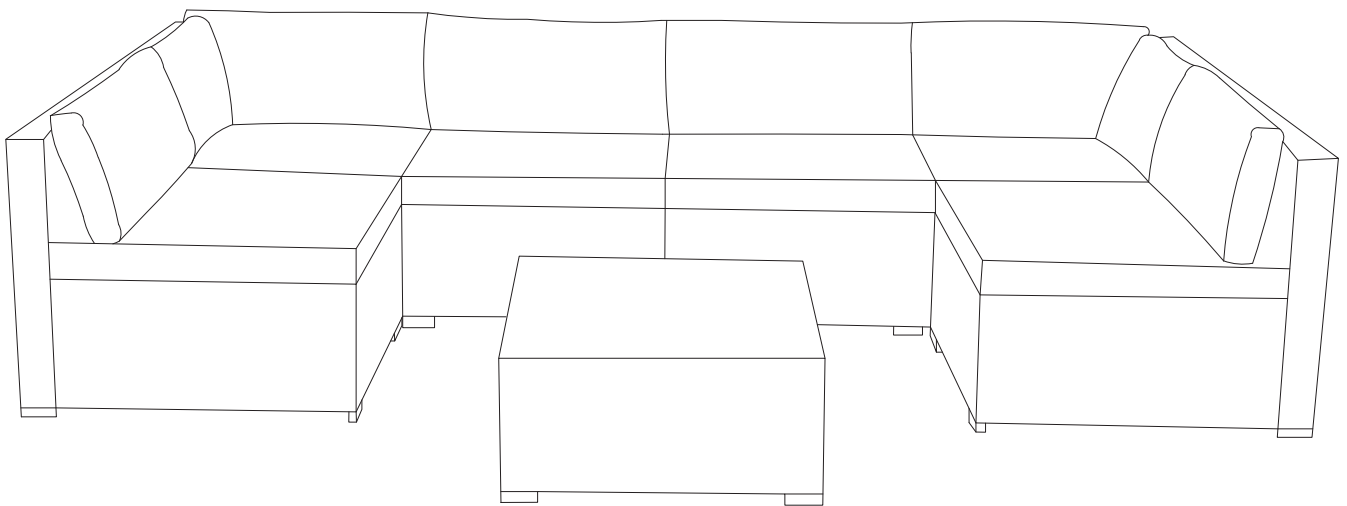

Thank you for choosing US!

Our goal is to provide high quality outdoor furniture with outstanding customer service-all at an affordable price. Please let us know how we are doing!

Problems?

(Missing pieces, wrong pieces...)

We will fix it immediately. Send us an email at **aftersaledirect@gmail.com**.


Happy?

Please leave us a review! You can make others happy too!

ASSEMBLY INSTRUCTION


PARTS

A x12

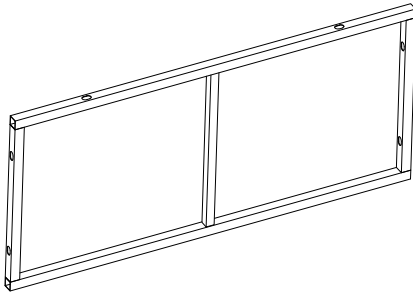

Short side panel for all set

B x 6

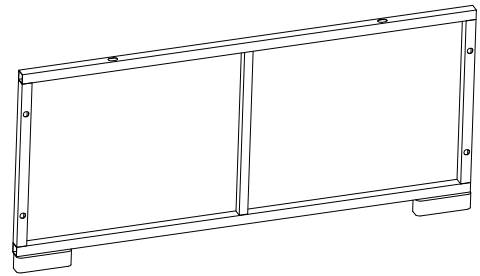

Long side panel for table & Armless sofa

C x 1


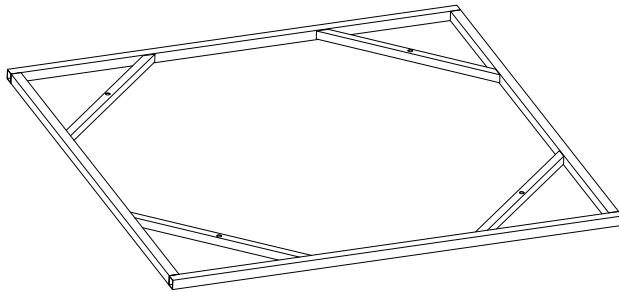



Table - top panel

D x 4

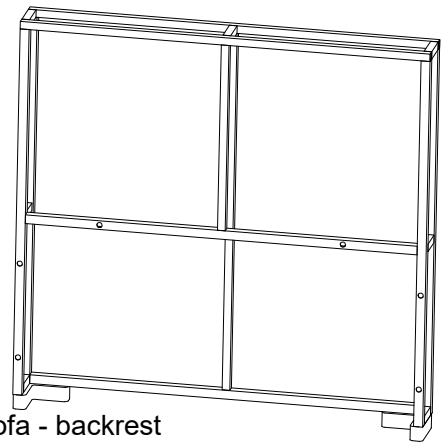


Armless sofa - backrest

E x 4

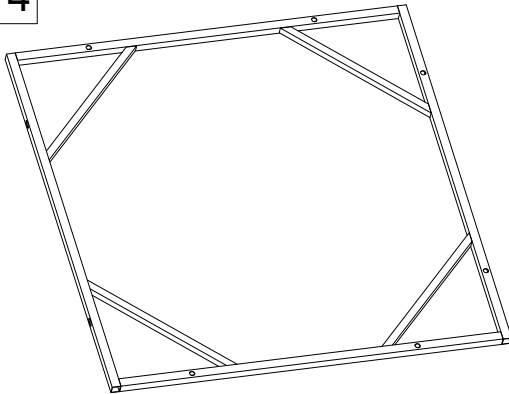


Armless sofa - seat base

F x 2

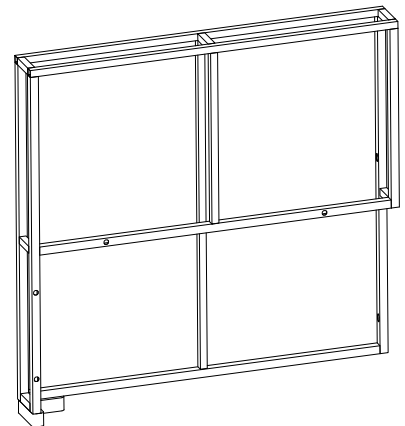


Corner sofa - backrest 1

G x 2

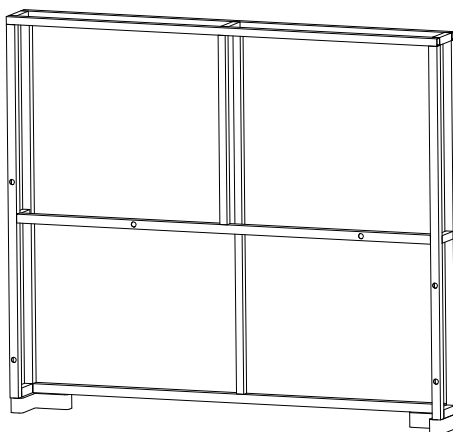

Corner sofa - backrest 2

H x 2

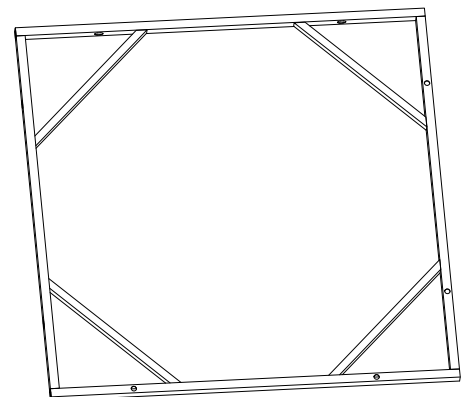


Corner sofa - seat base

ASSEMBLY INSTRUCTION

PARTS

I x 2

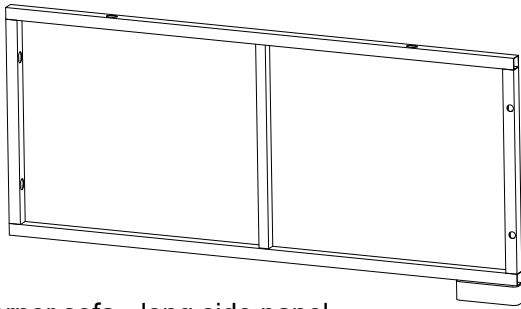

Corner sofa - long side panel

J x 1


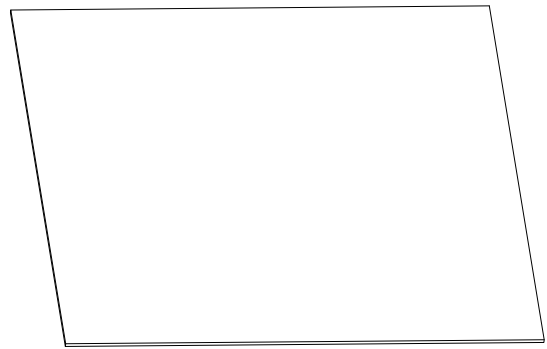



Table glass

K x 6

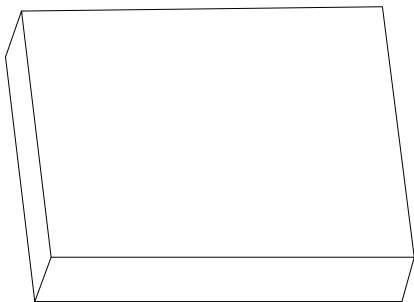


Seat cushion

L x 6


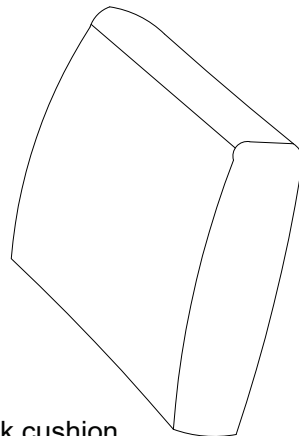


Long back cushion

M x 2

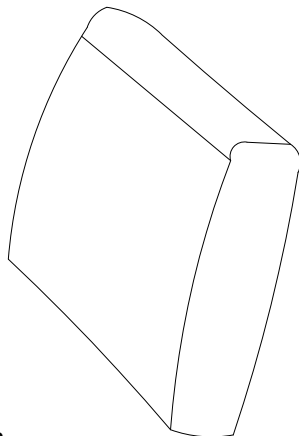

Short back cushion

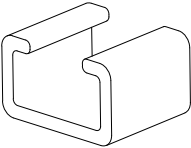1 x112 M6x1	WASHER	2 x112 M6x30	SCREW
			
3 x28 M6x15	ADJUSTABLE SCREW	4 x2 4x60	ALLEN KEY
			
5 x10	CLIP		
			



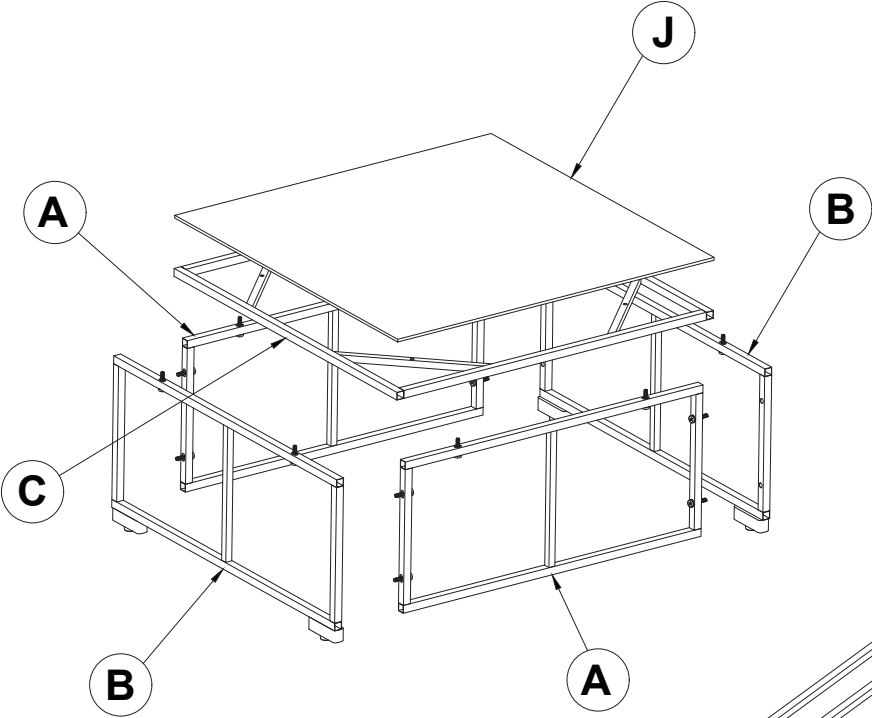


TABLE X 1

ARMLESS SOFA X 4

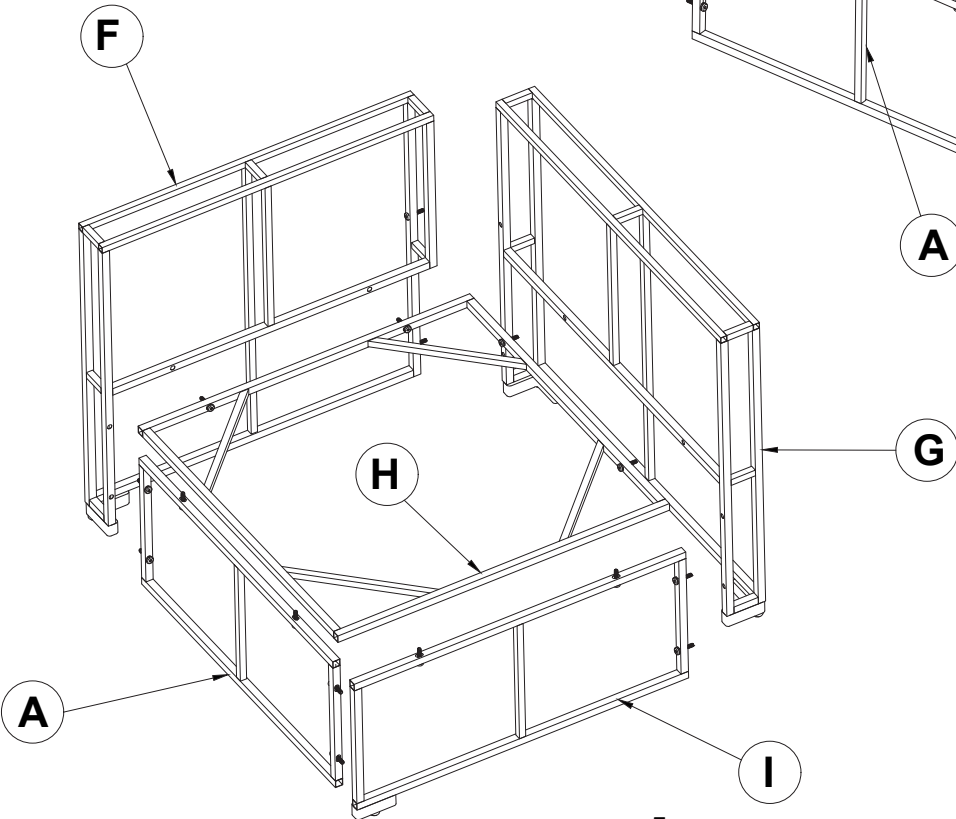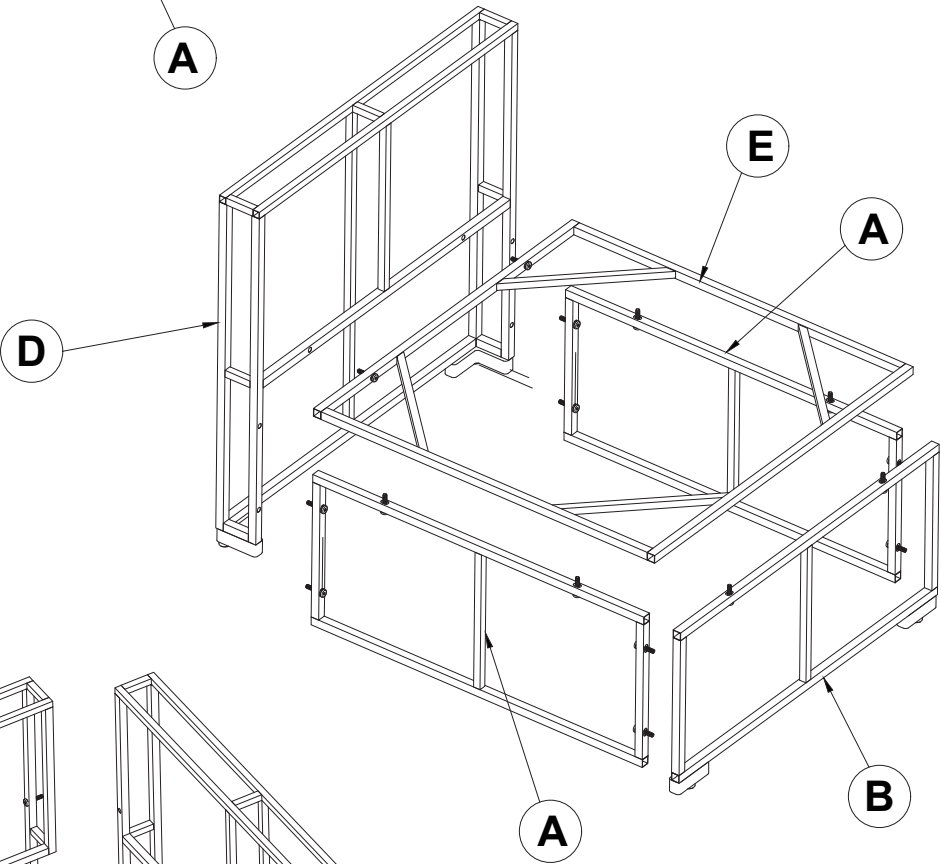

CORNER SOFA X 2


①x04


 M6

②x04


 M6x30

Do not fully tighten all bolts until assembly is complete.

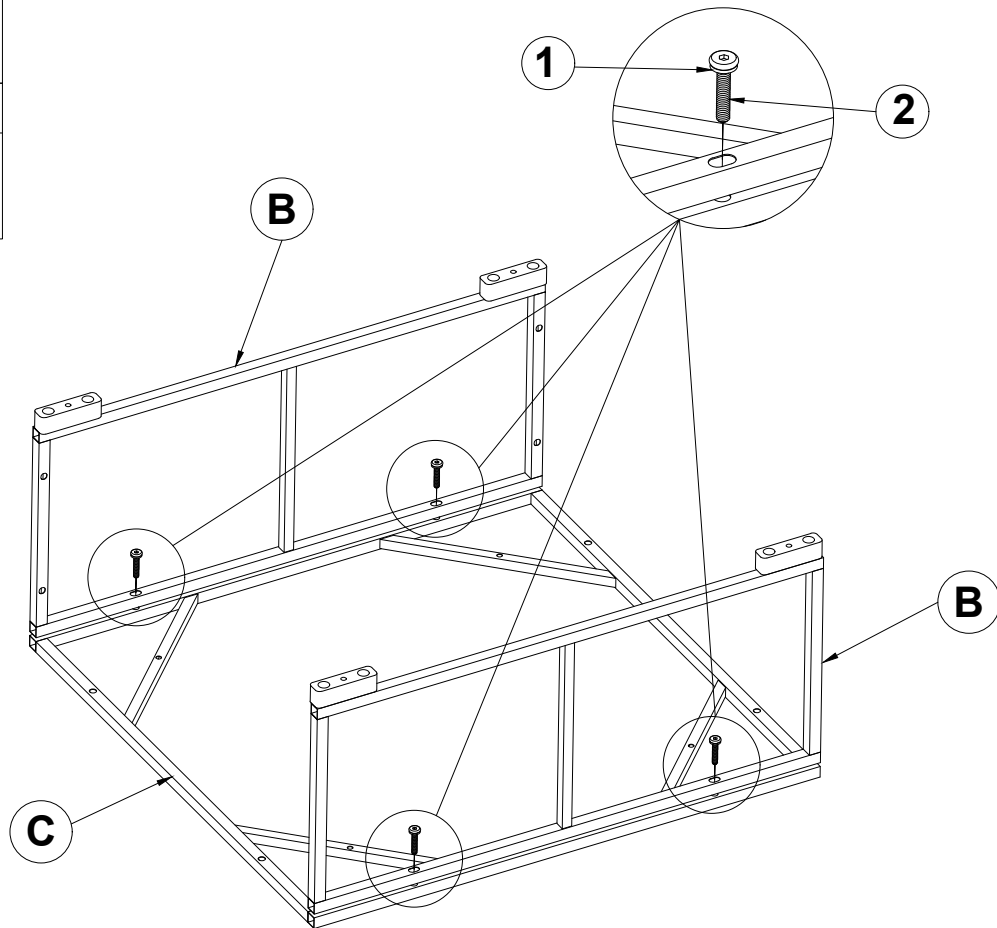

TABLE


①x12


 M6

②x12


 M6x30

Do not fully tighten all bolts until assembly is complete.

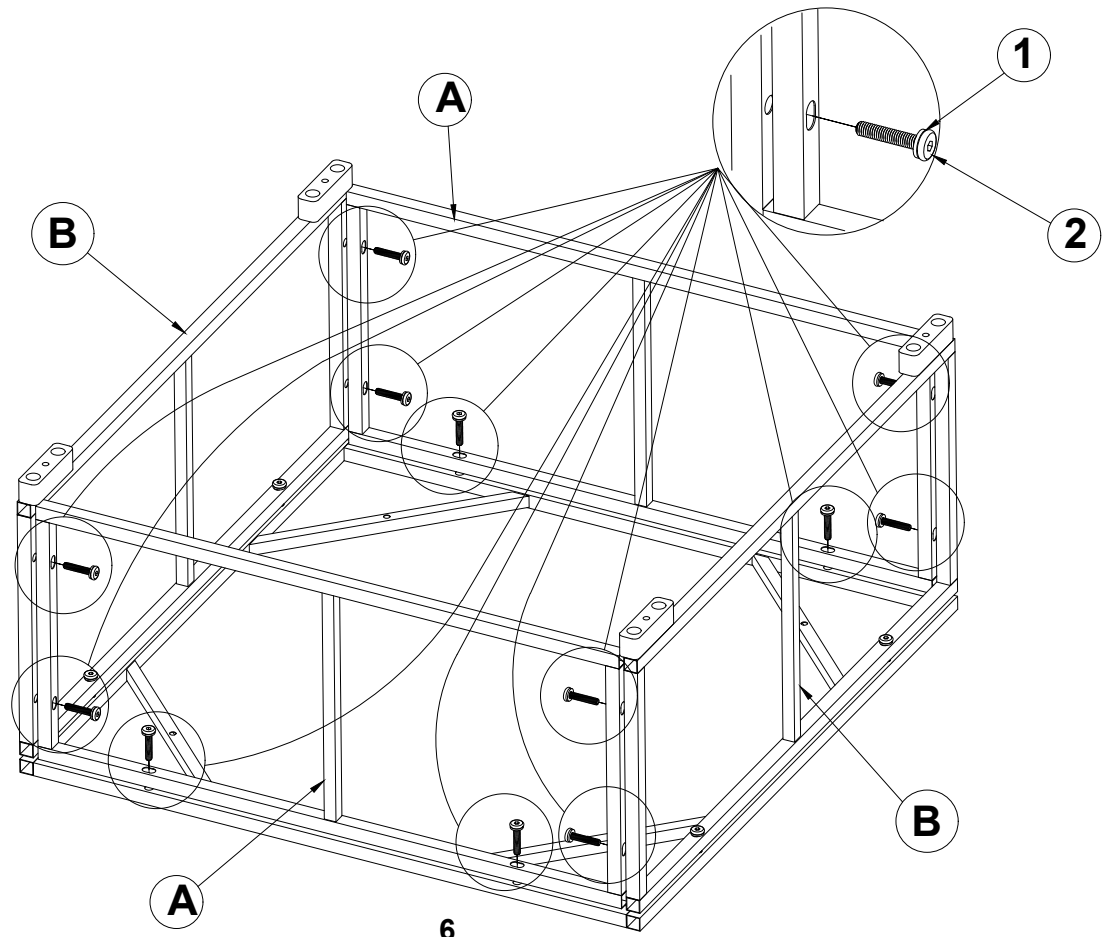


TABLE

3 x 04




M6x15

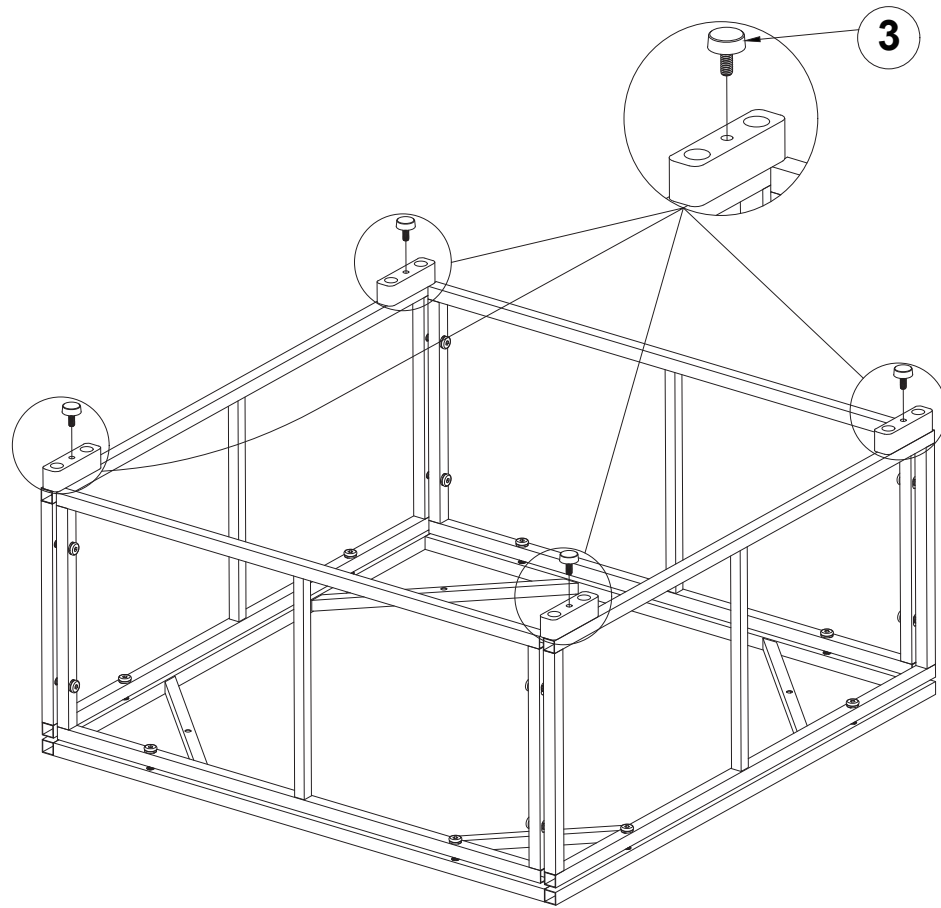

TABLE

Fully tighten all bolts after assembly is complete.

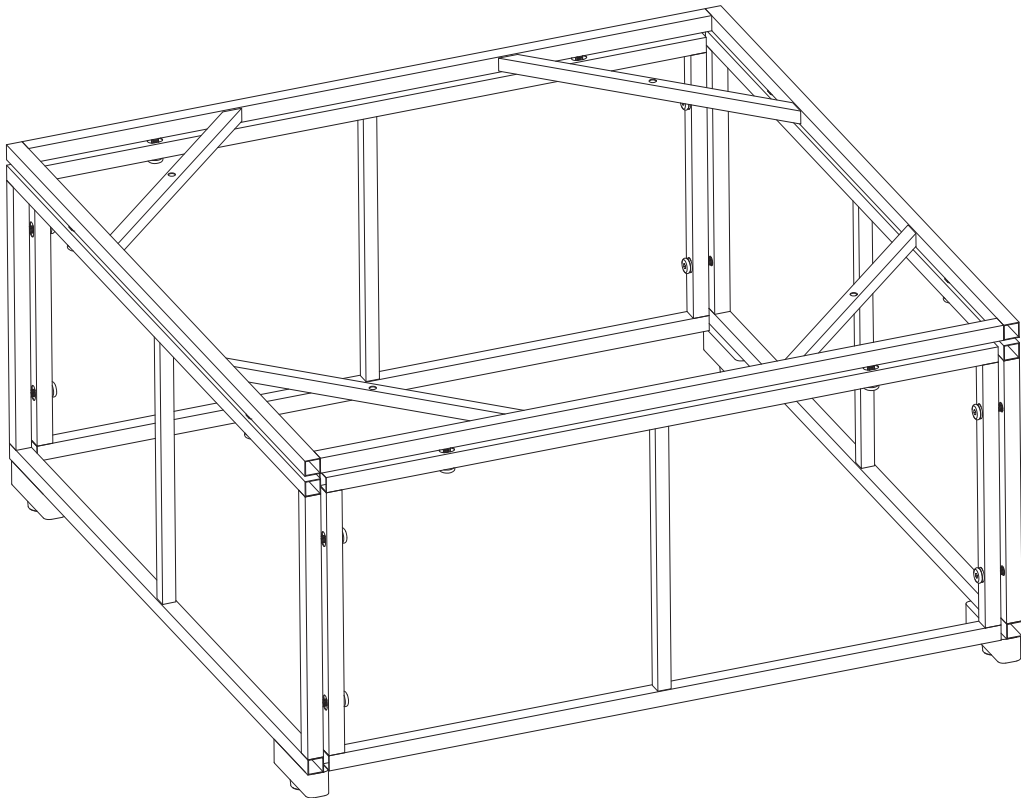

TABLE


1x02

M6

2x02

M6x30

Do not fully tighten all bolts until assembly is complete.

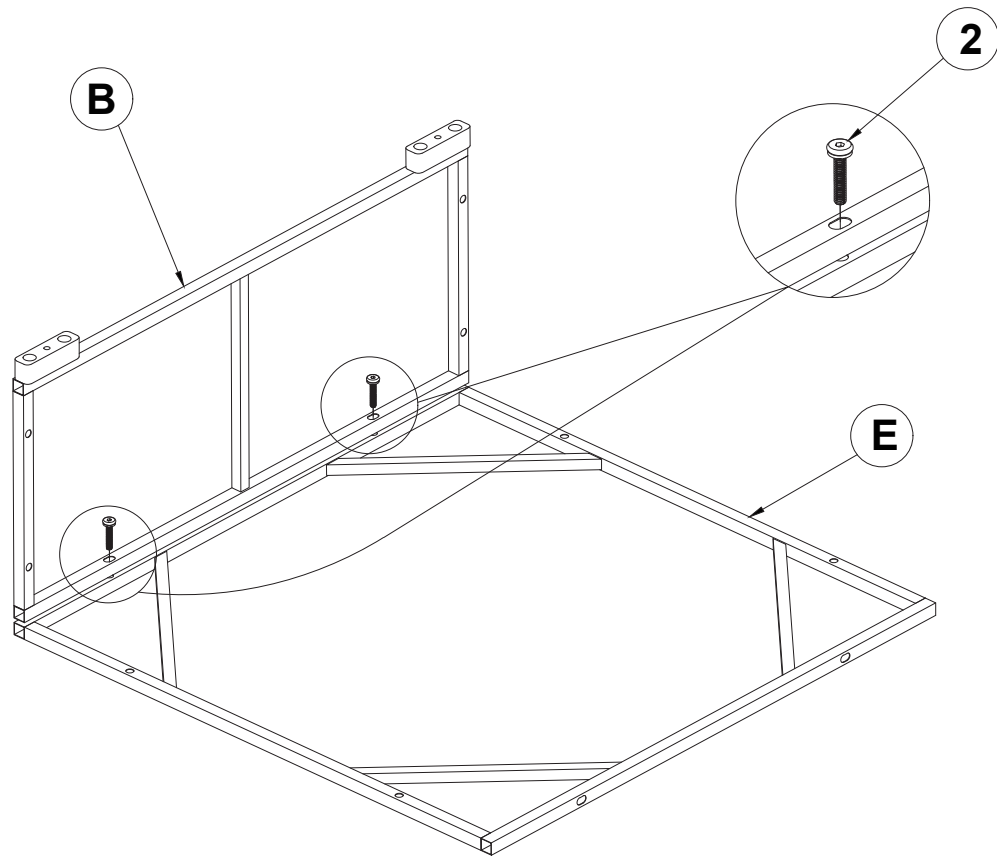

ARMLESS SOFA


1x08

M6

2x08

M6x30

Do not fully tighten all bolts until assembly is complete.

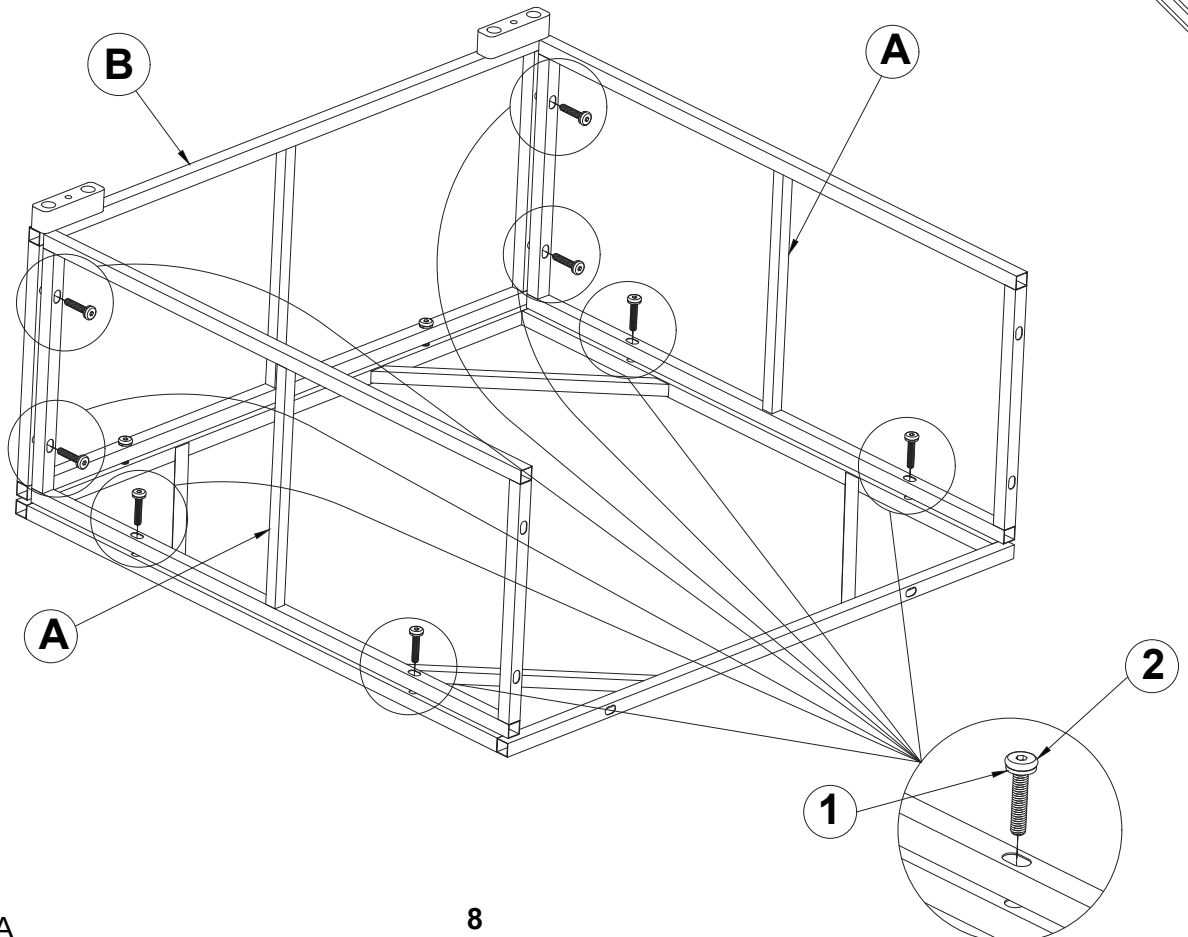


ARMLESS SOFA


1 x06



2 x06




Do not fully tighten all bolts until assembly is complete.

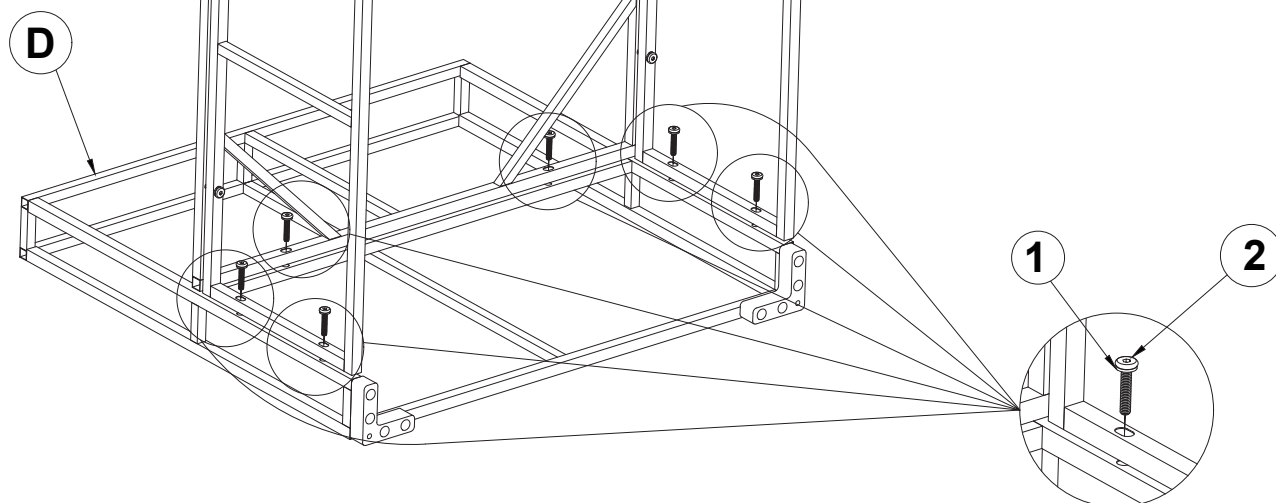


ARMLESS SOFA

3 x04

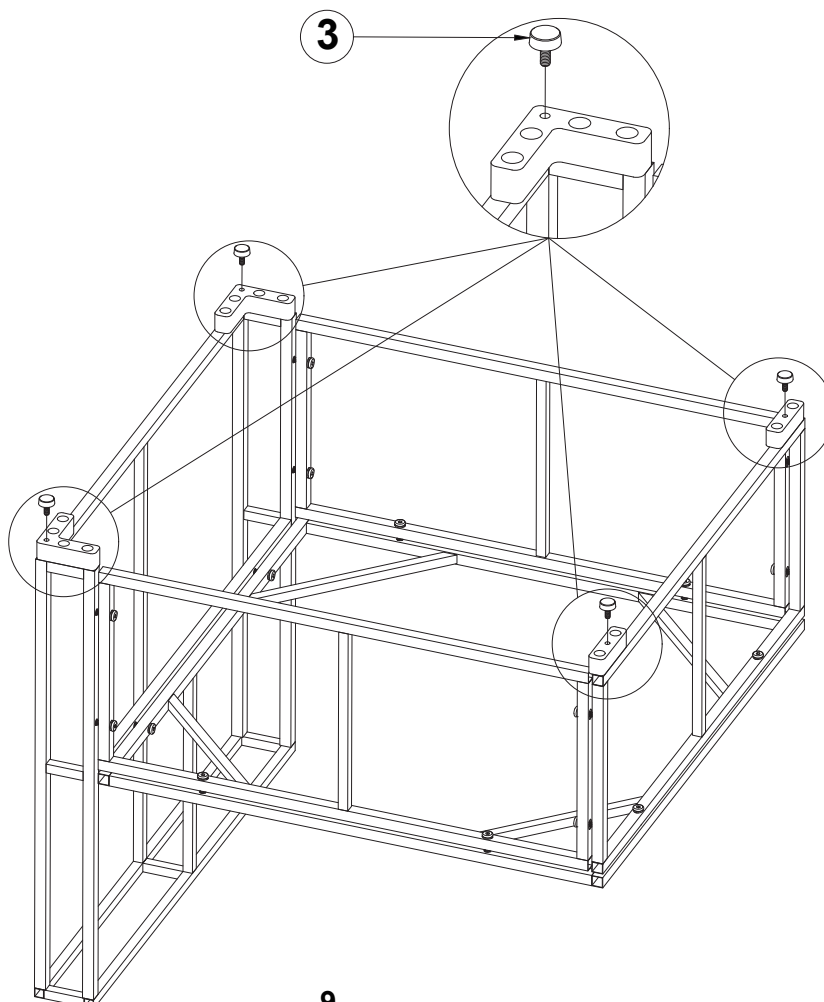



ARMLESS SOFA

Fully tighten all bolts after assembly is complete.

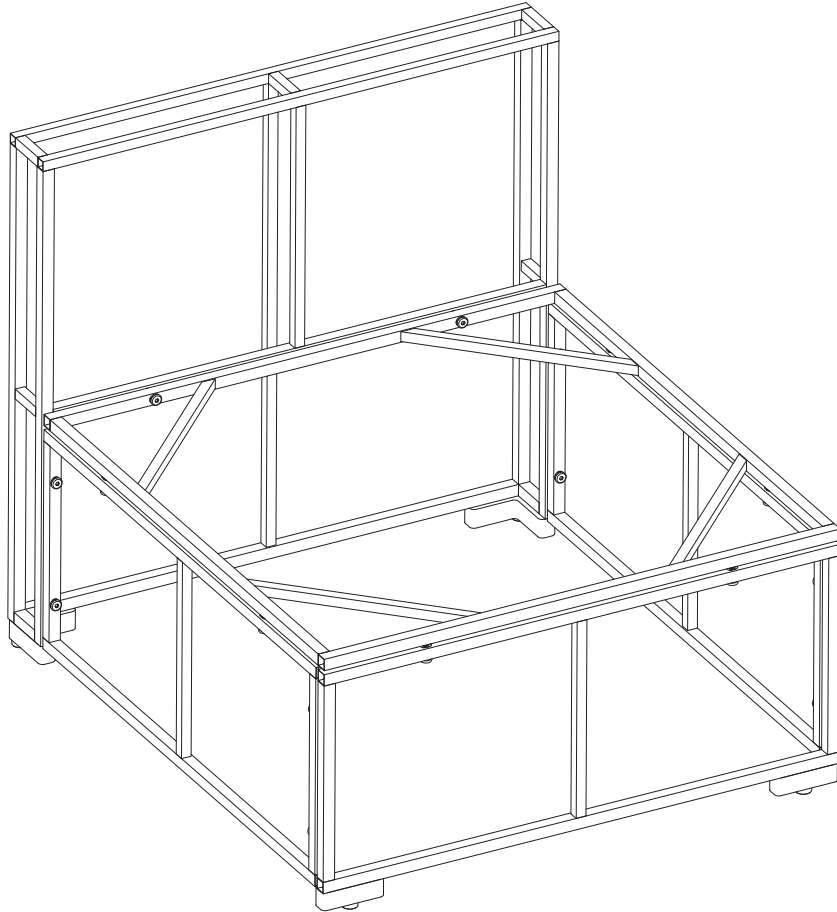

ARMLESS SOFA

Do not fully tighten all bolts until assembly is complete.

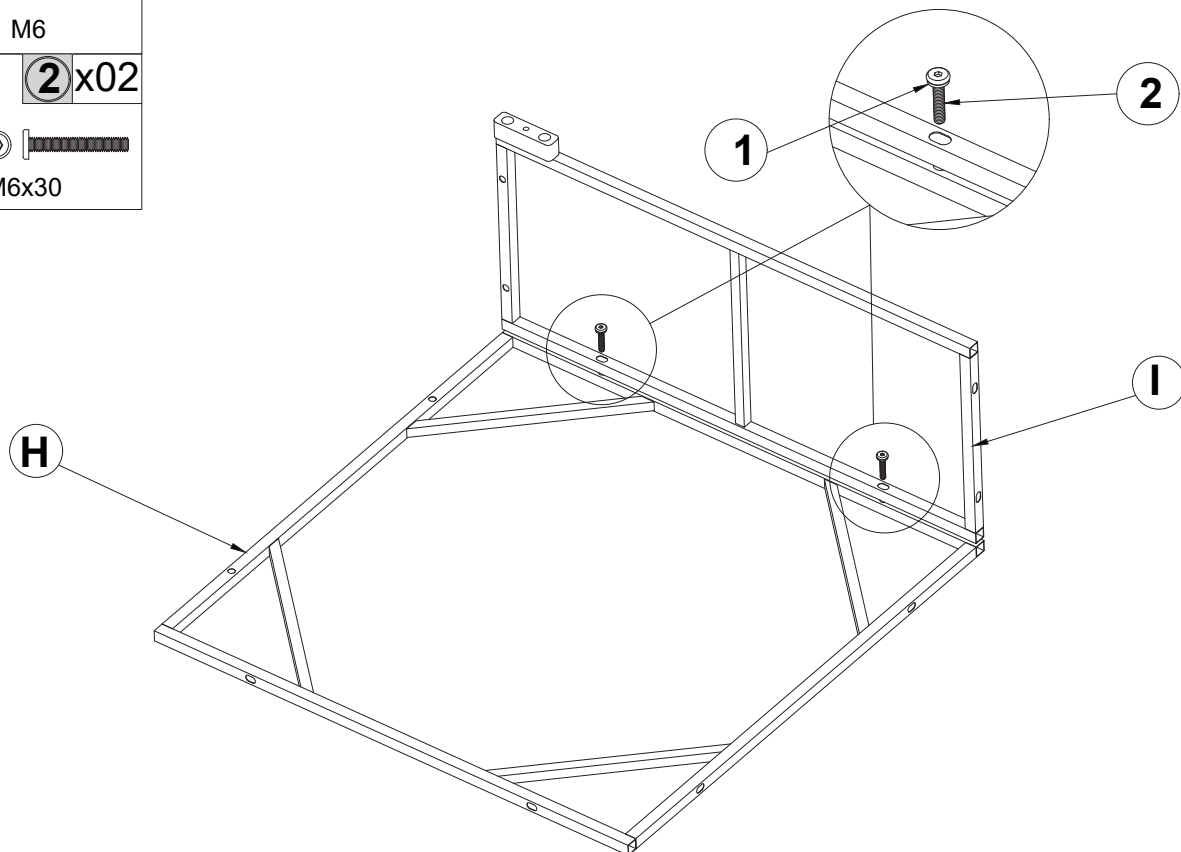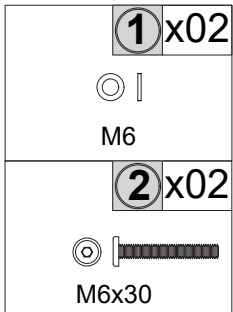

CORNER SOFA

1 x04




M6

2 x04



M6x30

Do not fully tighten all bolts until assembly is complete.

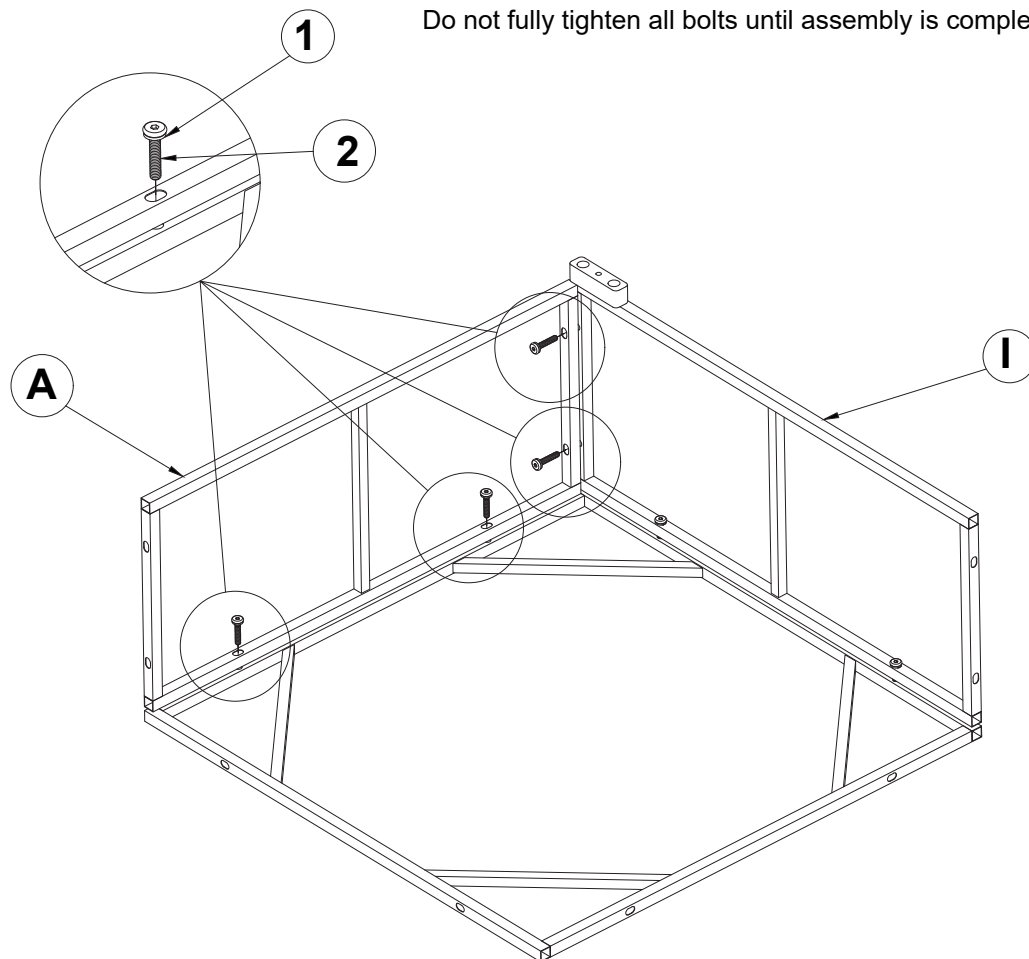

CORNER SOFA

1 x04




M6

2 x04



M6x30

Do not fully tighten all bolts until assembly is complete.

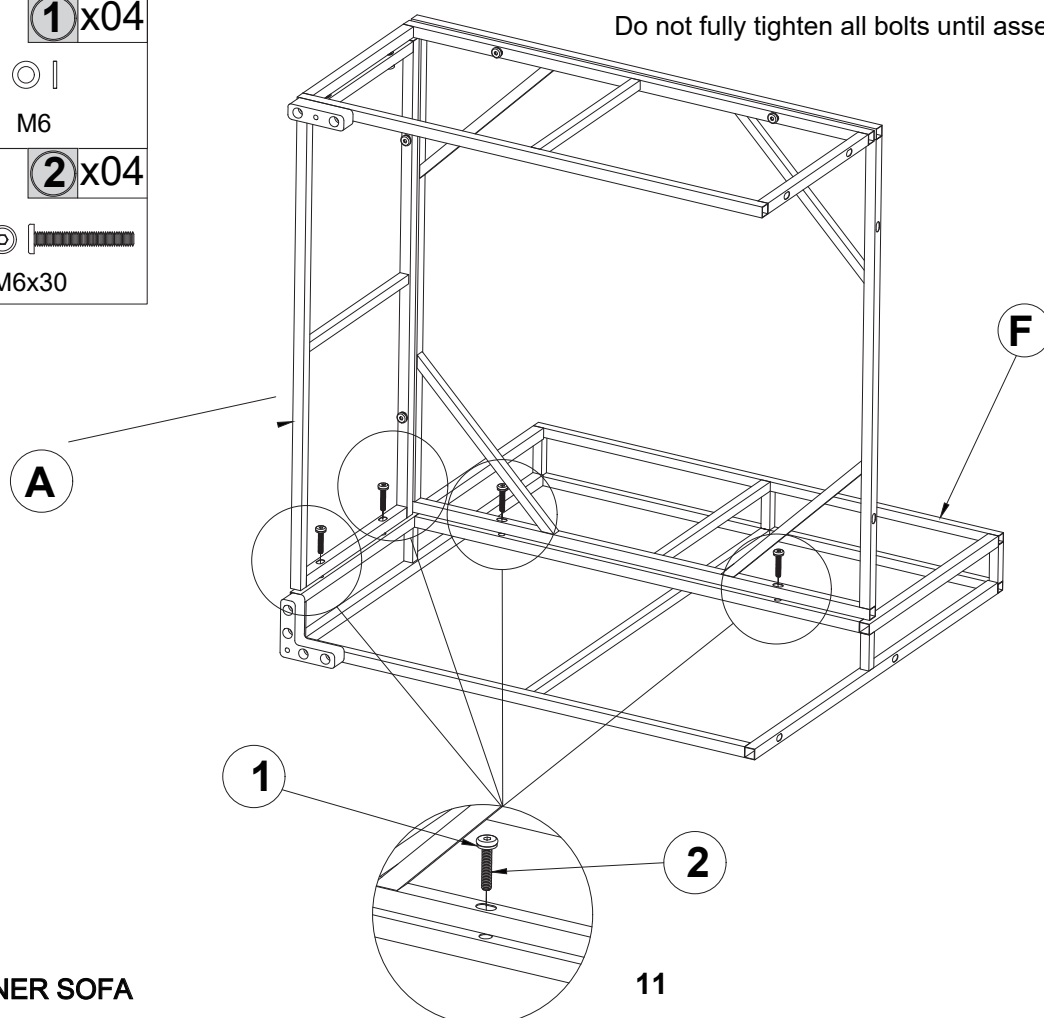

CORNER SOFA


1 x06


 M6

2 x06



 M6x30

Do not fully tighten all bolts until assembly is complete.

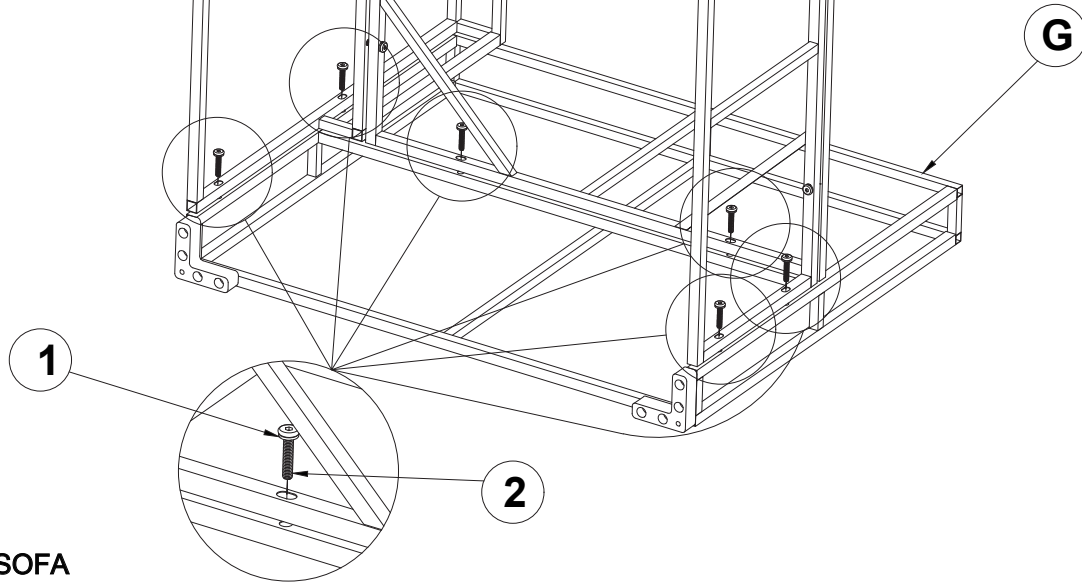


CORNER SOFA

3 x04

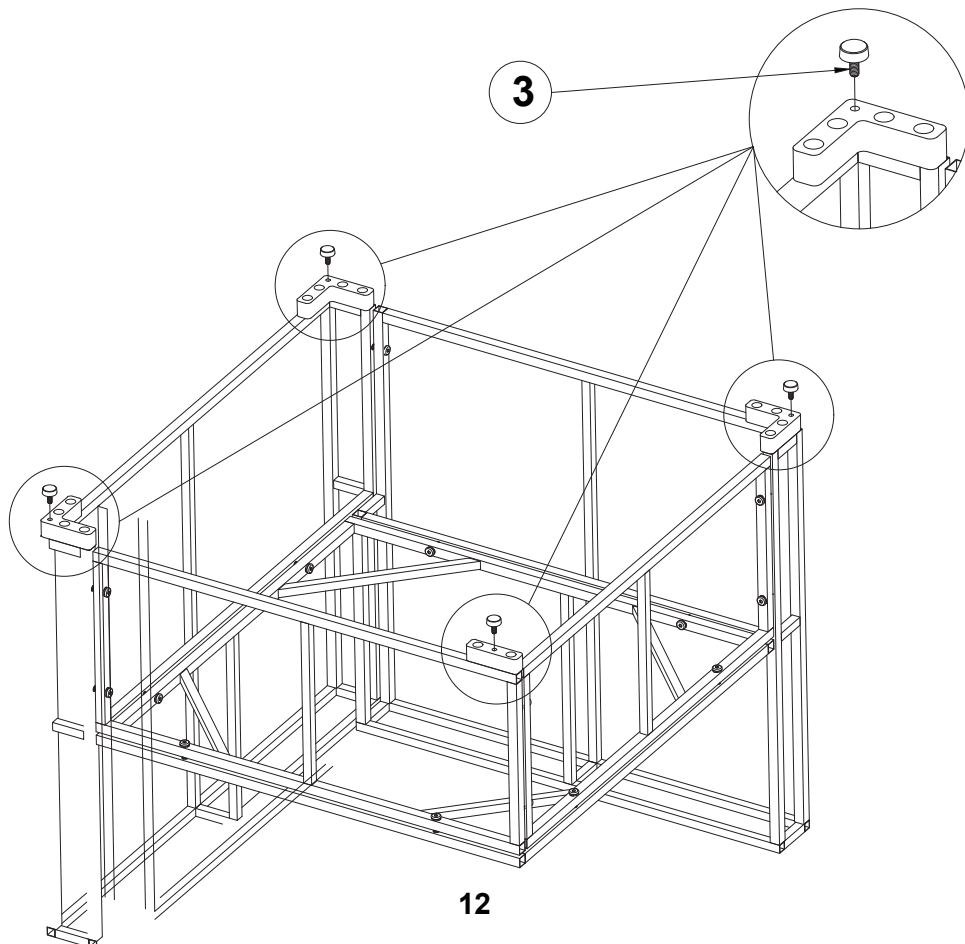
 M6x15


CORNER SOFA

Fully tighten all bolts after assembly is complete.

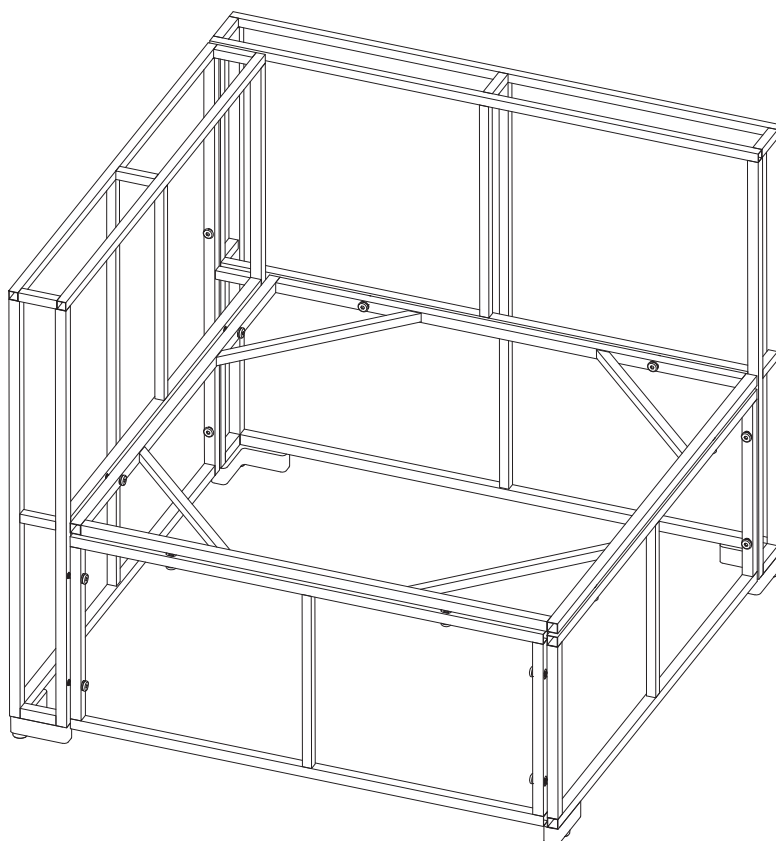

CORNER SOFA

Place all cushions on the sofa, your sofa is ready to be used.

