



Product Installation Instructions

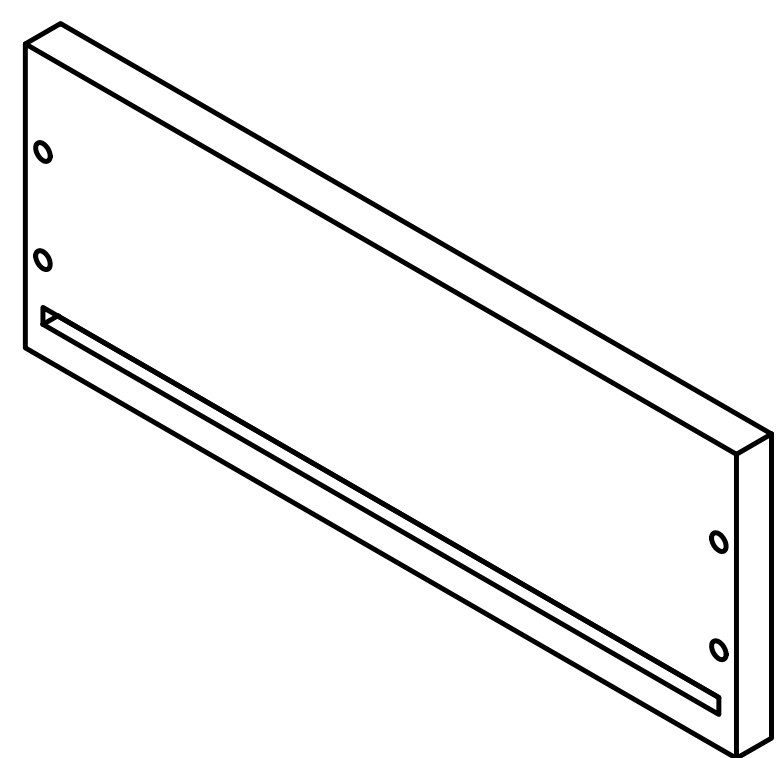


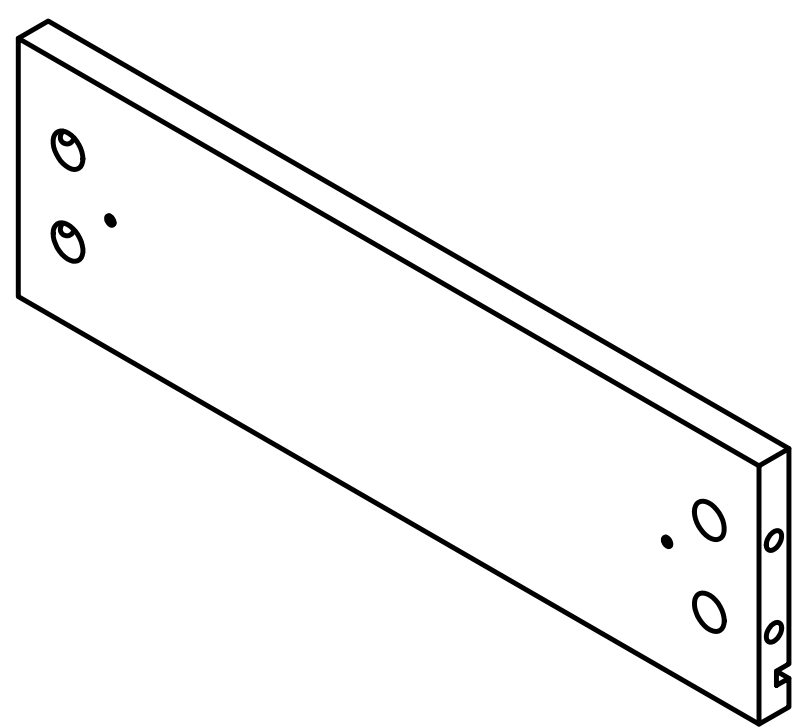


Ax2




Bx4

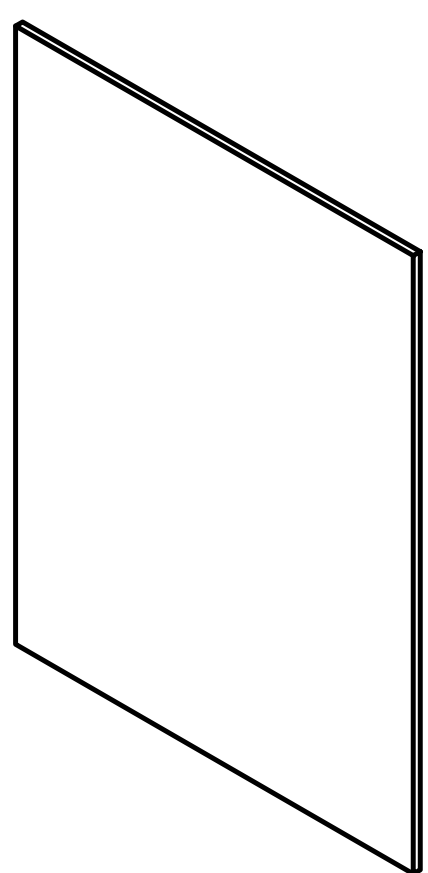


Cx2

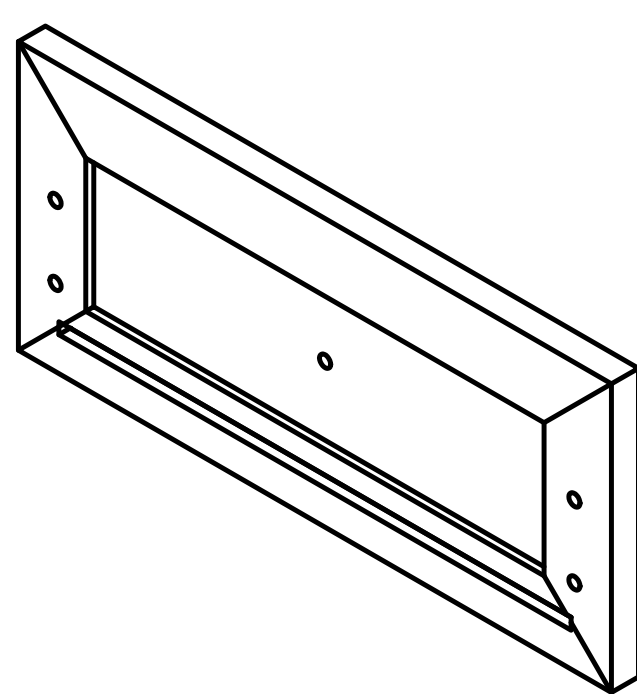


Dx2

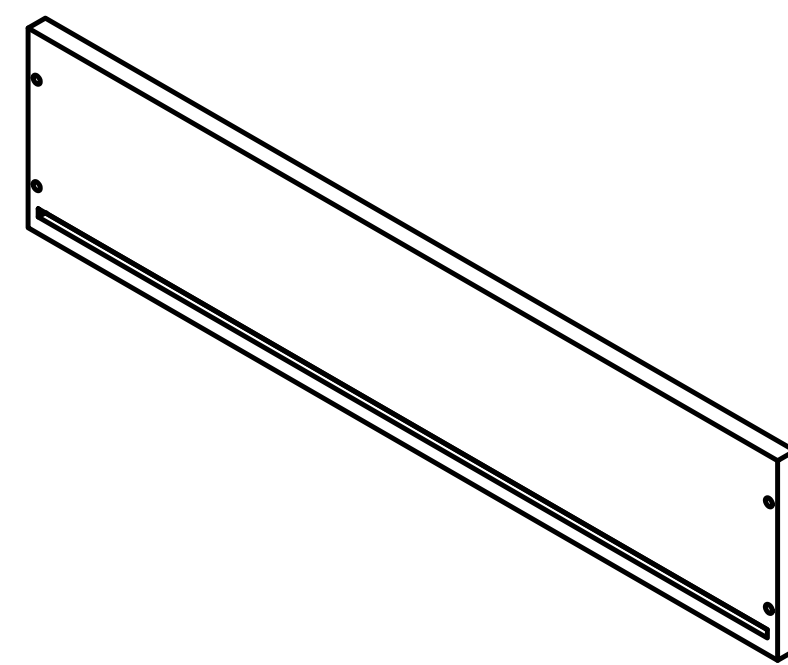


Ex6

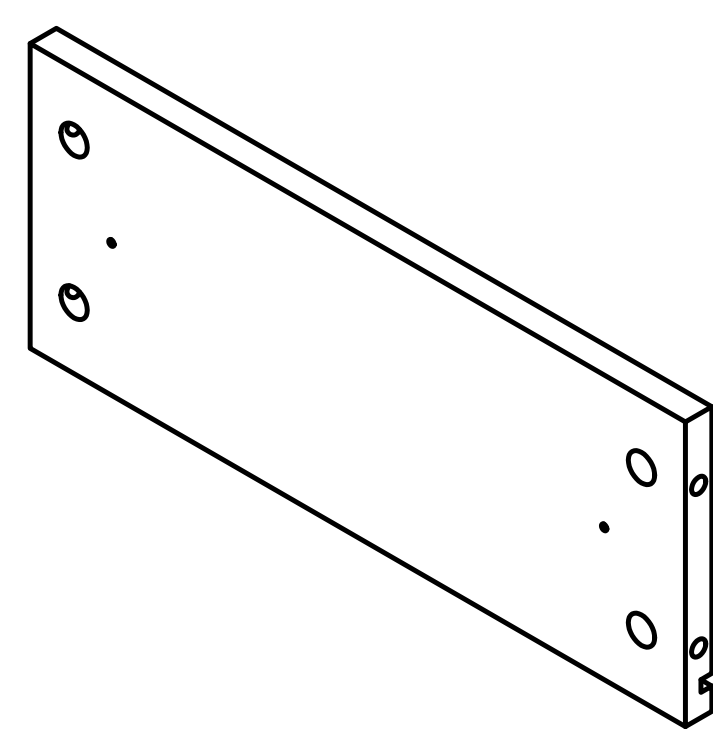


Fx12

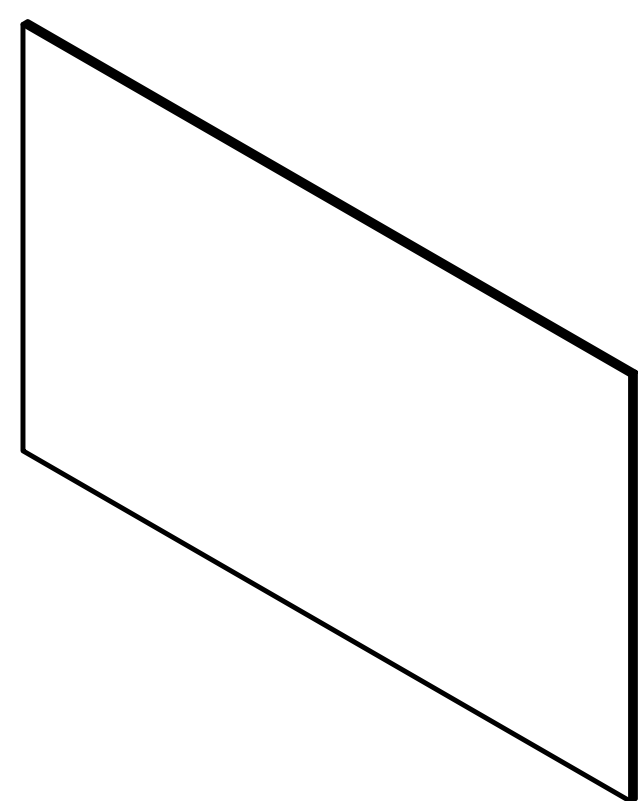


Gx6

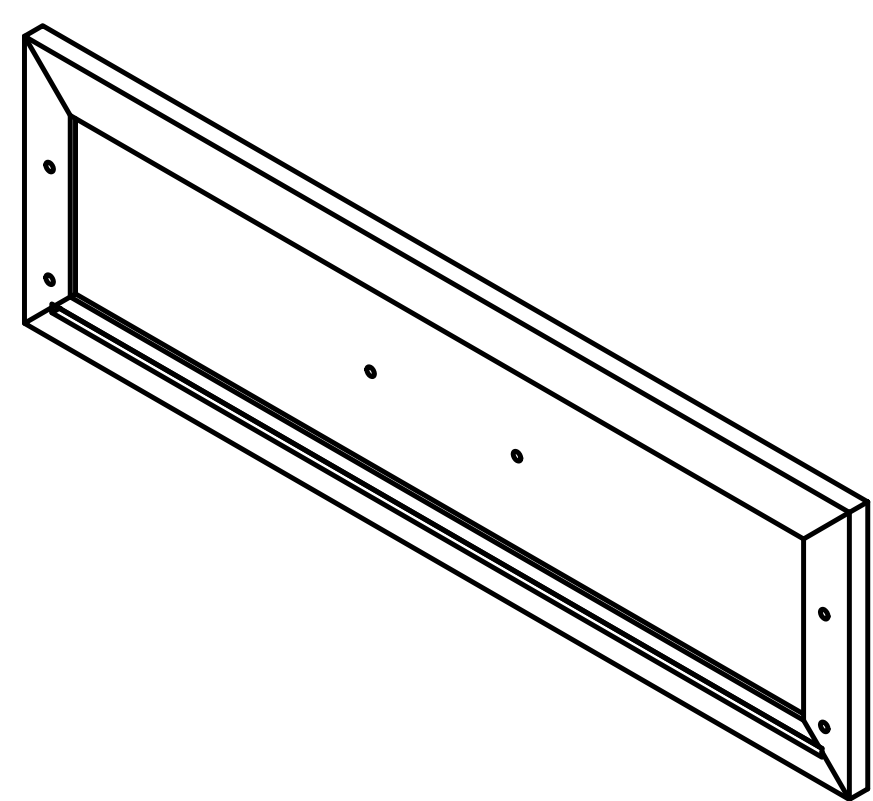


Hx6

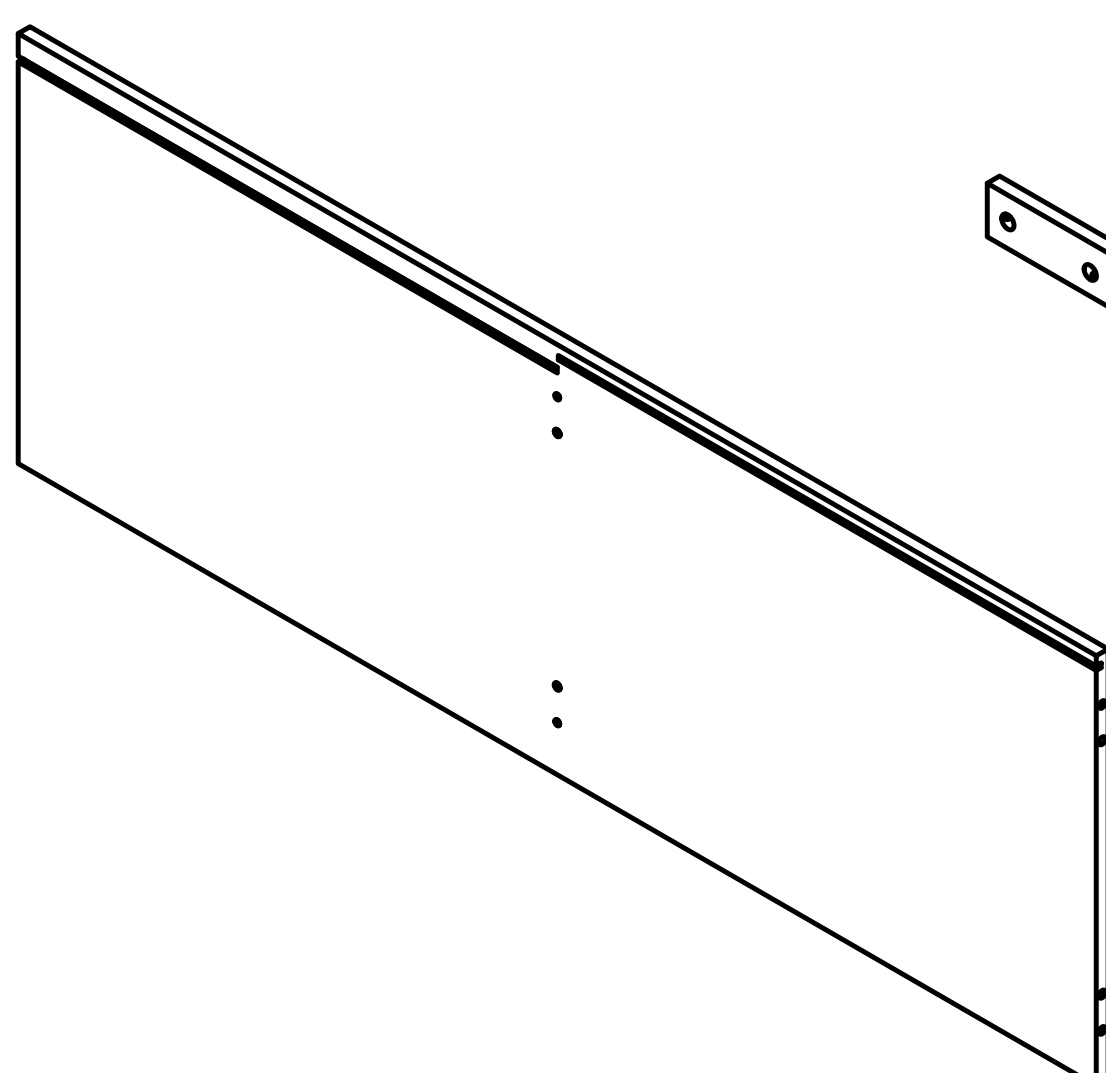


Ix1

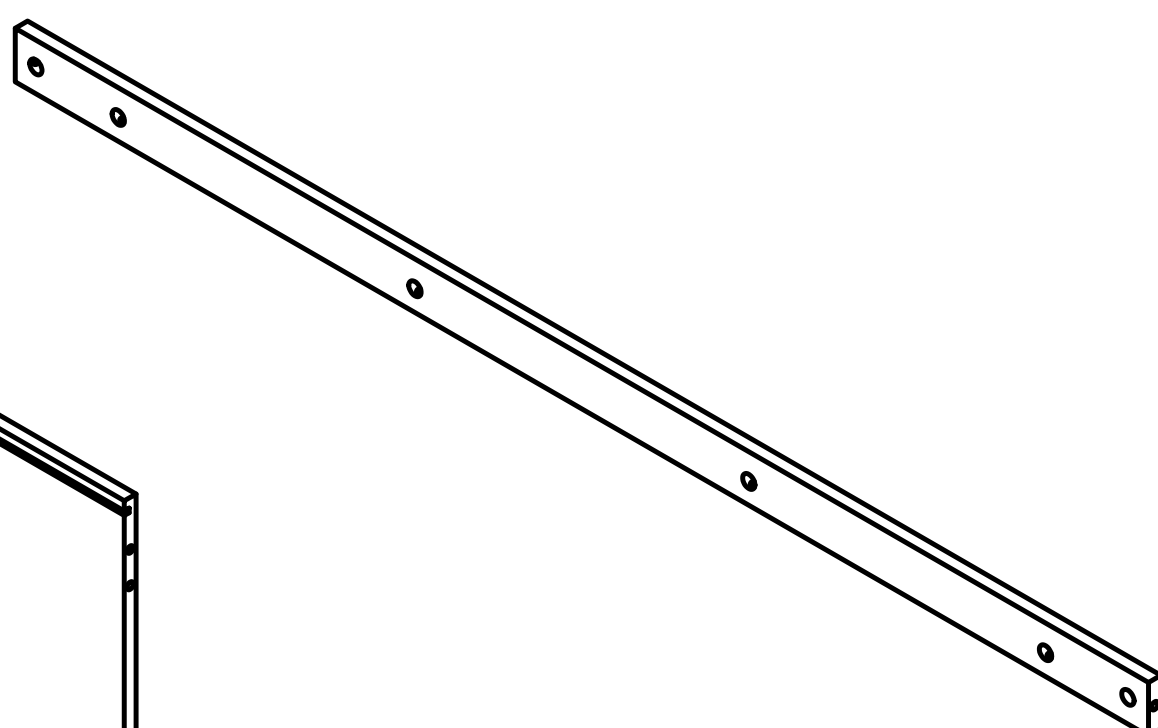


Jx2

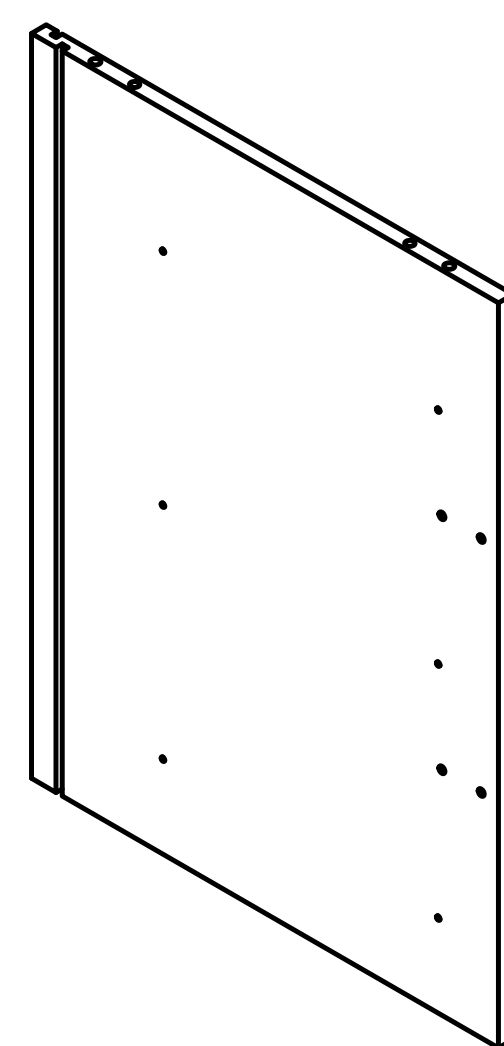


Kx1

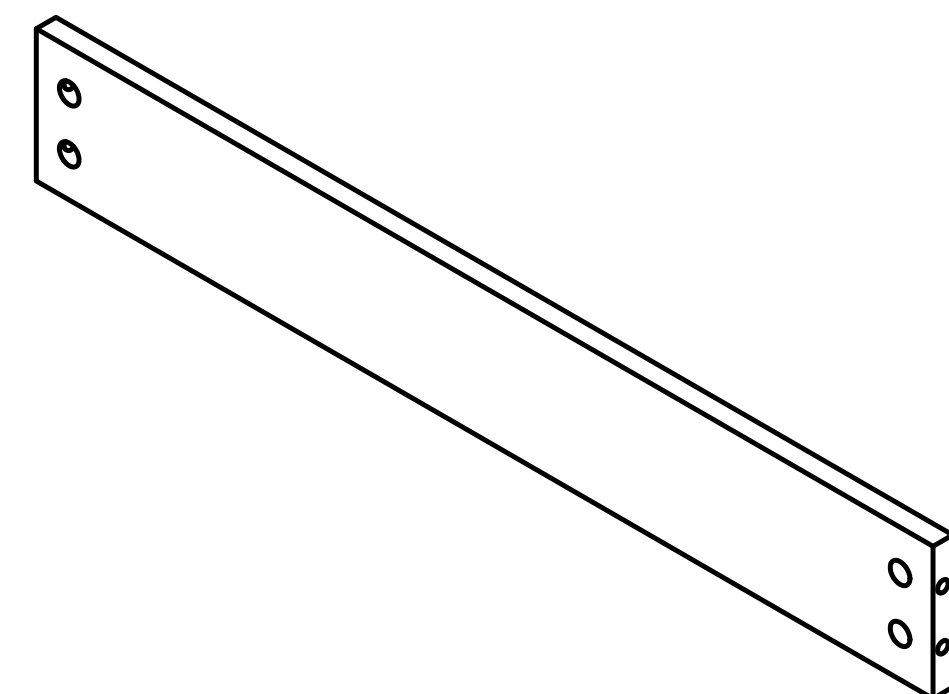


Lx2

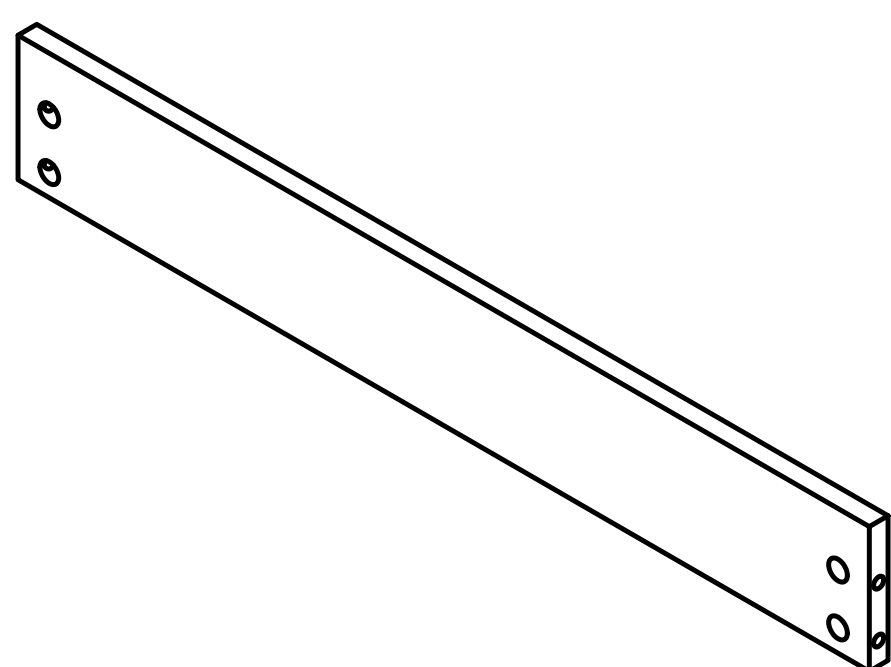


Mx2

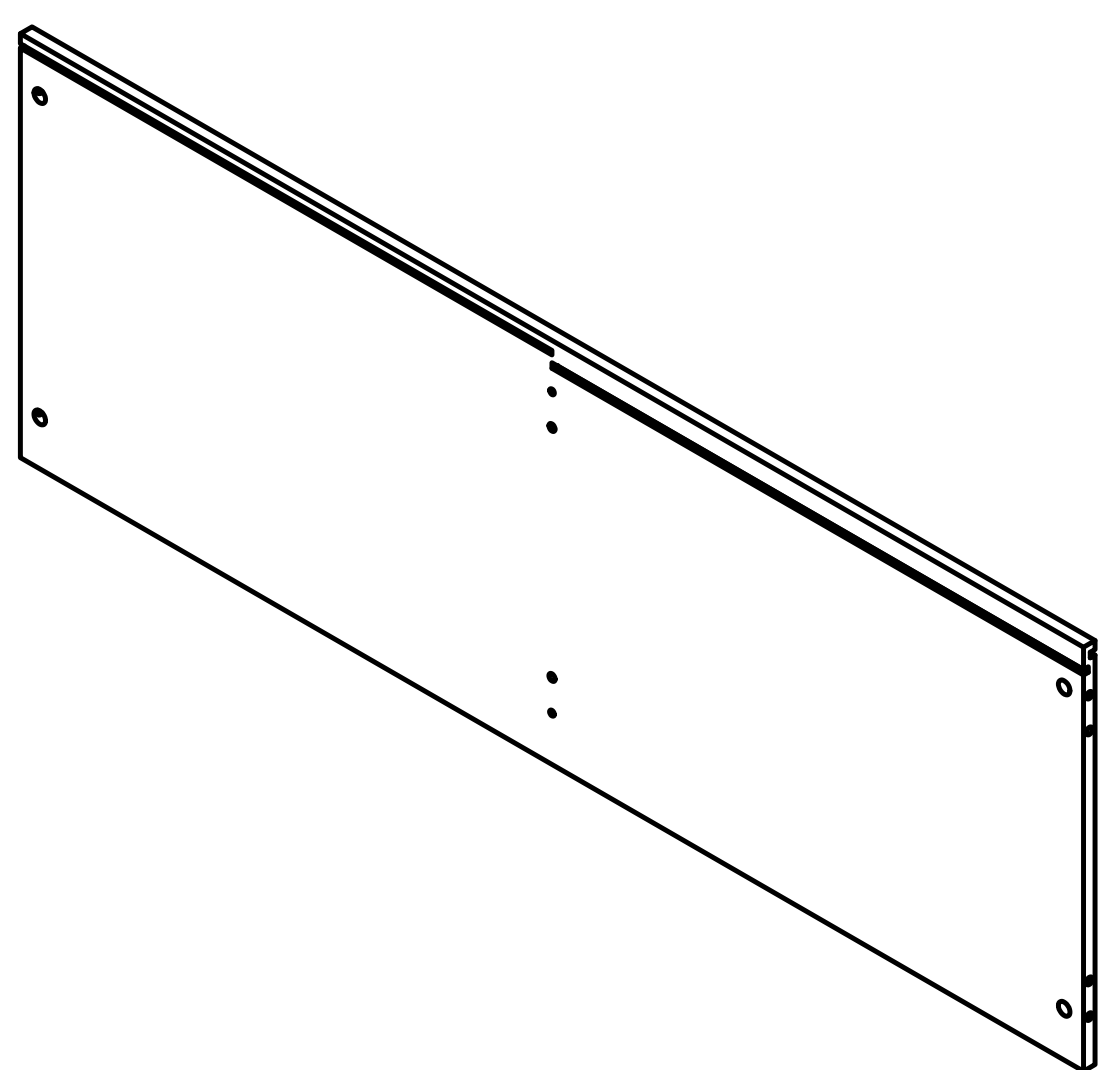


Nx1

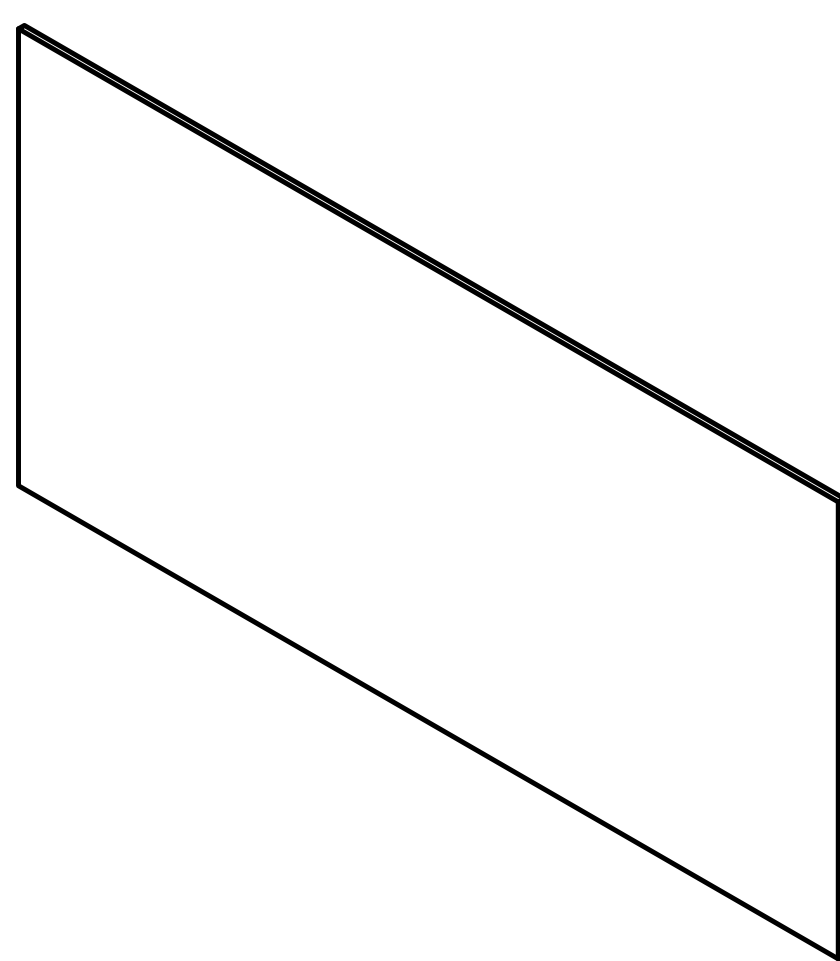


Ox2

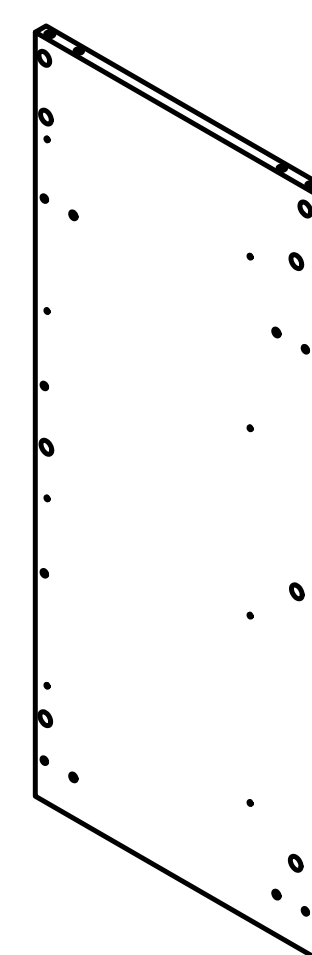


Px1

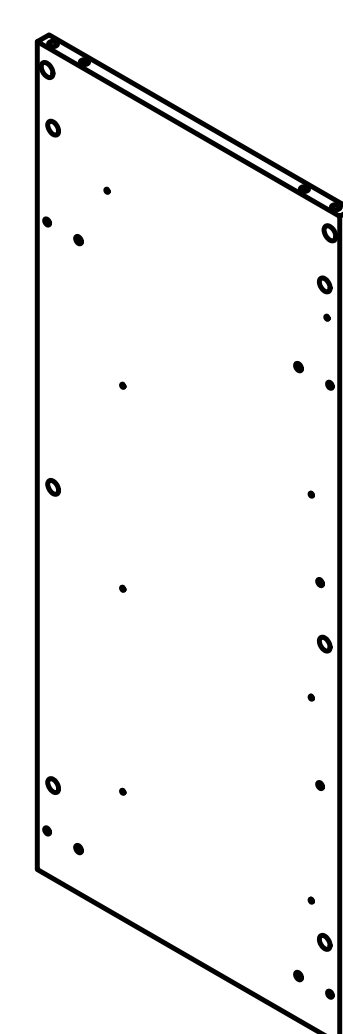


Qx1

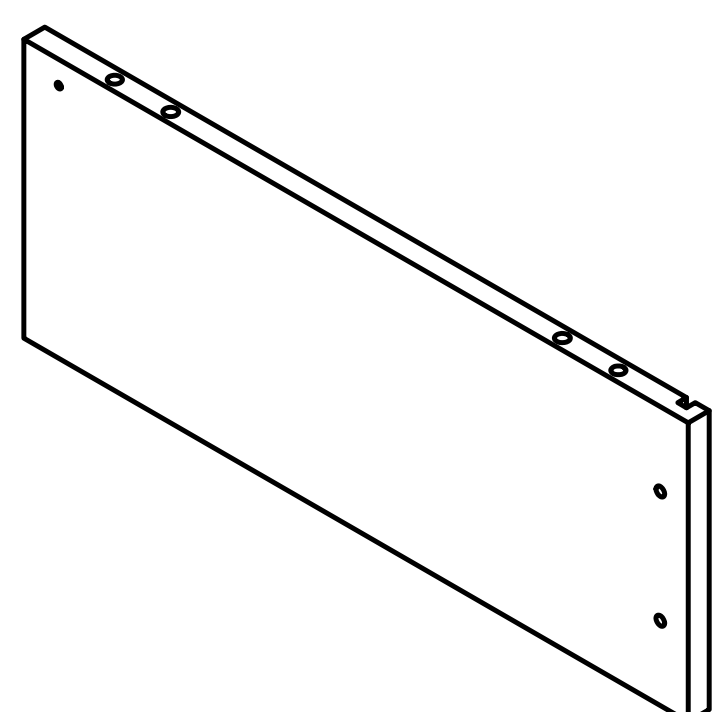


Rx1

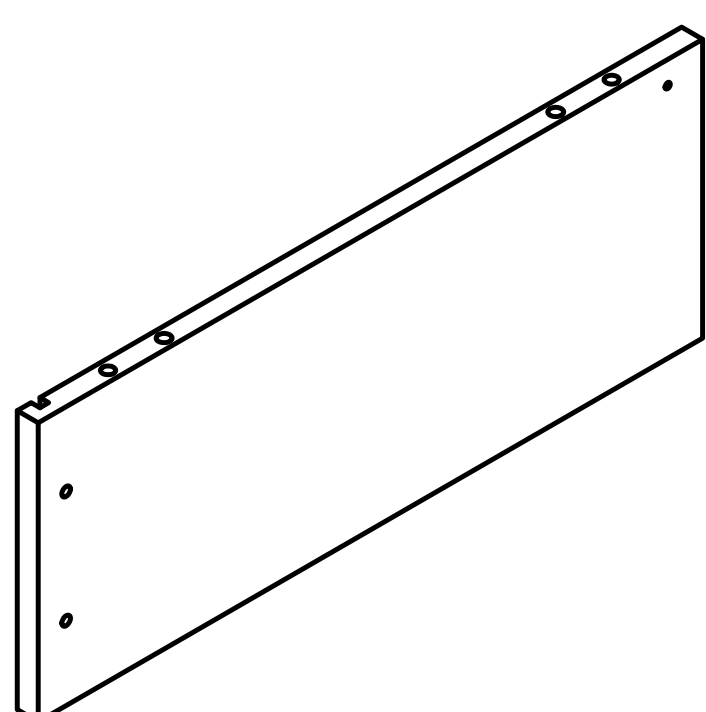


Sx1

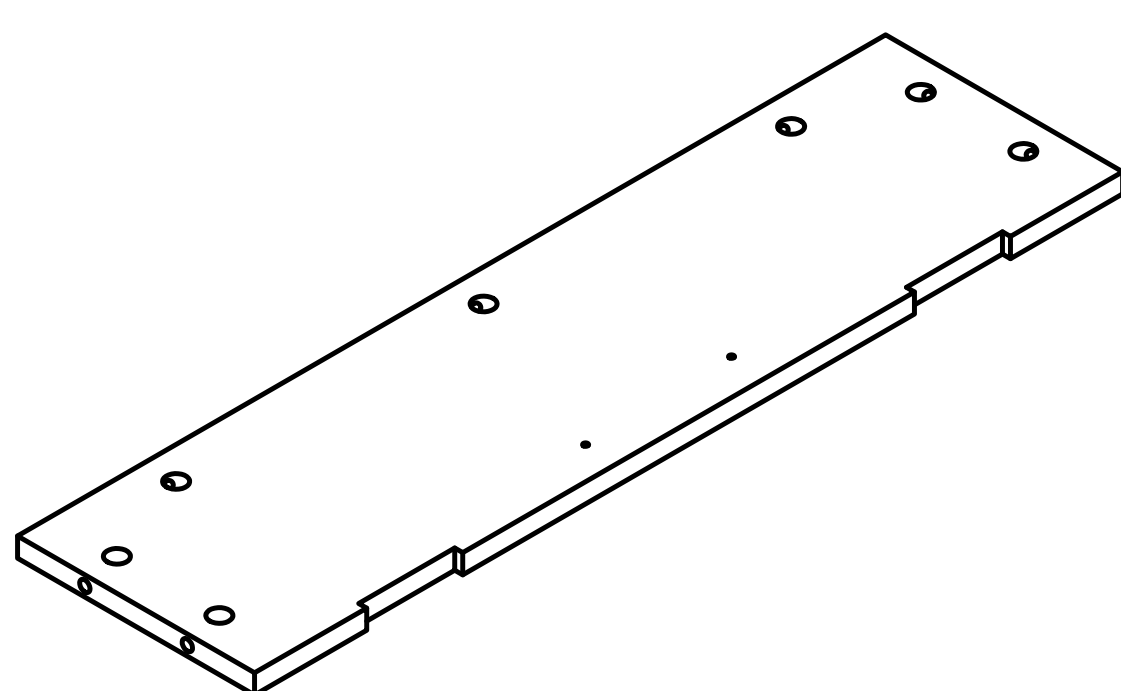


Tx1

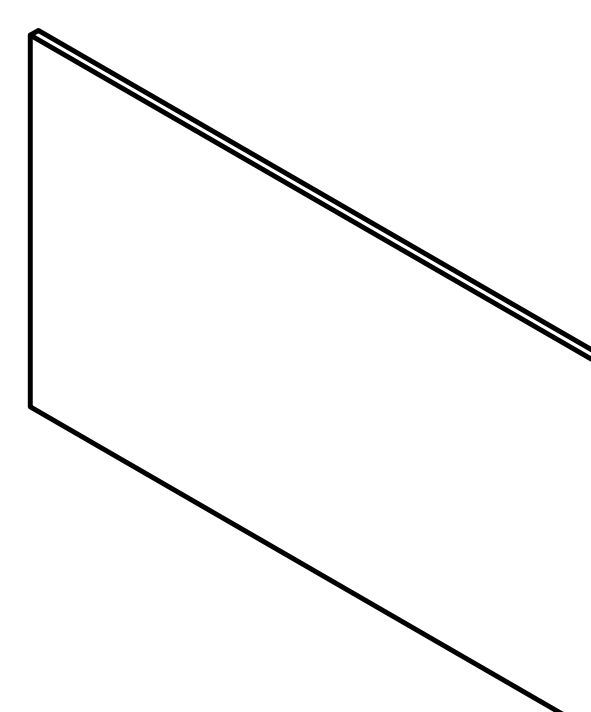


Ux2

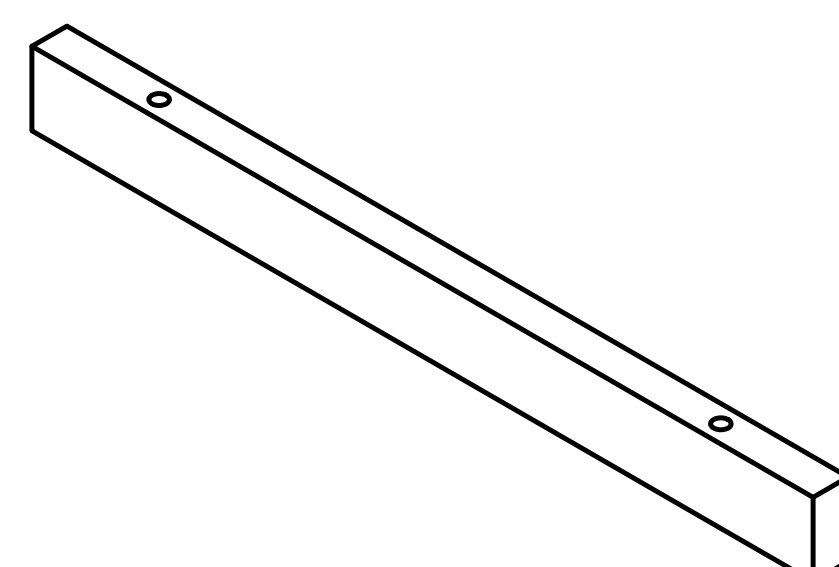


Vx2

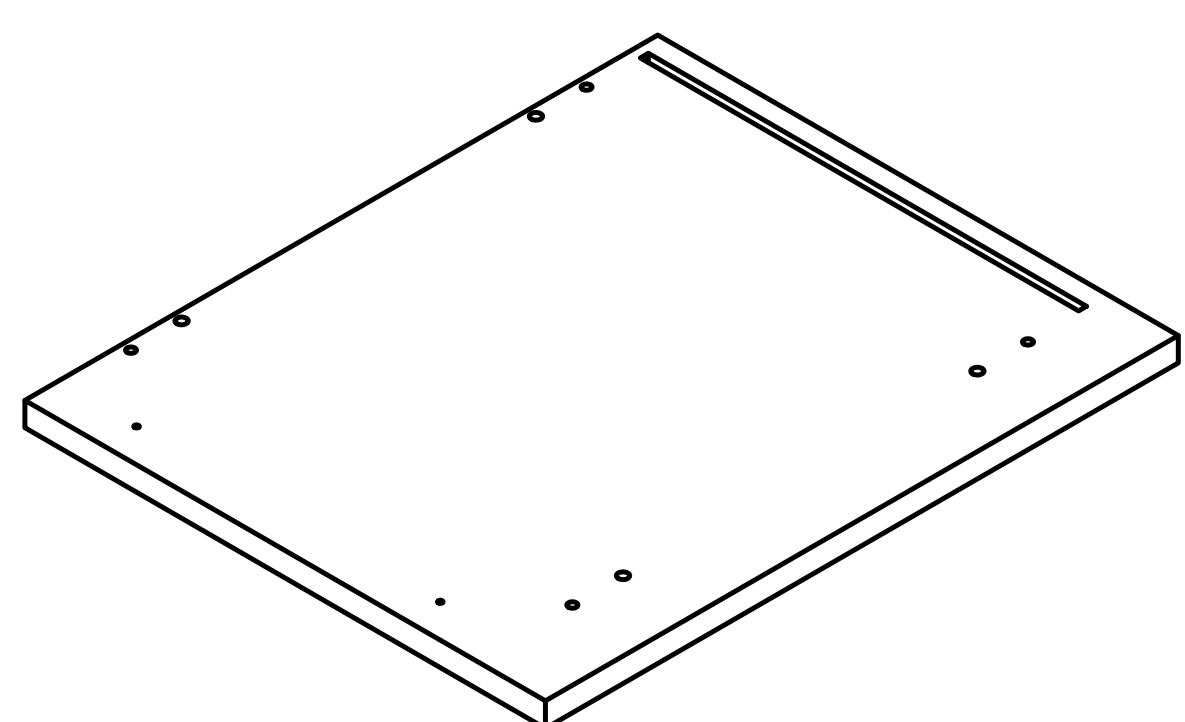


Wx1

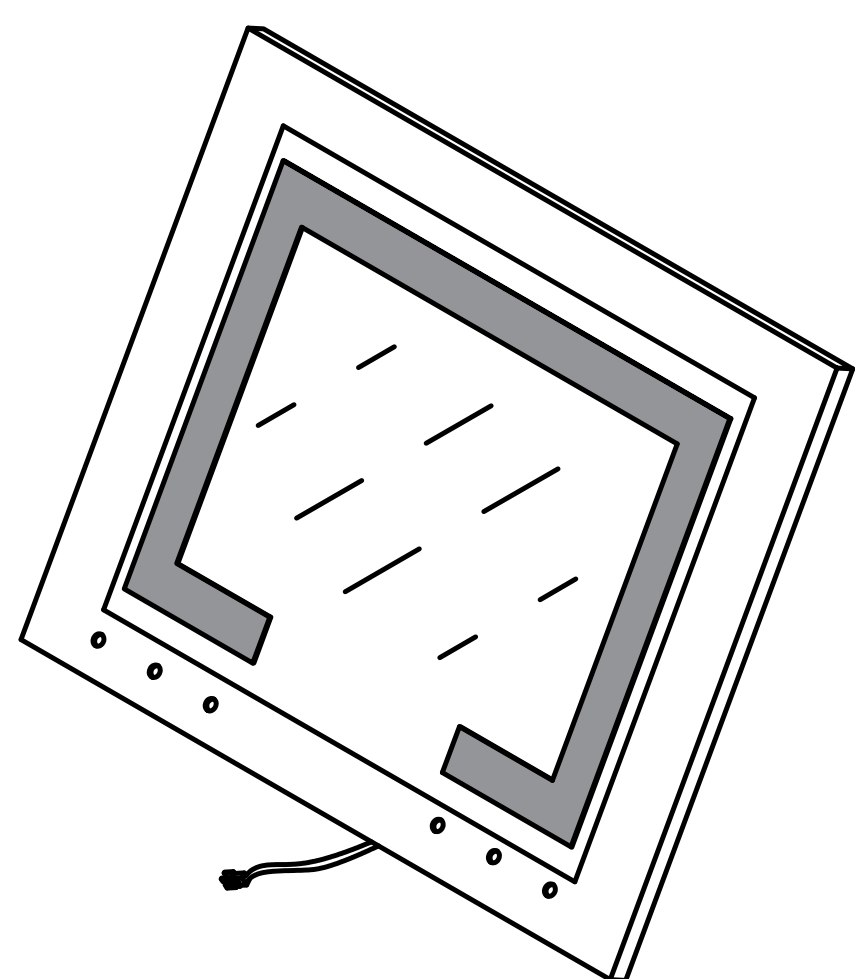


Xx1

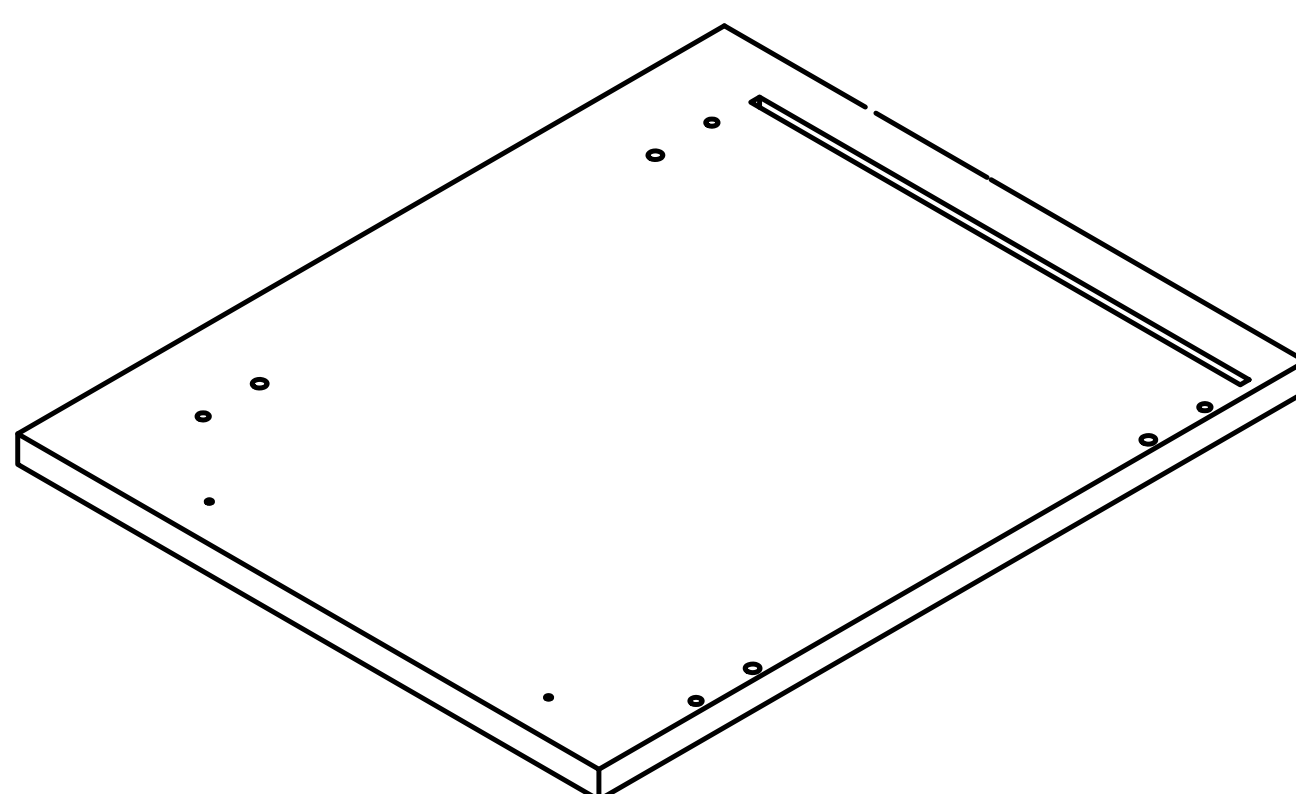


Yx1

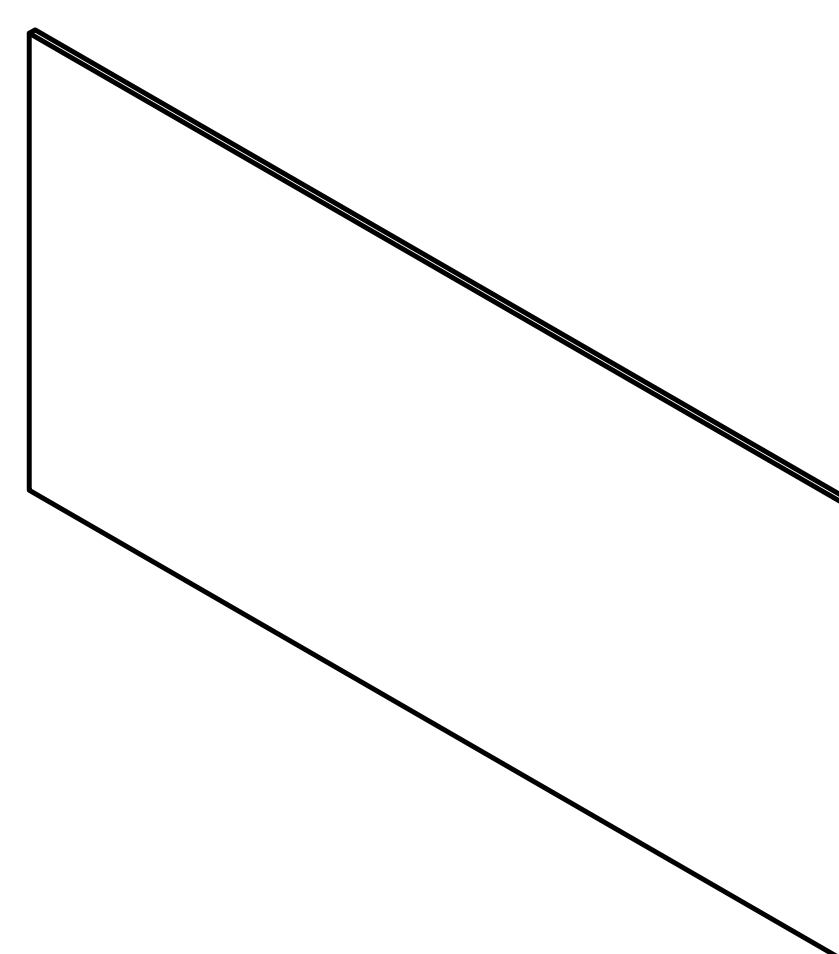


Zx2

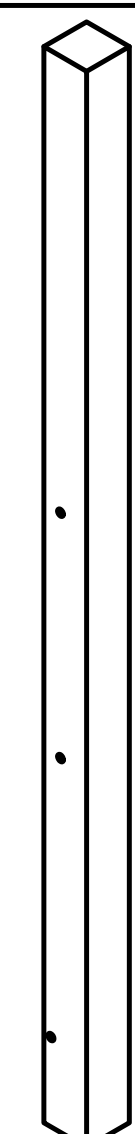

P1x1




P2x1




Q1x1



























Q2x1

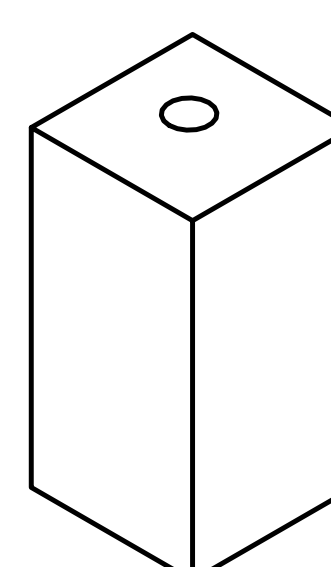


ax1








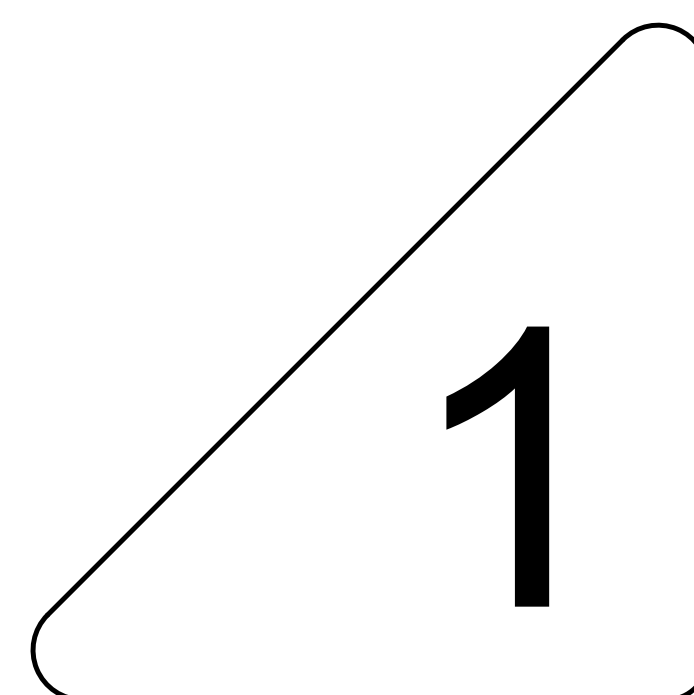



1

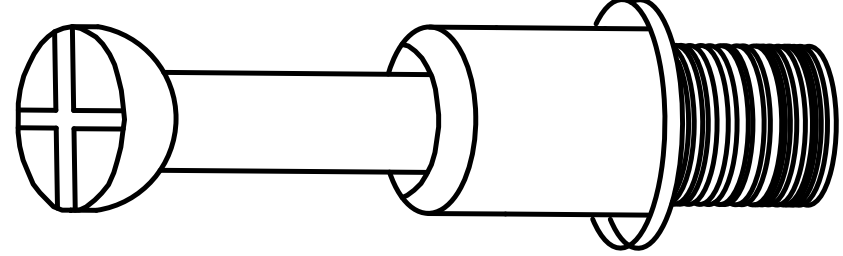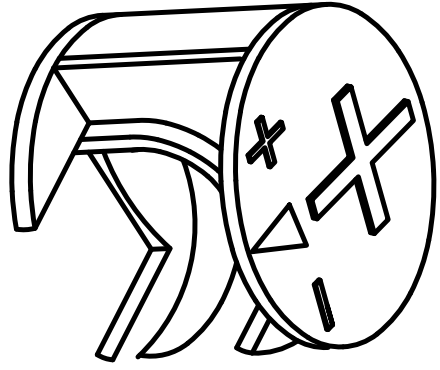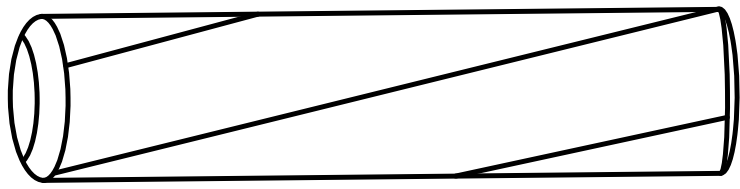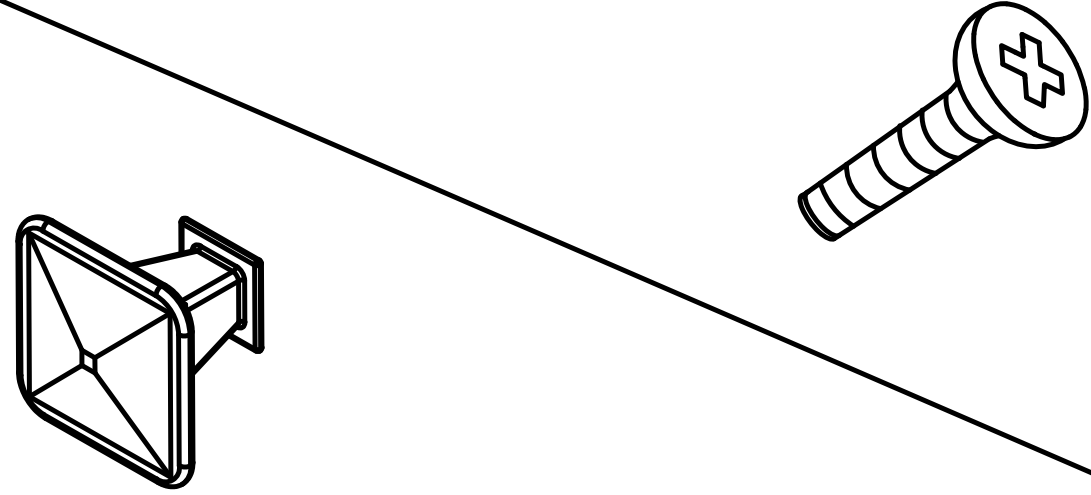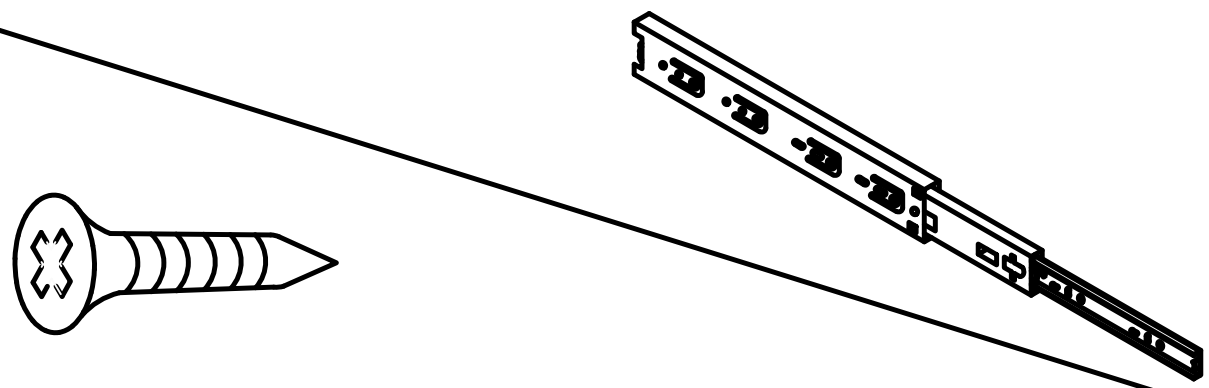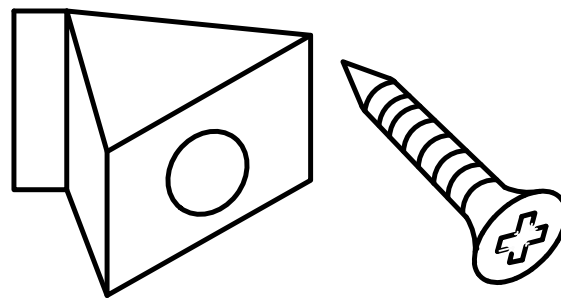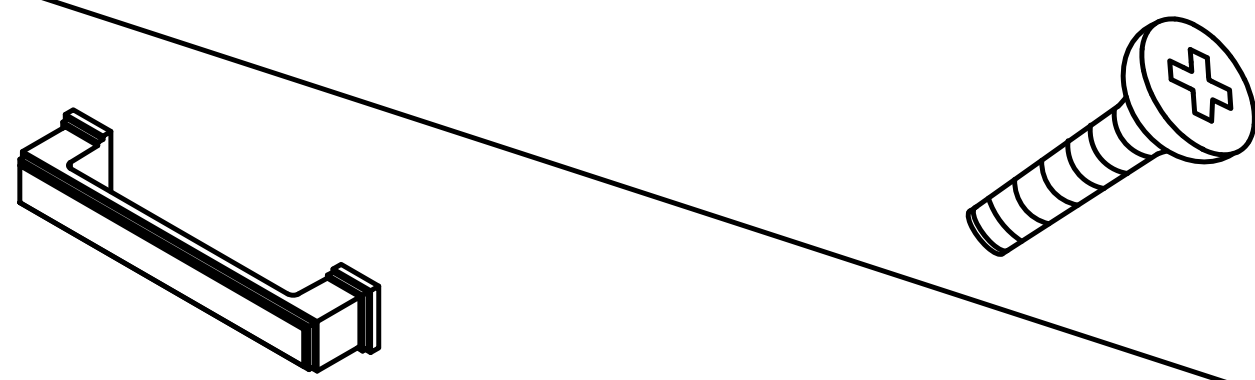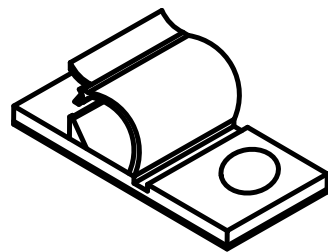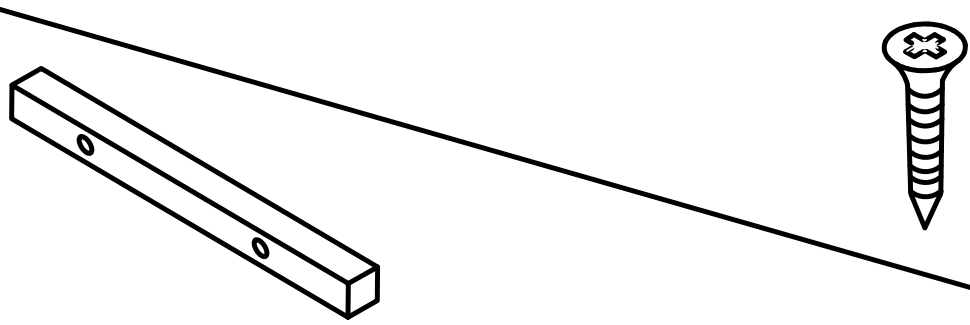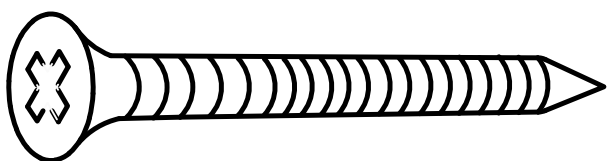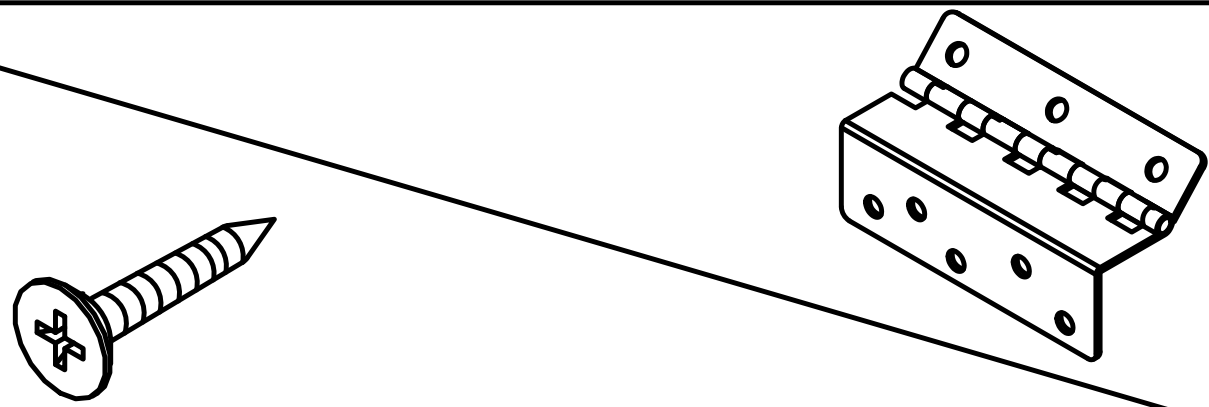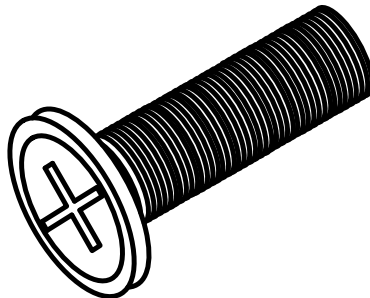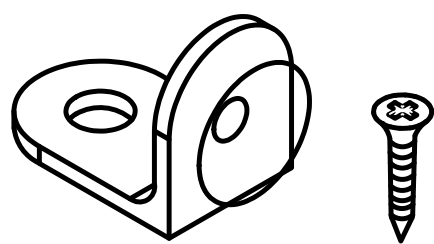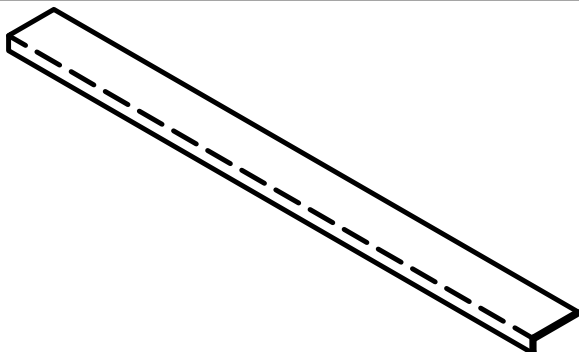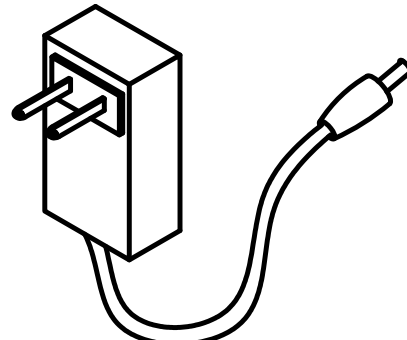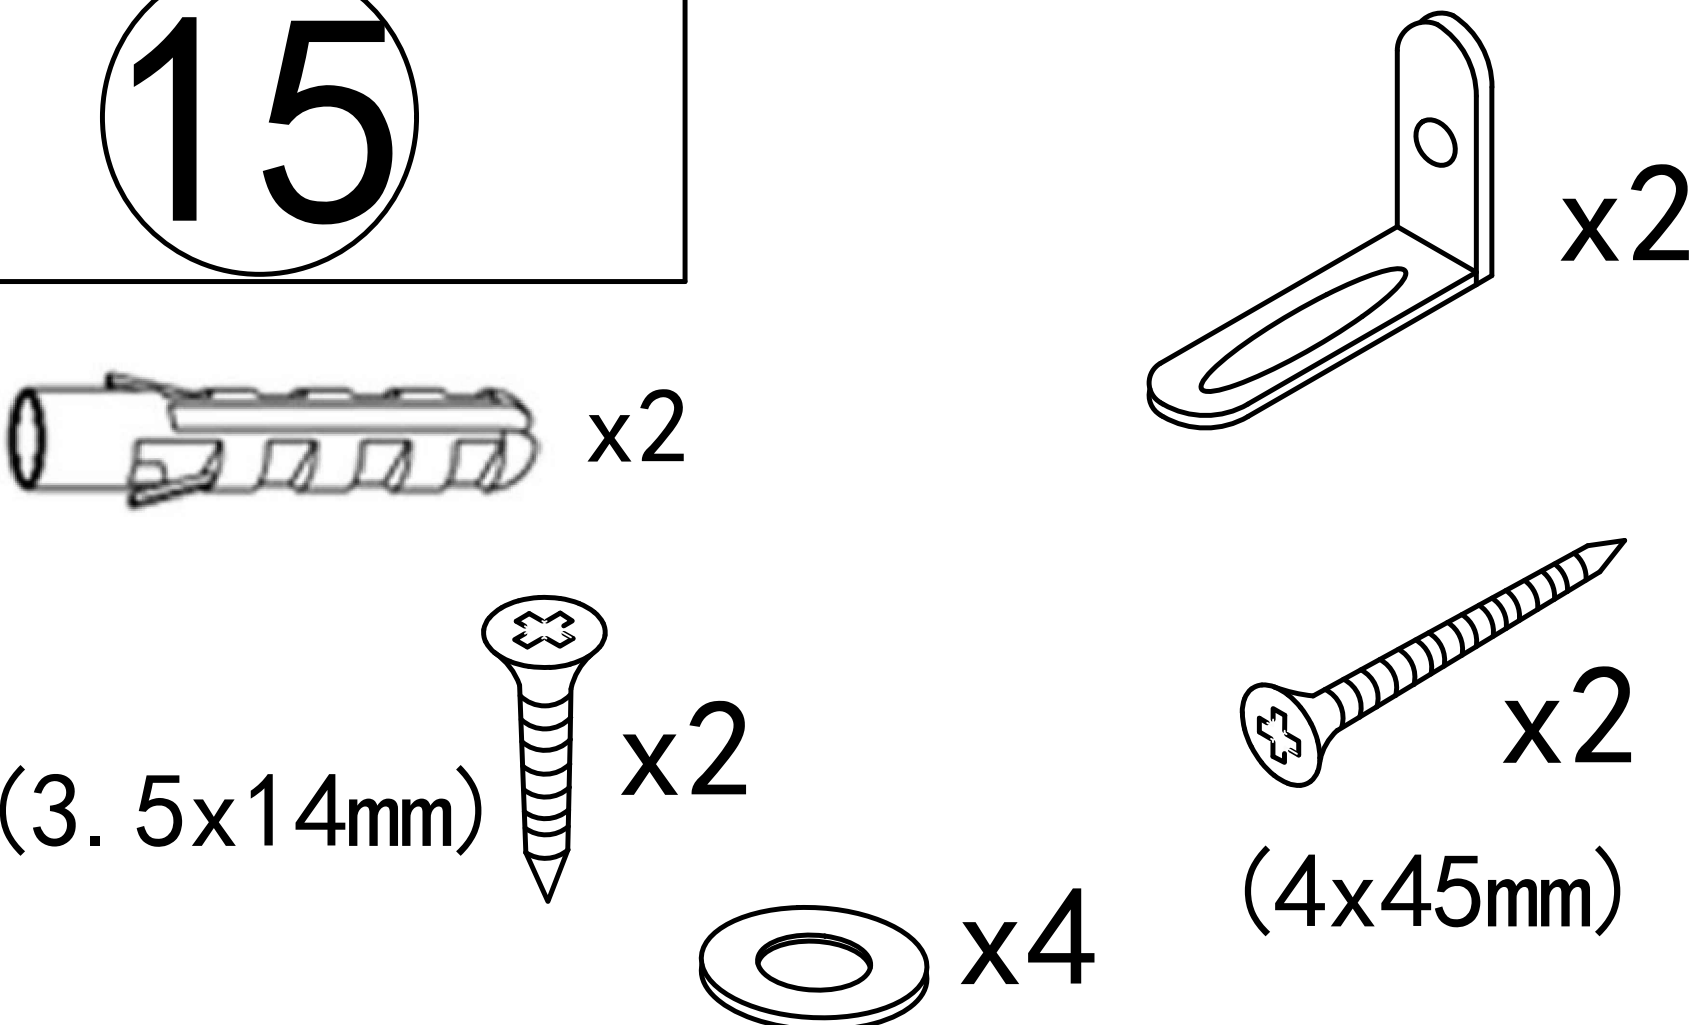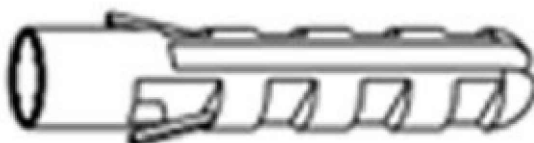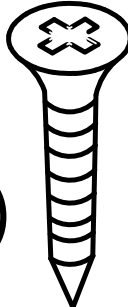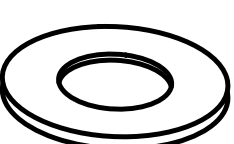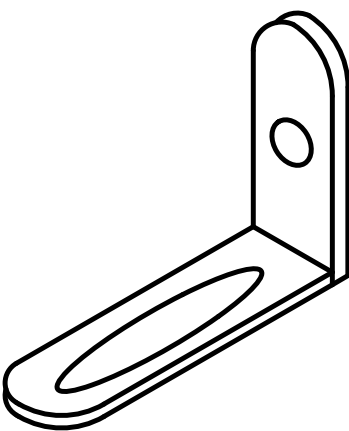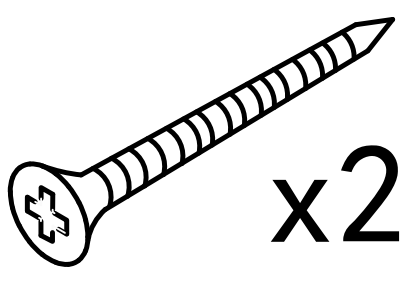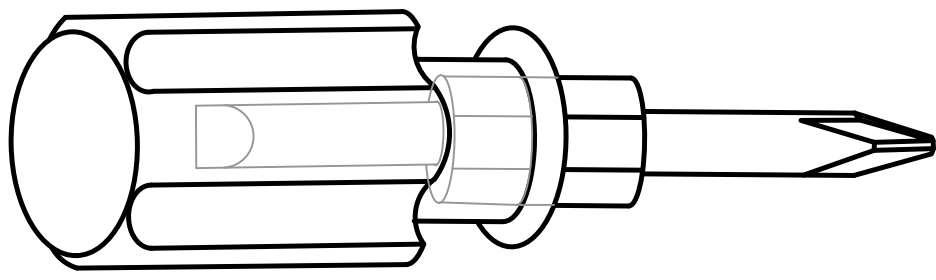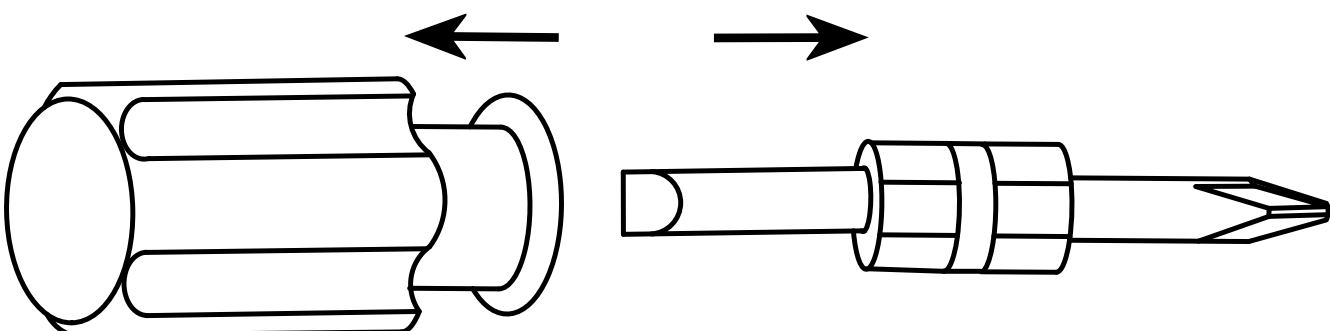1		Two In One Screw (6x28mm)	135pcs +4pcs
2		Two In One Nut (10x12mm)	135pcs +4pcs
3		Wood Chipping (6x30mm)	24pcs +2pcs
4		Handle & screw (4x8mm)	2pcs
5		Screw & Guide(12 inch) (3x12mm)	16pcs 80pcs +4pcs
6		Non-slip pads	5pcs
7		Fixing clip & screw (3x16mm)	20pcs
8		Handle & screw (4x8mm)	12pcs 6pcs
9		Clamp	1pcs
10		Rubber Strip Guide & Screw (4x16mm)	2pcs 1pcs
11		Screw (4x25mm)	4pcs
12		Hinge& Screw (3.5x12mm)	2pcs 16pcs
13		Screw (6x25mm)	1pcs
14		Laminate Support Nail & Screw (4x12mm)	2pcs
		Paper template	1pcs
		AC/DC Adapter (12V==2. 0A)	1pcs
15	  x2  x2 (3. 5x14mm)  x4  x2  x2 (4x45mm)	 1pcs  Double-head screwdriver, use as required	

Product structure decomposition

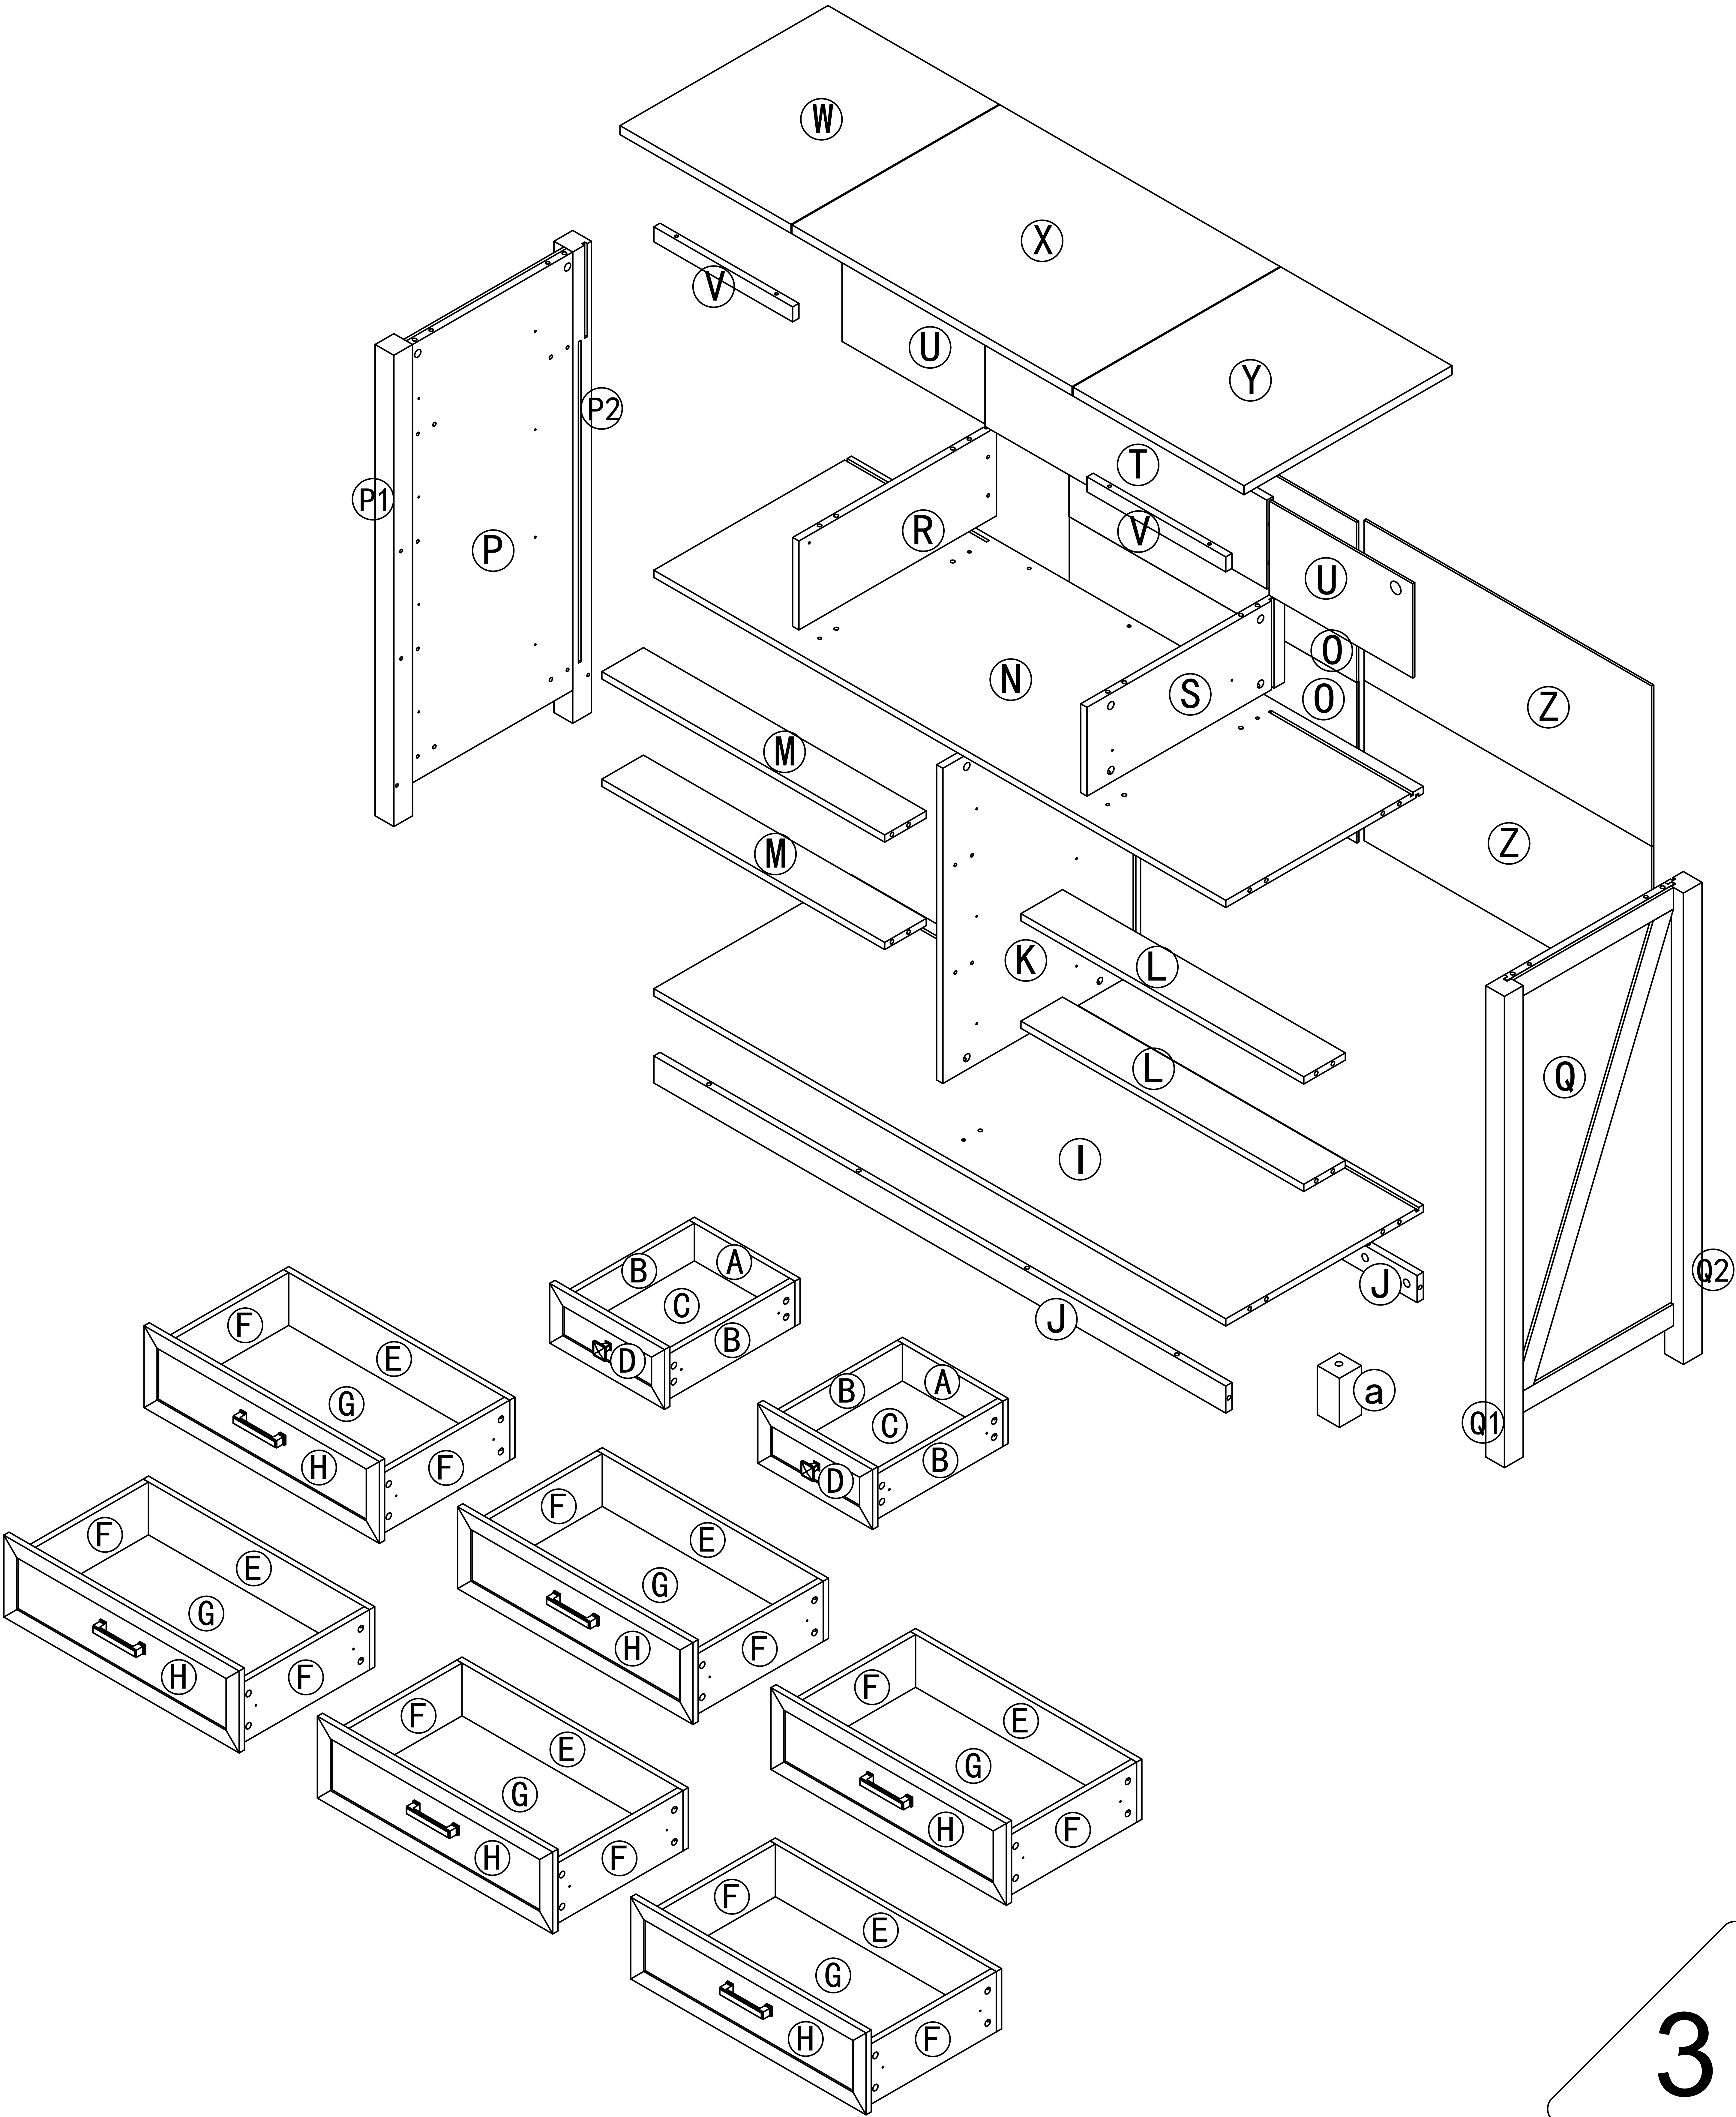


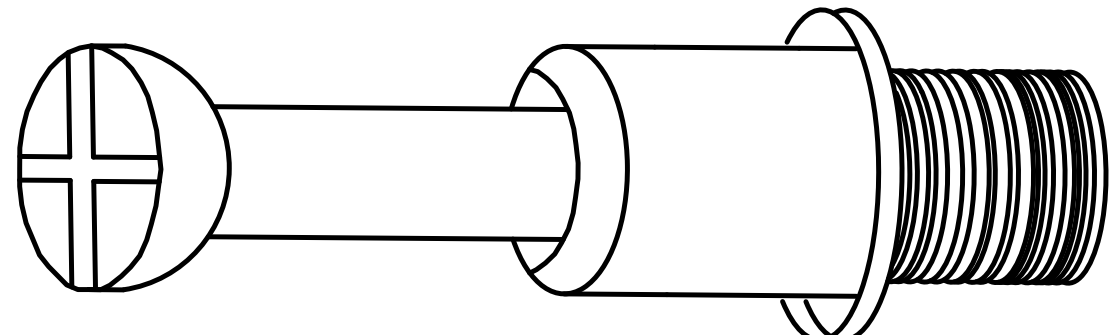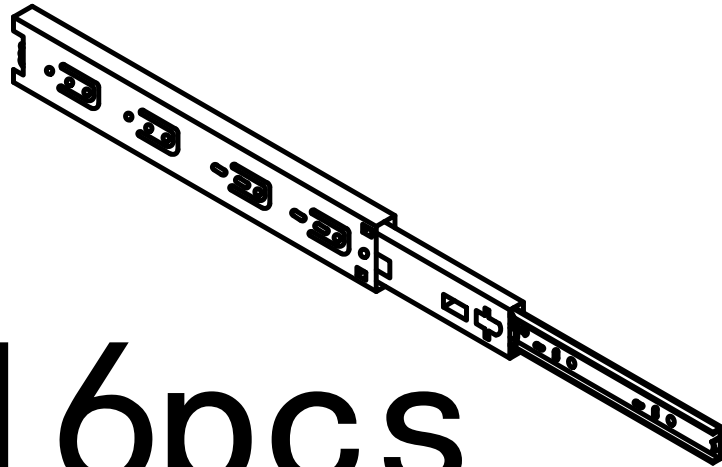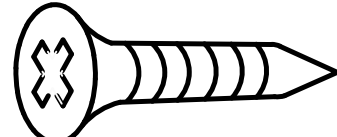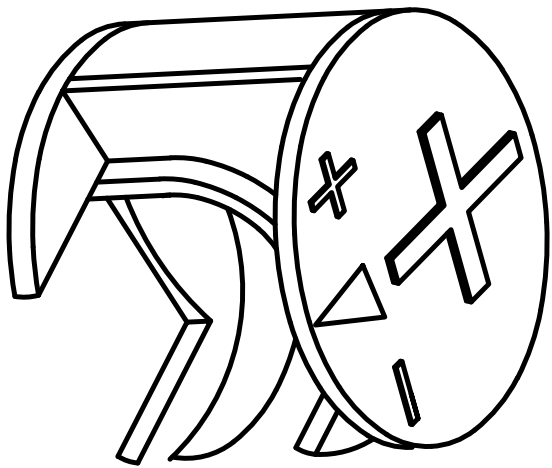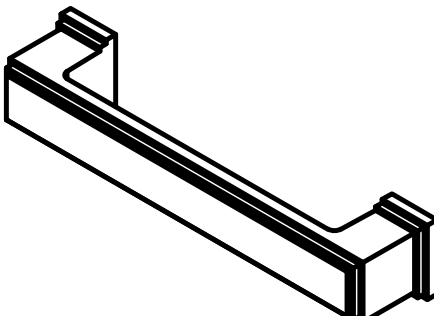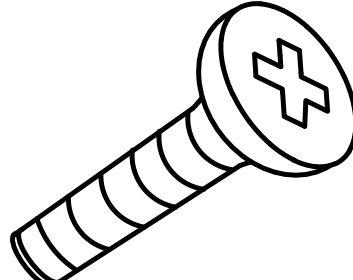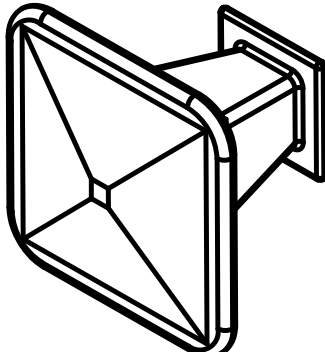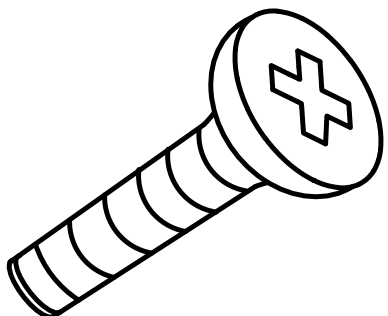1		64pcs	5		16pcs		32pcs
2		64pcs	8		6pcs		12pcs
4	 2pcs	 2pcs					

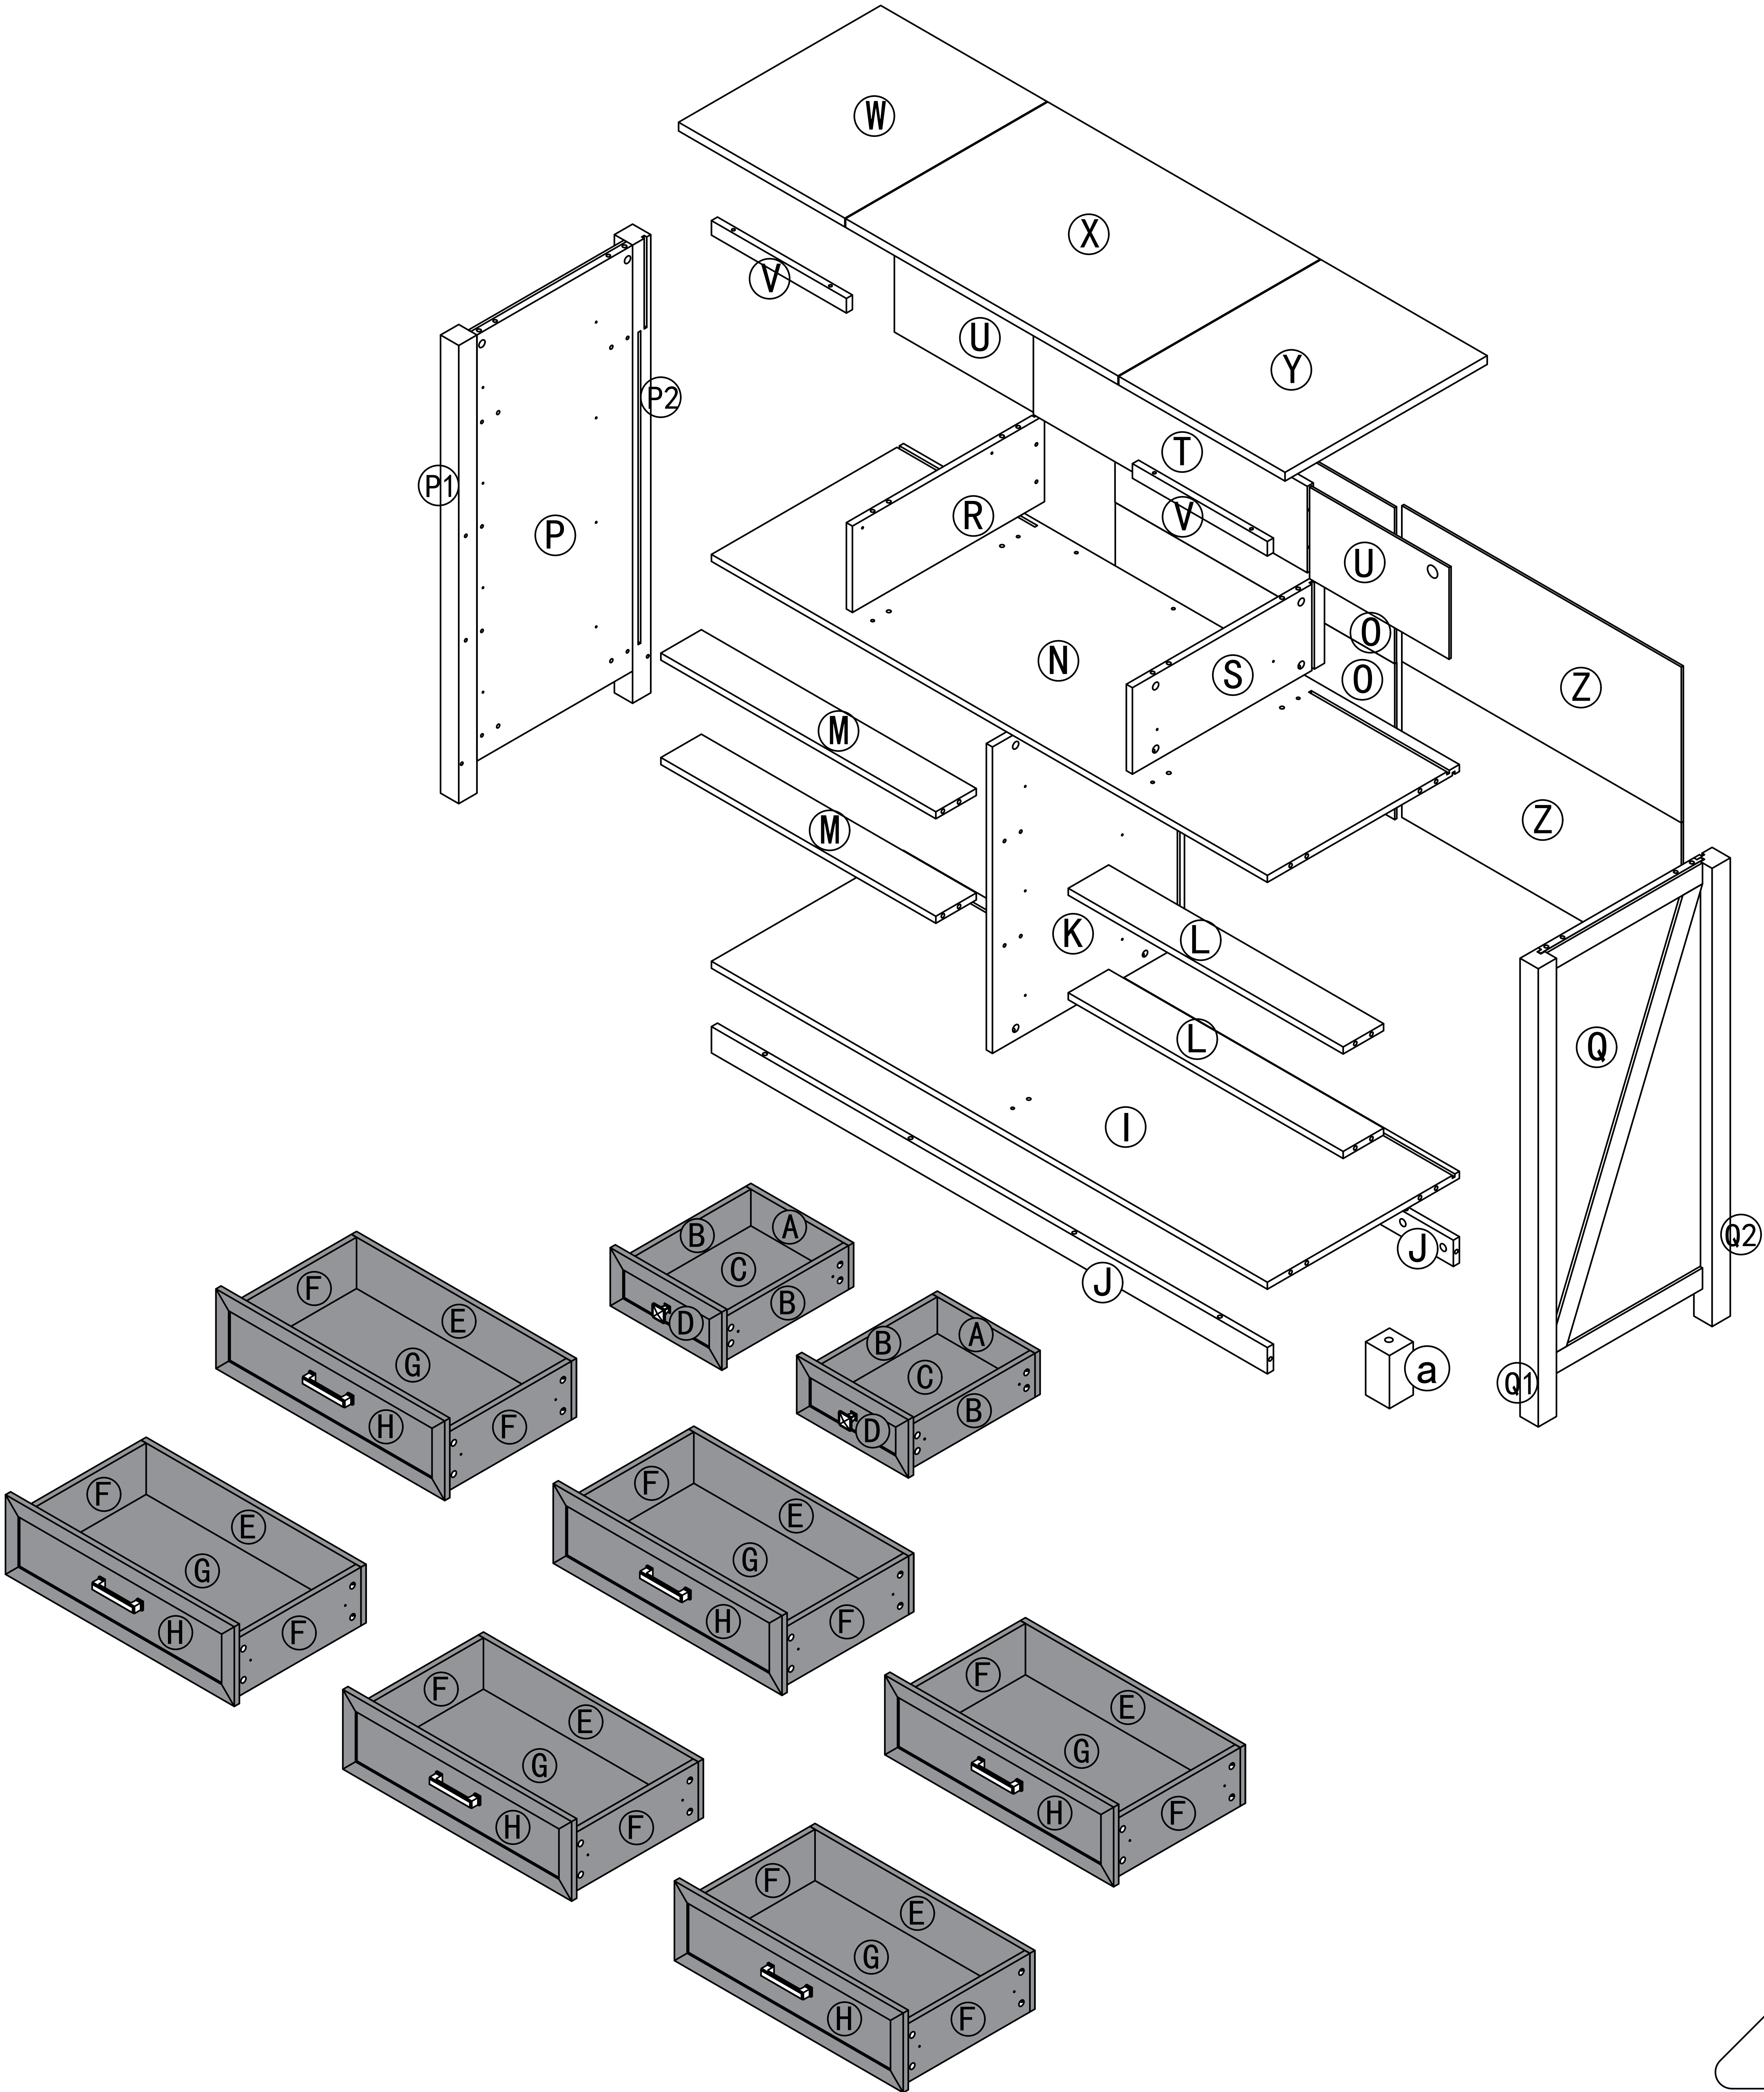


Use parts ① and ②




Step1

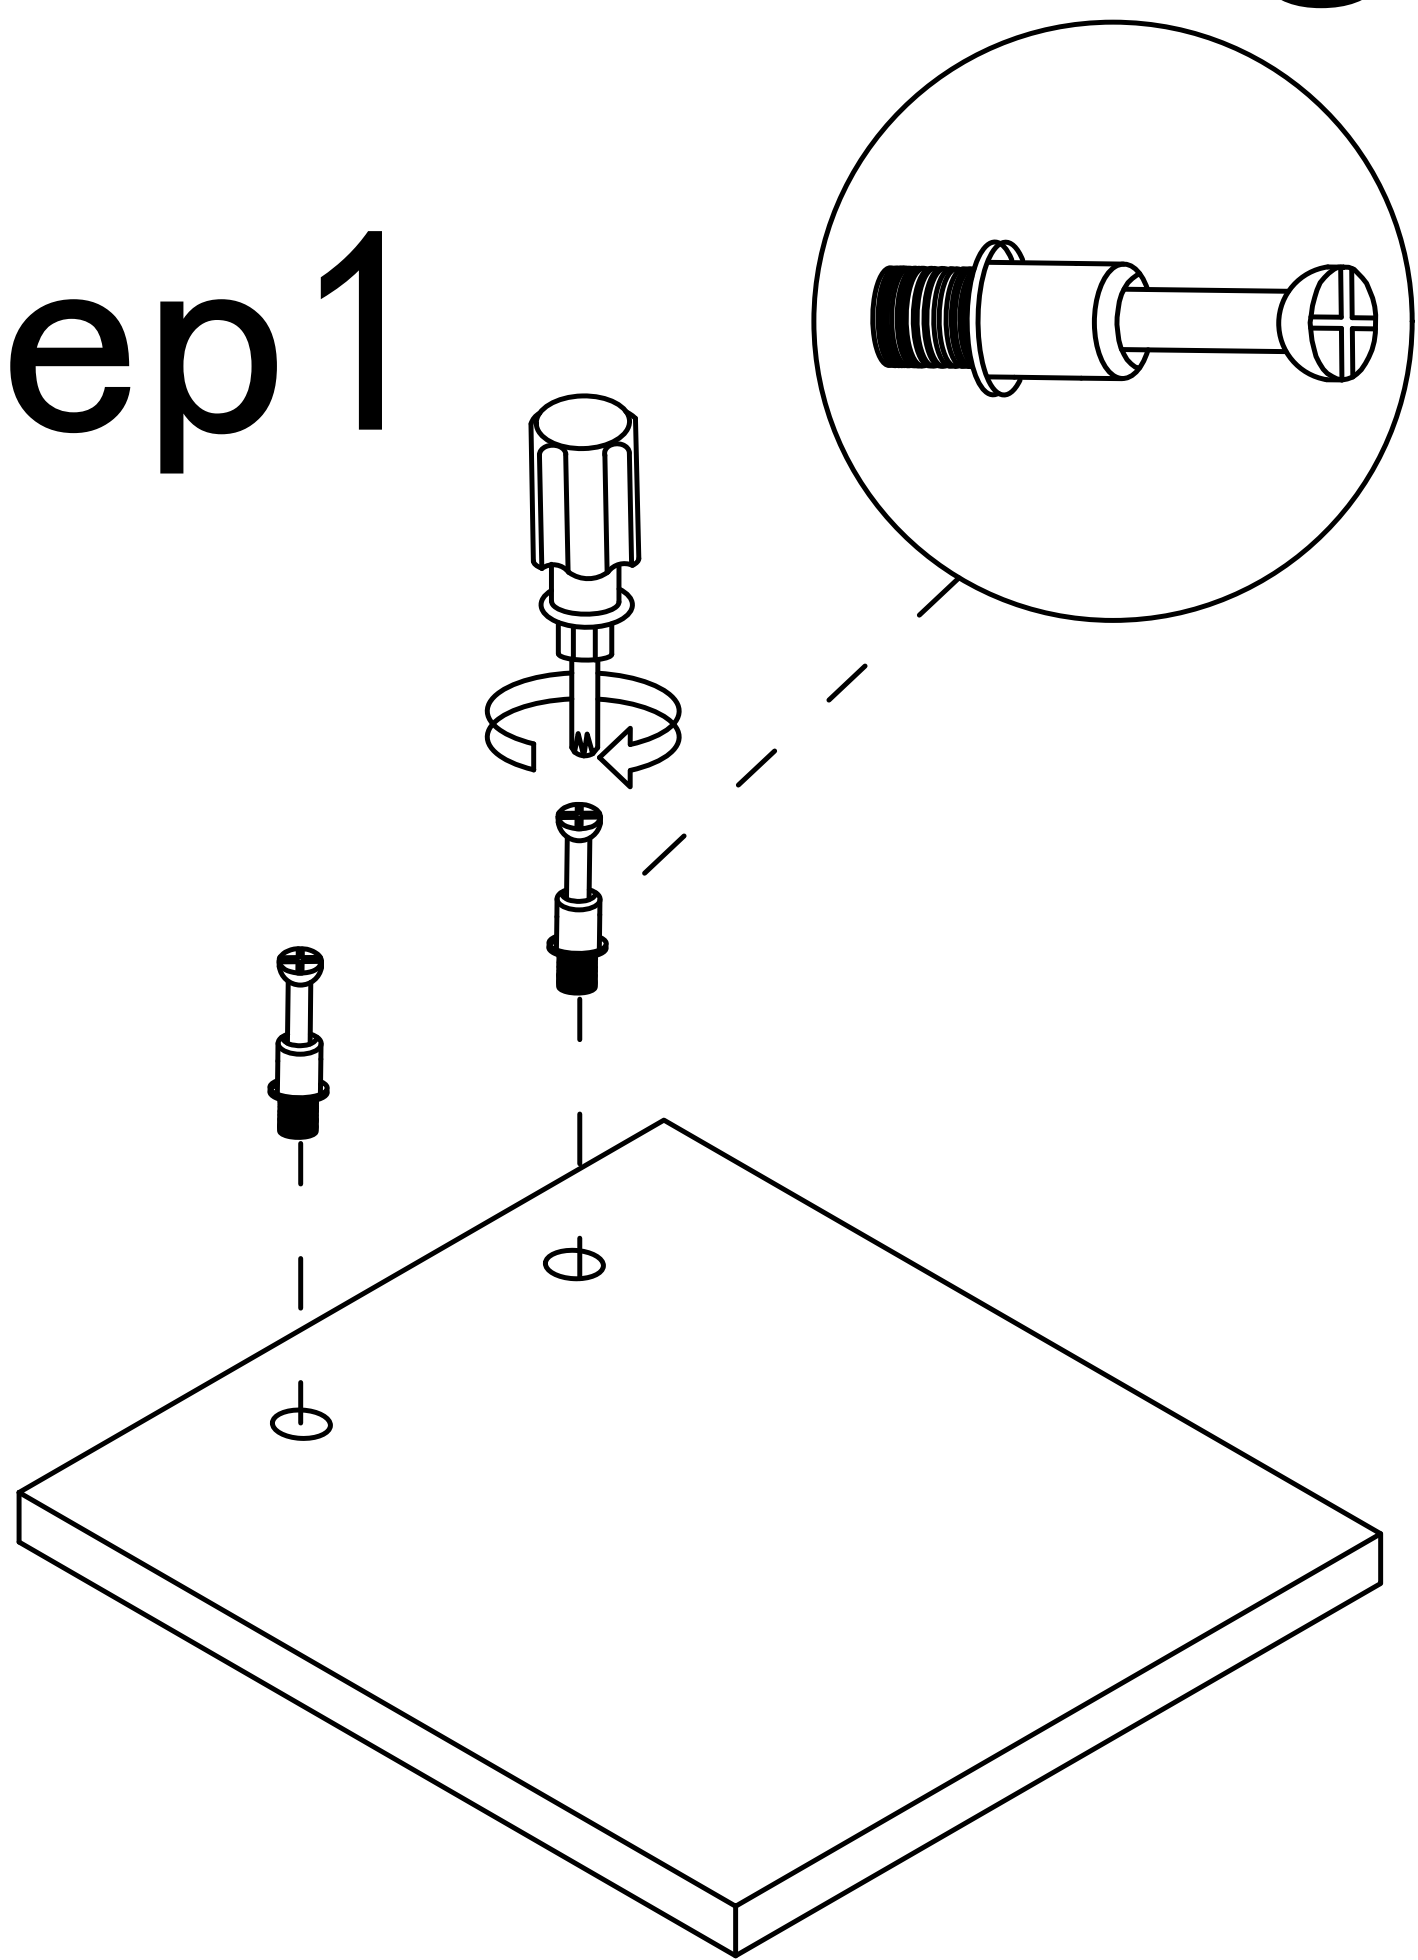

Step2

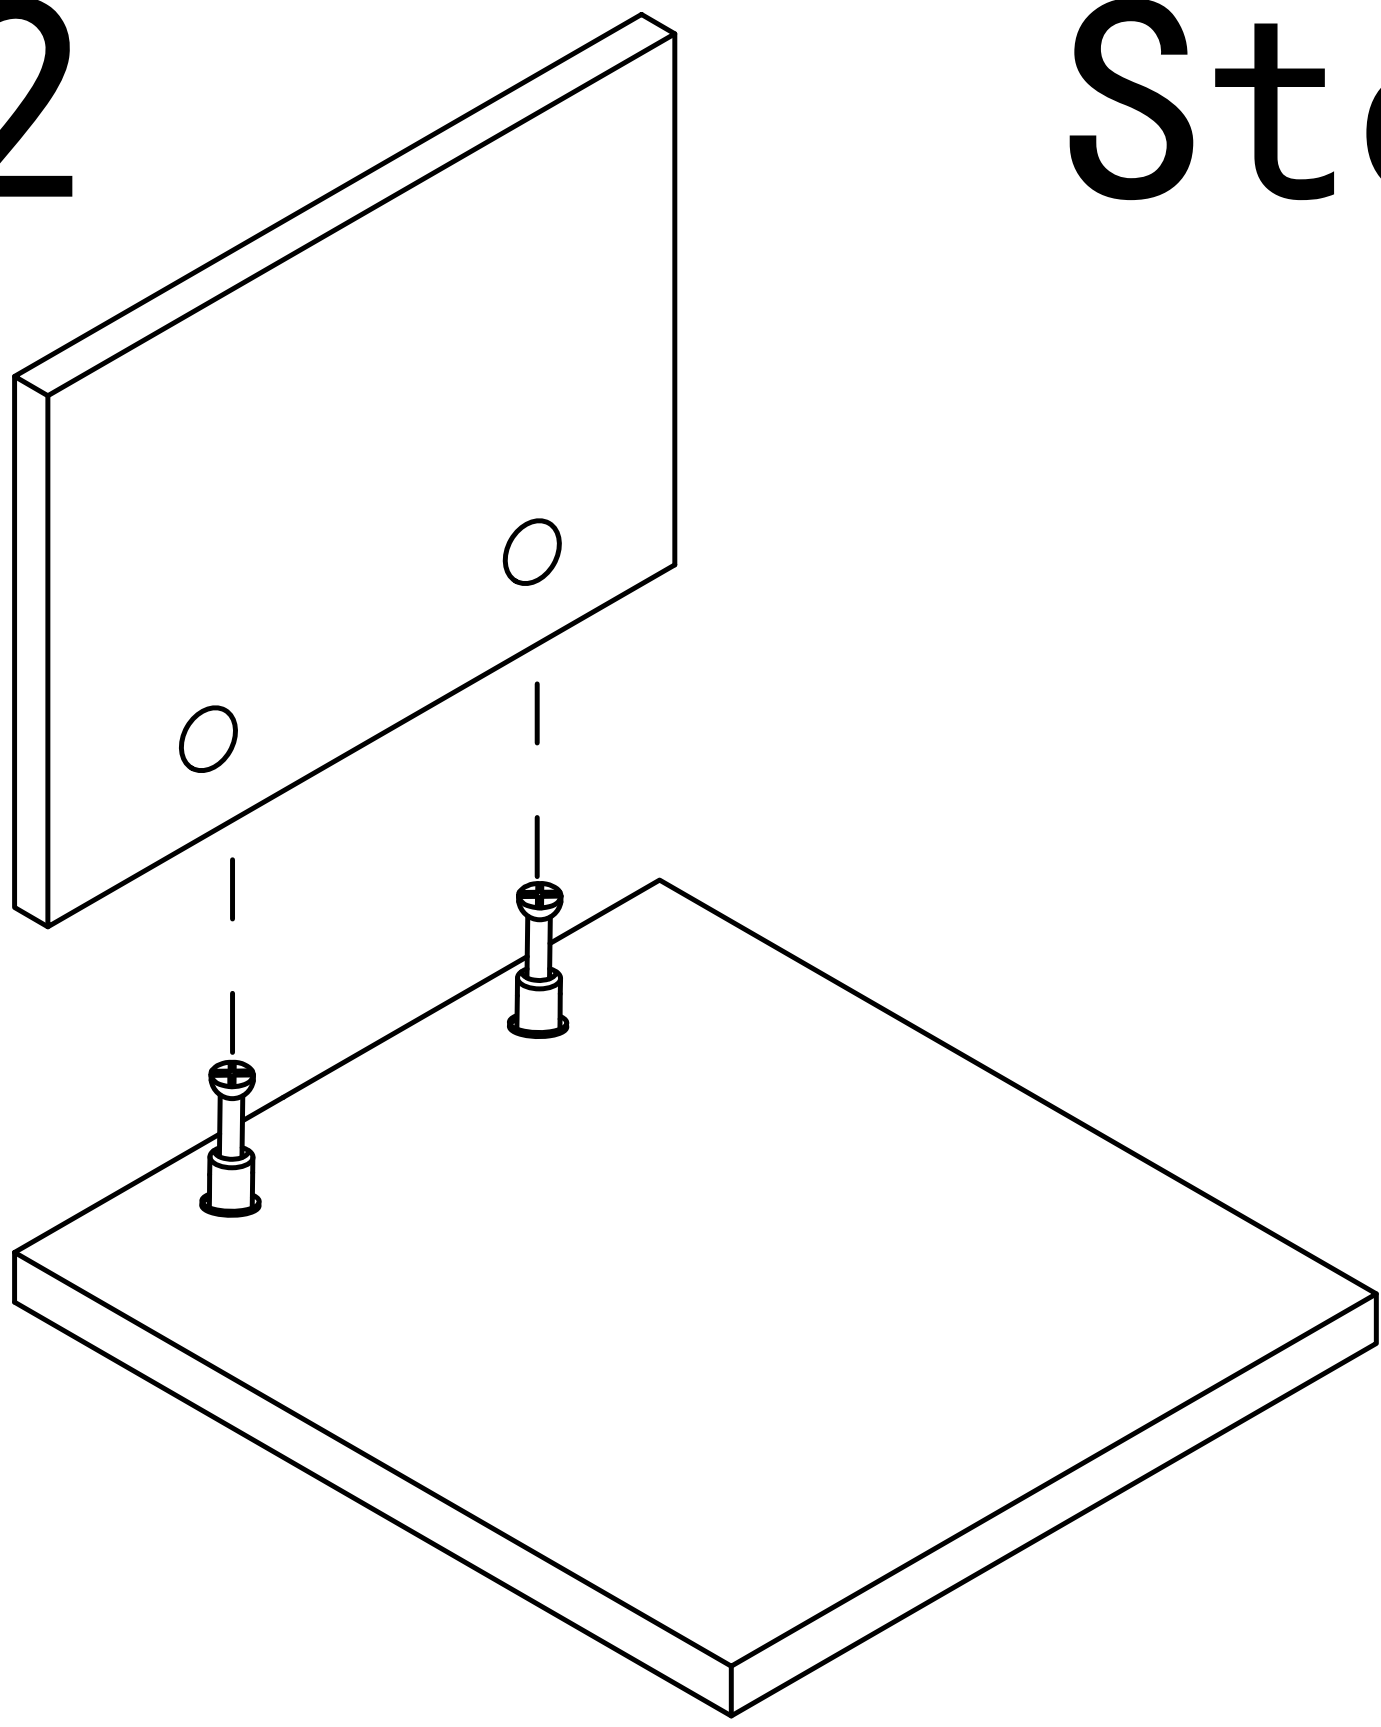


Step3

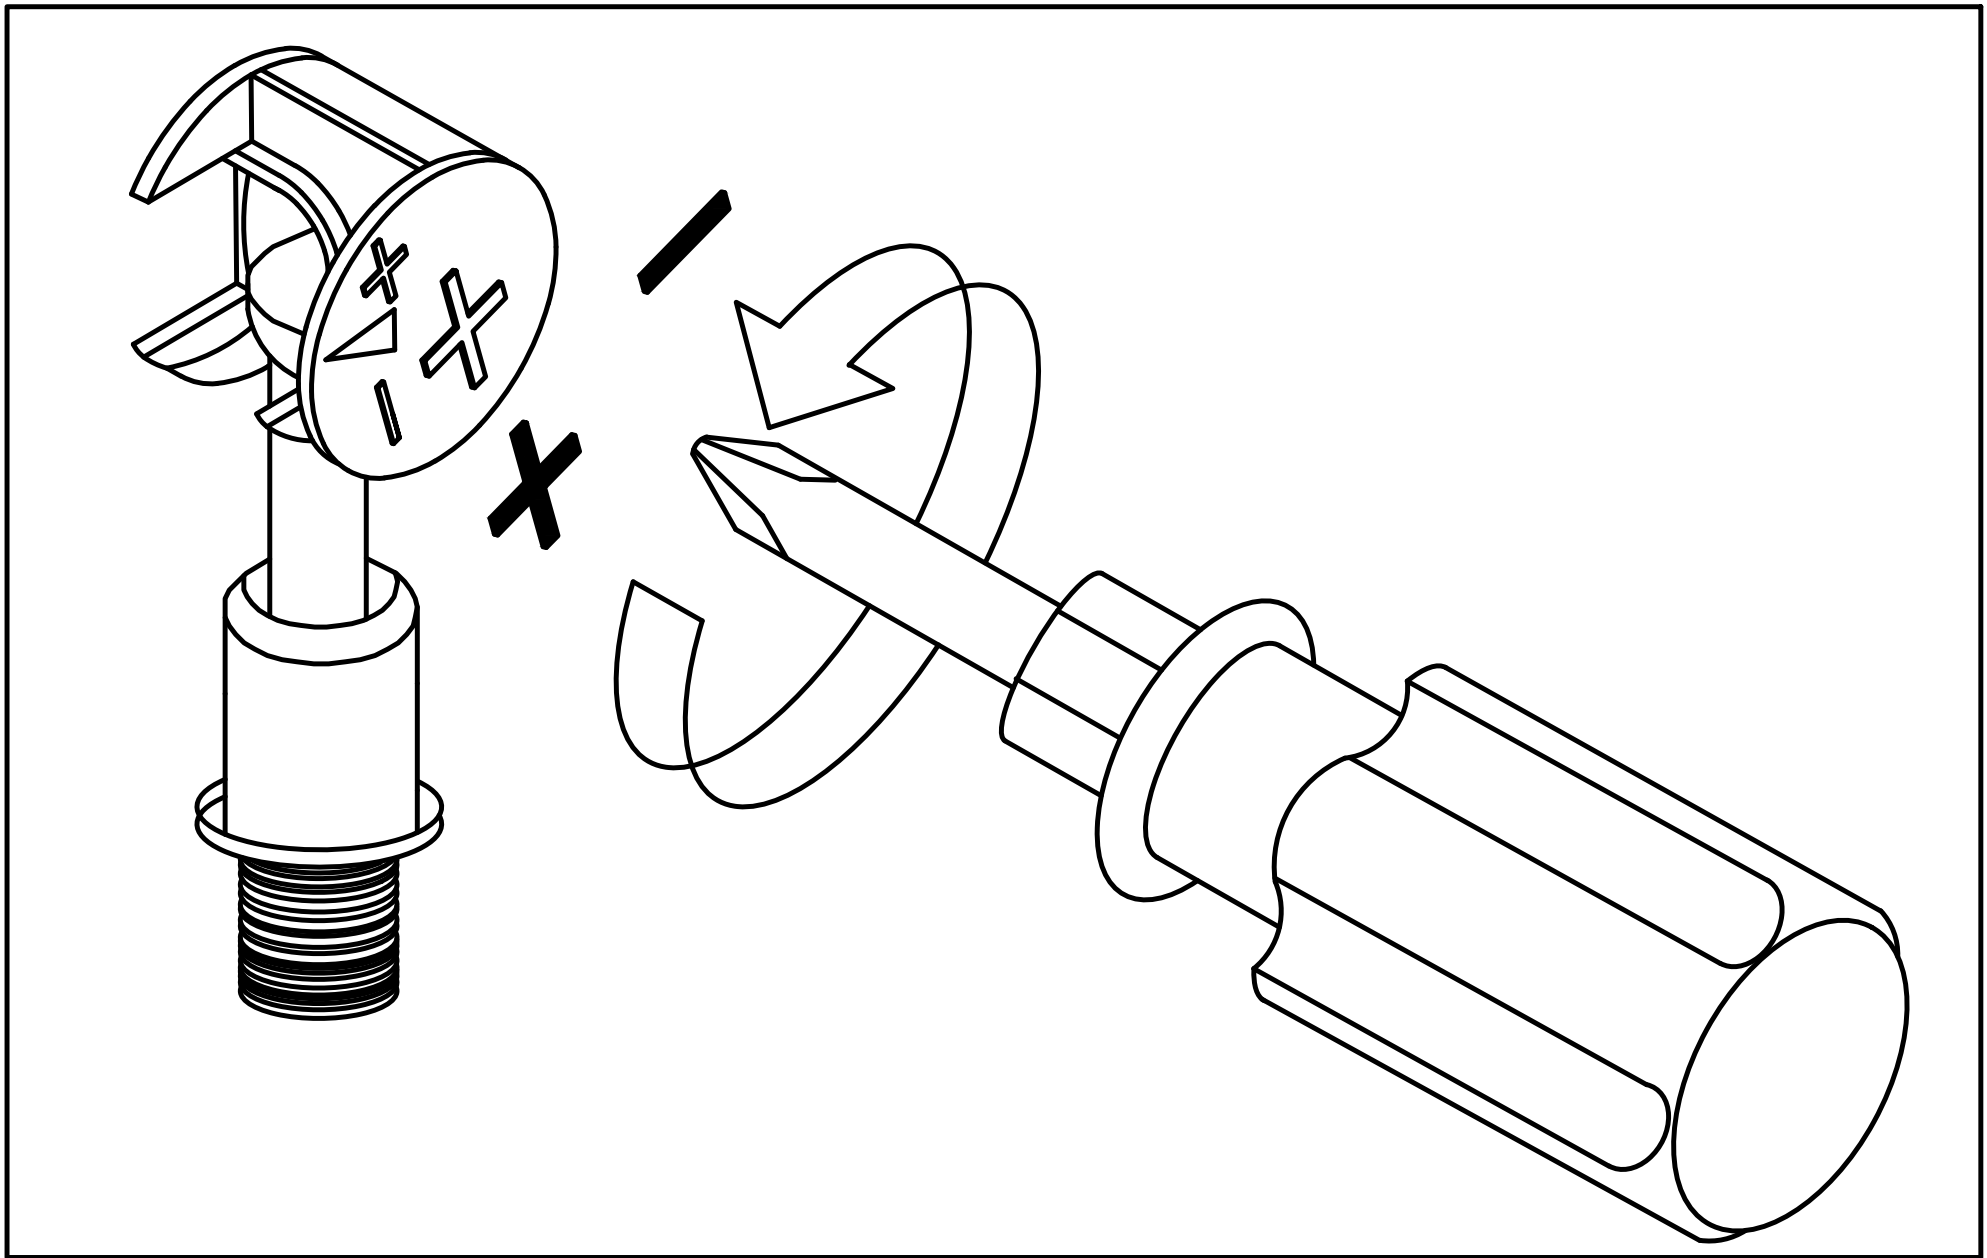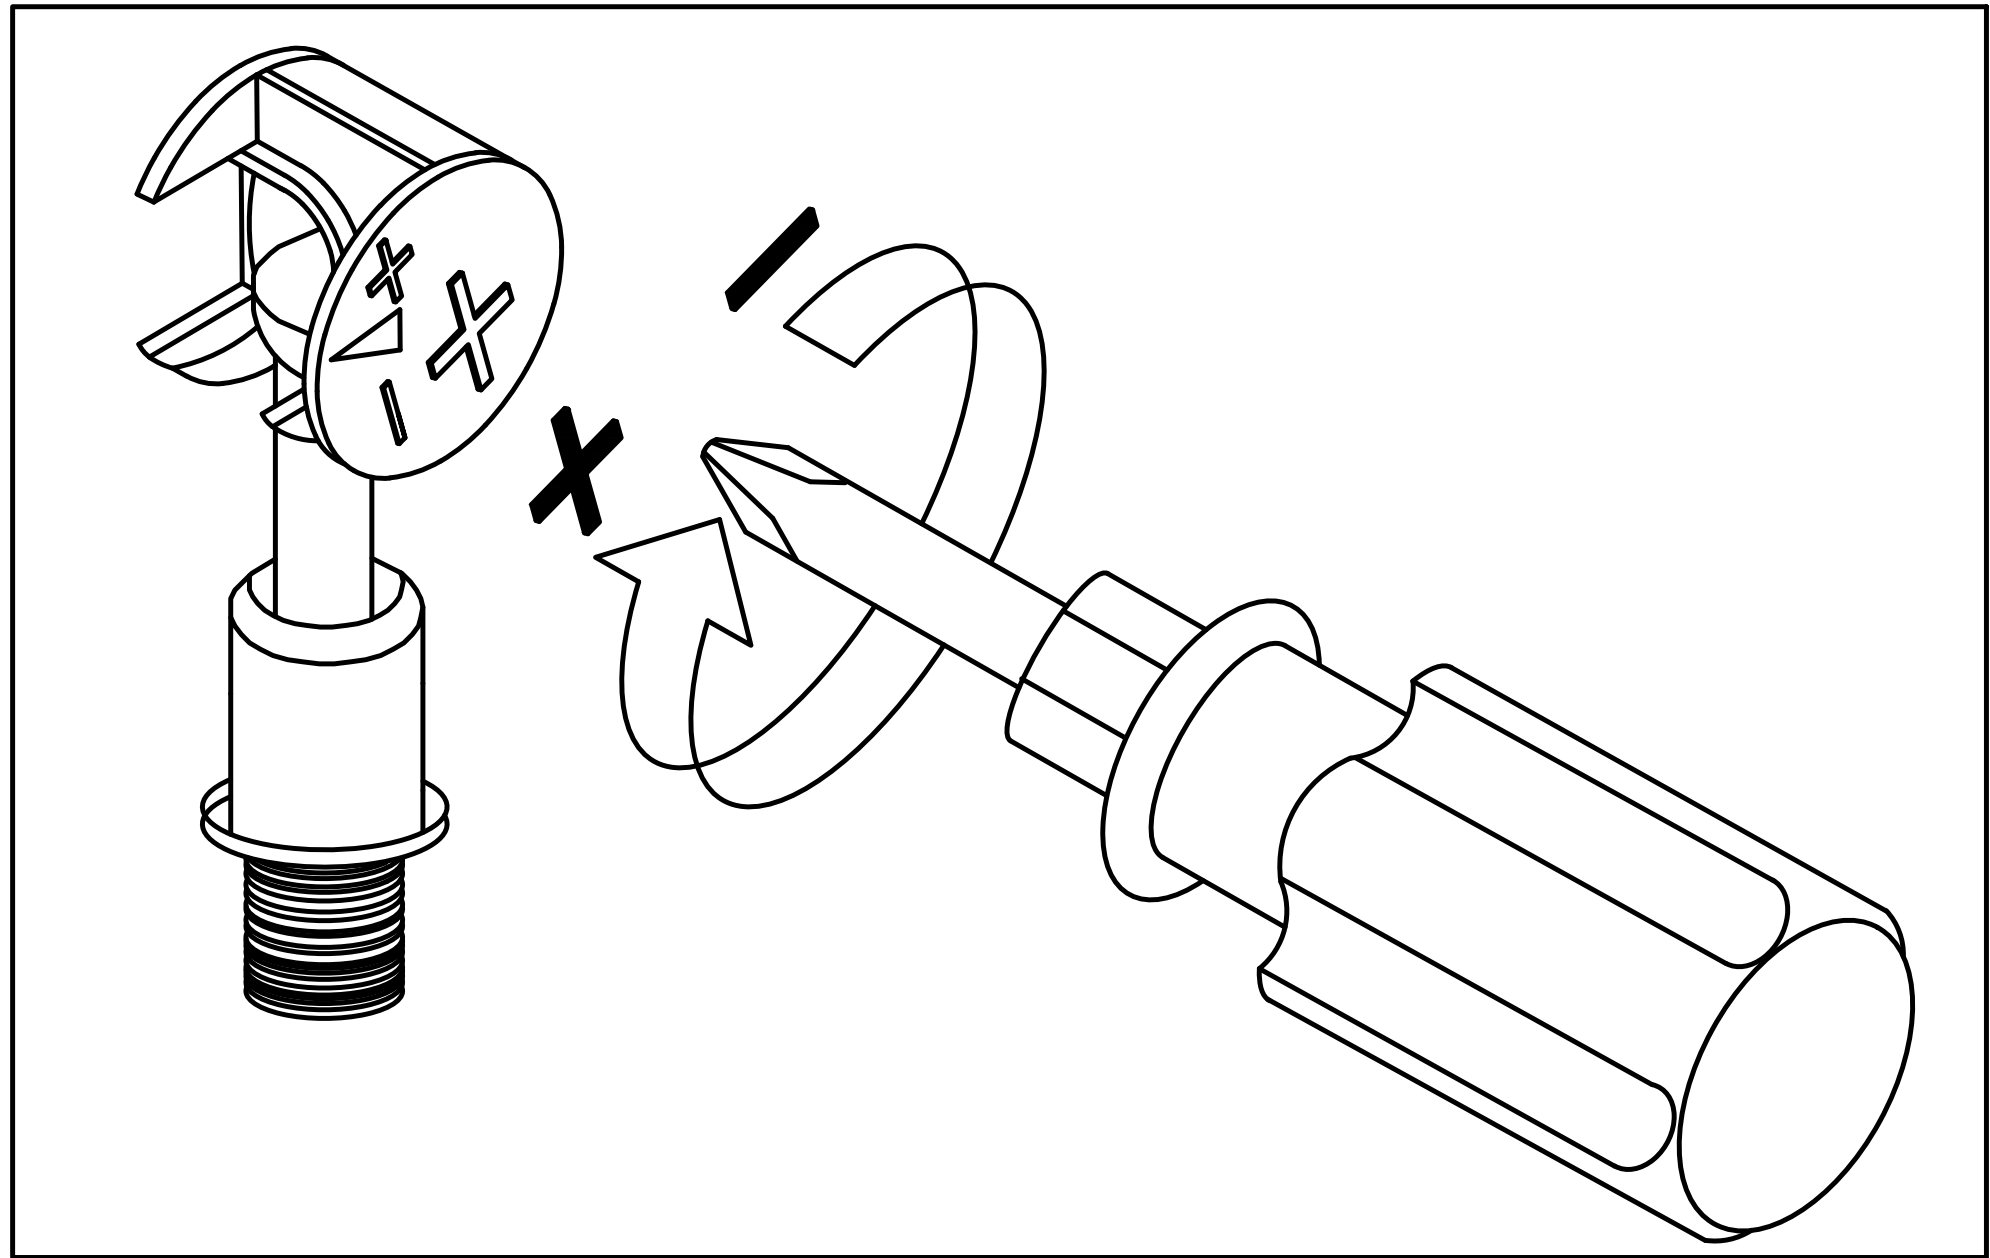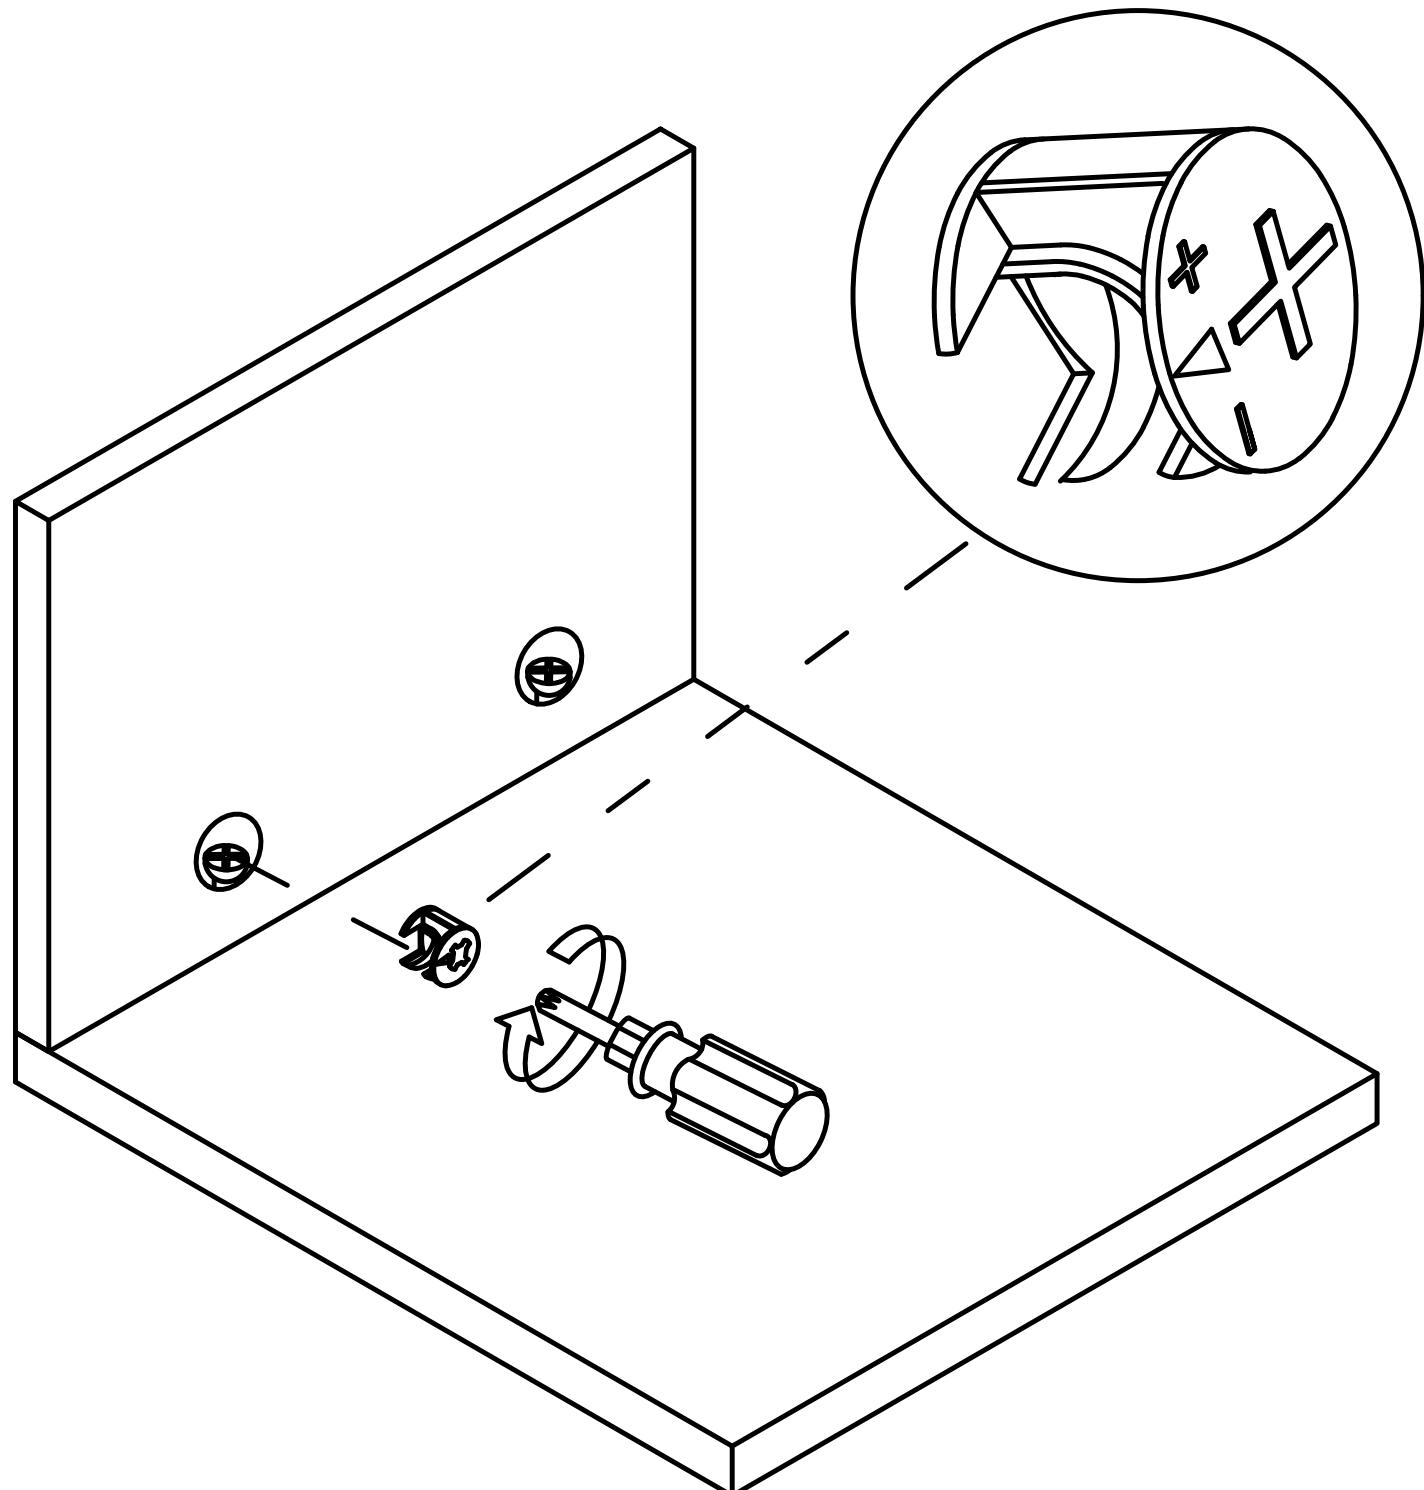


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

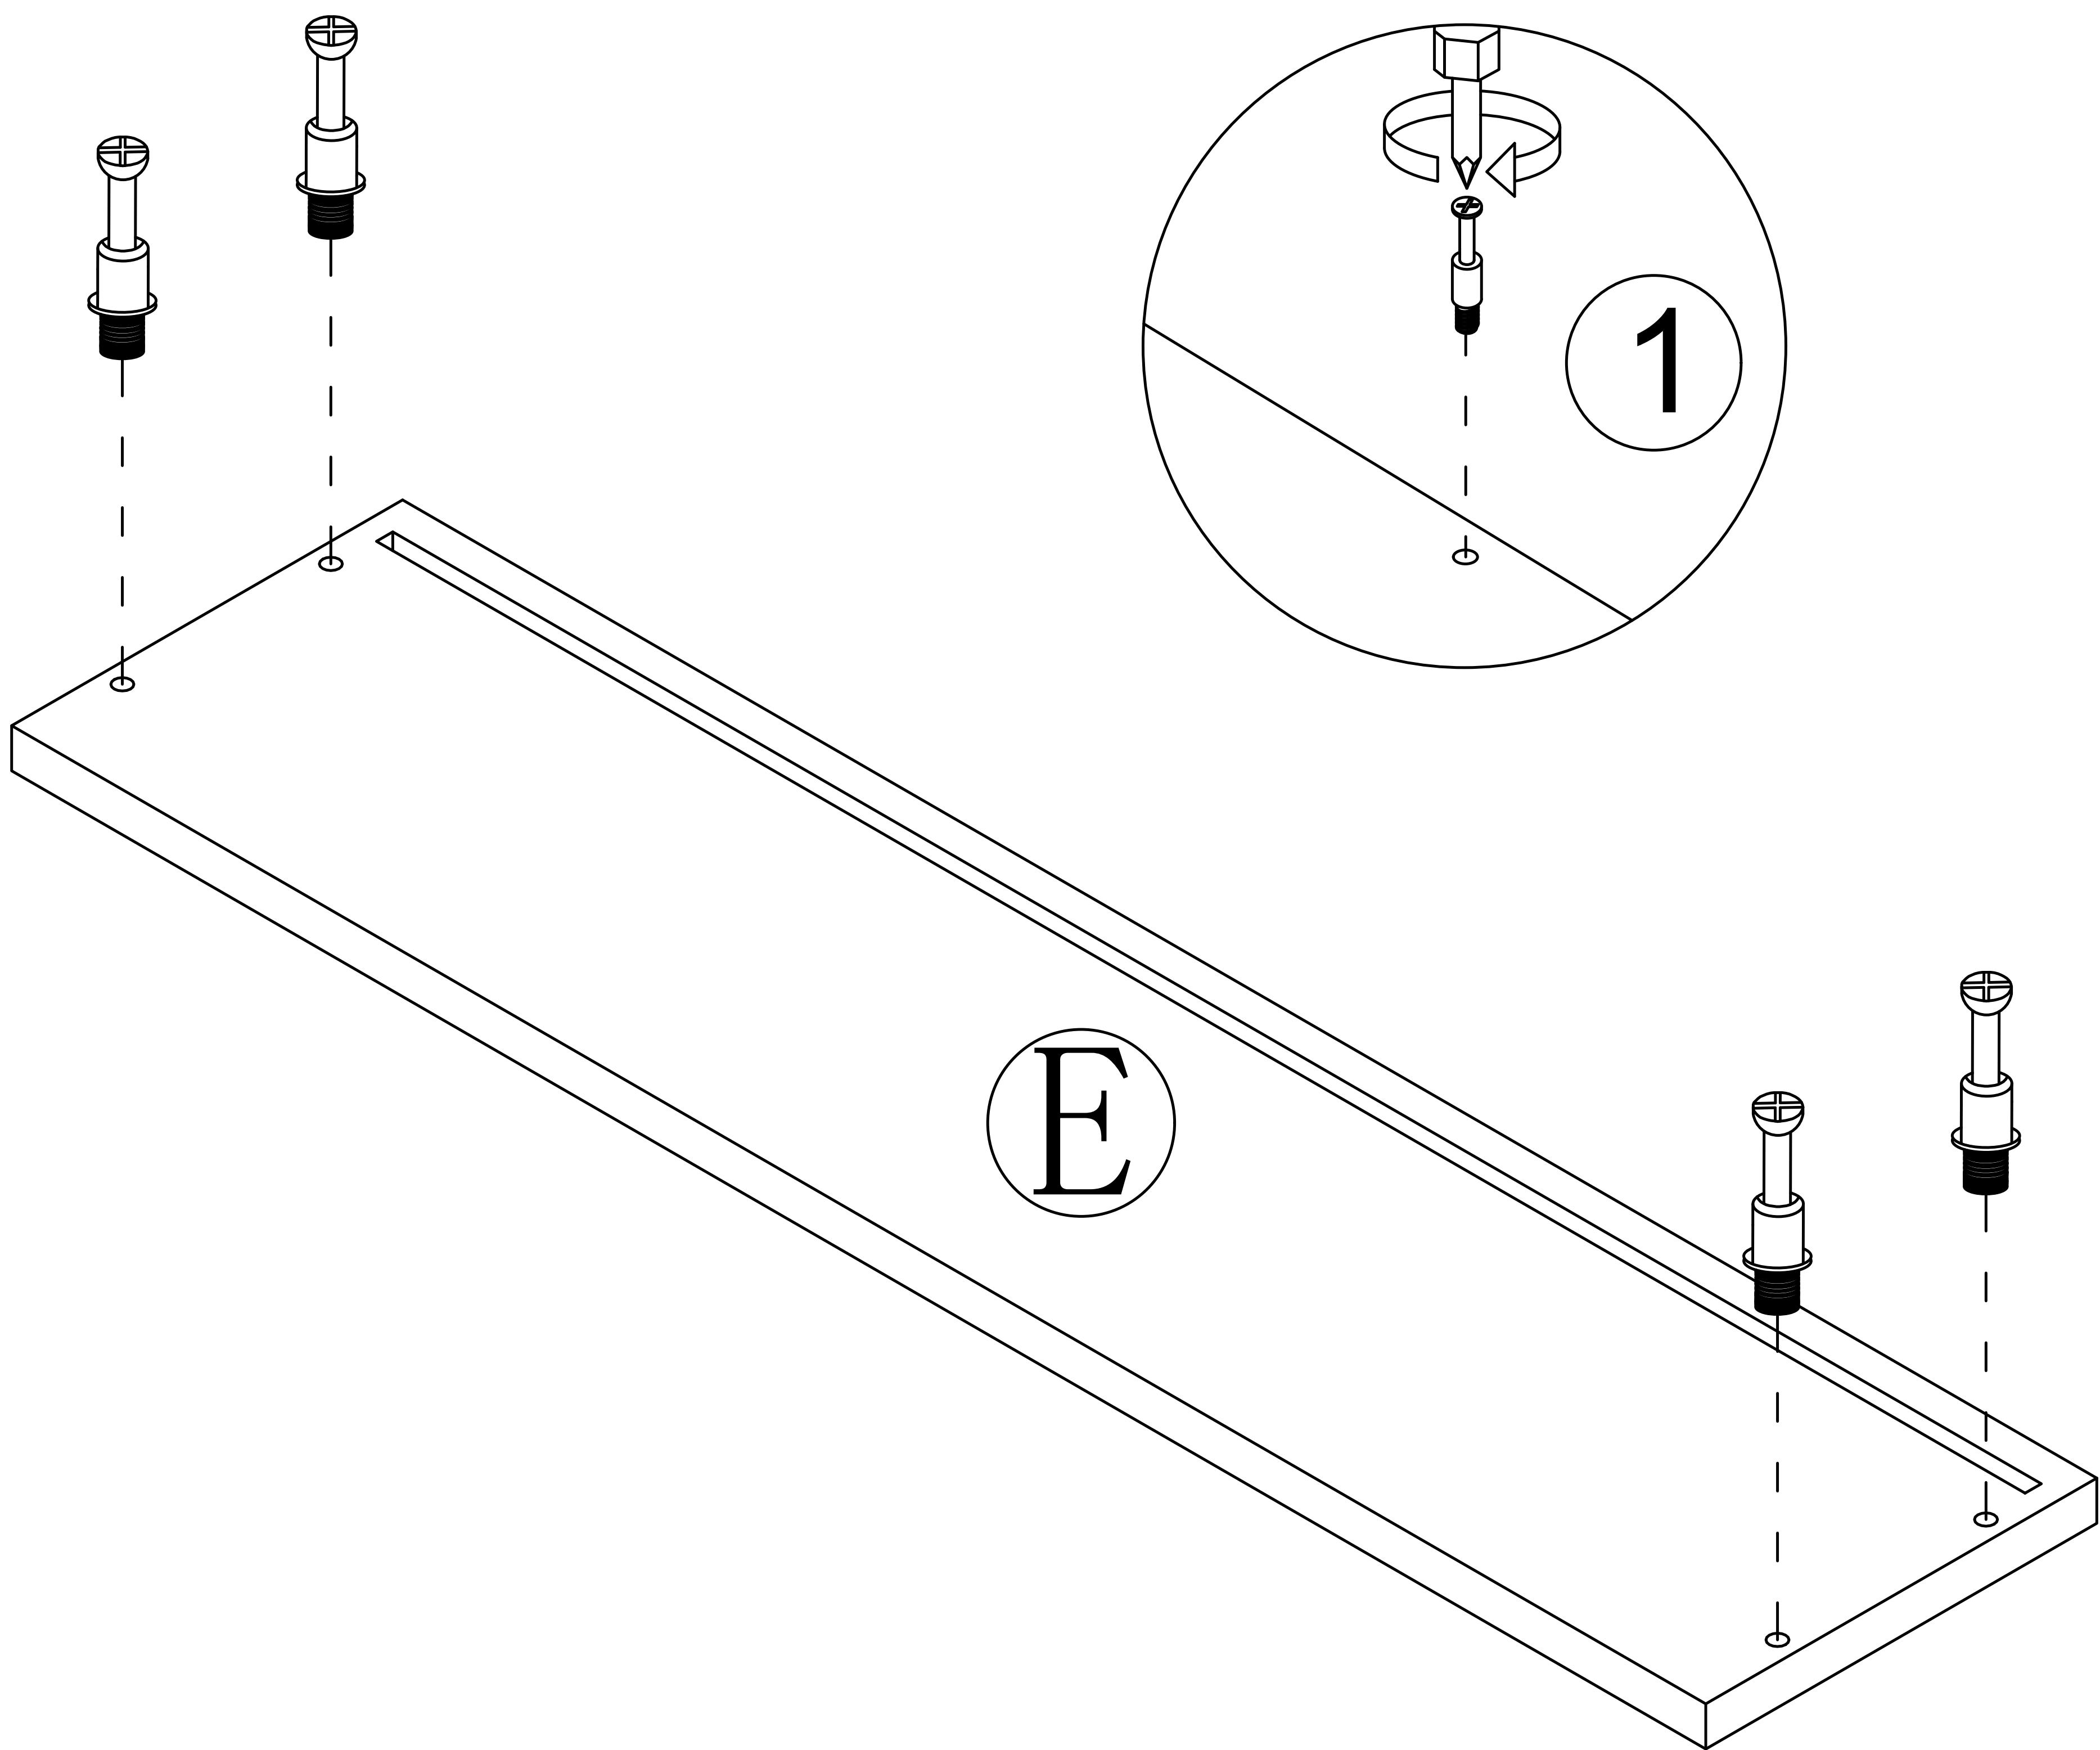


①

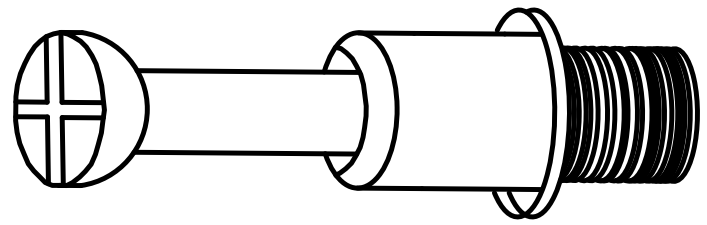


x4


Step 2



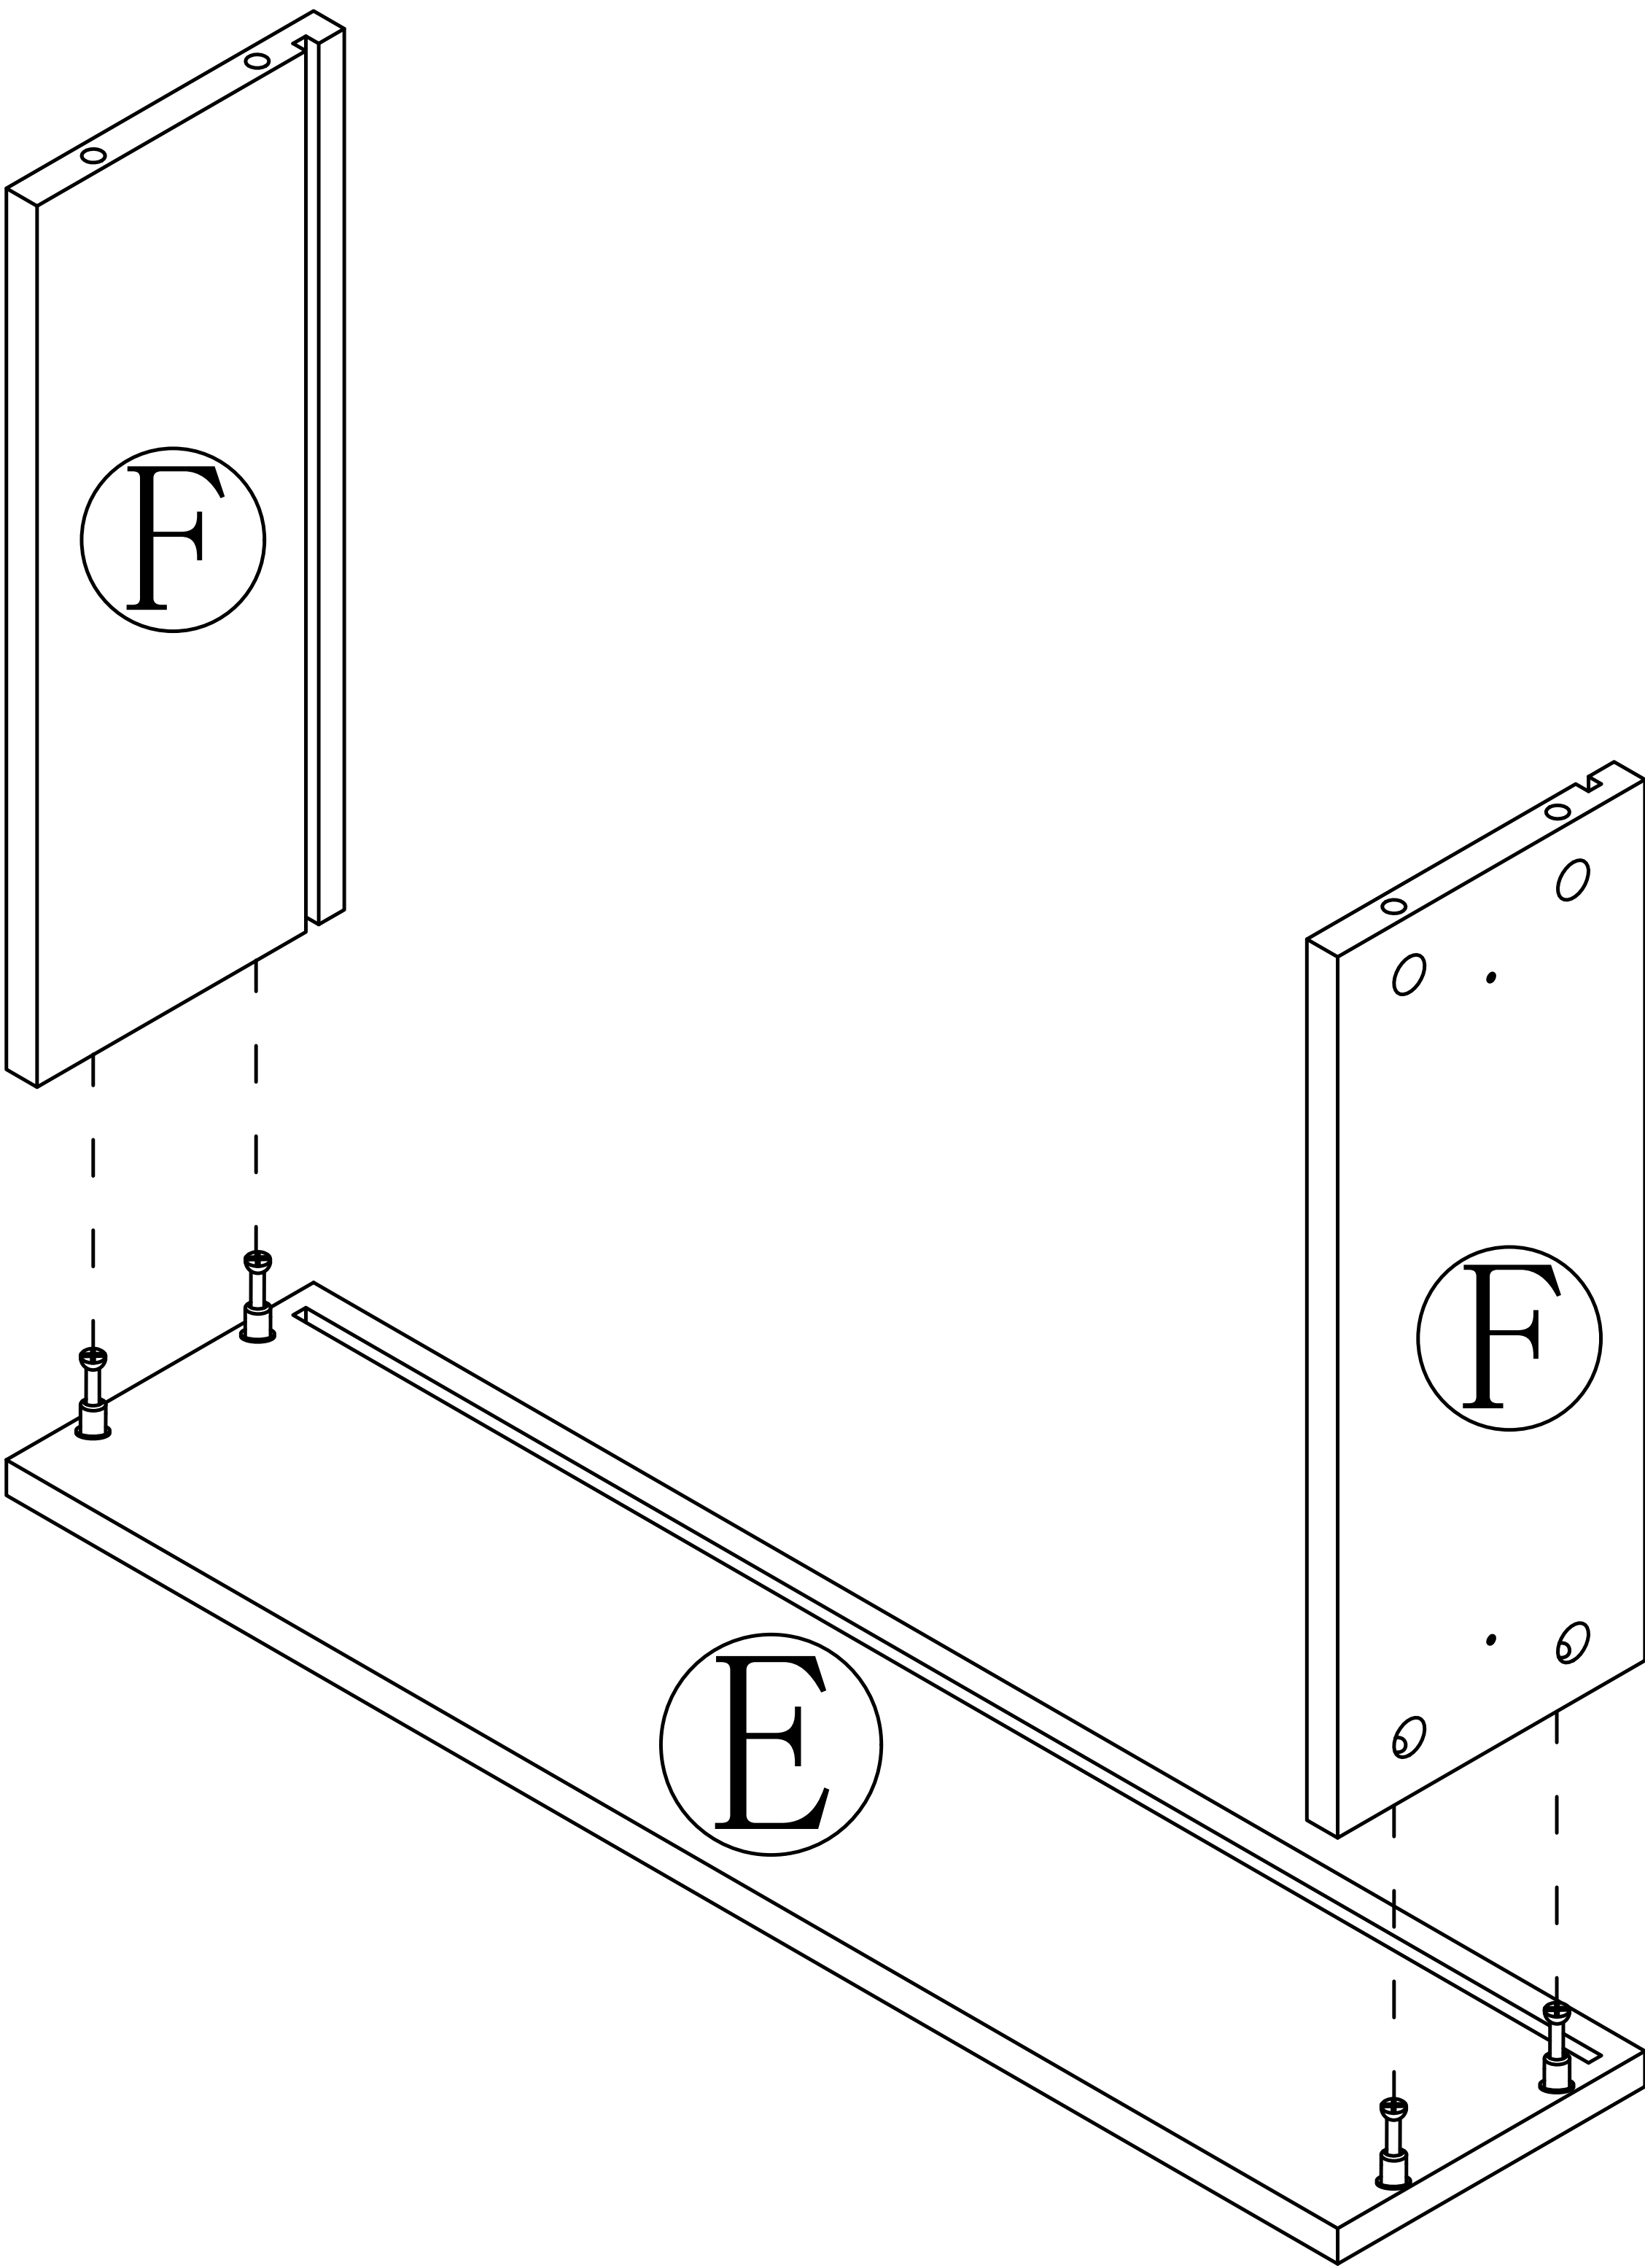


Step 3

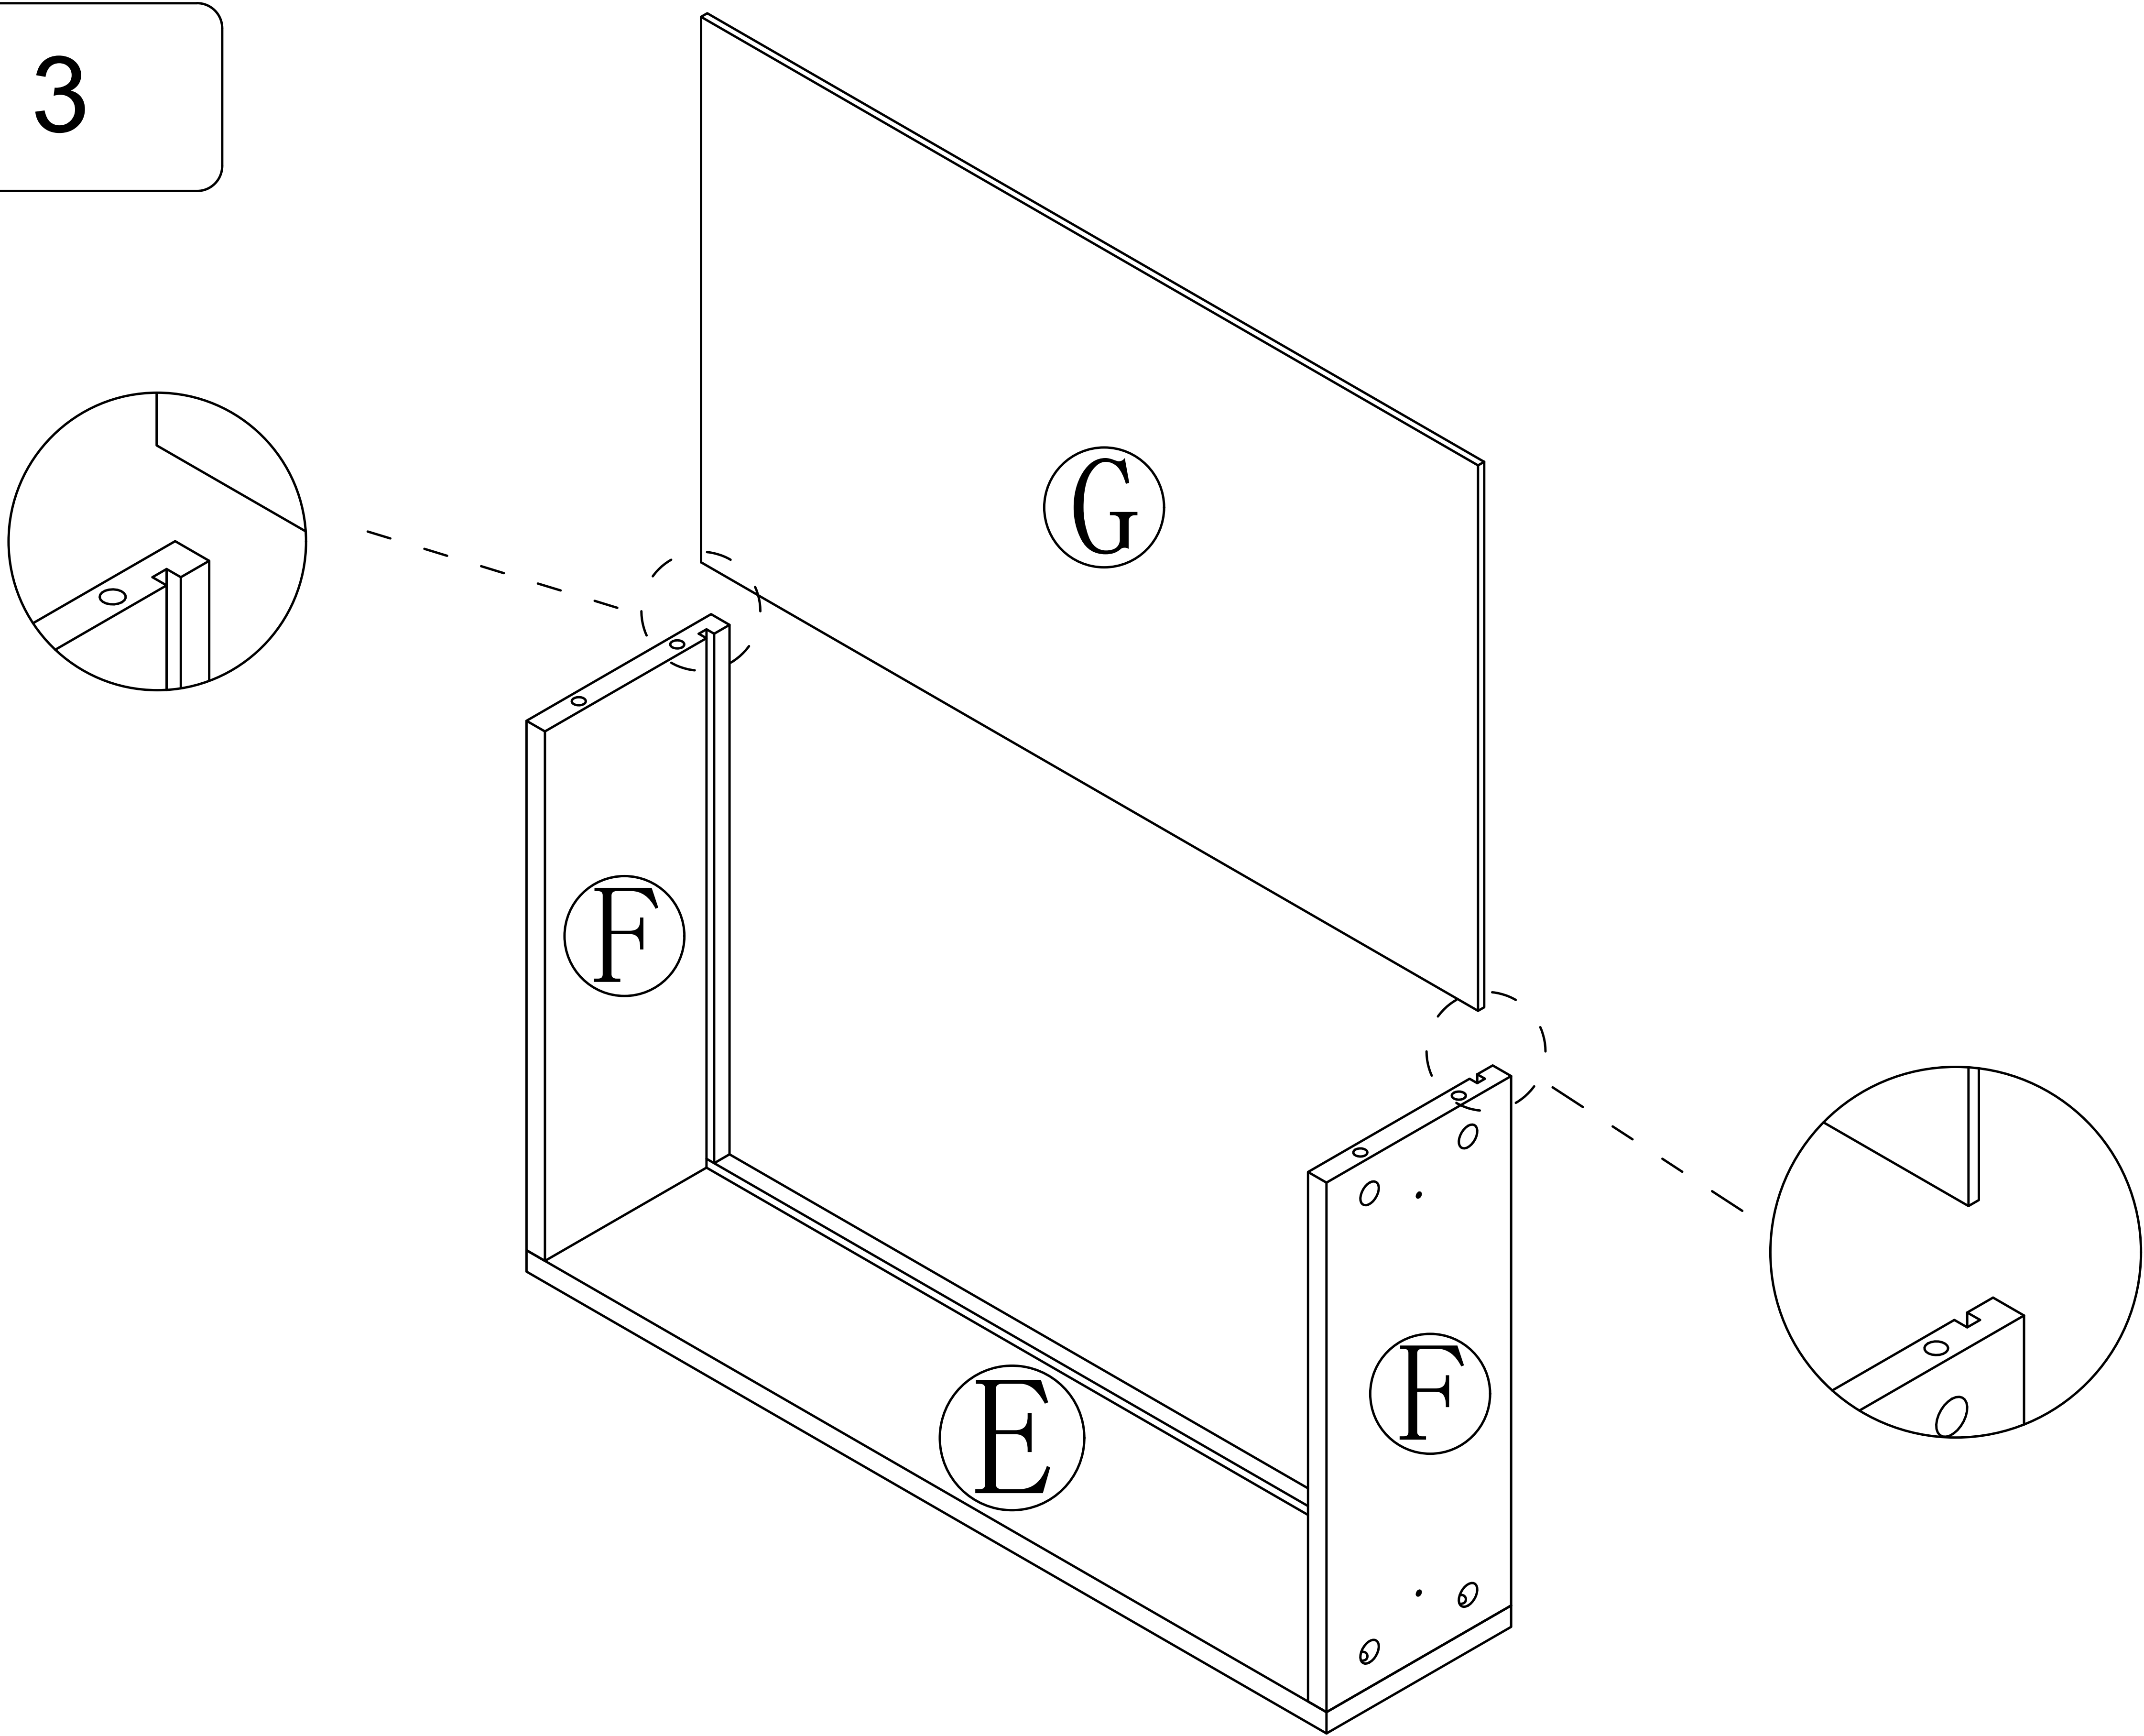



Step 4

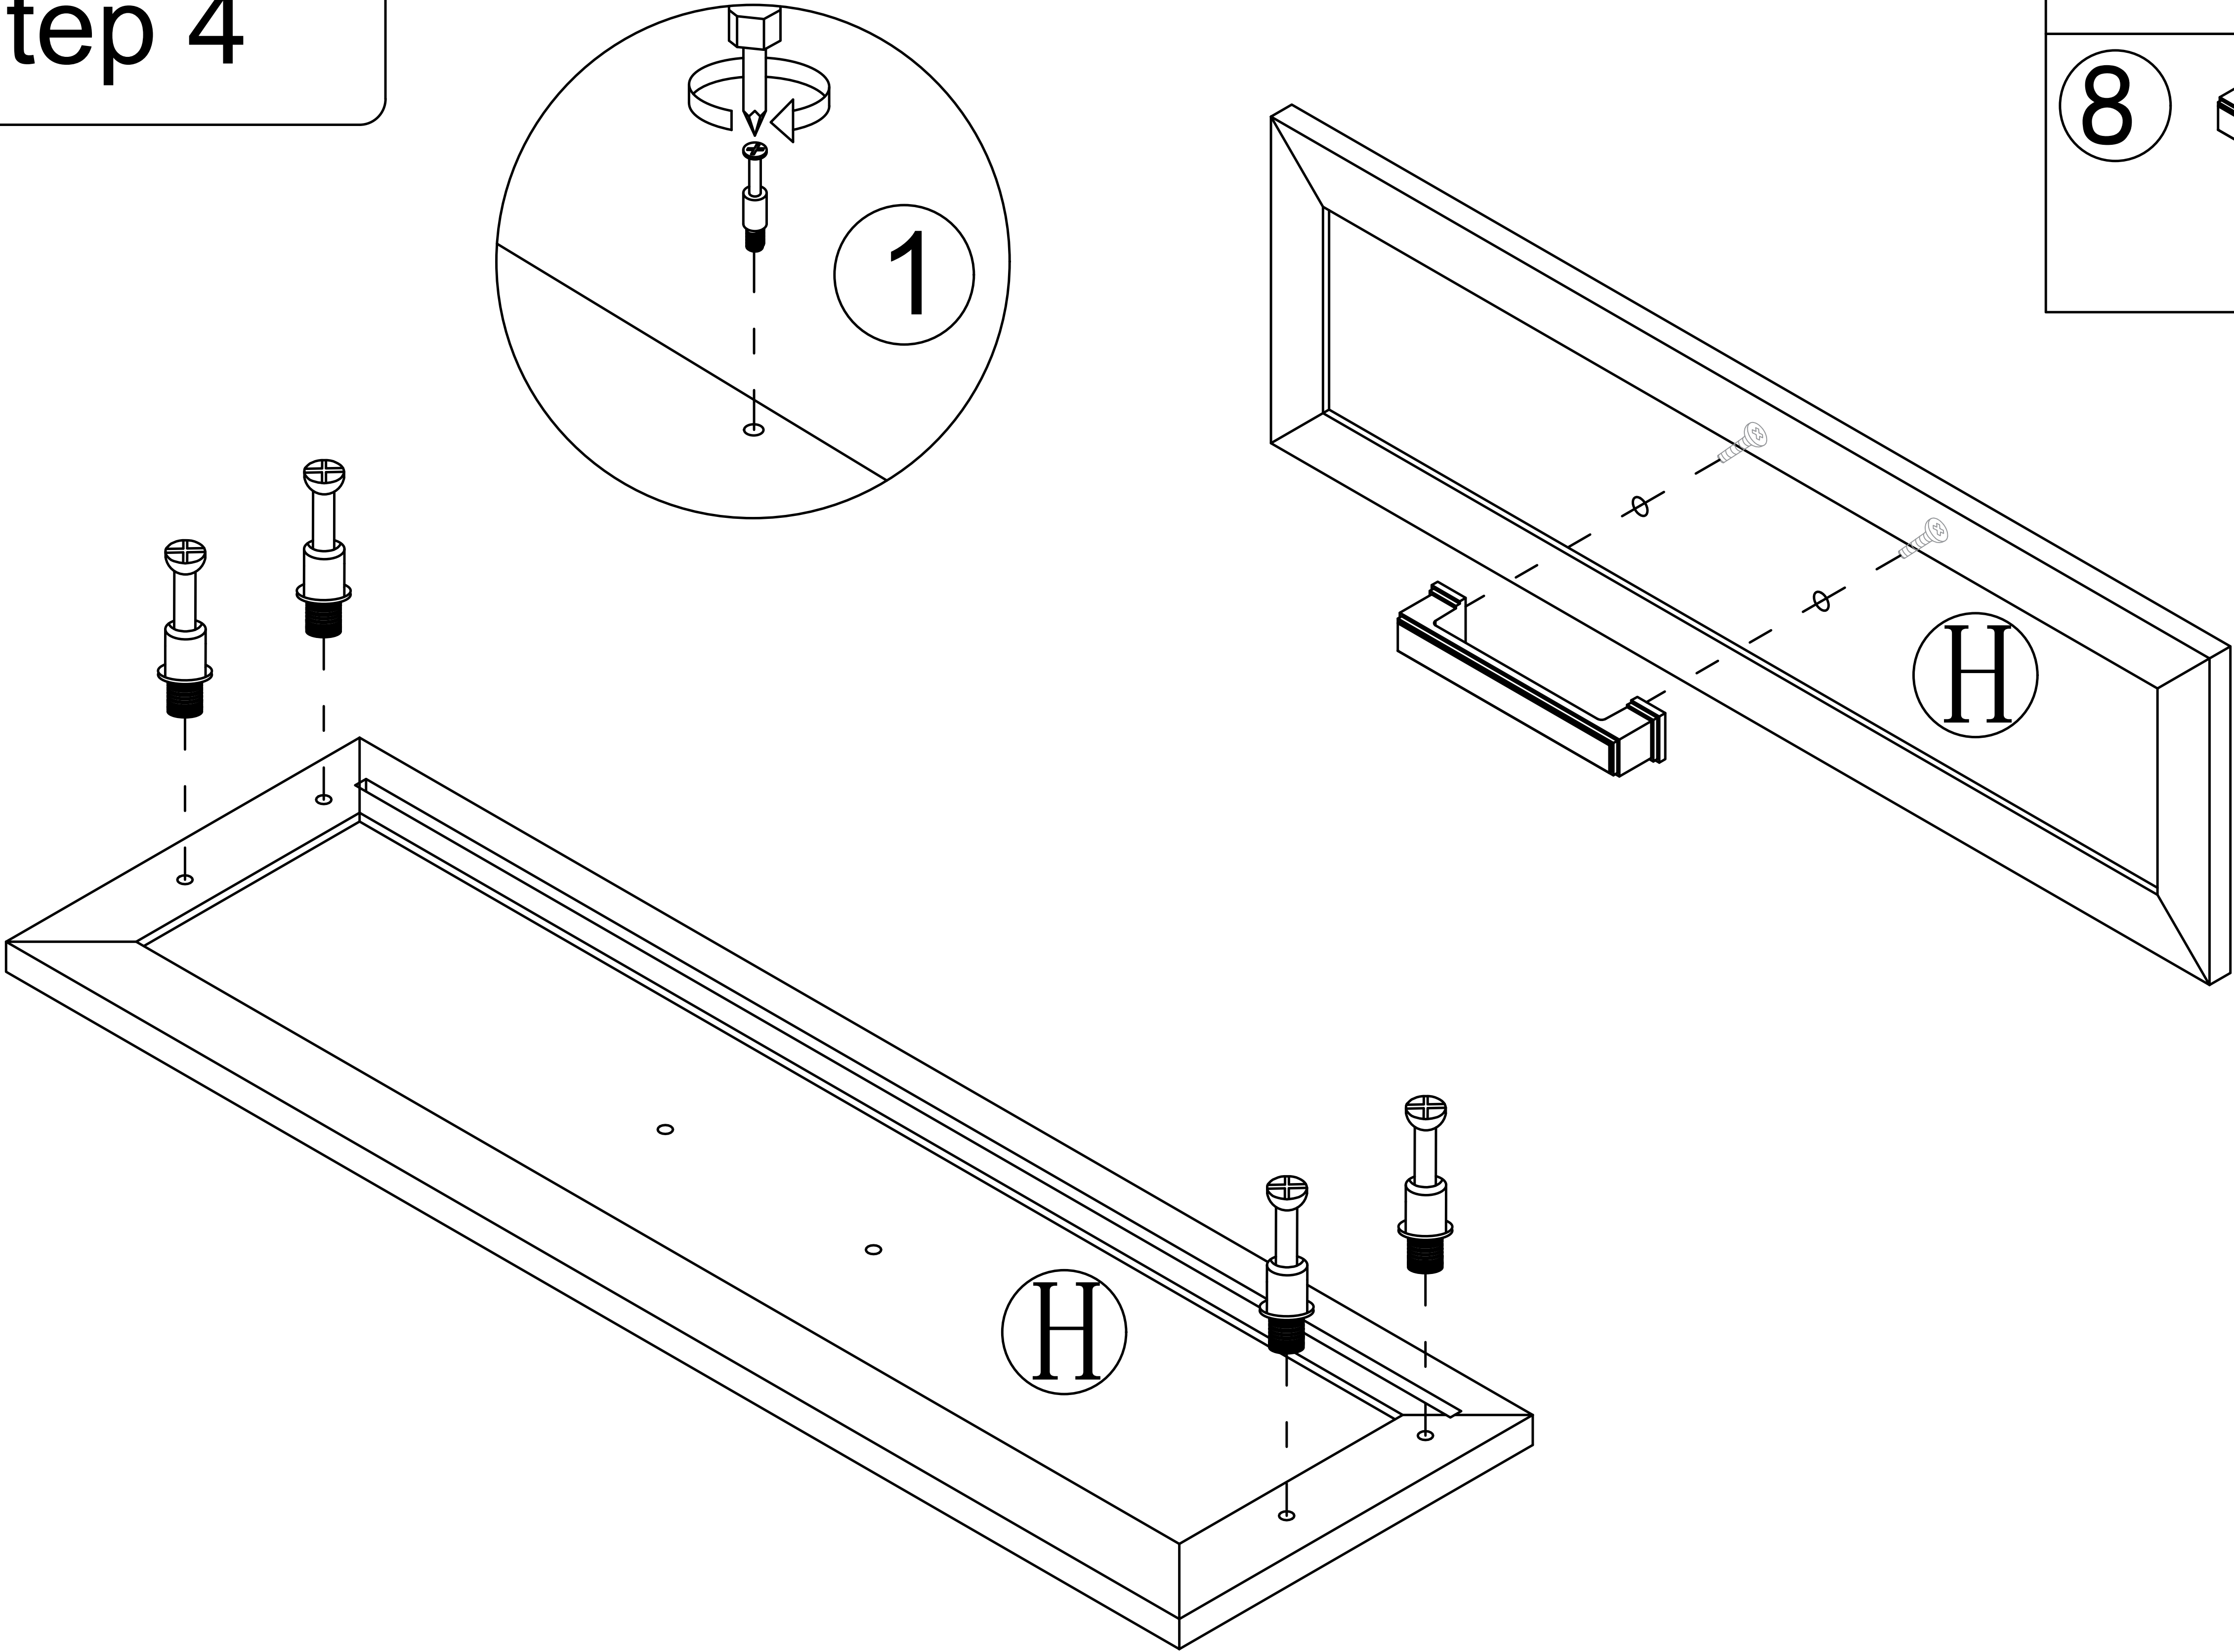

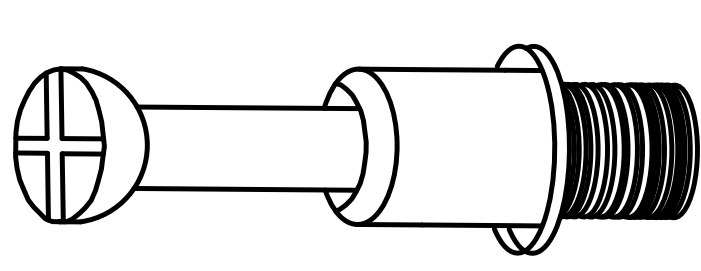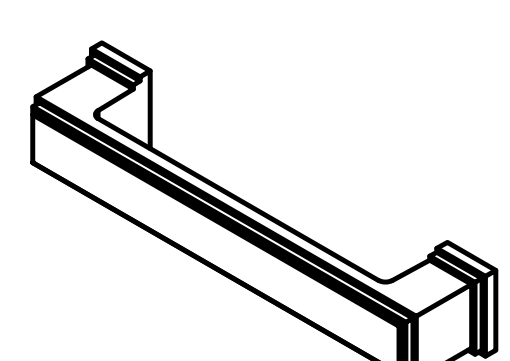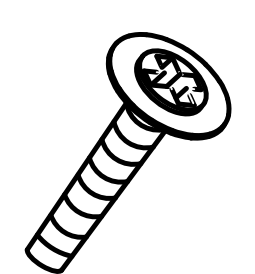
- ①  x4
- ⑧  x1  x2

Step 5

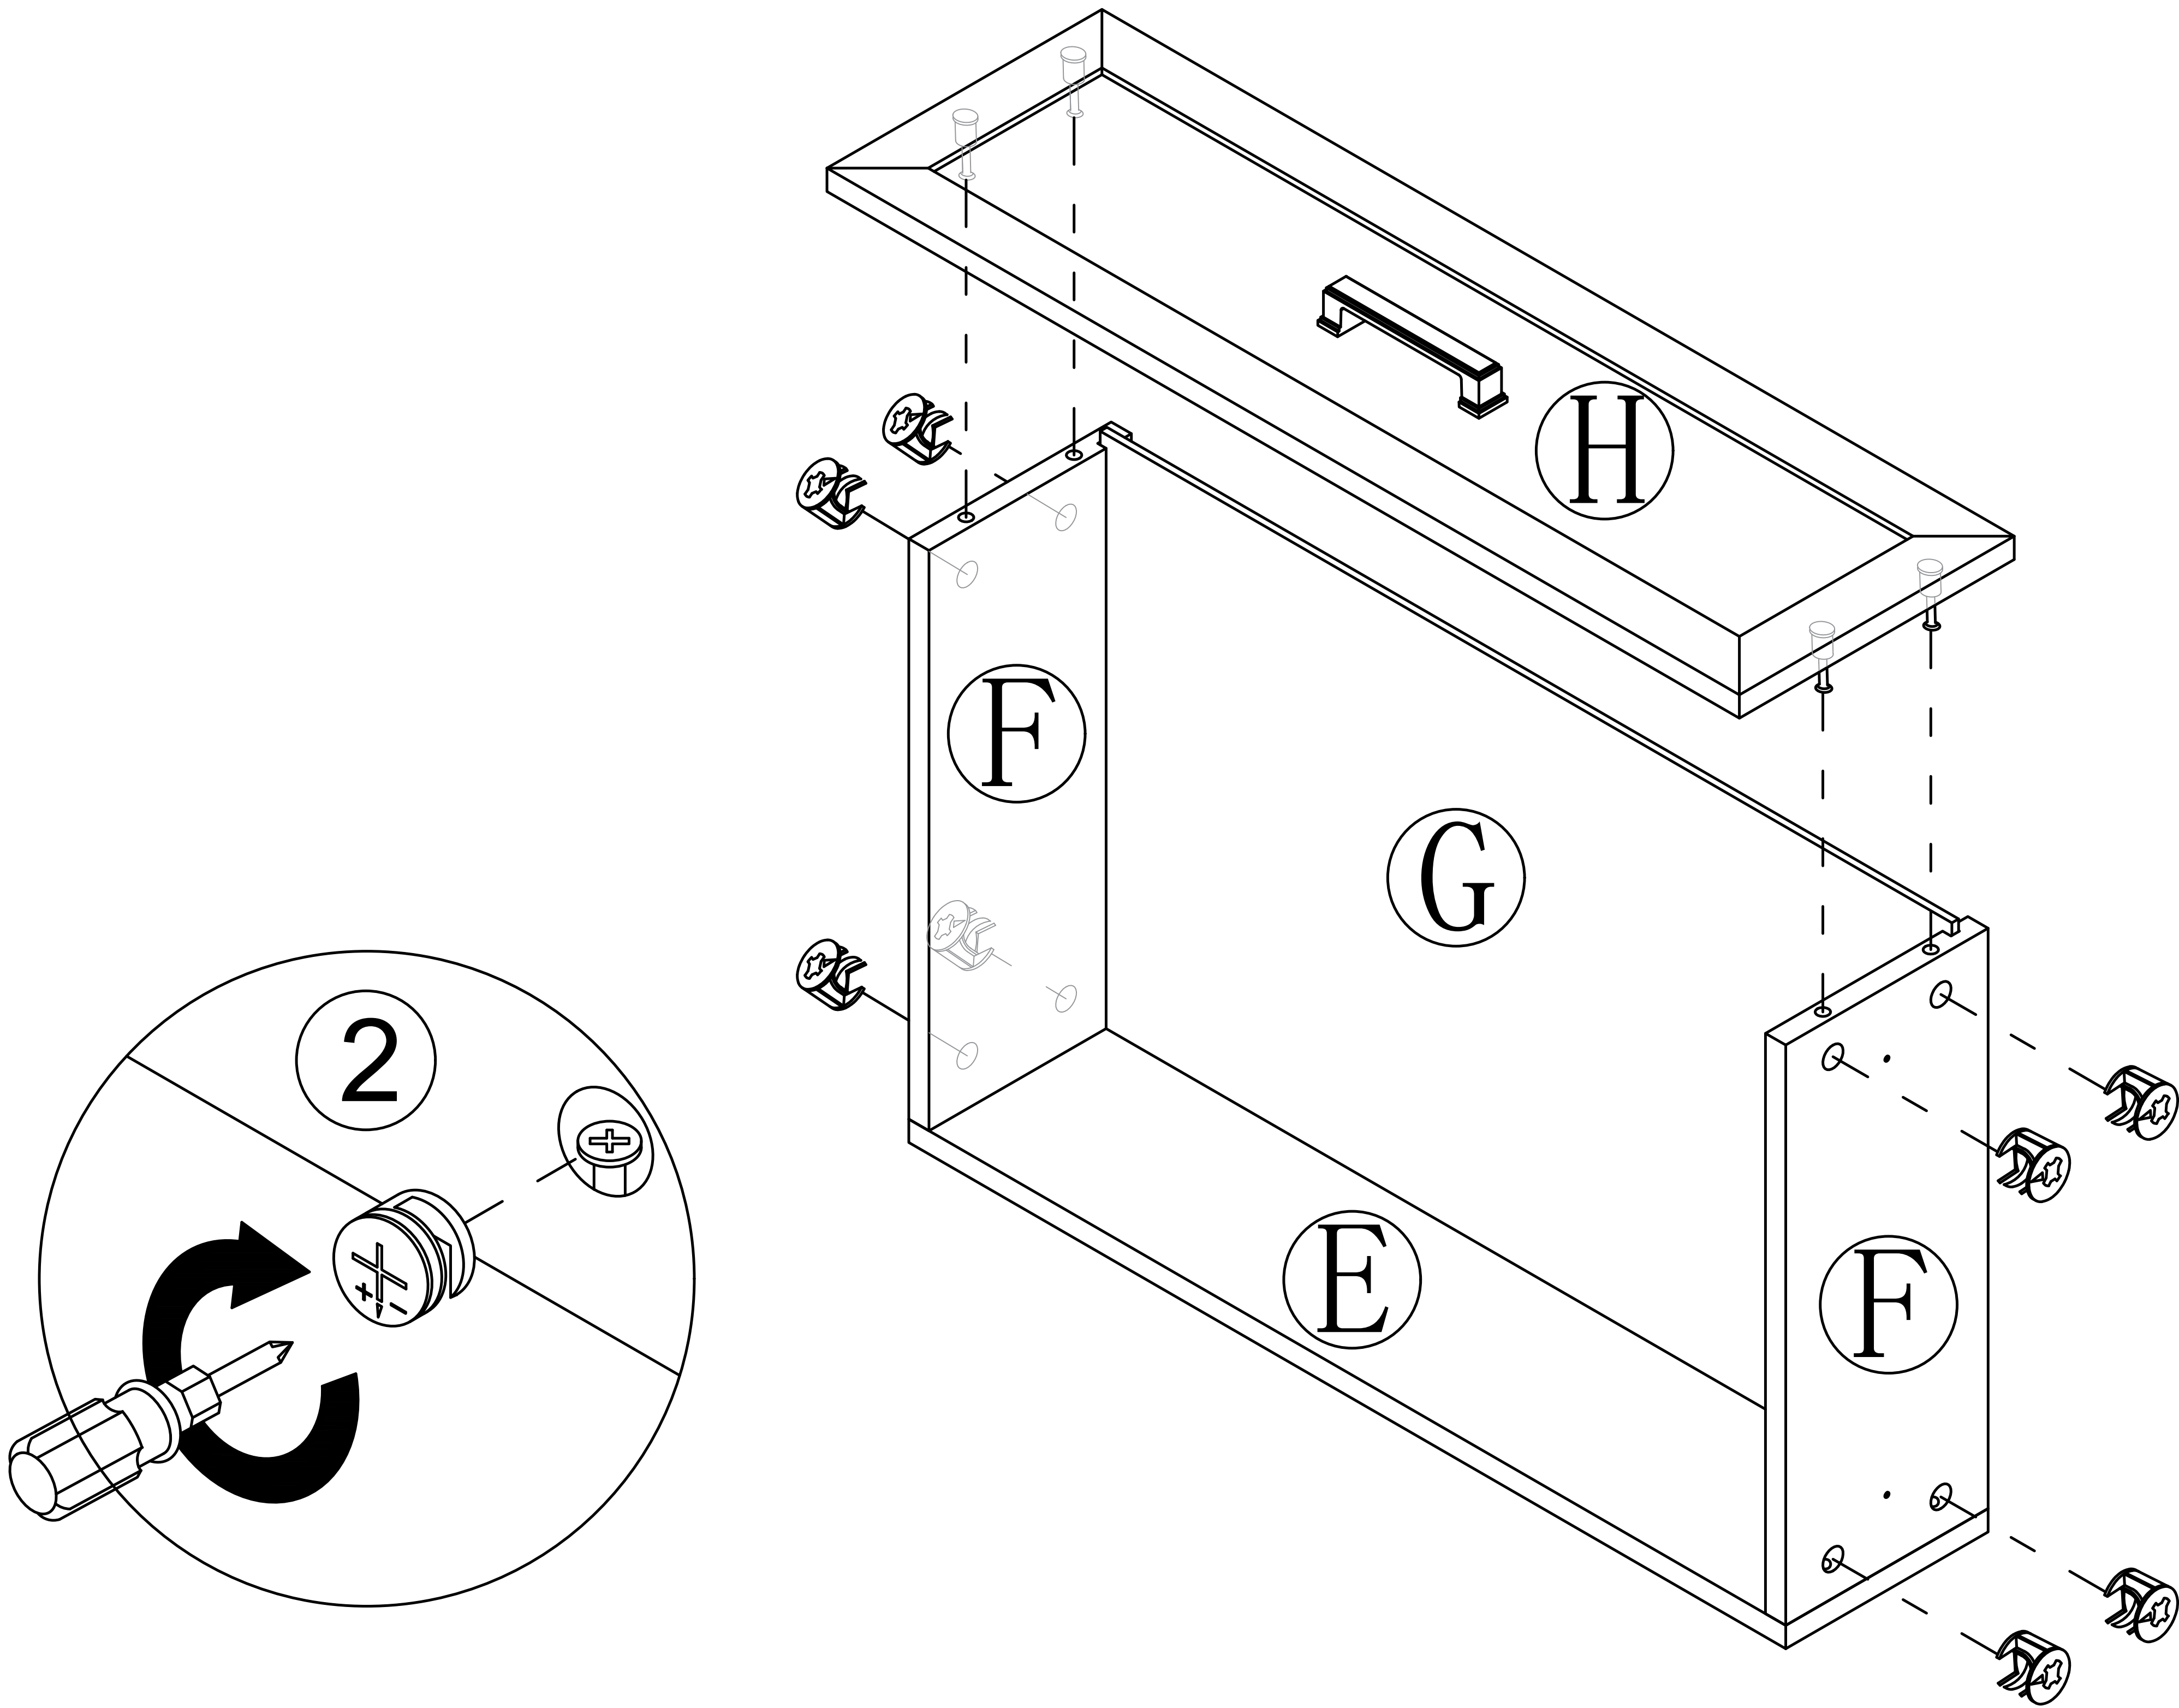


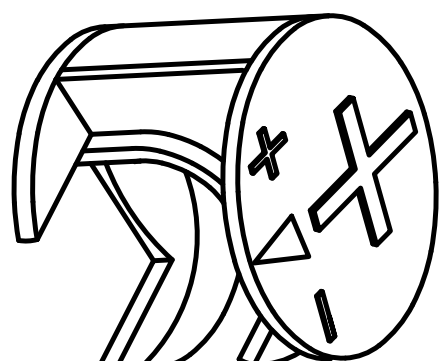
- ②  x8

Drawer rail breakdown diagram

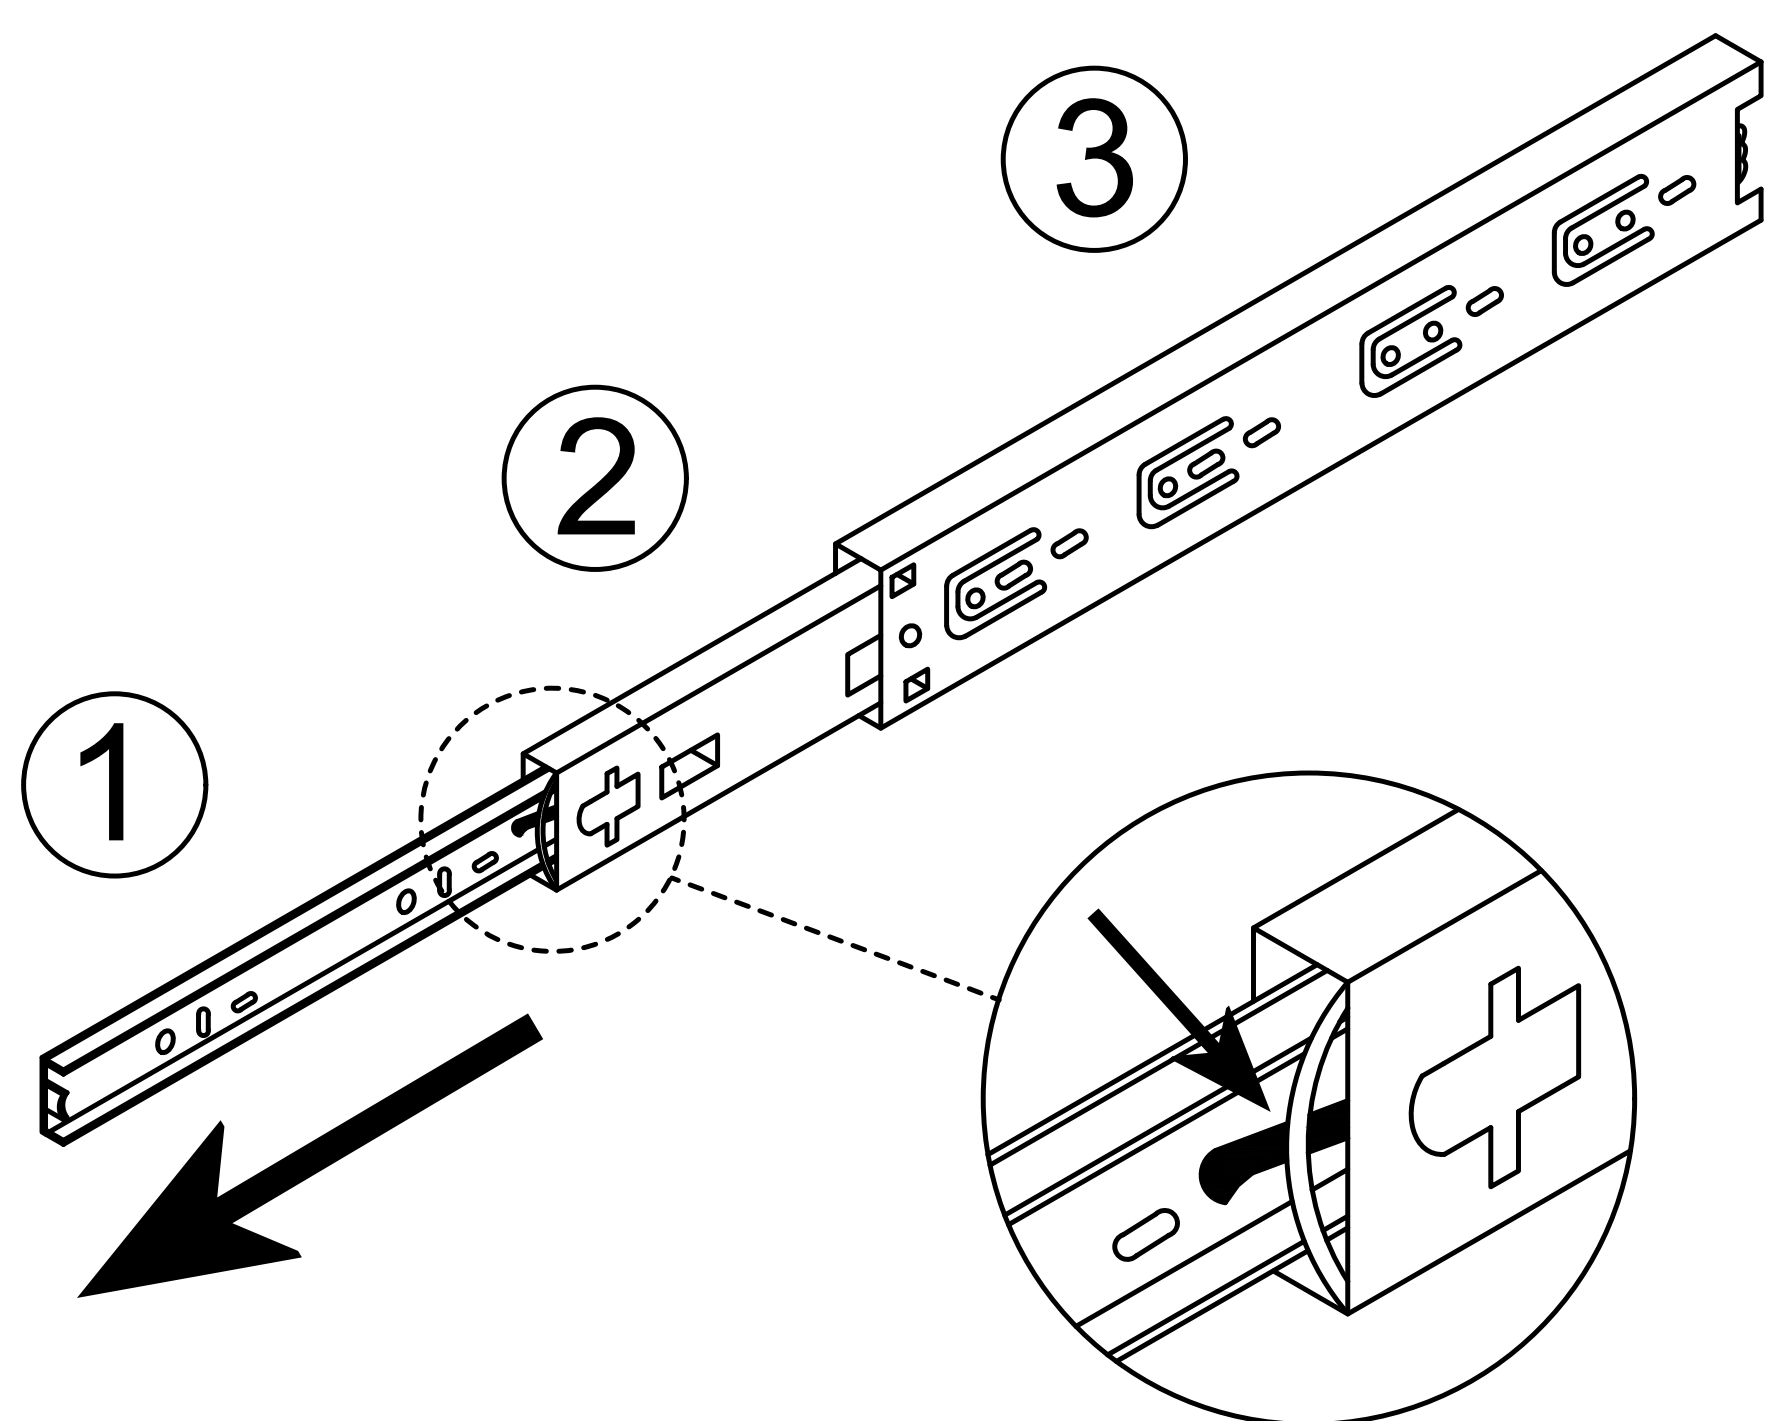


Step 1 : Pull the rails apart

Step 2 : Push the nylon buckle outward ①

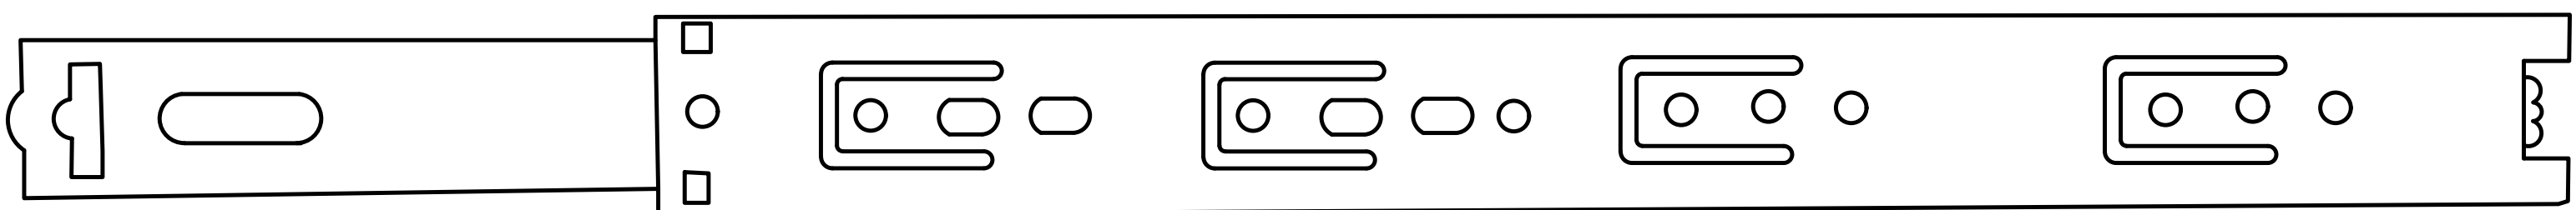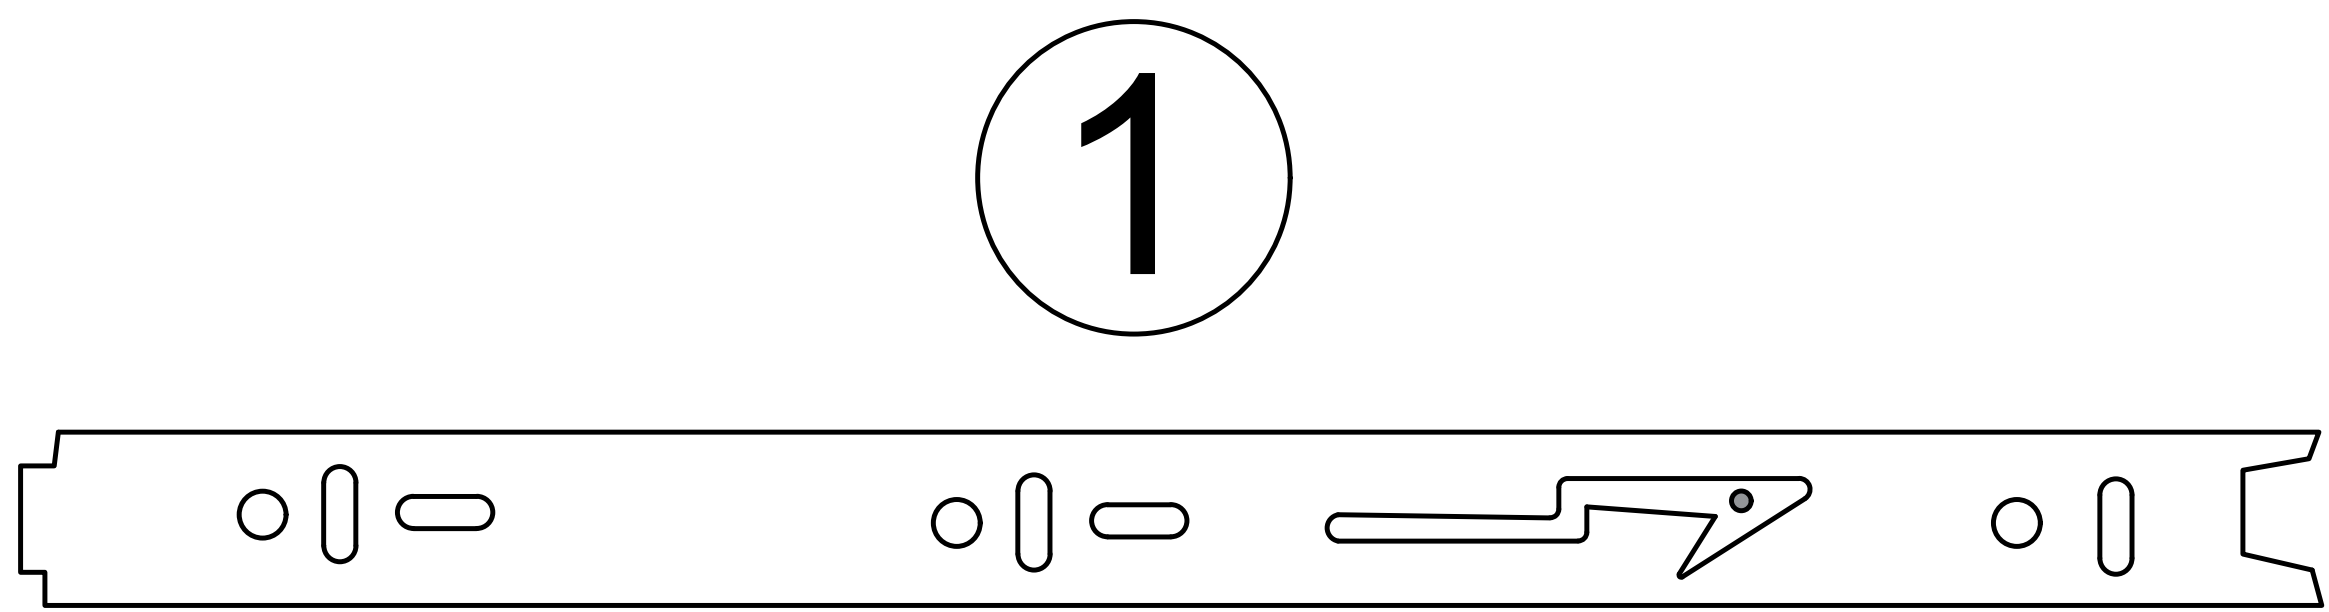

②

③



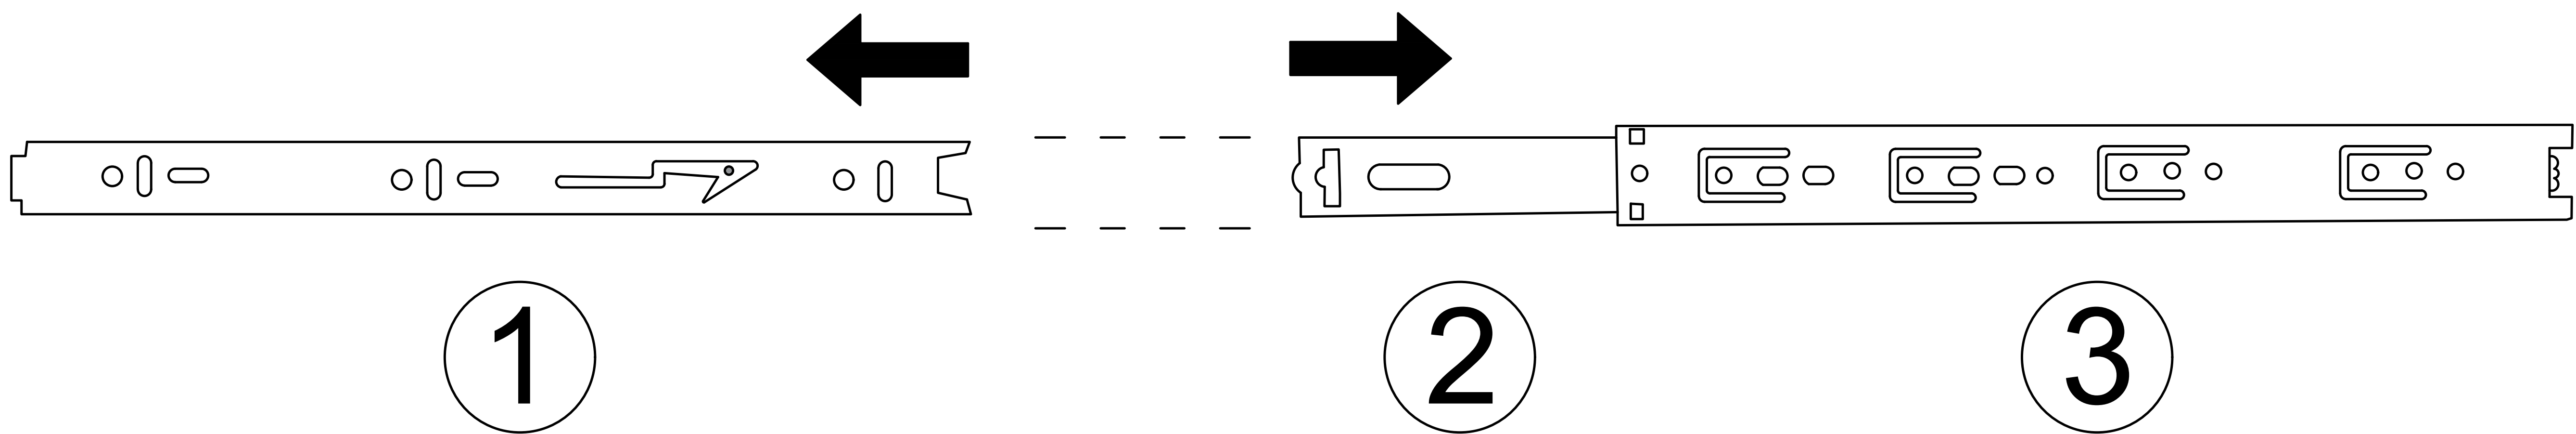


①





②


③

Step 6

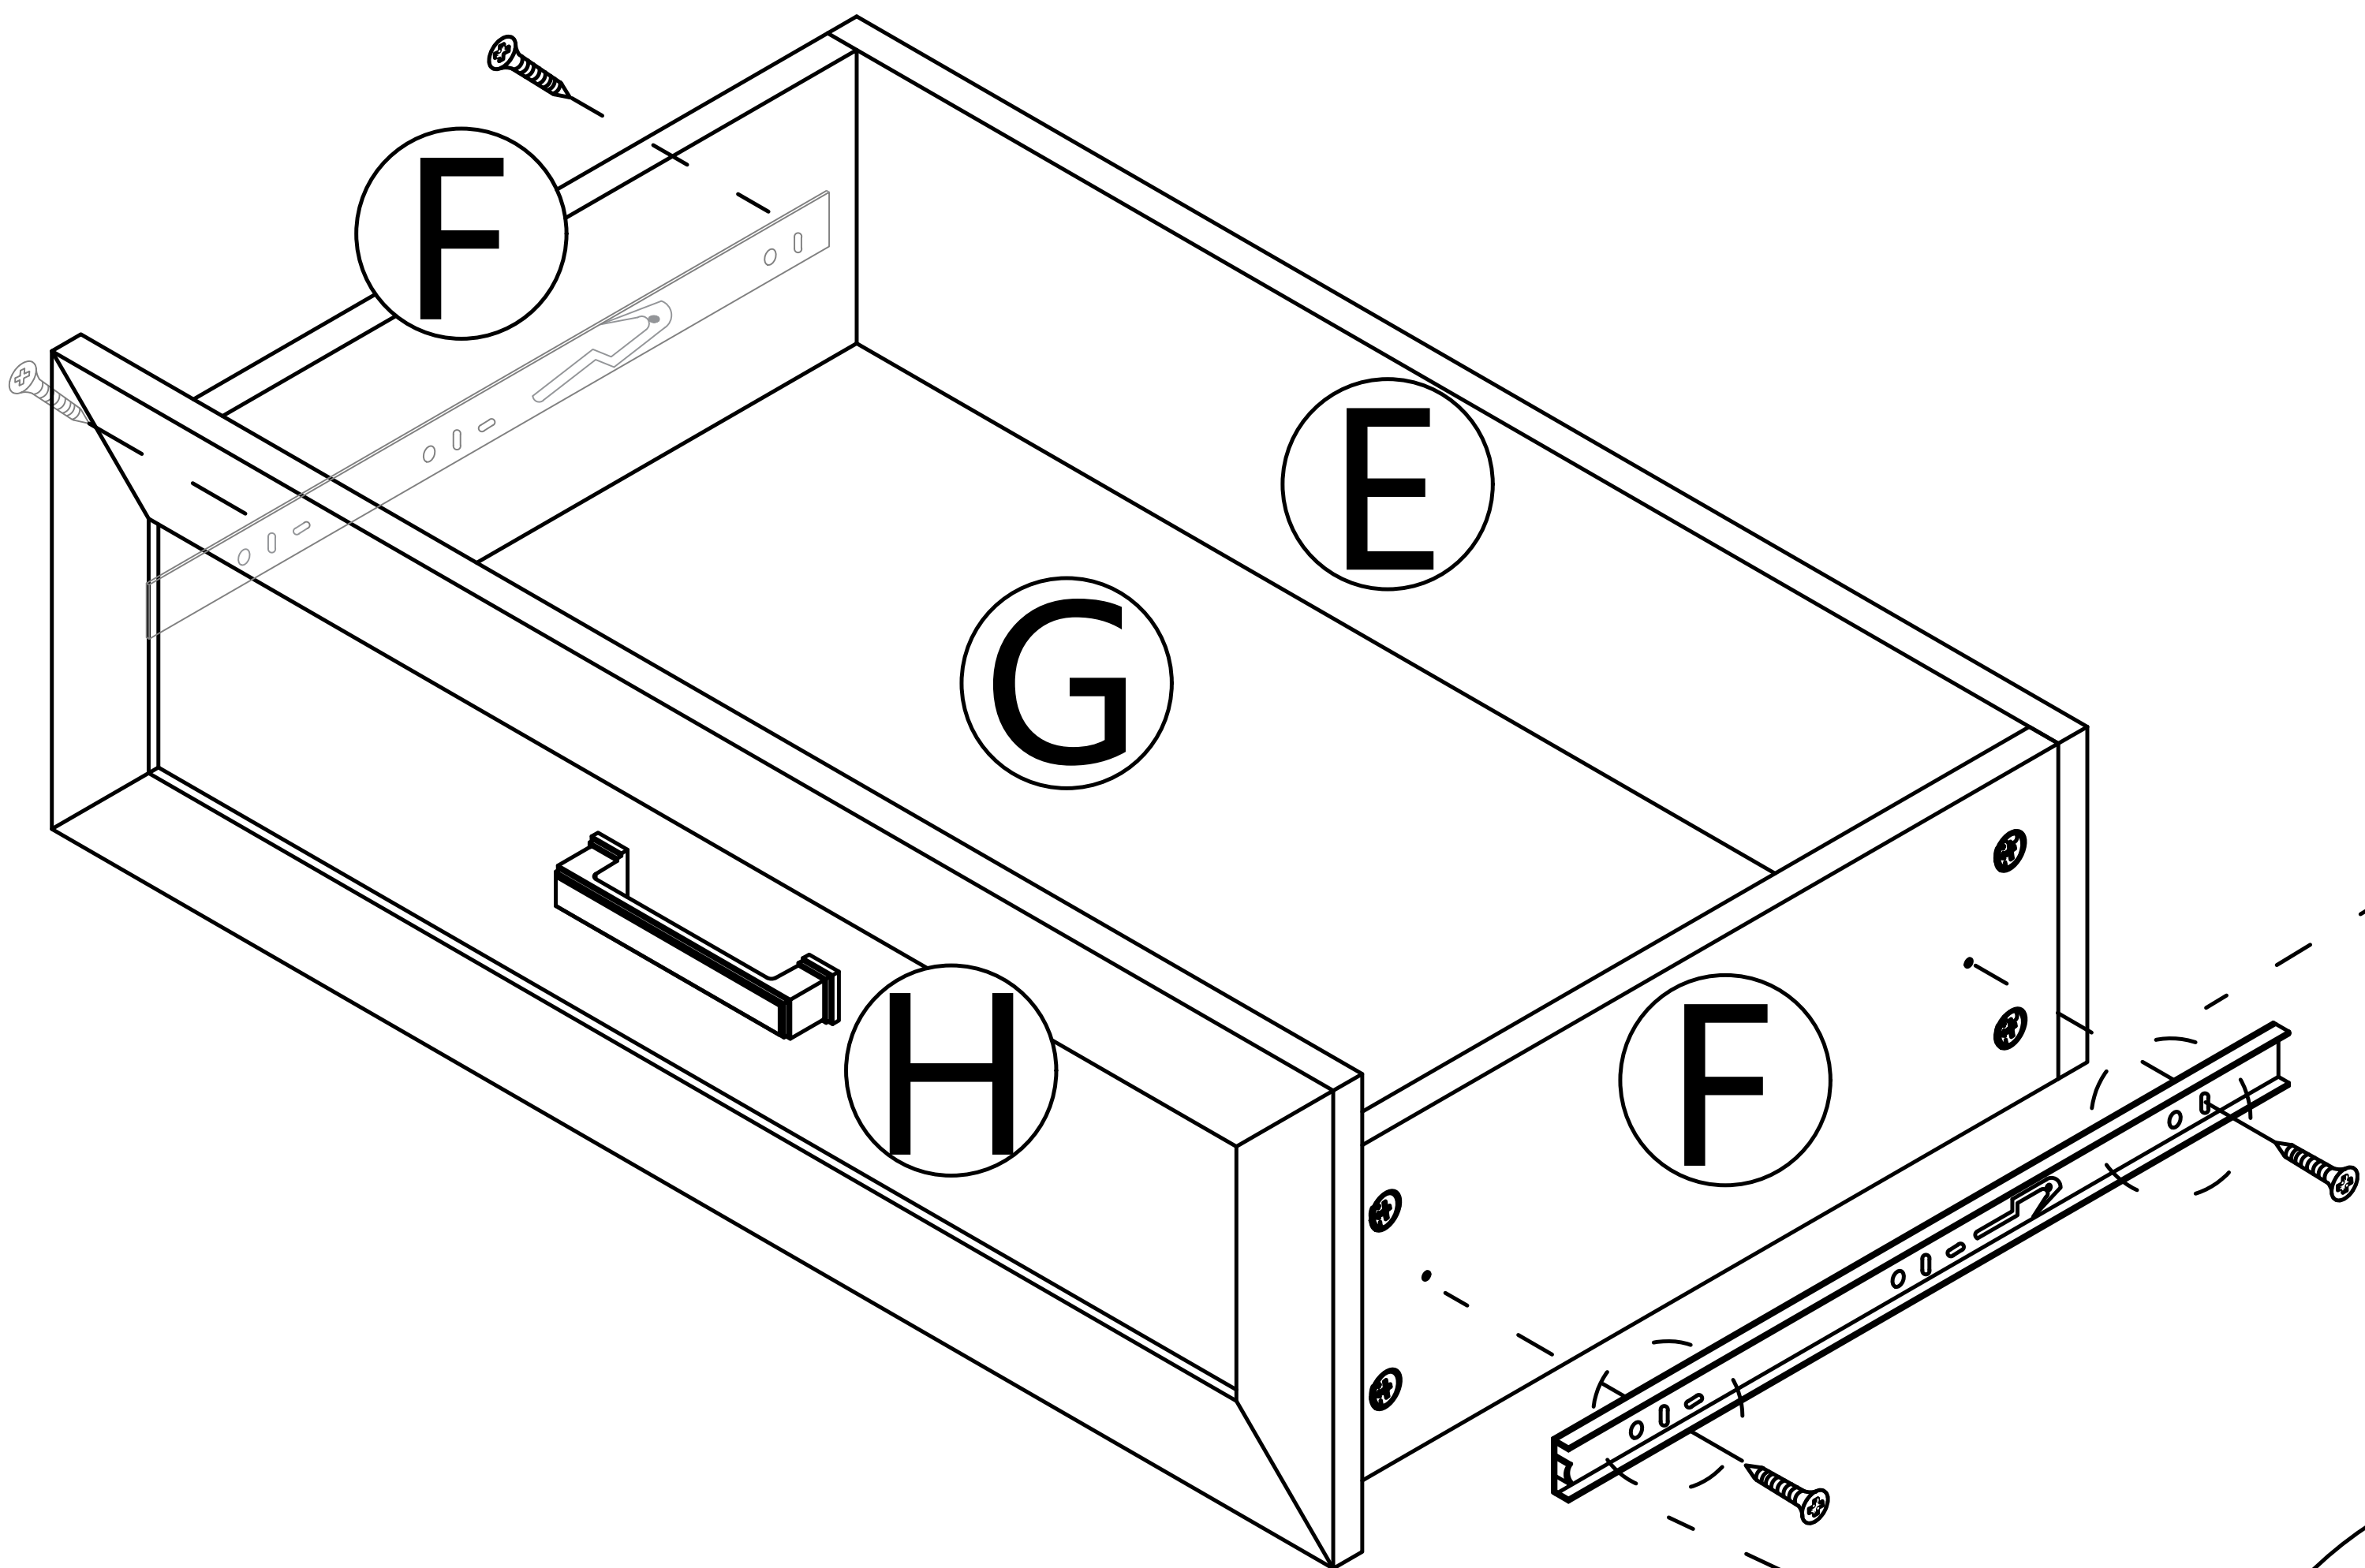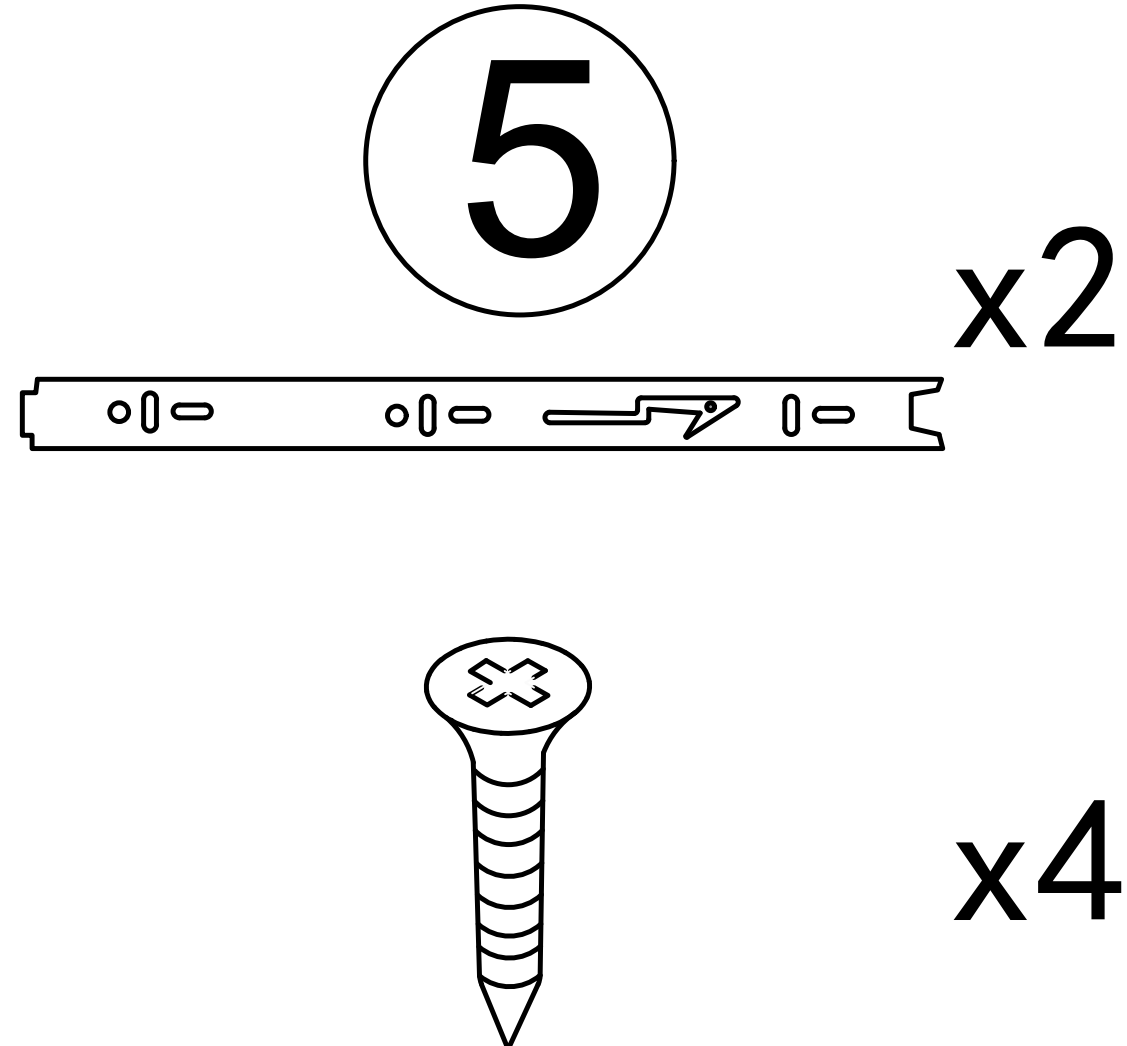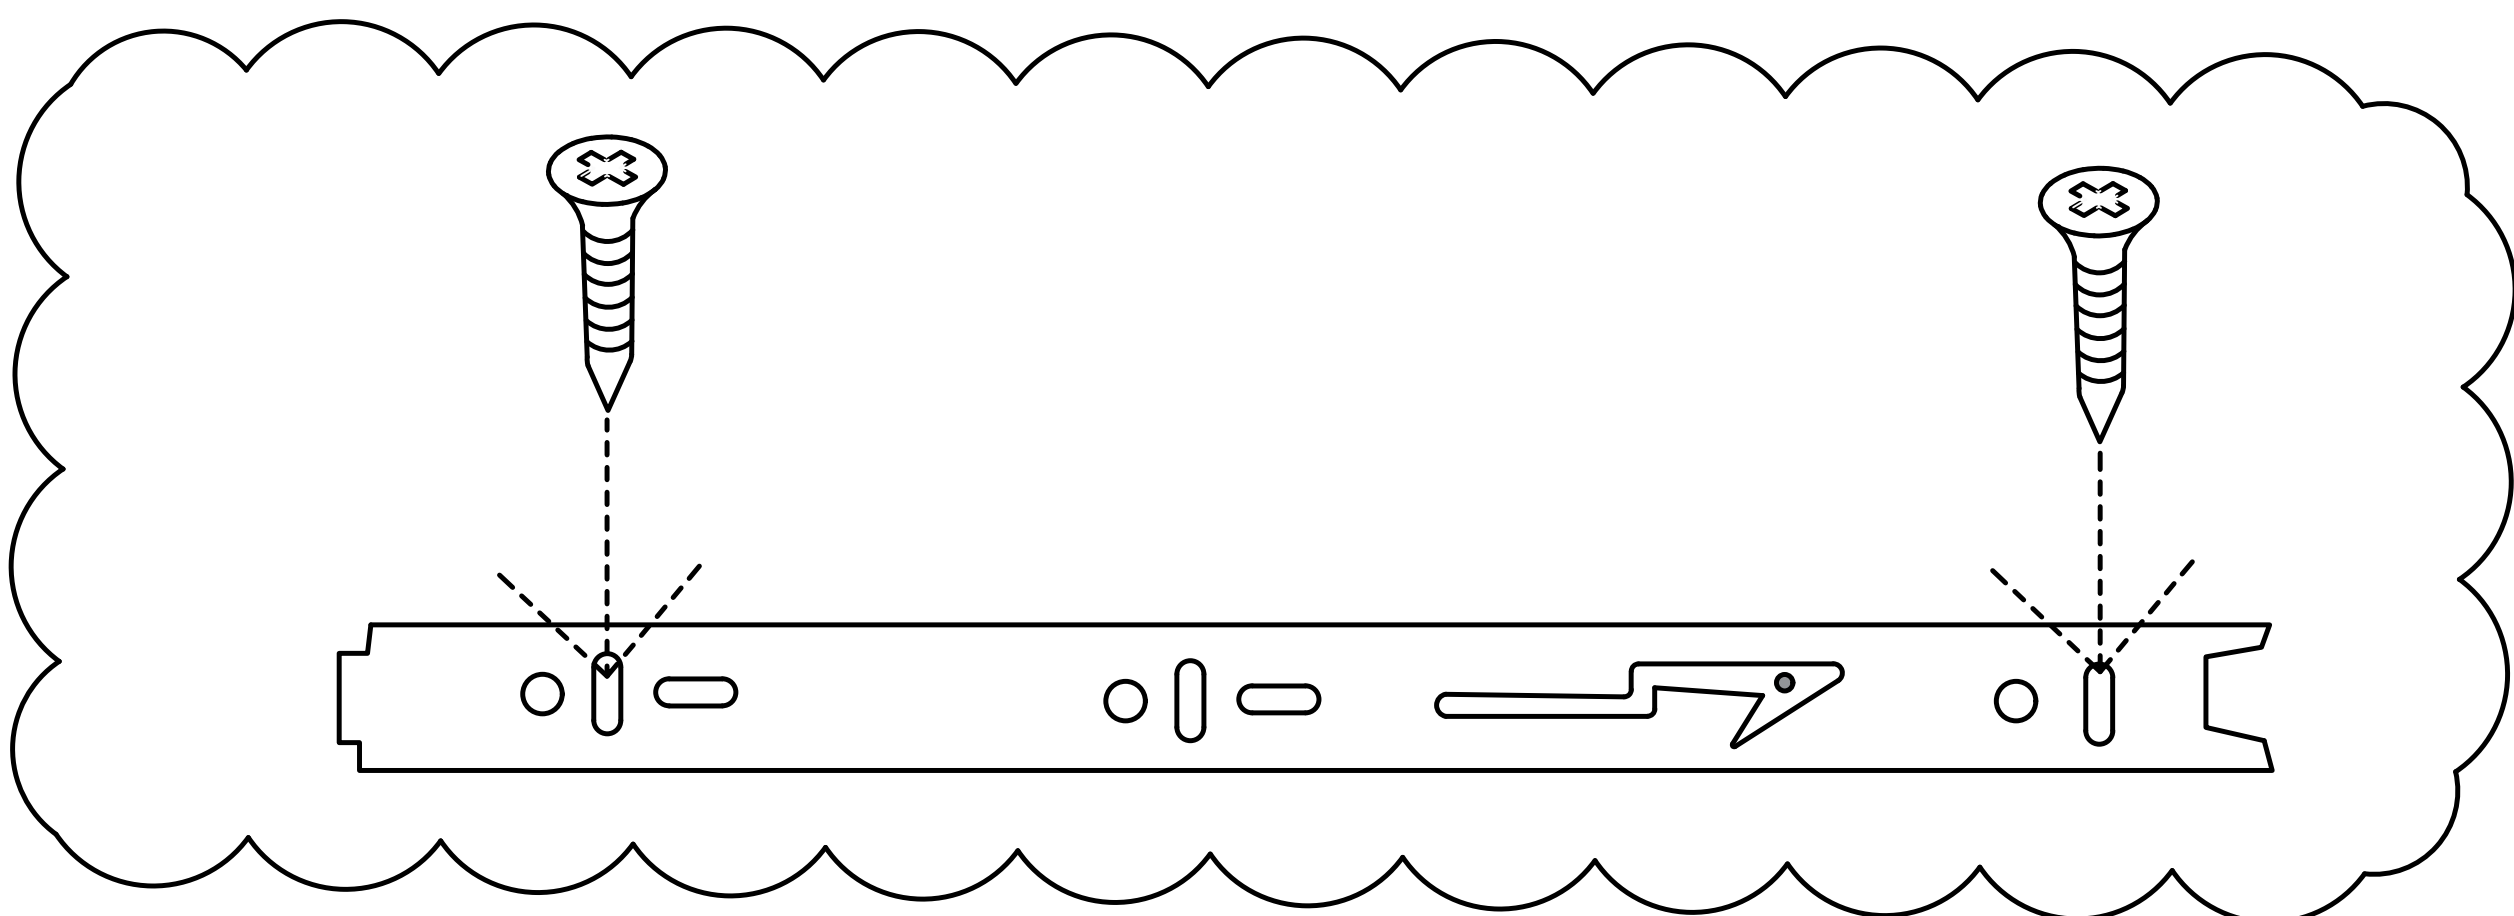

Step 7

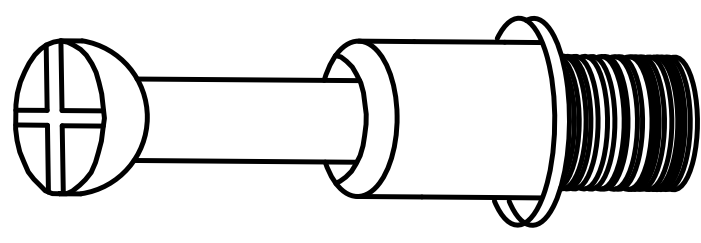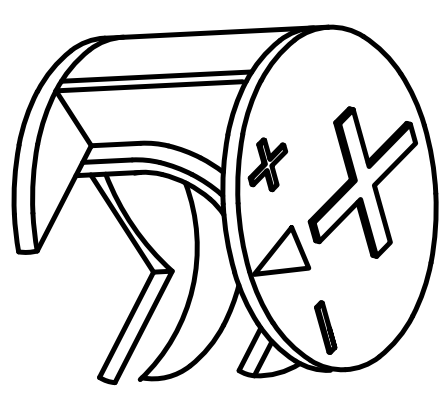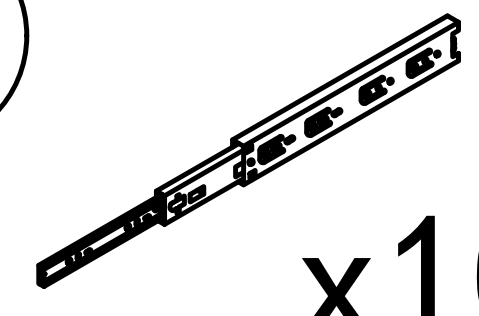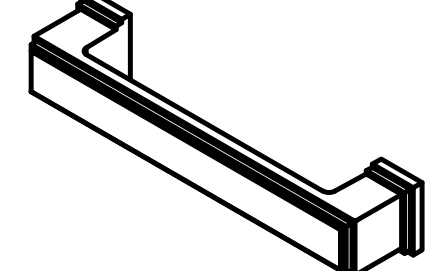
- | | | |
|---|---|-----|
| 1 |  | x40 |
| 2 |  | x40 |
| 5 |  | x10 |
| |  | x20 |
| 8 |  | x5 |
| |  | x10 |

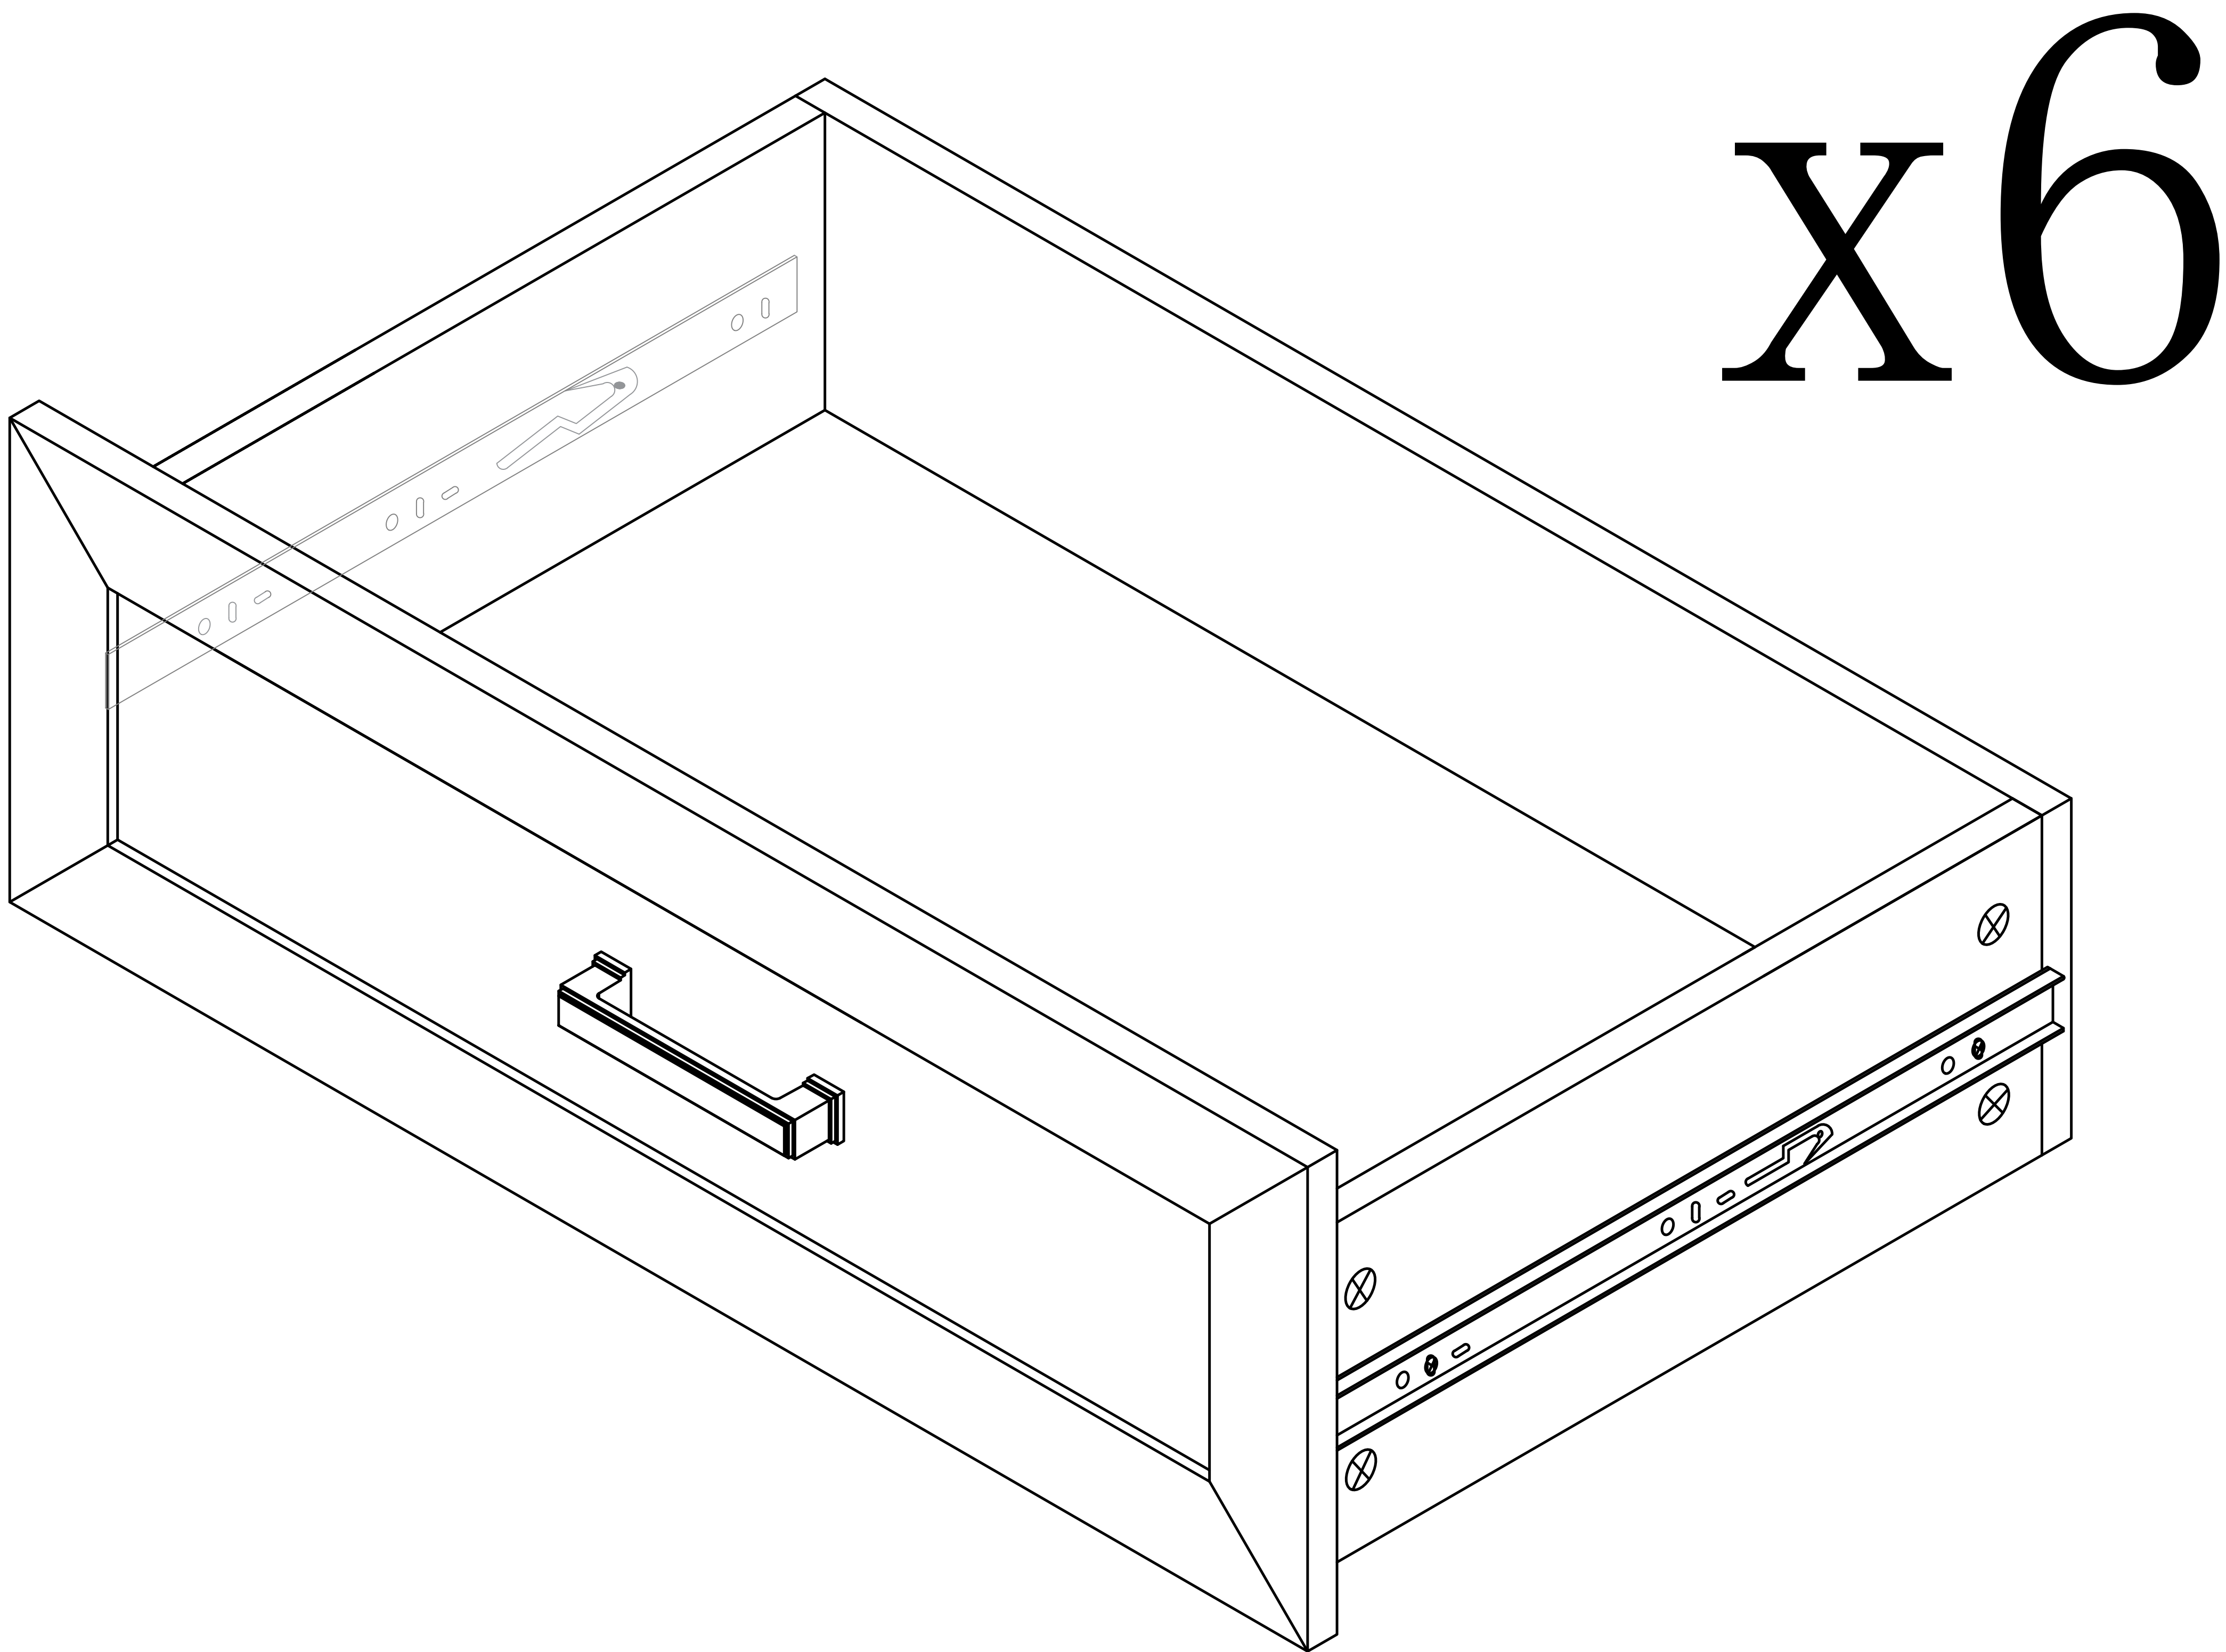


Repeat the drawer installation steps

Step 8


1

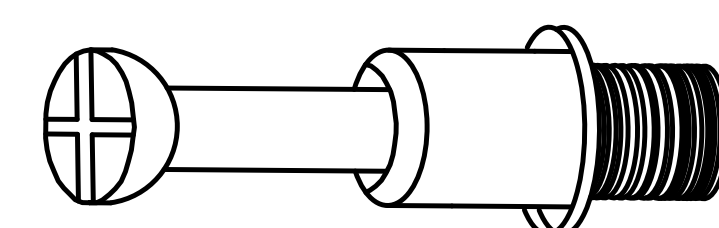


x4

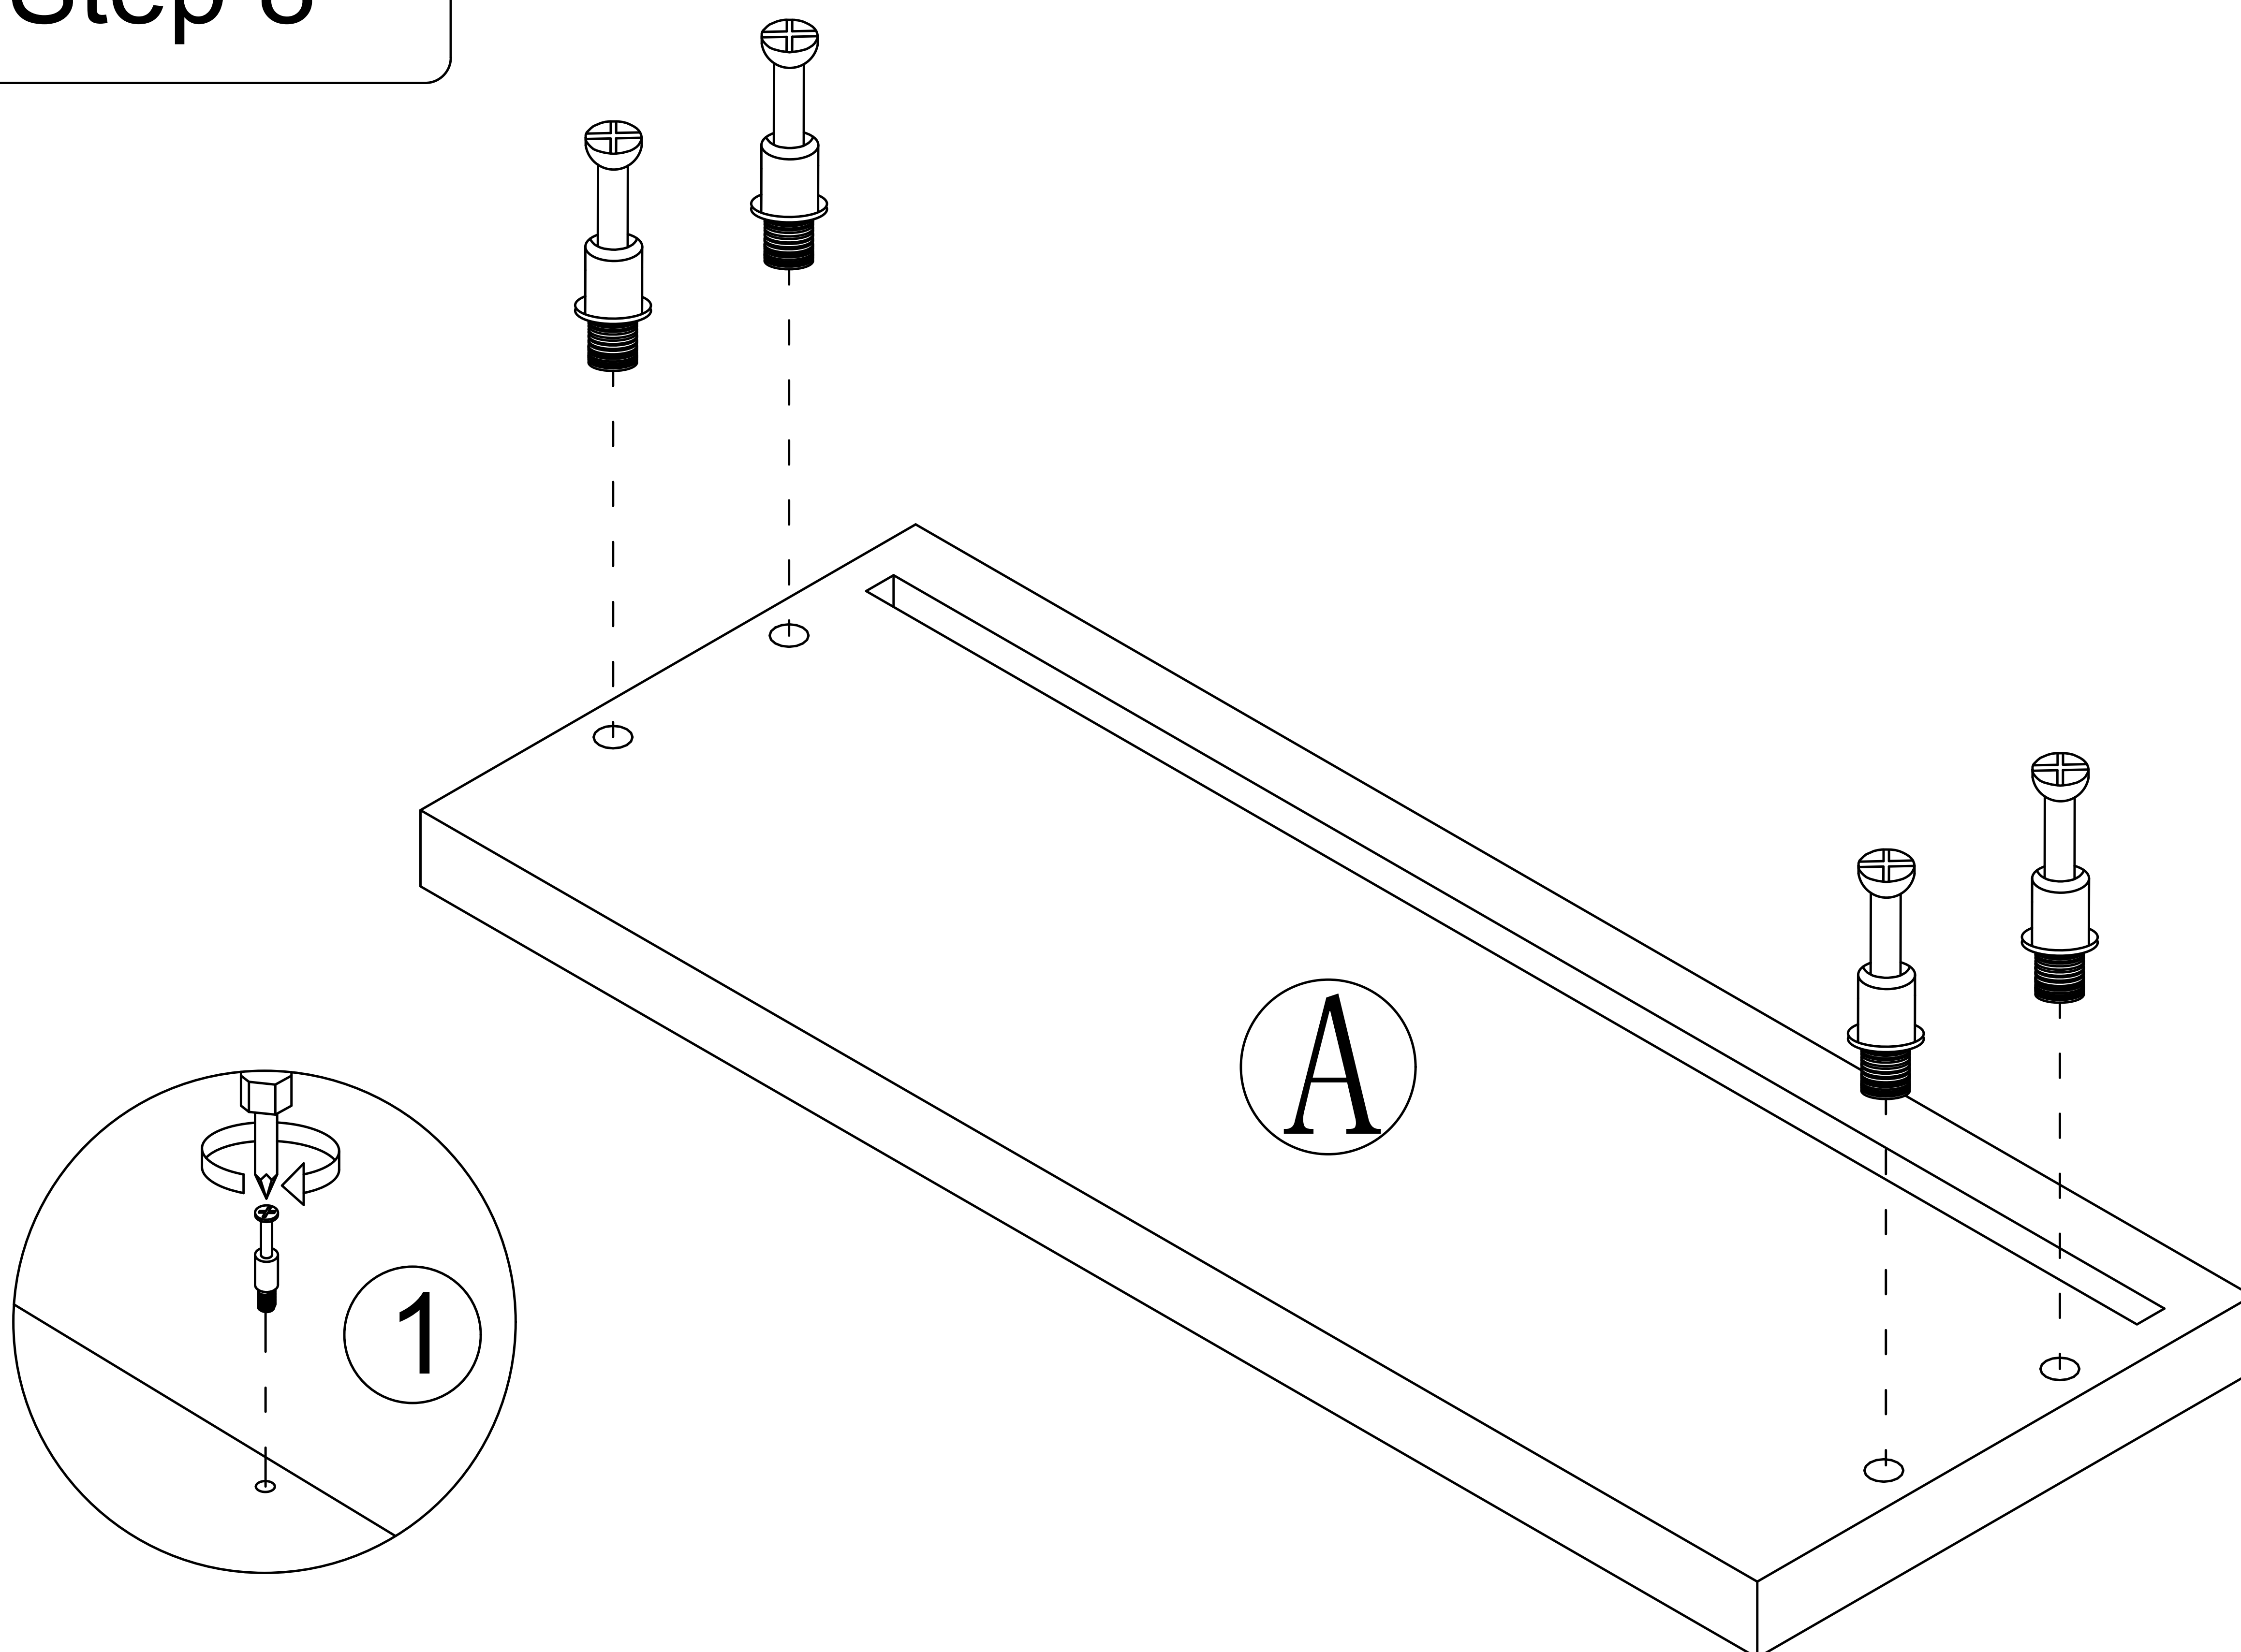


Step 9

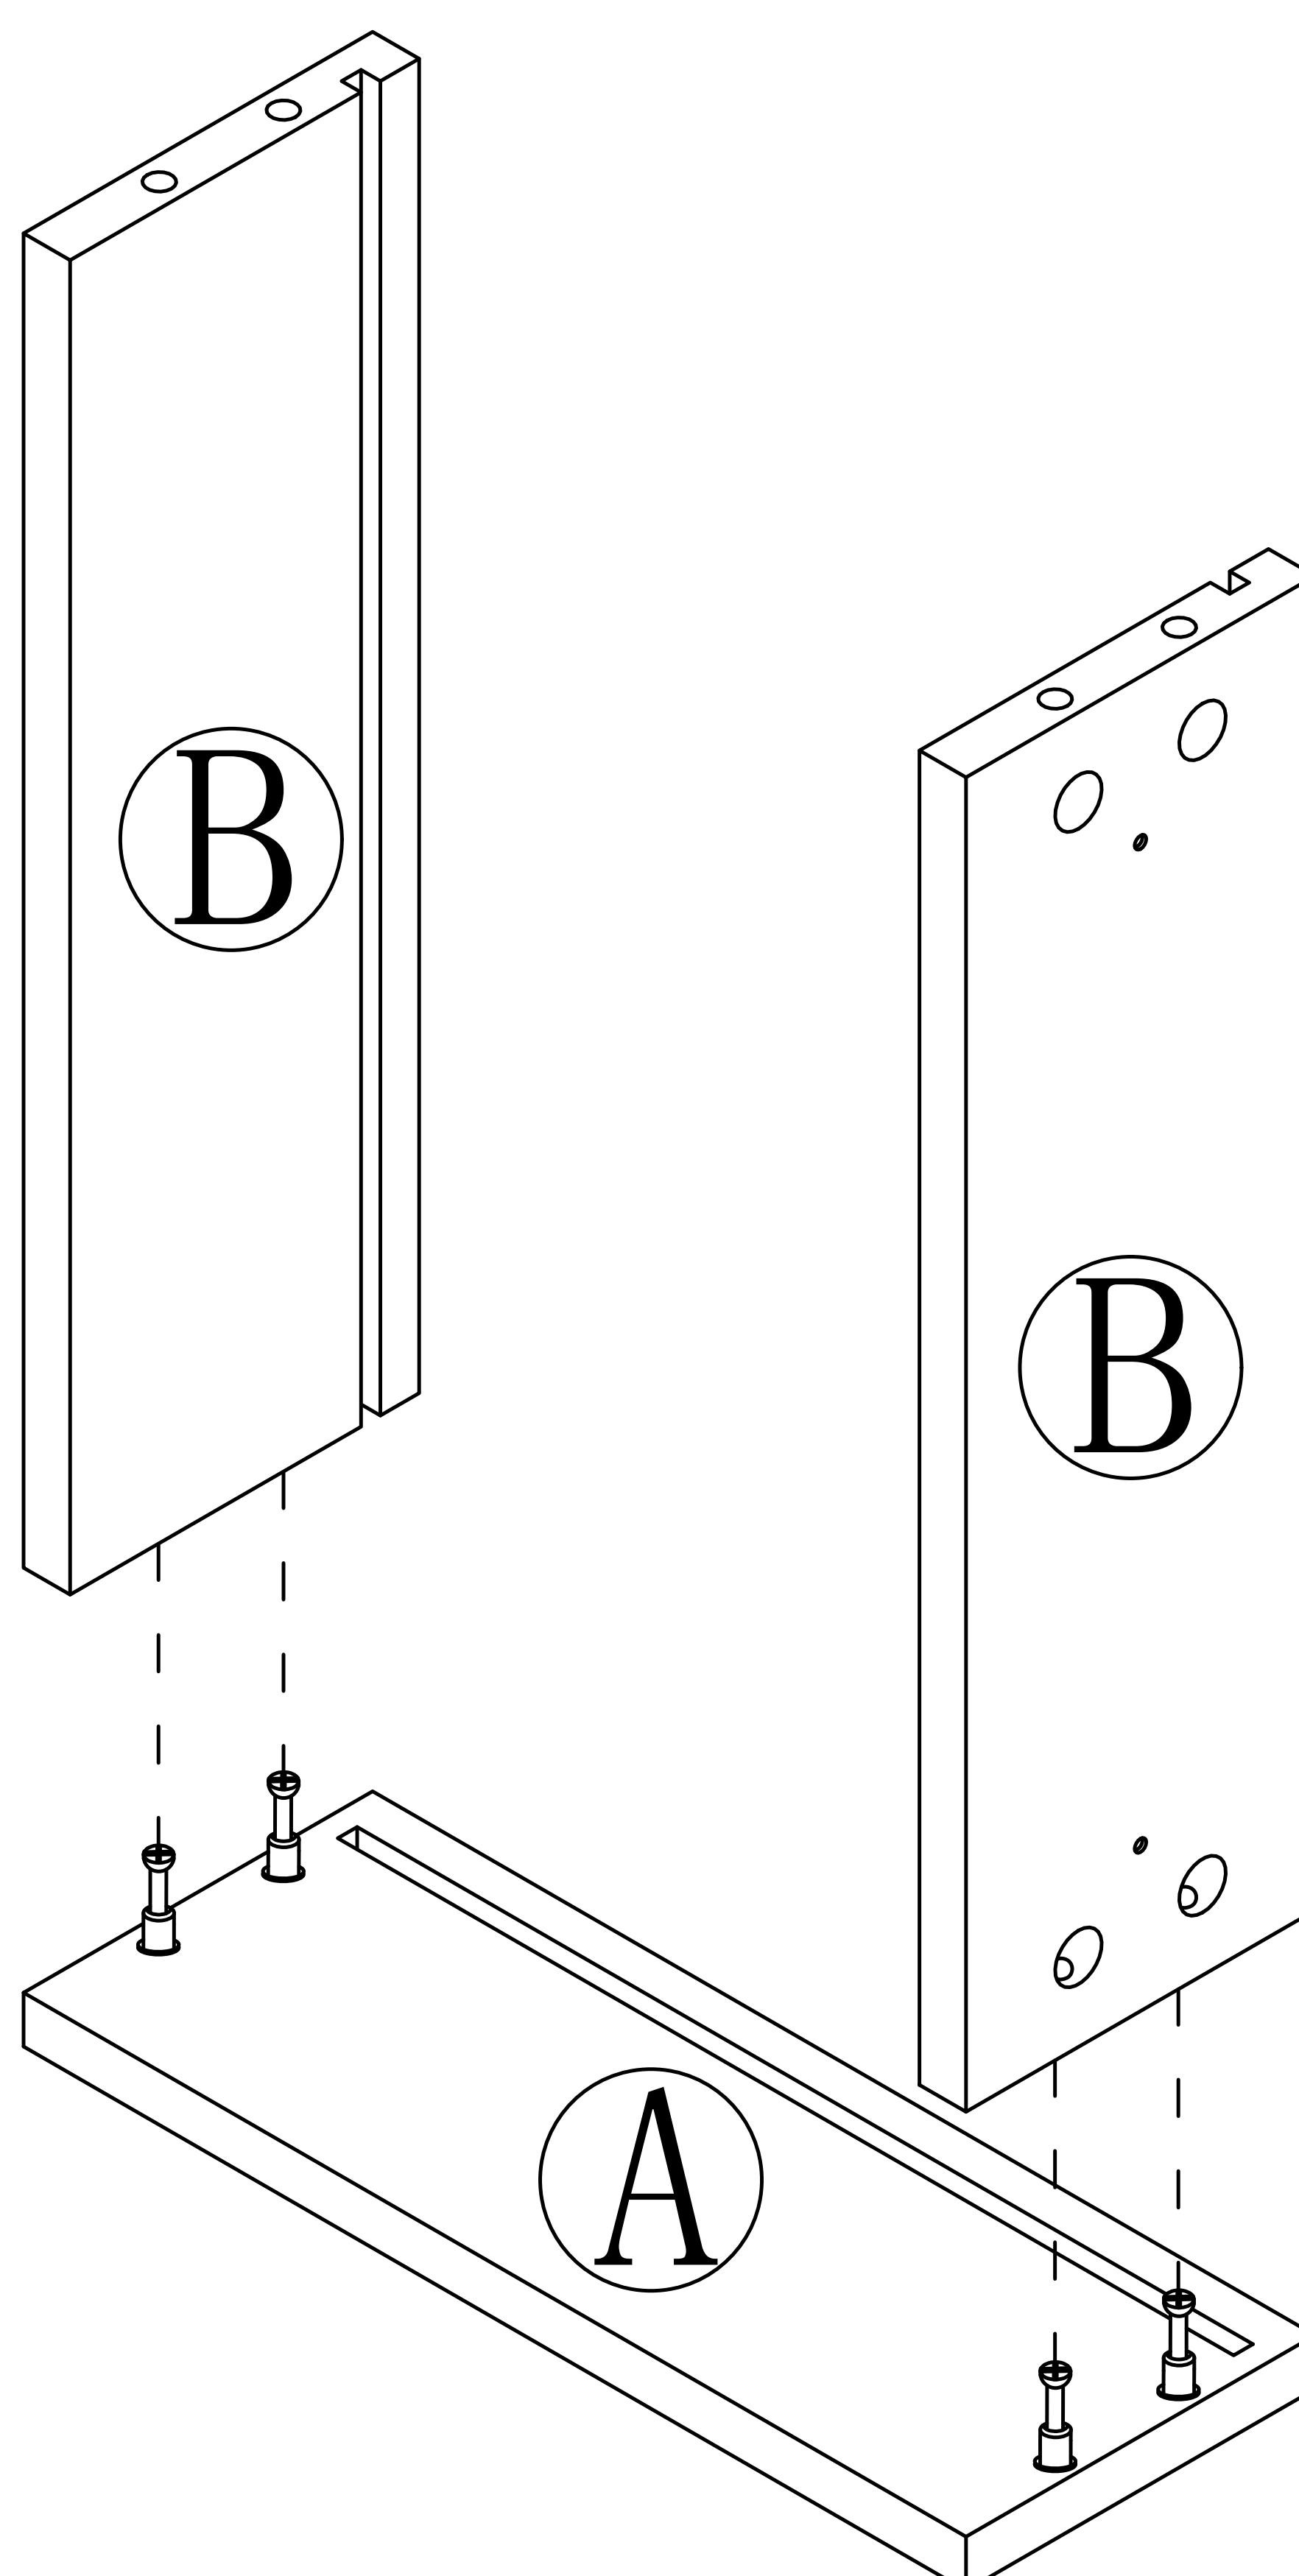

Step 10

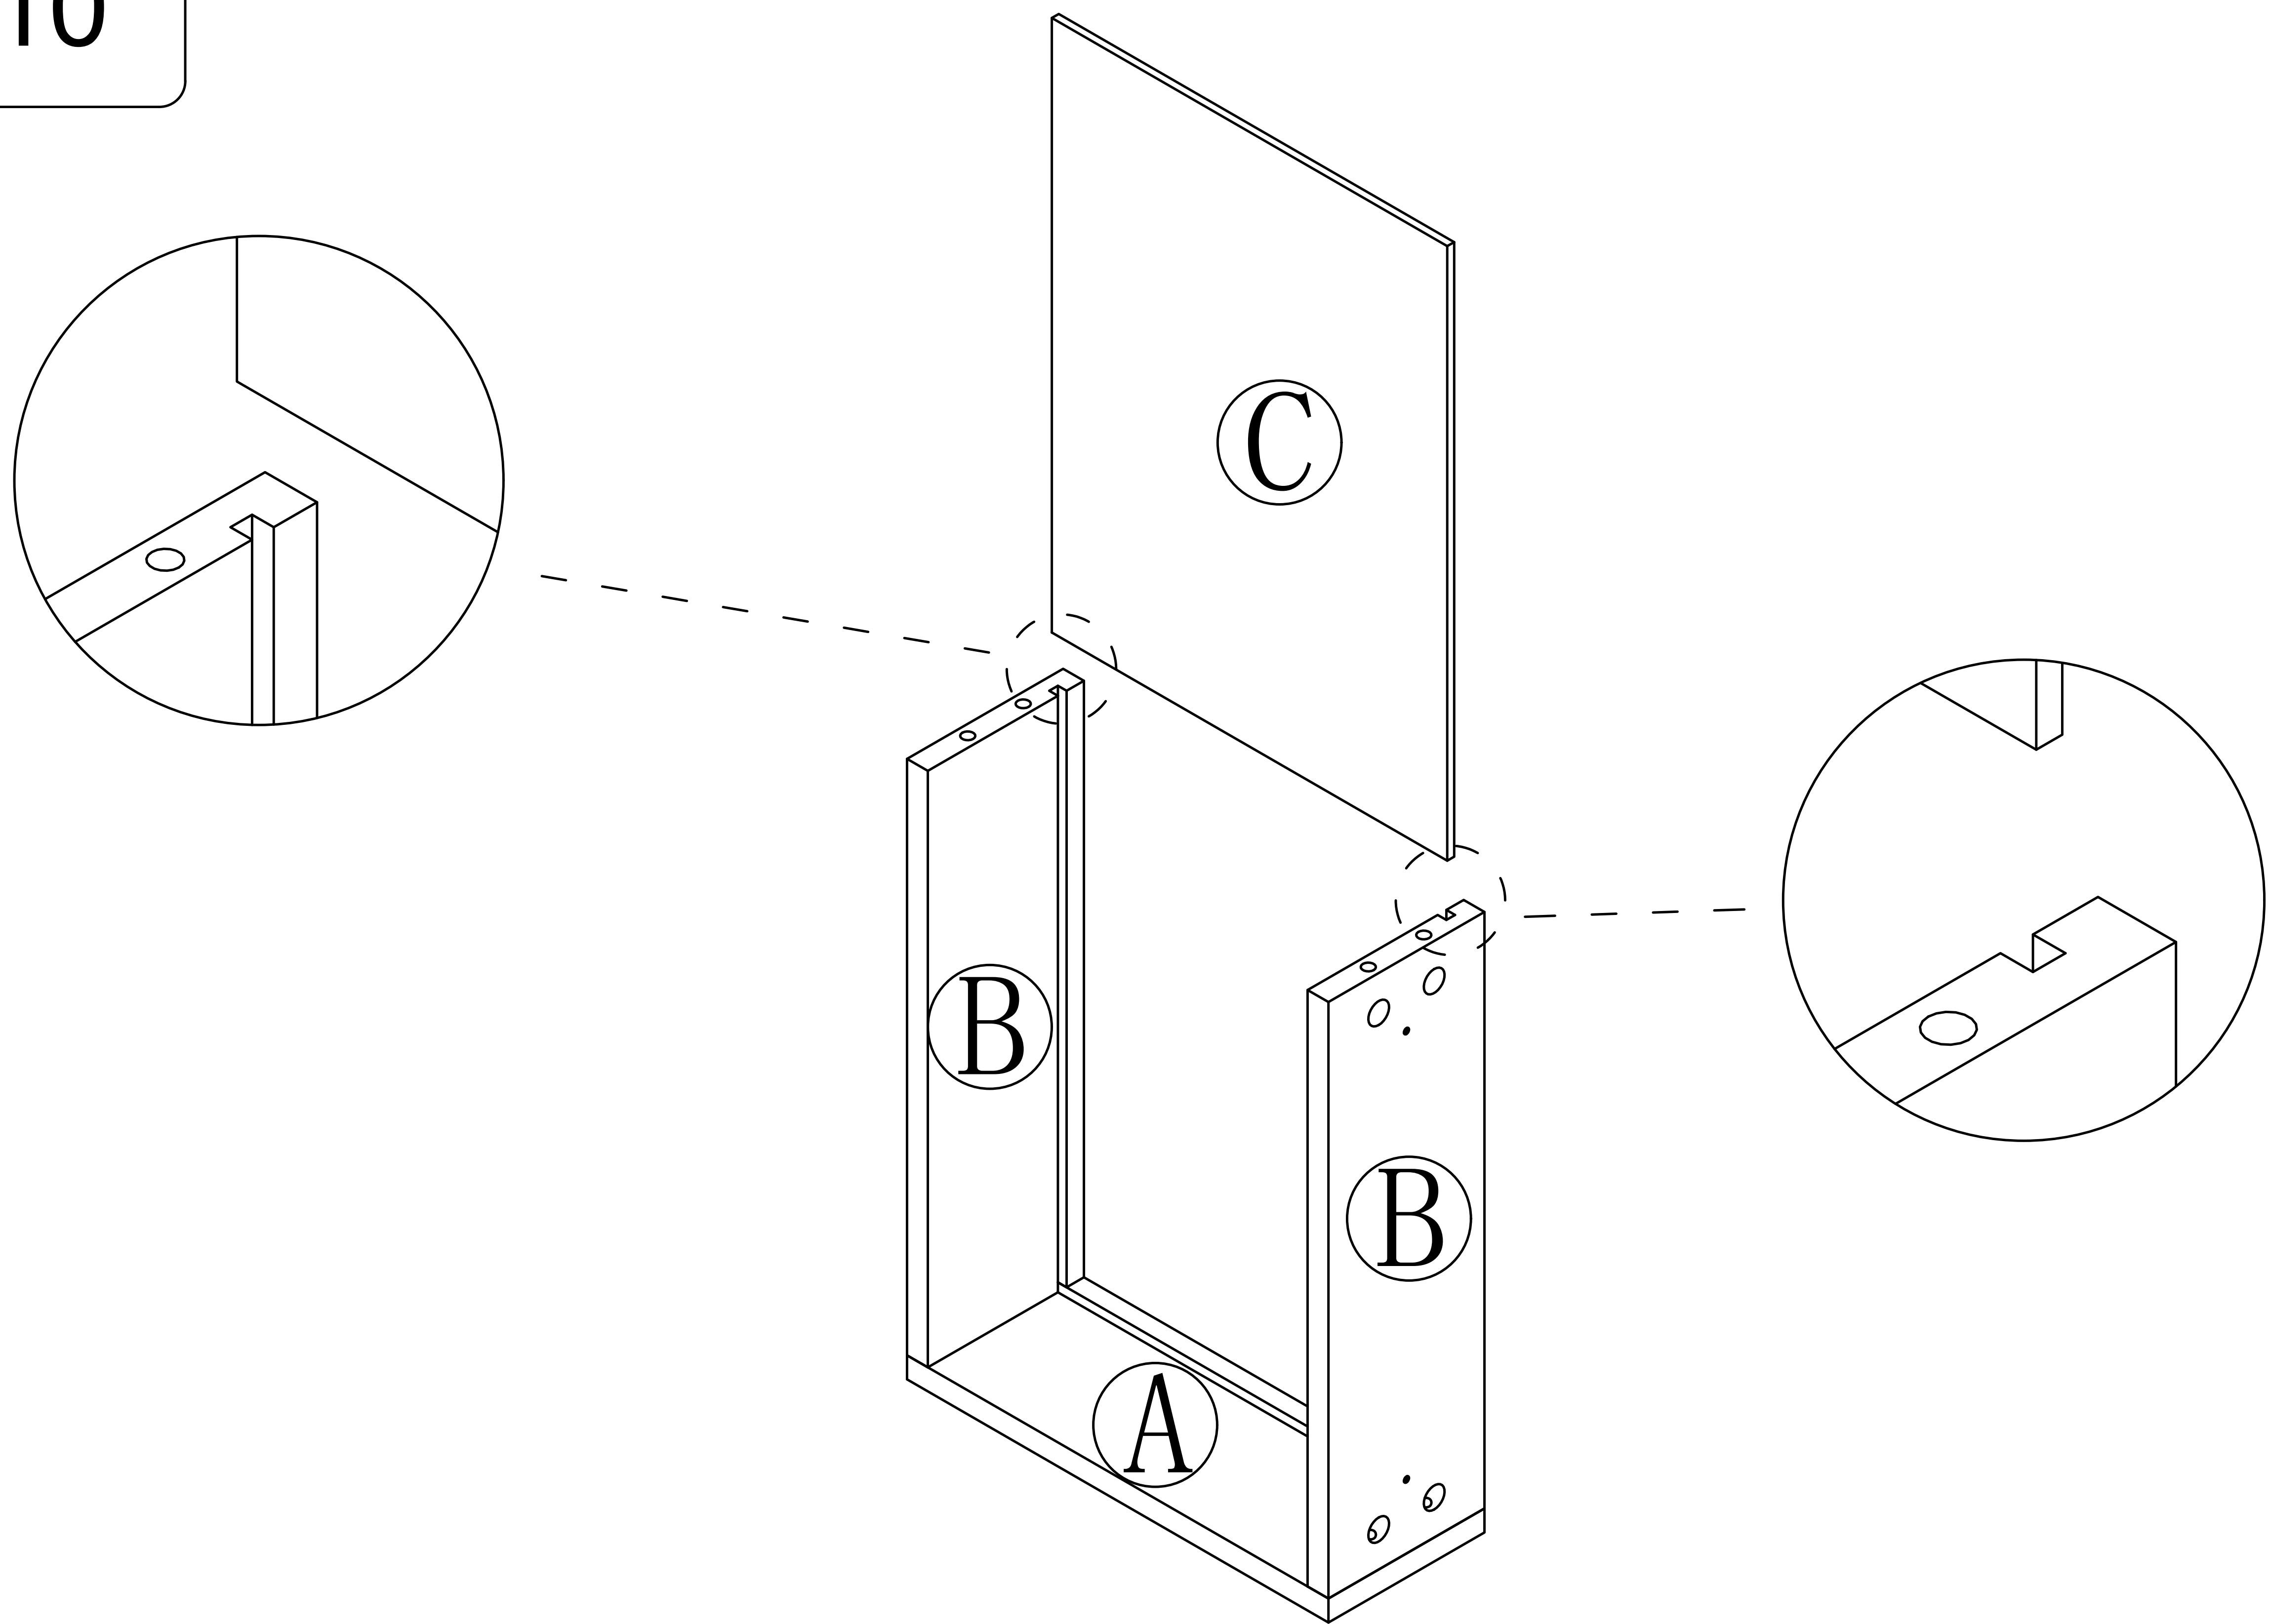


Step 11


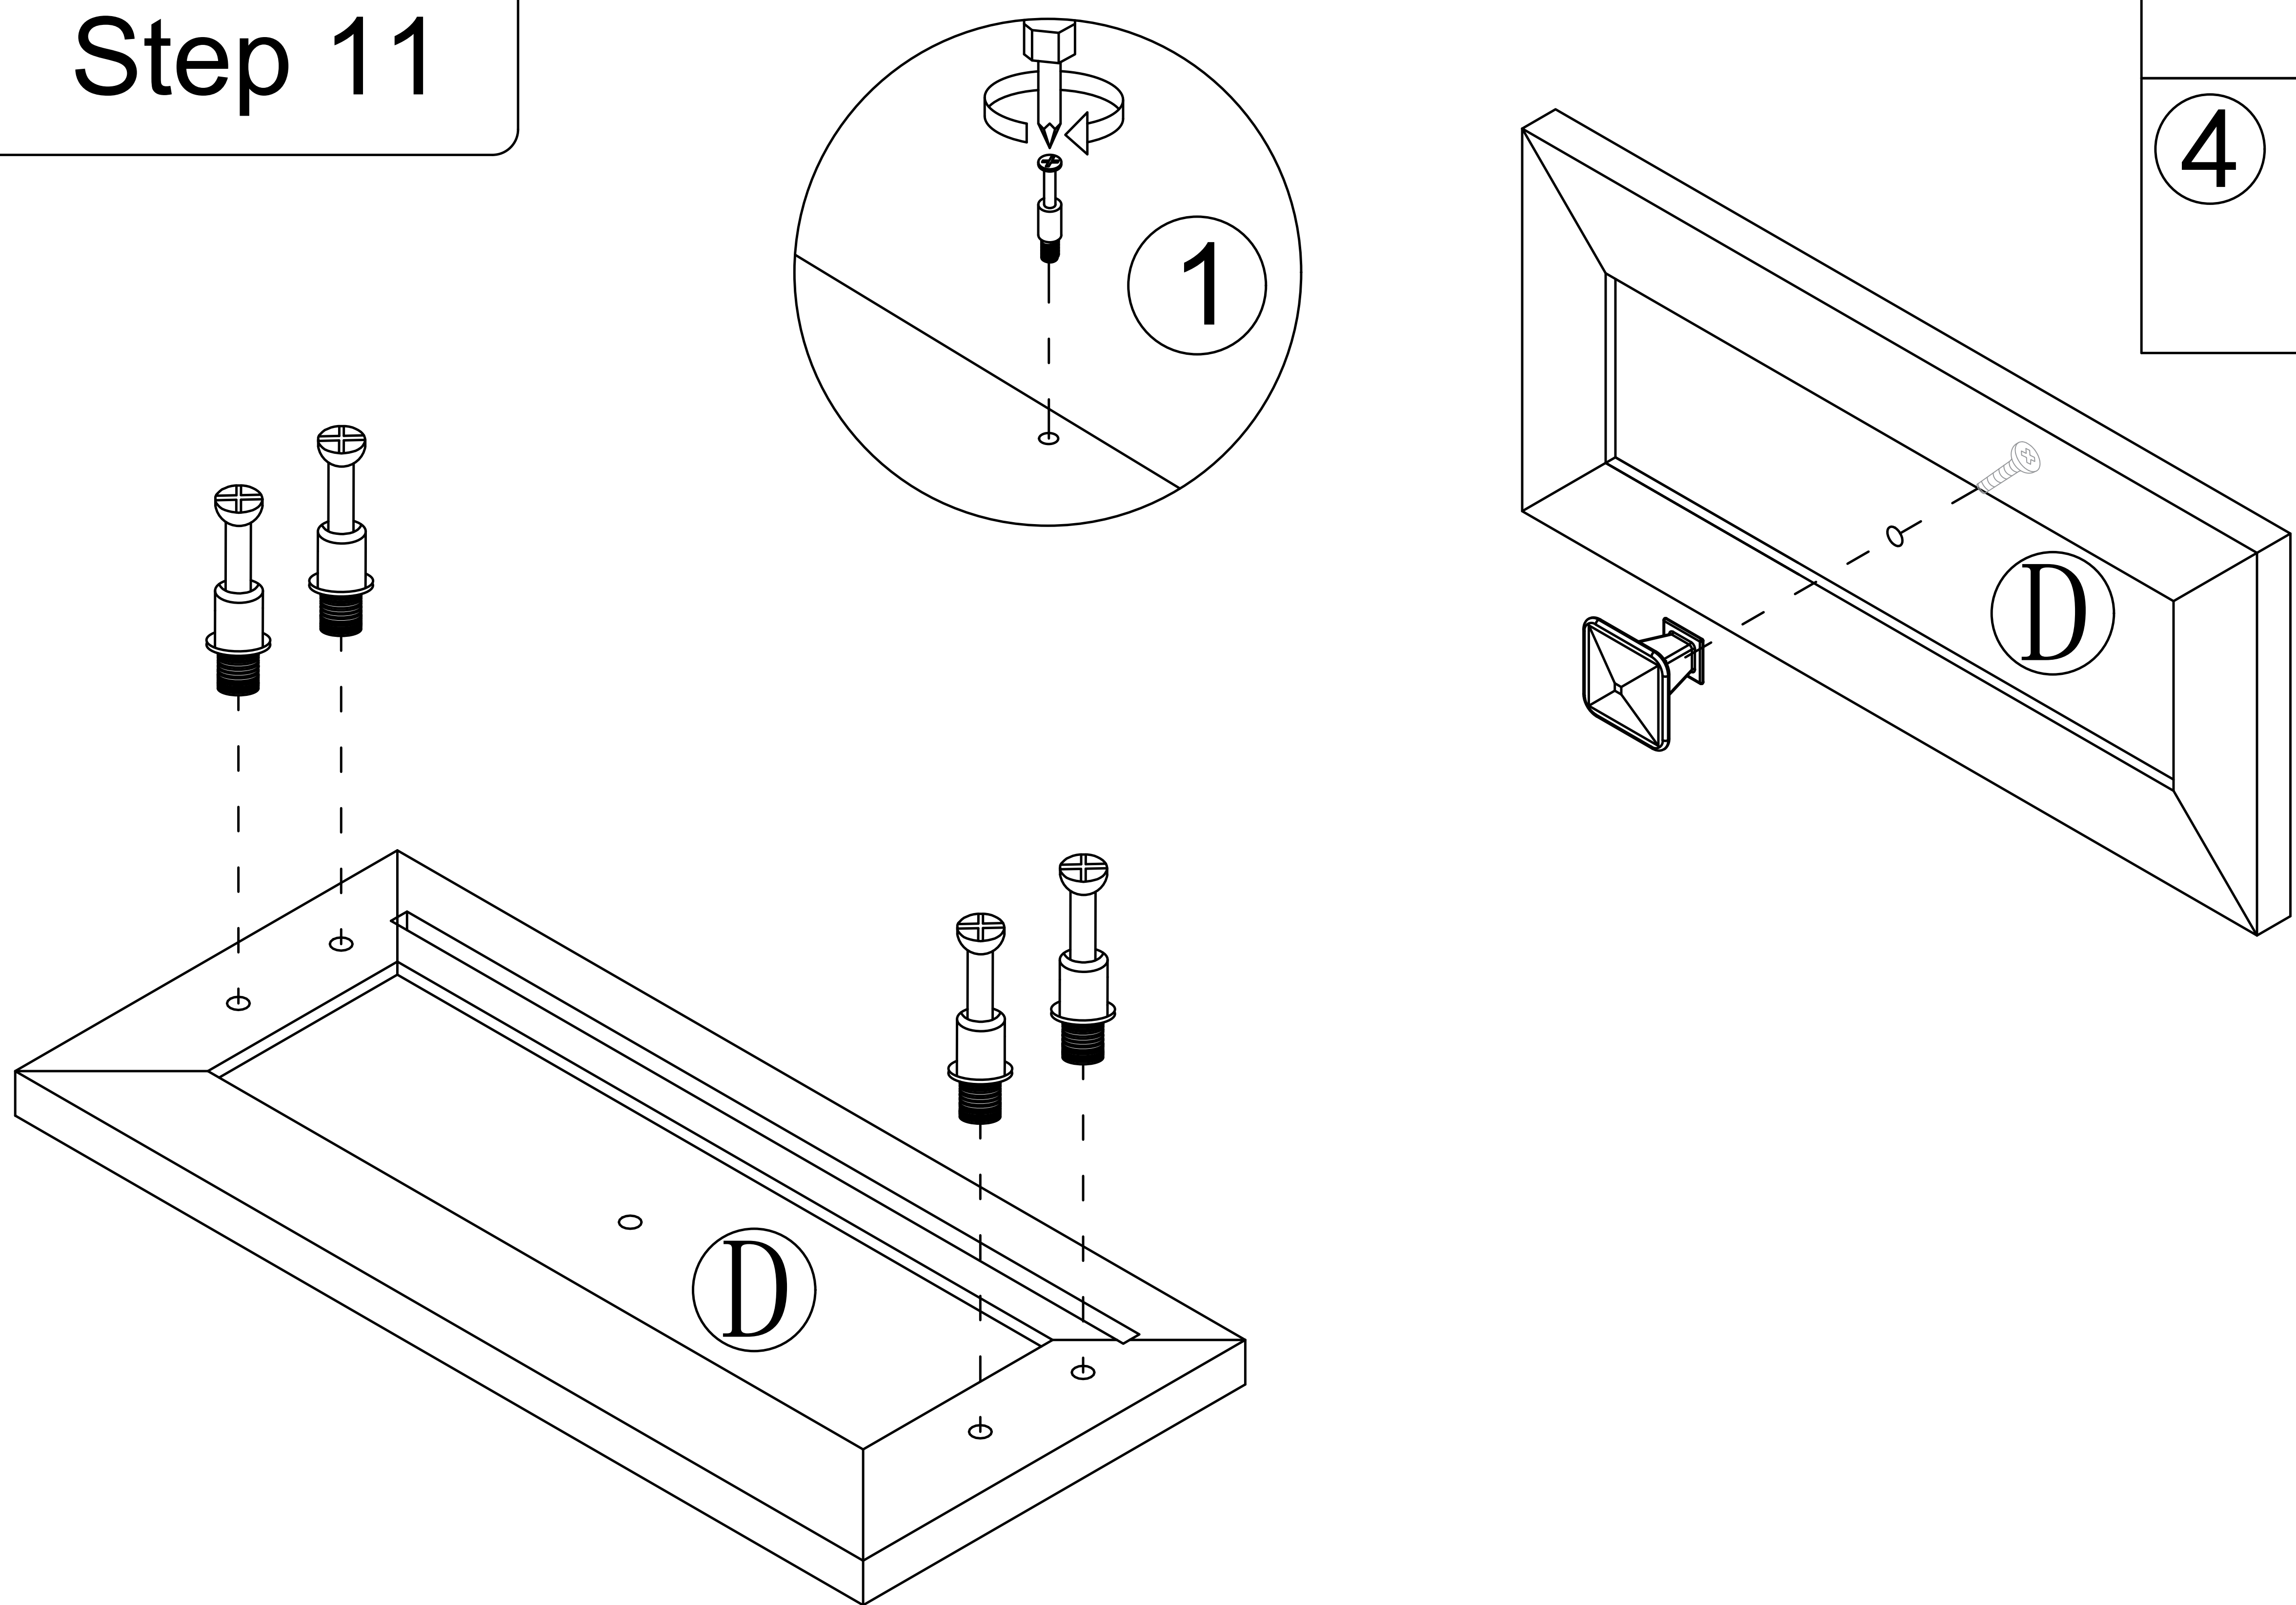


Step 12

2

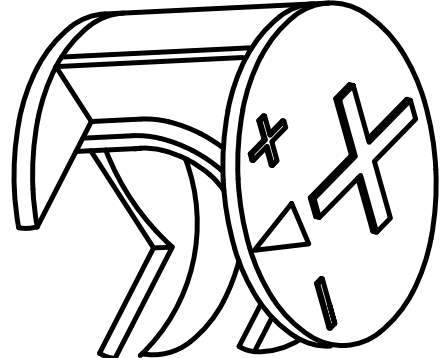


x8

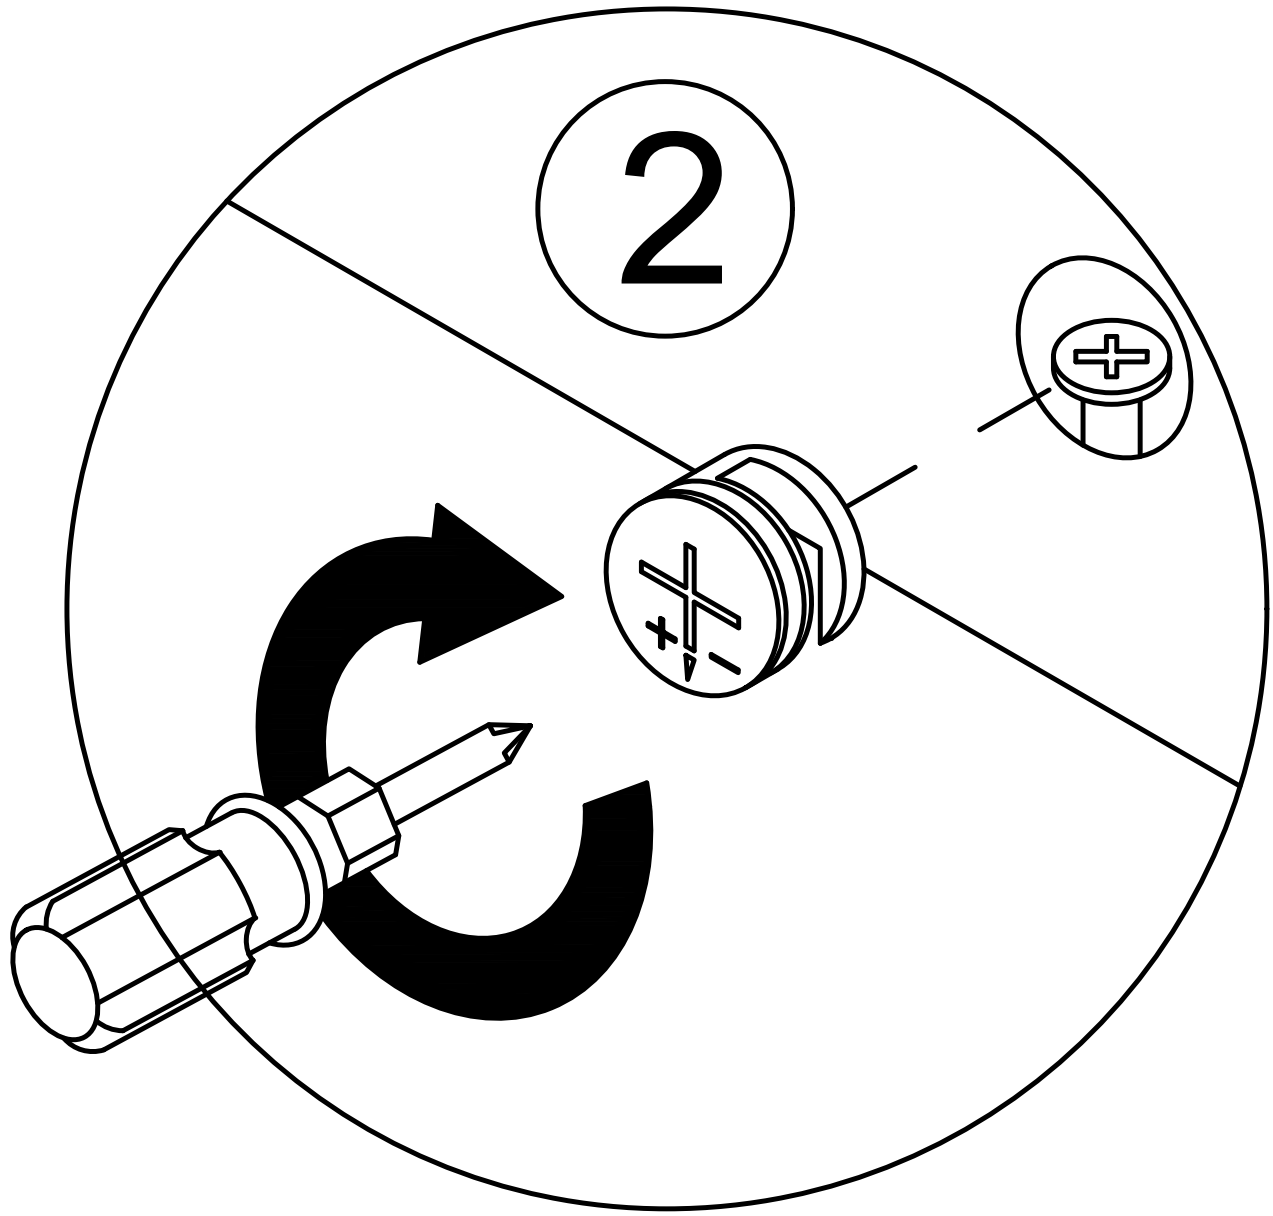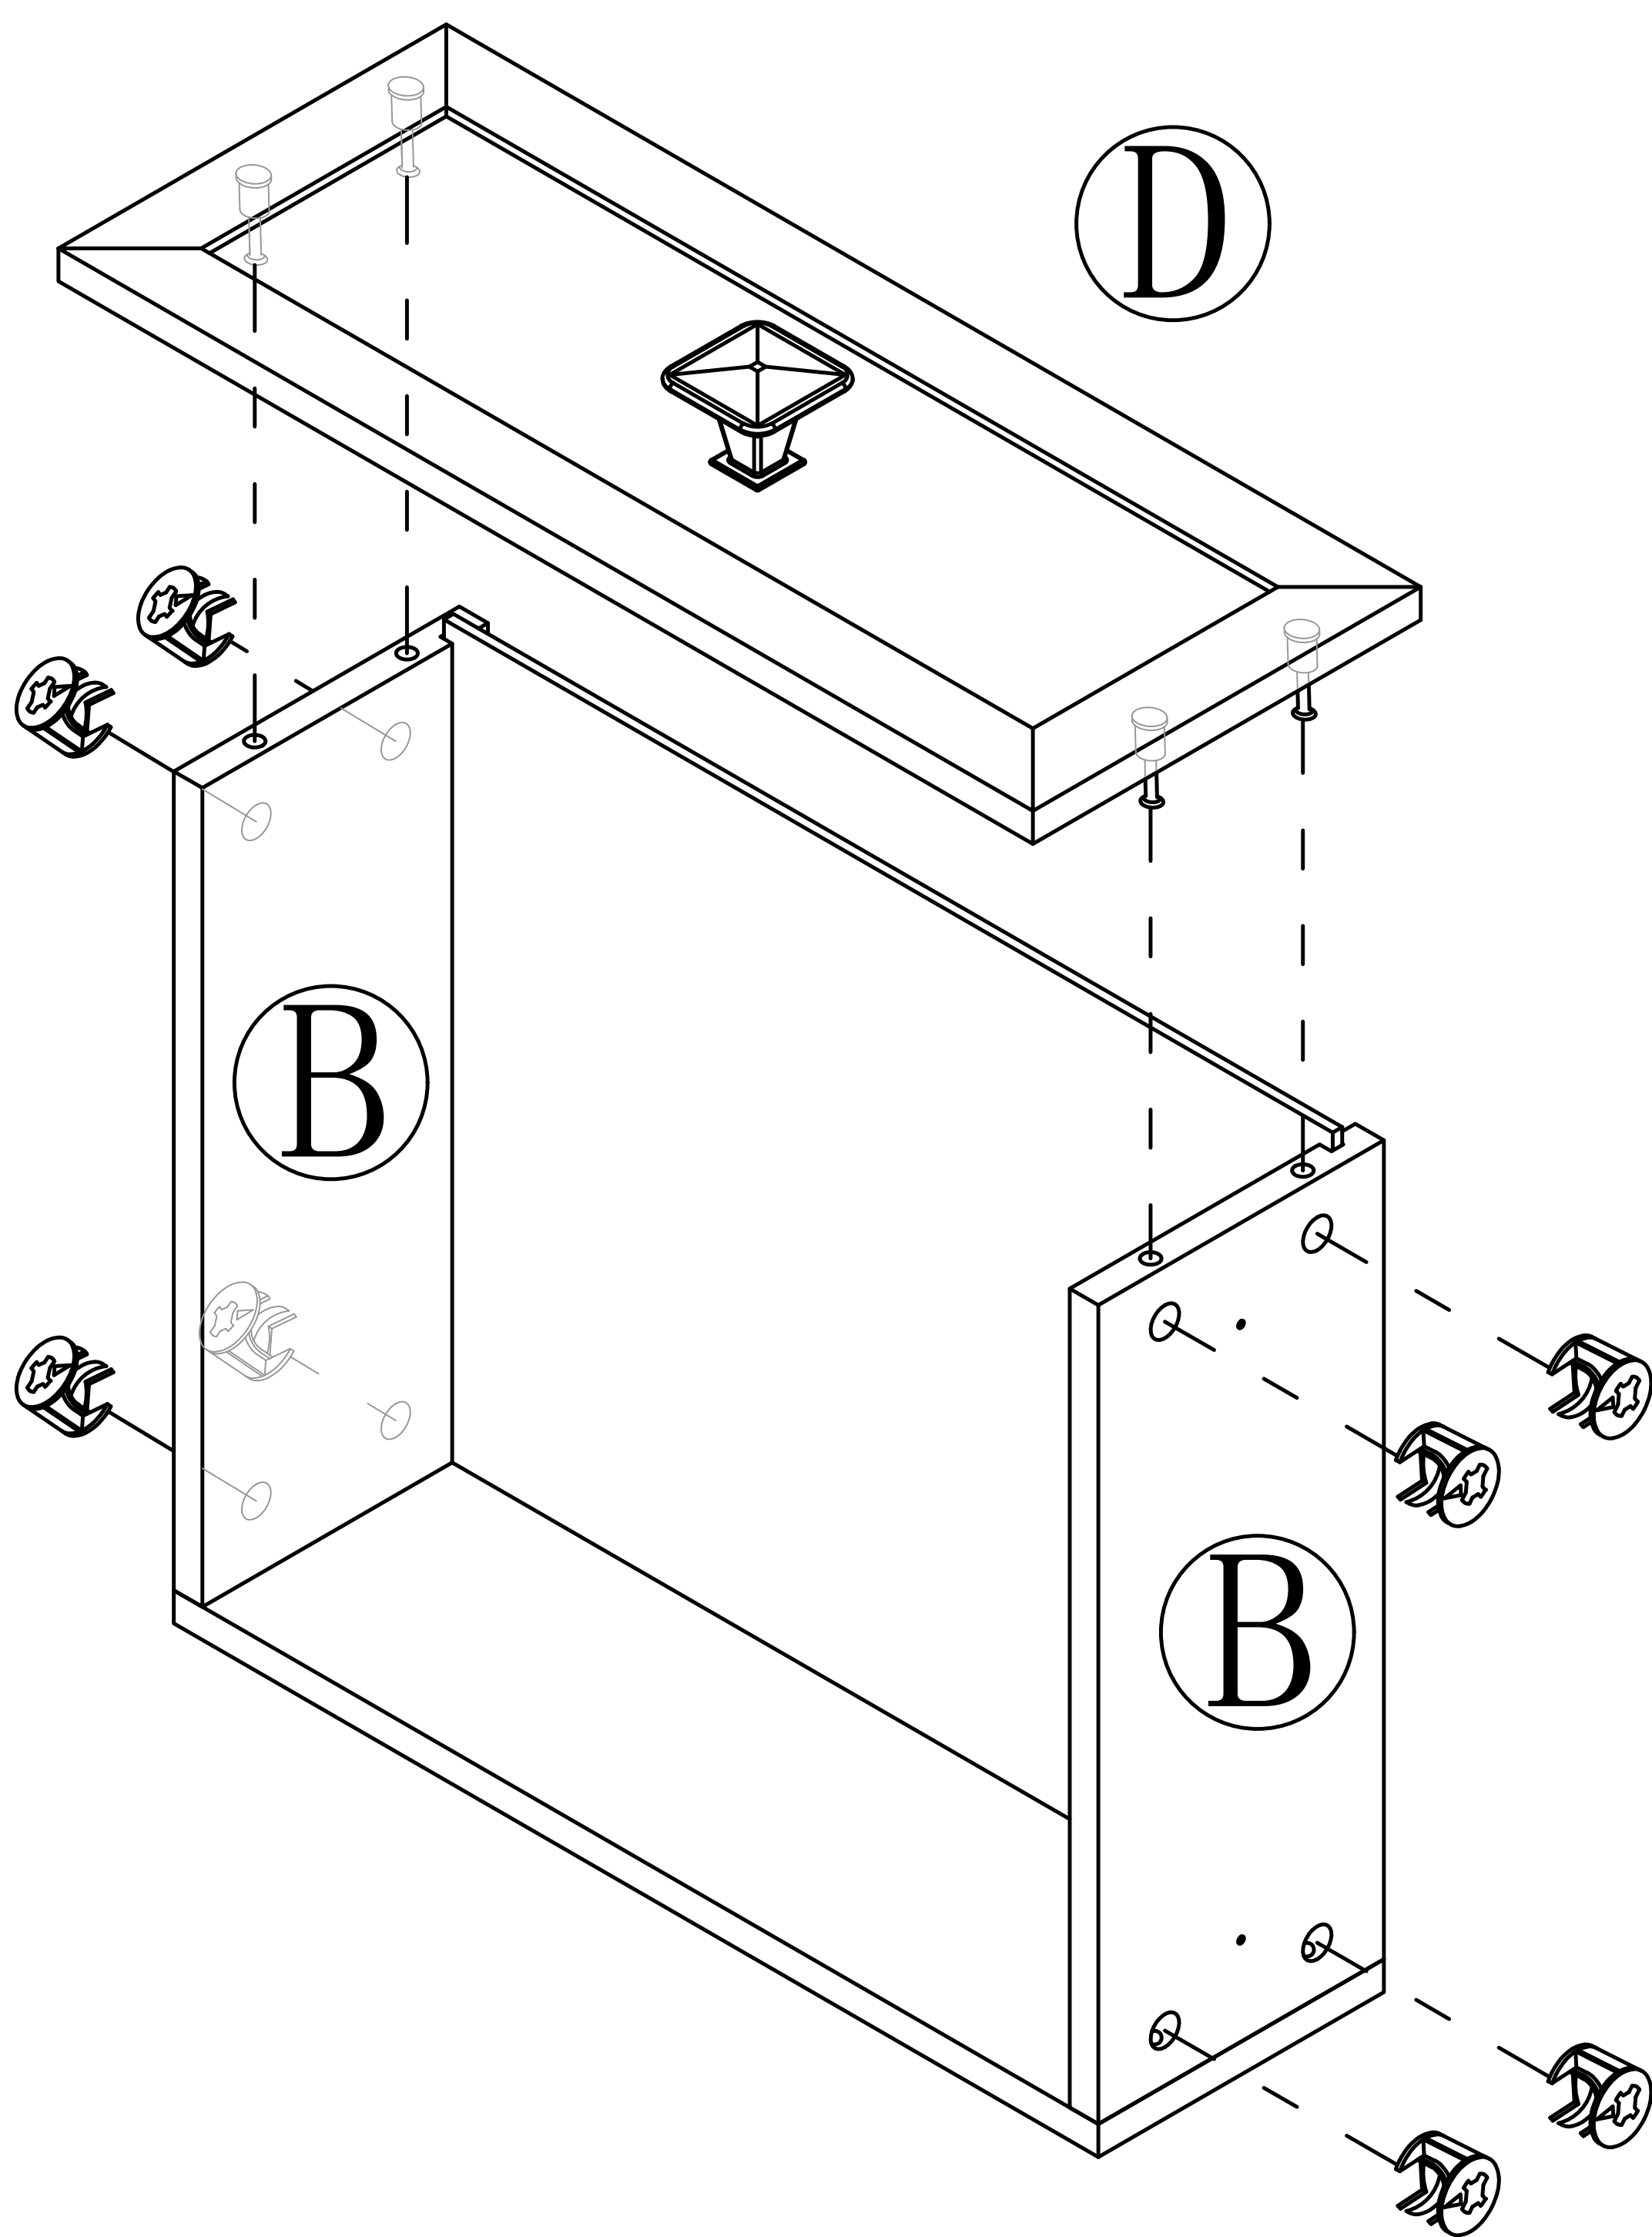

Step 13

5

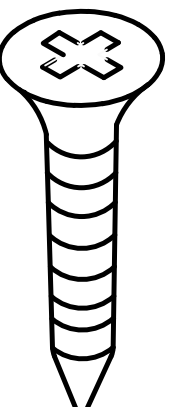


x4






5




x2

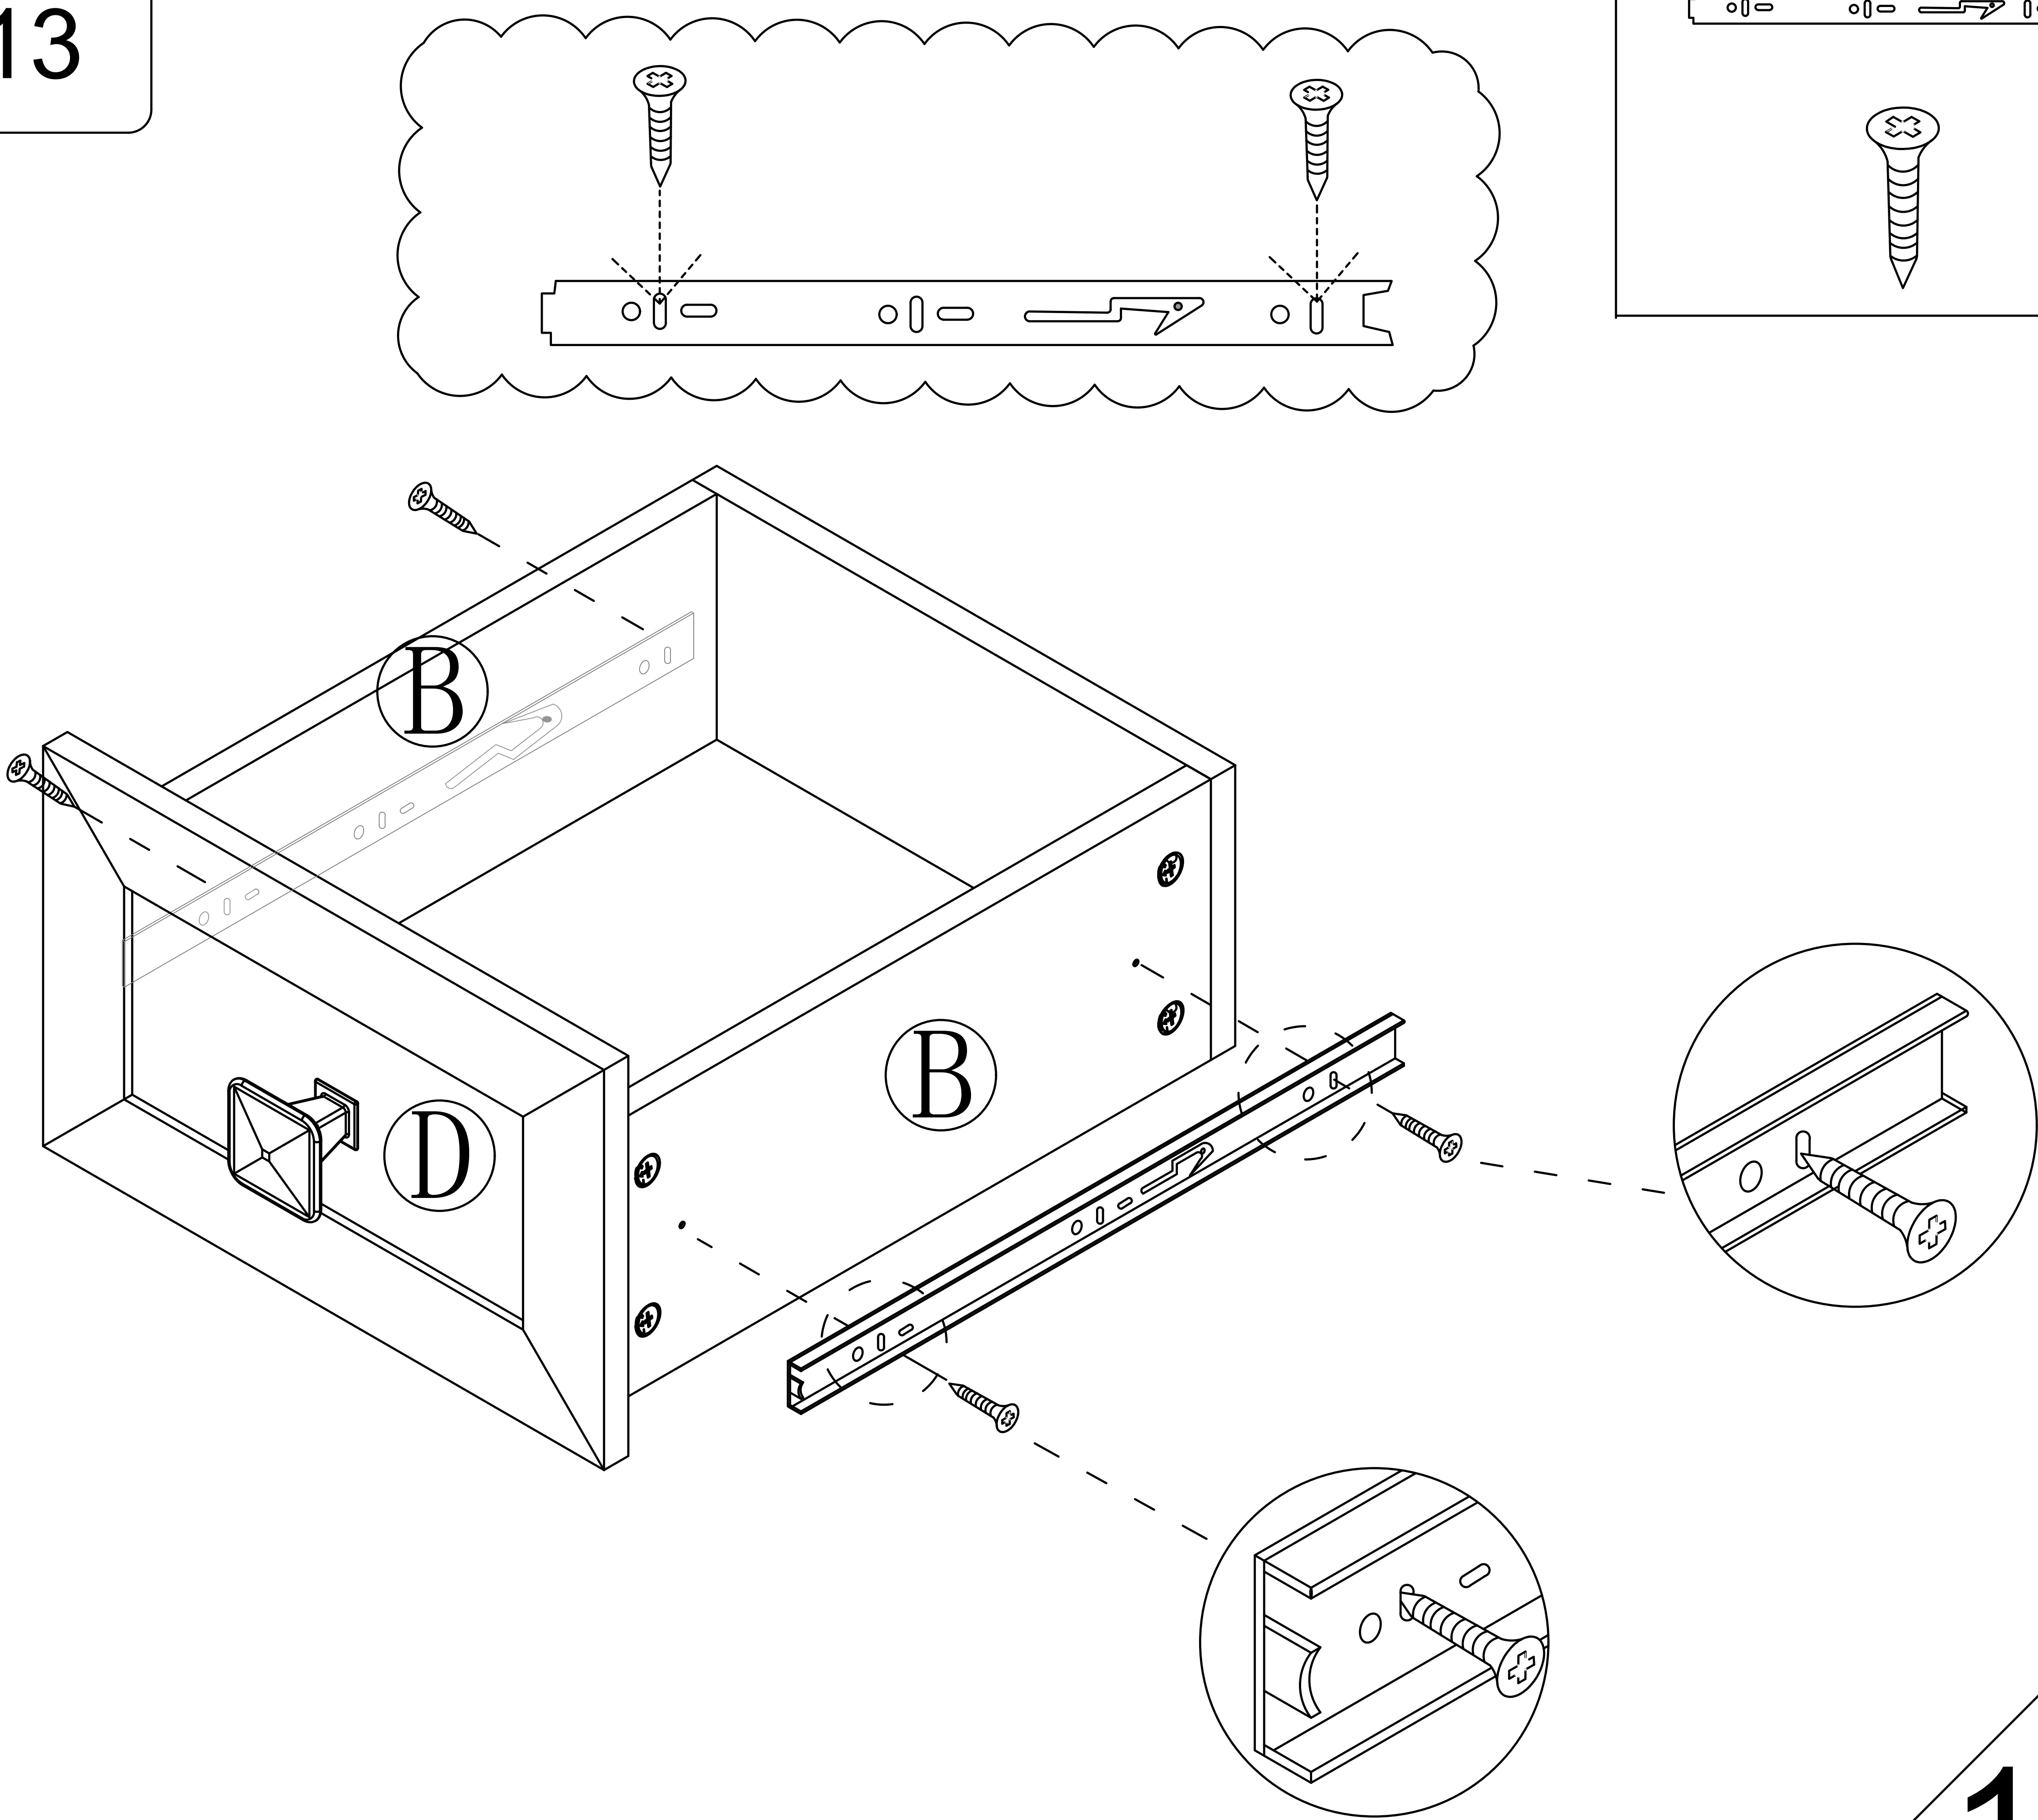















Step 14

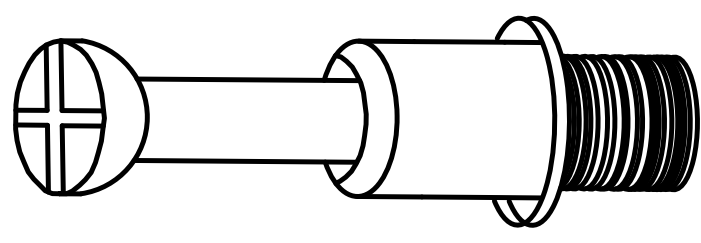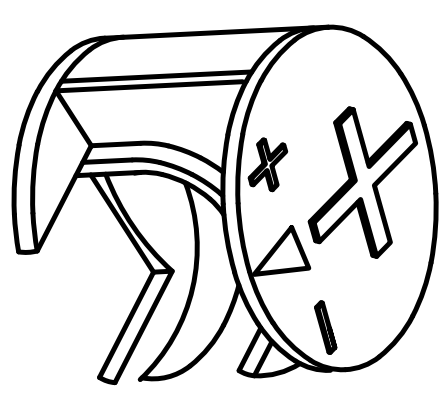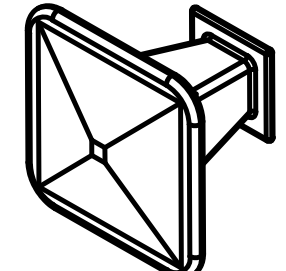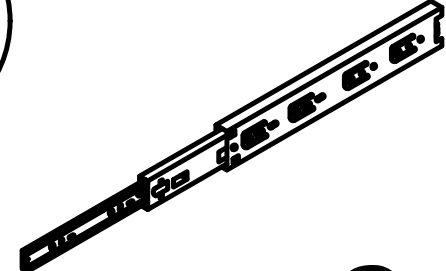
- | | | |
|---|---|----|
| 1 |  | x8 |
| 2 |  | x8 |
| 4 |  | x1 |
| |  | x1 |
| 5 |  | x2 |
| |  | x4 |

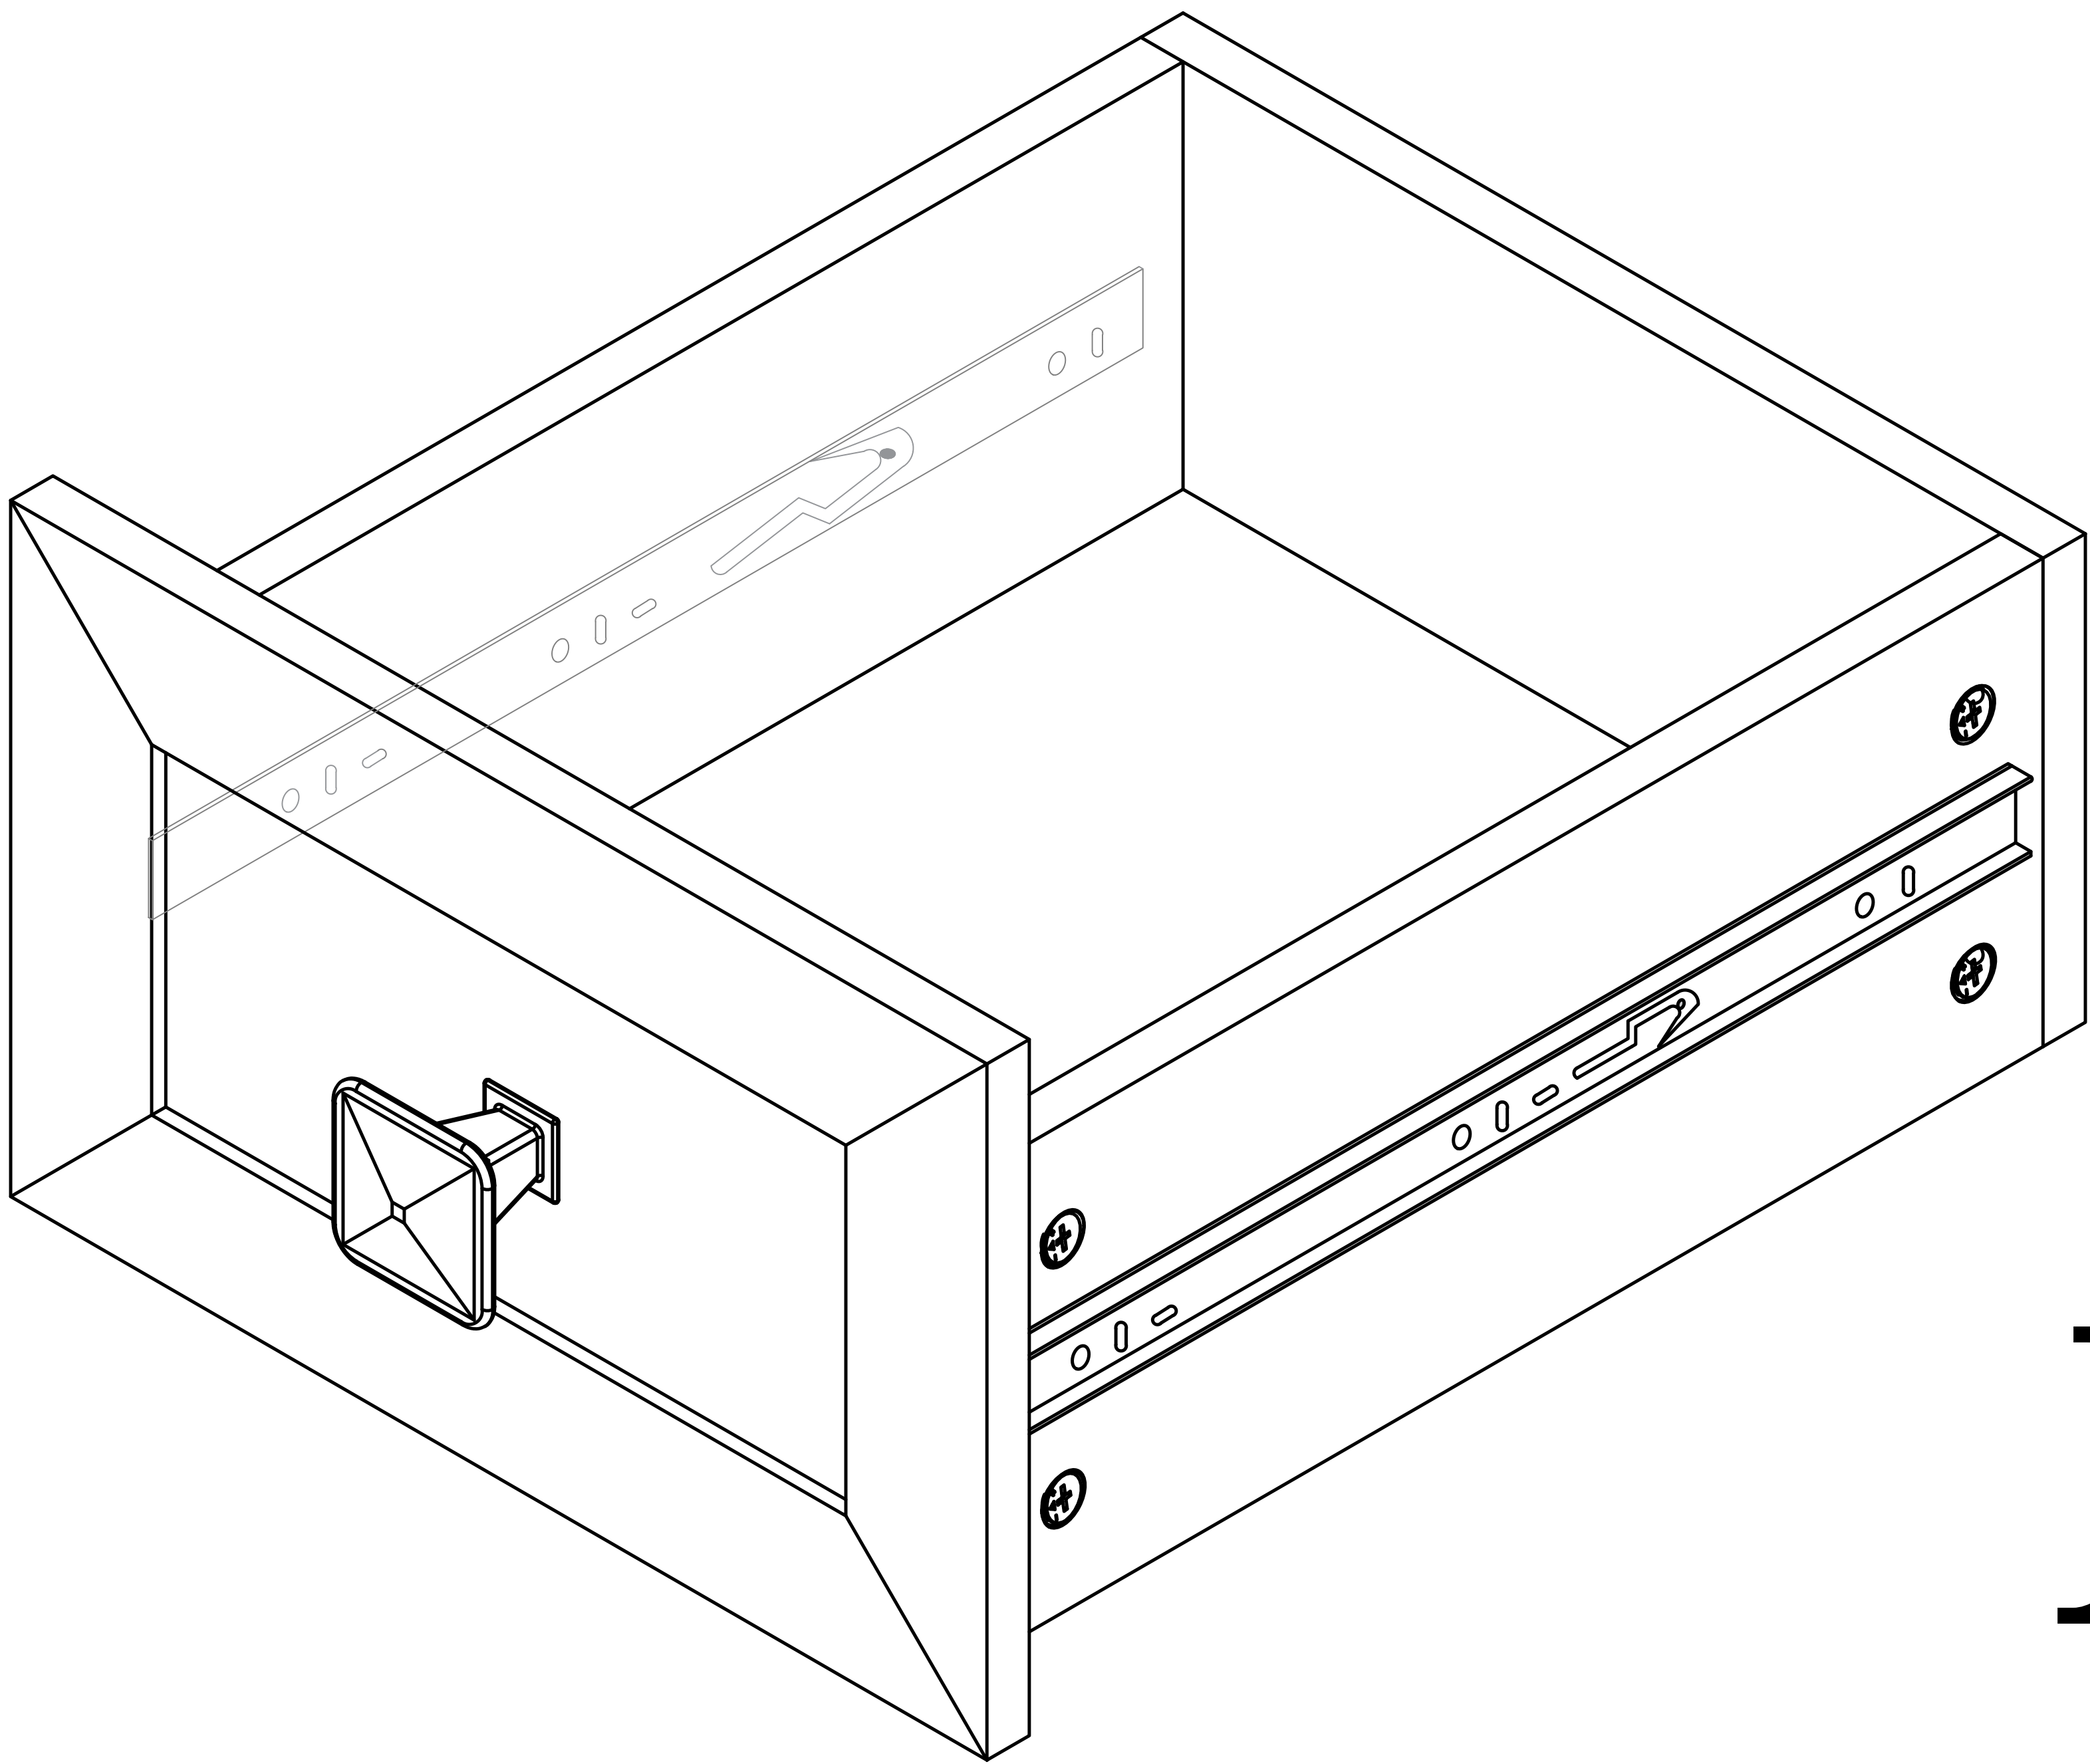



x2

Repeat the drawer installation steps

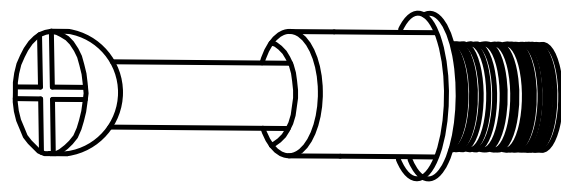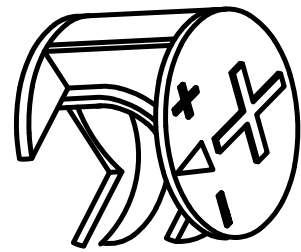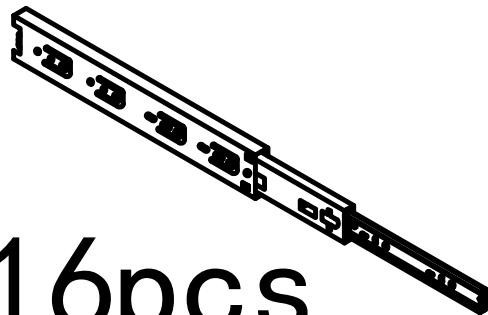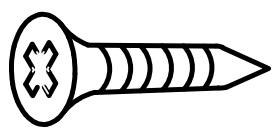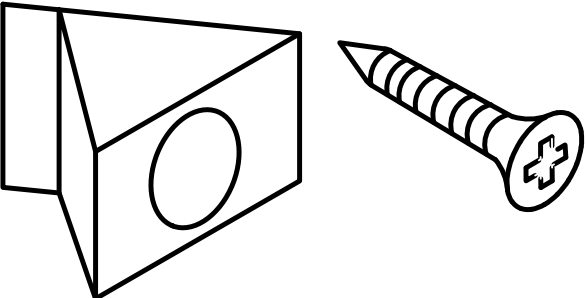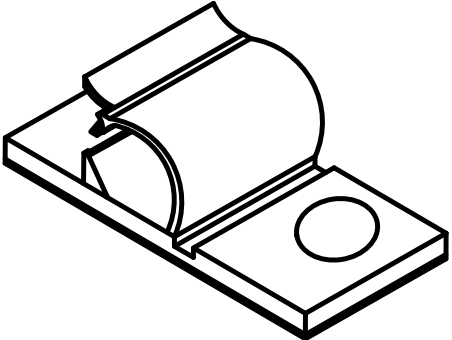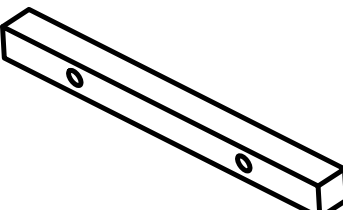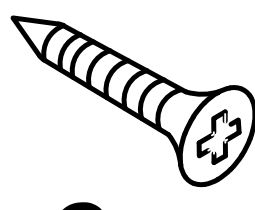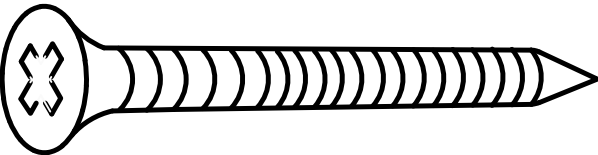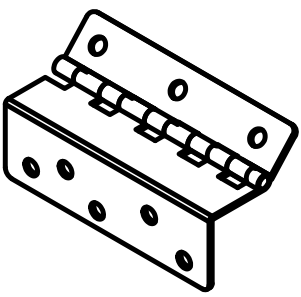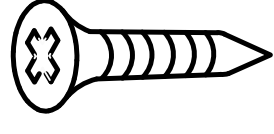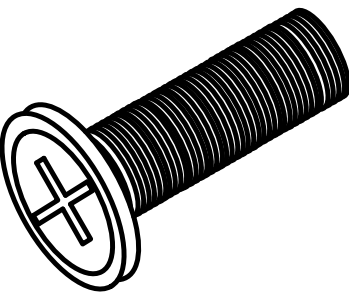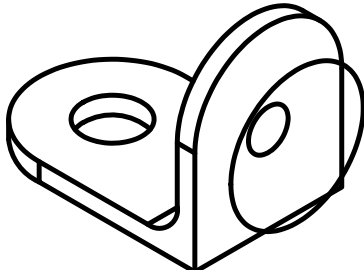1		71pcs	2		71pcs	3		24pcs
5	 16pcs	 48pcs	6		5pcs	7	 20pcs	
9	 1pcs		10	 1pcs	 2pcs	11	 4pcs	
12	 2pcs	 16pcs	13	 1pcs		14	 2pcs	 2pcs


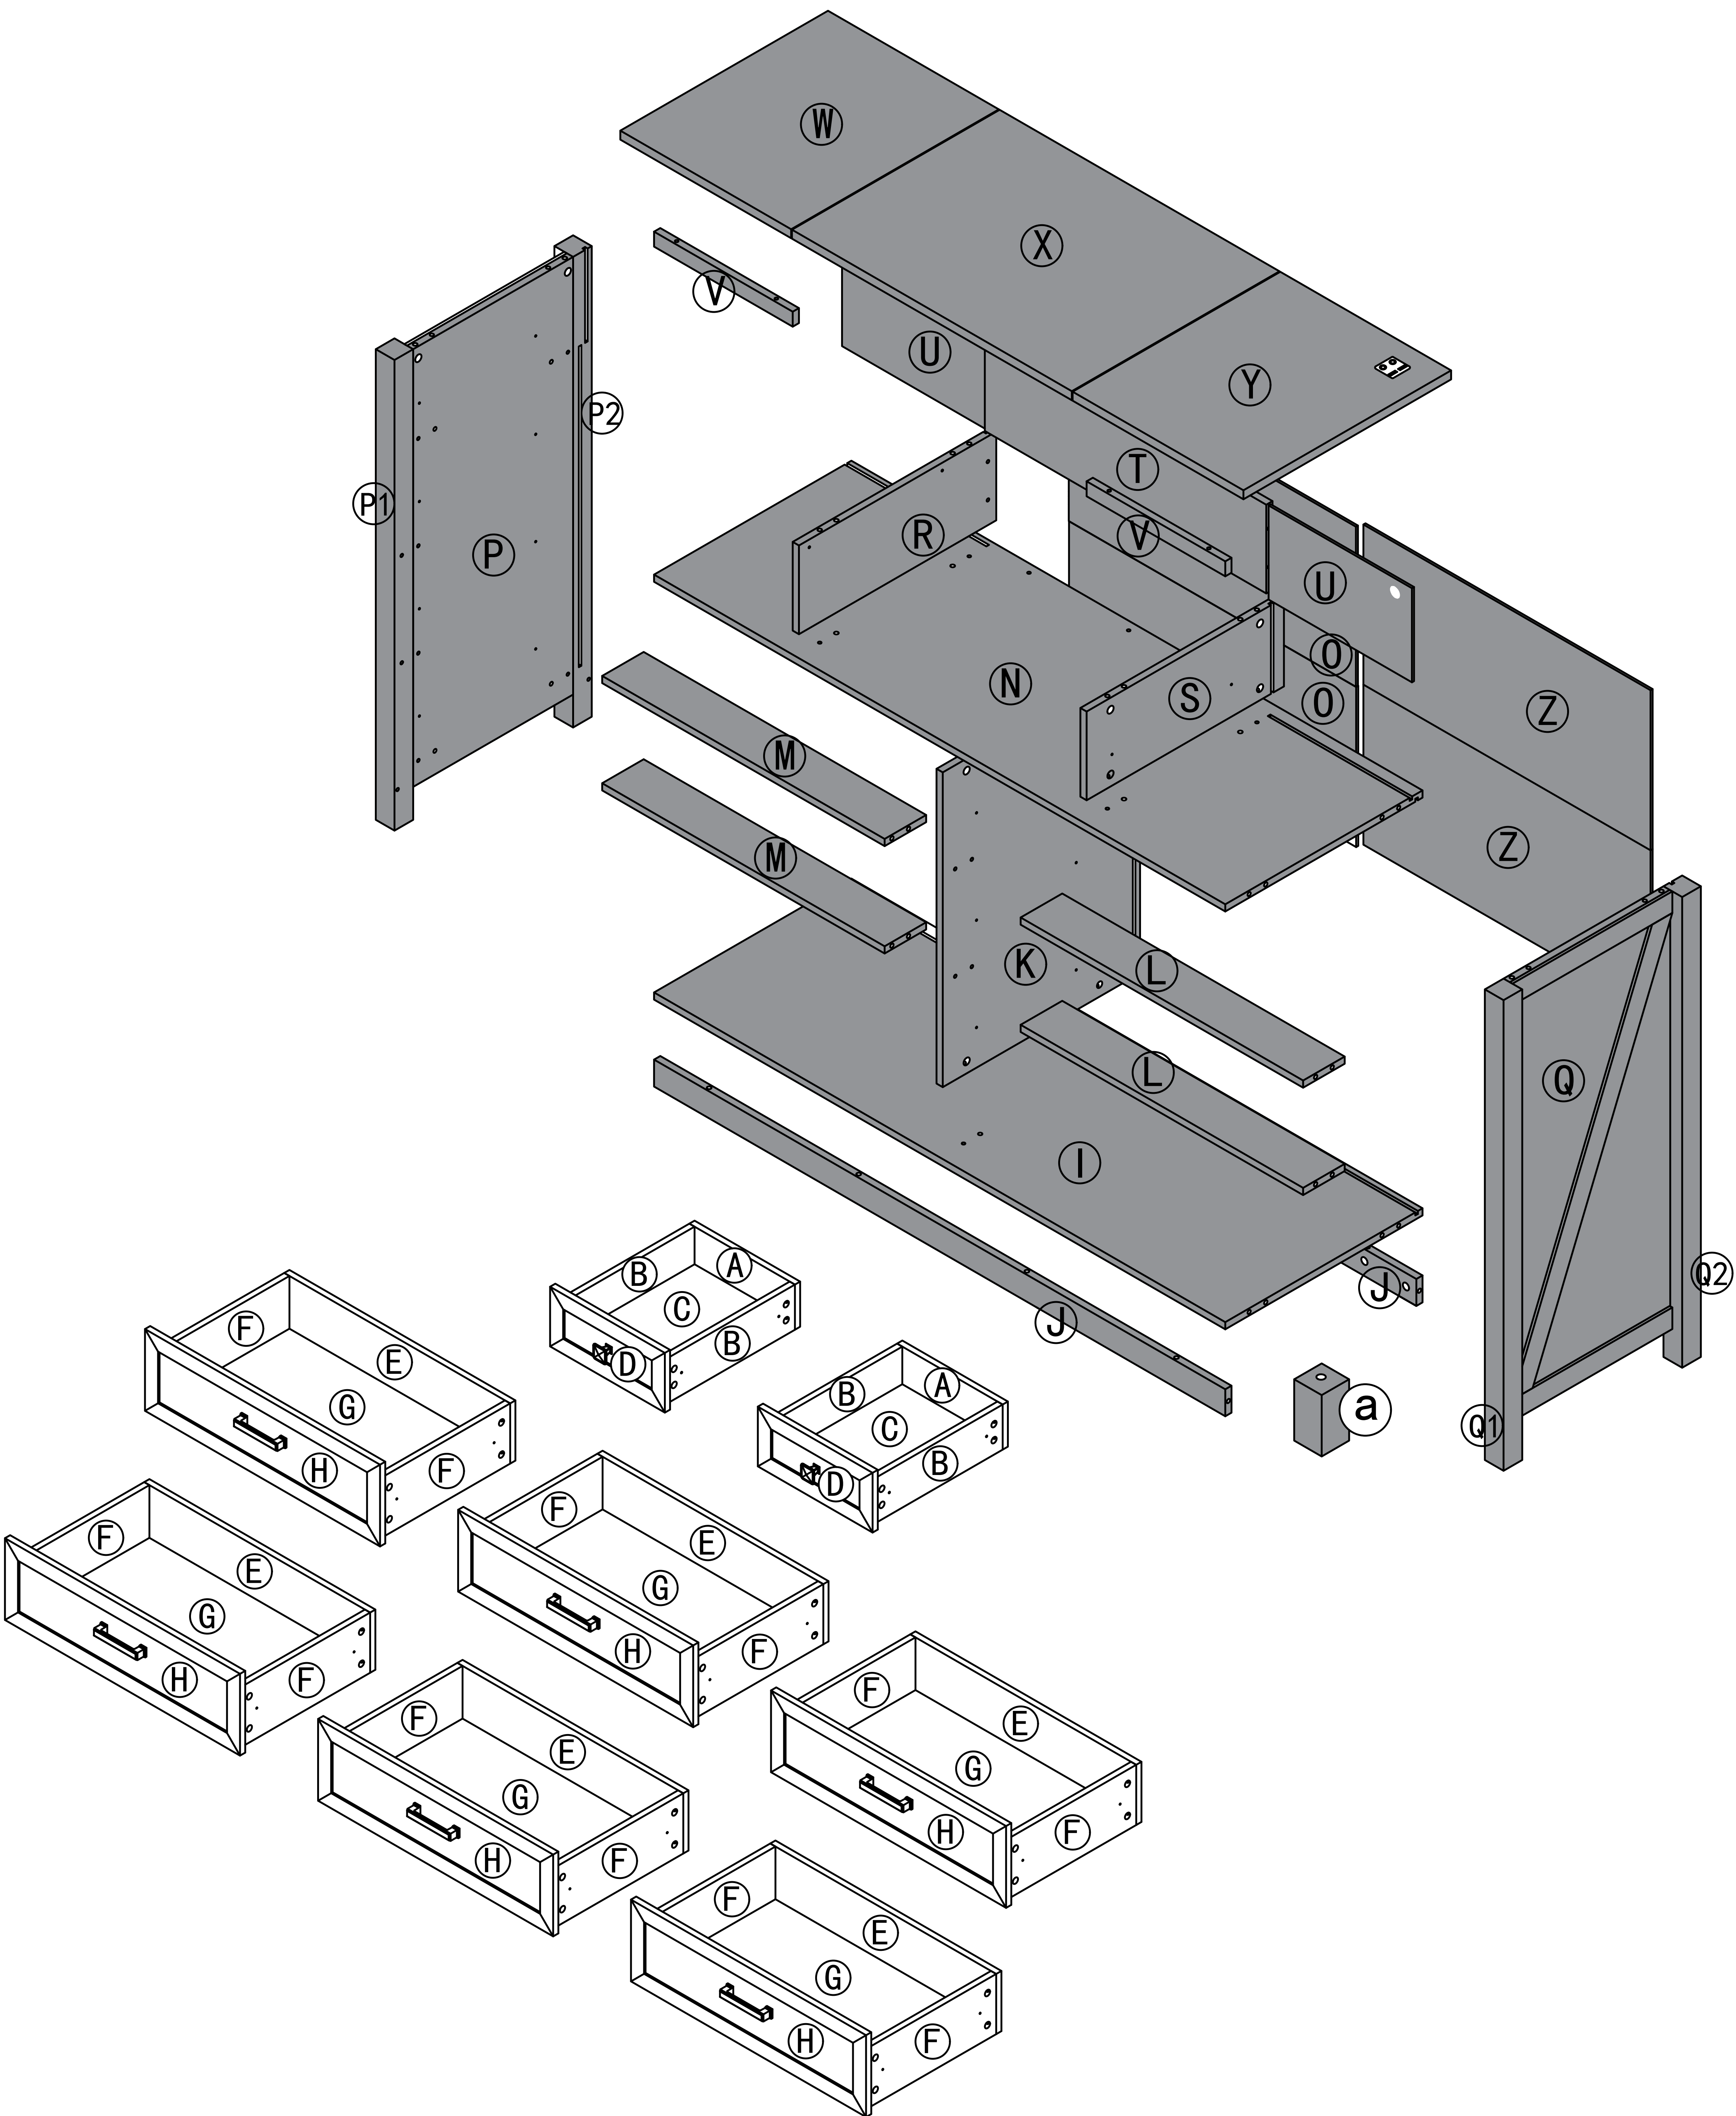


Step 15

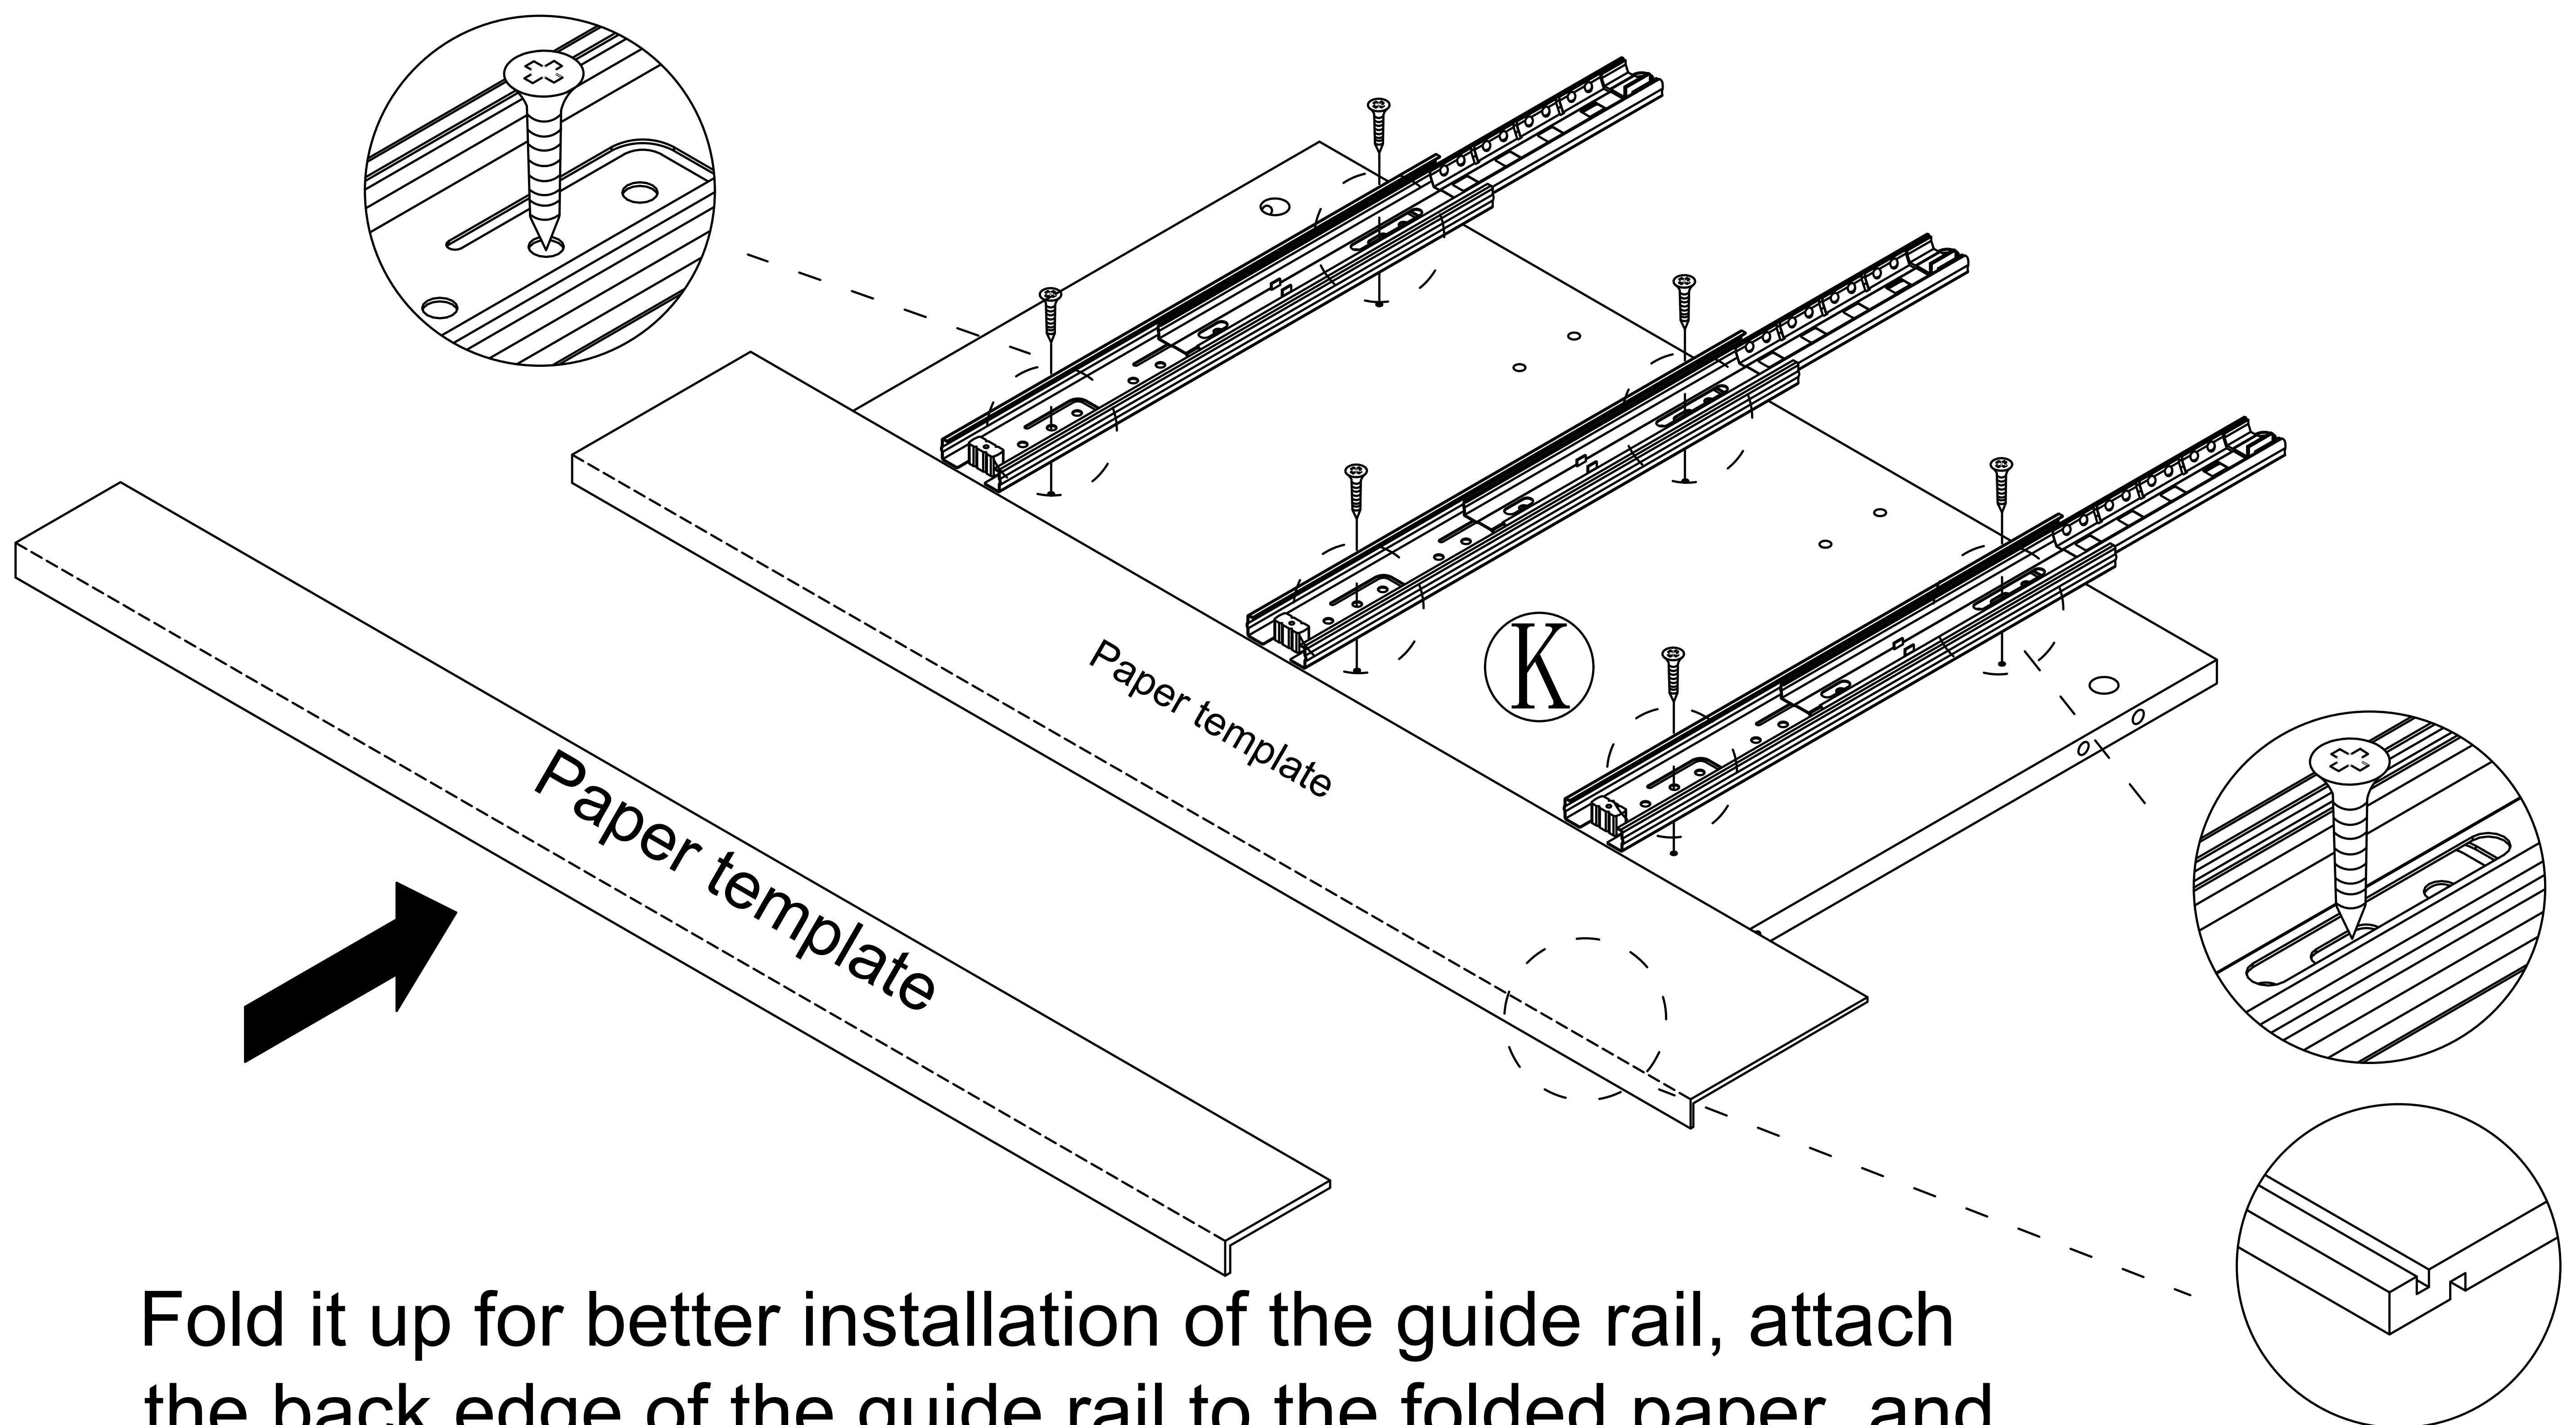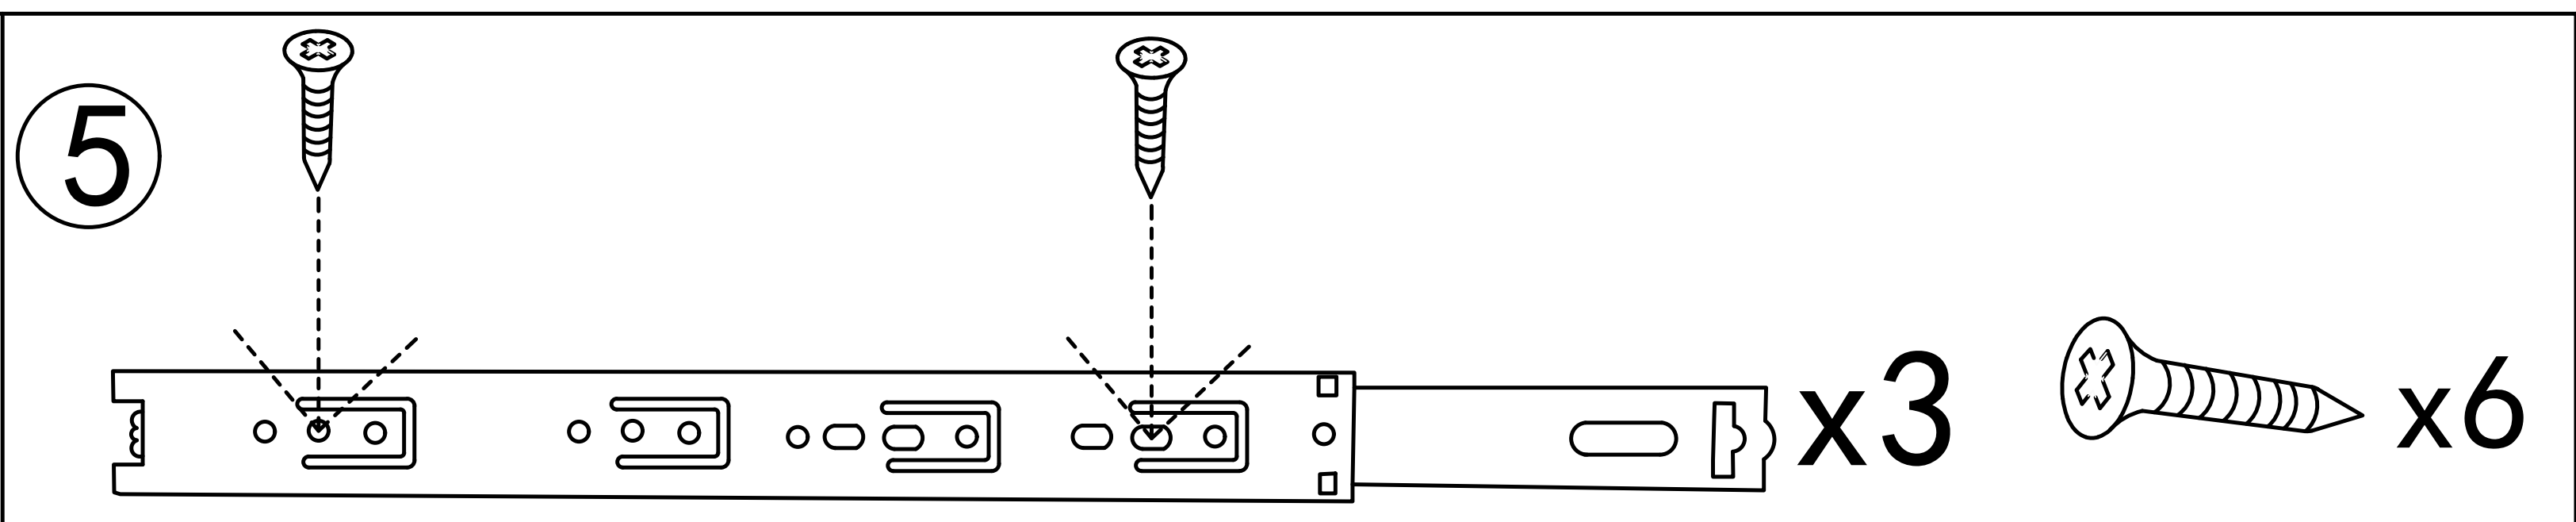



Fold it up for better installation of the guide rail, attach the back edge of the guide rail to the folded paper, and screw it into the corresponding hole position

Step 16

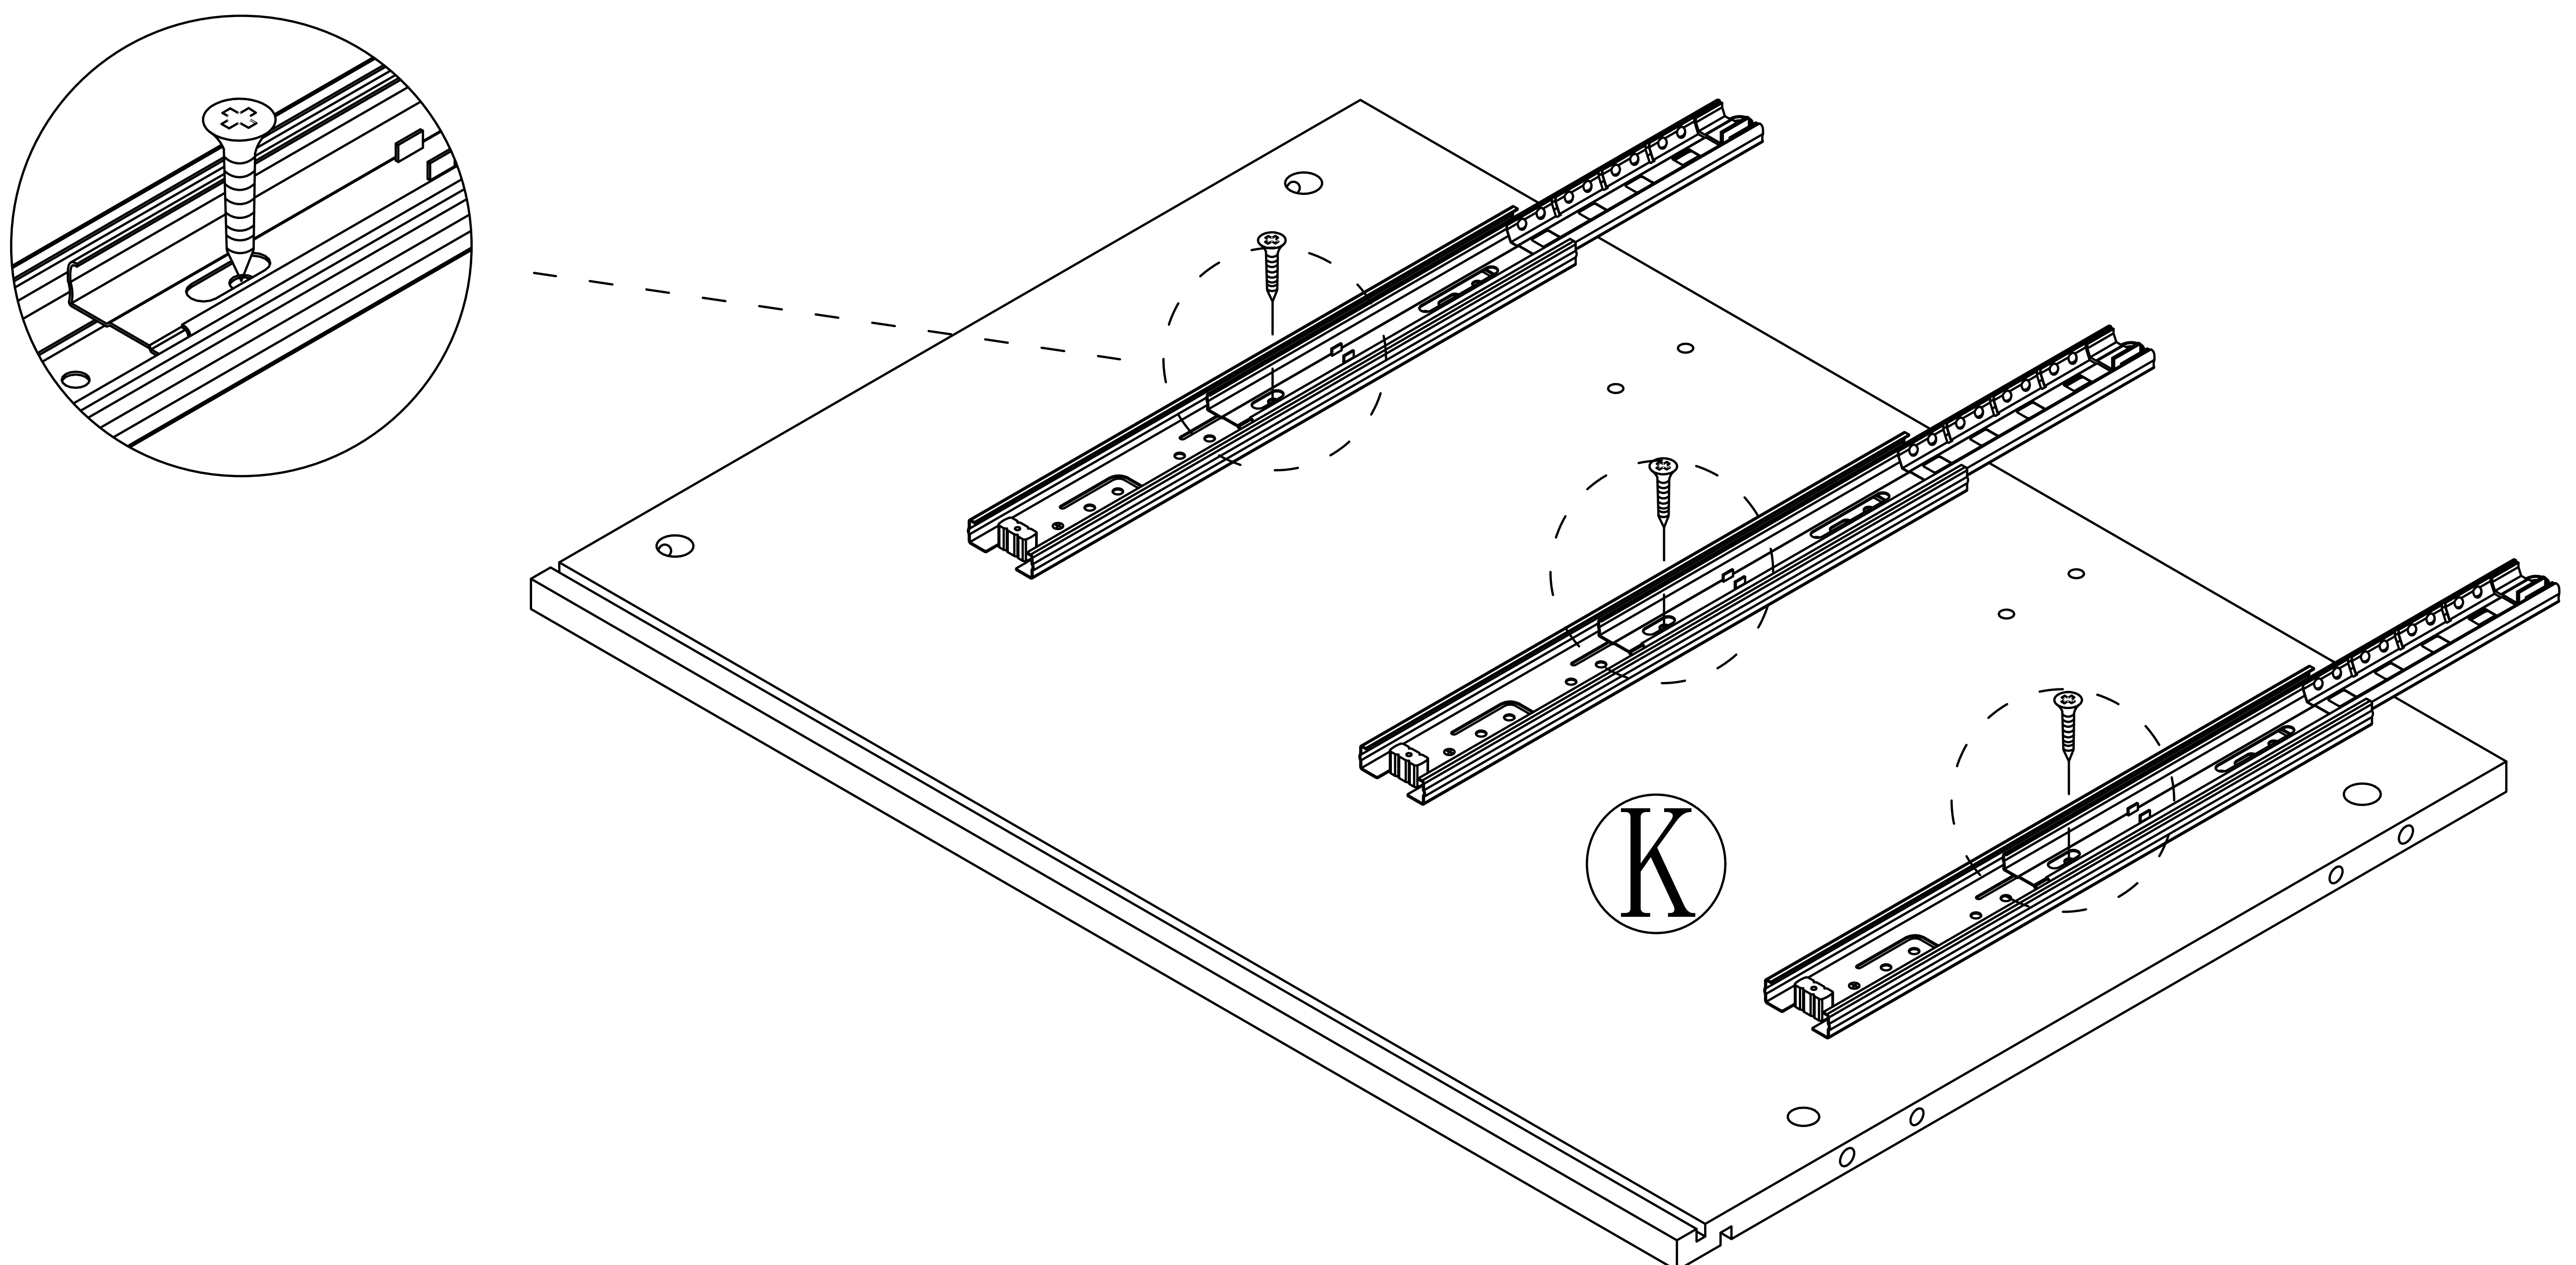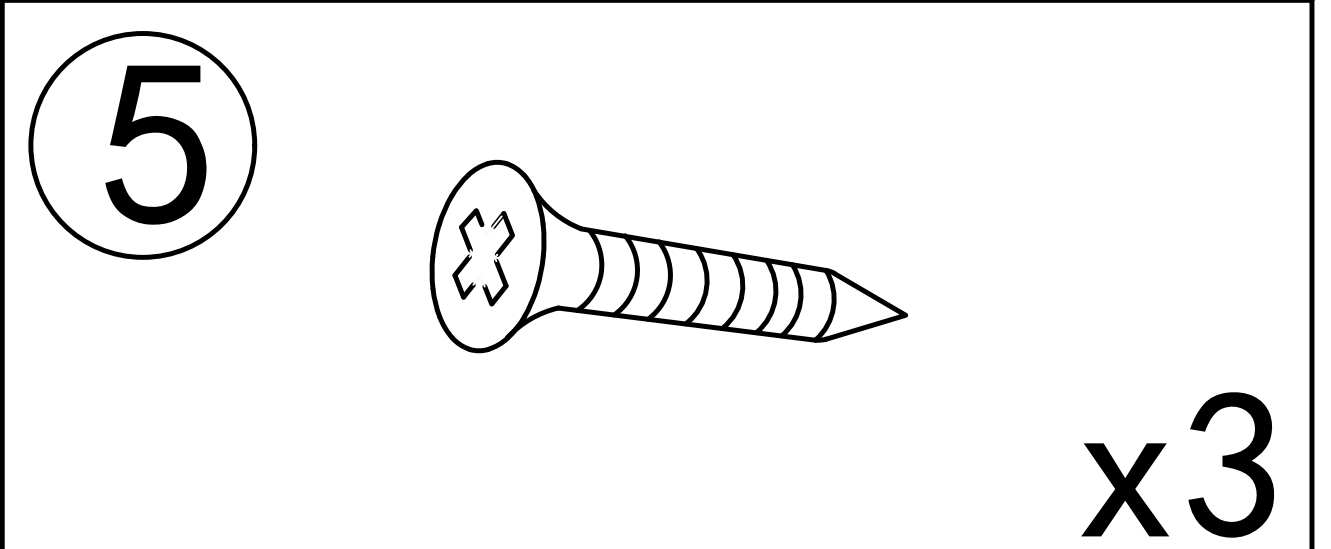


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 17

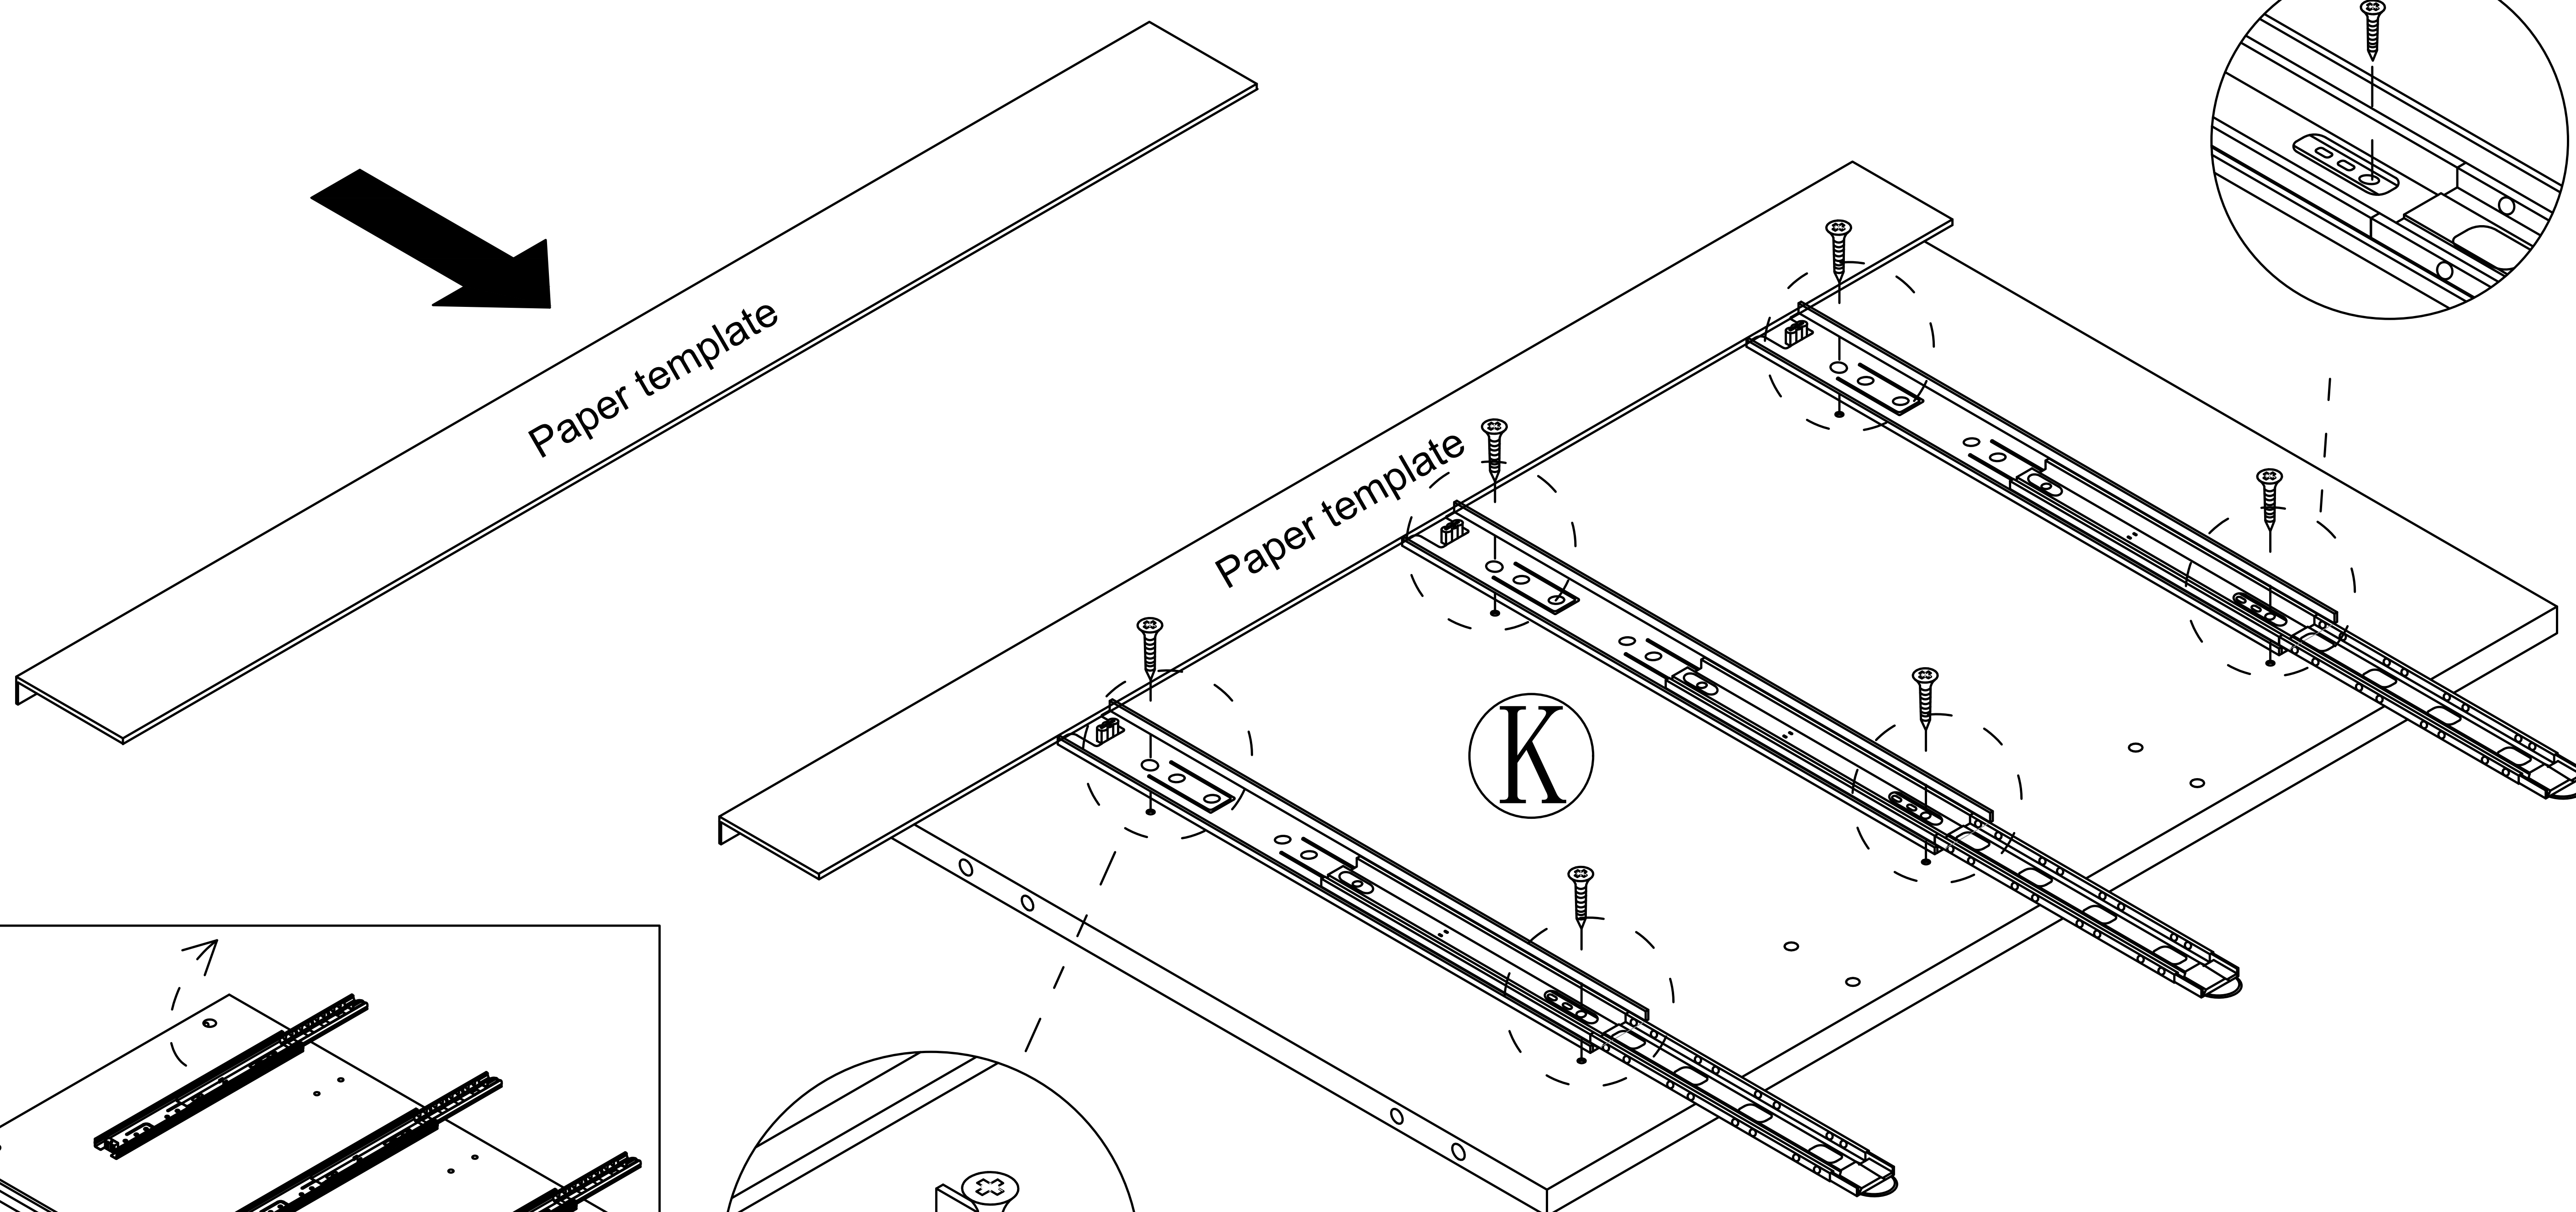
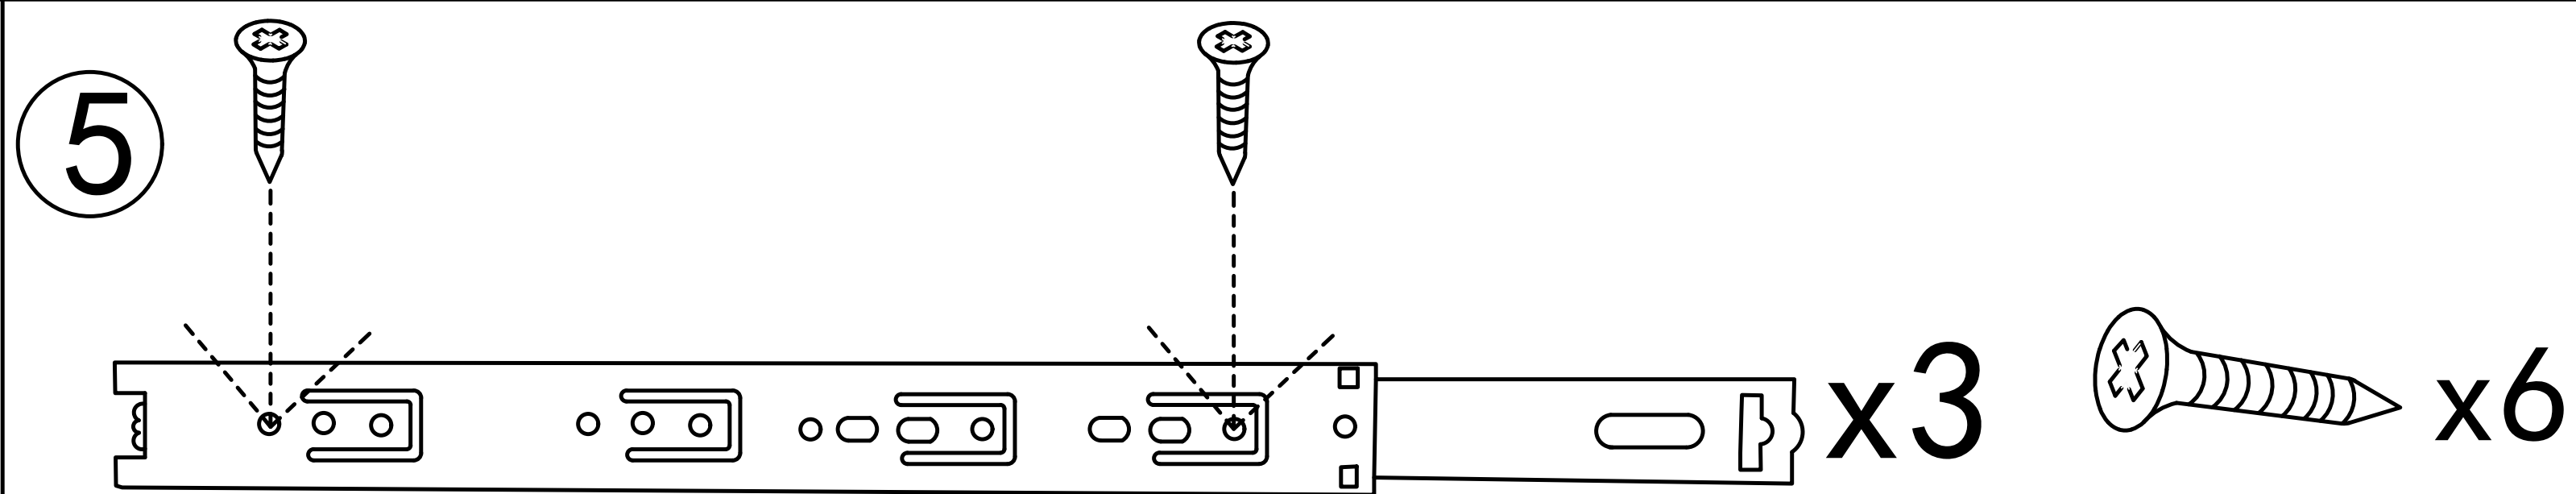


Turn

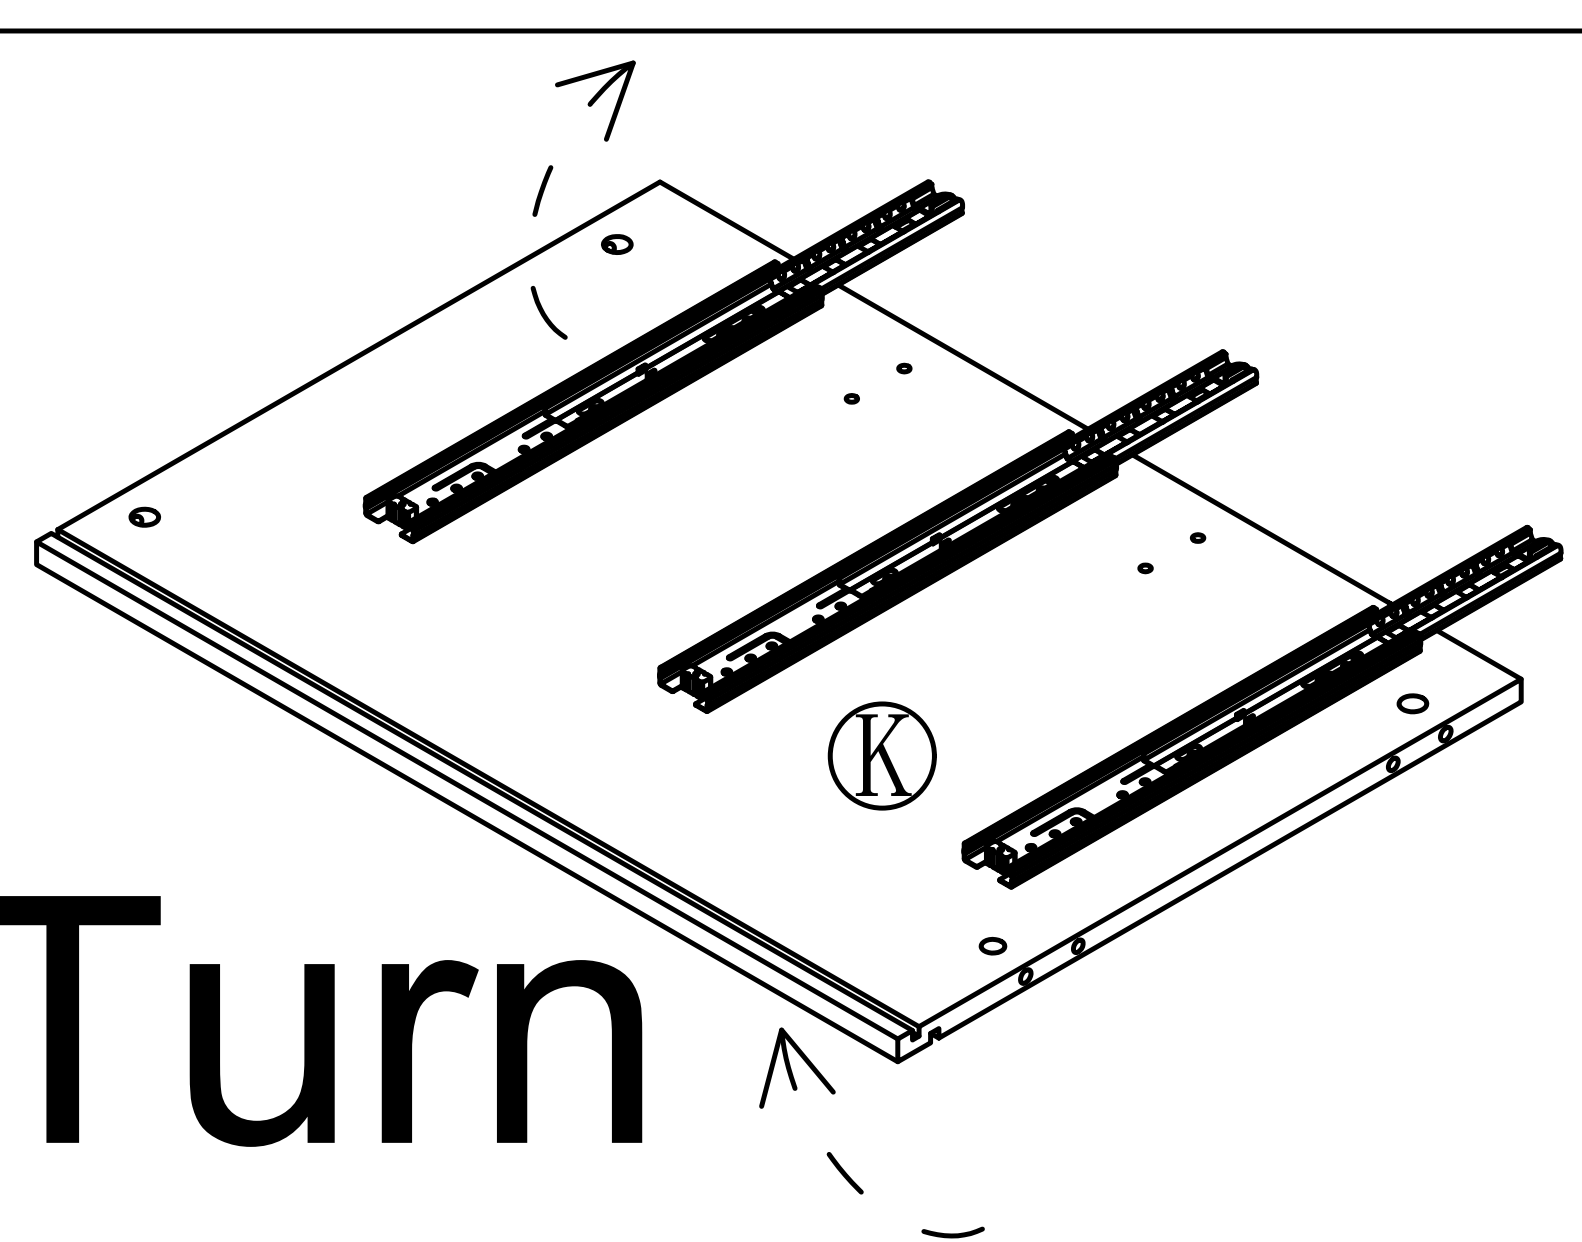

Fold it up for better installation of the guide rail, attach the back edge of the guide rail to the folded paper, and screw it into the corresponding hole position


Step 18

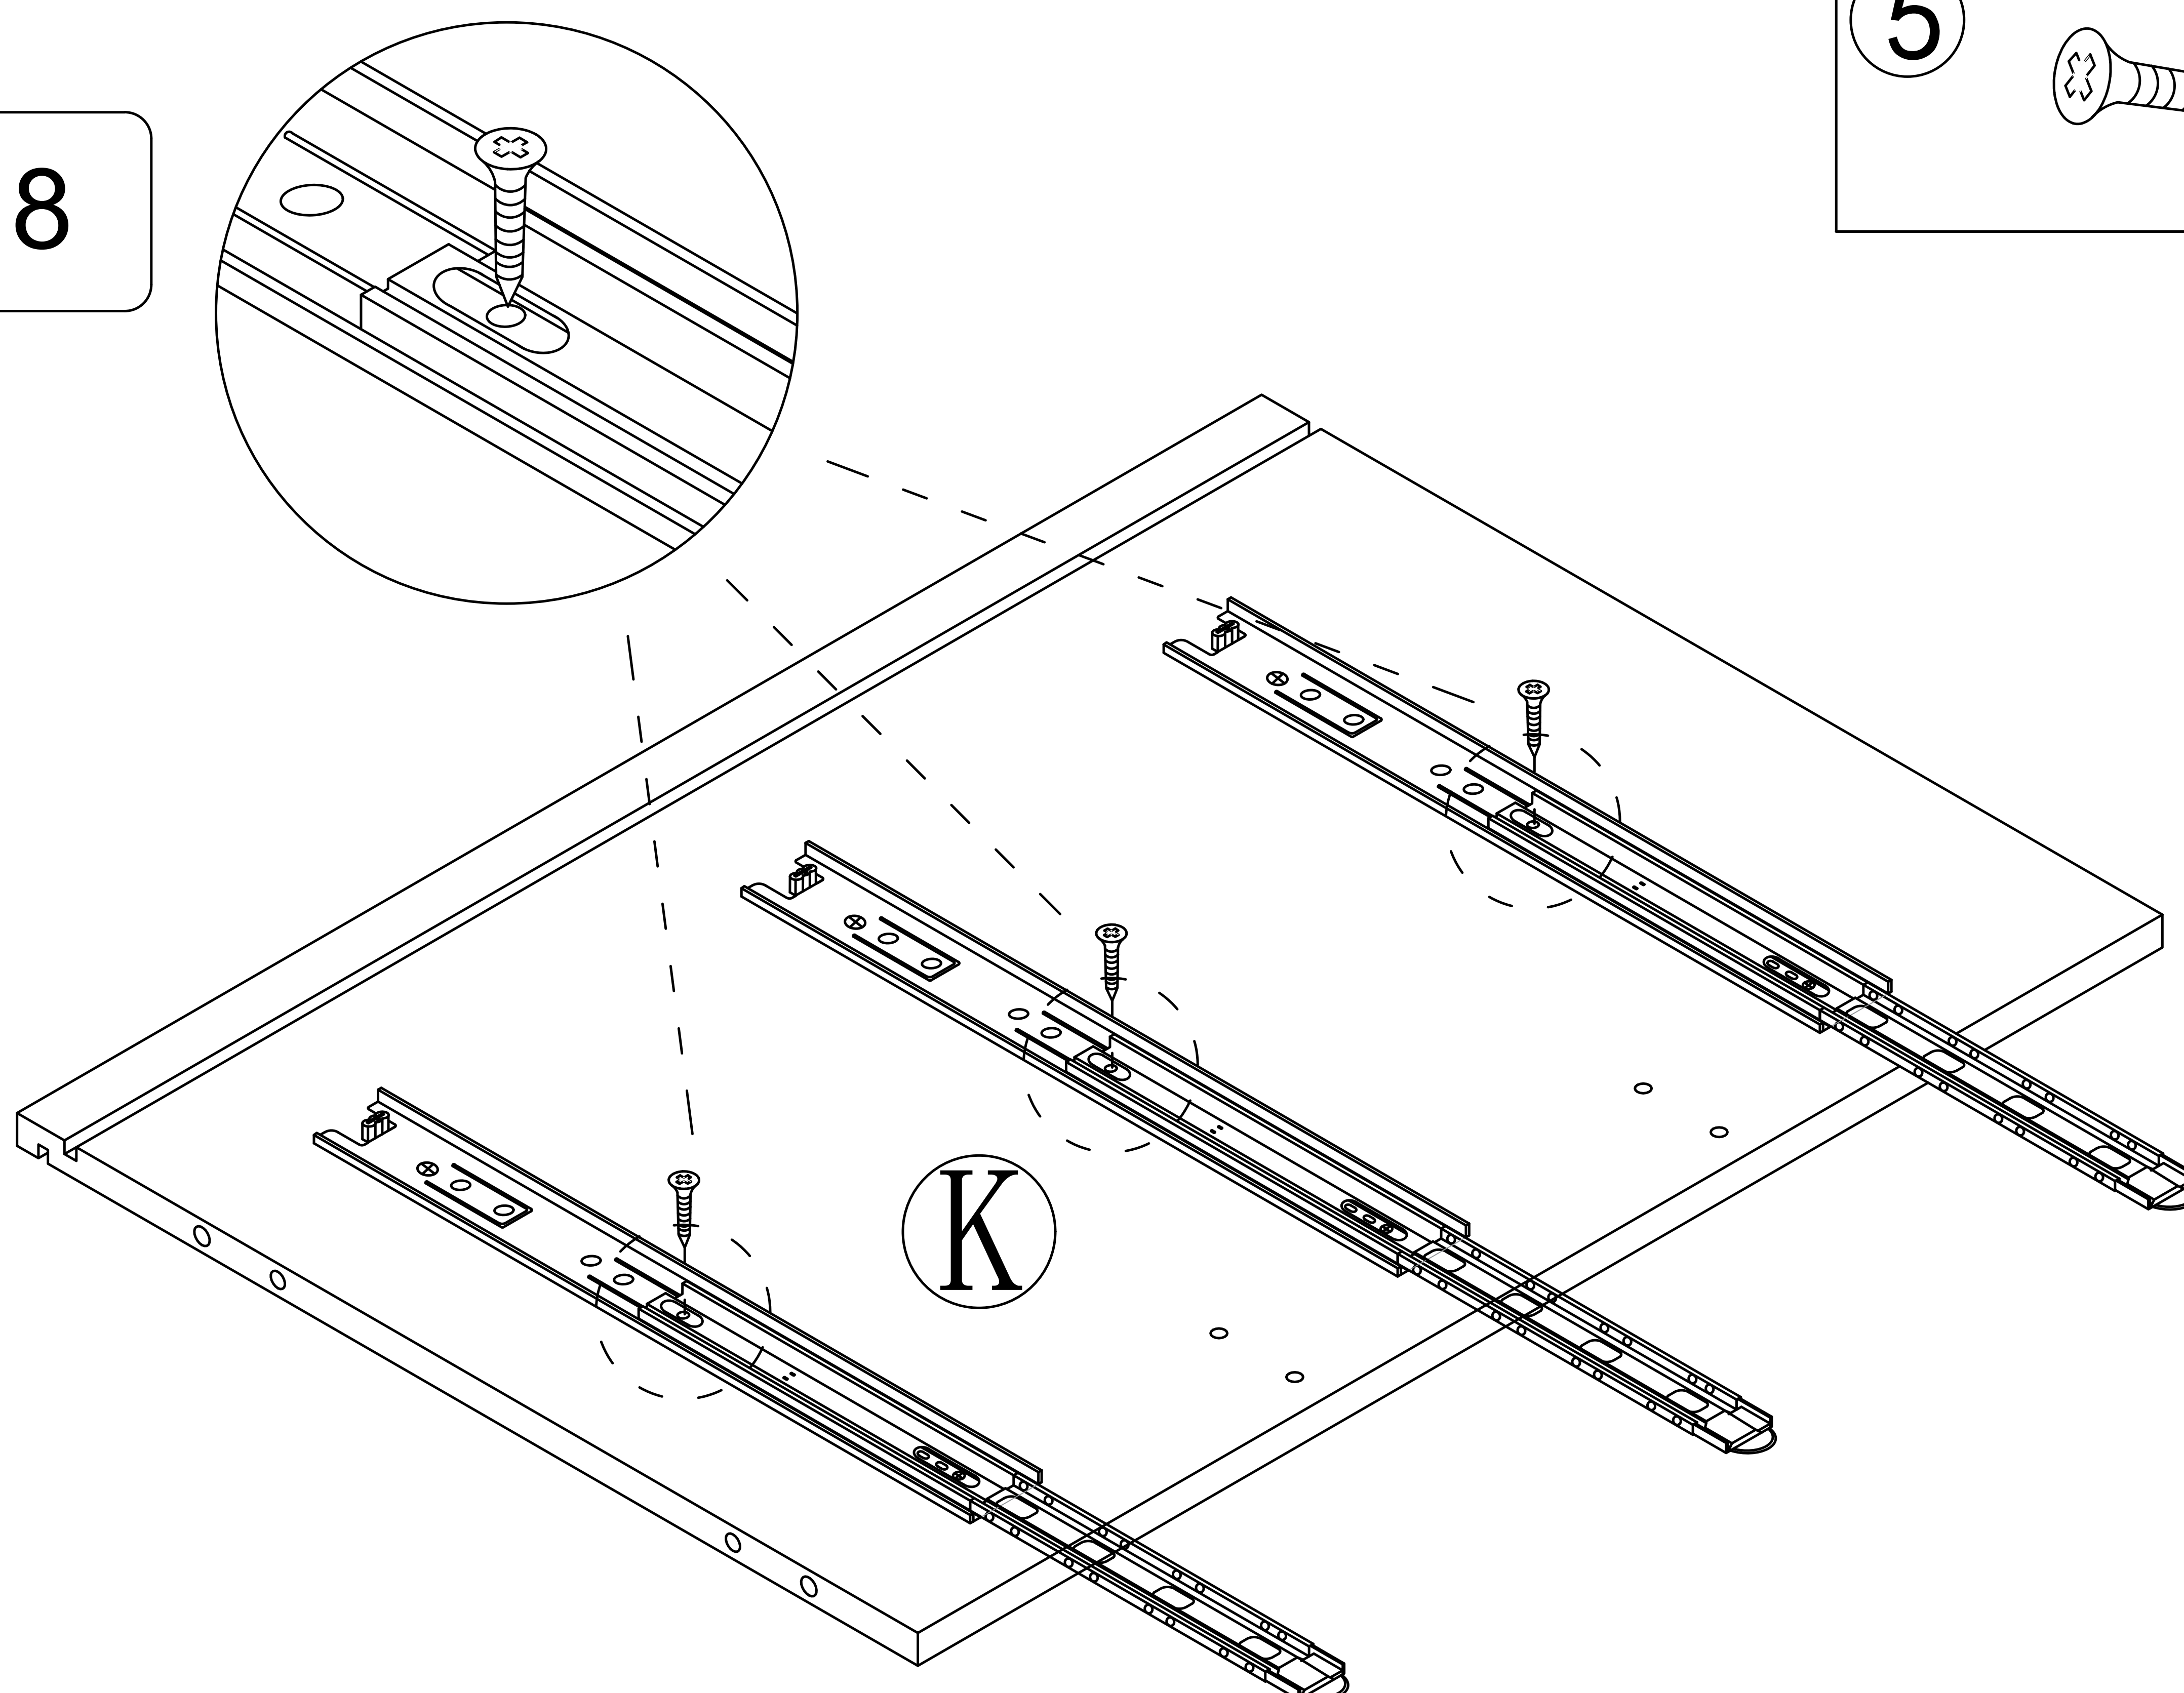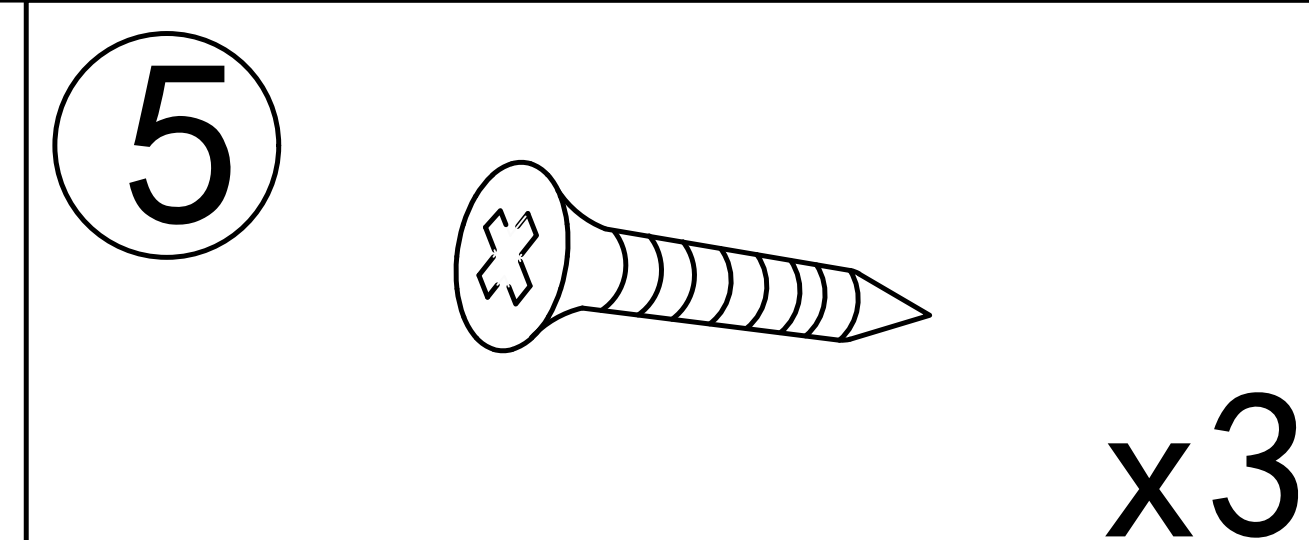


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 19


- 1

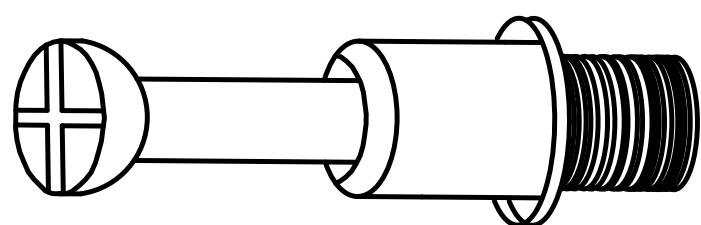

x8
- 13

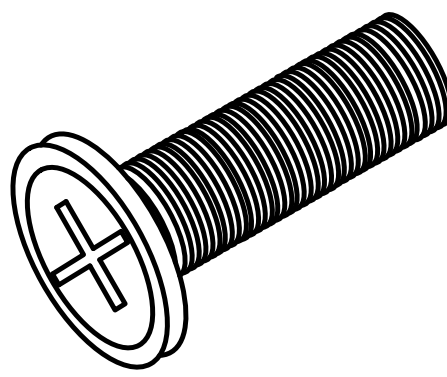


x1

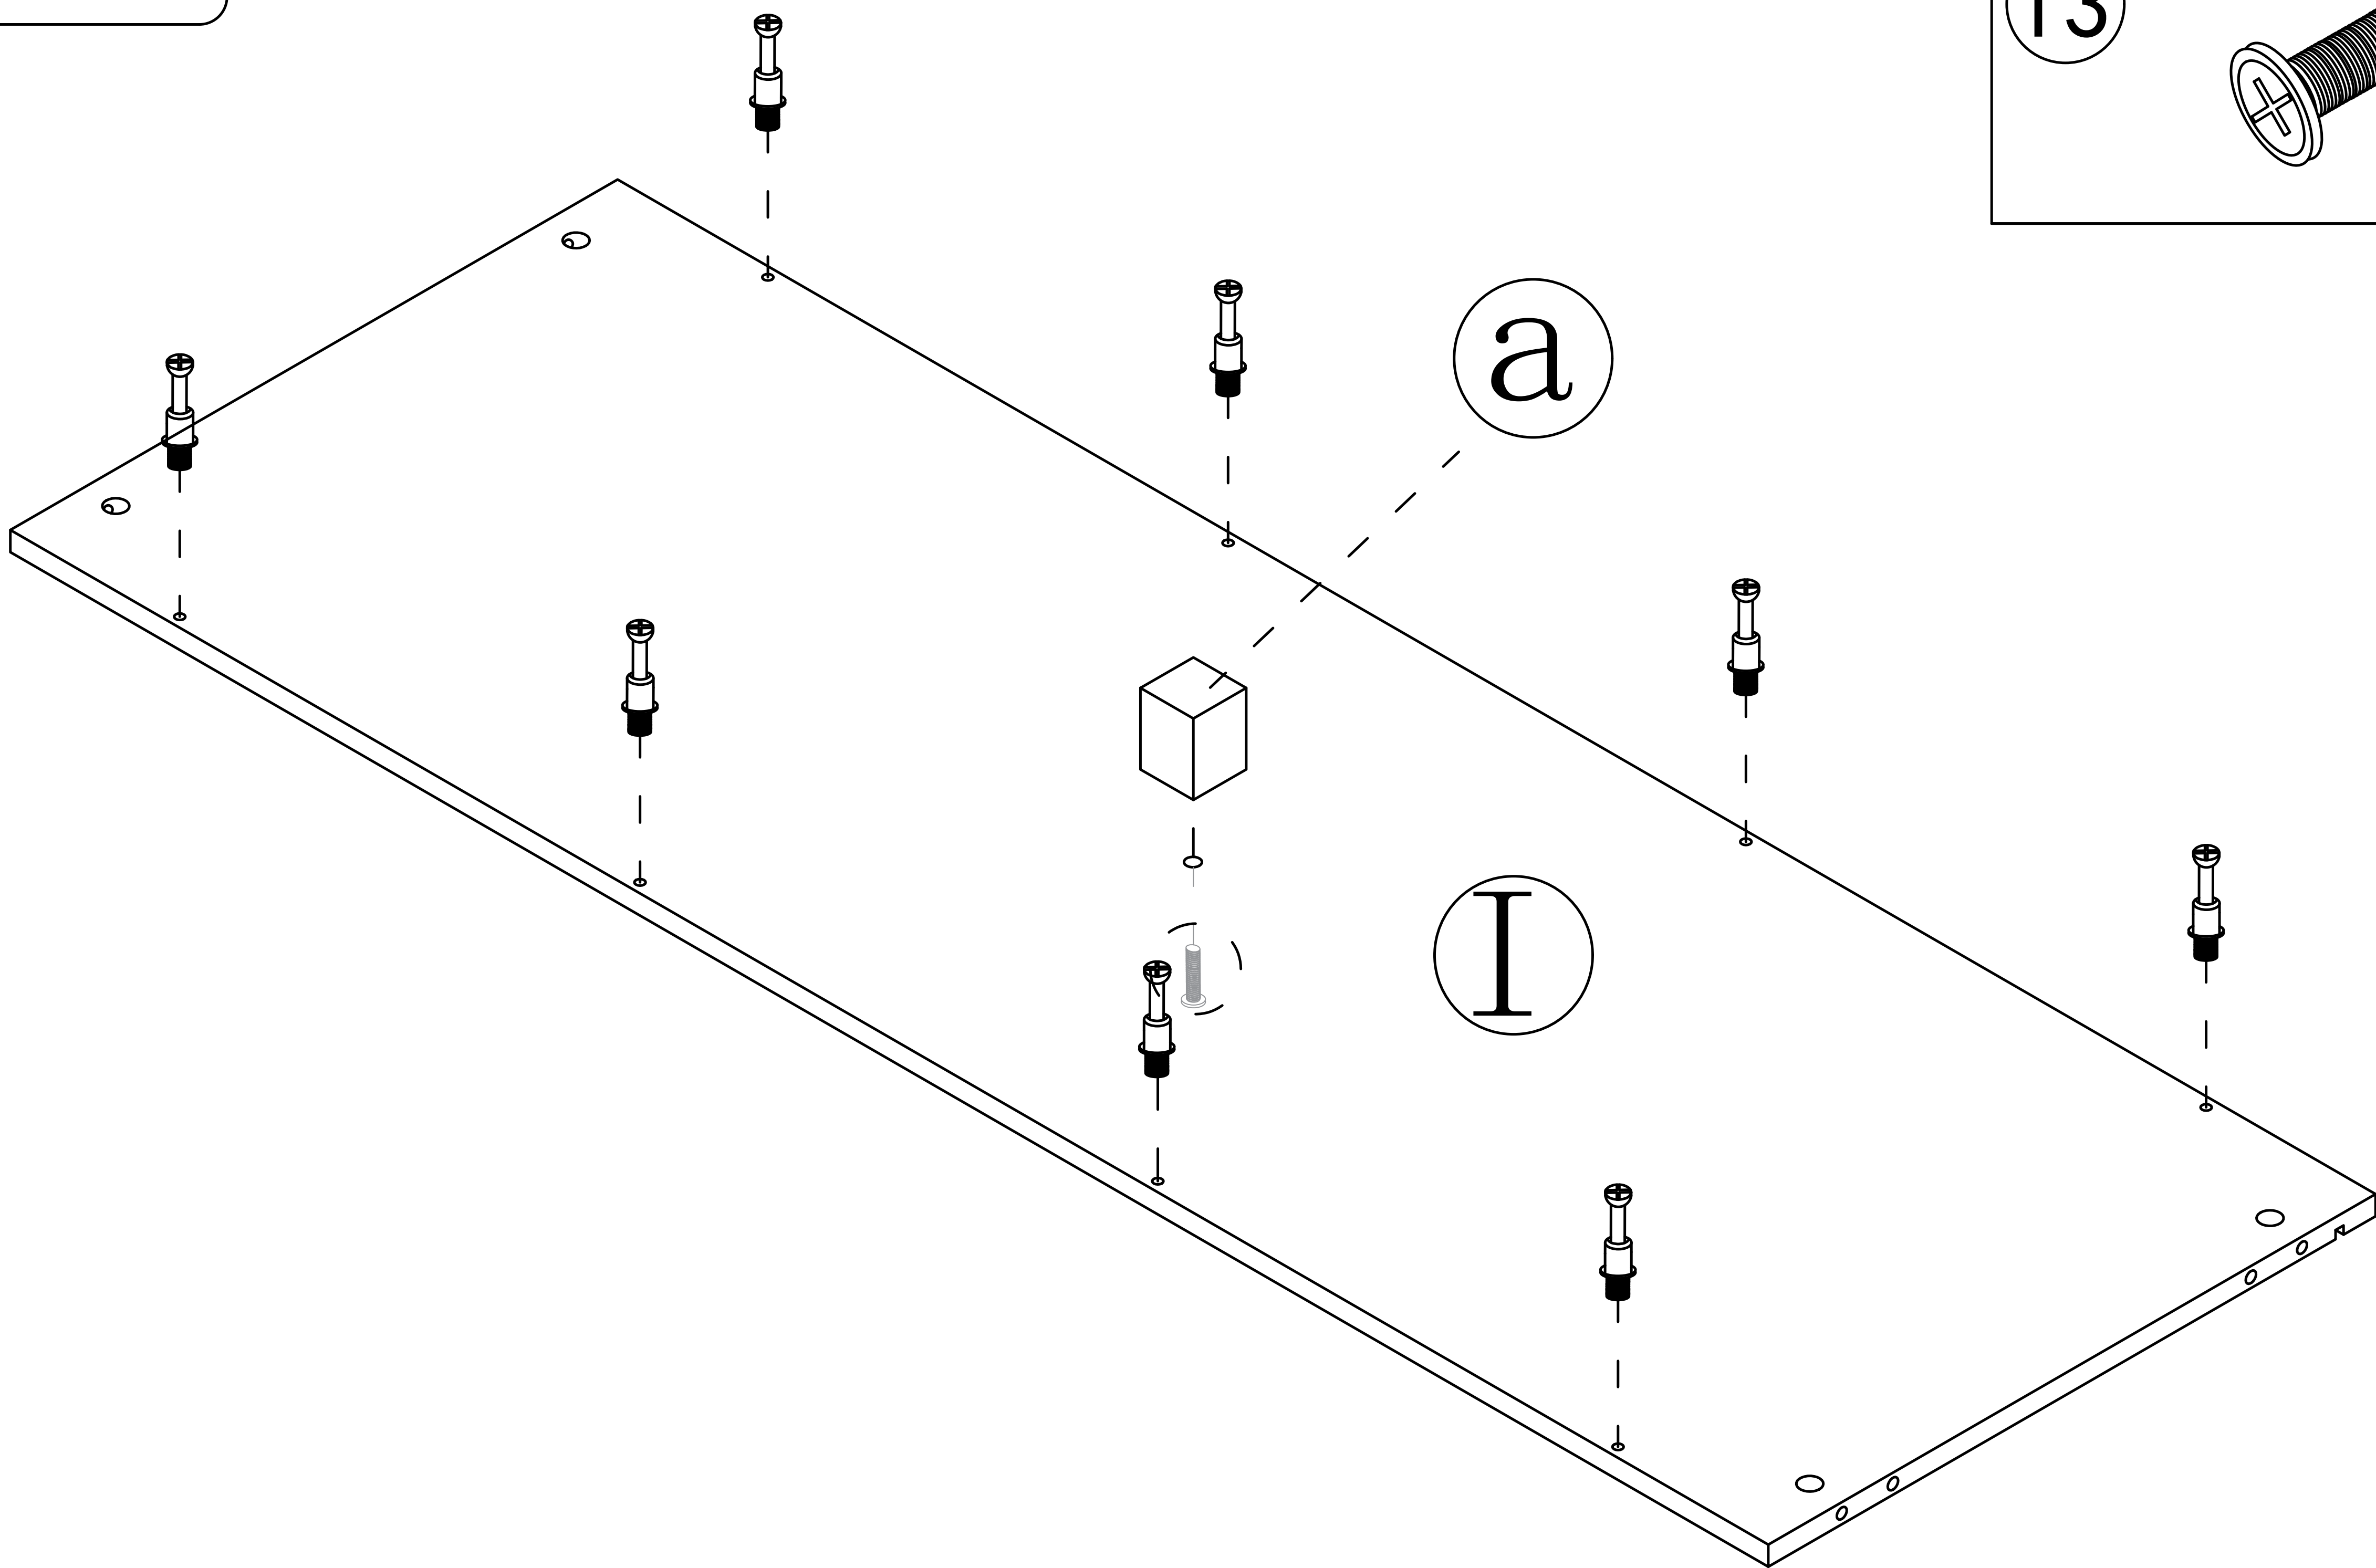


Step 20

- 2

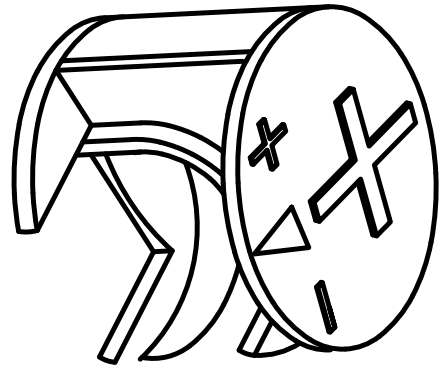


x8

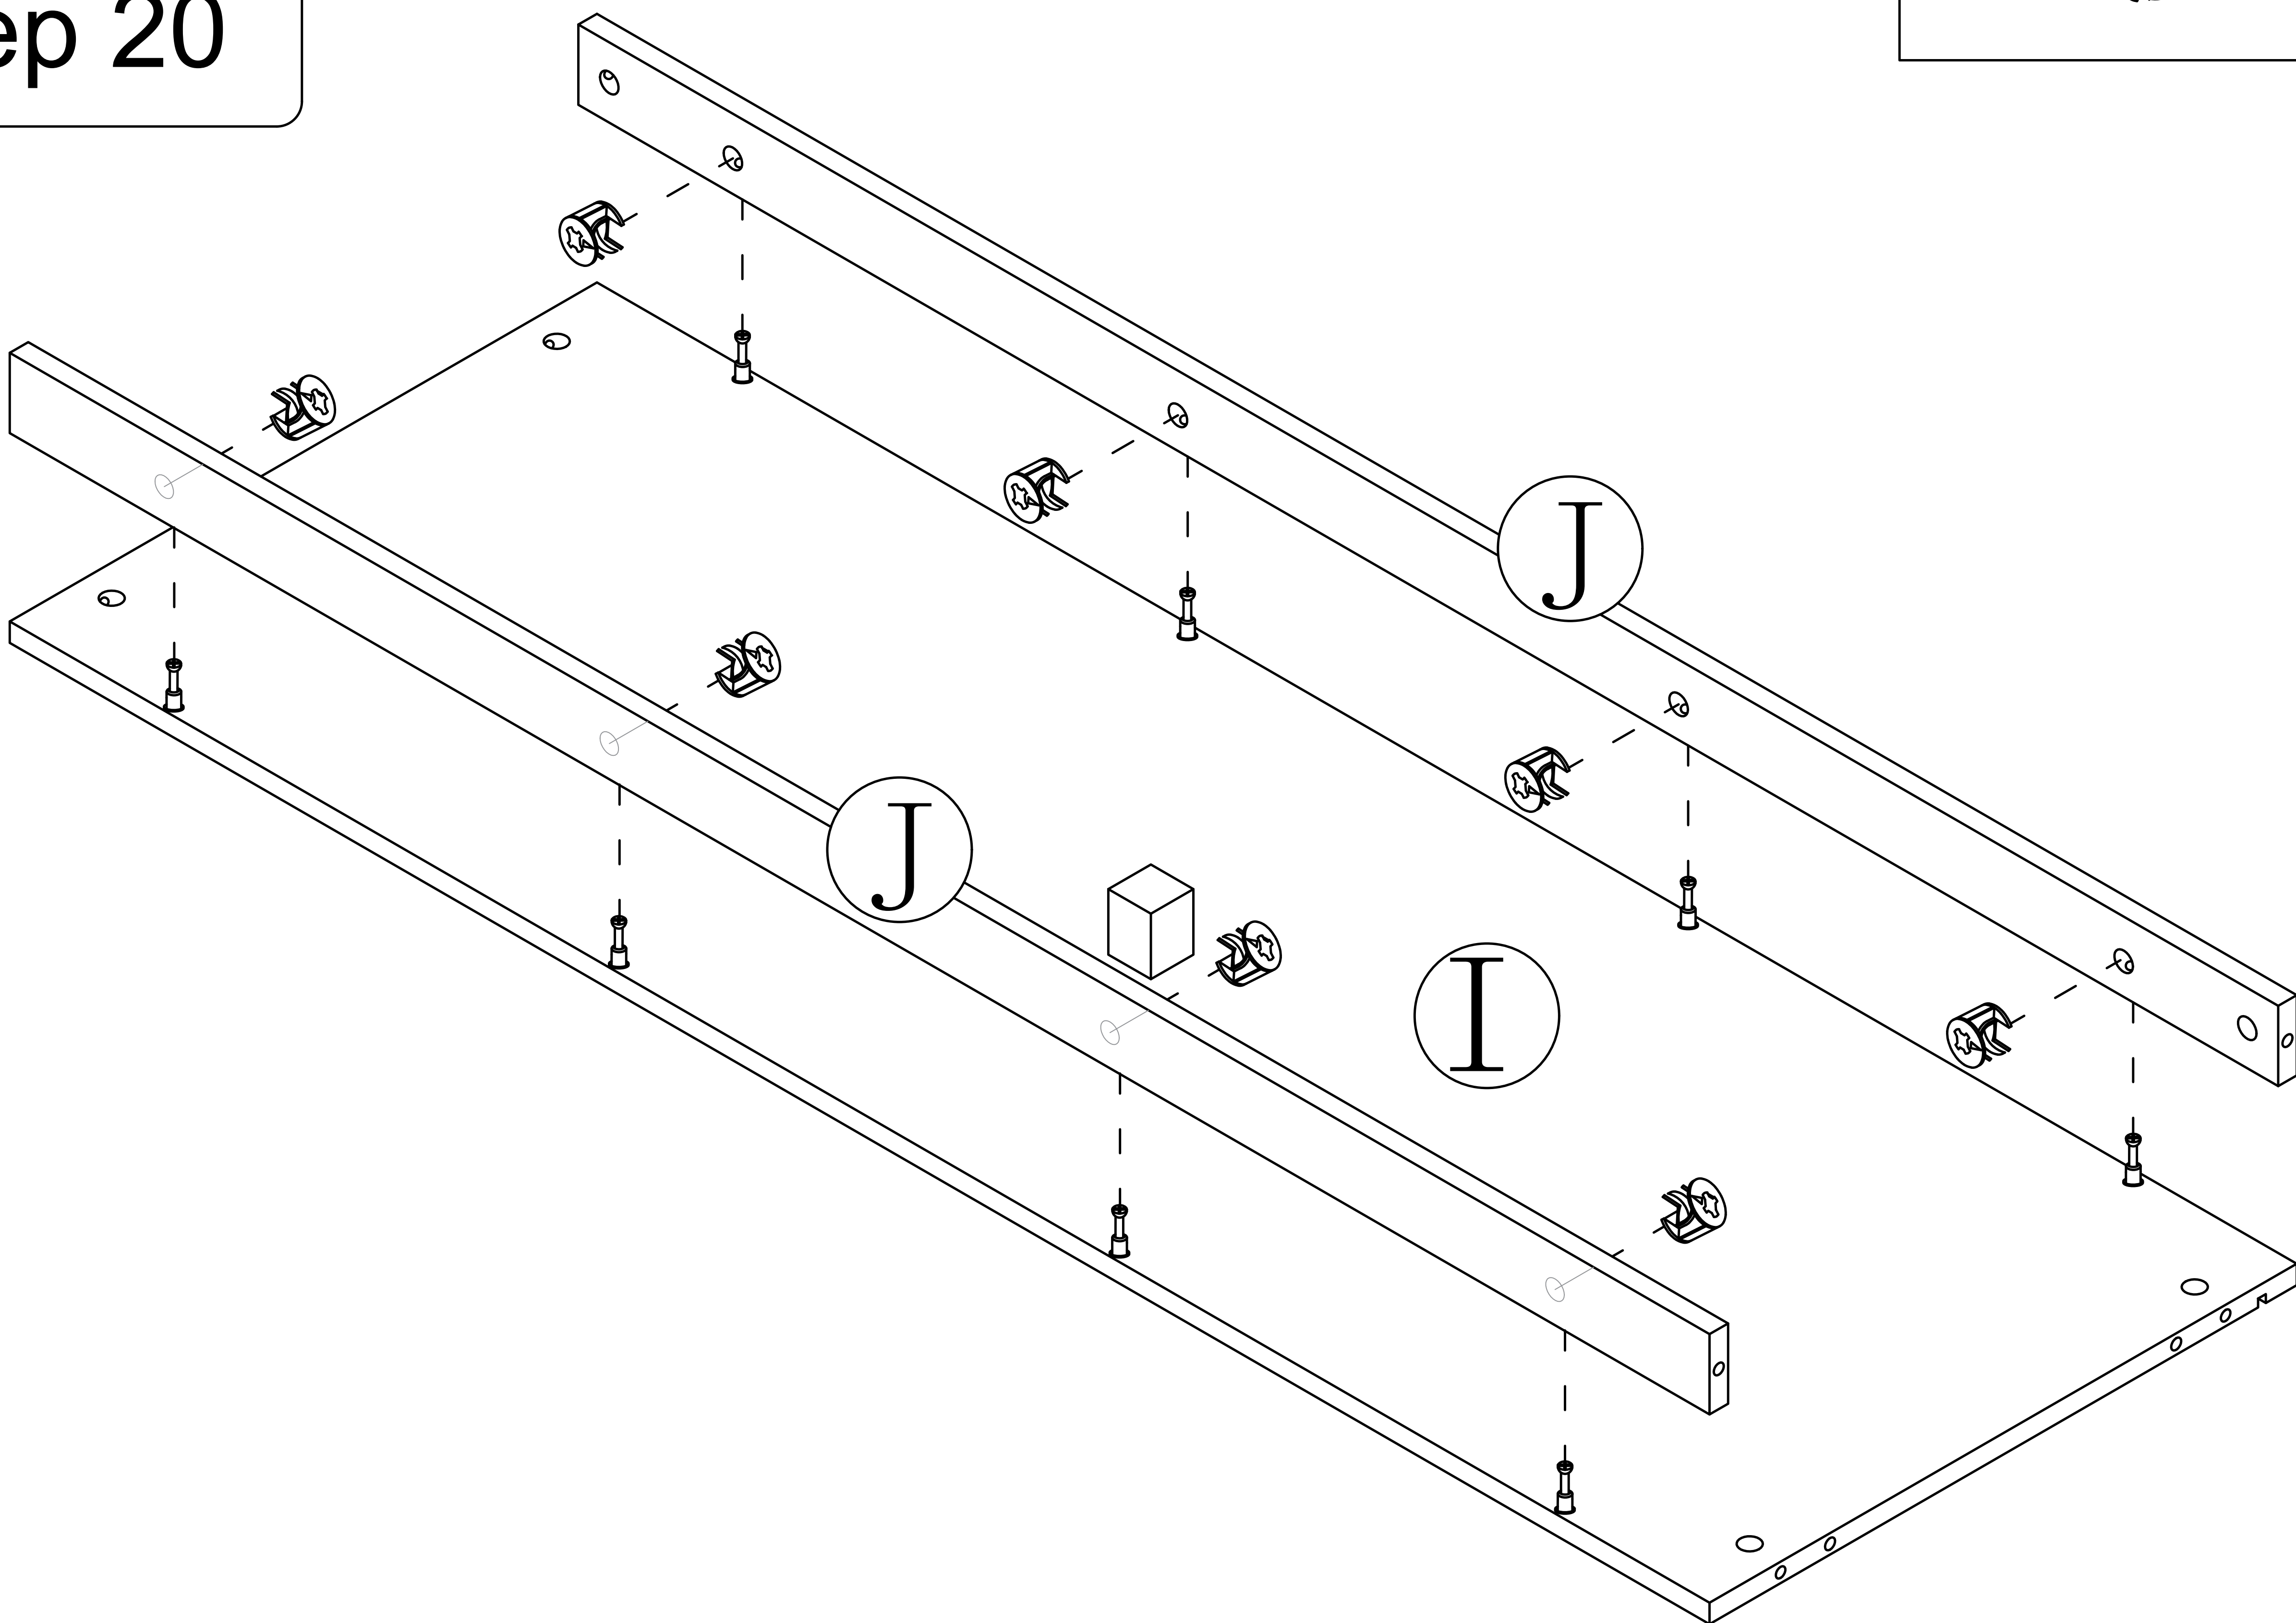


Step 21


- 1

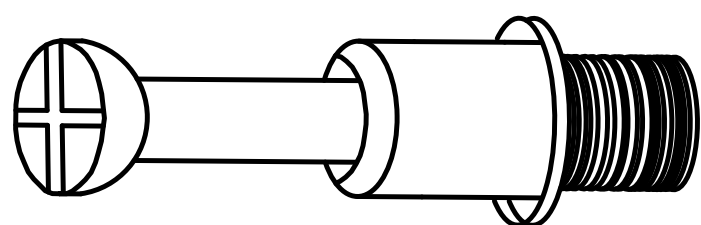

x2
- 3

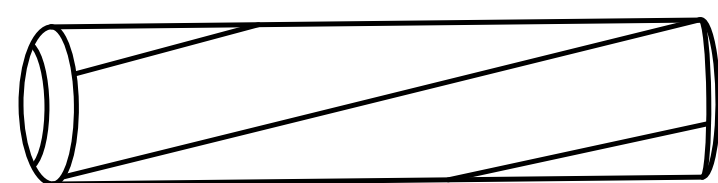


x2

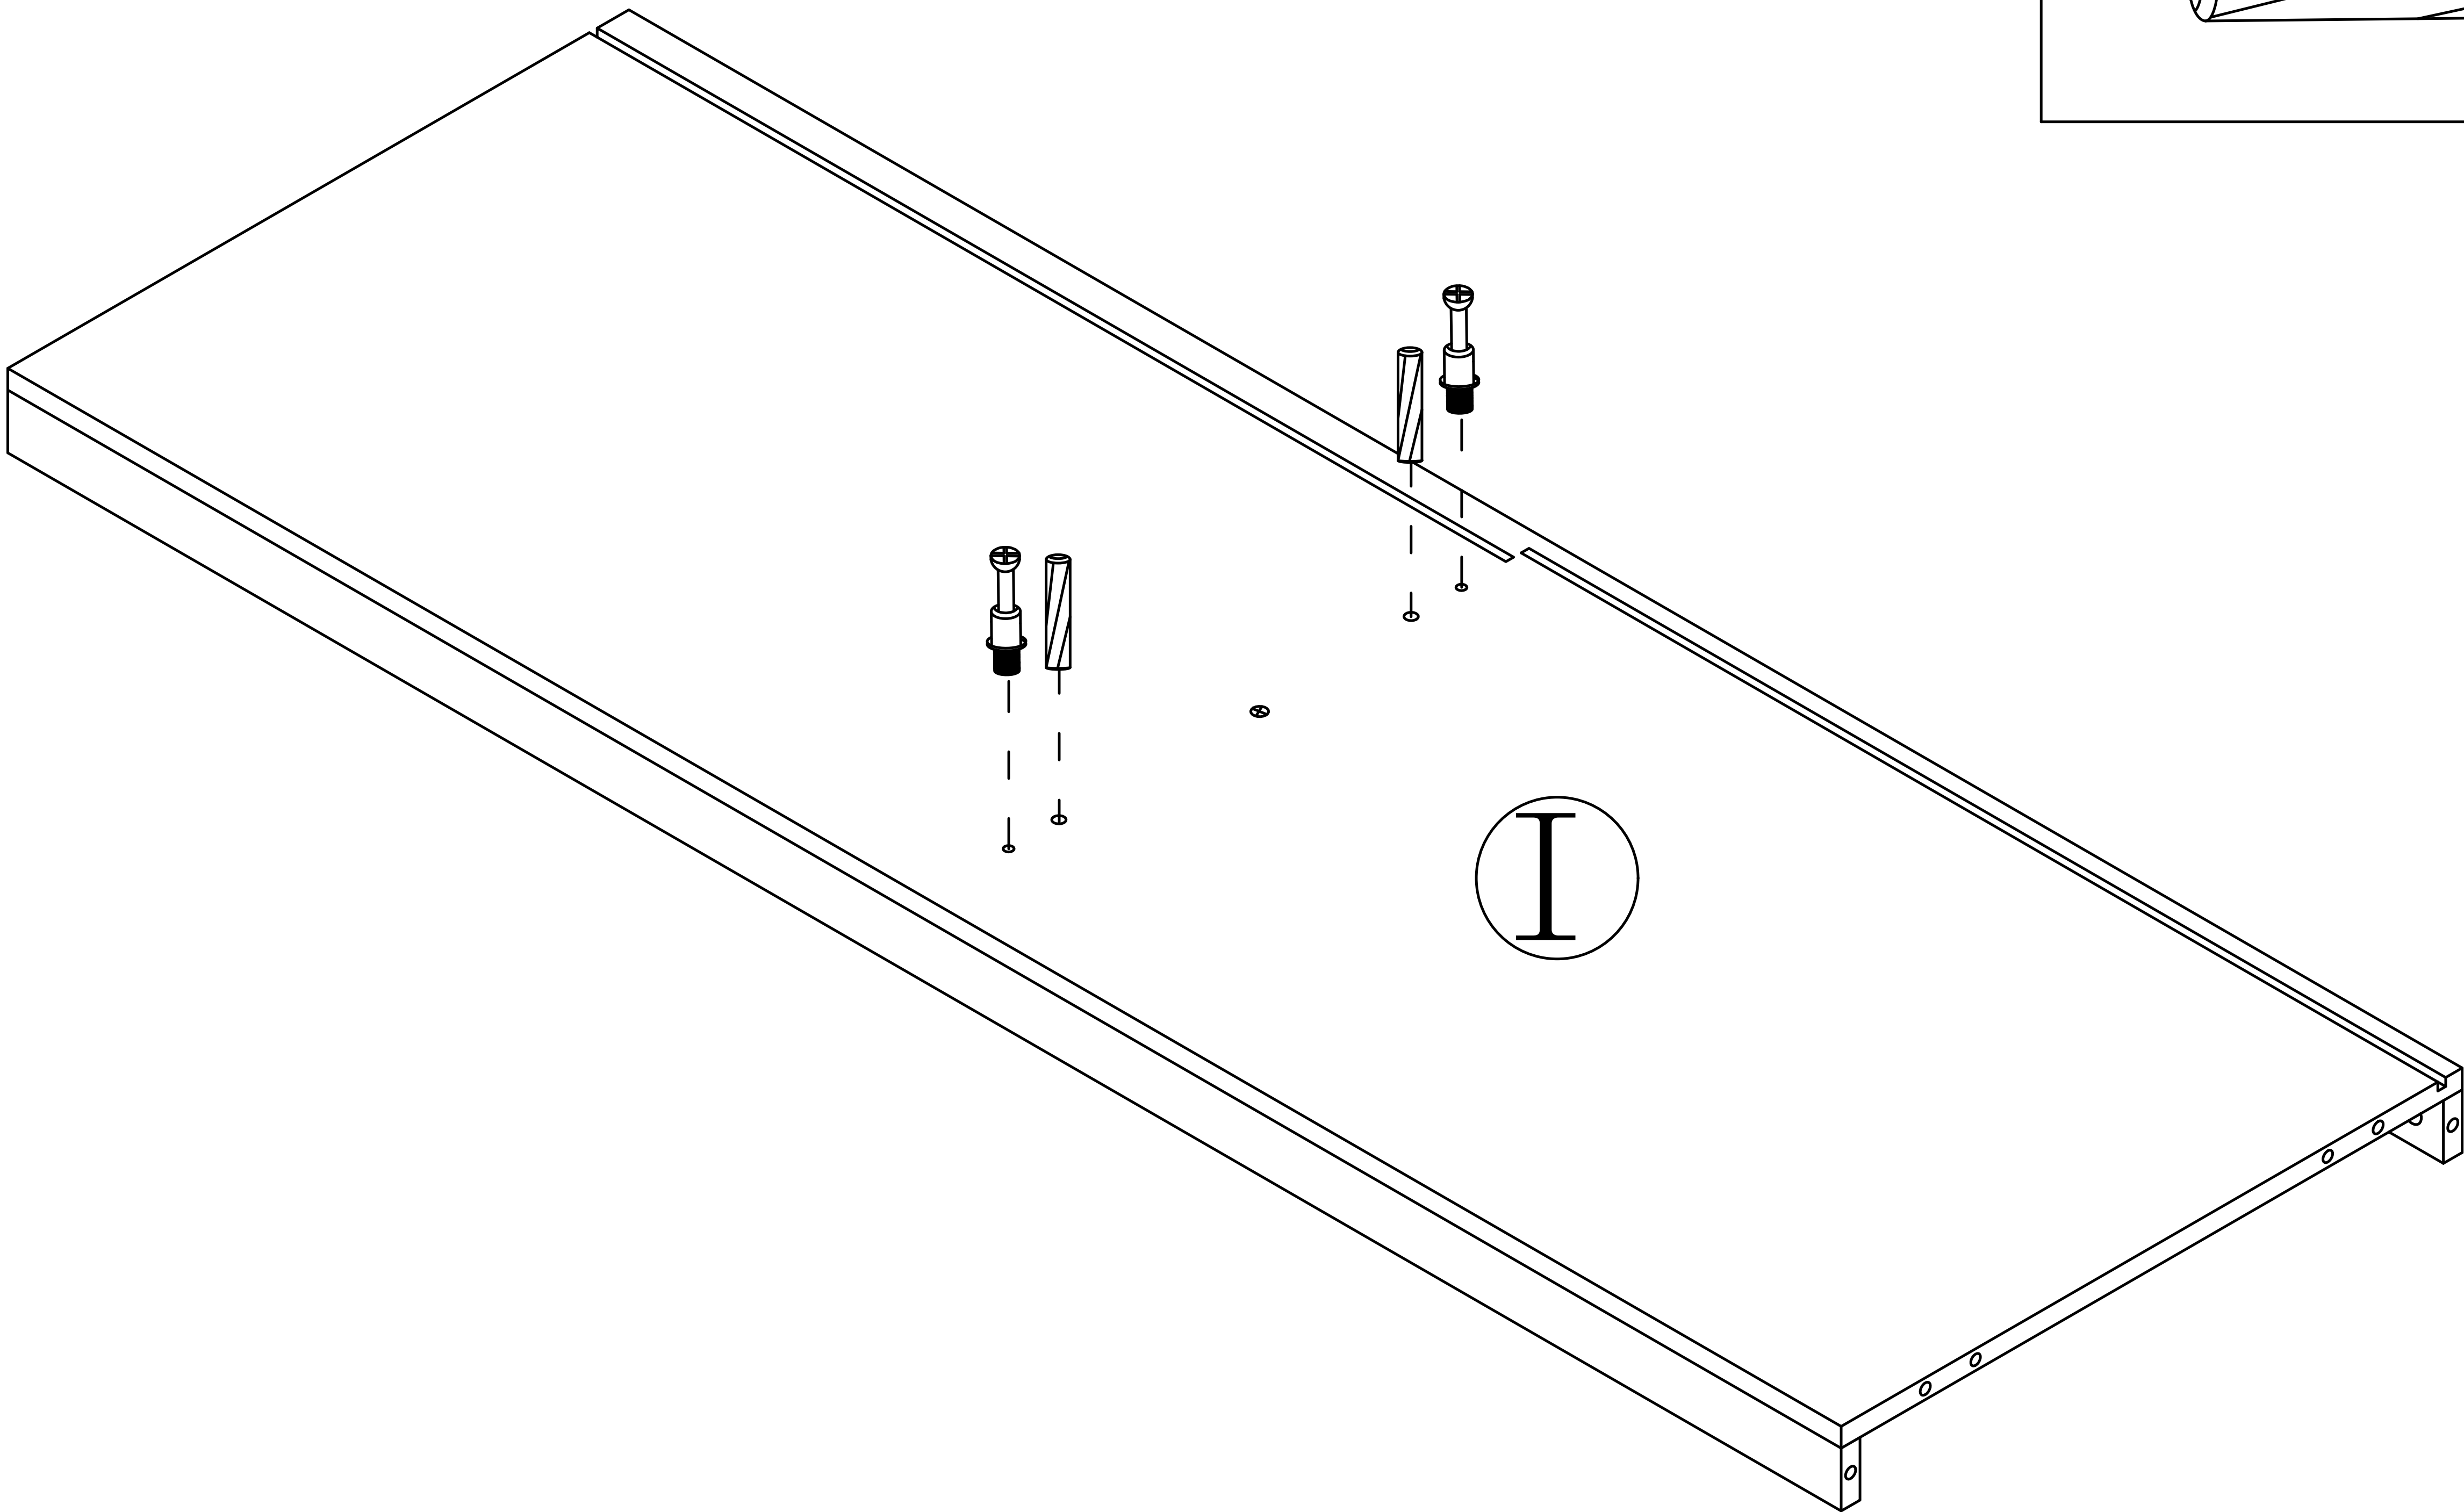


Step 22



- 2

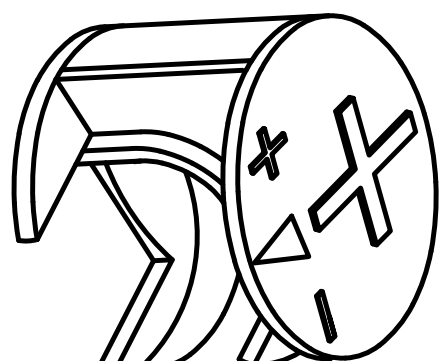



x2

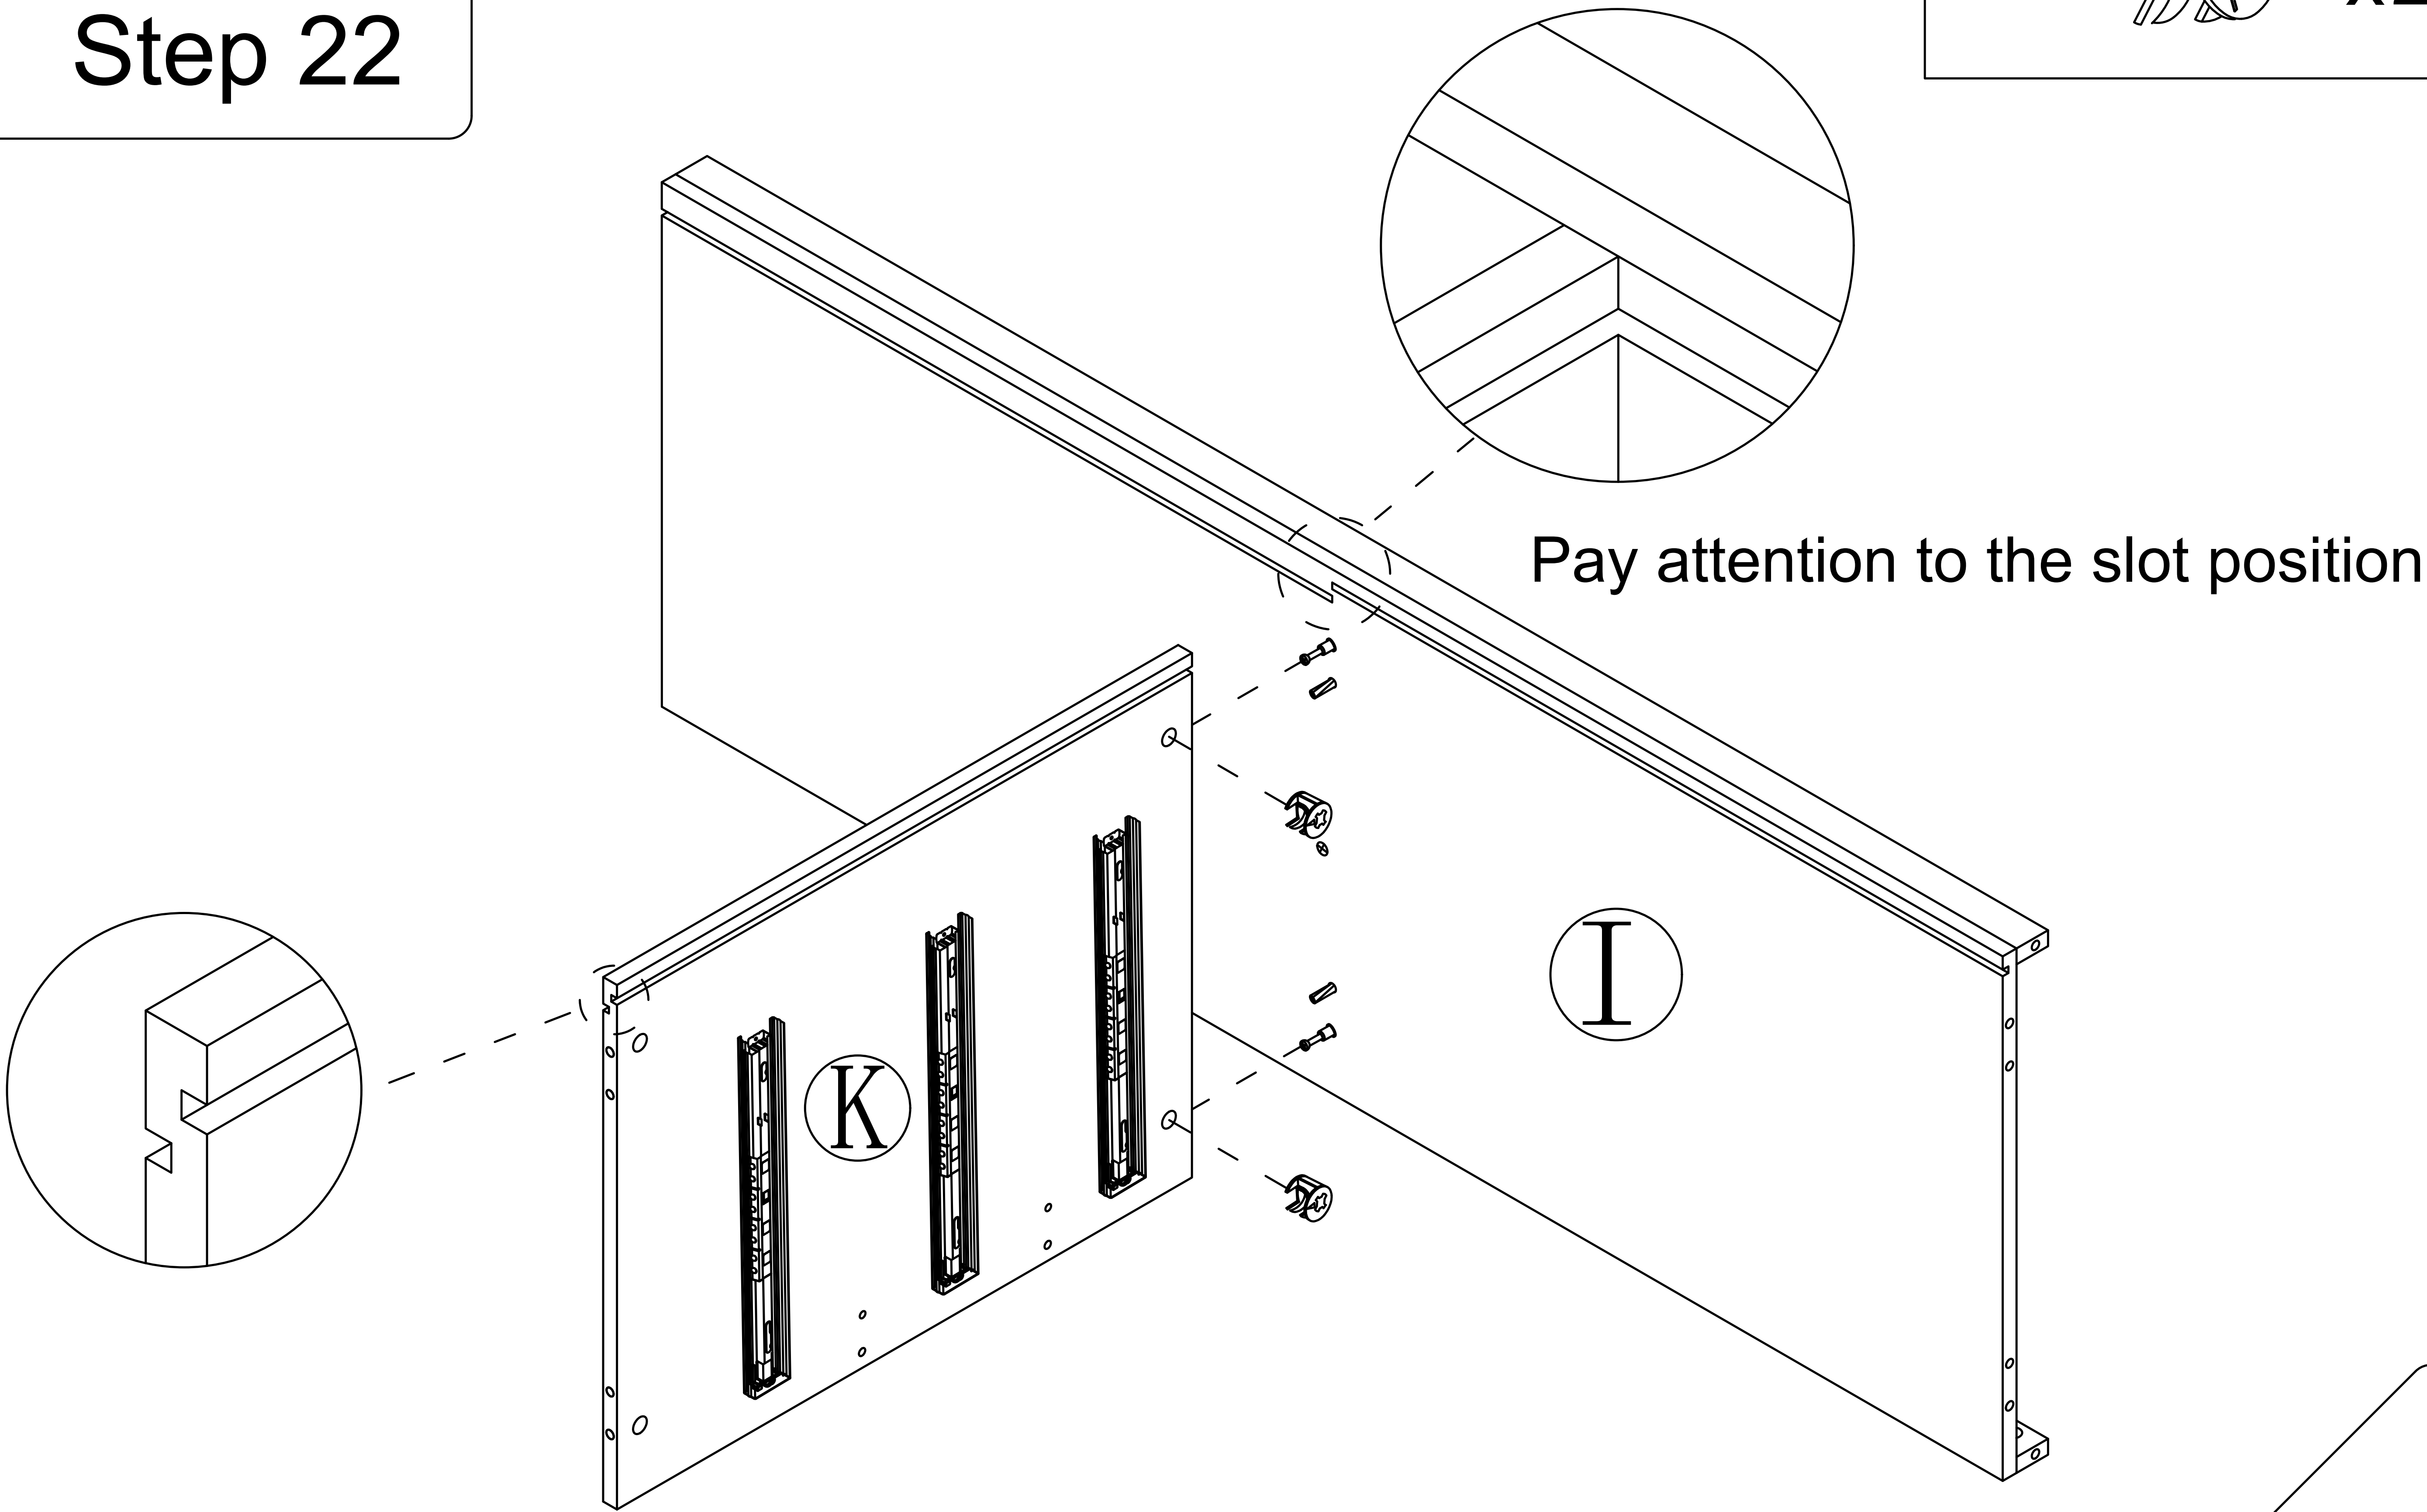

Step 23

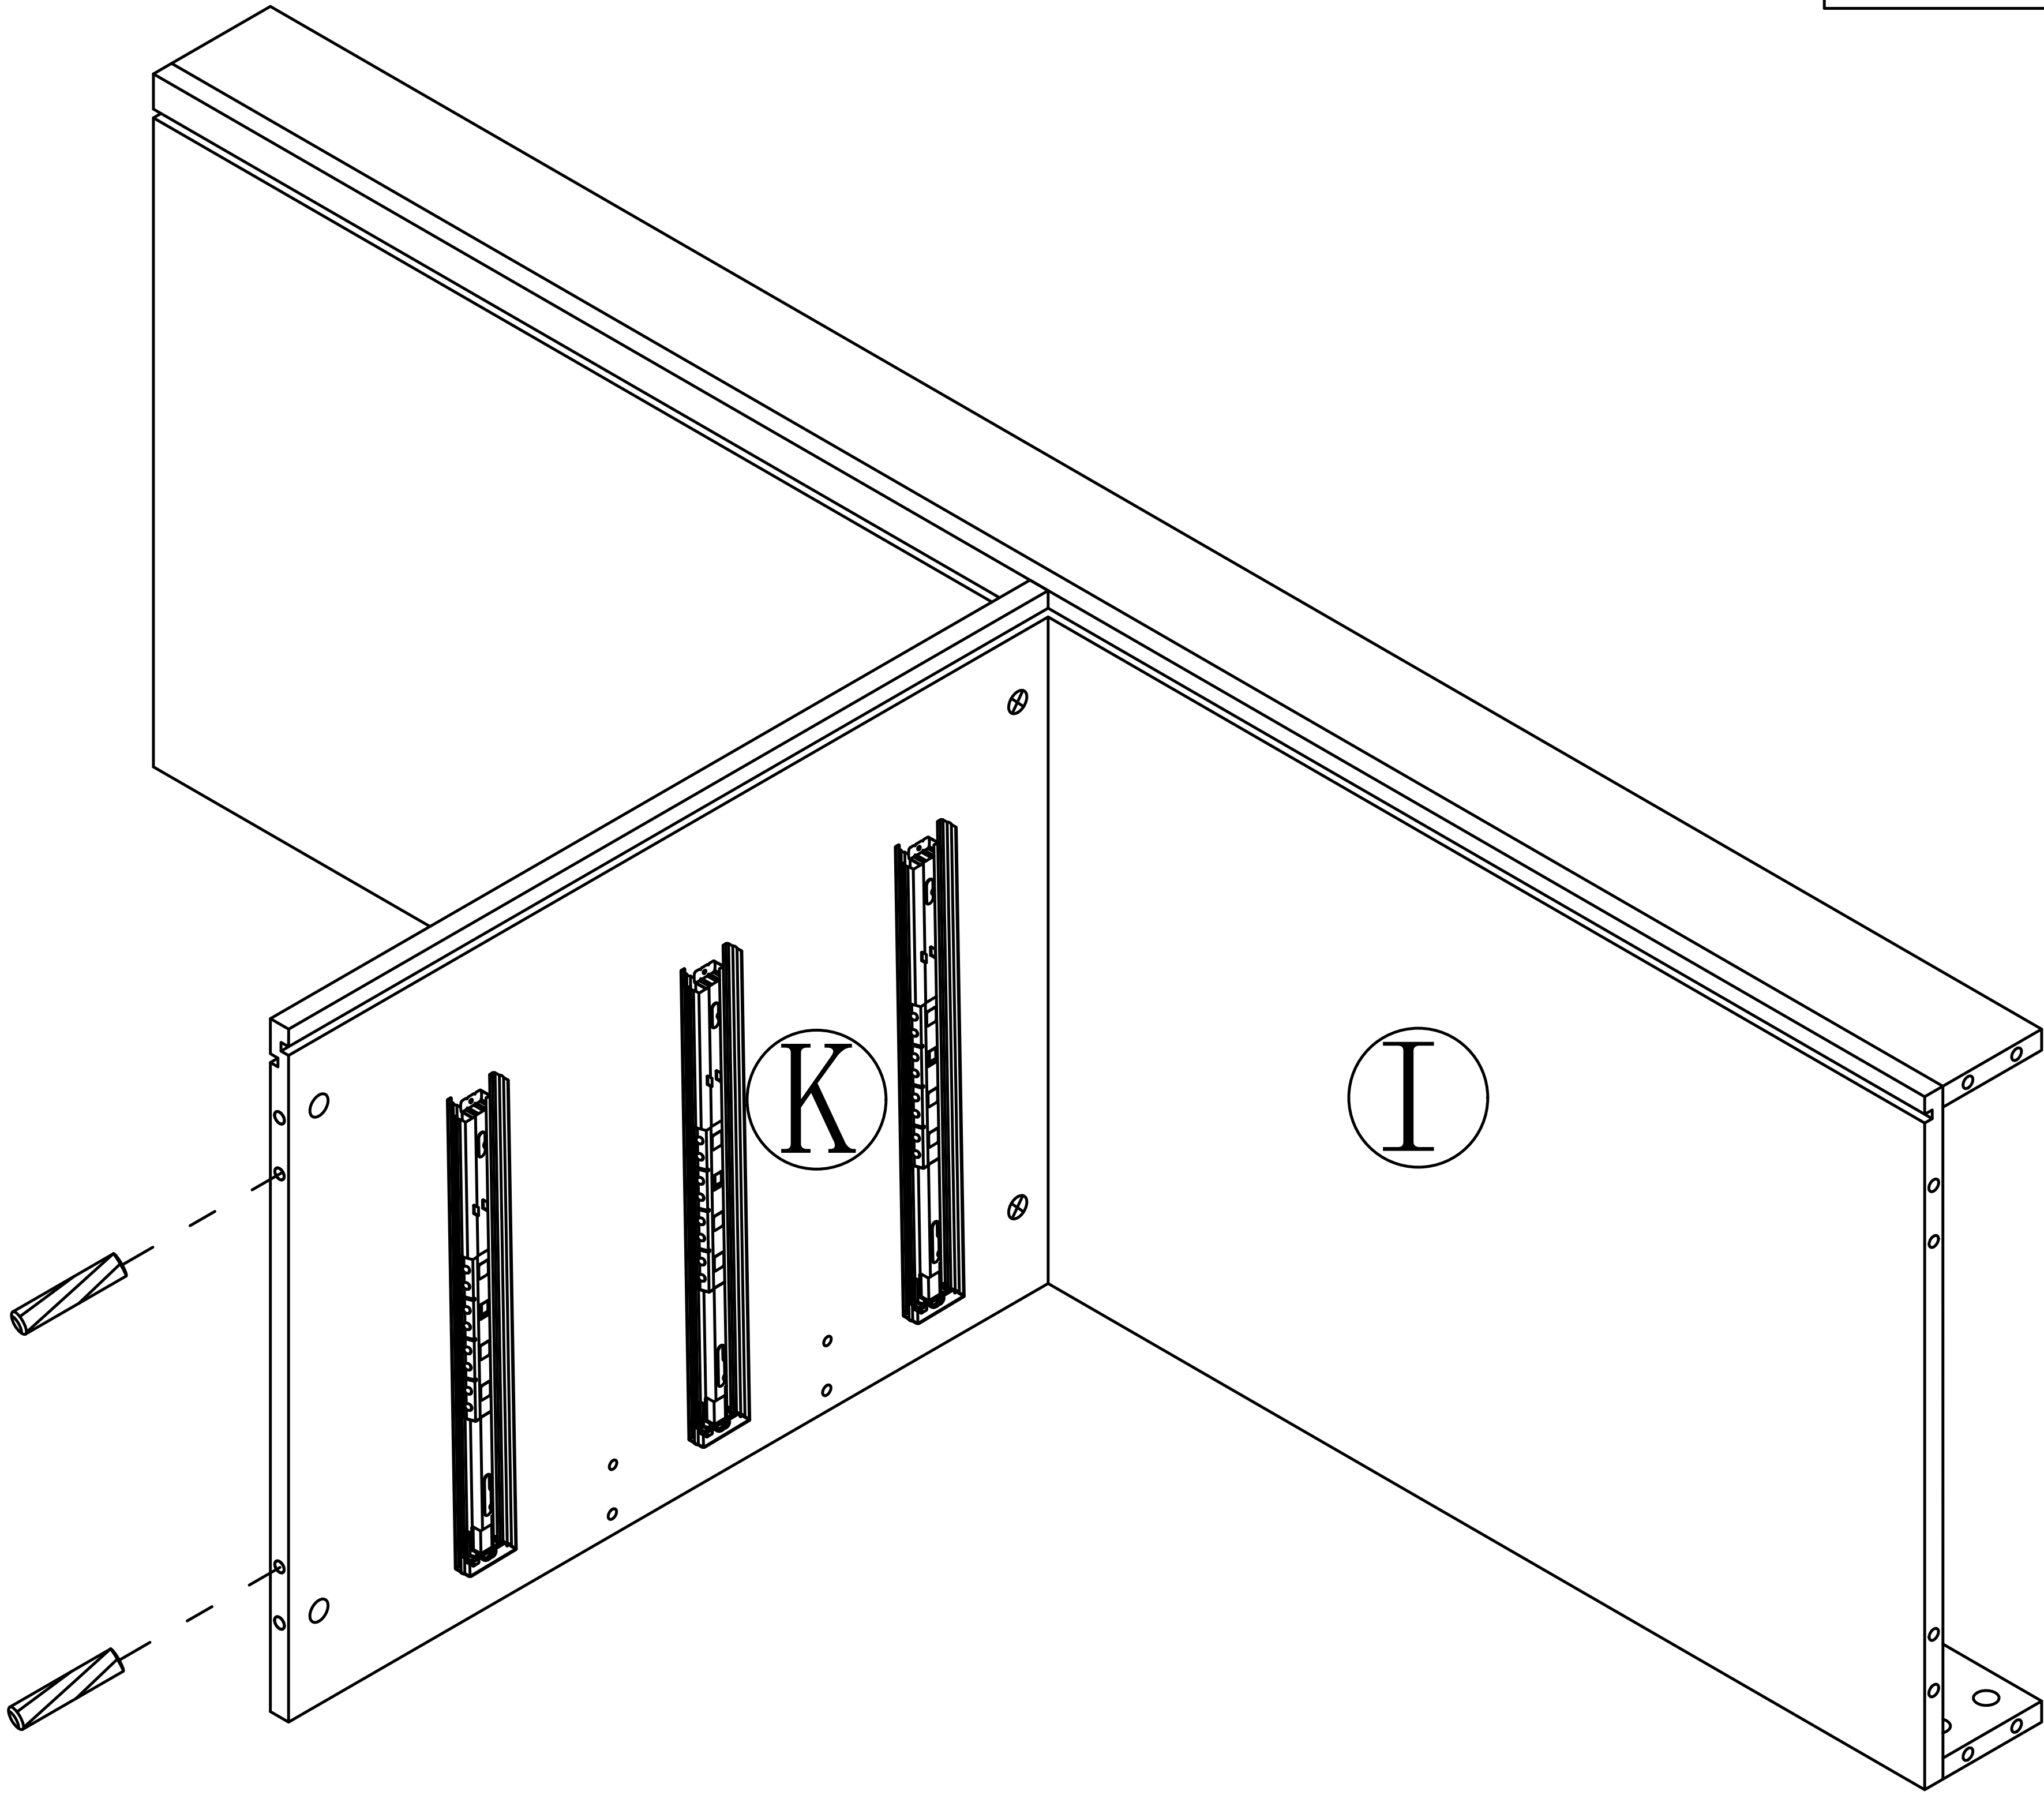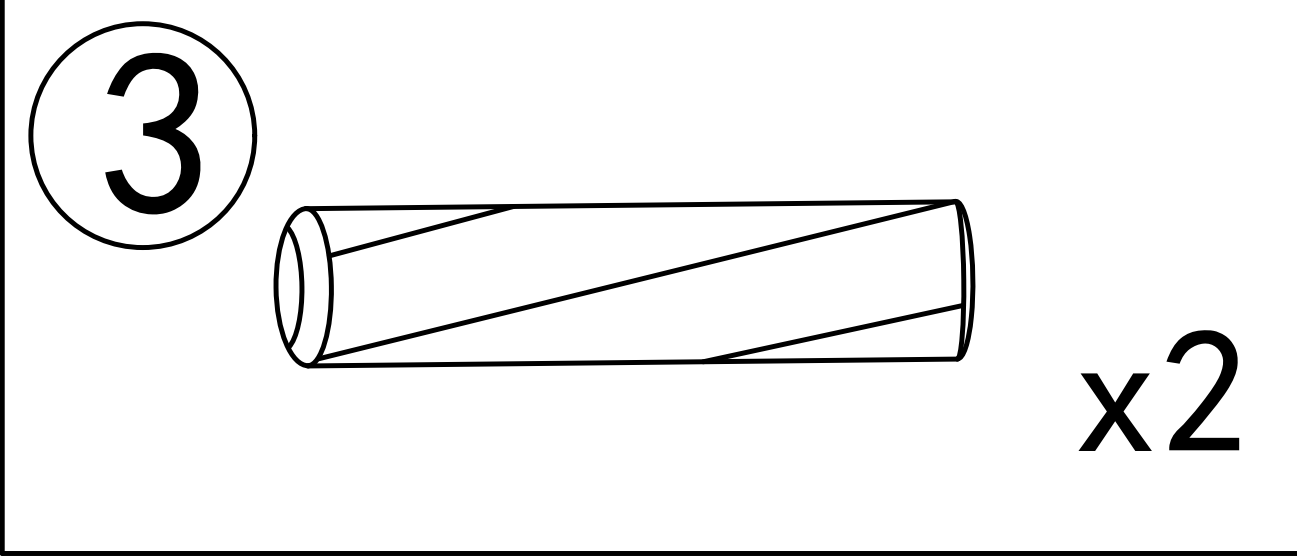



Step 24

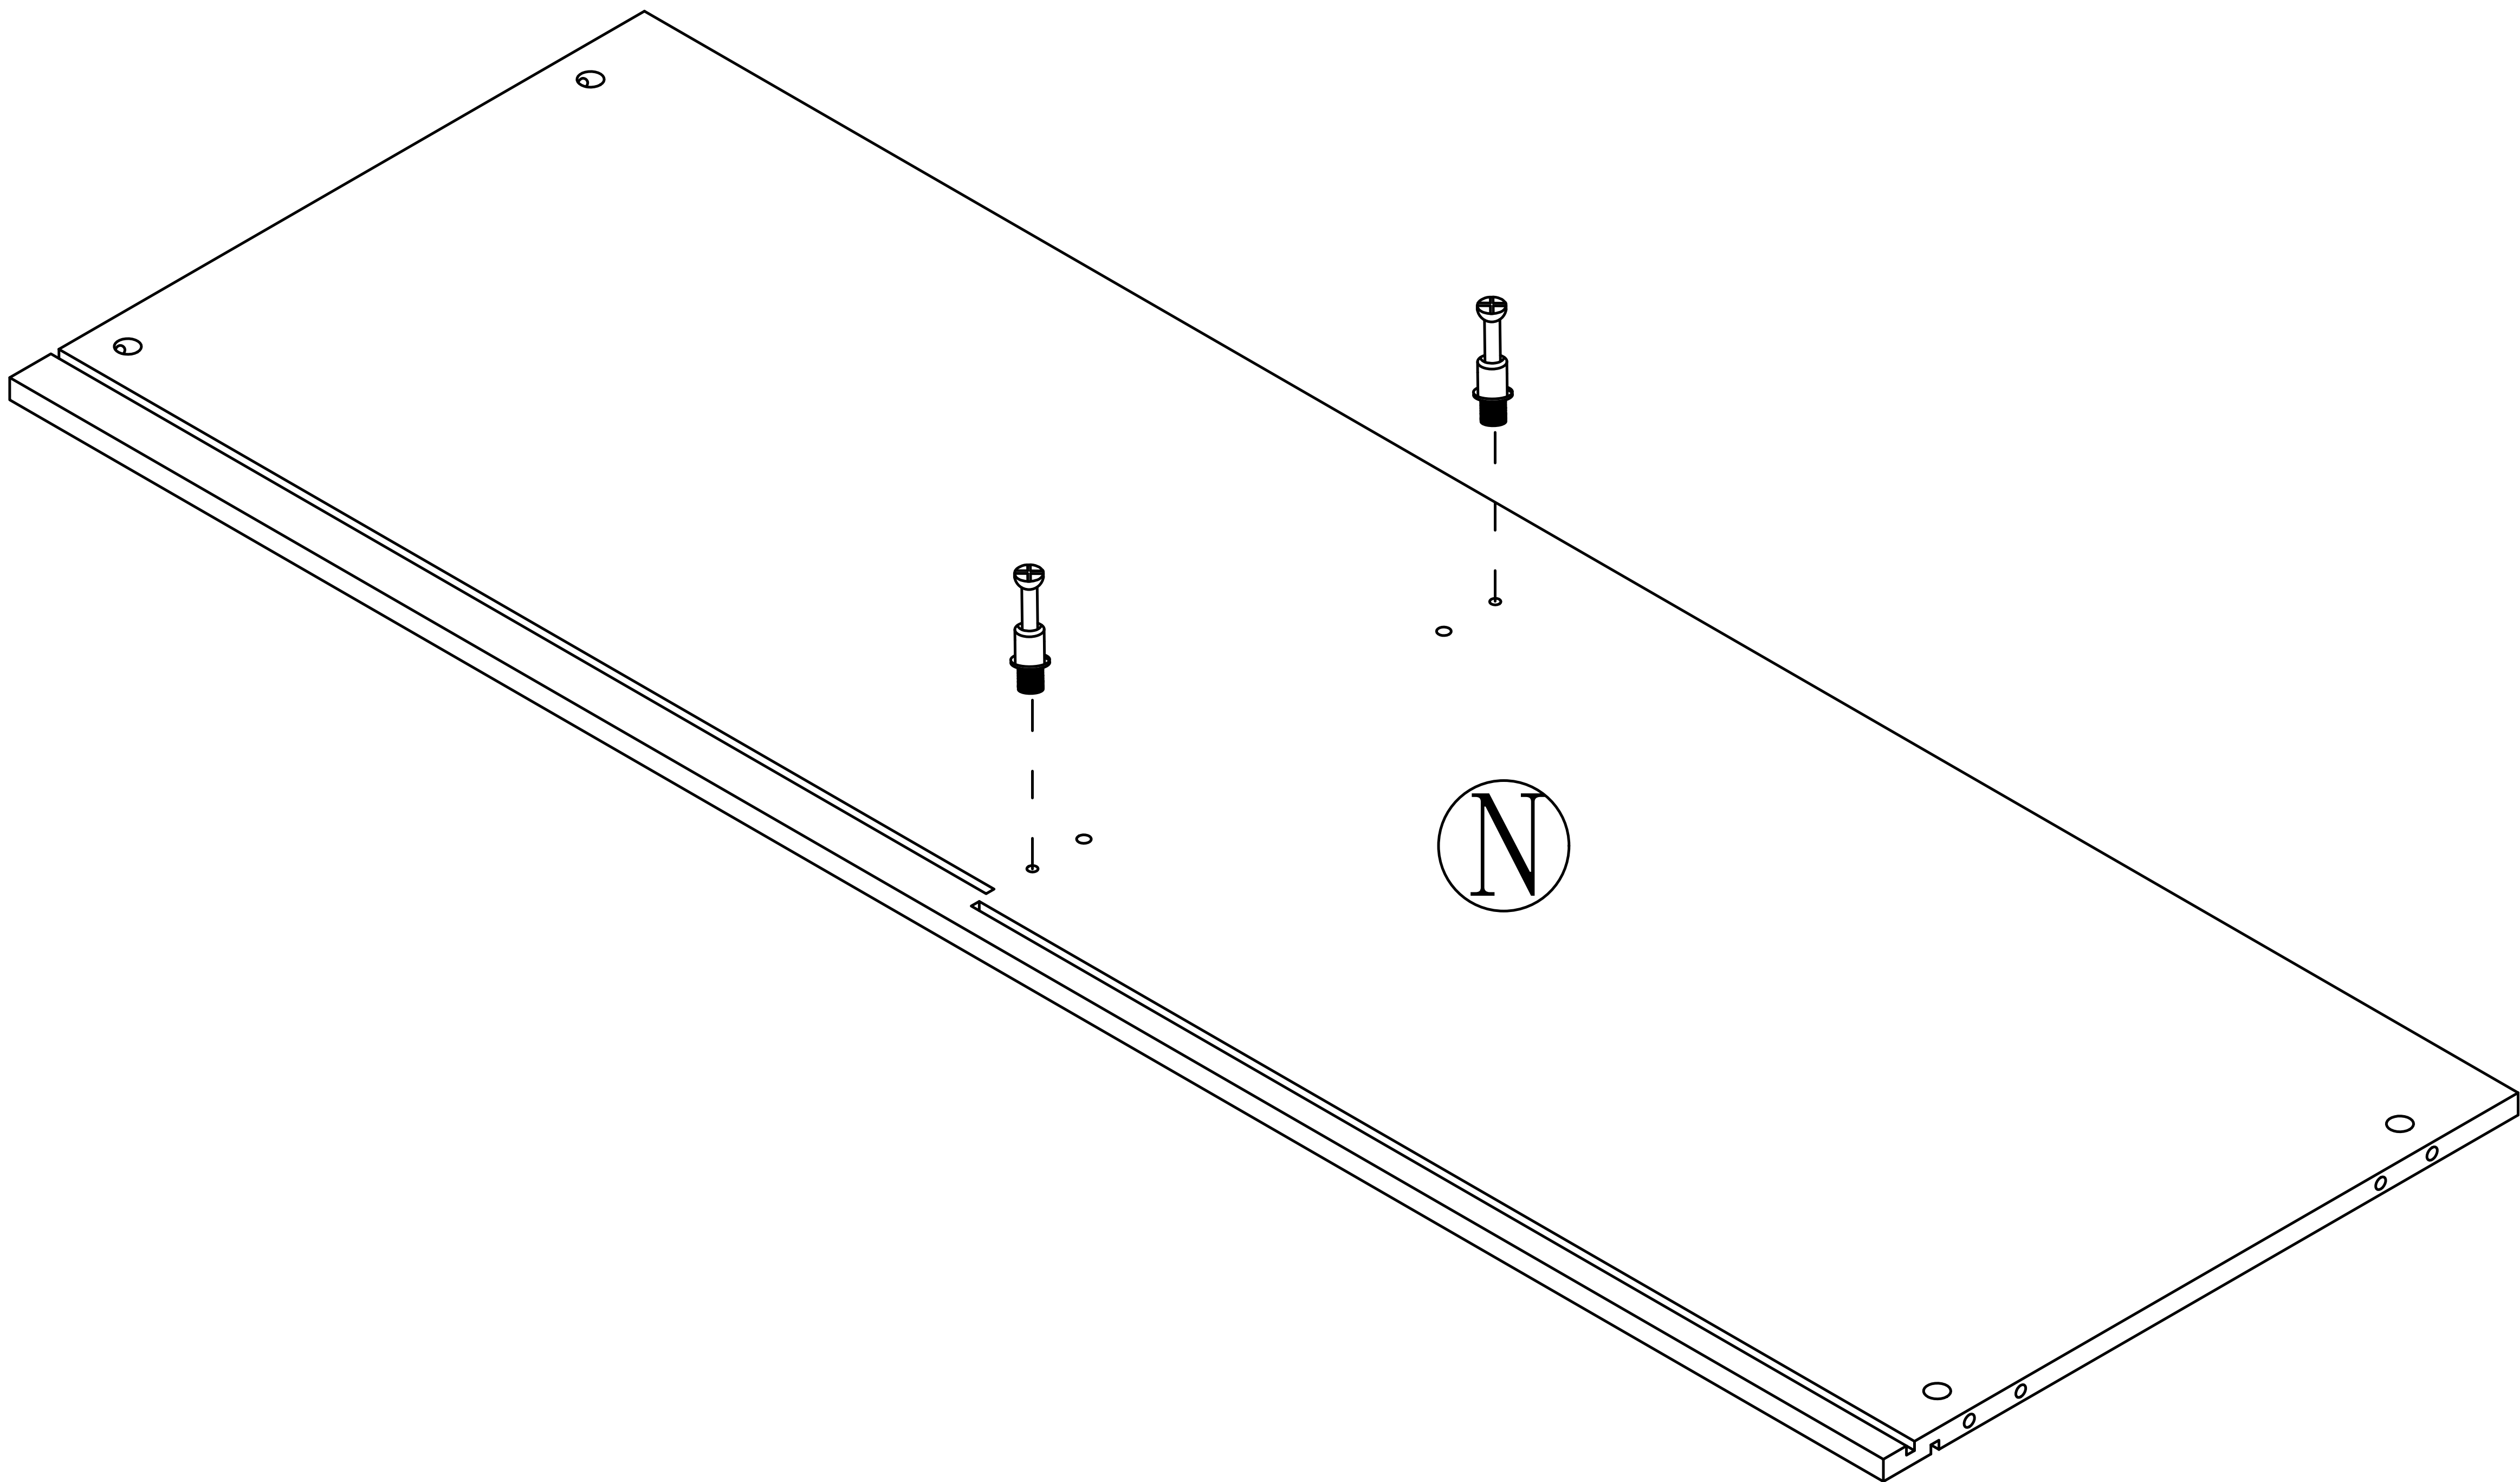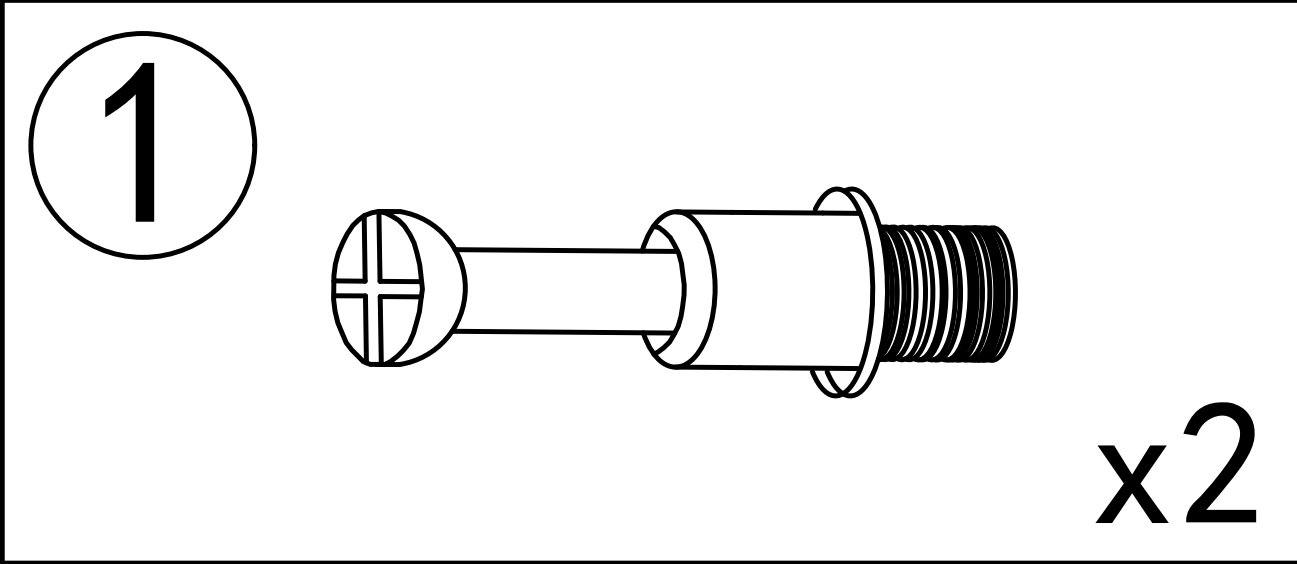


Step 25

2

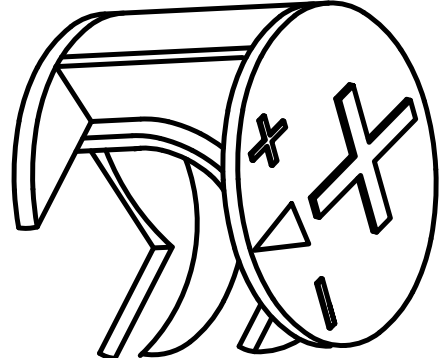 x2


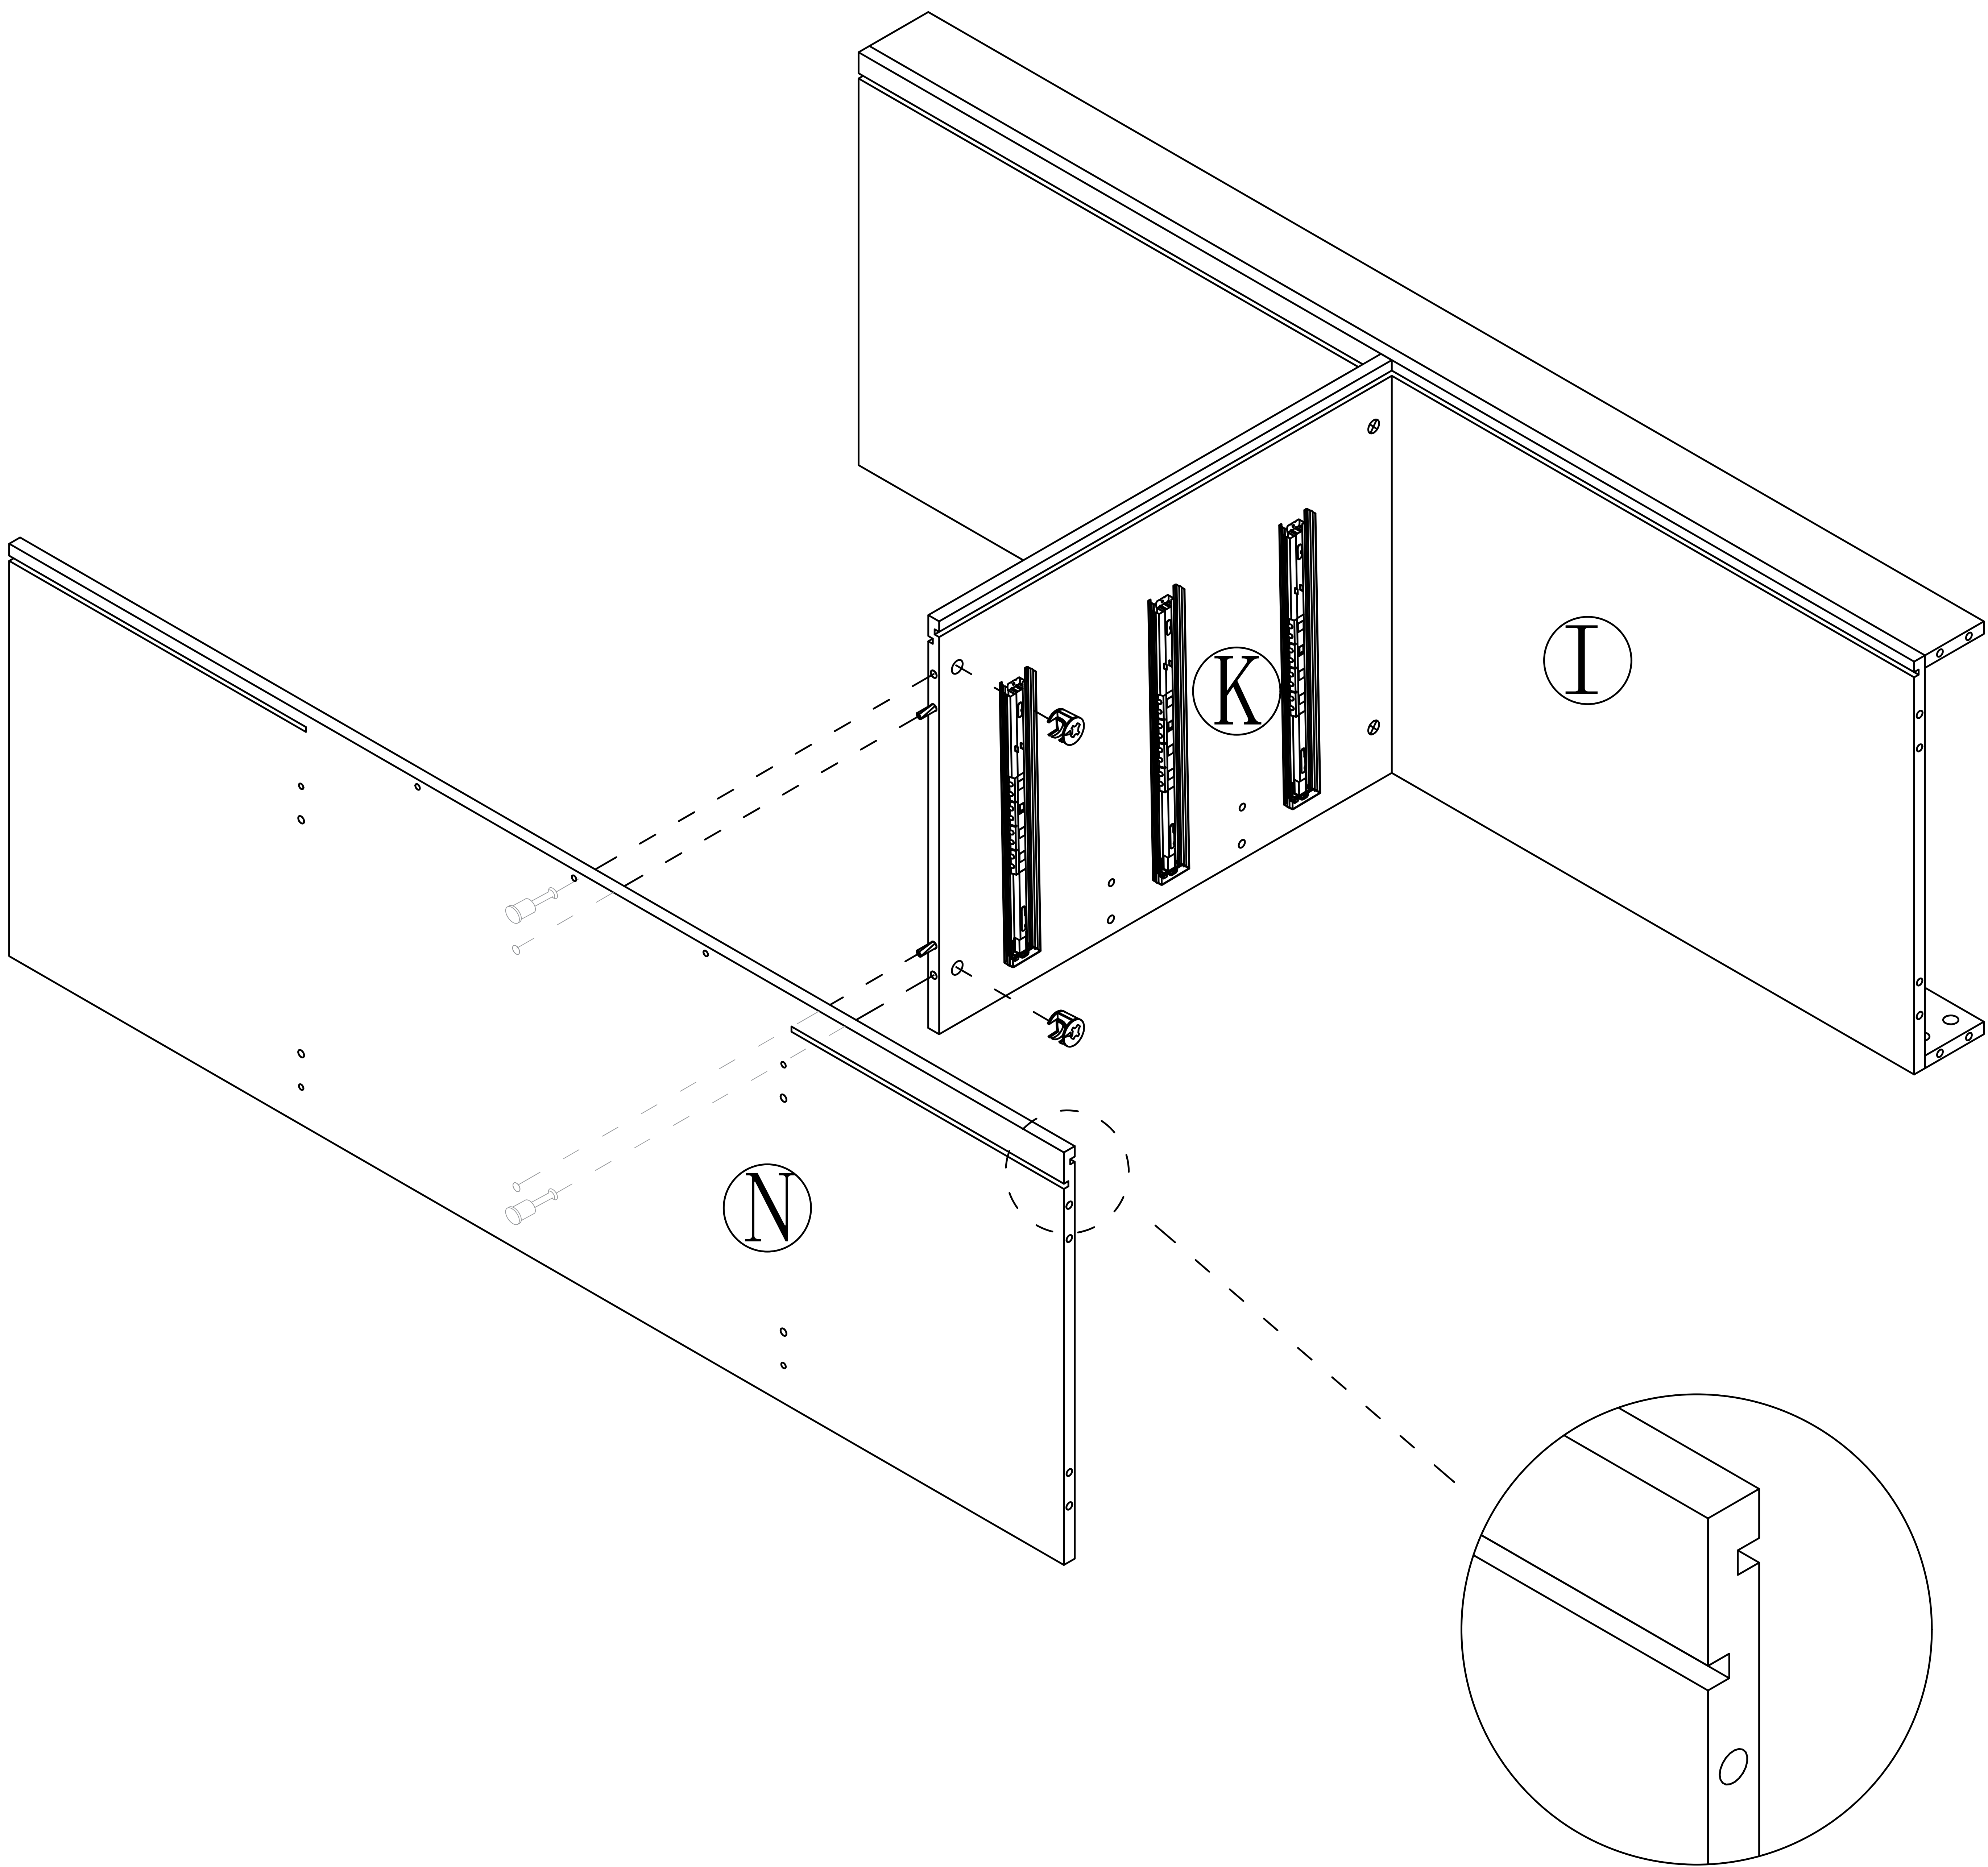


Step 26

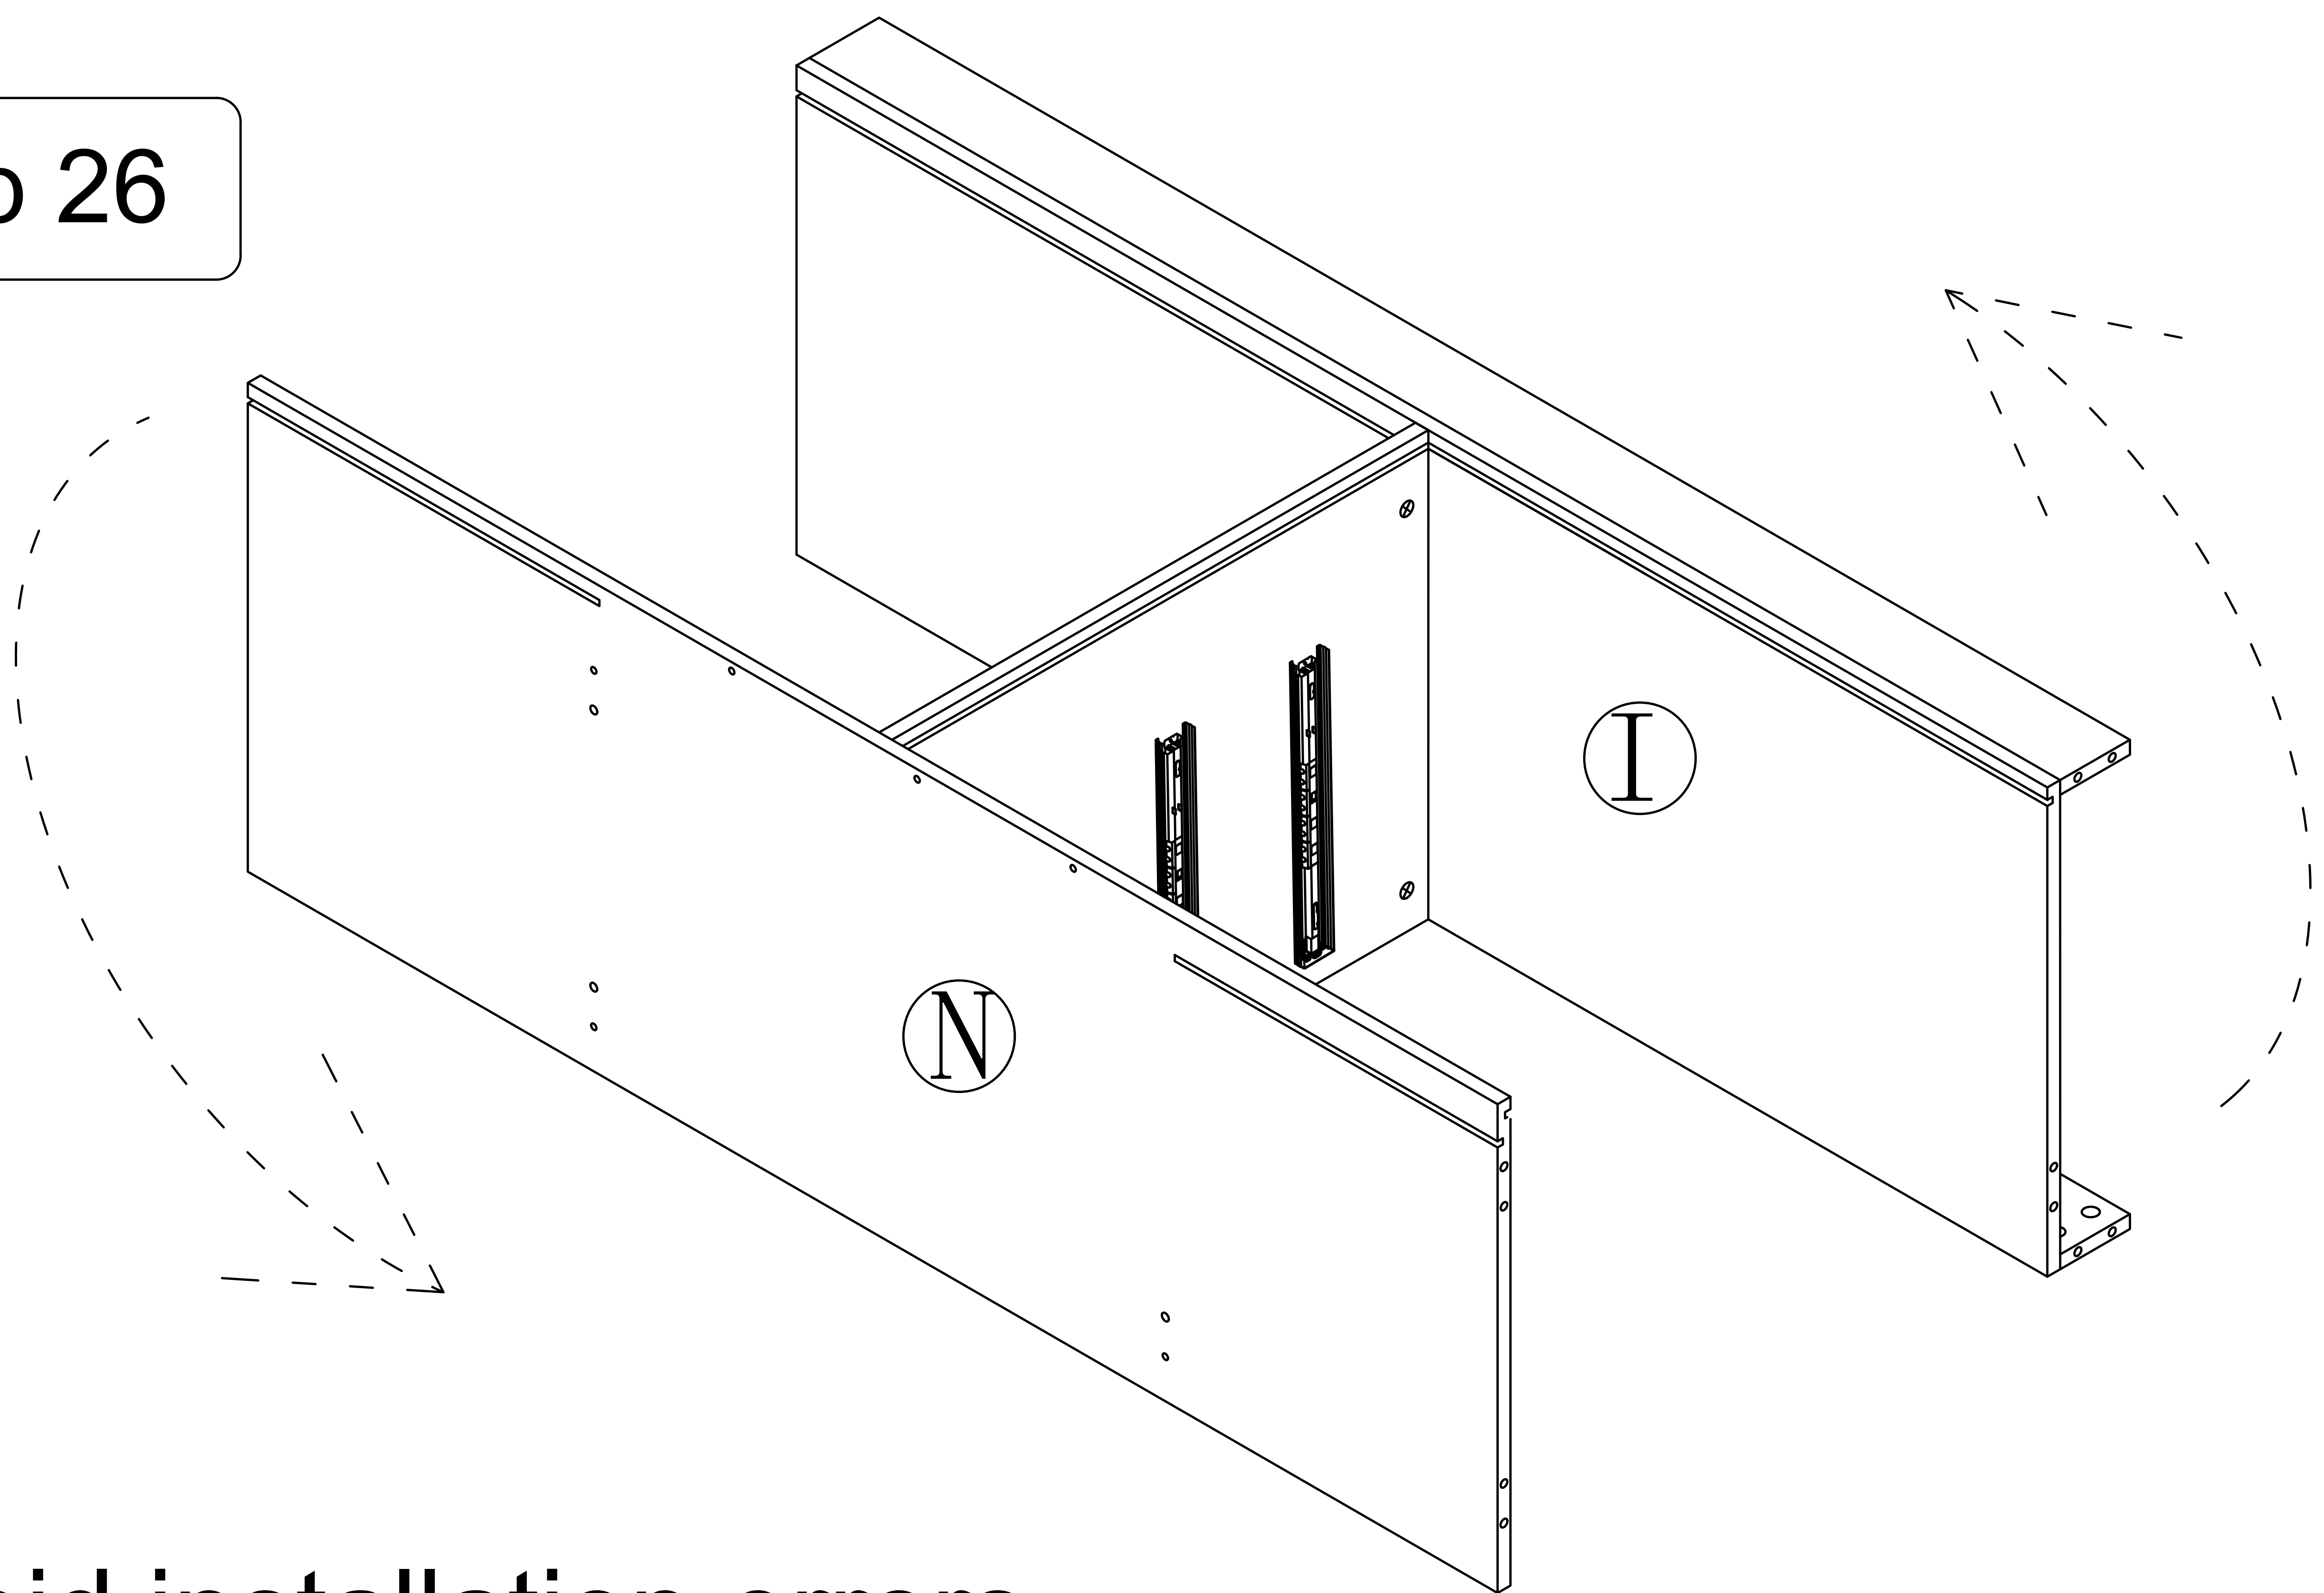


To avoid installation errors,
flip as shown in the picture


Step 27

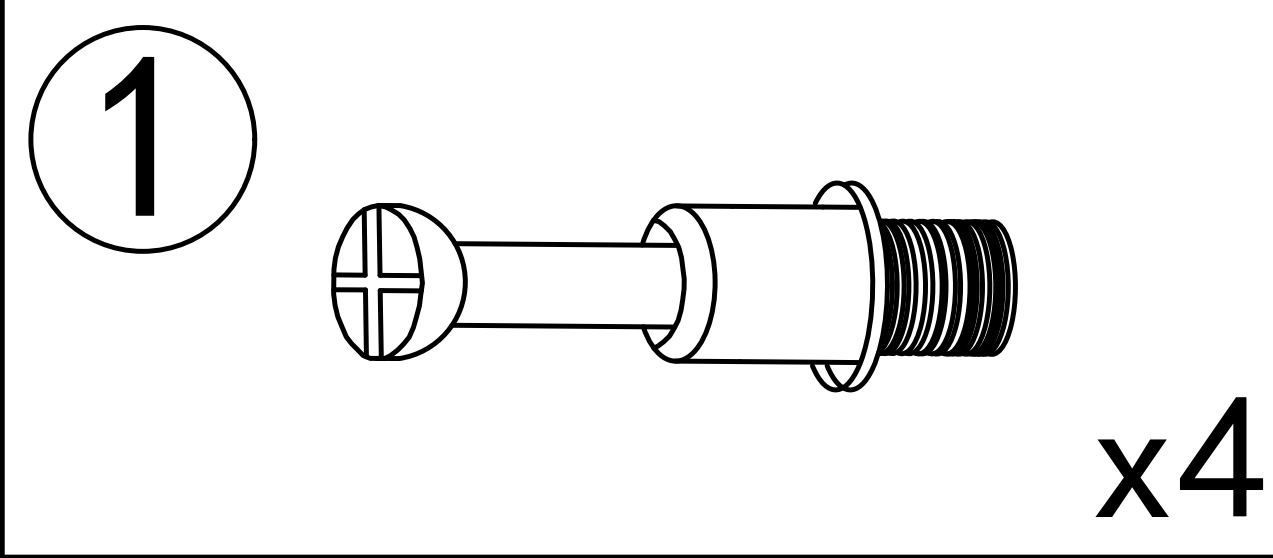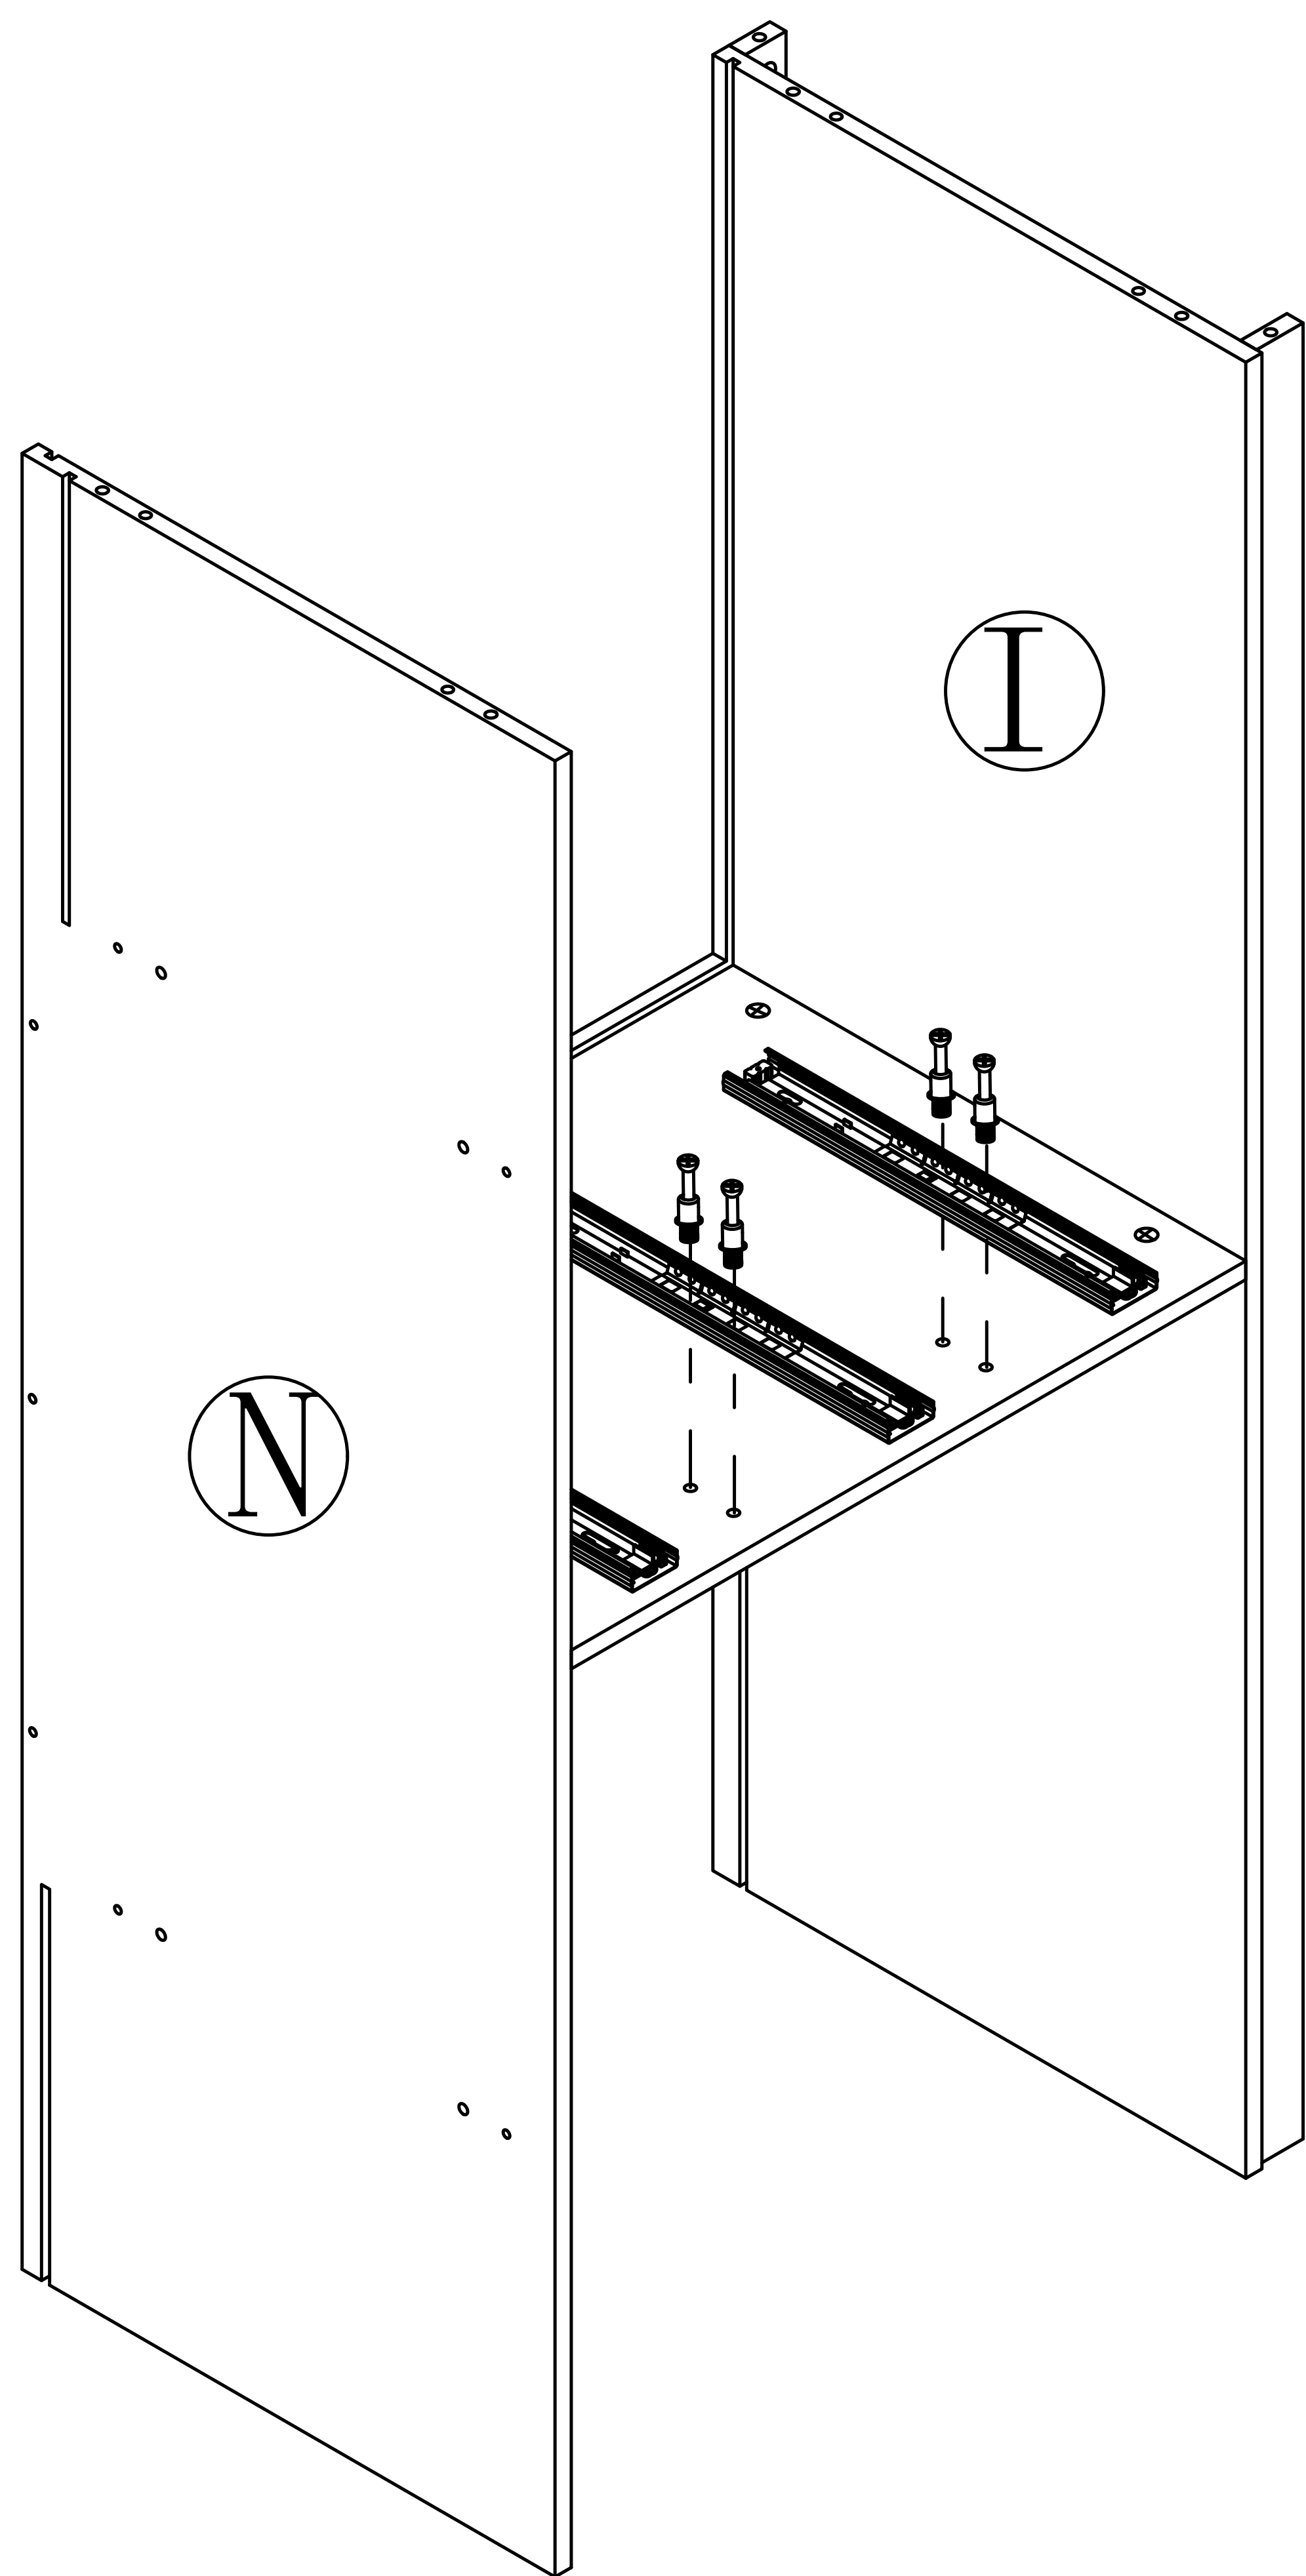

Step 28


2

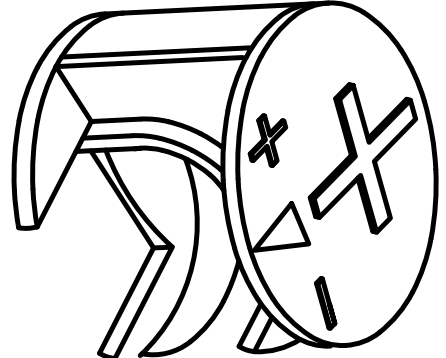 x4

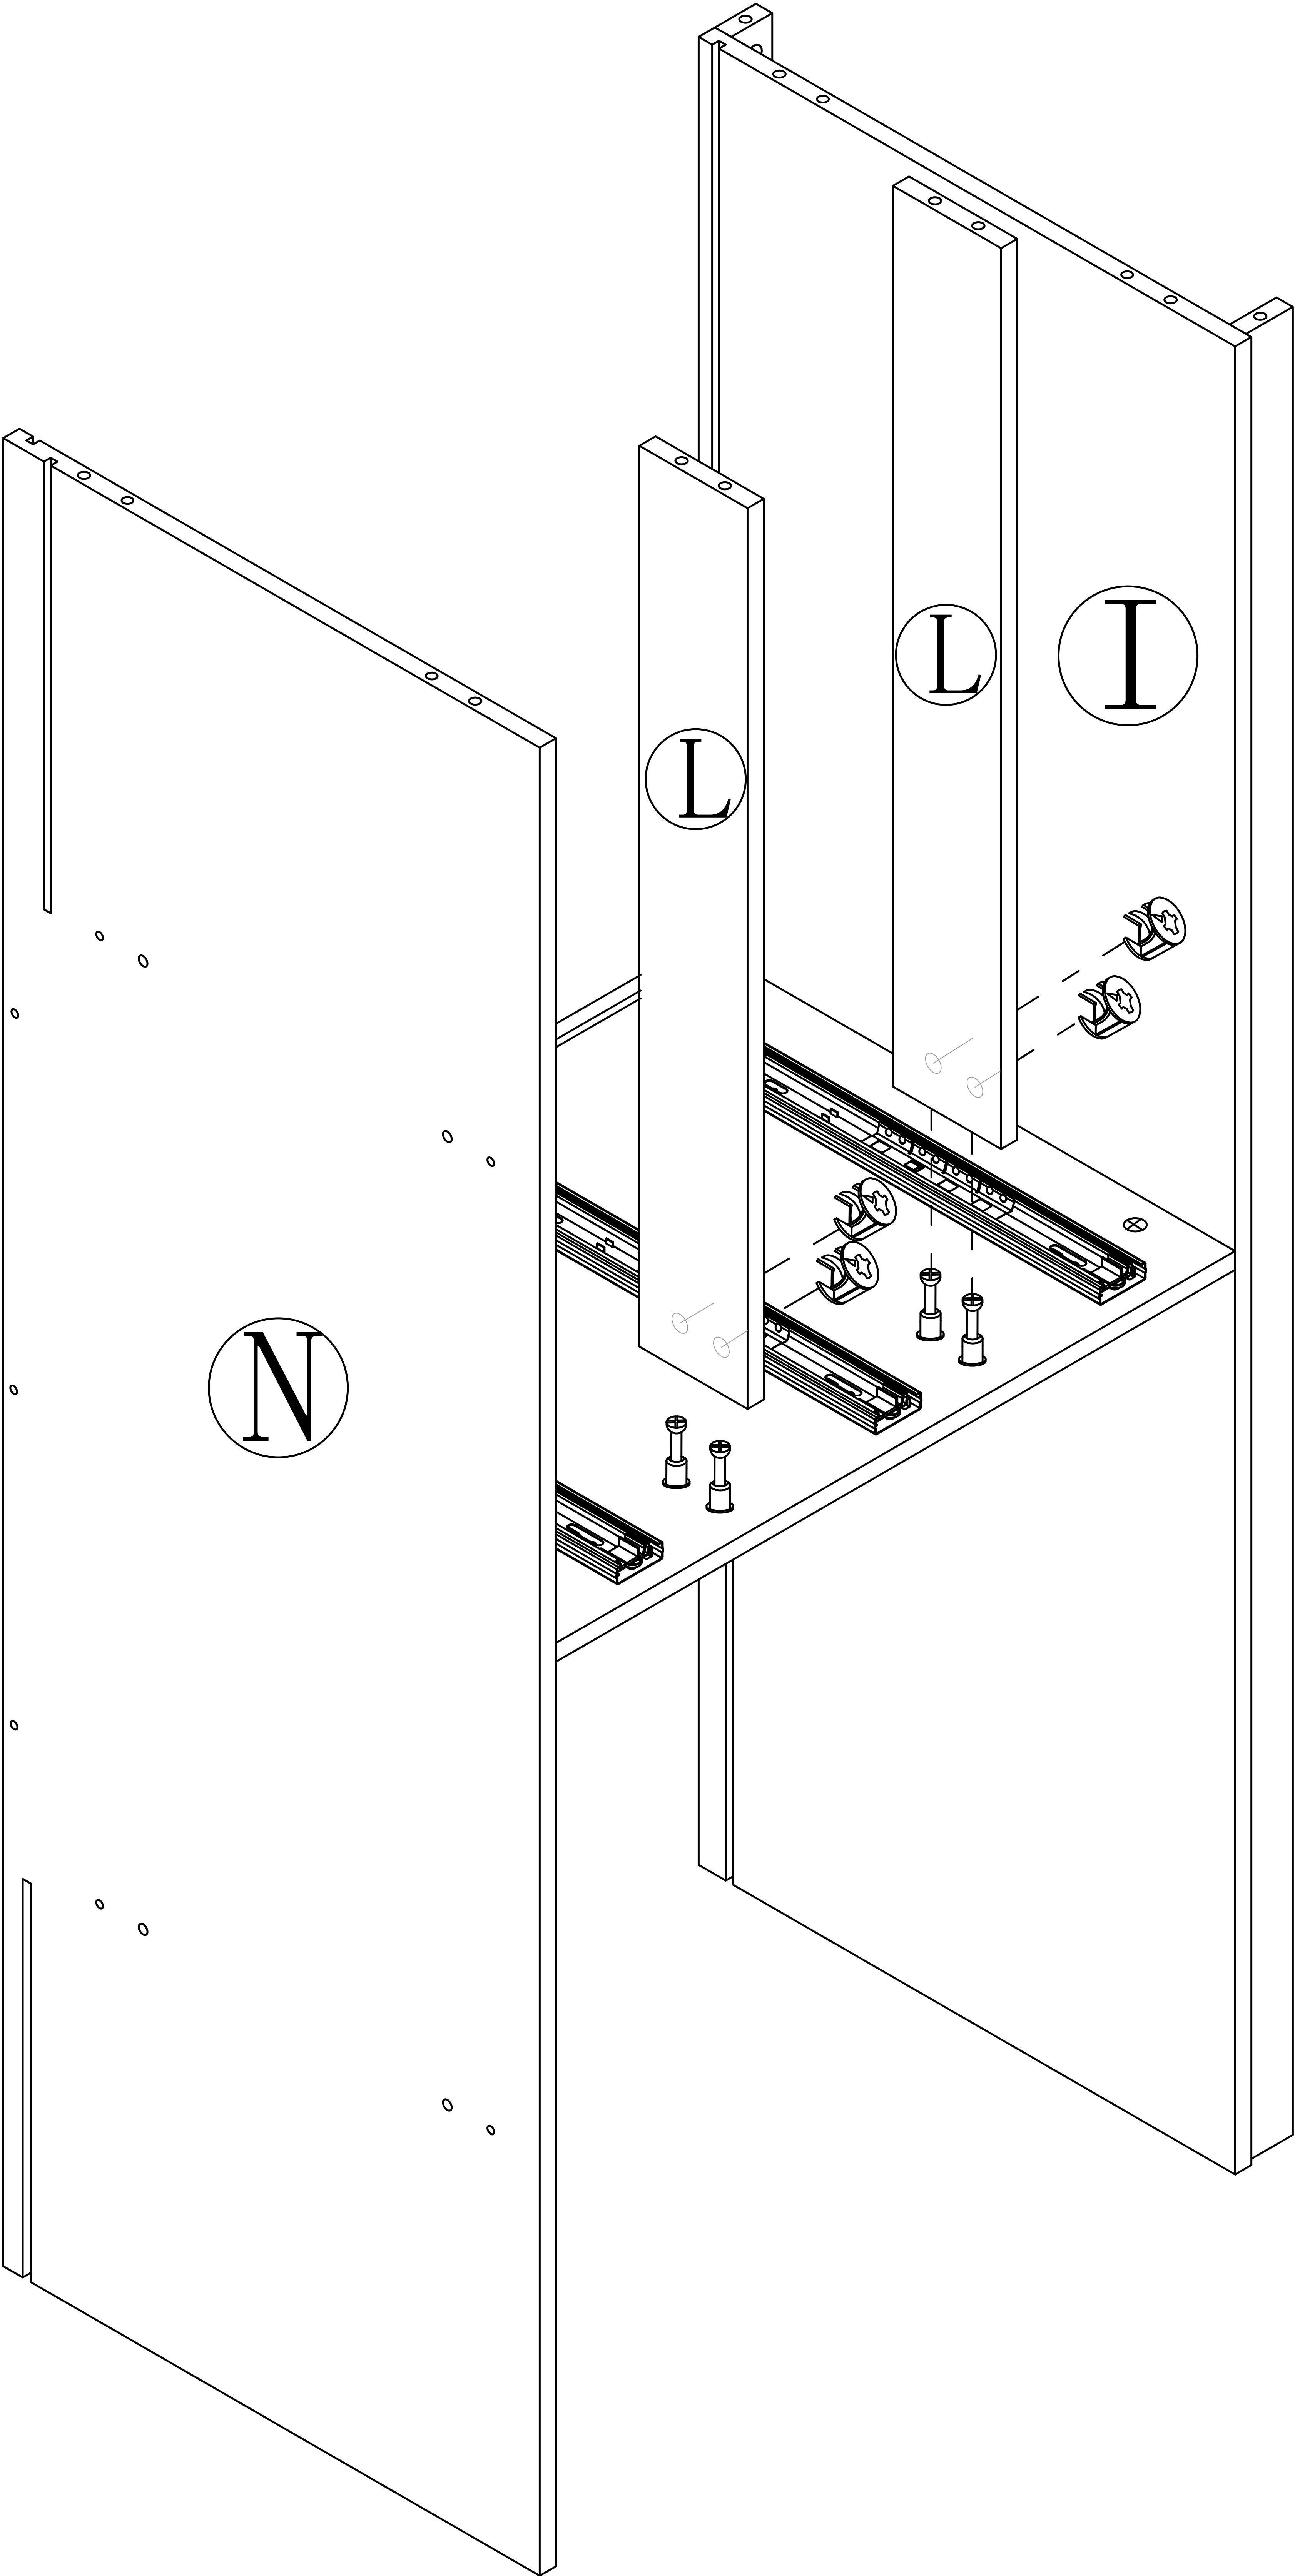


Step 29


3

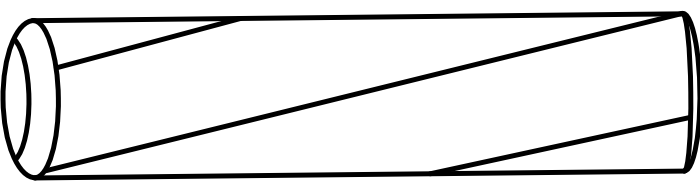

x4

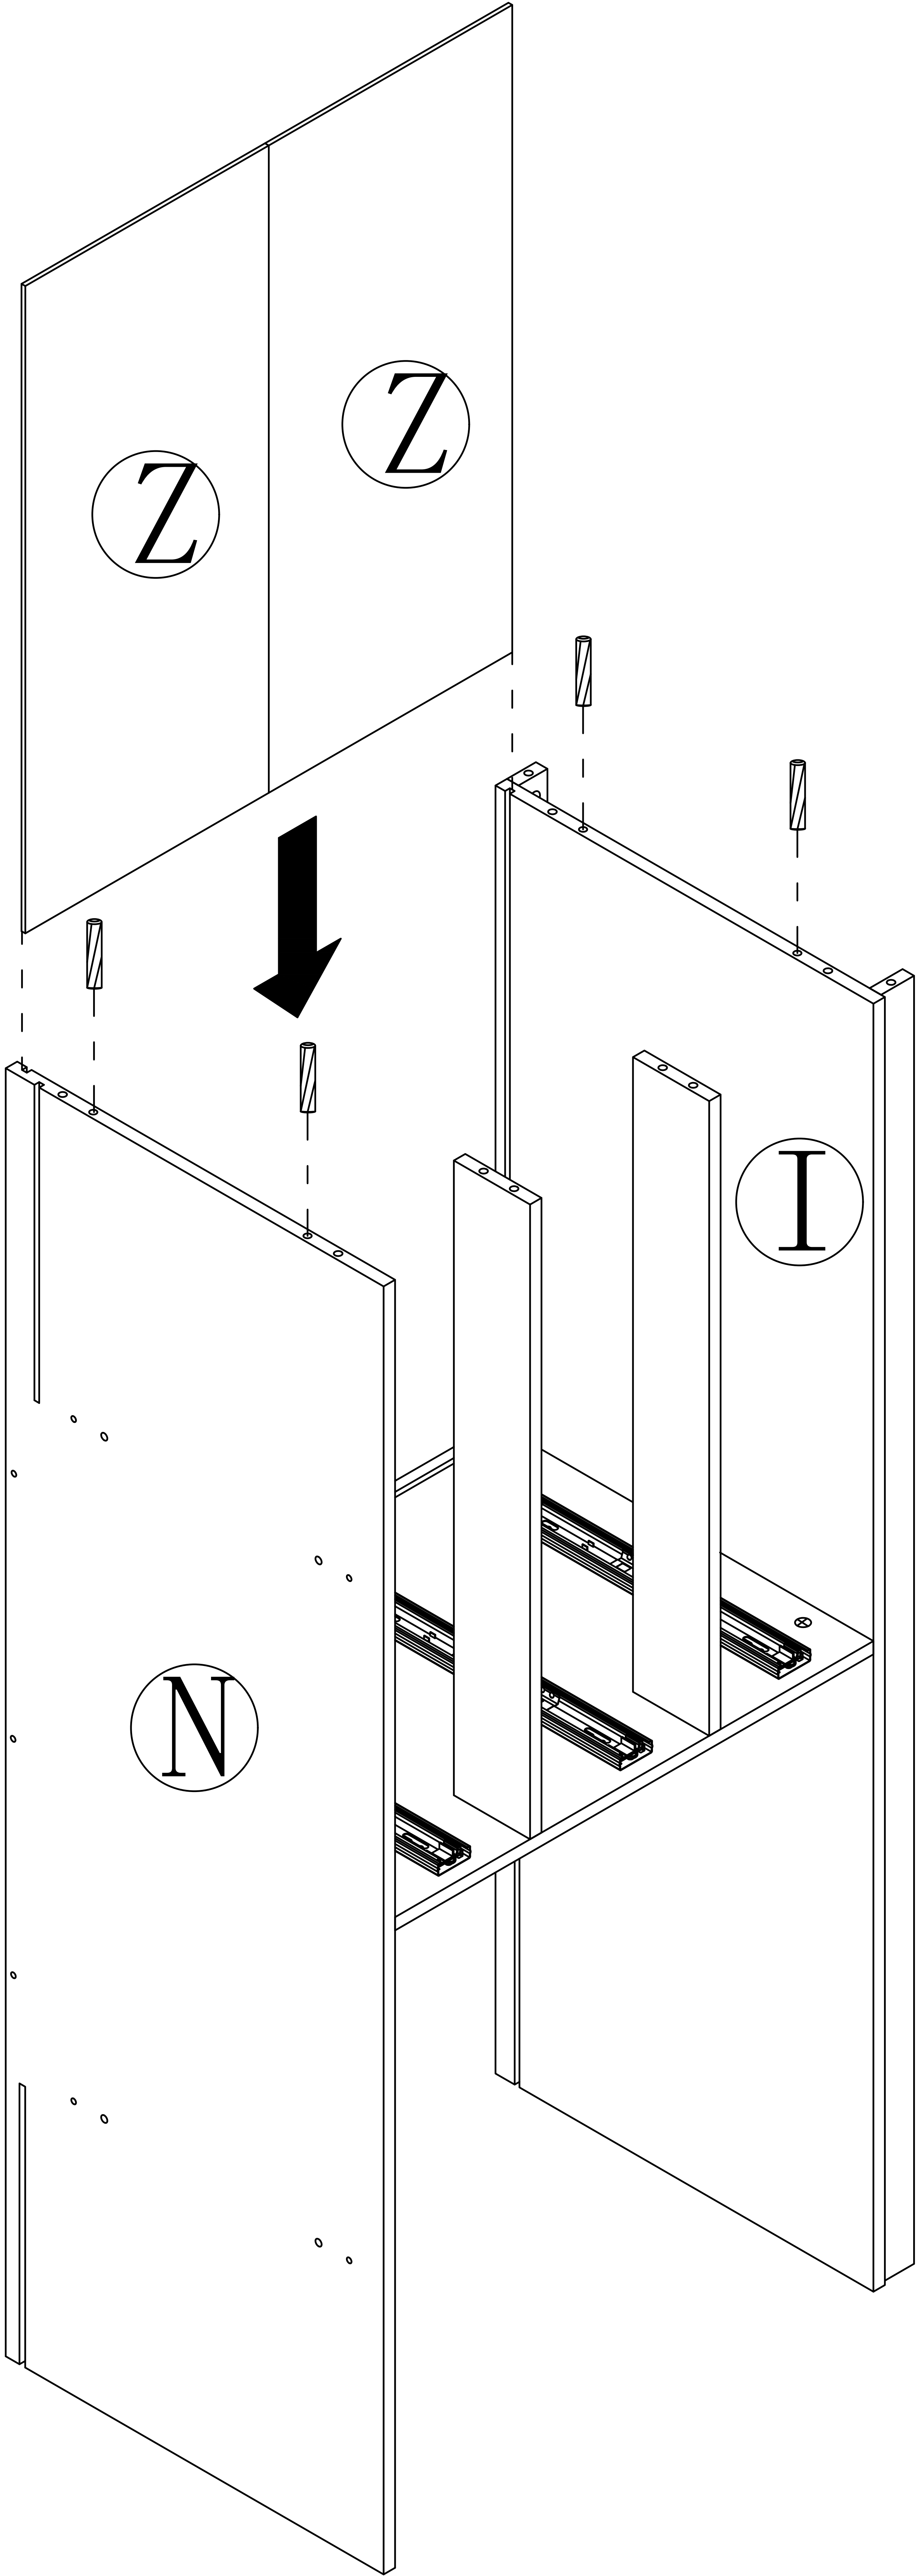


Step 30

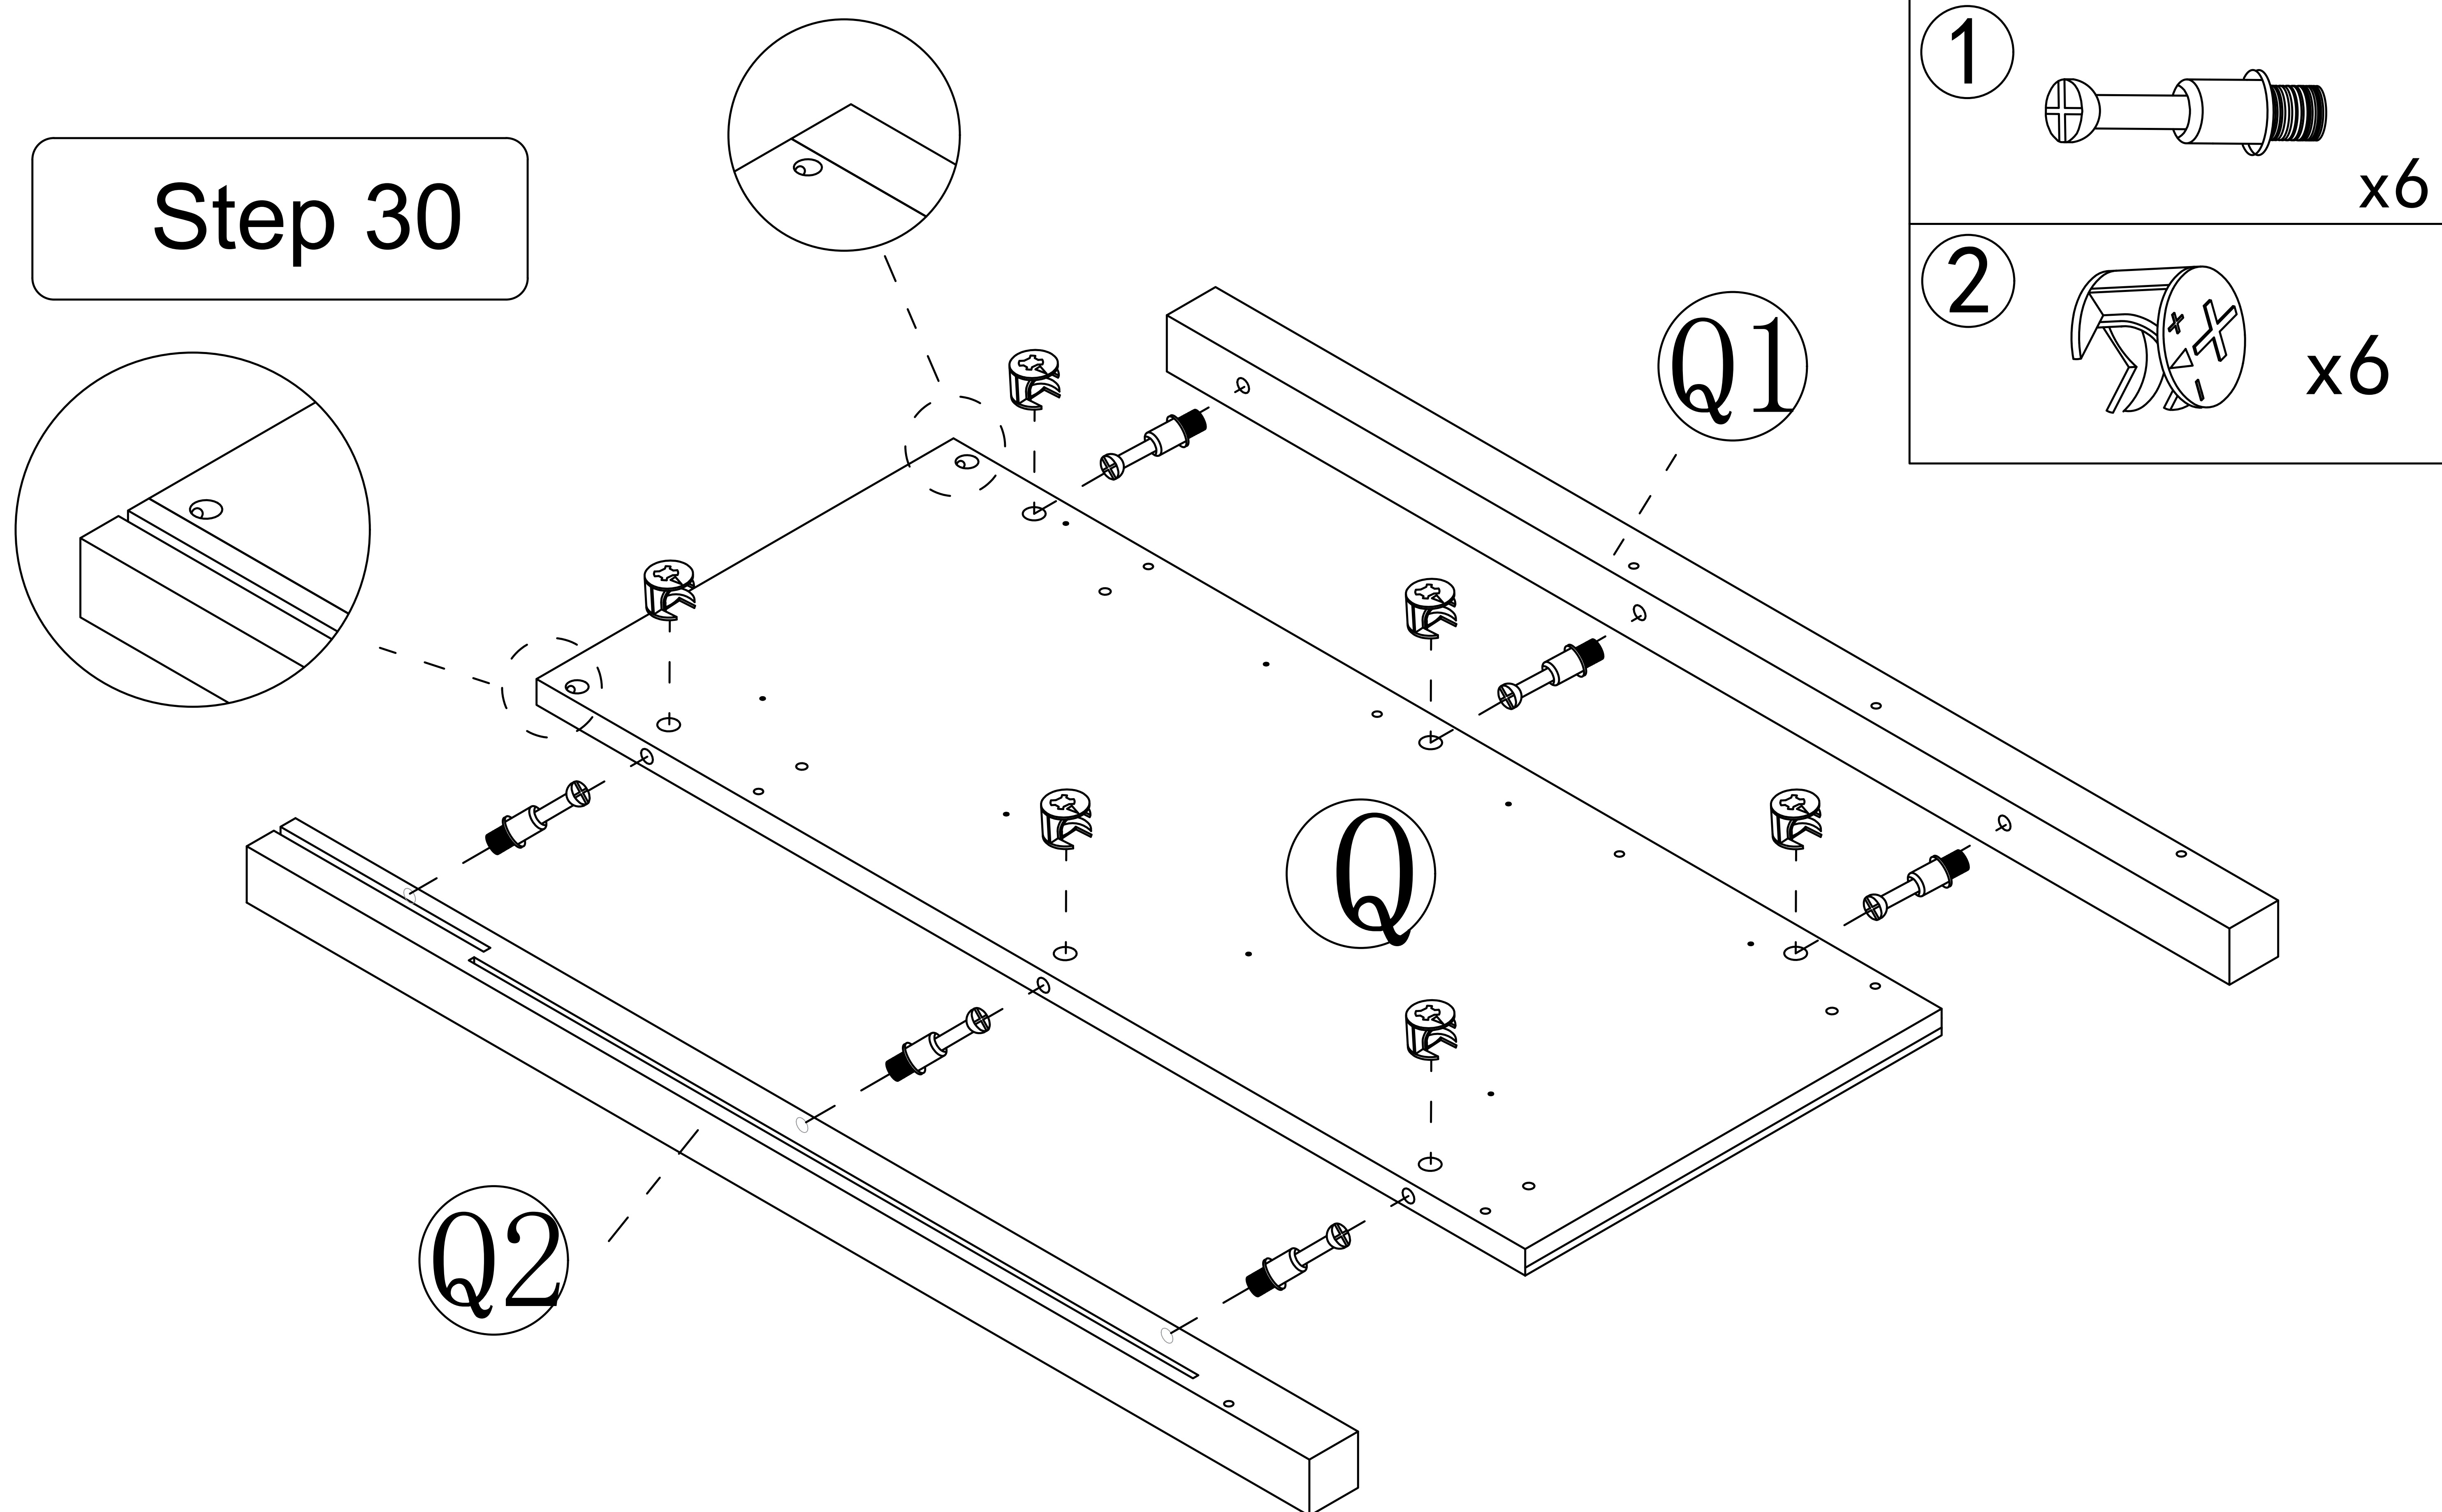

Attention: First install the two in one, then install the nut


Step 31

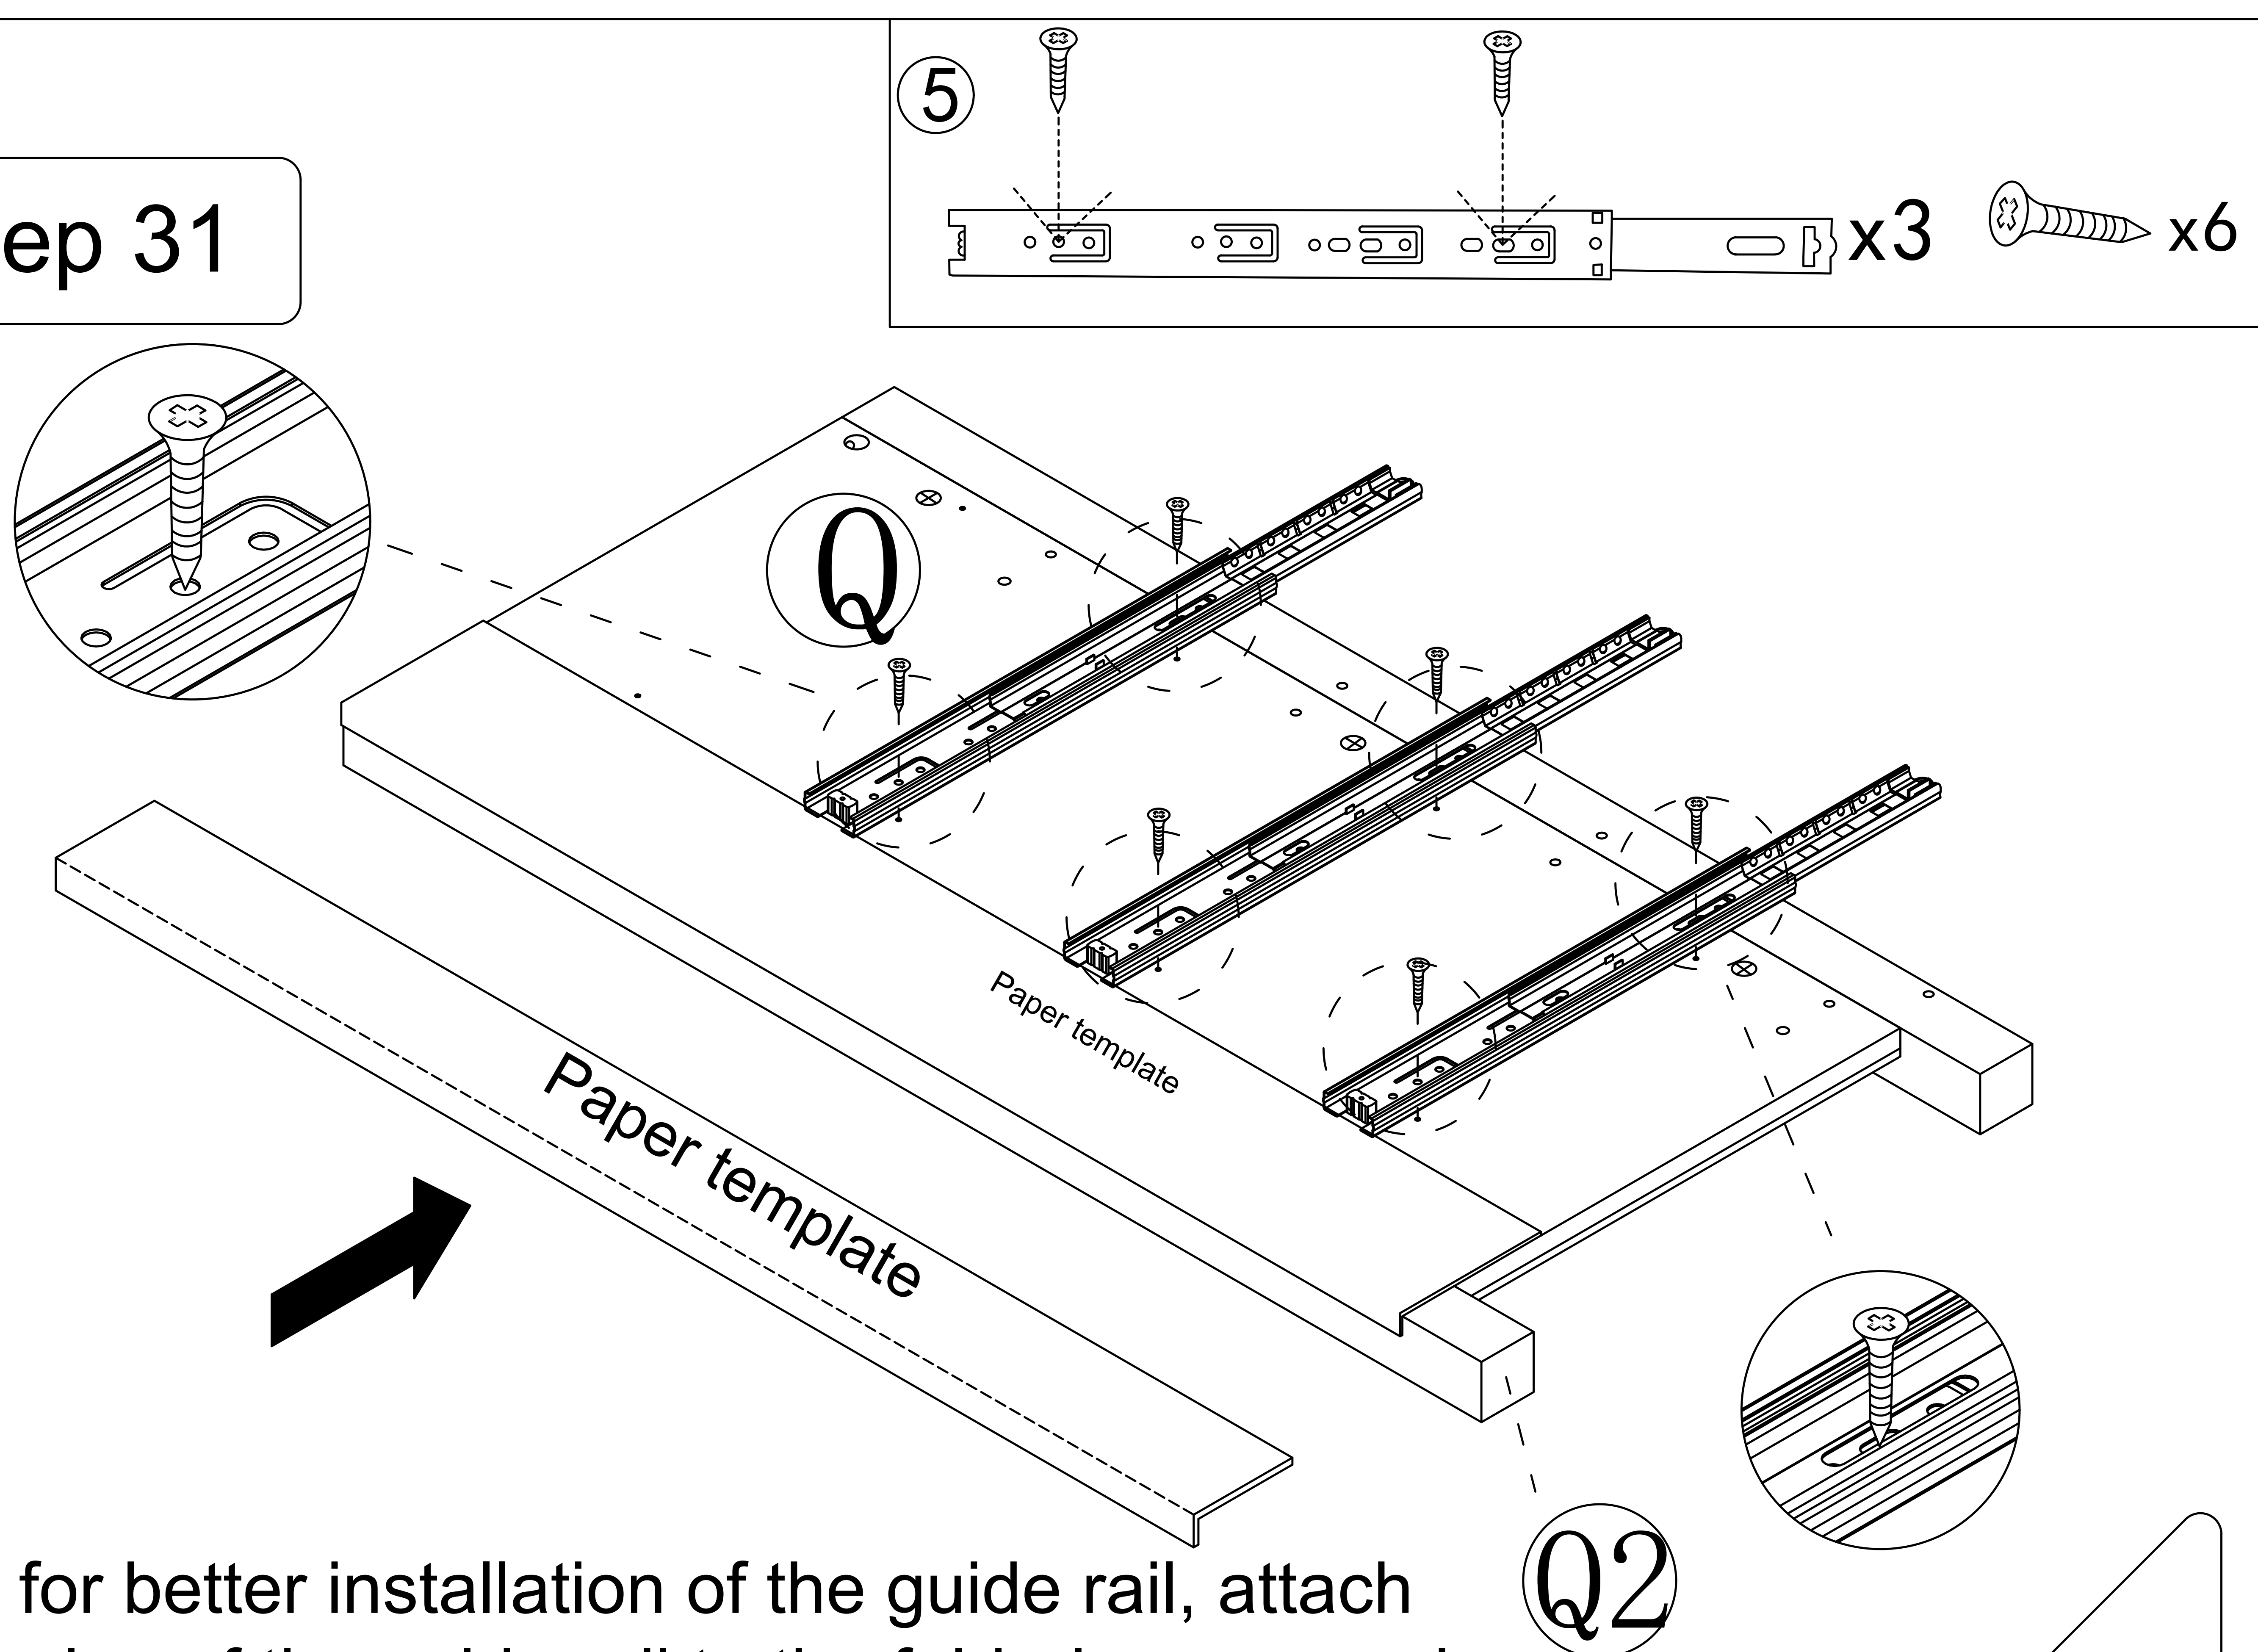


Fold it up for better installation of the guide rail, attach the back edge of the guide rail to the folded paper, and screw it into the corresponding hole position

Step 32

5

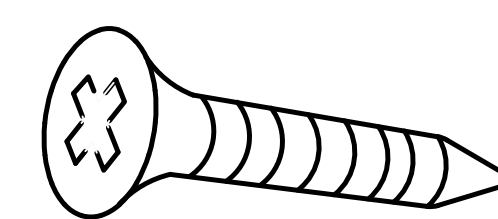

x3

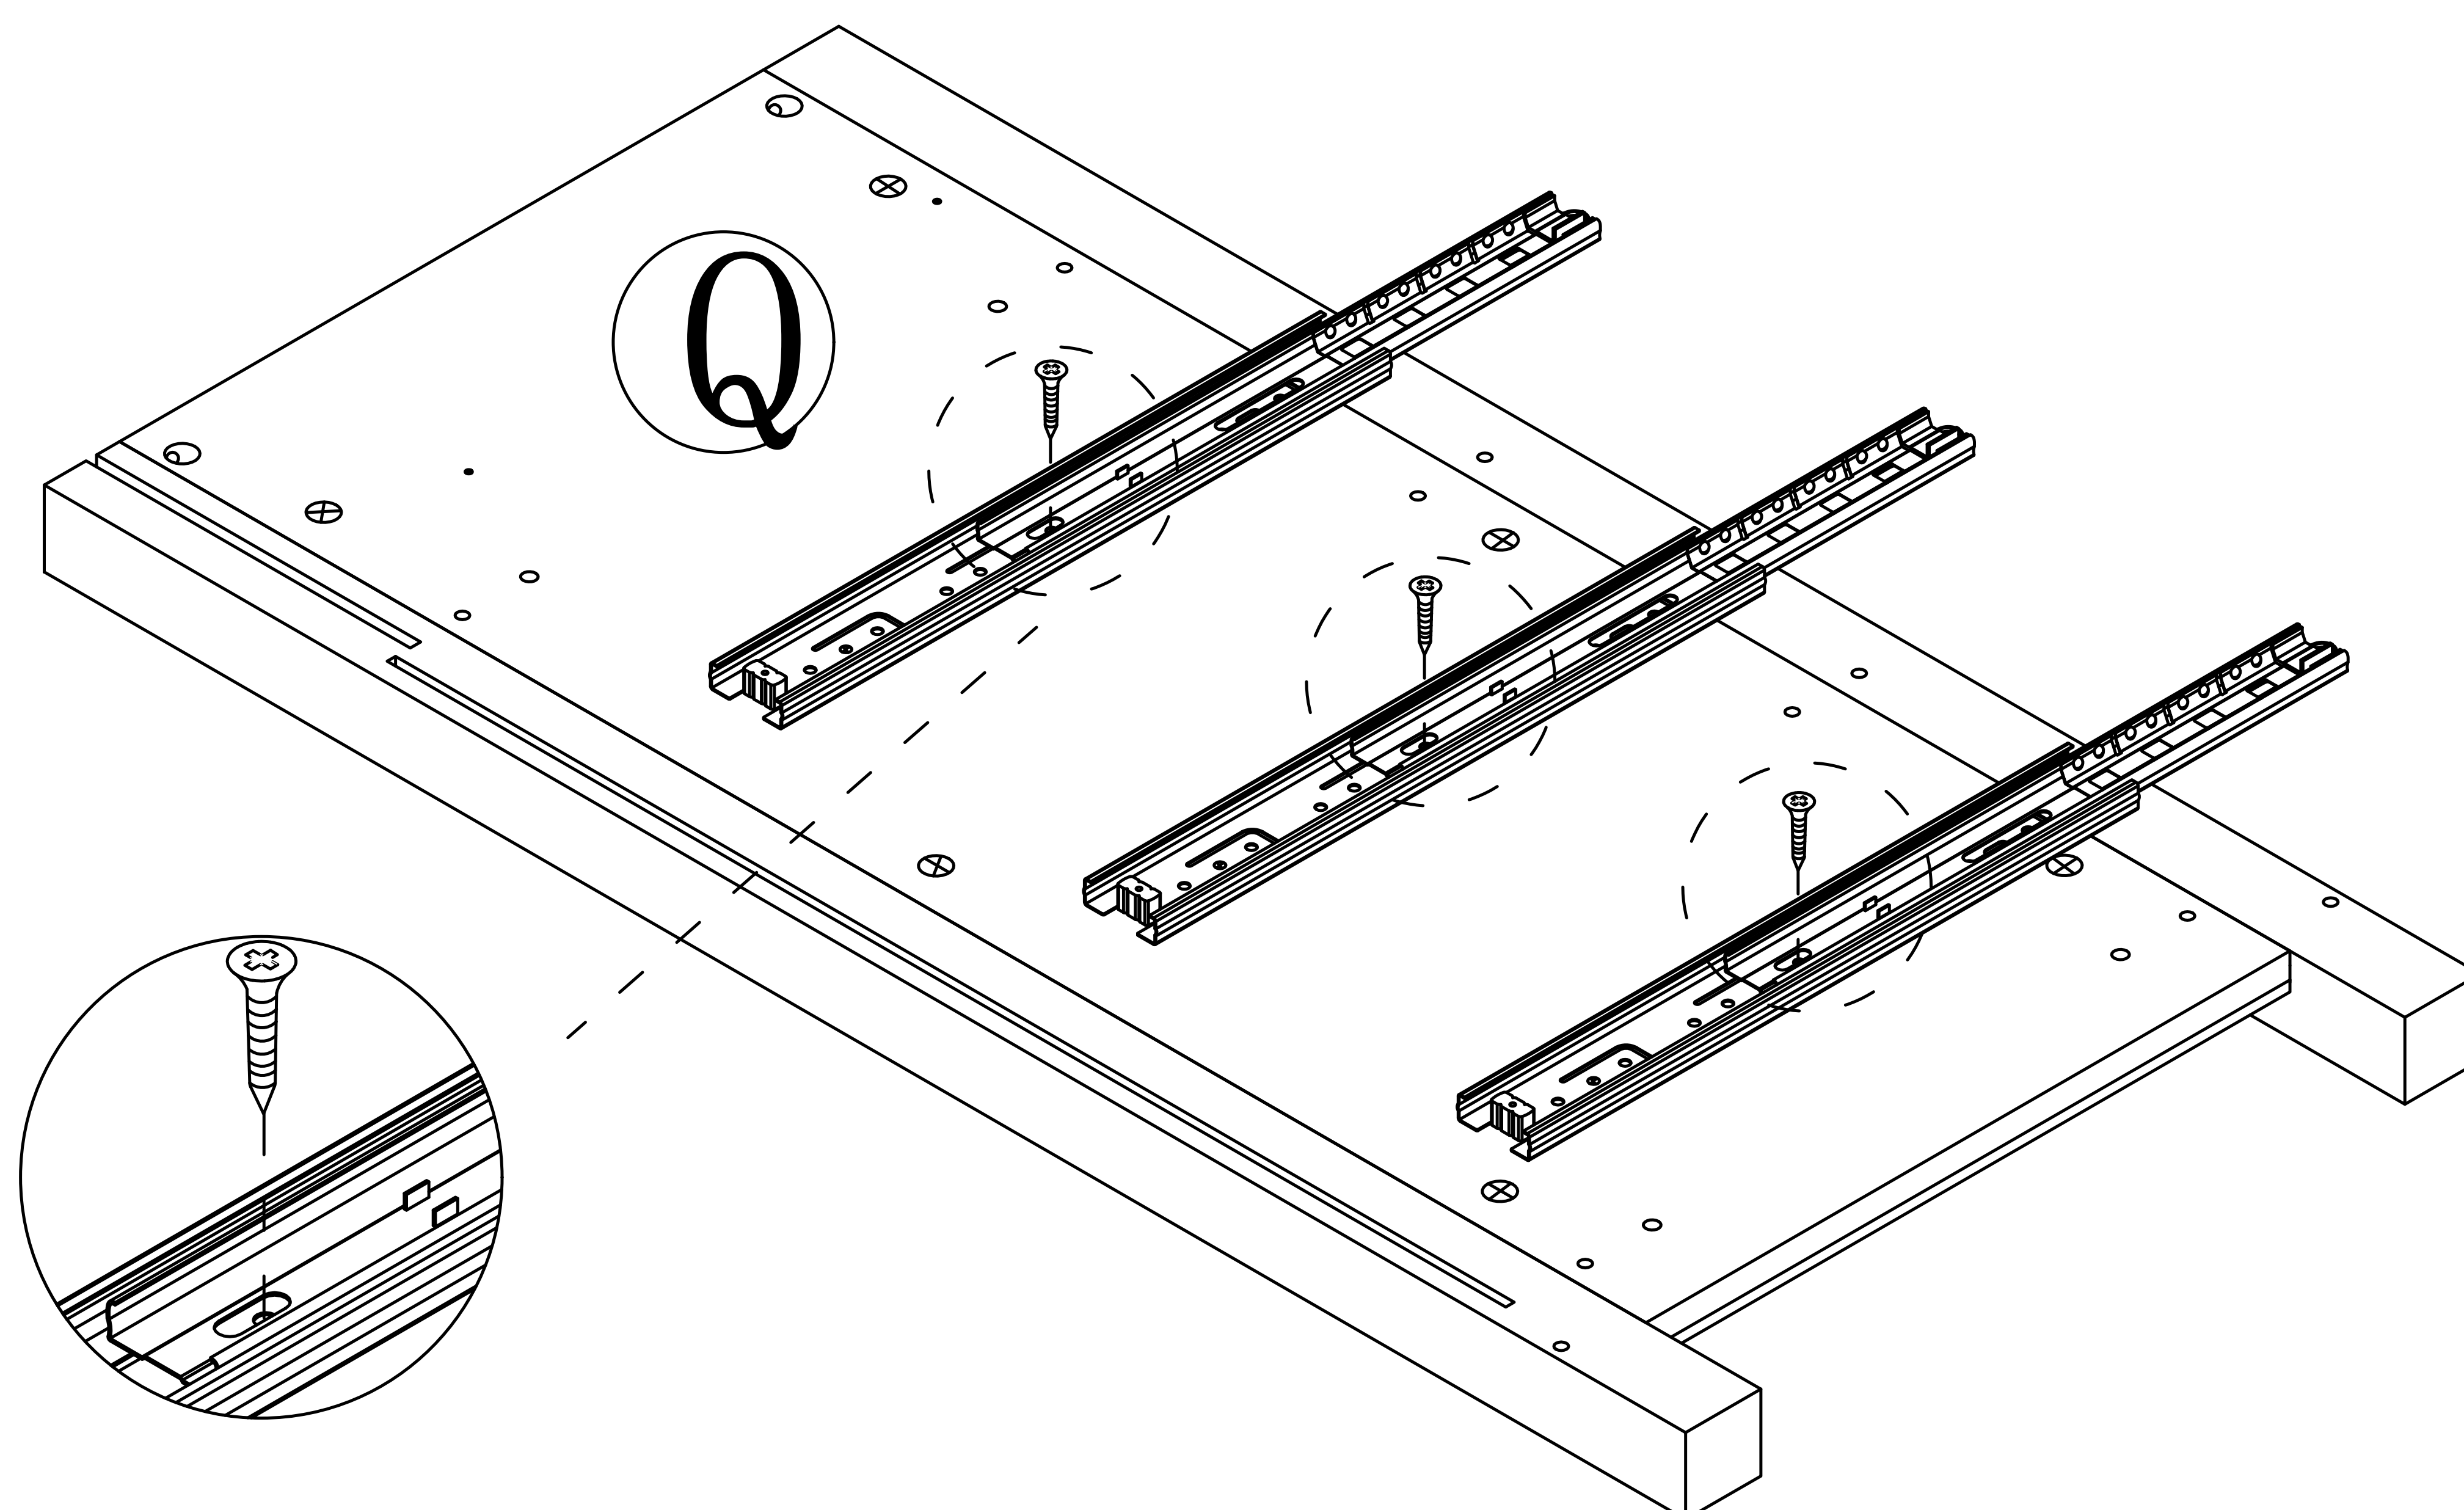


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 33


5



x1

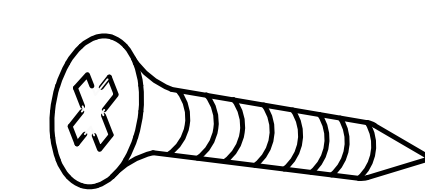


x2

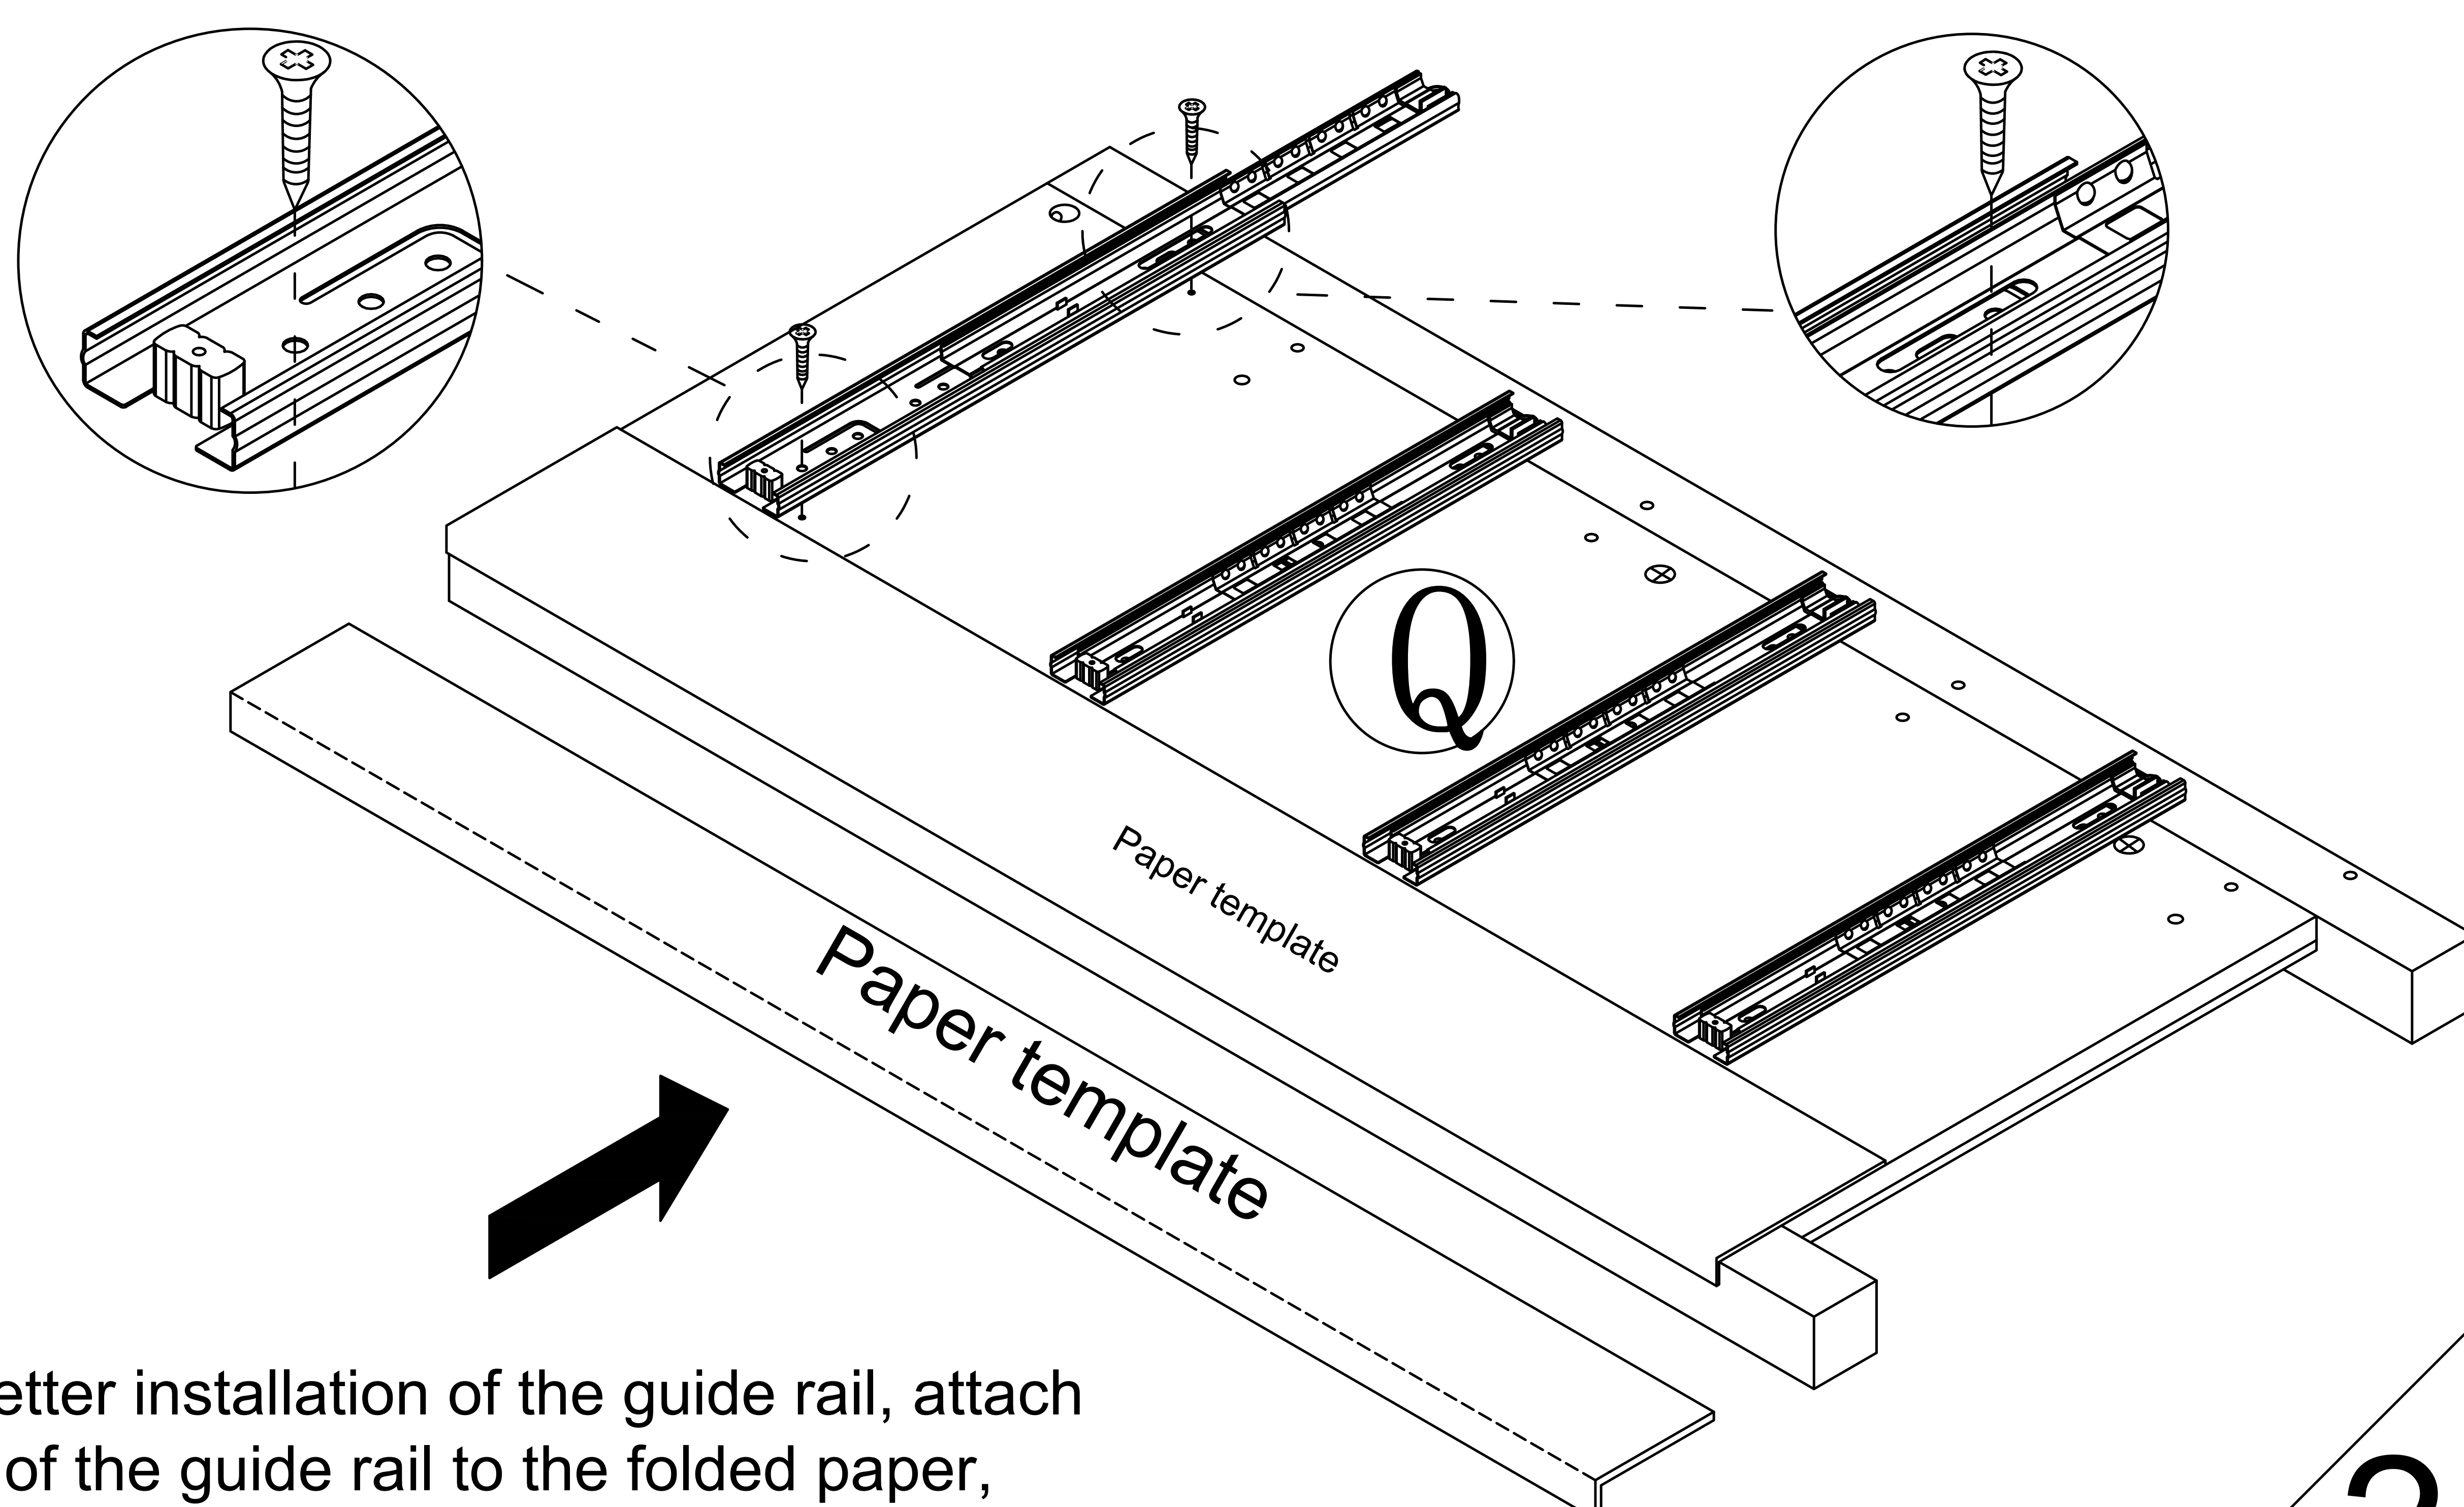


Fold it up for better installation of the guide rail, attach the back edge of the guide rail to the folded paper, and screw it into the corresponding hole position

Step 34

5

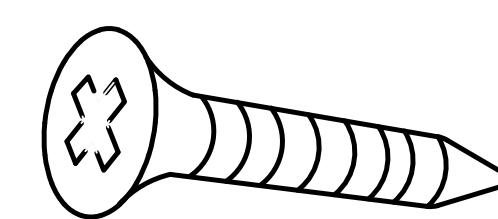


x1

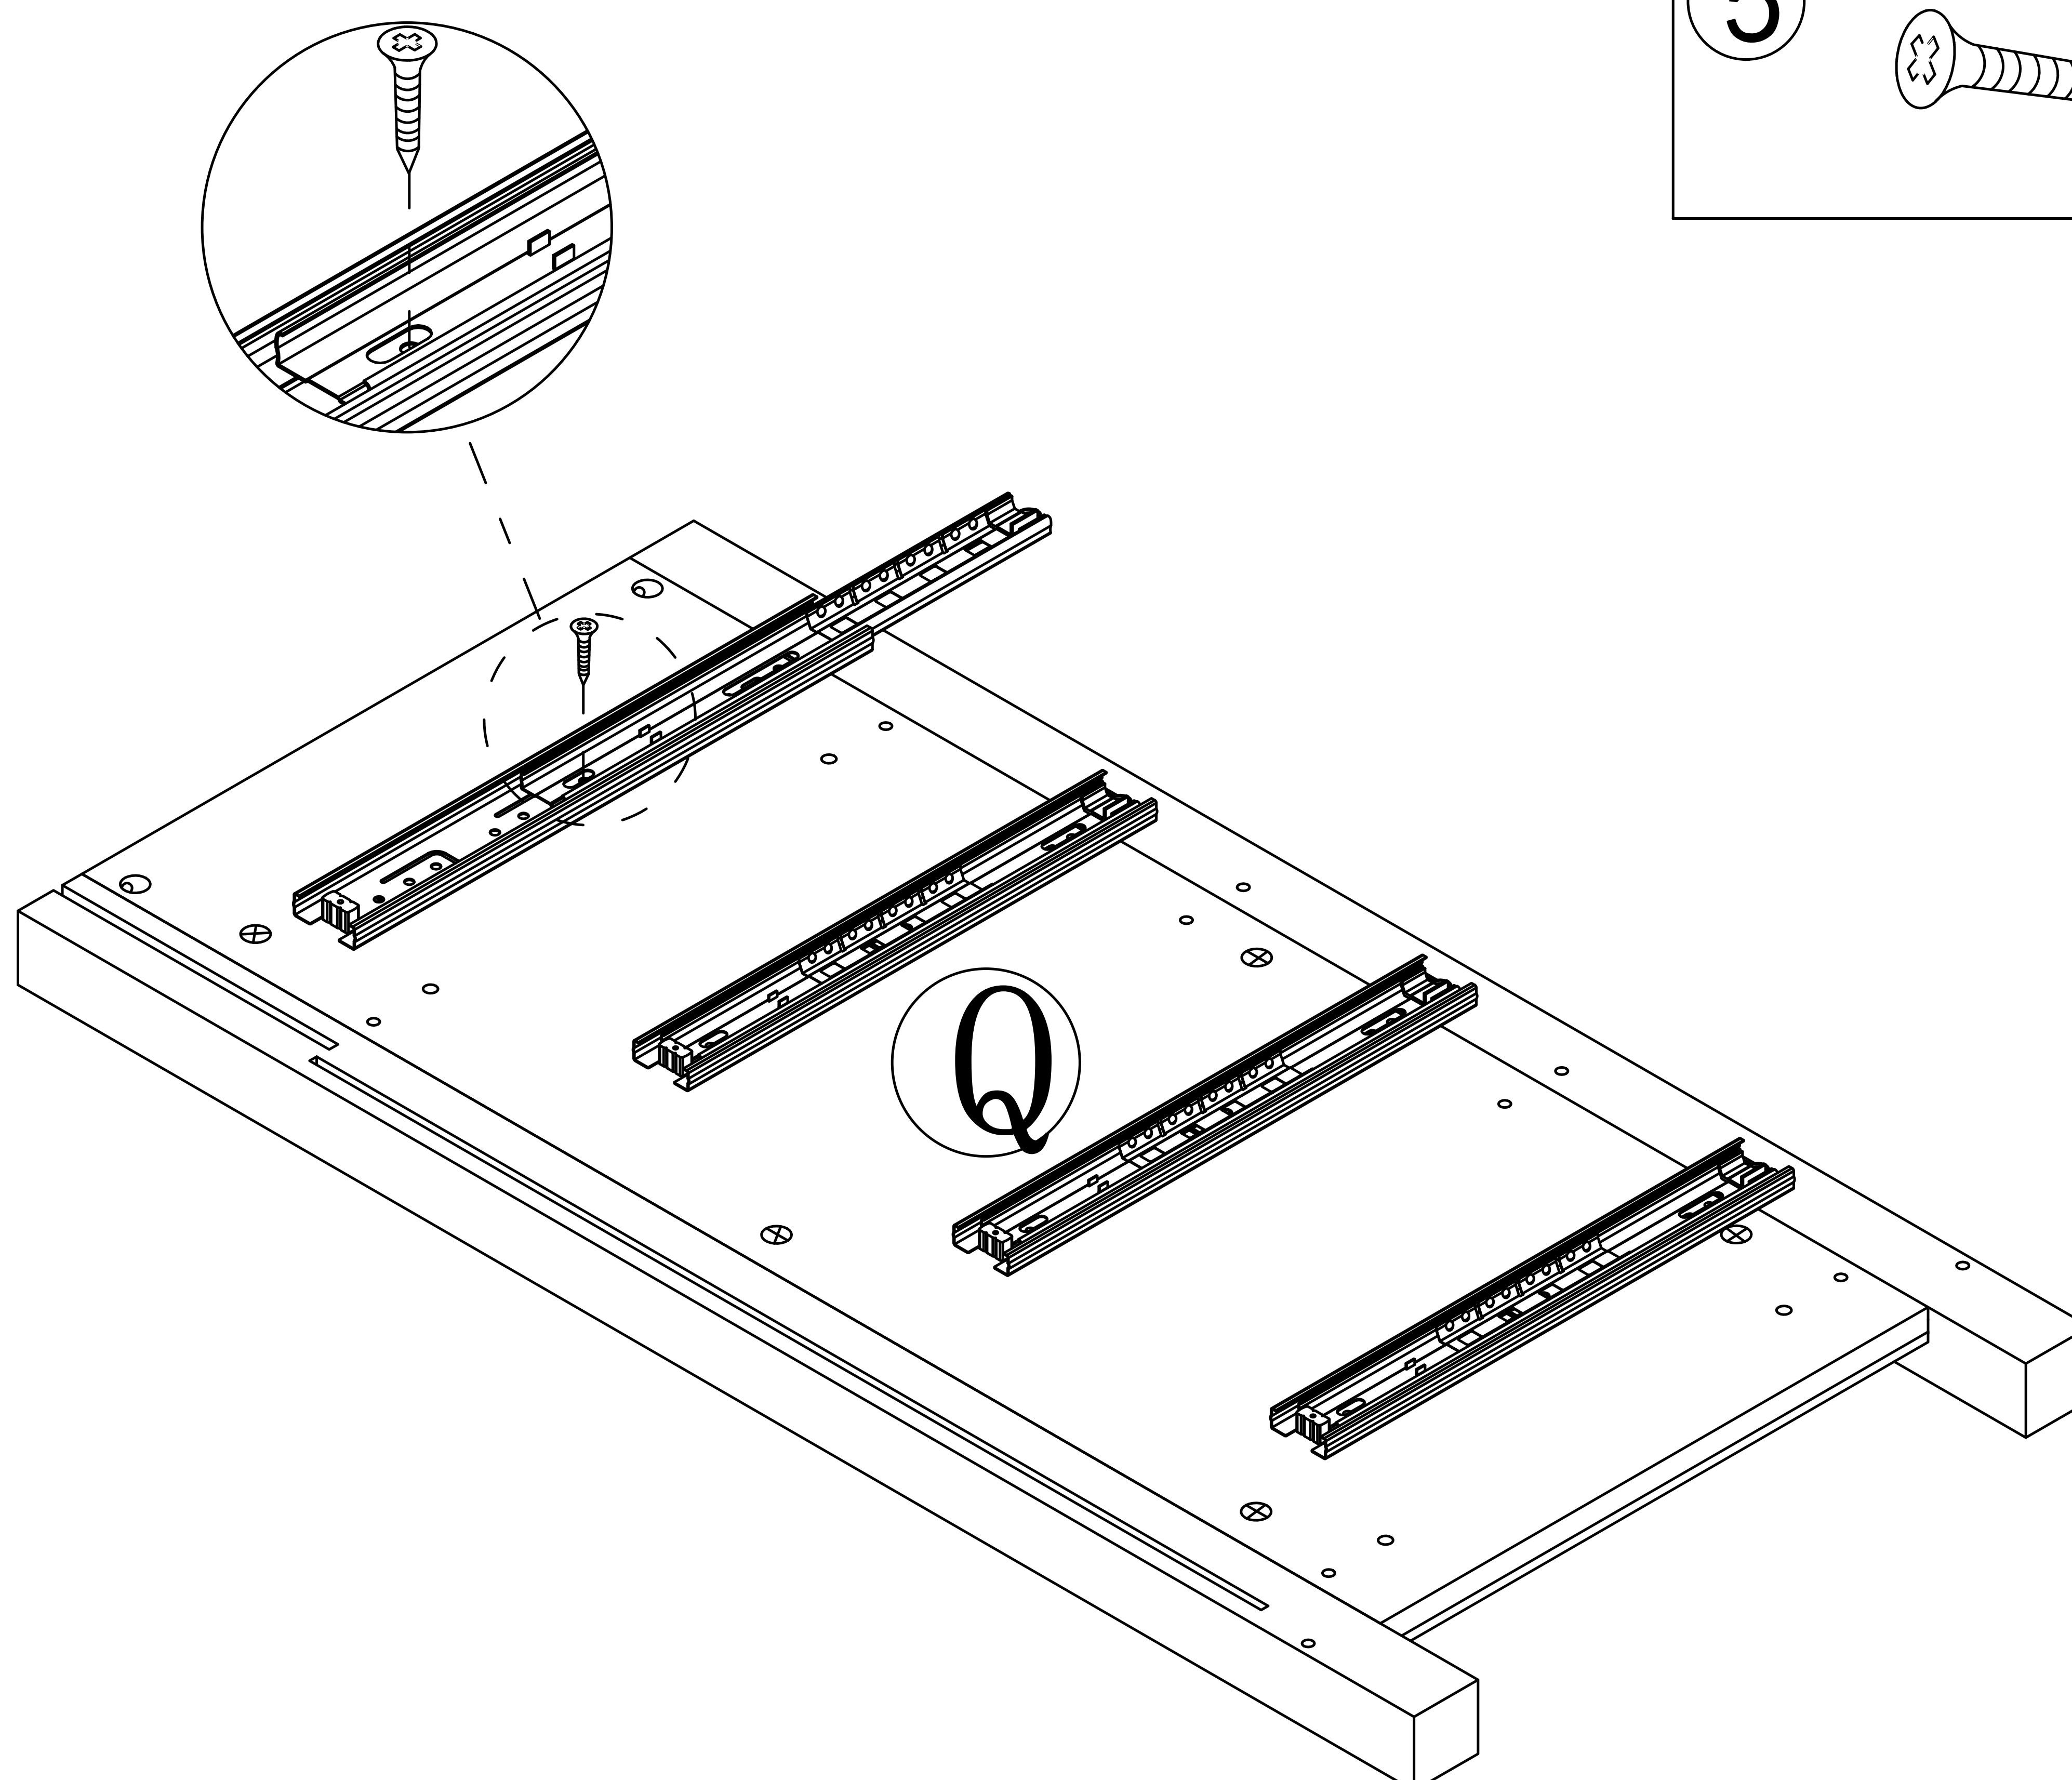


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 35

1

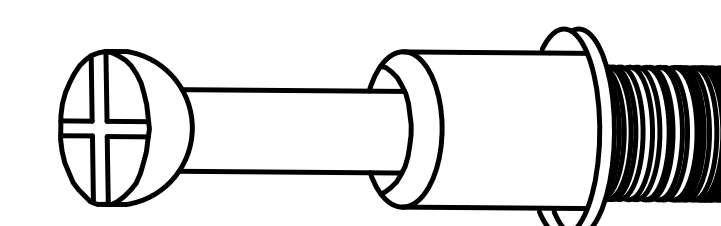



x10

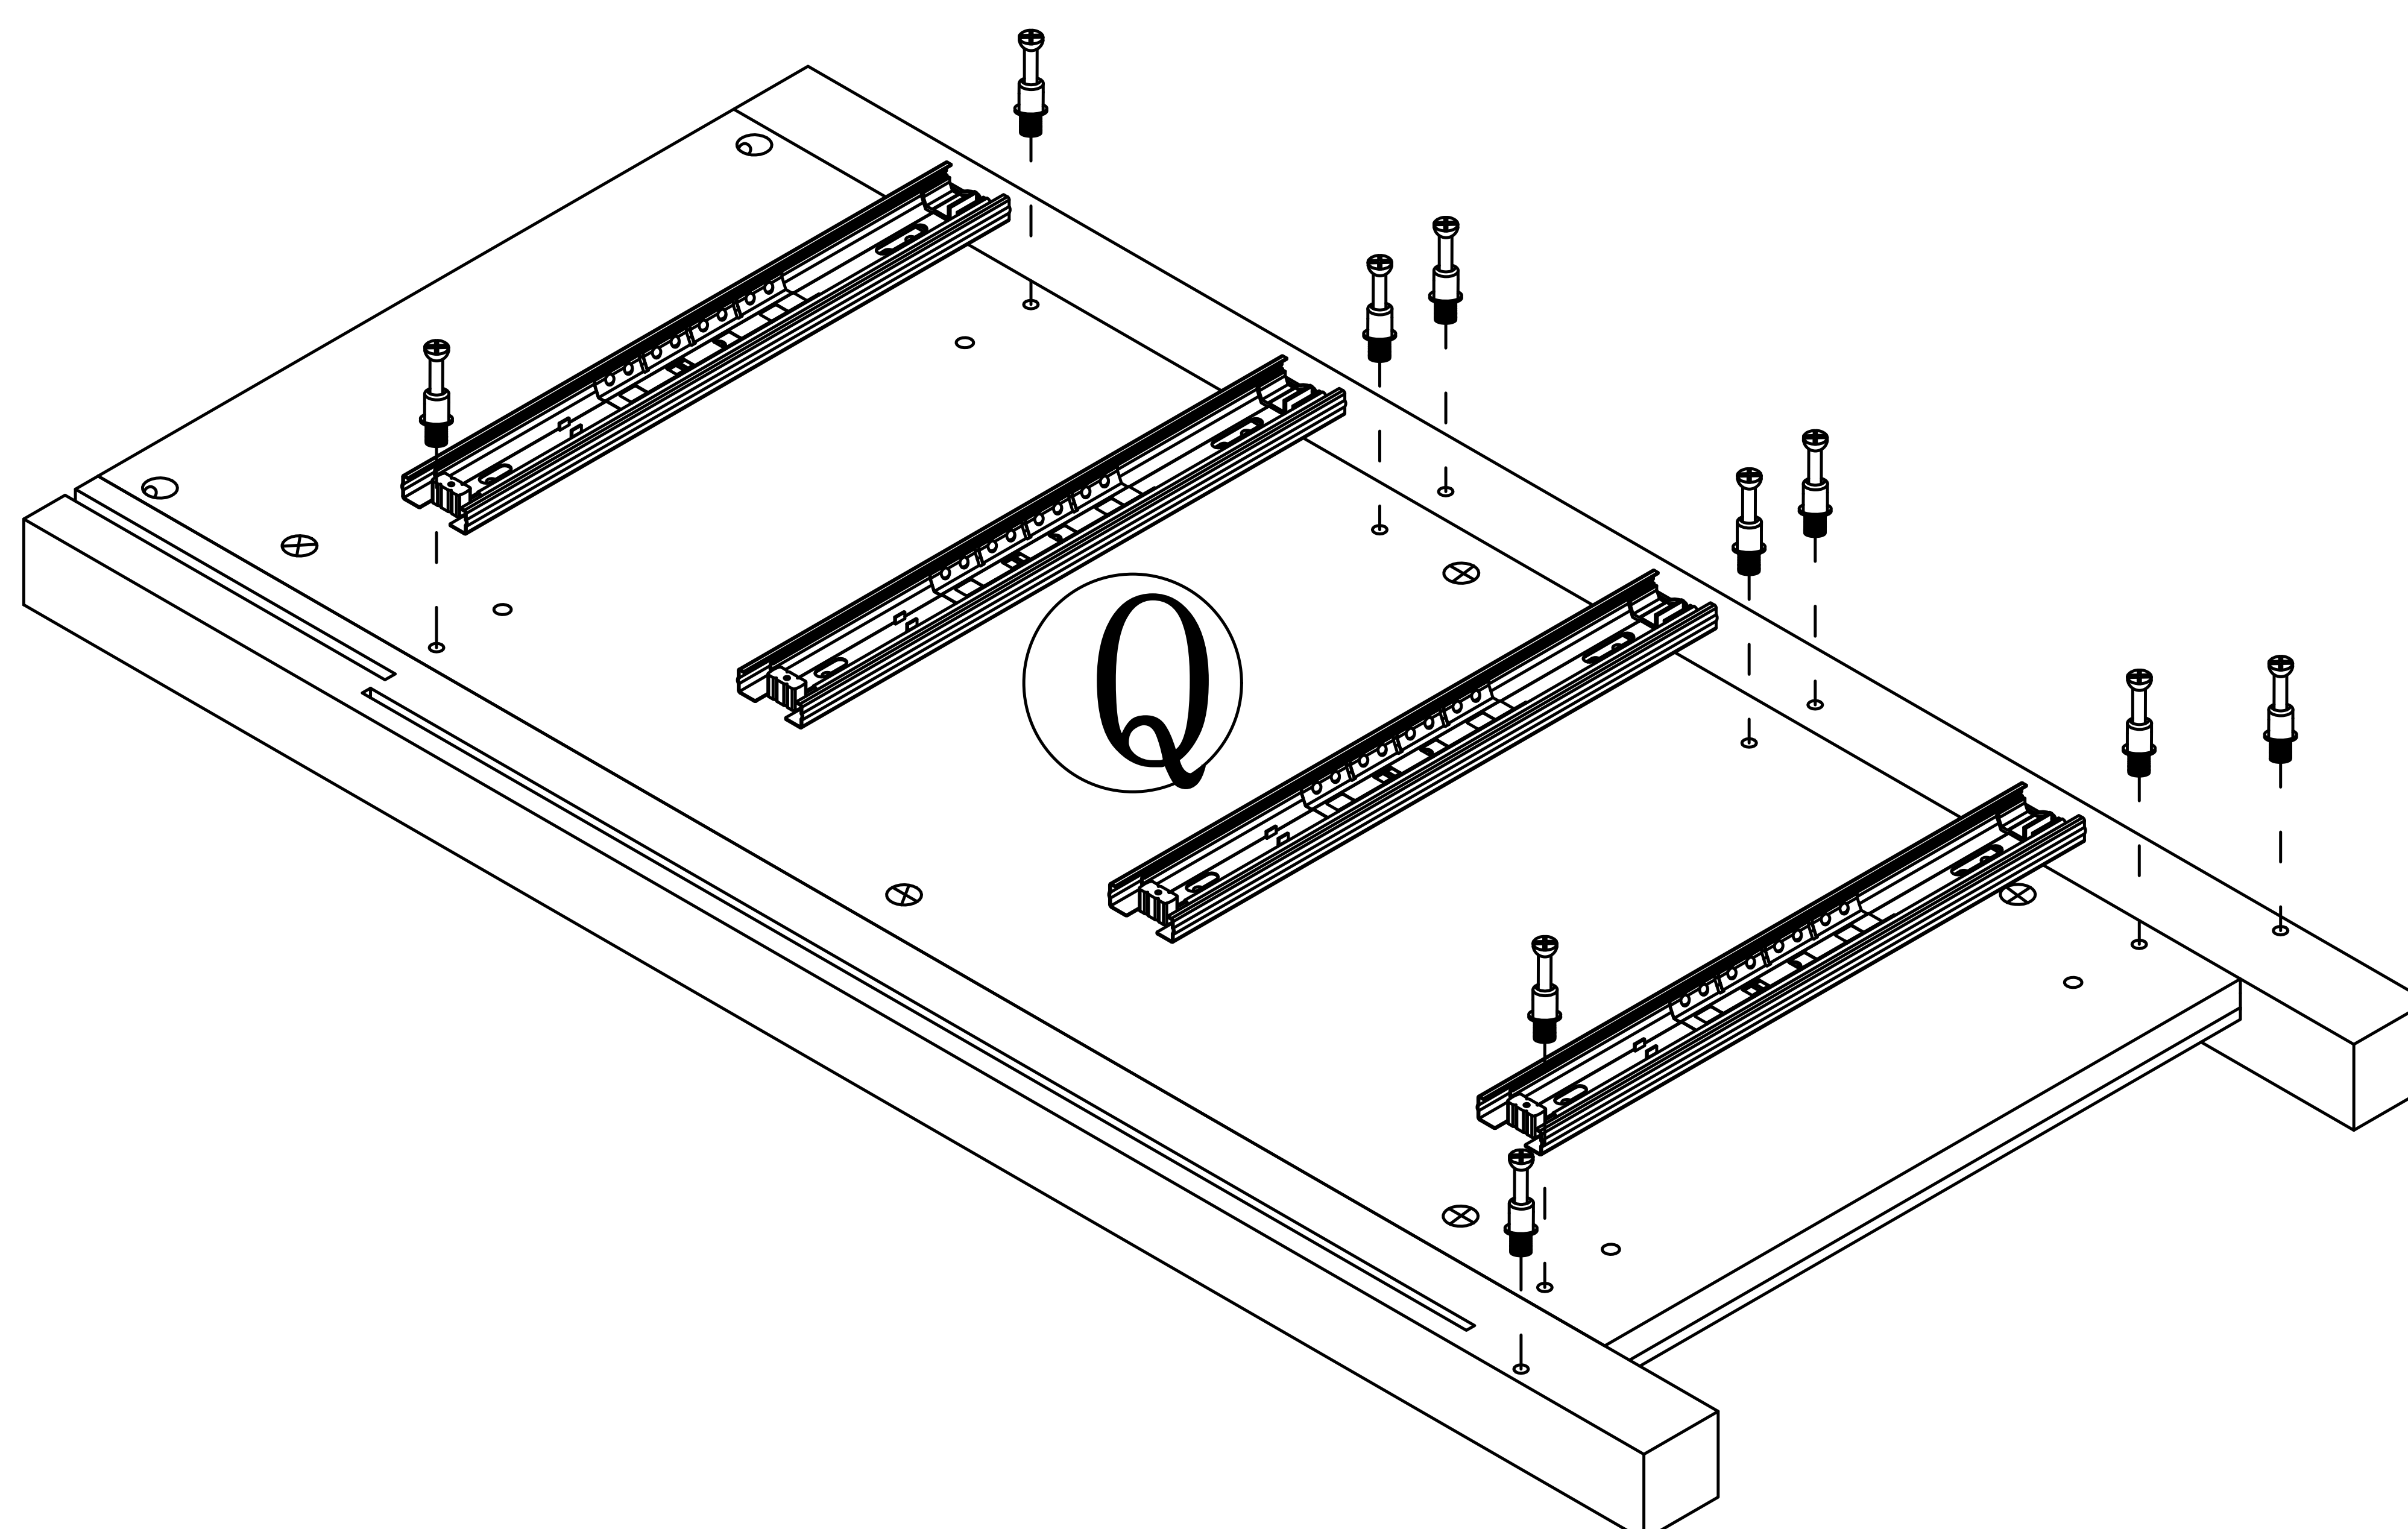

Step 36


2

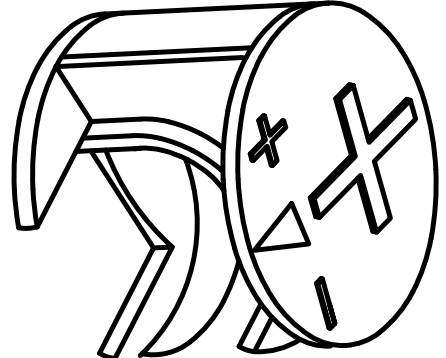
 x10

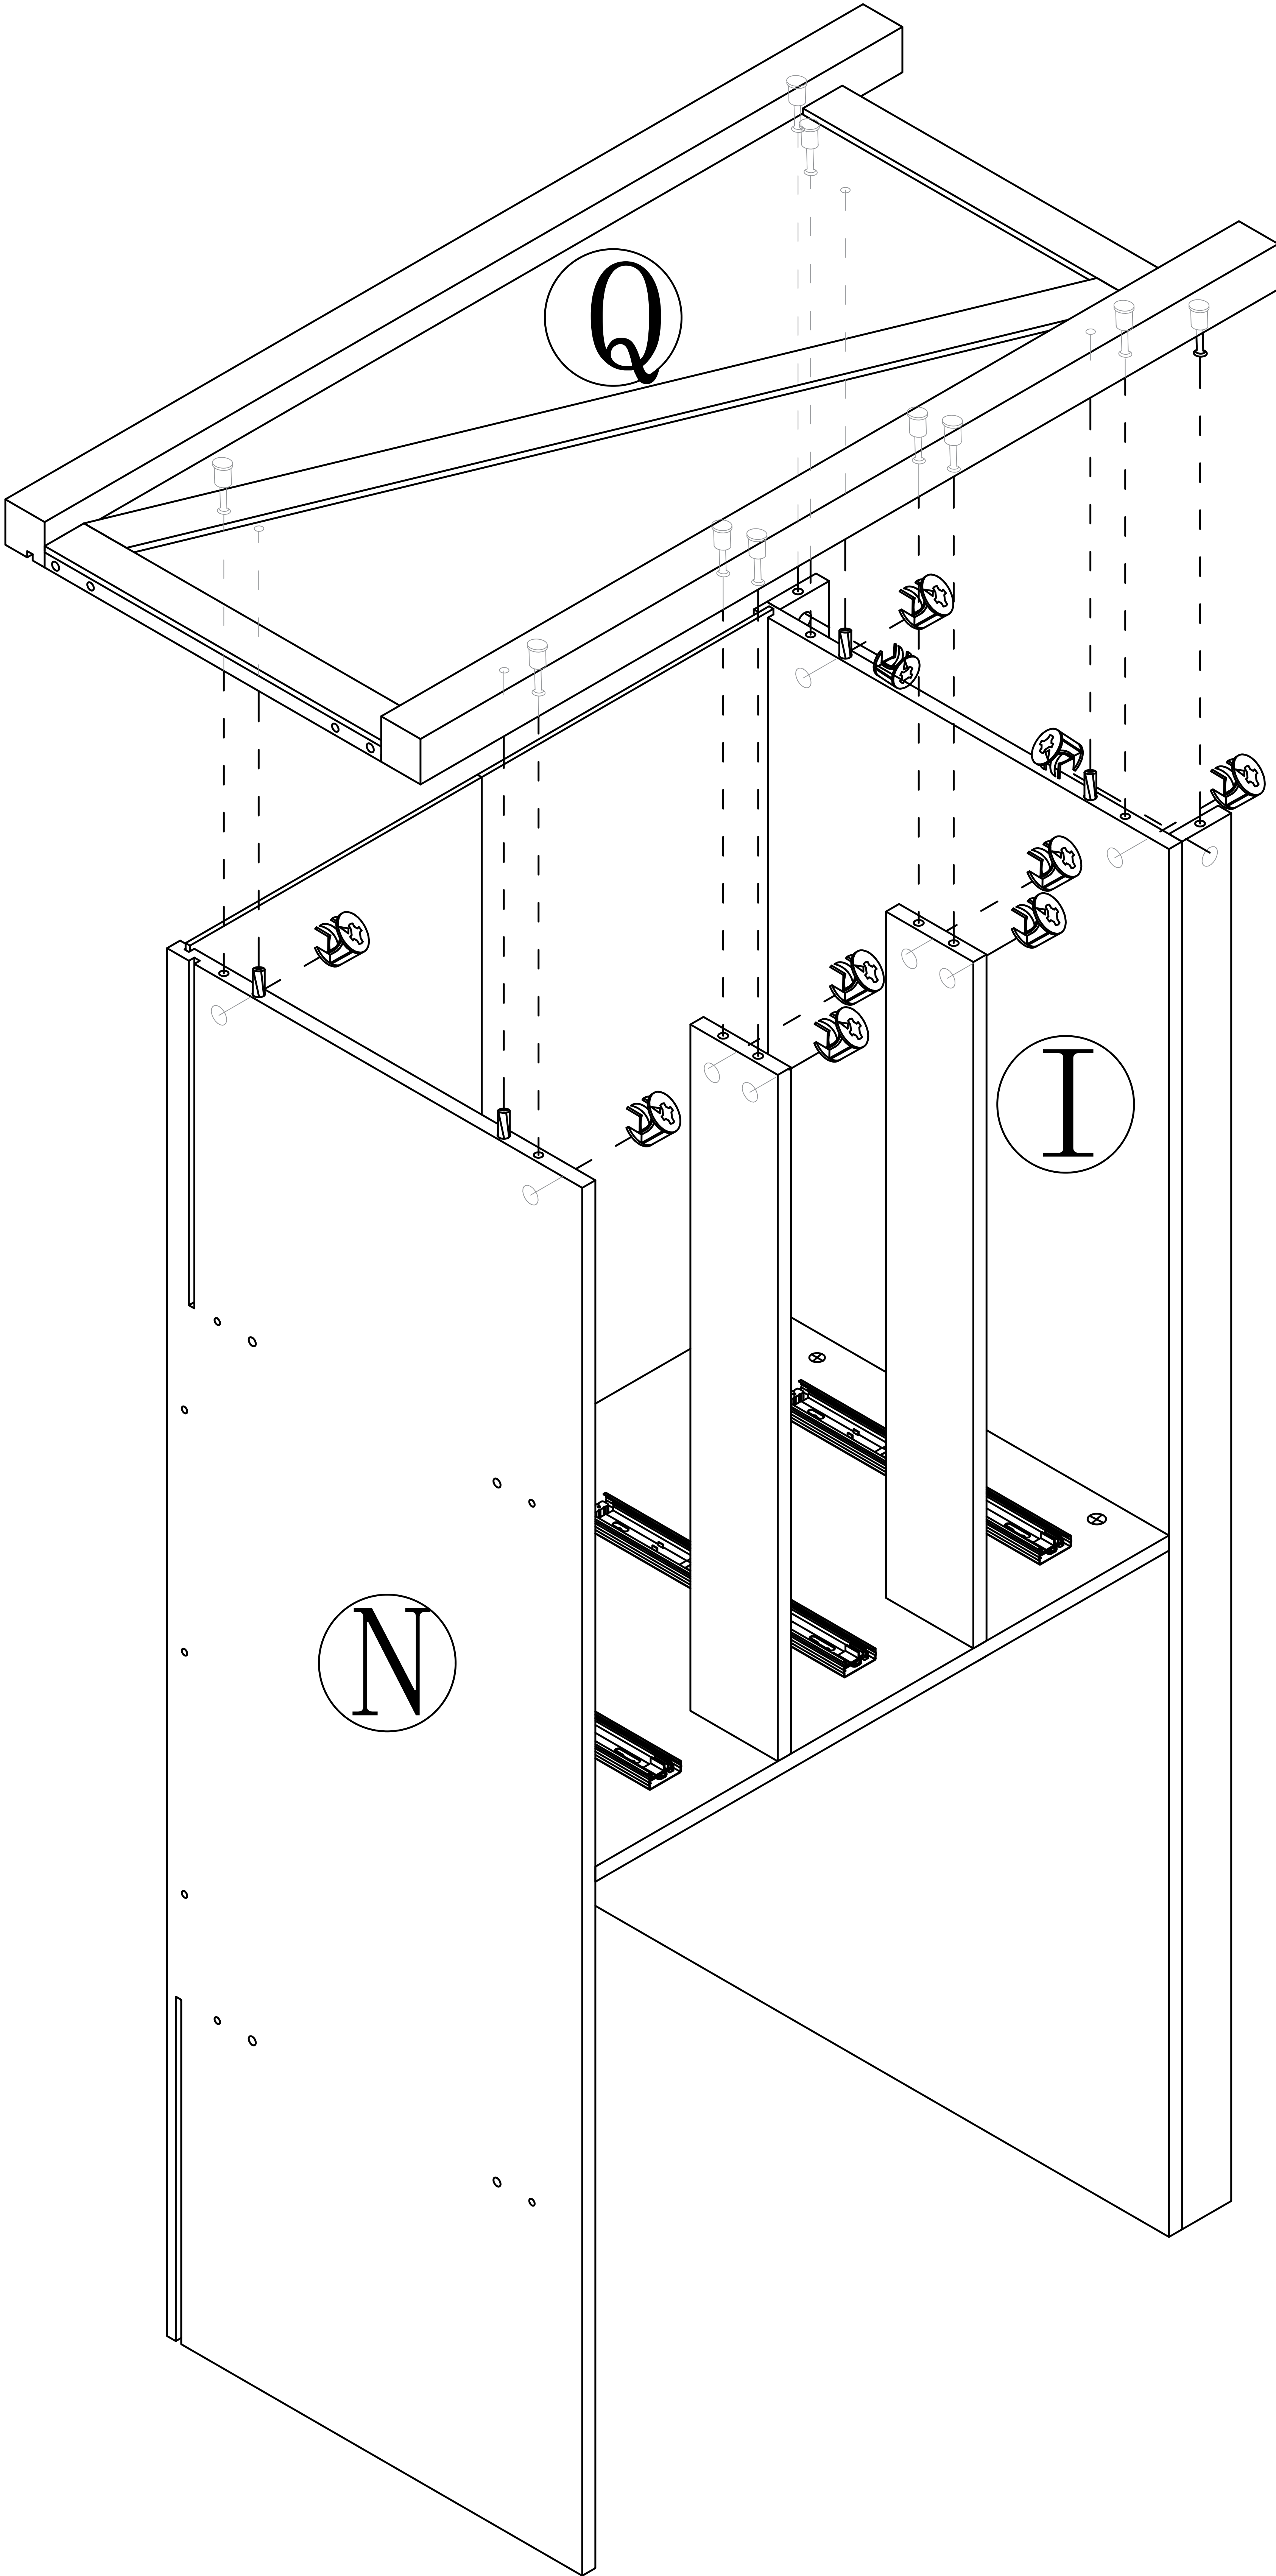

Step 37


1

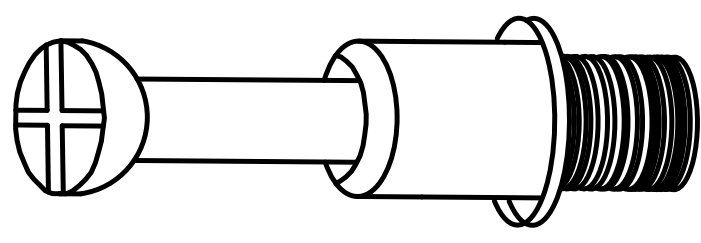
x4


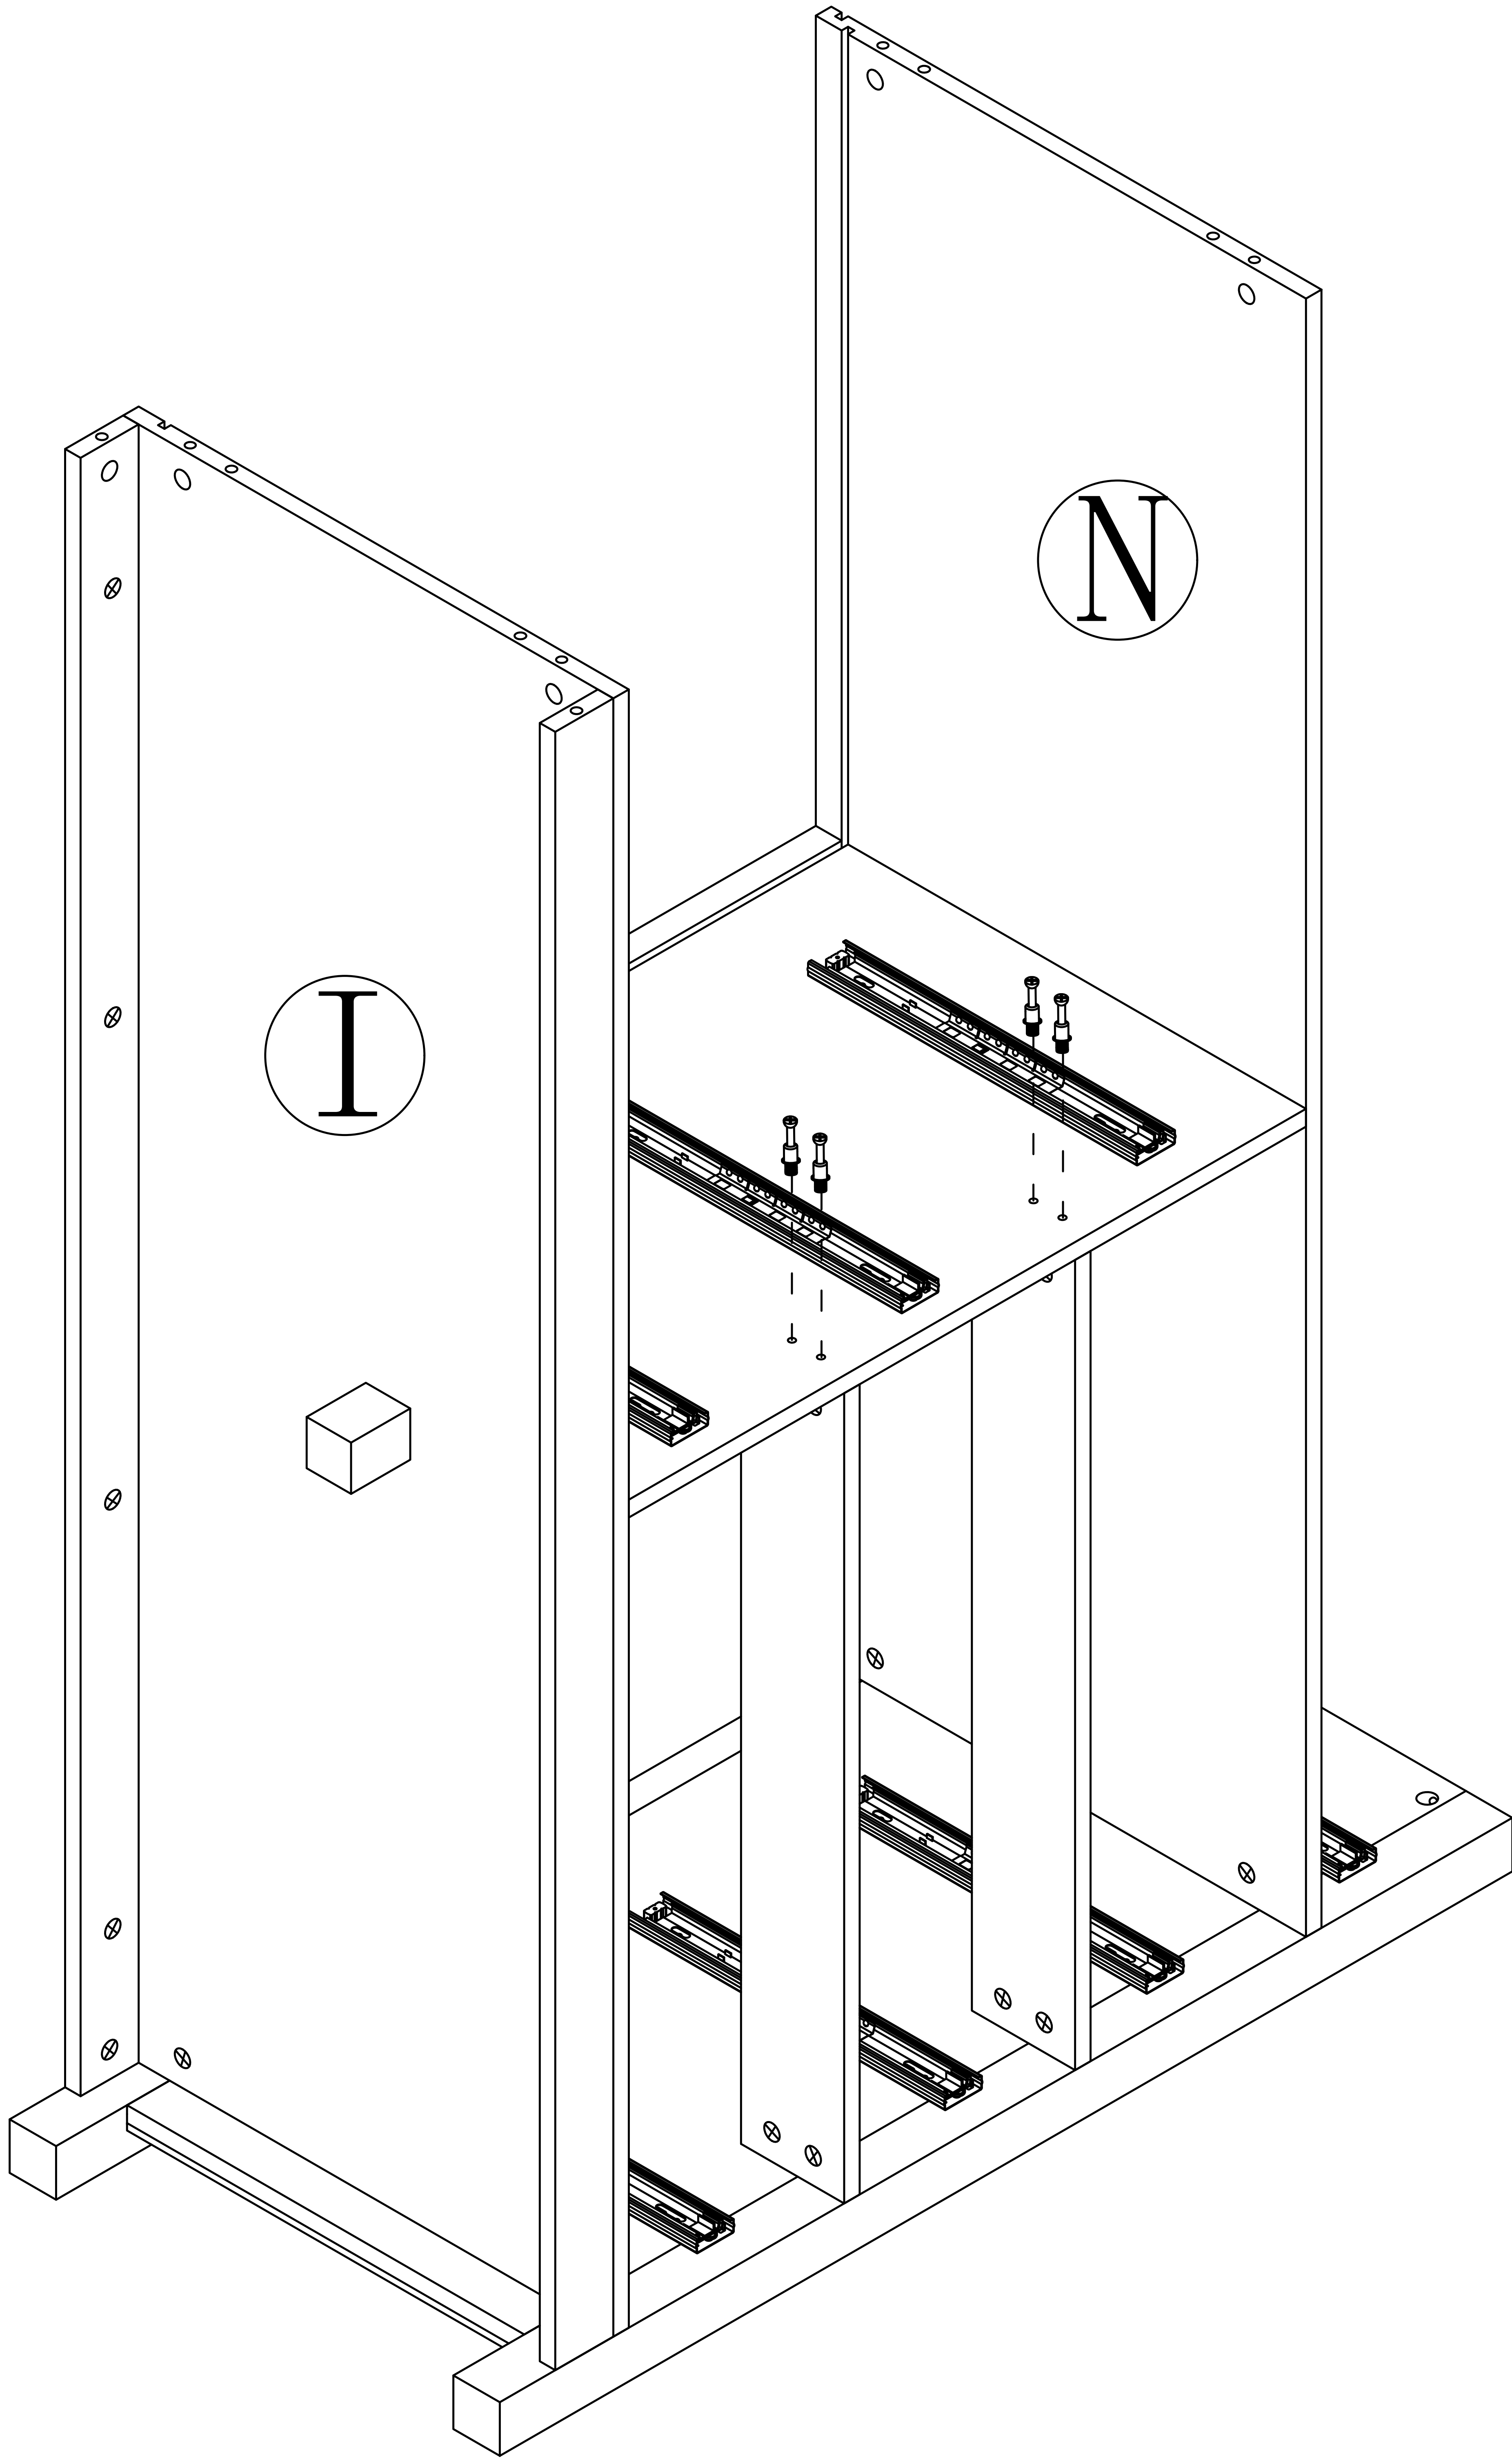


Step 38


2

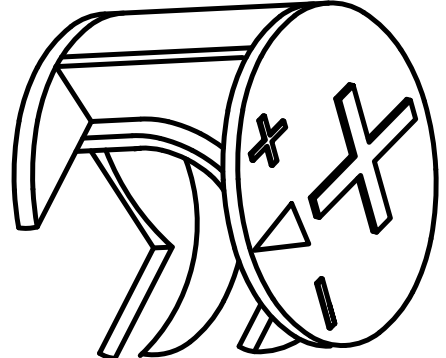

x4

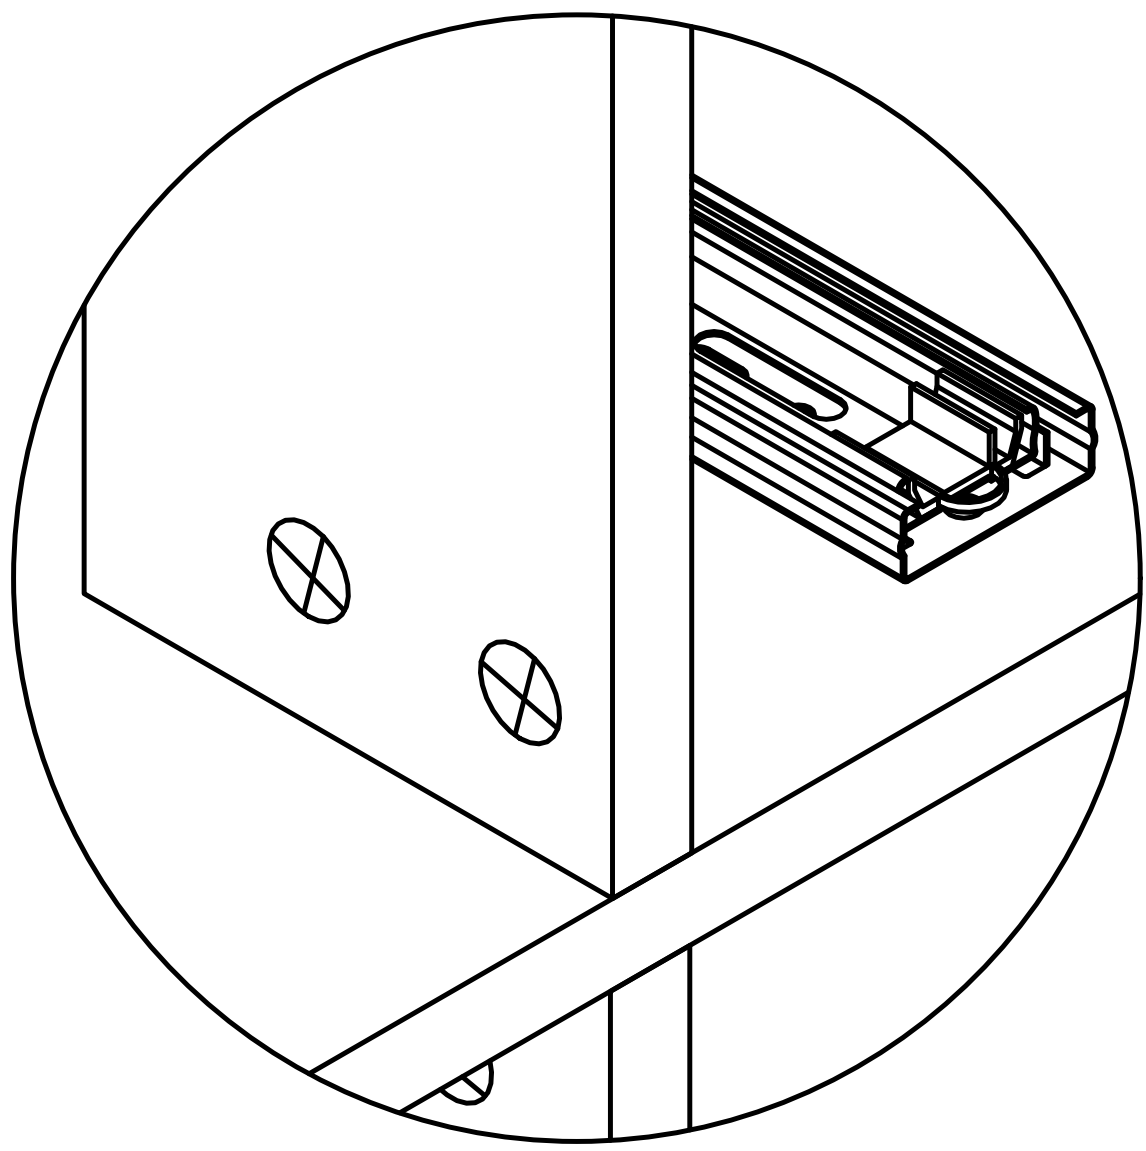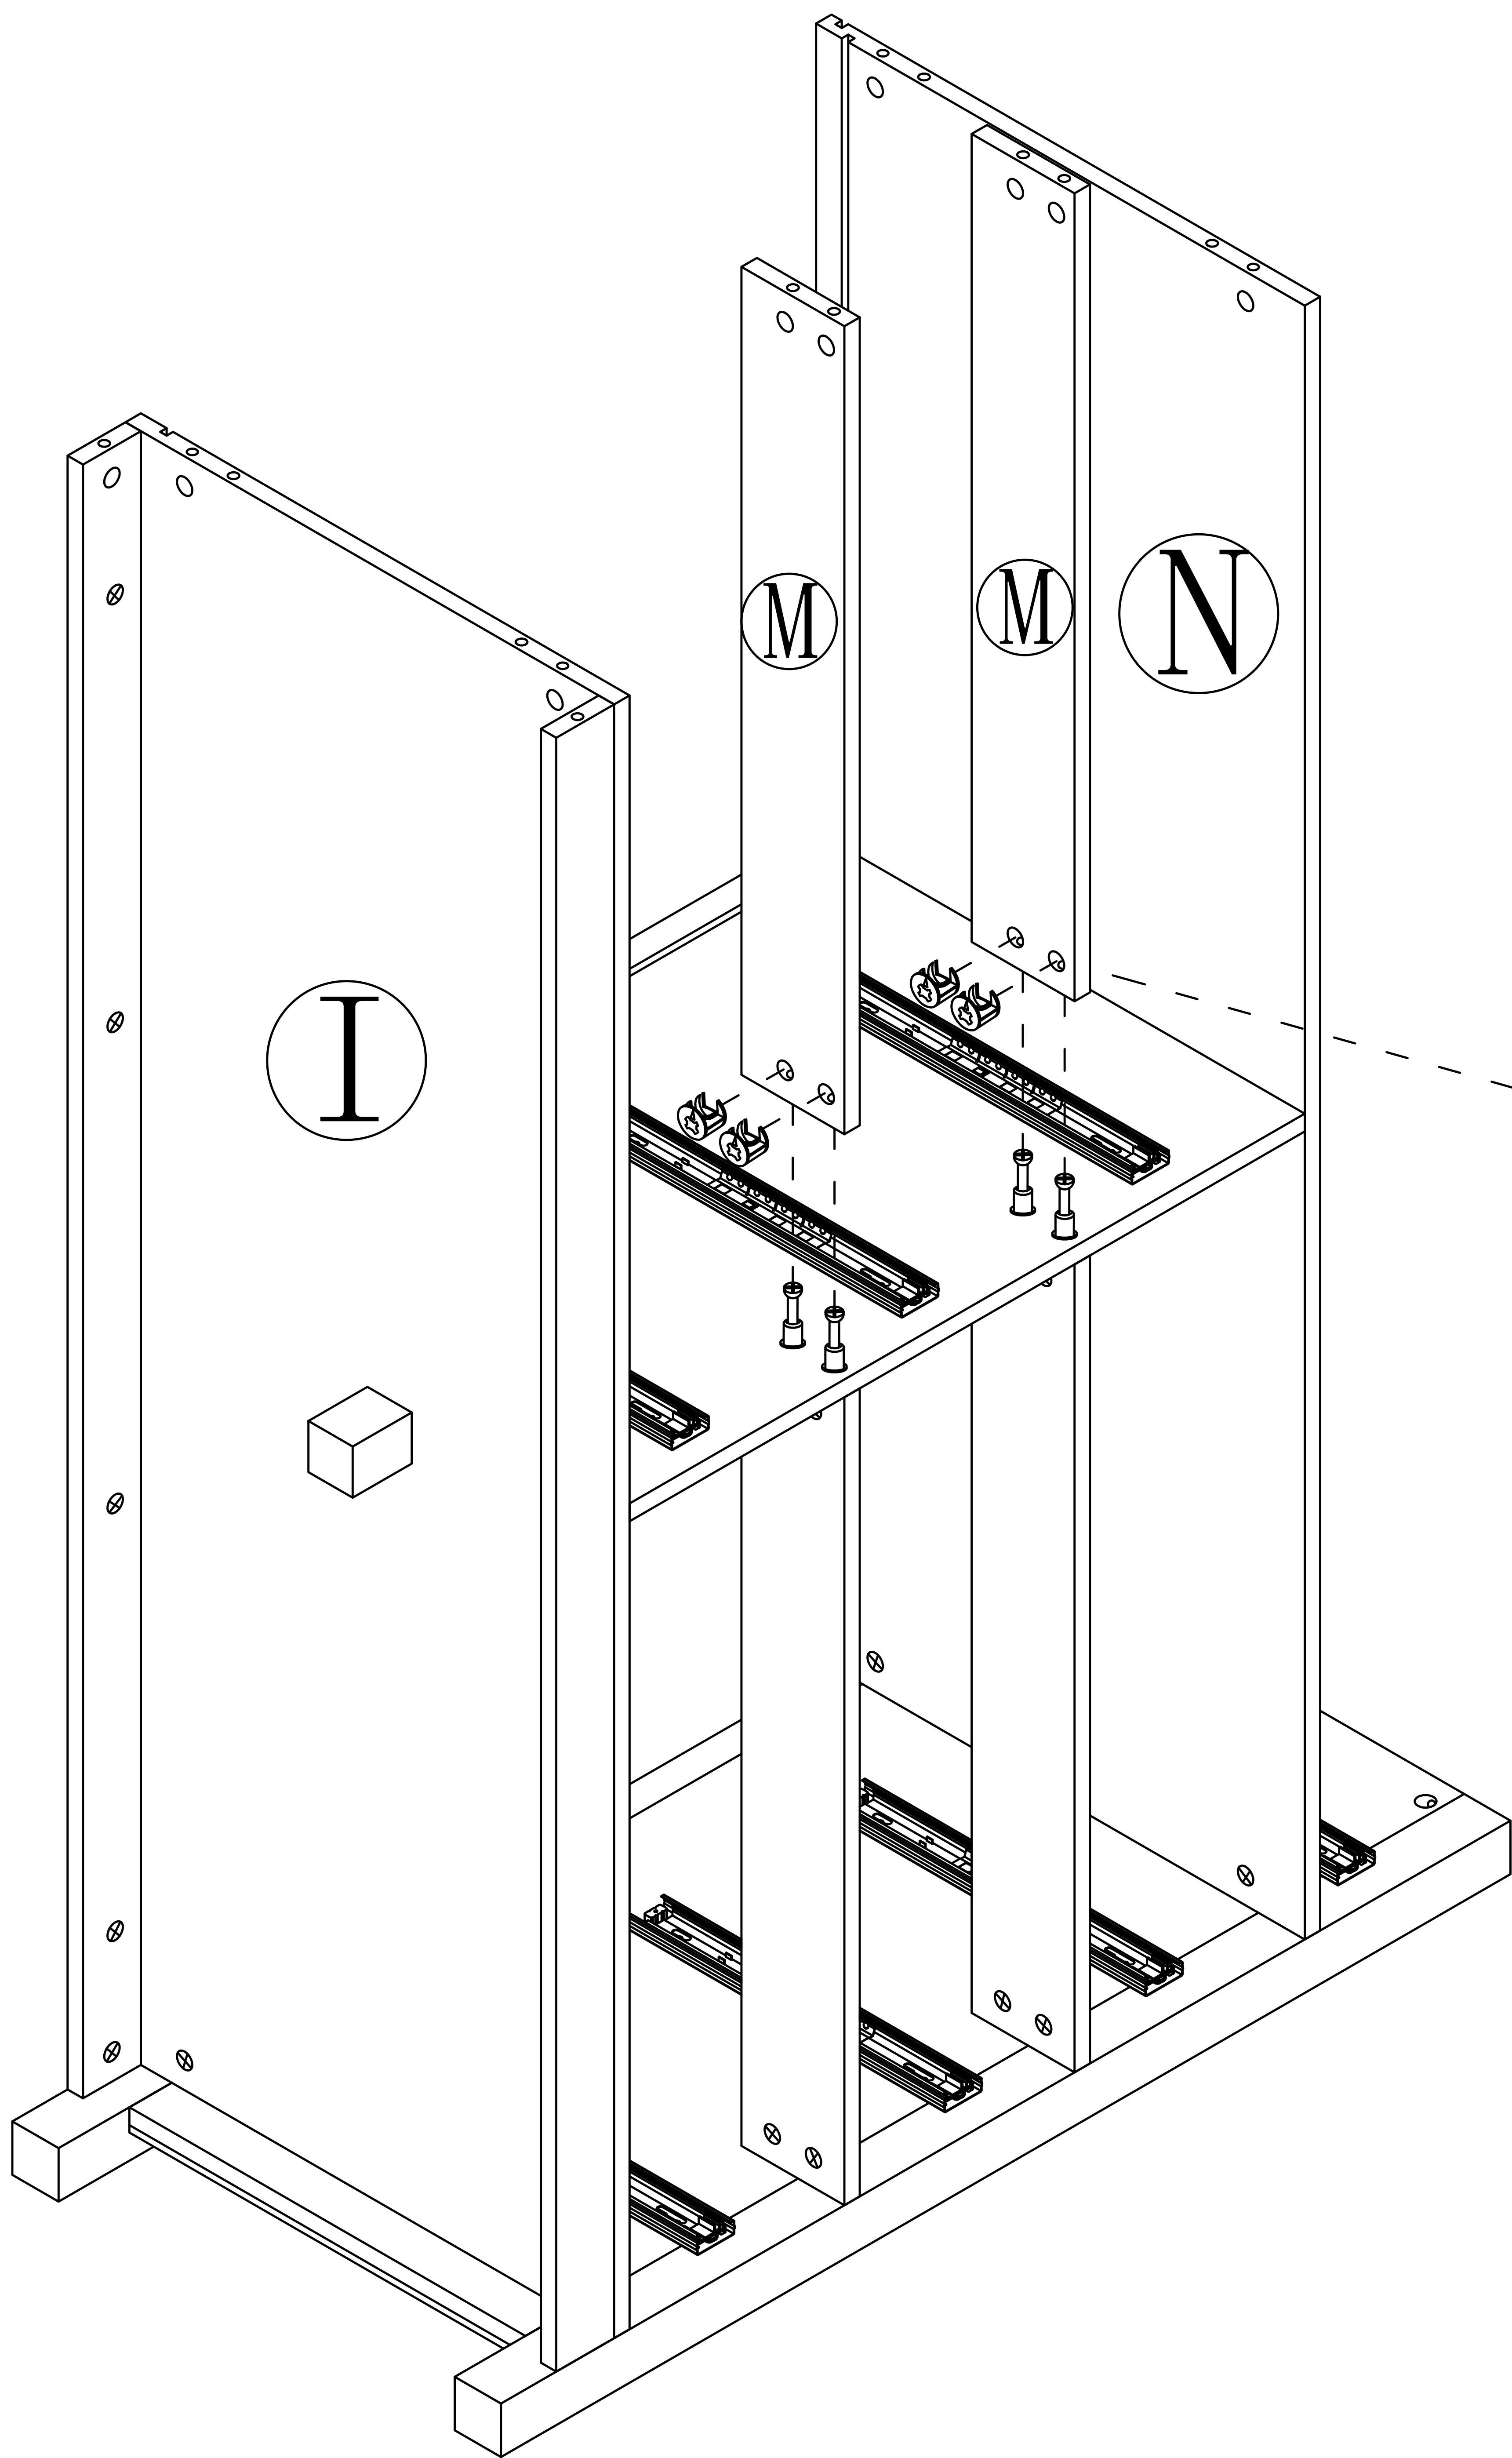


Proper installation

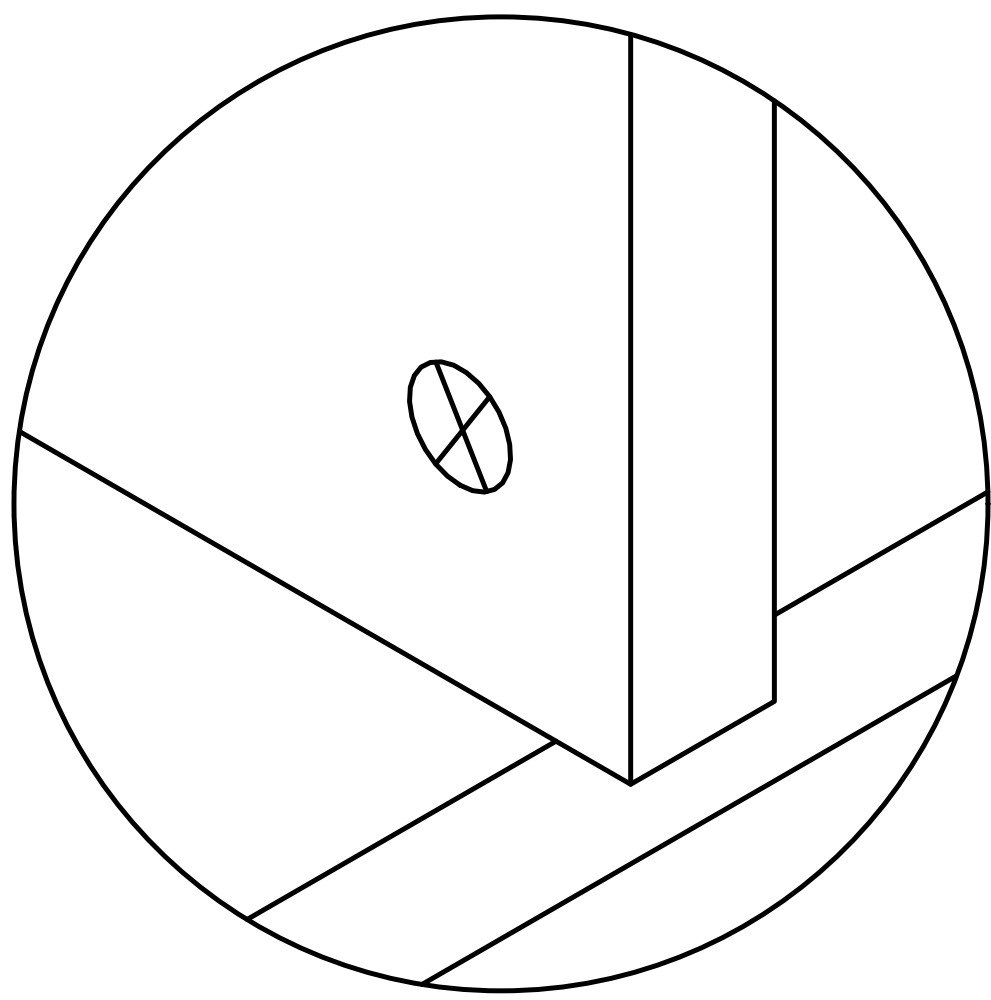


Incorrect installation

Step 39


3


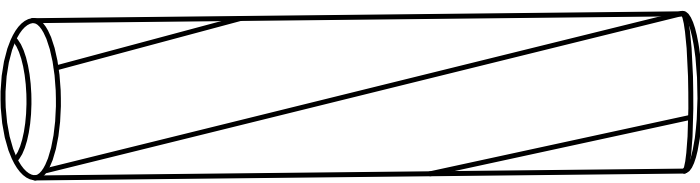


x4

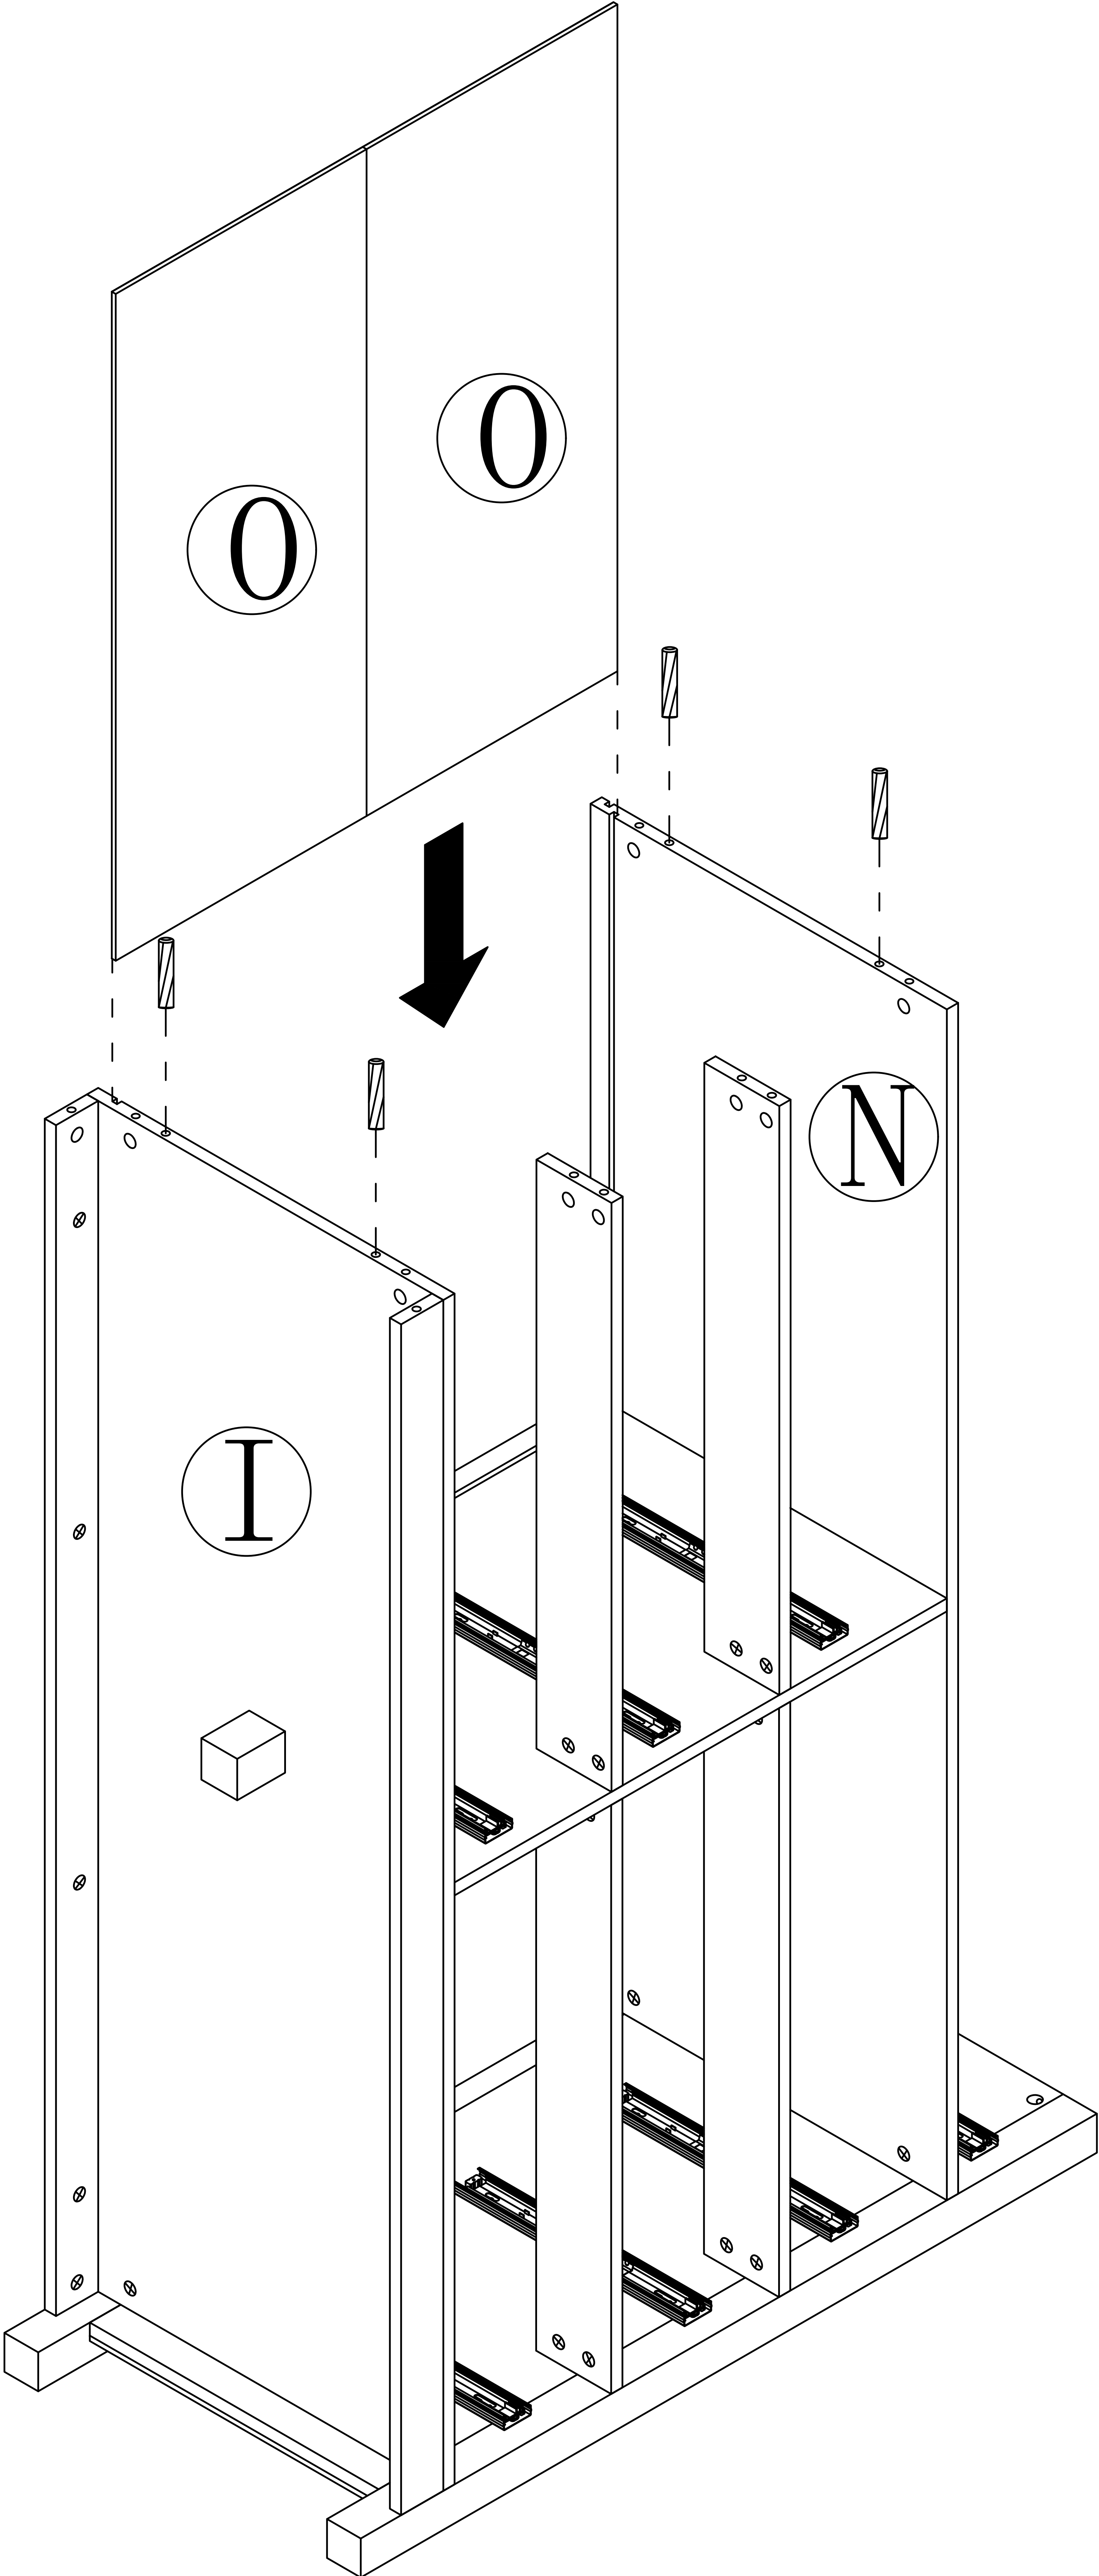


Step 40

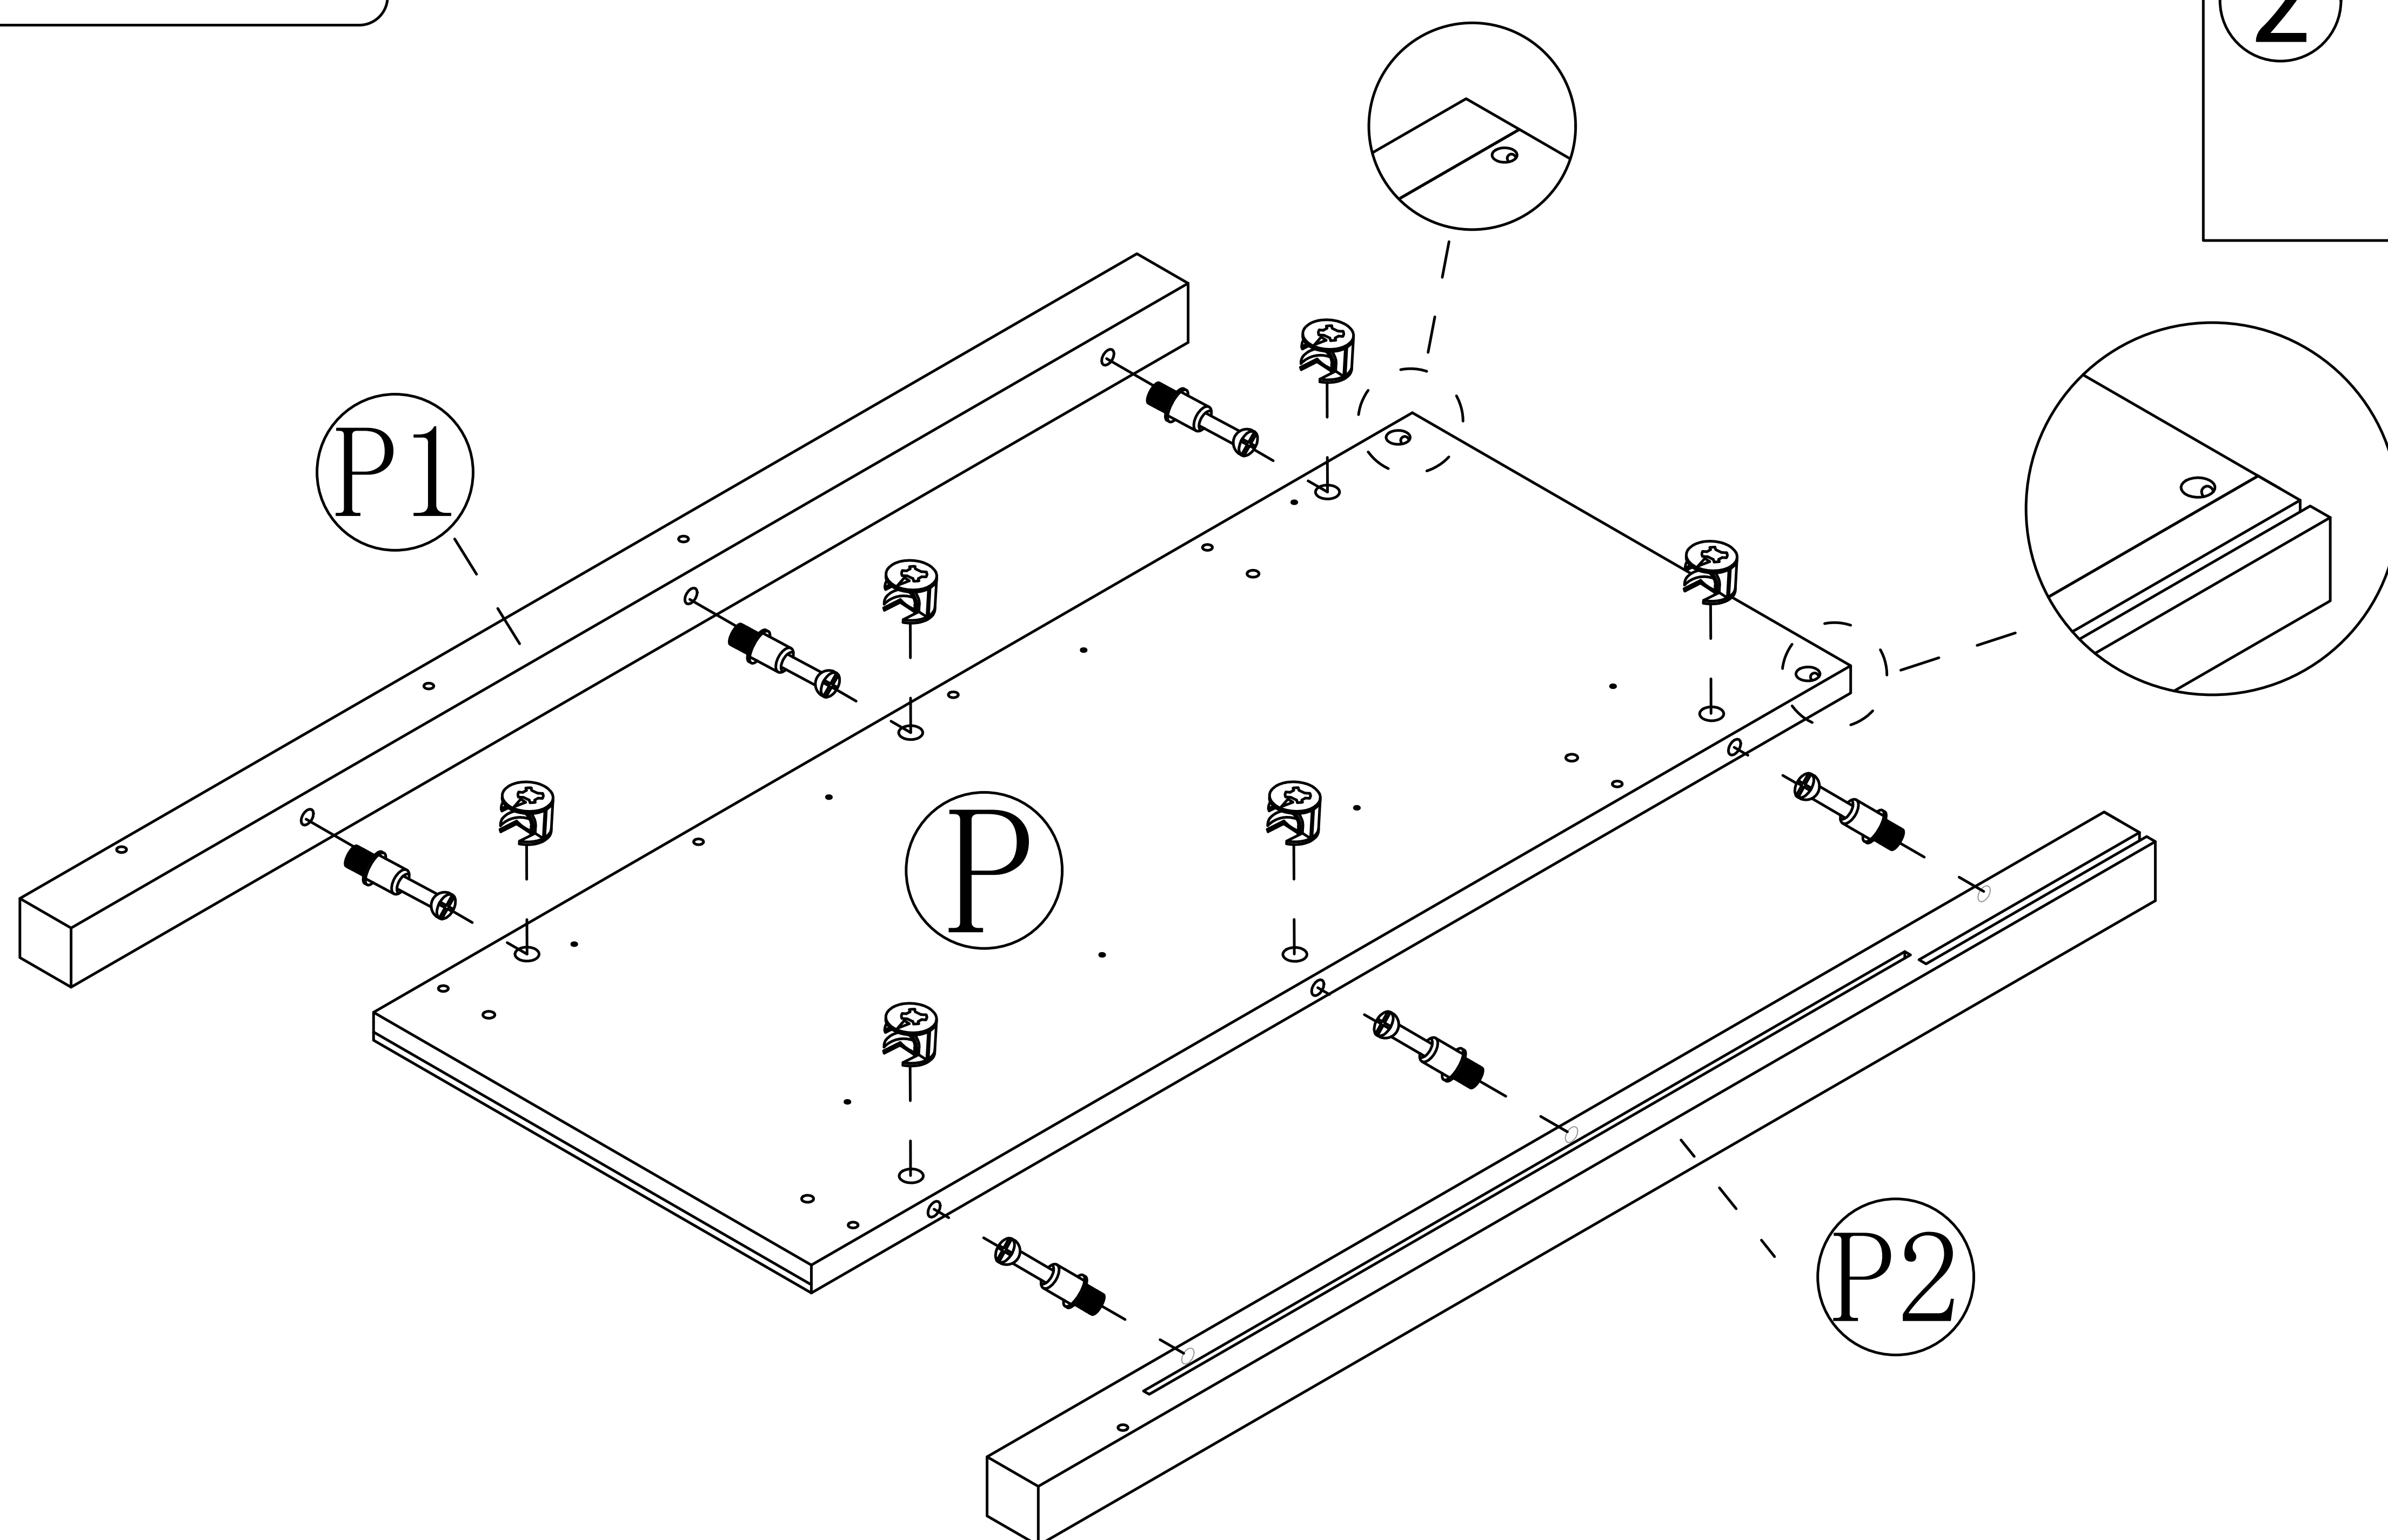


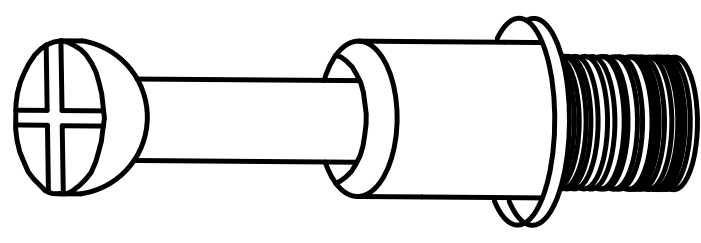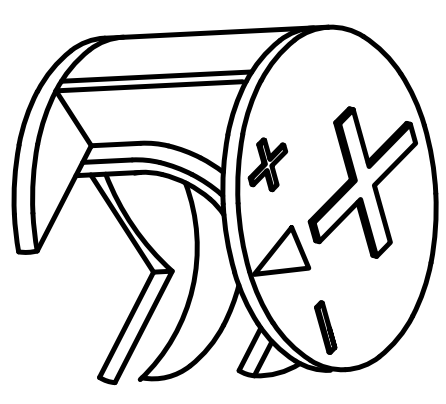- ①  x6
- ②  x6

Attention: First install the two in one, then install the nut

Step 41

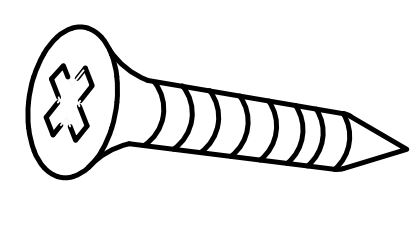
- ⑤  x4
-  x8

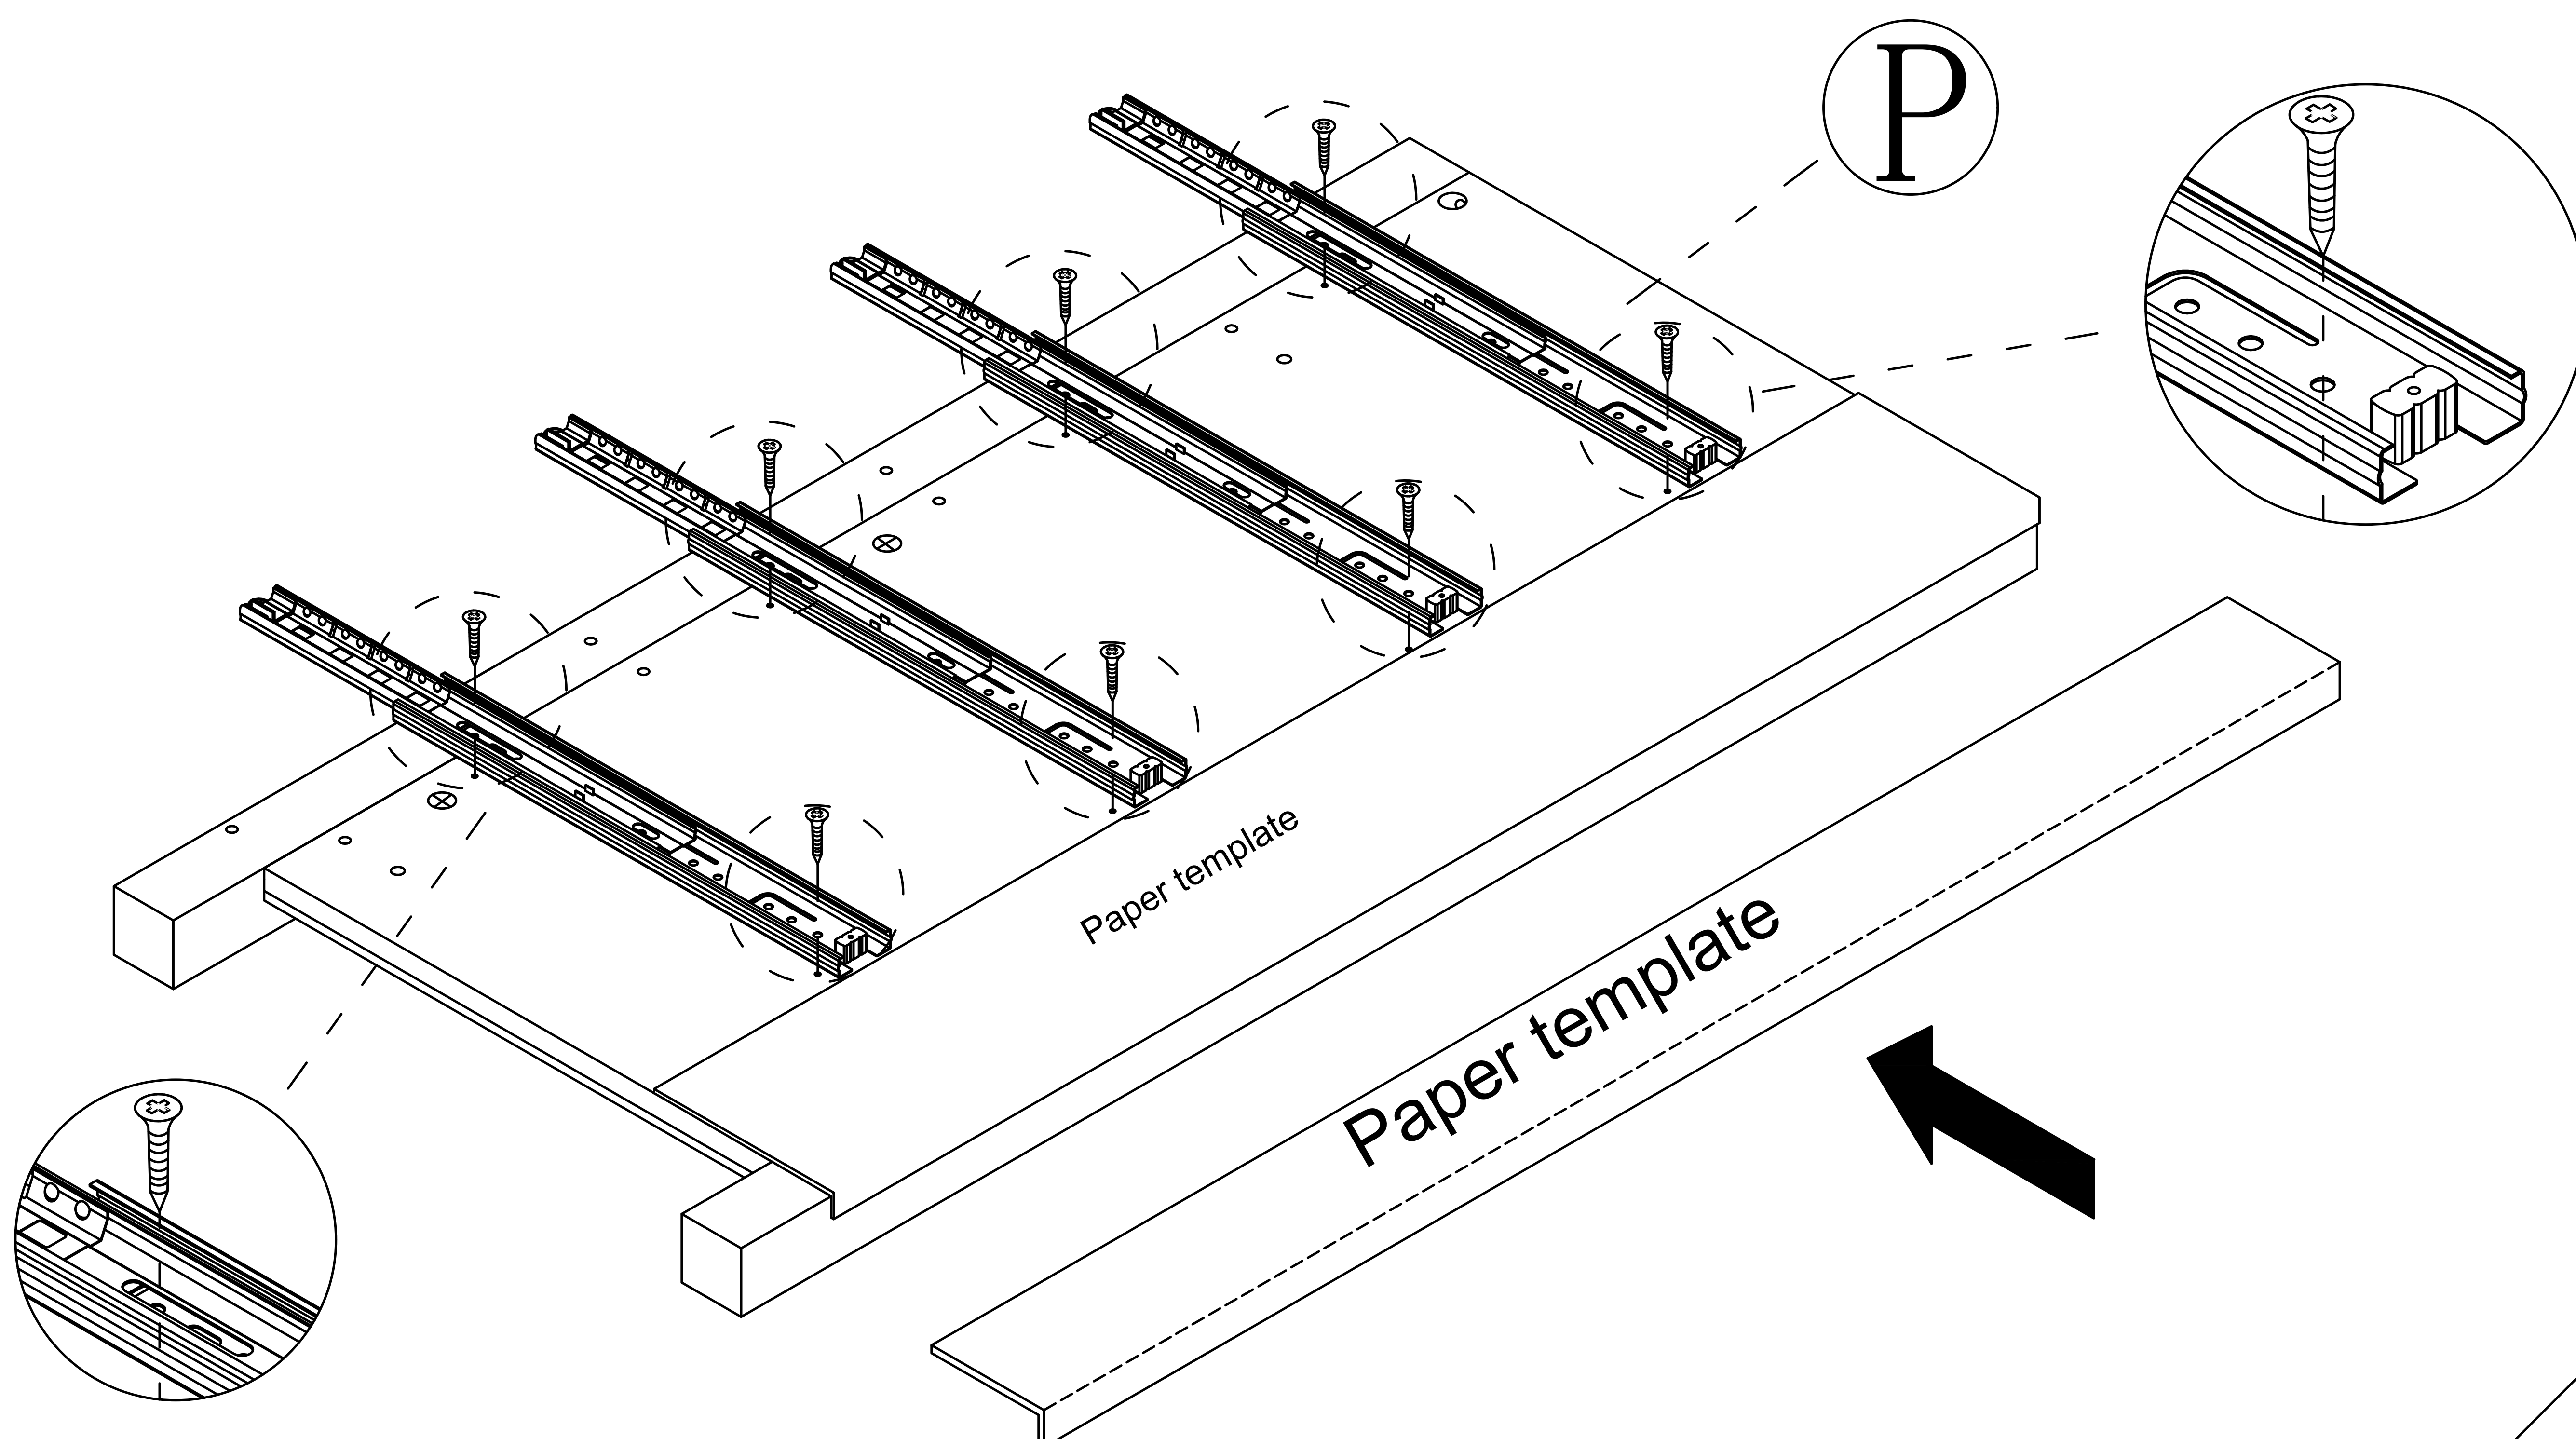


Fold it up for better installation of the guide rail, attach the back edge of the guide rail to the folded paper, and screw it into the corresponding hole position

Step 42

5

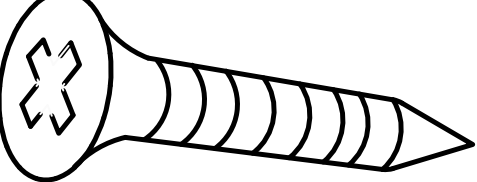


x4

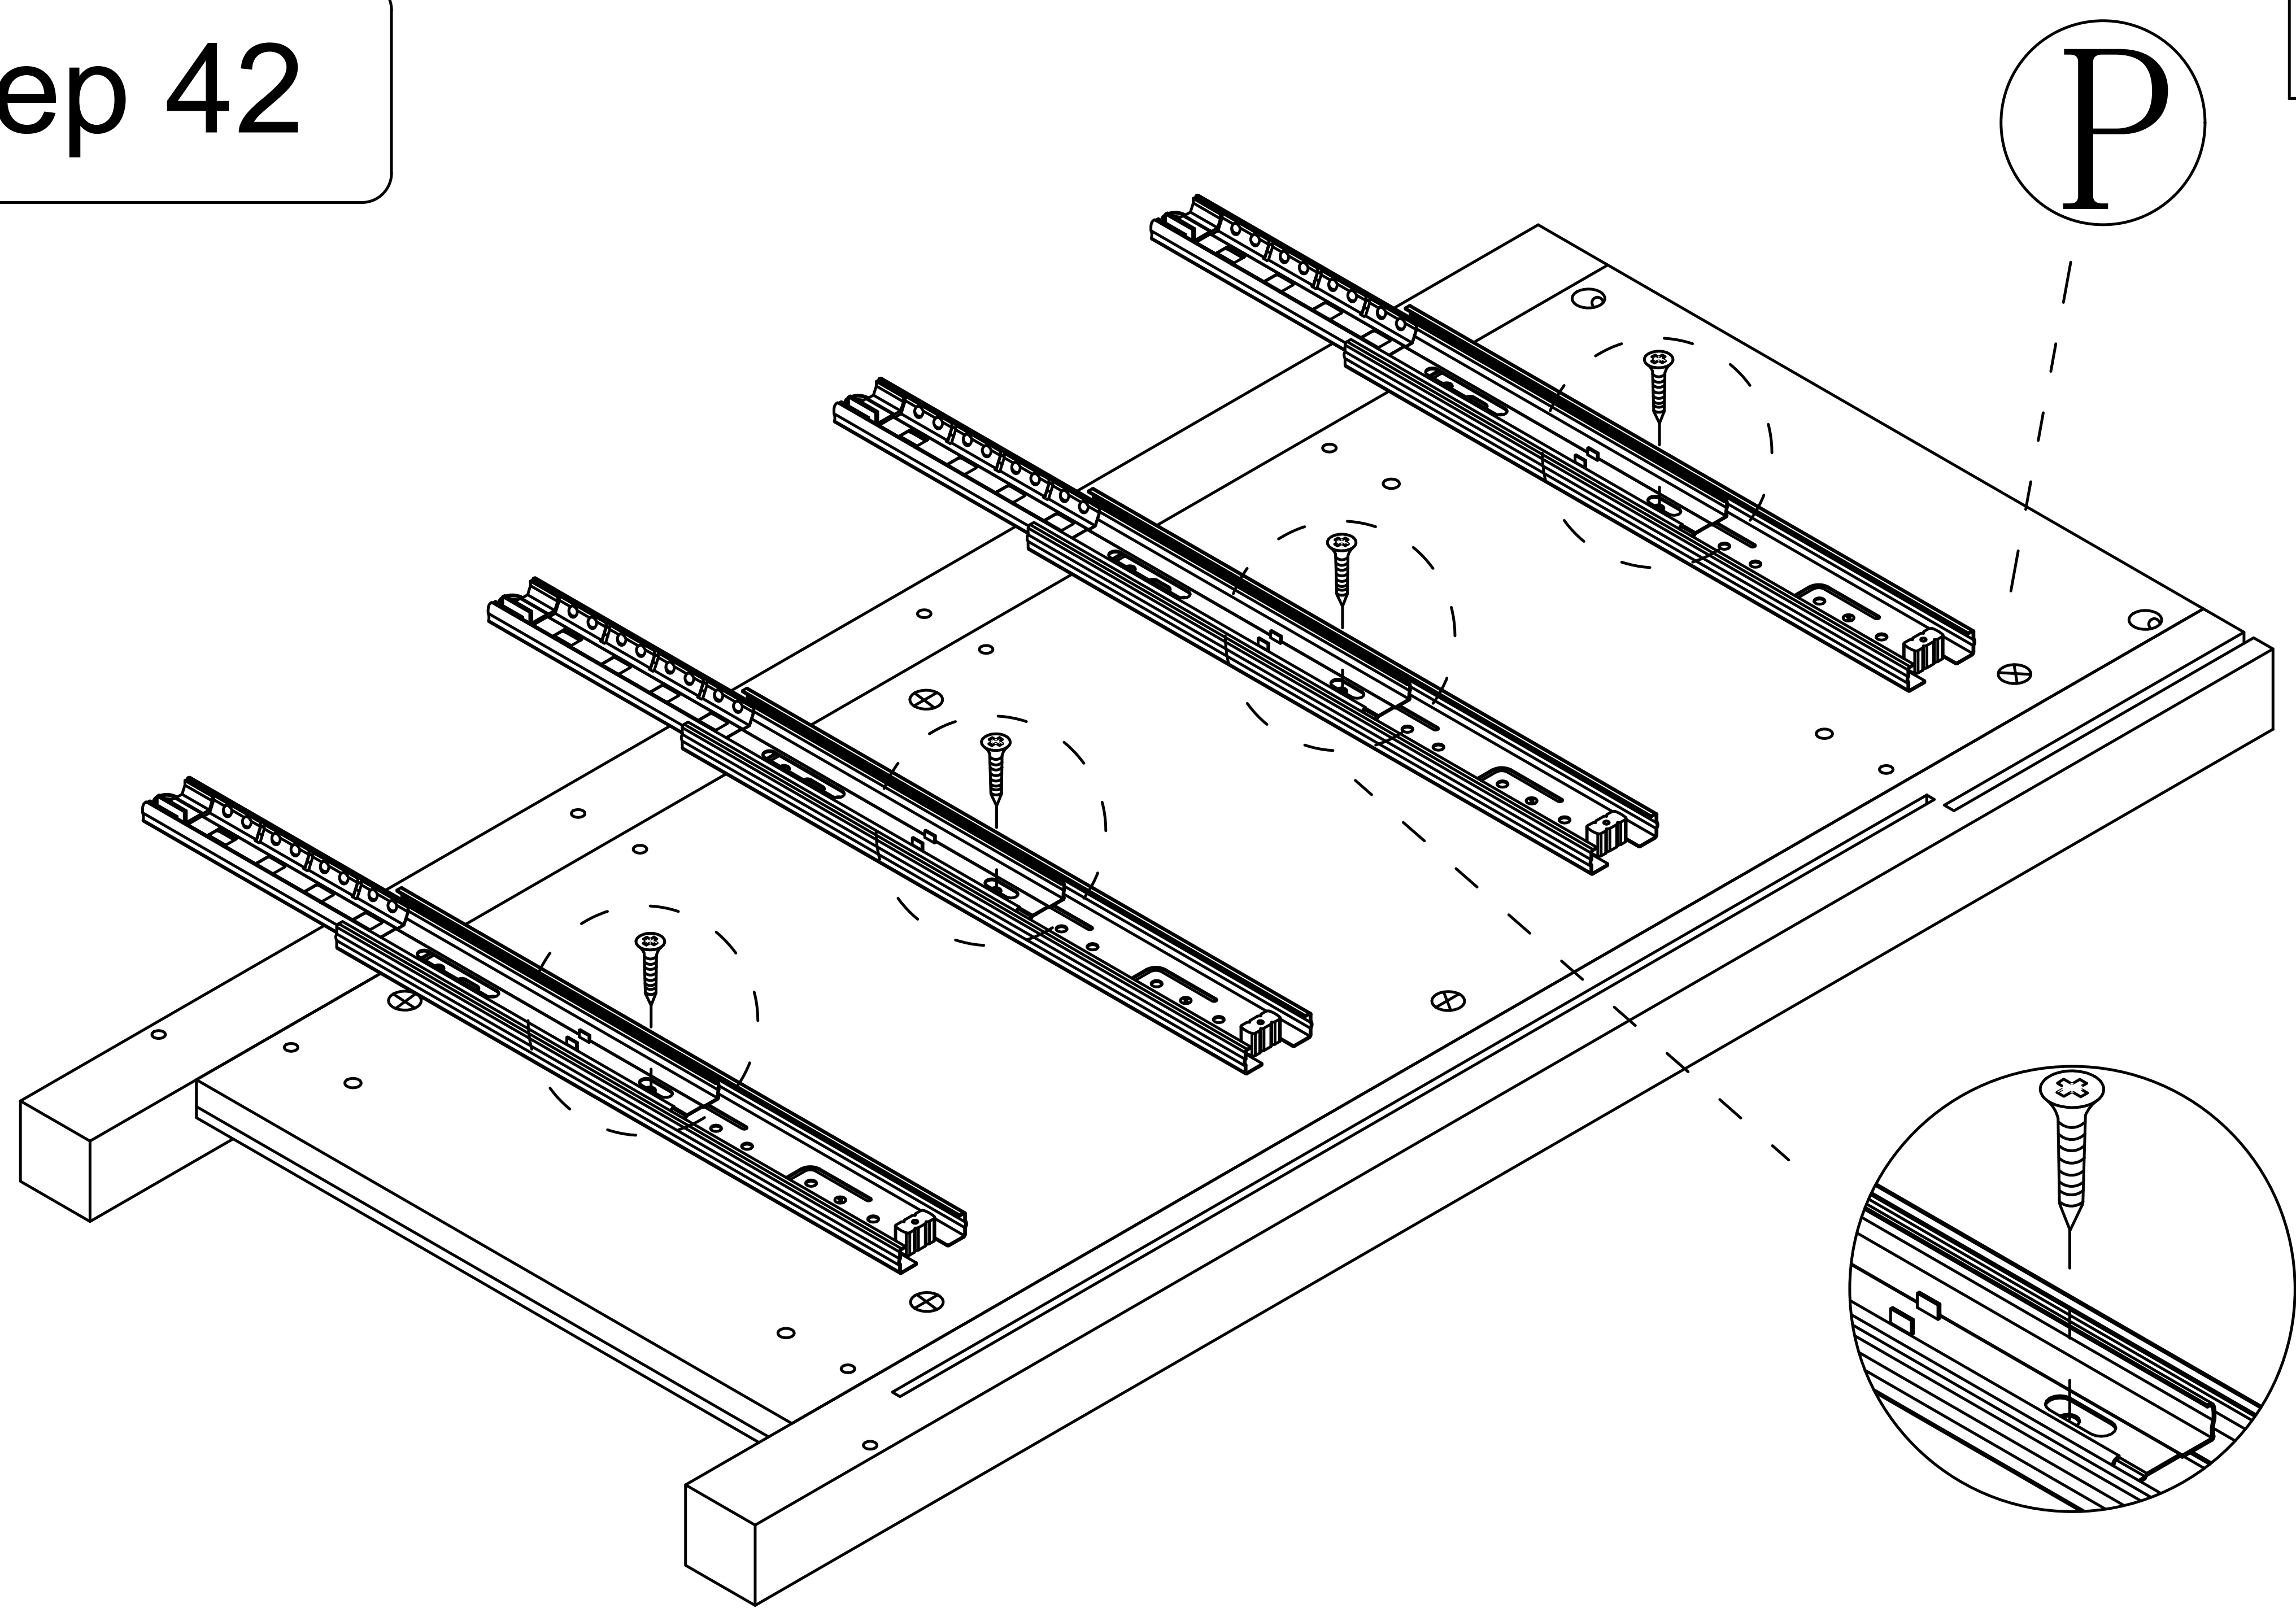


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 43

1

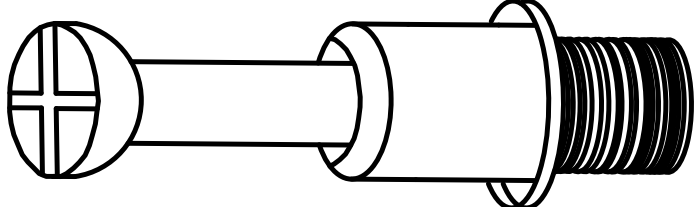



x10

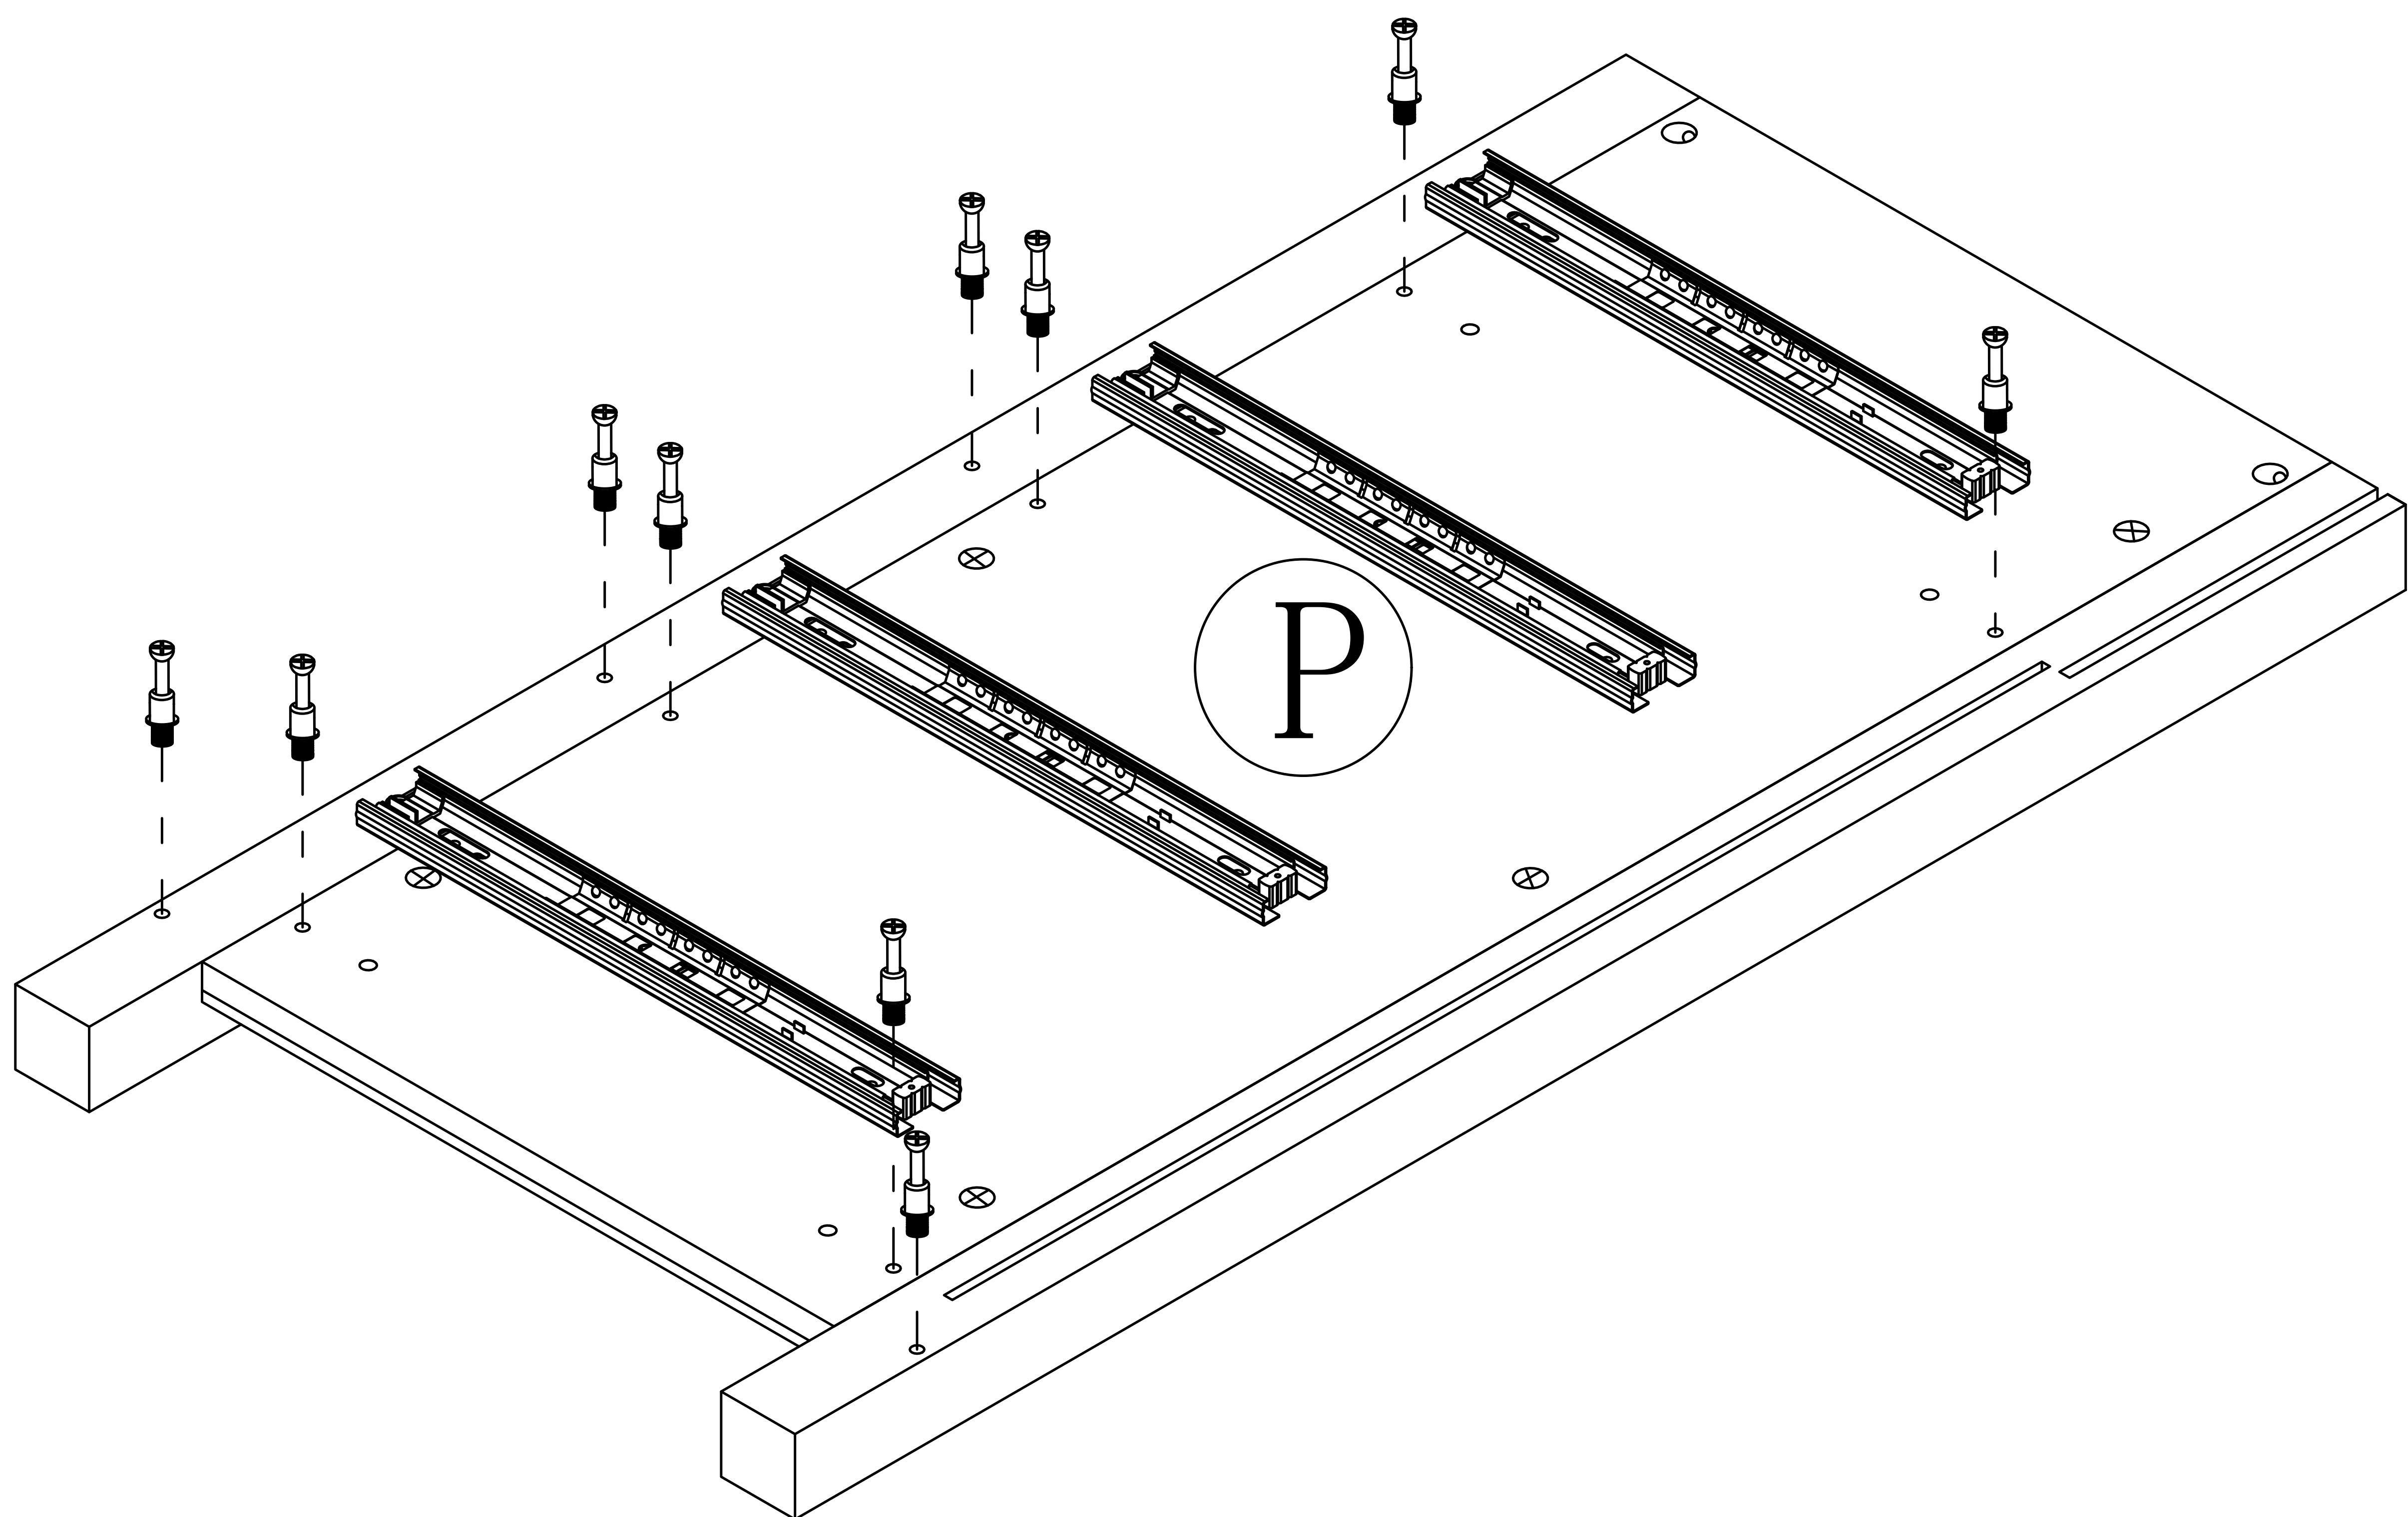

Step 44


2

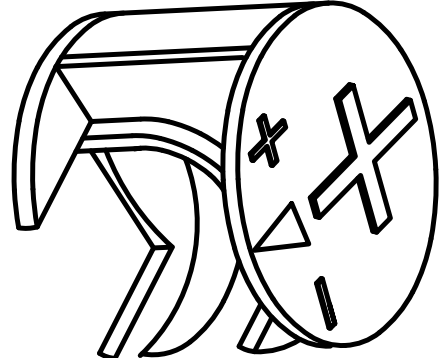 x10

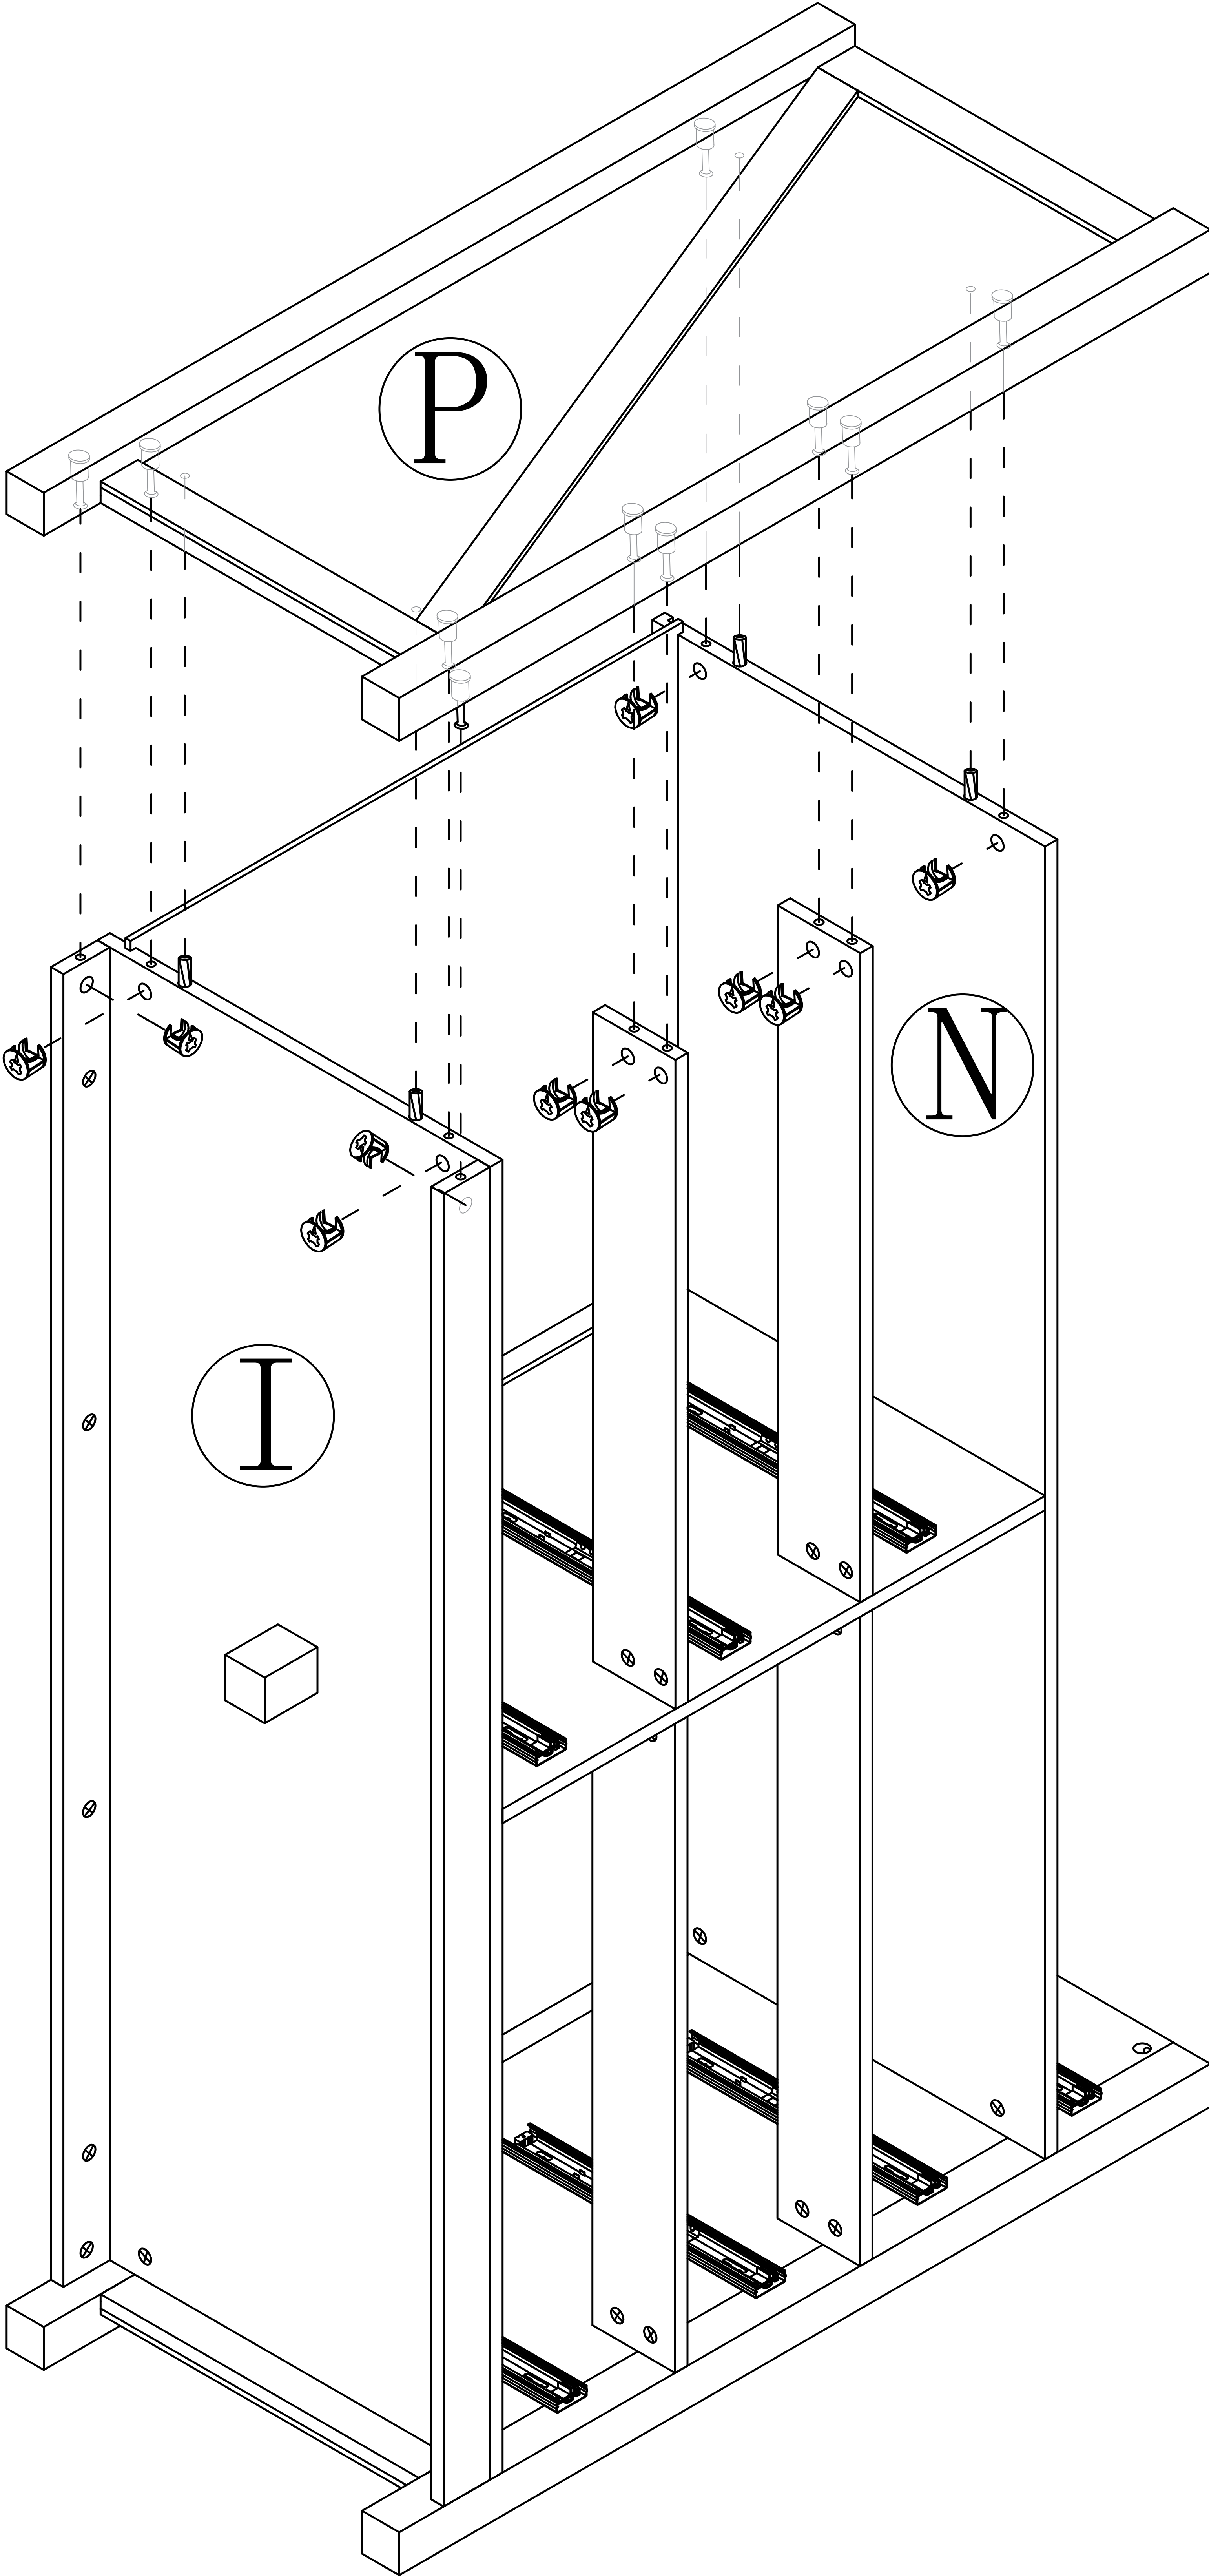


Step 45

6

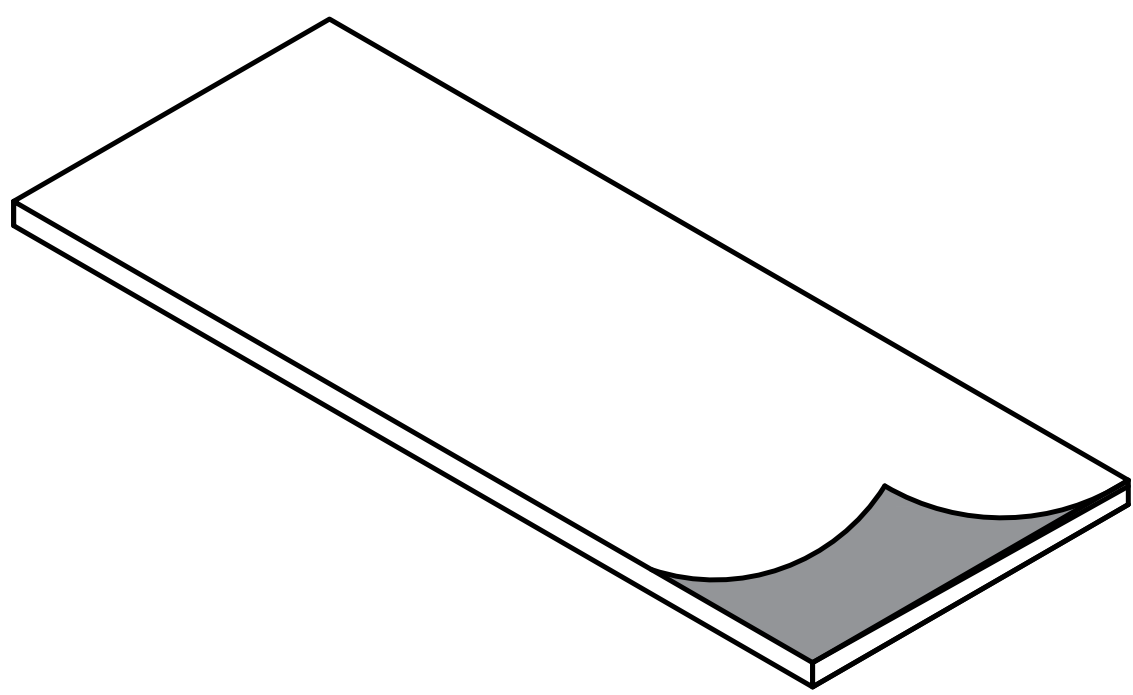


x5


Tear off release paper and stick the black foot pad on the board

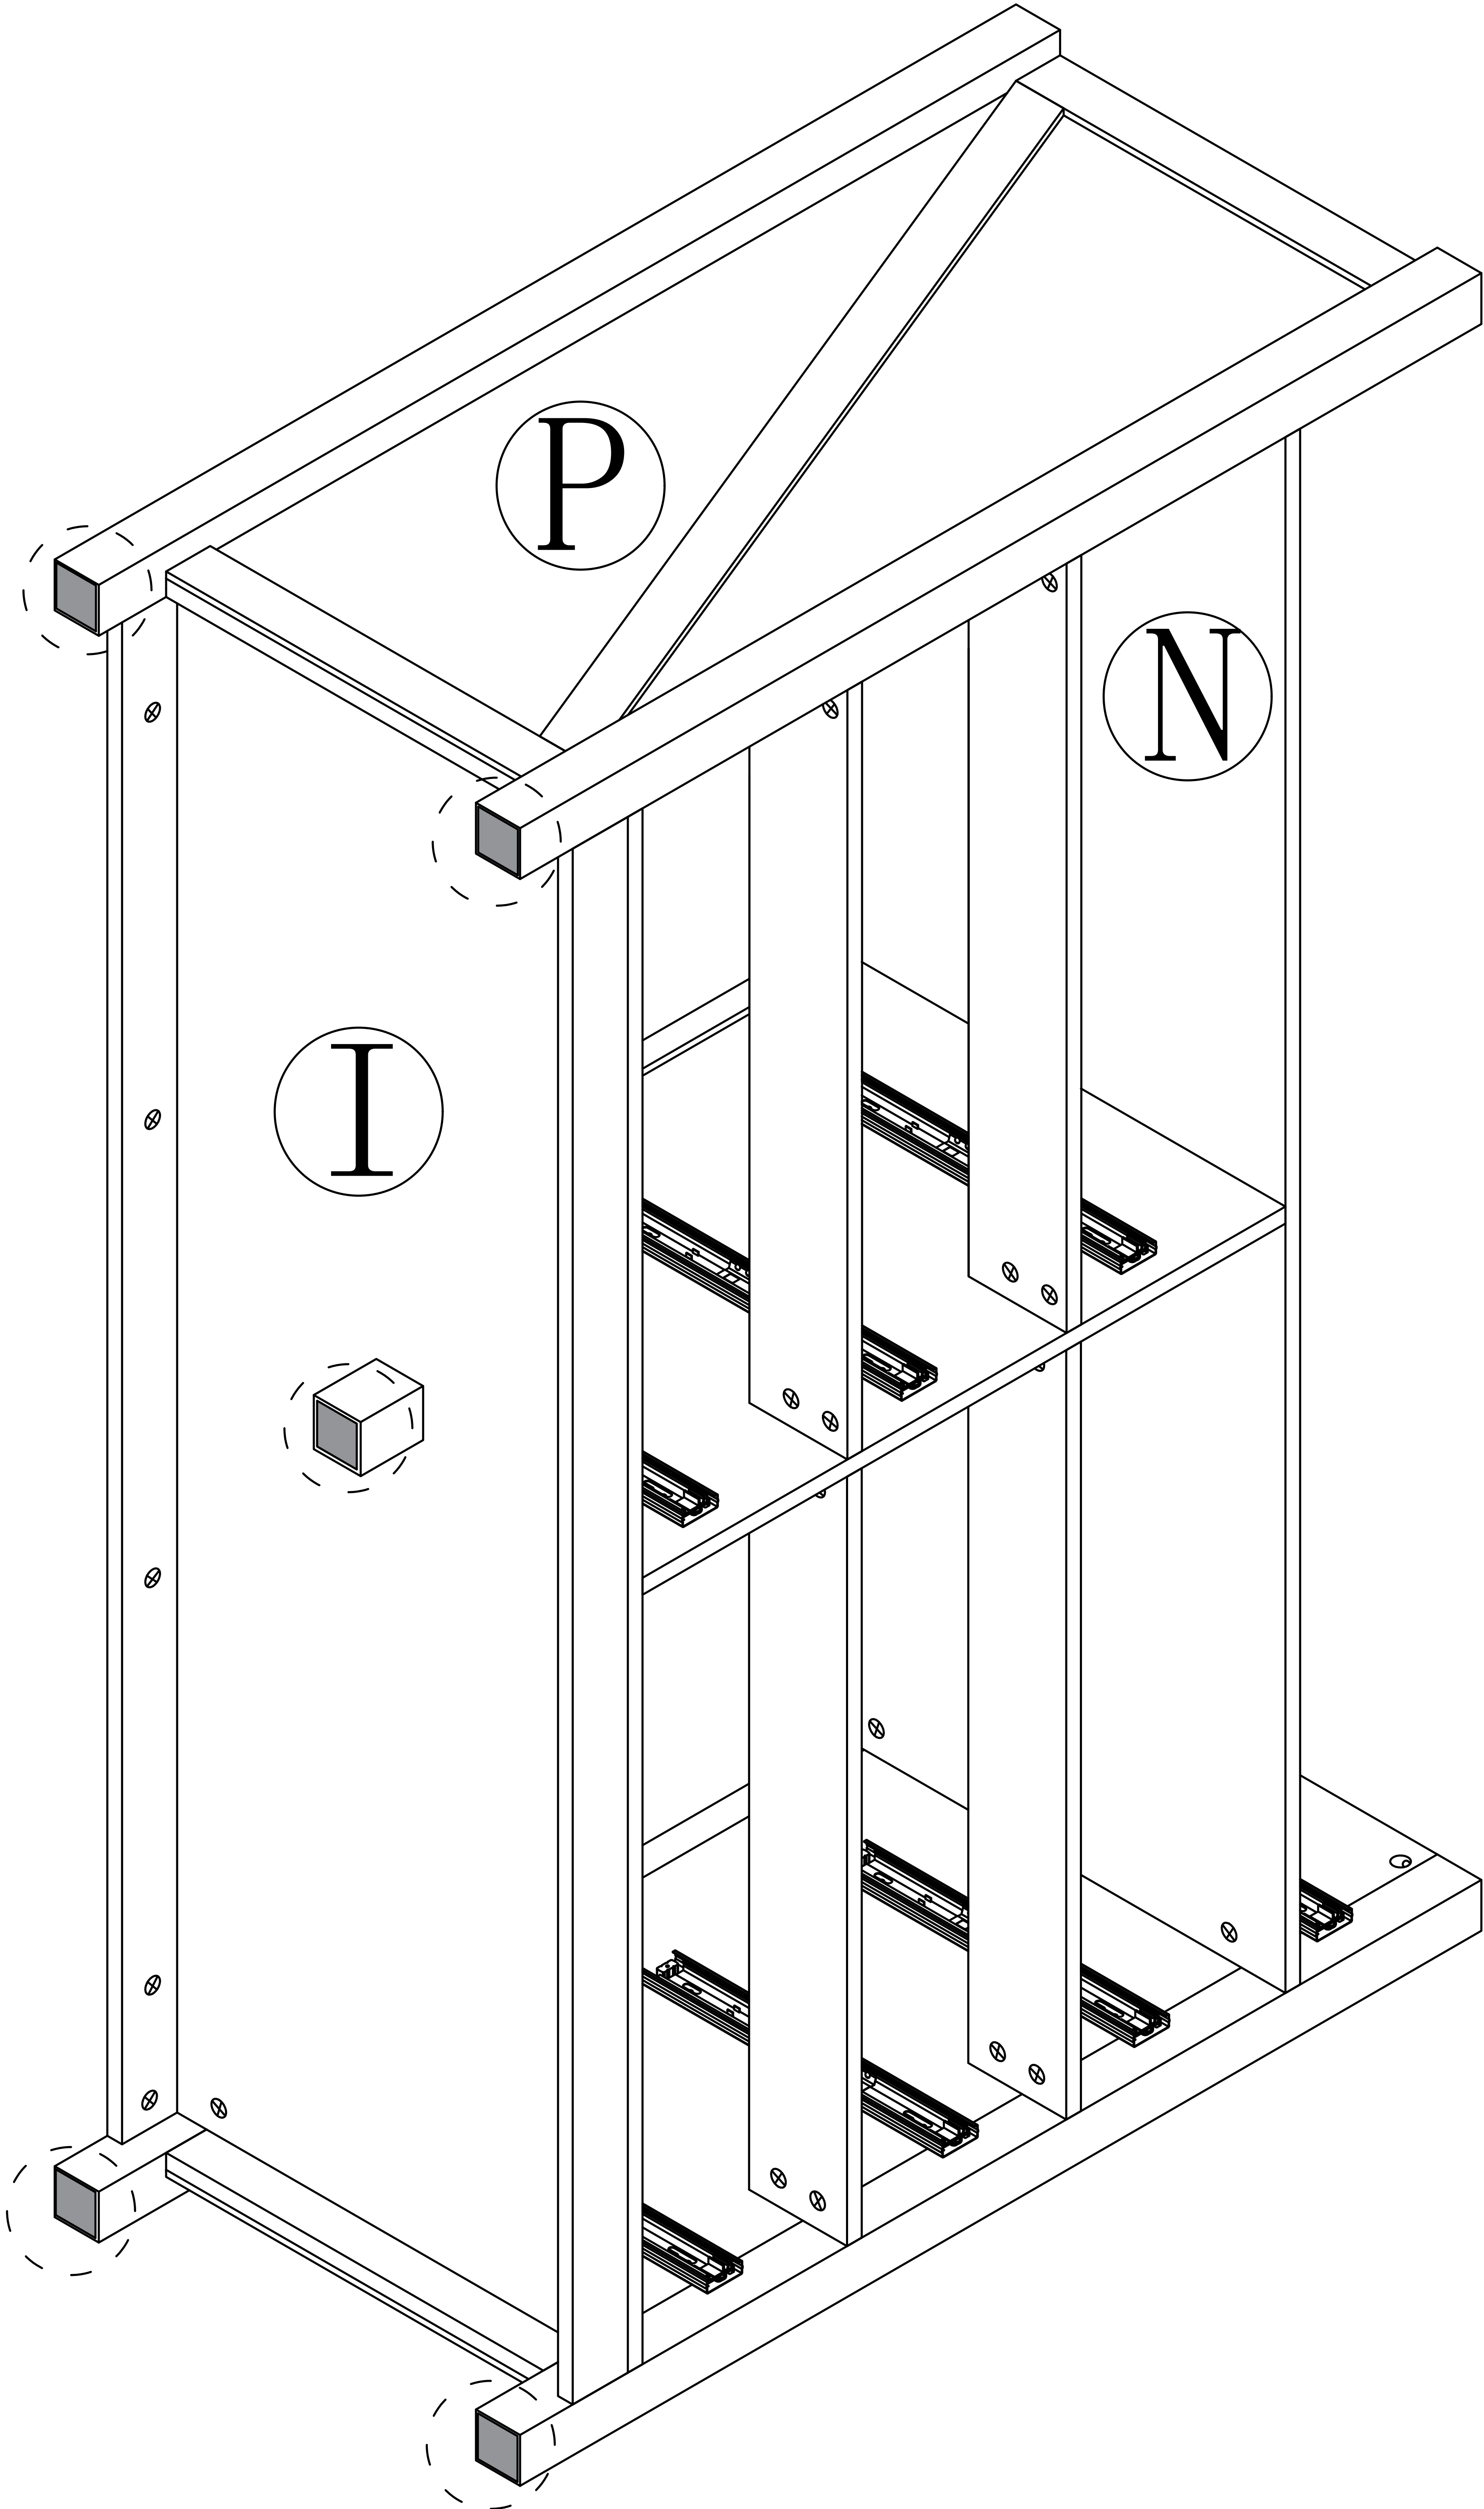


Step 46

10

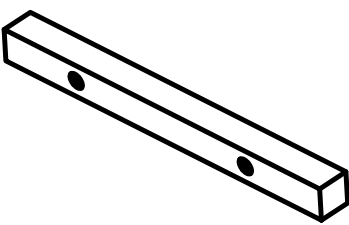

x1

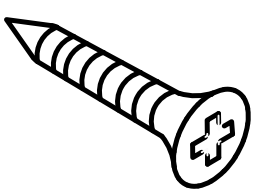

x2

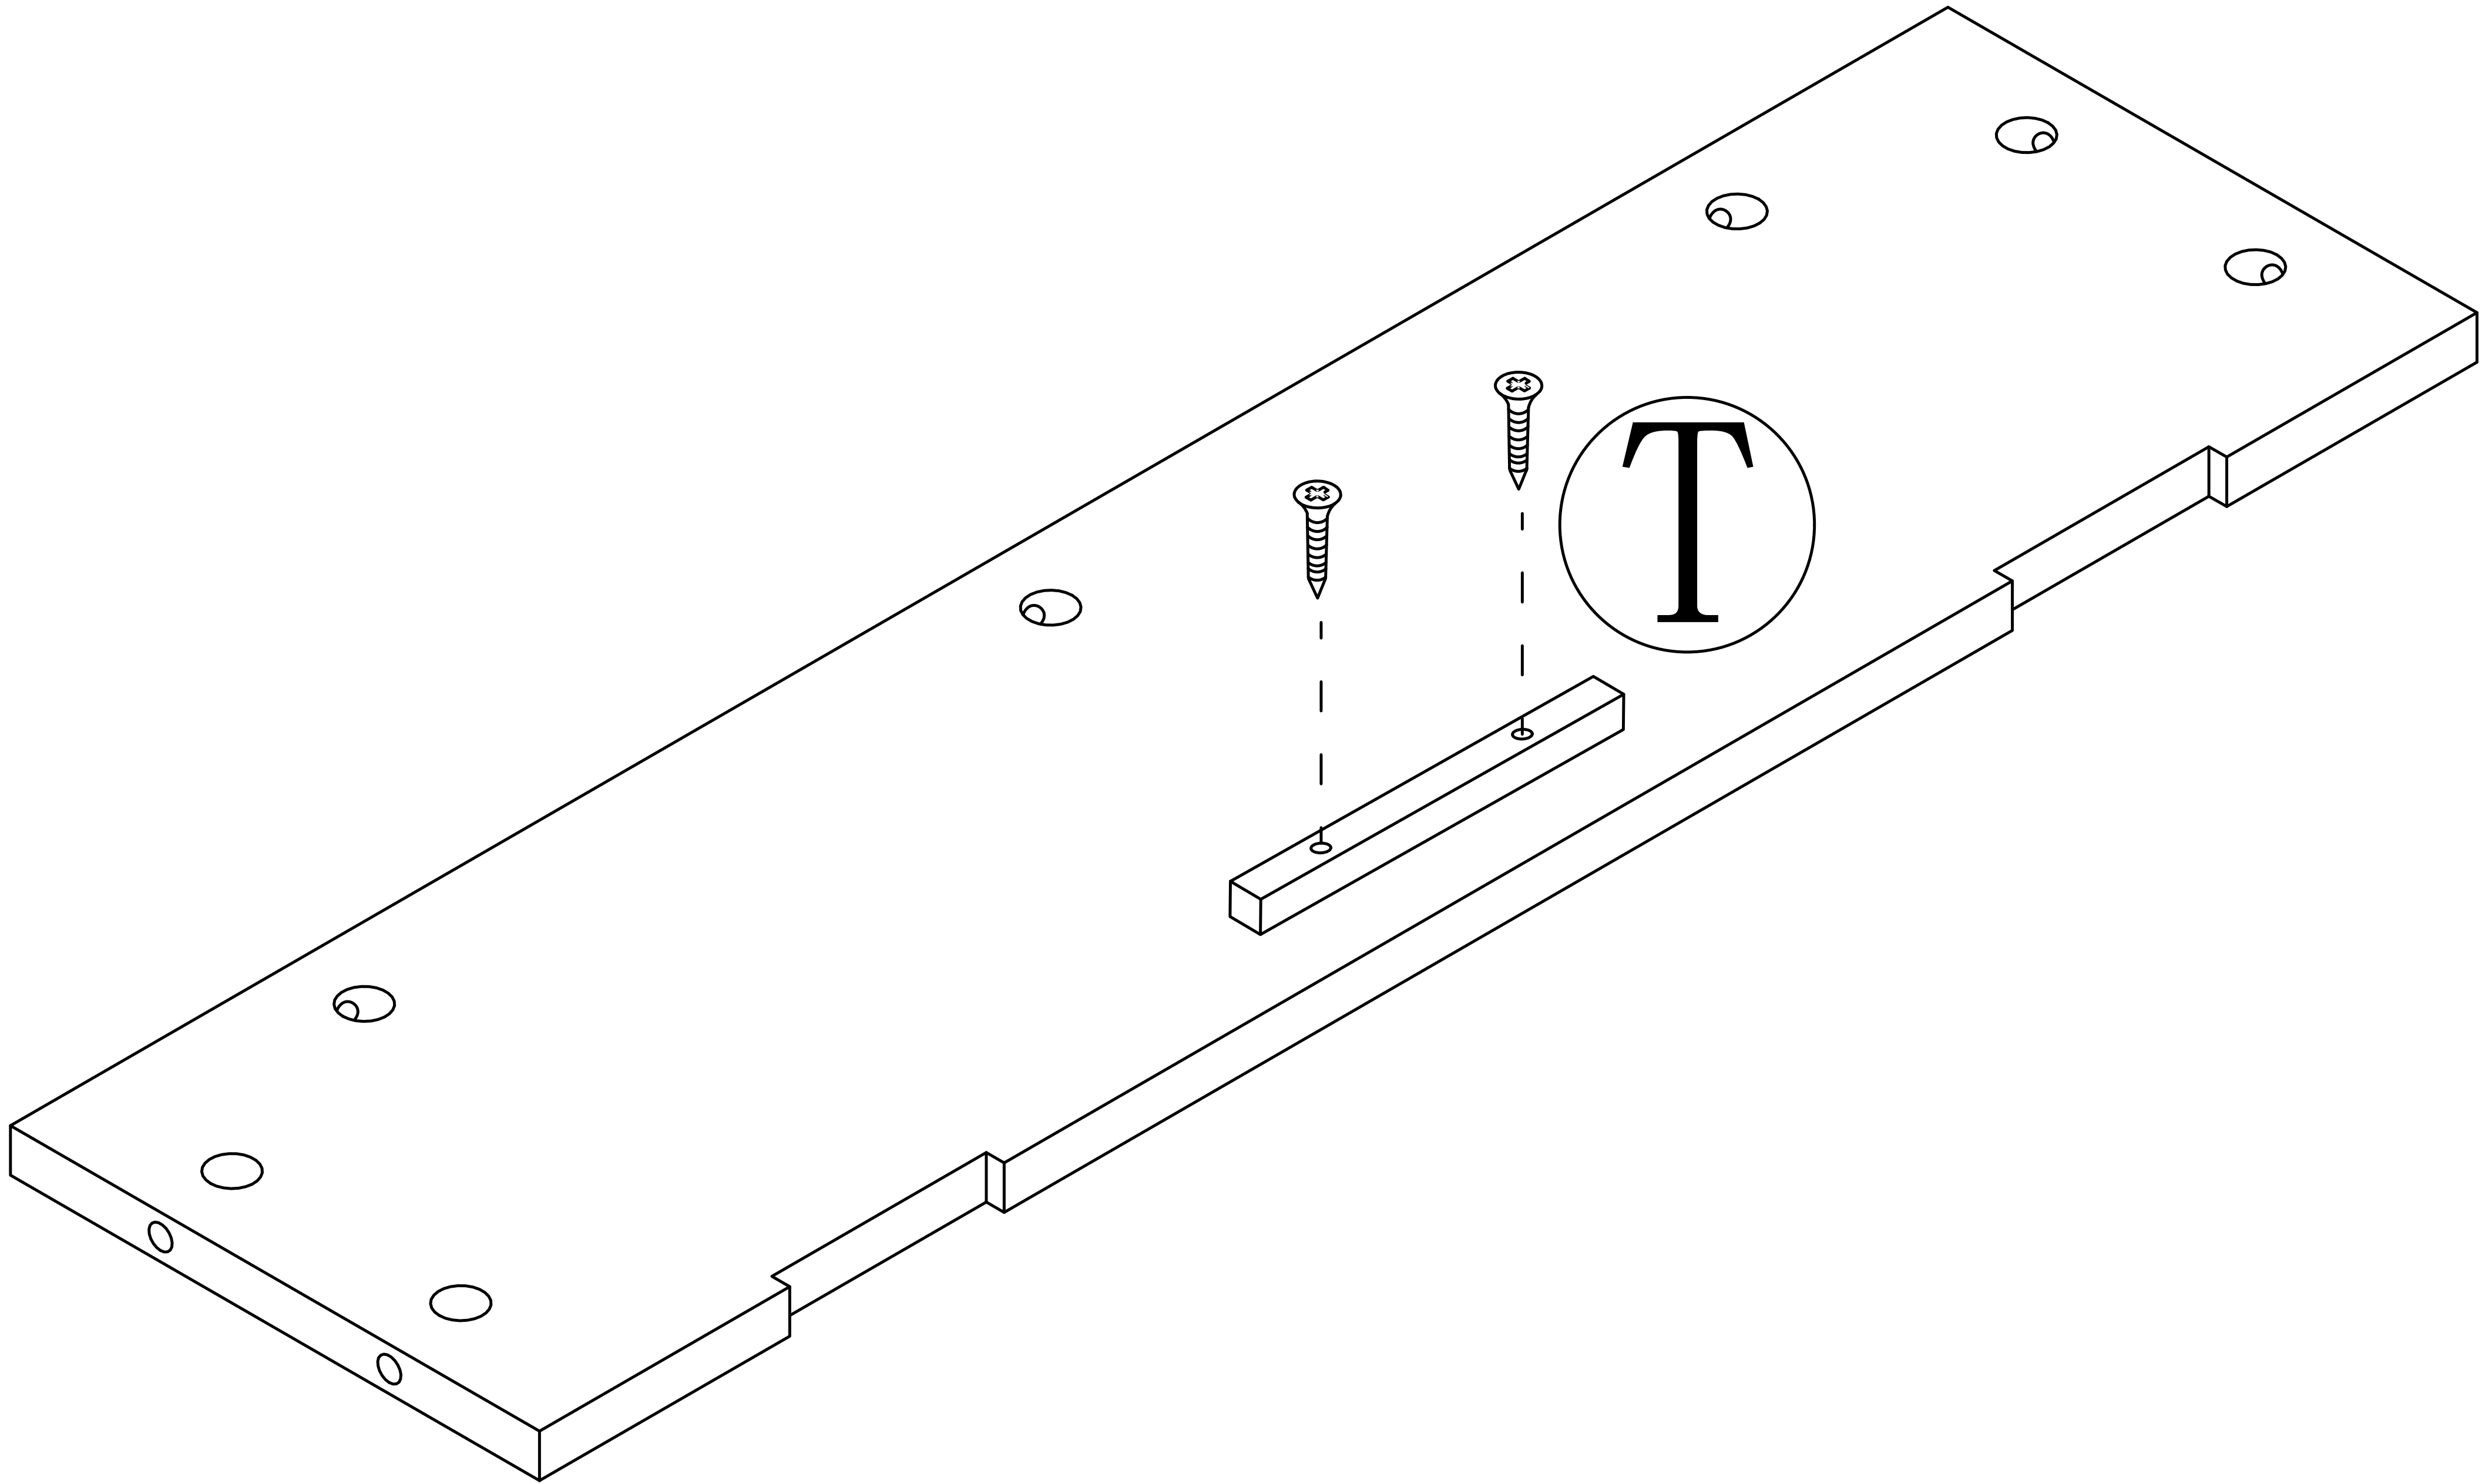


Step 47

5

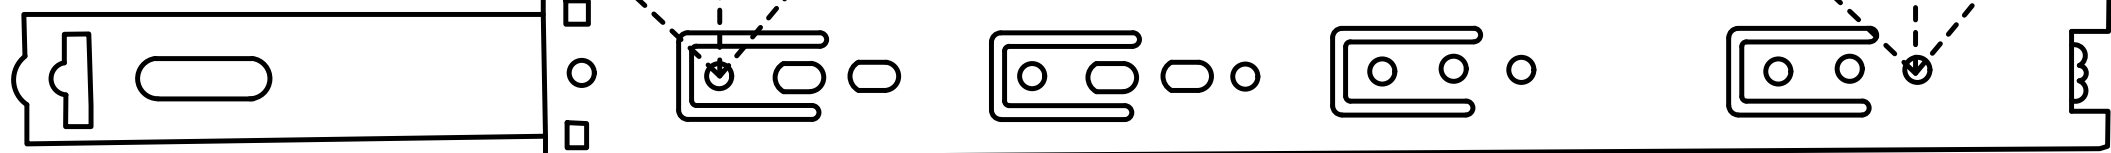
x1

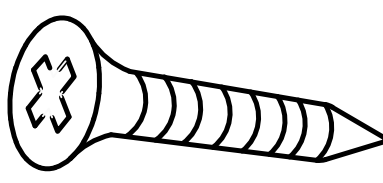

x2

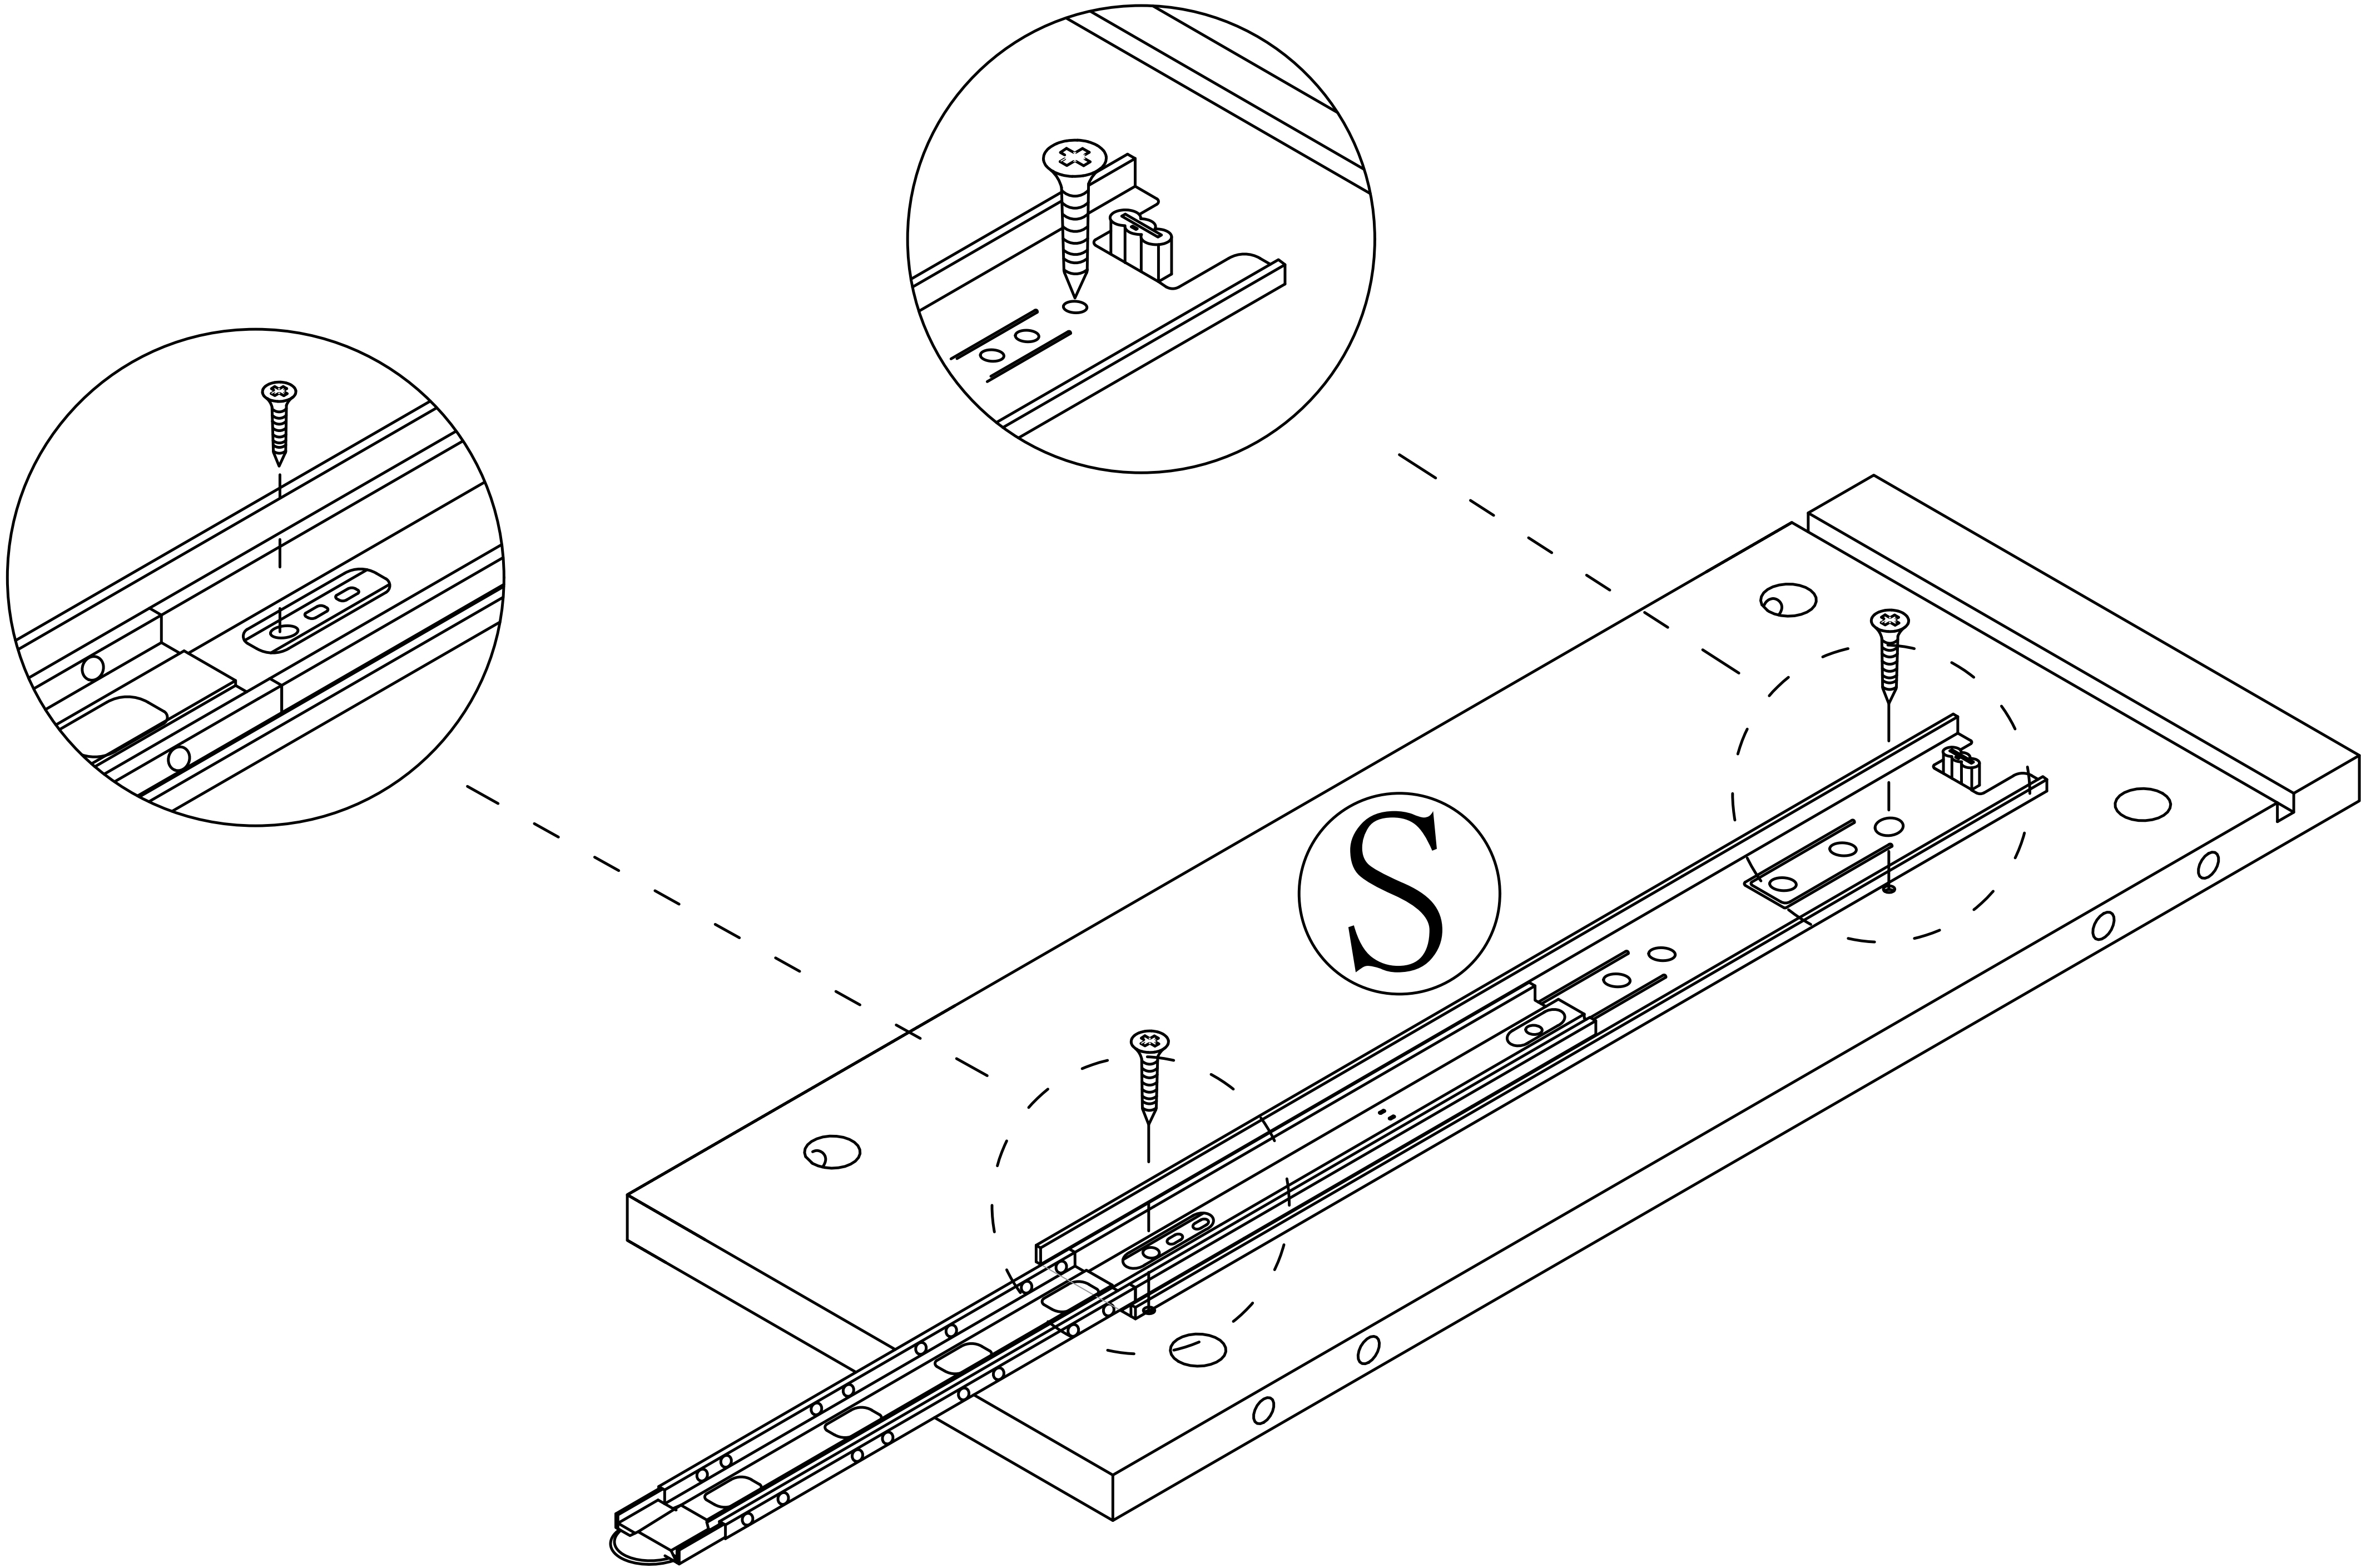


Paper templates can also be used here

Step 48

5

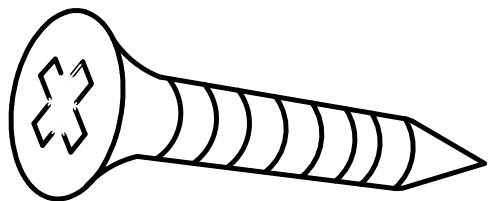


x1

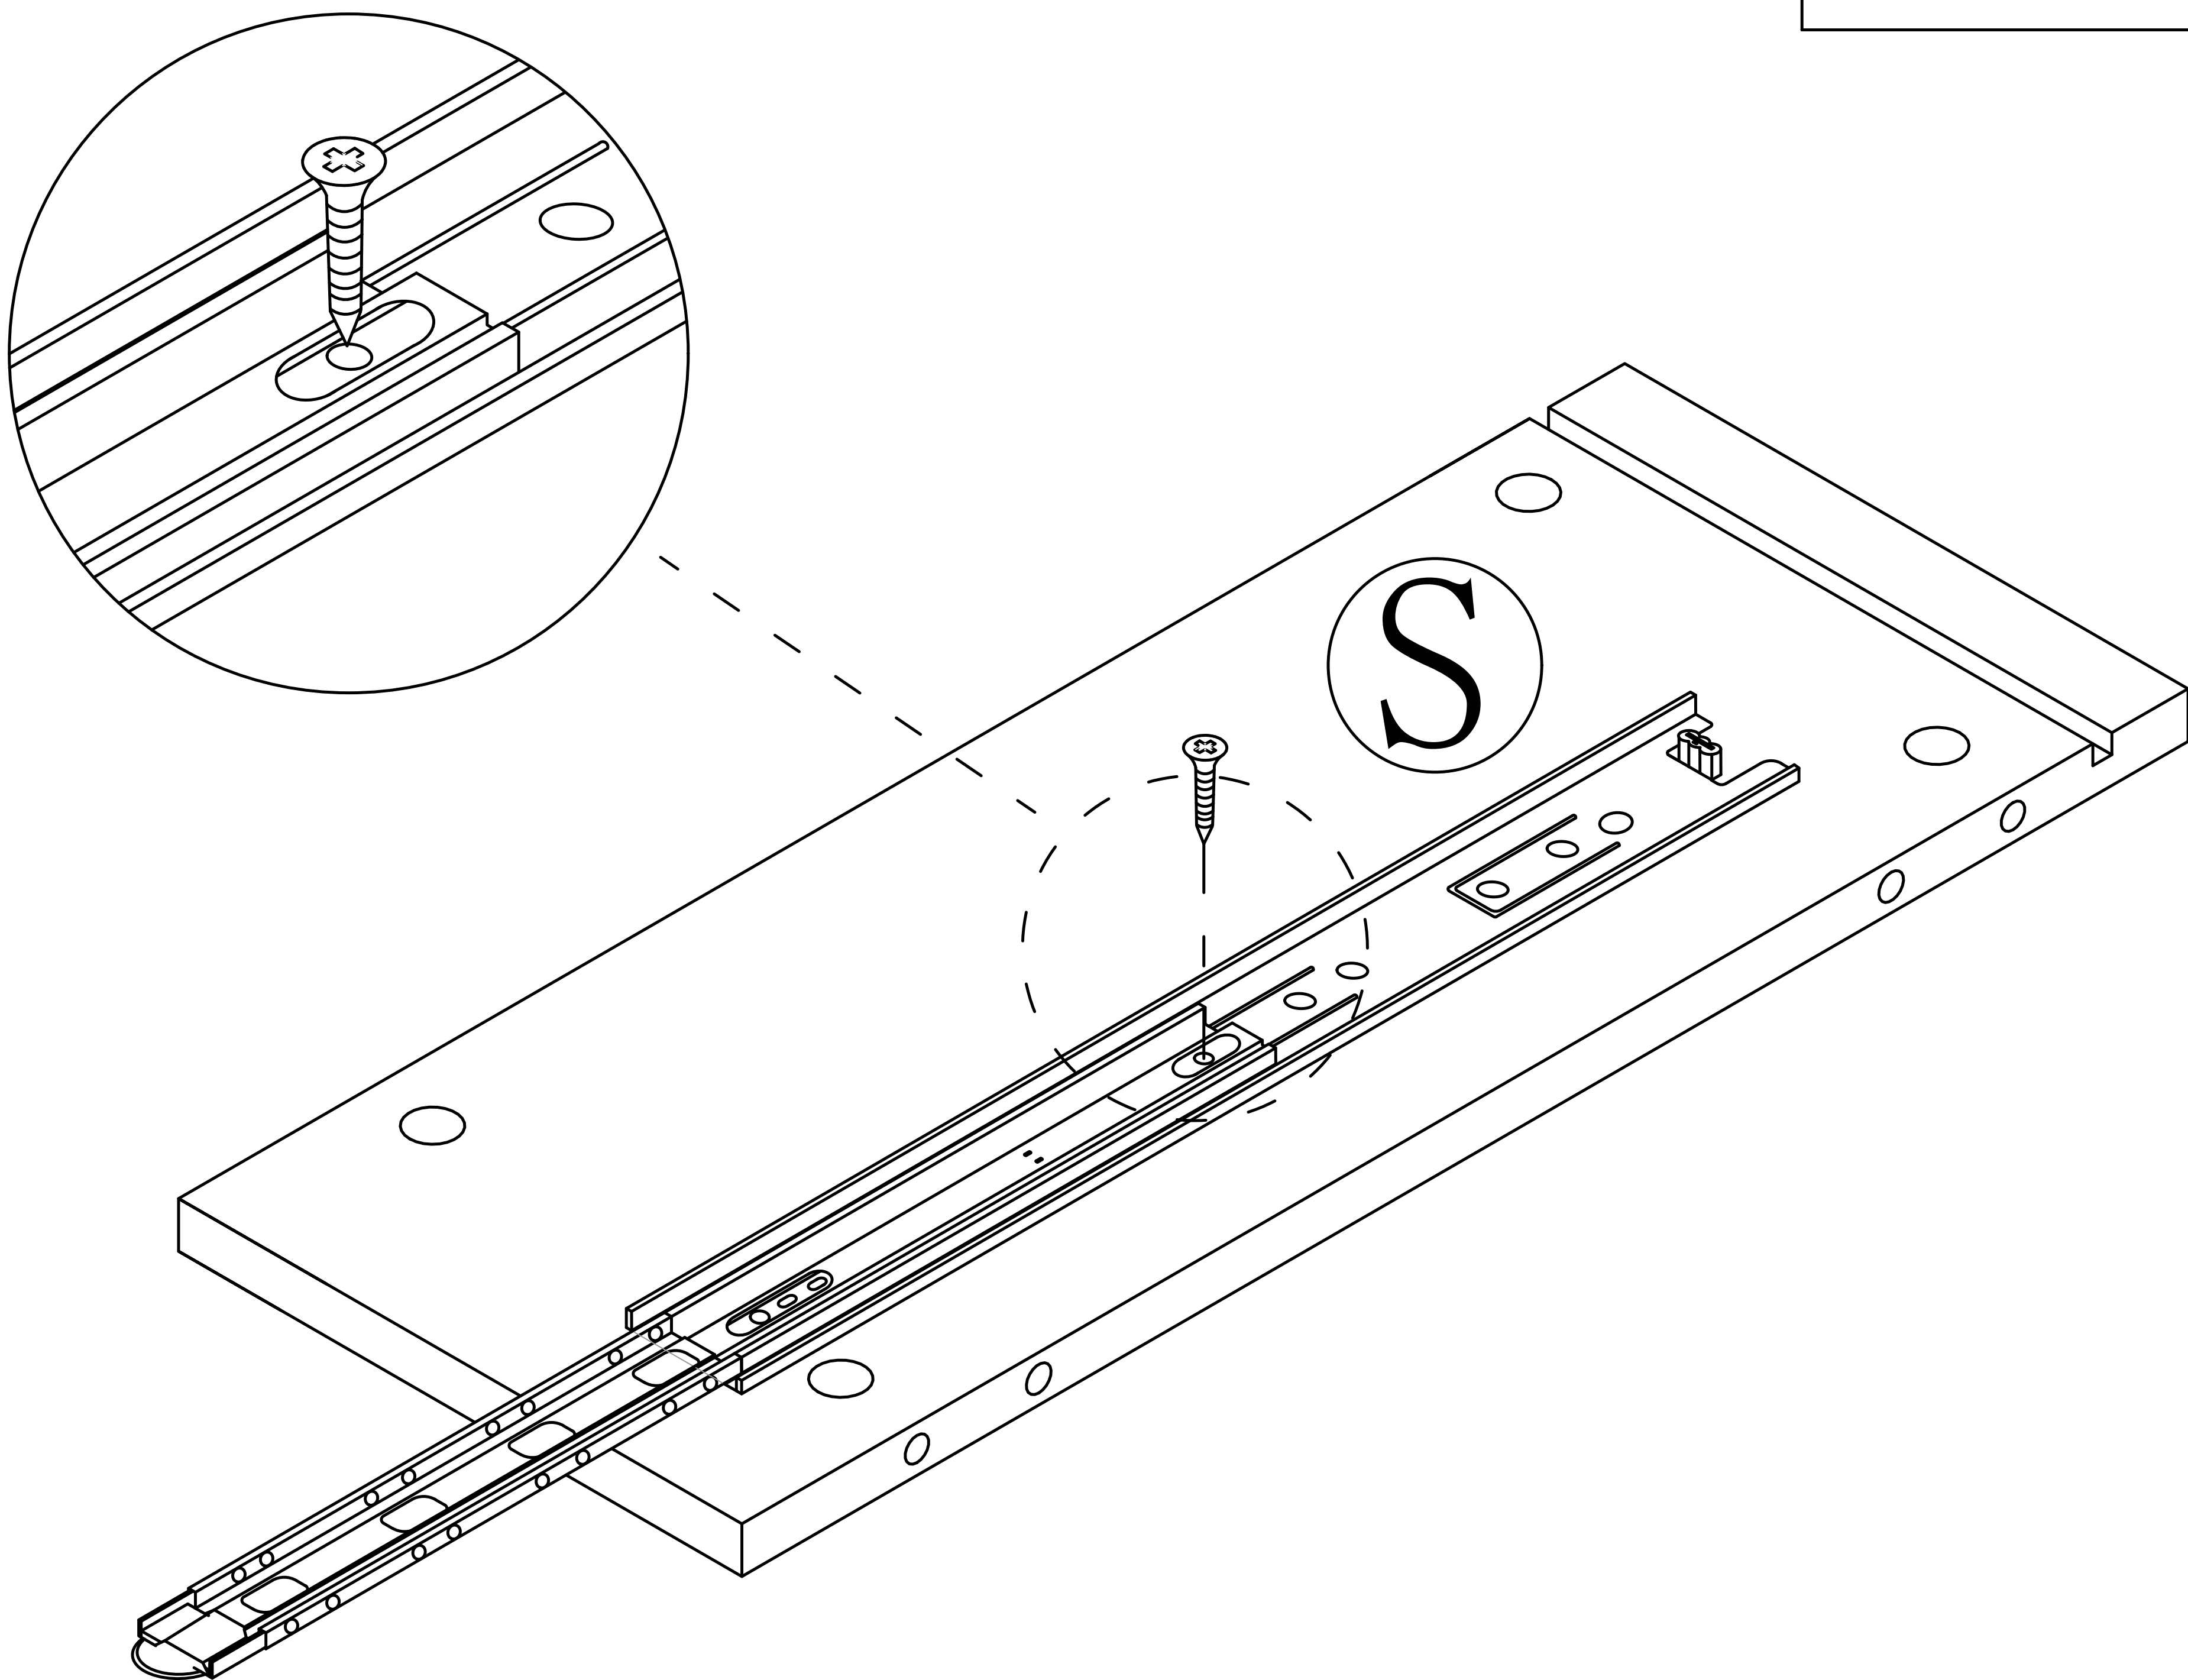

This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 49

1

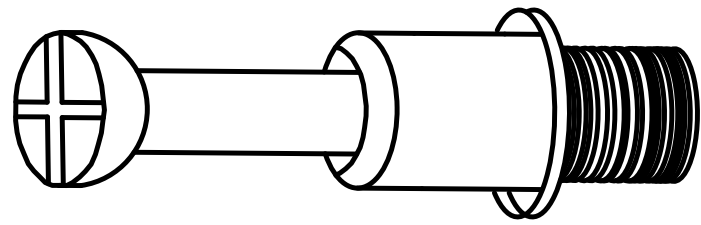


x2



14

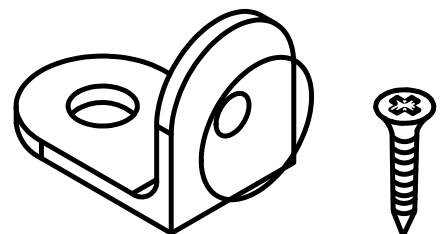

x1

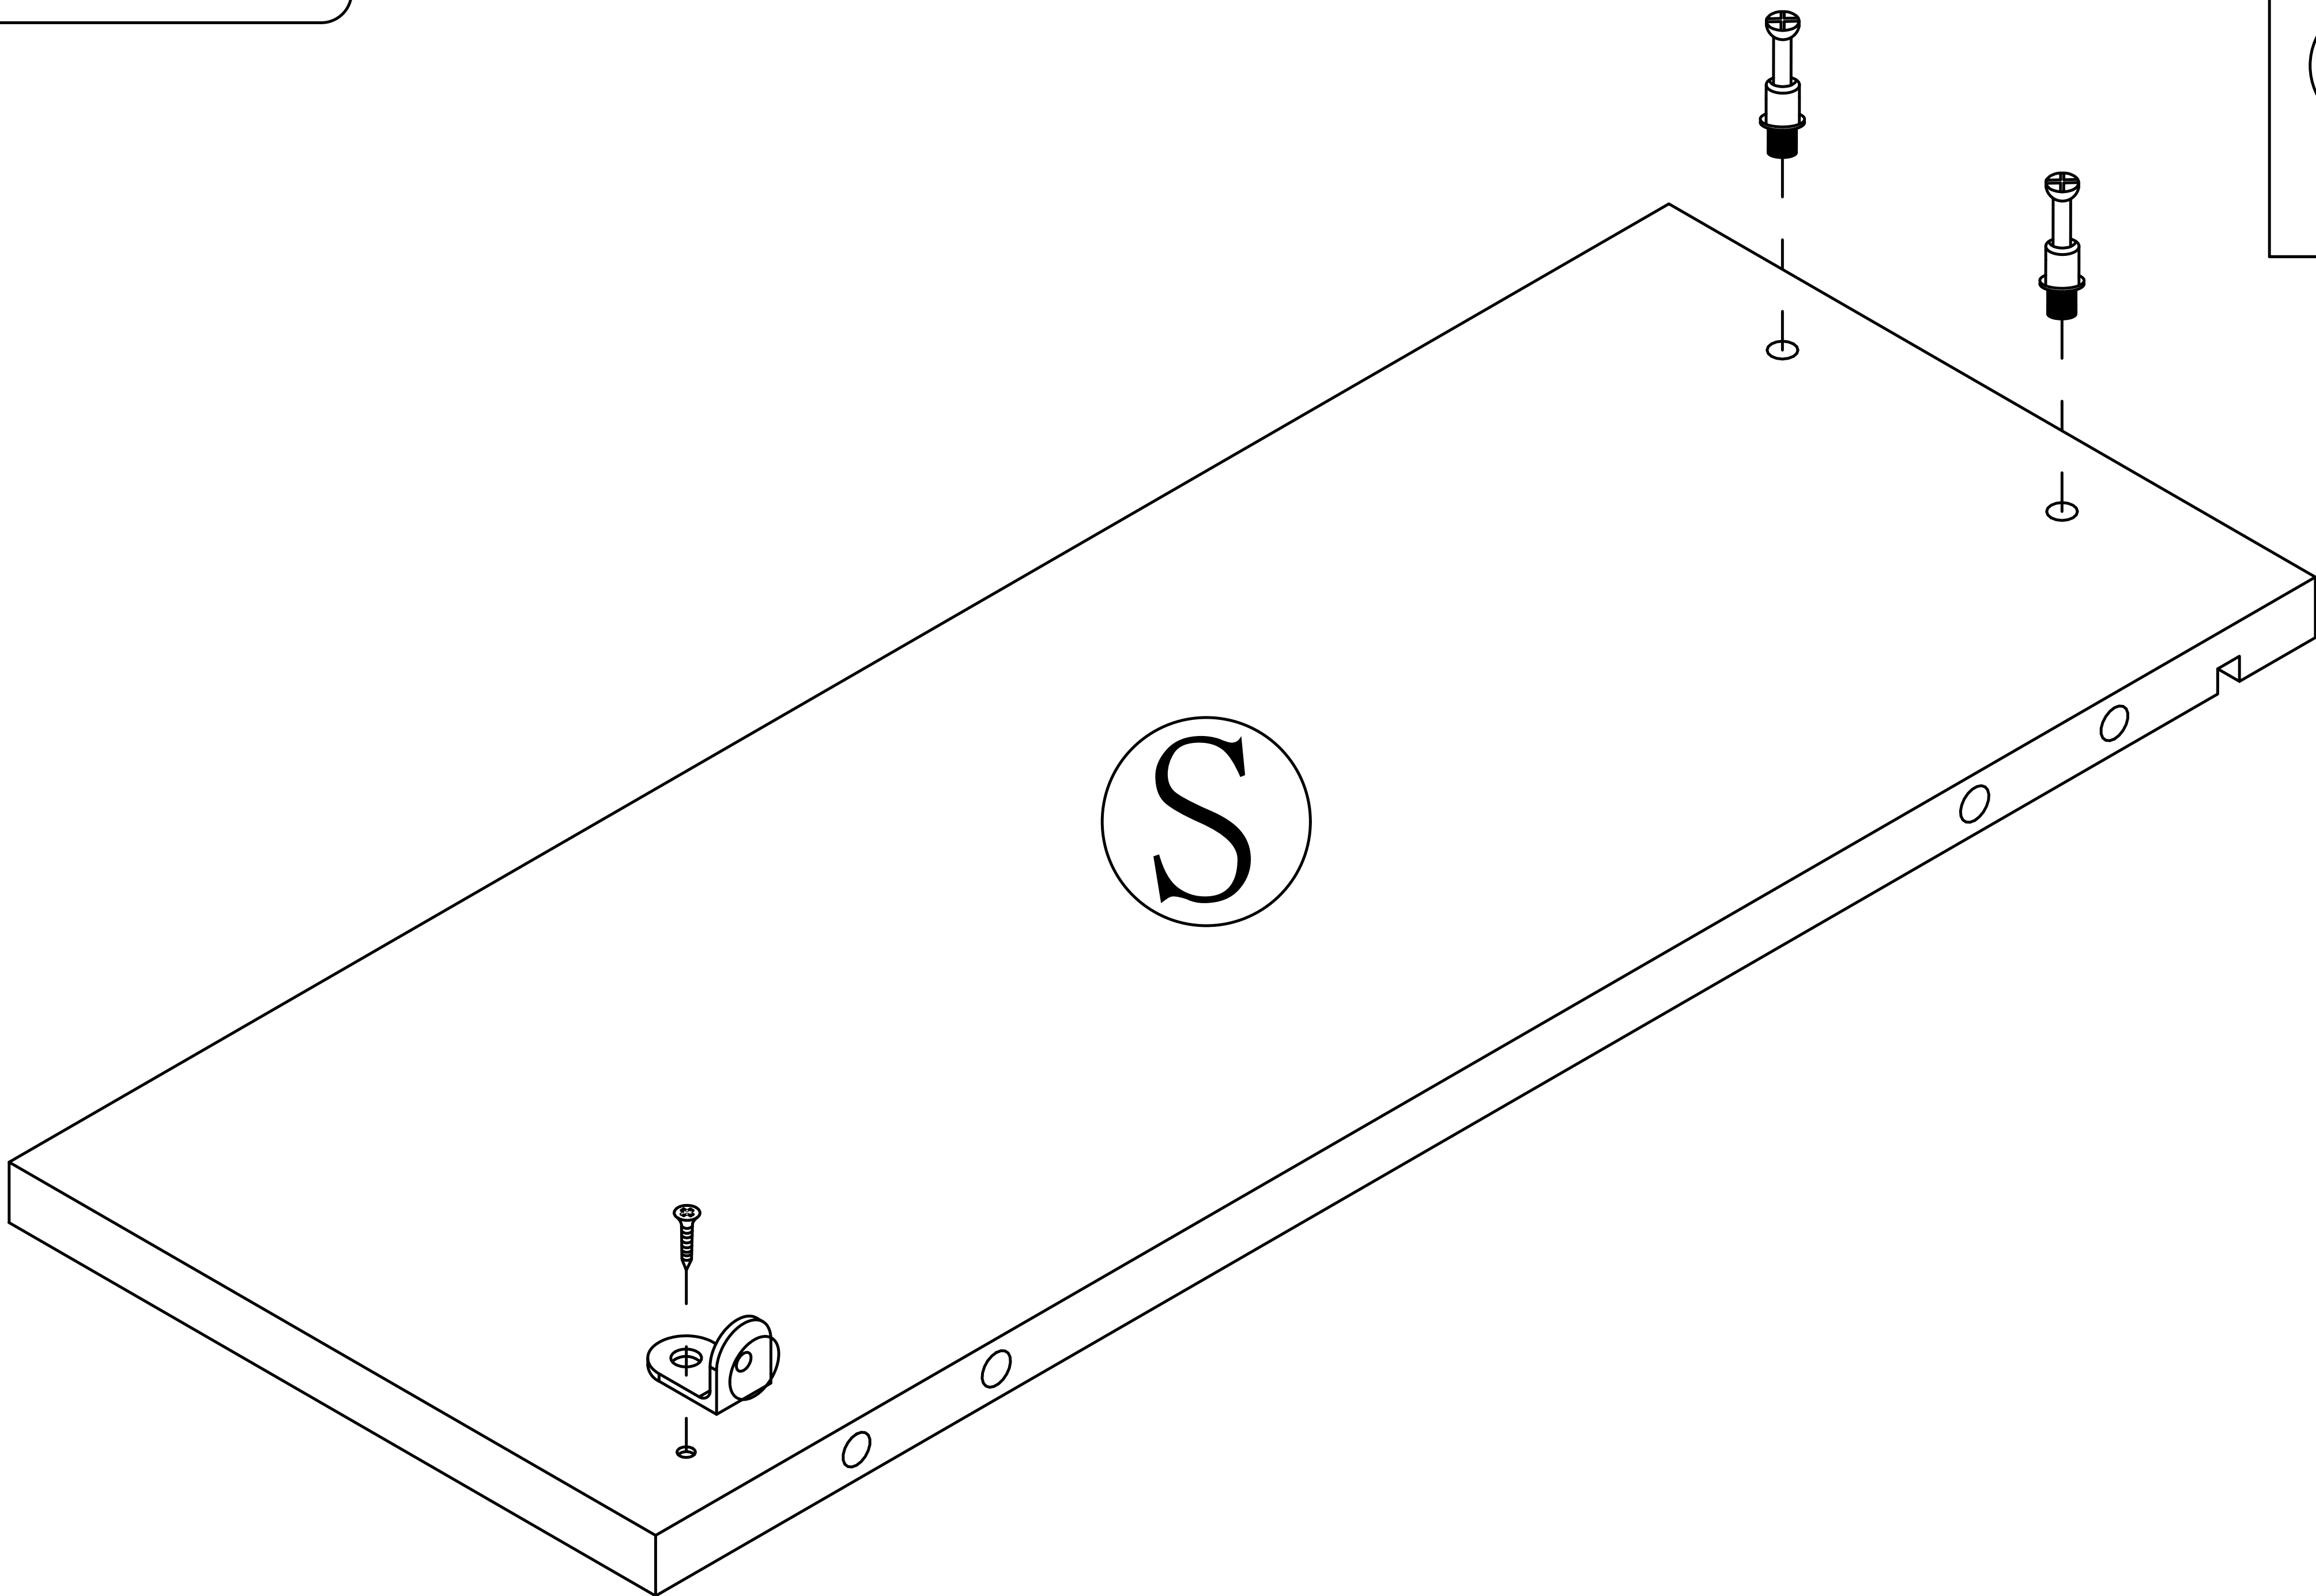



Step 50

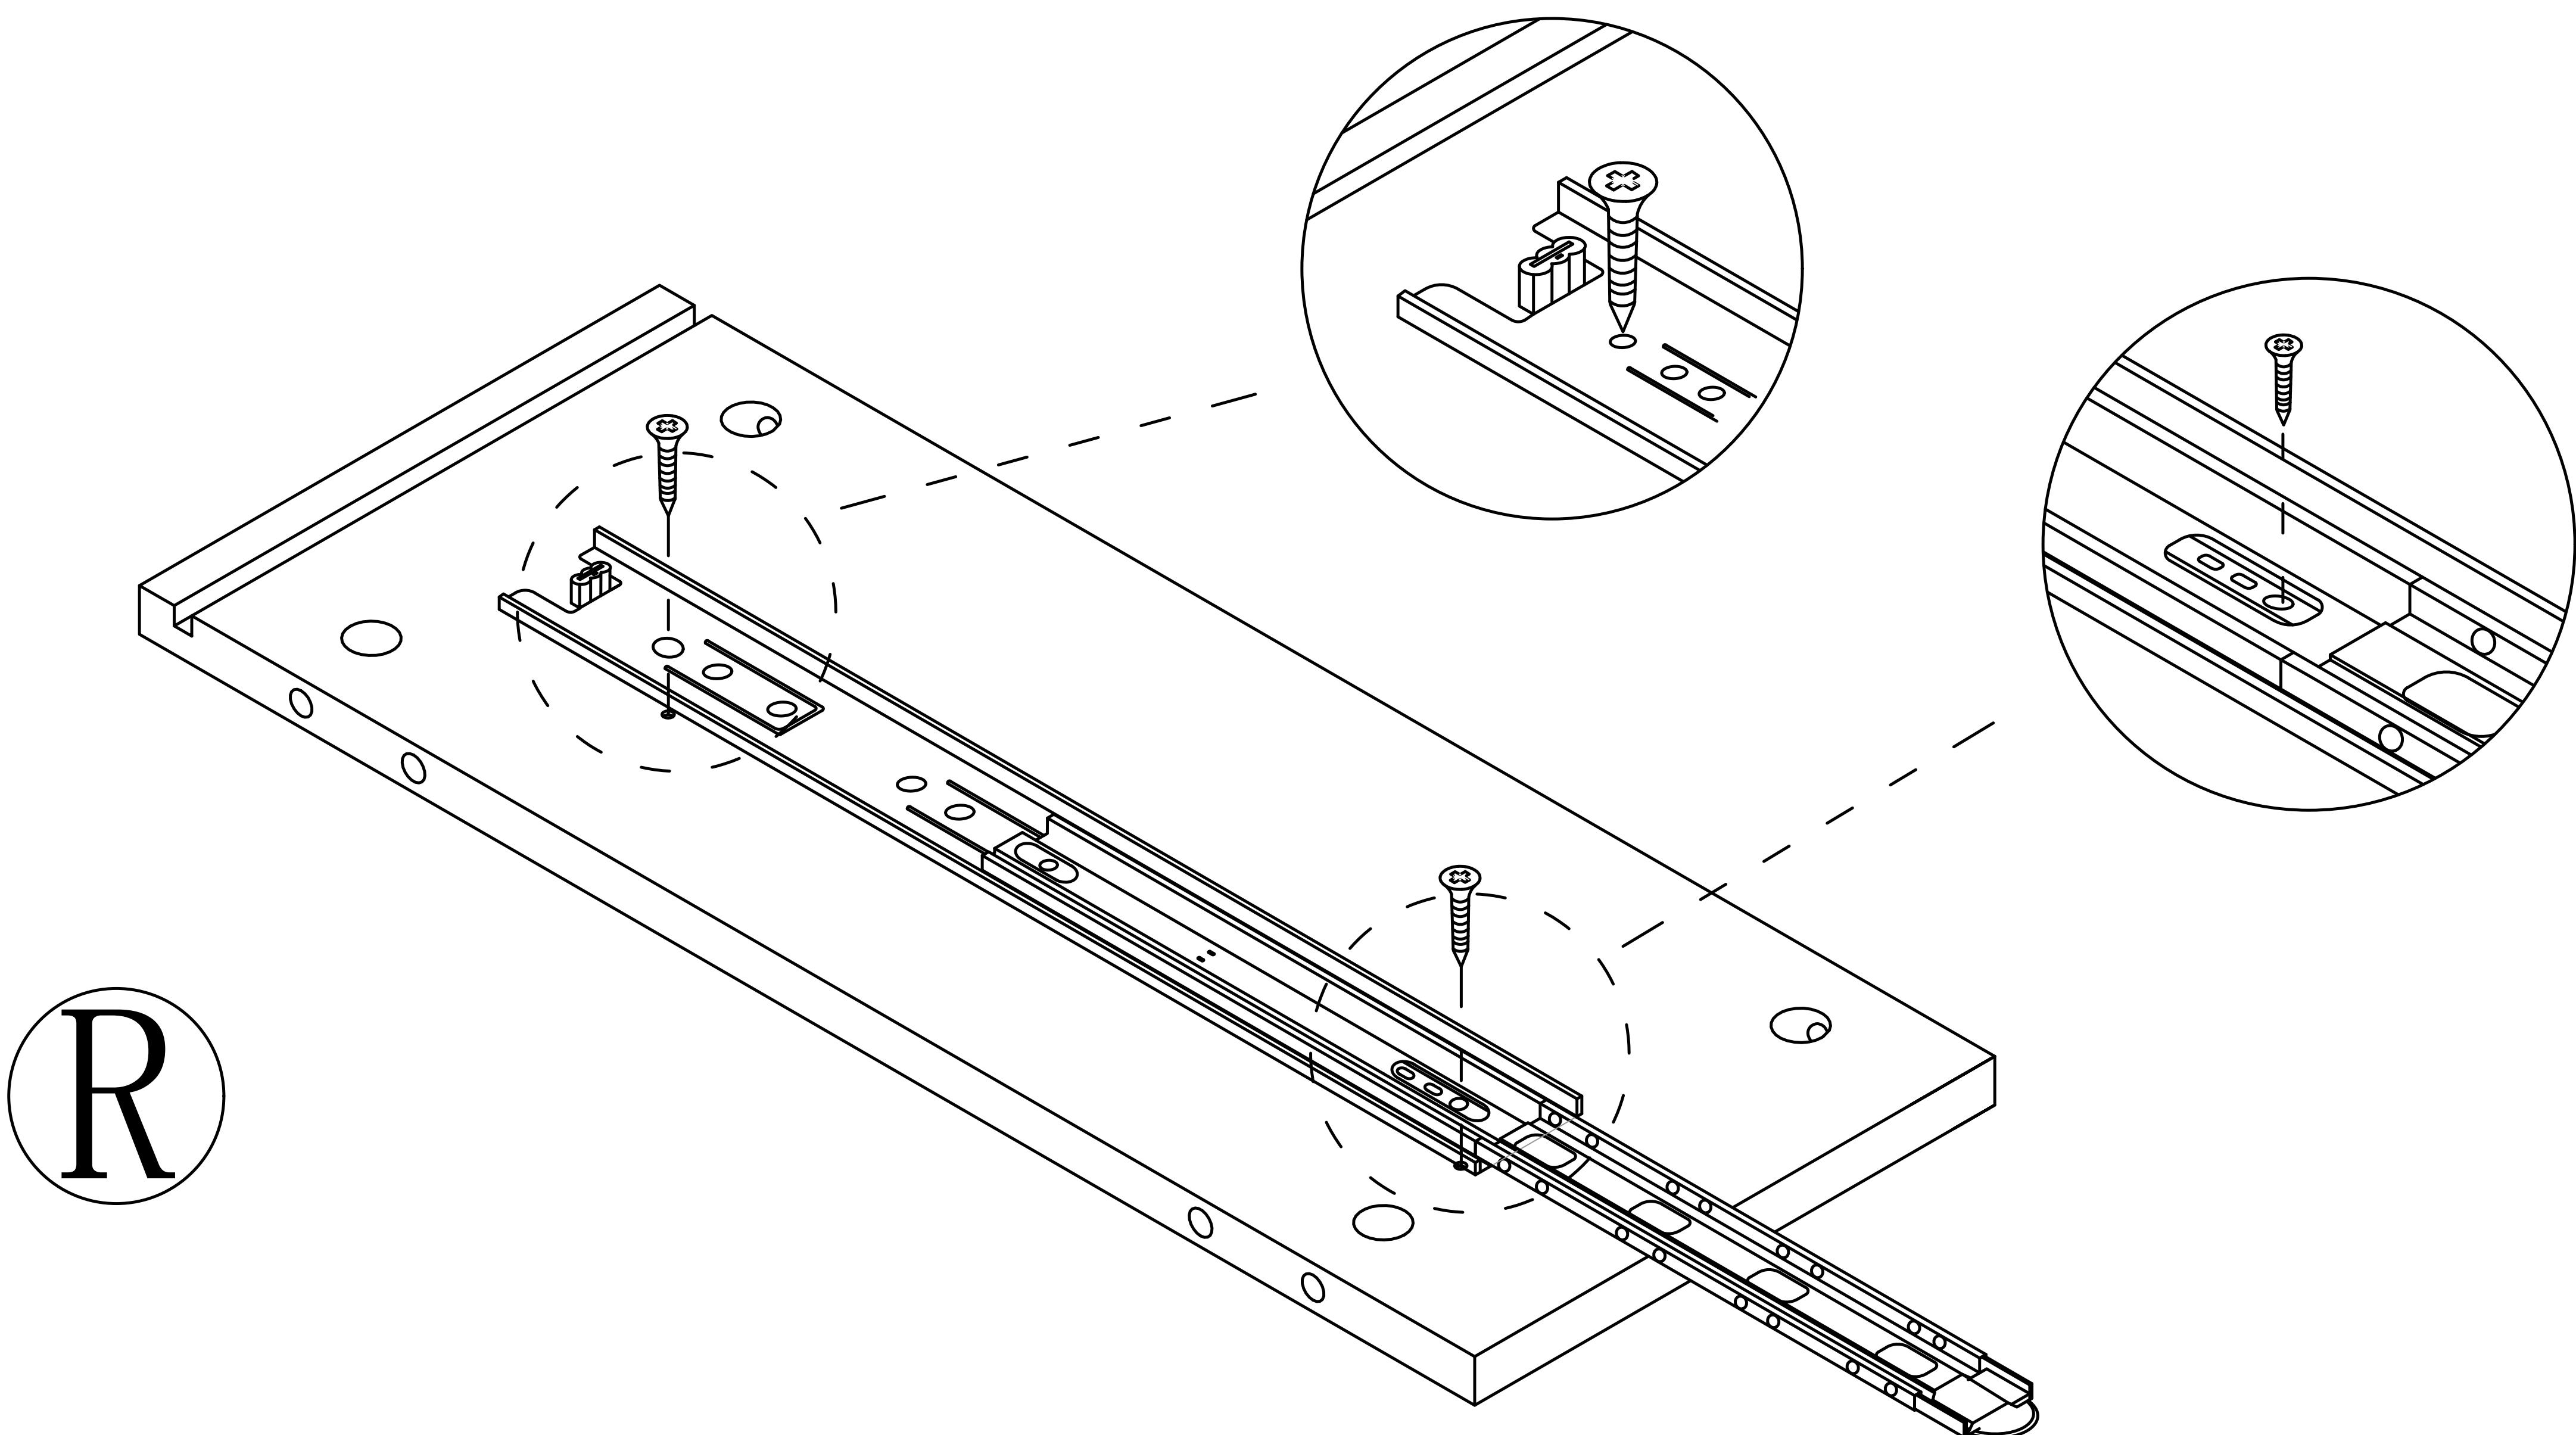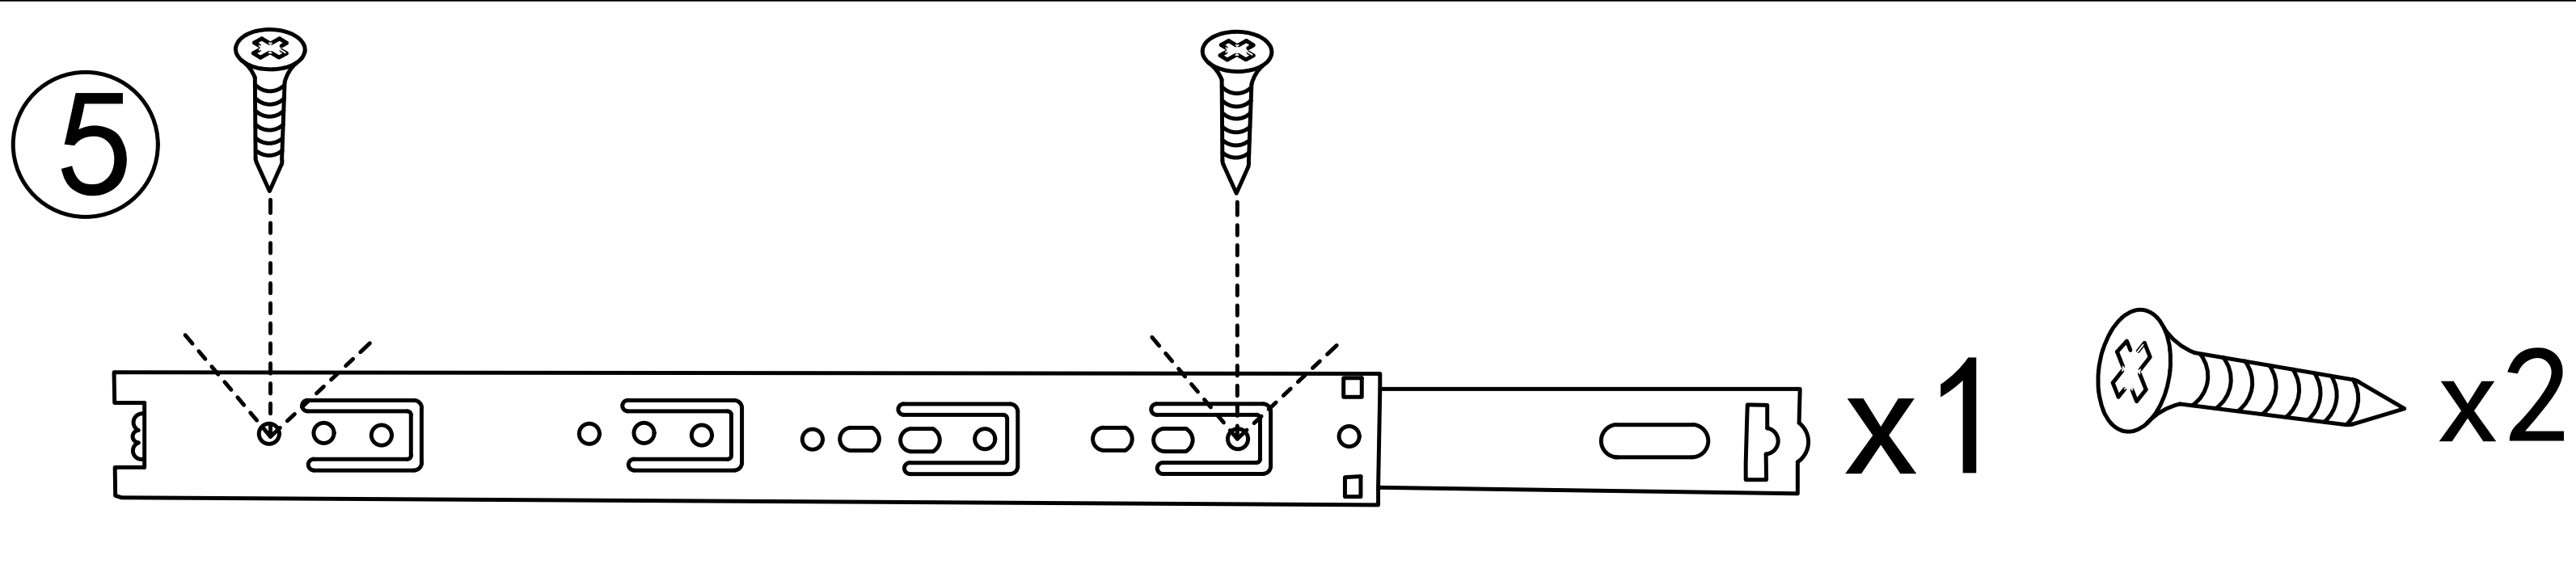

Paper templates can also be used here

Paper templates are disposable items that can be discarded after use


Step 51

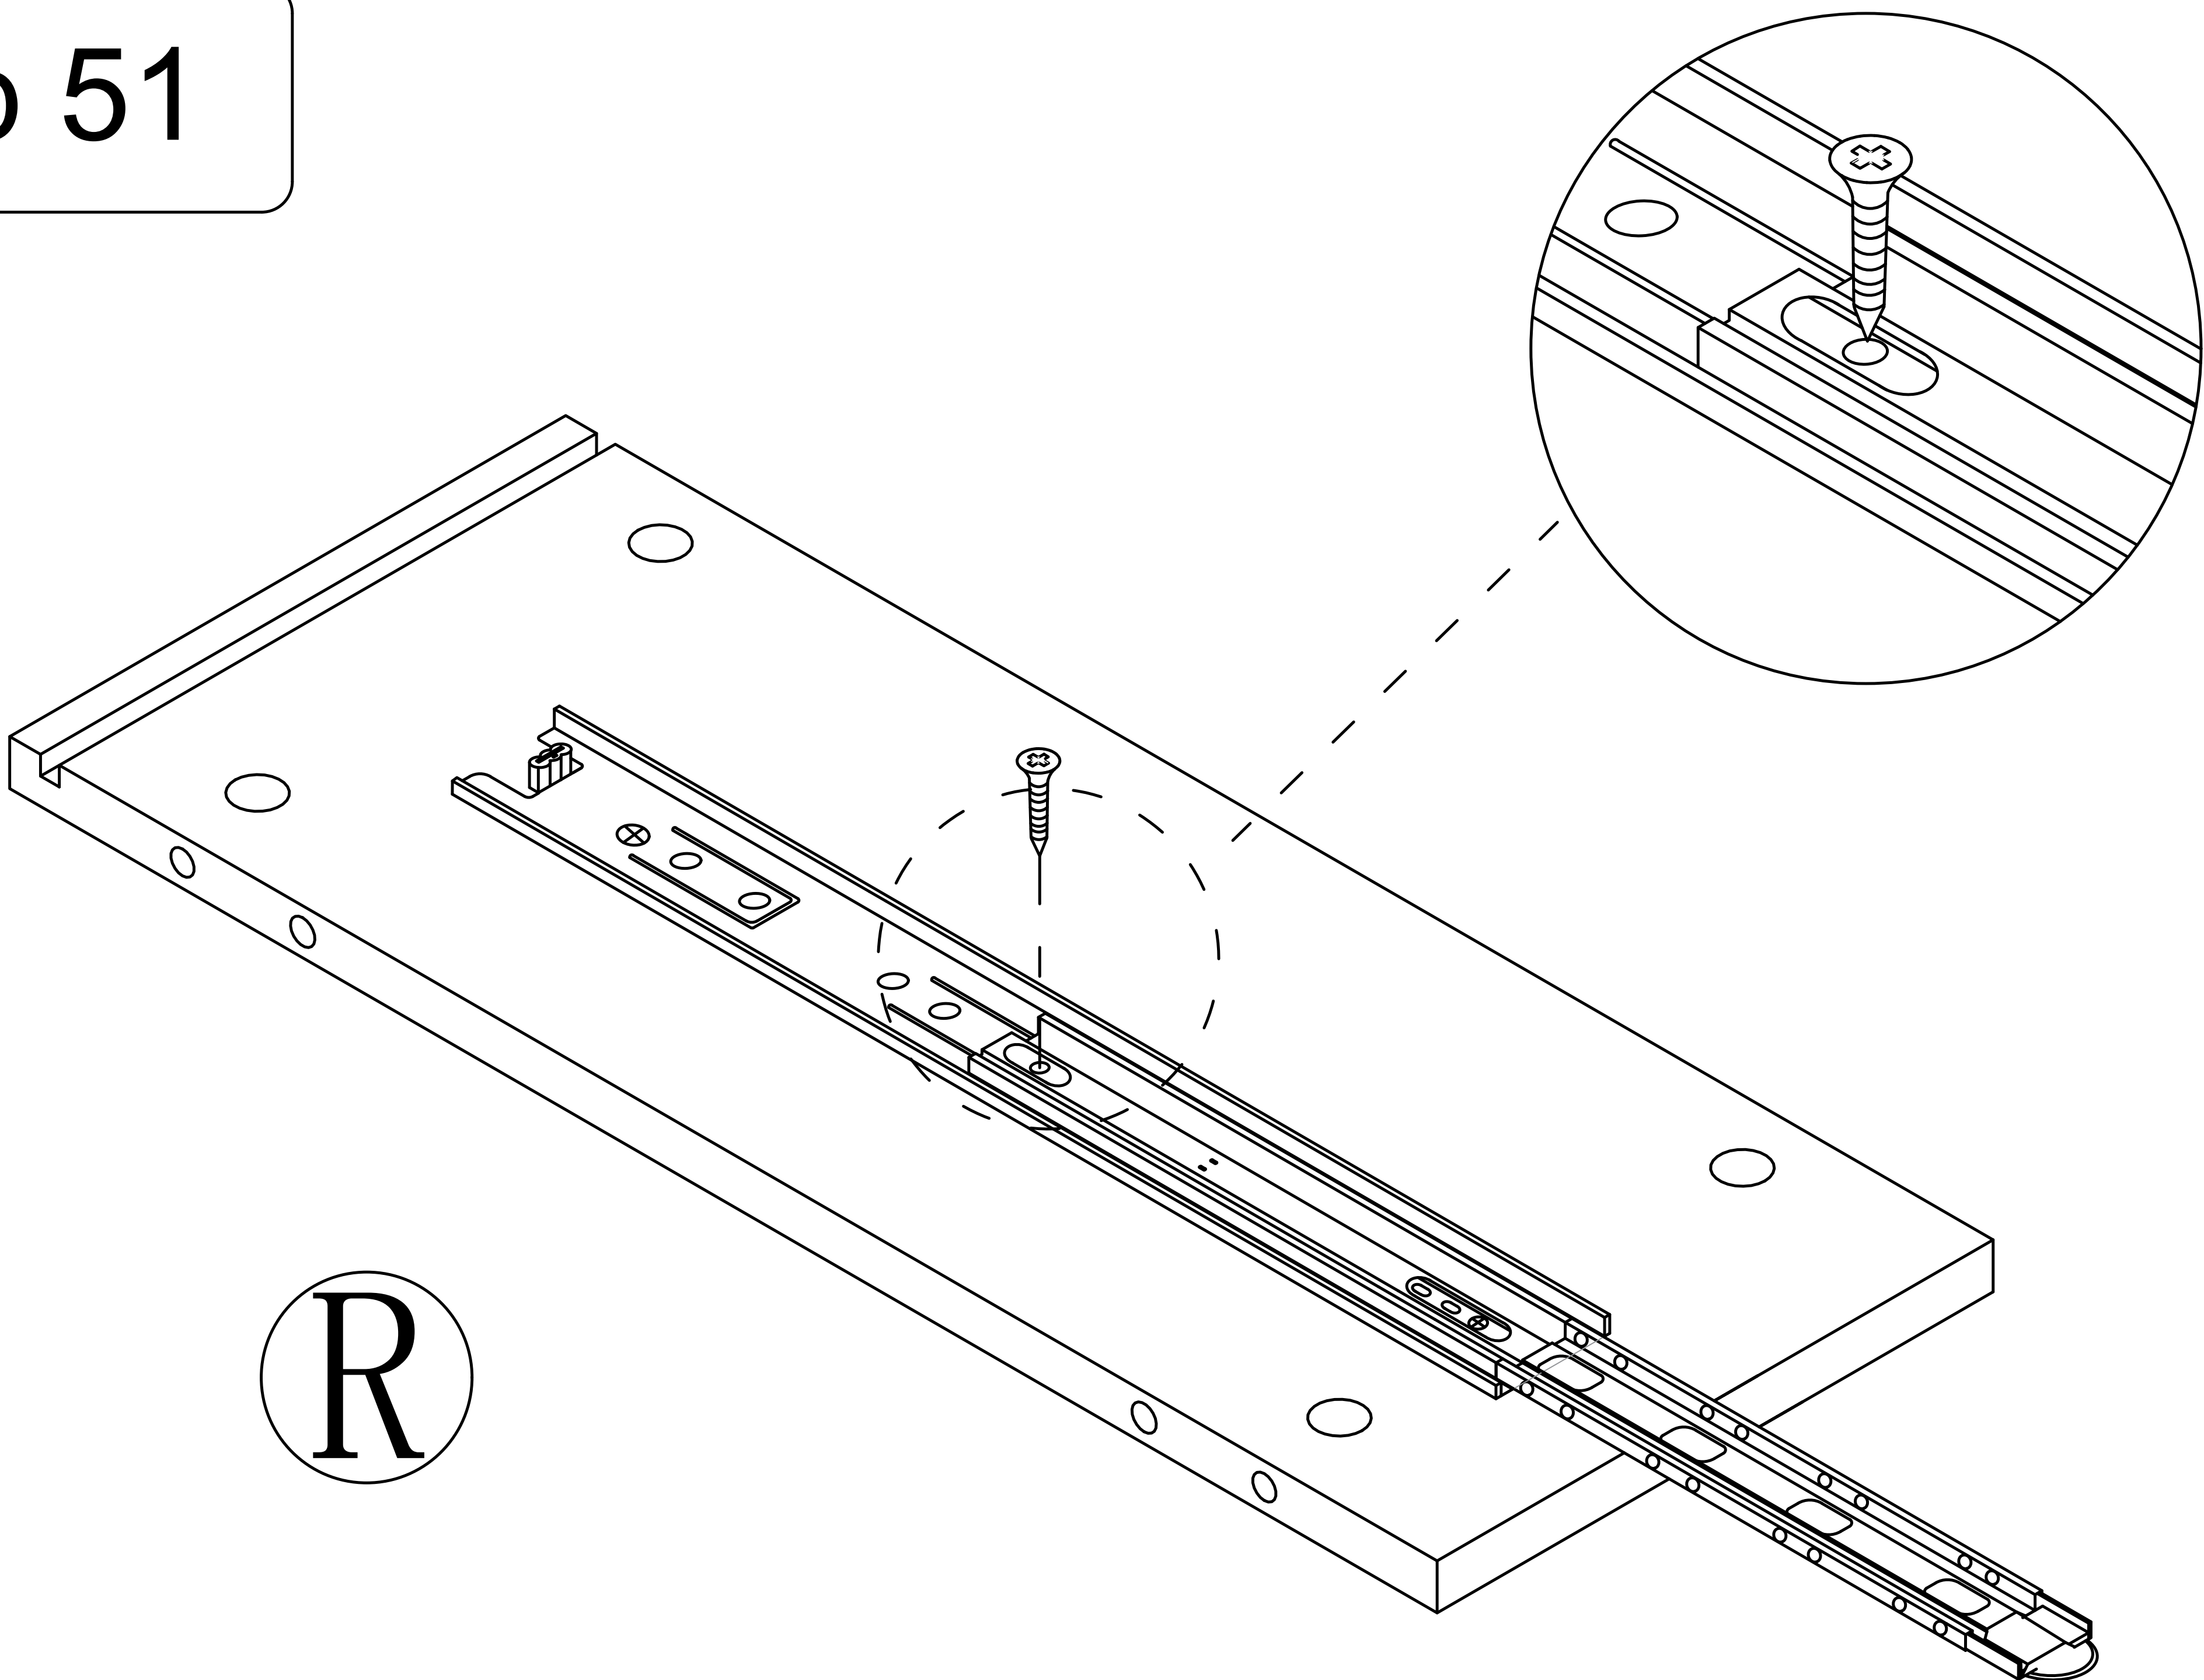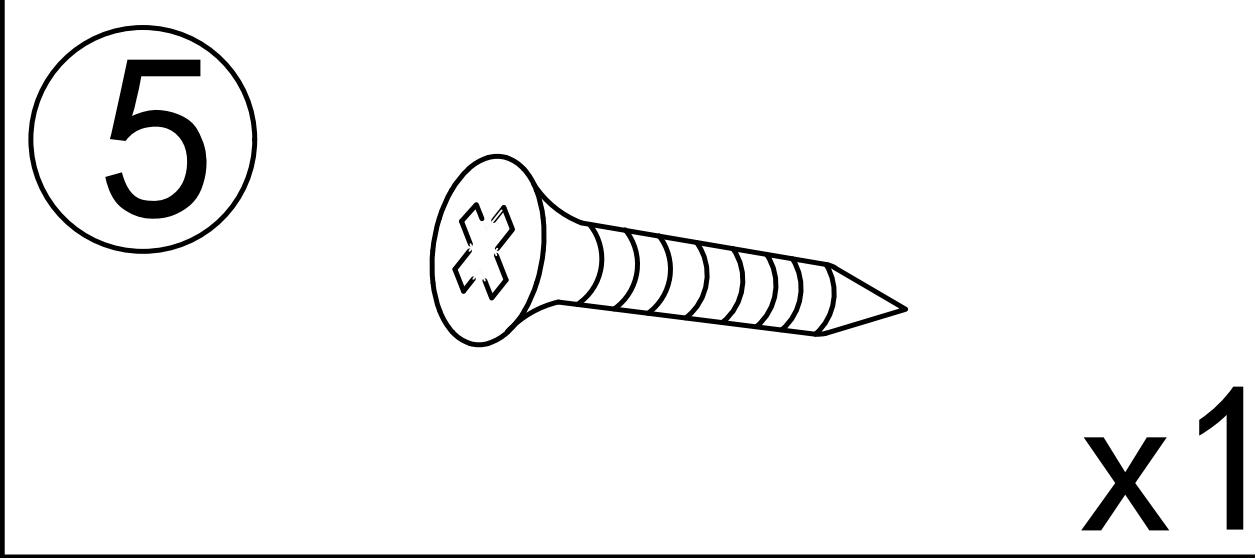


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 52


- 1

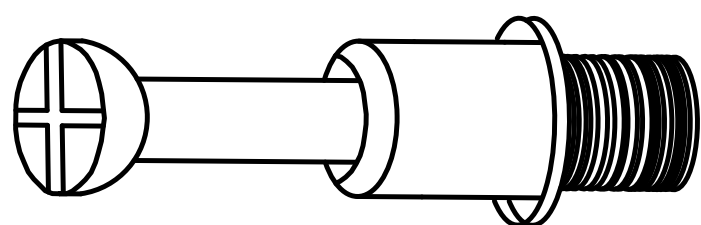

x2
- 14

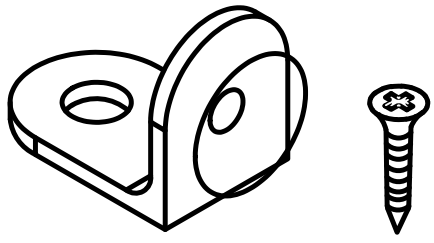


x1

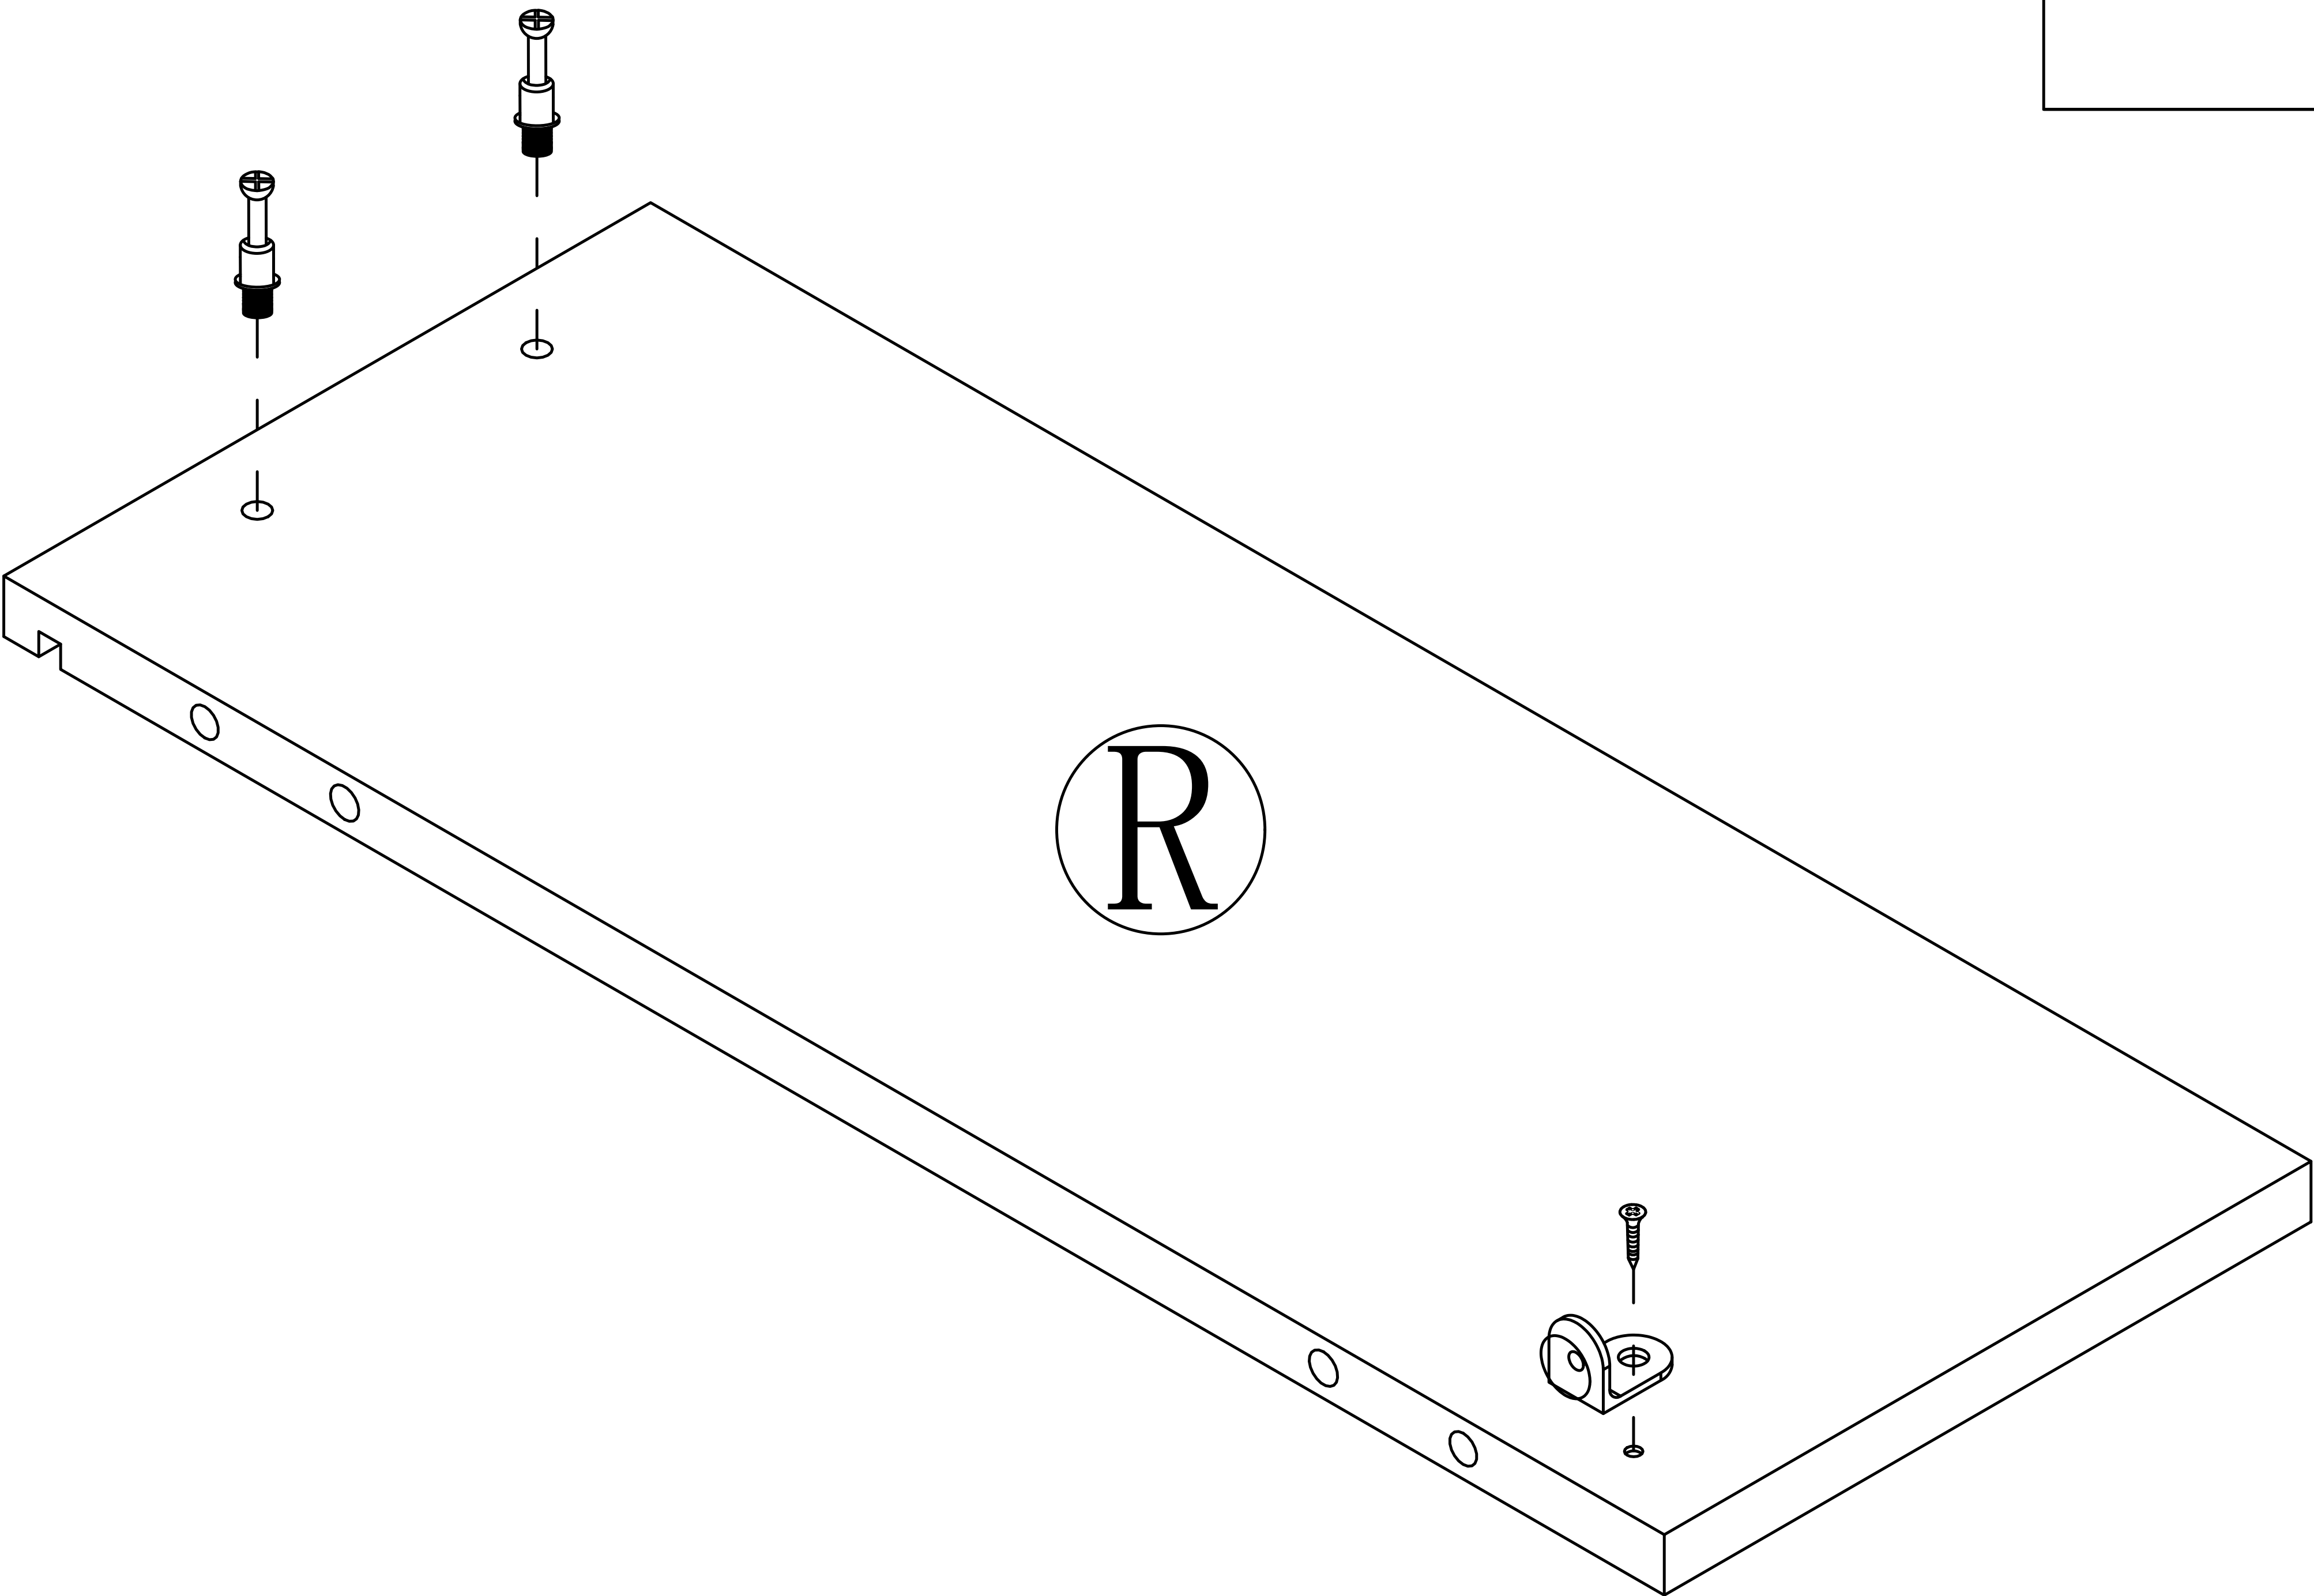


Step 53



- 2

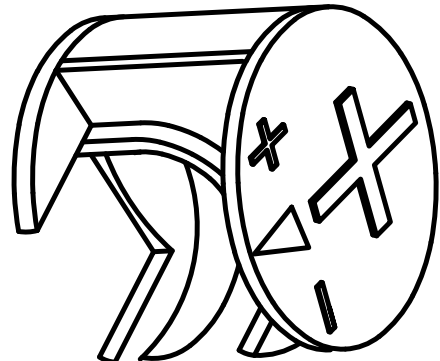


x4

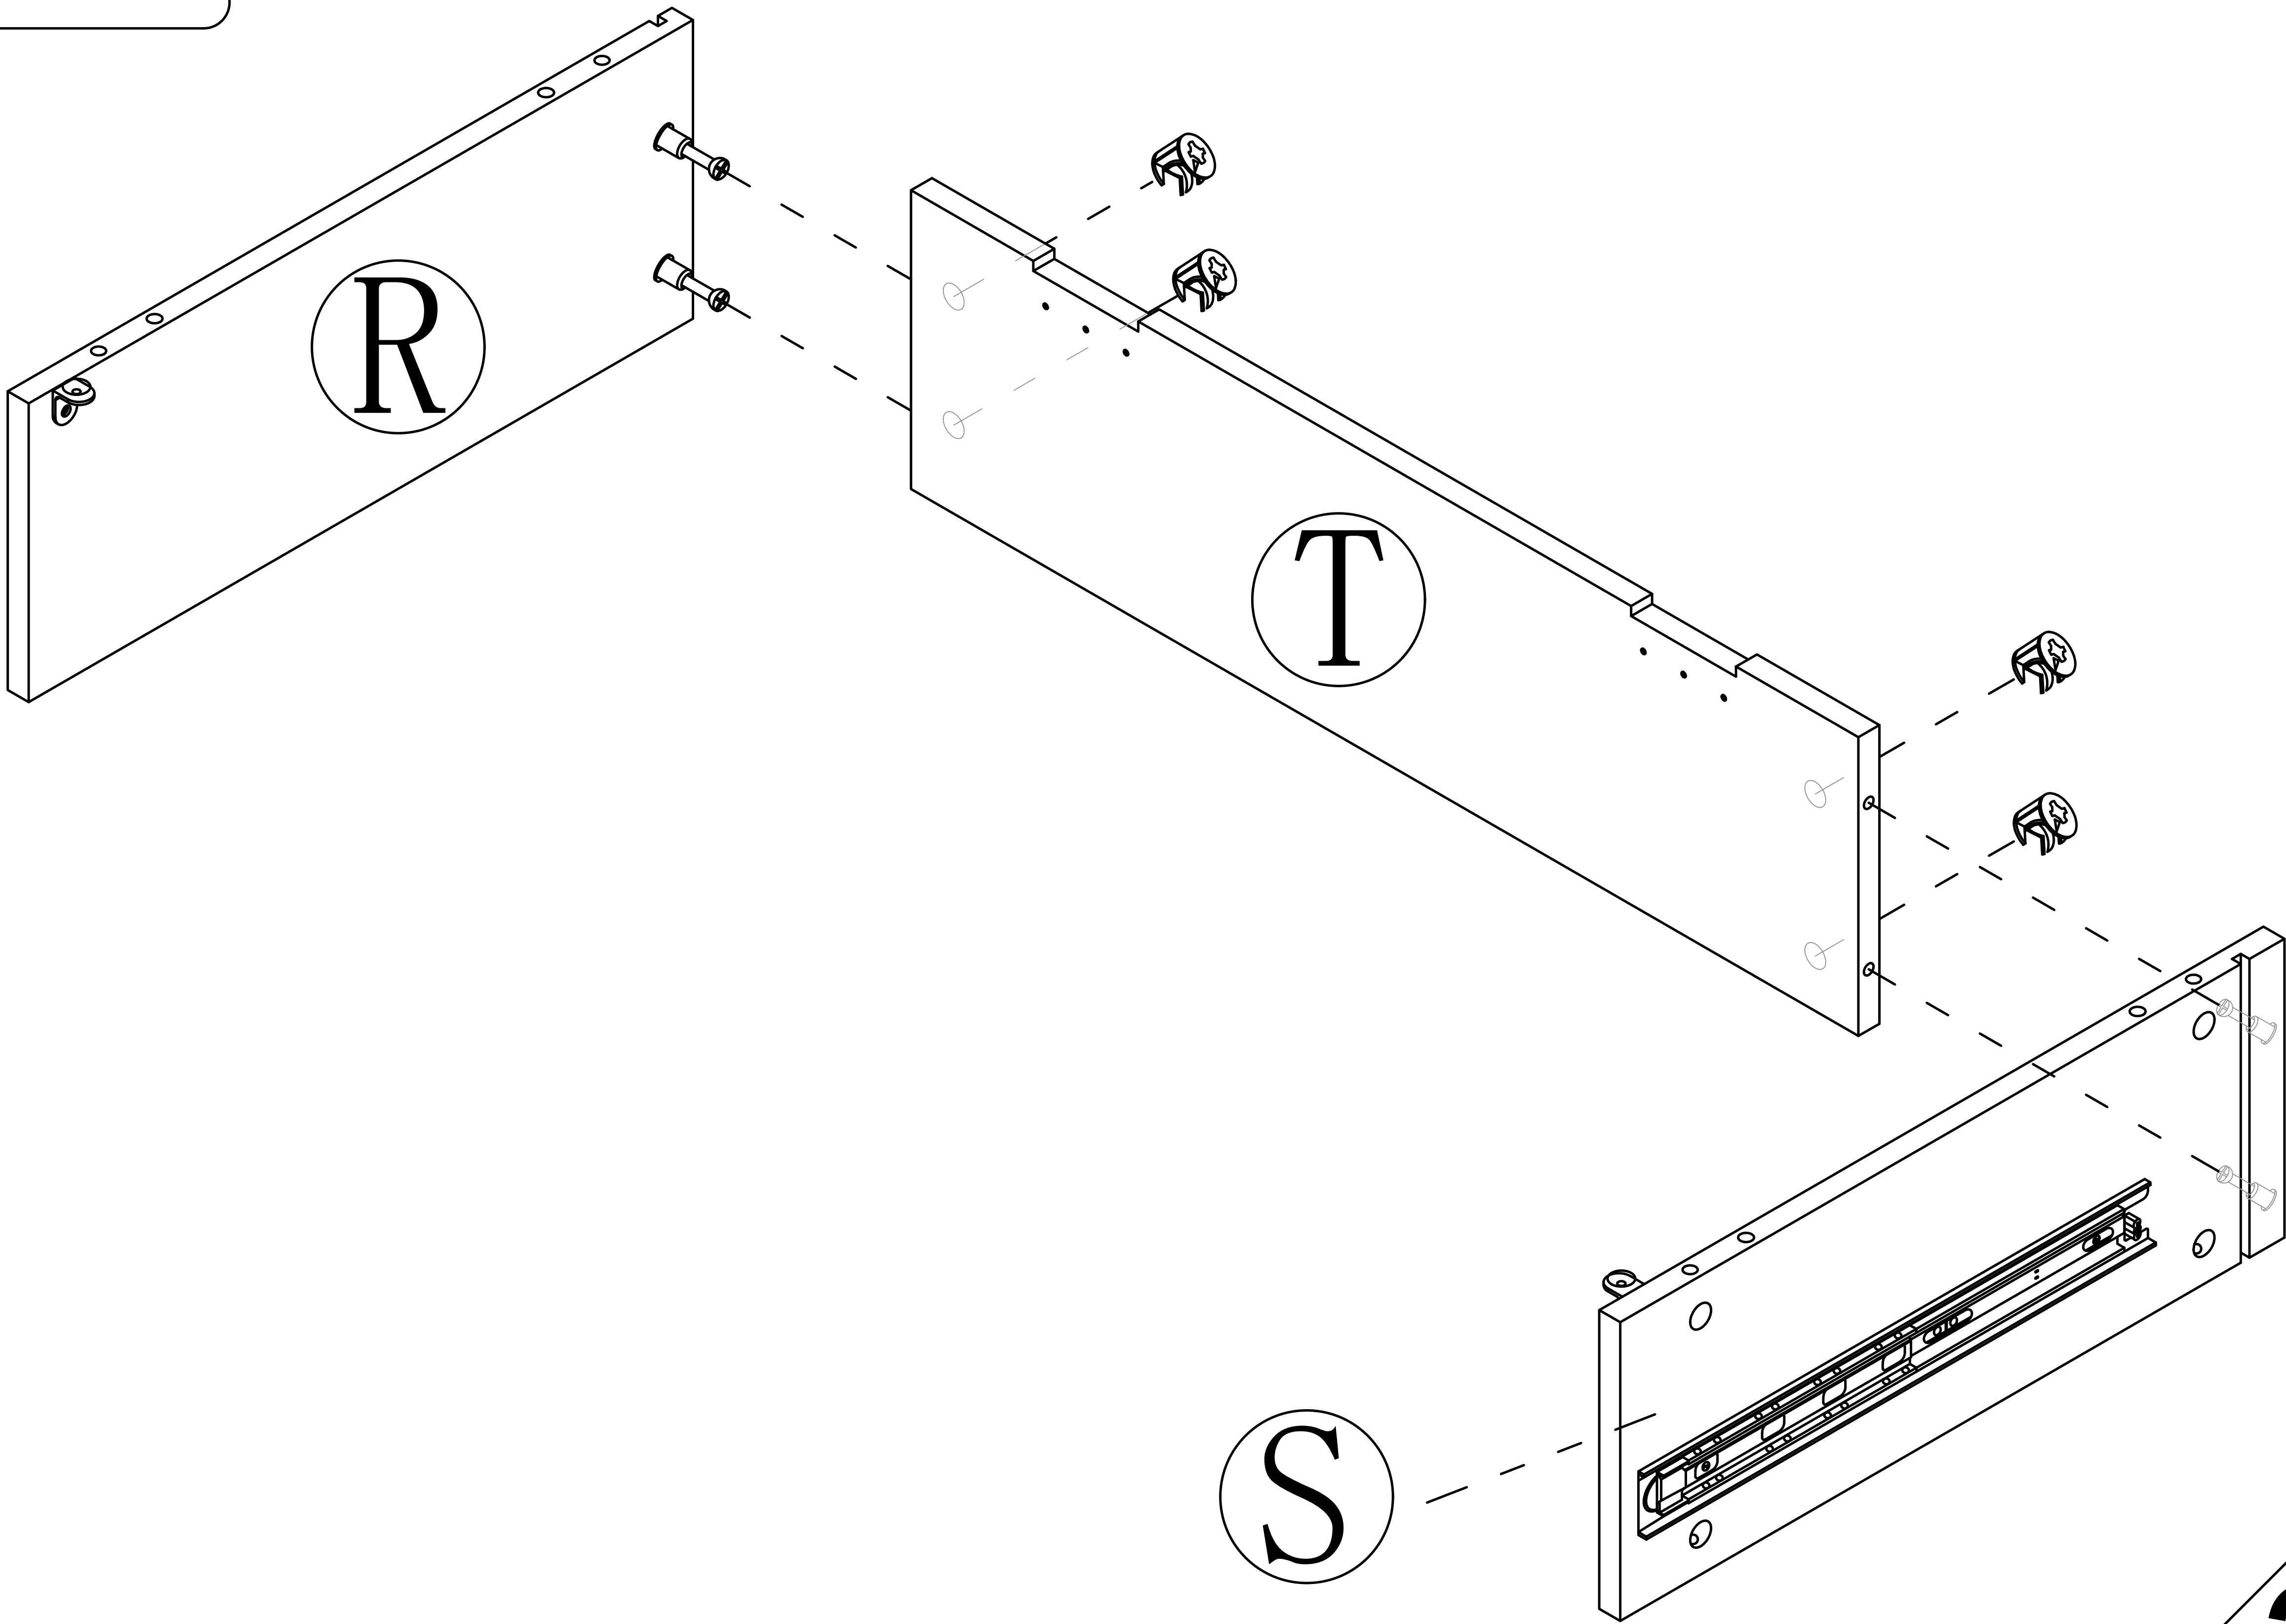


Step 54

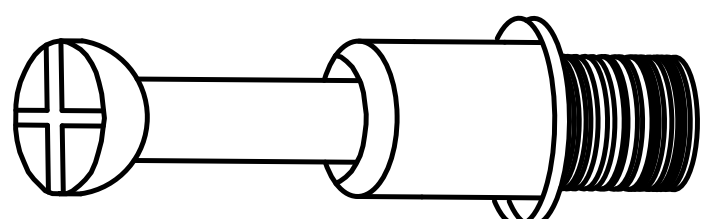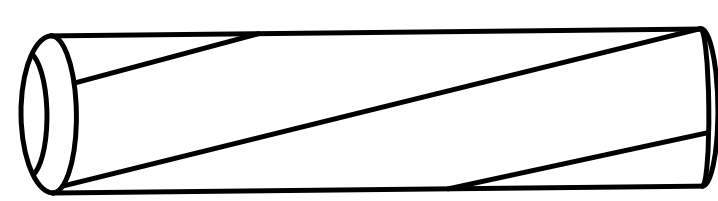
- | | | |
|---|---|----|
| 1 |  | x7 |
| 3 |  | x4 |

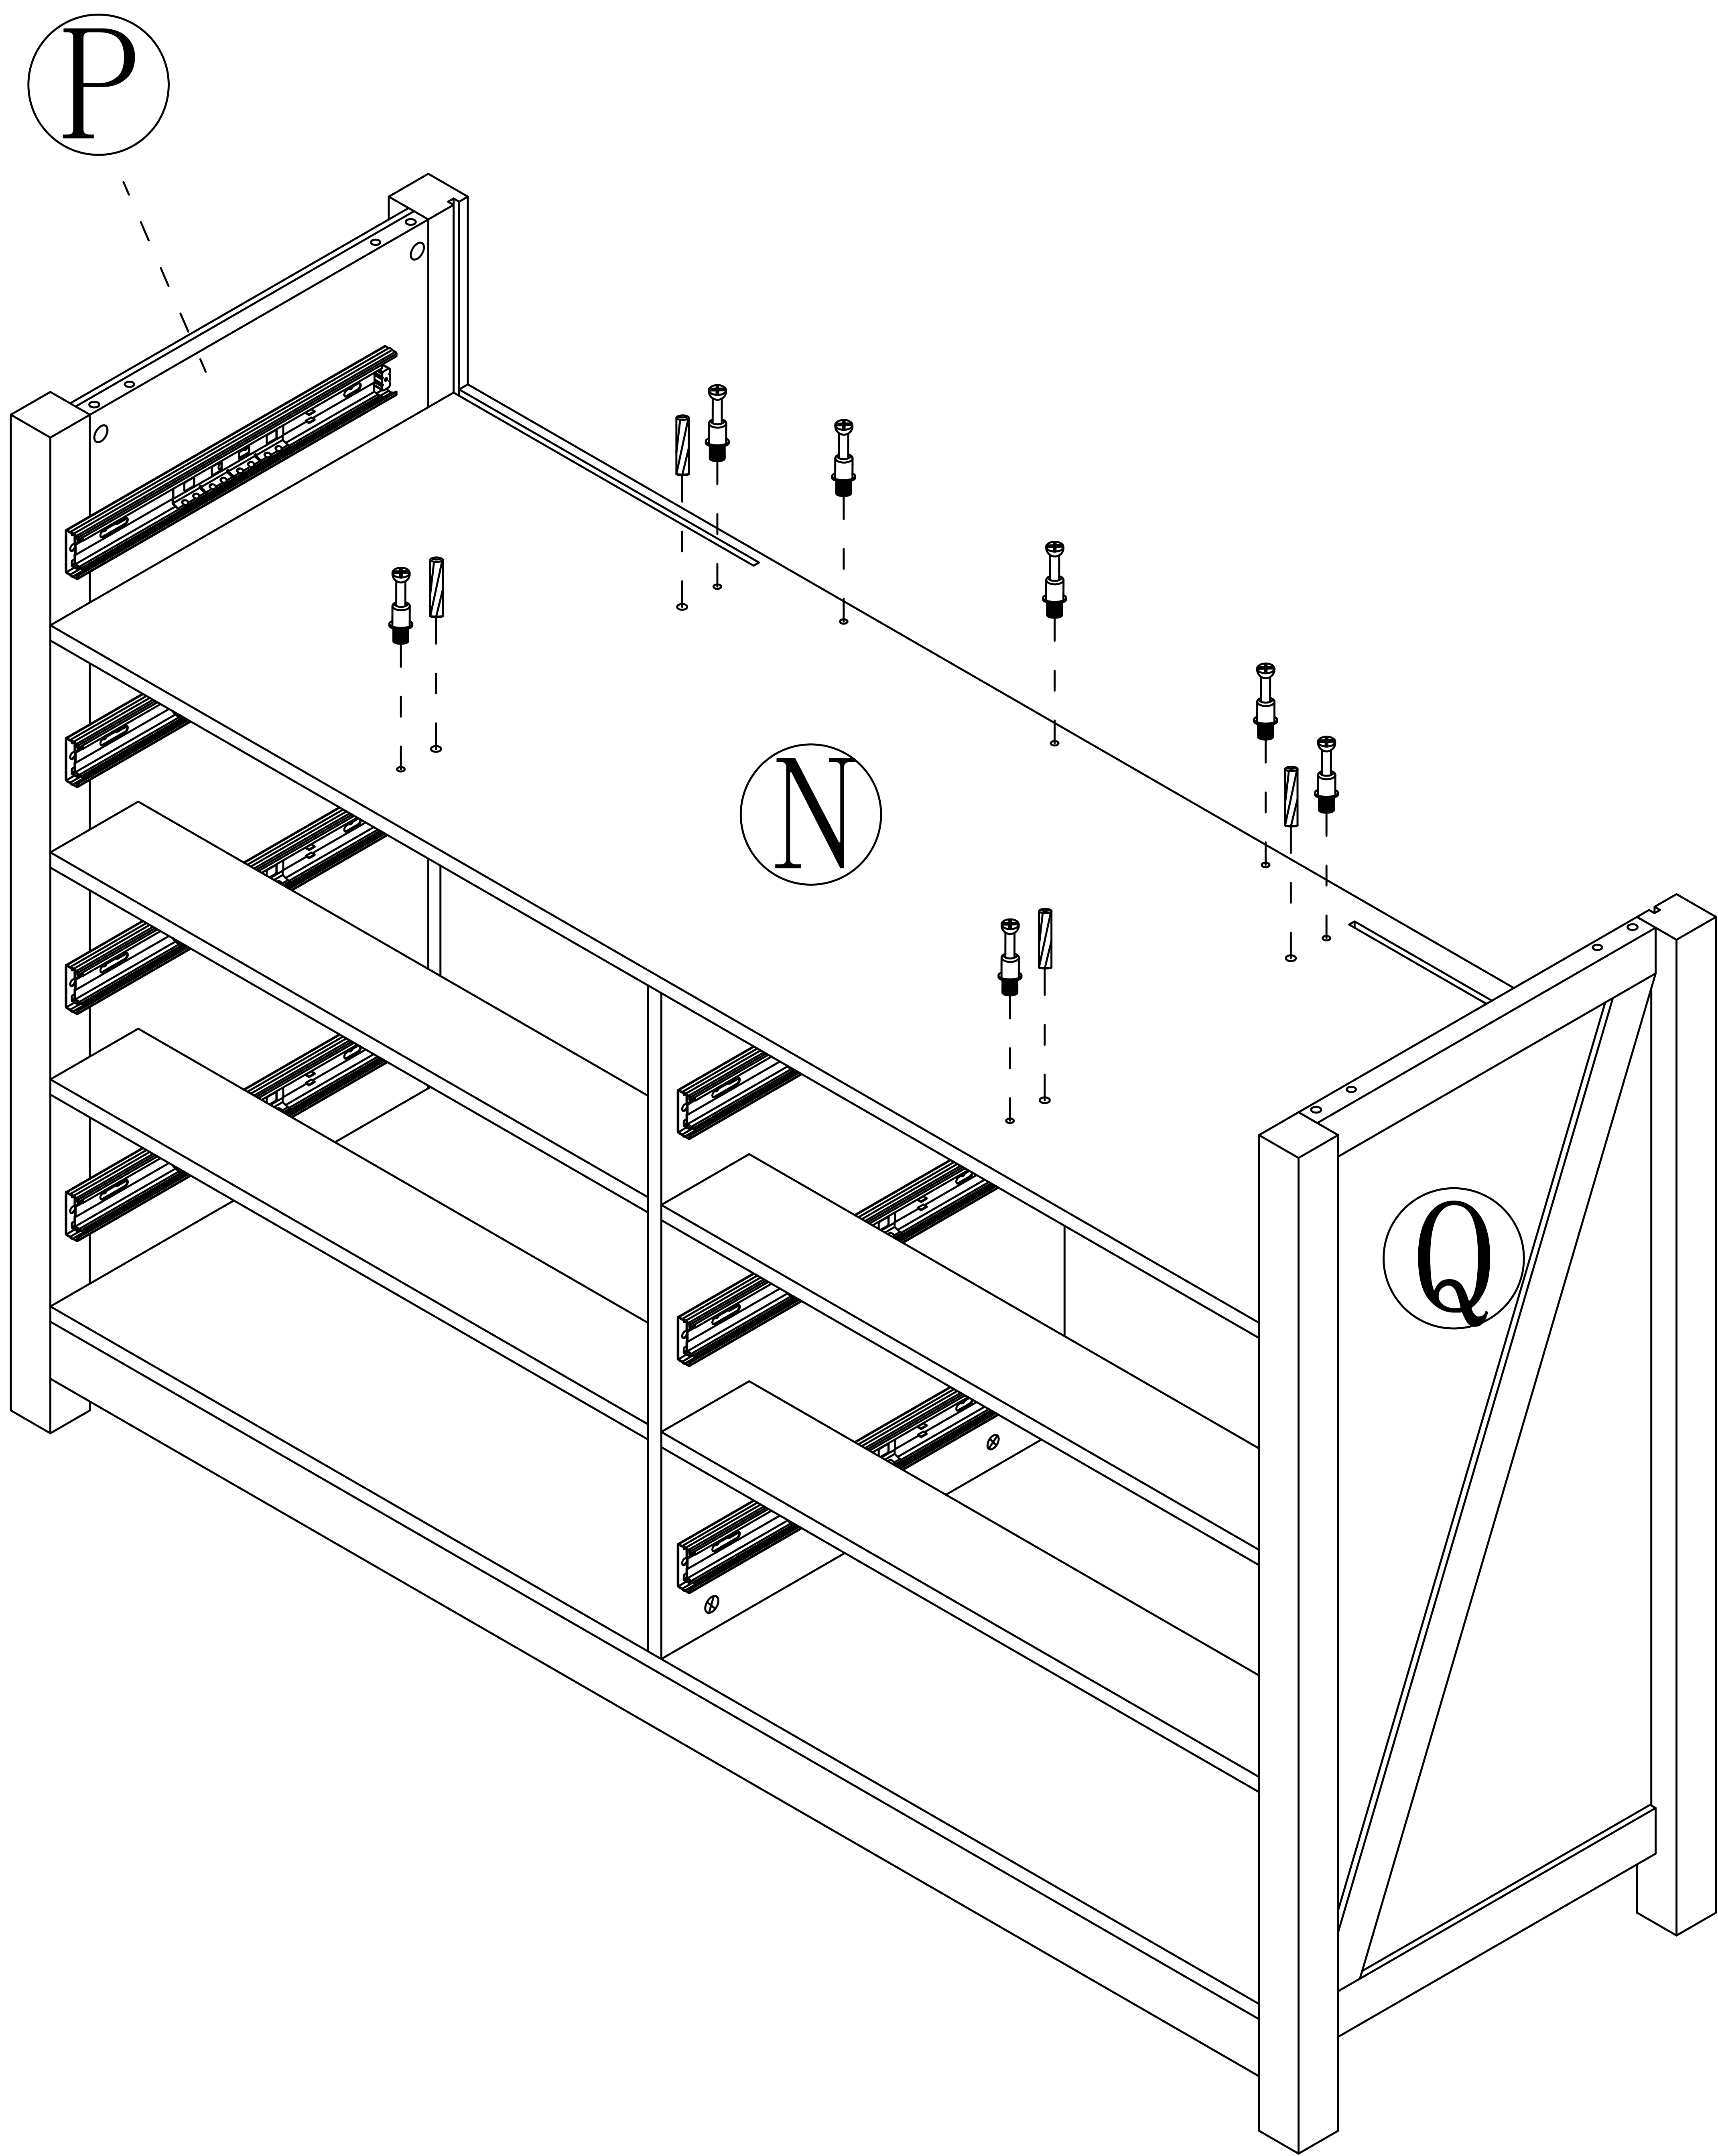

Step 55


2

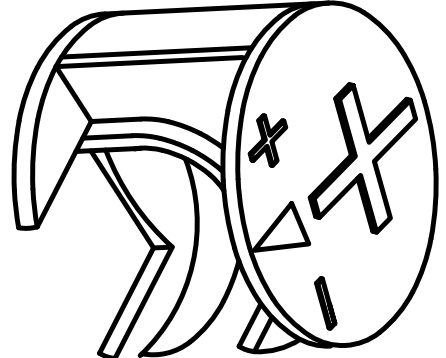 x7

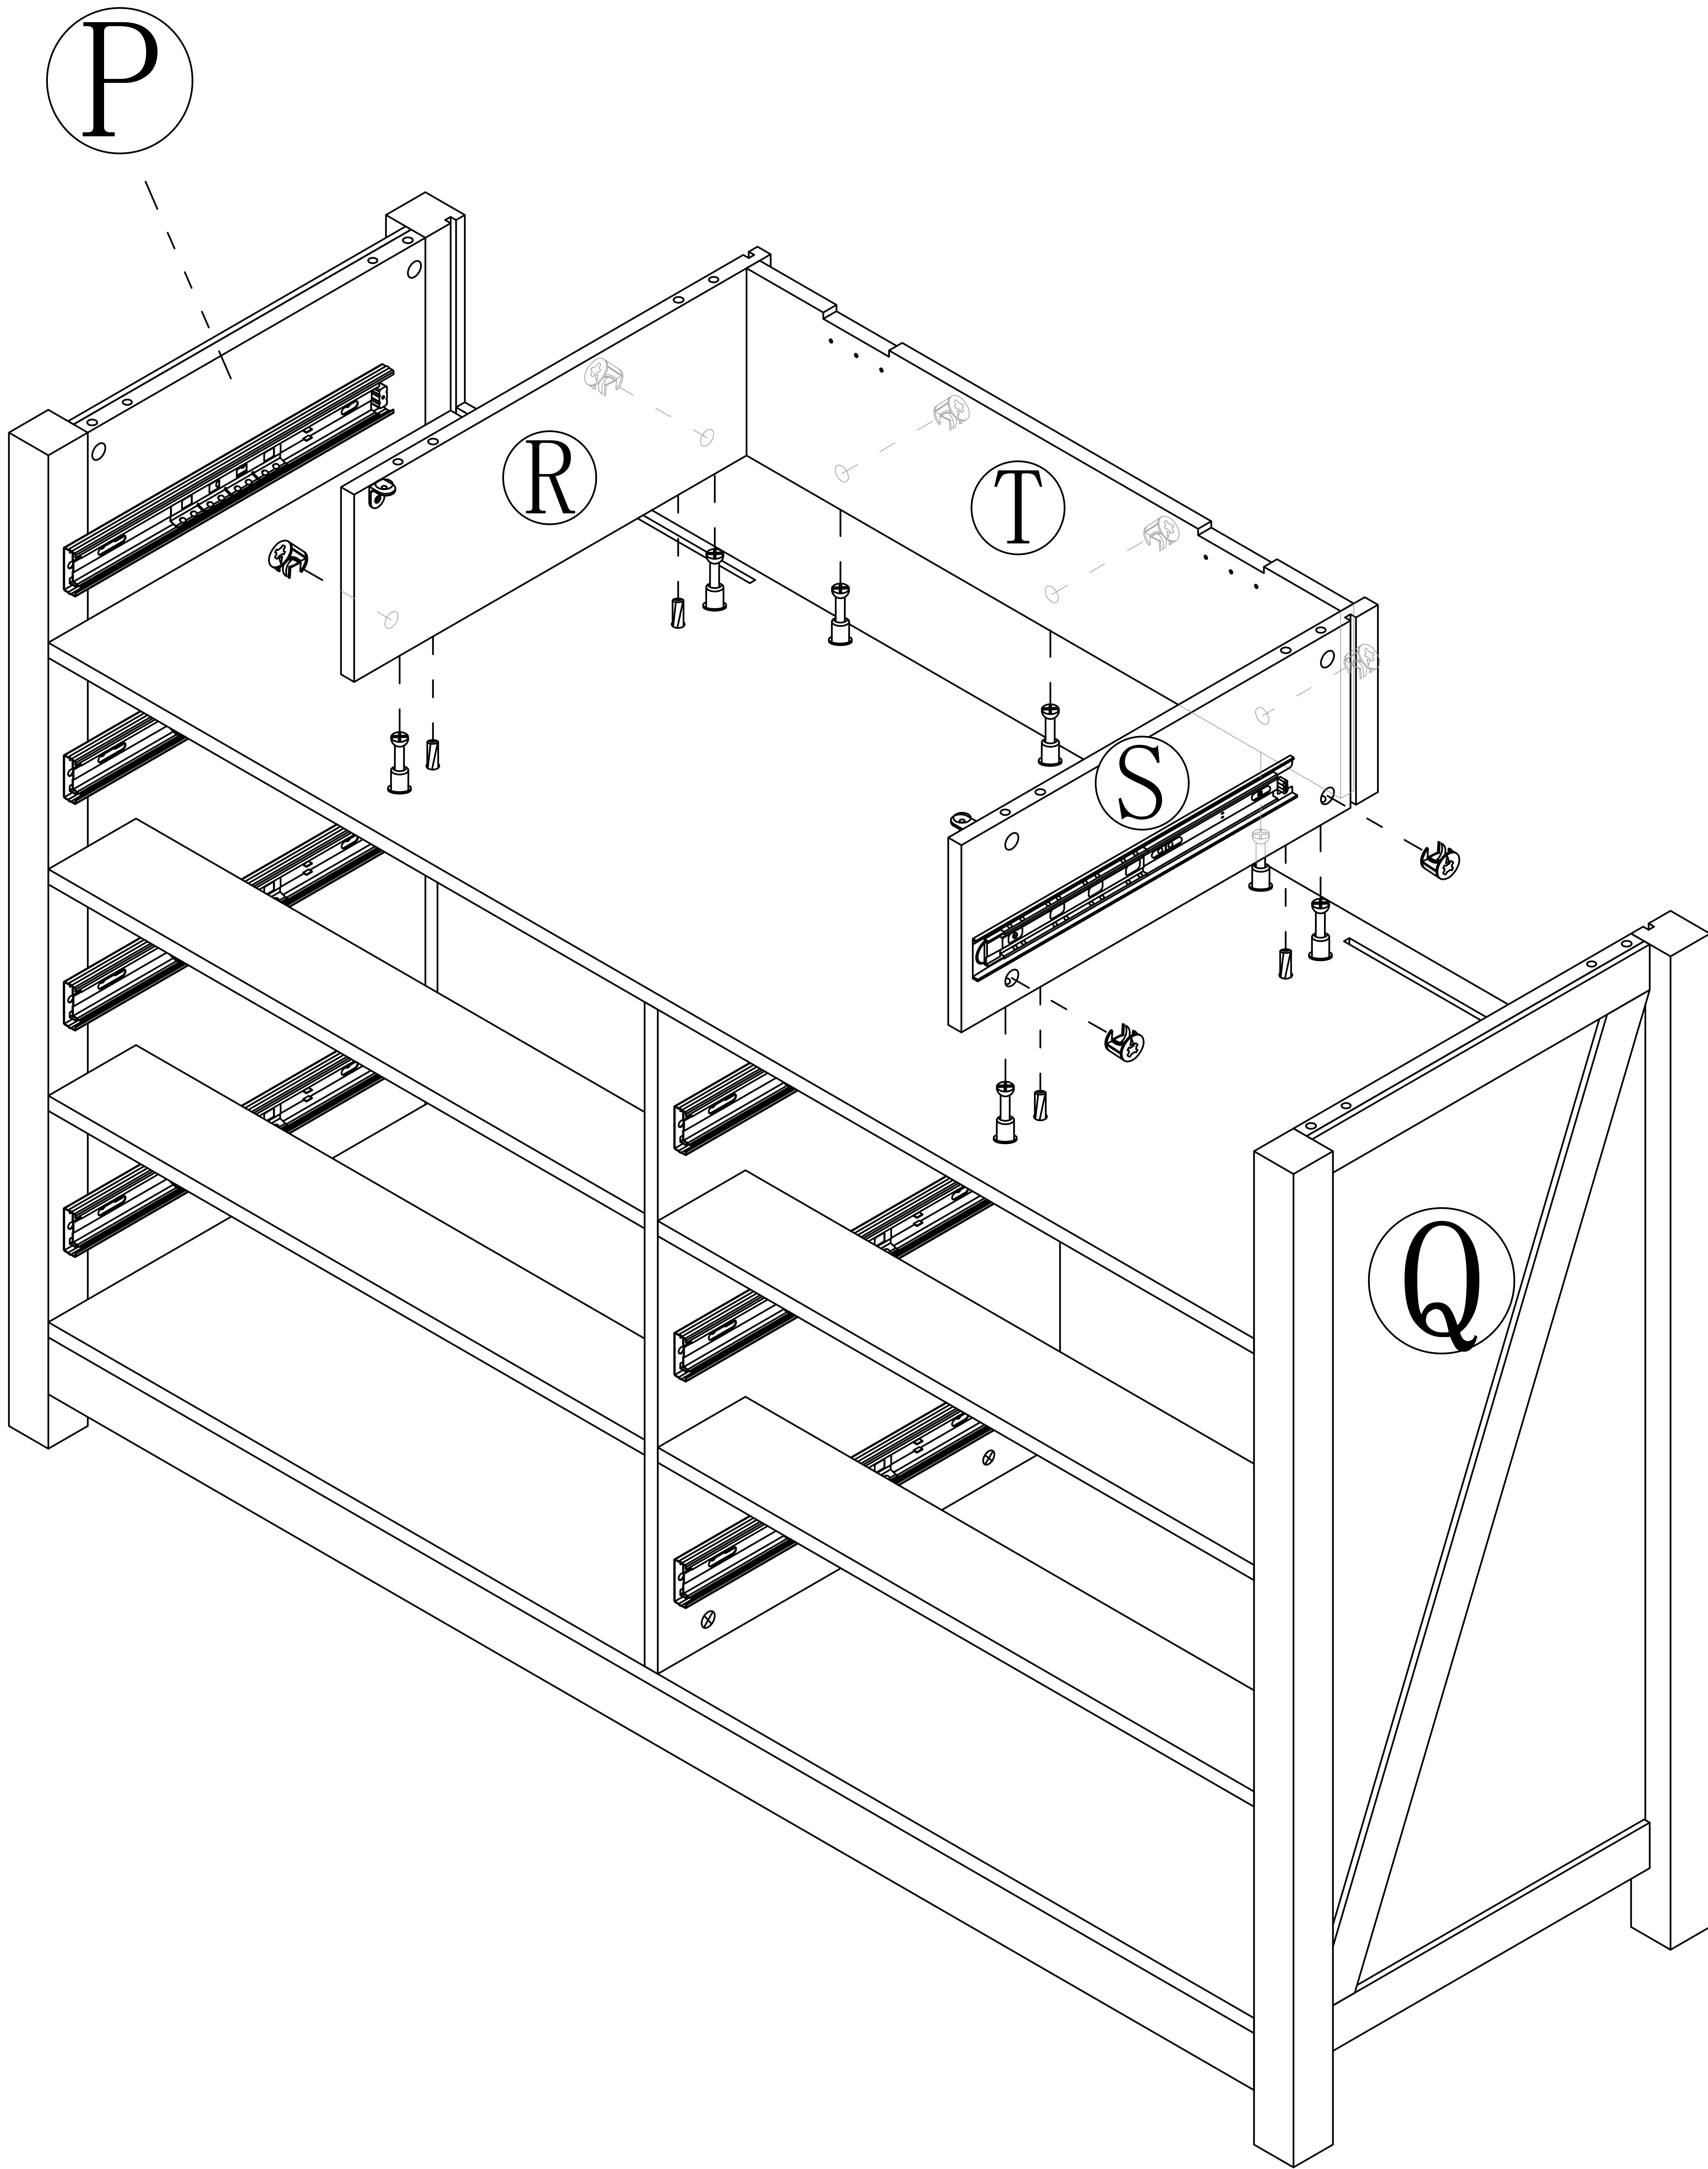


Step 56

3

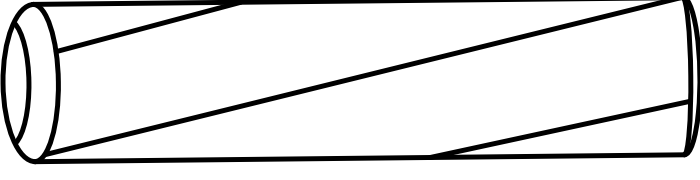


x8

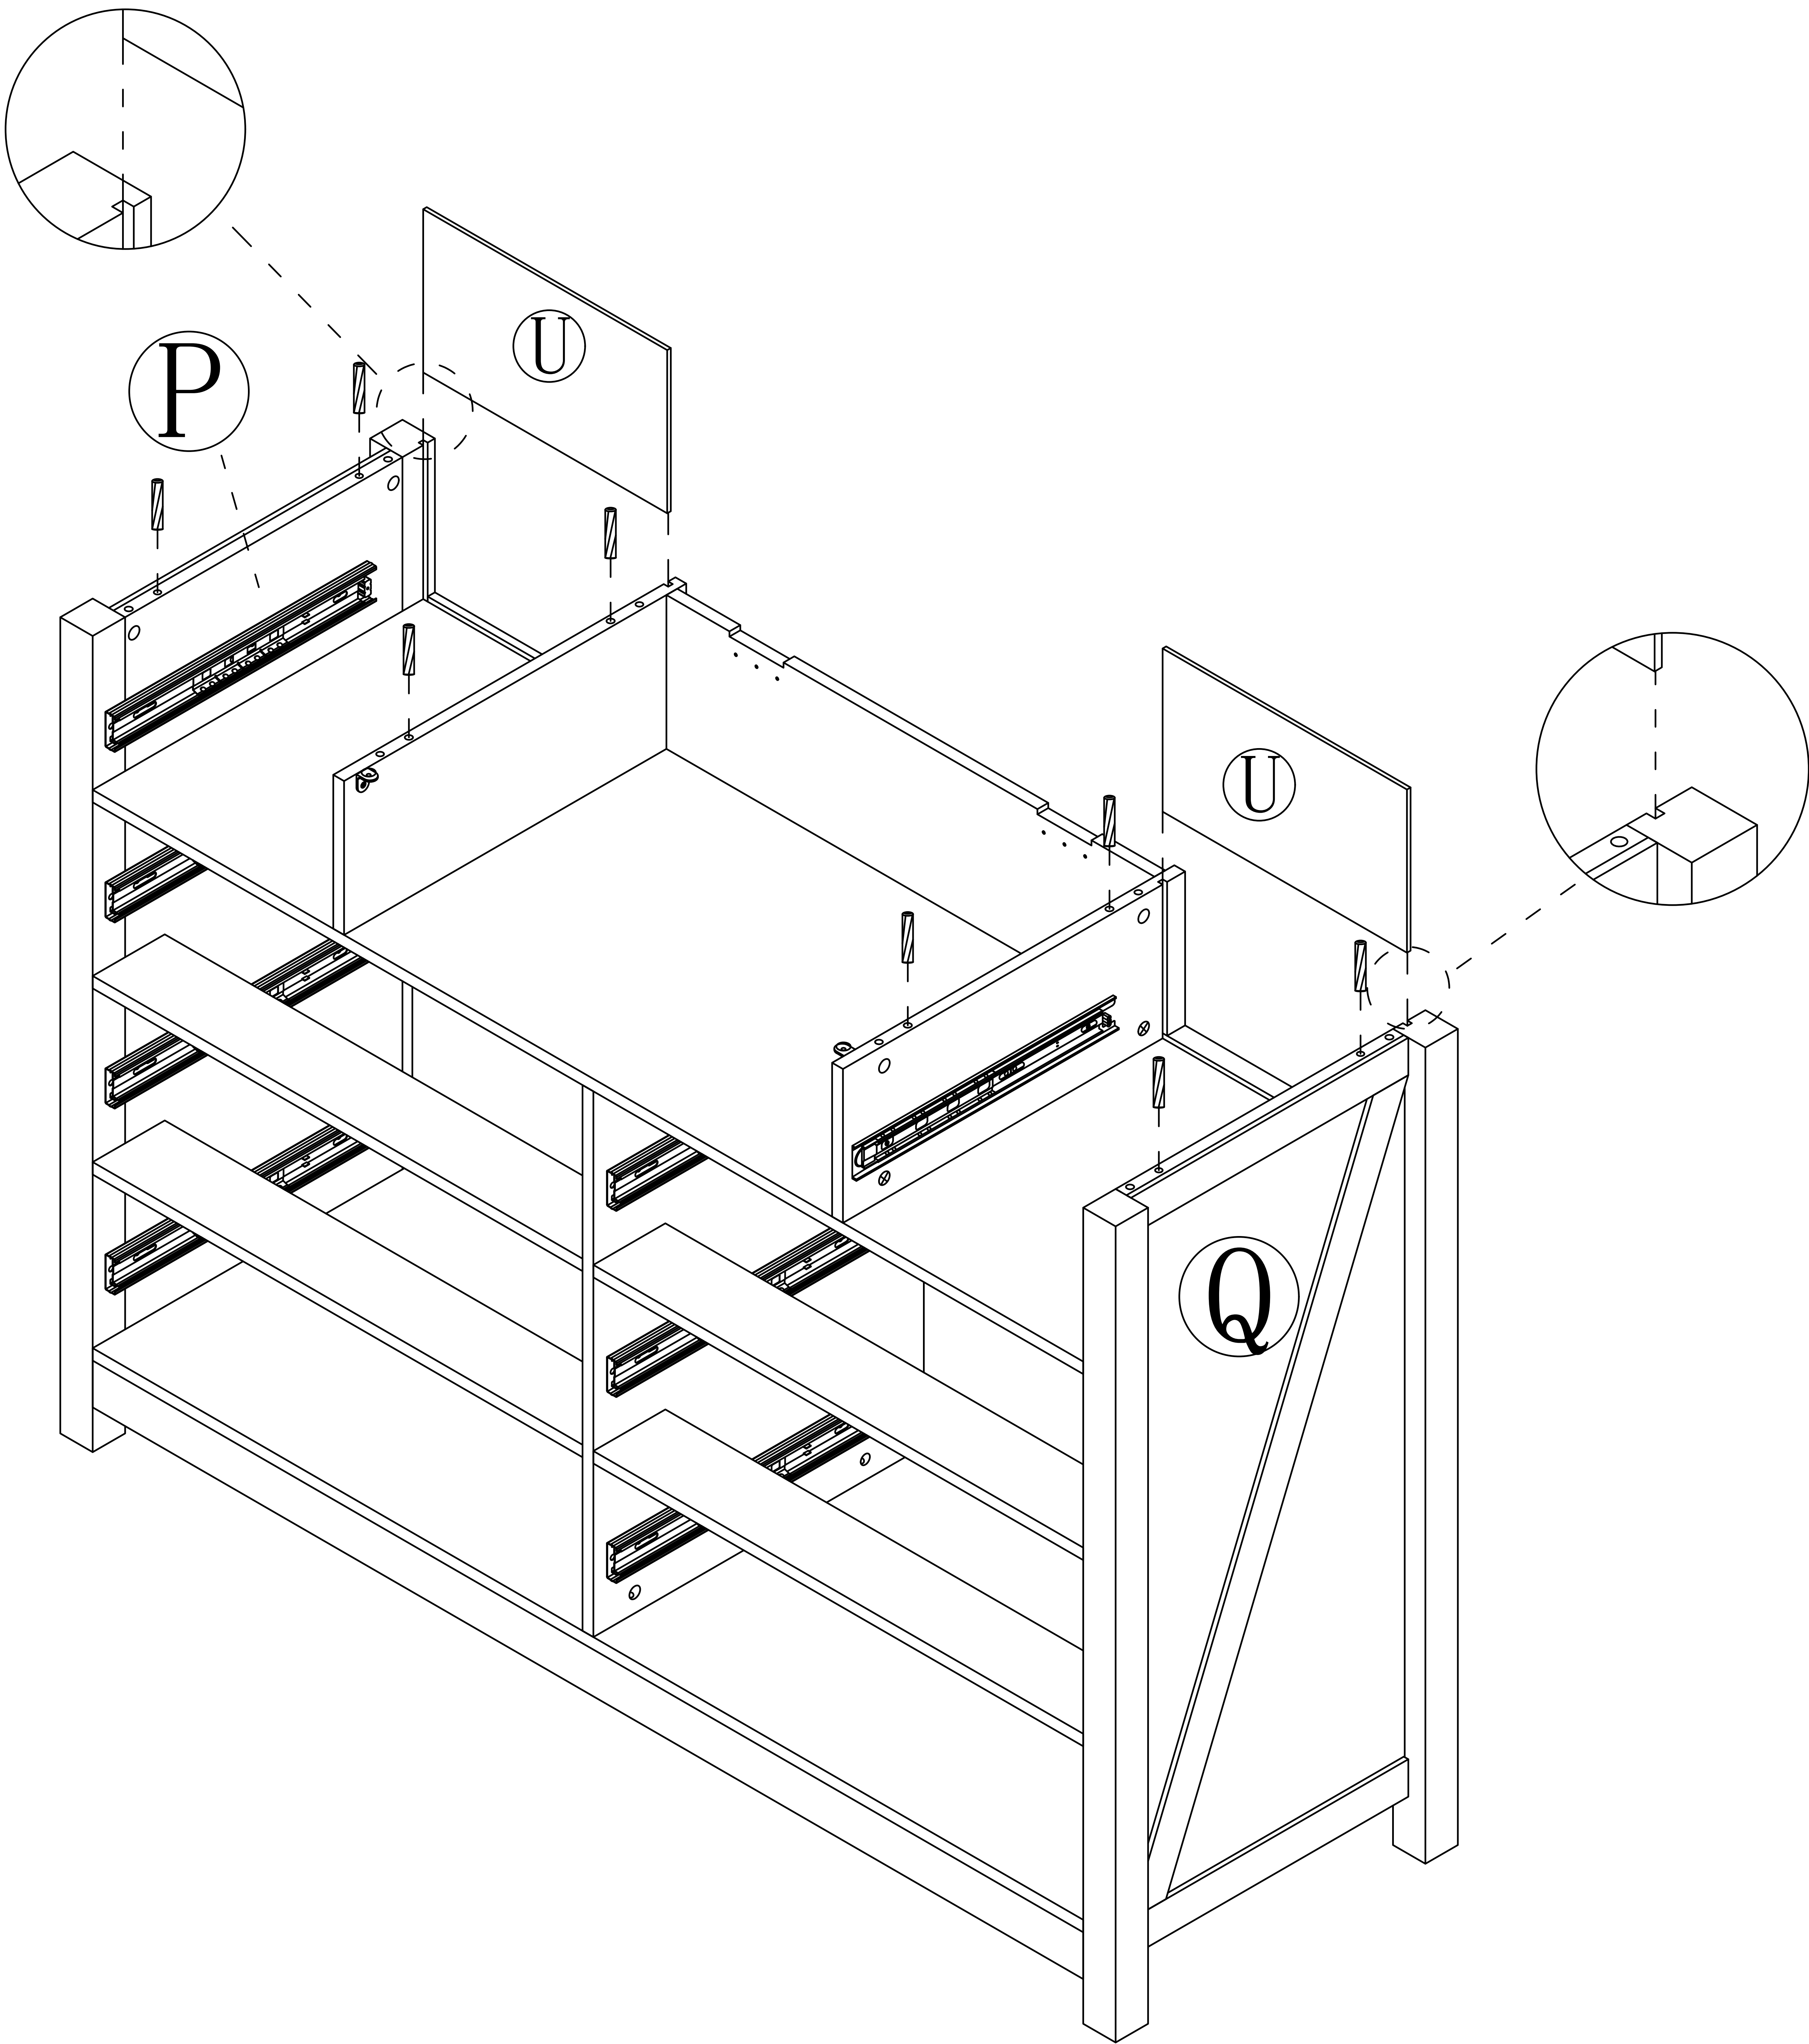


Step 57

1

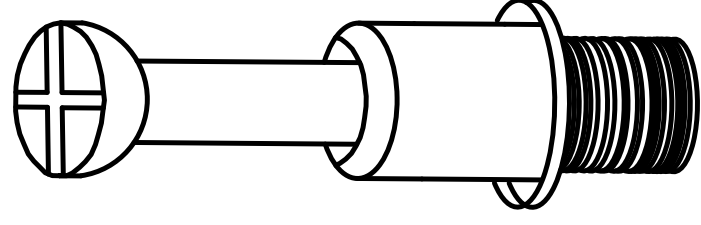


x4

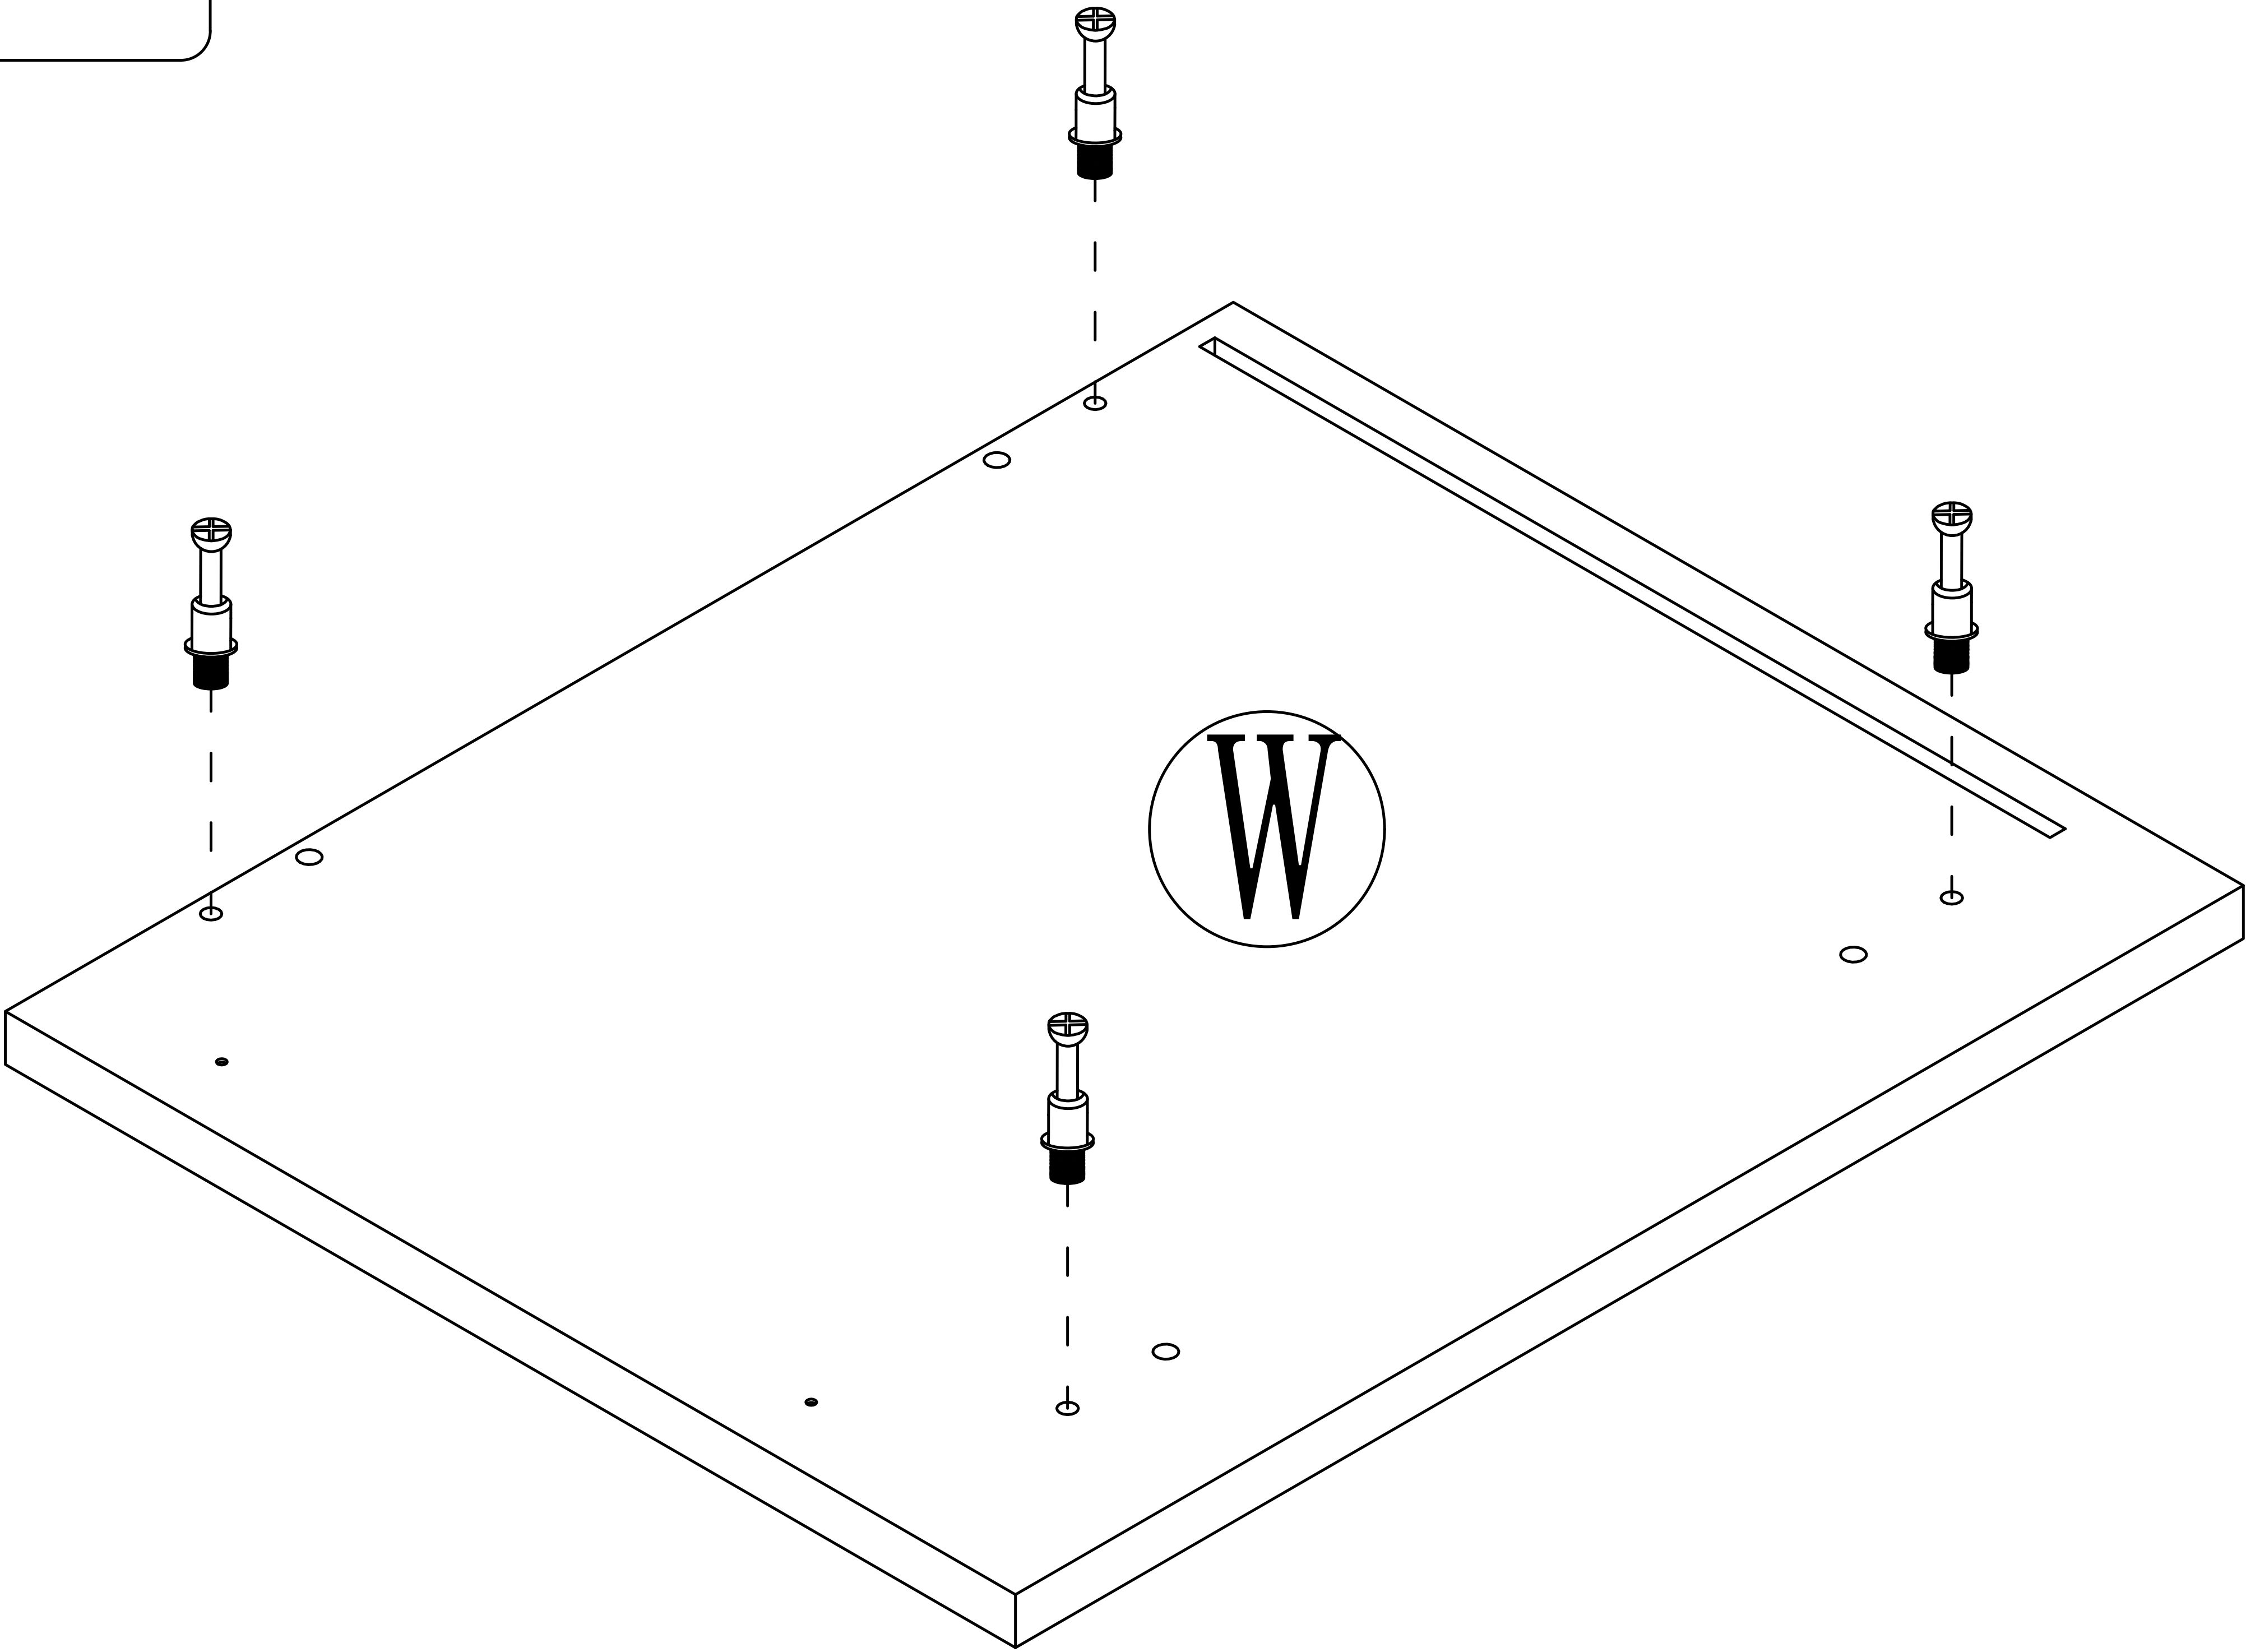


Step 58

11

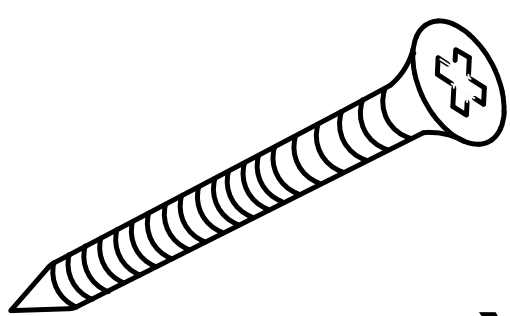



x2

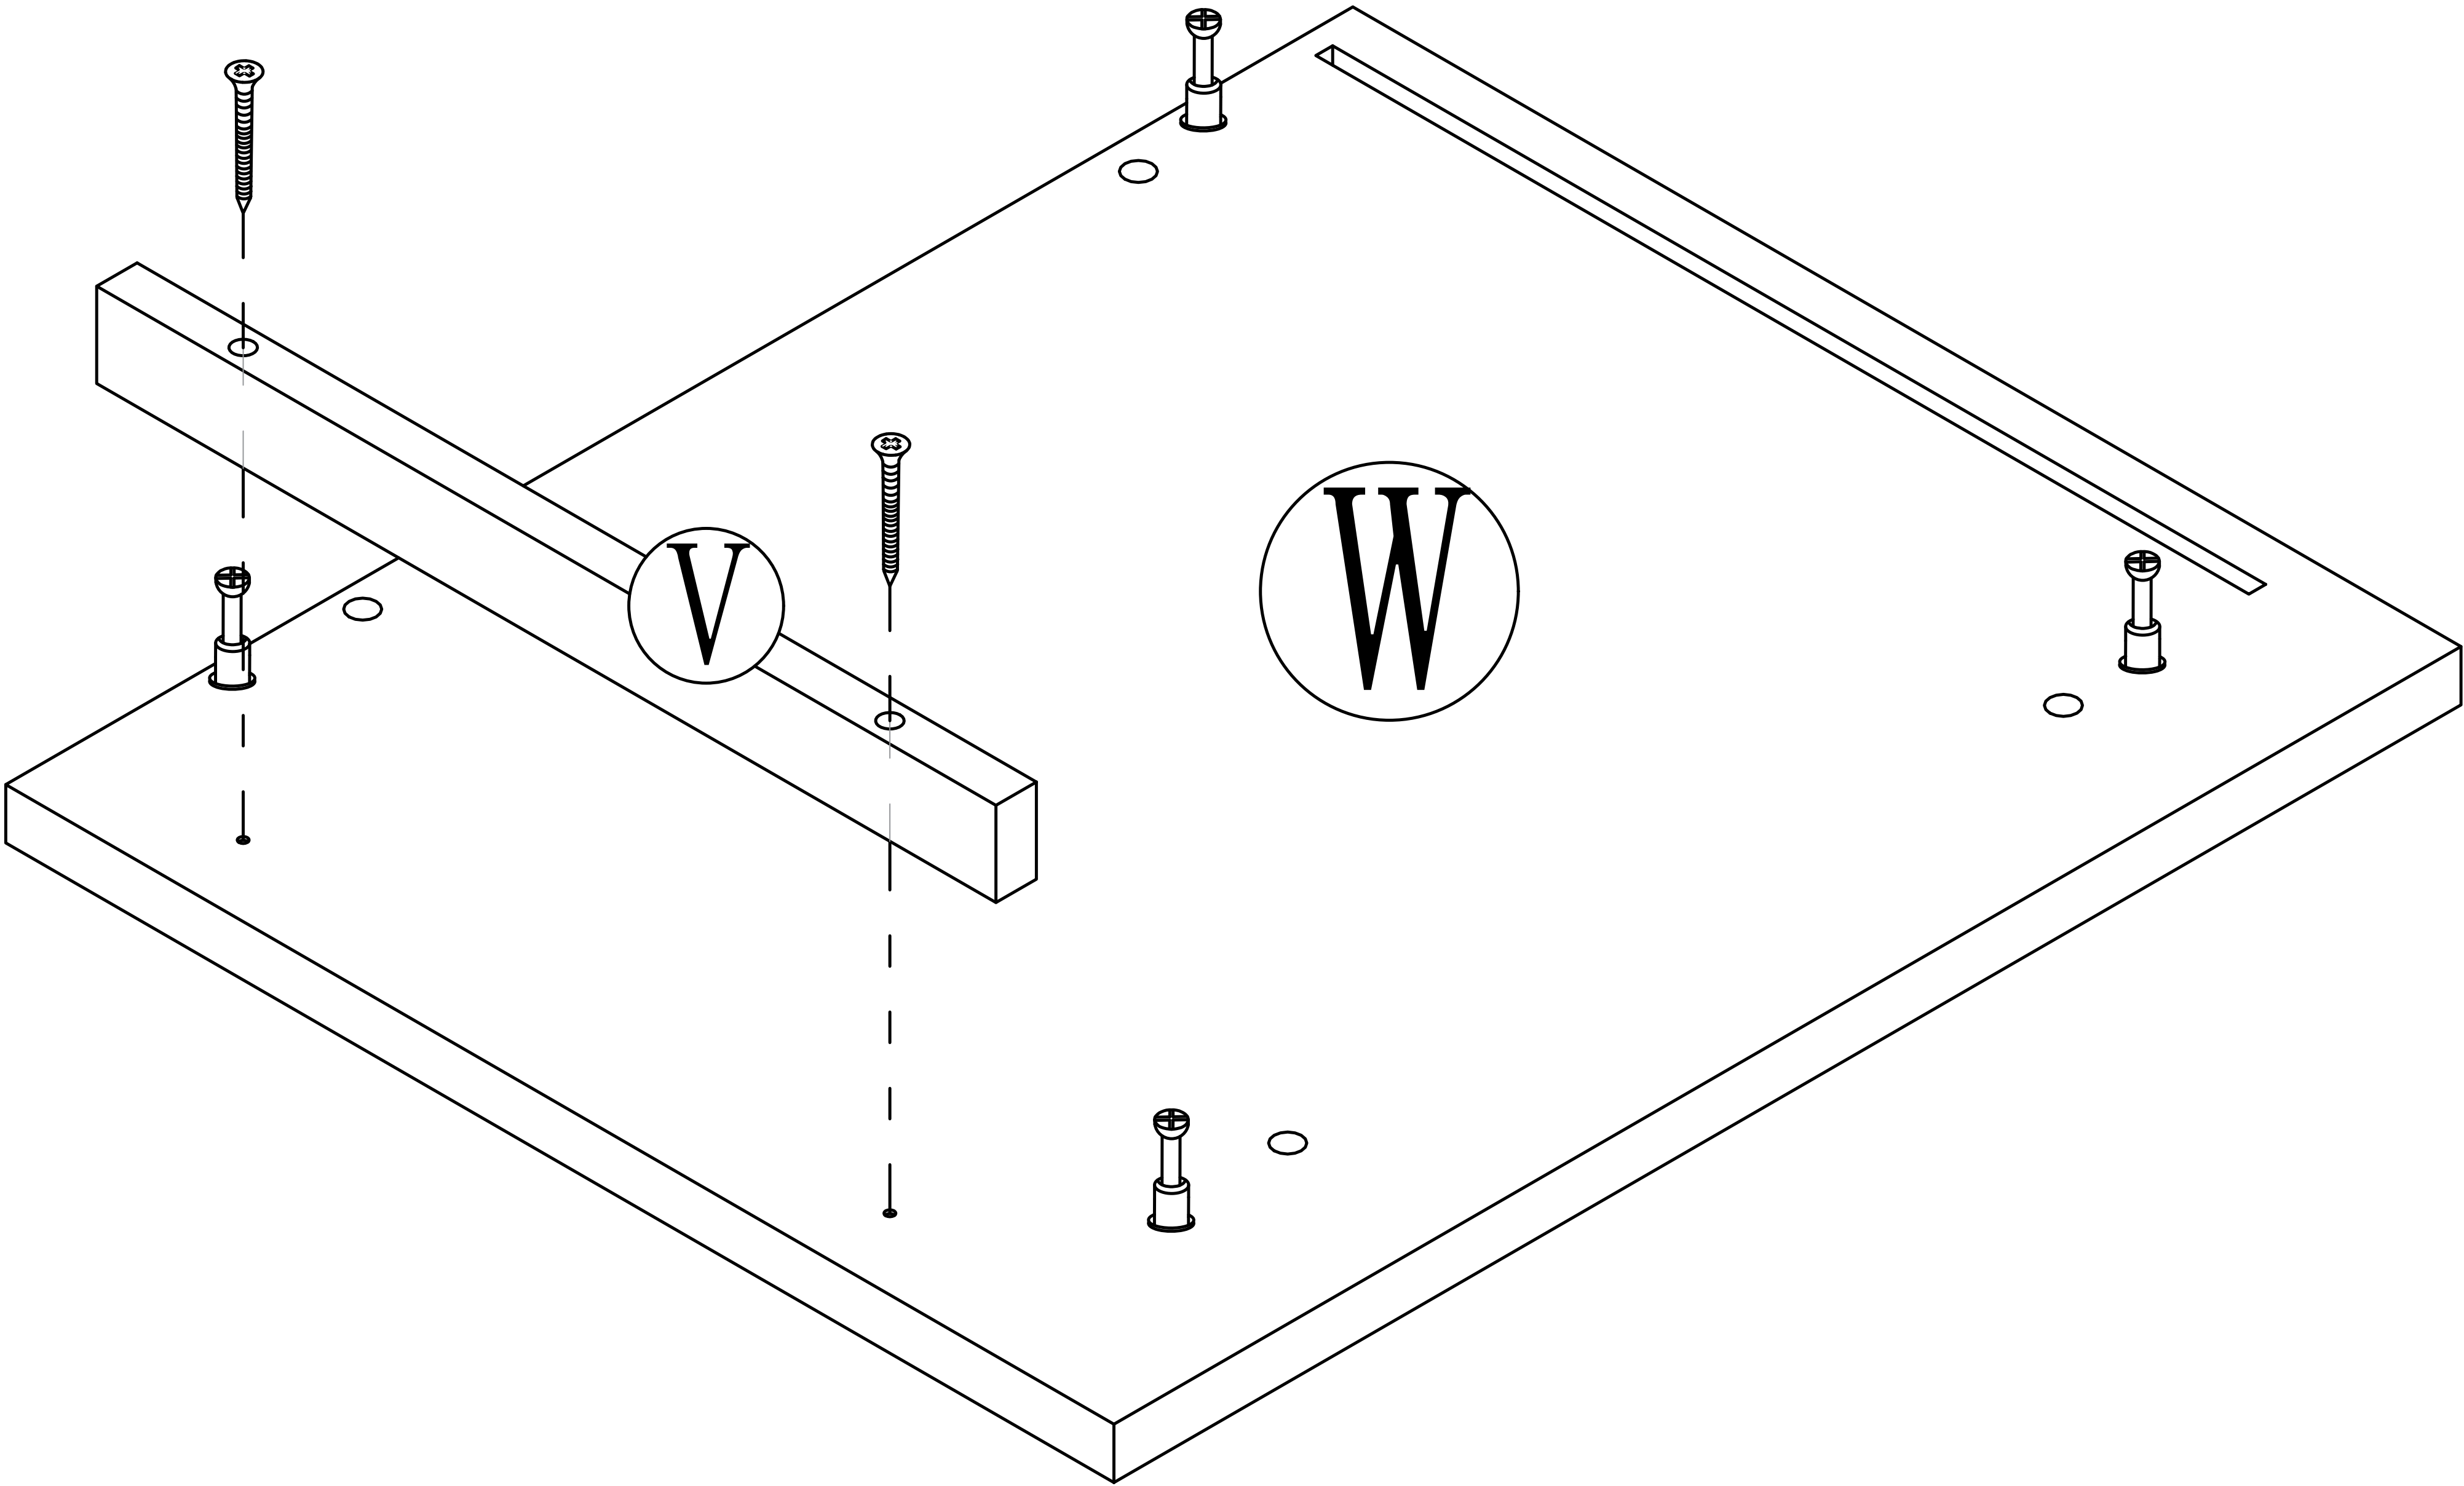

Step 59


2

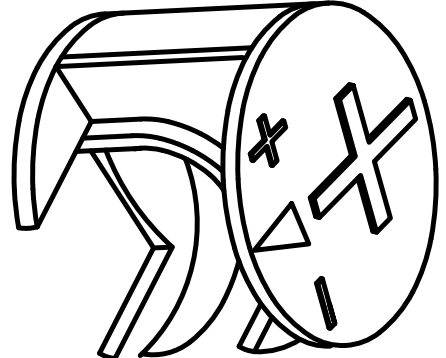 x4

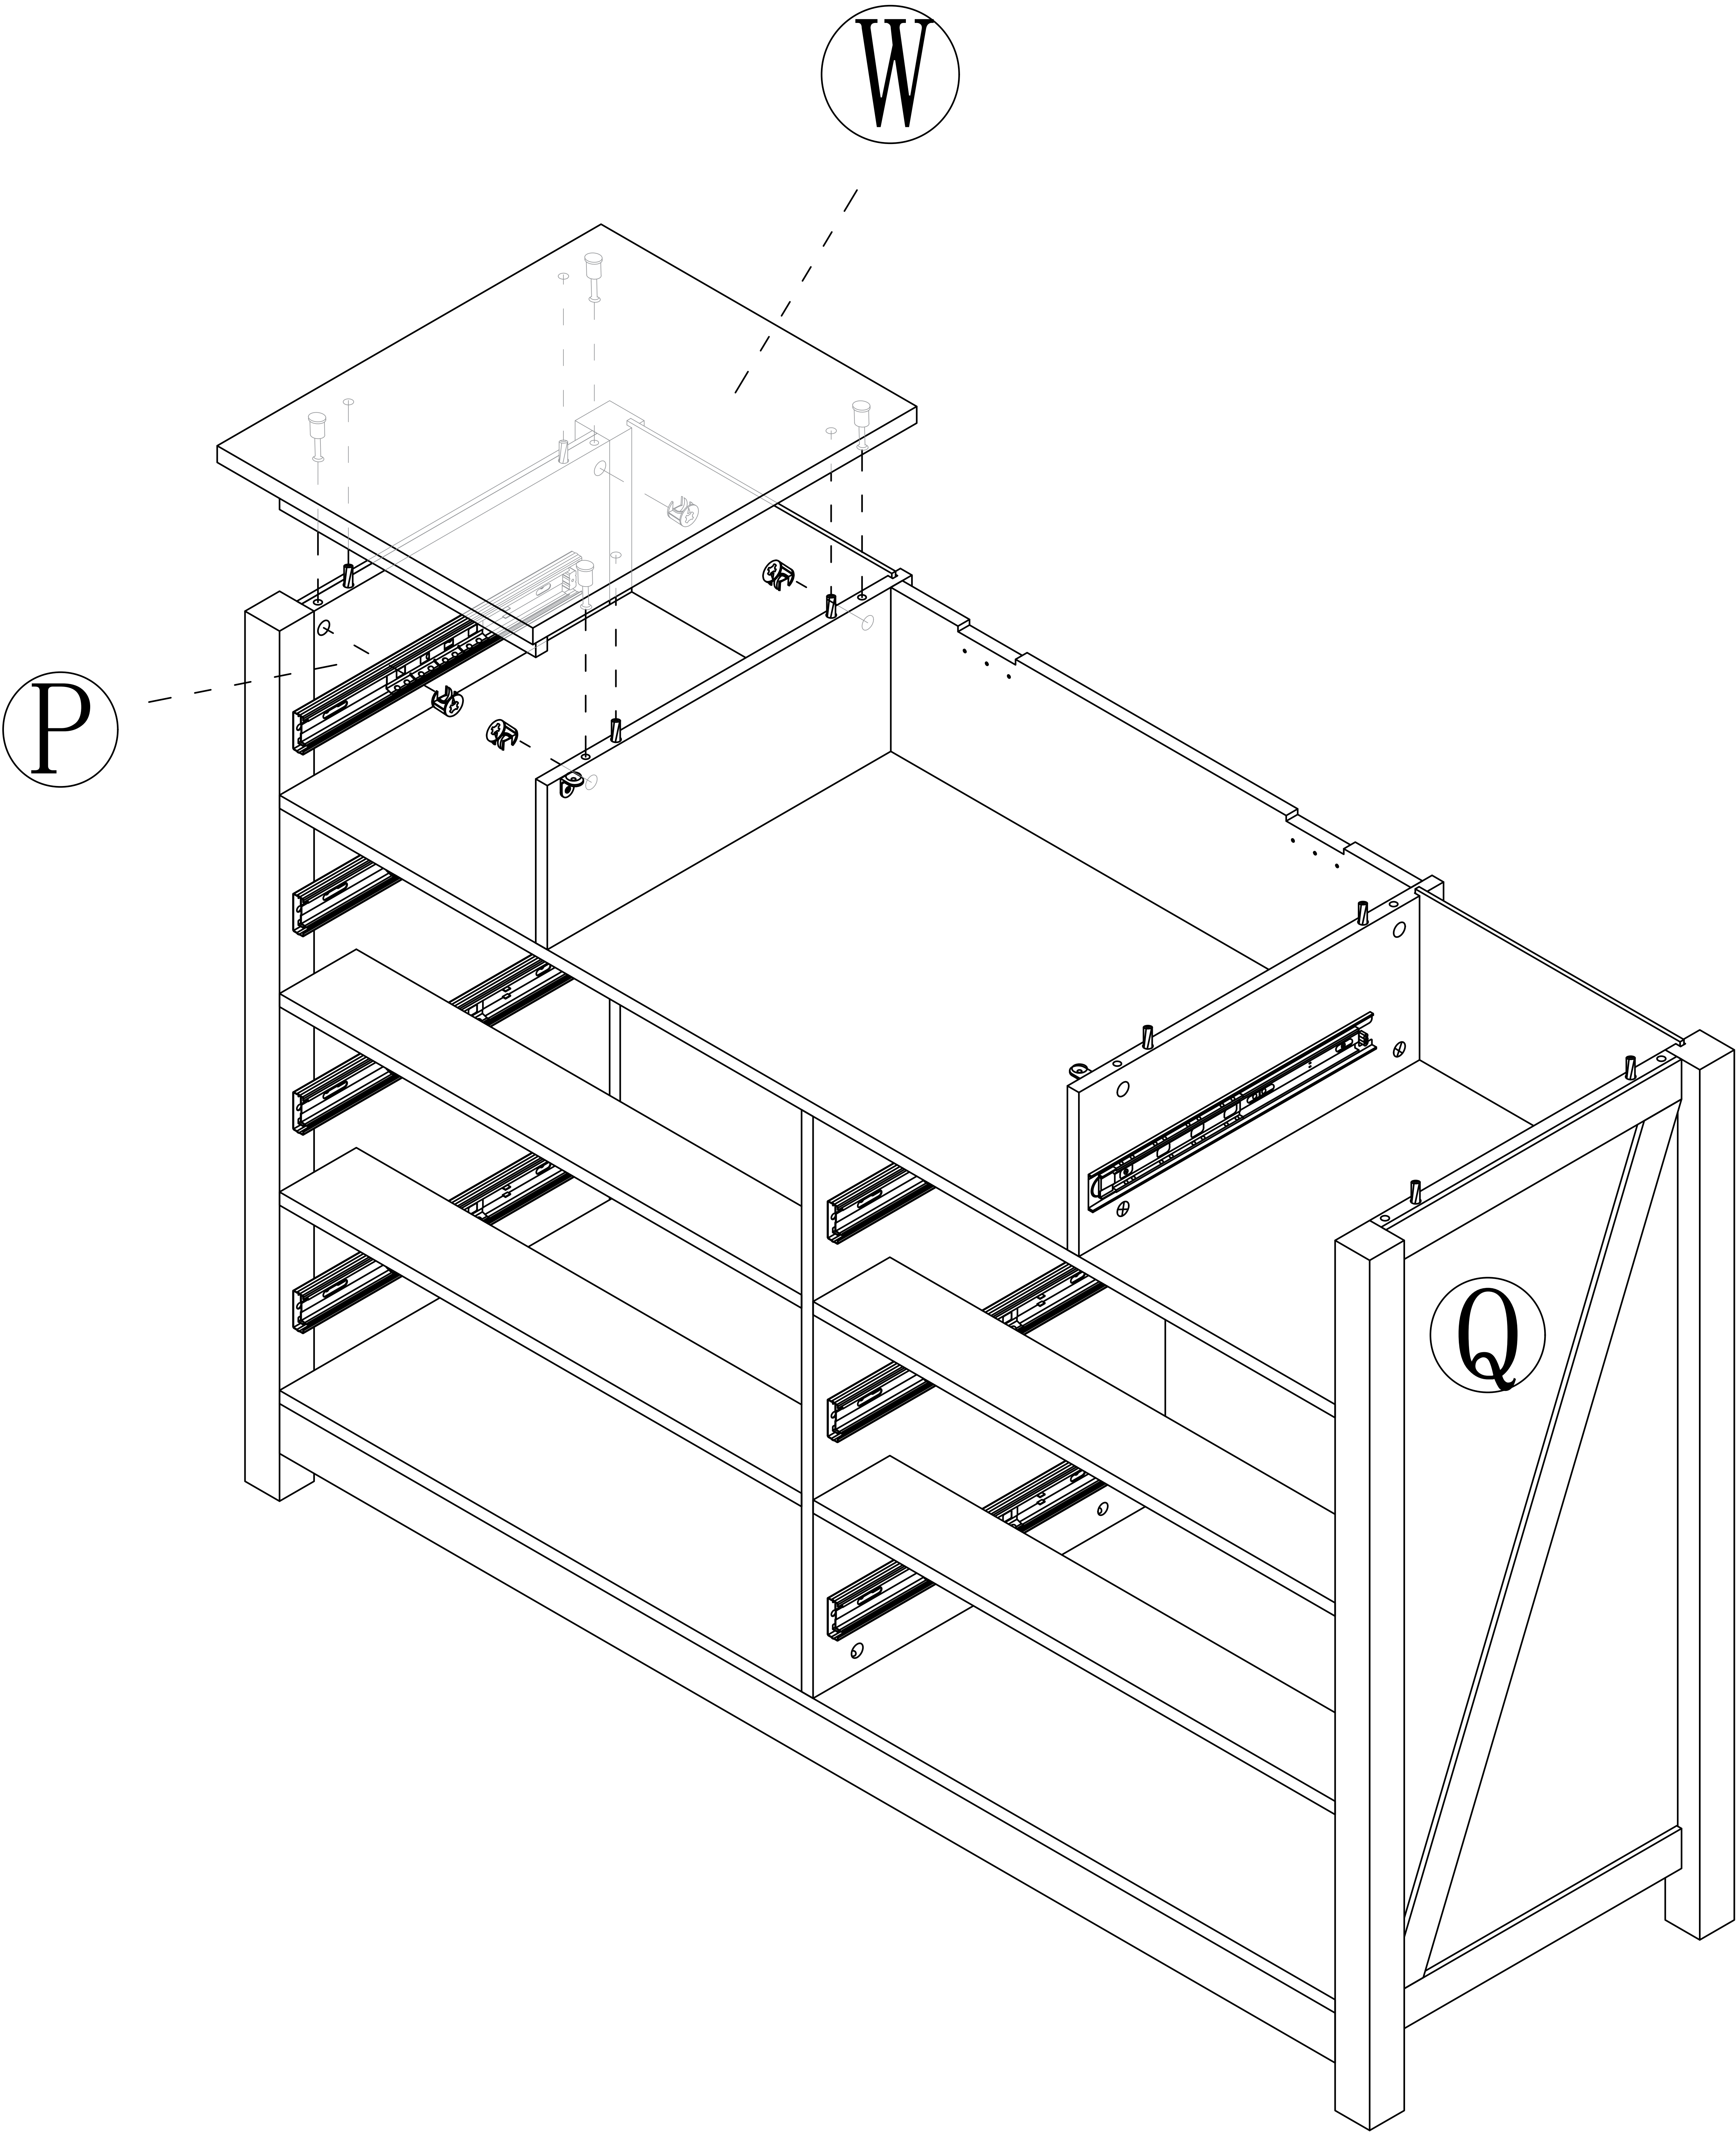


Step 60

1

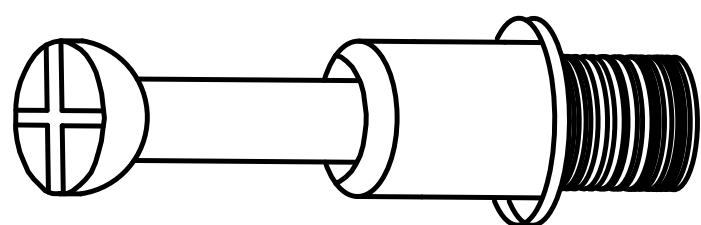


x4

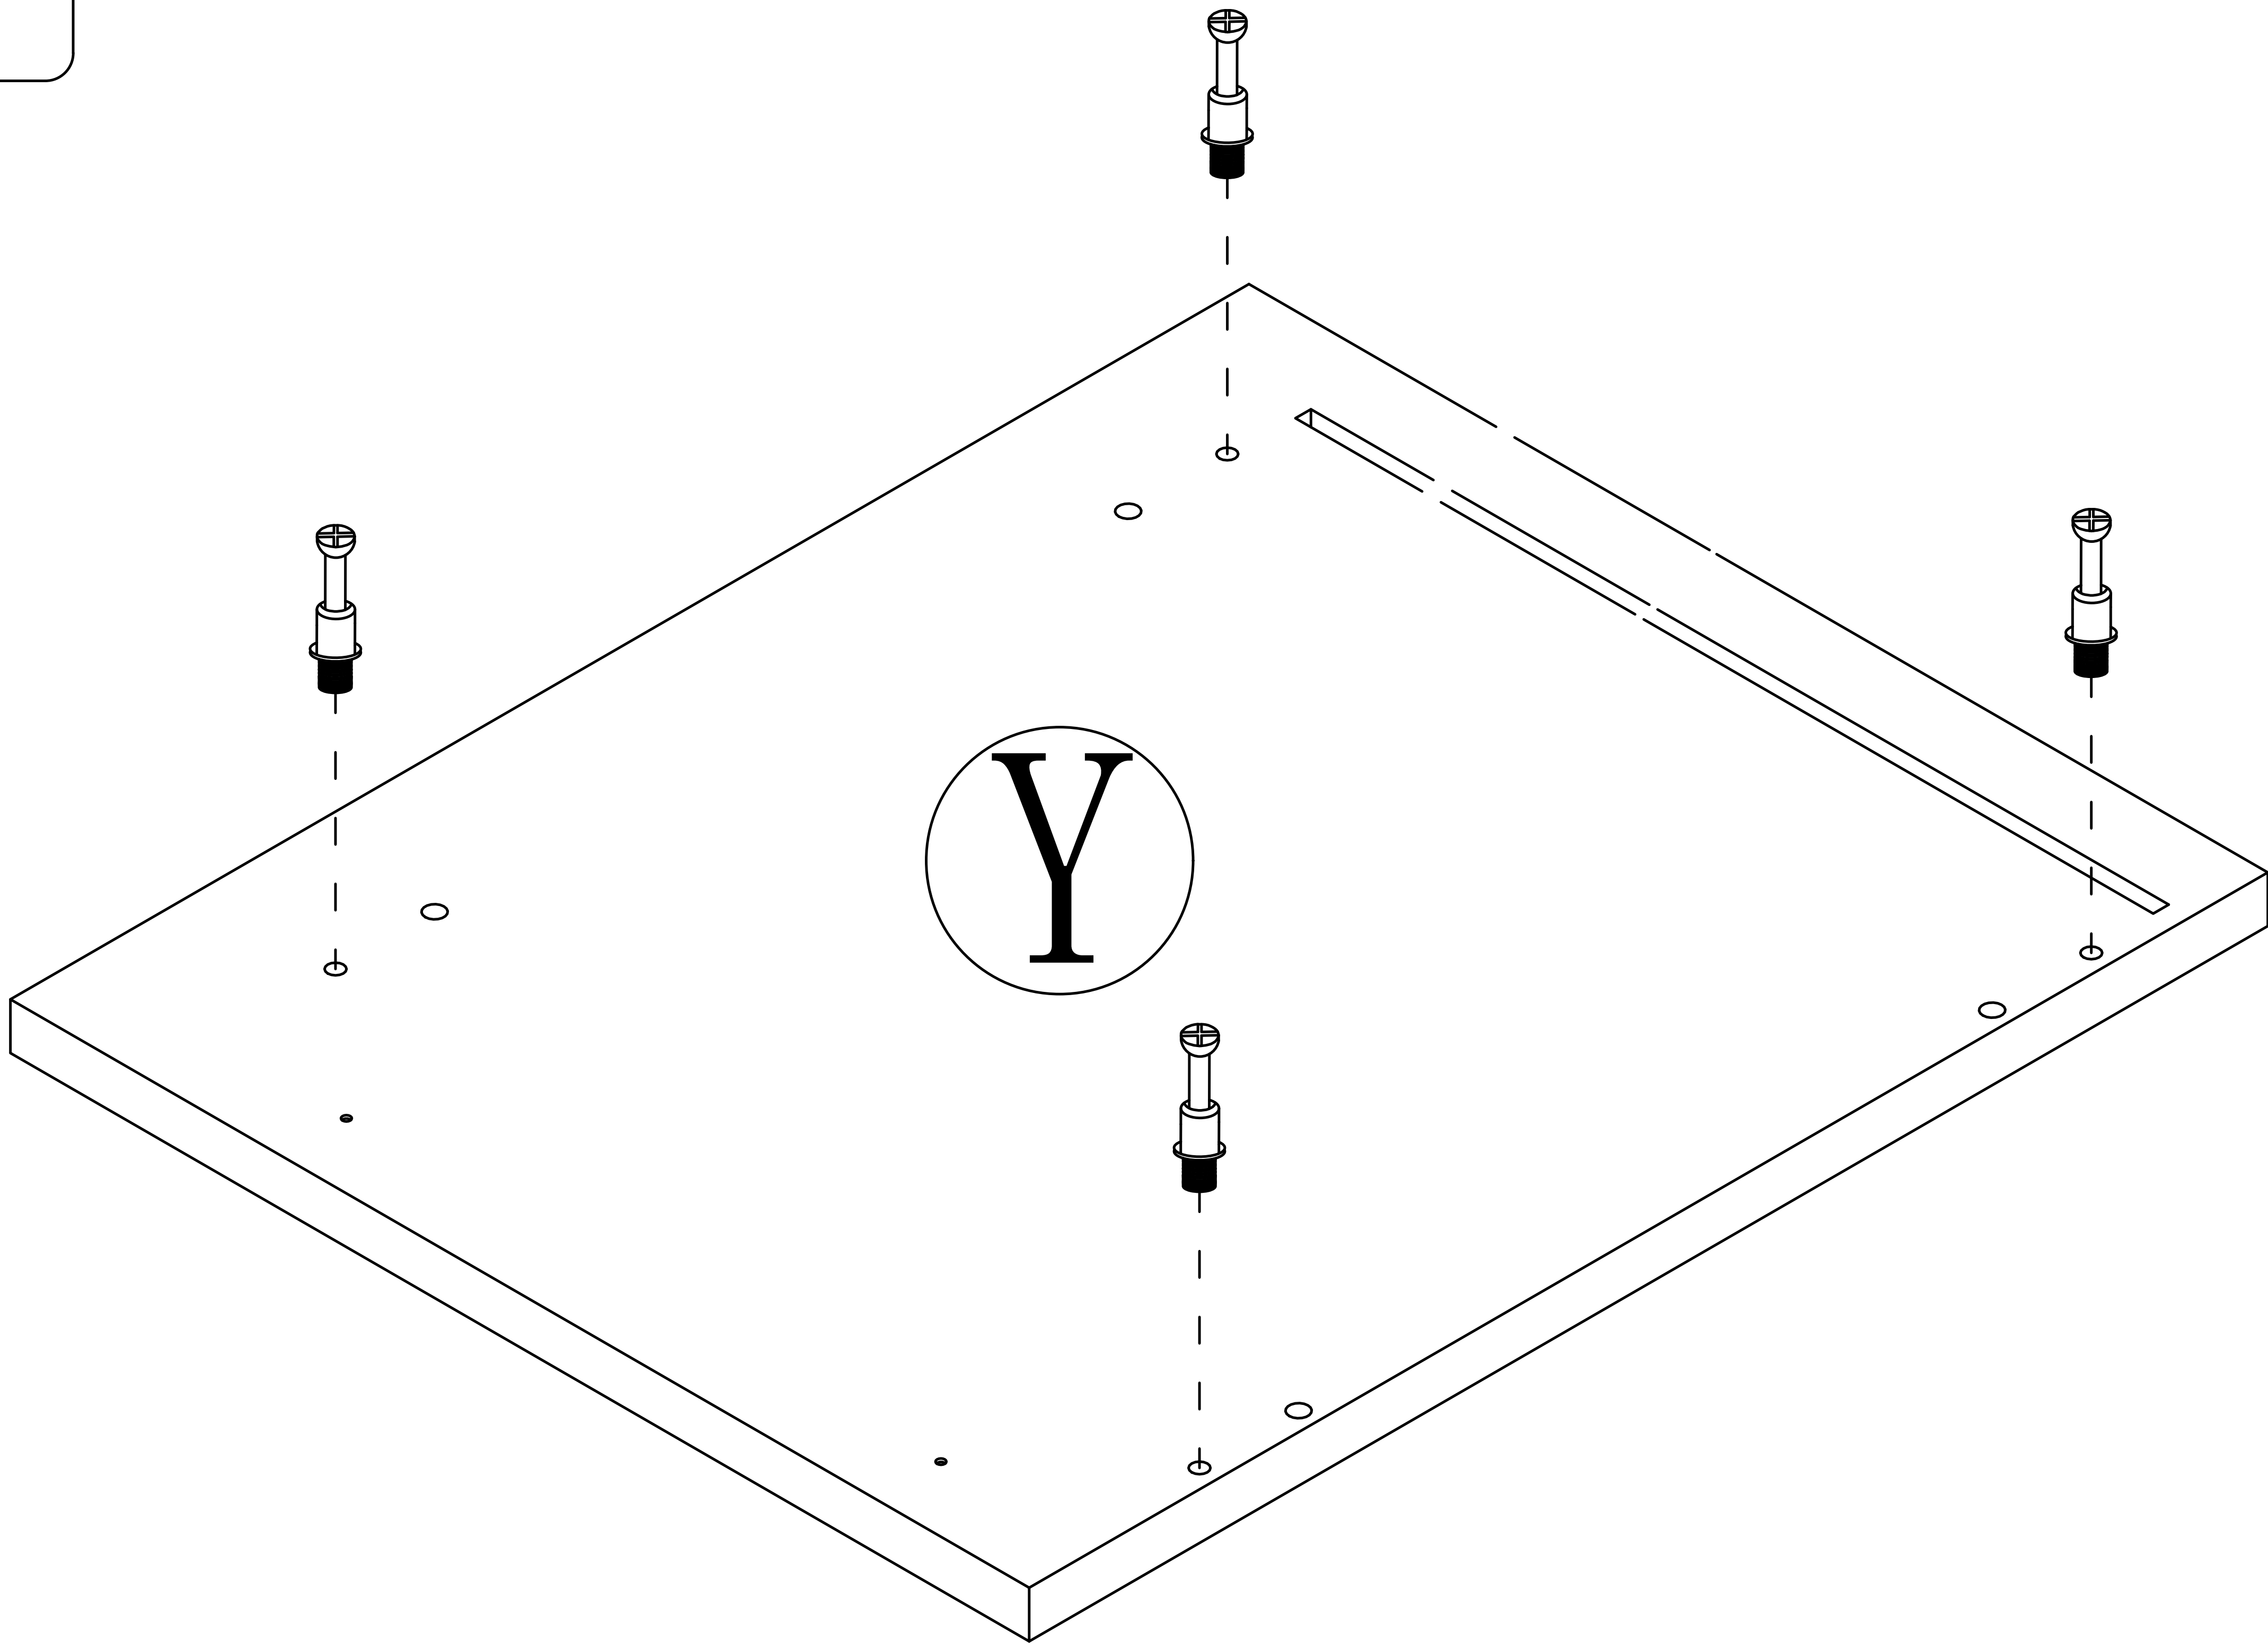


Step 61

11

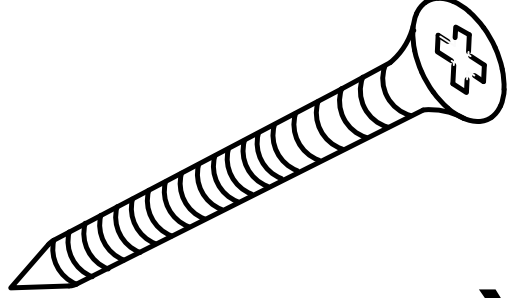



x2

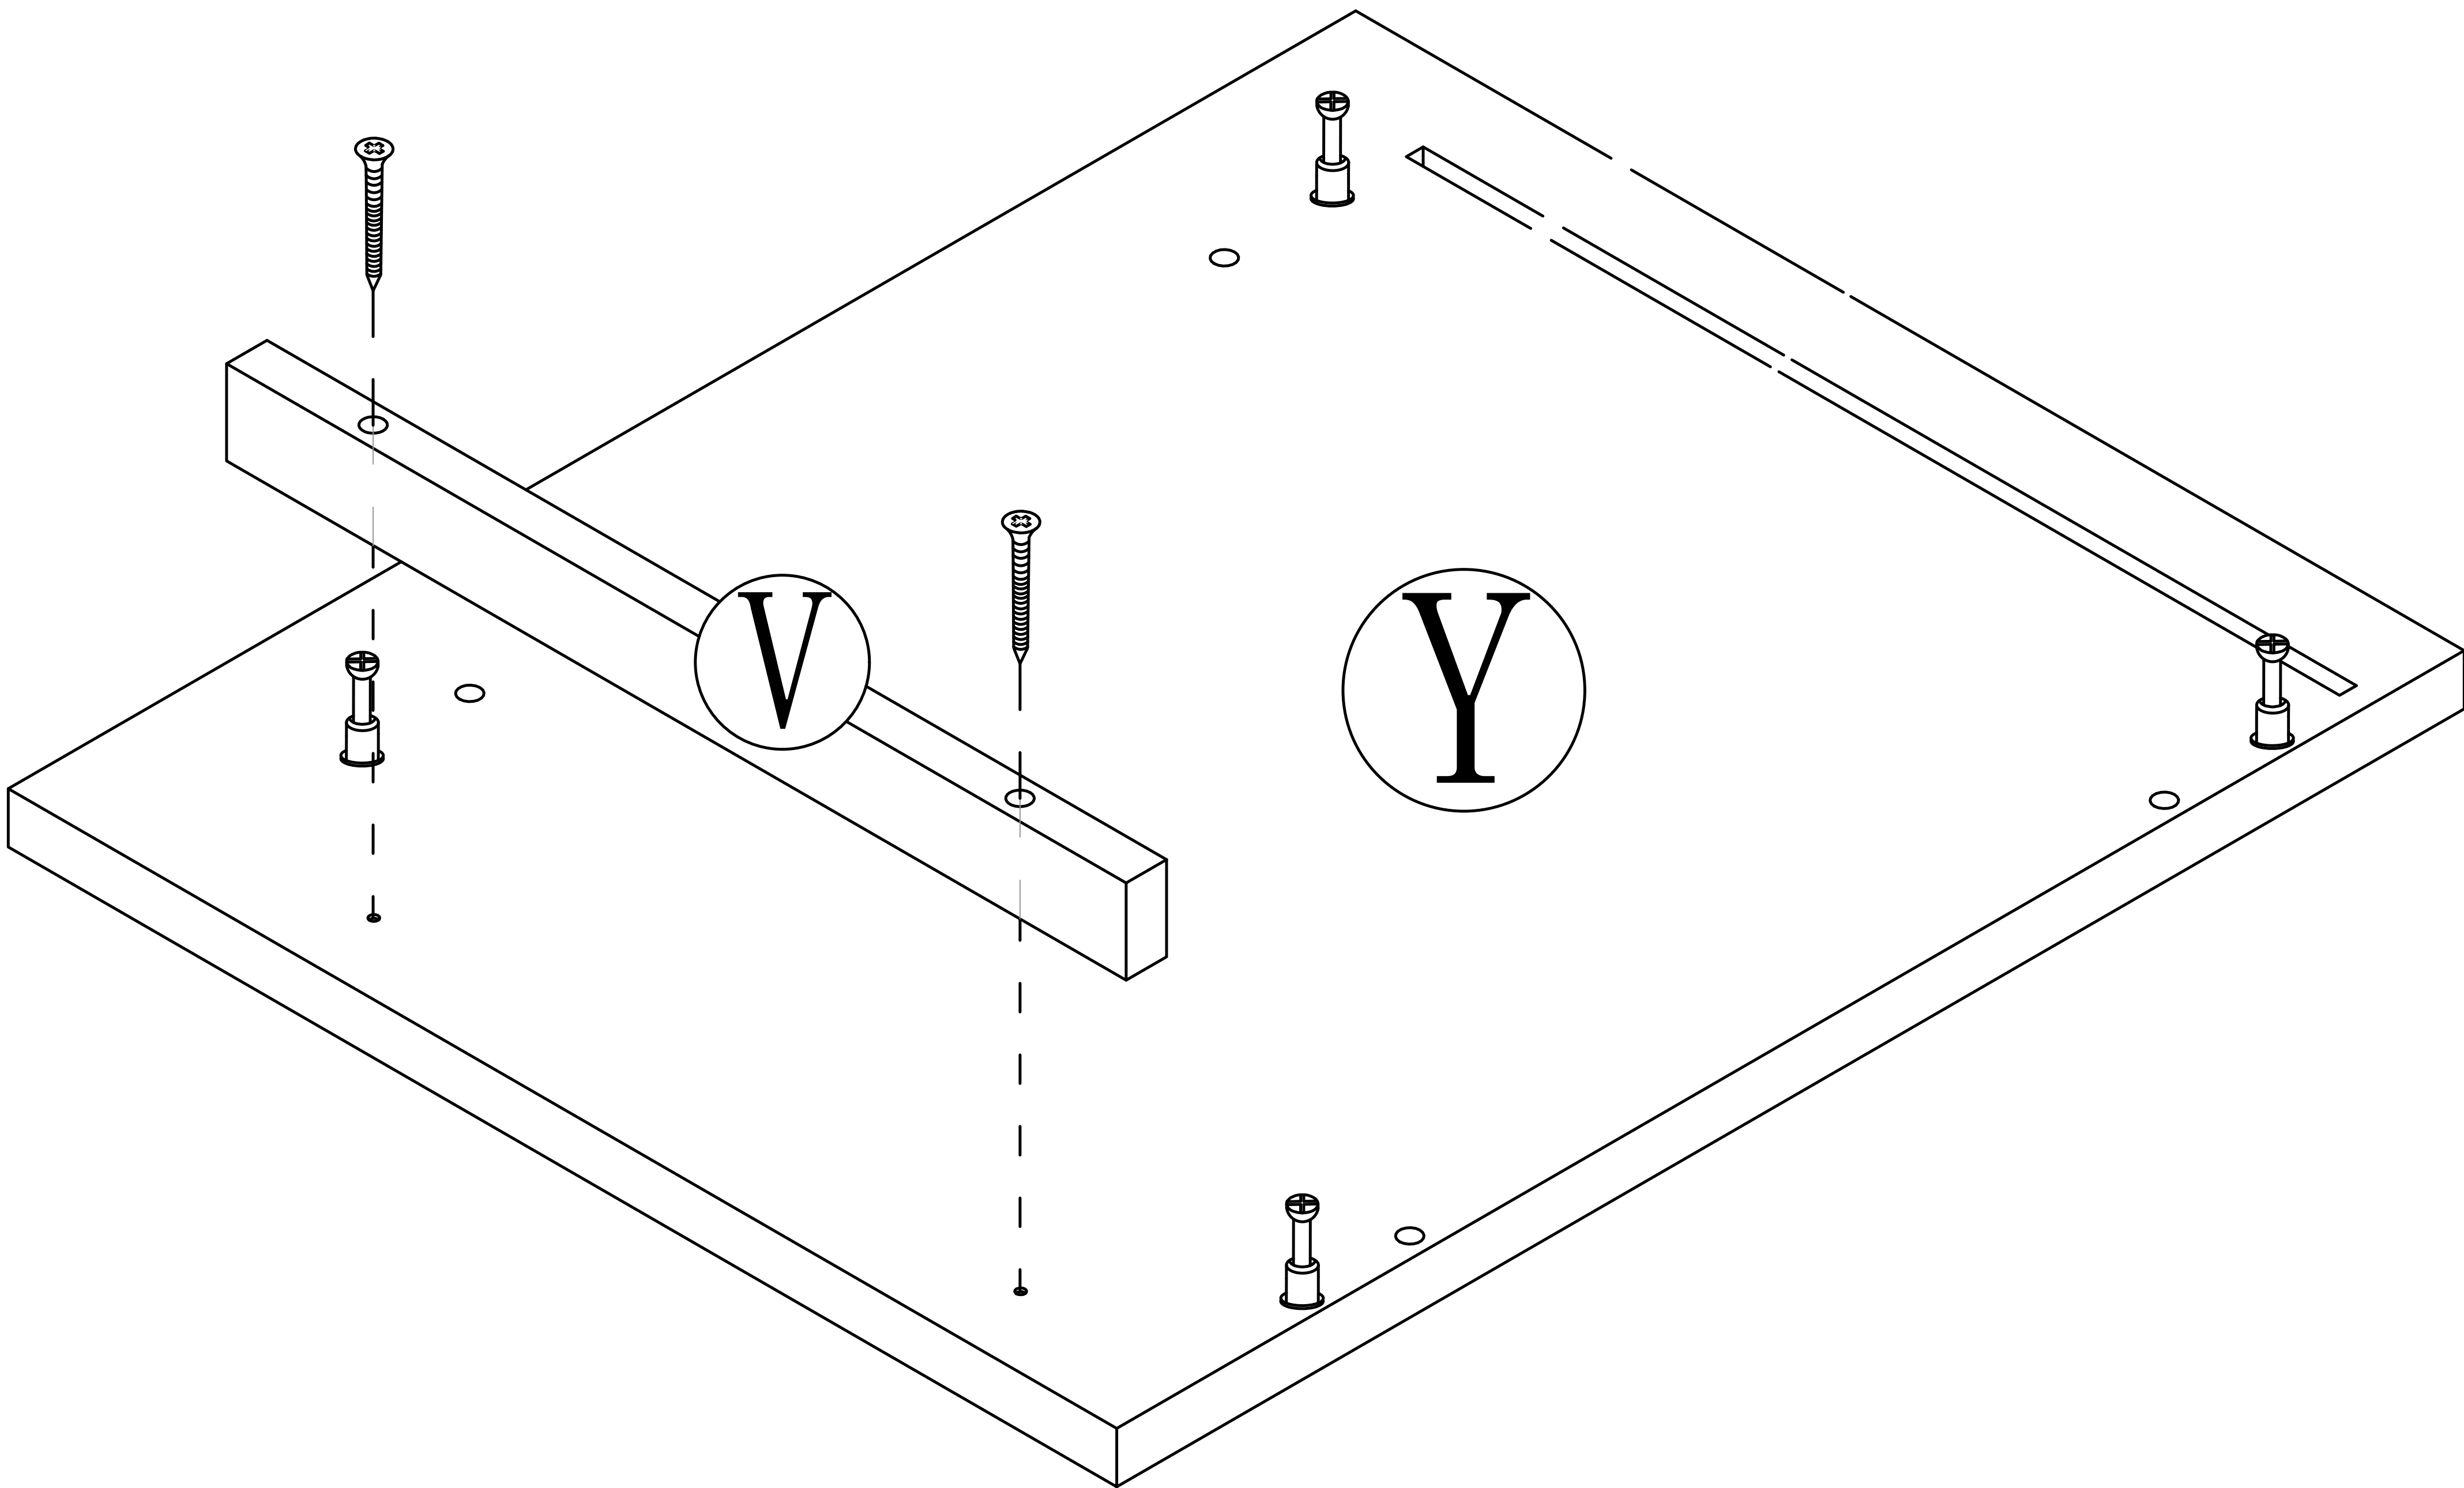


Step 62



2

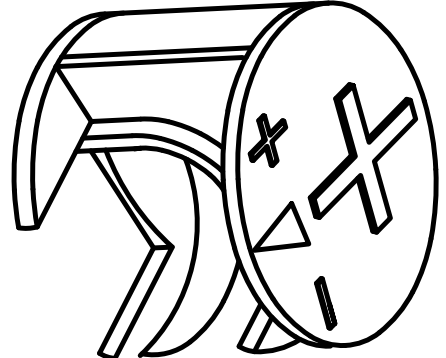
 x4

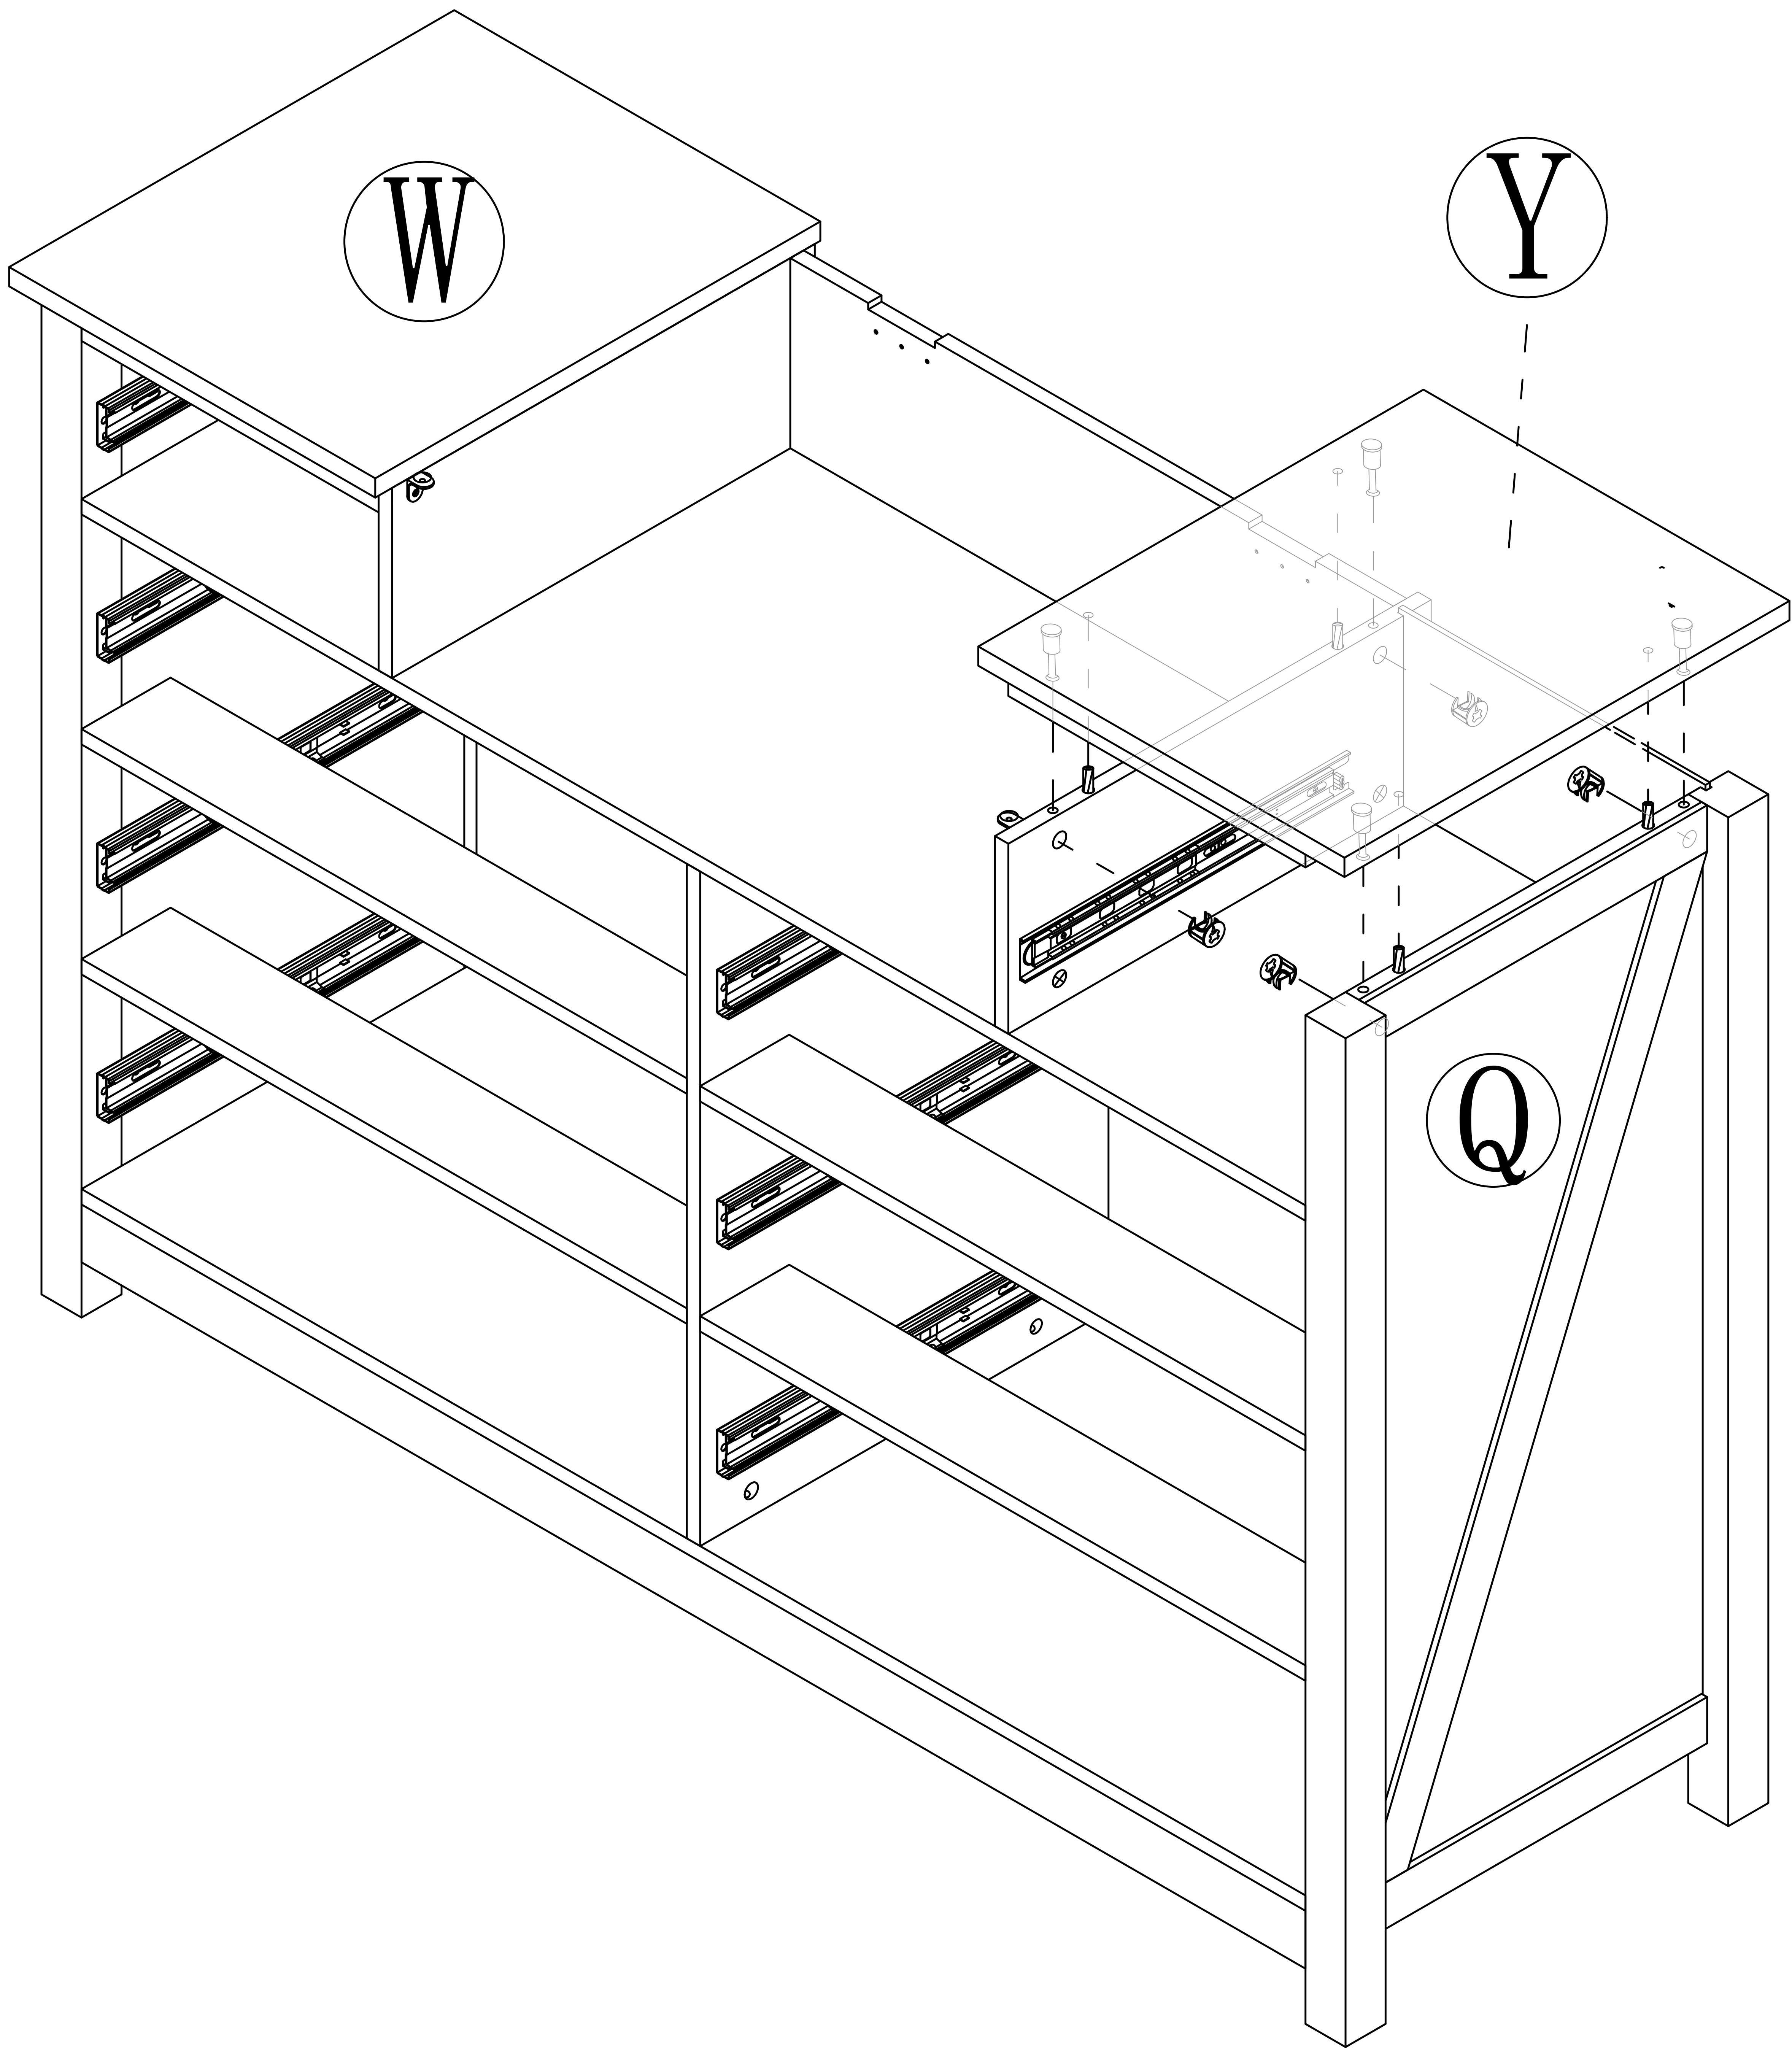


Step 63

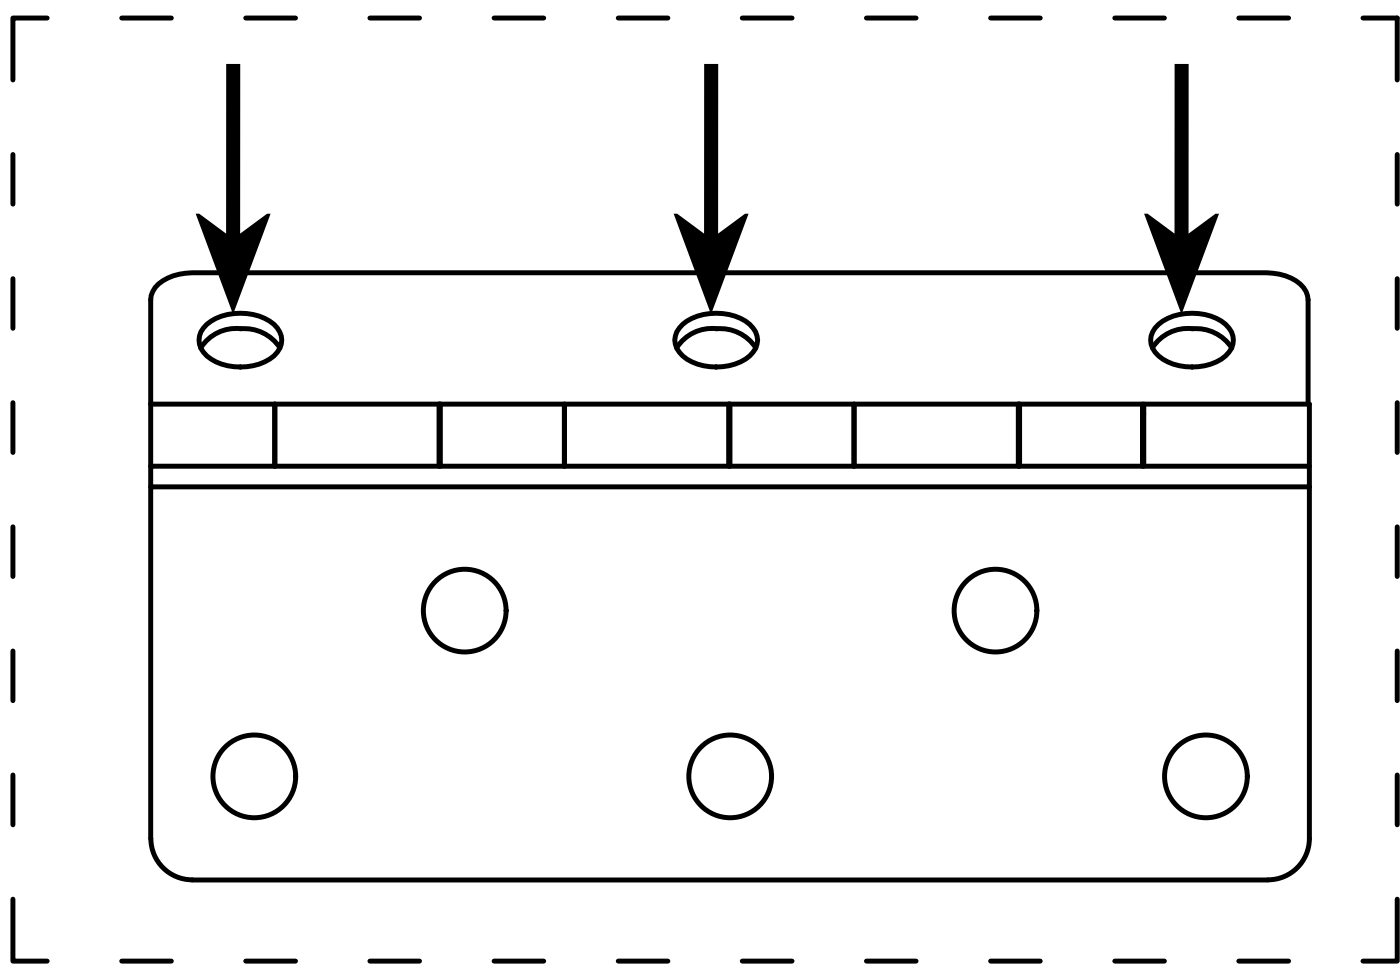


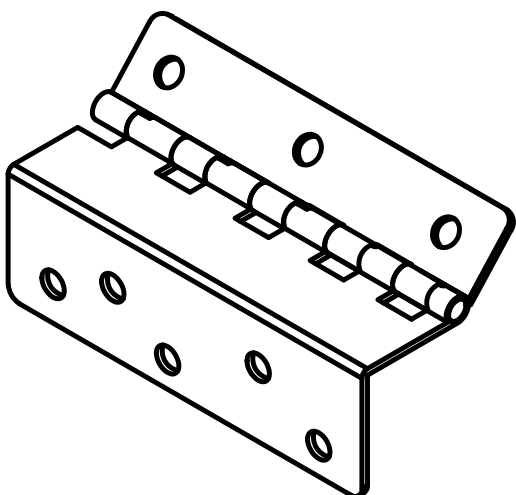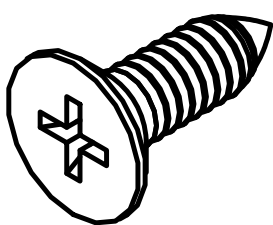
- 12  x2
- 12  x6

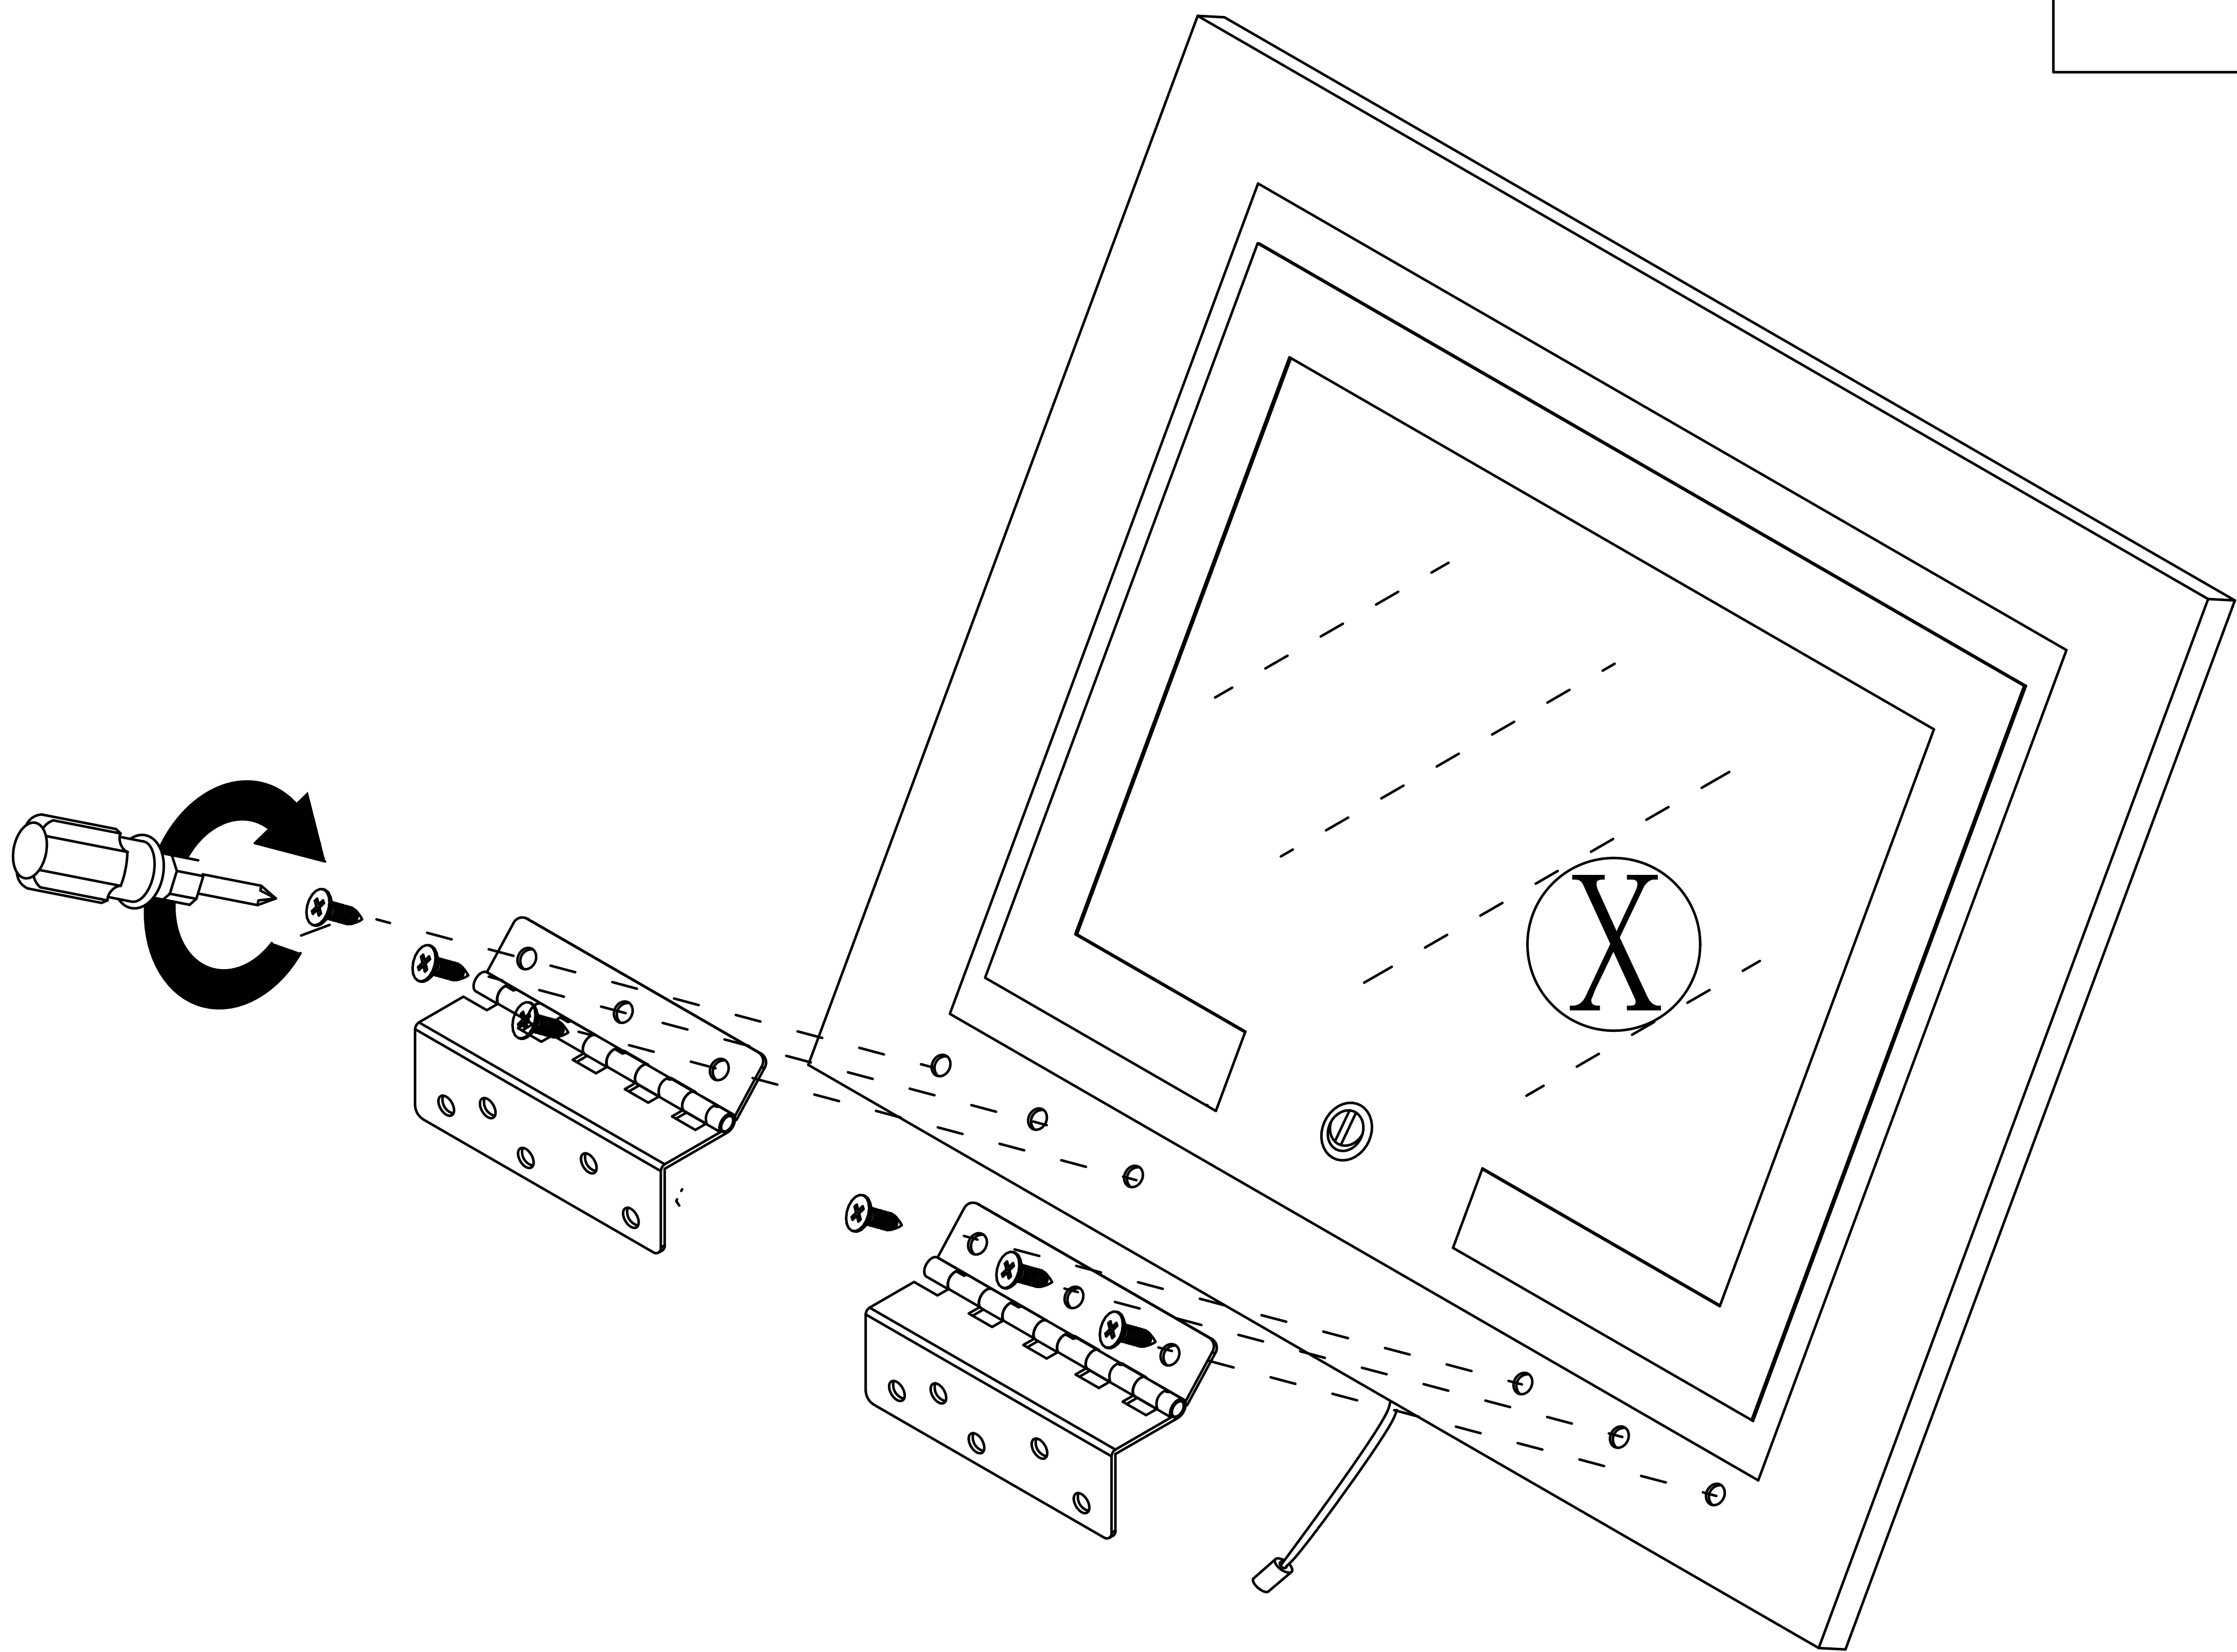


Step 64

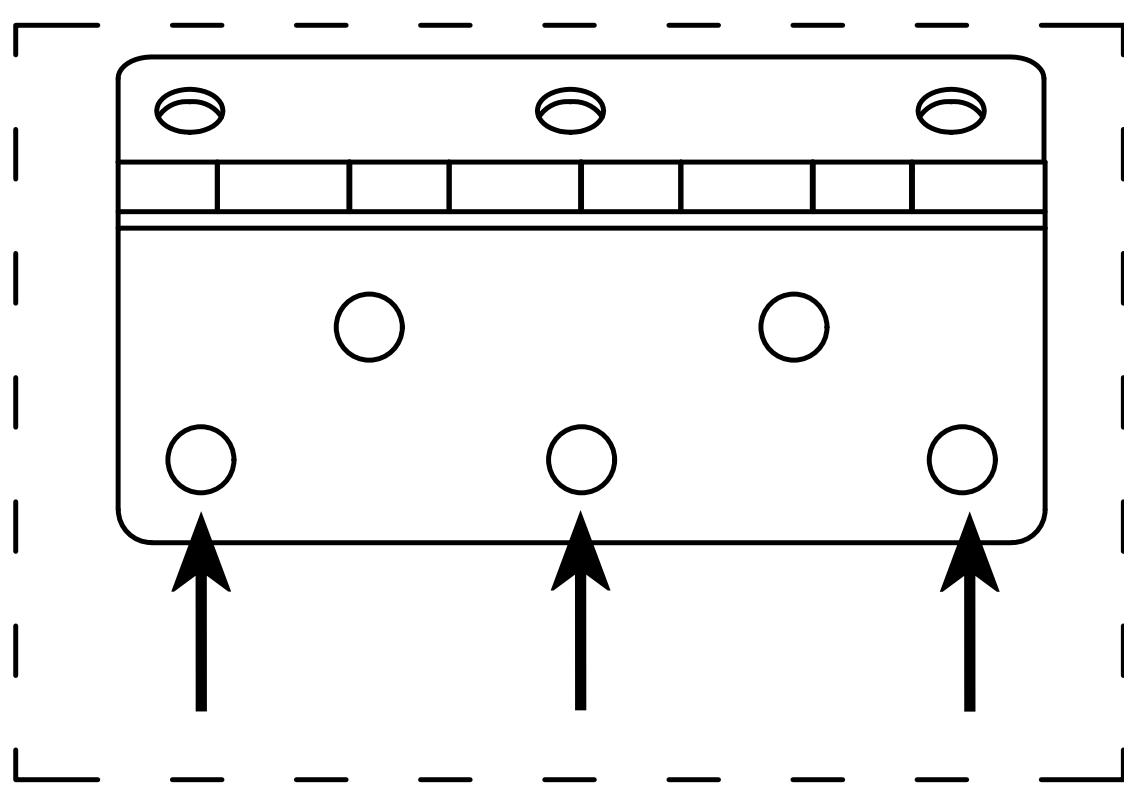

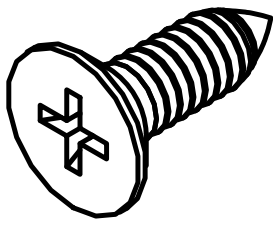- 12  x6

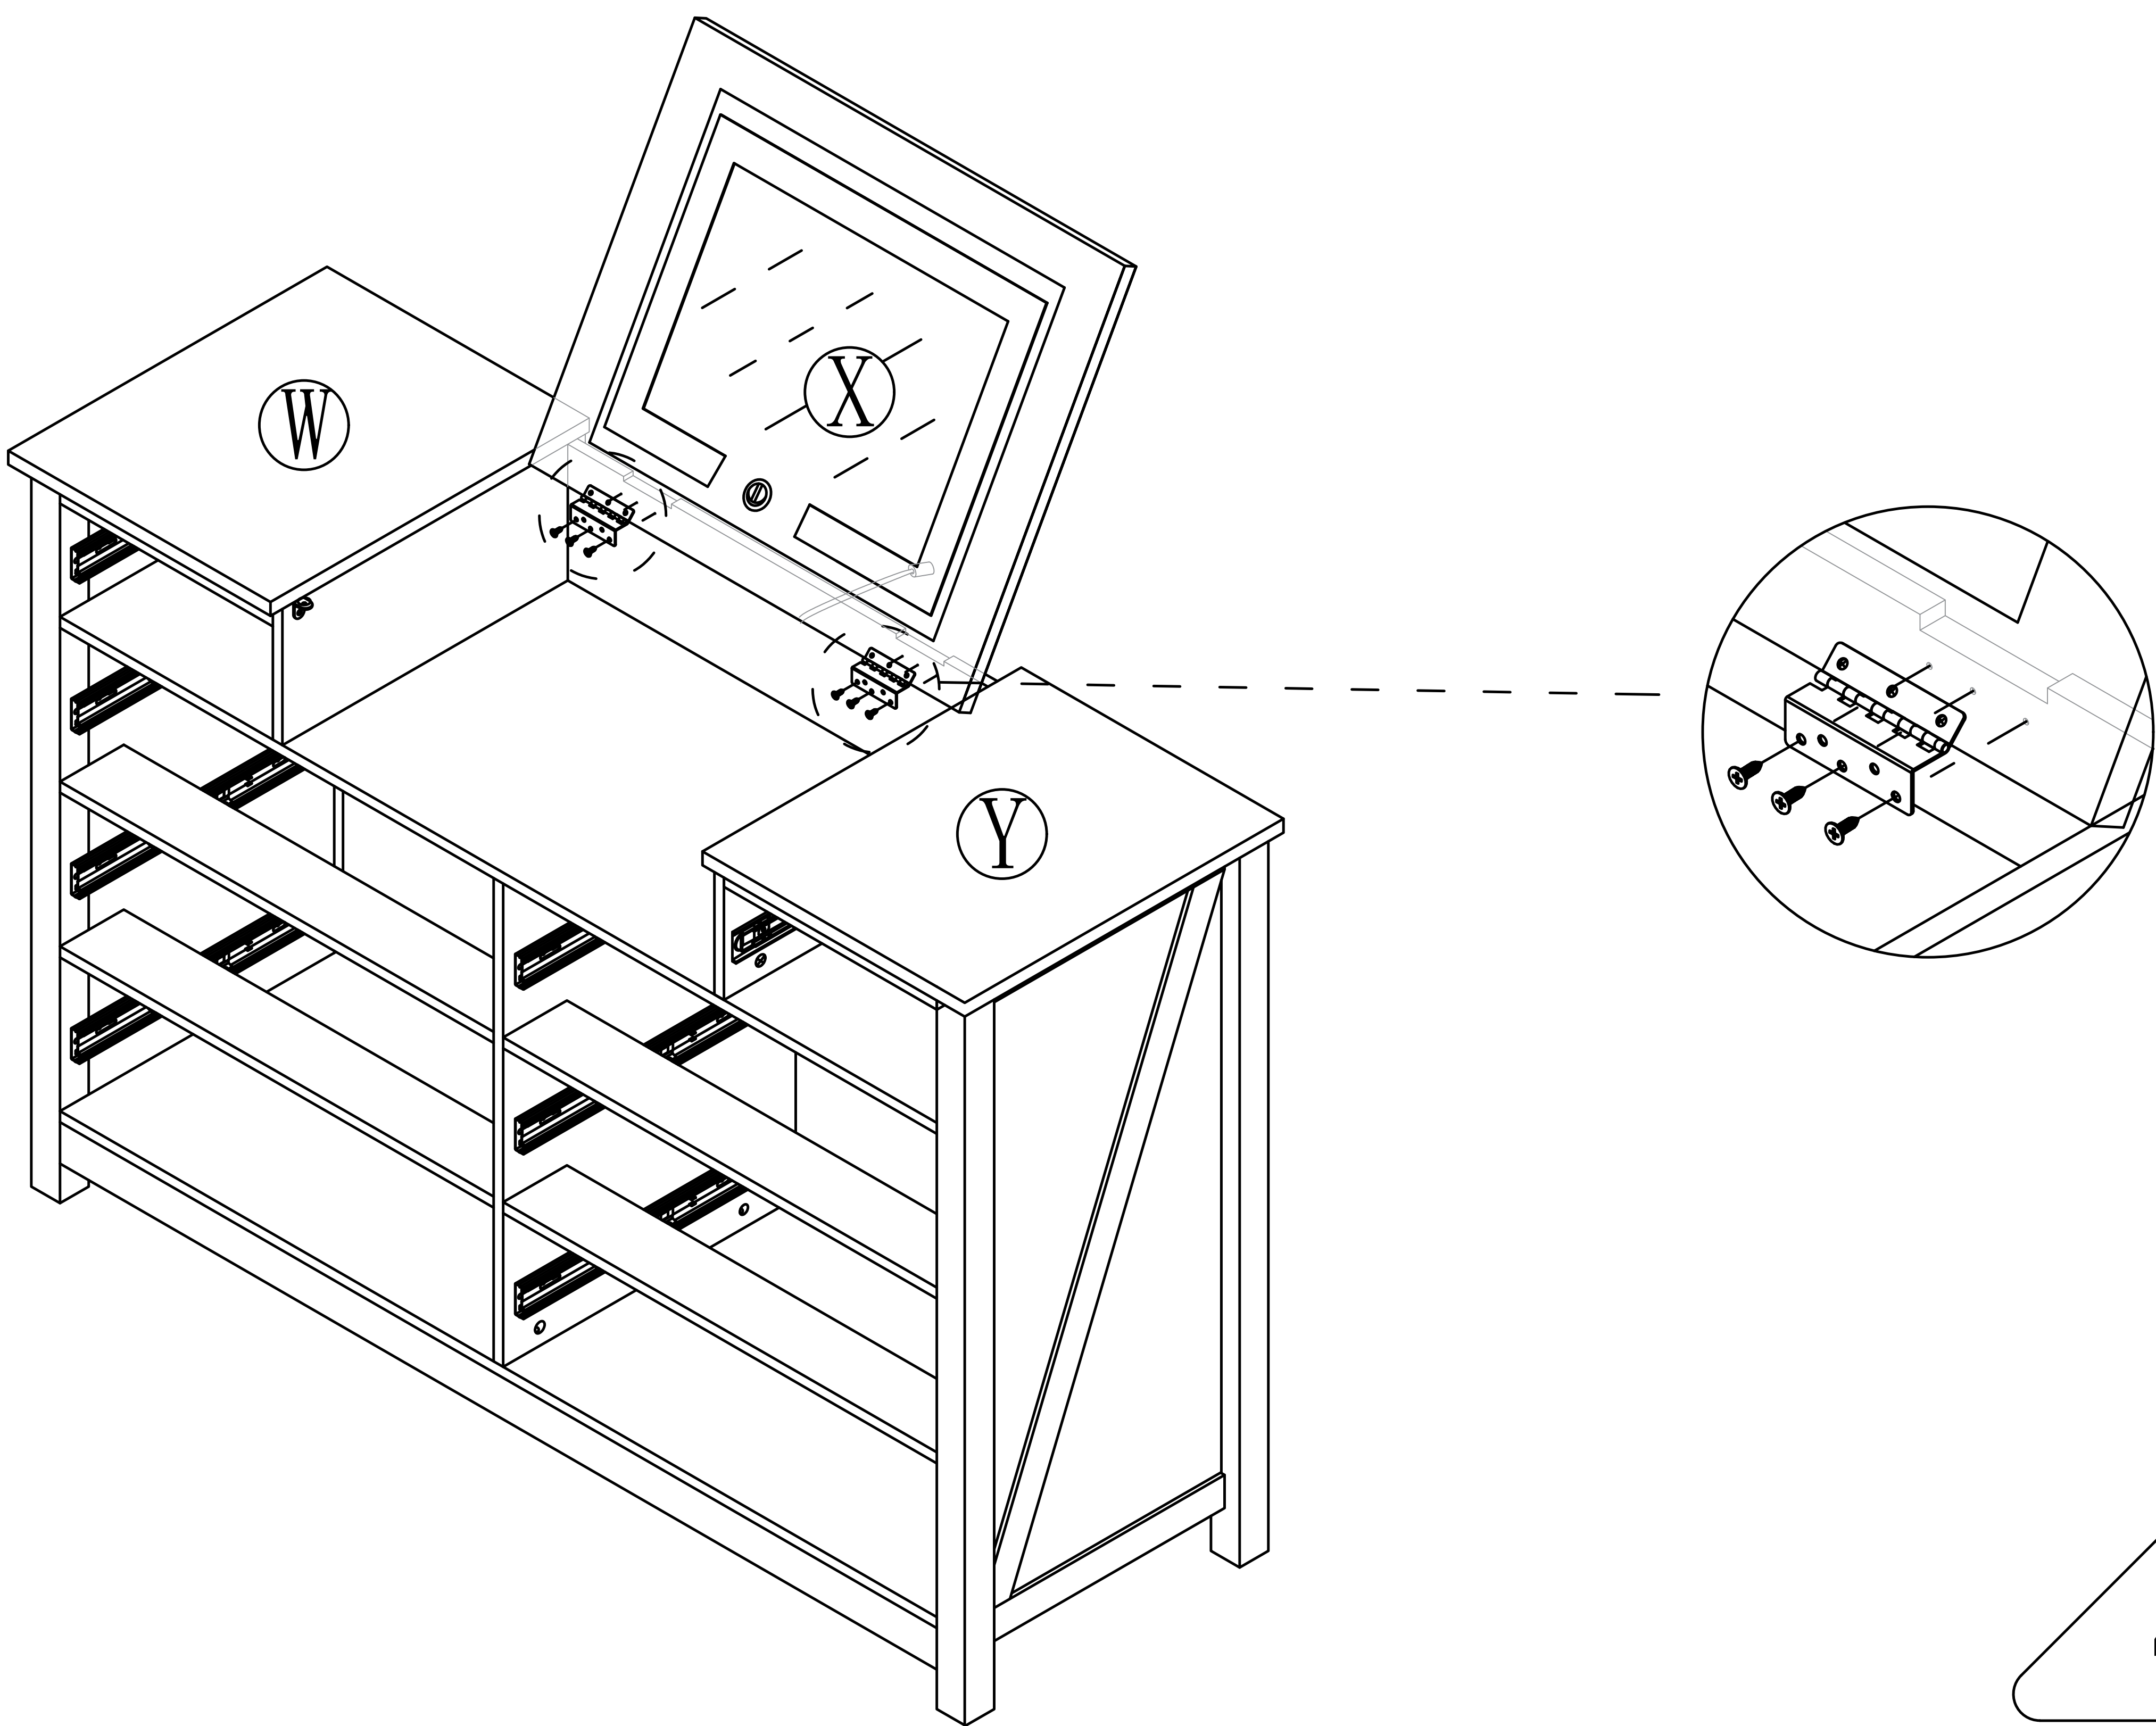



Step 65

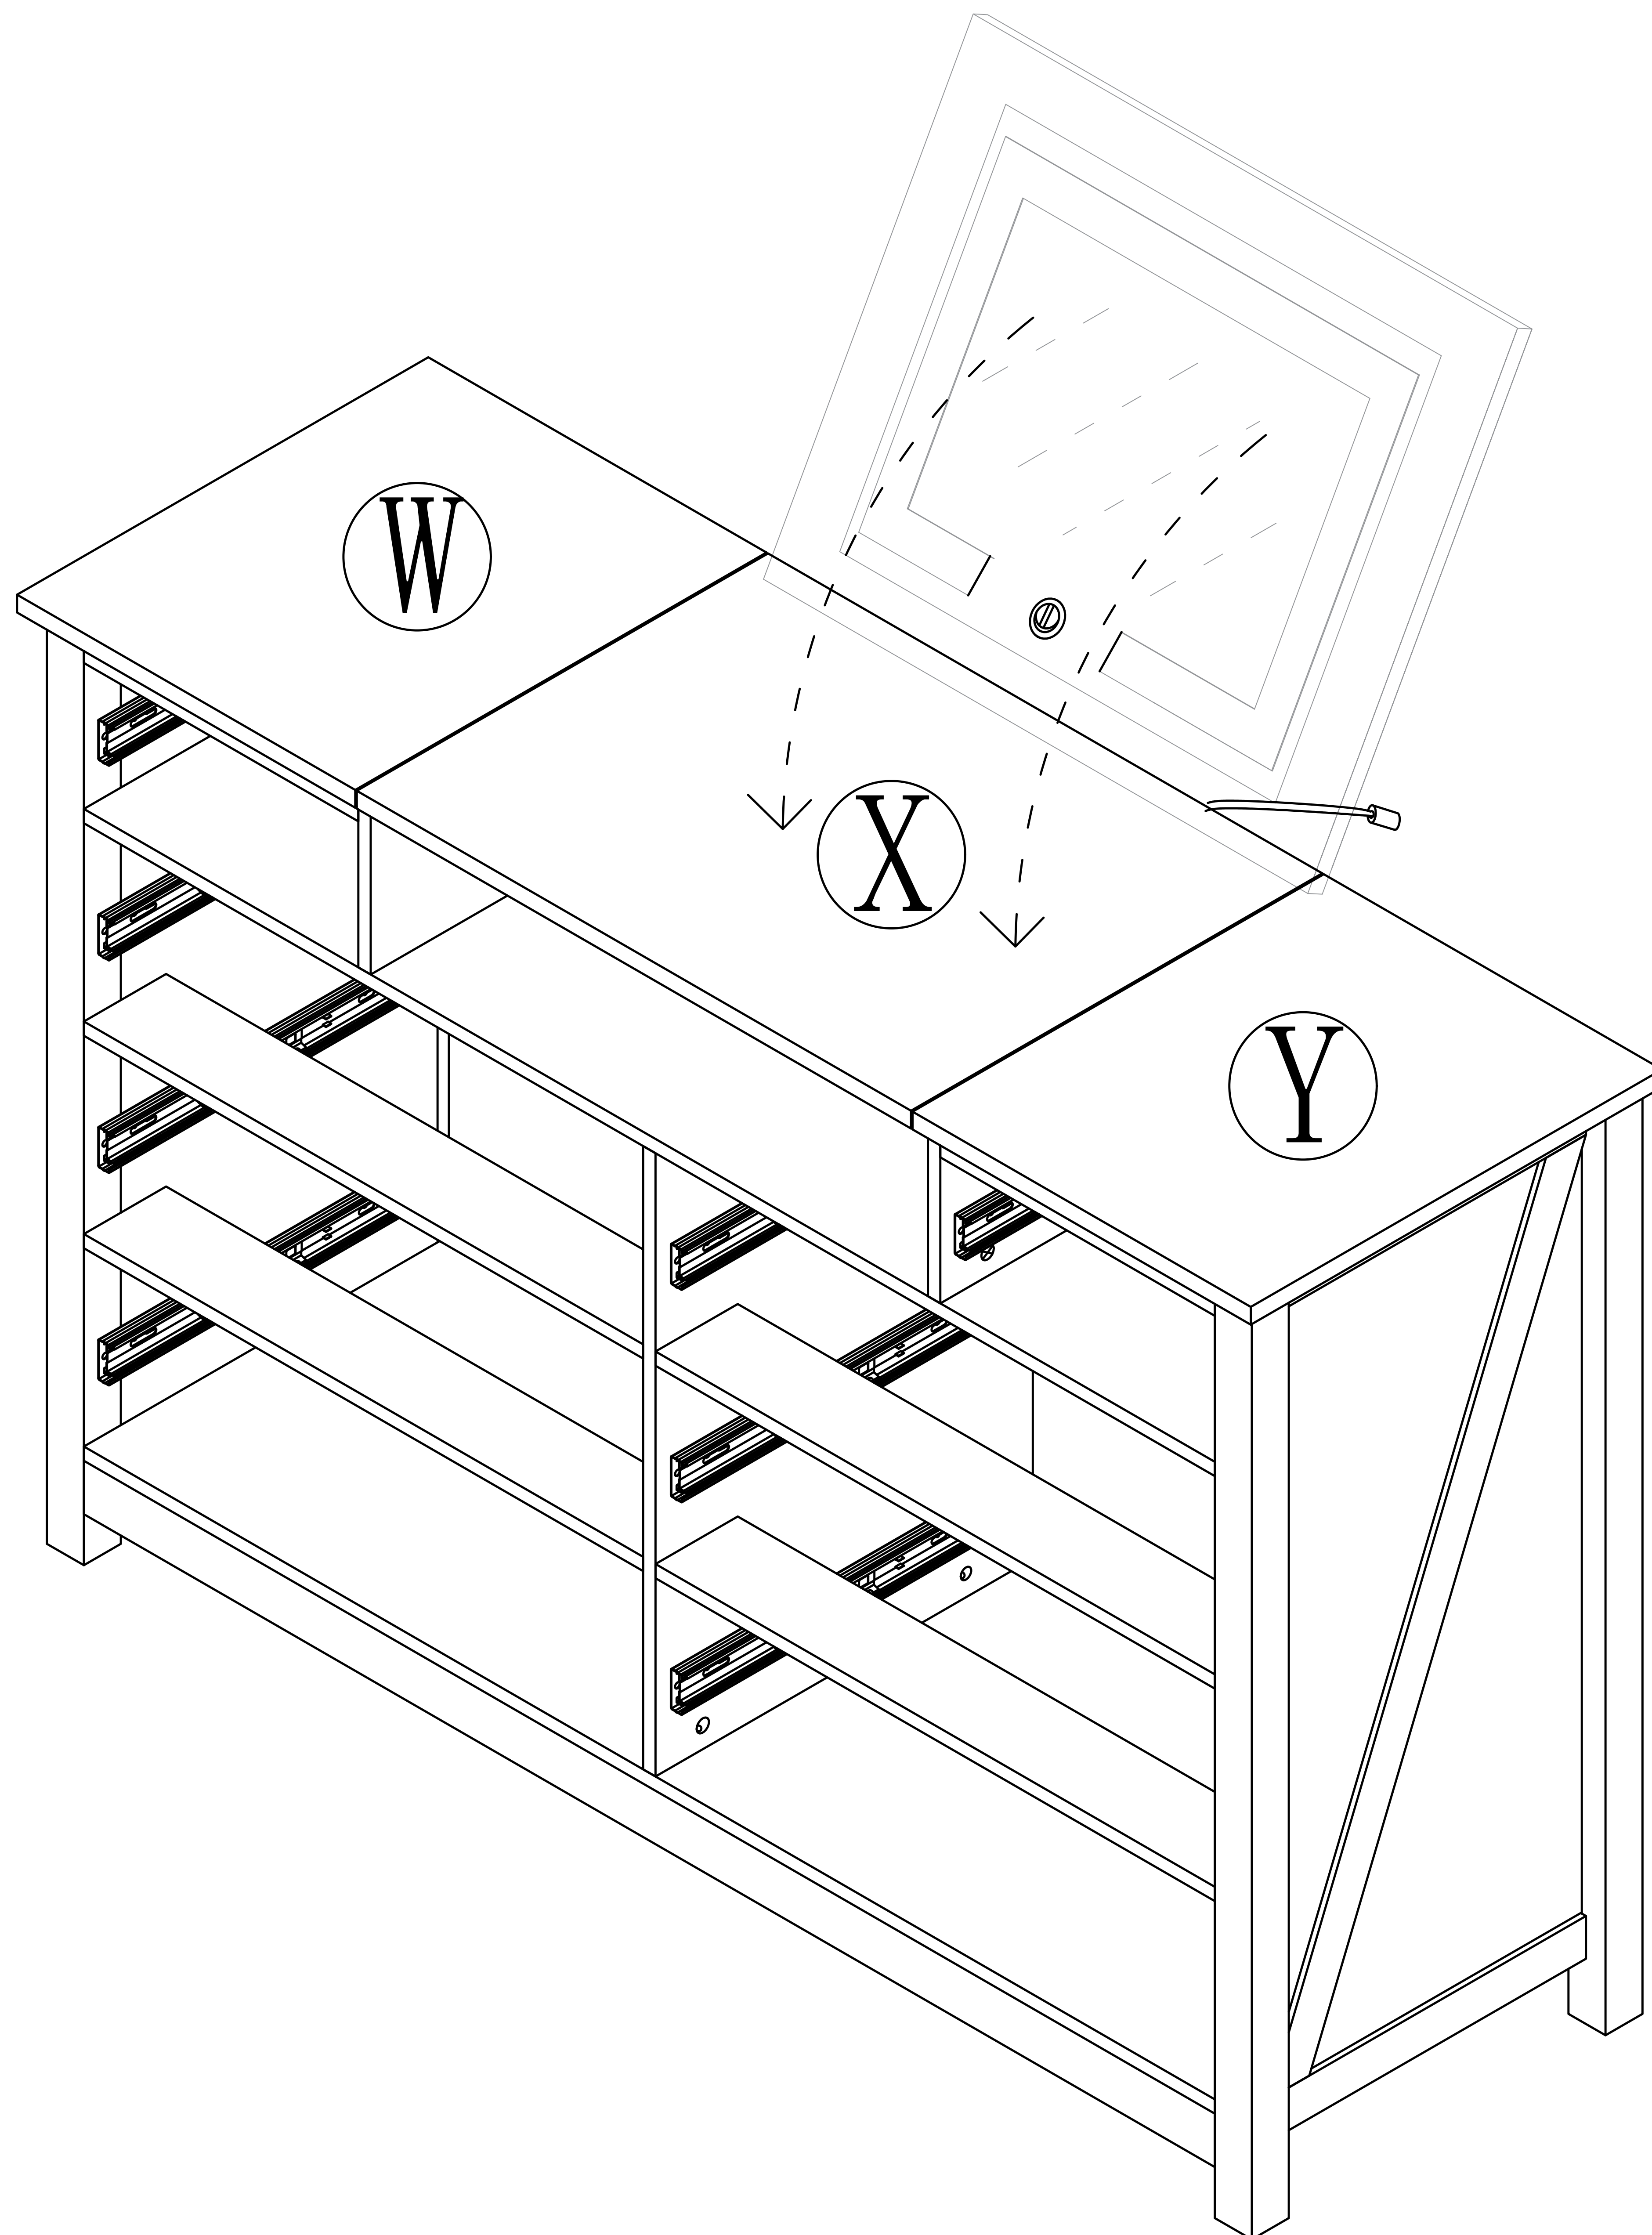

Attention:


1. Please gently close the mirror panel
2. After installing the mirror panel you need to check if you need to adjust the position slightly

Step 66

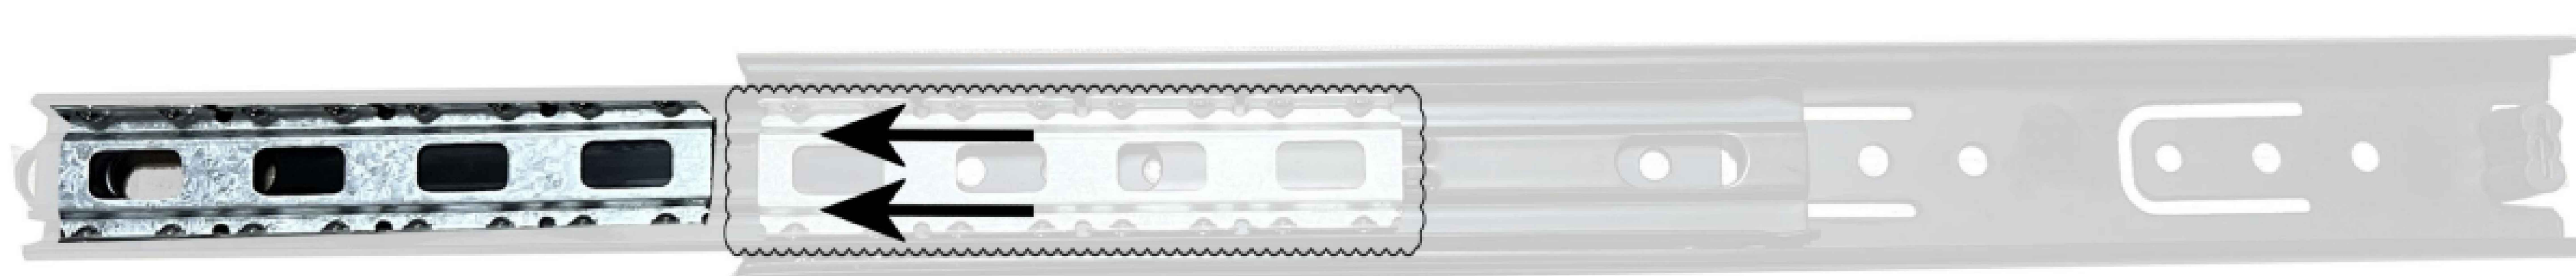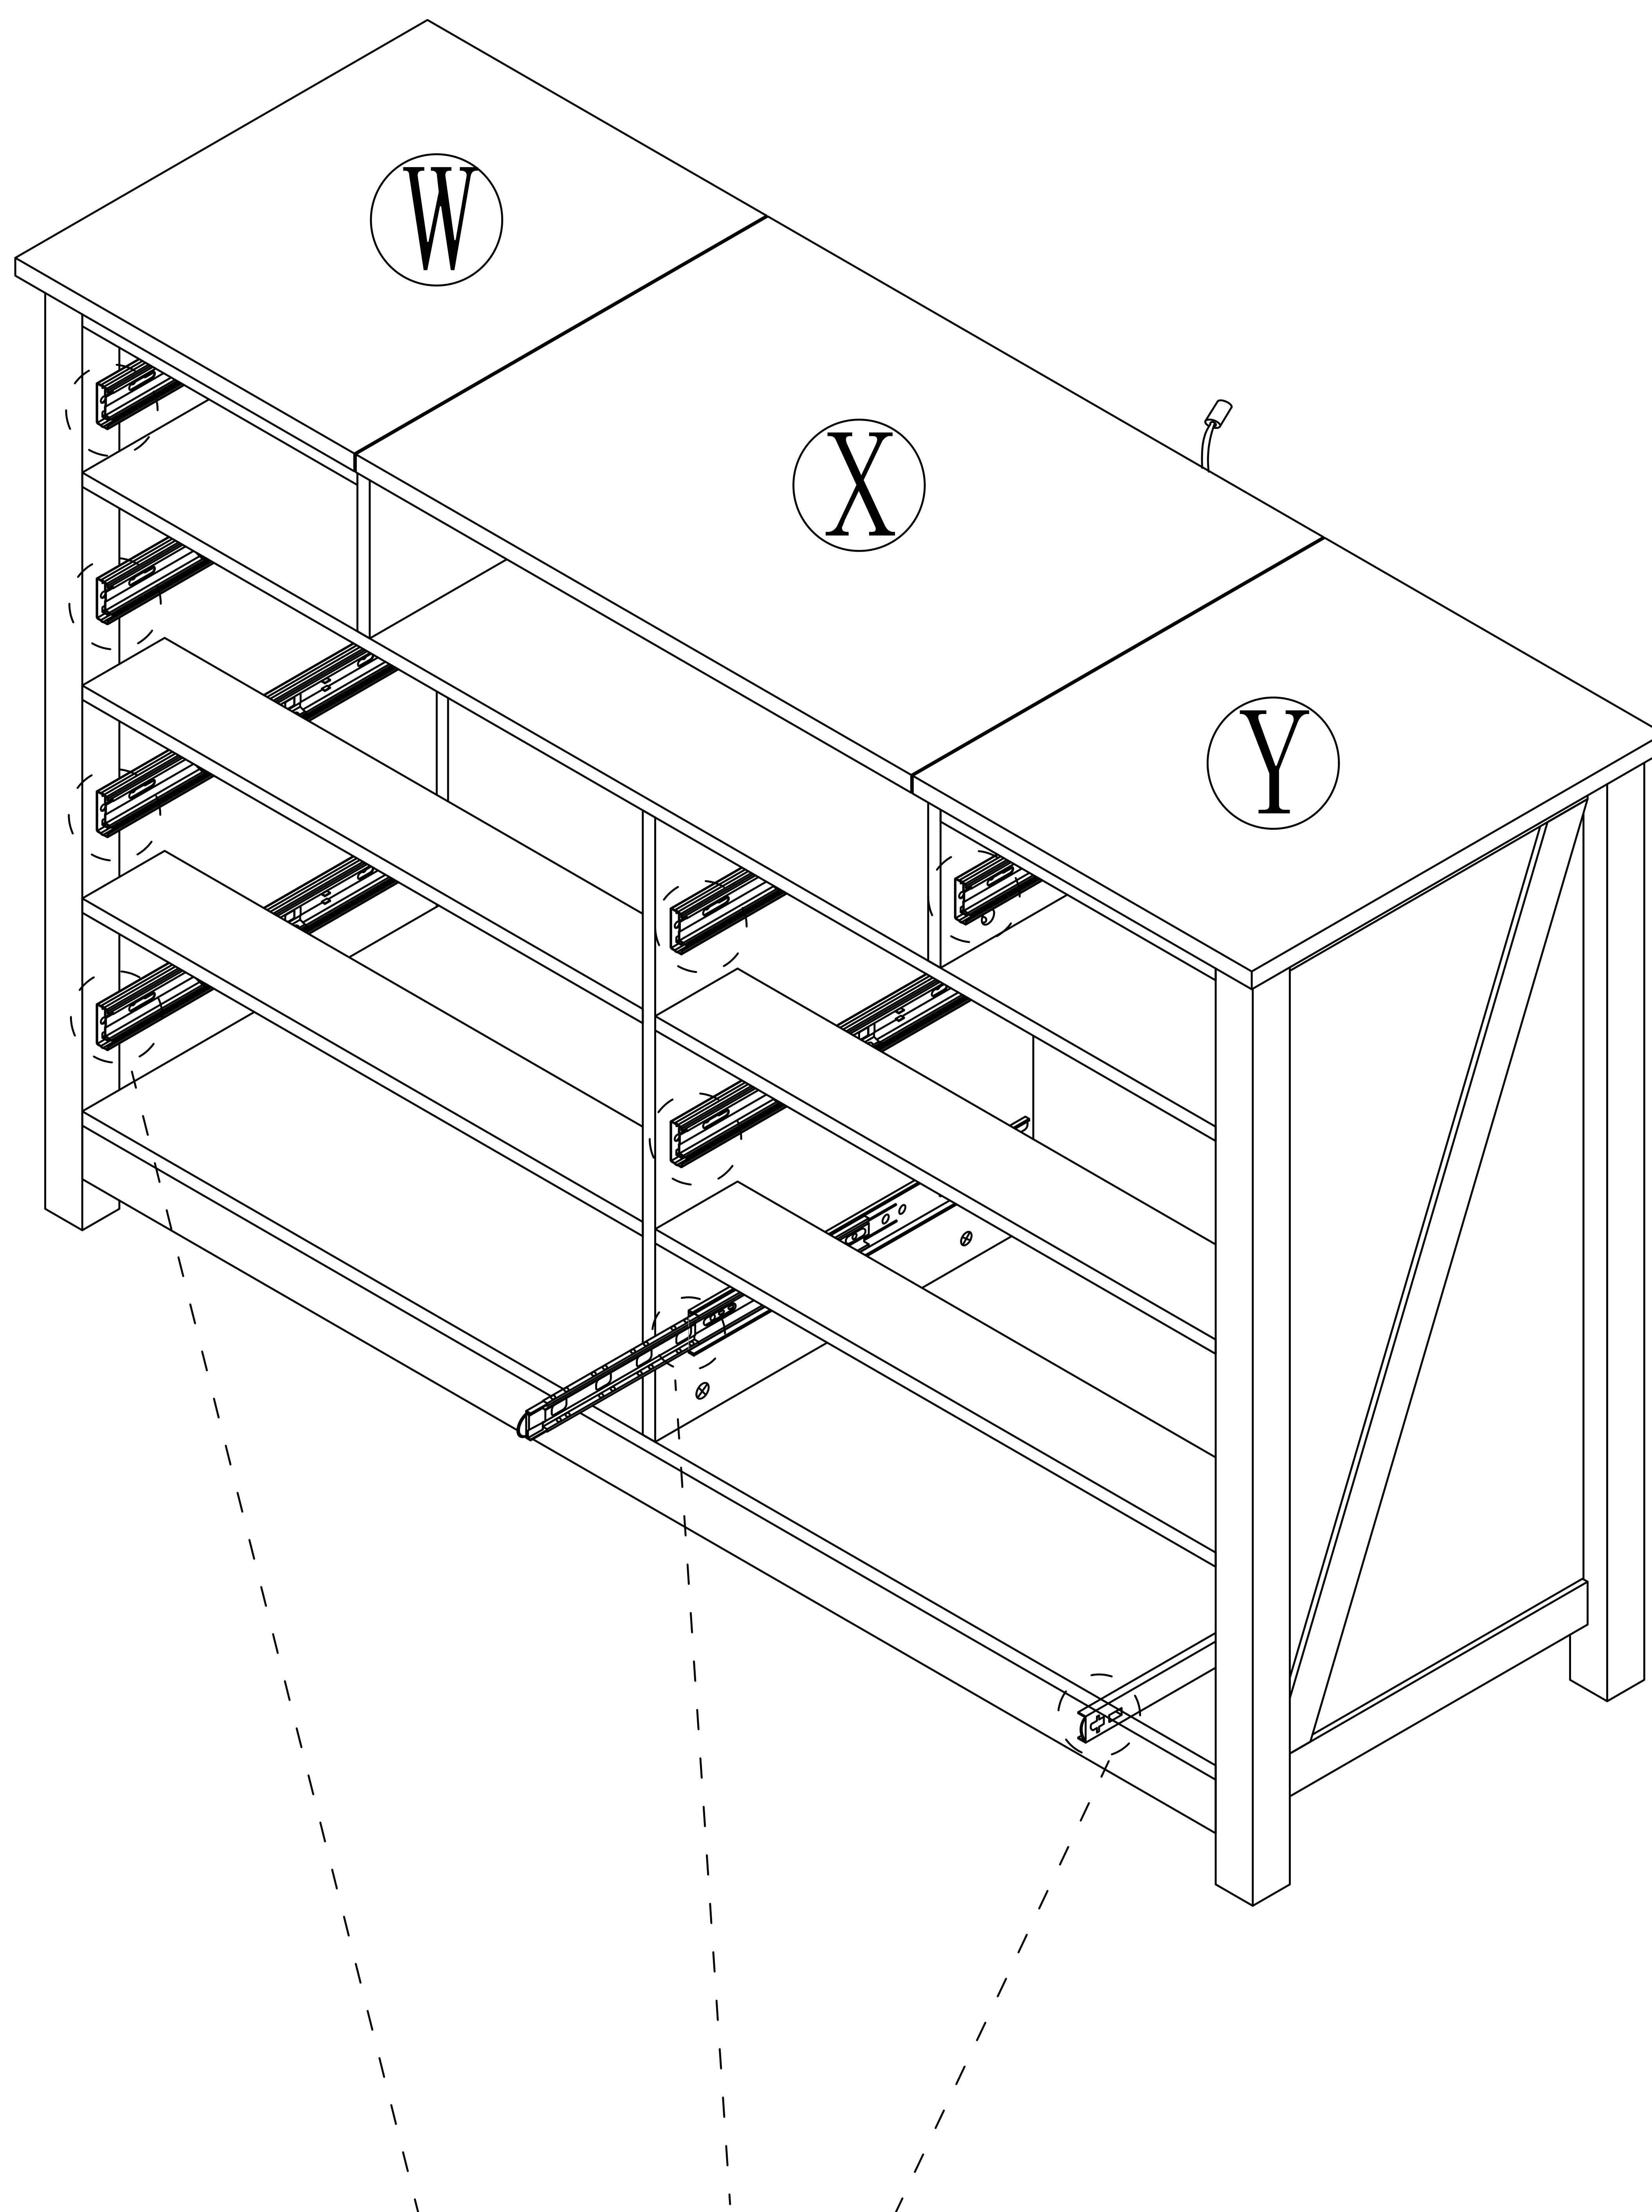


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 67

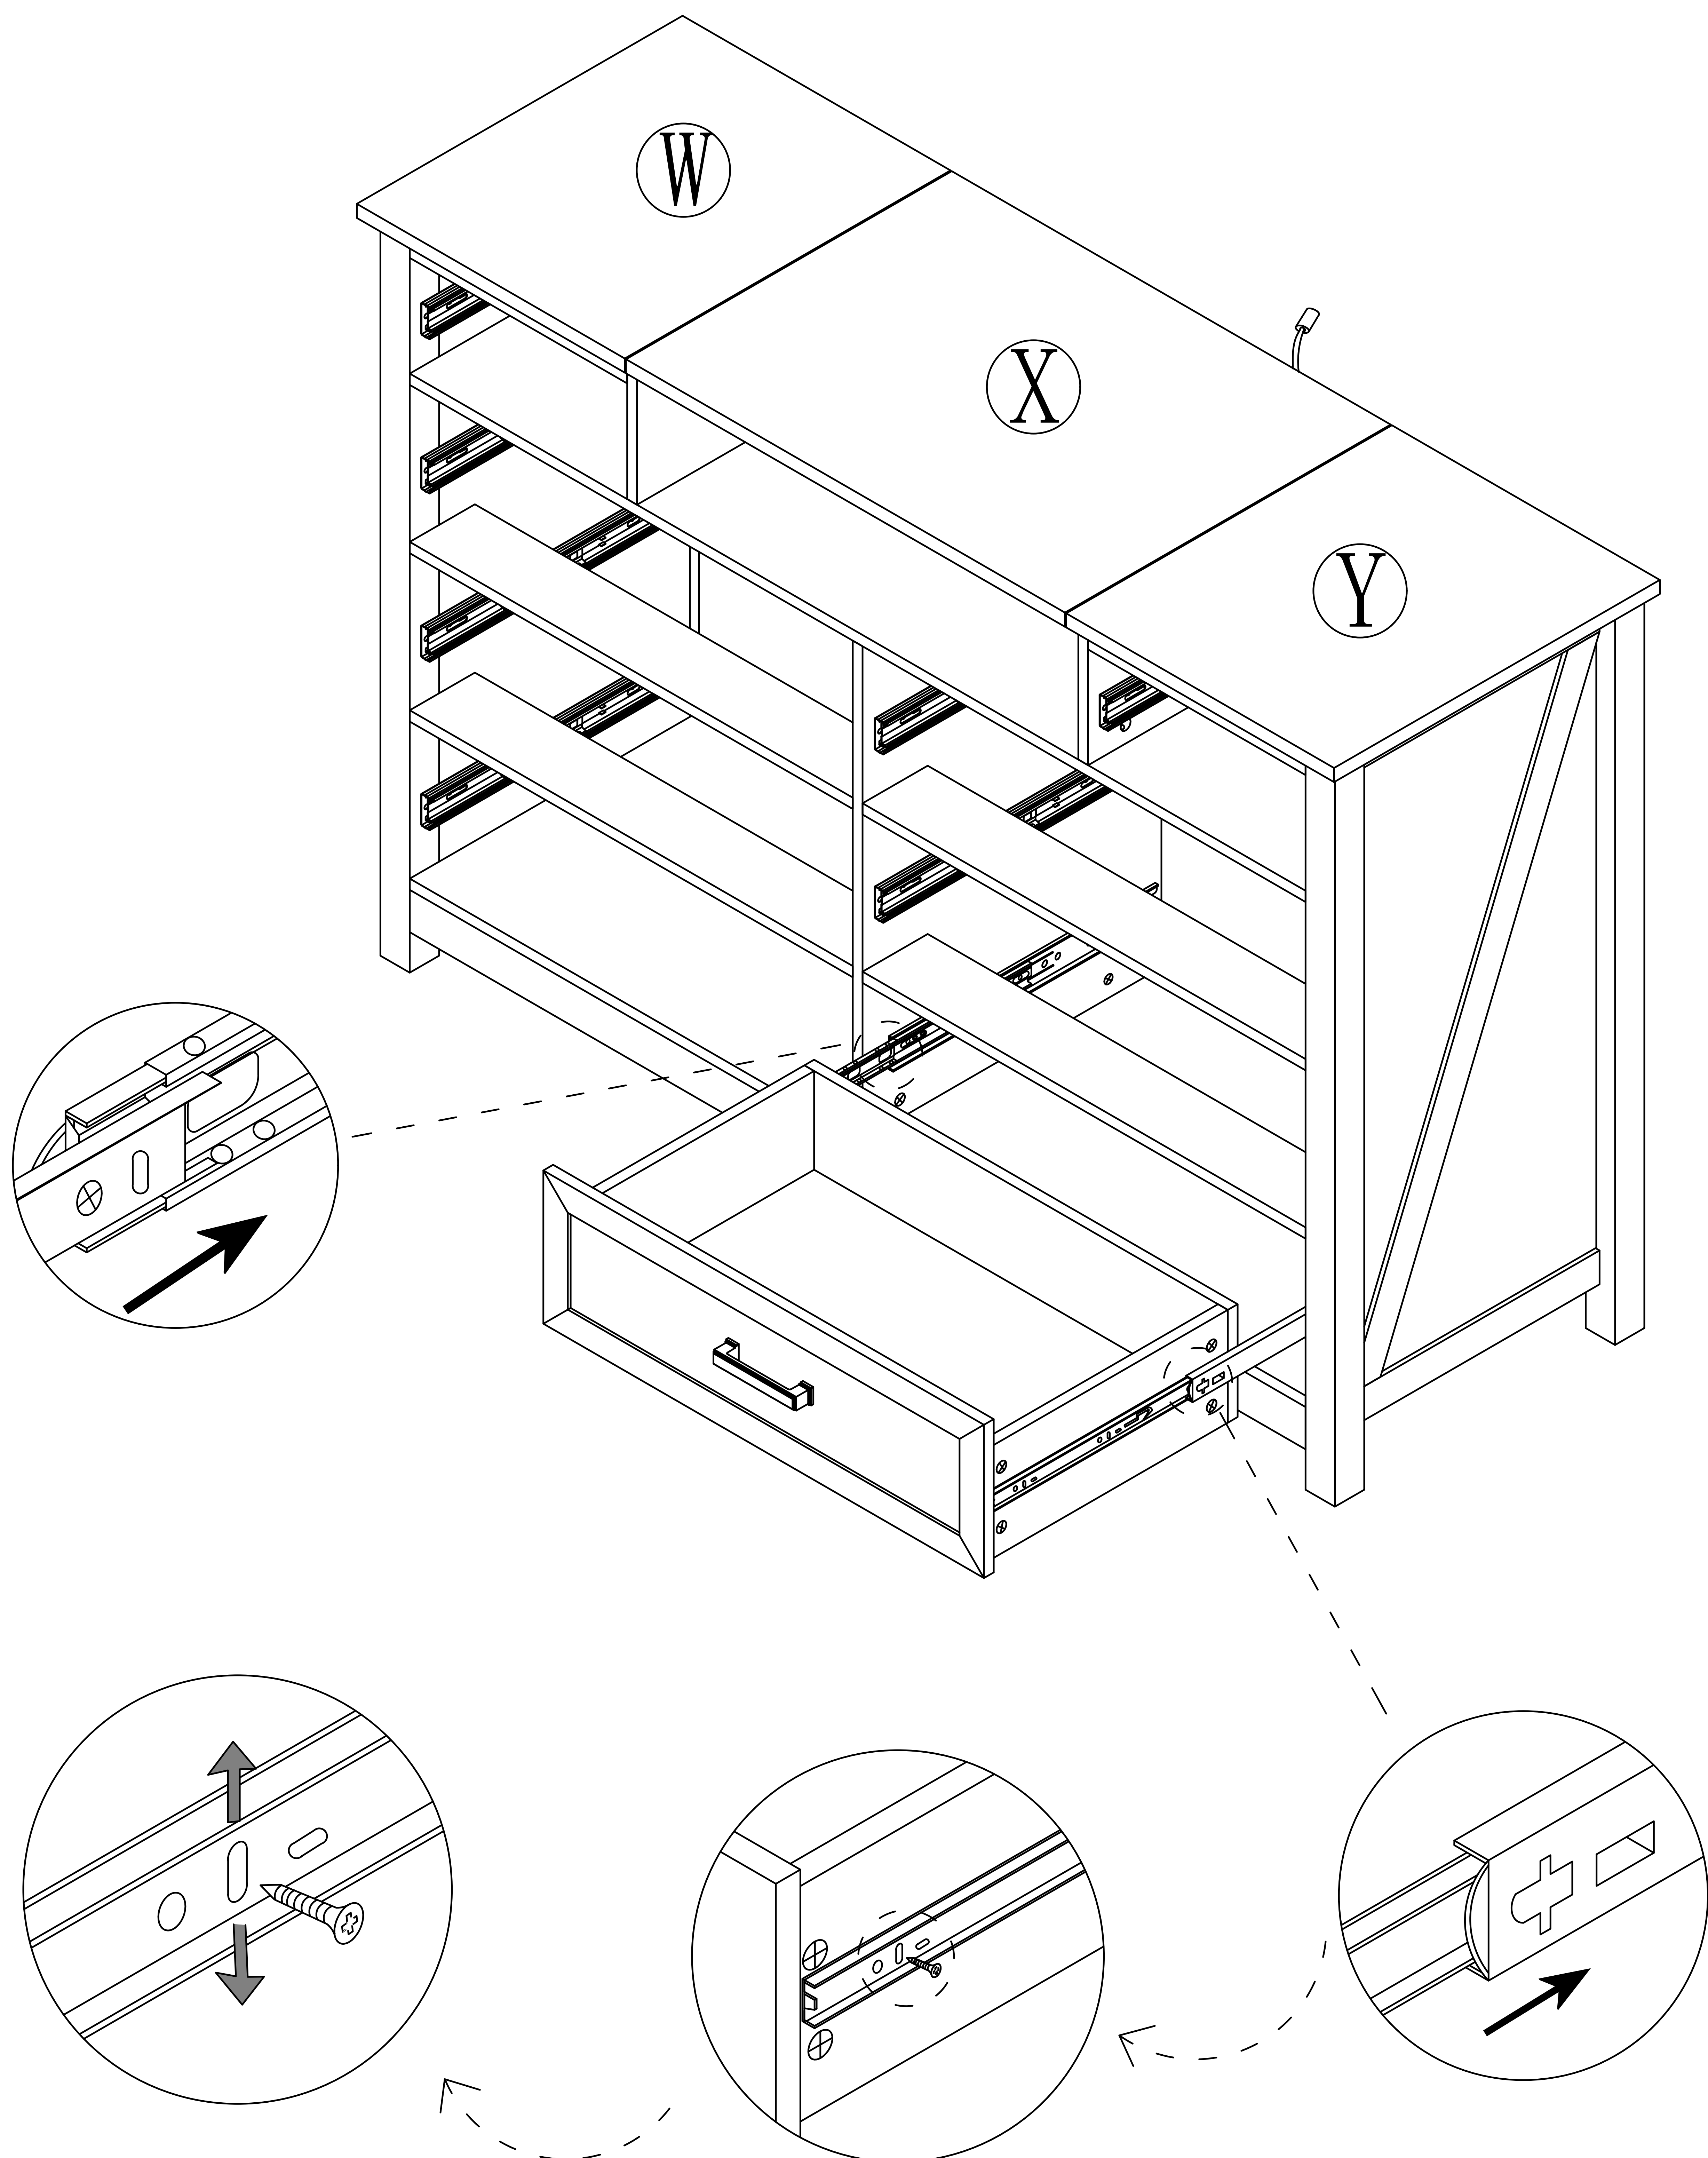


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 68



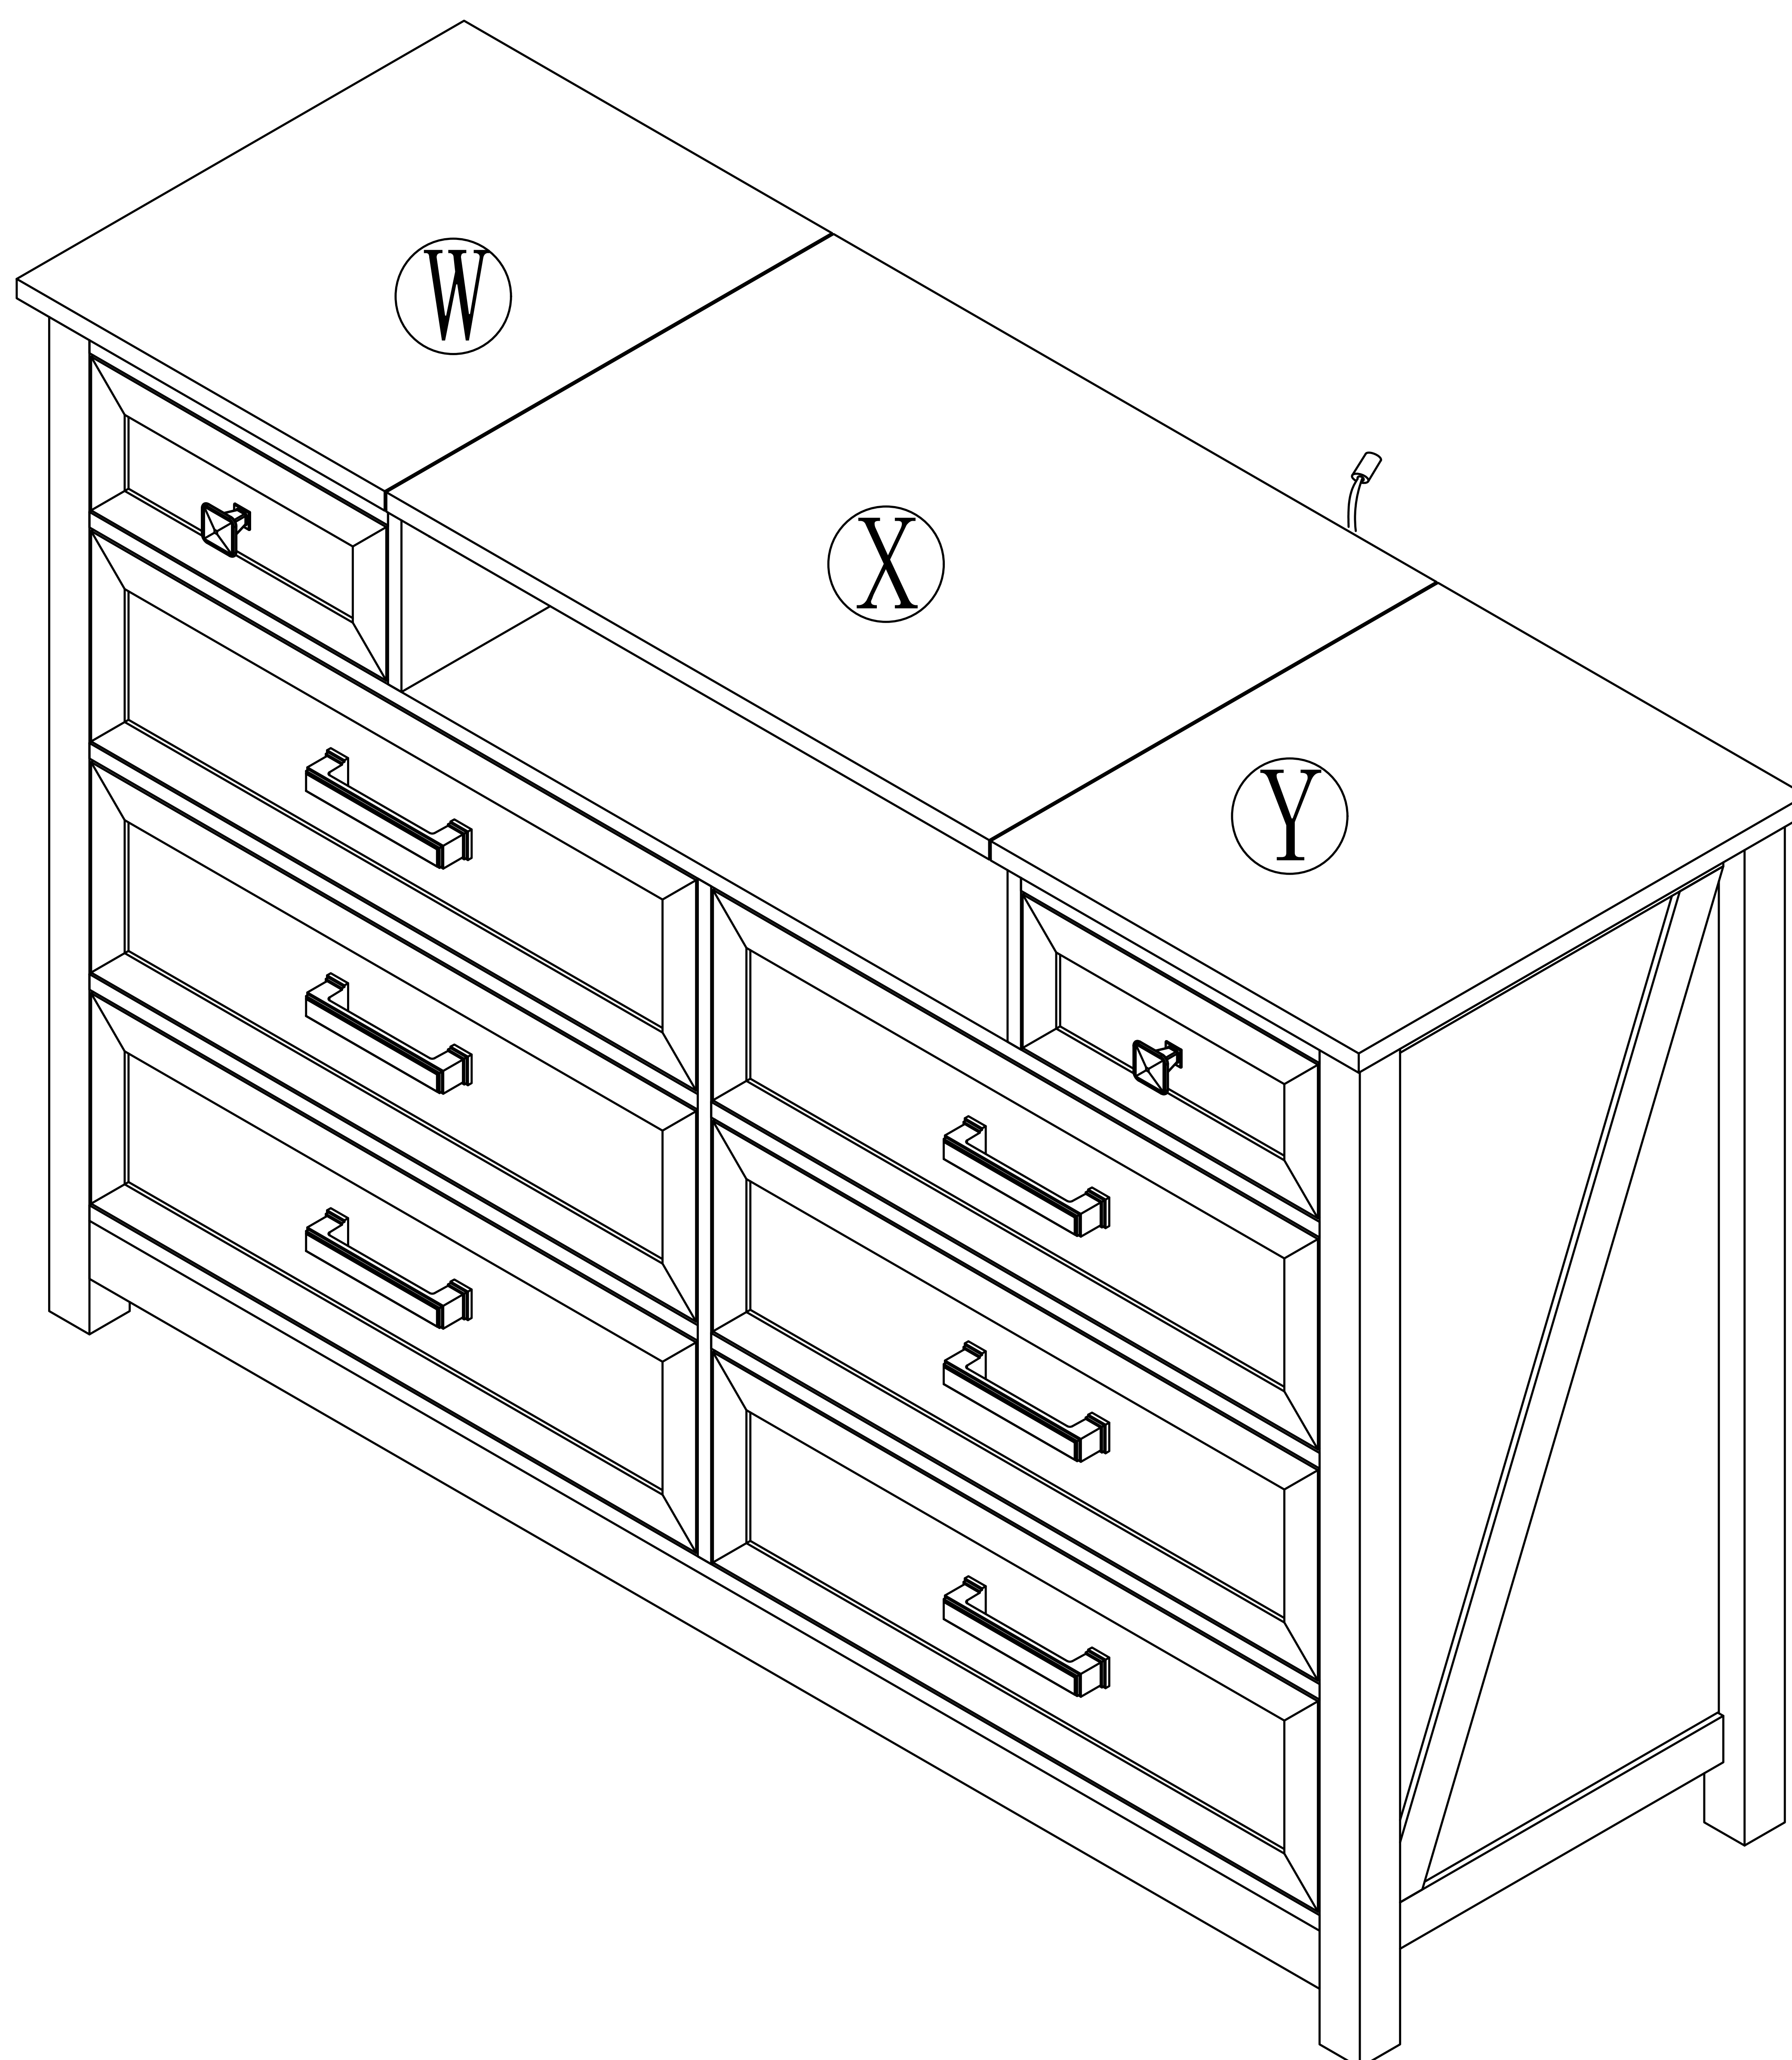


Repeat the drawer installation steps

Step 69

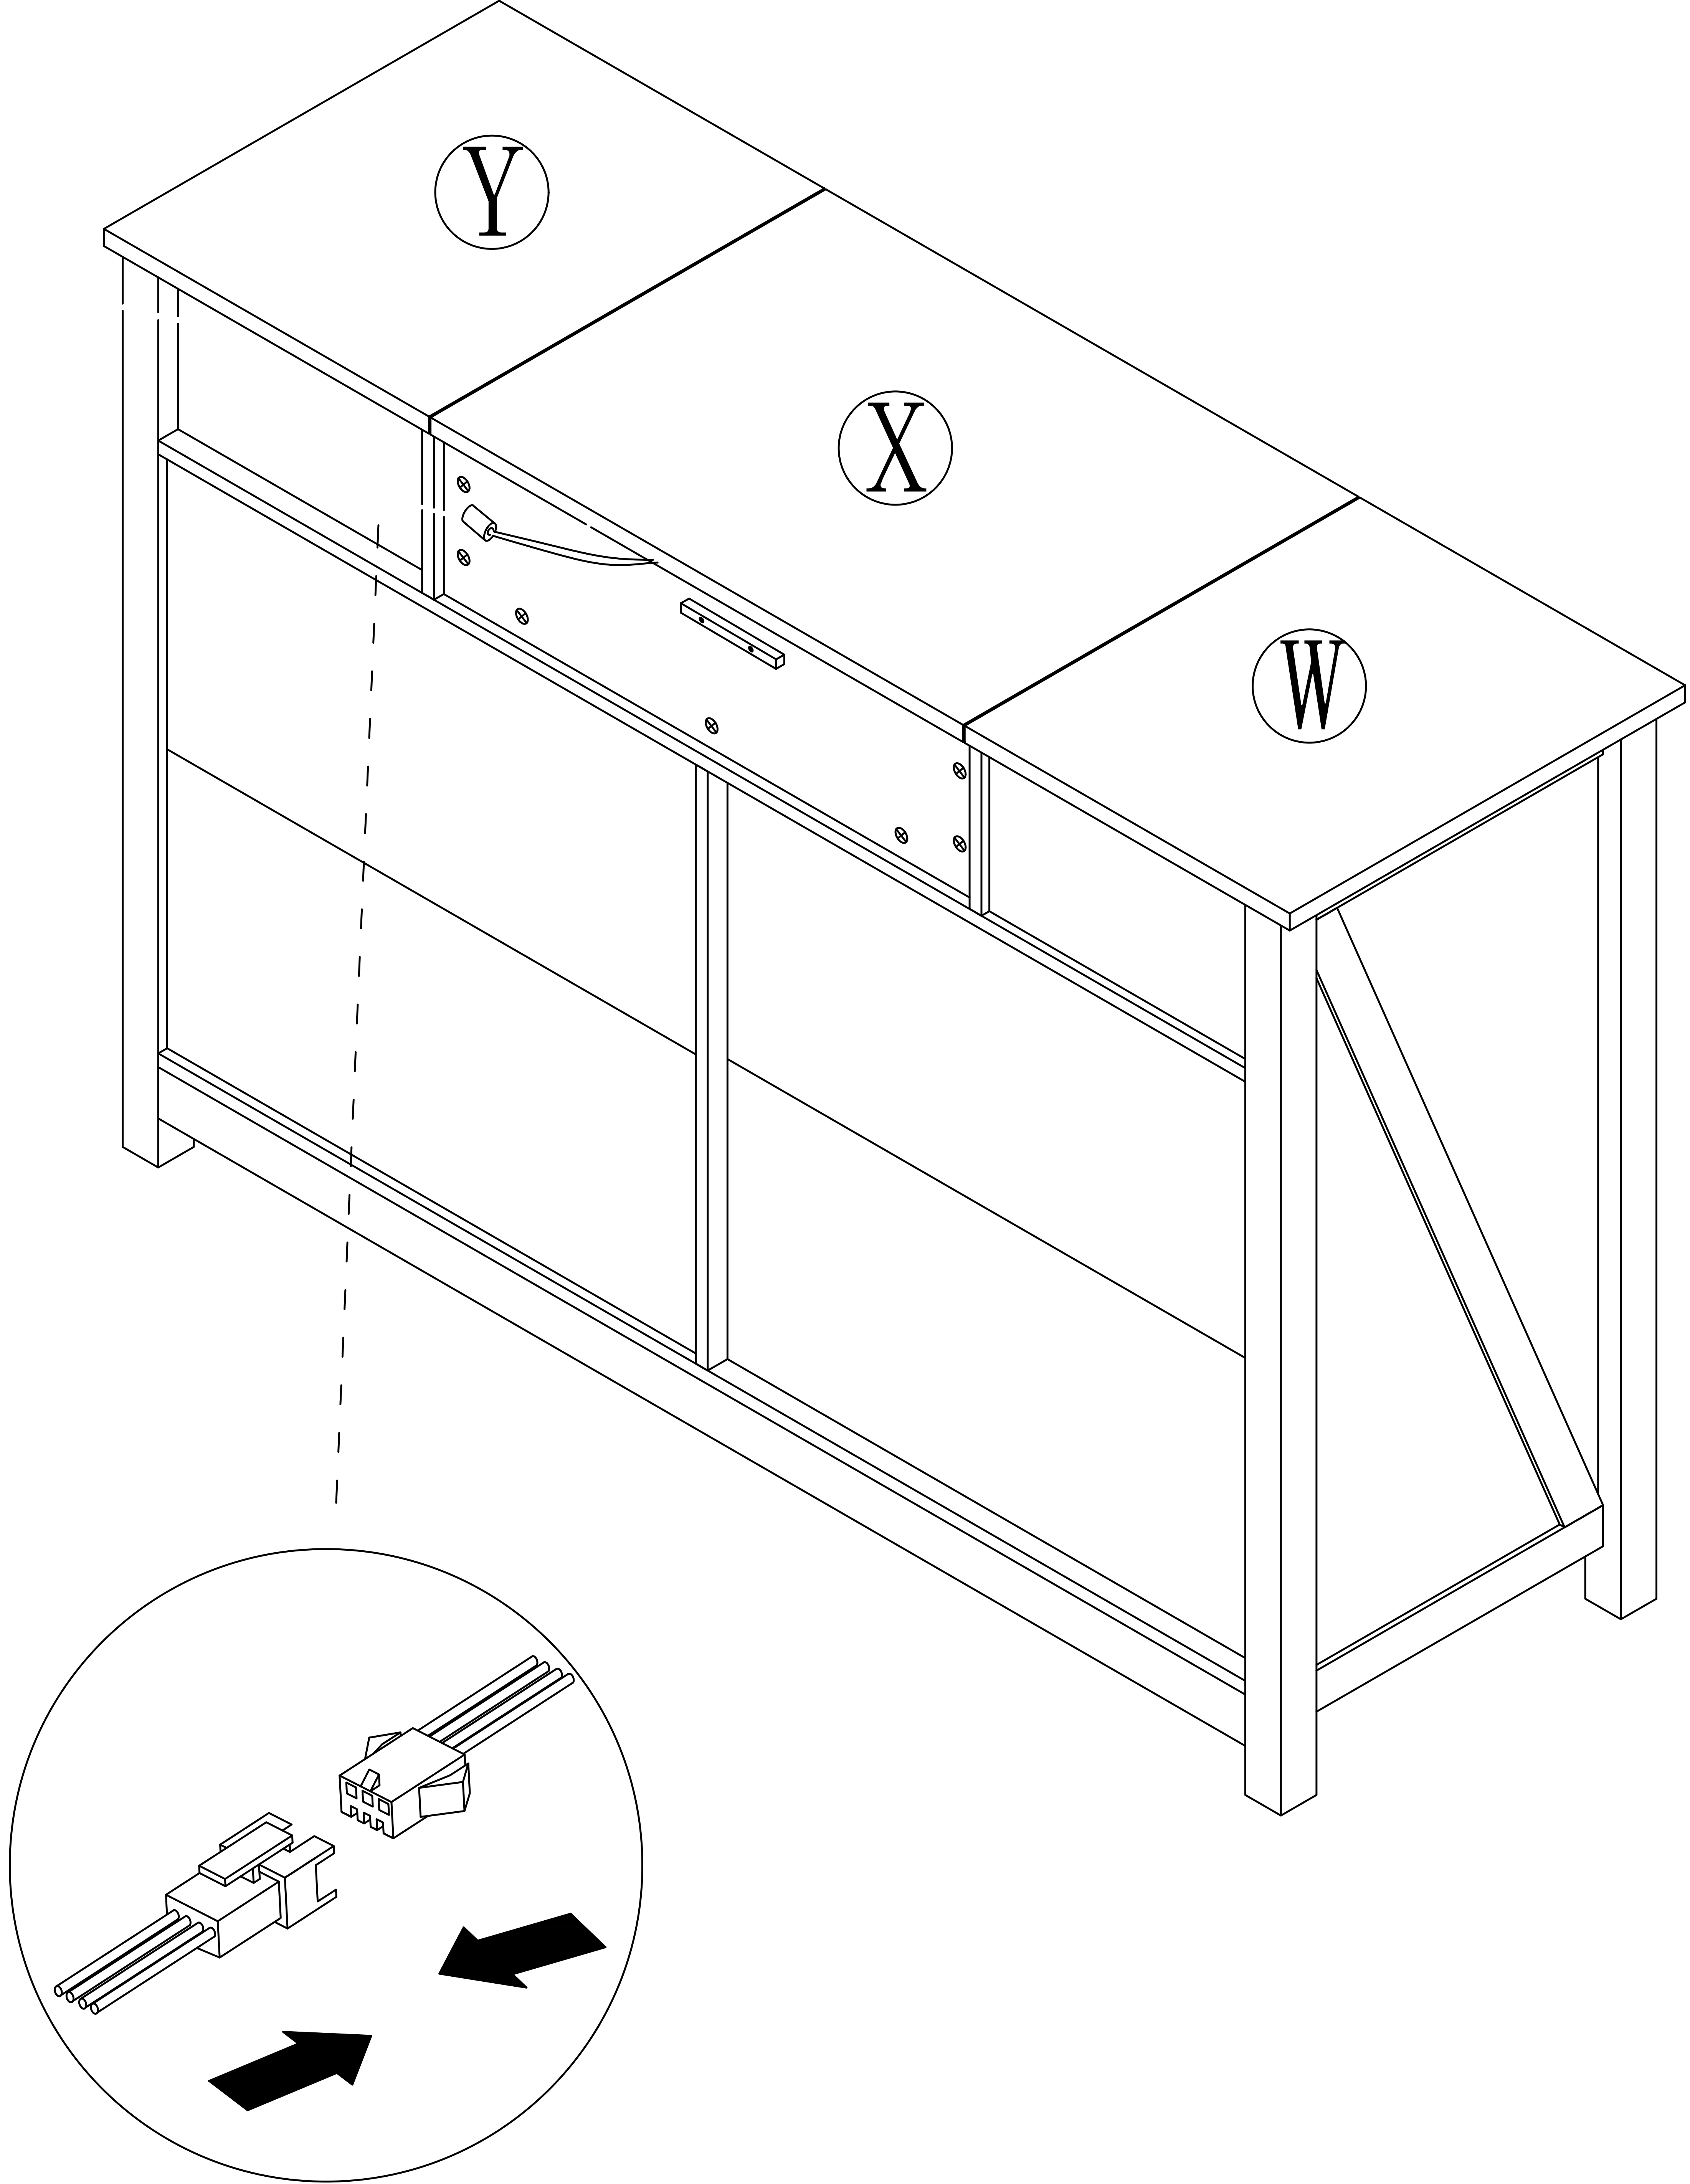



Step 70

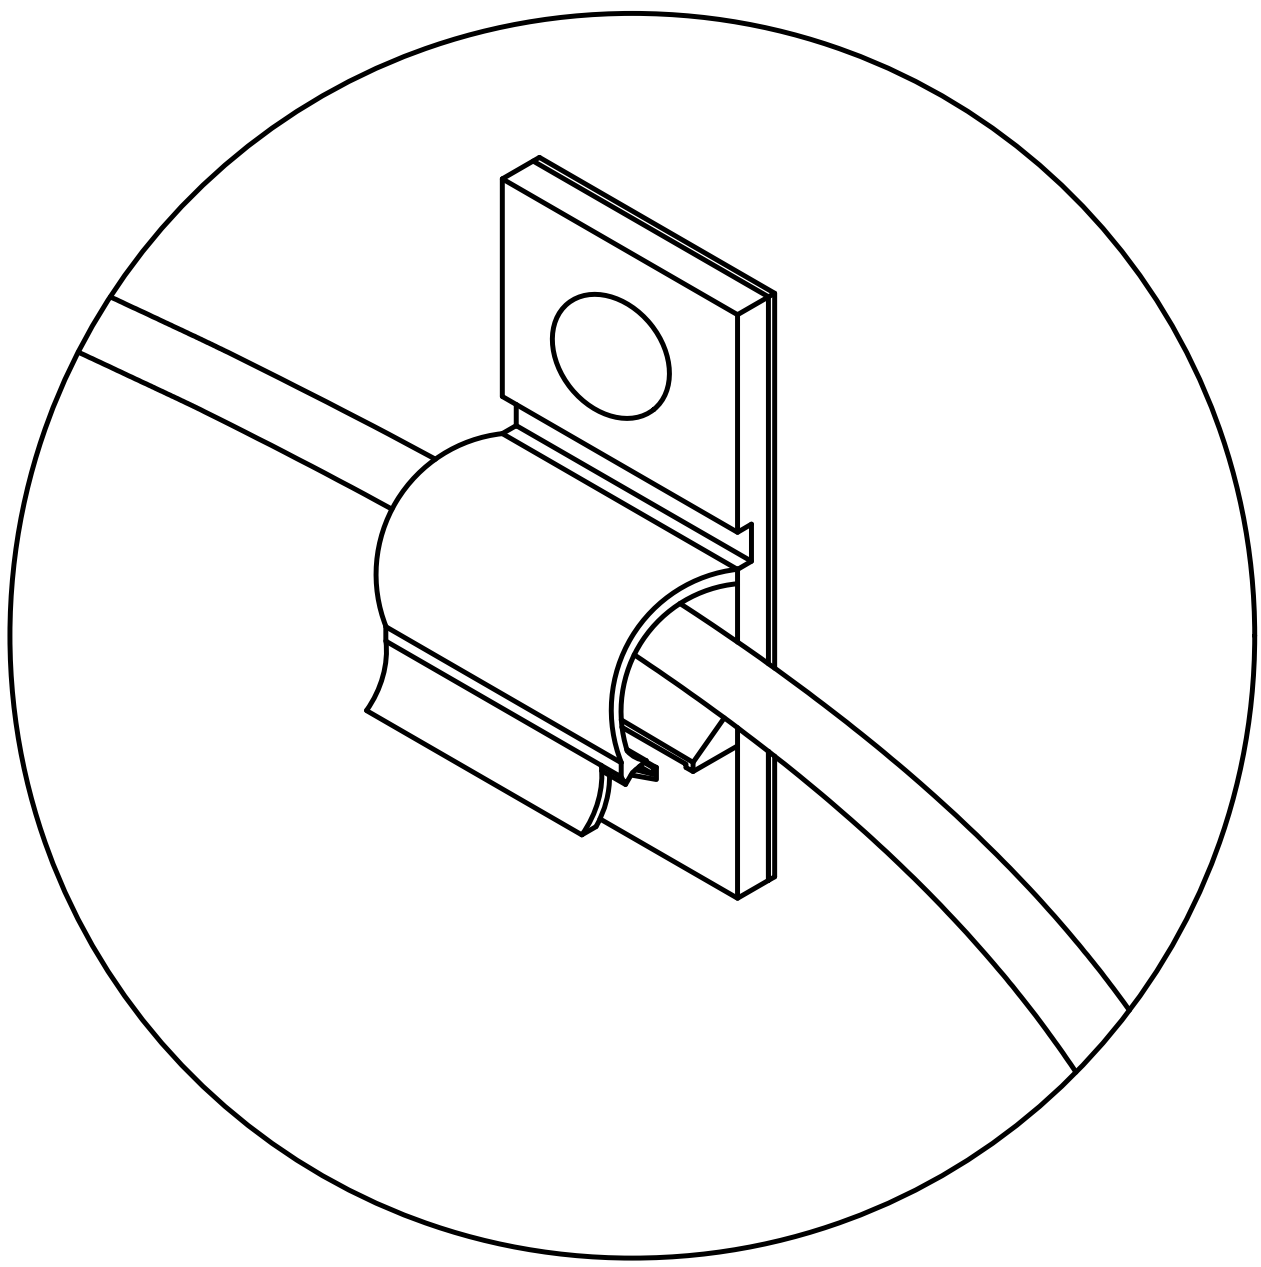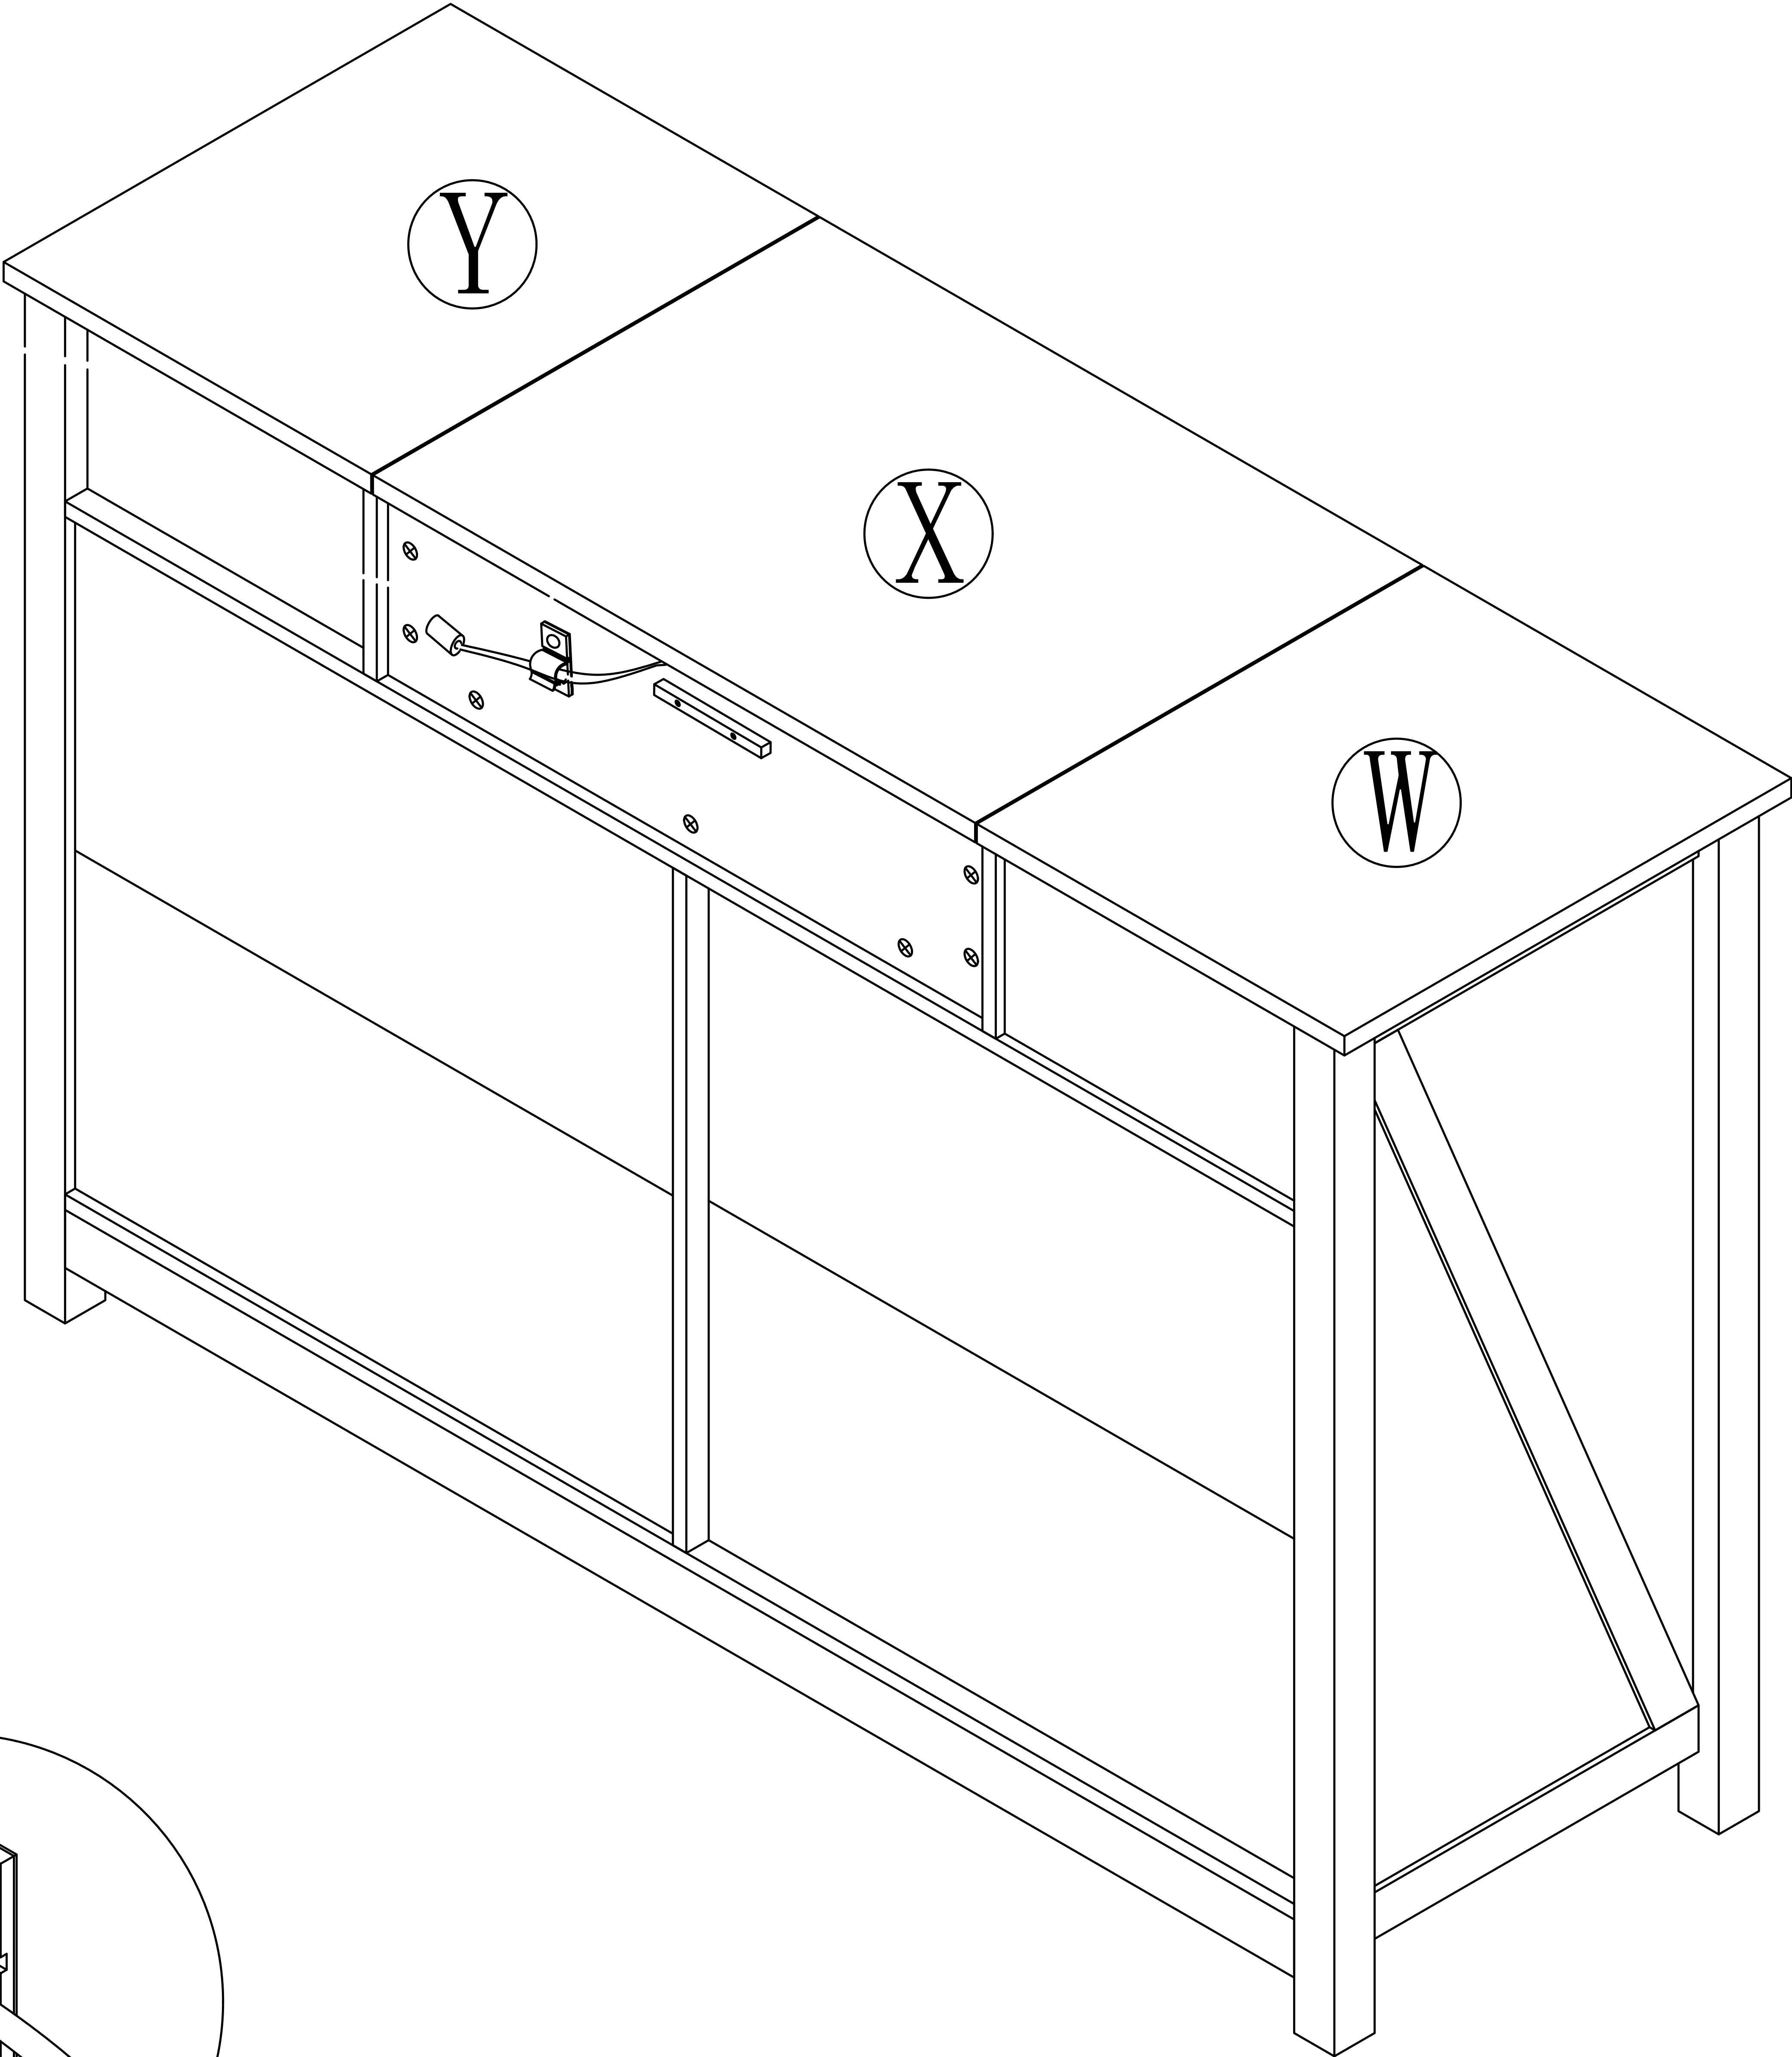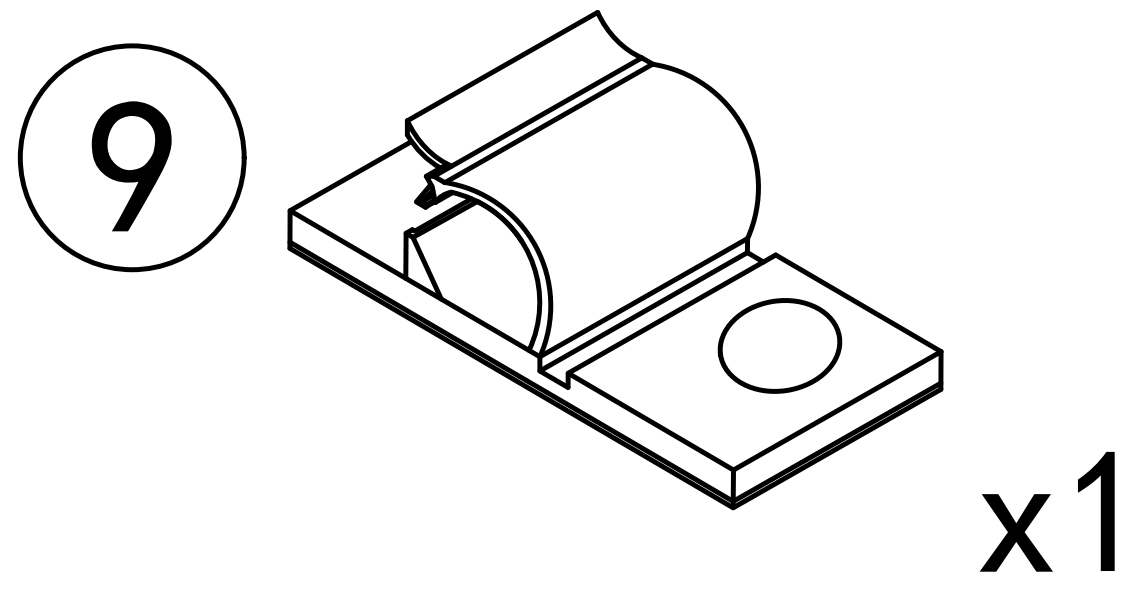


Step 71

7

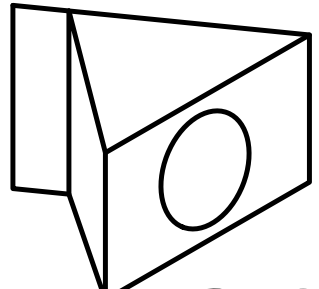

x20

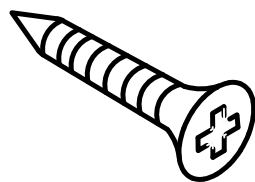

x20

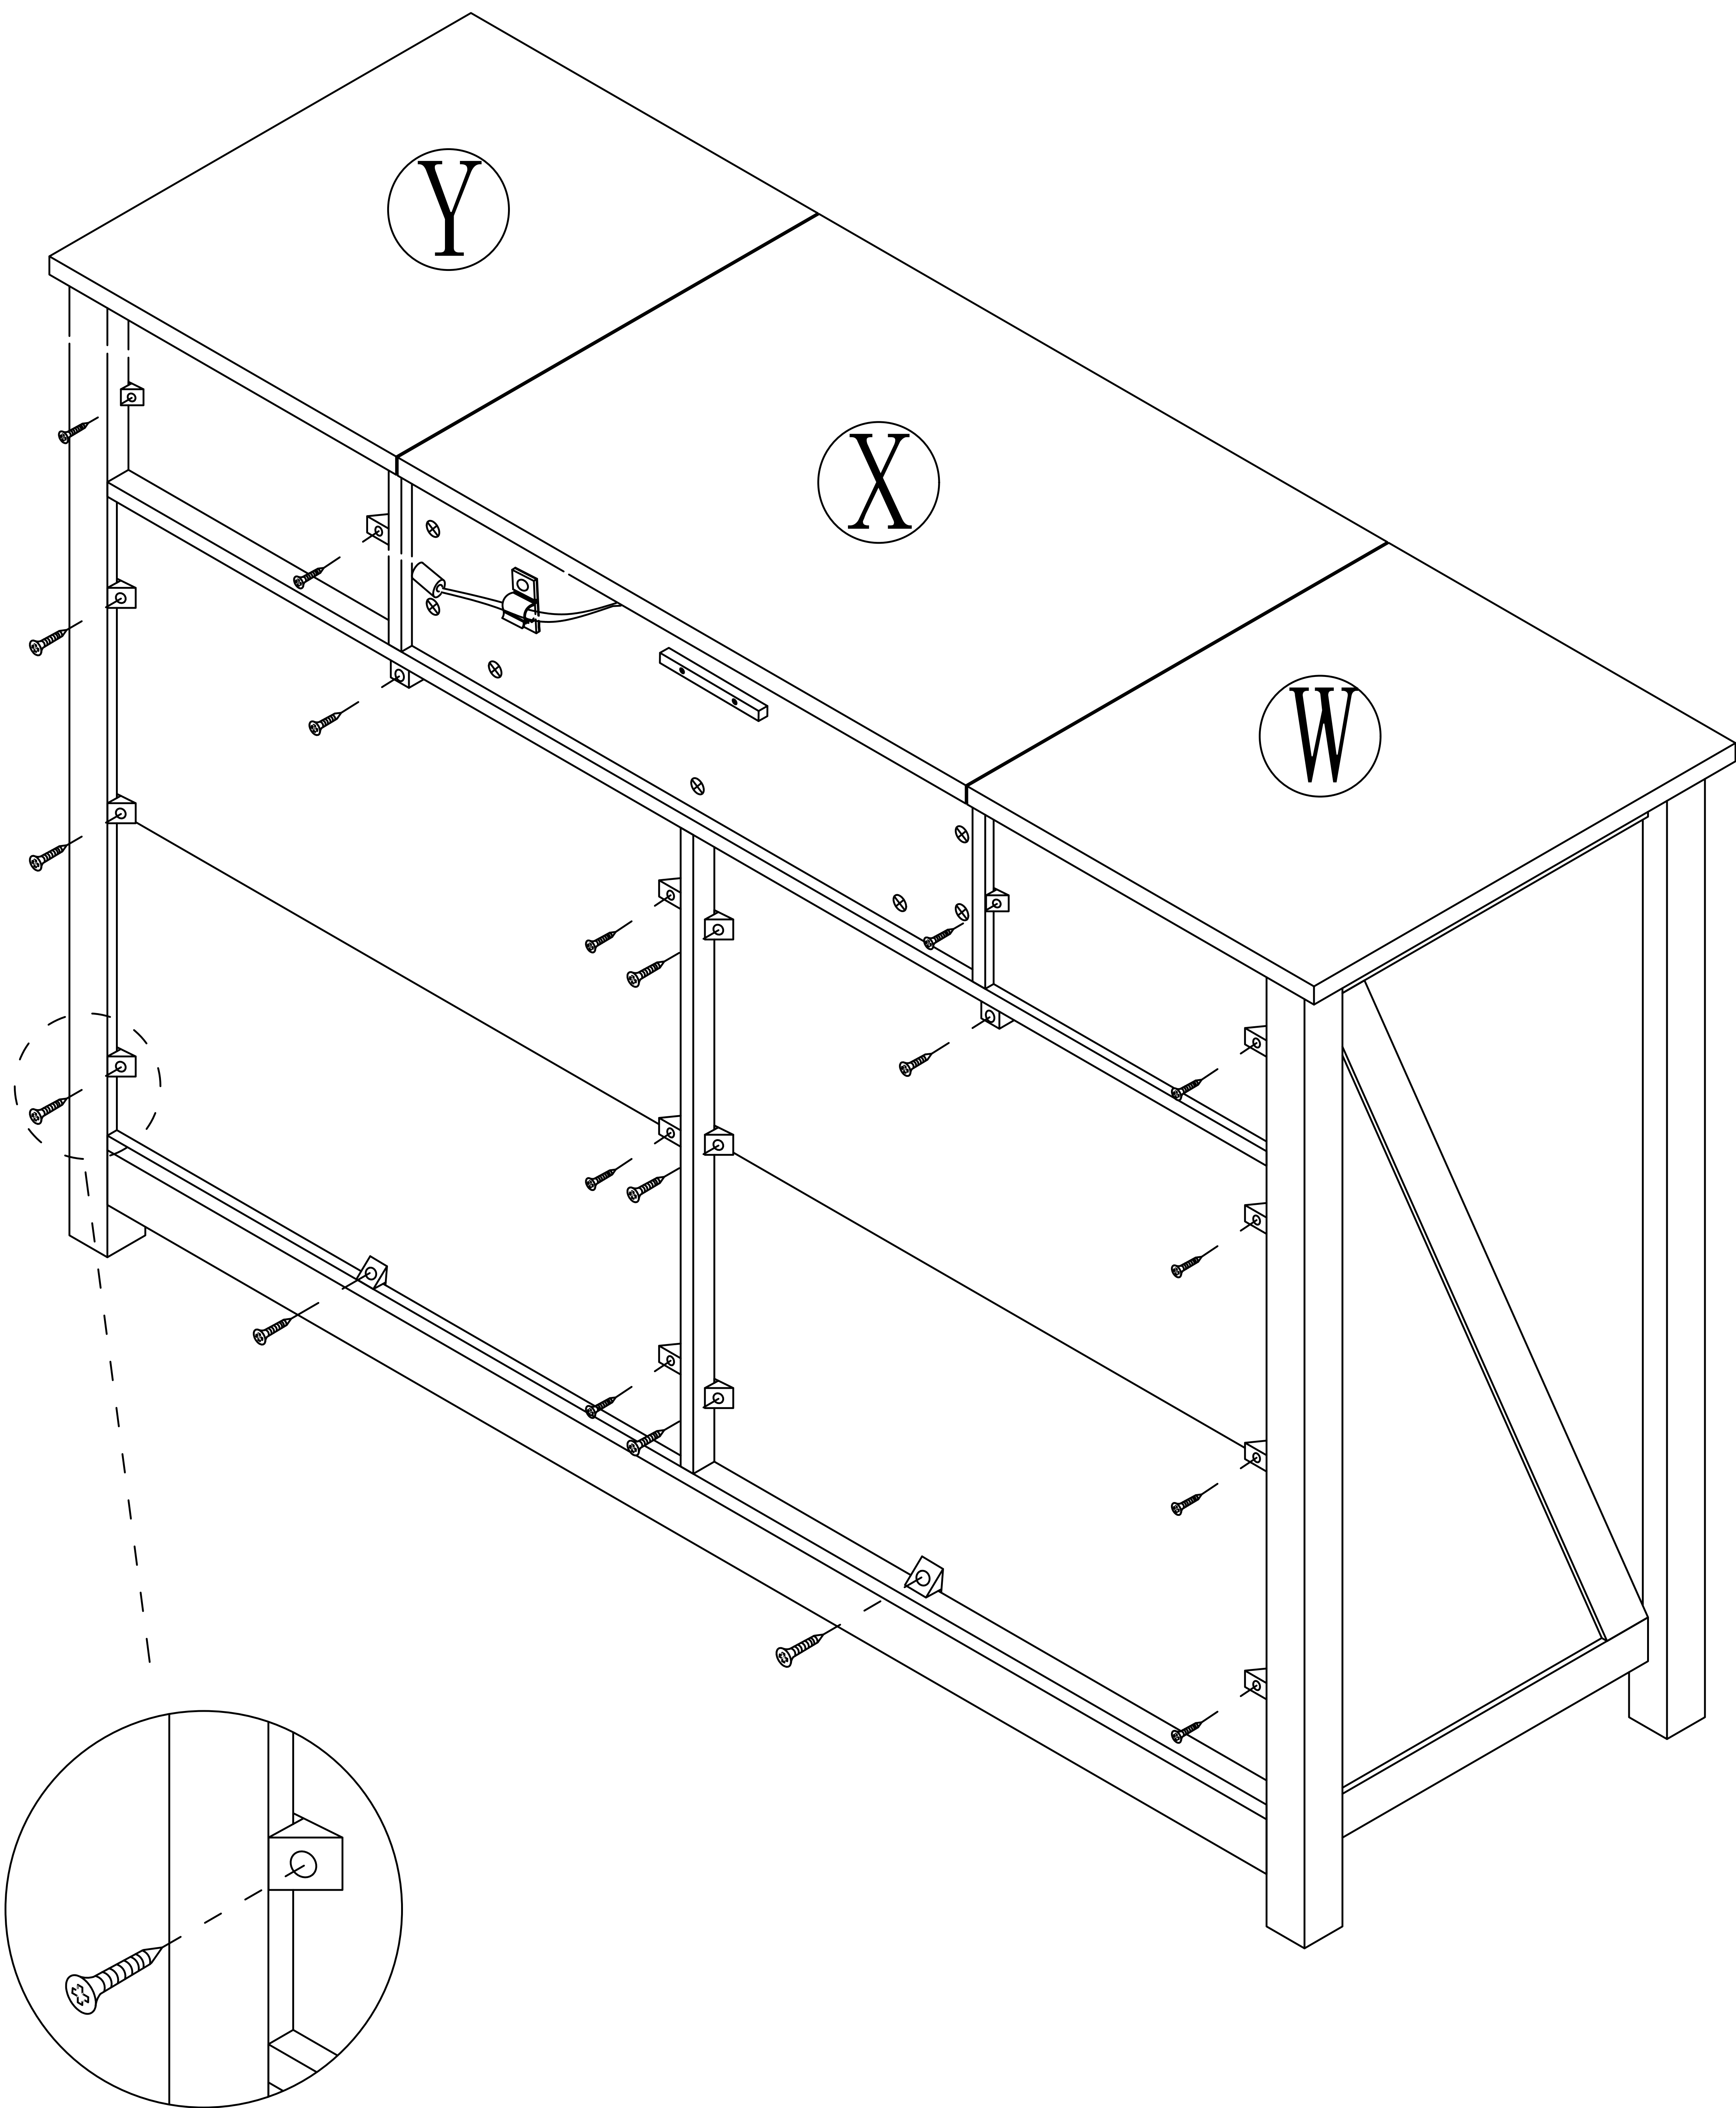


Step 72

15

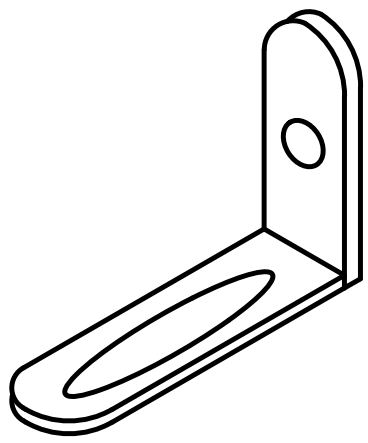 x2

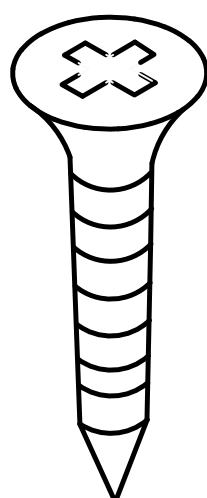
 x2

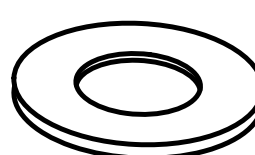
 x2

Install as required


Install the anti fall hardware on the cabinet as shown in the picture first

3.5x14mm


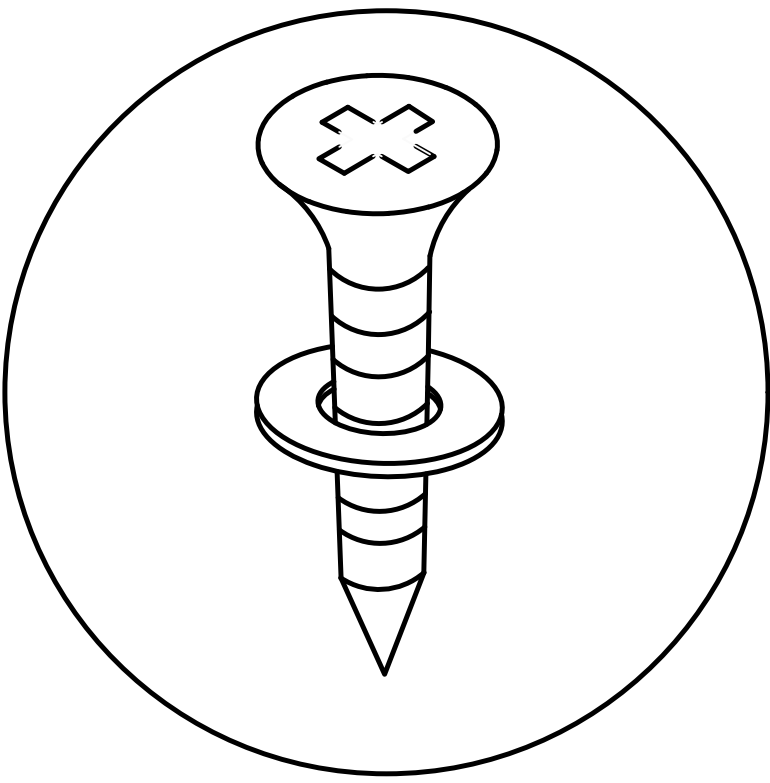


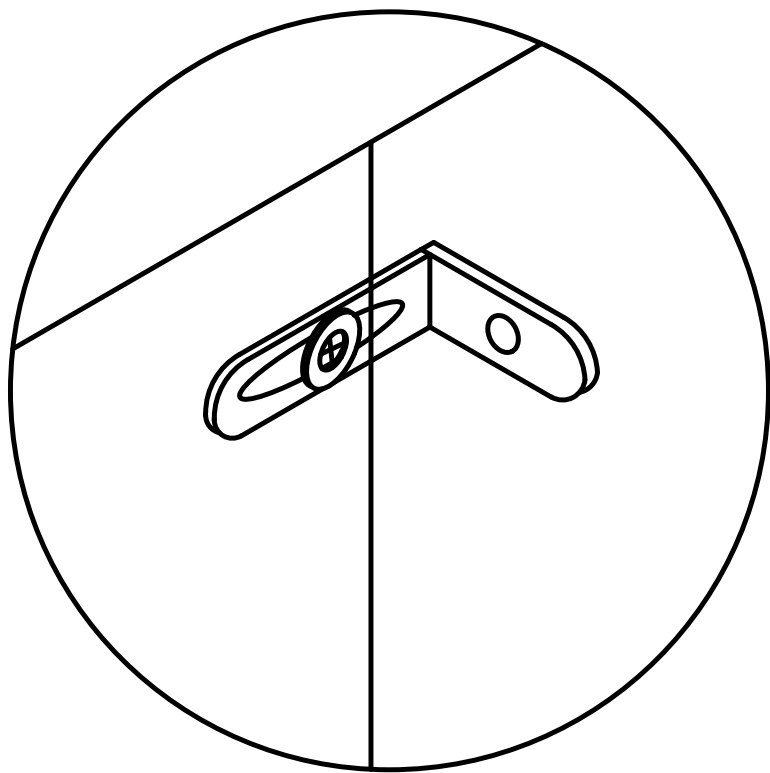



Then mark the wall with a pen through the holes in the anti-fall hardware

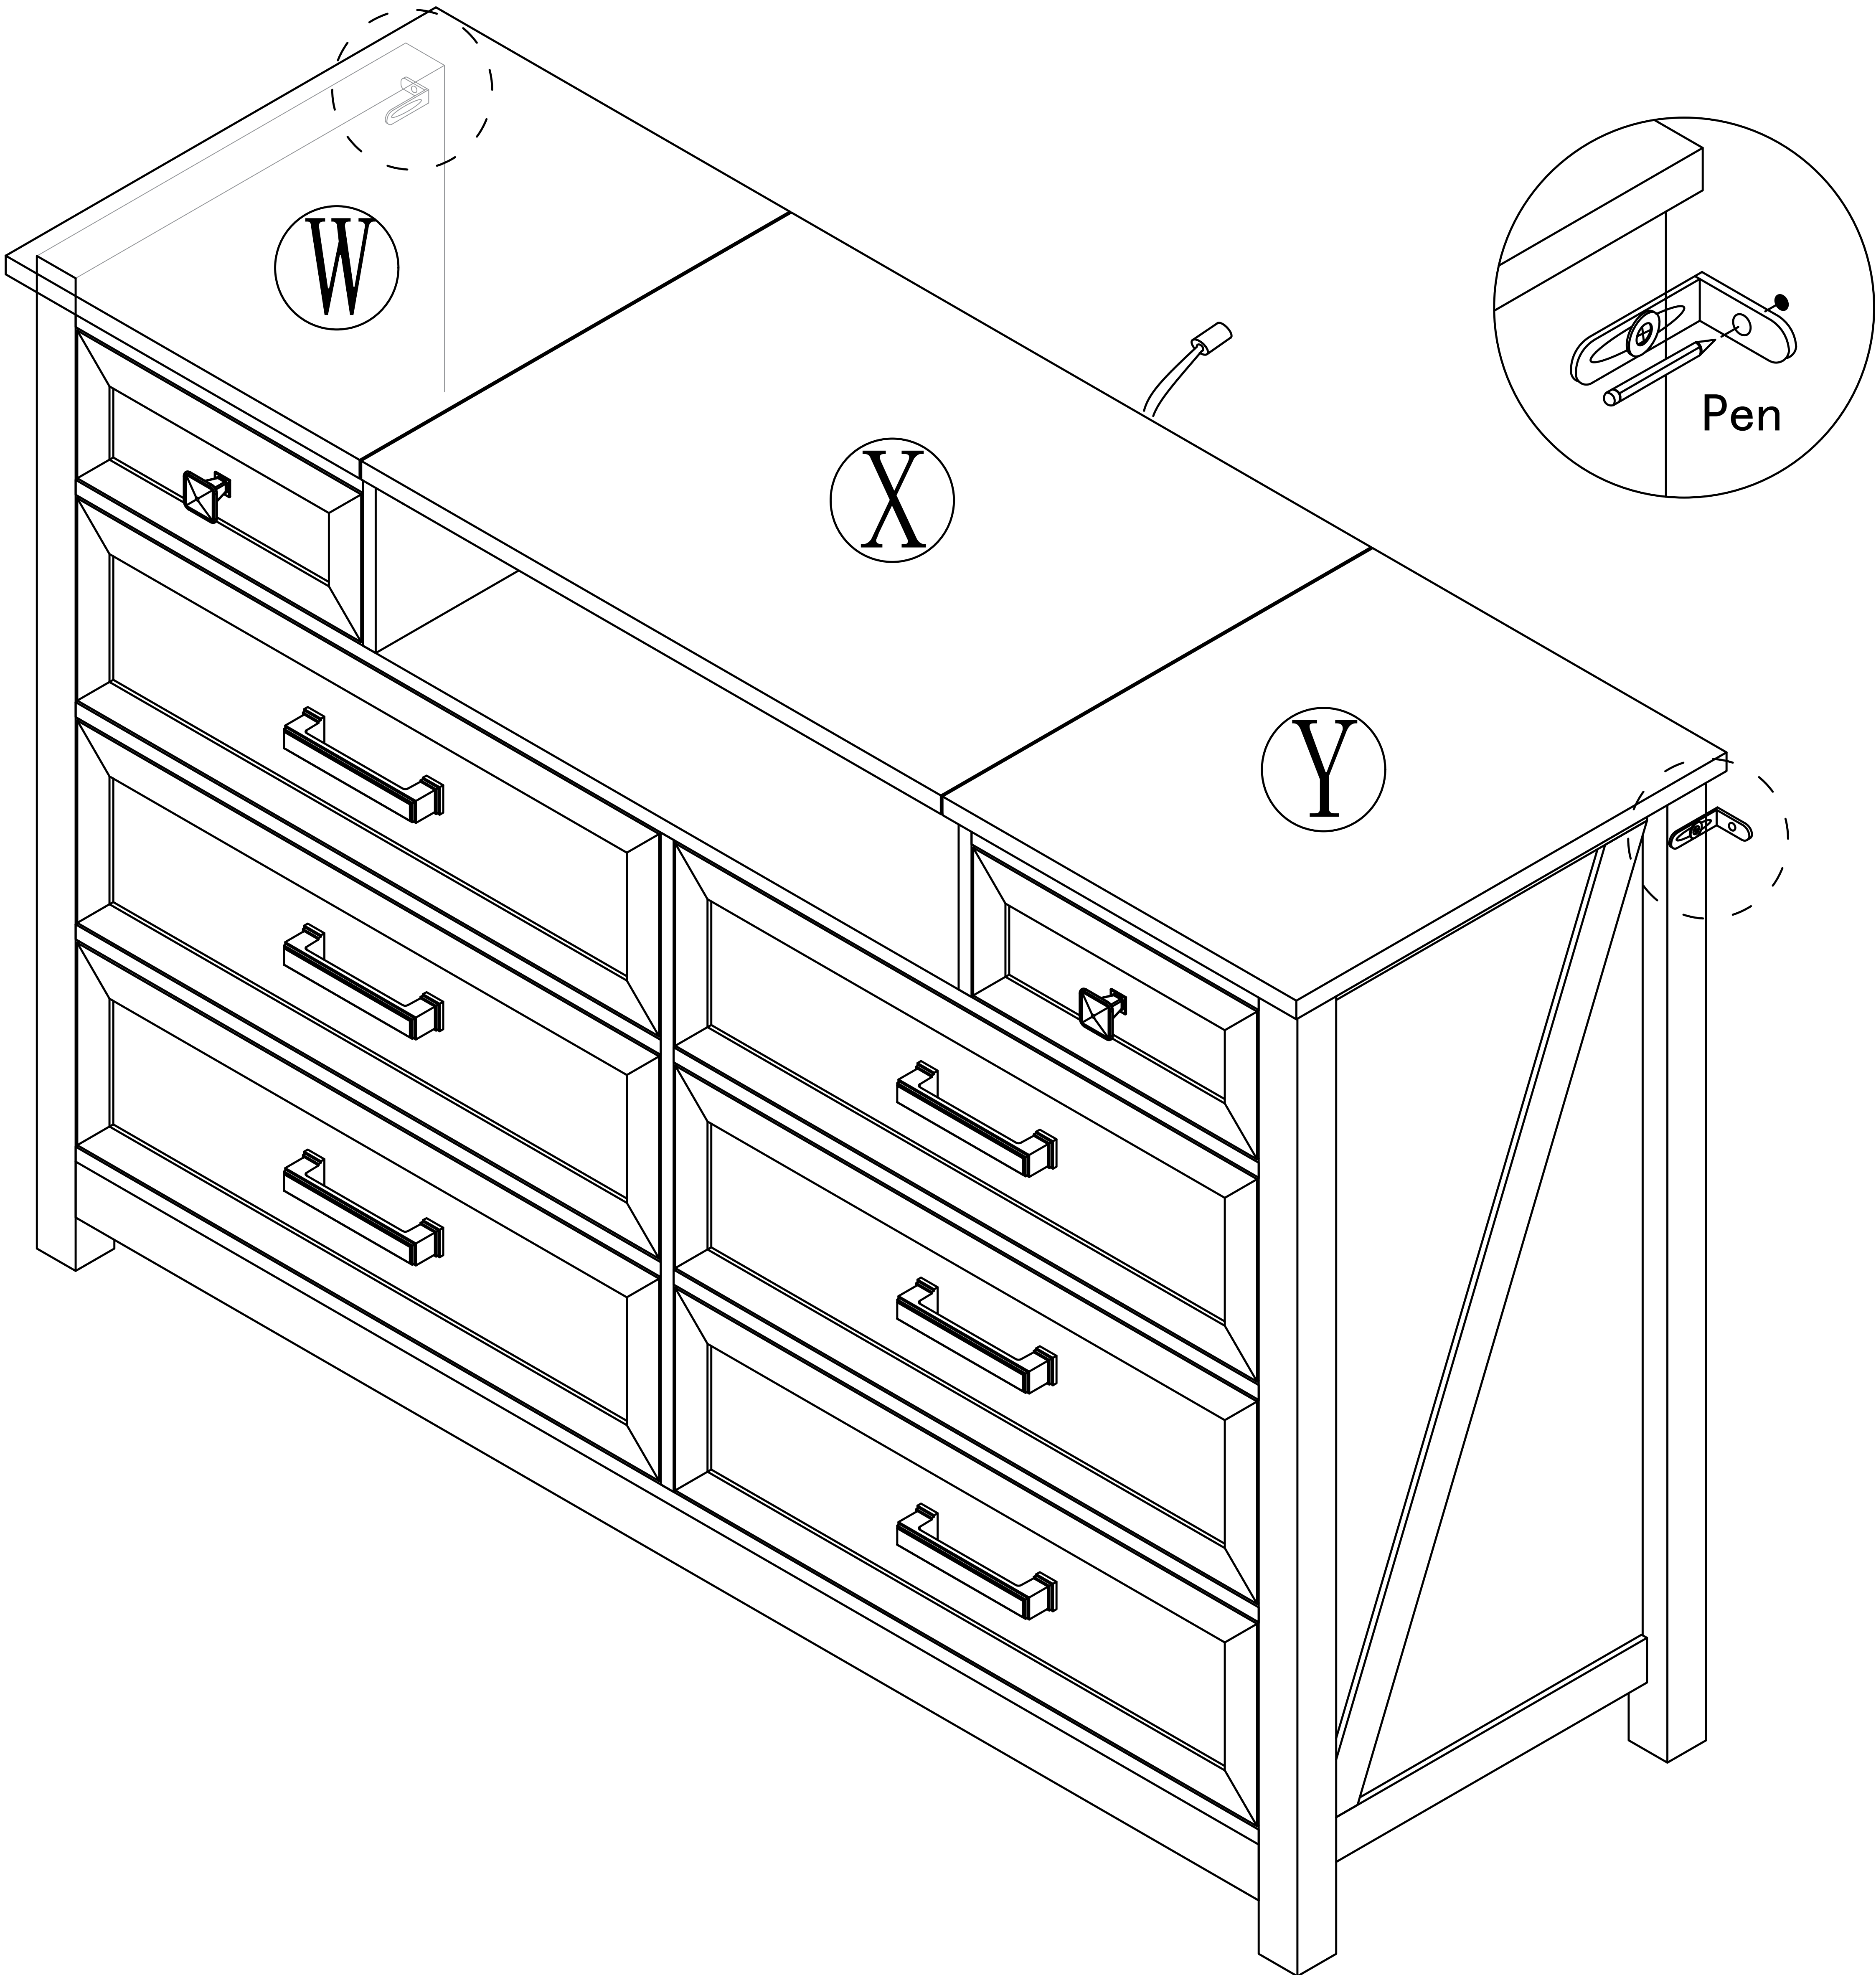

Step 73

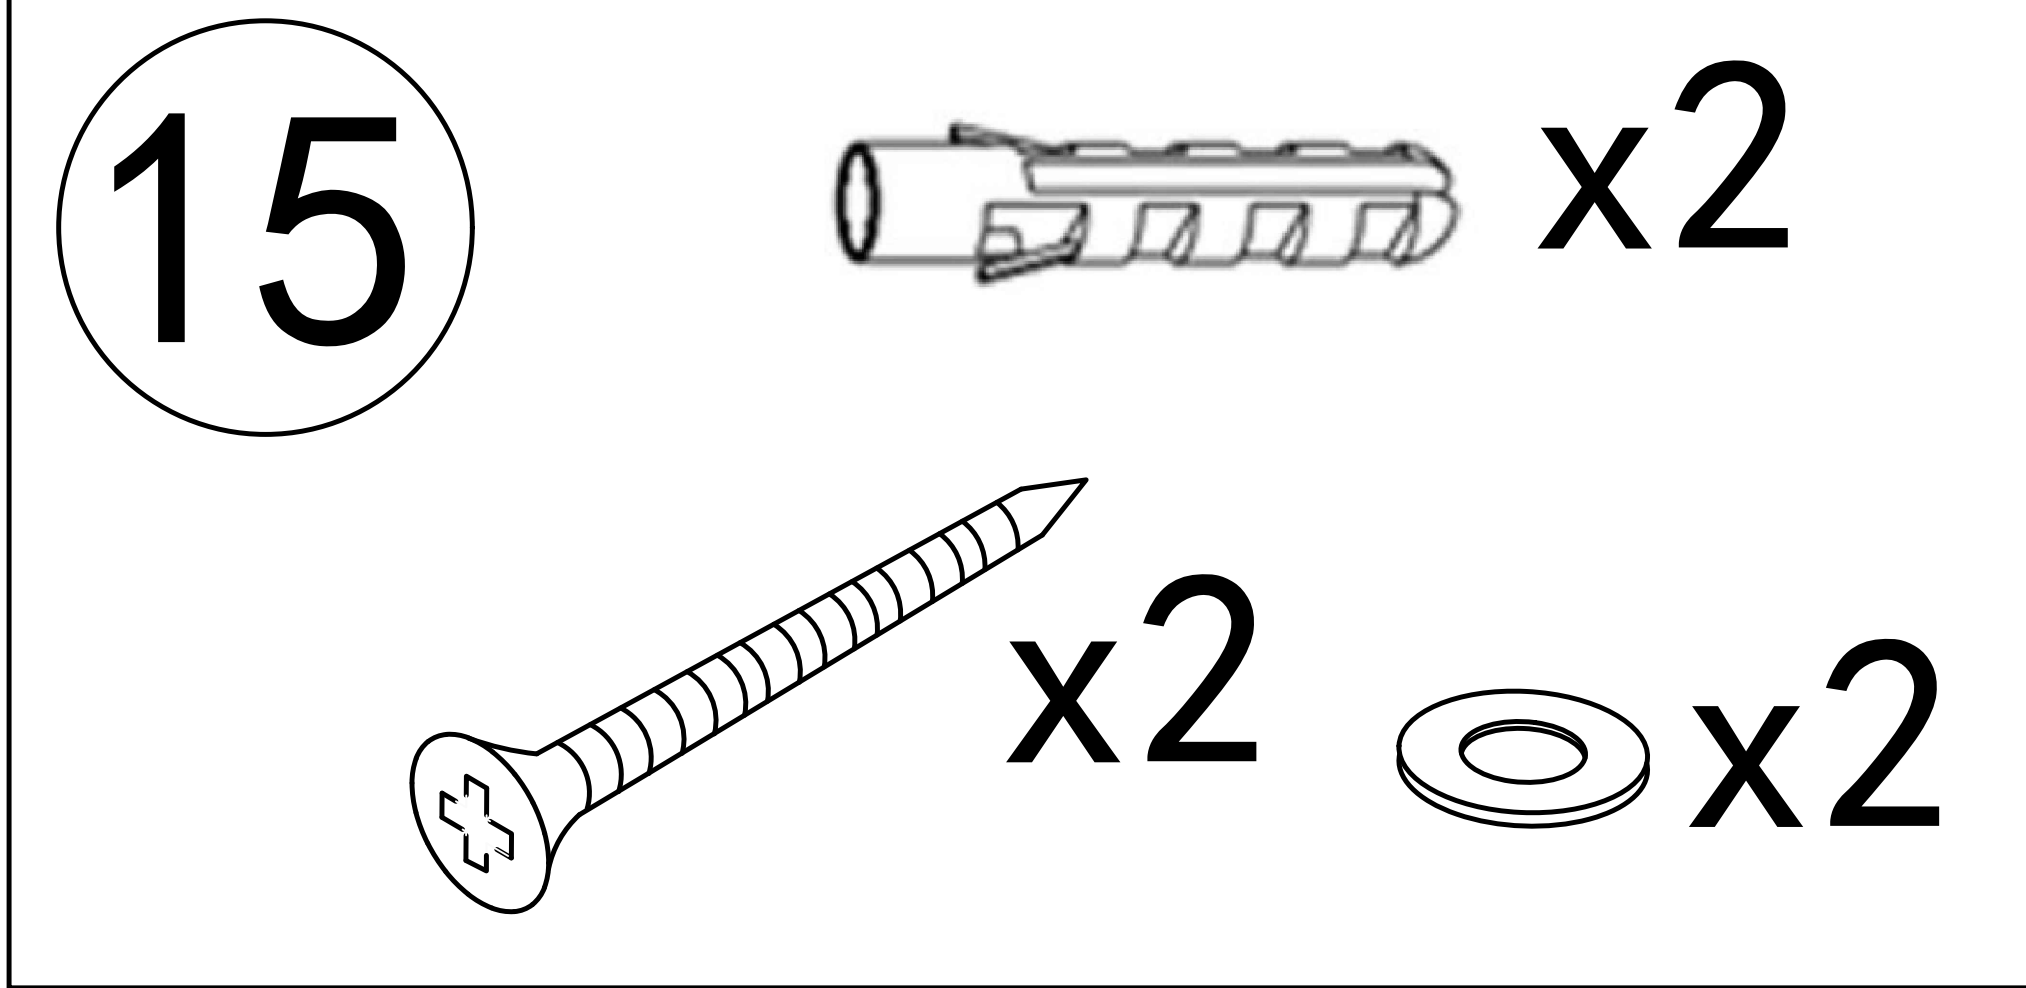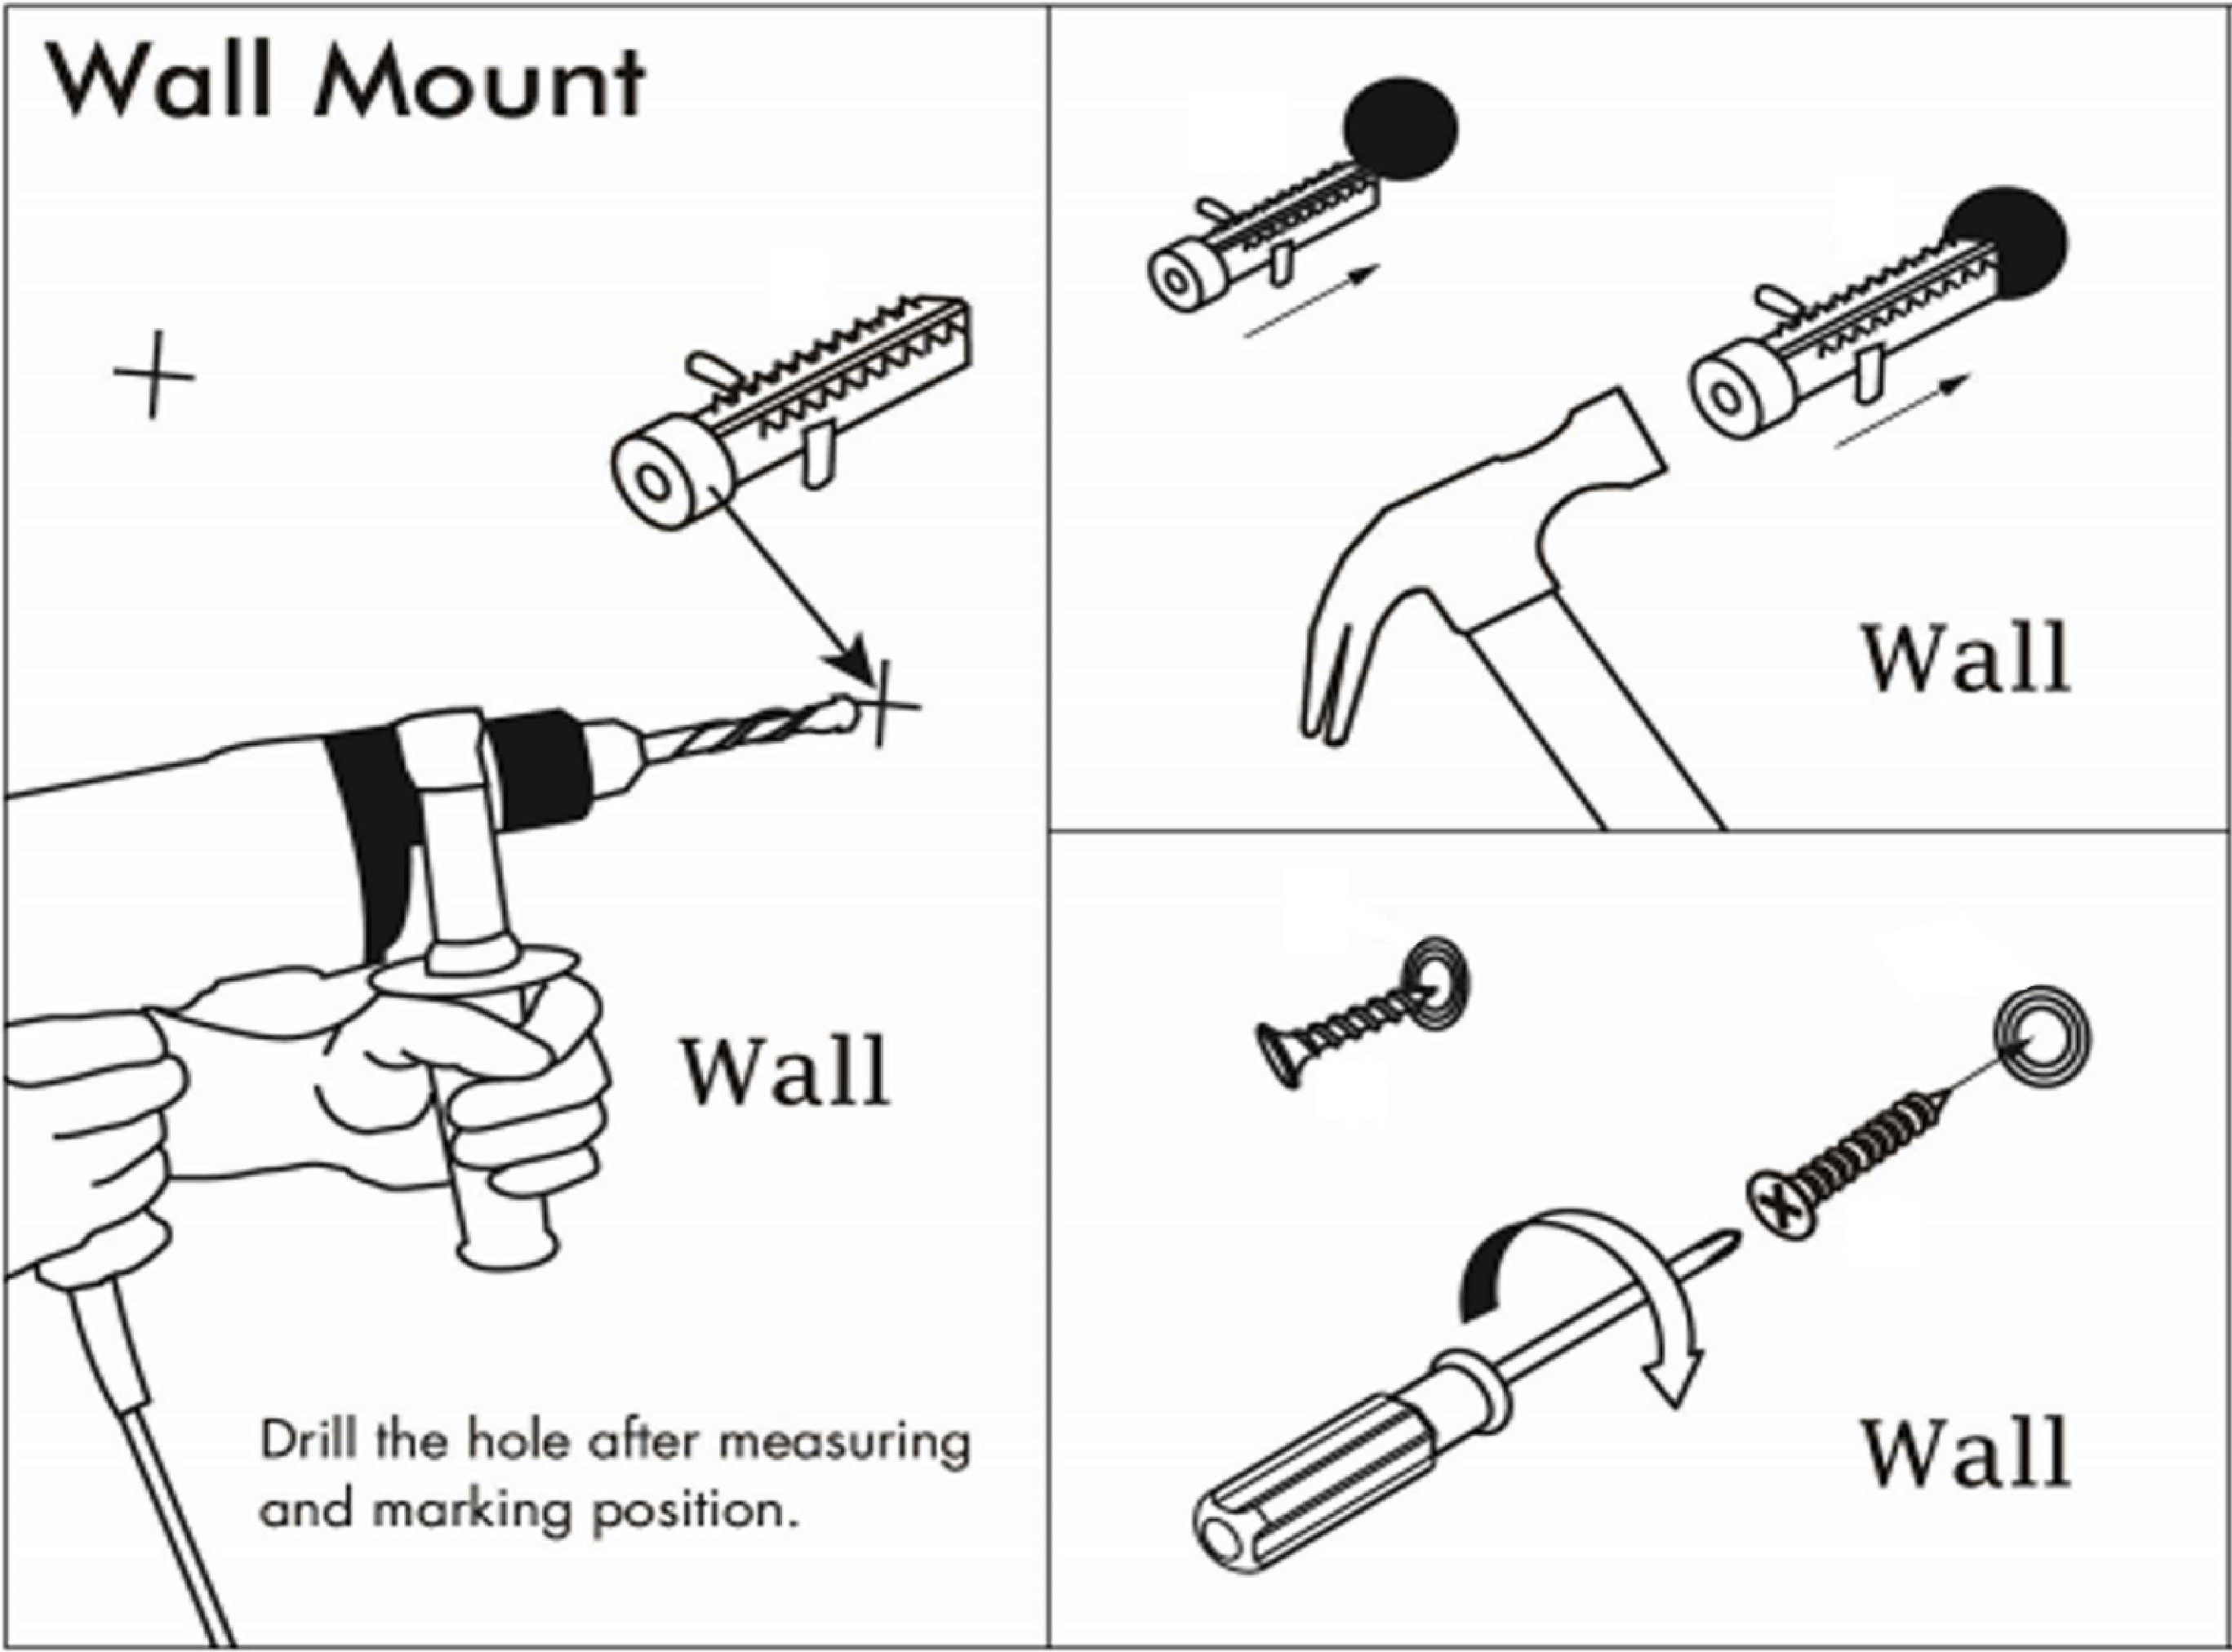

Drill the hole with an electric drill and punch in the colloidal particles

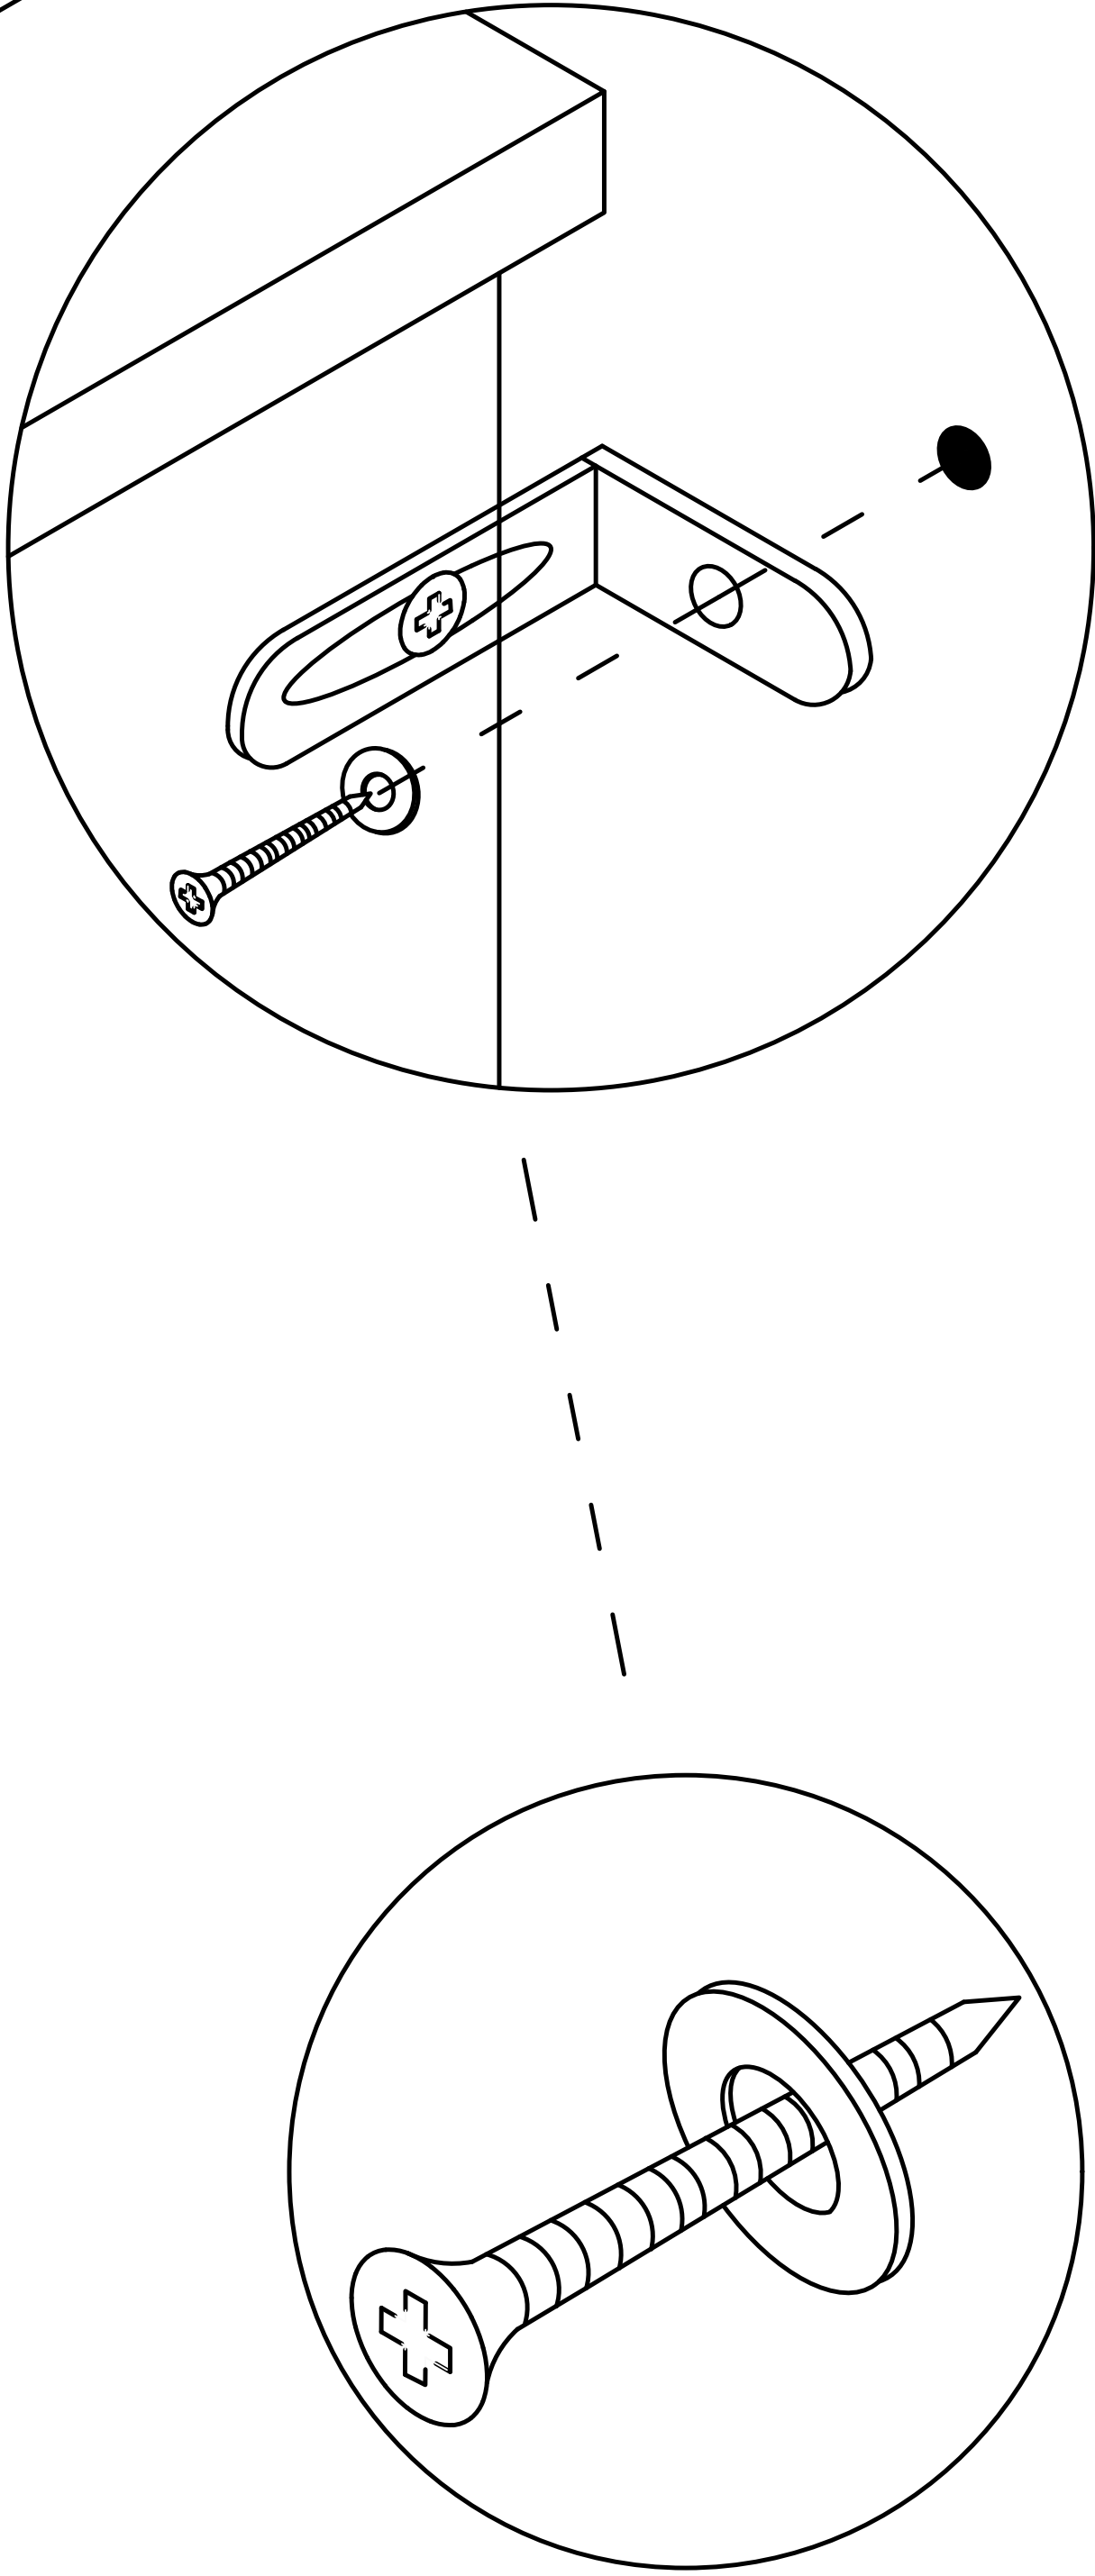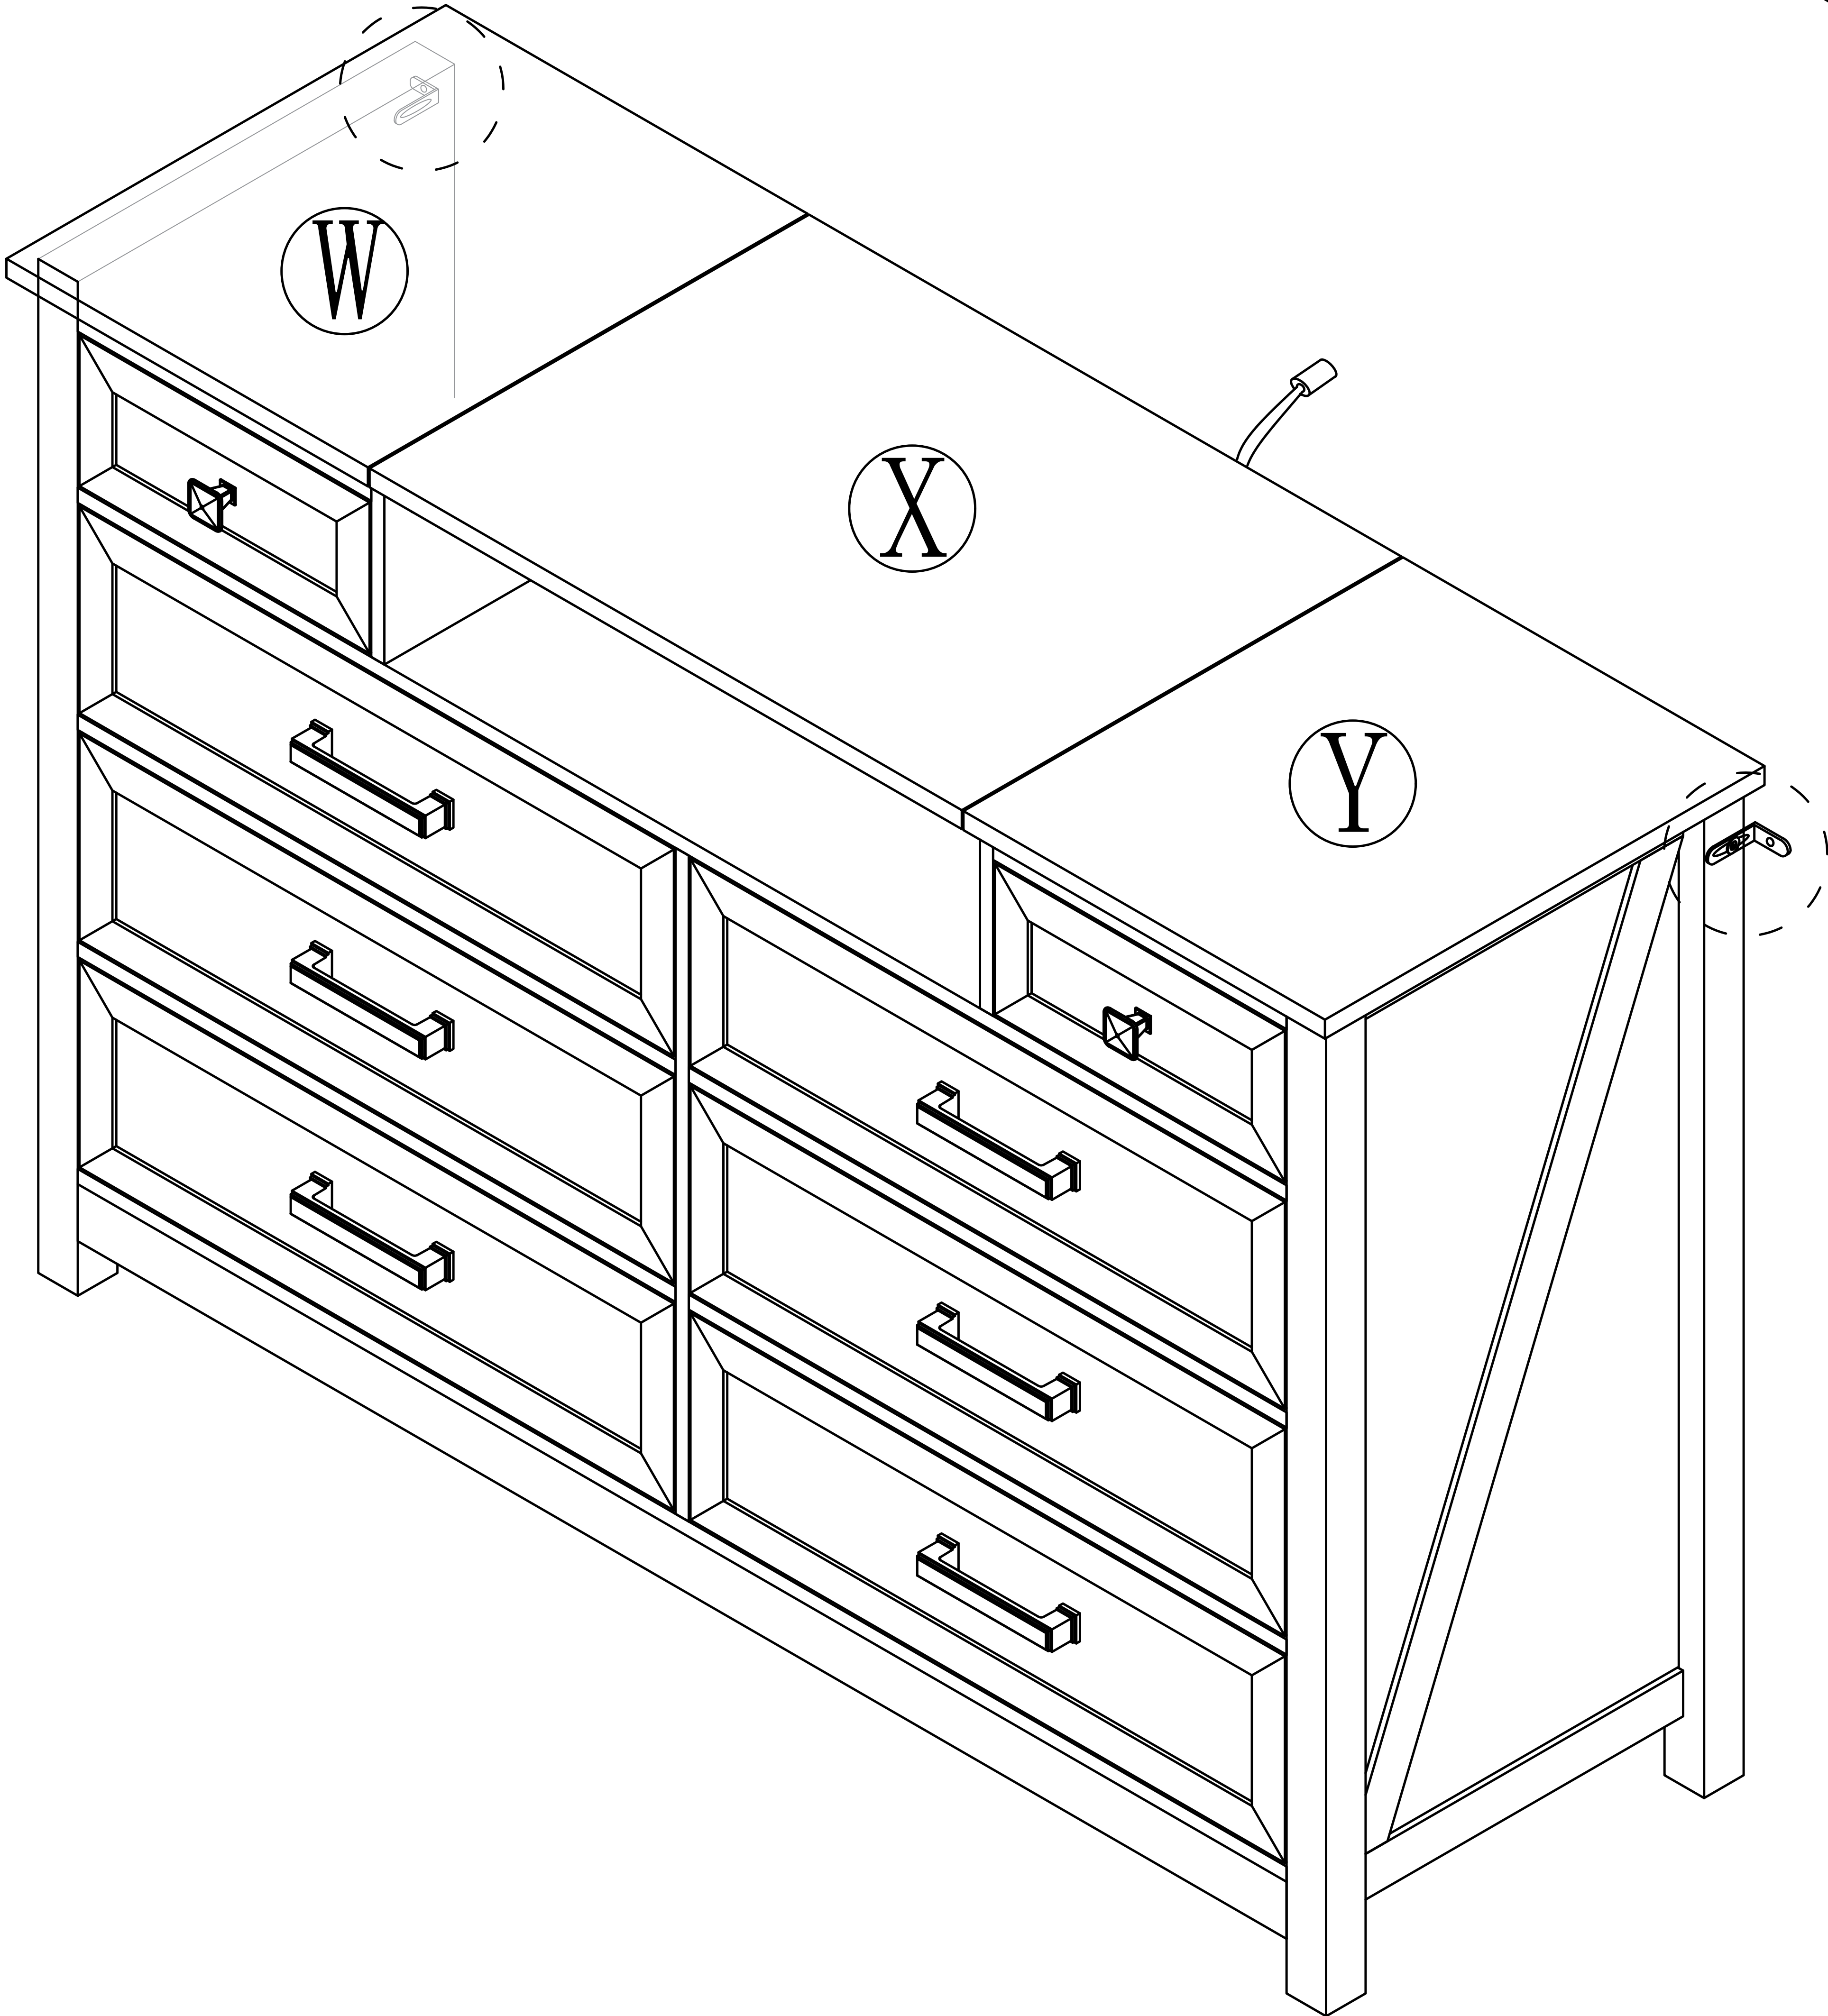

4x45mm

Fix the dressing table to the wall

Step 74

