
Domi outdoor living

domi
outdoor living

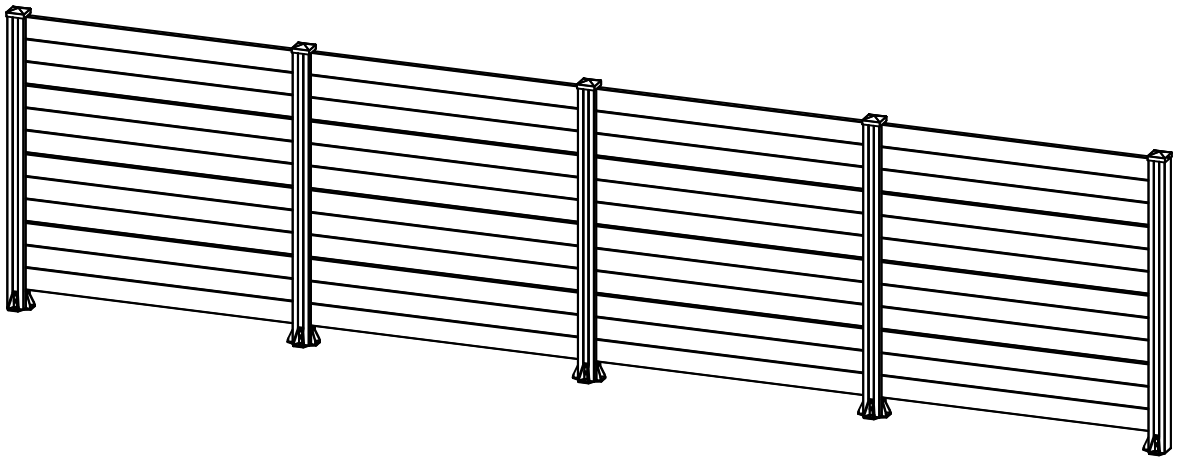


SKU: LNCF0644-4pcs

Outdoor Privacy Screen


Assembly Manual (for Hard Surfaces)

© Copyright 2024-2026 Domi Outdoor Living LLC.All Rights Reserved.


U Type

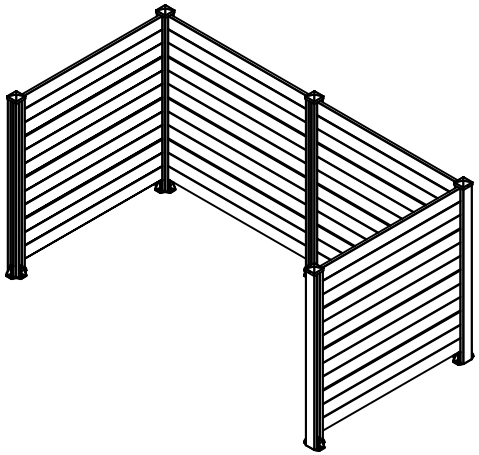


H Type

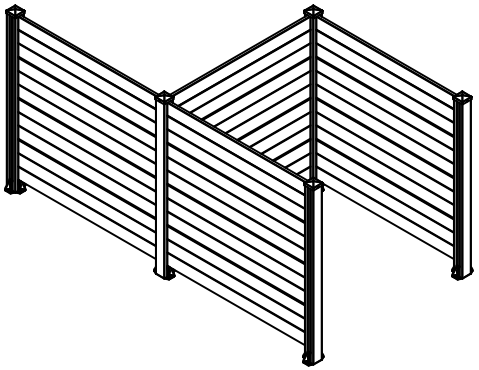


F Type

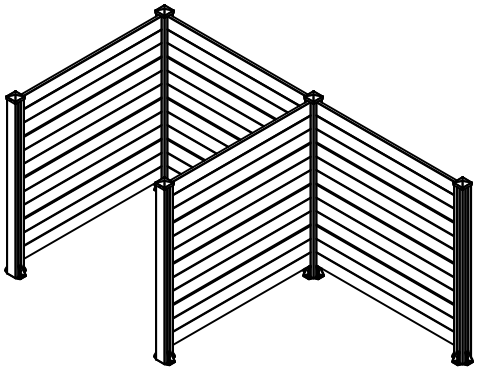


















L Type

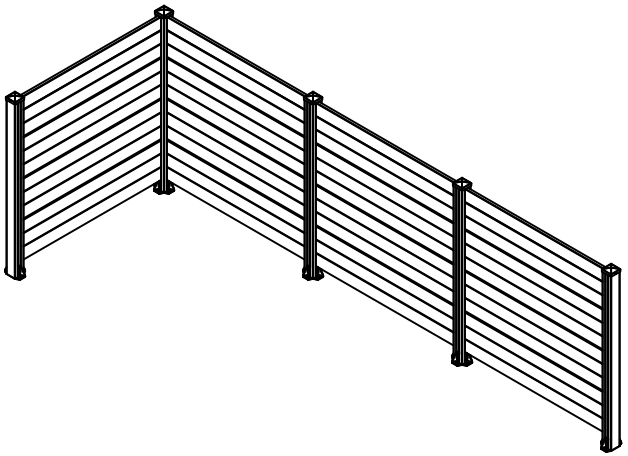



Z Type

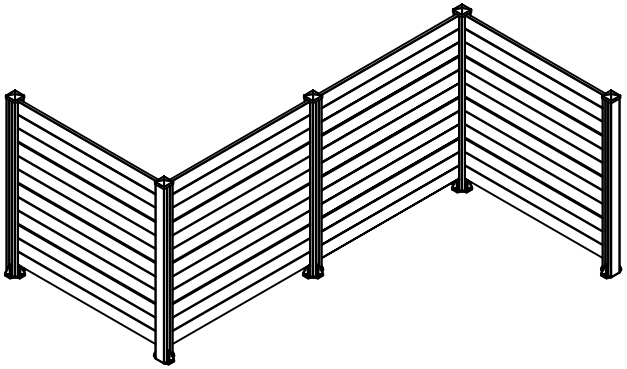


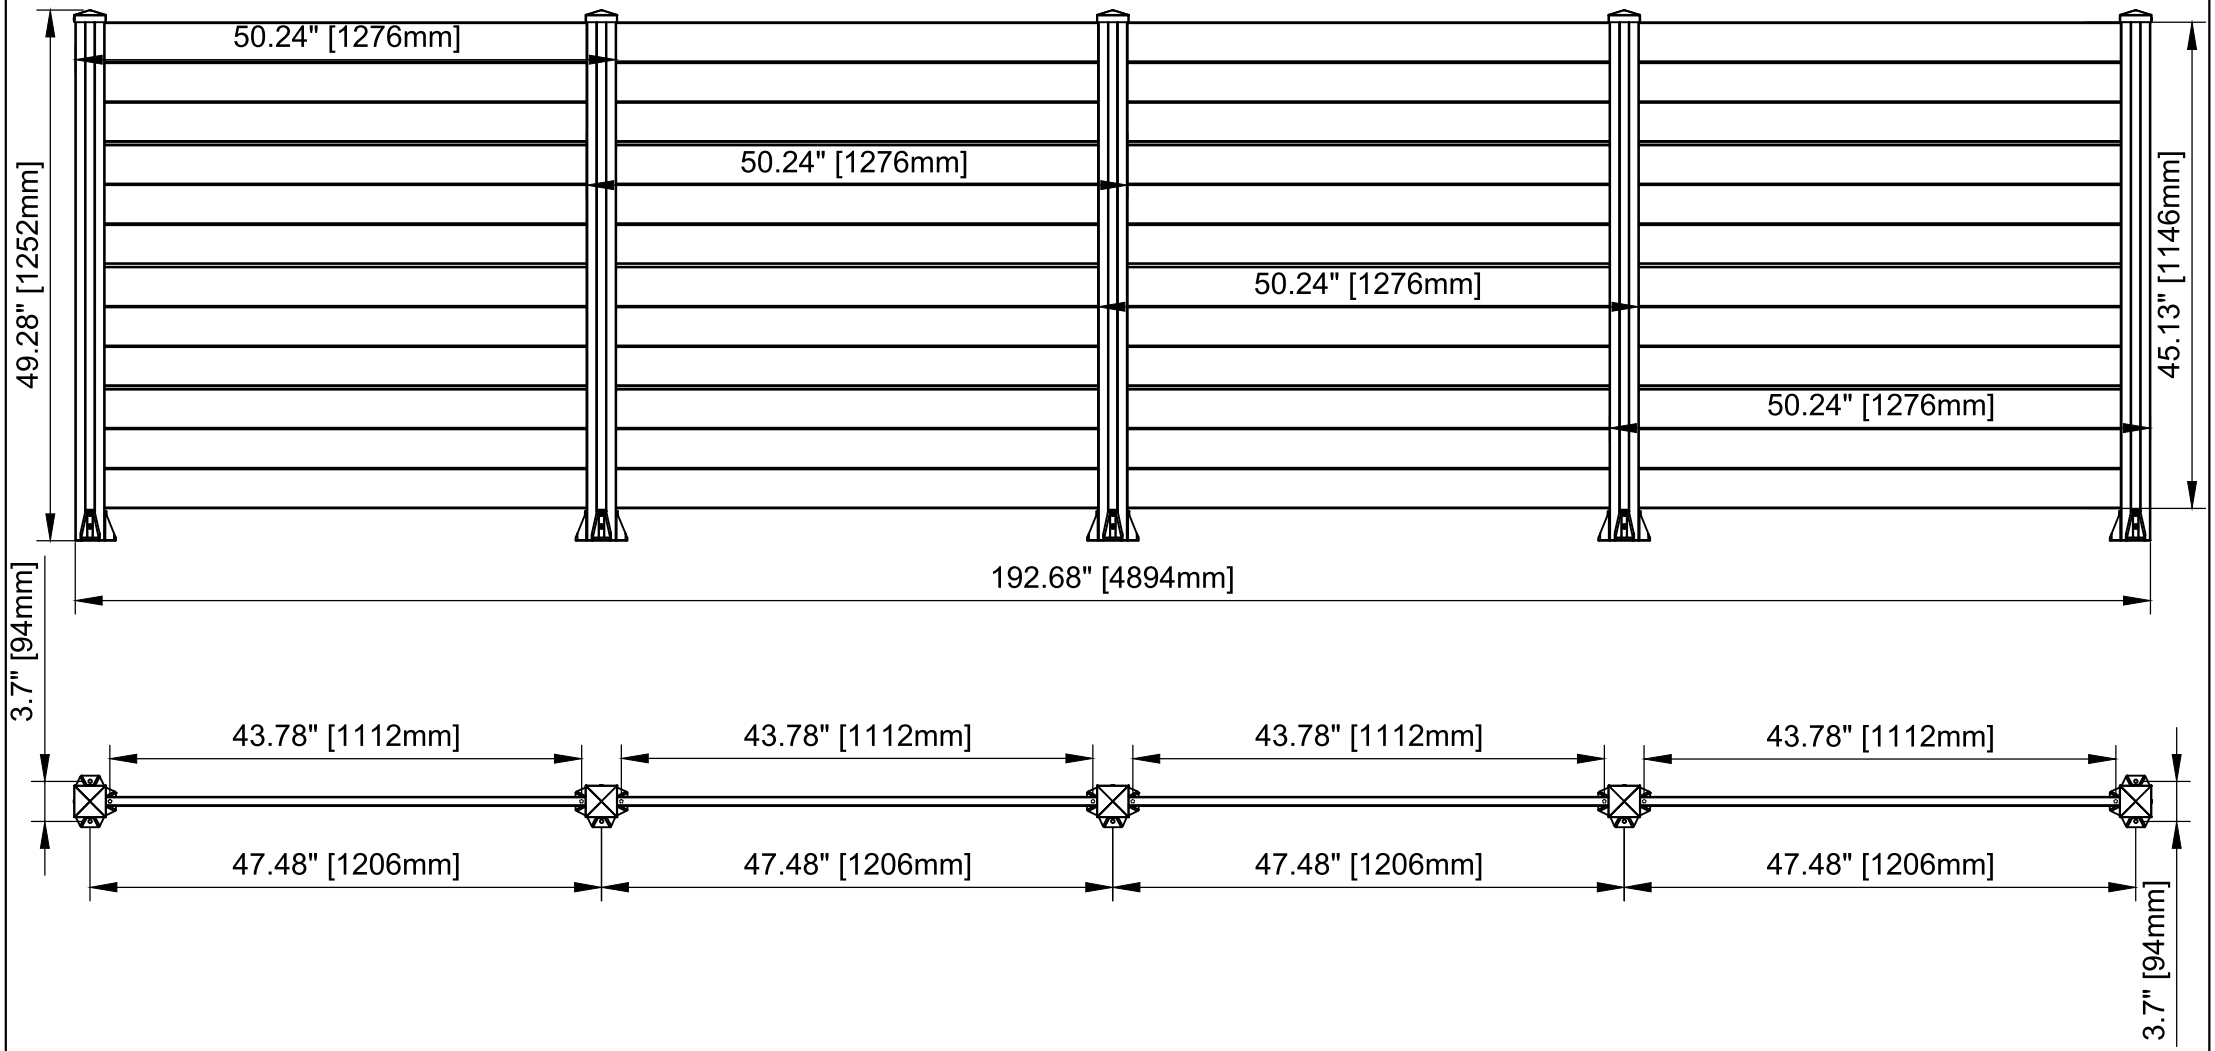
50.24" [1276mm]
50.24" [1276mm]
50.24" [1276mm]
50.24" [1276mm]
49.28" [1252mm]
45.13" [1146mm]
192.68" [4894mm]
3.7" [94mm]
43.78" [1112mm]
43.78" [1112mm]
43.78" [1112mm]
43.78" [1112mm]
47.48" [1206mm]
47.48" [1206mm]
47.48" [1206mm]
47.48" [1206mm]
3.7" [94mm]

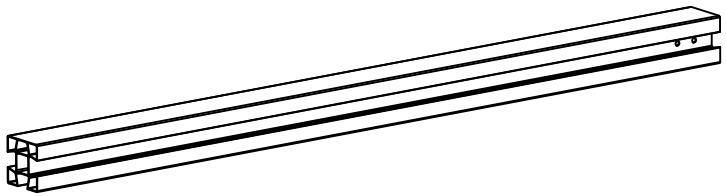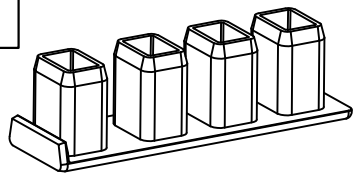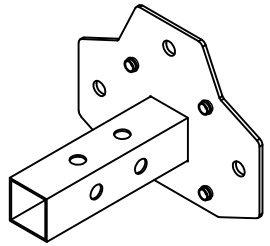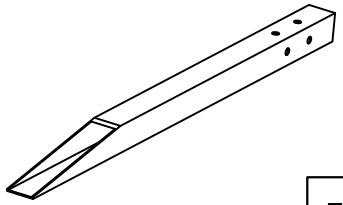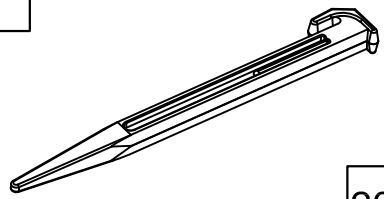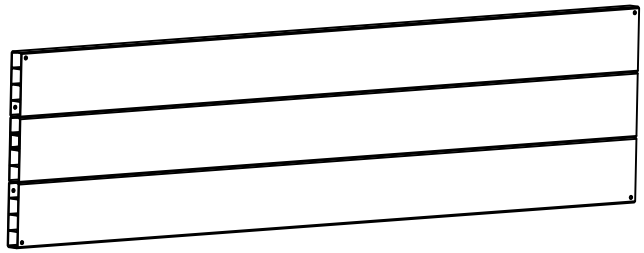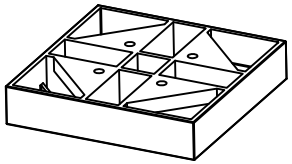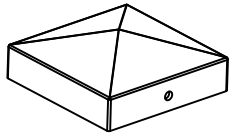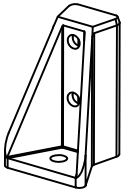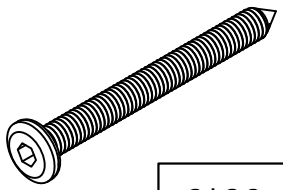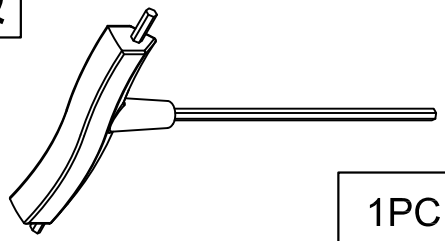
A  5PCS	B  64PCS	C  5PCS		
D  7PCS	E  5PCS	F  20PCS		
G  16PCS	H  5PCS	I  5PCS		
J  15PCS	K  ST4*12 133PCS	L  M6*16 20PCS	M  M6*30 30PCS	
N  15PCS	O  15PCS	P  6*60 15PCS	Q  1PC	

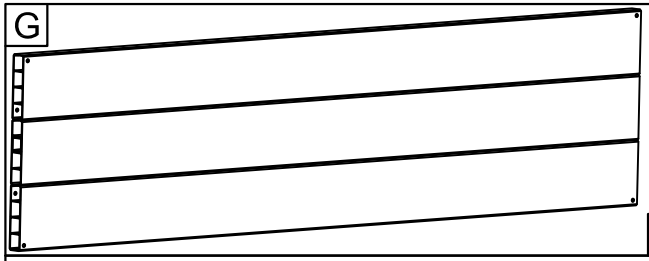

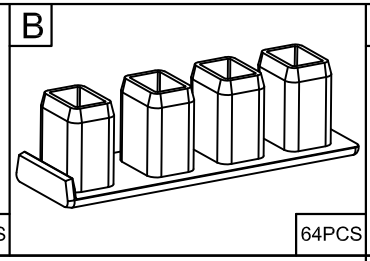

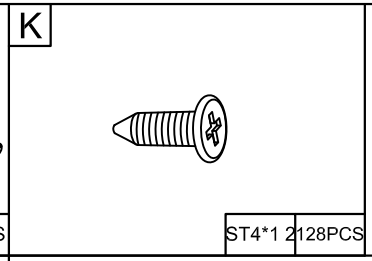


①×16

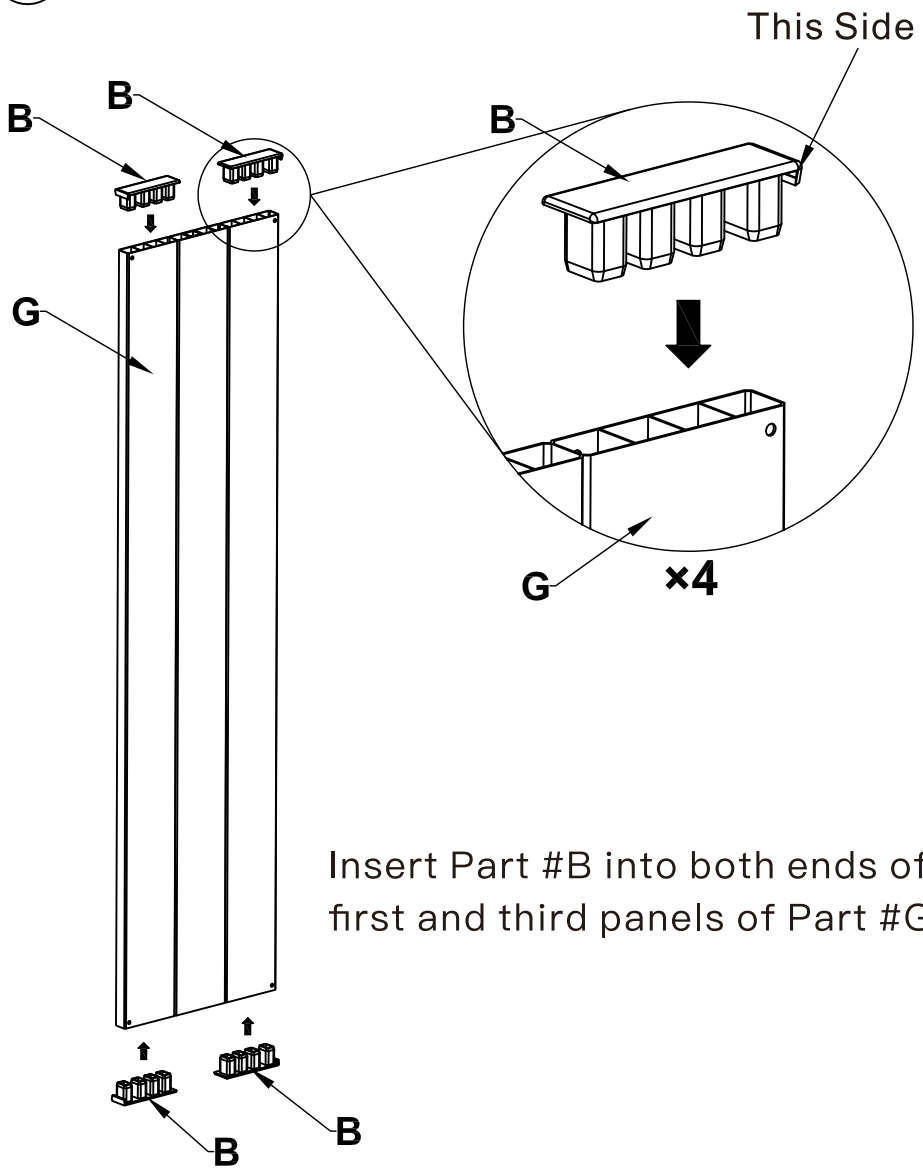



Insert Part #B into both ends of the first and third panels of Part #G


②×16

Use 4 Screws #K to secure Part B through the holes as show.

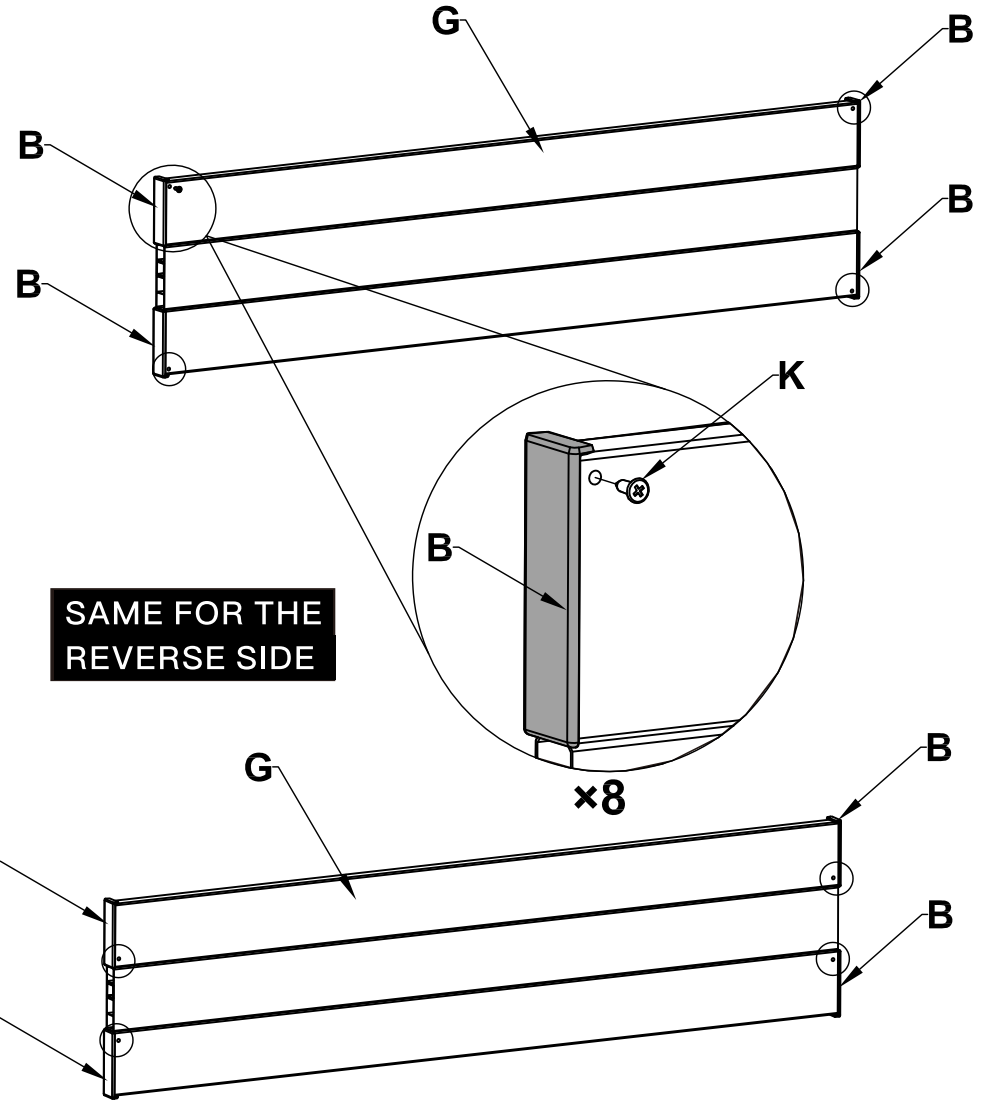


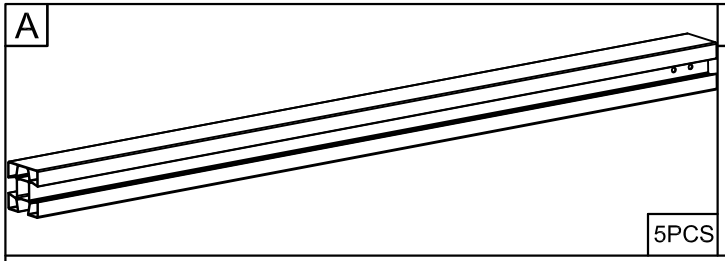

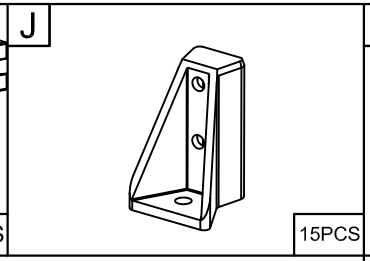

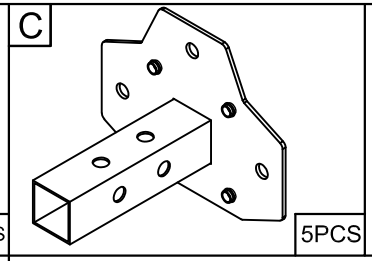


③×5



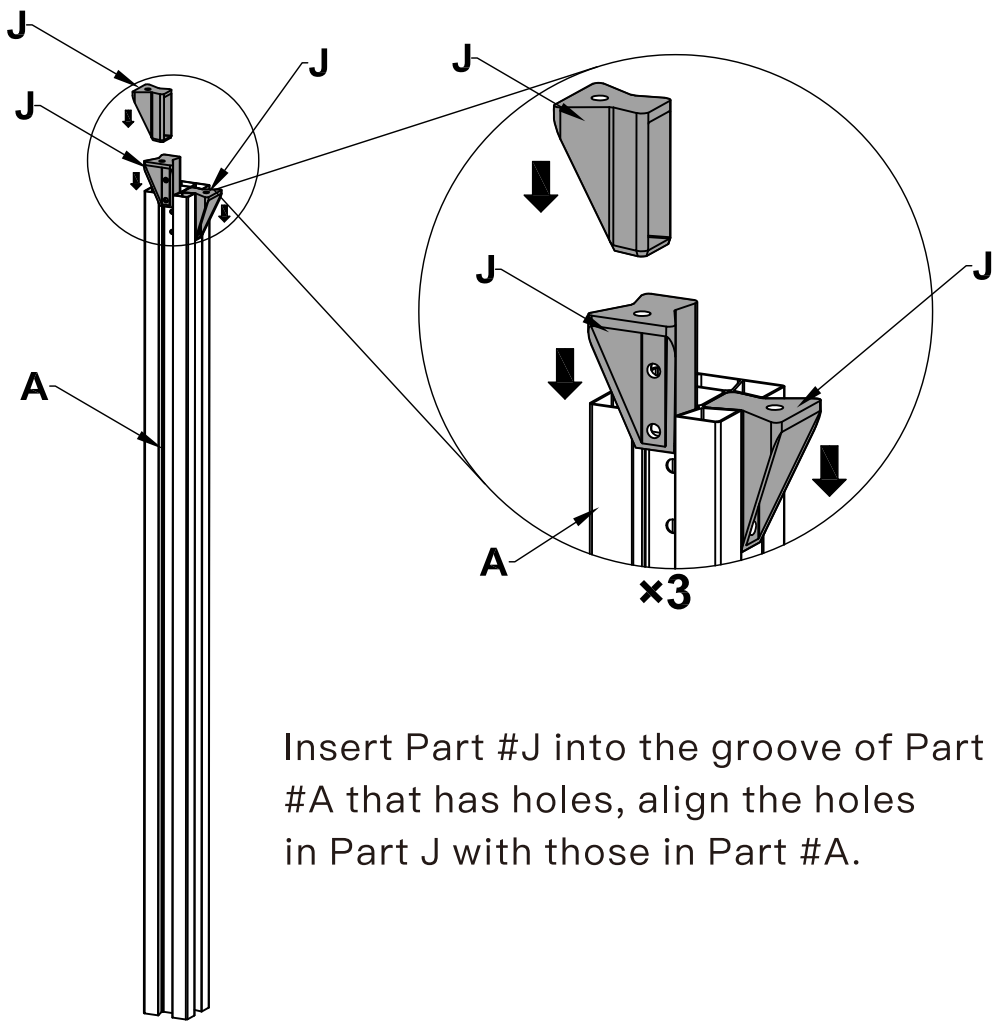


Insert Part #J into the groove of Part #A that has holes, align the holes in Part J with those in Part #A.


④×5

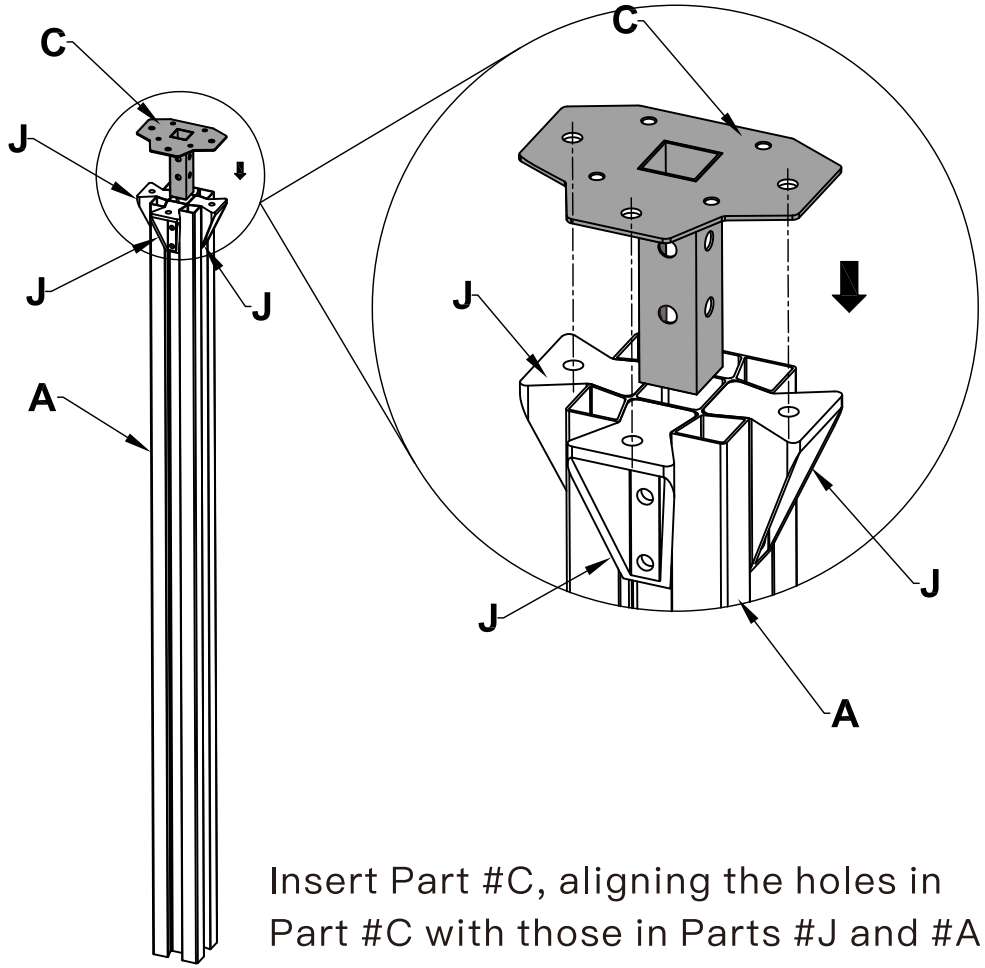

Insert Part #C, aligning the holes in Part #C with those in Parts #J and #A.

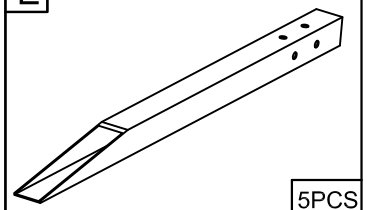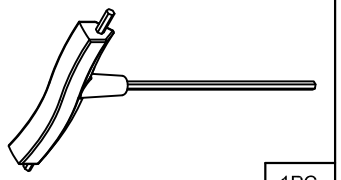
E			M	Q	
 5PCS			 M6*30 30PCS	 1PC	

⑤×5

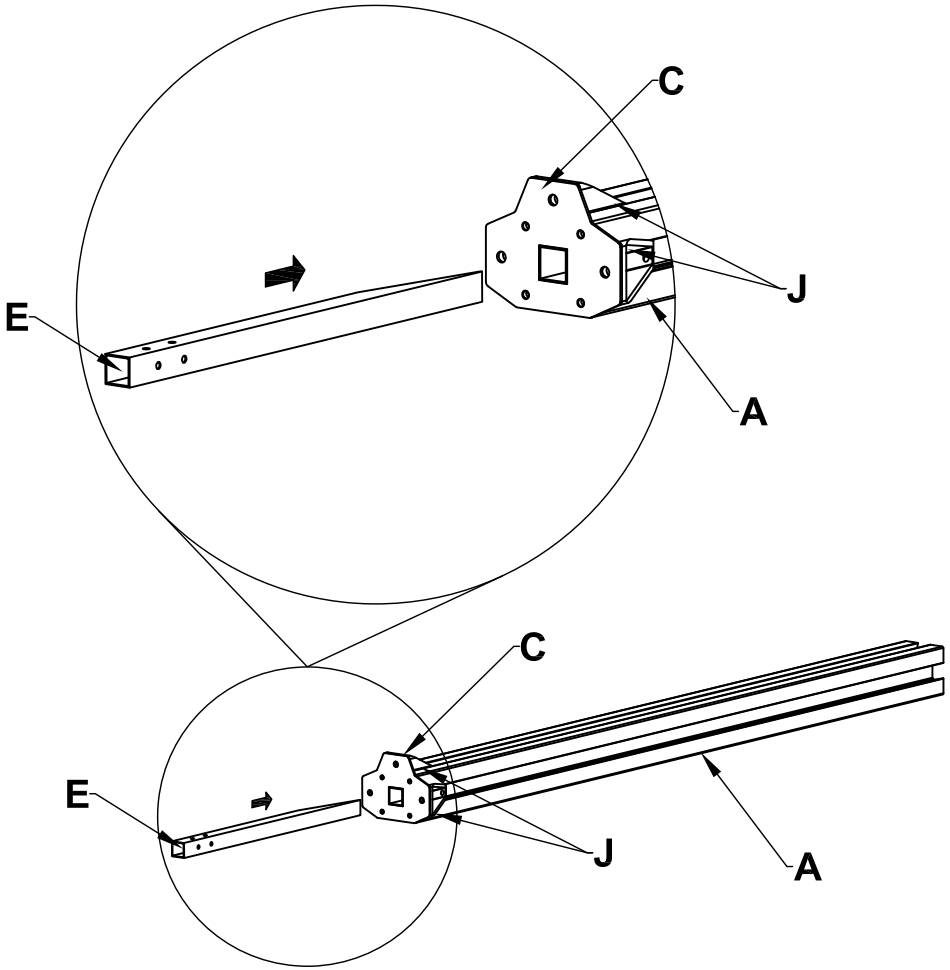


⑥×5

Notice: Tighten all screws to 60% first. After all screws are in place, fully tighten them uniformly.

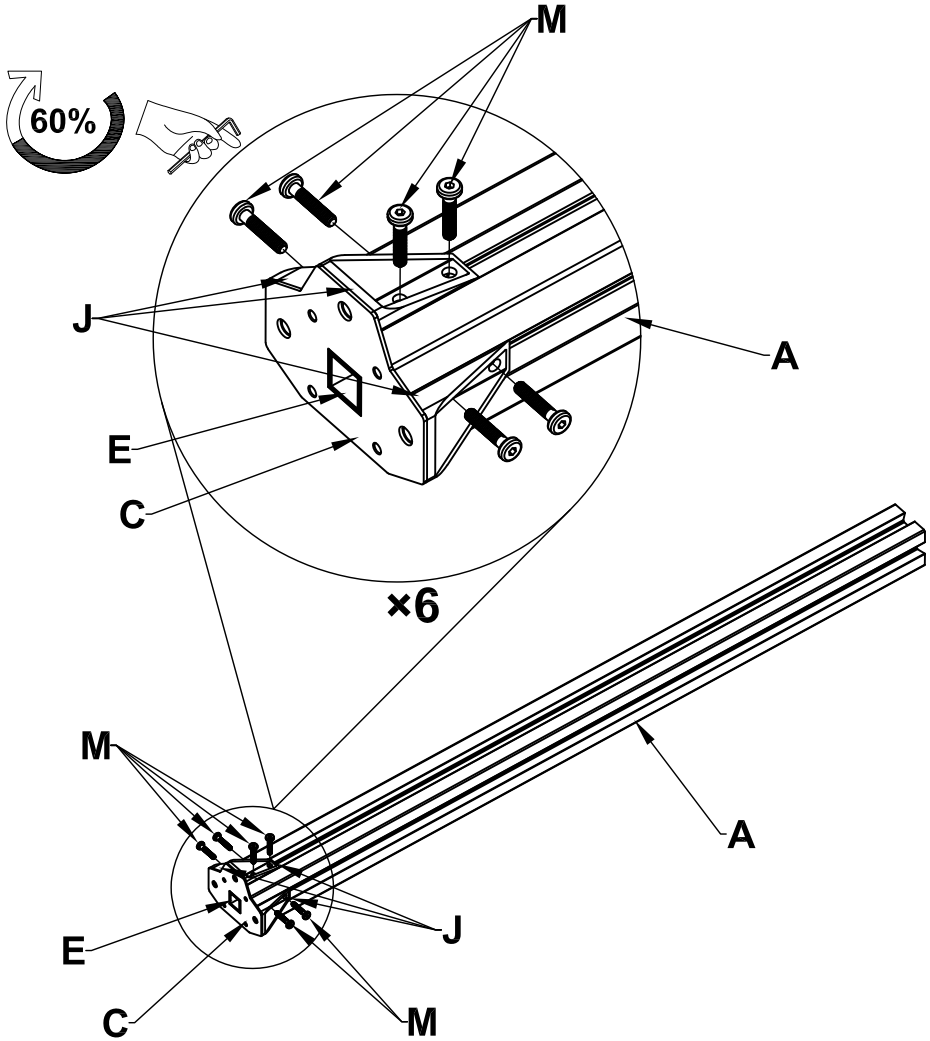


N



6PCS


7

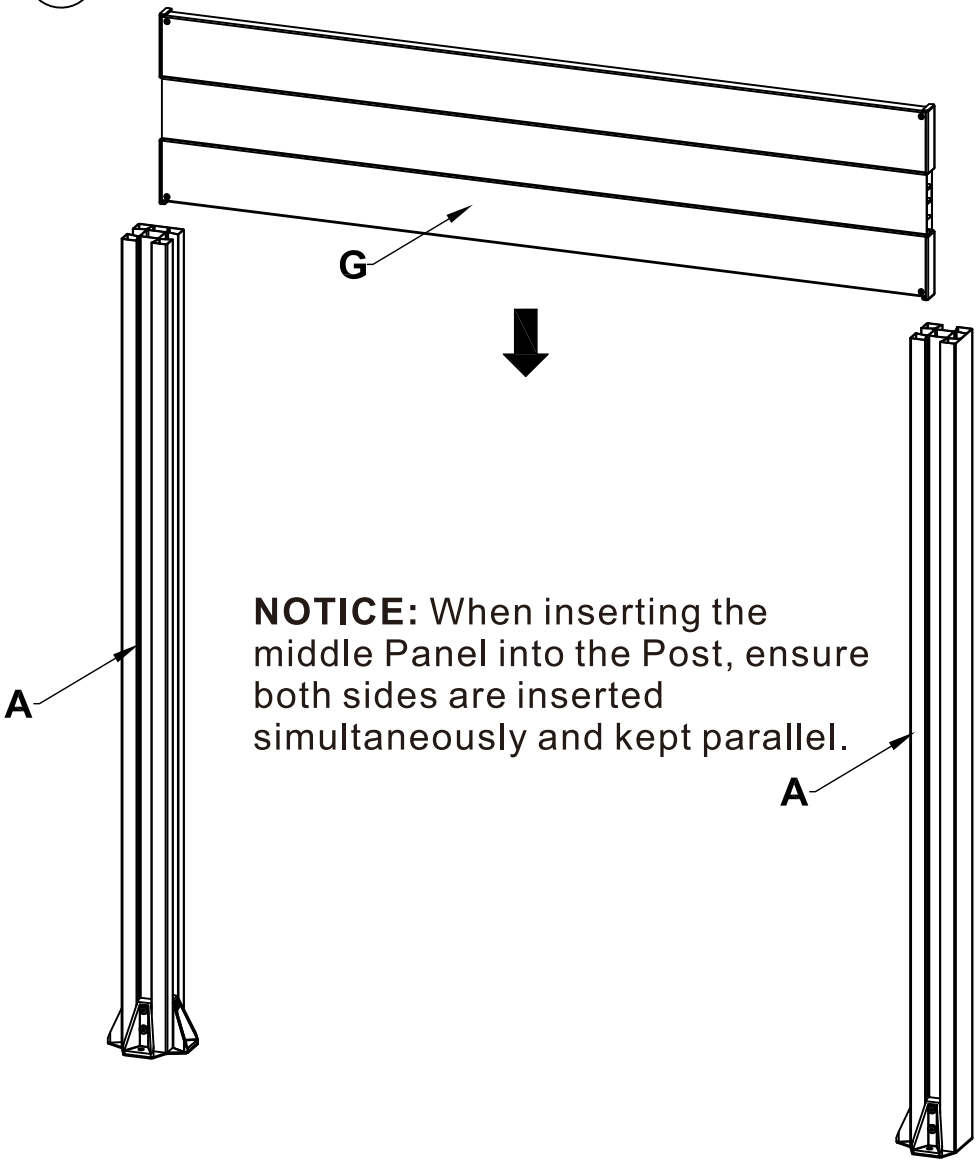


NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

8


Please ensure the distance between the two Posts #A remains consistent.
Pre-drill φ12 holes at the corresponding positions on the ground and pre-embed plastic expansion tubes #N.

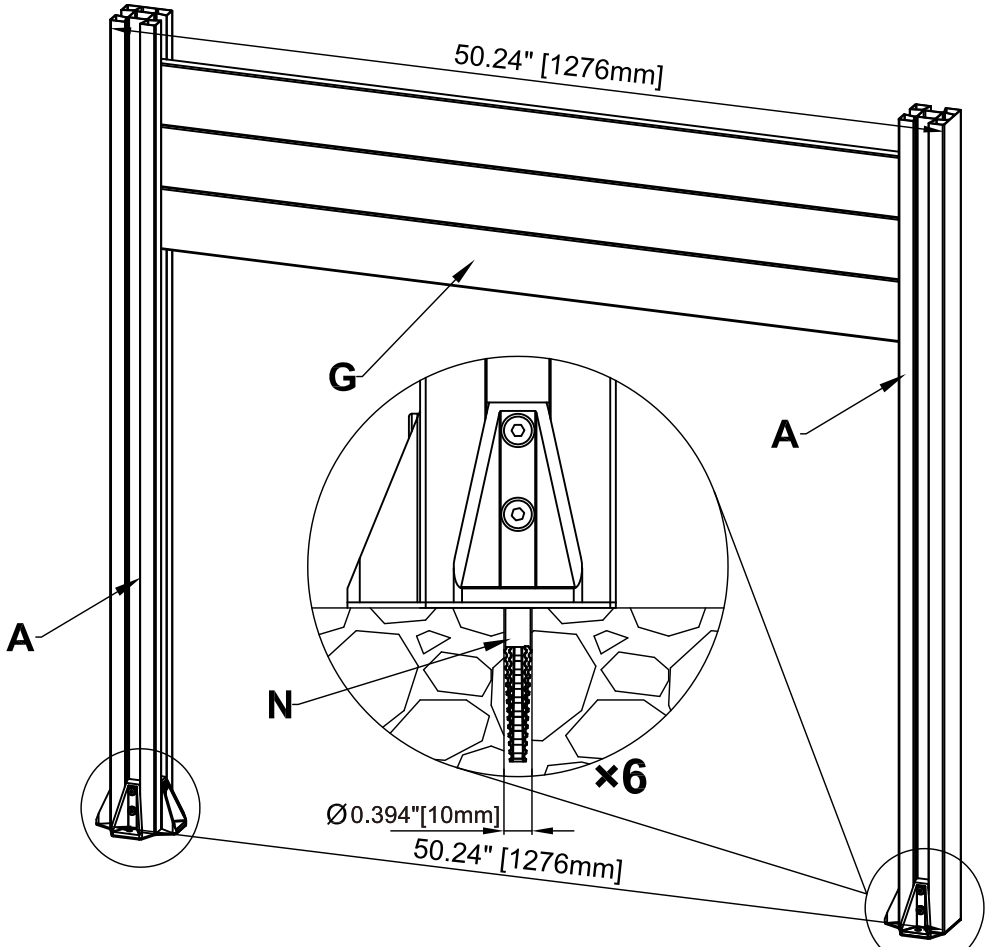

Hole Location and Dimension Diagram

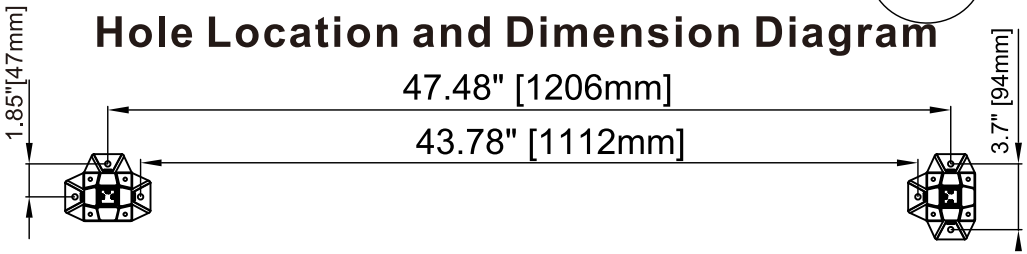


O




6PCS

P

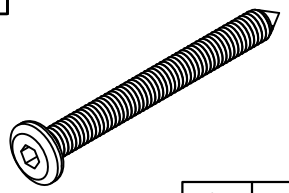


6*60 3PCS

9

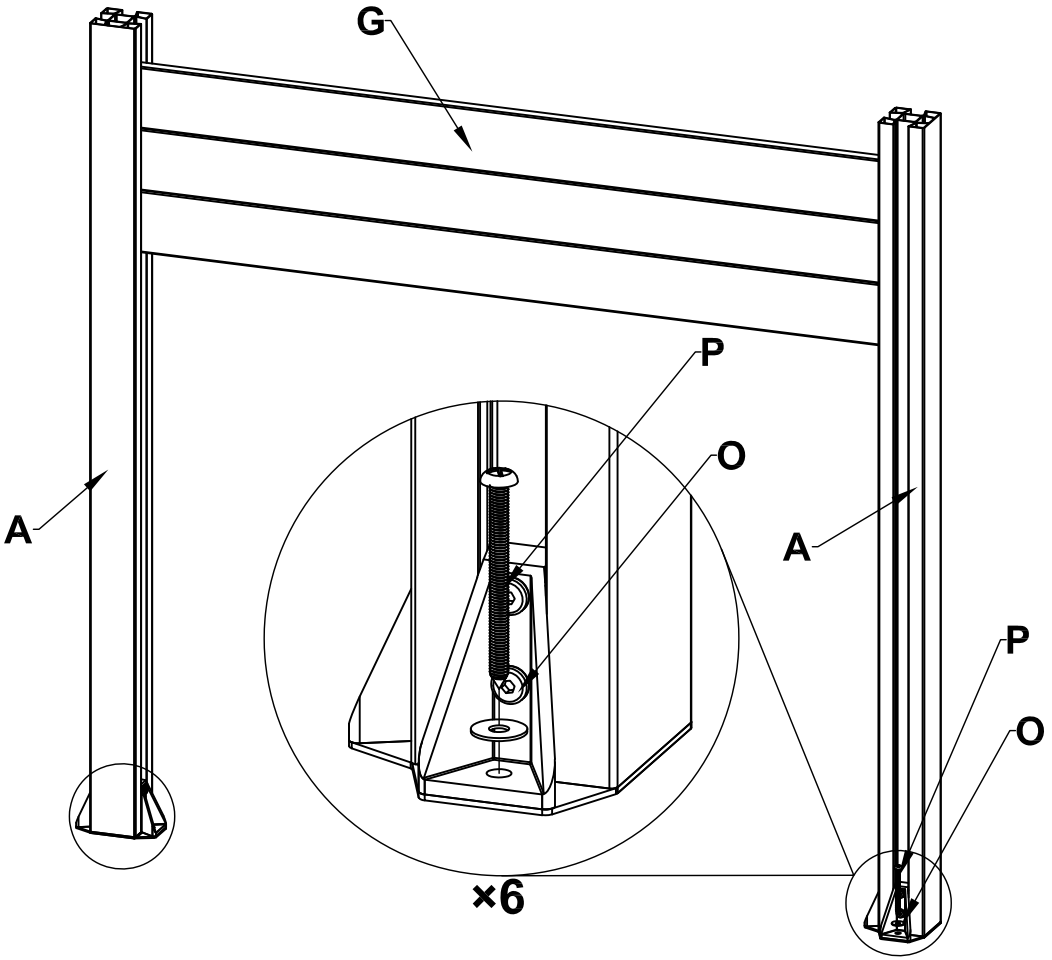


10

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

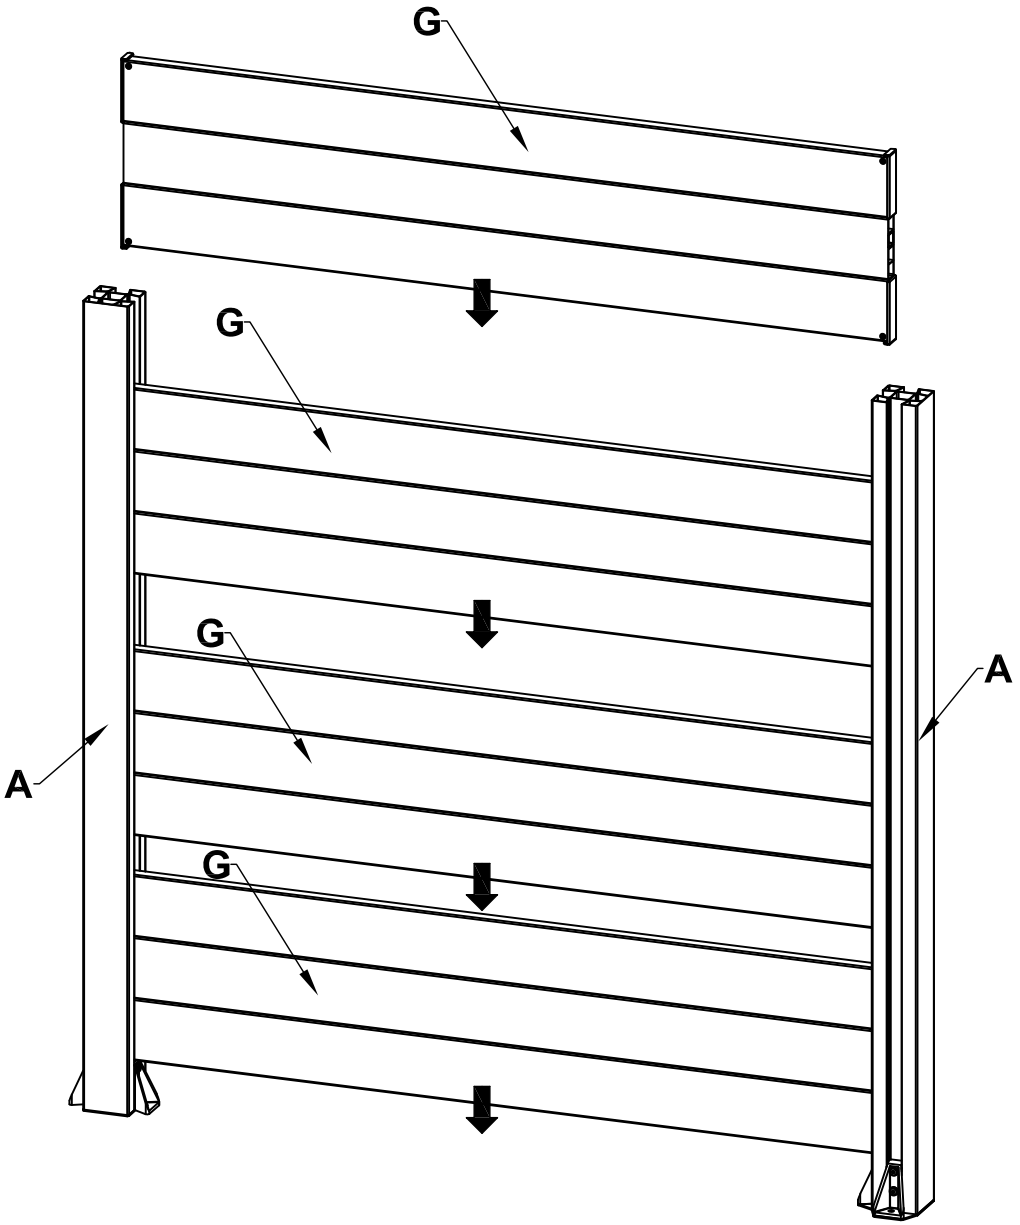


11

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

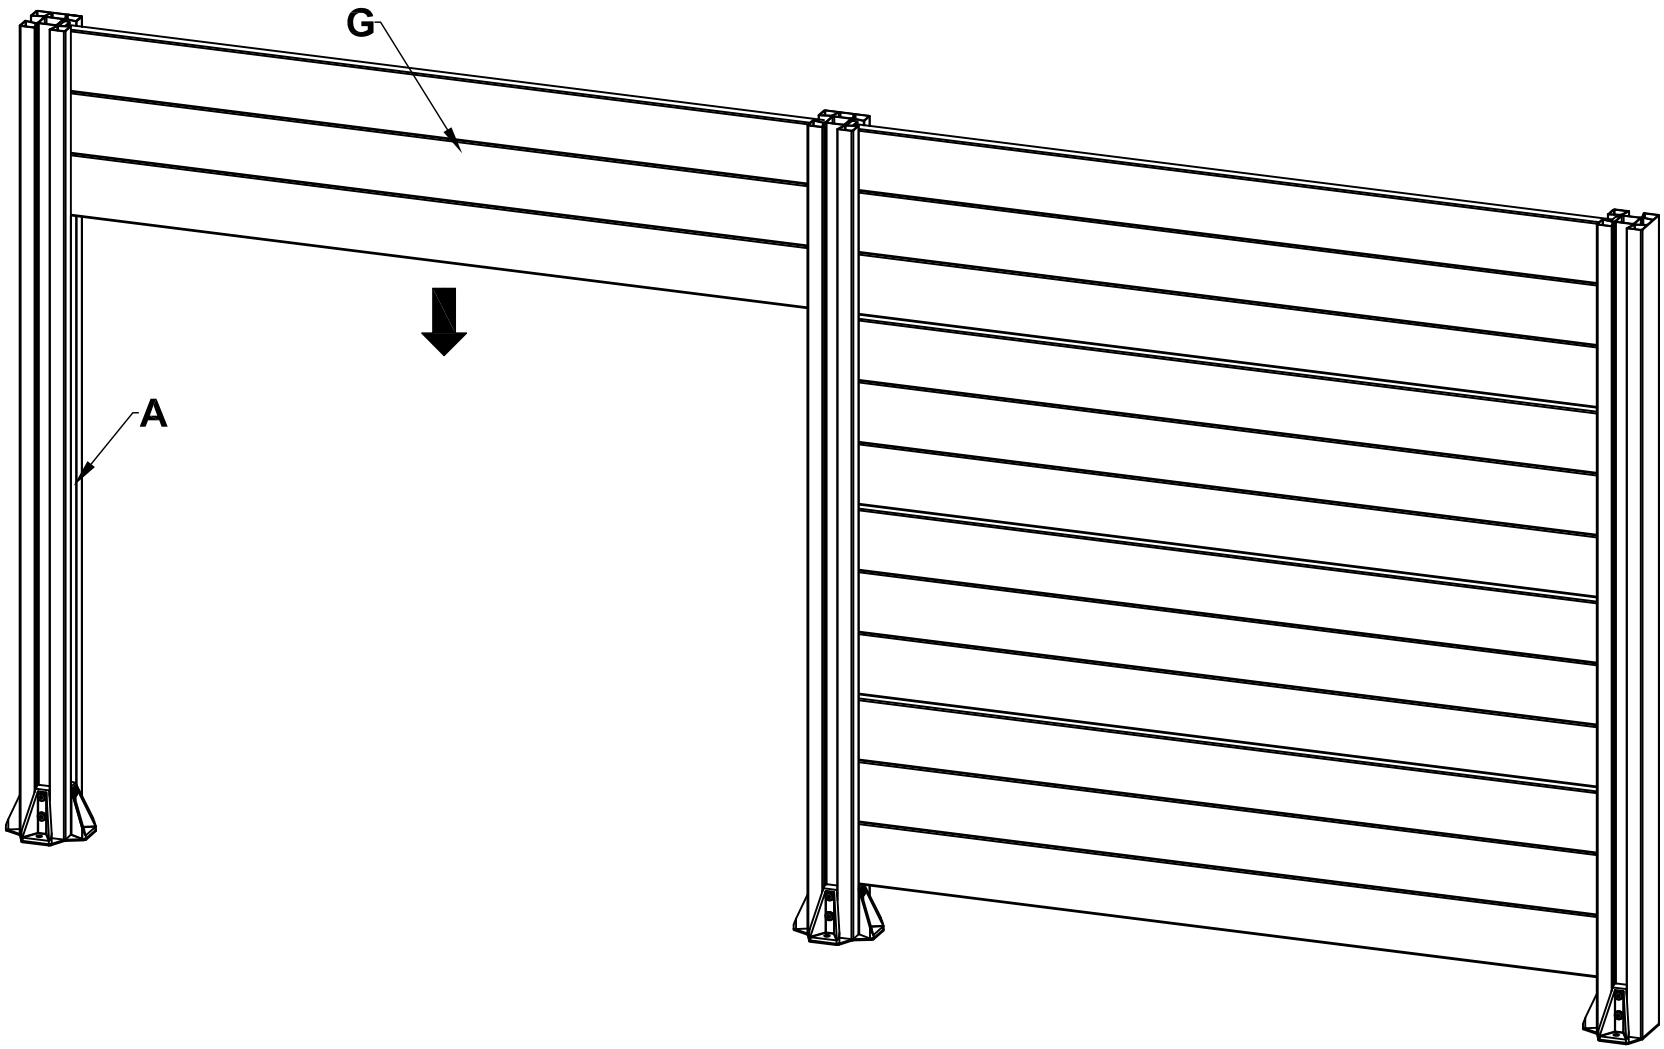


N




3PCS


Please ensure the distance between the two Posts #A remains consistent.
Pre-drill φ12 holes at the corresponding positions on the ground and pre-embed plastic expansion tubes #N.

12

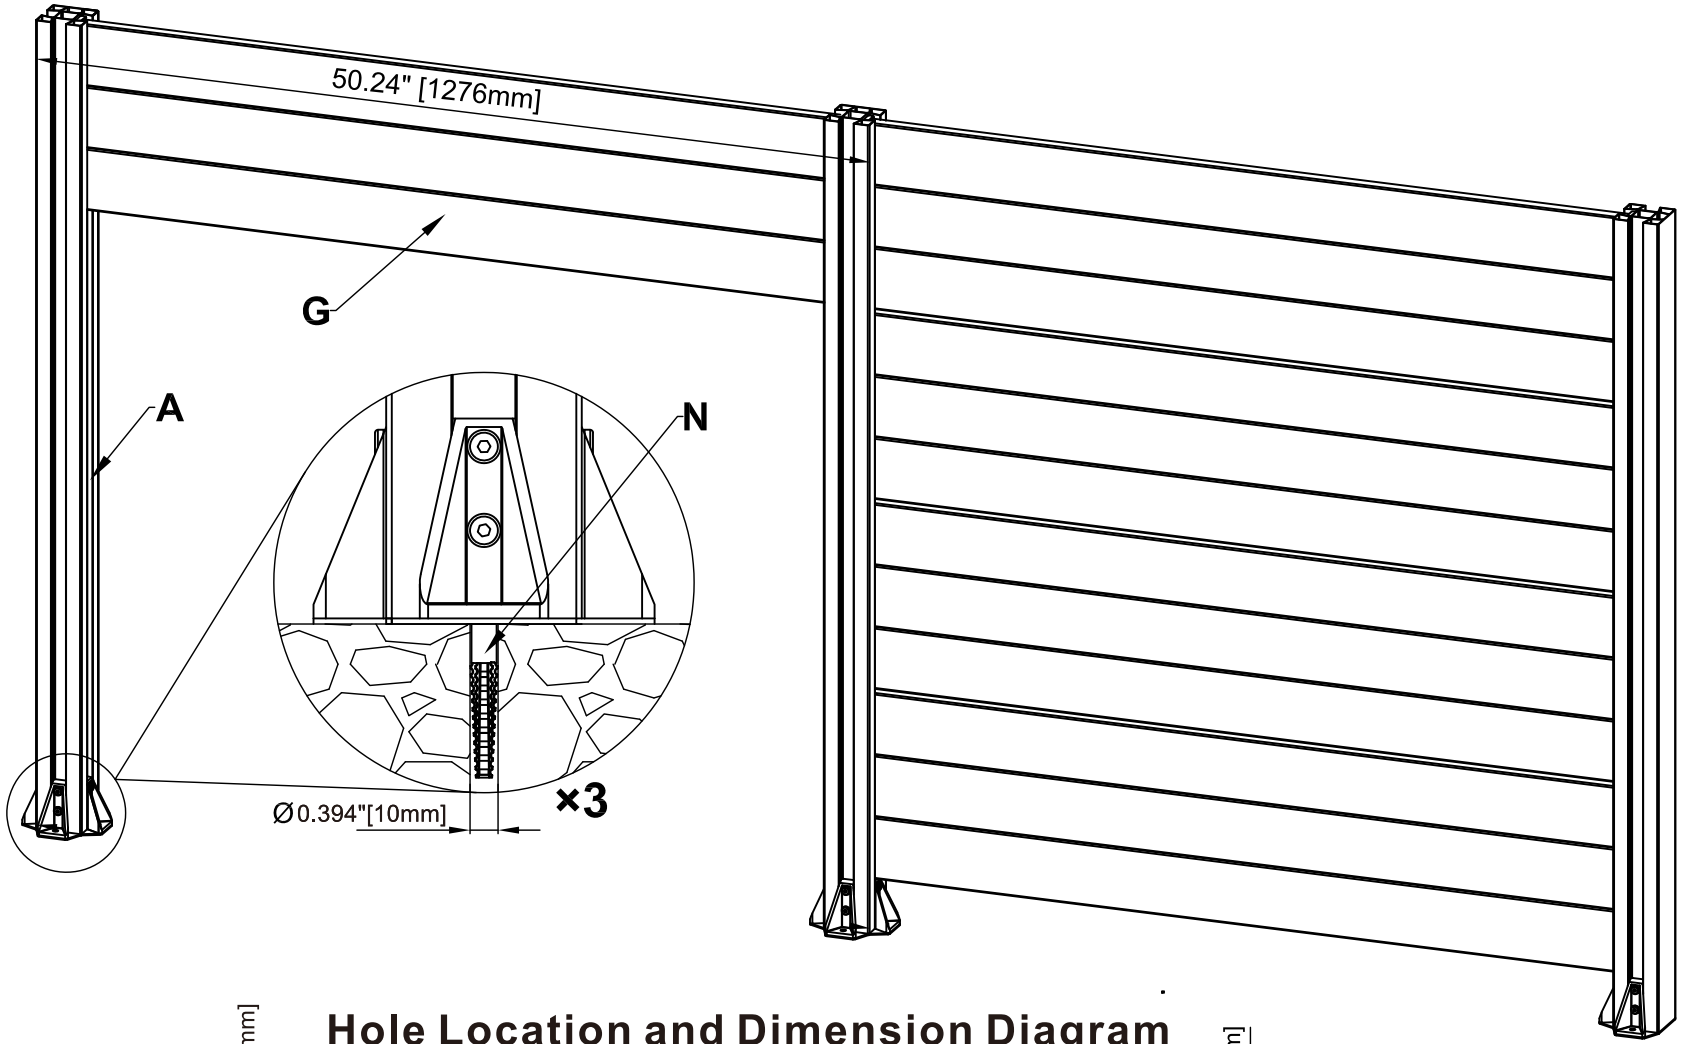


Hole Location and Dimension Diagram

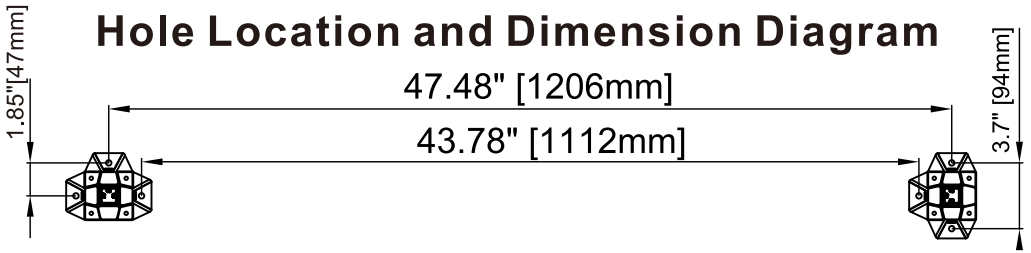


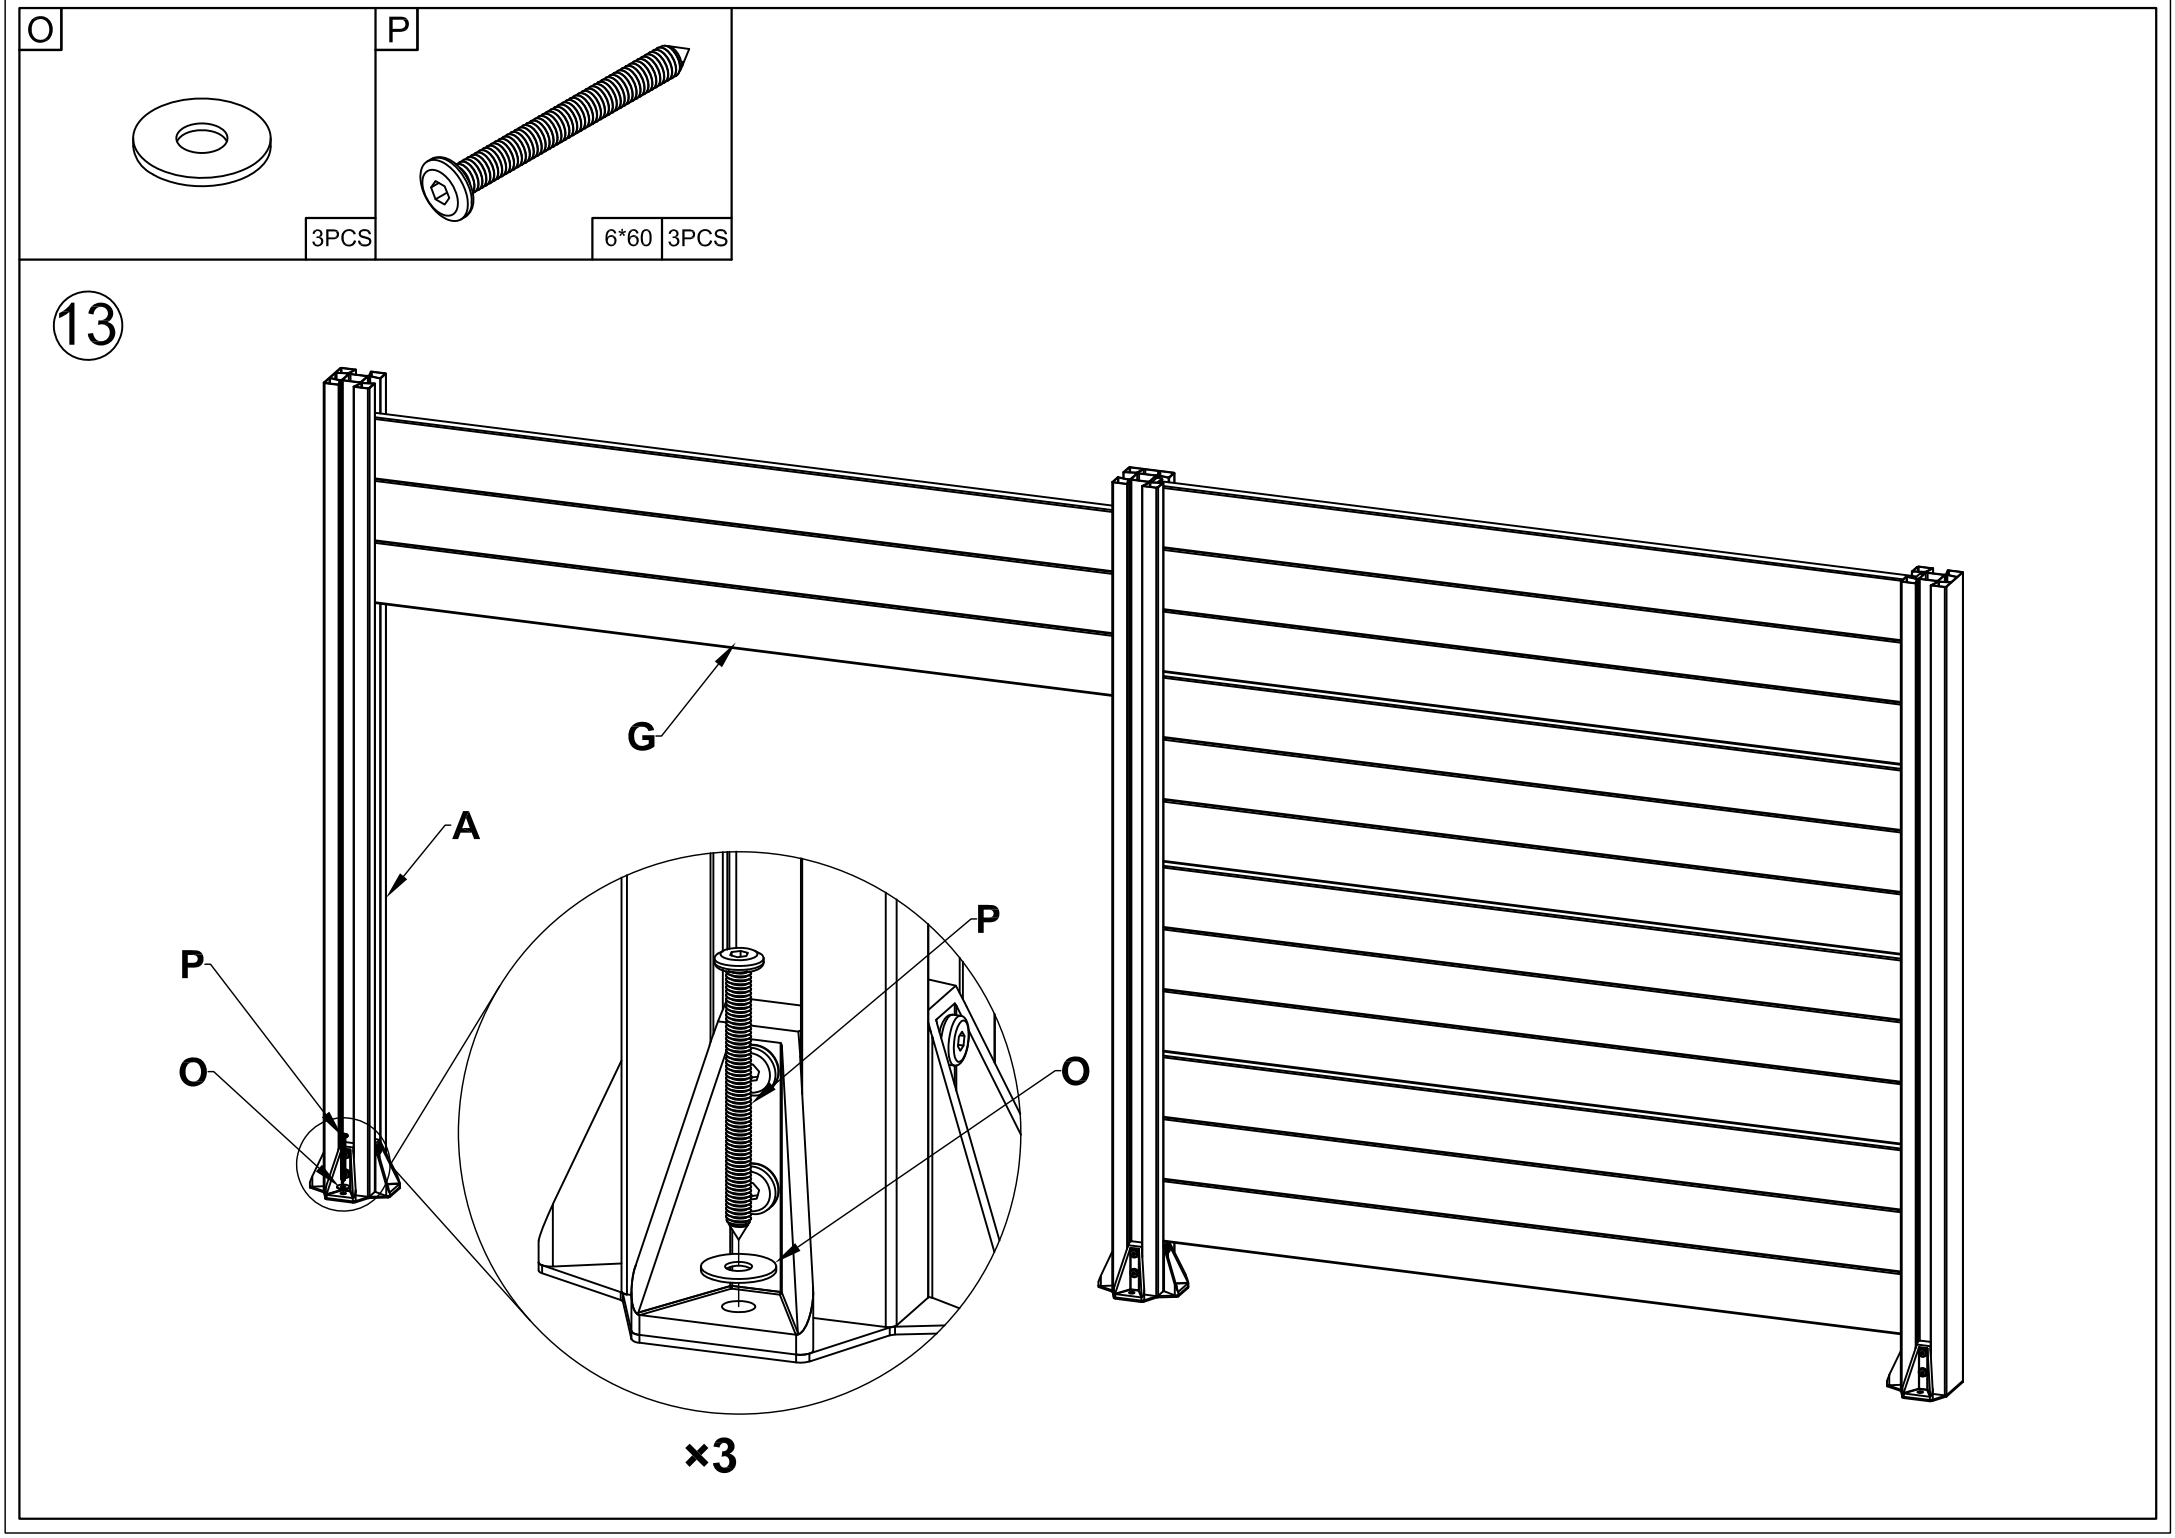
O
3PCS
P
6*60
3PCS
13
G
A
P
O
P
O
×3

14


NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

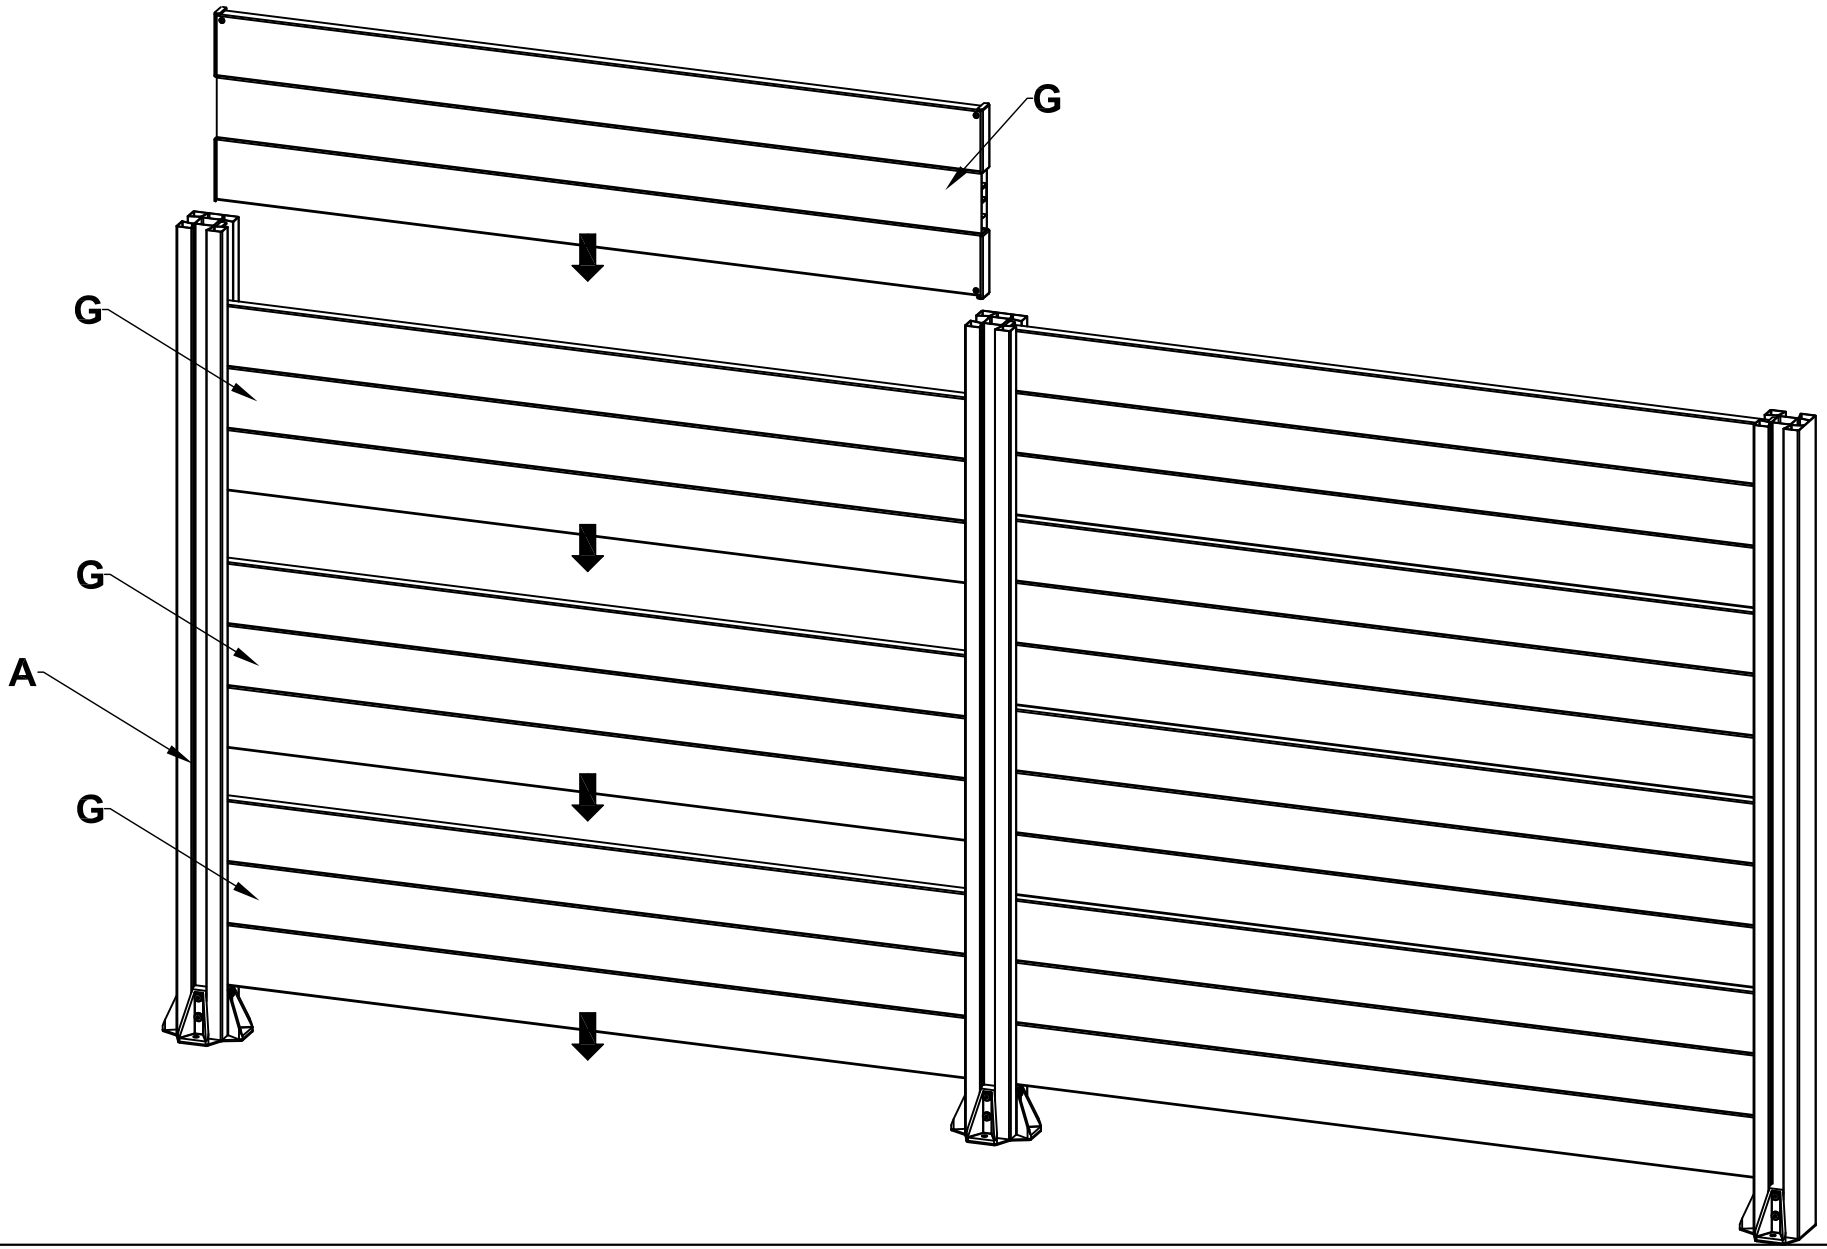

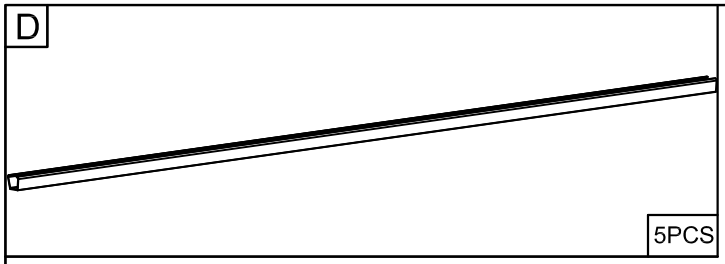


Please insert Part #D (cover channel) into the posts where no panel is installed to fill the gaps.

15

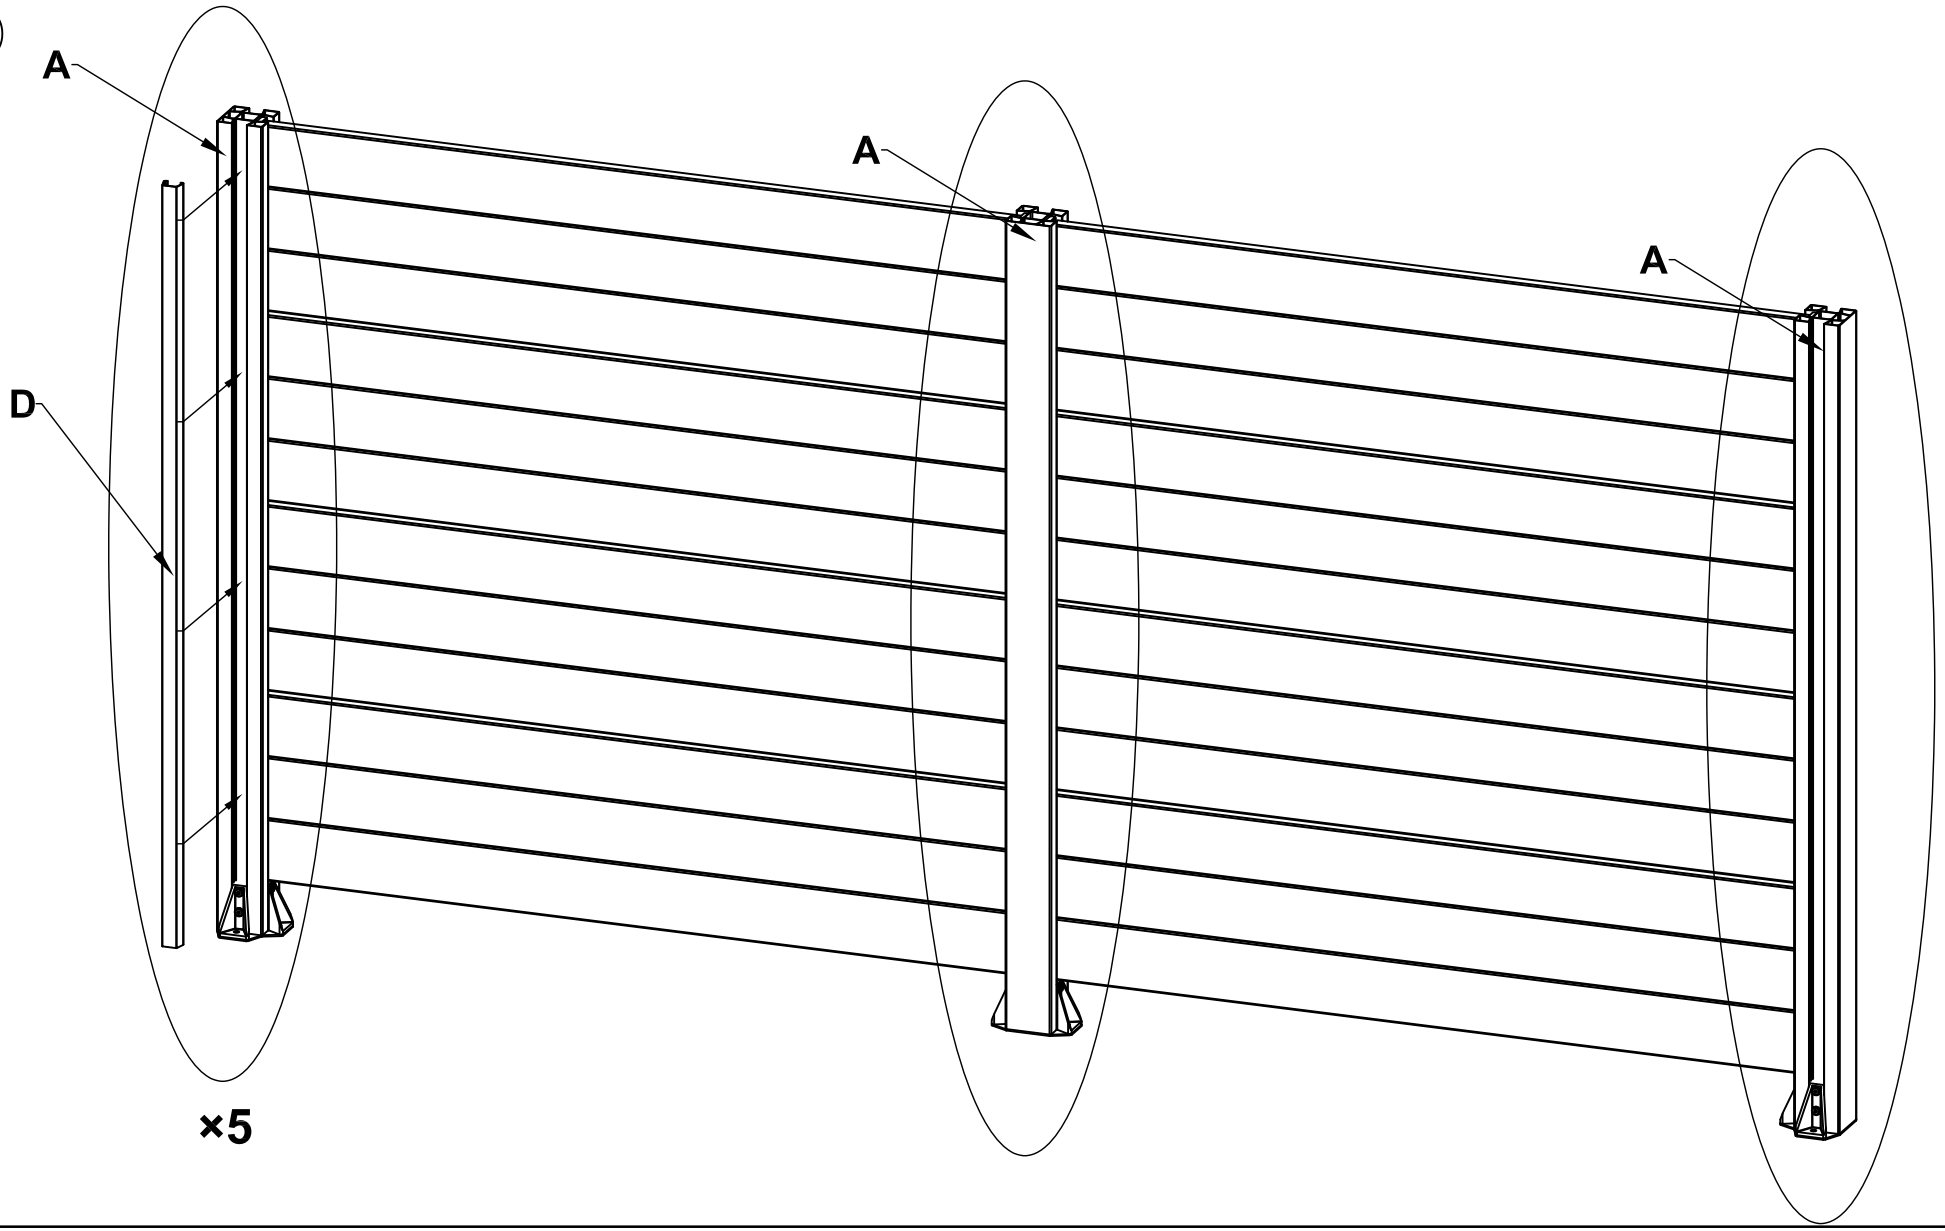


N




3PCS


Please ensure the distance between the two Posts #A remains consistent.
Pre-drill φ12 holes at the corresponding positions on the ground and pre-embed plastic expansion tubes #N.

16

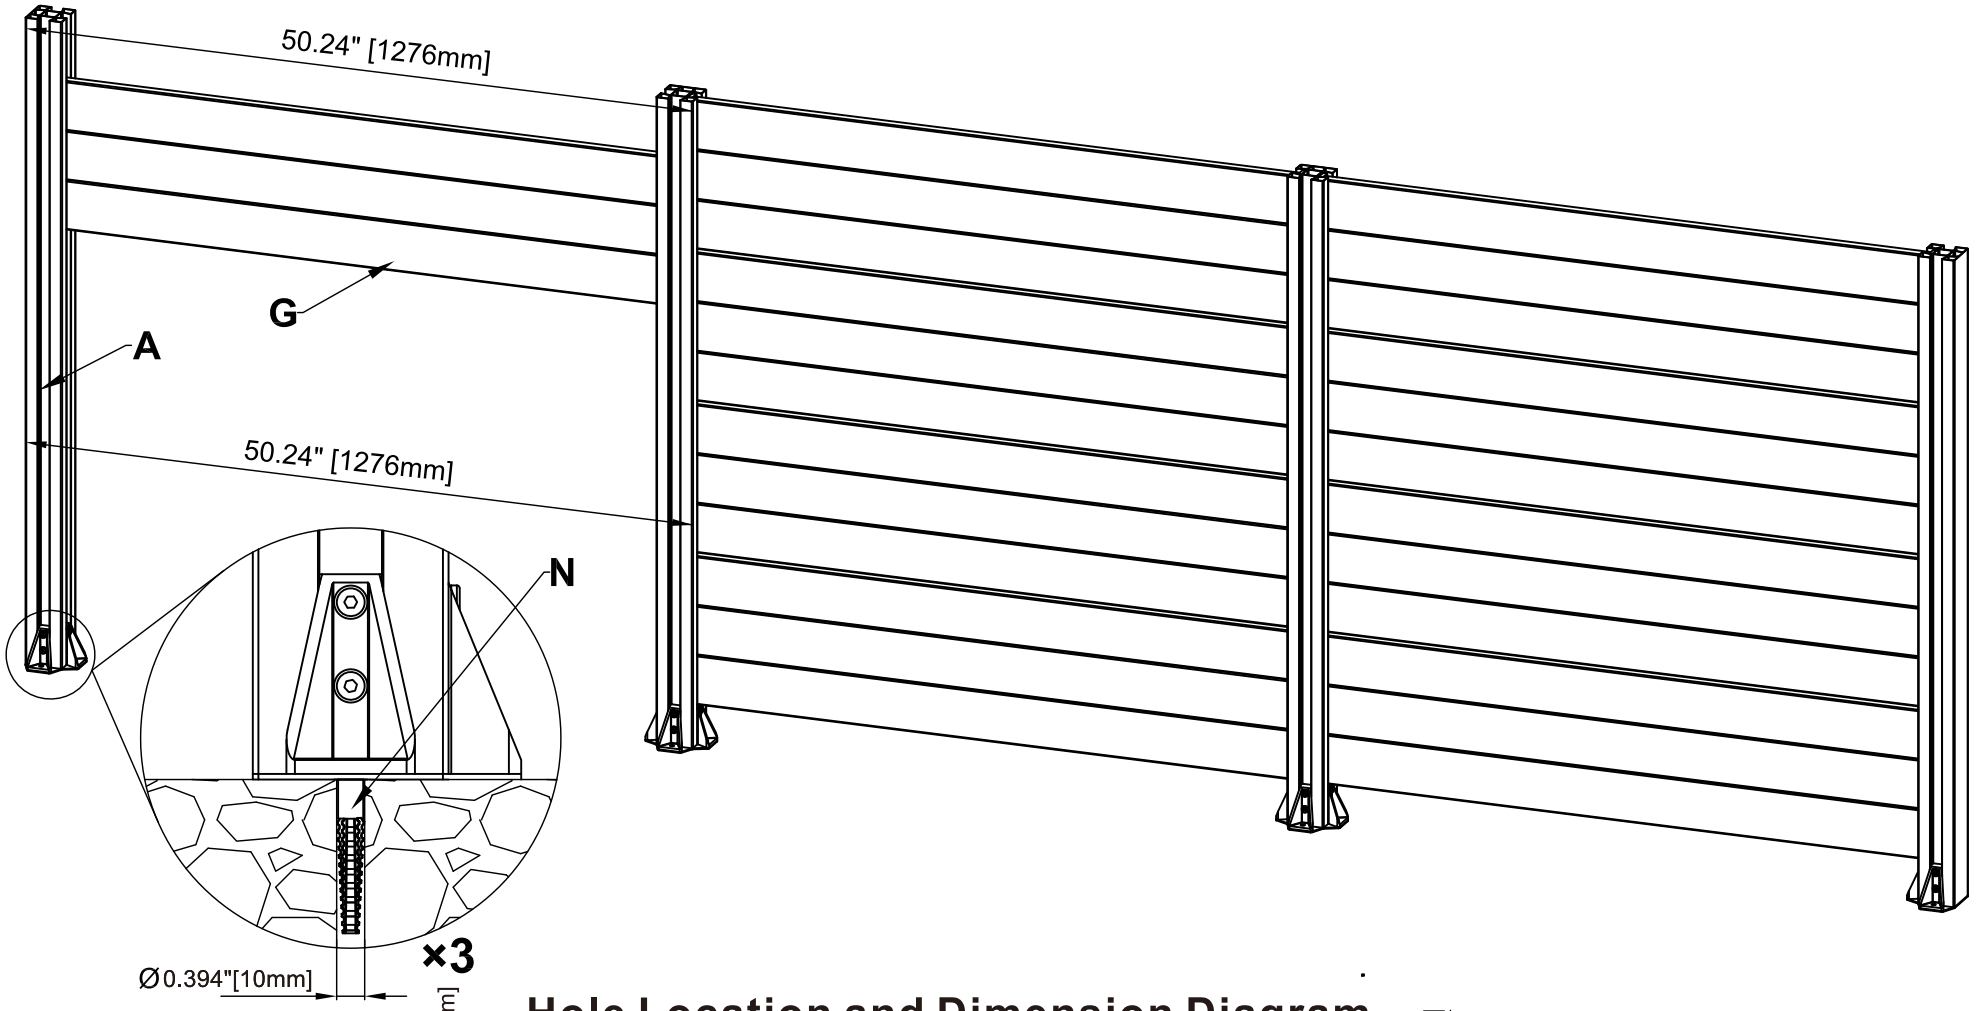


Hole Location and Dimension Diagram

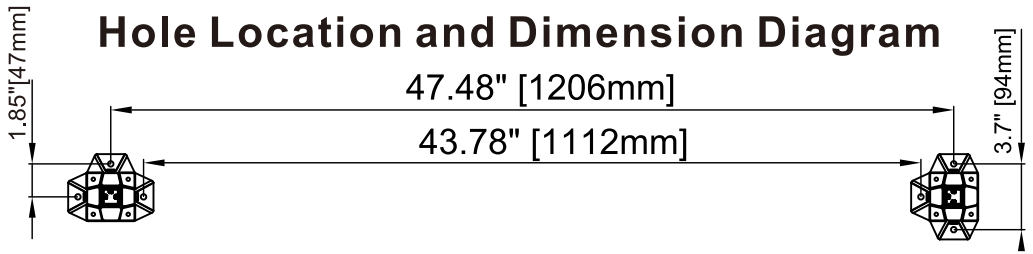

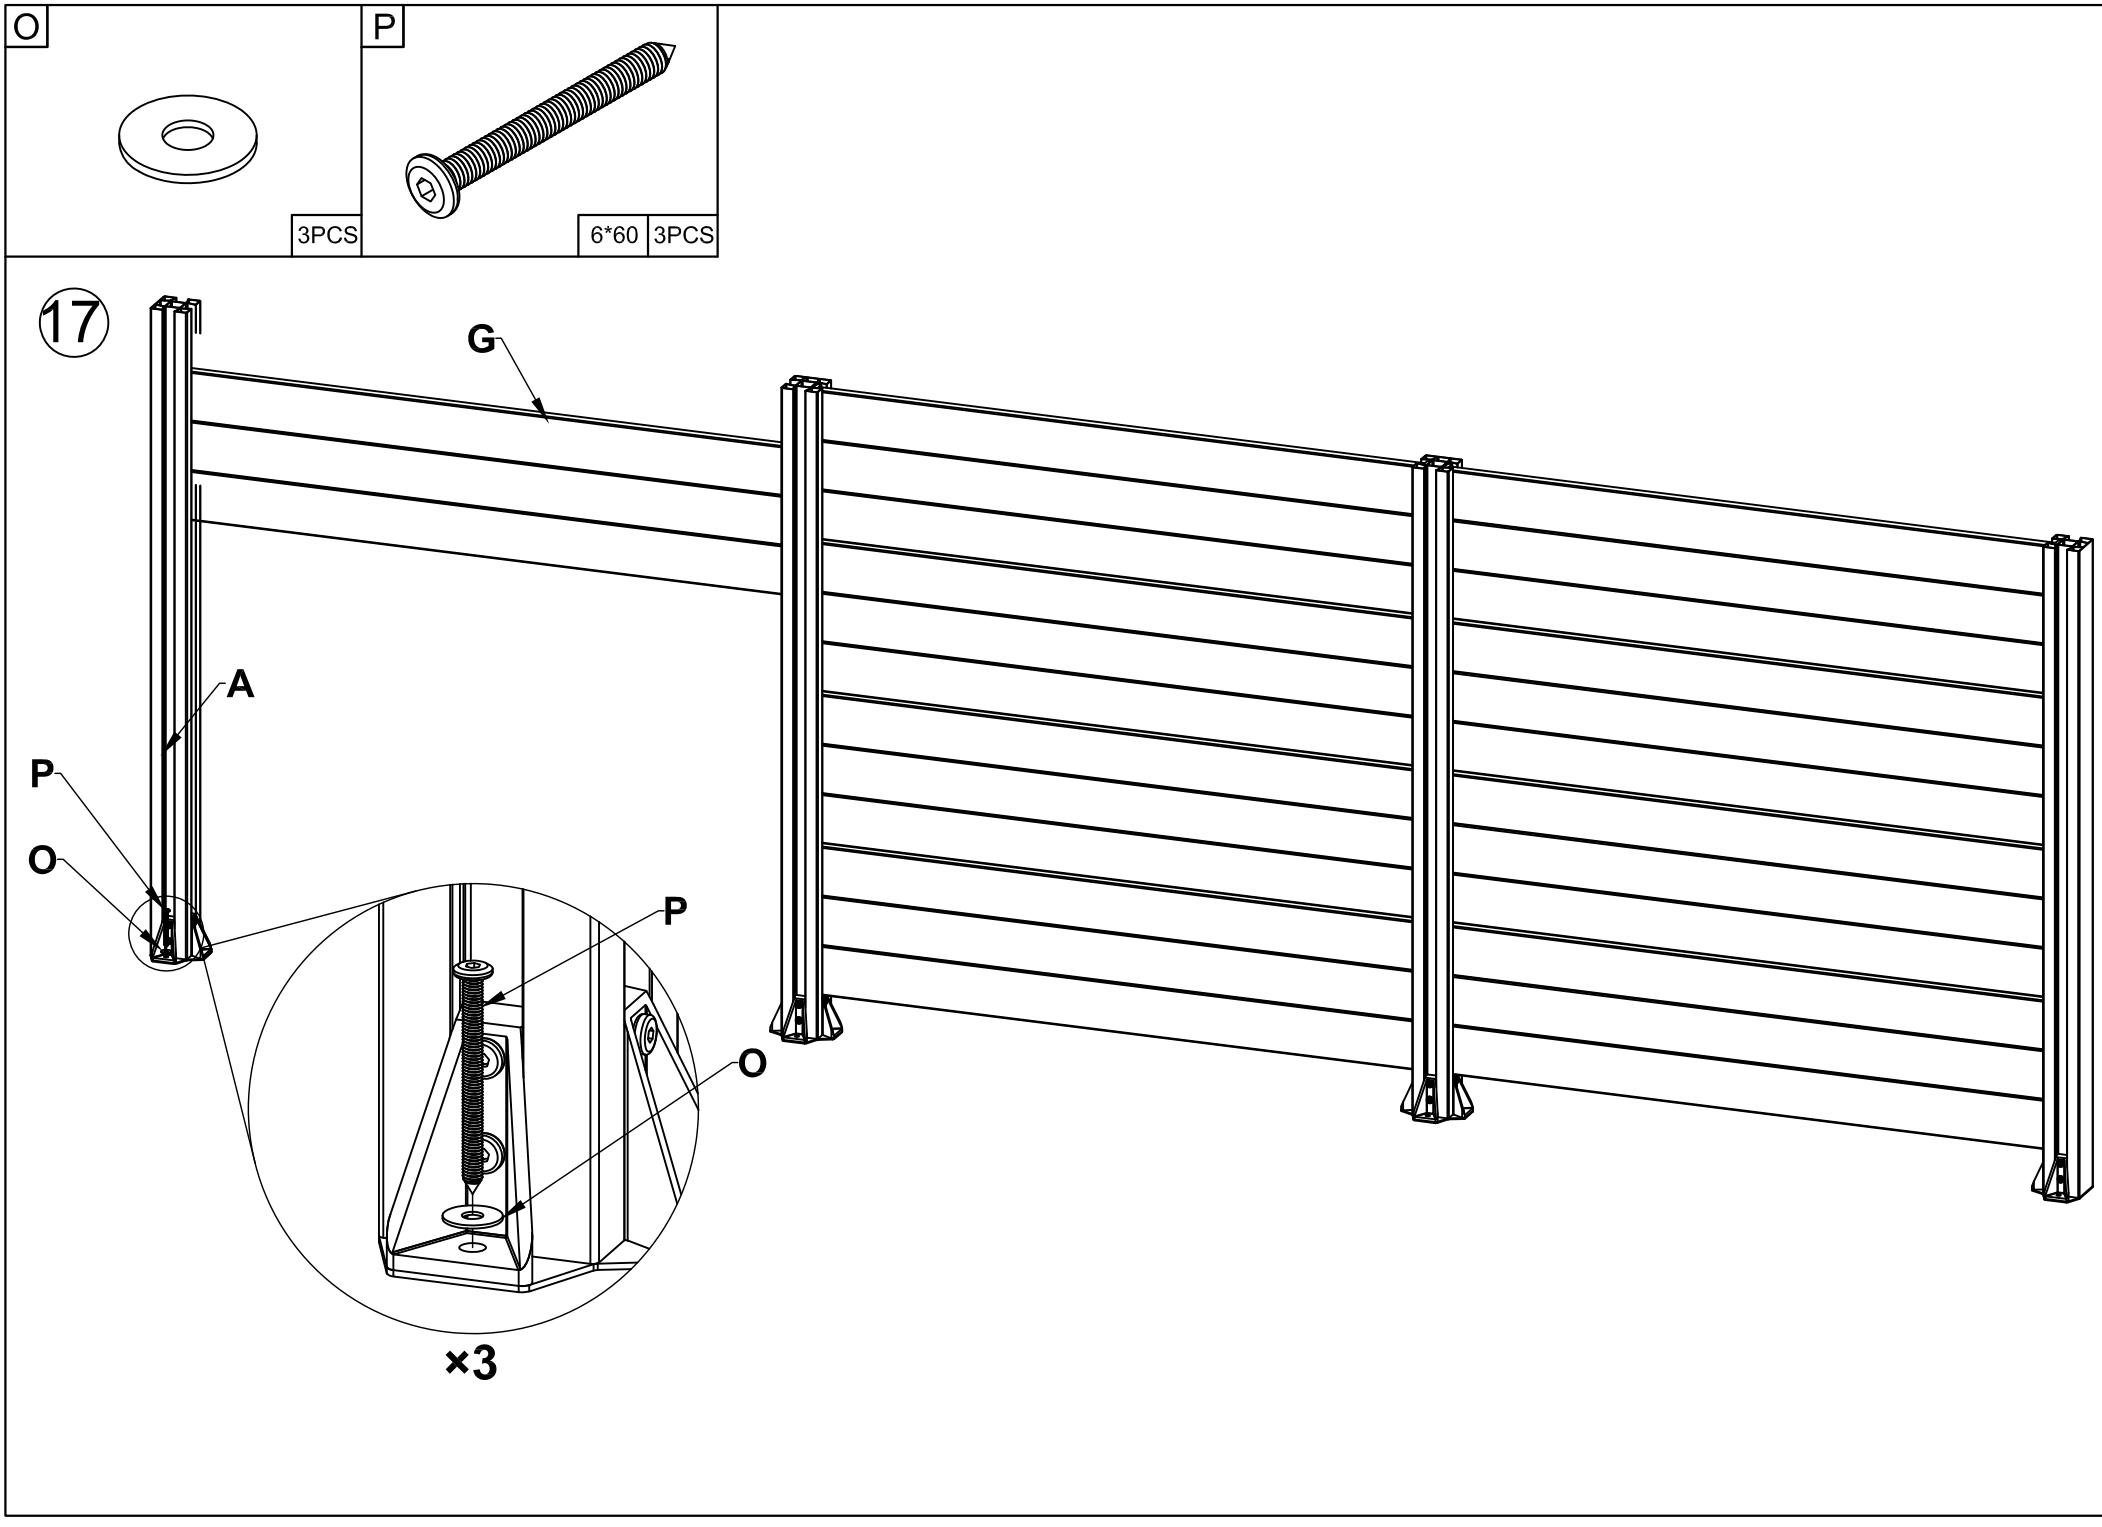
O
3PCS
P
6*60
3PCS
17
G
A
P
O
P
O
×3


18

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

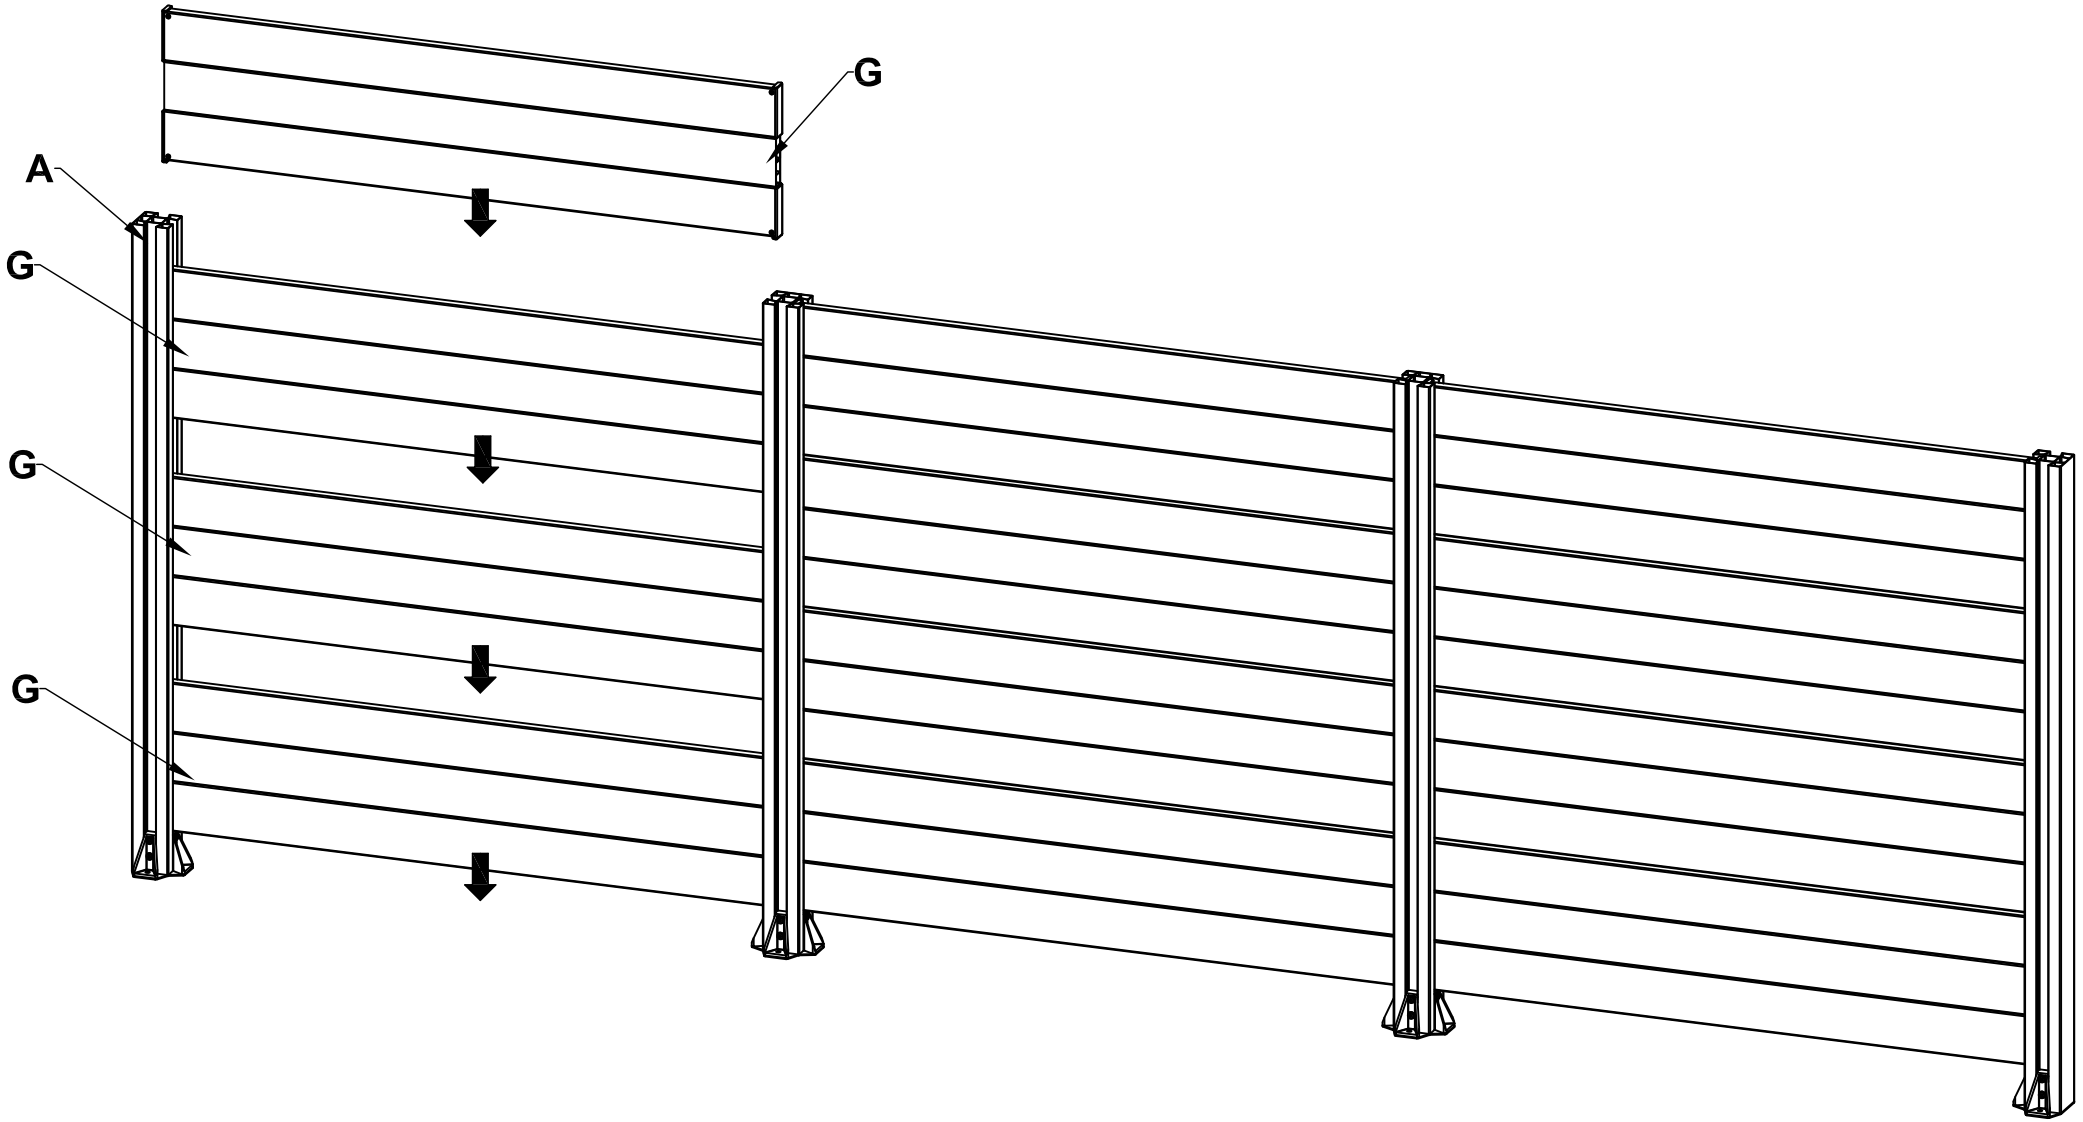


19

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

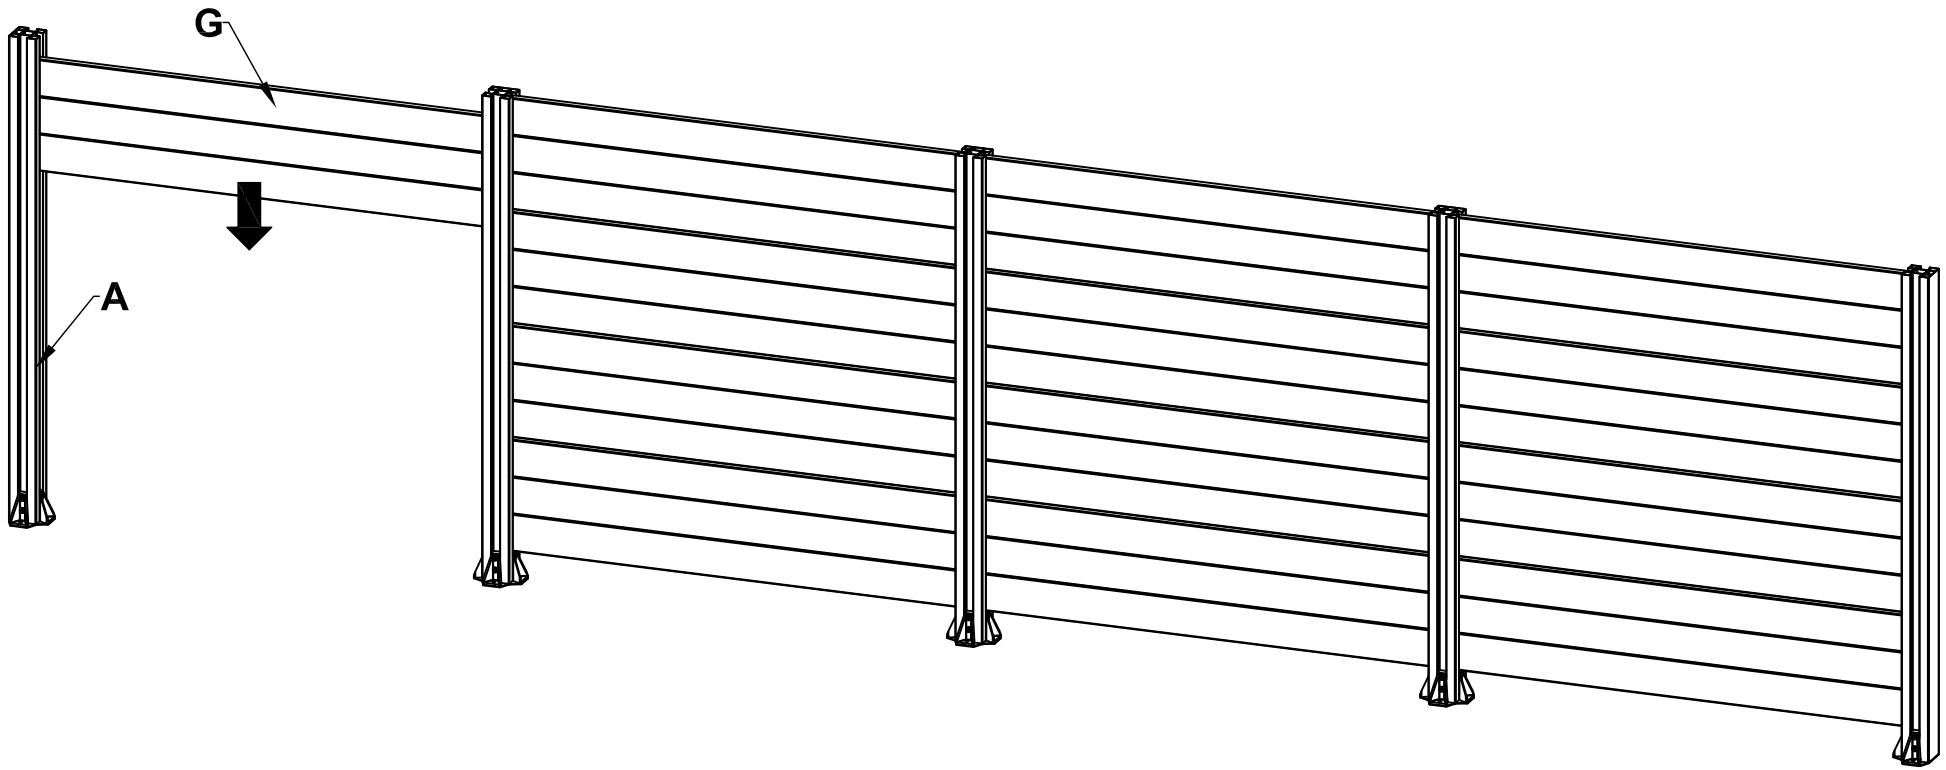


N




3PCS


Please ensure the distance between the two Posts #A remains consistent.
Pre-drill φ12 holes at the corresponding positions on the ground and pre-embed plastic expansion tubes #N.

20

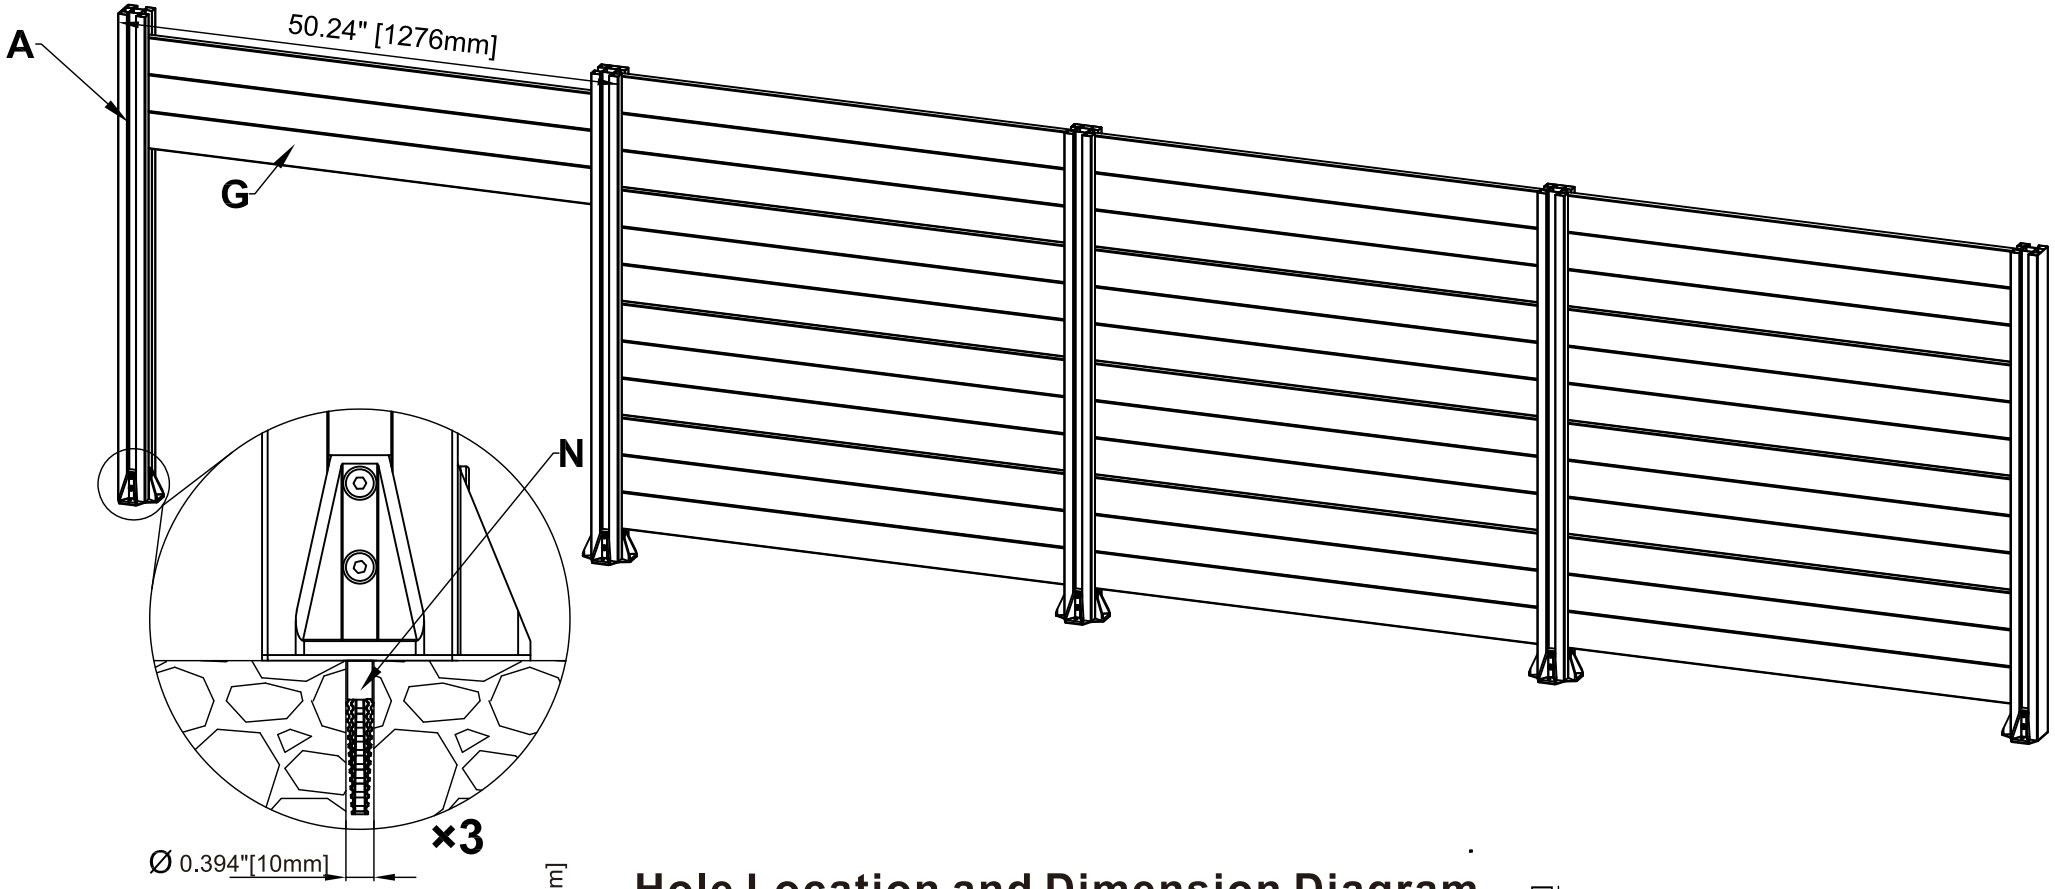


Hole Location and Dimension Diagram

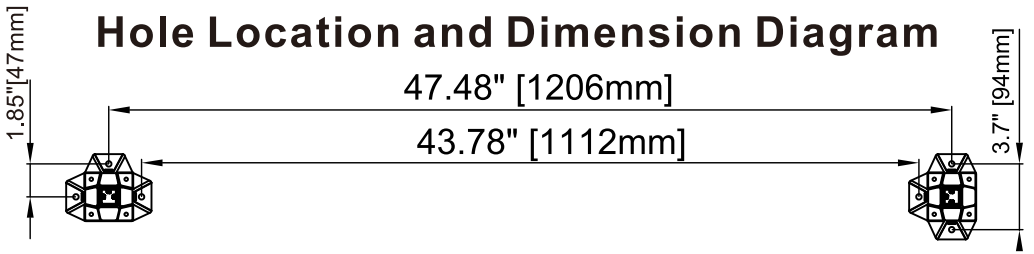

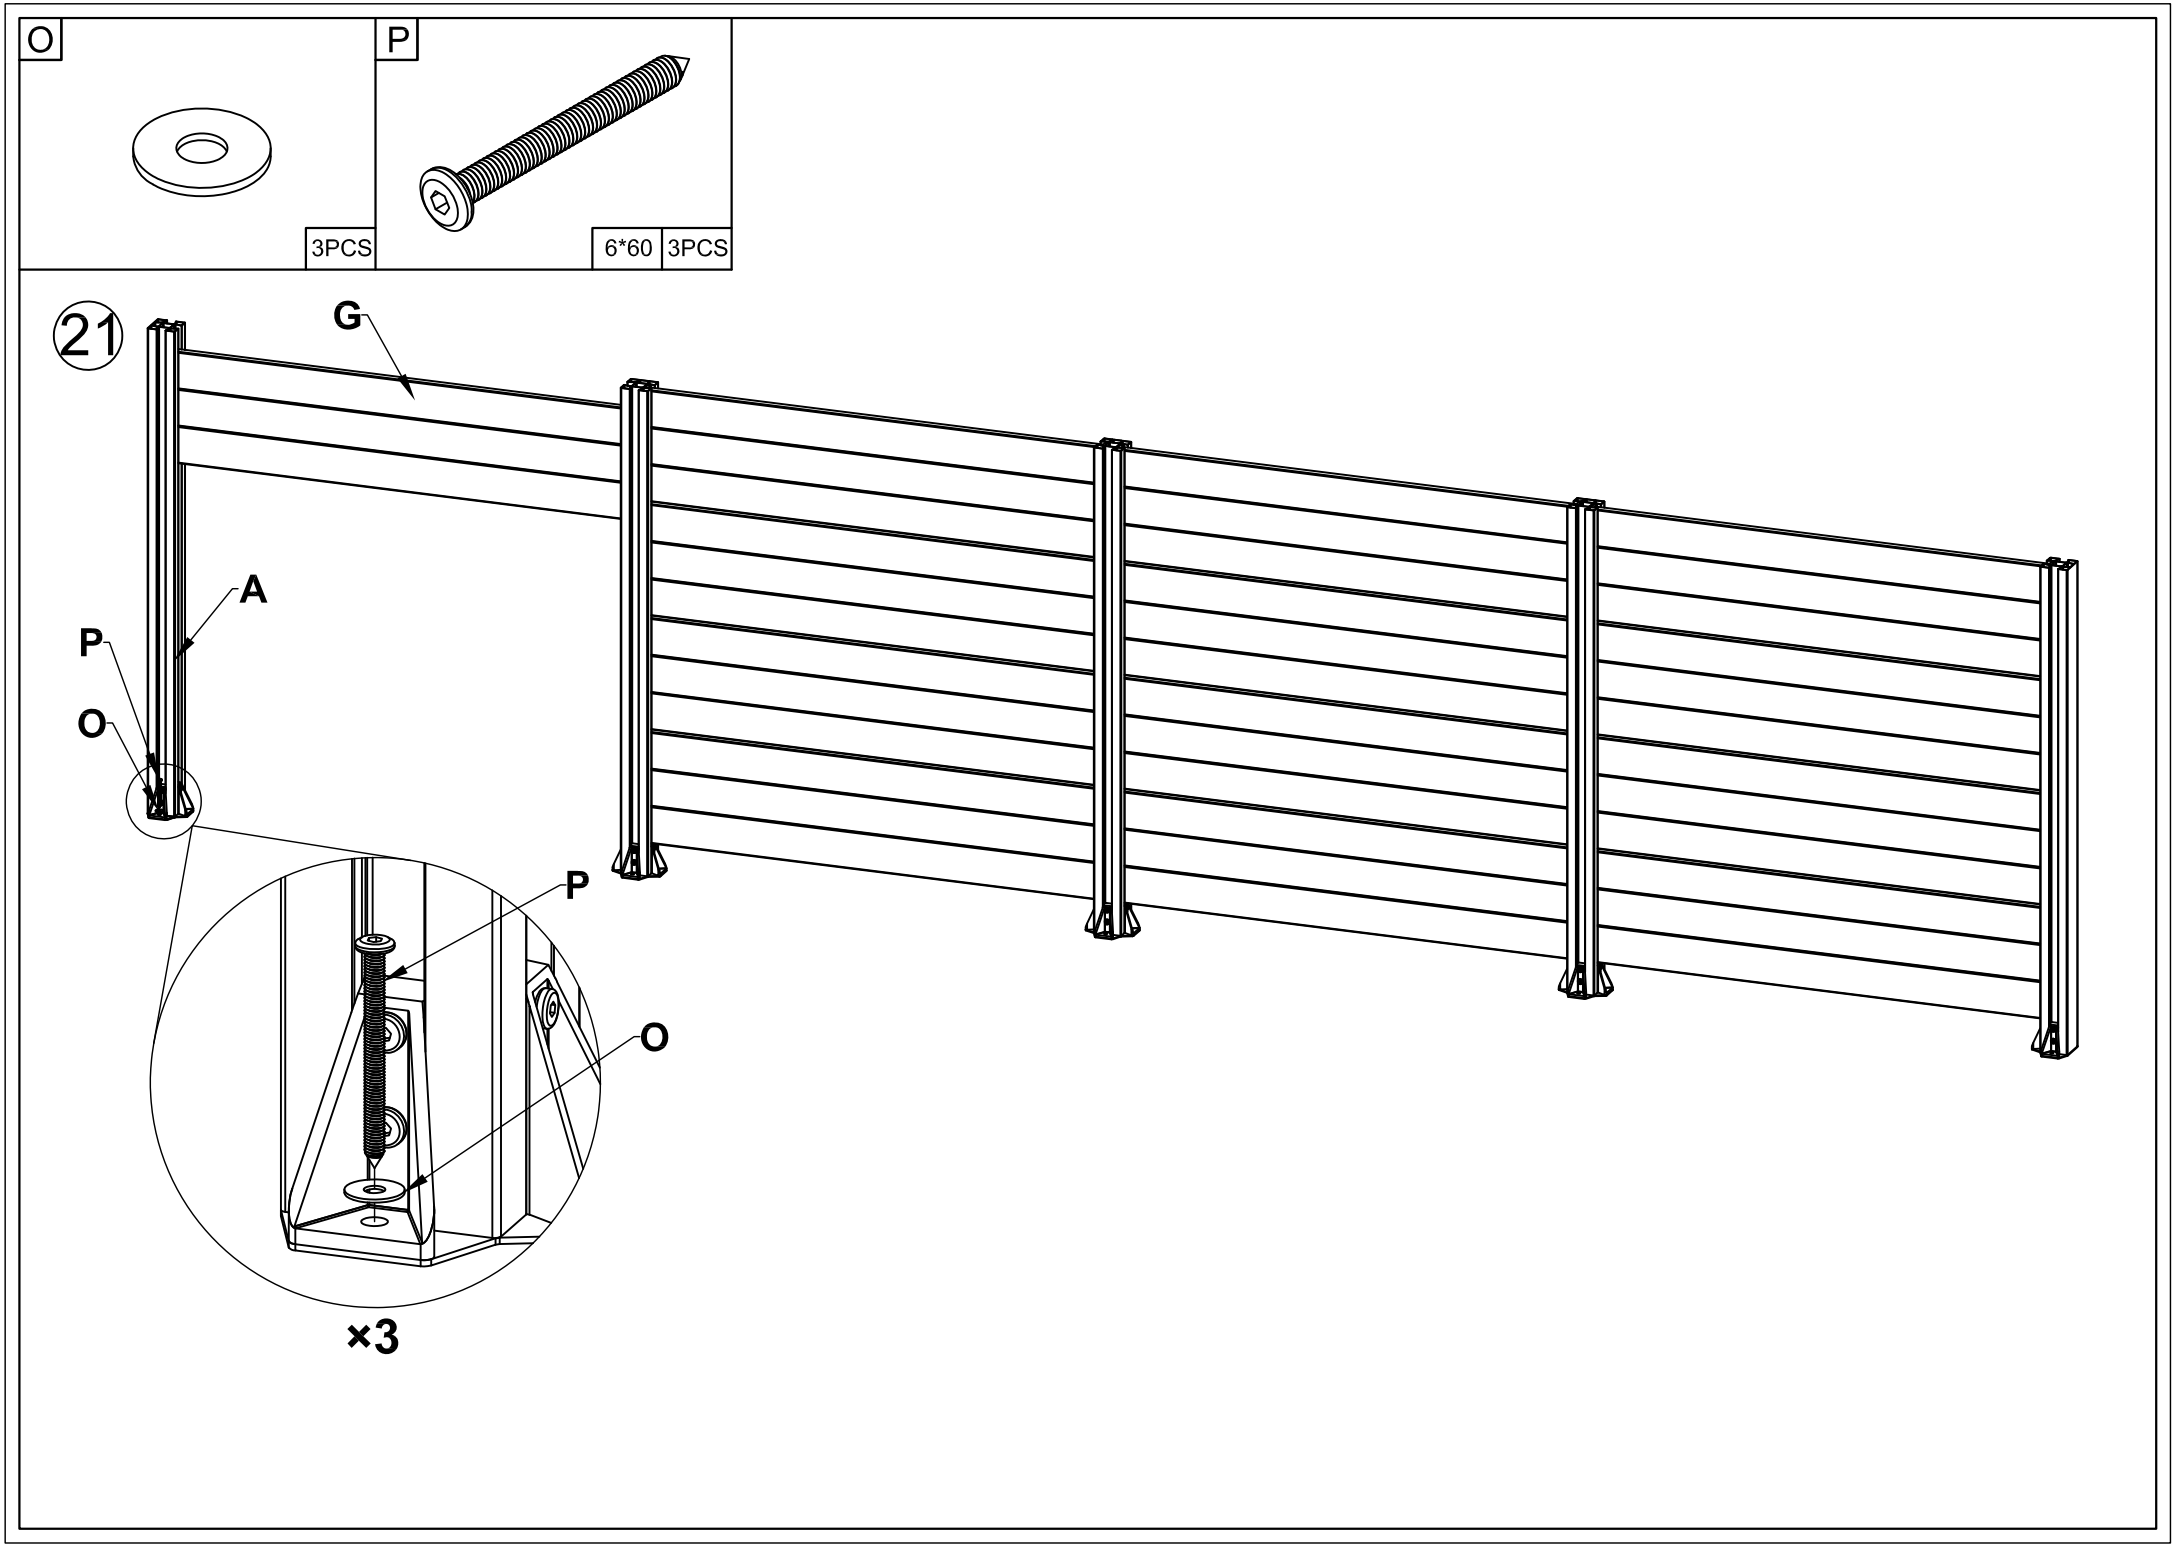
O
3PCS
P
6*60
3PCS
21
G
A
P
O
P
O
×3

22

NOTICE: When inserting the middle Panel into the Post, ensure both sides are inserted simultaneously and kept parallel.

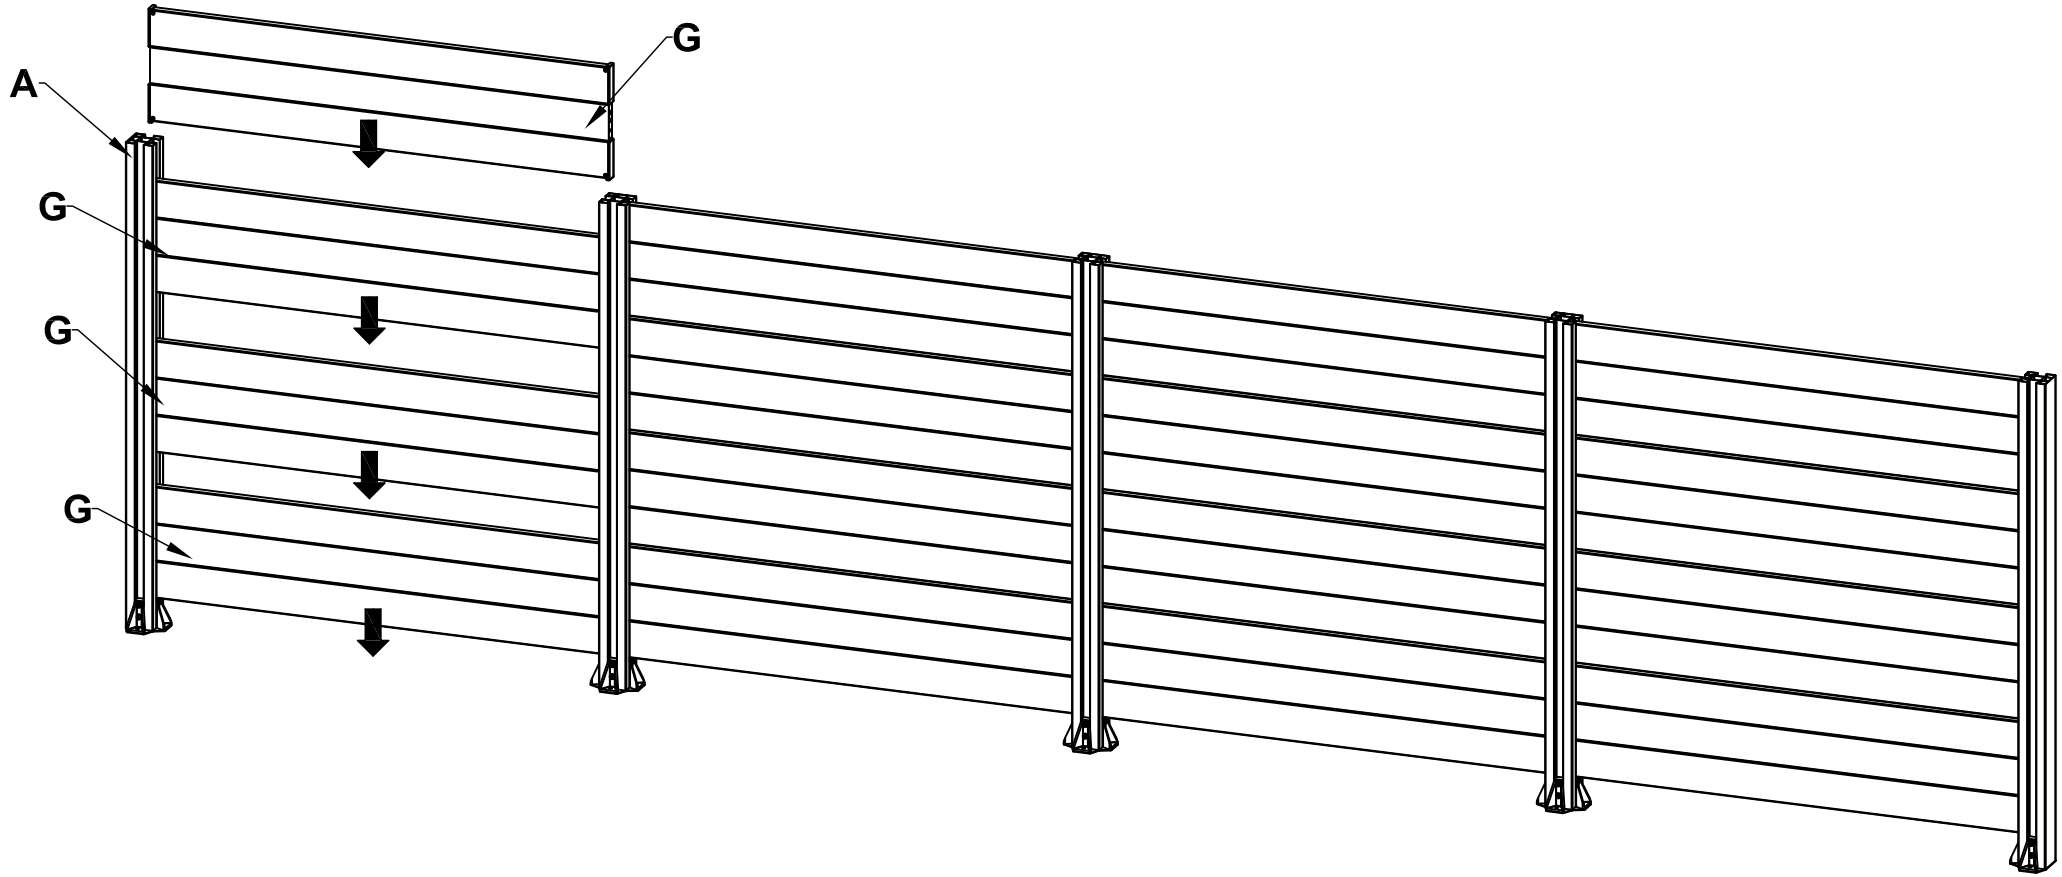


D




7PCS

Please insert Part #D (cover channel) into the posts where no panel is installed to fill the gaps.

23

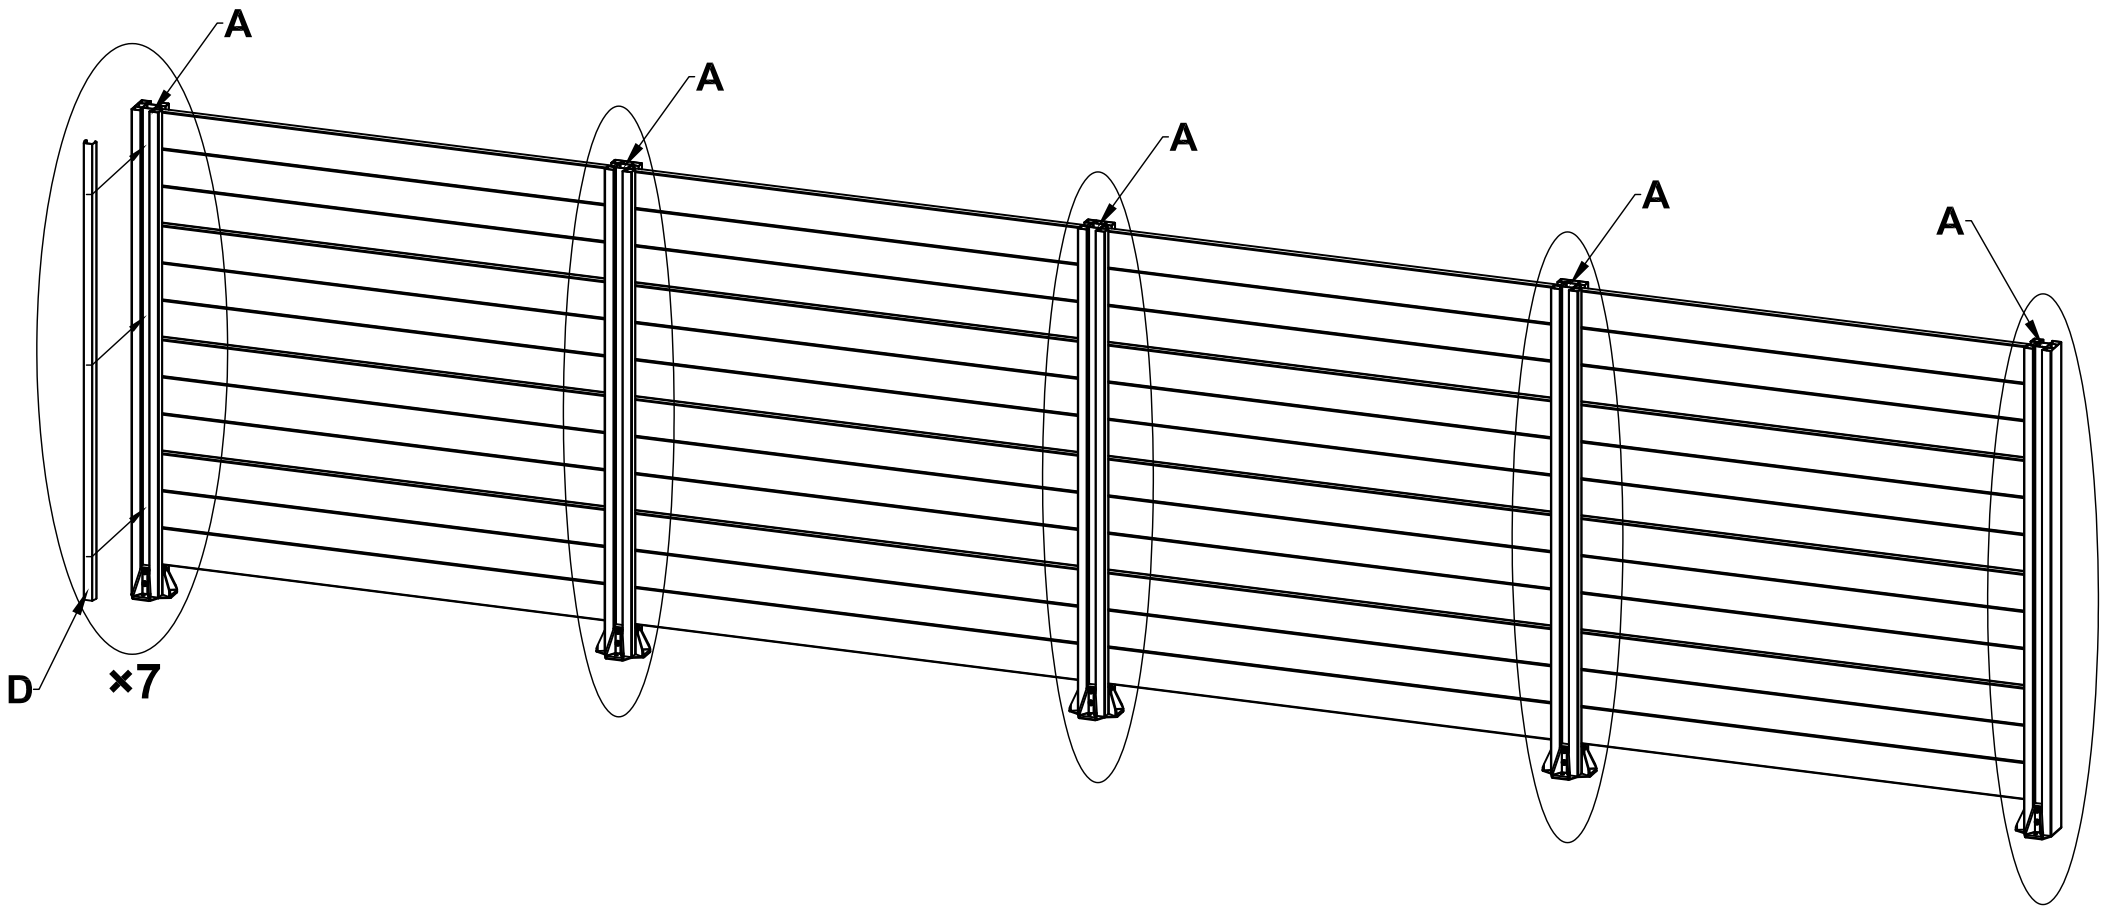


I

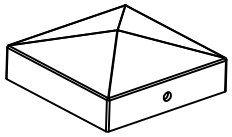


5PCS

Please orient Part #I (top cover) so that the side with holes faces the side of the post without the slot/groove.

24

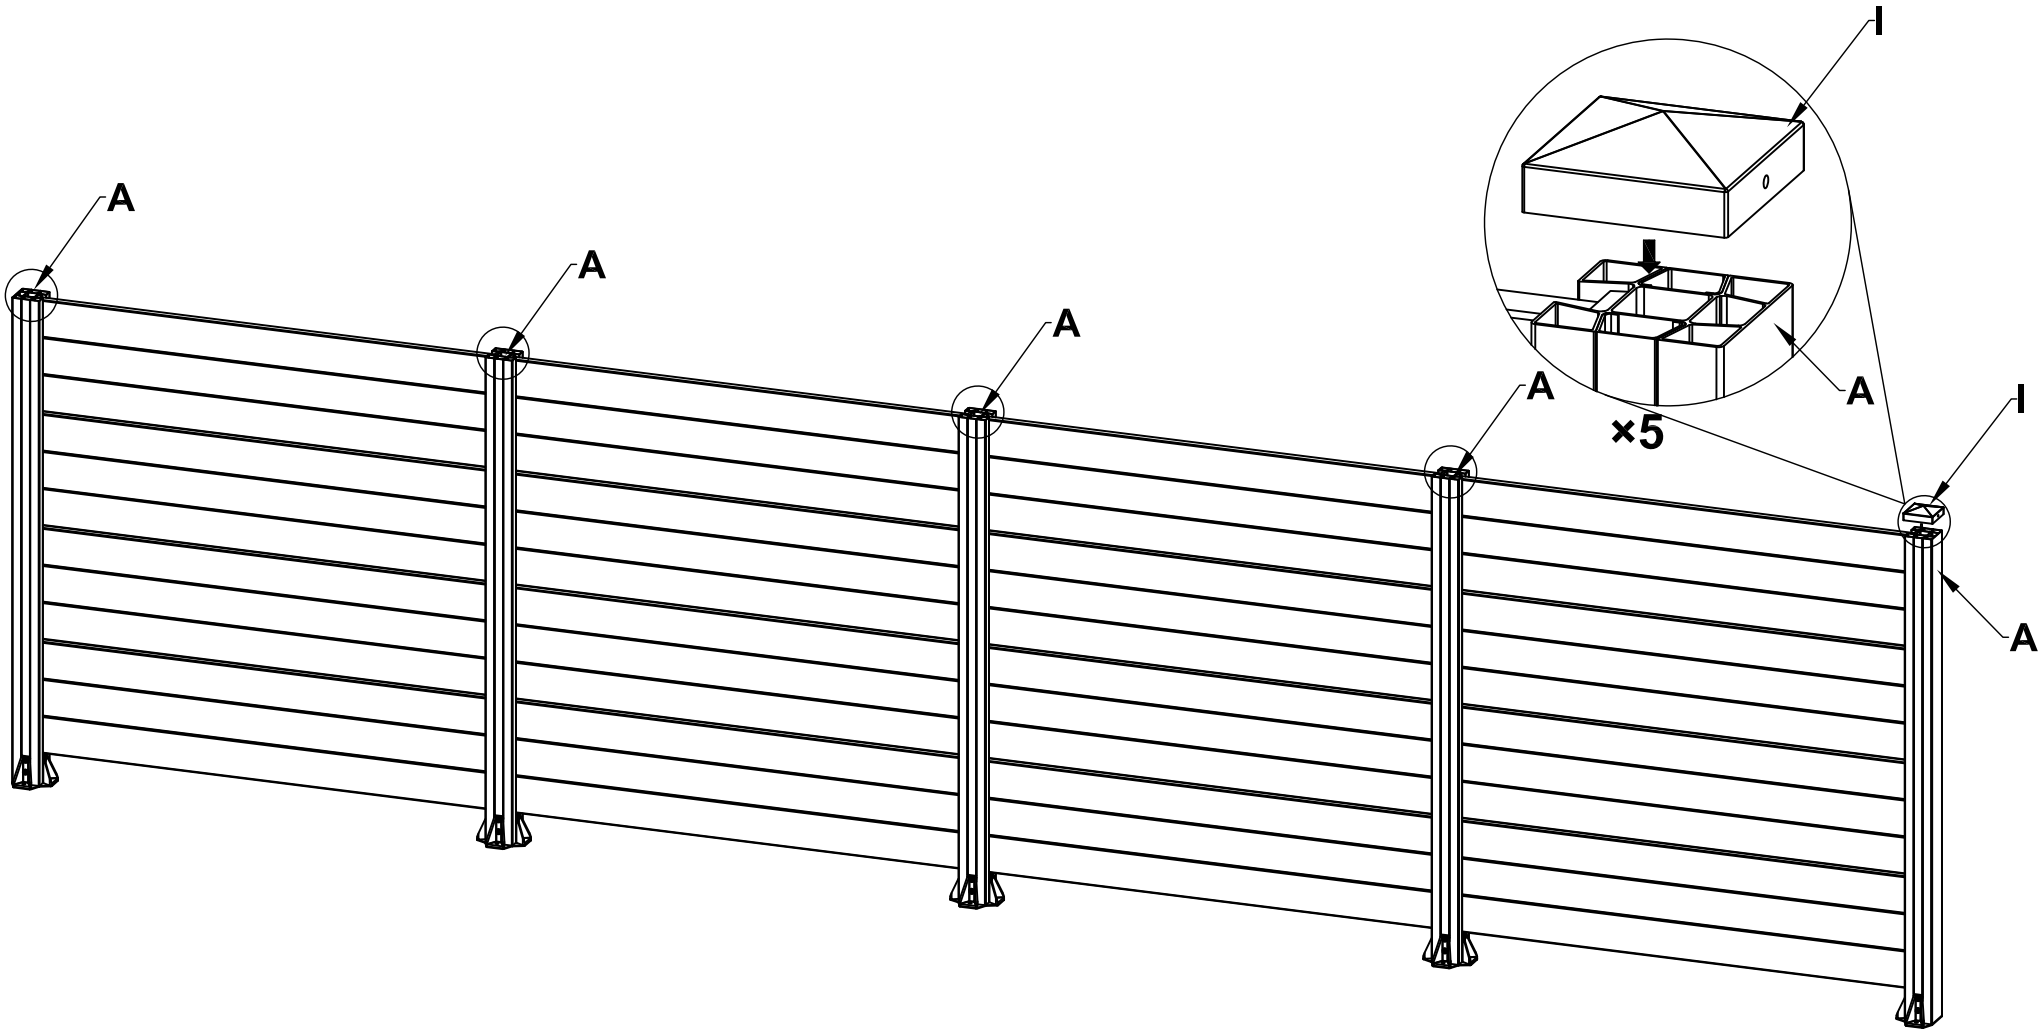


K




ST4*1.2 5PCS

25

Secure with Screws #K.

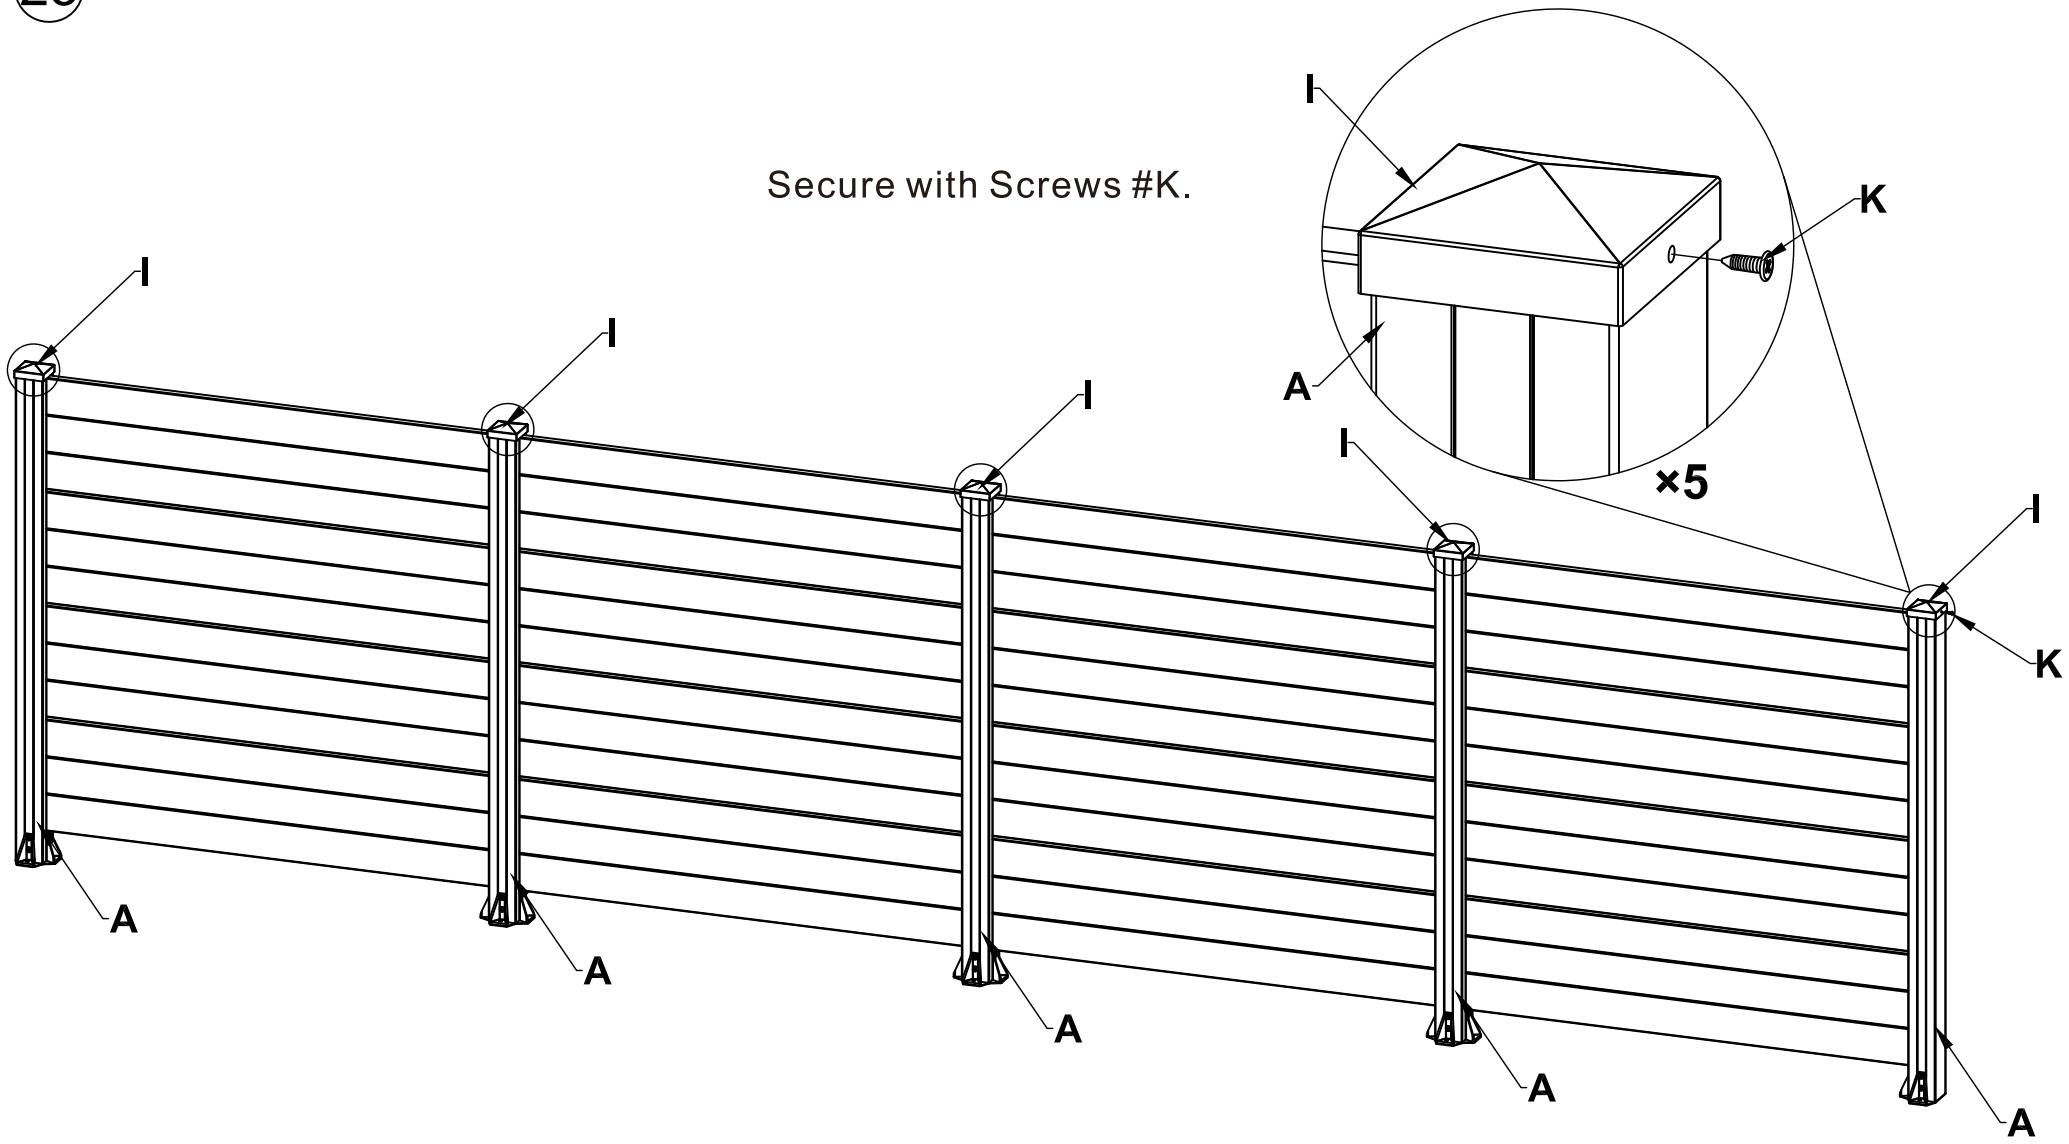

26

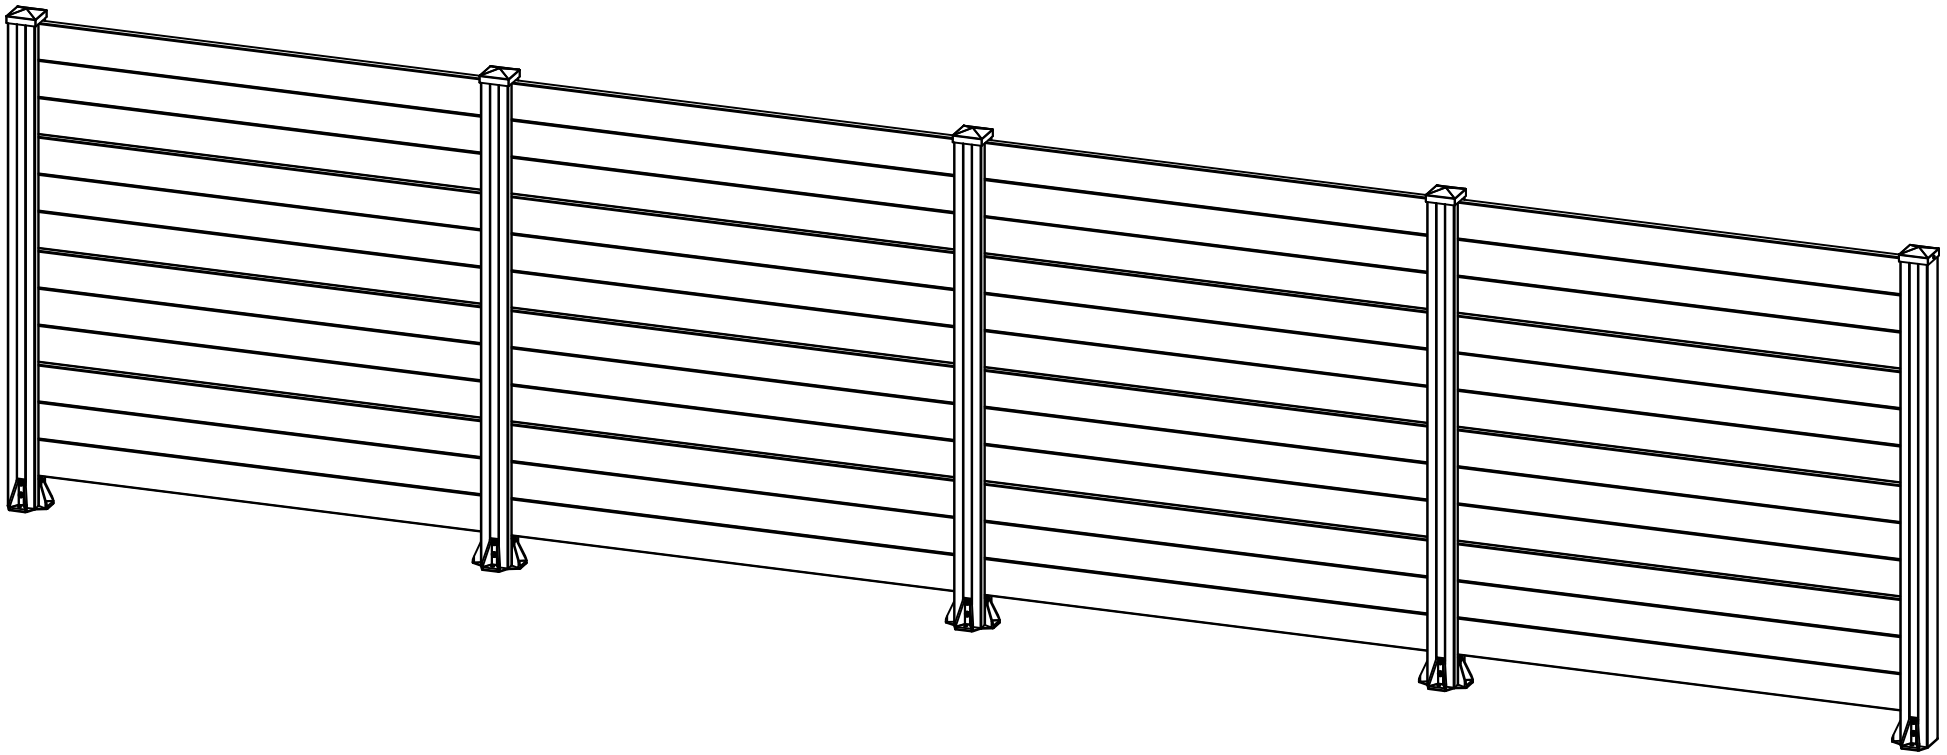

domi
outdoor living

RESORT COMFORT IN YONR

OWN BACKYARD

Support:

Business cooperation contact email:
marketing@domioutdoorliving.com

After-sales contact email:
service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.