
domi
outdoor living

14'x20' Metal Patio Gazebo

ASSEMBLY MANUAL

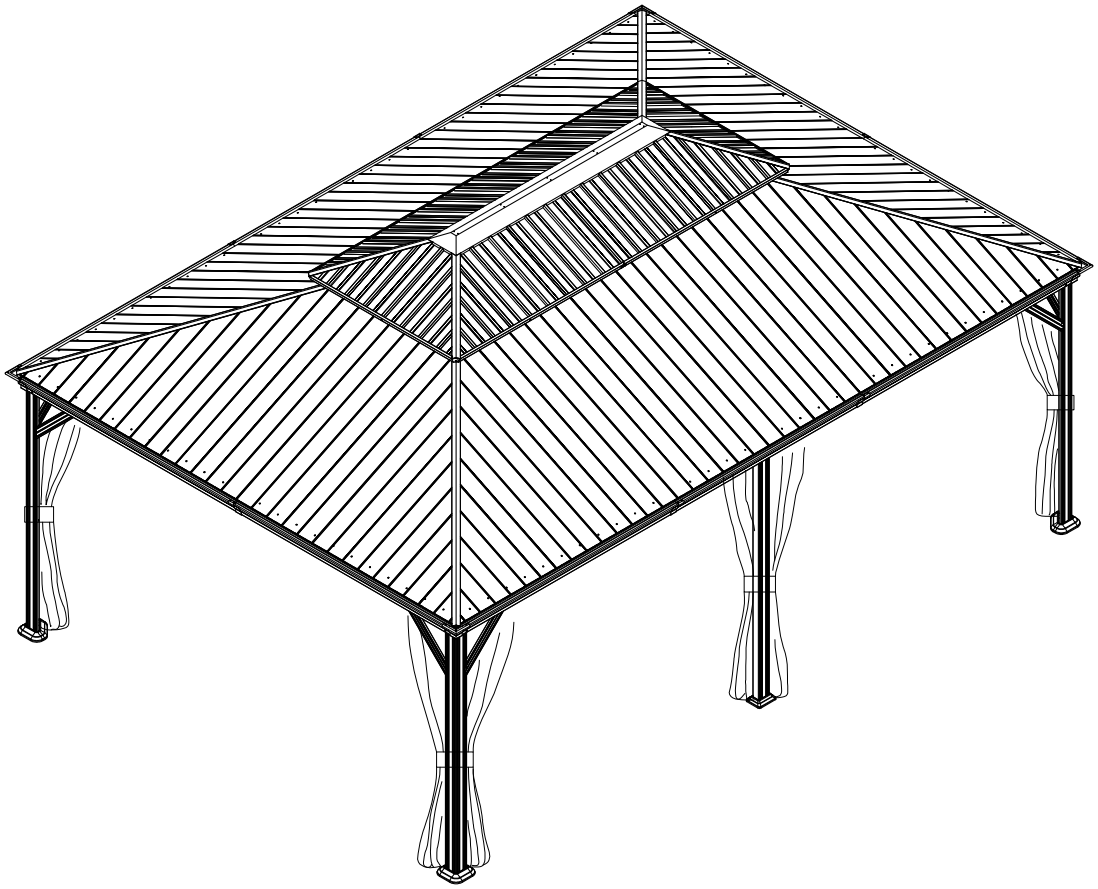

MODEL#: **LGMZ1728**

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domioutdoorliving LLC. All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.


⚠ Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

SIZE

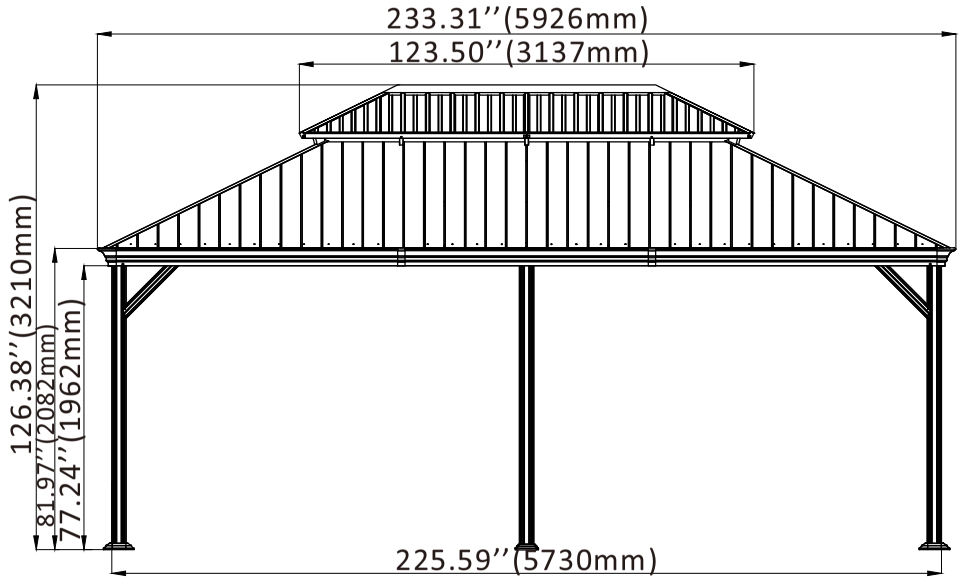

233.31''(5926mm)
123.50''(3137mm)
126.38''(3210mm)
81.97''(2082mm)
77.24''(1962mm)
225.59''(5730mm)

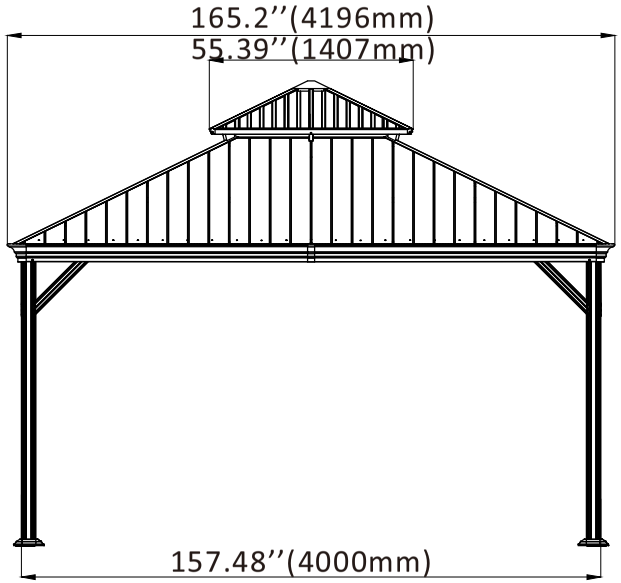
165.2''(4196mm)
55.39''(1407mm)
157.48''(4000mm)

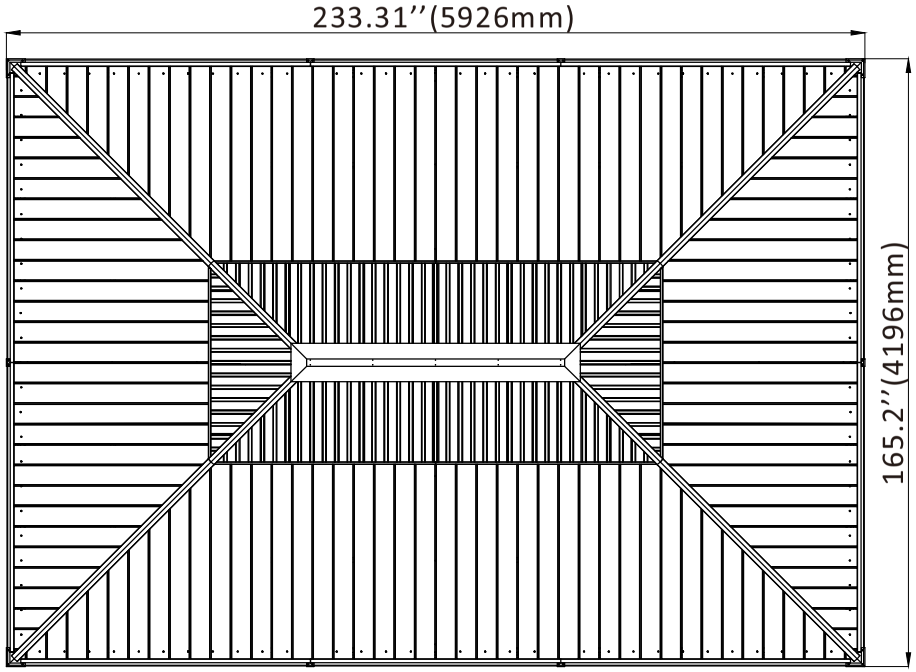

233.31''(5926mm)
165.2''(4196mm)


MOUNTING BLUEPRINT

Gazebo 14x20

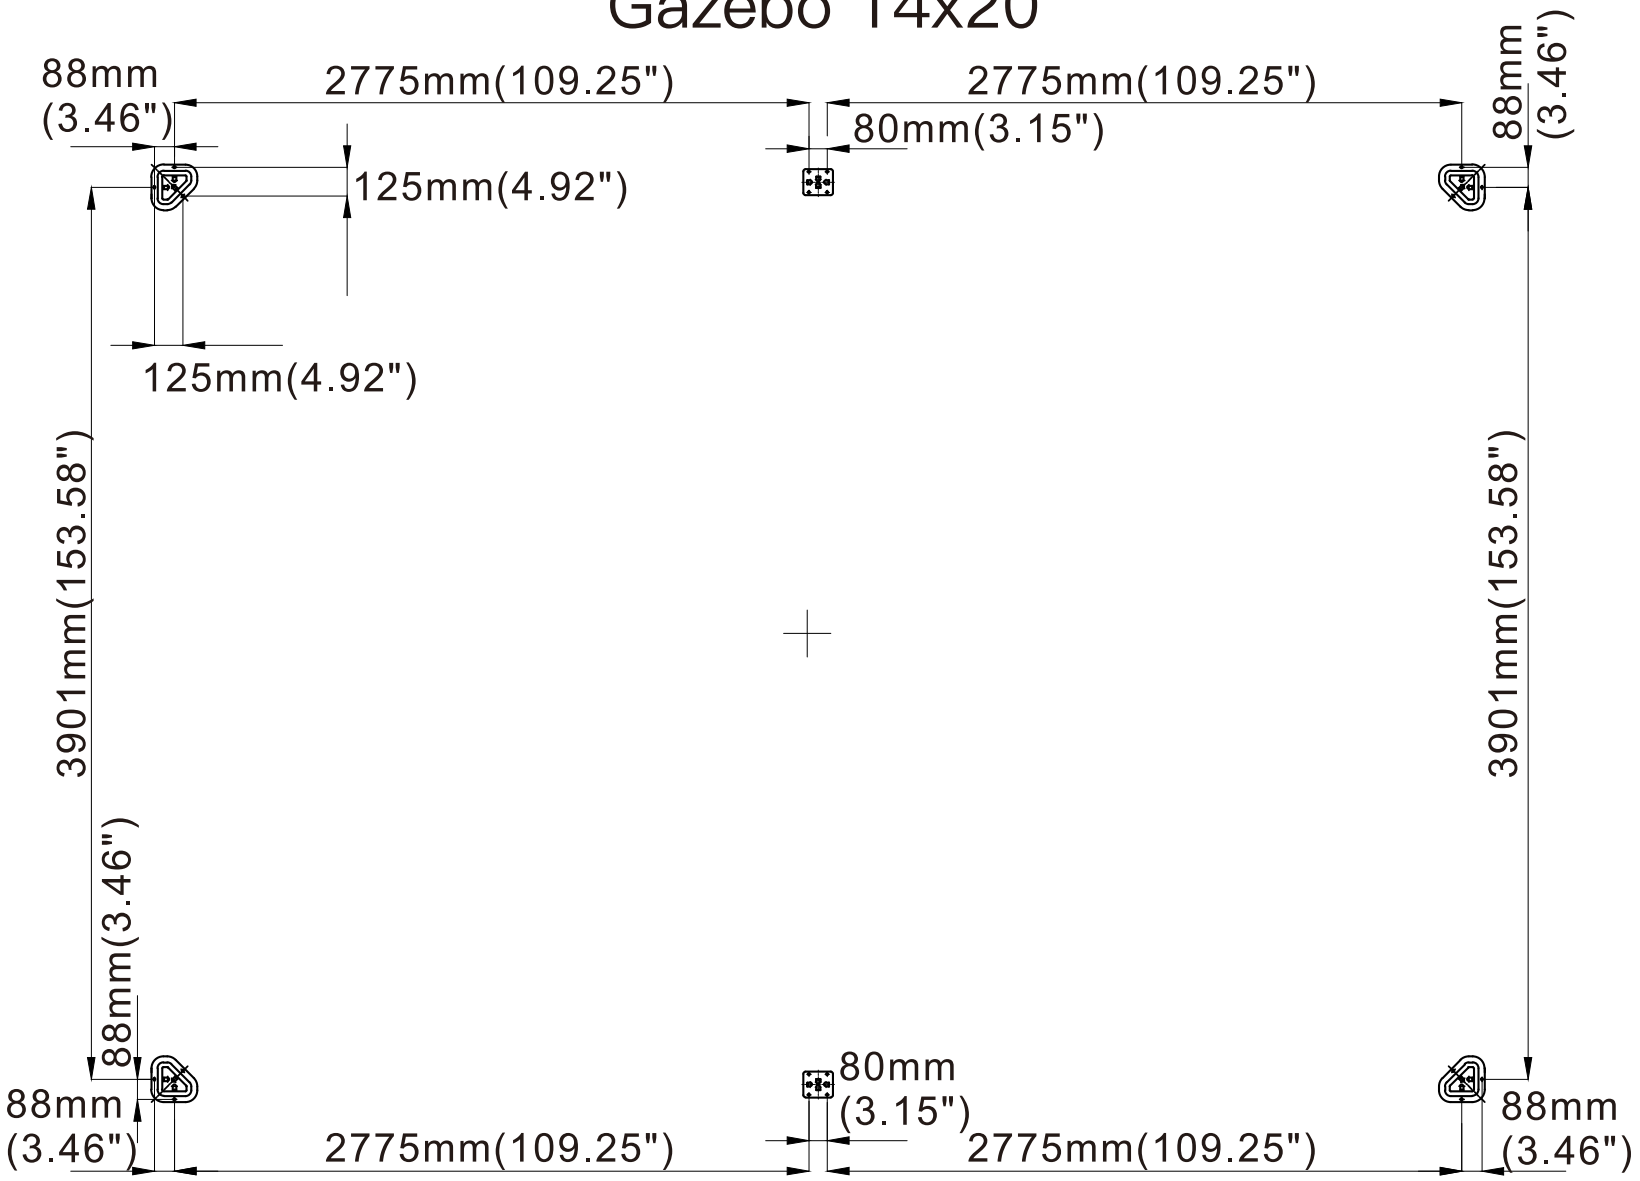


1

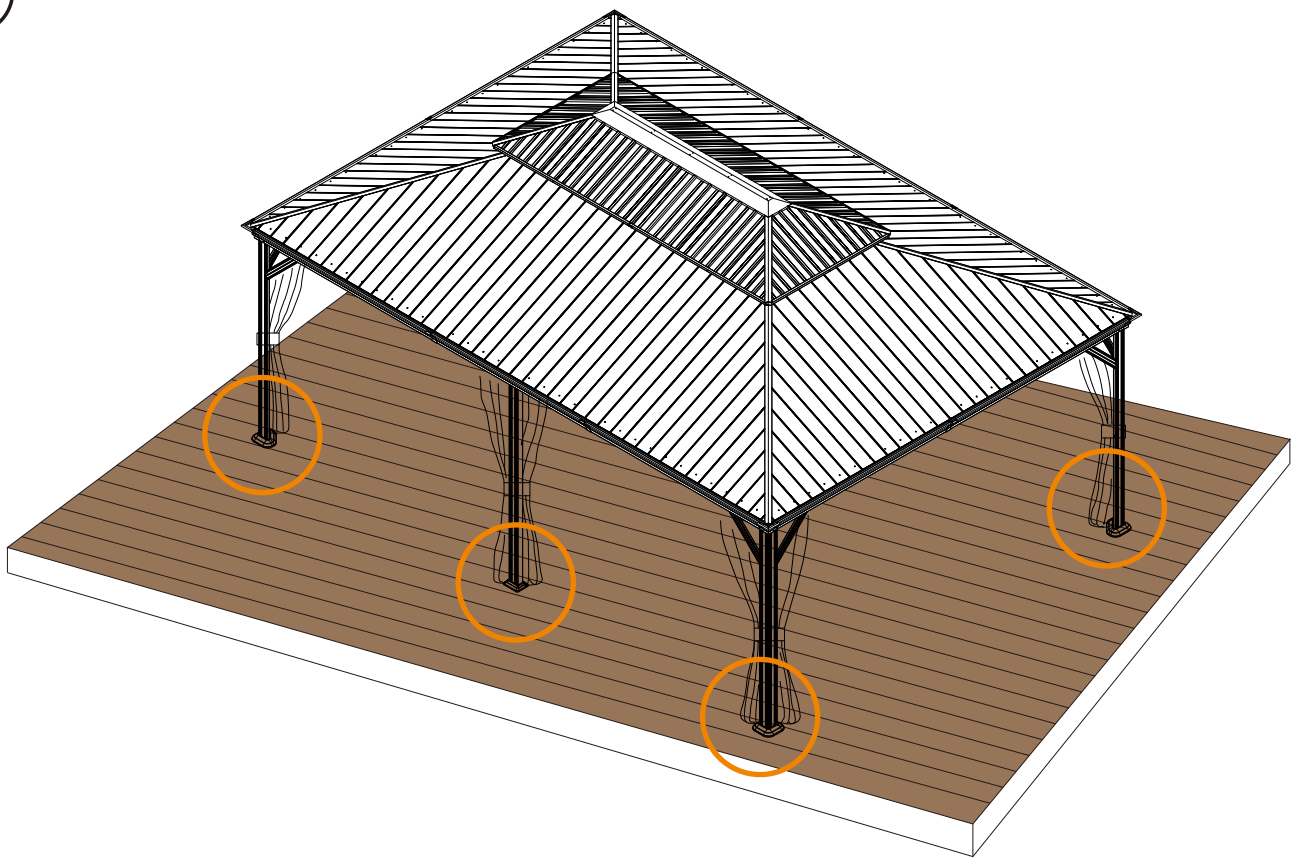





x20


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

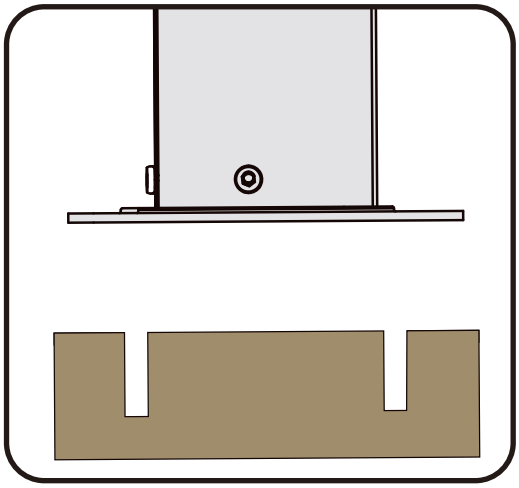

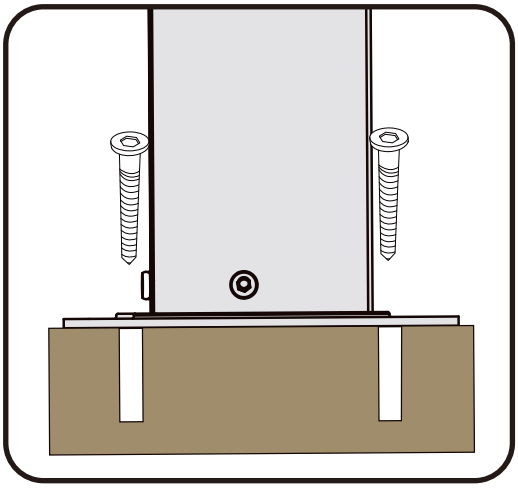

2

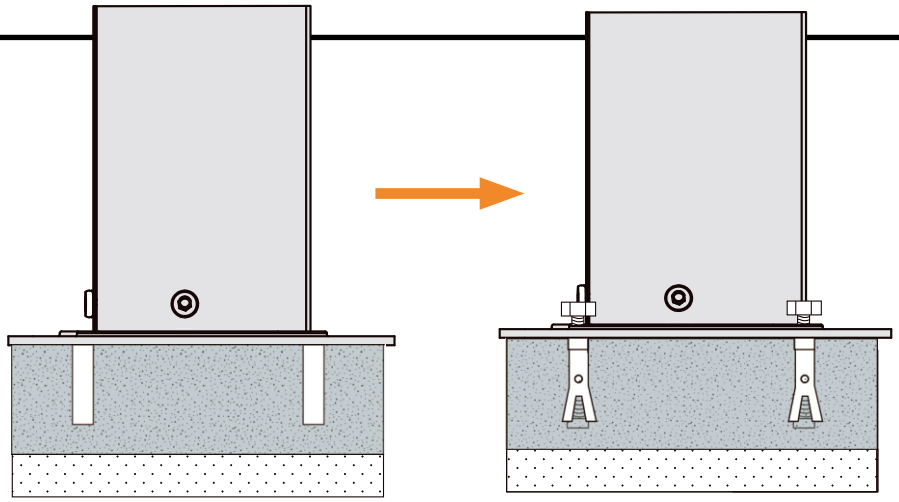


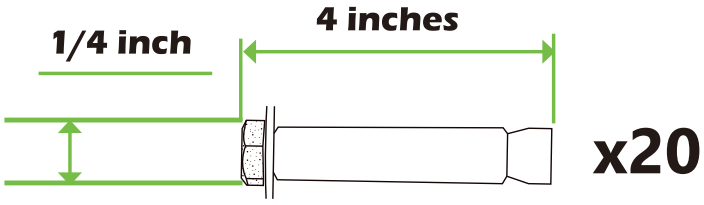


x20

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo


3

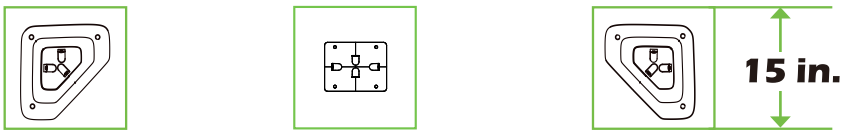

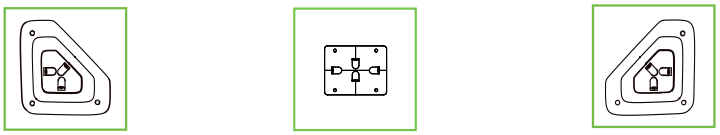

Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.

IMPORTANT:
Anchor is not recommended

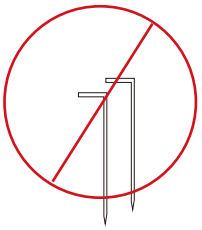



Pole A x4




Sidewall Track D2 x2




Pole B x2




Sidewall Track D3 x2




Beam C1 x2




Union Bar E x6




Beam C2 x2




Outside Roof Cover E1 x1

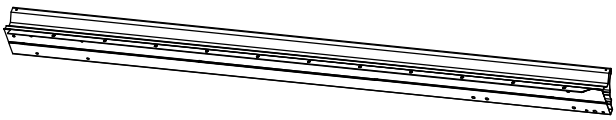

Beam C3 x2

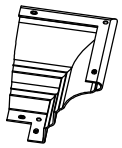

Corner Cover F x4

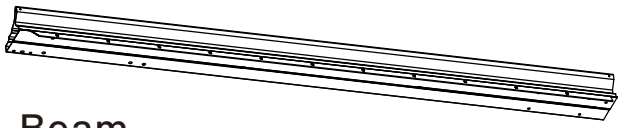


Beam C4 x2



Joint Cover G x6



Beam C5 x2




Silicone Sealant H x1



Sidewall Track D x4




Corner Solidifying Bar I1 x4




Sidewall Track D1 x4



Corner Solidifying Bar I2 x4



Inside Roof Cover J (x1)



Midlle Roof Tube N1 (x4)



Base K (x4)




Midlle Roof Tube N2 (x2)




Base Cover K1 (x4)



Finishing Bar P (x2)

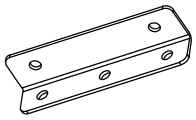


Bracket K2 (x8)




Finishing Bar L1 (x2)




Base K3 (x2)



Finishing Bar L2 (x2)

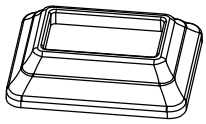

Base Cove K4 (x2)



Finishing End Q (x8)



Corner Roof Tube Connector M (x4)



Finishing End Q1 (x2)



Corner Roof Tube M1 (x4)


Ma x4




Finishing Bar T (x2)




Midlle Roof Tube N (x2)




Finishing Bar T1 x2




Plastic Bar O3 x4




Finishing Bar T2 x2




Middle Support Tube Connector O4 x2




Solidifying Bar U1 x8



Bracket O5 x2




Bracket U3 x4



Middle Support Tube O6 x2




Bracket U4 x8




Solidifying Bar O7 x3



Solidifying Bar U5 x4



Hooks R1 x3




Mesh O x1



x1


Allen Key

Plastic Bar O1 x2














x1

Wrench




x1

Wrench


Plastic Clips	Z x20		M6x28 5# x108
 Plastic Clips	Z1 x4		ST4.8x30 6# x48
 Plastic Clips	Z2 x4		ST4.8x35 7# x84
 Plastic Clips	Z3 x2		M5x16 8# x6
 Plastic Clips	Z4 x2		ST4.8x13 9# x28
 M6x16	1# x287		4x12 10# x8
 M6x20	2# x36		M6x12 11# x12
	3# x16		ST6.3*18 12# x20
 Plastic Hooks	4# x160		

Metal Roof Panels

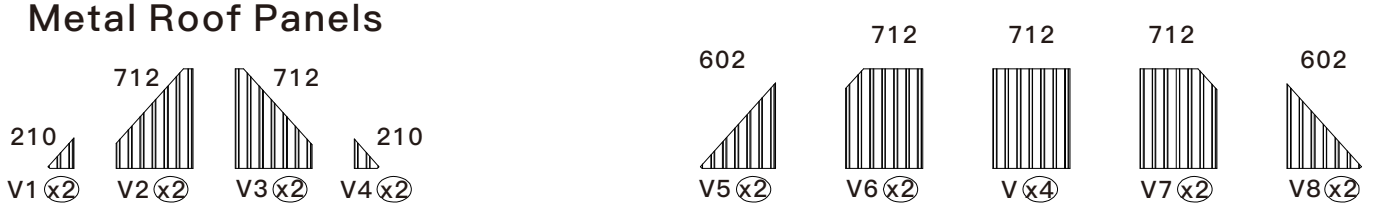


V1 x2 V2 x2 V3 x2 V4 x2 V5 x2 V6 x2 V x4 V7 x2 V8 x2

Resin Roof Panels

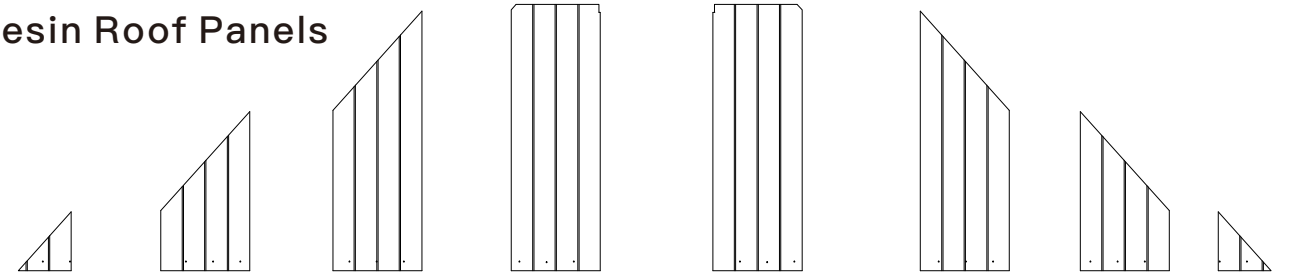


X1 x2 X2 x2 X3 x2 X4 x2 X5 x2 X6 x2 X7 x2 X8 x2

Resin Roof Panels

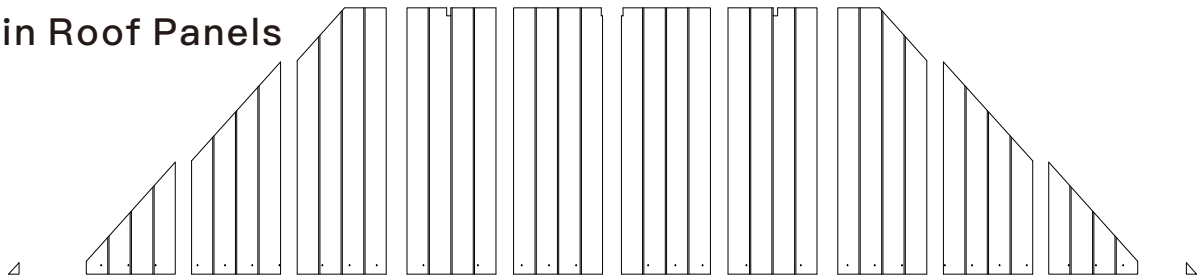


W1 x2 W2 x2 W3 x2 W4 x2 W5 x2 W6 x2 W7 x2 W8 x2 W9 x2 W10 x2 W11 x2 W12 x2


Connecting Rods

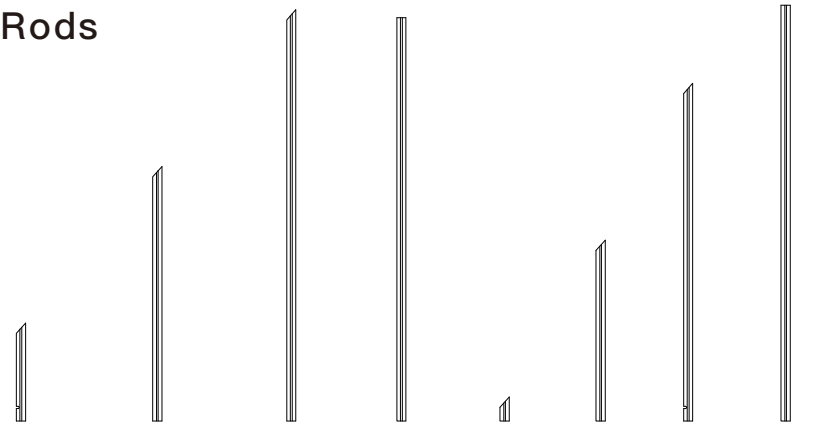


Za x4 Zb x4 Zc x4 Zd x4 Ze x4 Zf x4 Zg x4 Zh x8

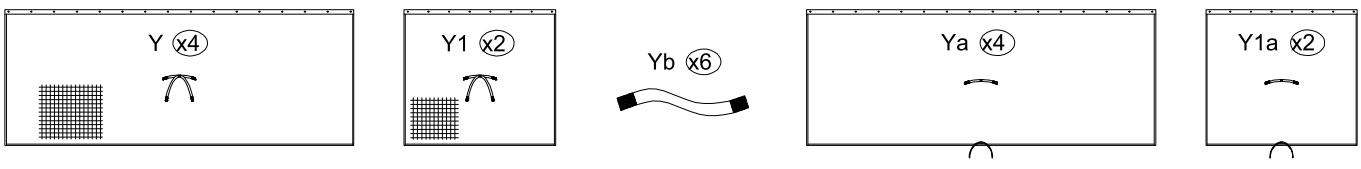

Mosquito Netting Strap Curtain

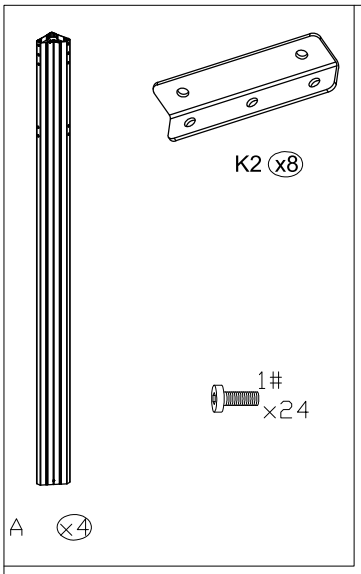

POST ASSEMBLY

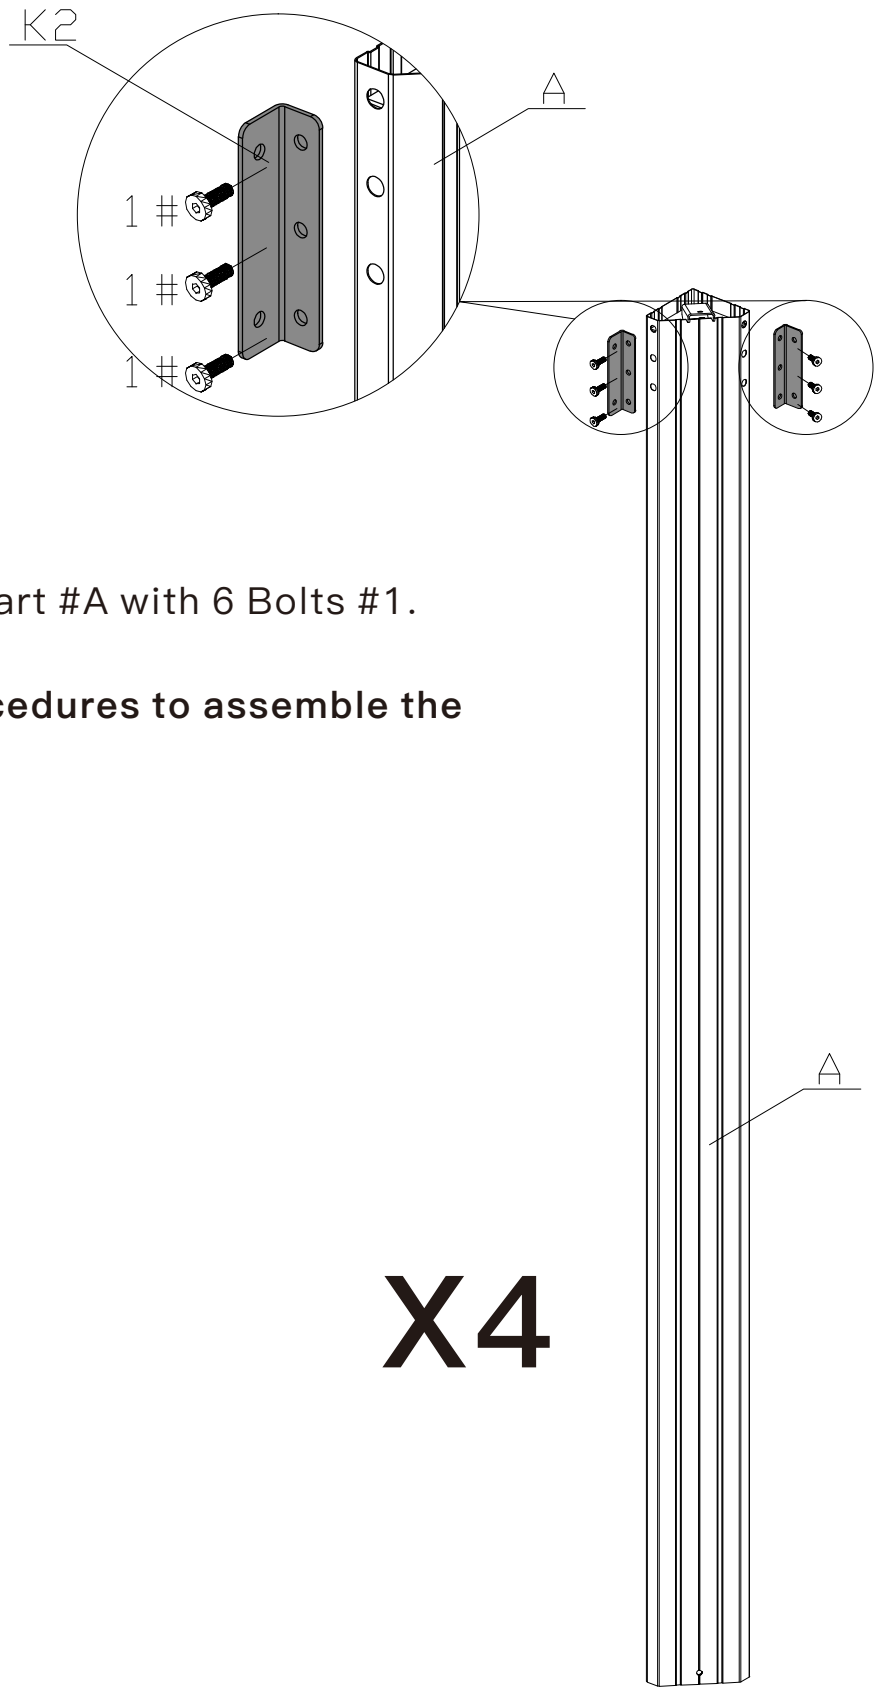


Attach 2 Part #K2 to Part #A with 6 Bolts #1.

Repeat the above procedures to assemble the other 3 Poles.

X4










BASE COVER ASSEMBLY

(1) Put on Base Cover #K1 first.
(2)Attach Base #K to the Pole #A with 3 Bolts 1#.


Repeat above procedures to assemble the other Poles #A.

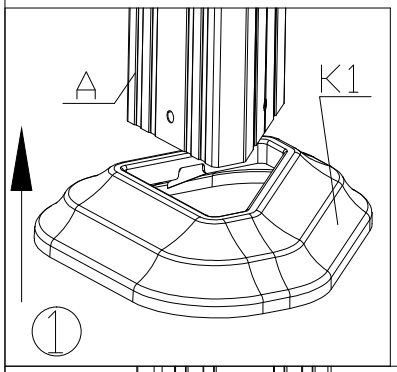

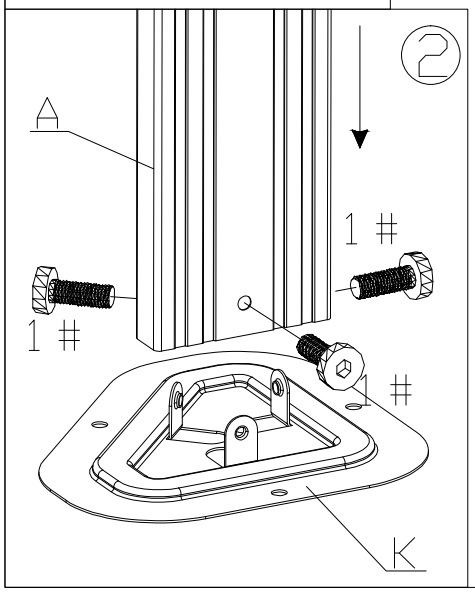

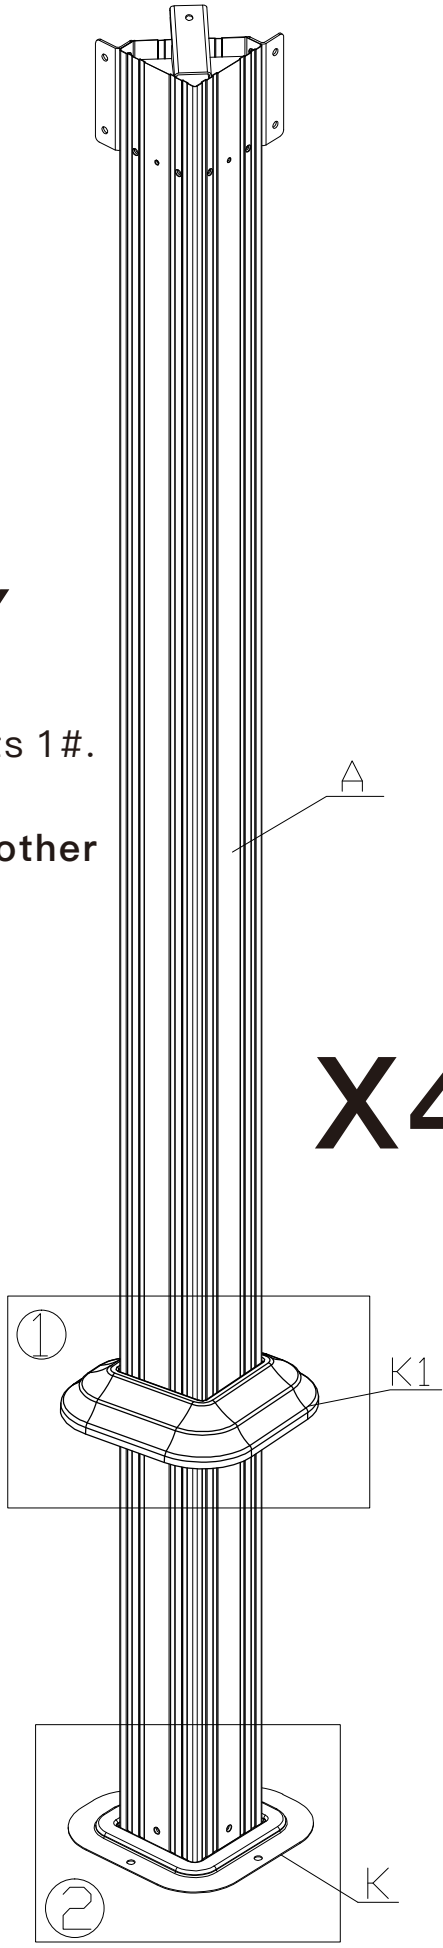


X4

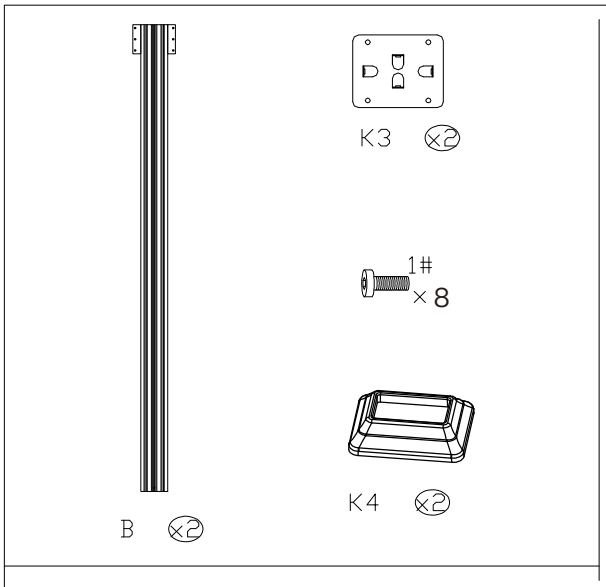



(1) Put on Base Cover #K4 first.
(2) Attach Base #K3 to the Pole #B with 4 Bolts 1#.


Repeat above procedures to assemble the other Pole #B.

X2

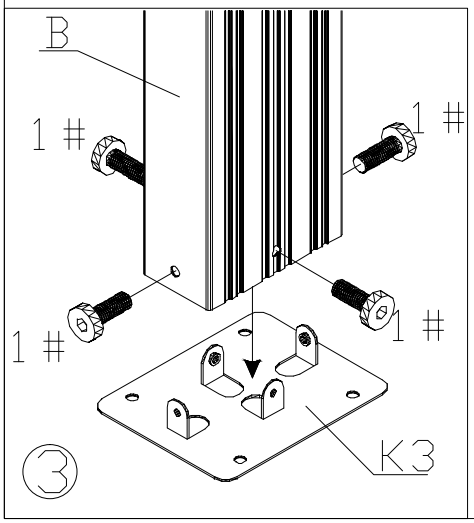

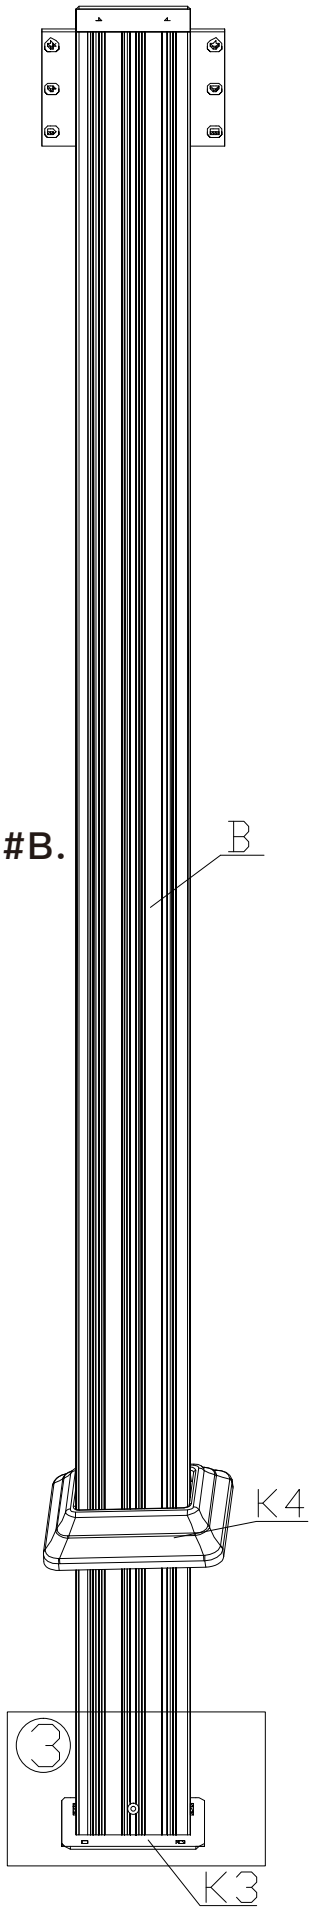

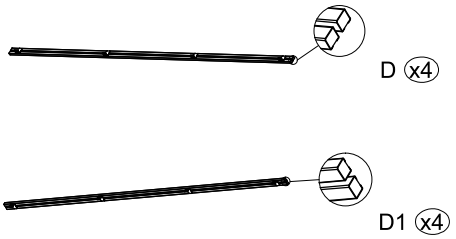




4#
x128

PLASTIC HOOKS ASSEMBLY


Slide the Plastic Hooks #4 to the double-rail track #D (each slot should slide 8 plastic hooks).


Repeat the above procedures for other 3 tracks D.

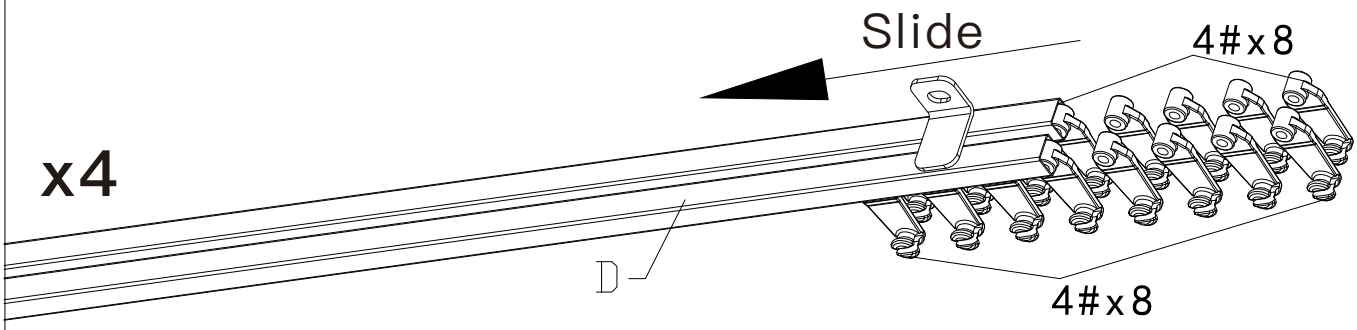


Slide the Plastic Hooks #4 to the double-rail track #D1 (each slot should slide 8 plastic hooks).

Repeat the above procedures for other 3 tracks D1.

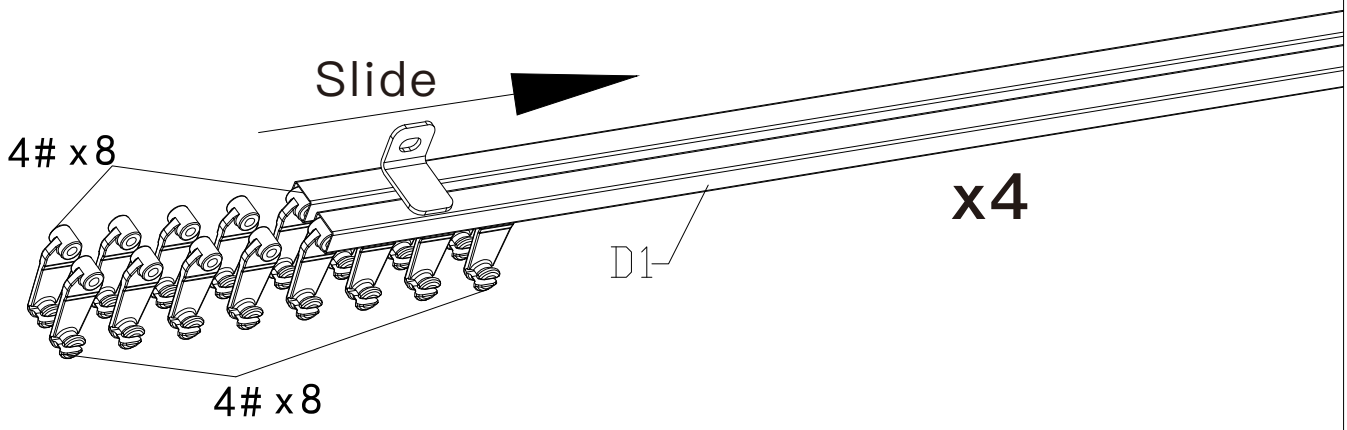

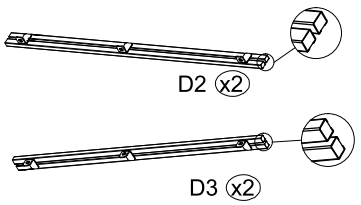




4#
x32


Slide the Plastic Hooks #4 to the double–rail track #D2 (each slot should slide 4 plastic hooks).

Repeat the above procedures for the other track D2.

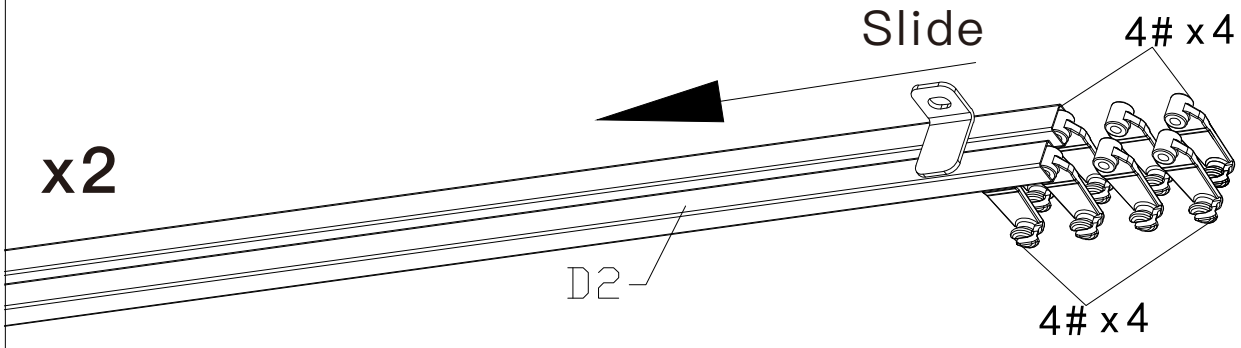

Slide the Plastic Hooks #4 to the double–rail track #D3 (each slot should slide 4 plastic hooks).

Repeat the above procedures for the other track D3.

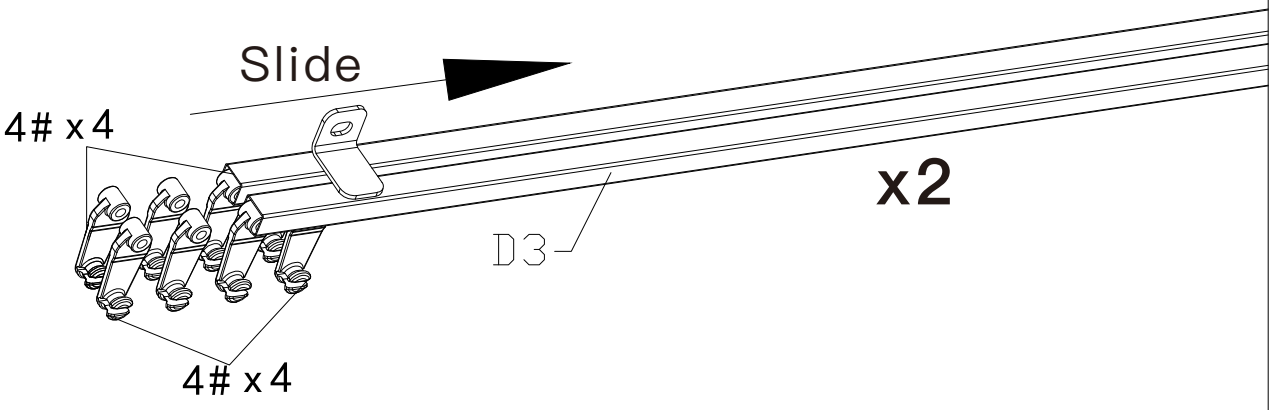




C3 x2



C4 x2




E x2




1#
x16


BEAM ASSEBMLY



(1) Insert Union Bar #E into Beam #C4, and secure with 4 Bolts #1.
(2) Insert the other side of Union Bar #E into Beam #C3 and secure with 4 Bolts #1.


Repeat the above procedures to assemble the other Beams #C3 and #C4.

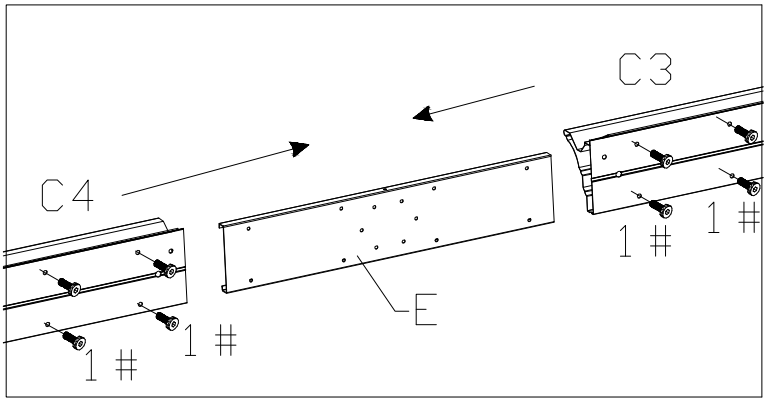


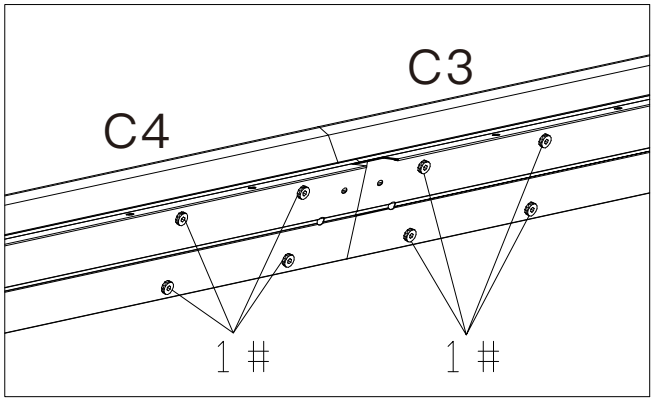



TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H) and Joint Cover #G to affix the gap. (See P9)



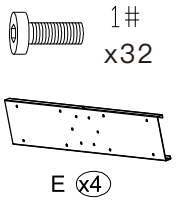


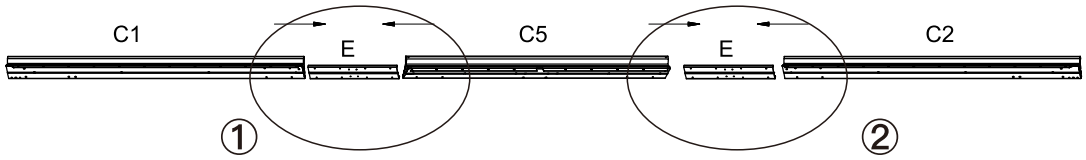


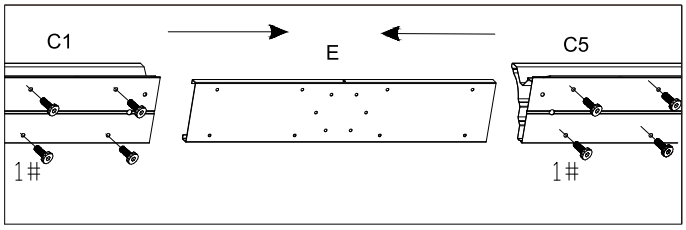

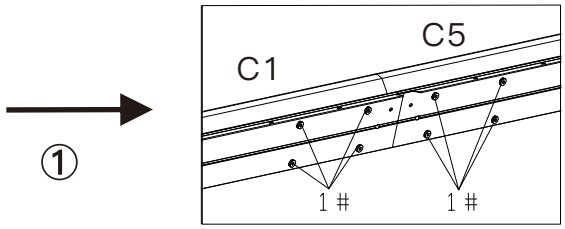

(1) Use Union Bar #E to connect Part #C1 and Part #C5, and secure with 8 Bolts 1#.

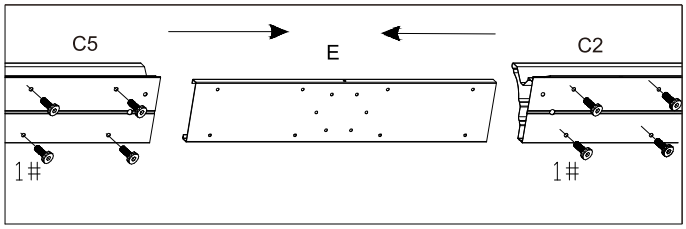


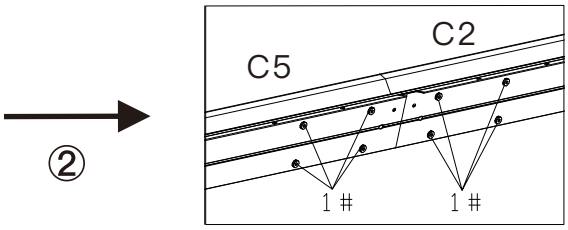

(2) Use Union Bar #E to connect Part #C5 and Part #C2, and secure with 8 Bolts 1#.

Repeat above procedures to assemble the other Beams #C1, #C2 and #C5.


TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H) and Joint Cover #G to affix the gap. (See P9)

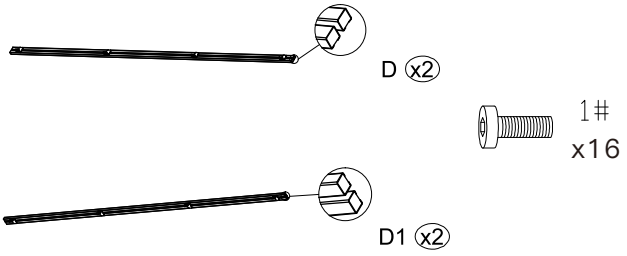


SIDEWALL TRACKS ASSEMBLY


(1) Secure Sidewall Track #D to Beam #C4 using 4 Bolts #1.
(2) Secure Sidewall Track #D1 to Beam #C3 using 4 Bolts #1.


Repeat the above procedures for the other tracks #D and #D1.

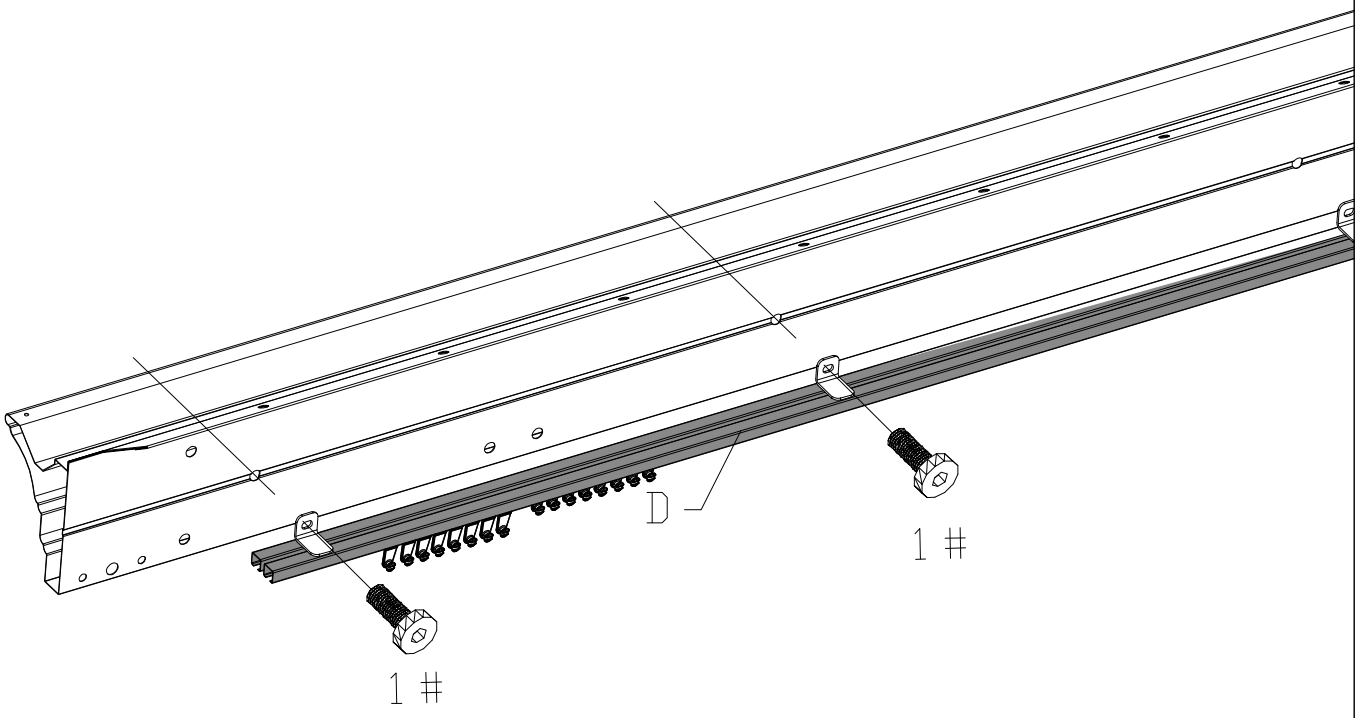

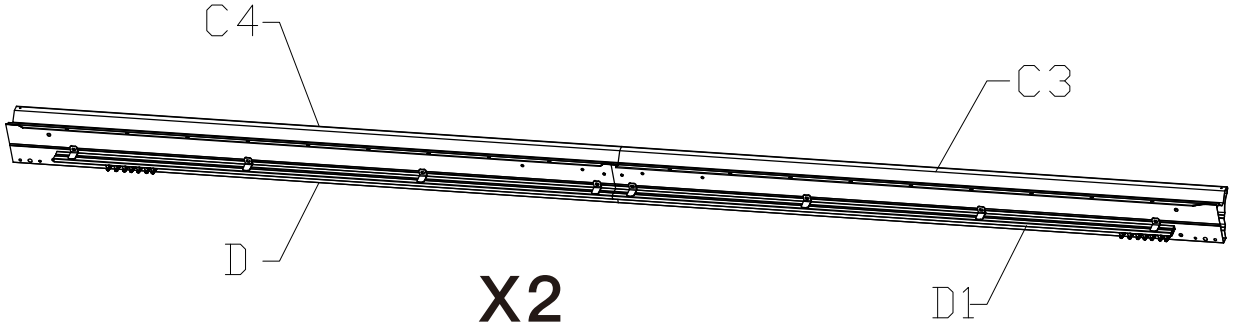


X2

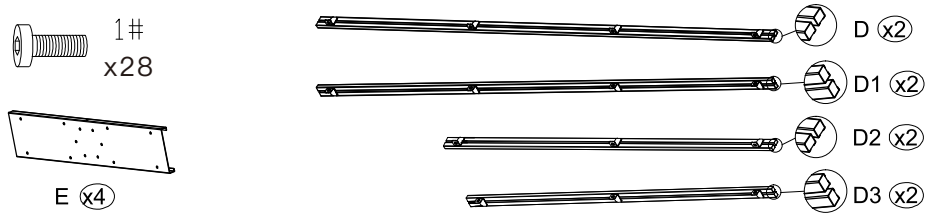

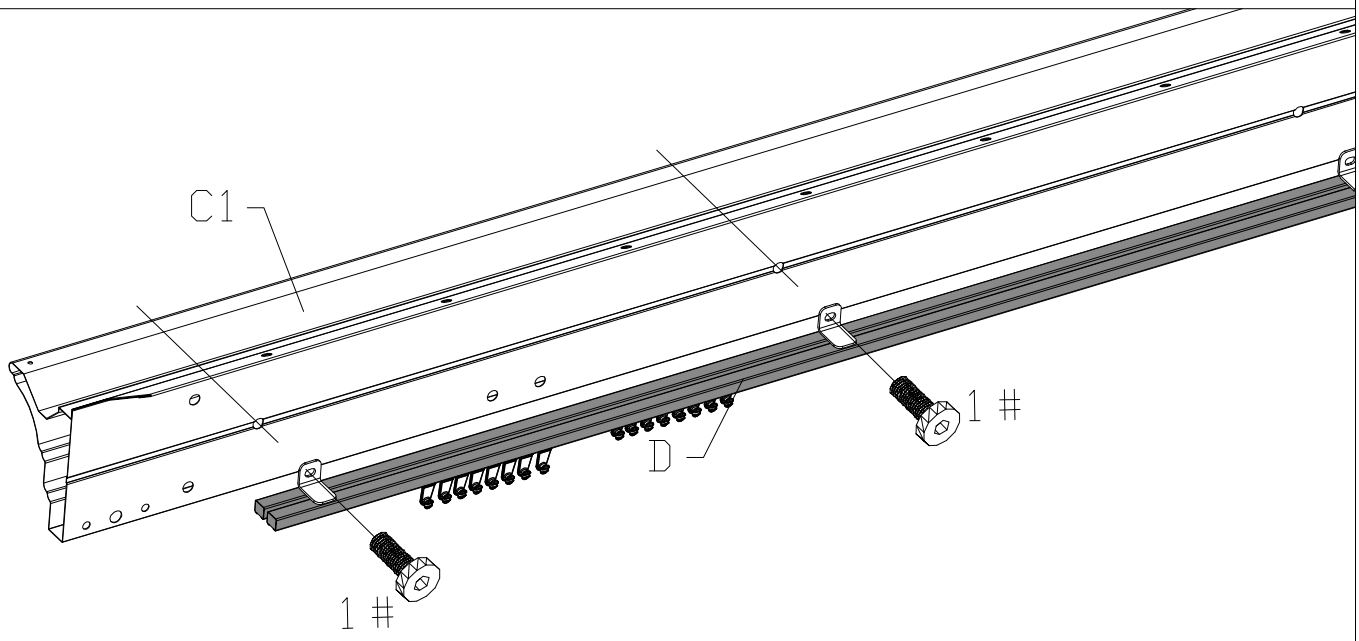

(1) Secure Sidewall Track #D to Beam #C1 using 4 Bolts #1.
(2) Secure Sidewall Track #D3 to Beam #C5 using 3 Bolts #1.
(3) Secure Sidewall Track #D2 to Beam #C5 using 3 Bolts #1.
(4) Secure Sidewall Track #D1 to Beam #C2 using 4 Bolts #1.


Repeat the above procedures for the other tracks #D, #D3, #D2 and #D1.

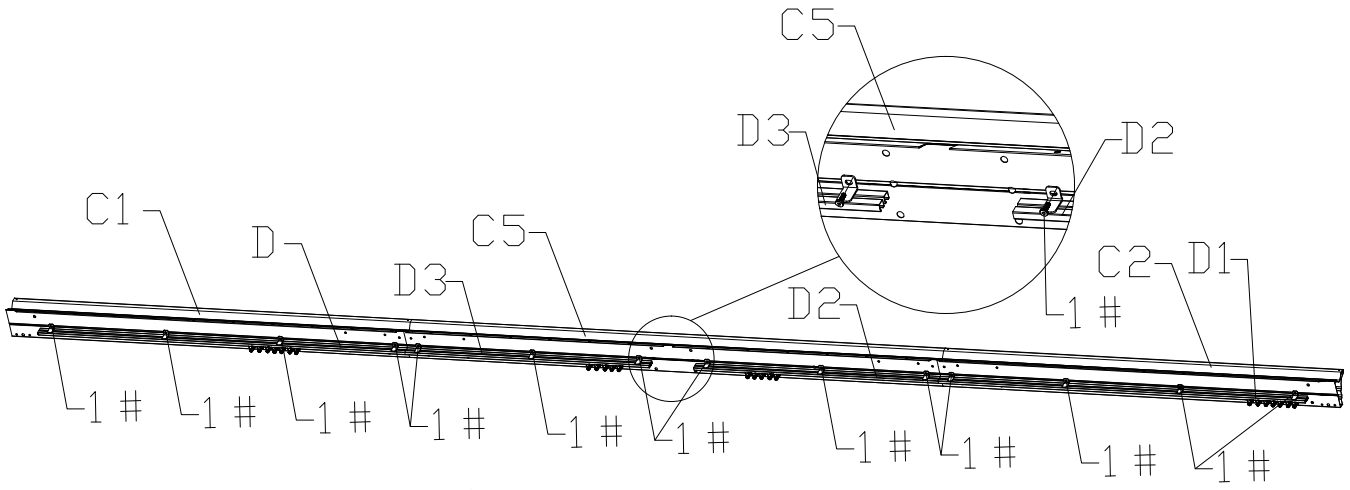

X2




2#
x28




3#
x16


FRAME ASSEMBLY

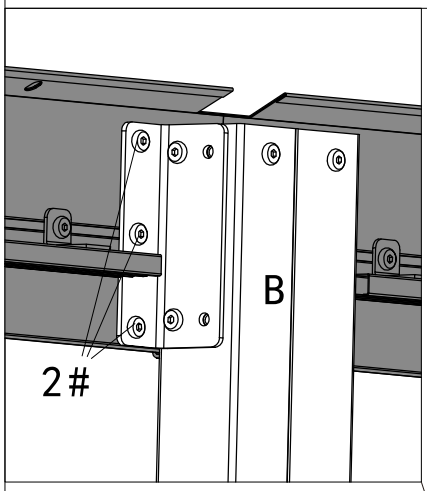


INSIDE VIEW

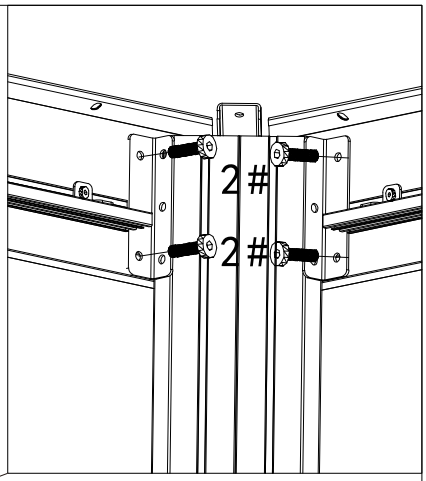


INSIDE VIEW

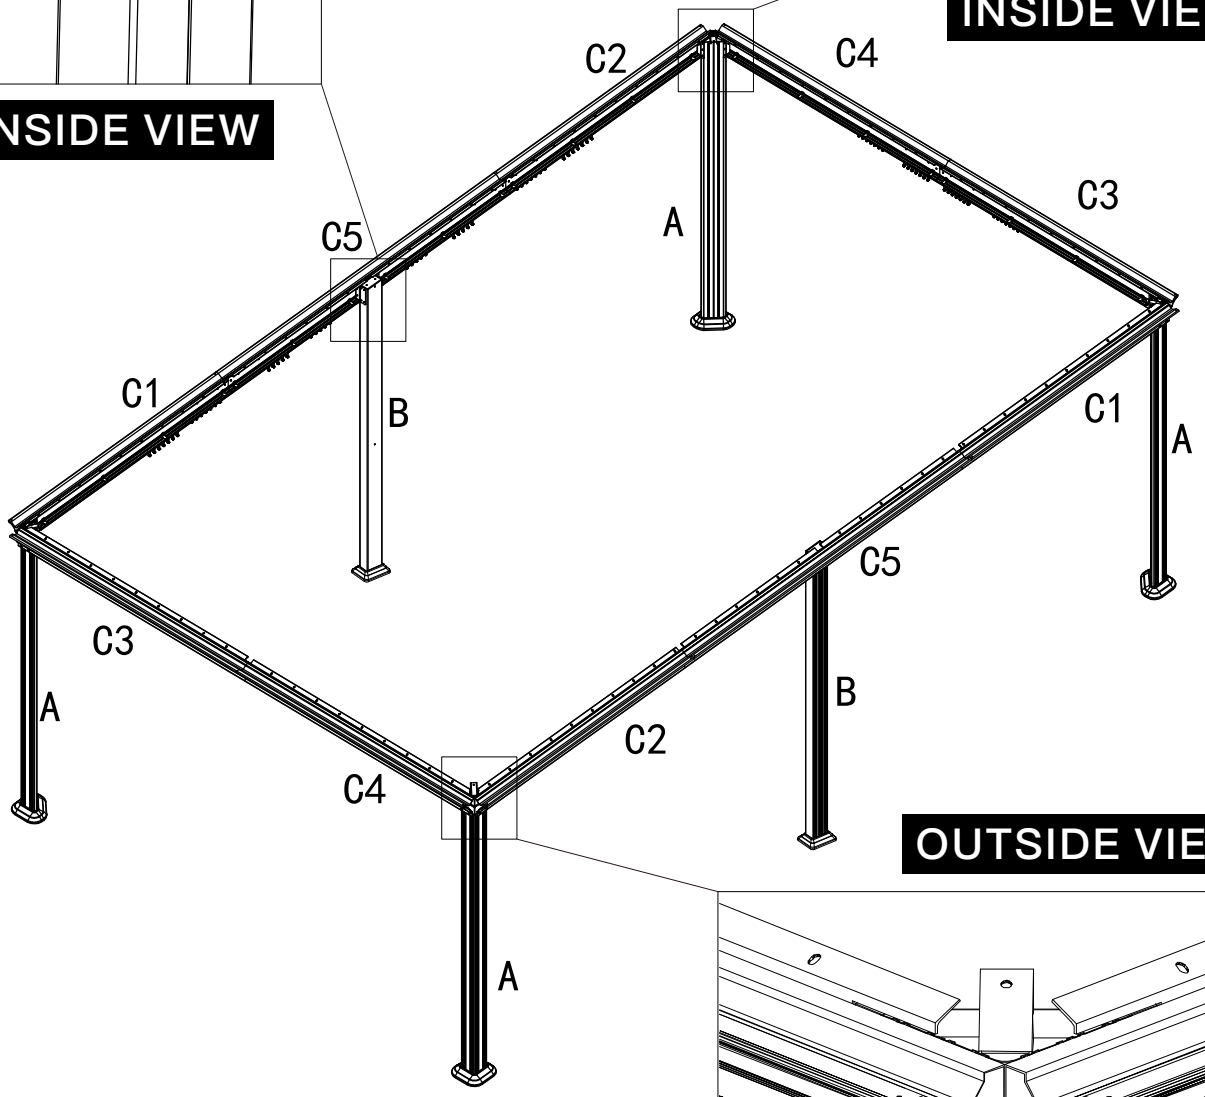



OUTSIDE VIEW

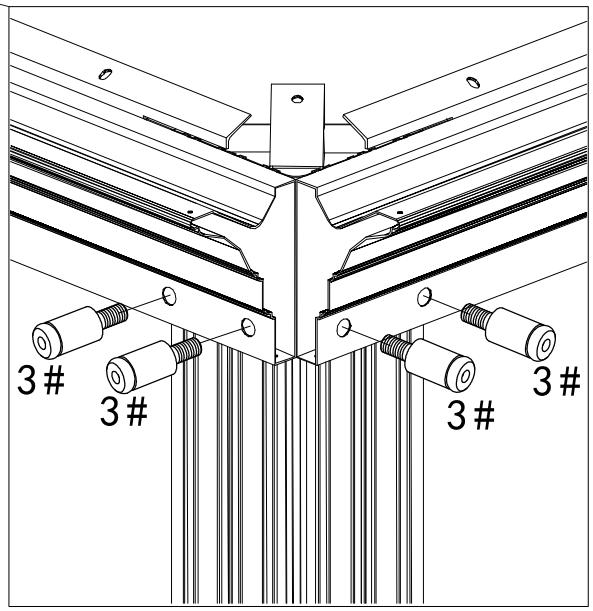

Please don’t tighten all bolts.

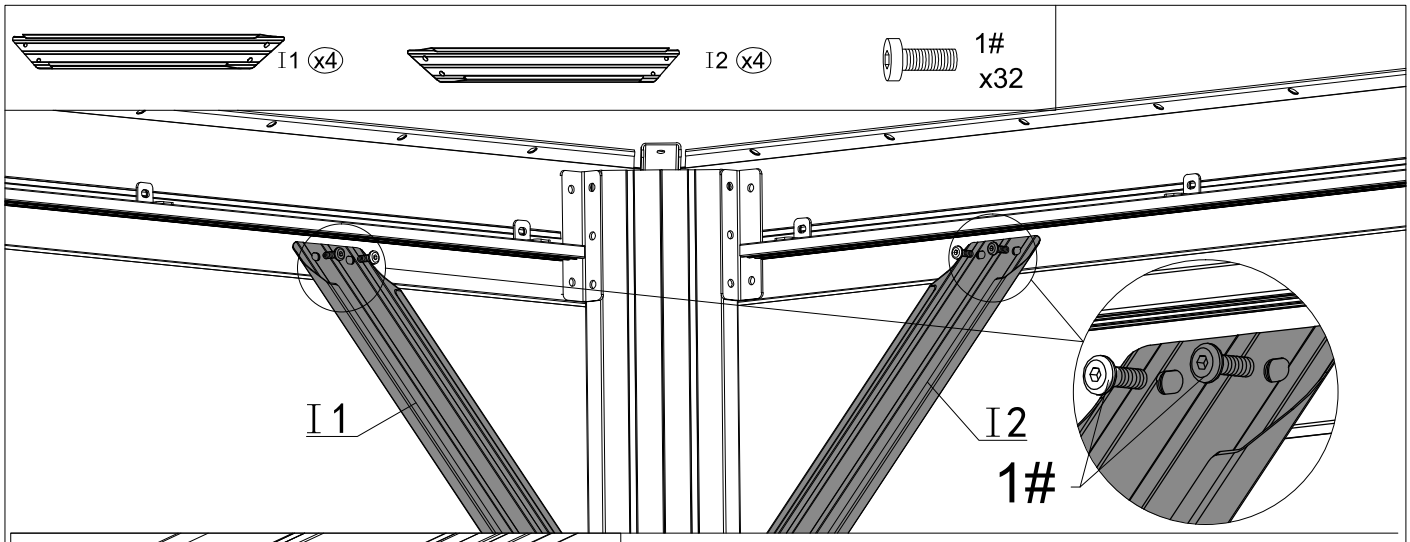

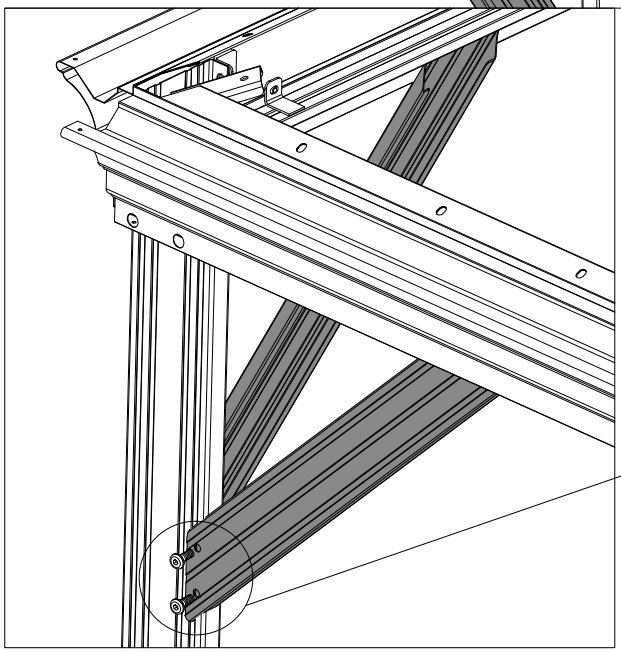


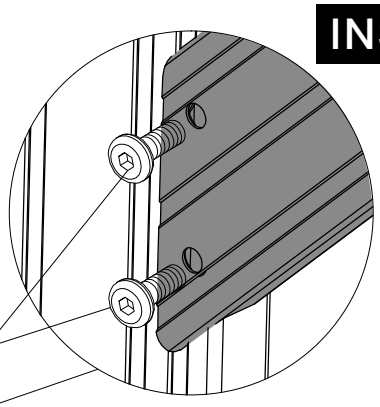

INSIDE VIEW

CORNER SOLIDIFYING BAR ASSEMBLY

OUTSIDE VIEW

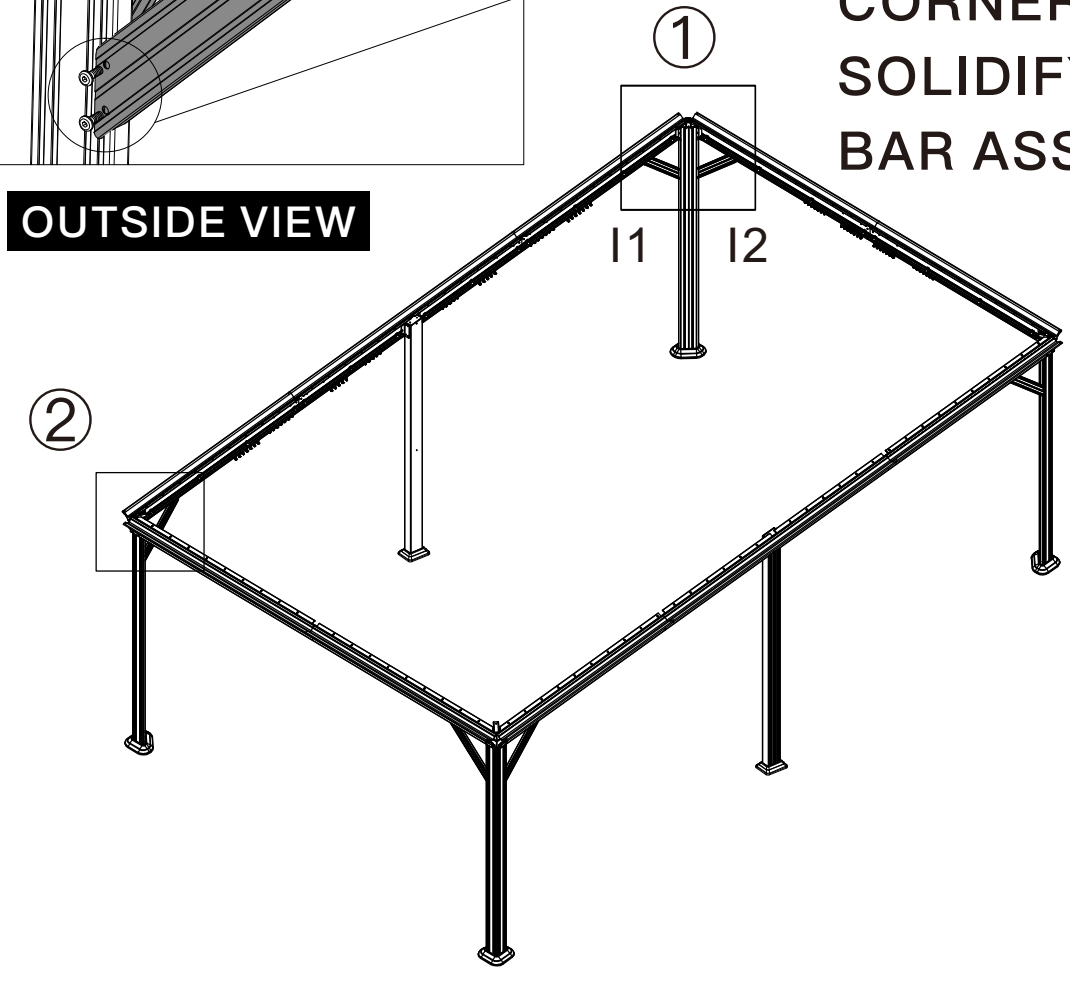



F x4



G x6


8#
x6



9#
x28



H x1


CORNER COVER & JOINT COVER ASSEMBLY

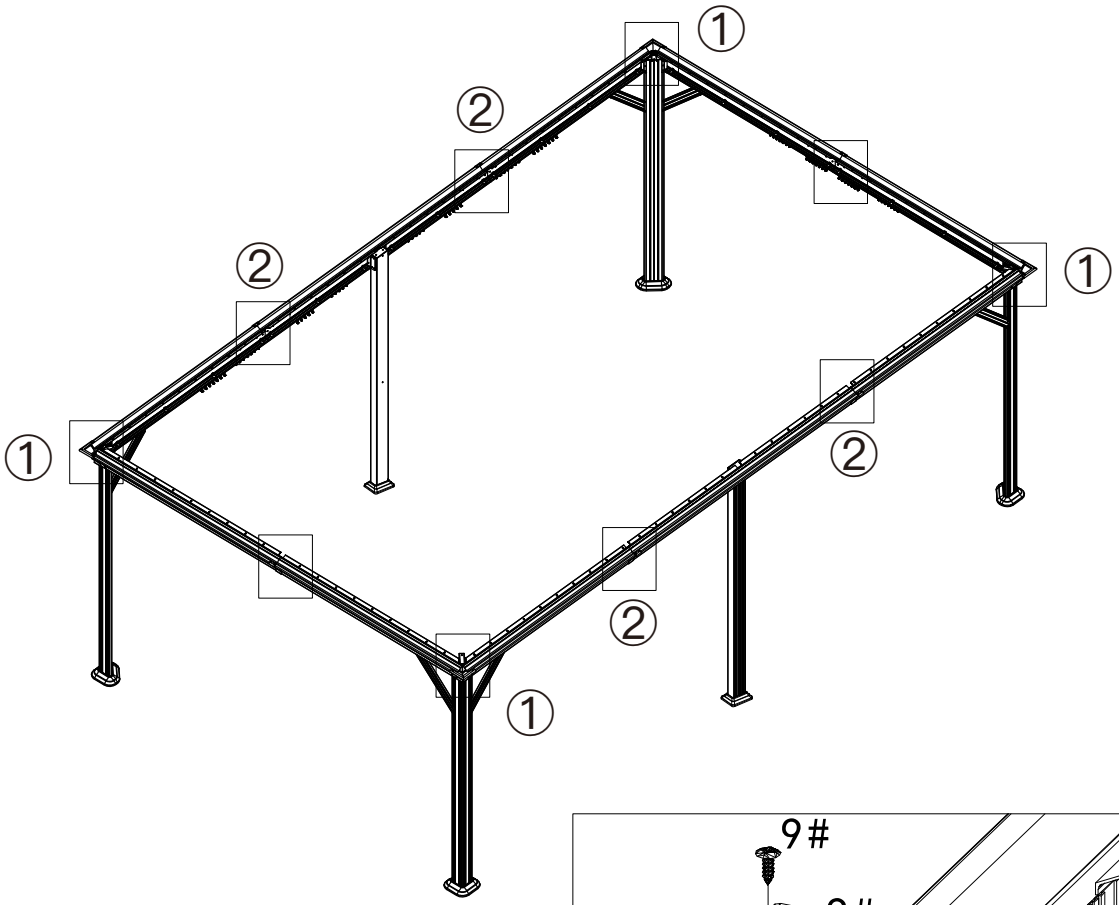

Use 5mm silicone sealant (part #H) and Joint Cover #G to affix the gap.

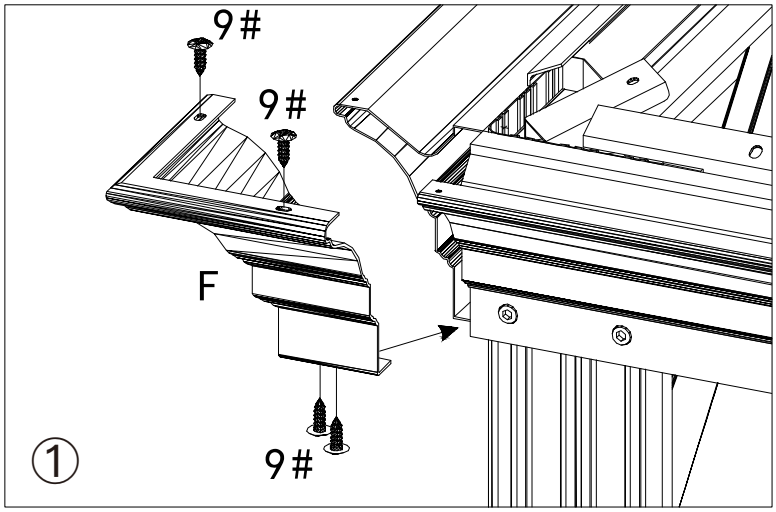

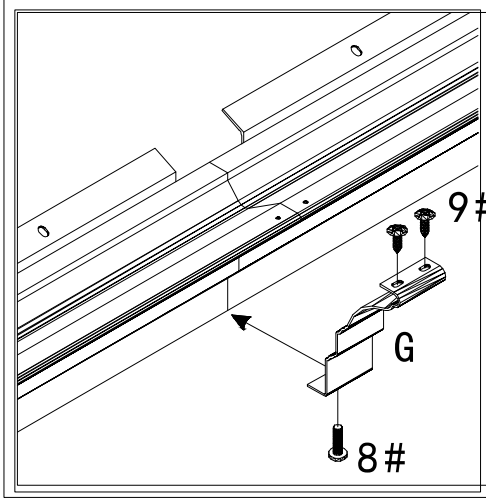


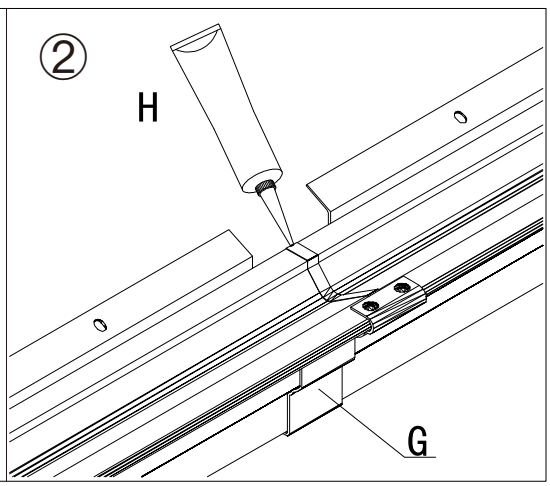






MIDDLE SUPPORT TUBES ASSEMBLY


(1) Use Part #O4 to connect 2 Middle Support Tubes #O6, and secure them with 16 Bolts #1.

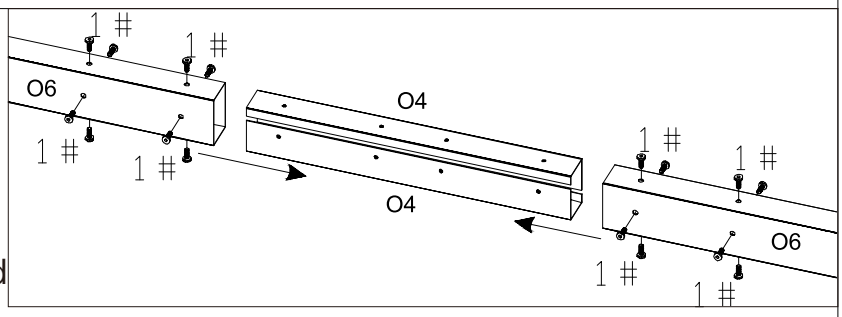



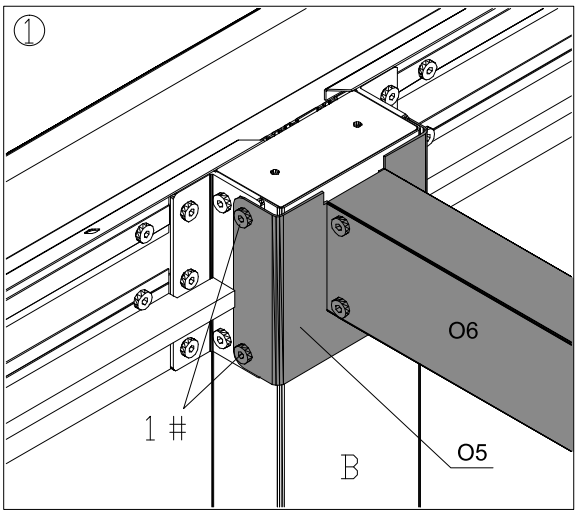

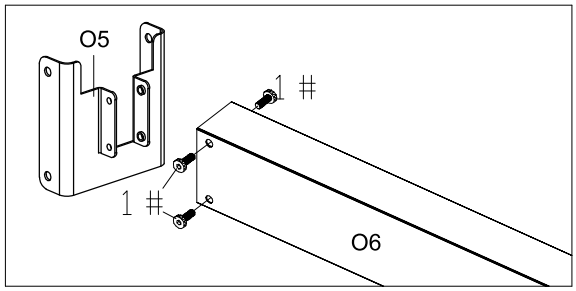


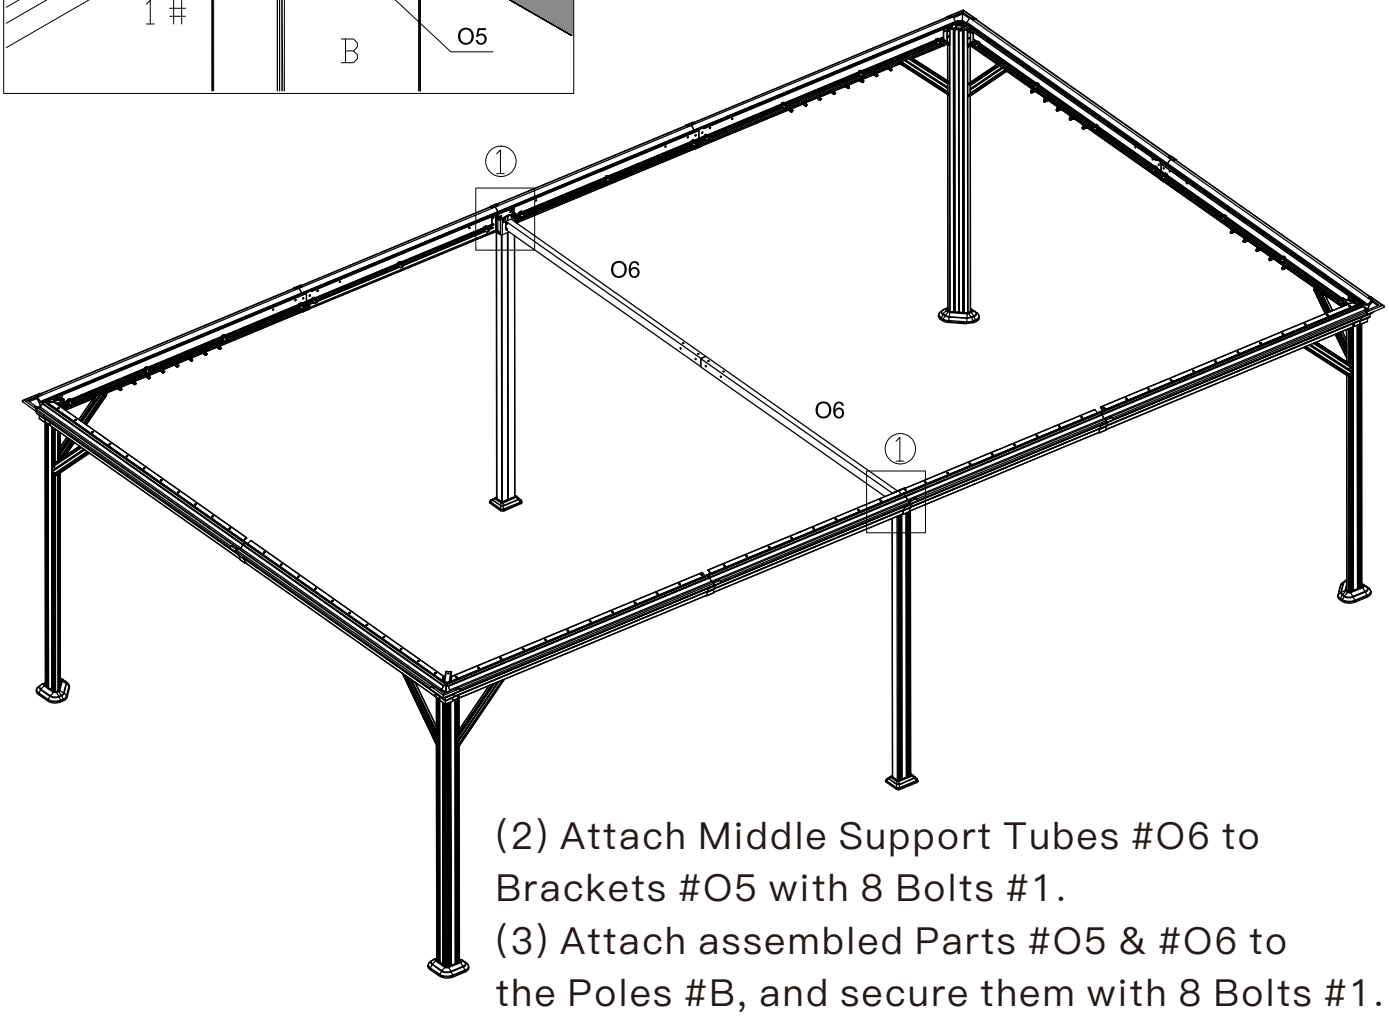


(2) Attach Middle Support Tubes #O6 to Brackets #O5 with 8 Bolts #1.

(3) Attach assembled Parts #O5 & #O6 to the Poles #B, and secure them with 8 Bolts #1.







CORNER ROOF TUBE ASSEMBLY

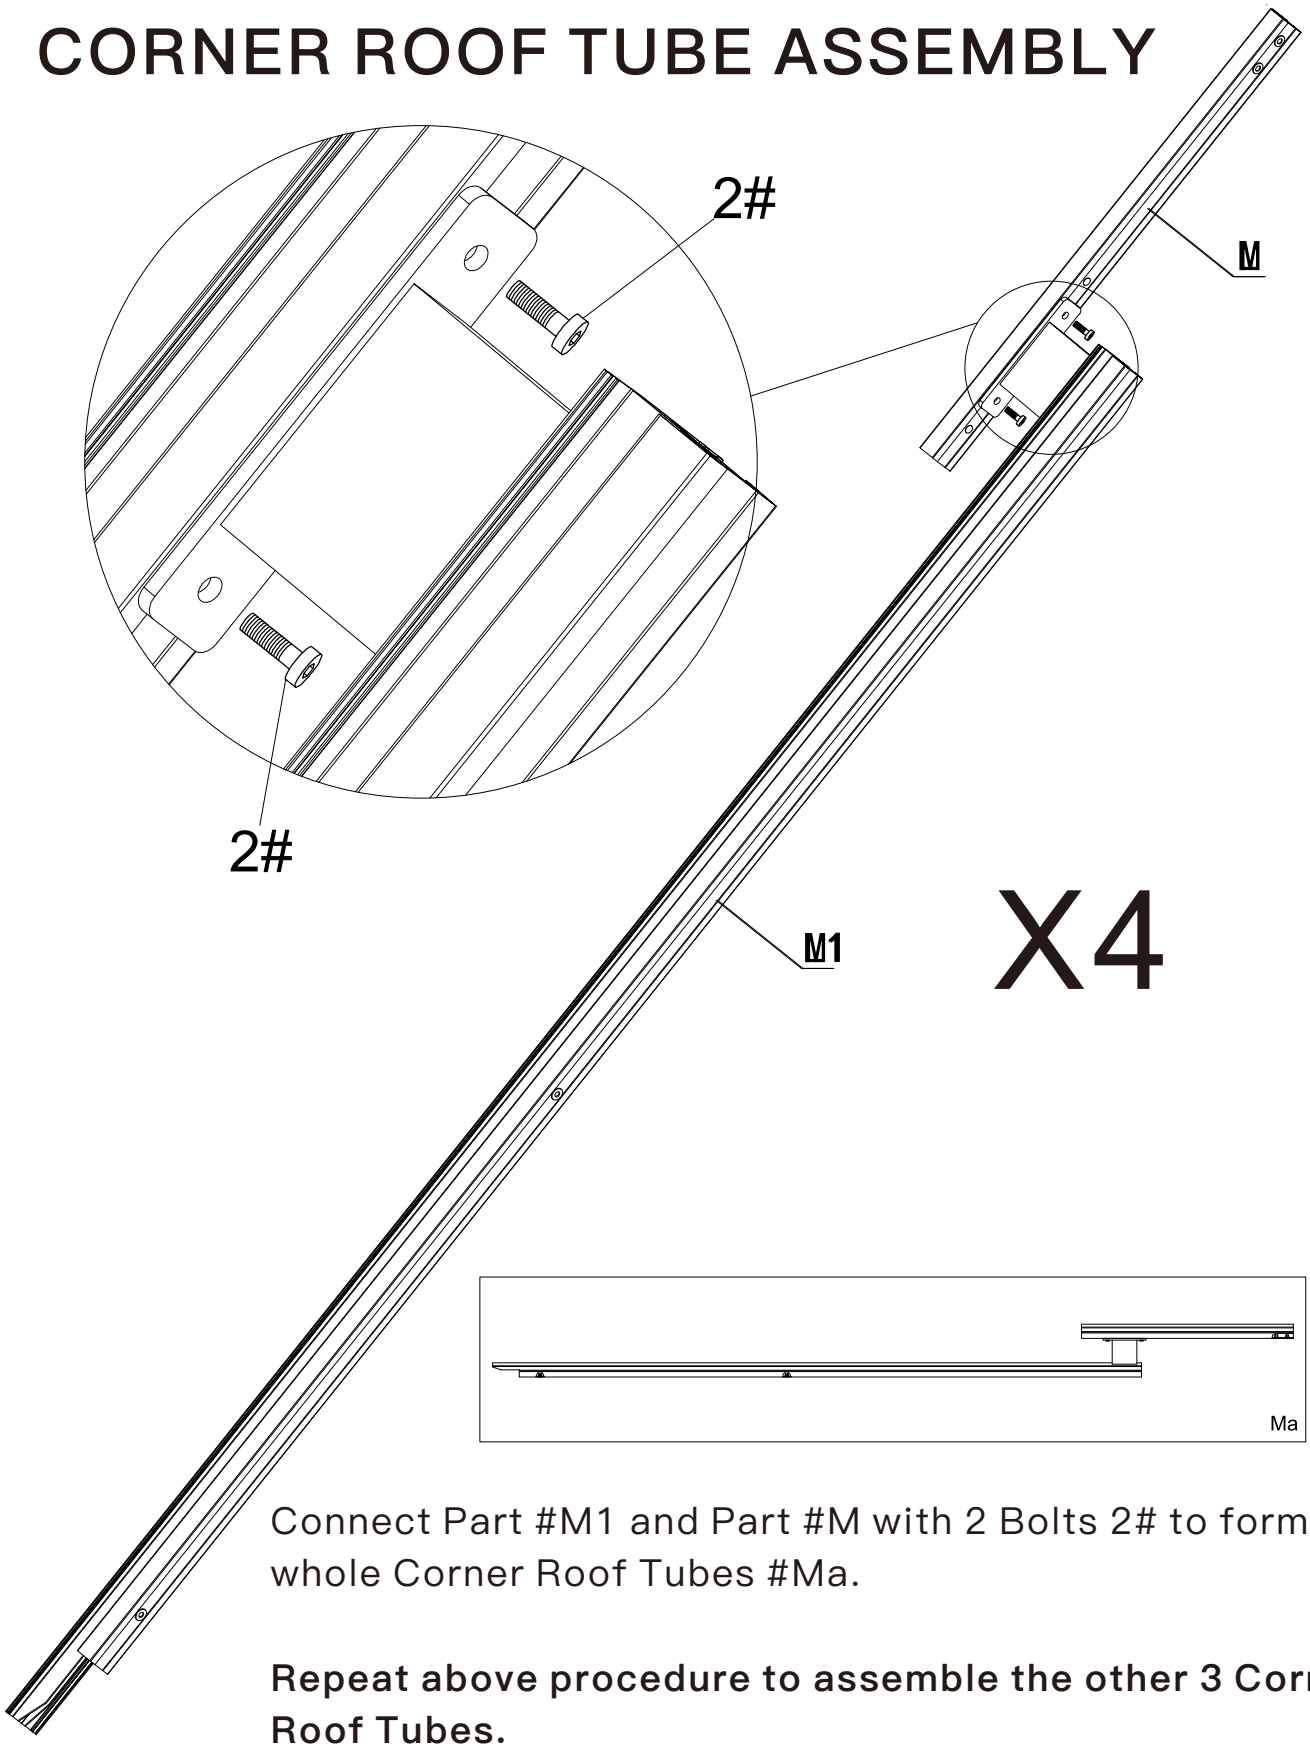


Connect Part #M1 and Part #M with 2 Bolts 2# to form whole Corner Roof Tubes #Ma.


Repeat above procedure to assemble the other 3 Corner Roof Tubes.

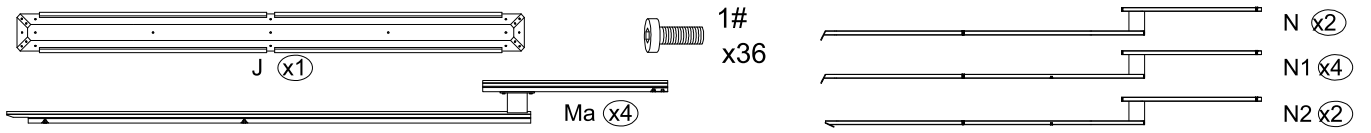

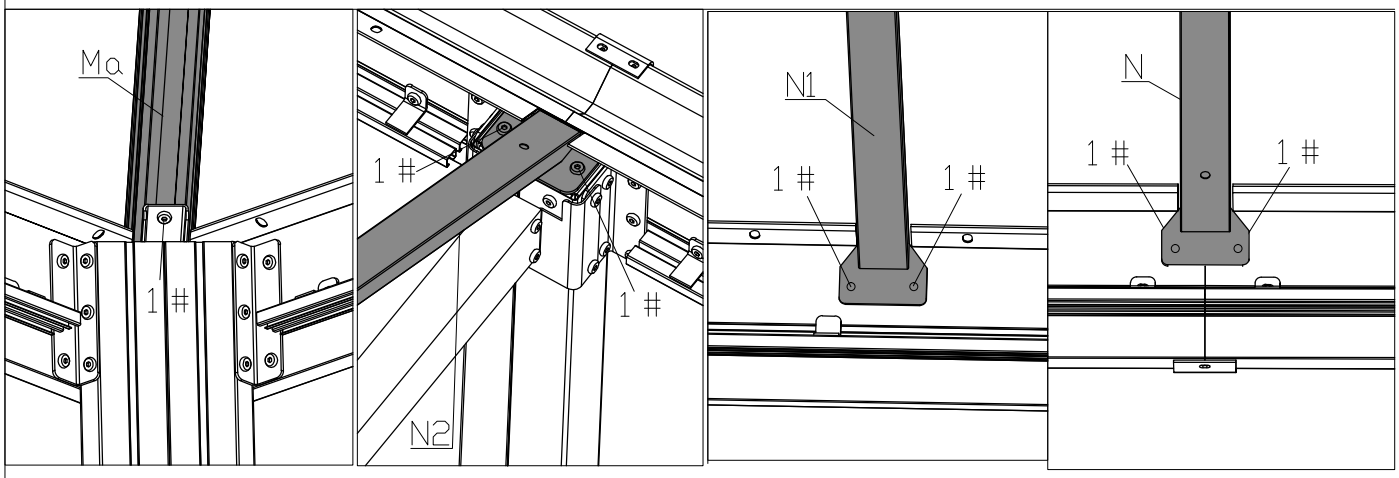


ROOF TUBES AND INSIDE ROOF COVER ASSEMBLY

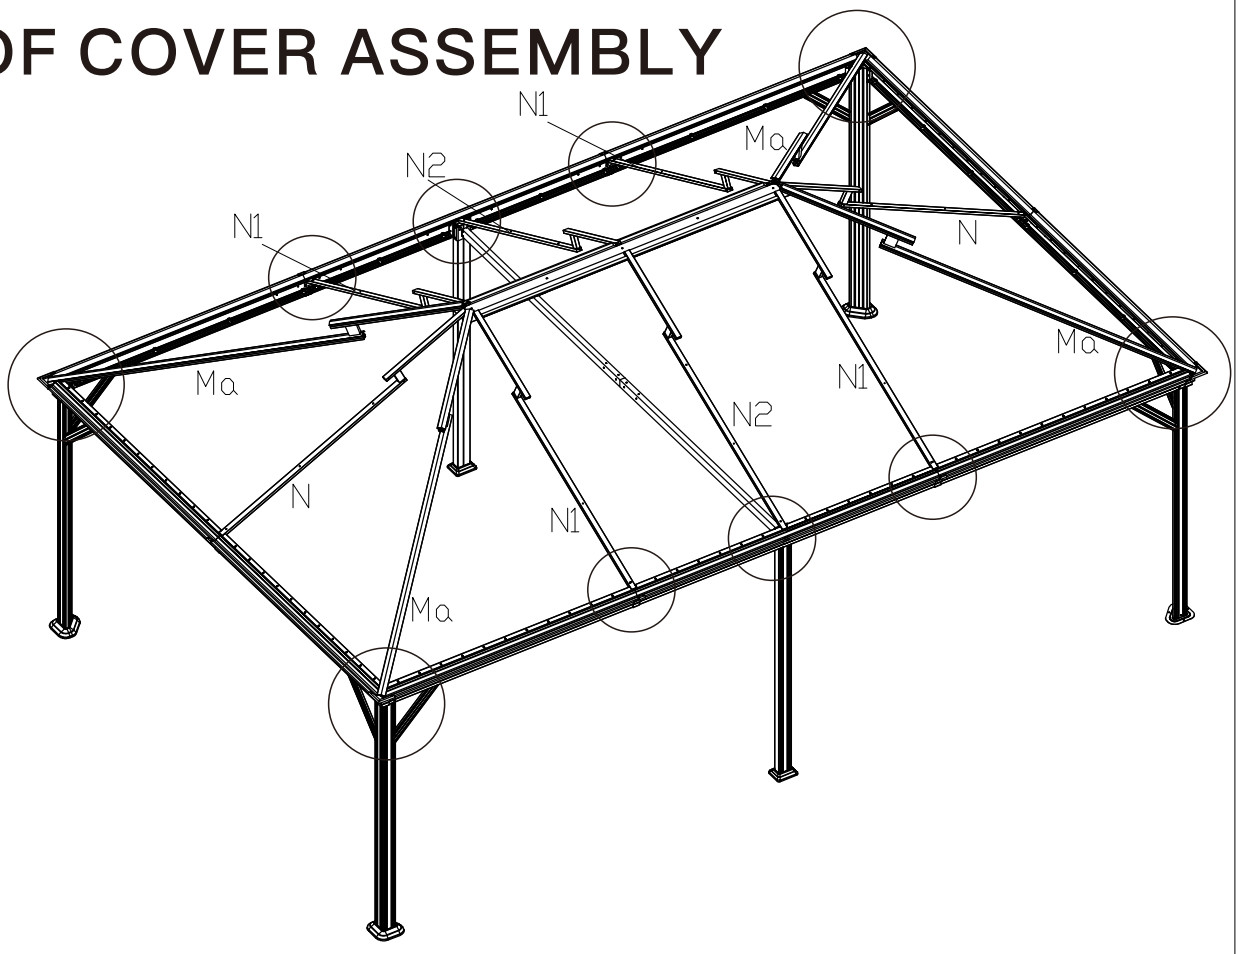


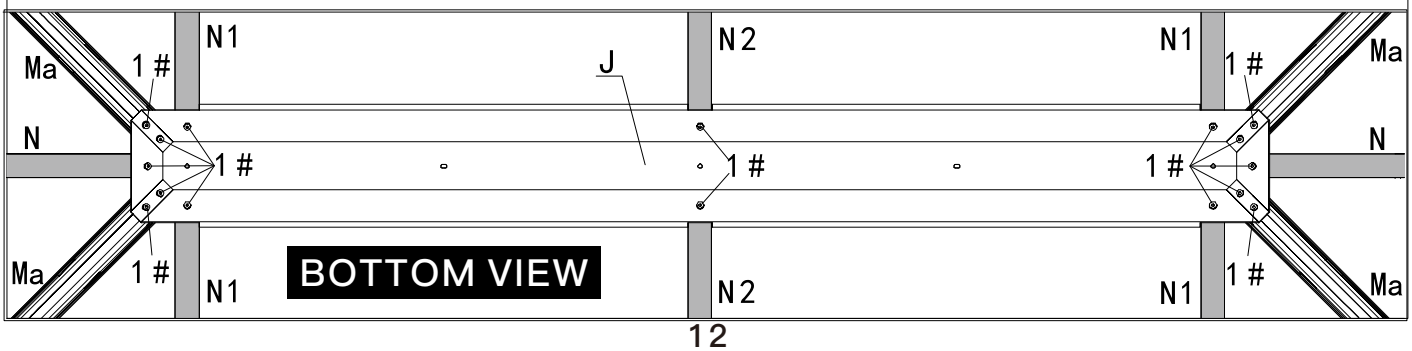


Check the the frame as pictures below shows.

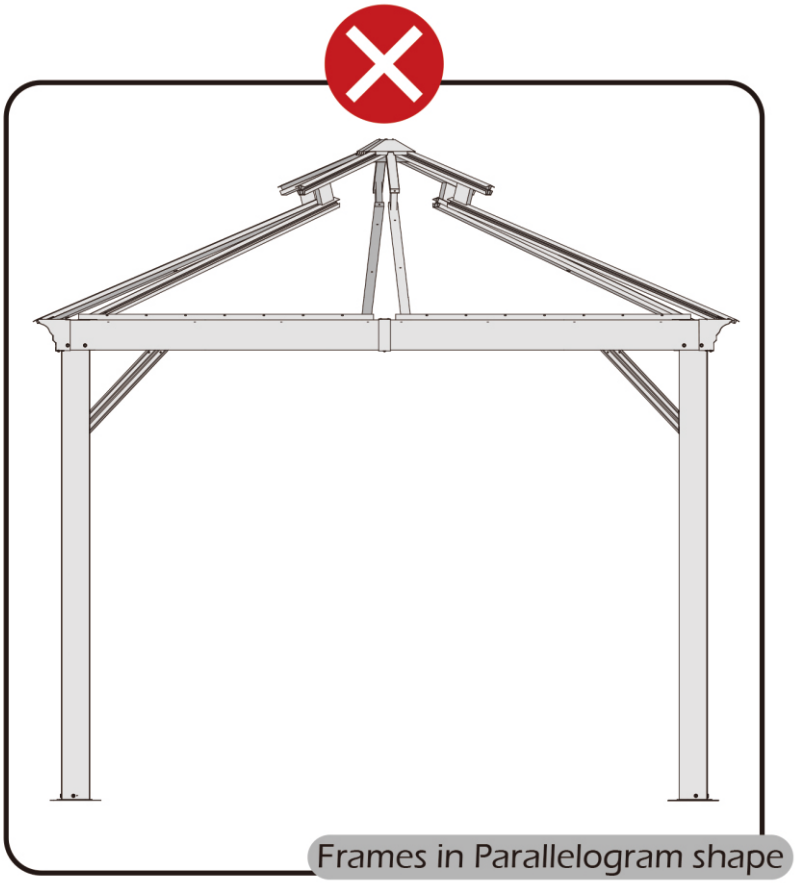


Frames in Parallelogram shape

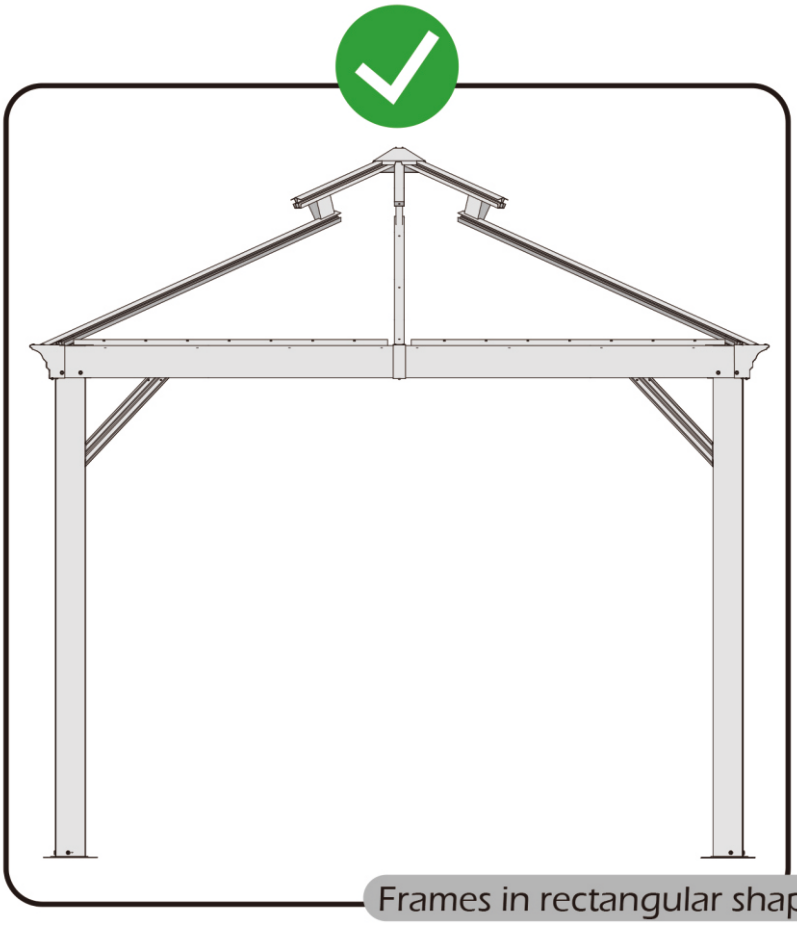


Frames in rectangular shape

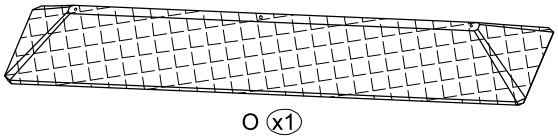


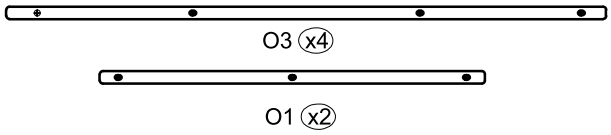


PLASTIC BAR ASSEMBLY

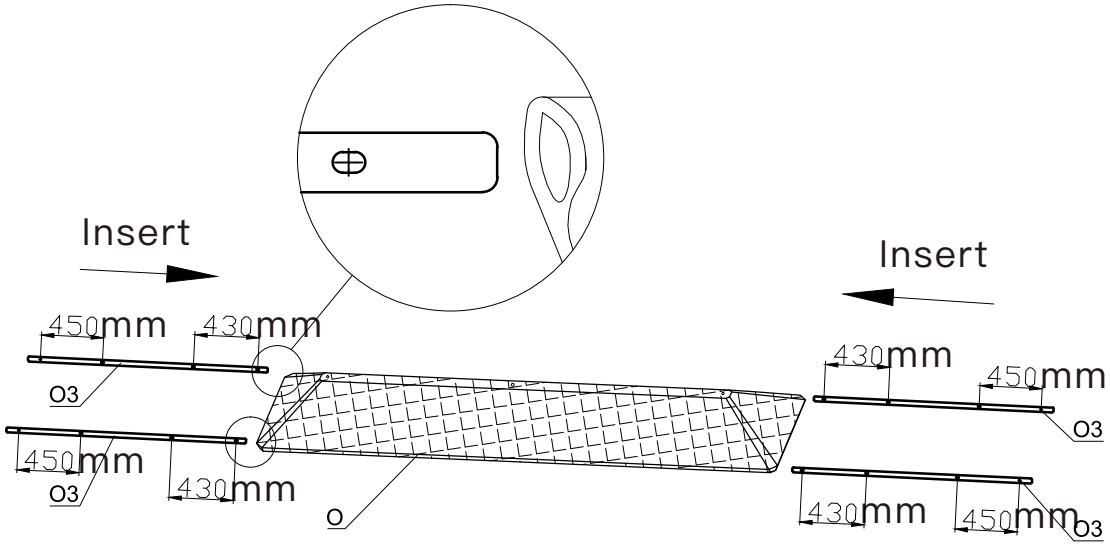


Align the holes

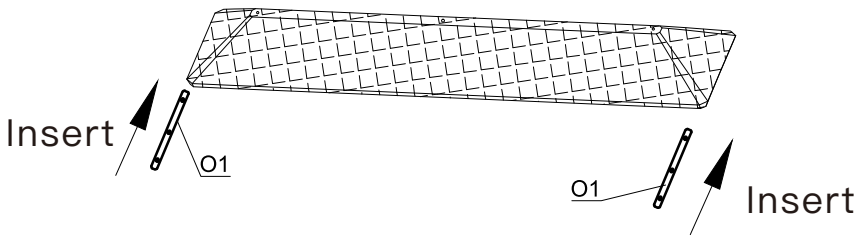

Please pay attention to the installation position of the O3 and do not install it backwards.




E1 x1




1#
x5

OUTSIDE ROOF COVER AND MESH ASSEMBLY


(1) Place the Outside Roof Cover on the Inside Roof Cover.
(2) Align the holes and use 5 Bolts 1# to secure Mesh #O to the Inside Roof Cover (From Bottom to Top).

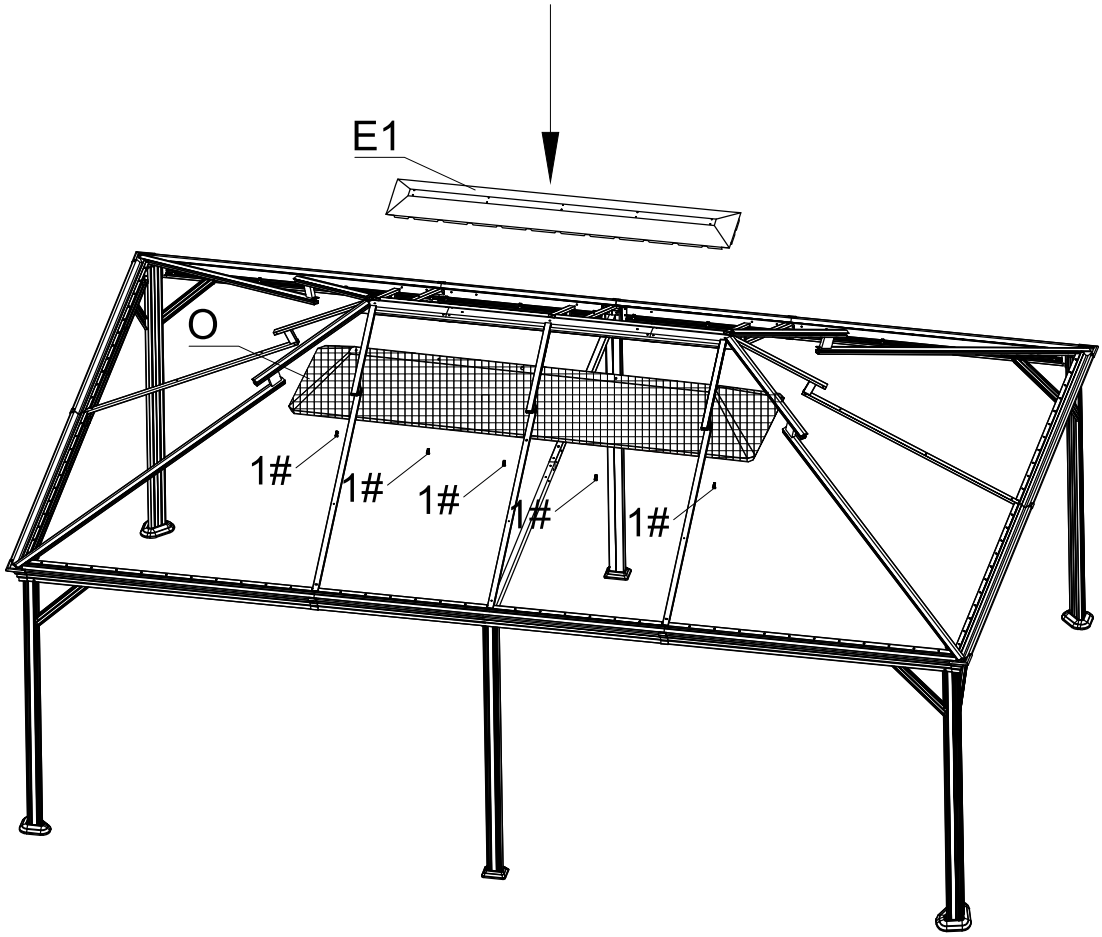

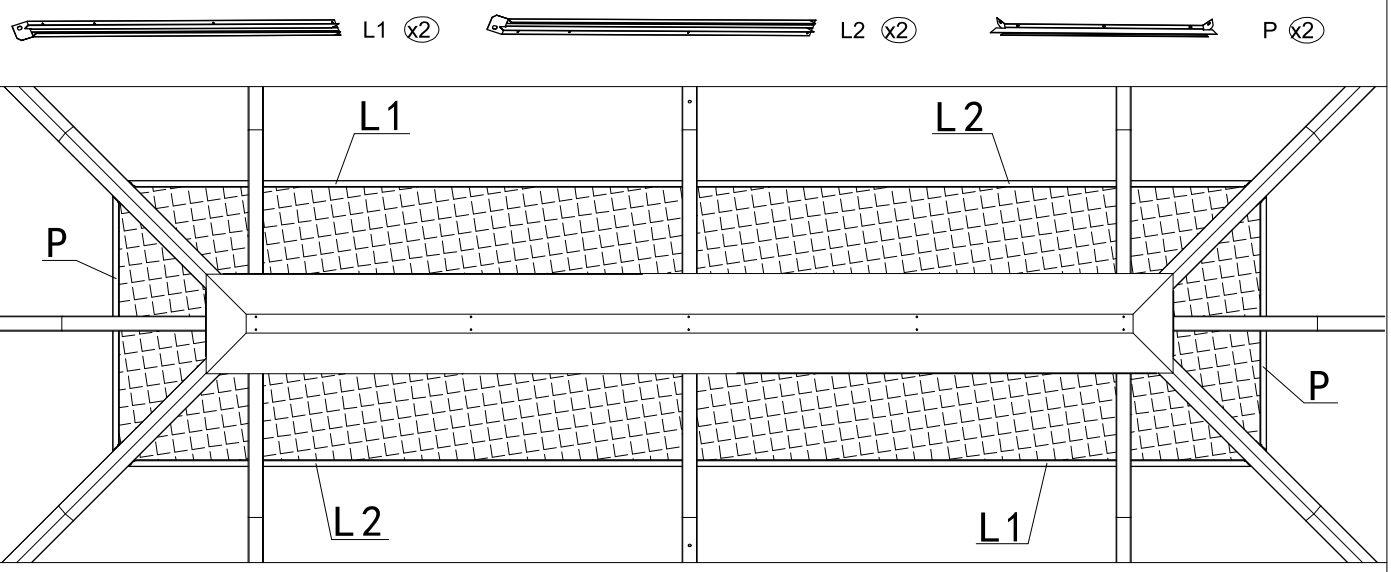


Extend the small mesh #O


TOP VIEW

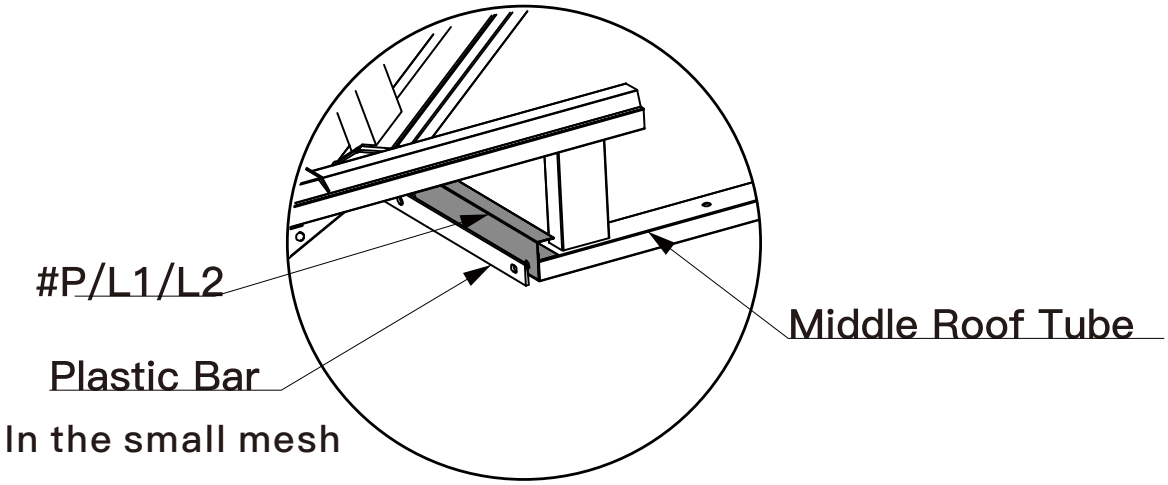



INSIDE VIEW

Please do not pull plastic bar out when installing it with #P, L1& L2 on the middle roof tube.

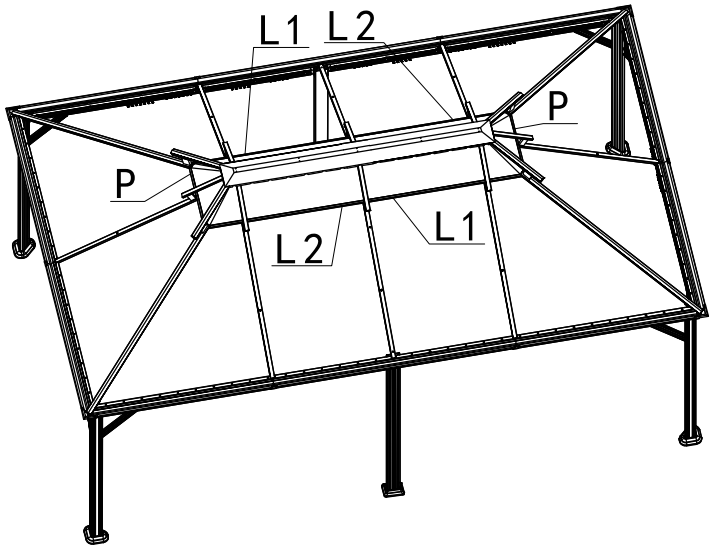







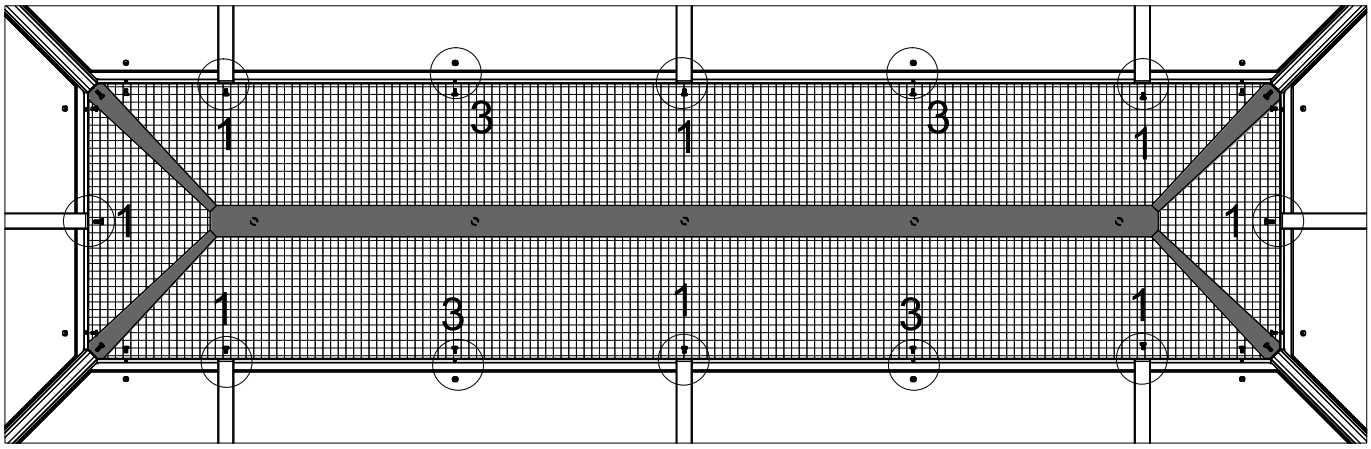


BOTTOM VIEW

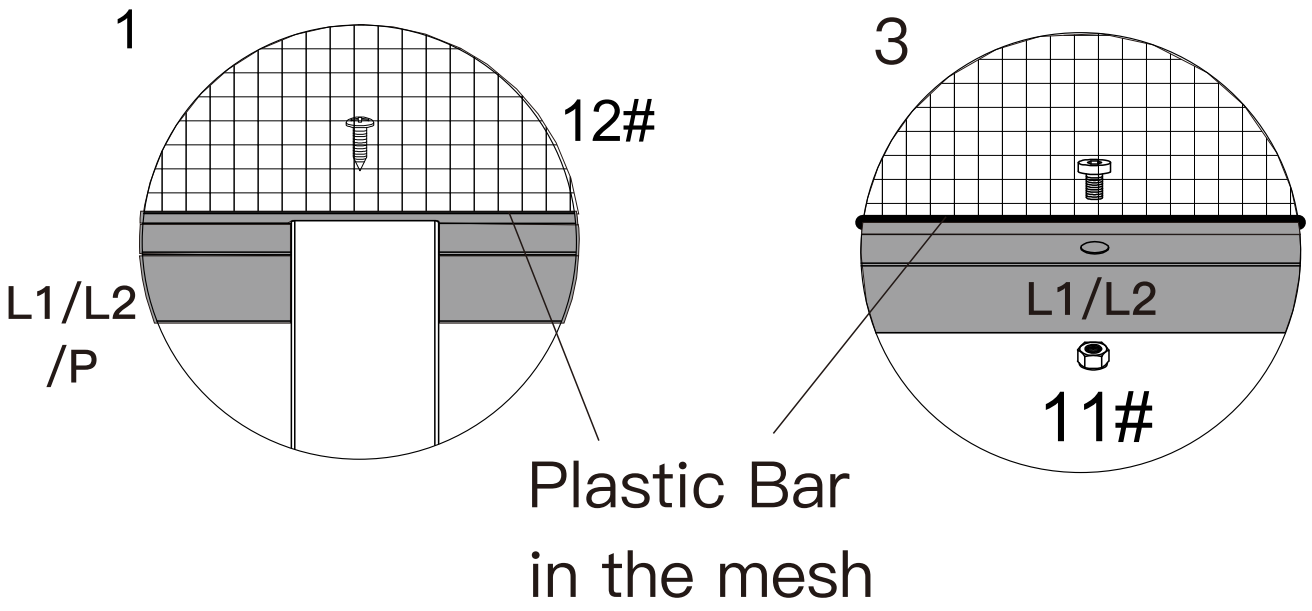


Extend the small mesh, then secure the plastic bar (inside the small mesh)and the finishing bar to the roof tube.



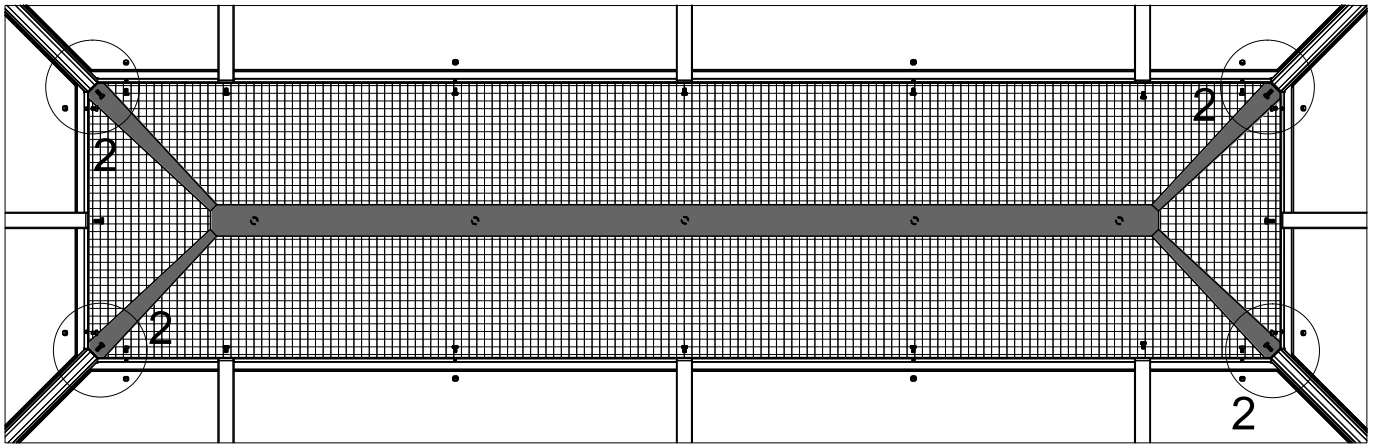


BOTTOM VIEW

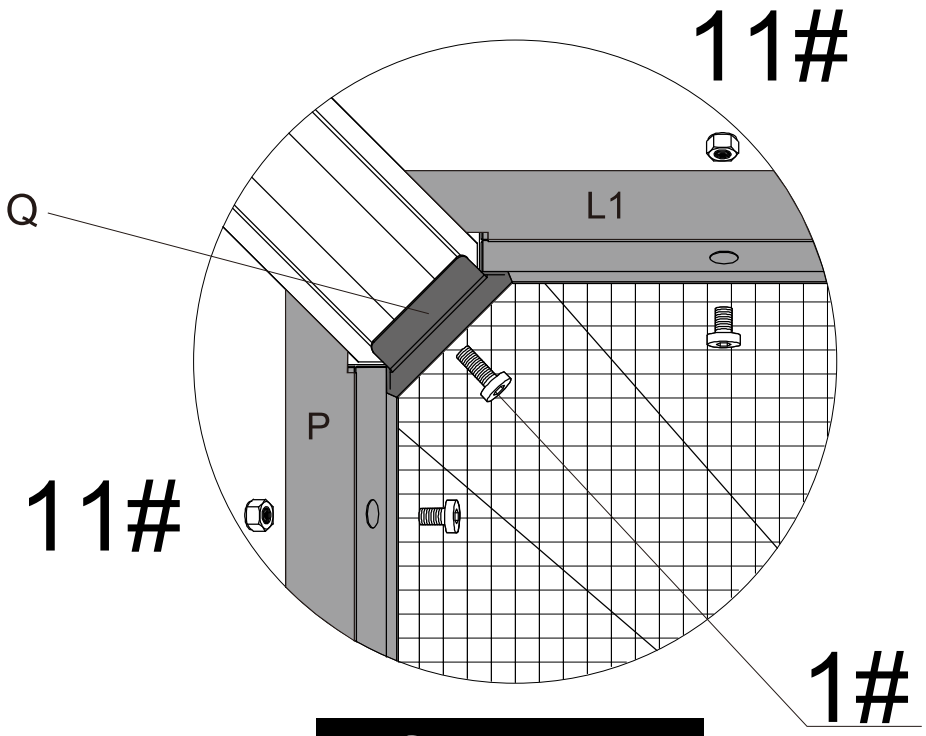

INSIDE VIEW


(1) use 2 bolts and nuts #11 to secure the small mesh, plastic bar to finishing bar.
(2) Use bolt #1 to secure the small mesh and finishing end #Q to the corner roof tube.
(3) Repeat above procedures to assemble the other 3 sides.

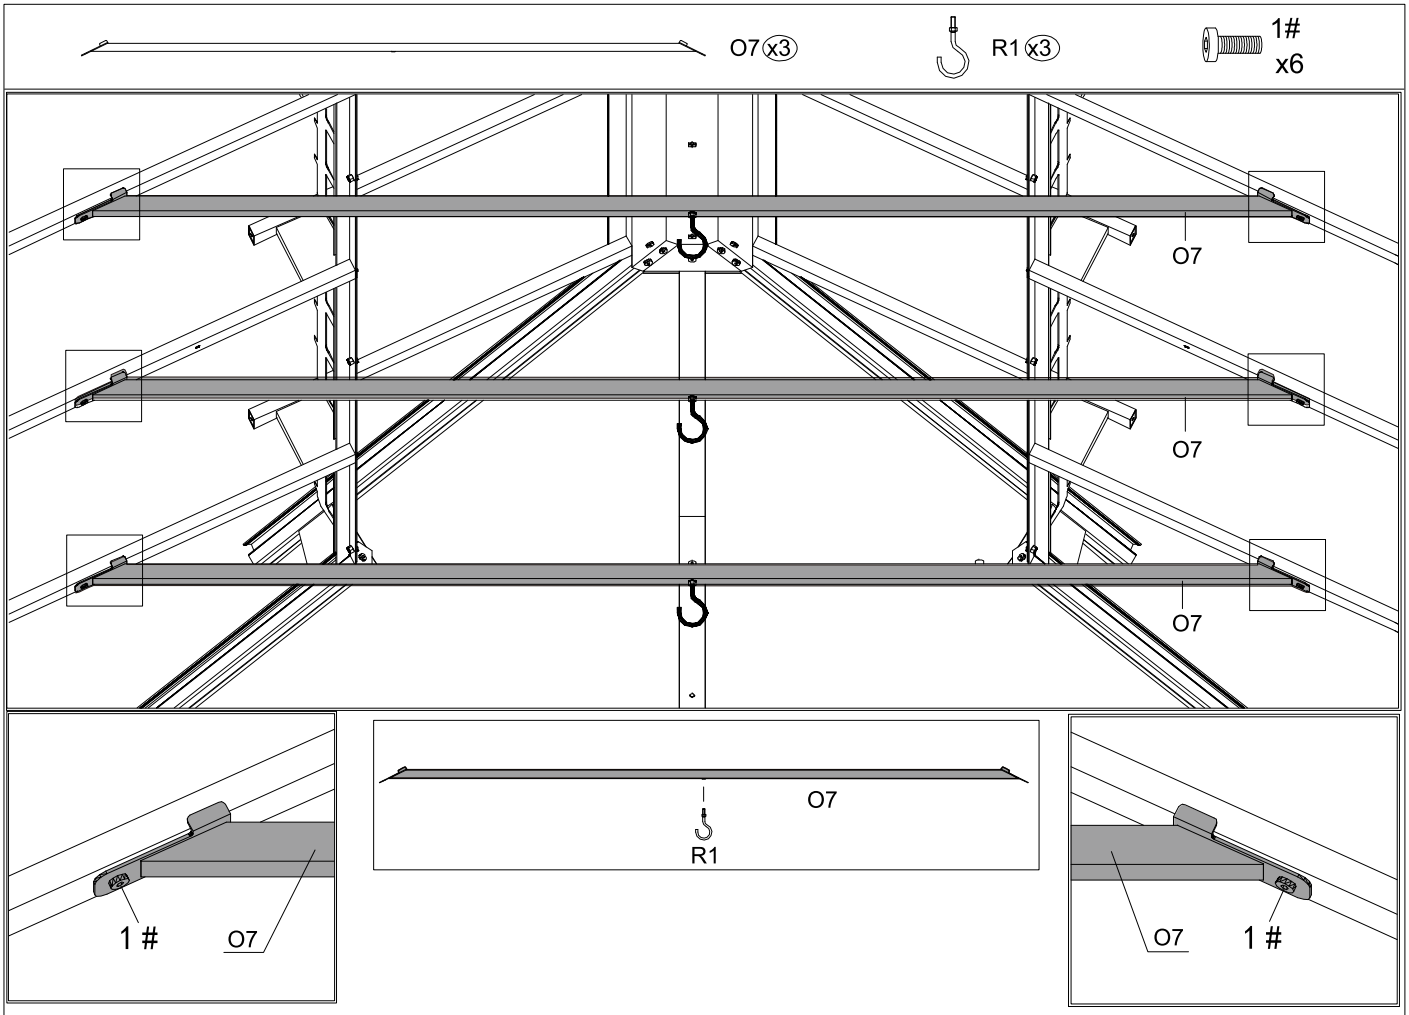


SOLIDIFYING BARS AND HOOKS ASSEMBLY


(1) Attach 3 Part #O7 to the frame and use 6 Screws 1# to fix.


(2) Screw Hooks #R1 onto the Bar Part #O7.

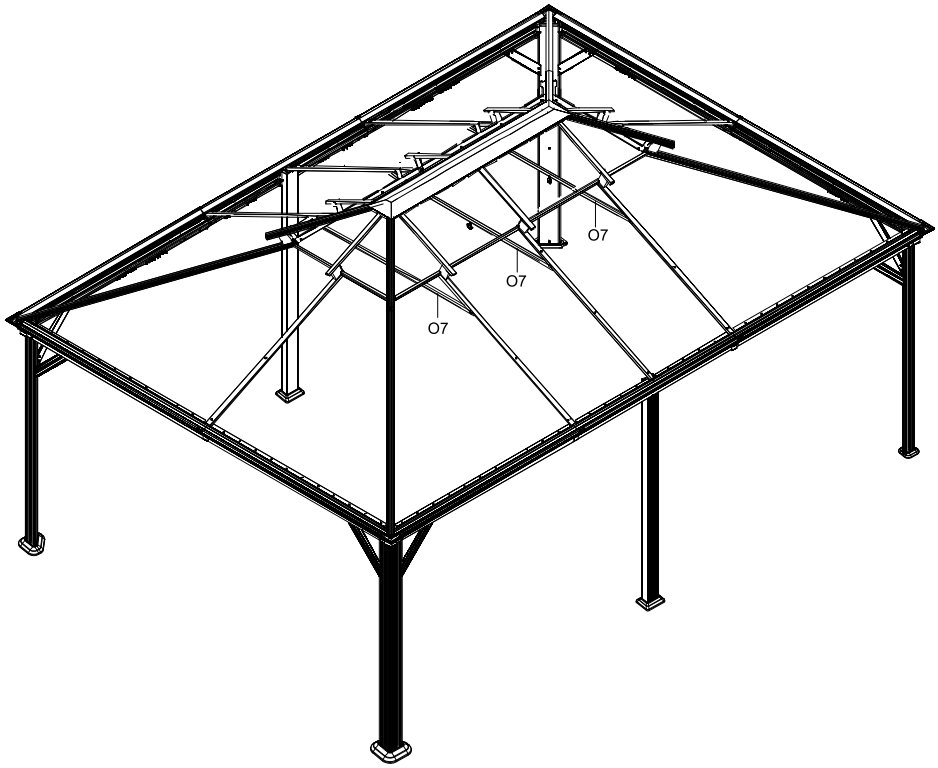






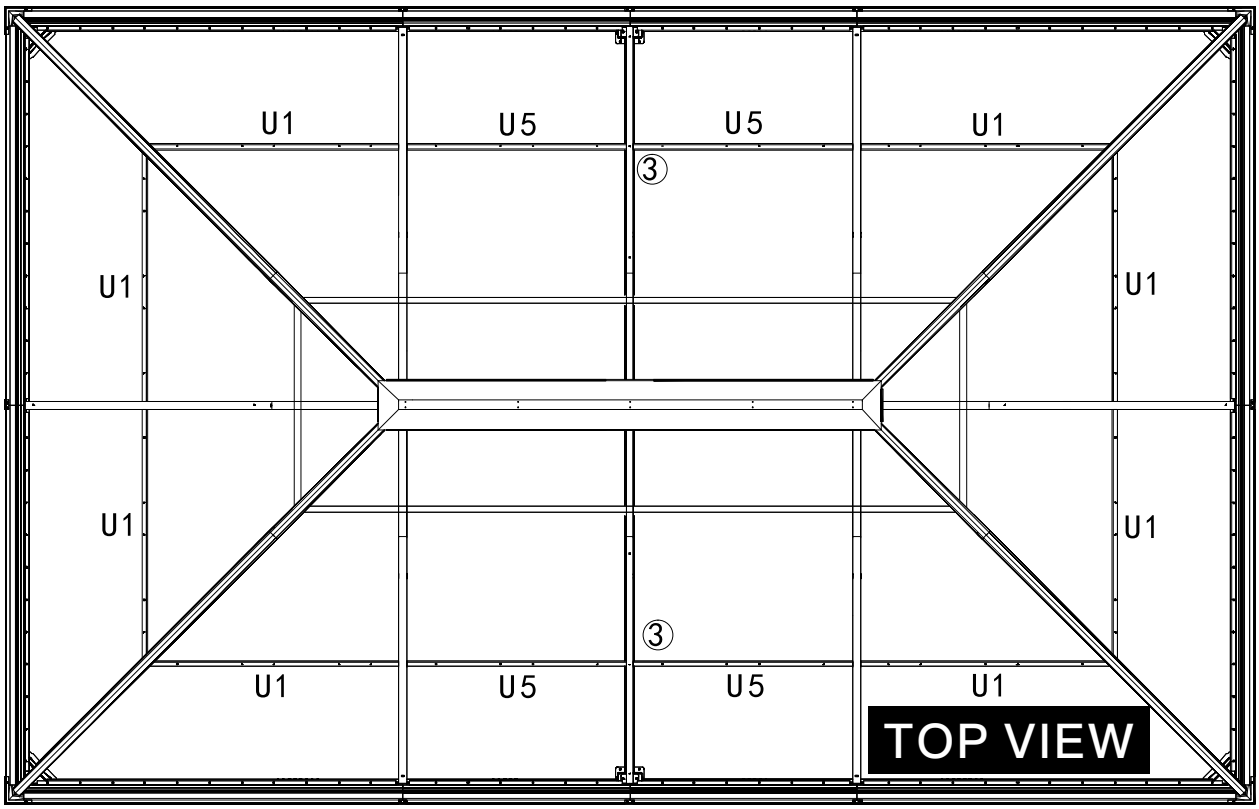


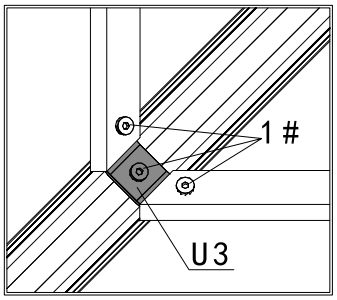



Note: If #U5 does not fit properly, the ends of the Solidifying Bar may be installed in reverse.


INSIDE VIEW

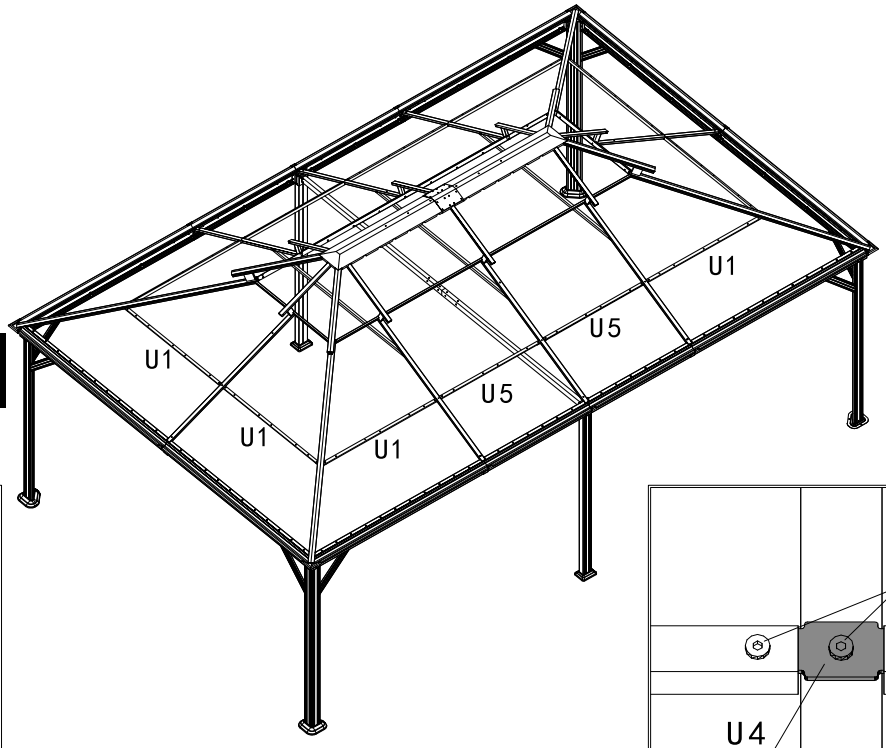

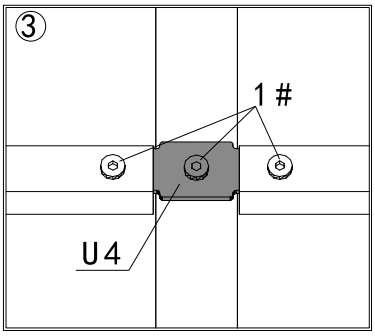


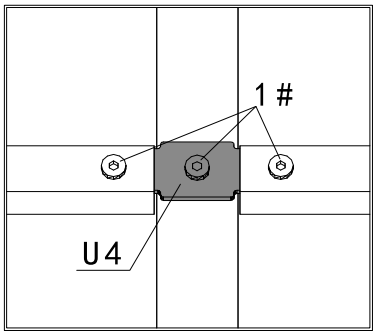


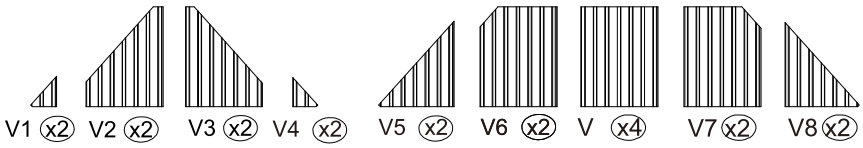


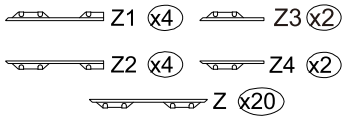


Remove the protective film of the panels before installing the roof panels.
Please install Plastic Clips in strict accordance with the instructions.

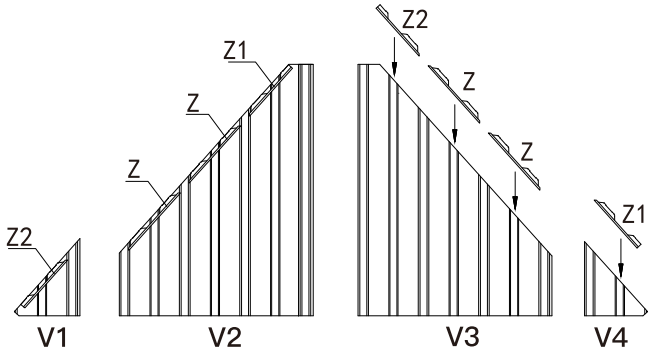


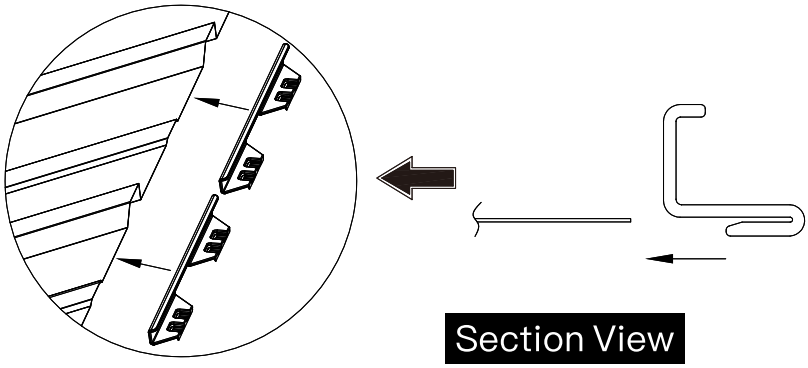

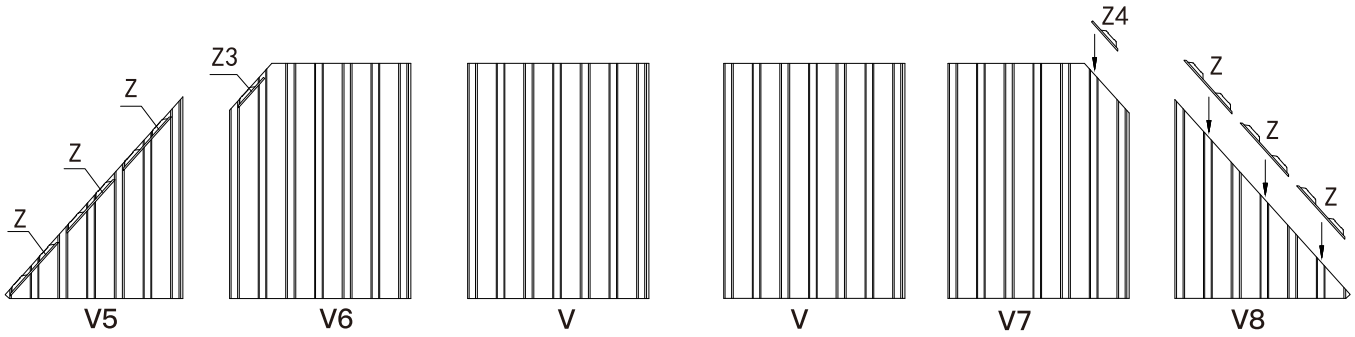


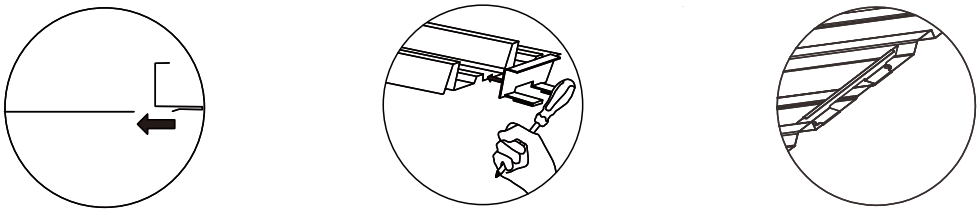


Attach Part #Z,#Z1,#Z2,#Z3＆#Z4 by lightly tapping with screwdriver.




SMALL ROOF ASSEMBLY

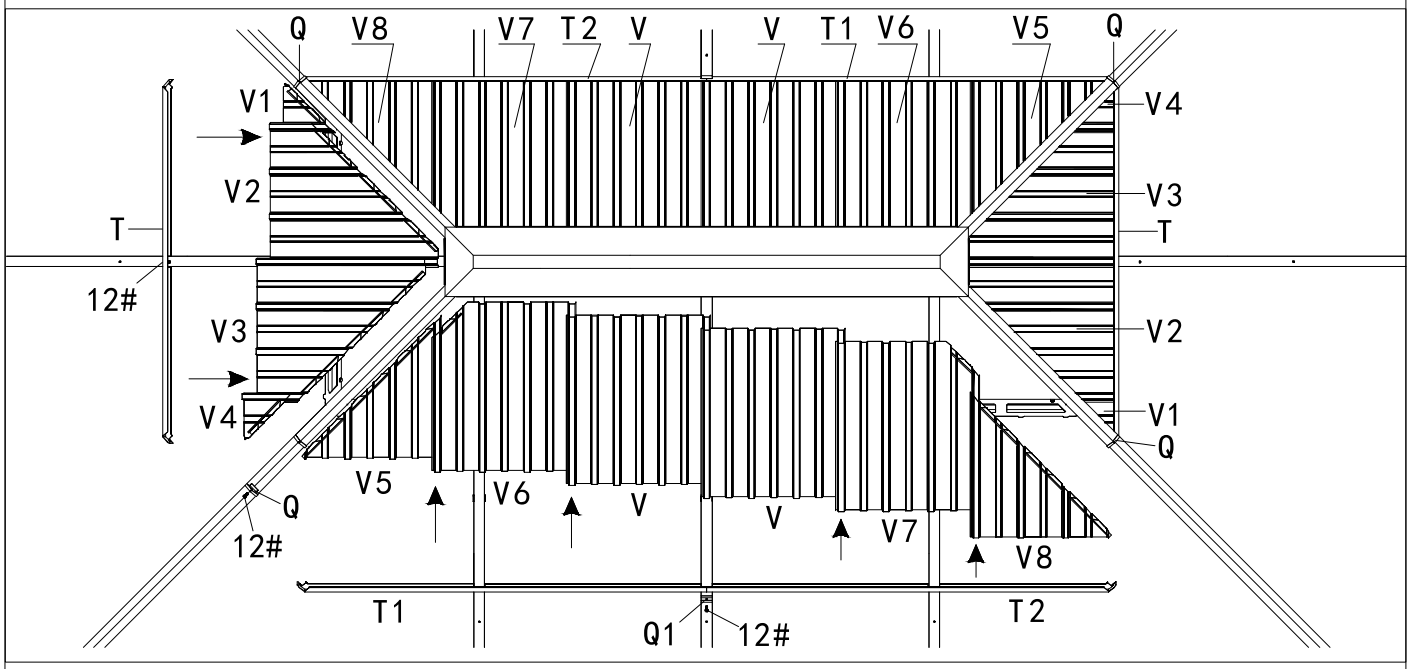


If you can’t install #V, push the Outside Roof Cover up and try to insert them again.

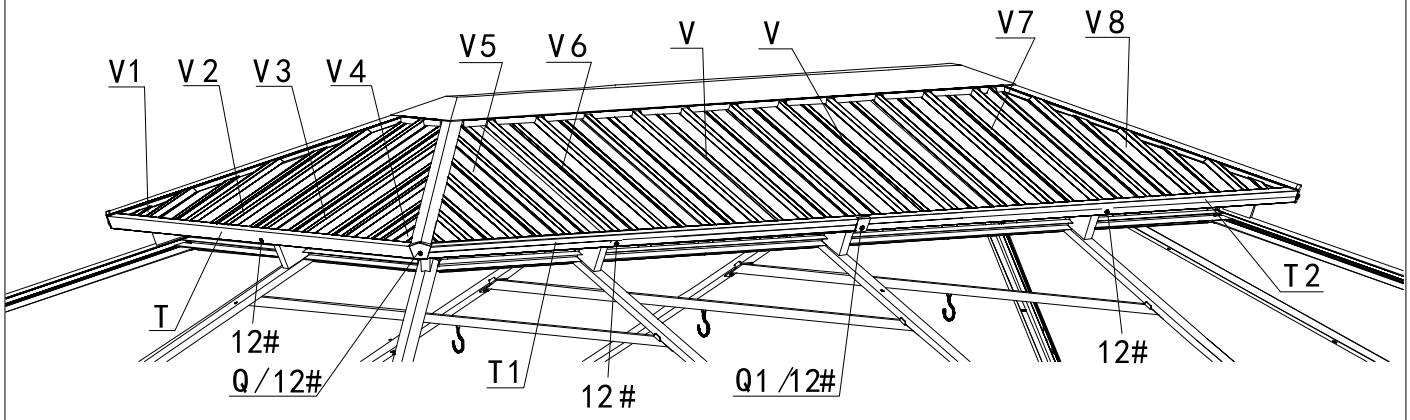

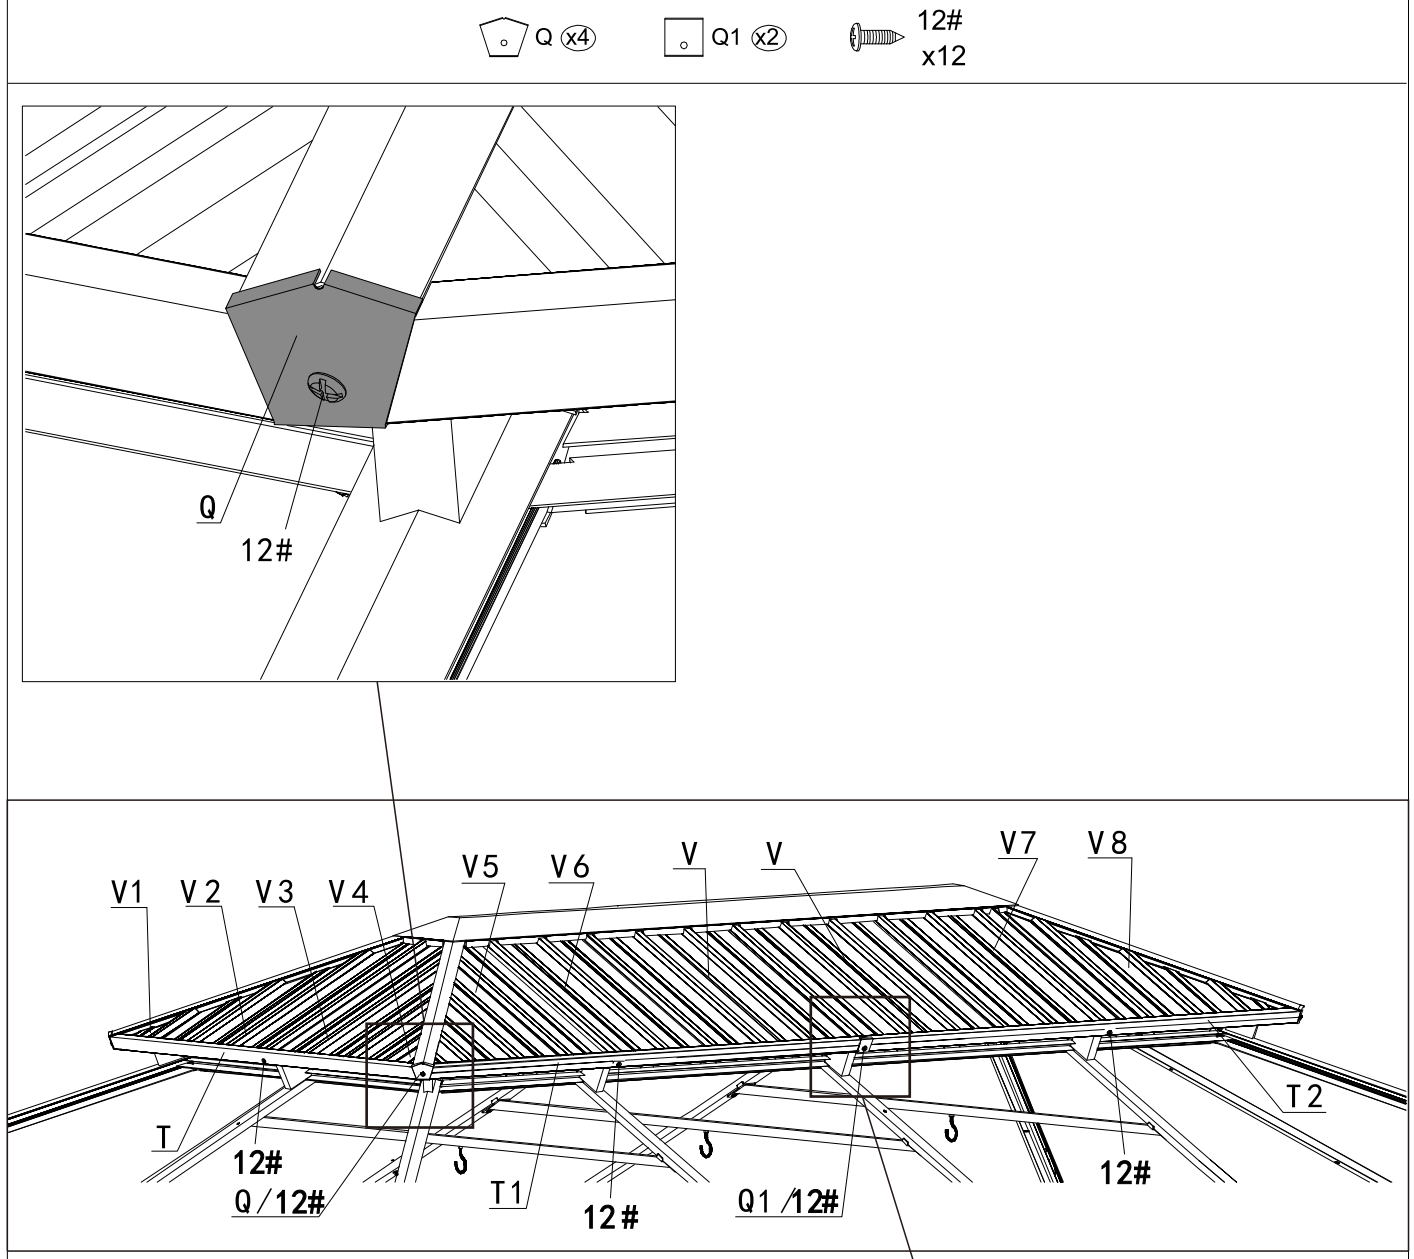

Q x4
Q1 x2
12#
x12
Q
12#
V1
V2
V3
V4
V5
V6
V
V
V7
V8
T
12#
Q/12#
T1
12#
Q1/12#
12#
T2
T1
T2
Q1
12#




W1 x2 W2 x2 Ze x4 W11 x2 W12 x2





10#
x8

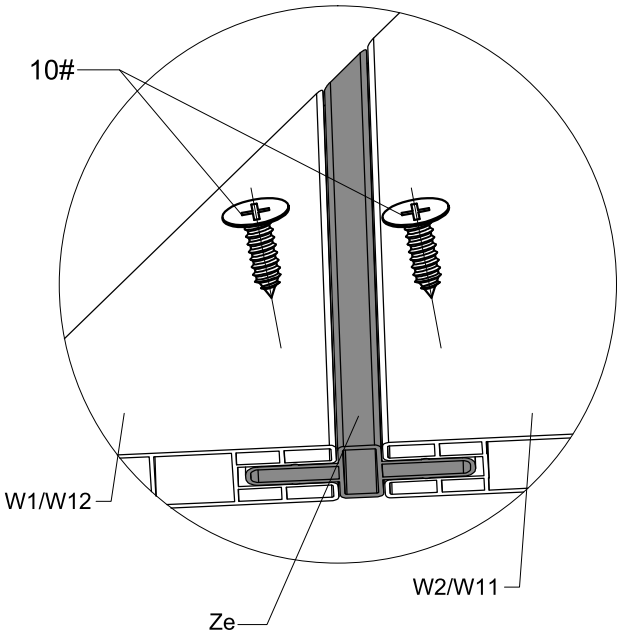


no strips inside

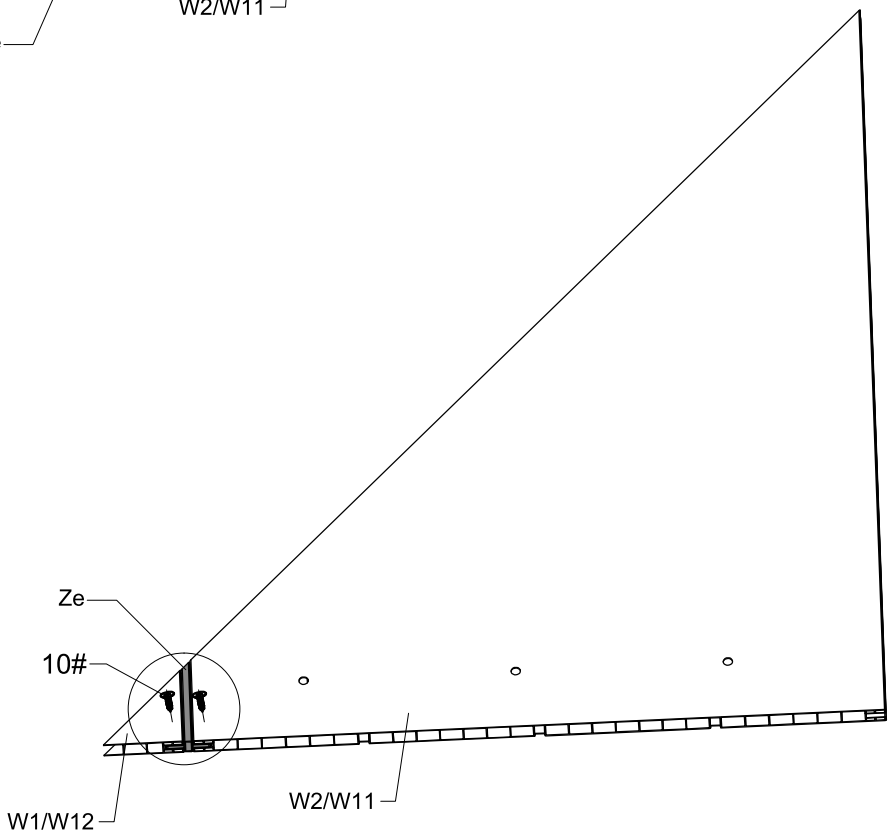


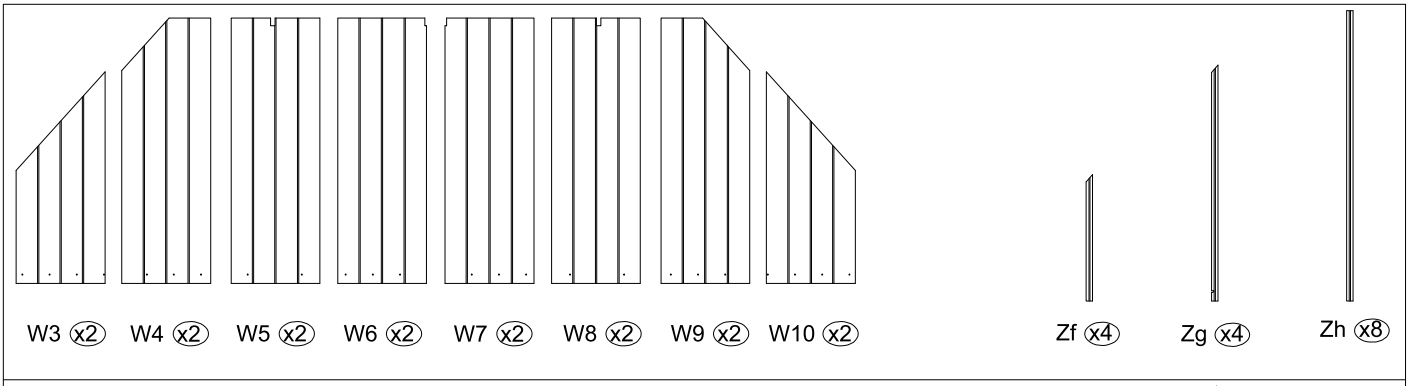


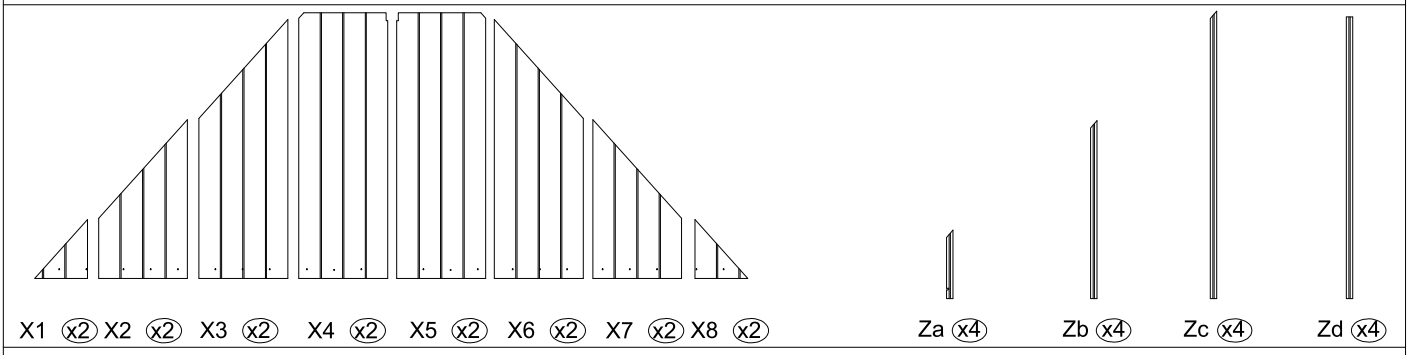


RESIN ROOF ASSEMBLY:

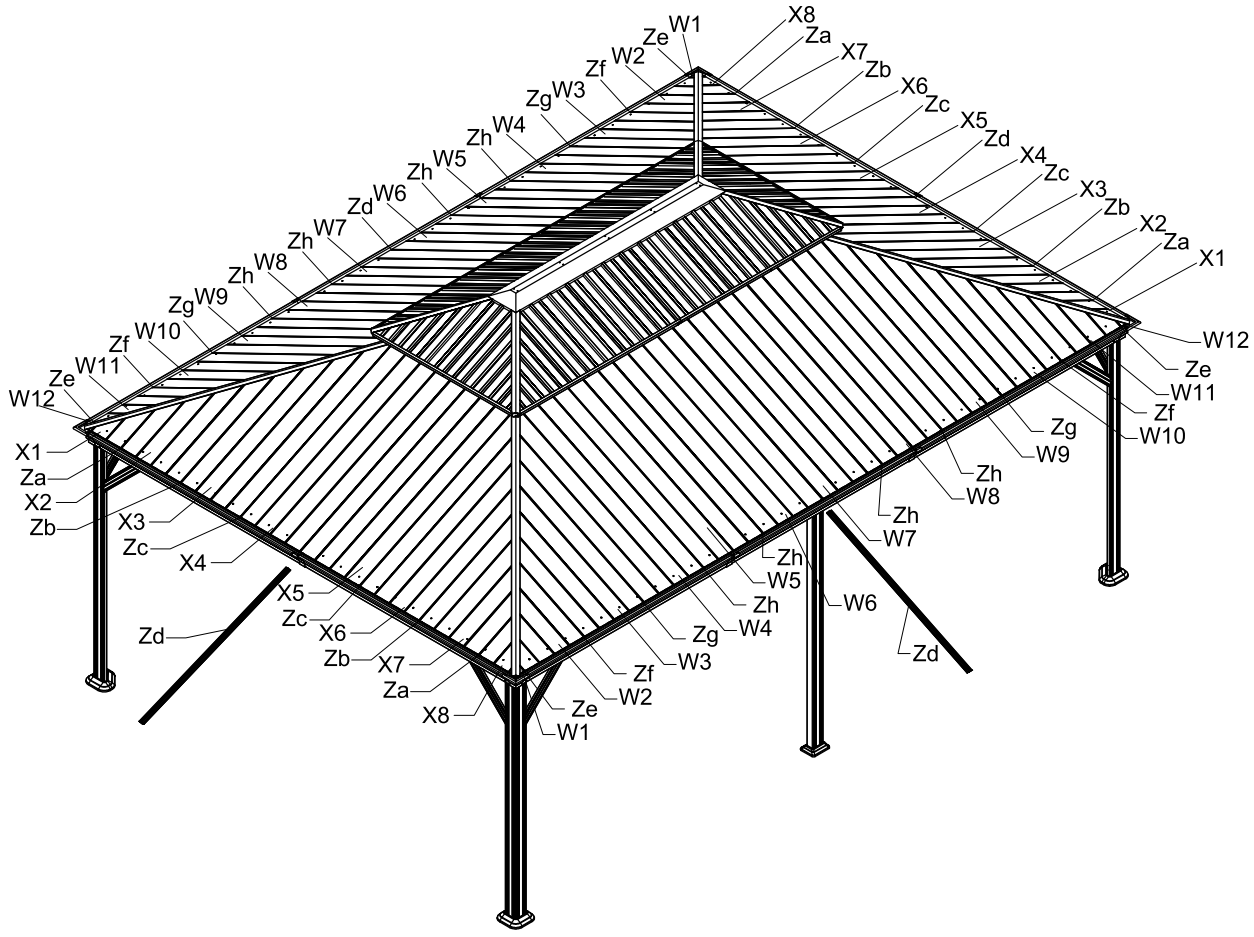

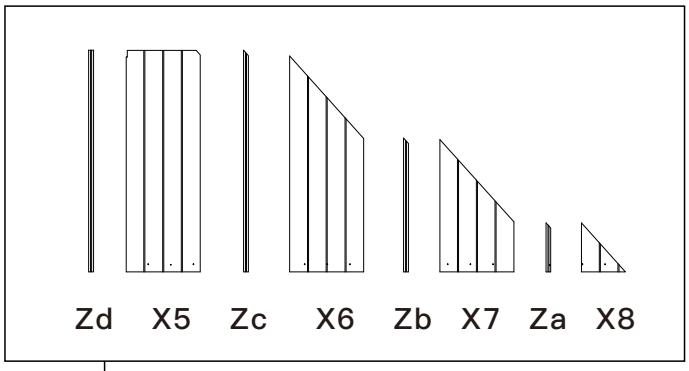


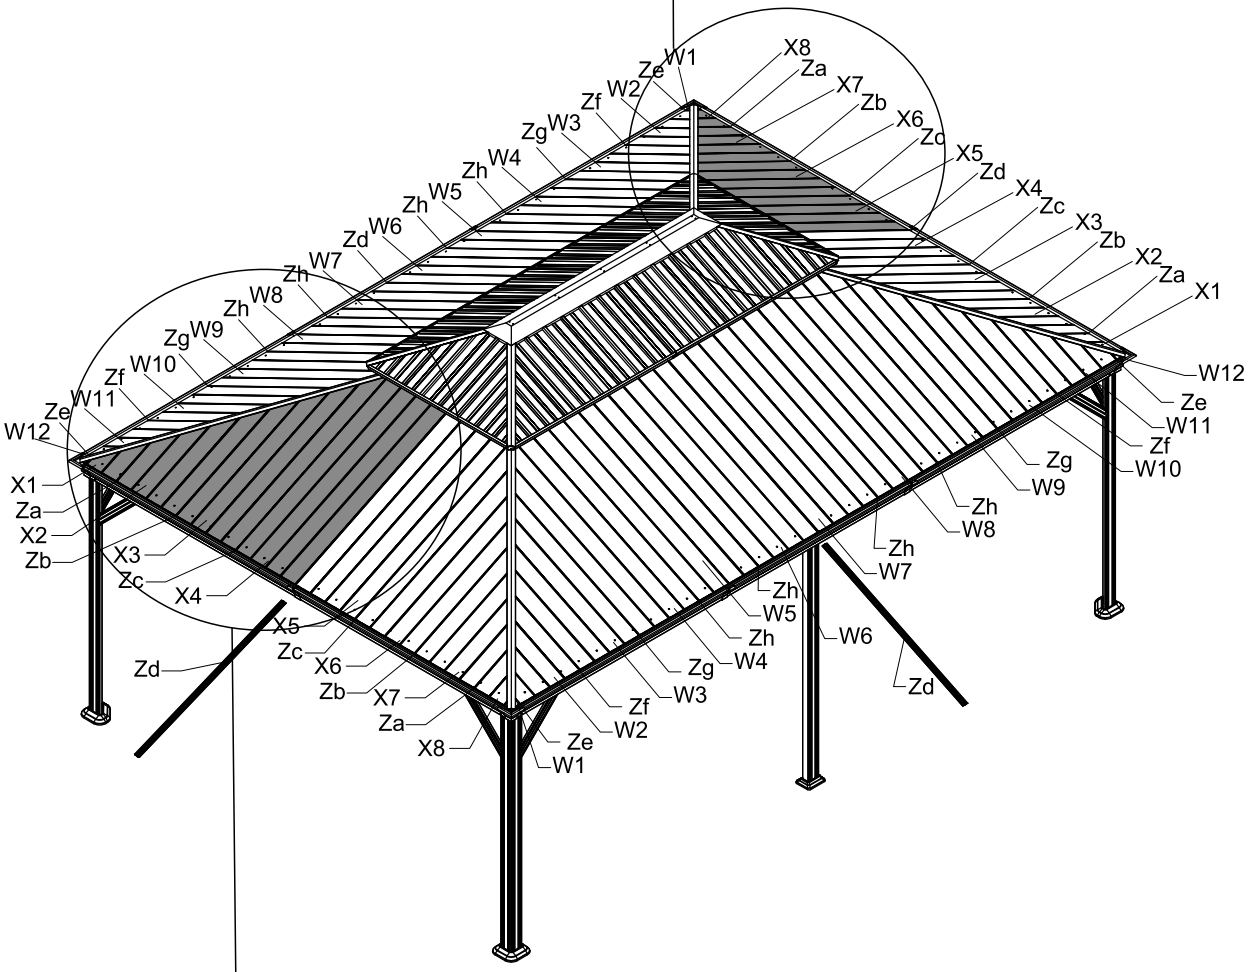


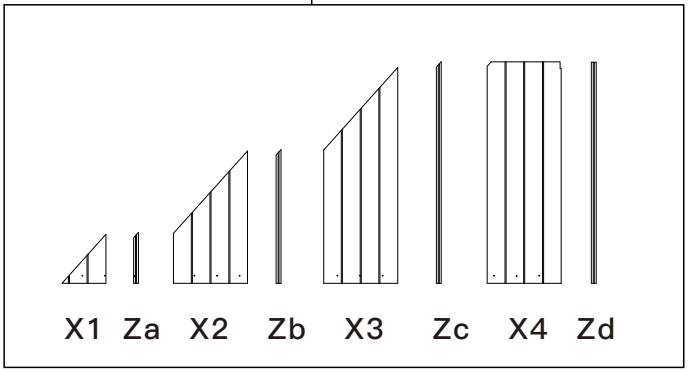

After installing both sides simultaneously, #Zd will be inserted last.


Repeat the above procedures to assemble the opposite side.

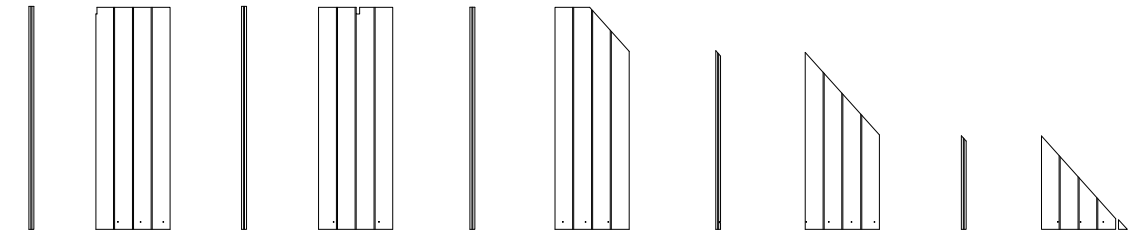


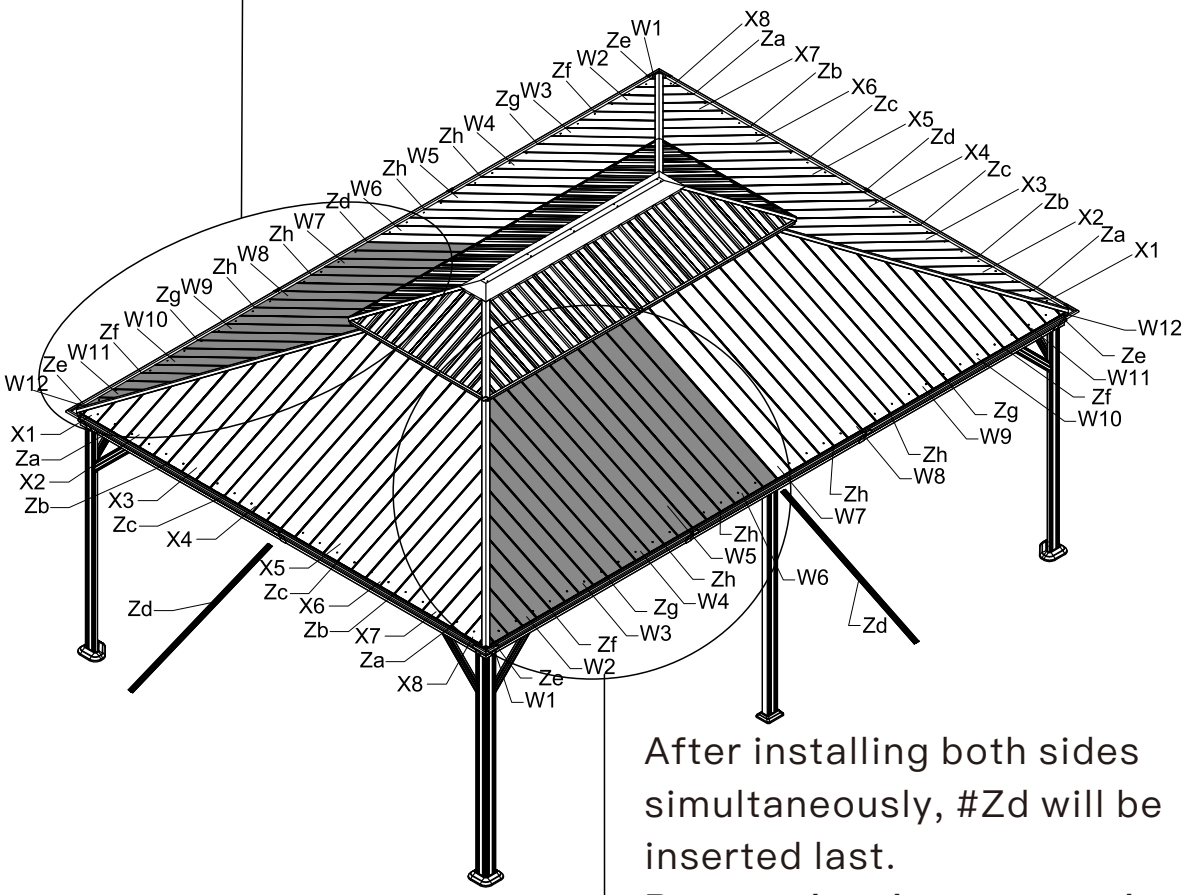


After installing both sides simultaneously, #Zd will be inserted last.


Repeat the above procedures to assemble the opposite side.

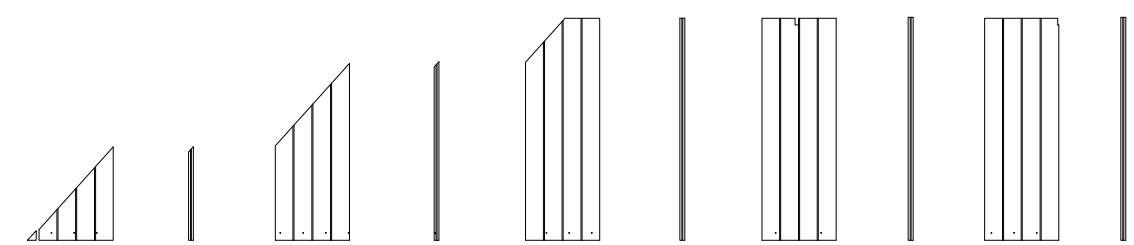




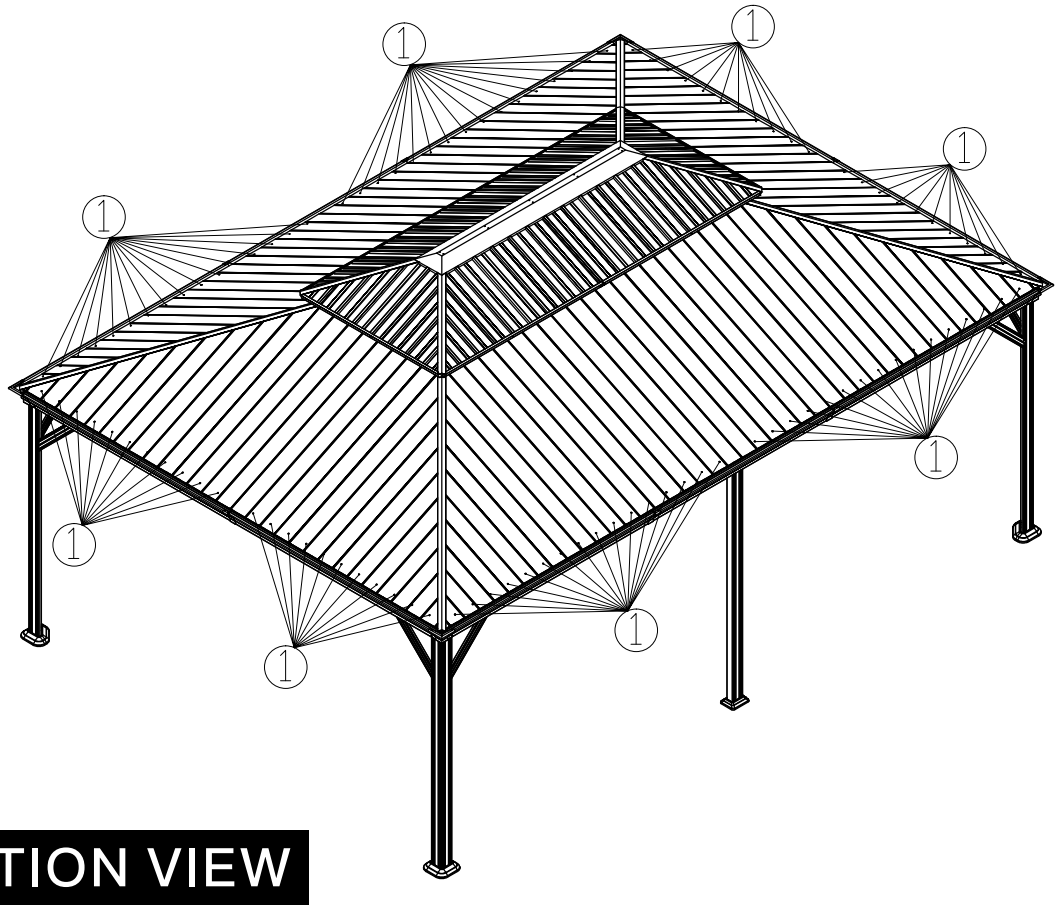


SECTION VIEW

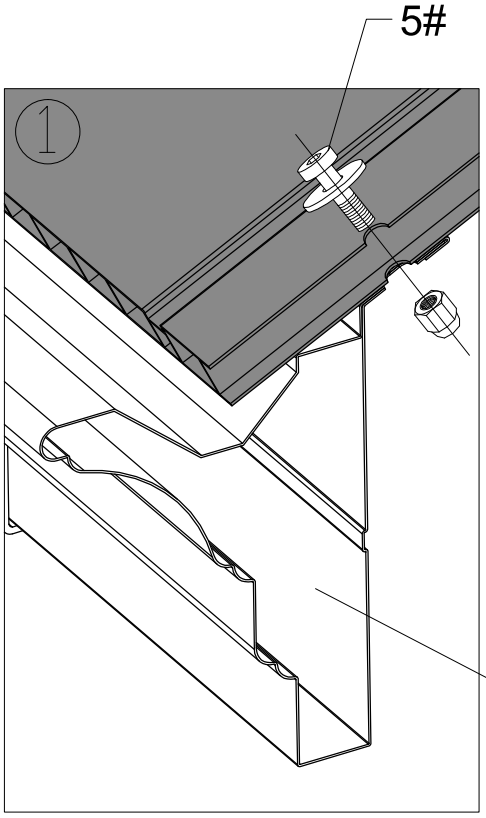


①: Use bolts #5 to secure the roof panel to the beam.




6# x16




7# x32

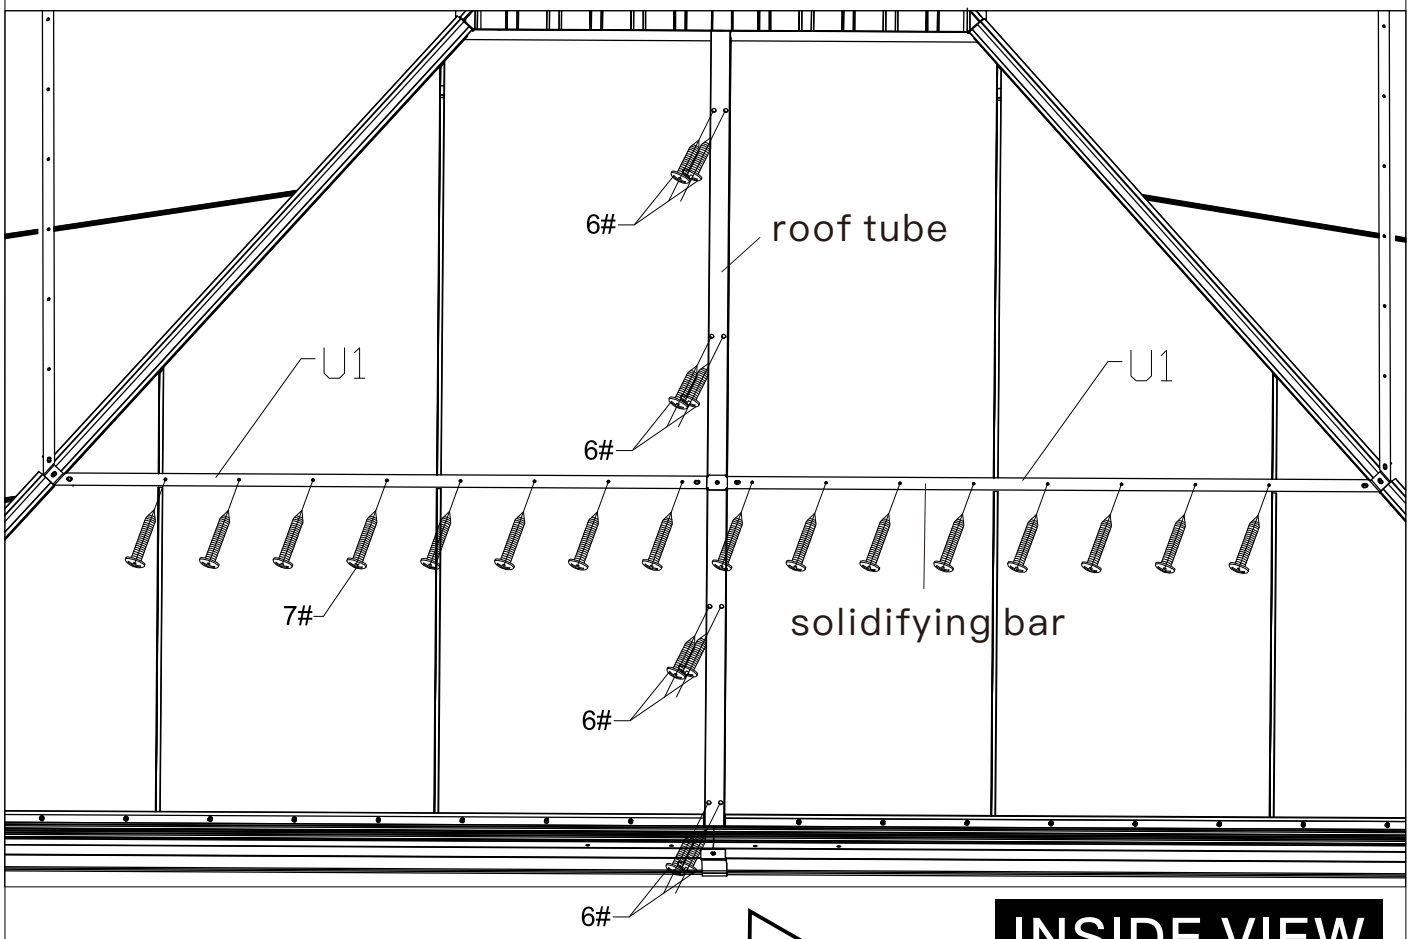


INSIDE VIEW

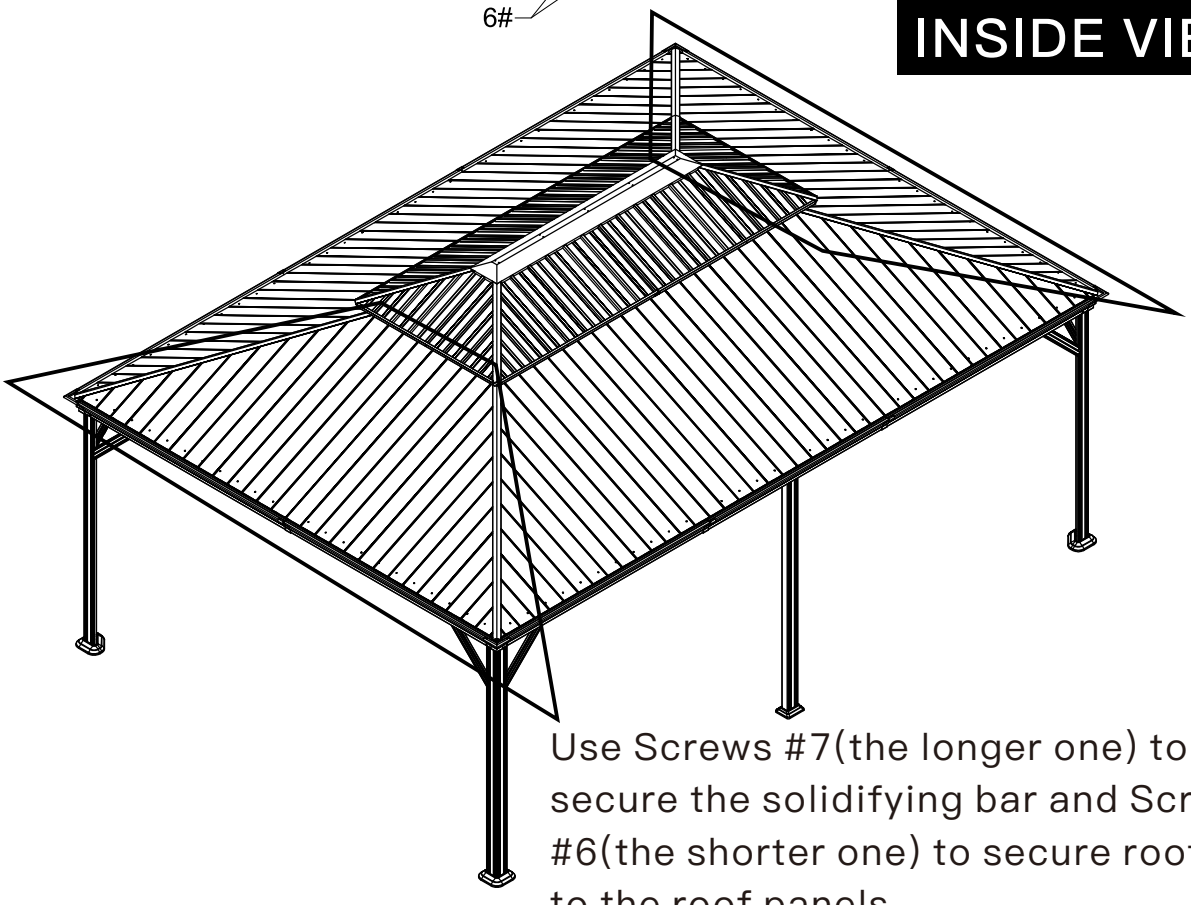


Use Screws #7(the longer one) to secure the solidifying bar and Screws #6(the shorter one) to secure roof tube to the roof panels.

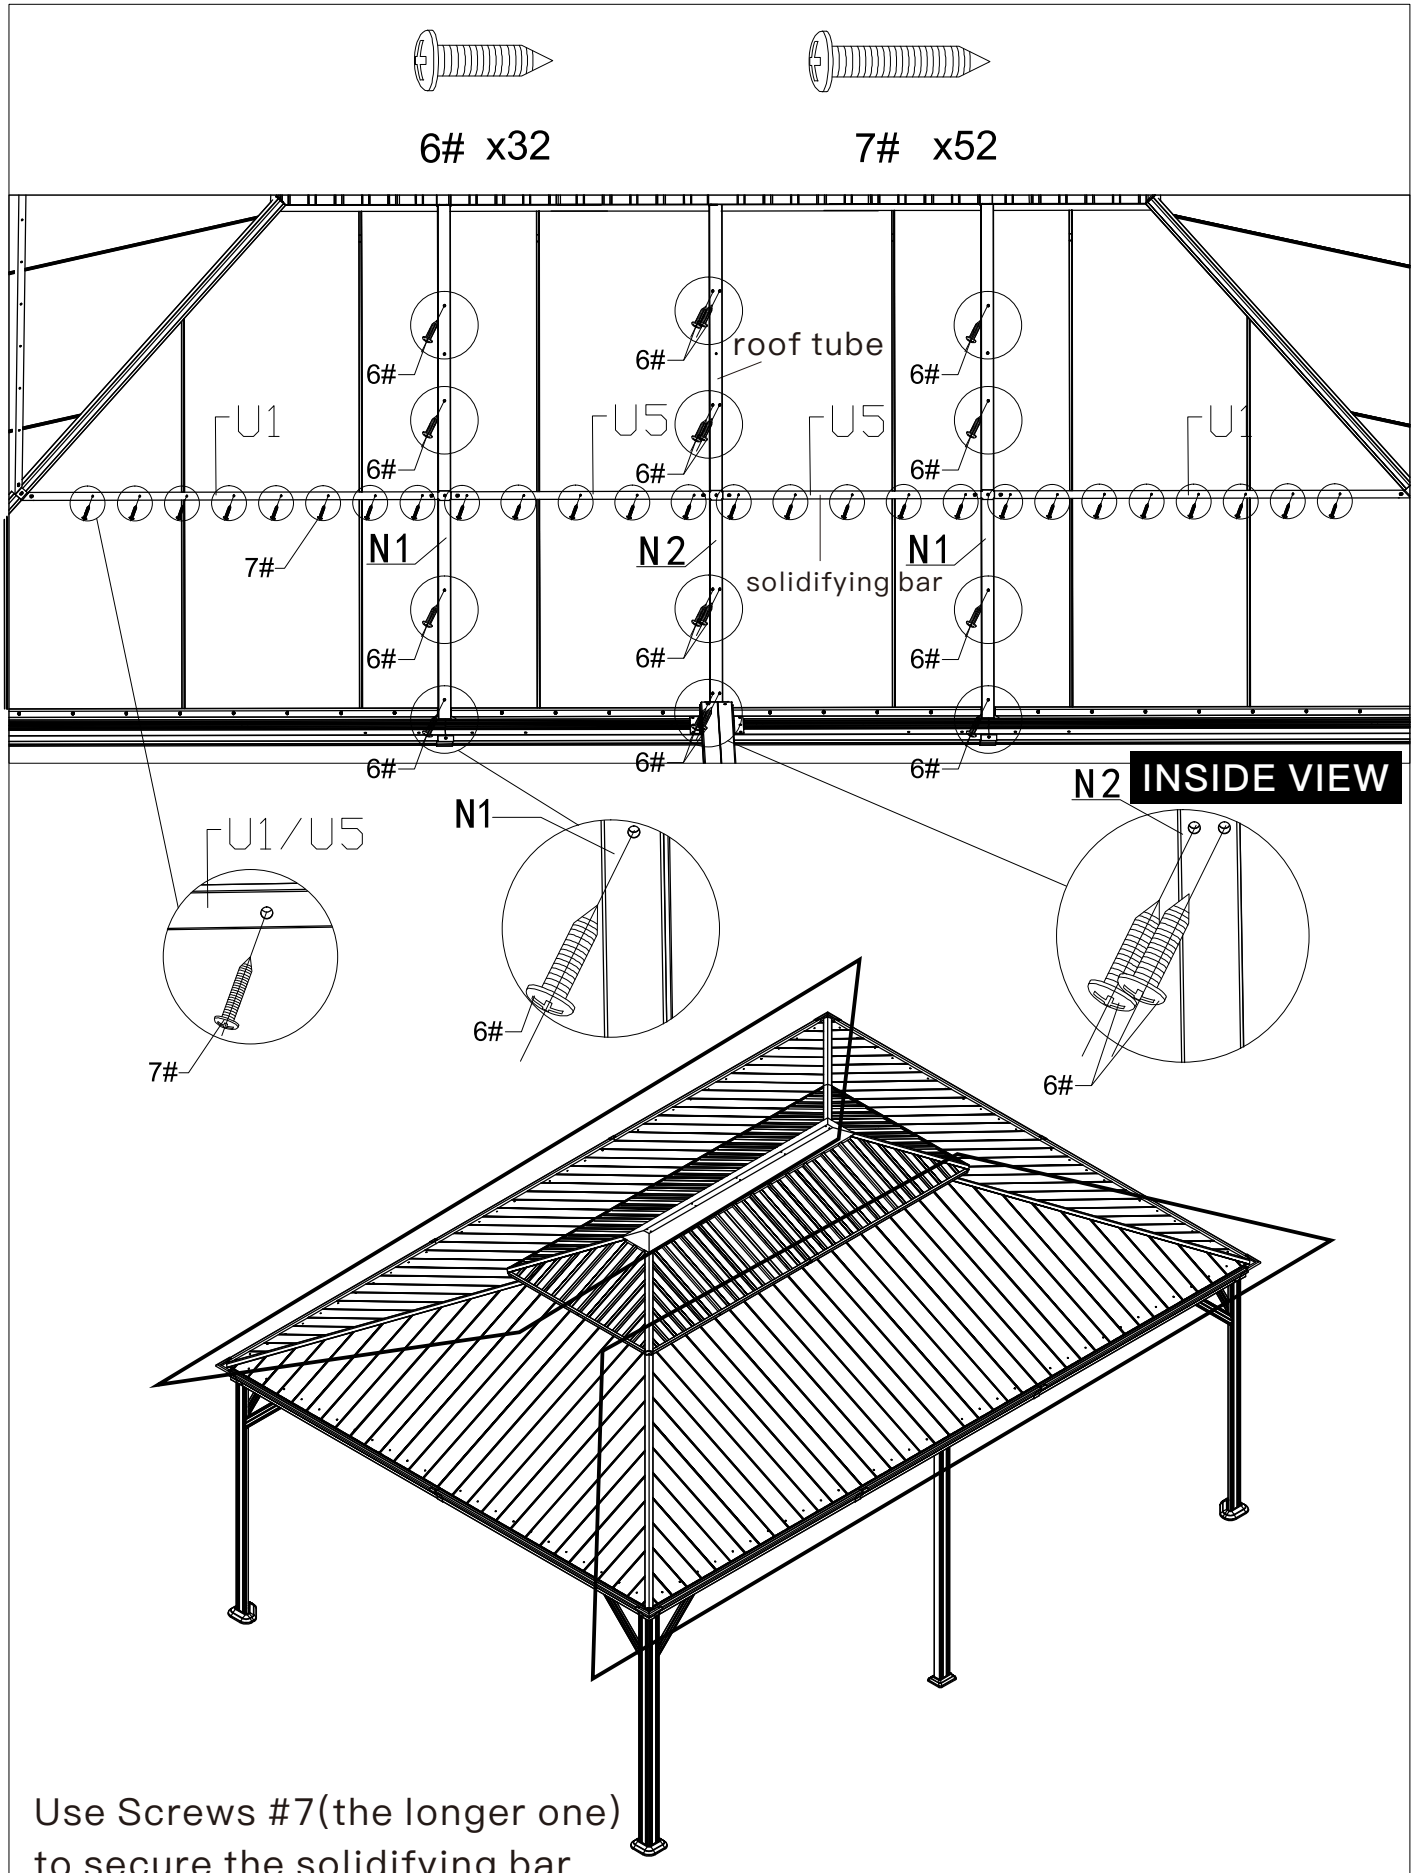



Use Screws #7(the longer one)
to secure the solidifying bar
and Screws #6(the shorter one)
to secure roof tube to the roof panels.

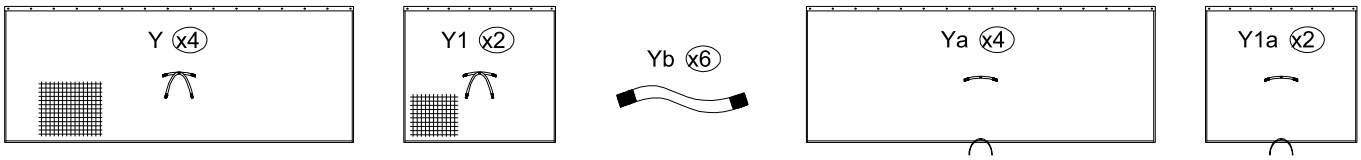


MOSQUITO NETTING AND CURTAINS ASSEMBLY

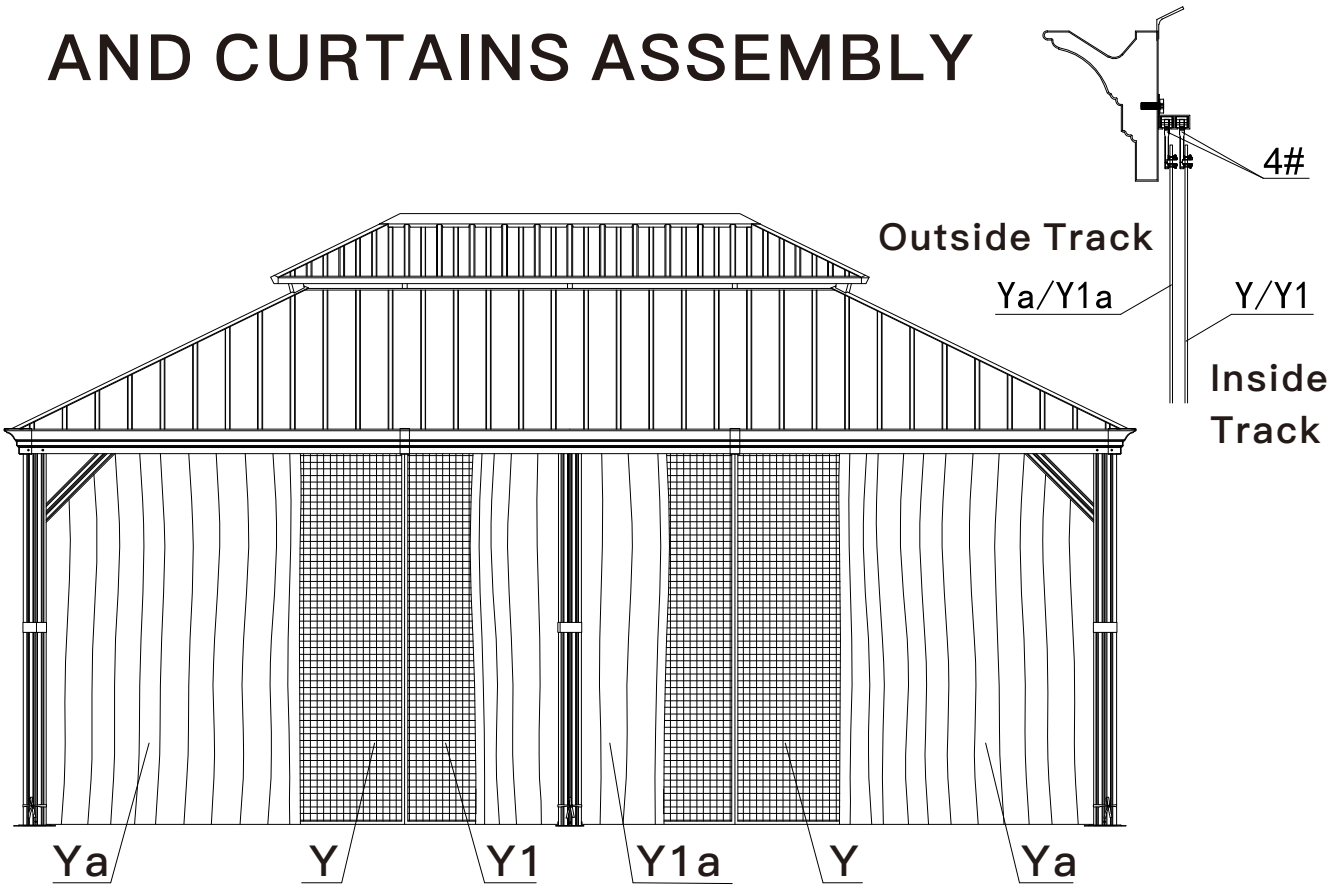


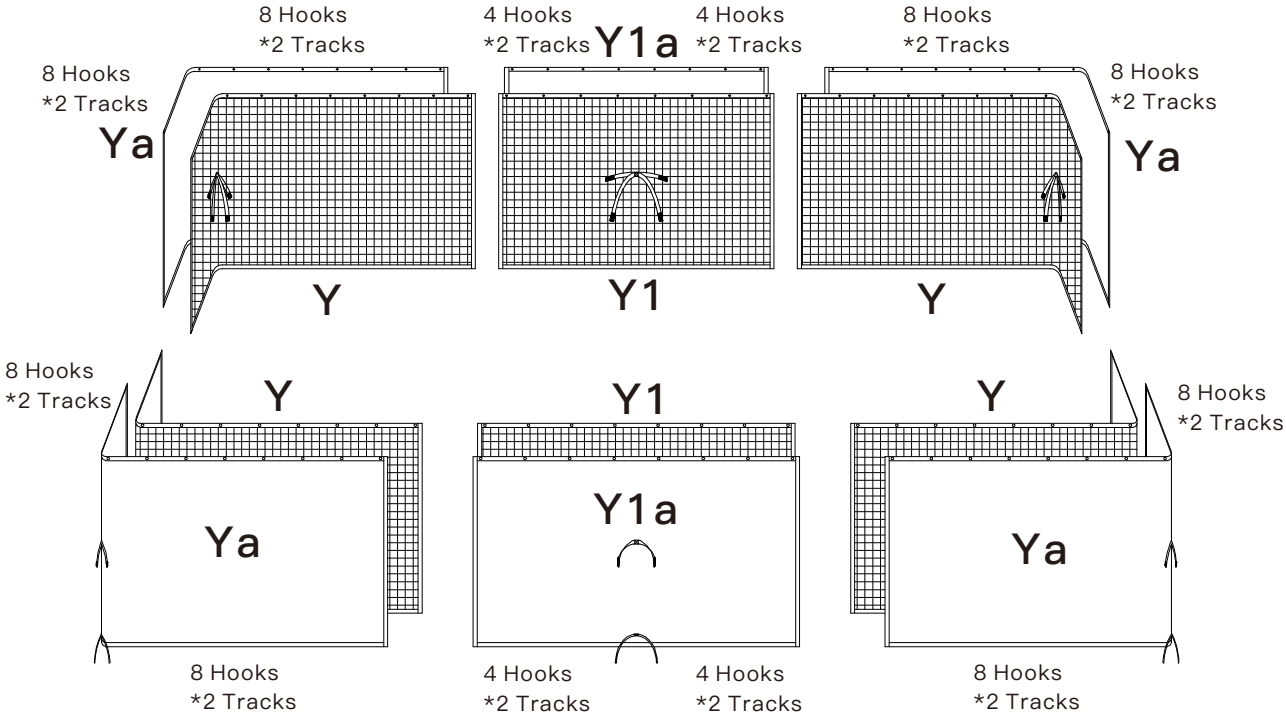


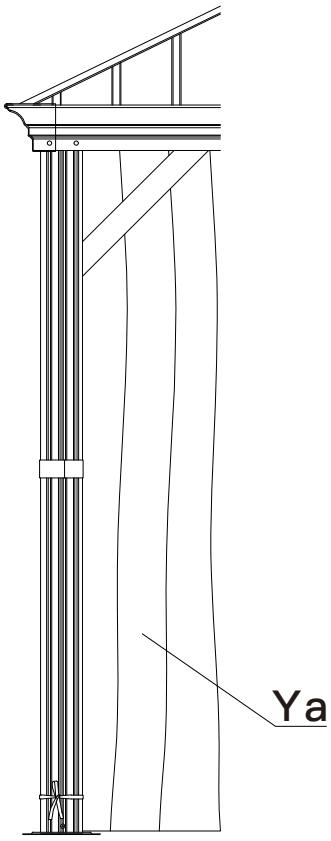

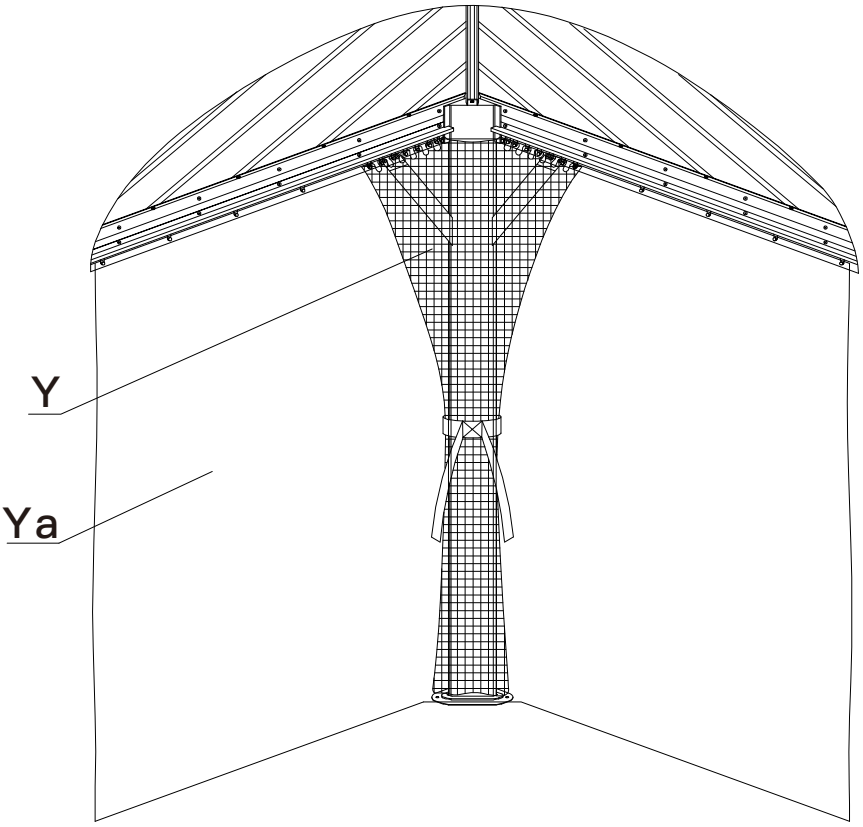

Please open your gazebo curtain whenit is incoming over 30 mph wind, and tie with Strap #Yb.

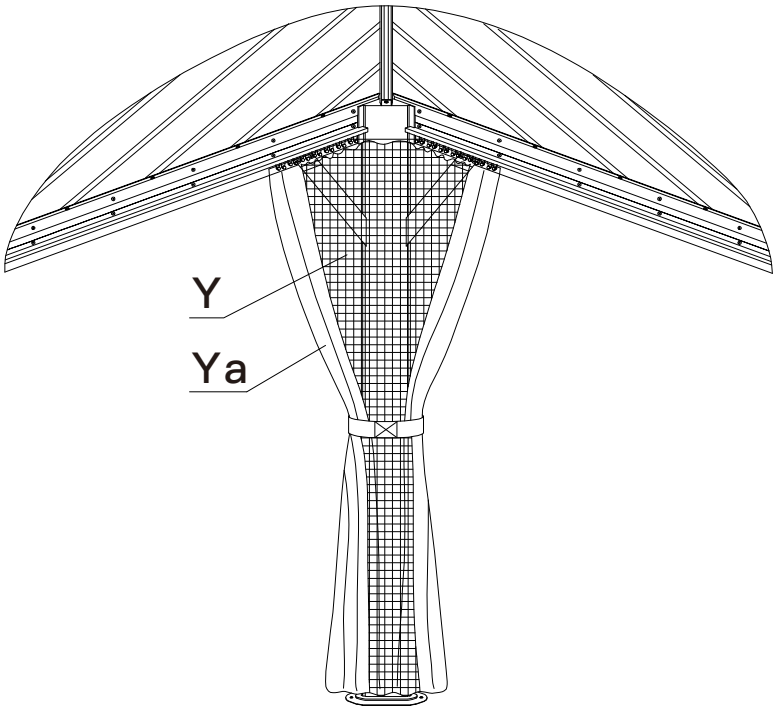

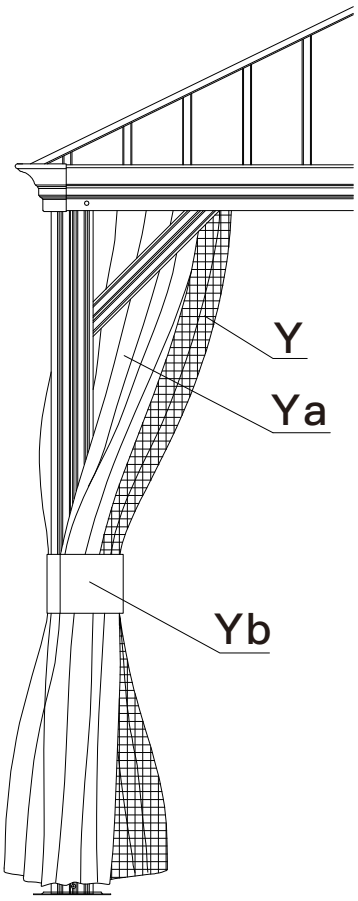

domi
outdoor living

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So,if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:

After-sales contact email:
service@domioutdoorliving.com

Business cooperation contact email:
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2023–2025 domi LLC. All Rights Reserved.