




SHOWER DOOR INSTALLATION GUIDE

SKU:BFH30MB-L
BFH32MB-L
BFH34MB-L
BFH36MB-L
BFH30CH-L
BFH32CH-L
BFH34CH-L
BFH36CH-L
BFH30BN-L
BFH32BN-L
BFH34BN-L
BFH36BN-L

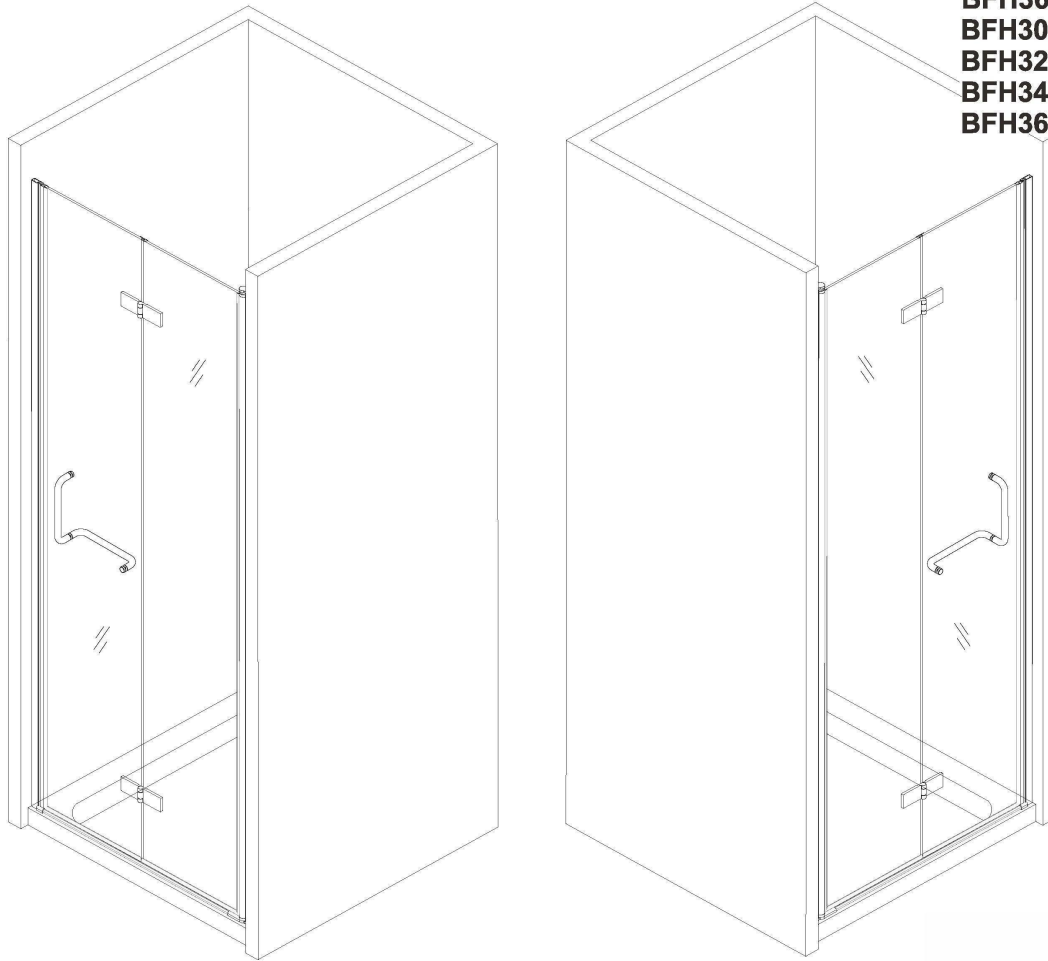

Reversible For a Left or Right Door

This show door excluding shower base.

**Customer
service:**

For more information about our products, please contact us below:



US:+1(909)929-2220




sales@waterpar.com

Do not return product to the store. Contact us directly with any questions.

Model Specific Preparation




REQUIRED:



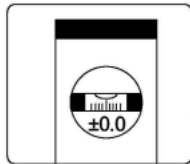


Installation wall
must be plumb

3/8" (10mm)
Out-of-Plumb
Adjustment within
the Wall Profile;
Verify threshold and
walls with a level

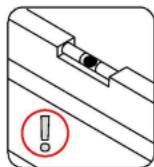


Threshold must be level

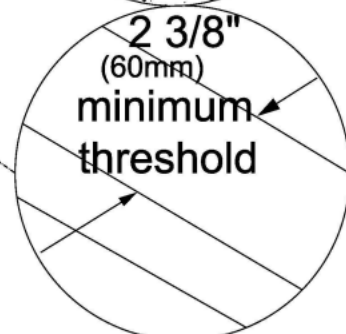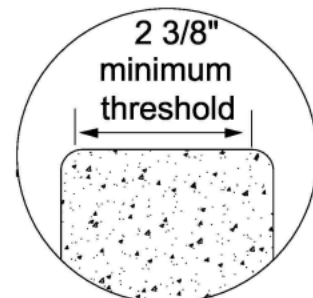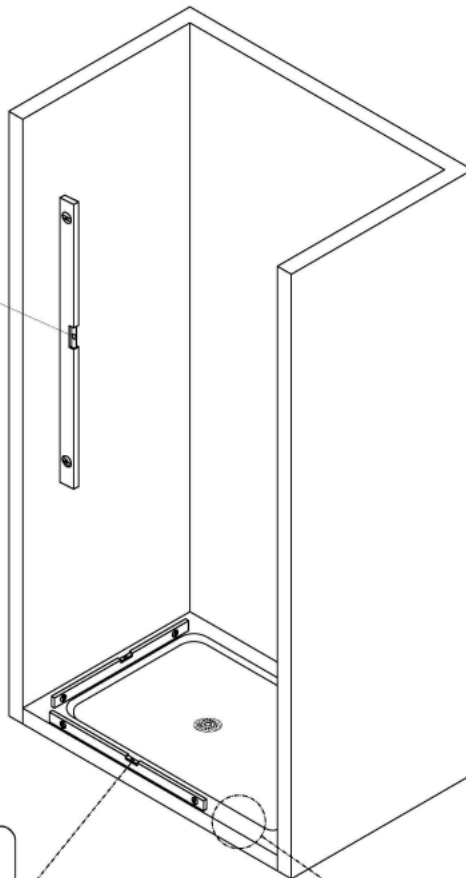

Model Specific Preparation


 **REQUIRED:**

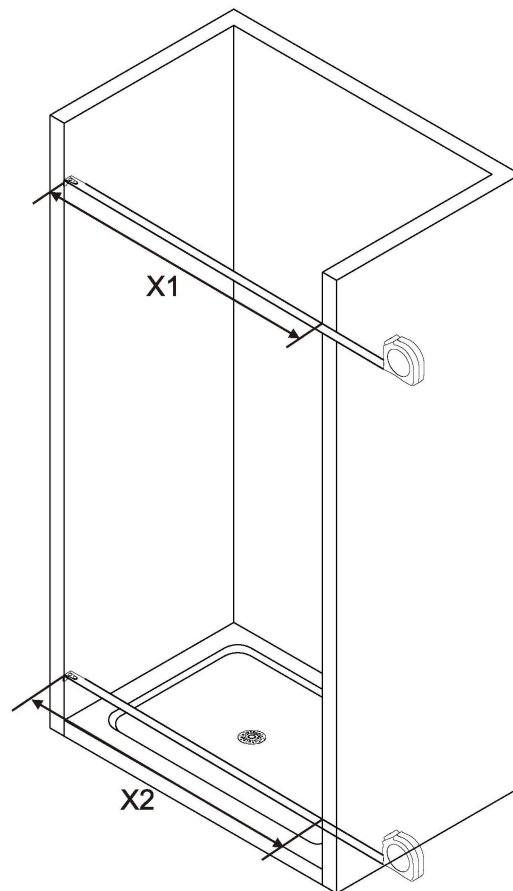

If the width of the upper and lower walls is inconsistent, please trim the wall





X1=X2

PACKAGE CONTENT

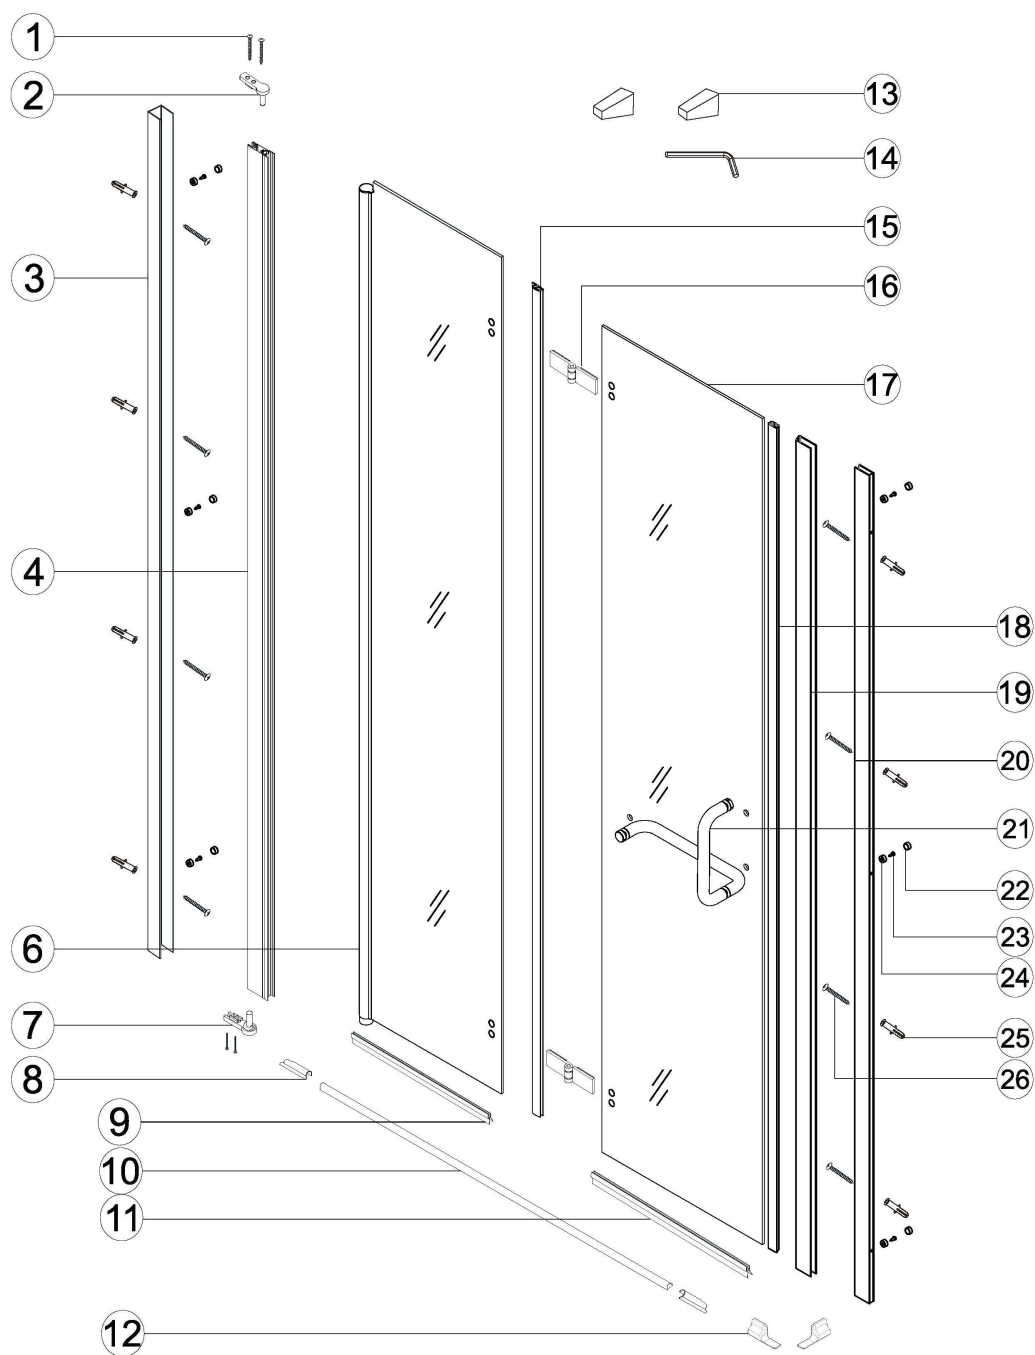

SHOWER DOOR

PACKAGE CONTENT

②	 ×1	③	 ×1	④	 ×1	⑥	 ×1
⑦	 ×1	⑧	 ×2	⑨	 ×1	⑩	 ×1
⑪	 ×1	⑫	 ×2	⑬	 ×2	⑭	 ×1
⑮	 ×1	⑯	 ×2	⑰	 ×1	⑱	 ×1
⑲	 ×1	⑳	 ×1	㉑	 ×1		








HARDWARE CONTENT

①	 ×6 ST3.5*25	②②	 ×6	②③	 ×8 ST4*12
②④	 ×6	②⑤	 ×10	②⑥	 ×10 ST4*40



2 piece for each as spare part.

TOOLS REQUIRED

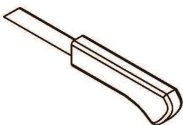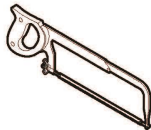Drill Bits  3.2/6mm dia. HSS	Screw Driver 	Drill 	Level 
Silicone 	Measuring Tape 	Soft Head Hammer 	Pencil 
Knife 	Sealant 	MASONRY DRILL BIT FOR TILE Ø6mm 	Safety Glasses 
Glove 	Carpenter's Squarer 	Masking or painter's tape 	Hack Saw 
Metal File 			

SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installation.







SHOWER DOOR




Model Dimensions

configuration dimensions:

A Product Height	B Model width	C Adjustable width	D Opening width
72"	30"	30"~31 1/4"	22 1/2"
	32"	32"~33 1/4"	24 1/2"
	34"	34"~35 1/2"	26 1/2"
	36"	36"~37 1/4"	28 1/2"

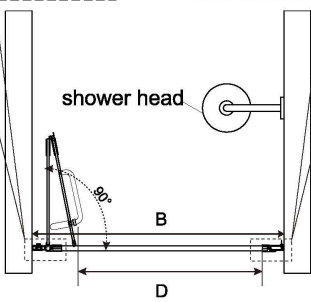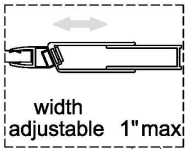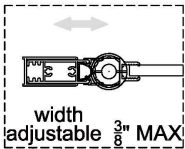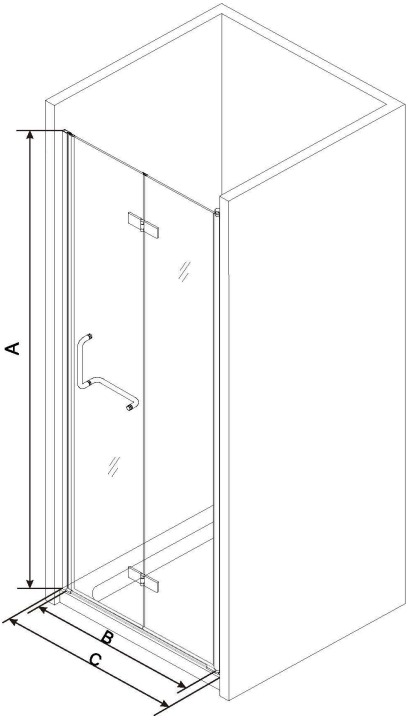

Left pivot

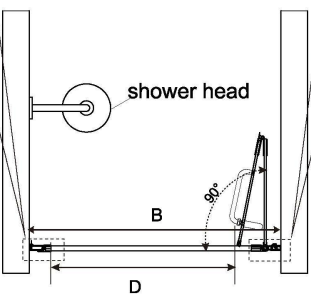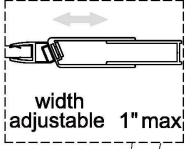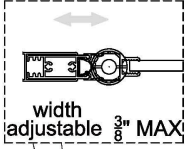

Right pivot

NOTE



This model is reversible for right or left-hand door installation. The left-hand door installation is shown throughout this manual. For the right-hand door installation, simply begin on the opposite wall and reverse the orientation of the installation steps shown.

1-1

Wall Jamb Installation

NOTE

Confirm the Wall jamb is plumb with a level before marking the location of the holes for drilling.

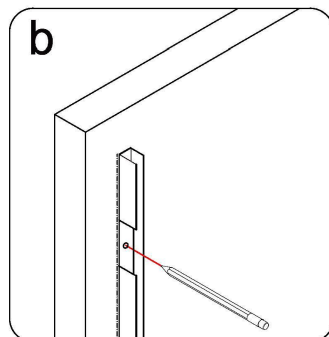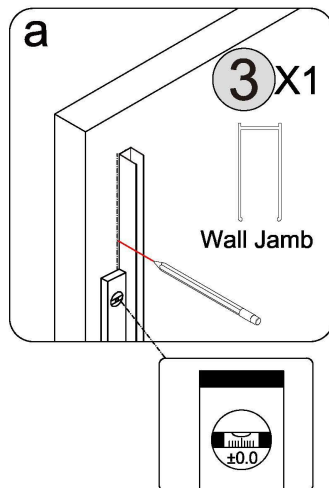






20mm [25/32"]

NOTE

Center the Wall jamb (3) on the Threshold.
Leave 20mm [25/32"] from edge of shower pan.

1-2

Wall Jamb Installation

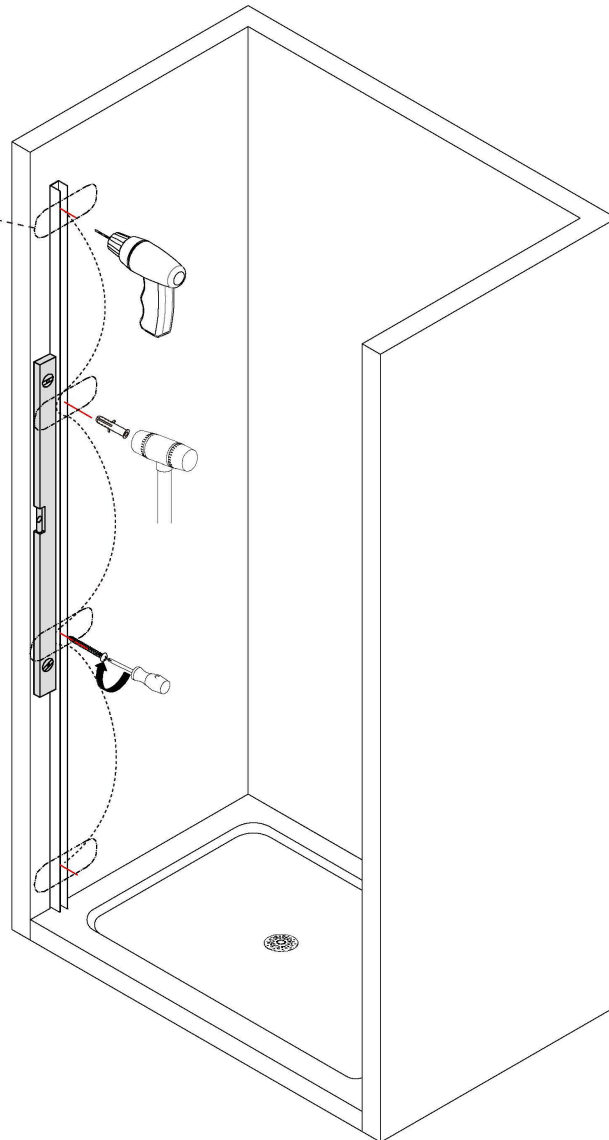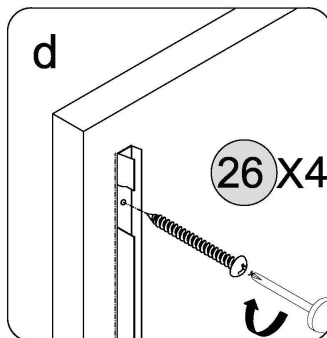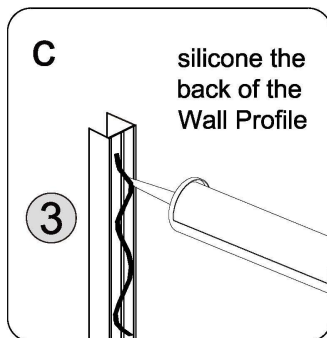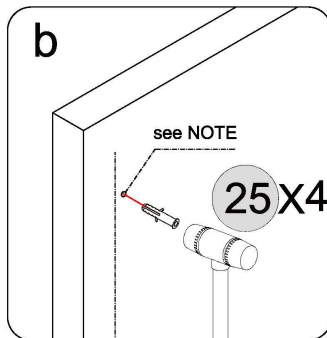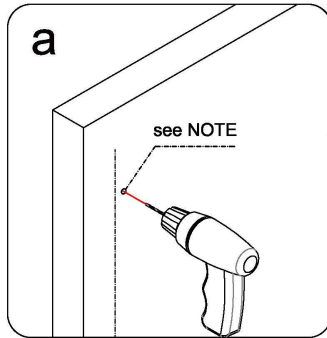


NOTE

- If a Stud is present behind the wall:
drill a Ø3/16" (4mm) hole up to the stud,
drill an Ø1/8" (3mm) pilot hole into the stud and
use the ST4.0 x 40mm Pan Head Screws (26)
OR
- If No Stud is present behind the wall:
drill a Ø1/4" (6mm) hole and insert the Wall Anchors
and use the ST4.0 x 40mm Pan Head Screws.


1-3

Wall Jamb Installation

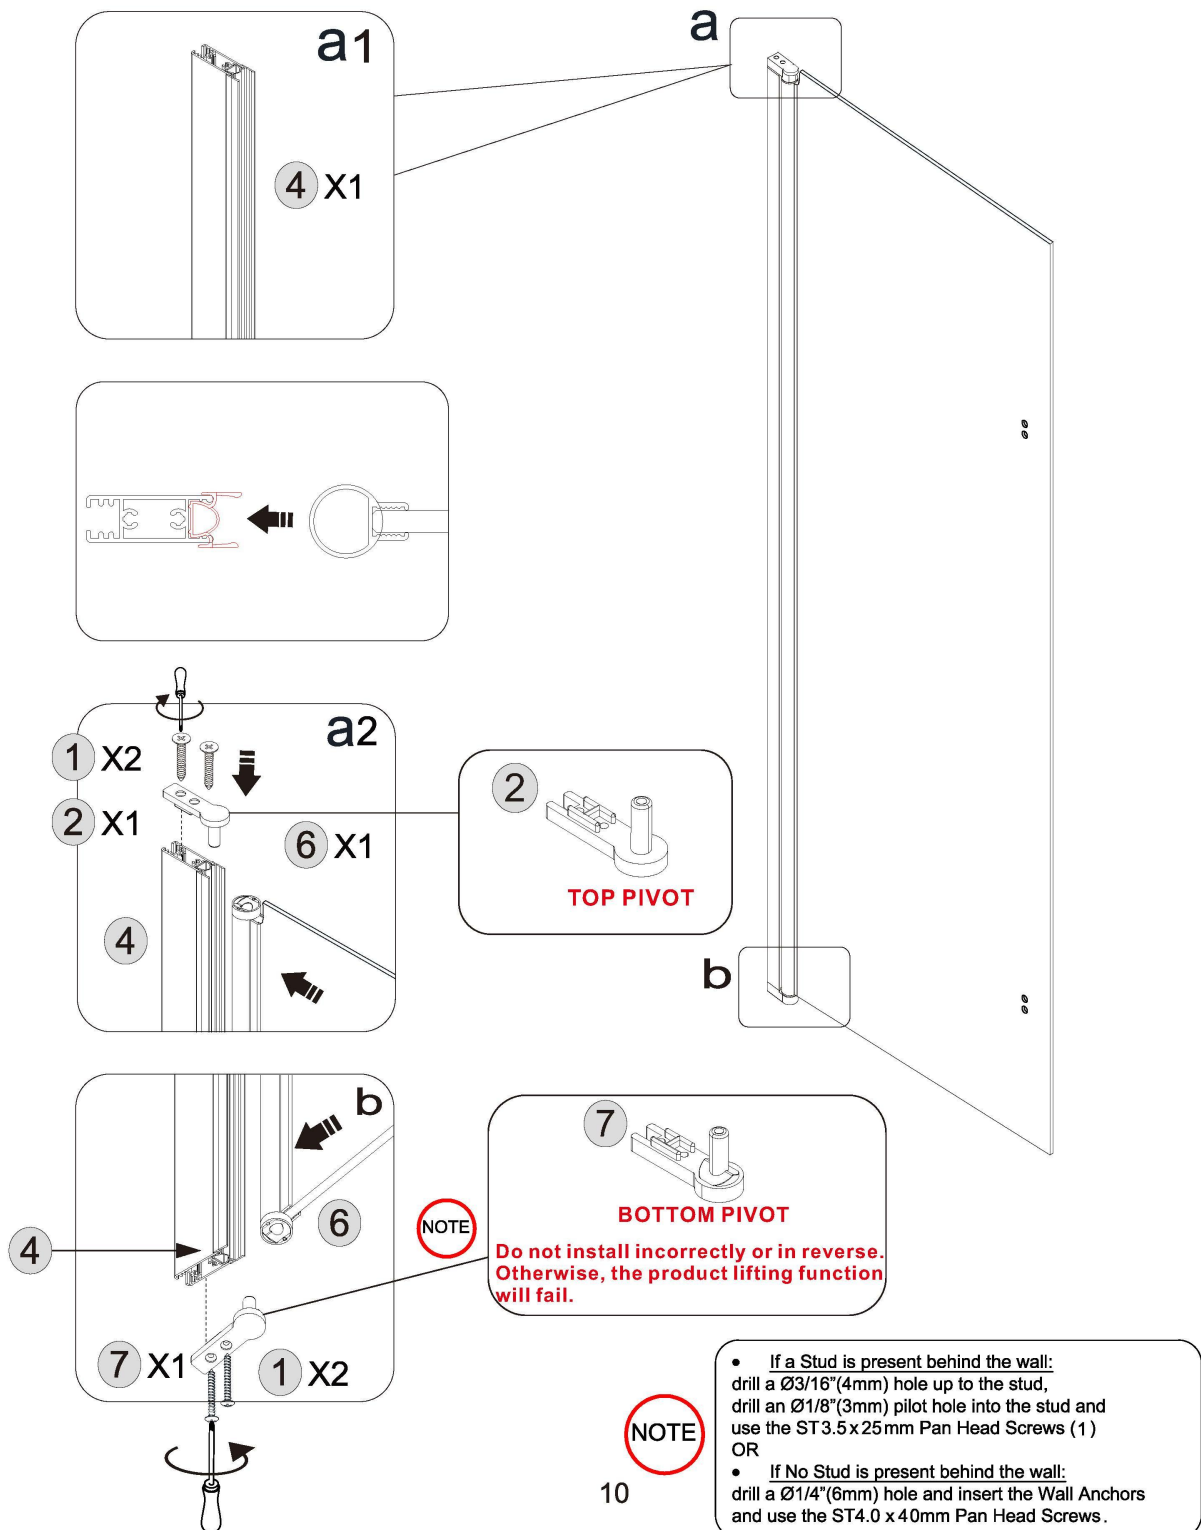


2

Door panel Installation

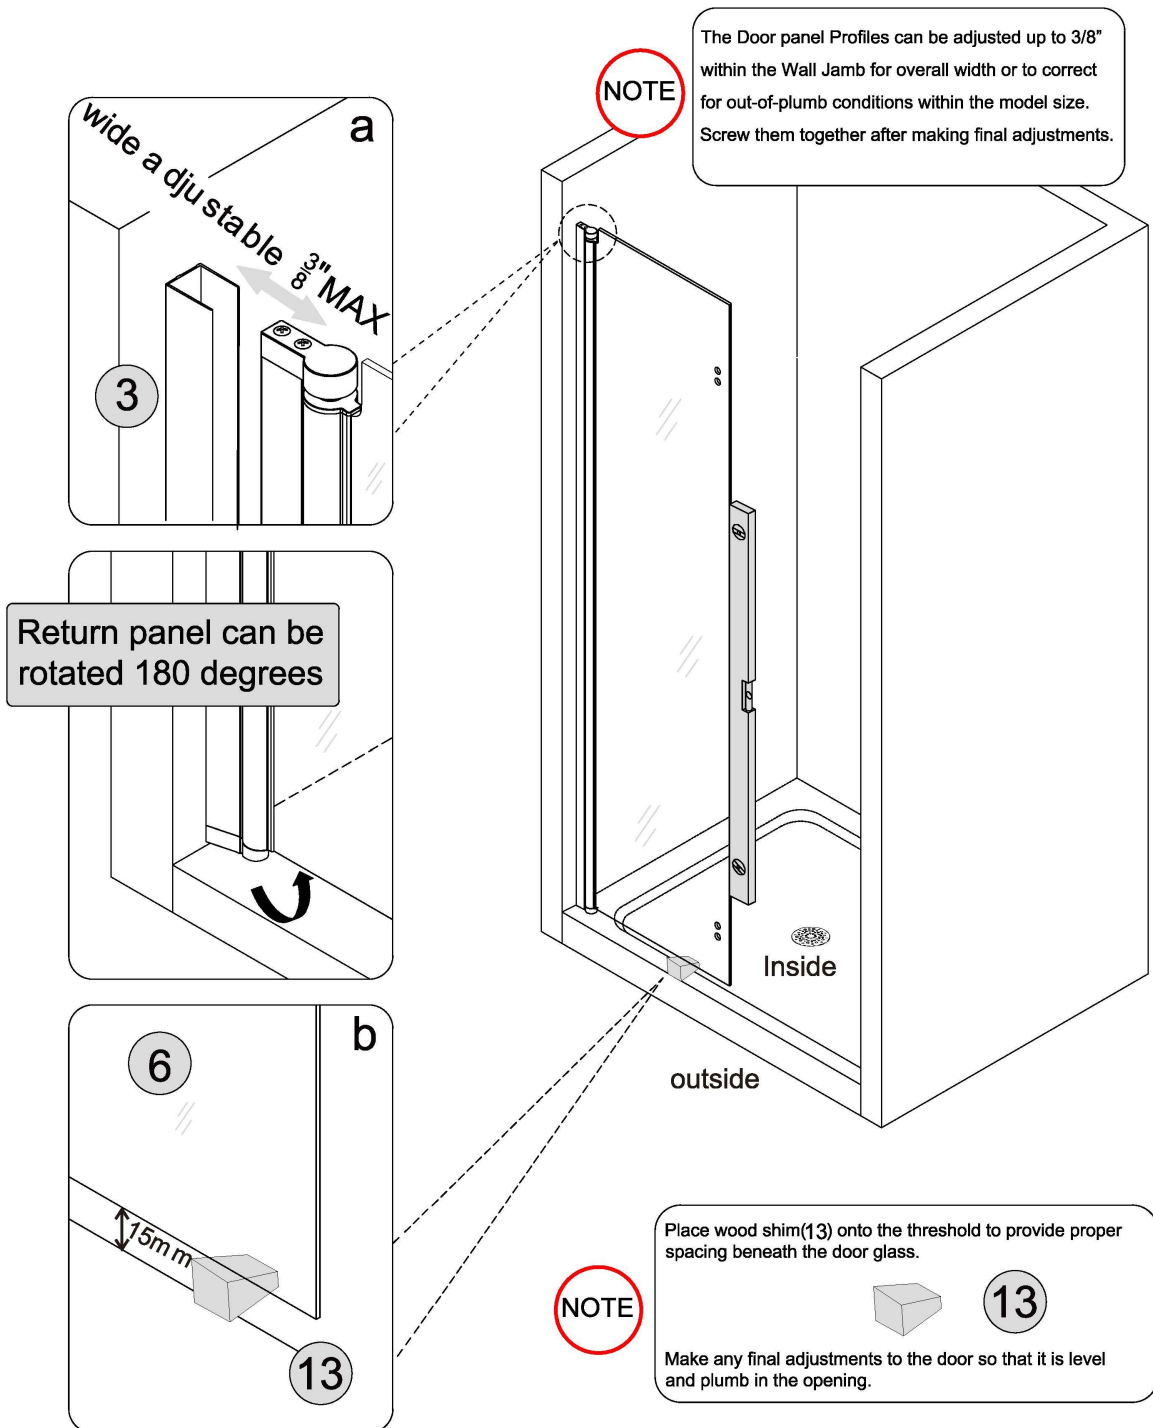


3

Glass-to-Glass Hinge Assembly Installation

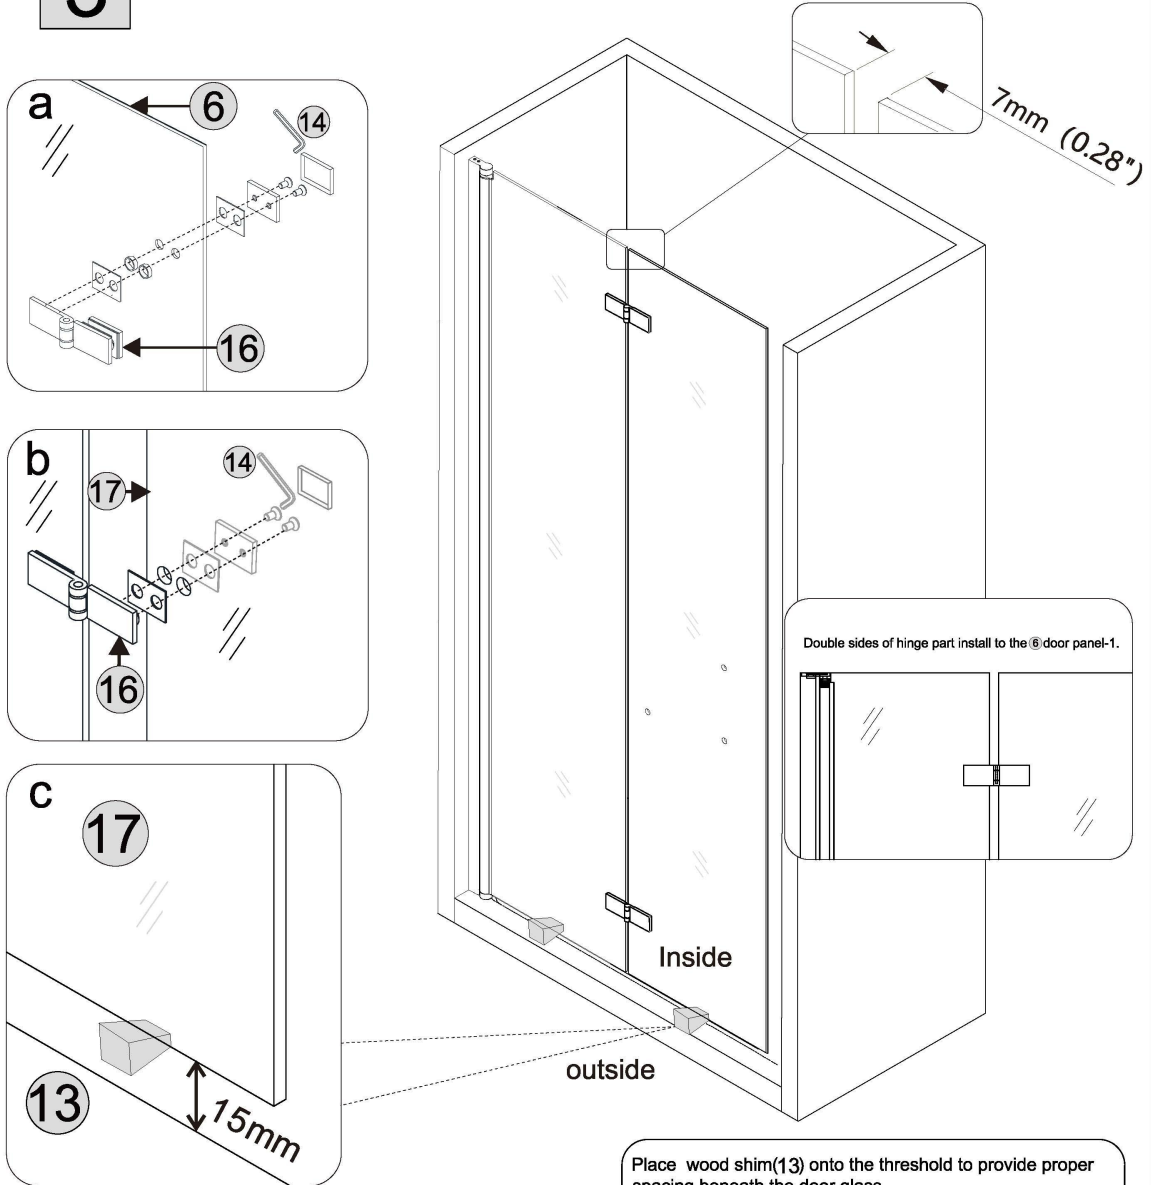


NOTE

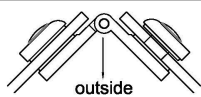

Ensure the orientation of both Hinge Assemblies are the same.
Make sure the Hinge Assemblies (16) are square and flatly installed on the glass

NOTE

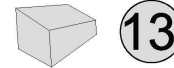

Place wood shim(13) onto the threshold to provide proper spacing beneath the door glass.





Make any final adjustments to the door so that it is level and plumb in the opening.



To prevent glass-to-metal contact, confirm the gaskets are present between the Hinge Assemblies and the Door Glass.

4

Magnetic strip Install to door panel 2

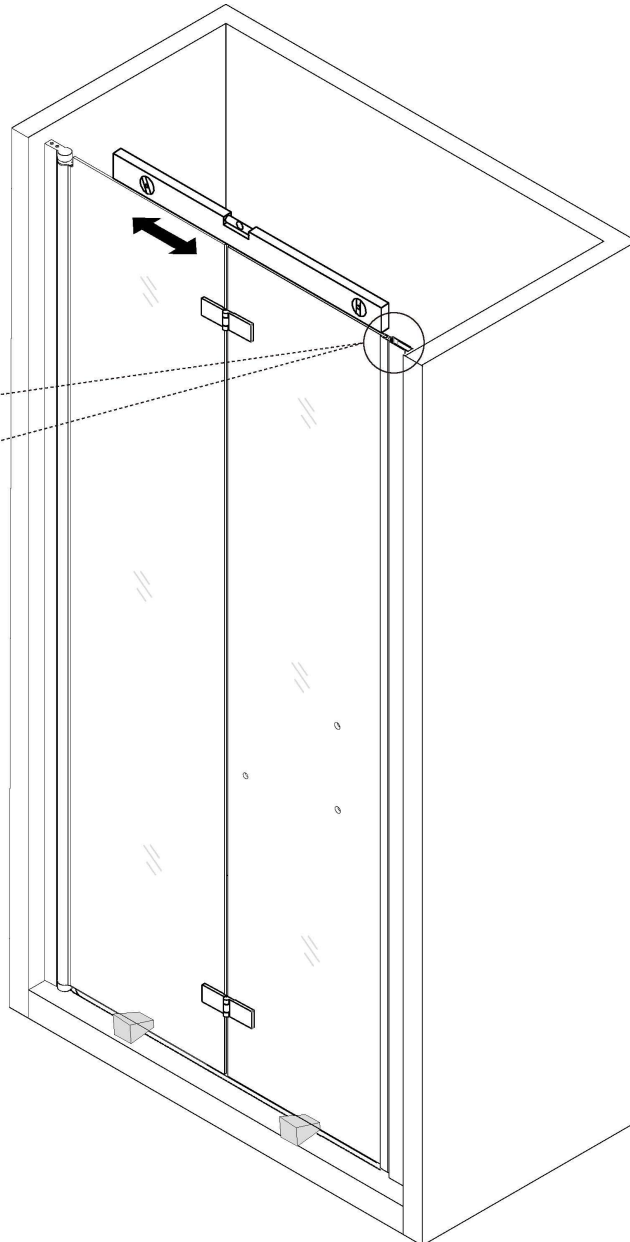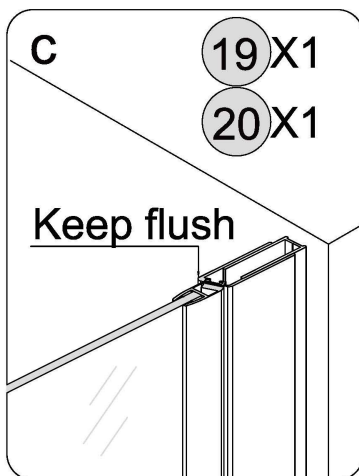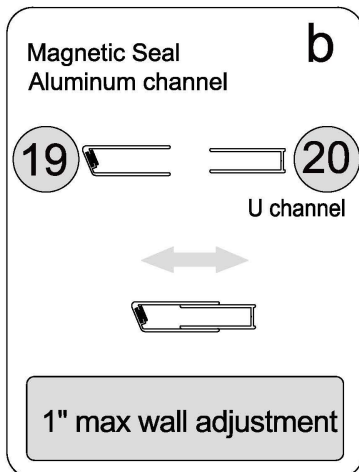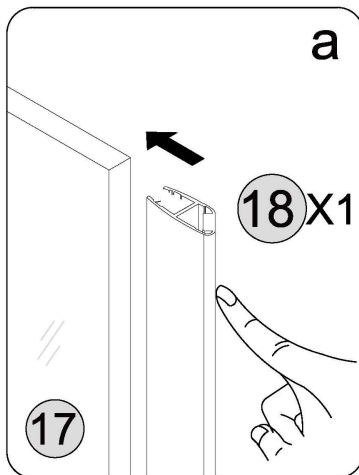


NOTE

- 1、Magnetic strip Install to door panel-2.
- 2、Put 18, 19, 20 together before fasten the glass door, make all these parts keep flush.




5 Fixed the door panel

NOTE

After final adjustments, drill $\varnothing 1/8"$ holes in the Wall Jamb (3).
Drill only through the first layer of the Door panel Profile and install the ST4.0x12mm Pan Head Screws (23) using the Decorative Covers and Washers (22)

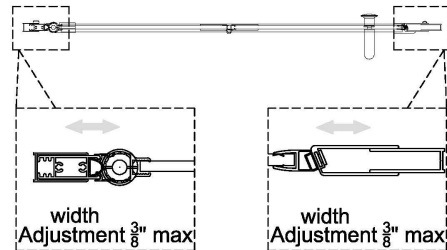

Inside View

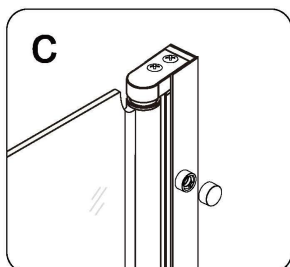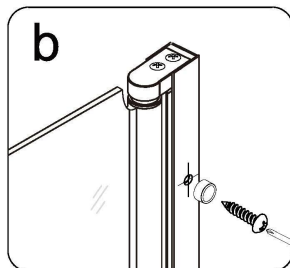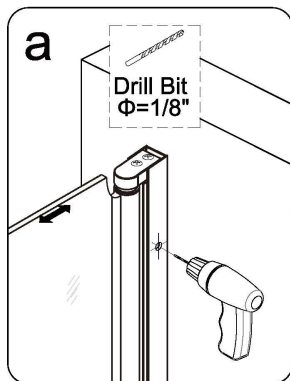


Keep flush

24X3

23X3


22X3

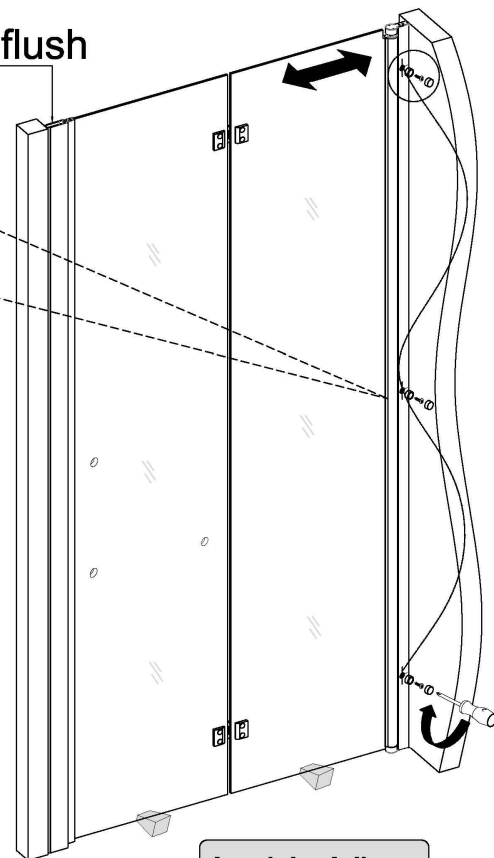

Inside View


NOTE

Include the washers when installing the ST4.0x12mm Pan Head Screws (23) and Decorative Caps (22).

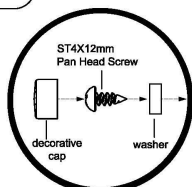

6

Determine the 19 & 20 position





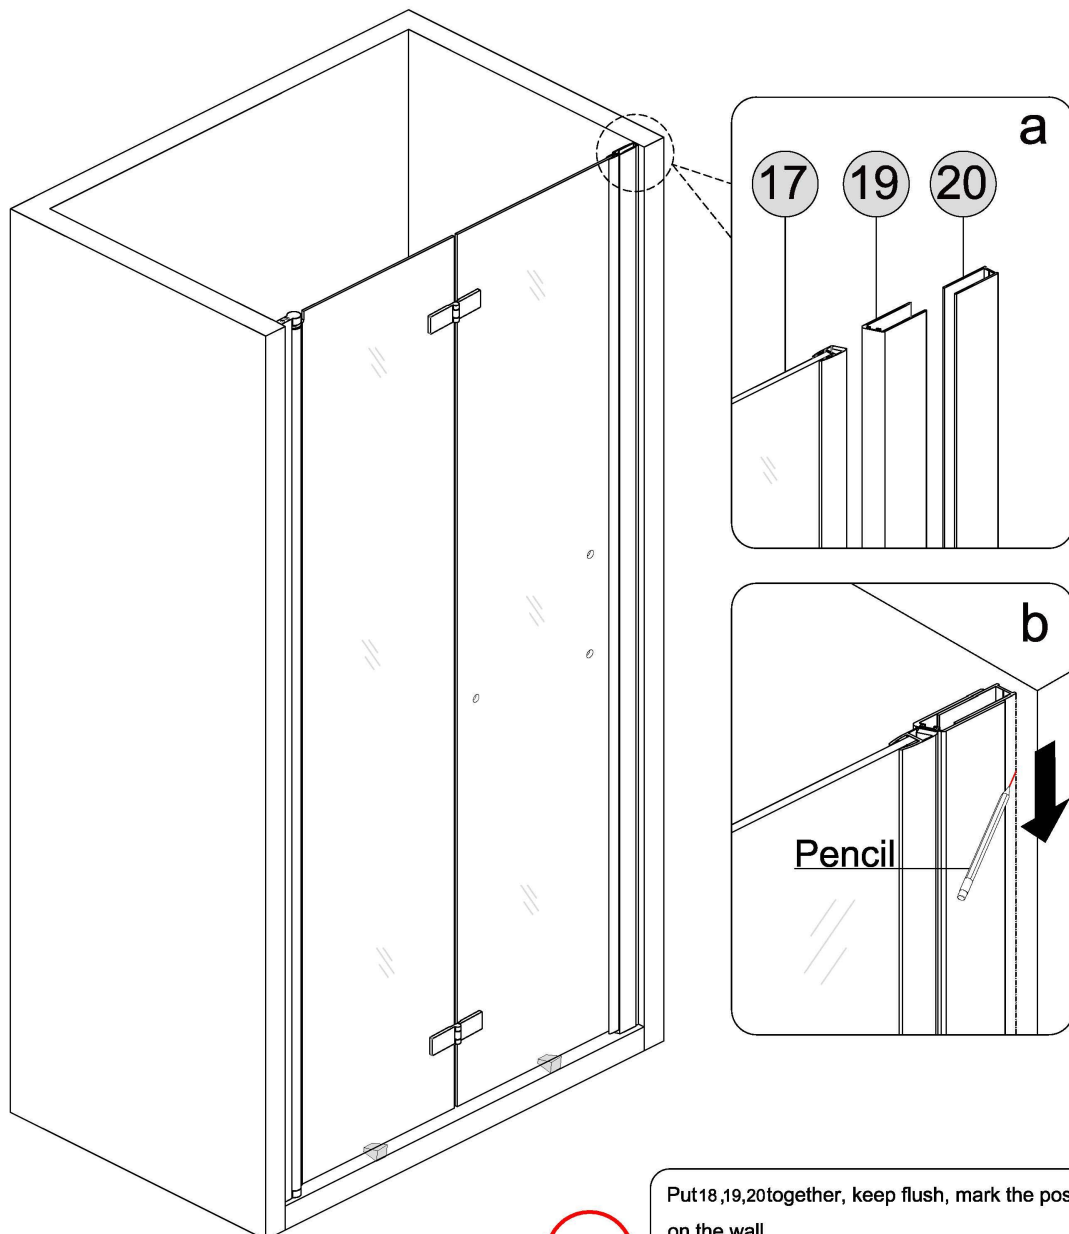


NOTE

Put 18, 19, 20 together, keep flush, mark the position on the wall.

Center the Magnetic Seal Aluminum channel (19) and U channel (20) on the Threshold.

7 U Aluminum profile installation

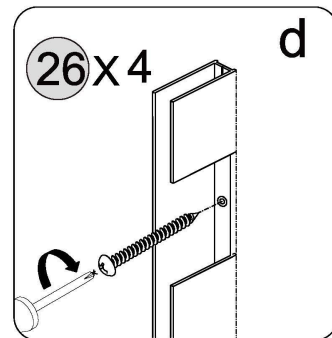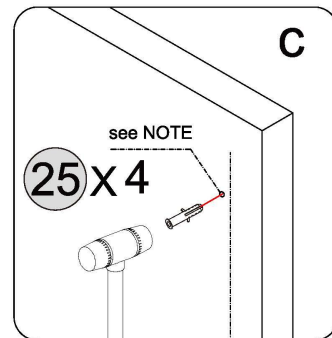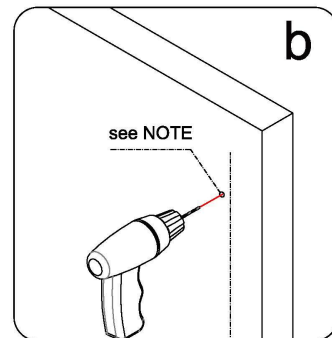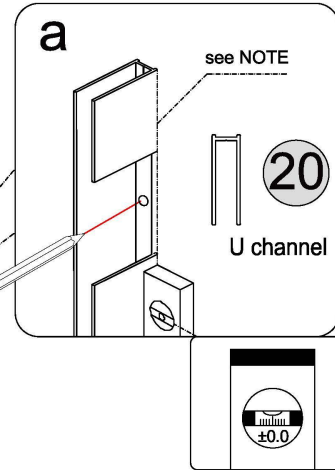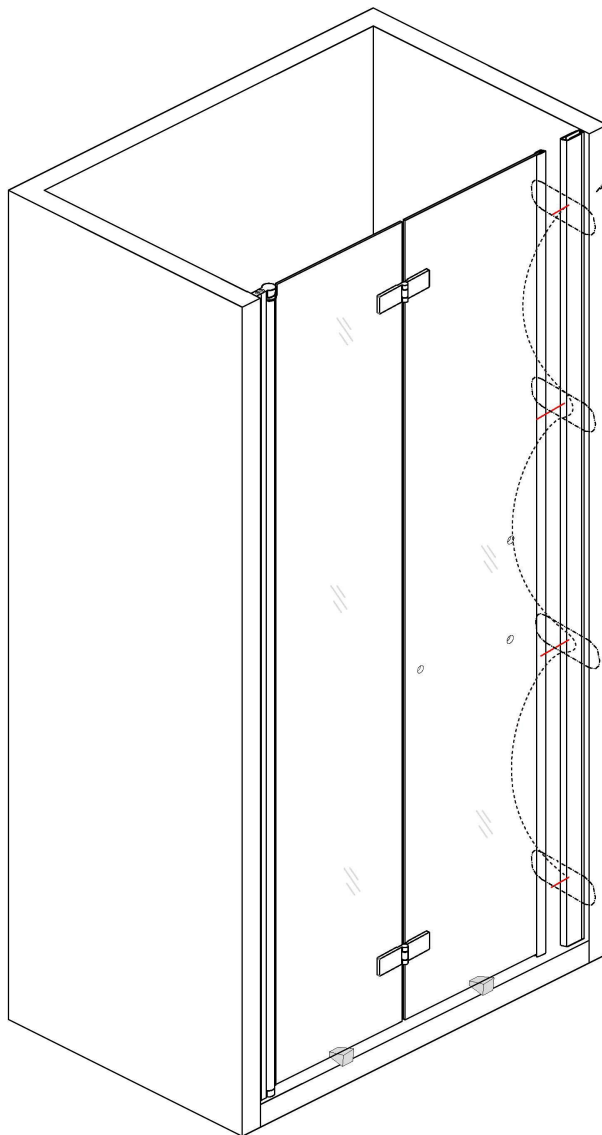


NOTE

- If a Stud is present behind the wall:
drill a Ø3/16"(4mm) hole up to the stud,
drill an Ø1/8"(3mm) pilot hole into the stud and
use the ST4.0 x 40mm Pan Head Screws (26)
OR
- If No Stud is present behind the wall:
drill a Ø1/4"(6mm) hole and insert the Wall Anchors (25)
and use the ST4.0 x 40mm Pan Head Screws (26).







8

Magnetic Seal Wall Jamb Installation

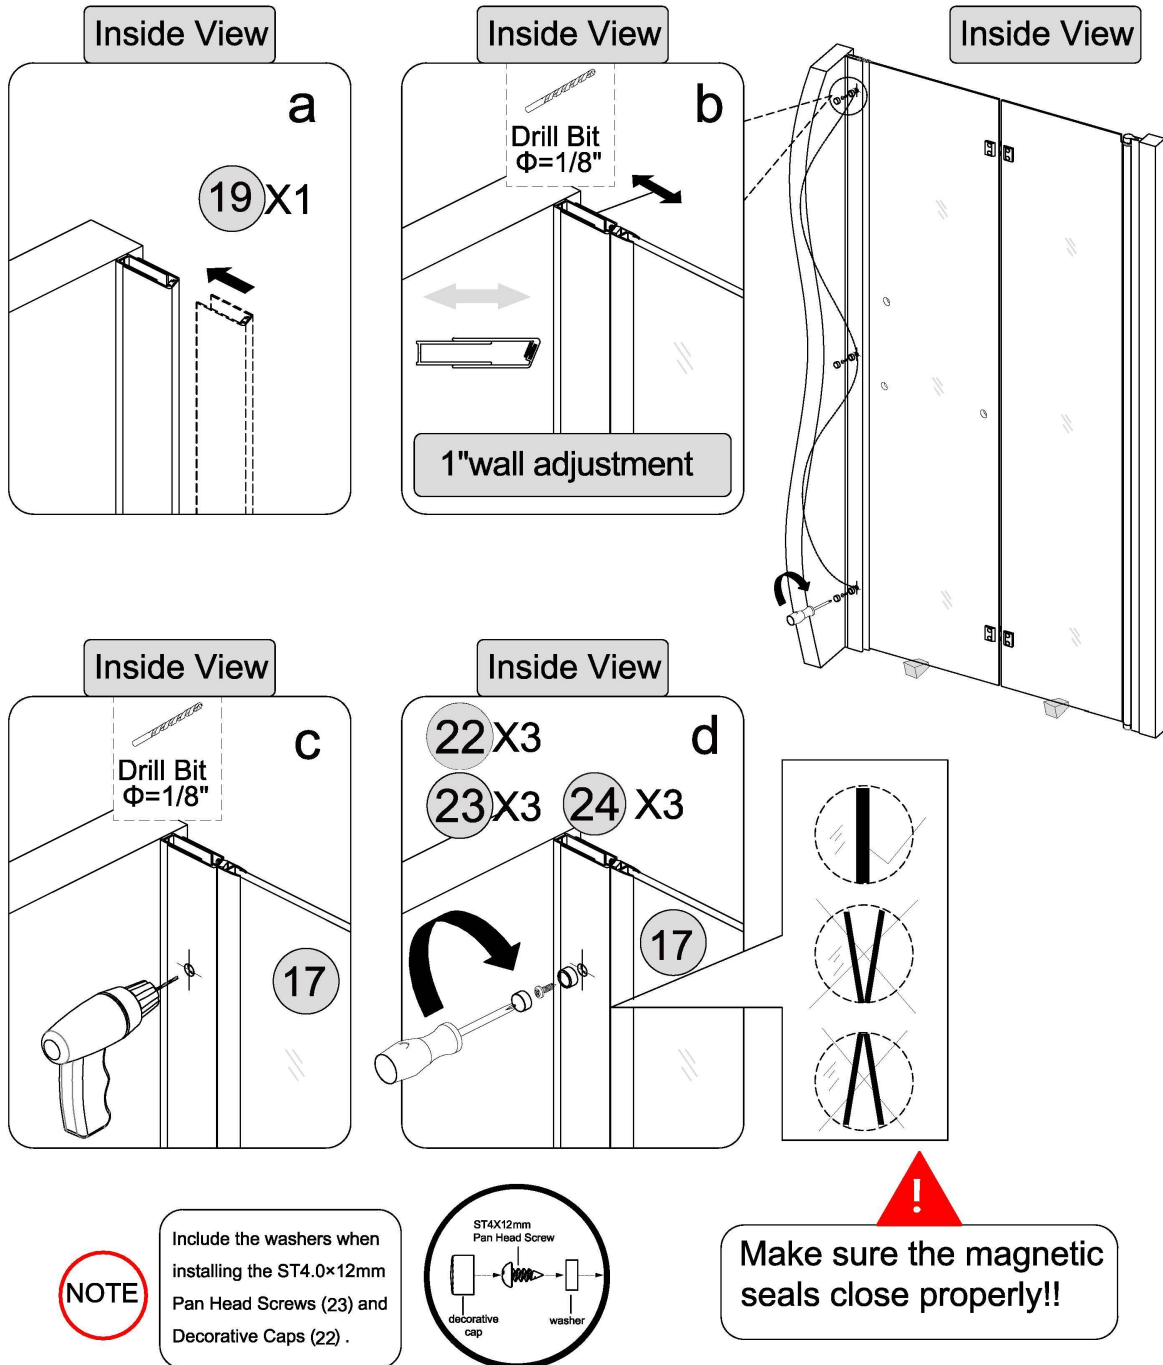

9

handle Installation

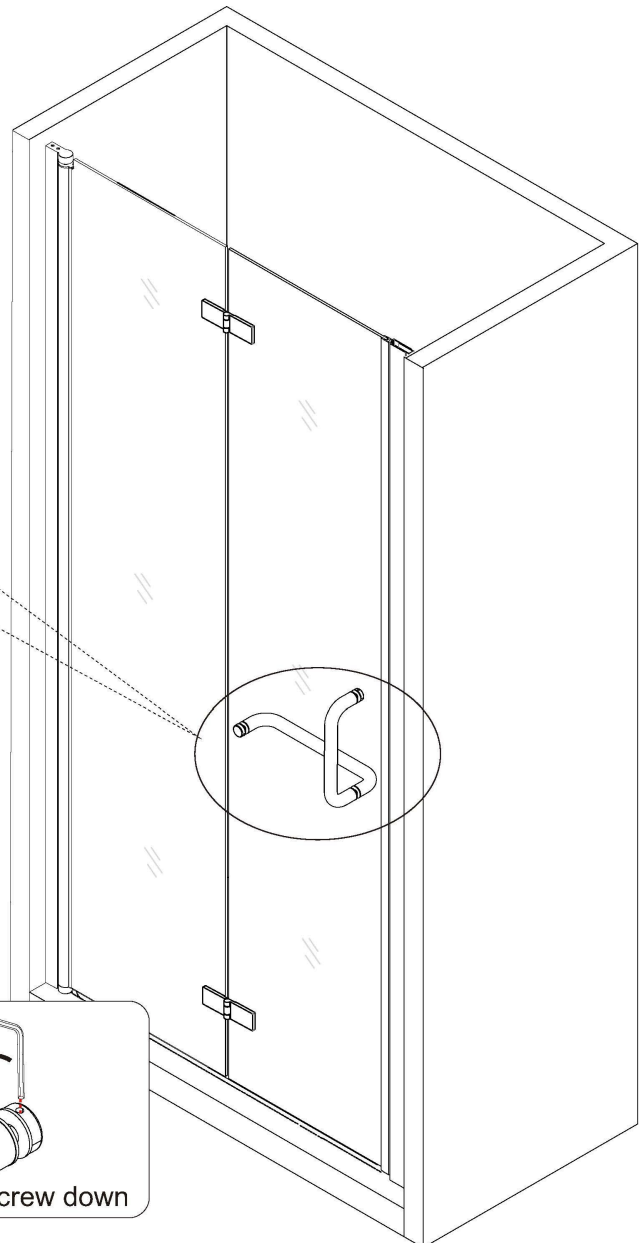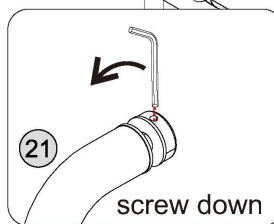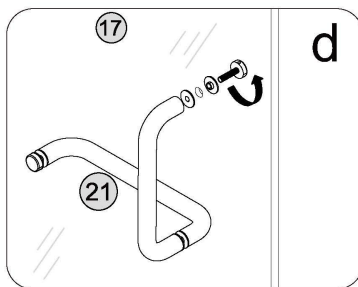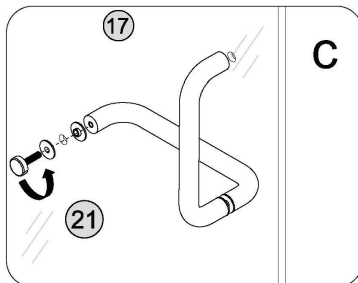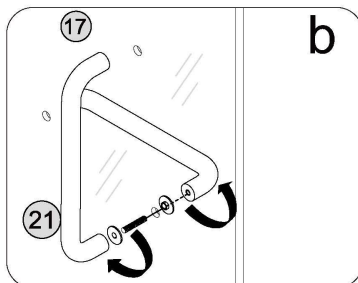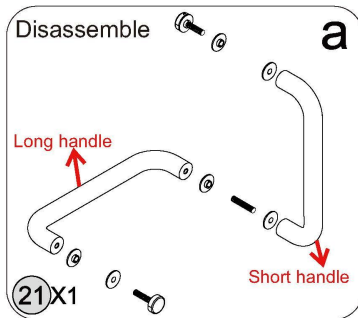


NOTE

Remove the wood shims(21)
and open the door.

The short handle is vertically installed on the outside.
The long handle is installed horizontally inside.

10

Top Cover Cap & Vertical Gasket Installation

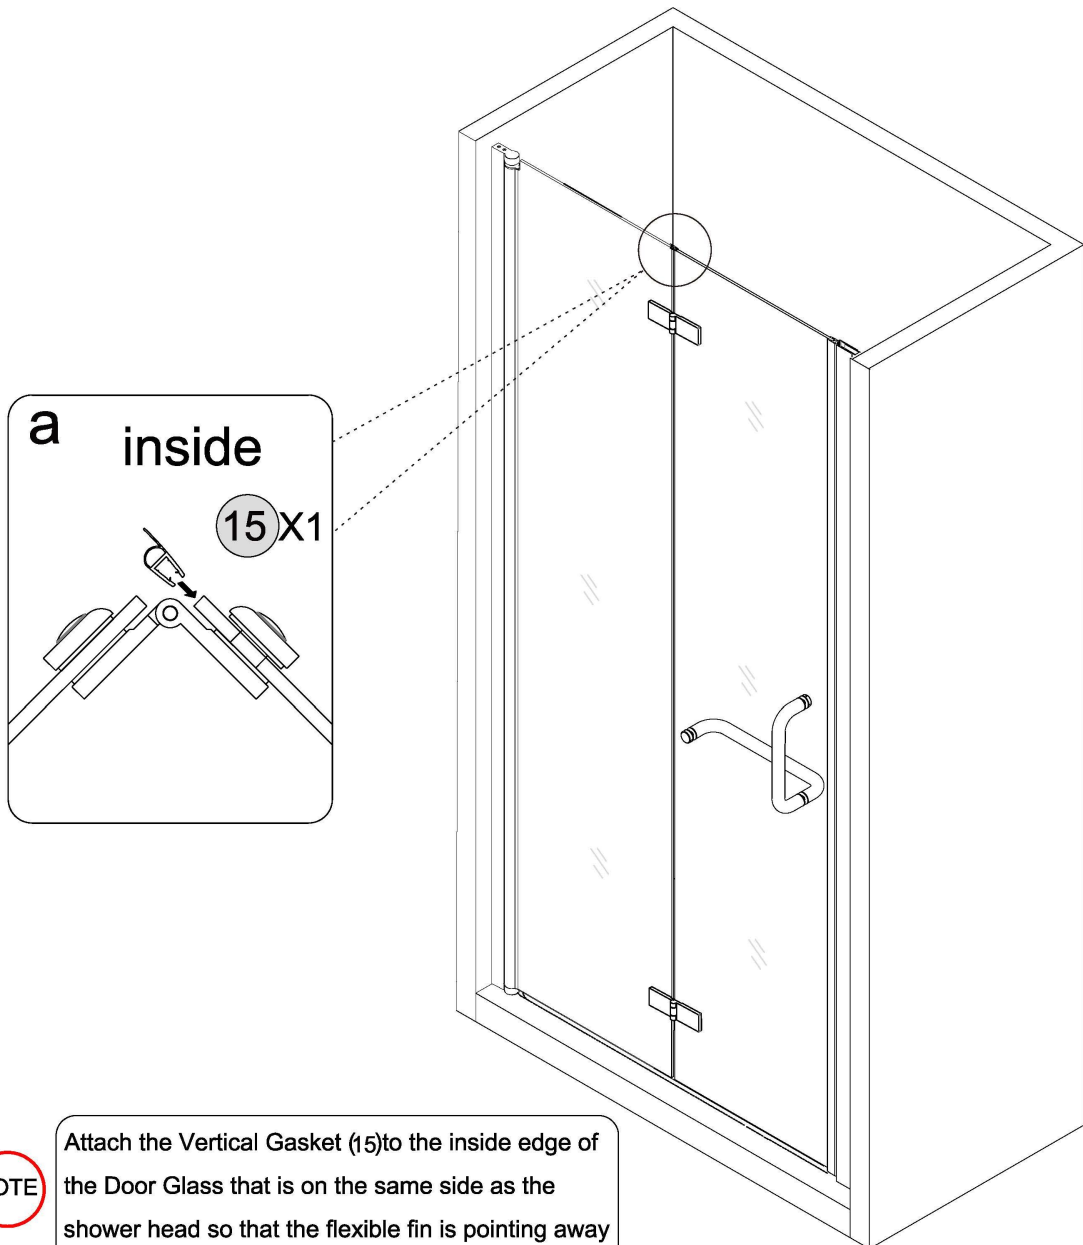


NOTE


Attach the Vertical Gasket (15) to the inside edge of the Door Glass that is on the same side as the shower head so that the flexible fin is pointing away from the water source.

11

Bottom Gasket Installation

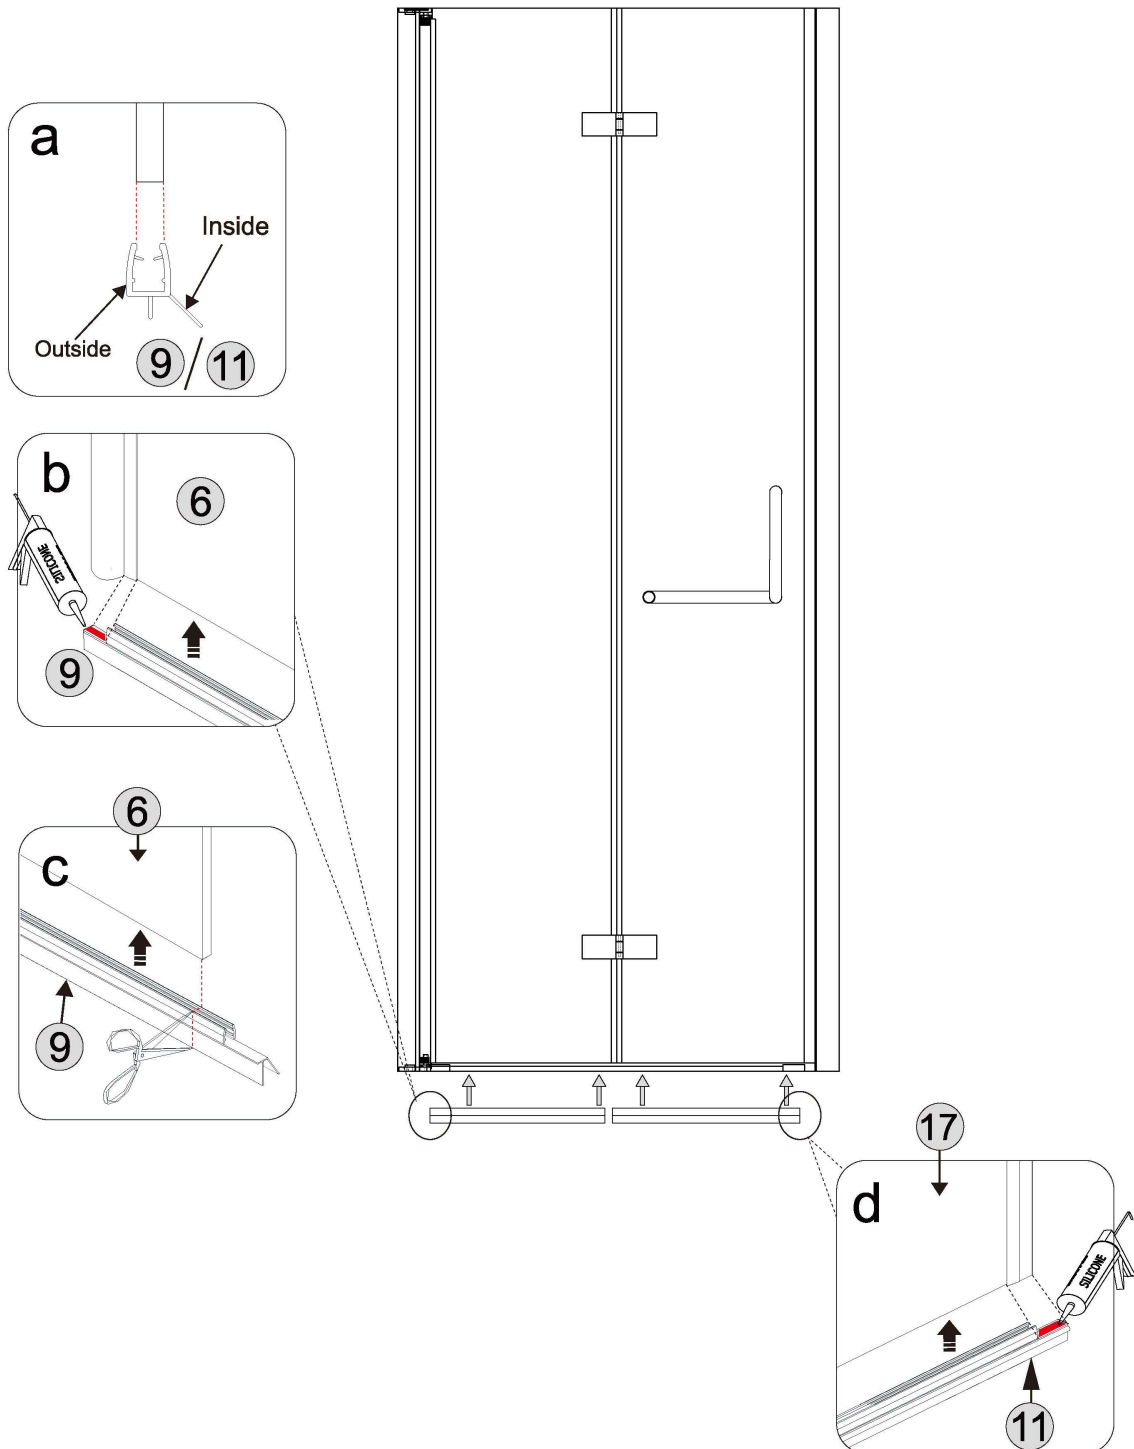

12 Alu.Threshold Installation

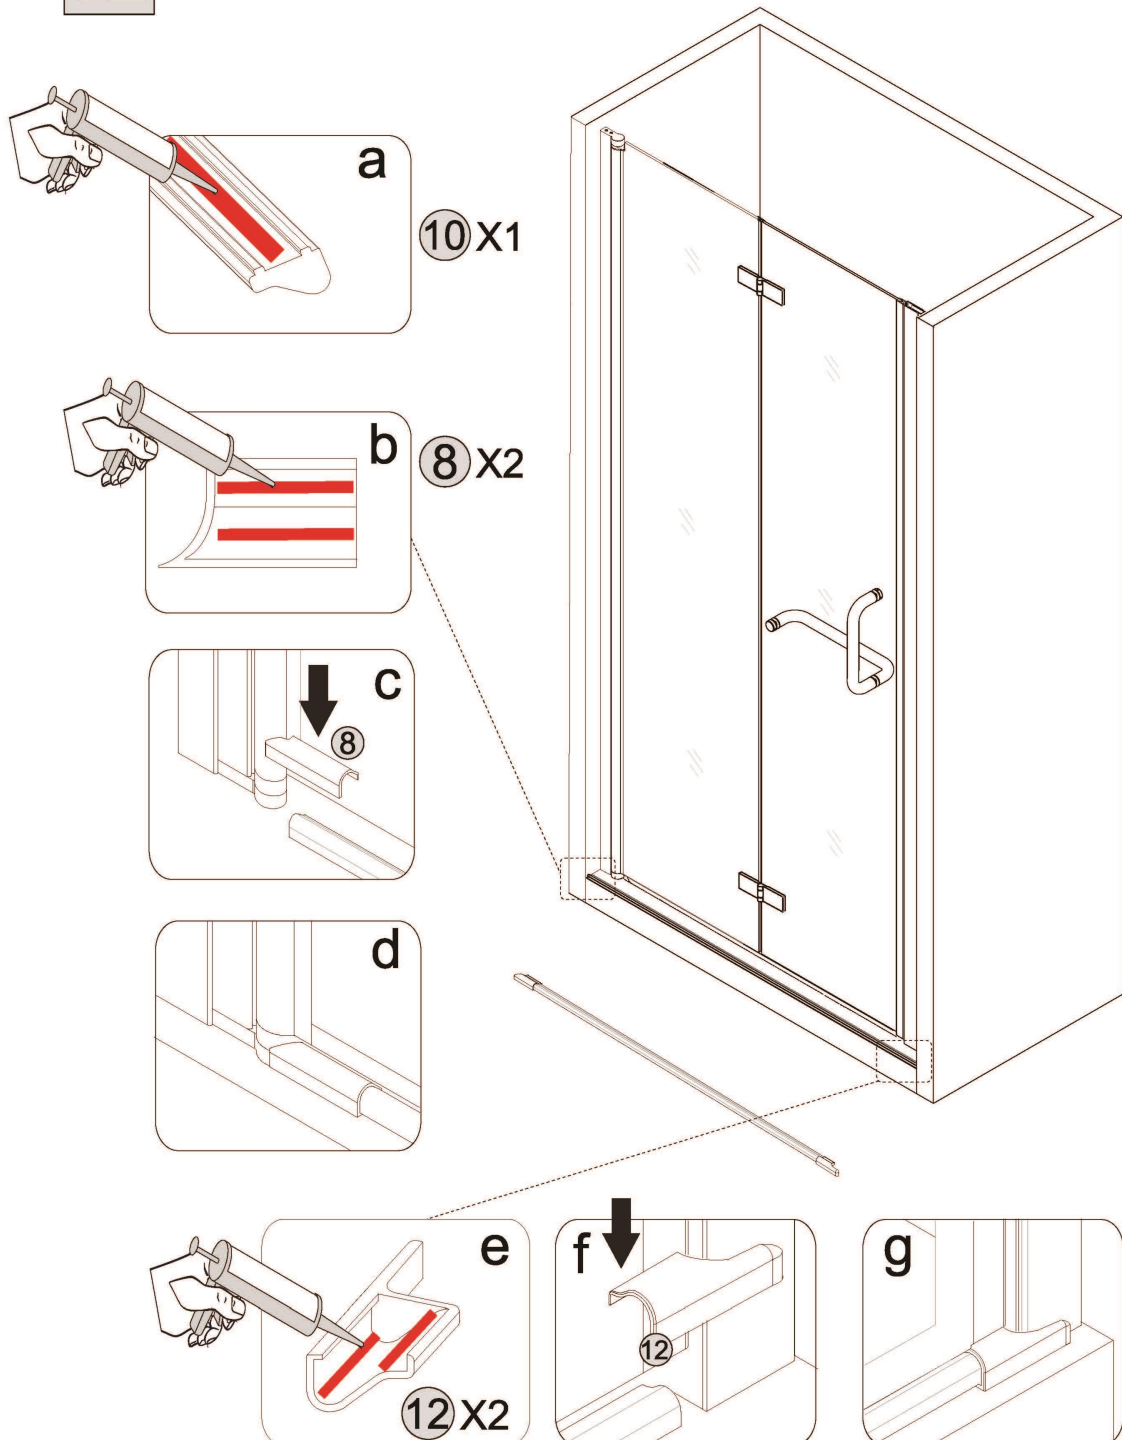


13 SEALING



NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Ensure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the wall Jamb(10)&(12)and Water seal (20) .

! Allow 24 hours for the silicone to cure before using the shower.

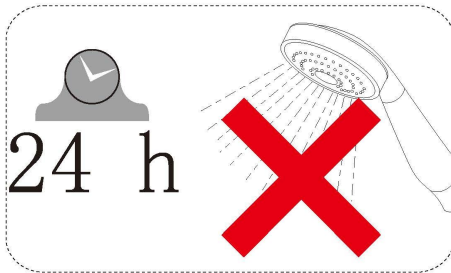

! Apply Silicone Sealant,(not supplied).

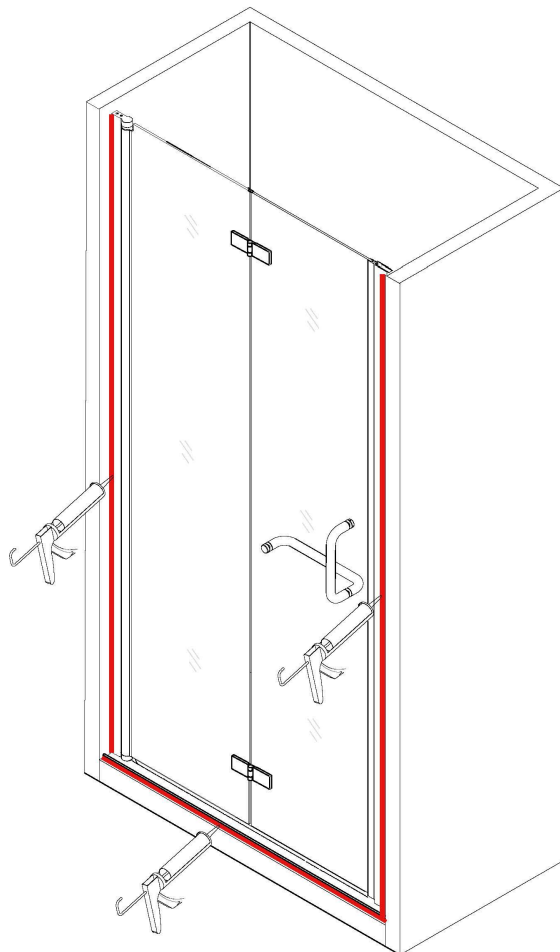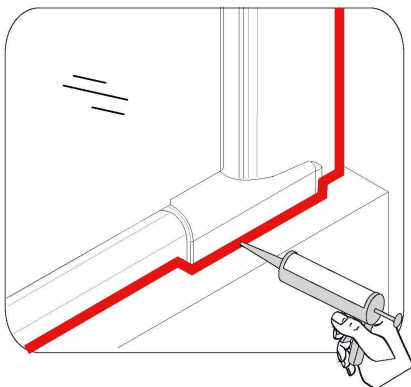

This troubleshooting guide is for general aid only. For service and installation issues or concerns, please contact us.

Please provide the belowing information and contact us.

- 1.oder number:
- 2.description of the issue:
- 3.who install it? installer or yourself?
- 4.some photos or video of the issue:
- 5.If you need replacement parts,please circle the part you need on the page 2, then send the photo to us.
6. your address and phone number (if you need something re-shipped) :

We will give you a solution as soon as possible.

Troubleshooting		
Problem/Symptom	Suggested Solution	Page(s)
Missing parts	*Check all shipping/packaging material for missing parts/components. *If not found, please contact us to order factory part replacement.	2.3
Door is not operaing smoothly	*Check the magentic seal (F)and pvc seal (J) for proper trimming and installation. *Confirm the Hinge (K)Assemblies are tightly secured to the Door Glass(B&L). * Confirm the sweep seal (A) is tightly secured to the bottom of Door Glass * Confirm the hinge side pvc seal is correctly notched around the Bottom sweep seal.	9-19
Water leakage	*Check all the pvc seals for proper trimming and installation. *Check the alu. threshold installed properly and secured with silicone.	19-21
Handle rattles during operation	*Confirm the pvc gaskets are present and the handle is tightly secured to the glass.	17

Customer service:

For more information about our products, please contact us below:



US: +1(909)929-2220



sales@waterpar.com

Do not return product to the store. Contact us directly with any questions.