



BED FRAME

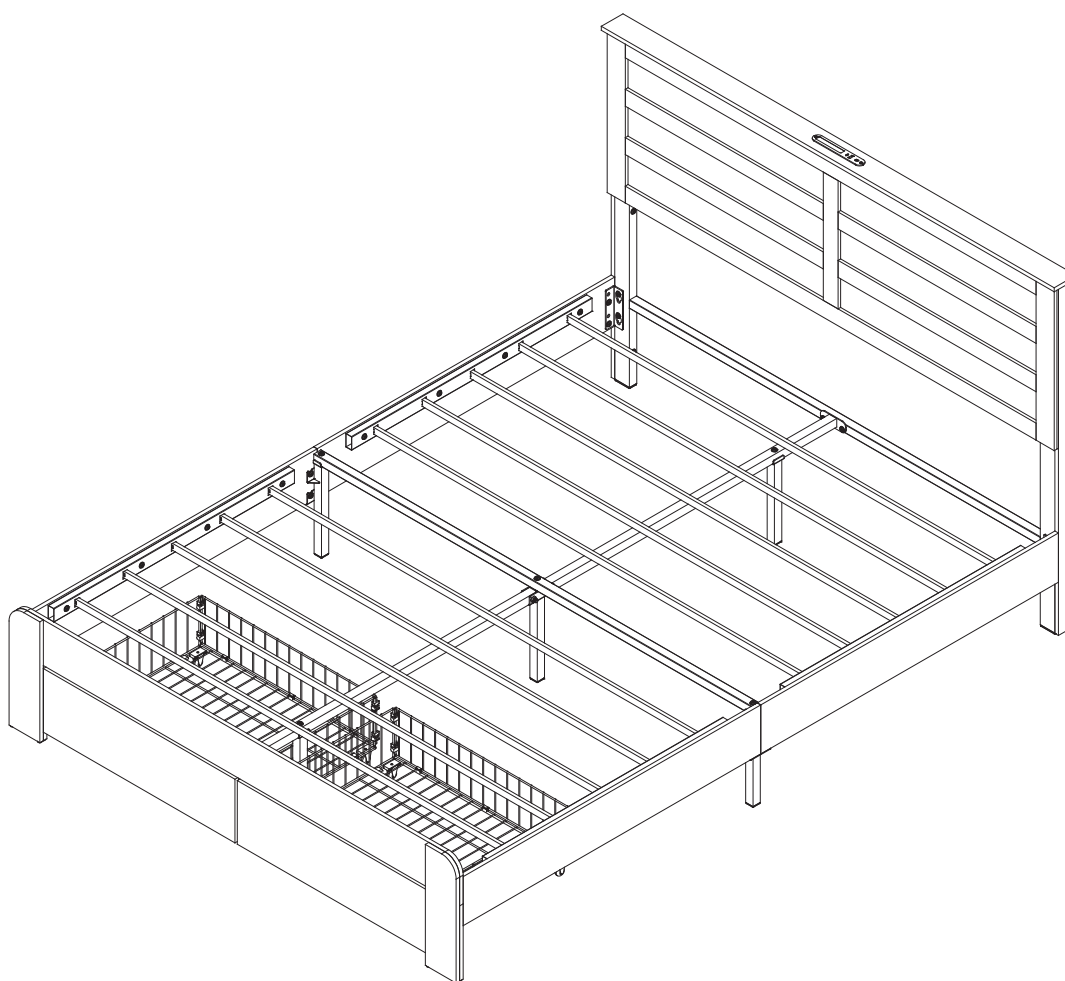

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




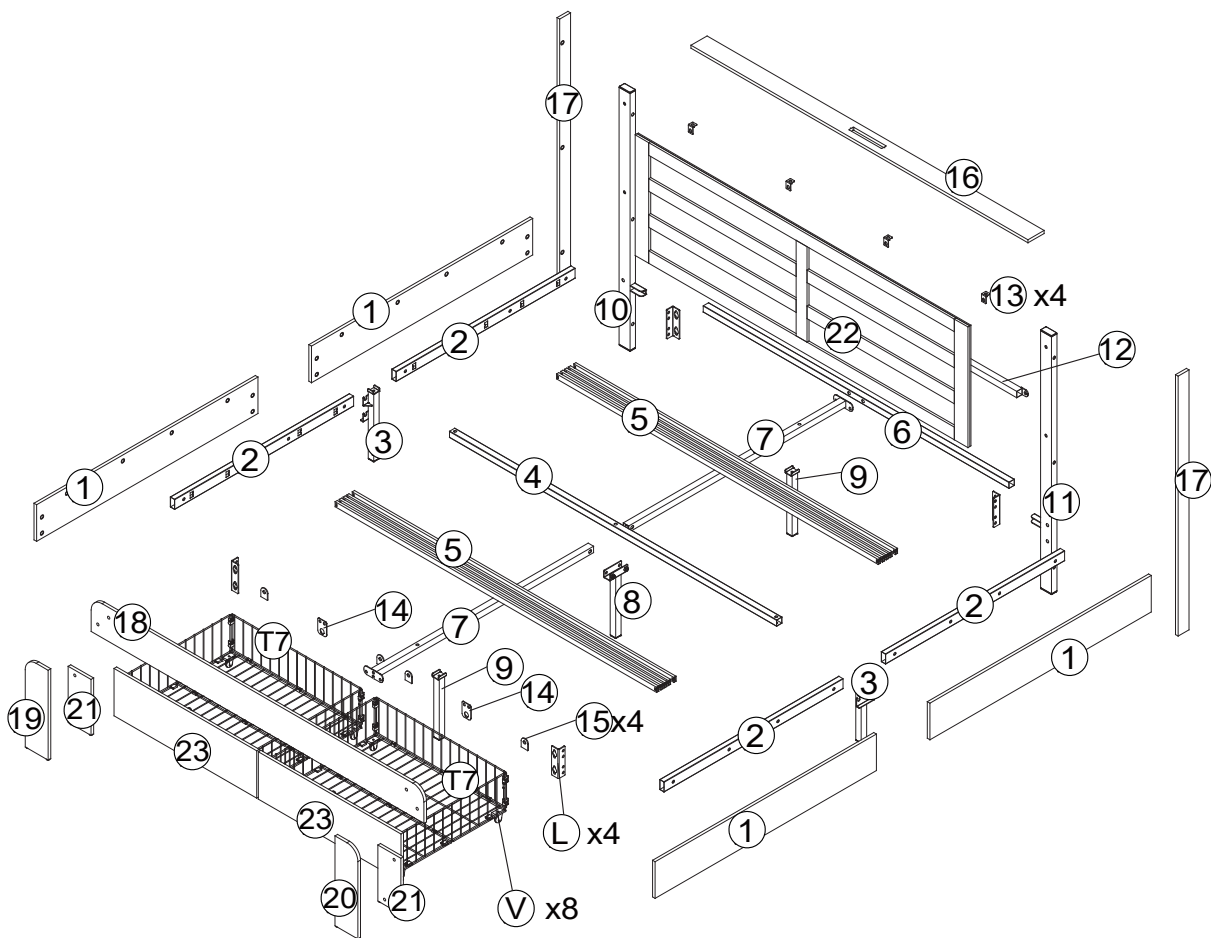


Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

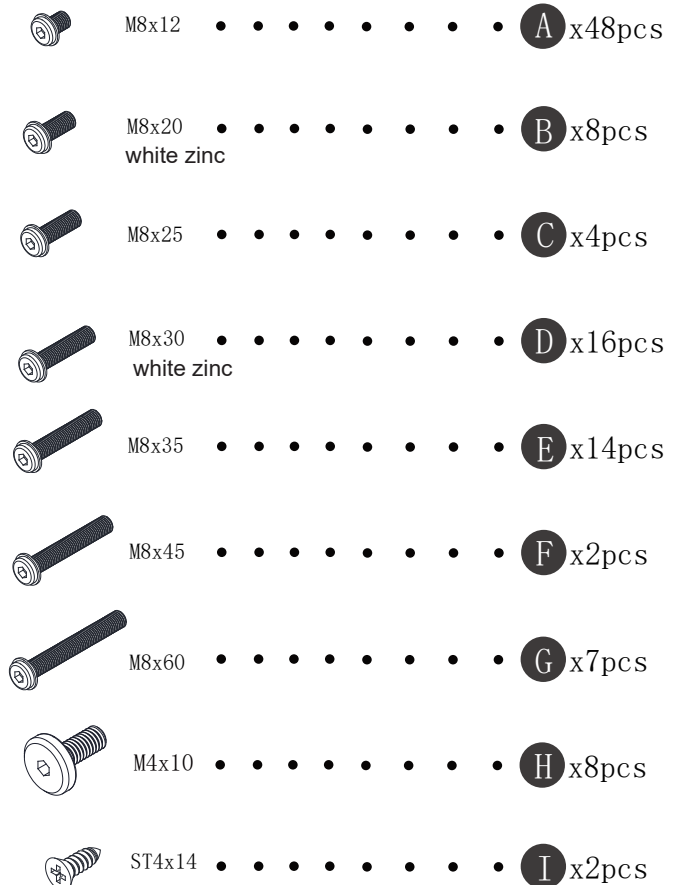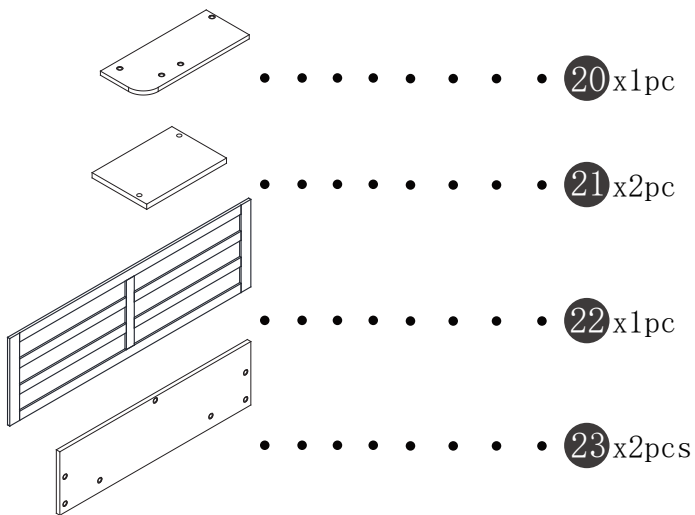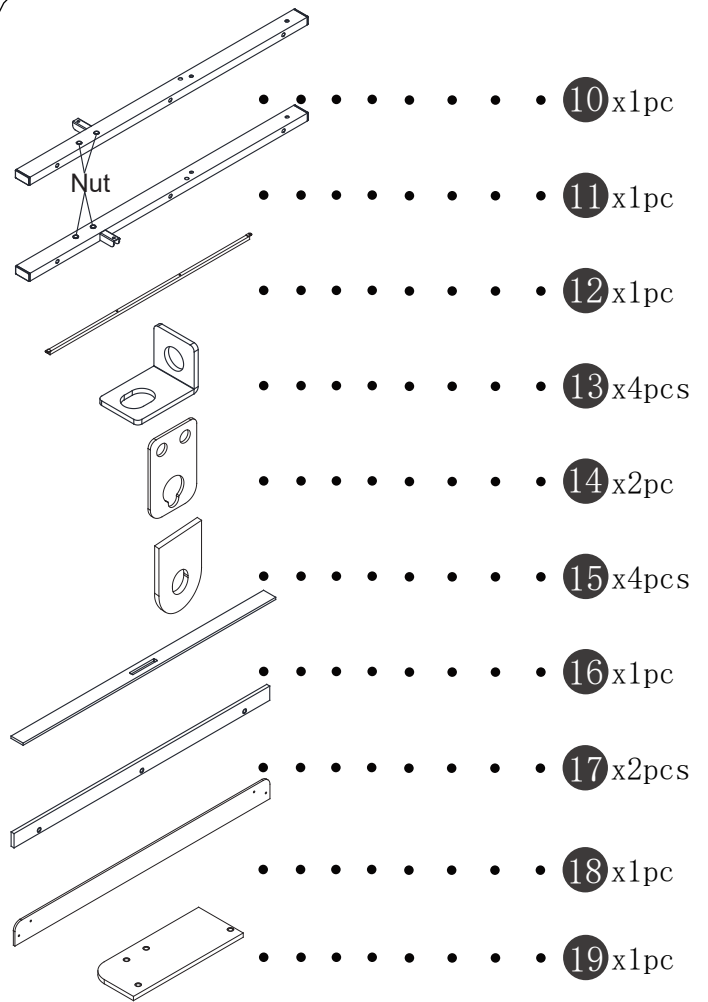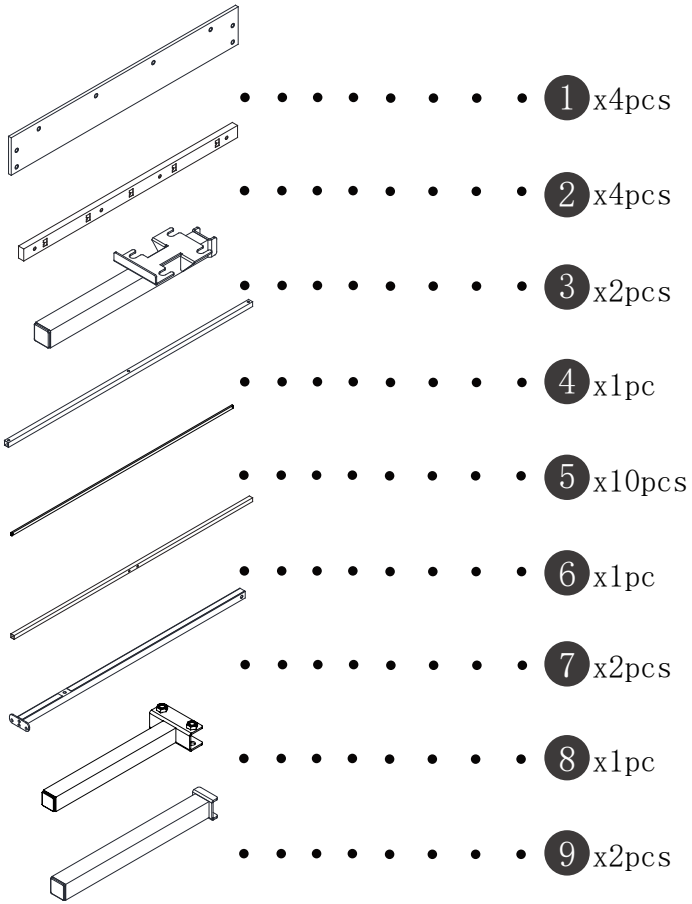





M8x14 • • • • • • • • • • **J** x2pcs




• • • • • • • • • • **K** x20pcs




• • • • • • • • • • **L** x4pcs



M4 • • • • • • • • • • **M** x1pc



M8 • • • • • • • • • • **N** x1pc

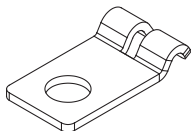


• • • • • • • • • • **O** x4pcs



• • • • • • • • • • **U** x1pc




• • • • • • • • • • **V** x8pcs


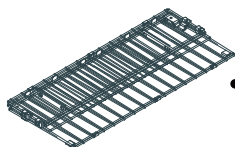


• • • • • • • • • • **T7** x2pcs


1

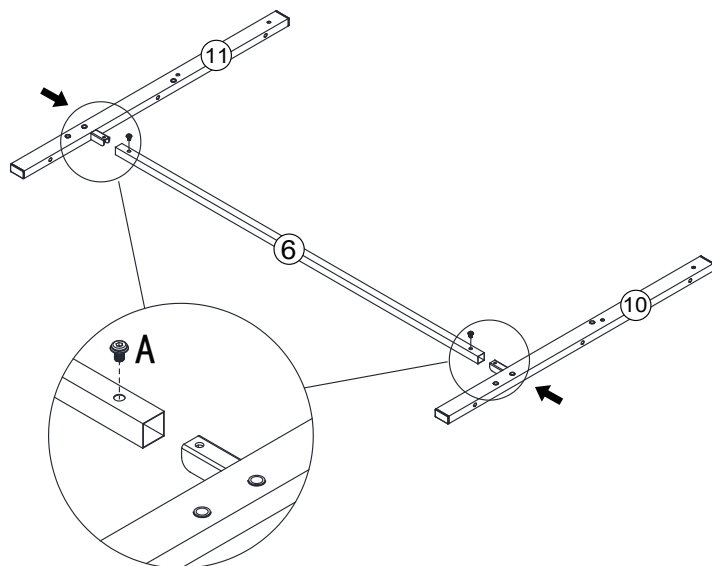


2

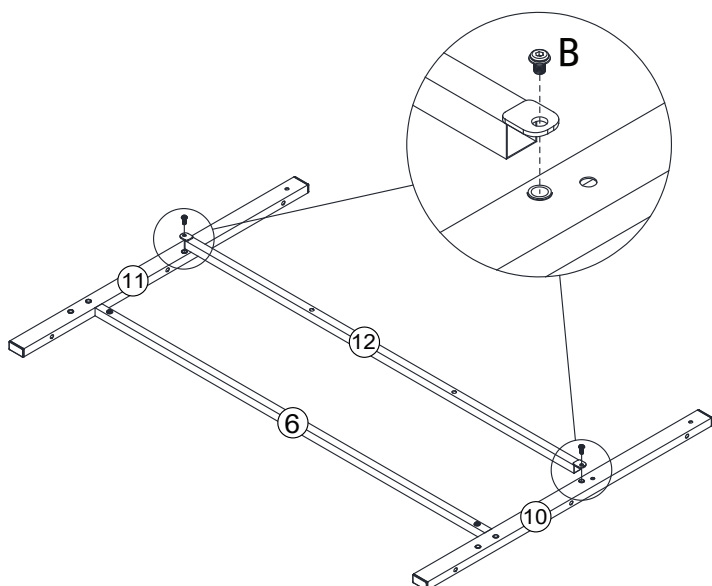


3

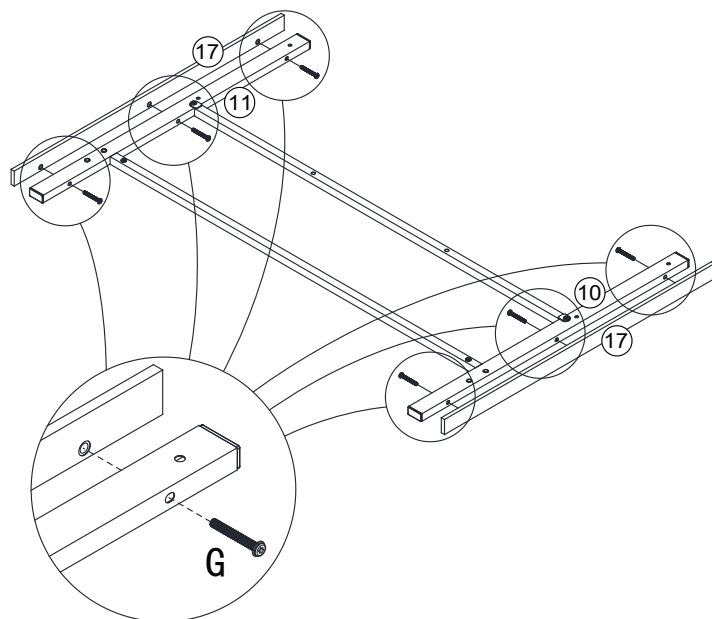

! Do not fully tighten the screws yet.




4

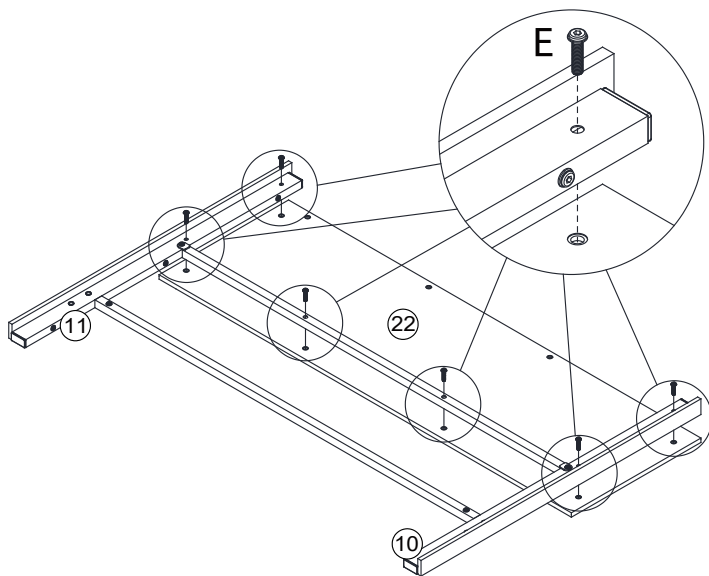

E		6pcs
	M8x35	


5

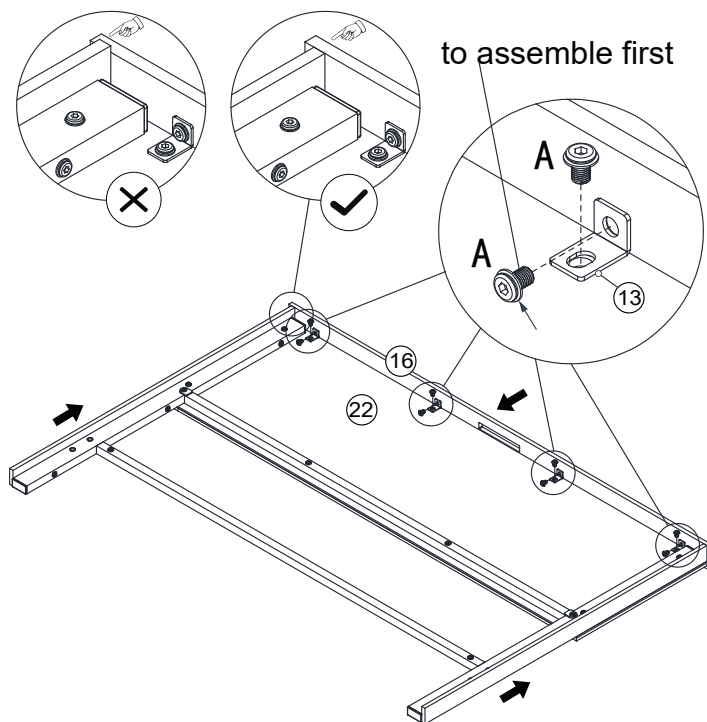

 Fully tighten all the screws.


A		8pcs
	M8x12	

6

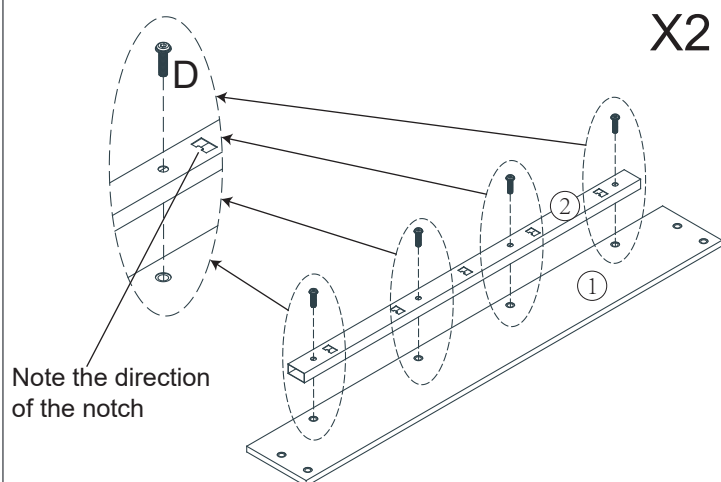


D		8pcs	white zinc
	M8x30		

7

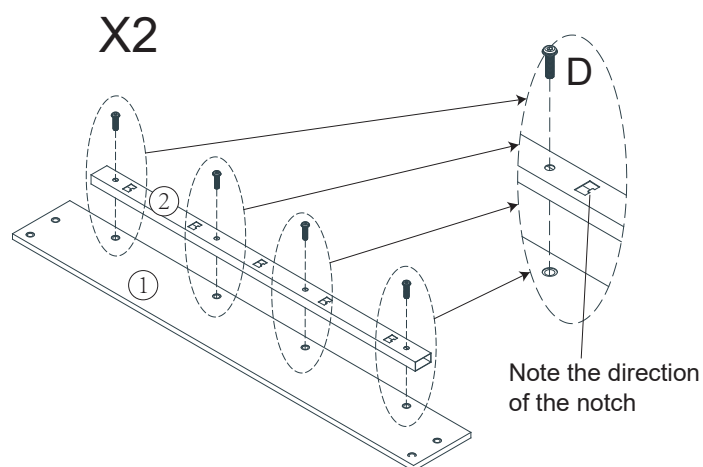


D		8pcs	white zinc
	M8x30		

8

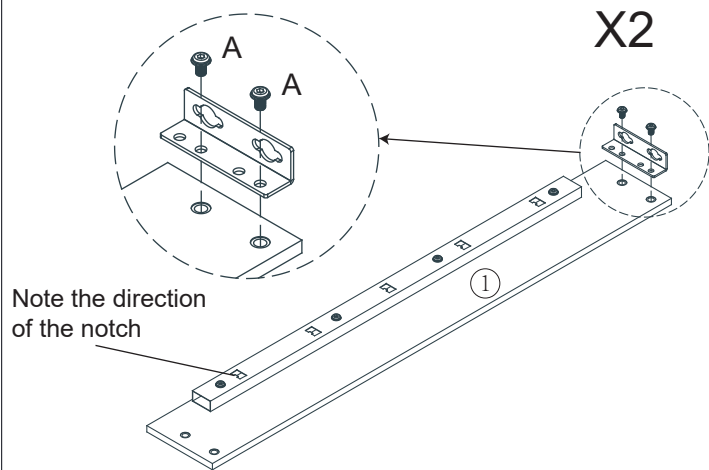


A		4pcs
M8x12		

9

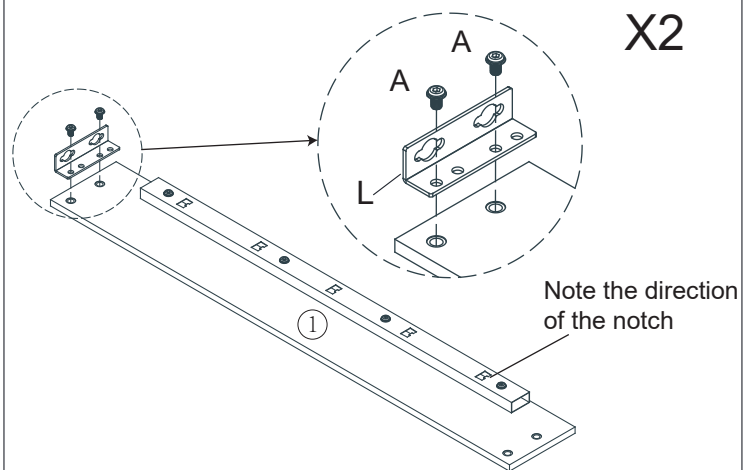


A		4pcs
M8x12		

10

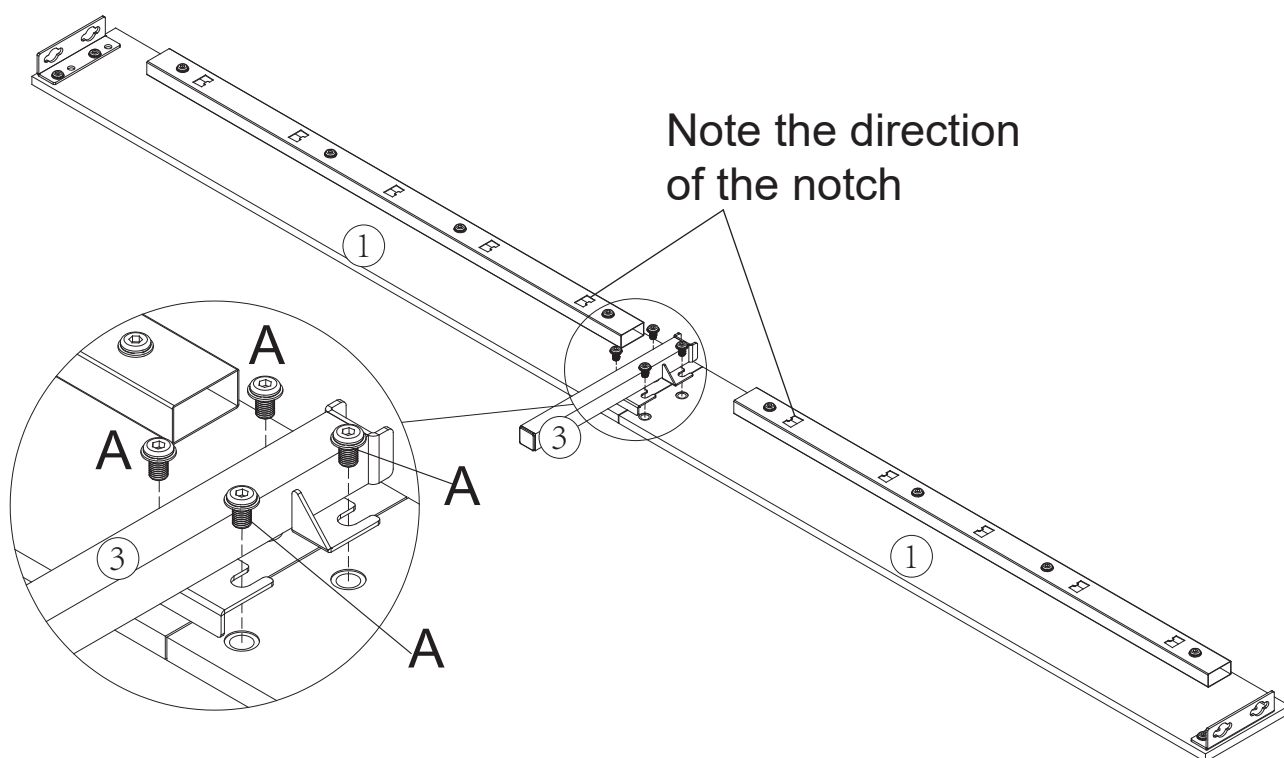


A		8pcs
M8x12		

11

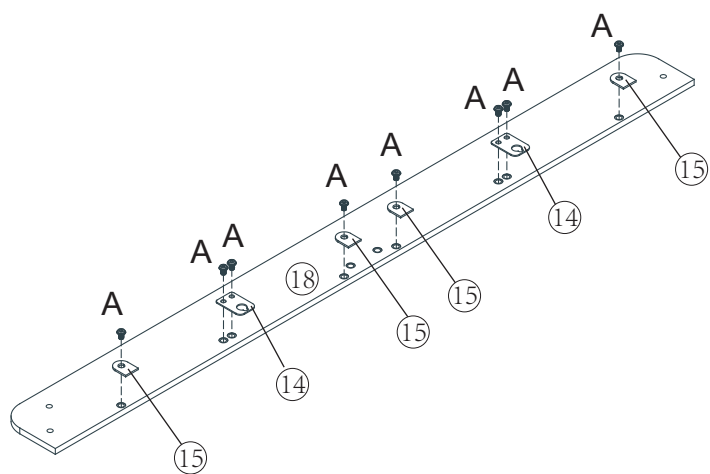

A		8pcs
---	---	------


12

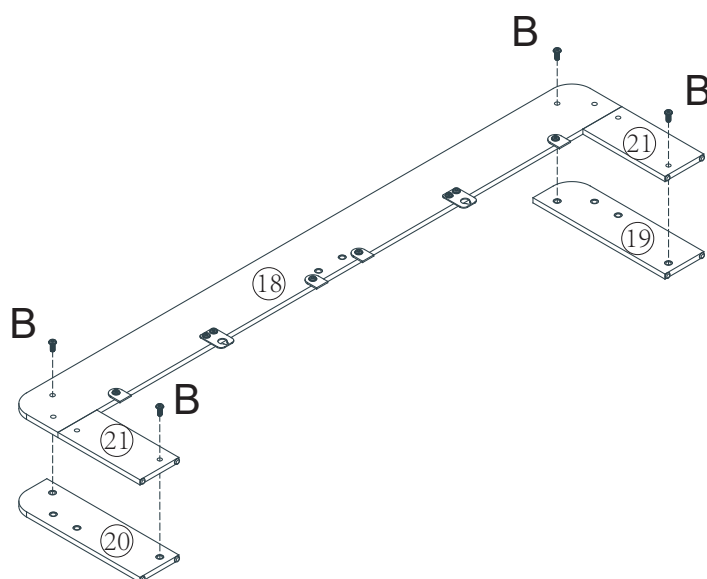

B		4pcs white zinc
---	---	-----------------

13





Install screws loosely,
don't fully tighten

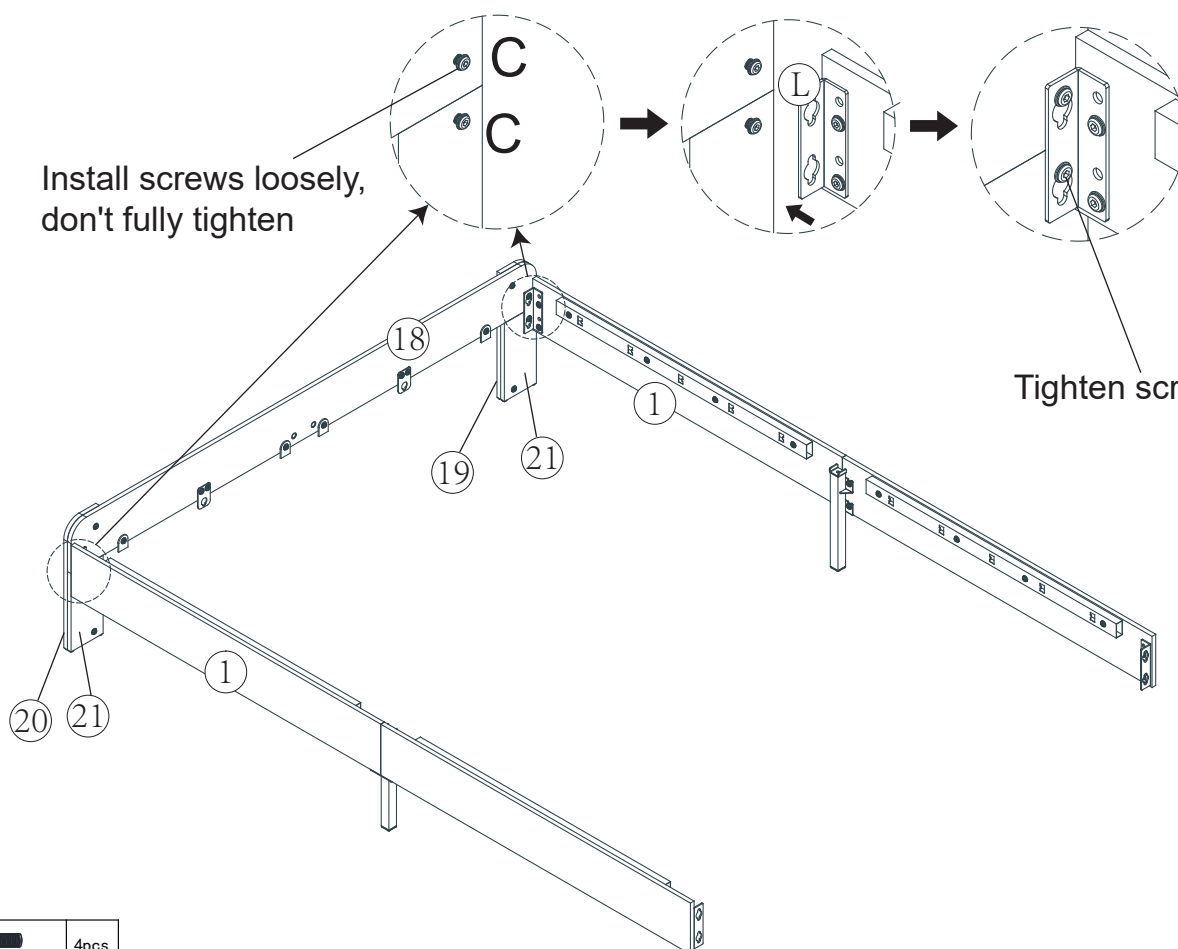


Tighten screws C



C		4pcs
---	---	------

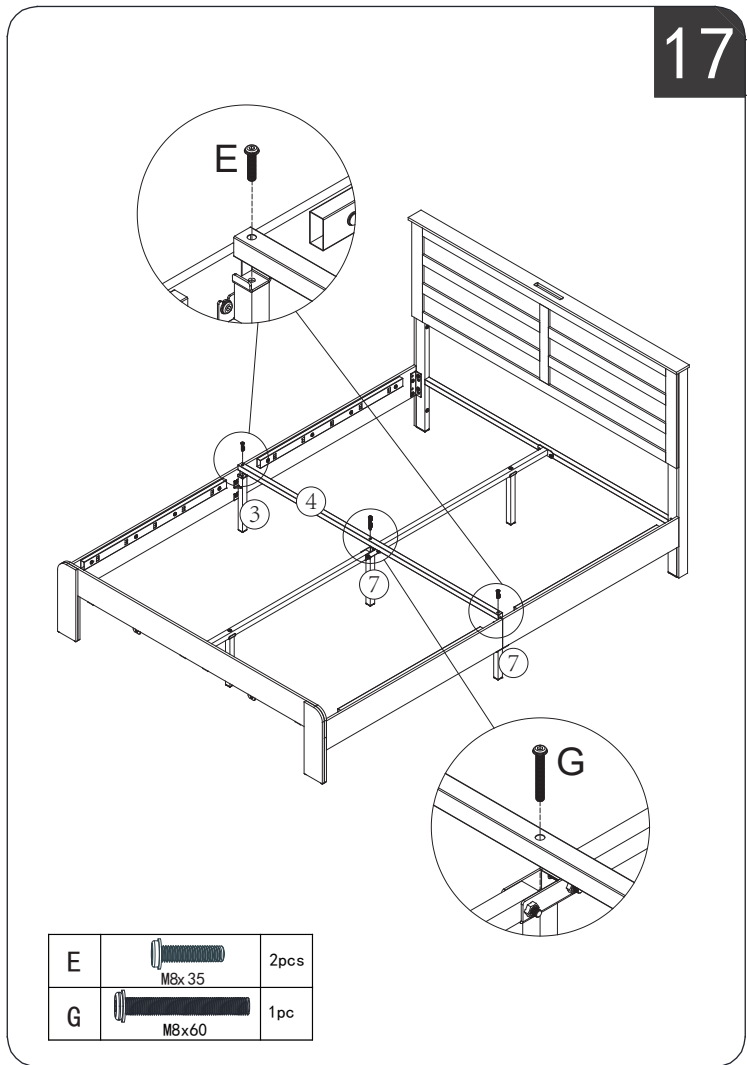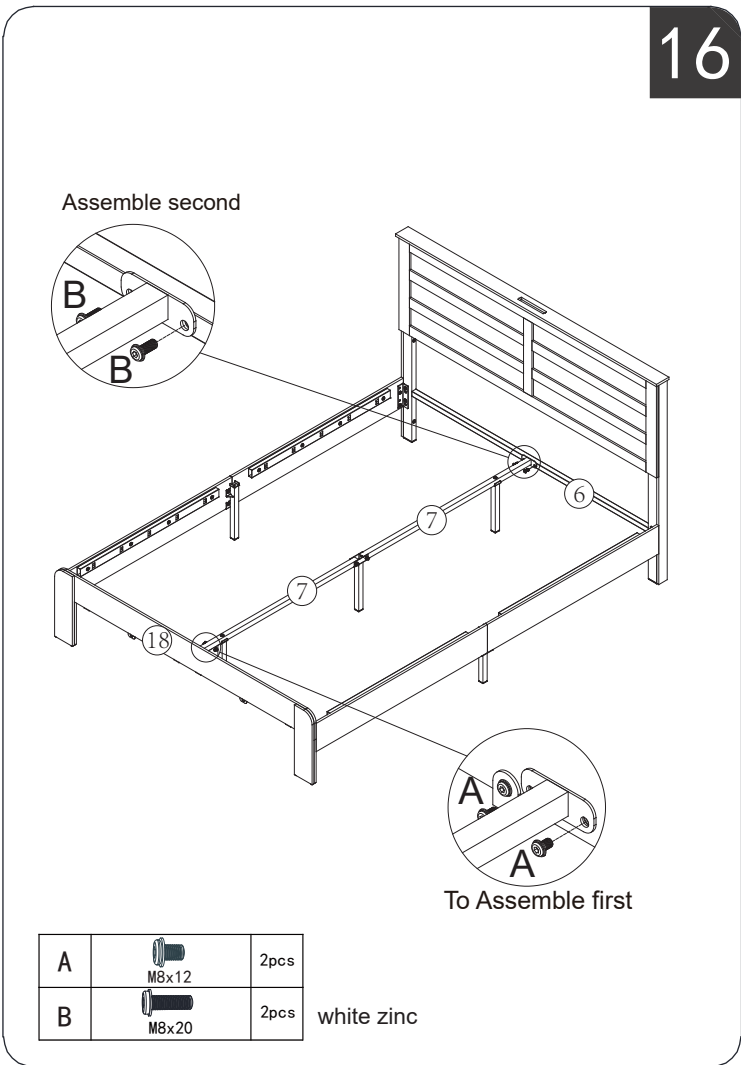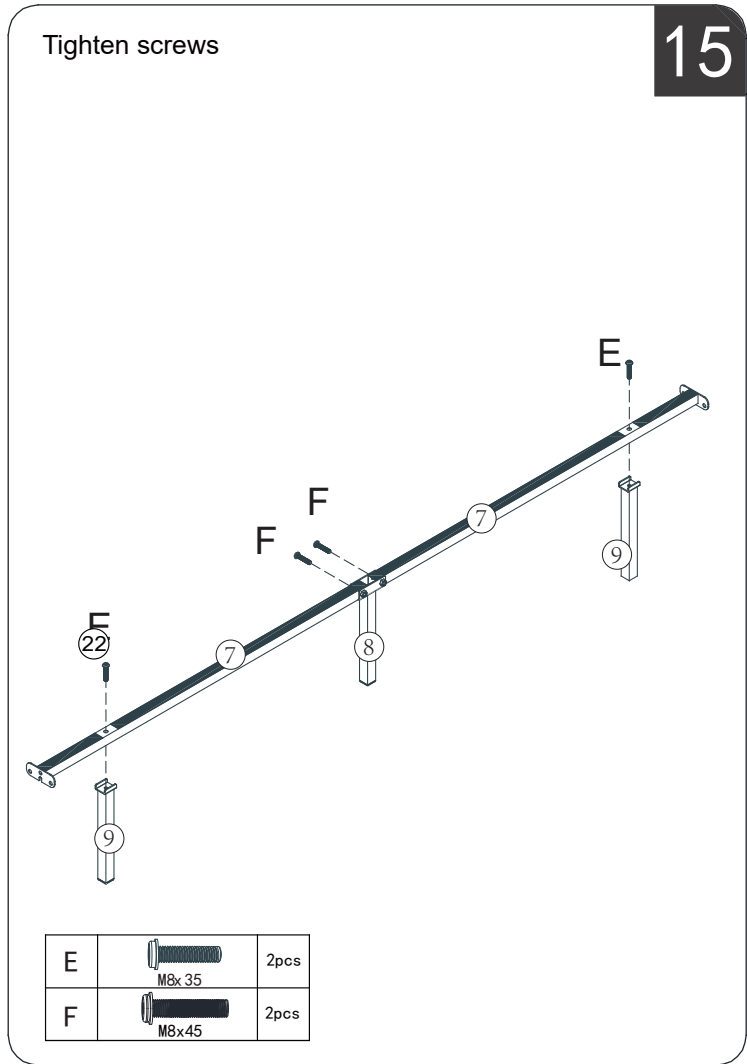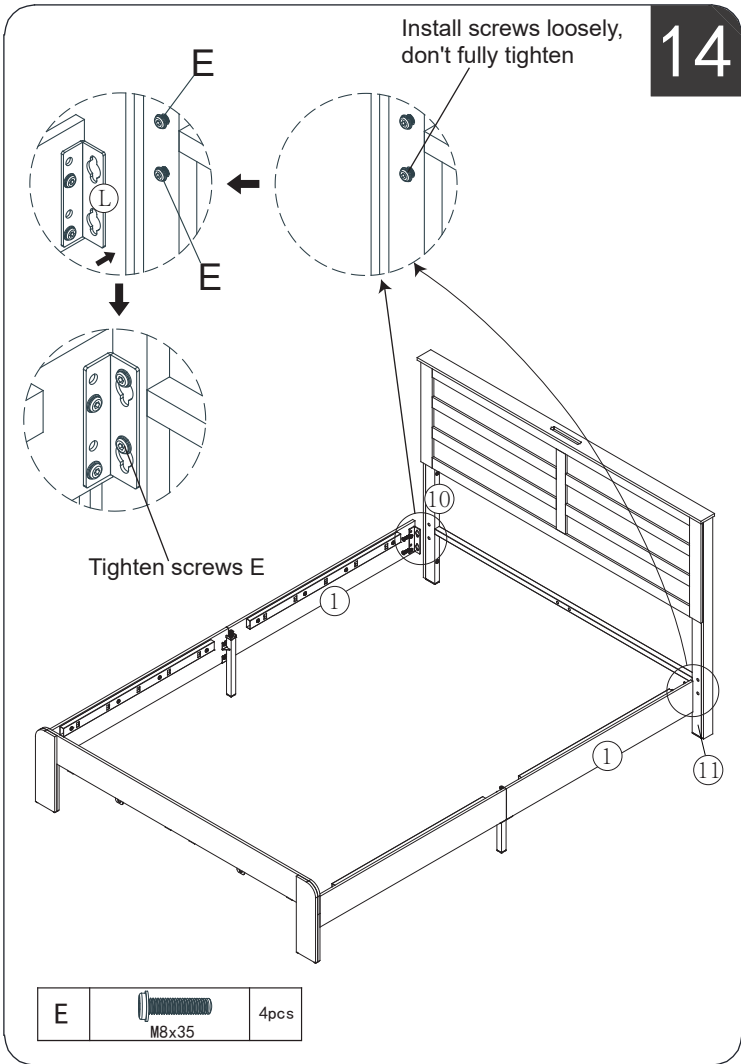


18

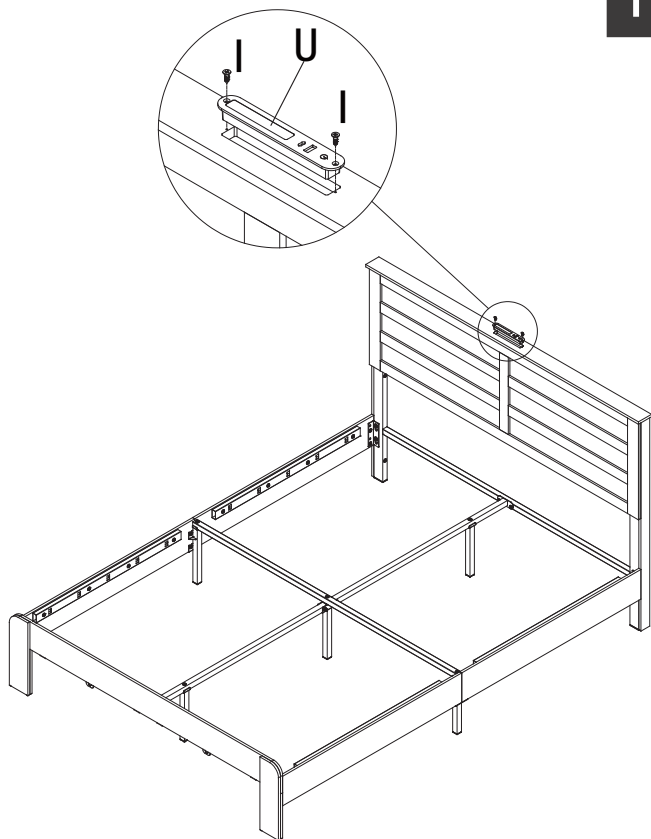


I		2pcs
	ST4x14	

19

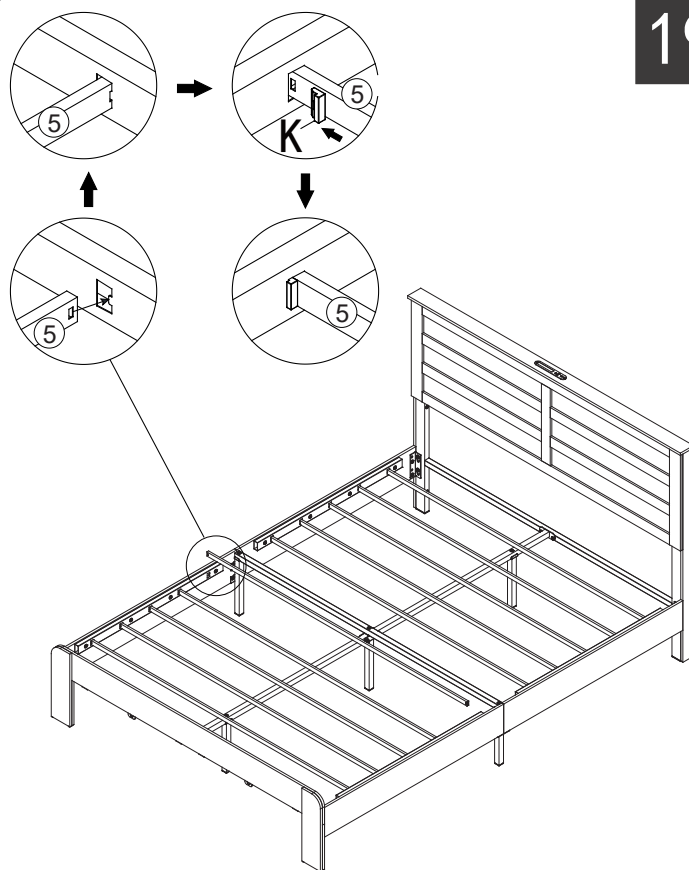


K		20pcs
---	--	-------

20

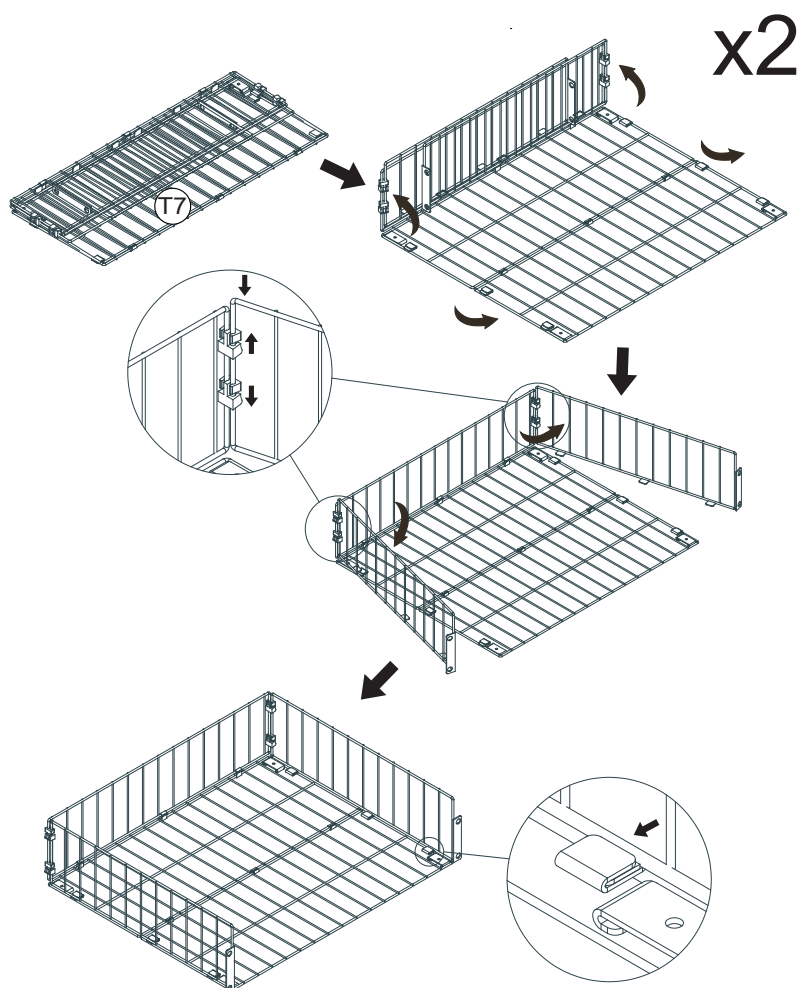

x2


21

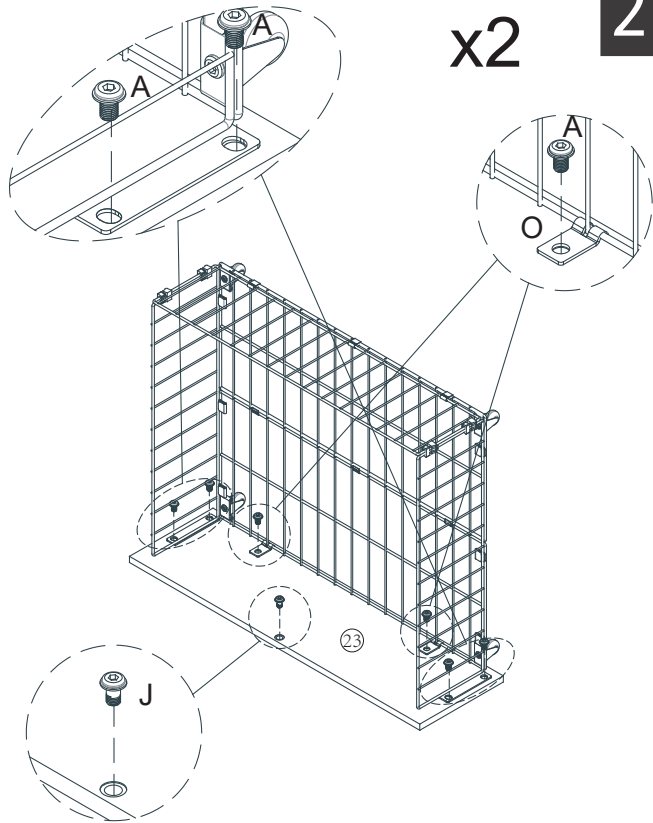

A	 M8x12	12pcs
J	 M8x14	2pcs
O		4pcs

Color zinc

22

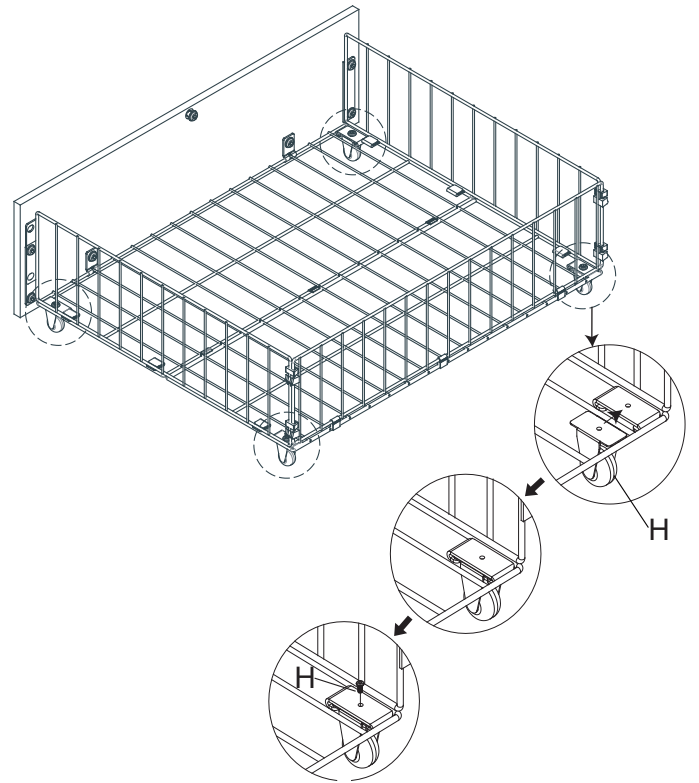

H	 M4x10	8pcs
---	---	------

23

