

Assembly instructions



assembly 2 people



tool rubber mallet



tool hammer



tool philips head screwdriver



assembling time 3 hours 30 minutes

or...



tool electric screwdriver




assembling time 2 hours 30 minutes

Bali
King Size
76" x 80"




www.memomad.com

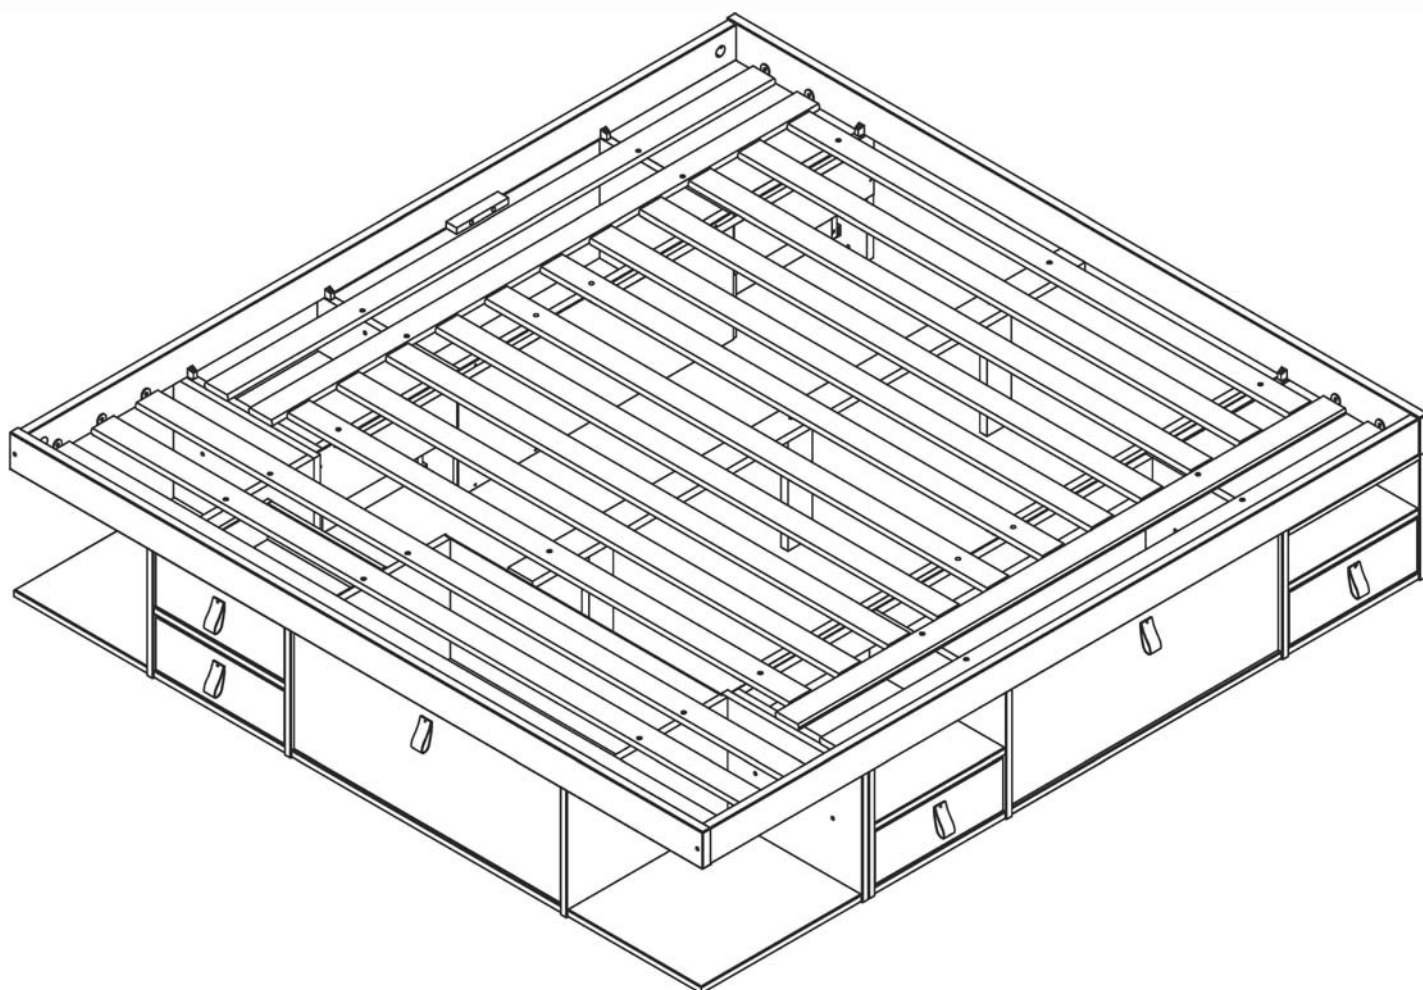

Attention!

- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.







FOOTBOARD

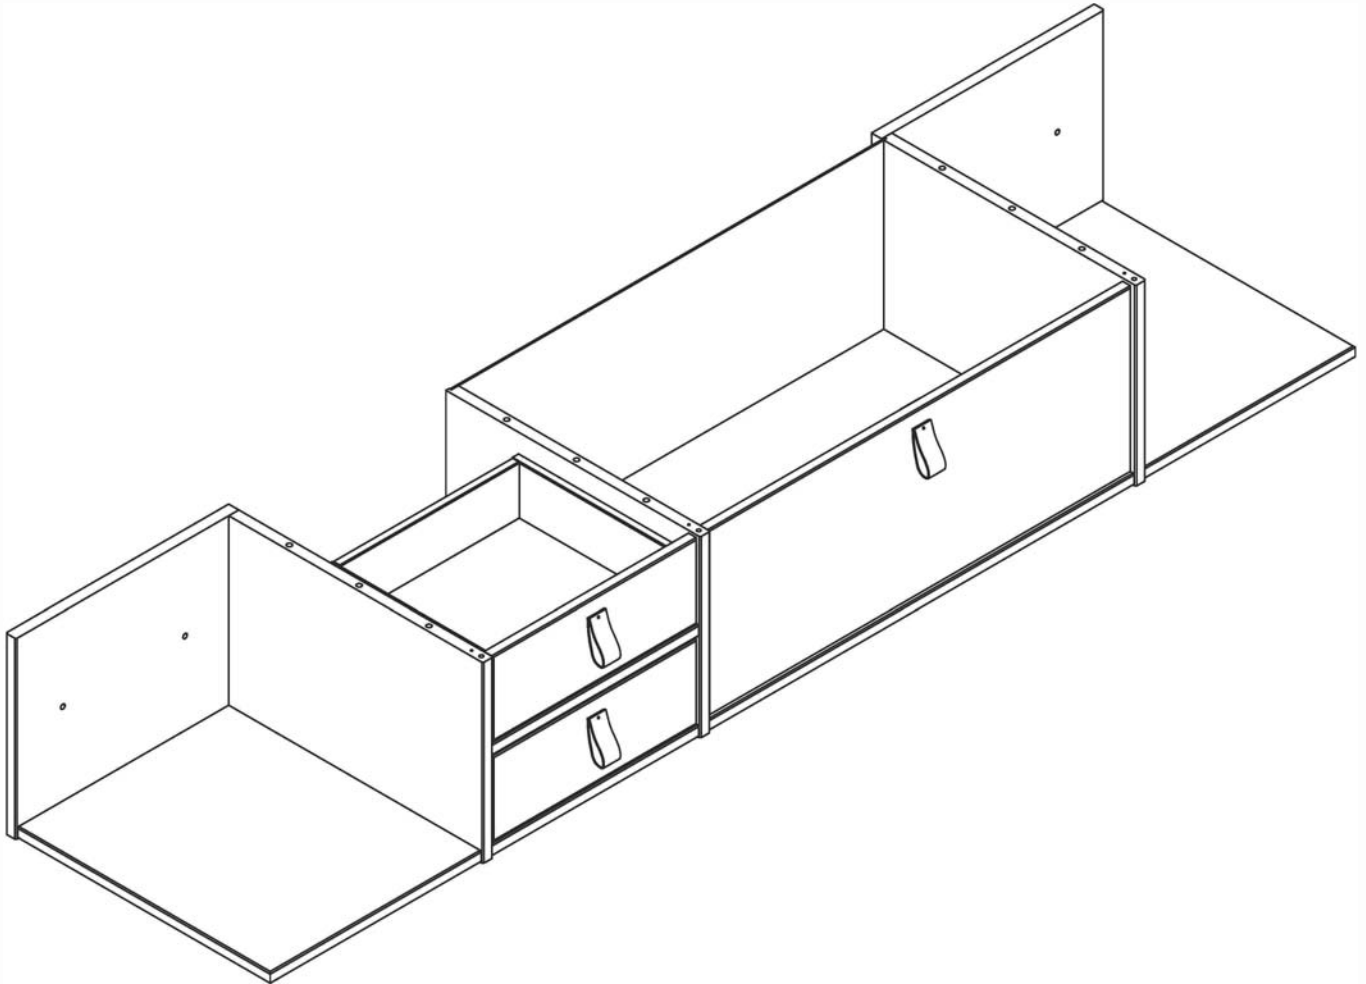







Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact with sharp objects.
- 5- Please avoid hitting the furniture surface.

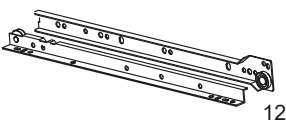HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	36
B	 Ø 5/32" x 1.3/16"	38
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	12

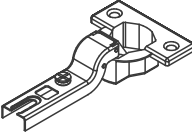

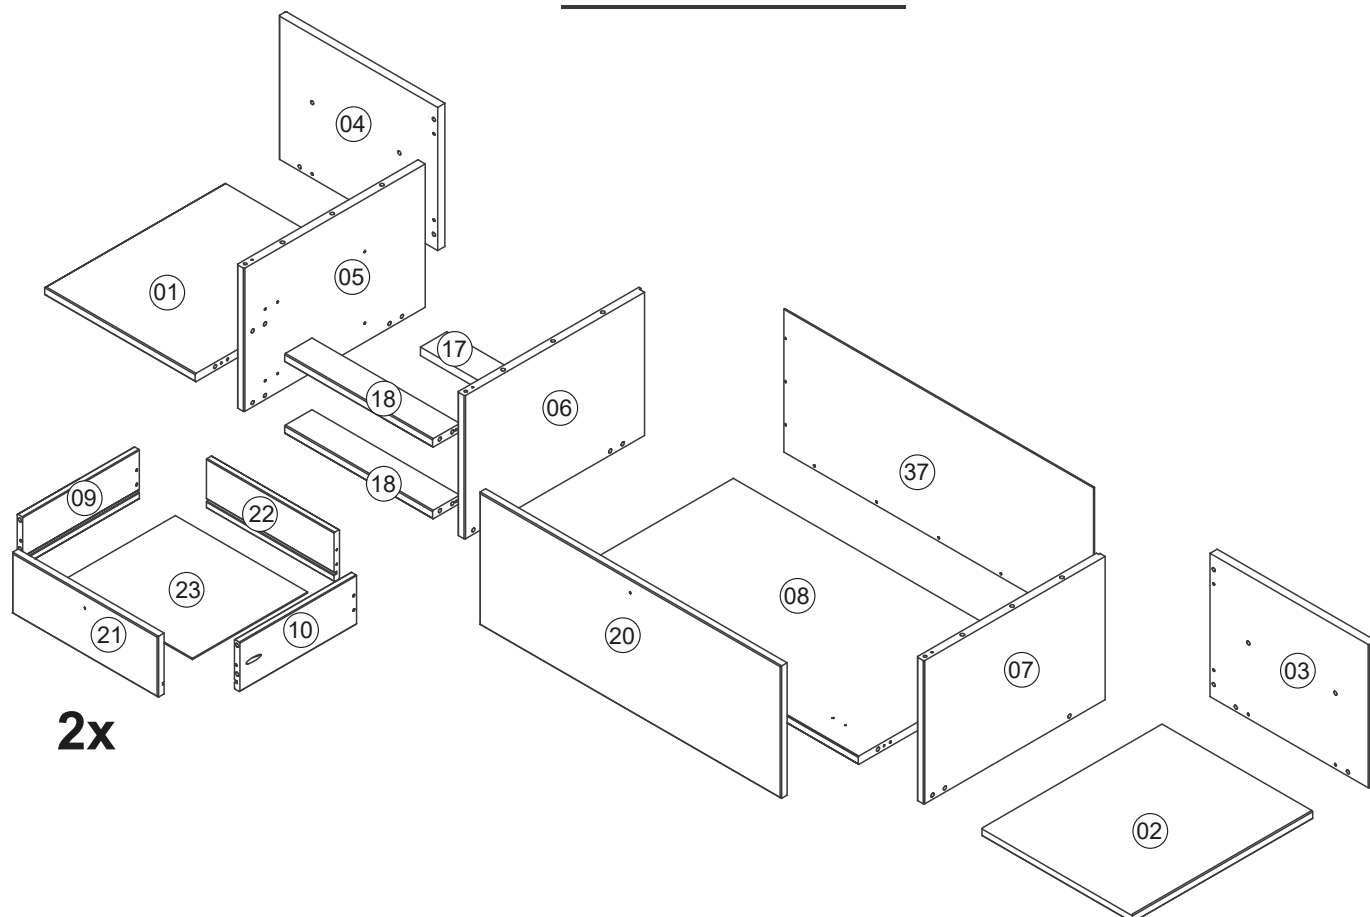


G	 Magnetic Locking Plate	01
H	 Ø 1/8" x 9/16"	18
I	 Handle	03
J	 Ø 1/8" x 5/8"	11
M	 Wedge	02
N	 Hinge-joint	02

COMPONENTS

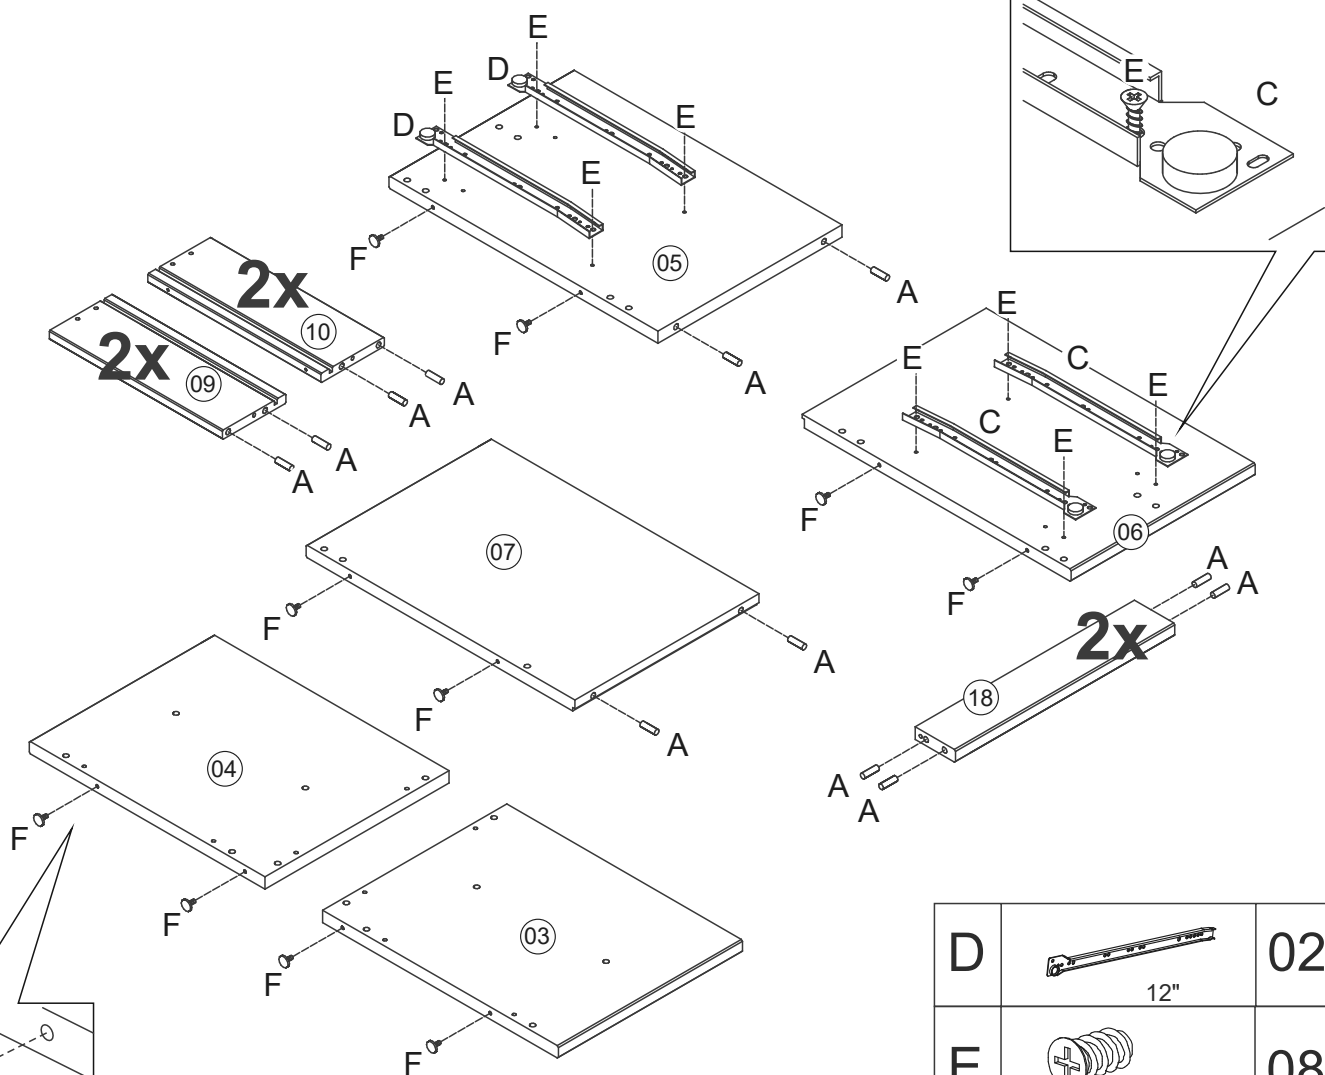






01





A	 Ø 5/16" x 1"	20	C	 12"	02	F	 Furniture glide	10
D	 12"	02	E	 Ø 1/4" x 13/32"	08			

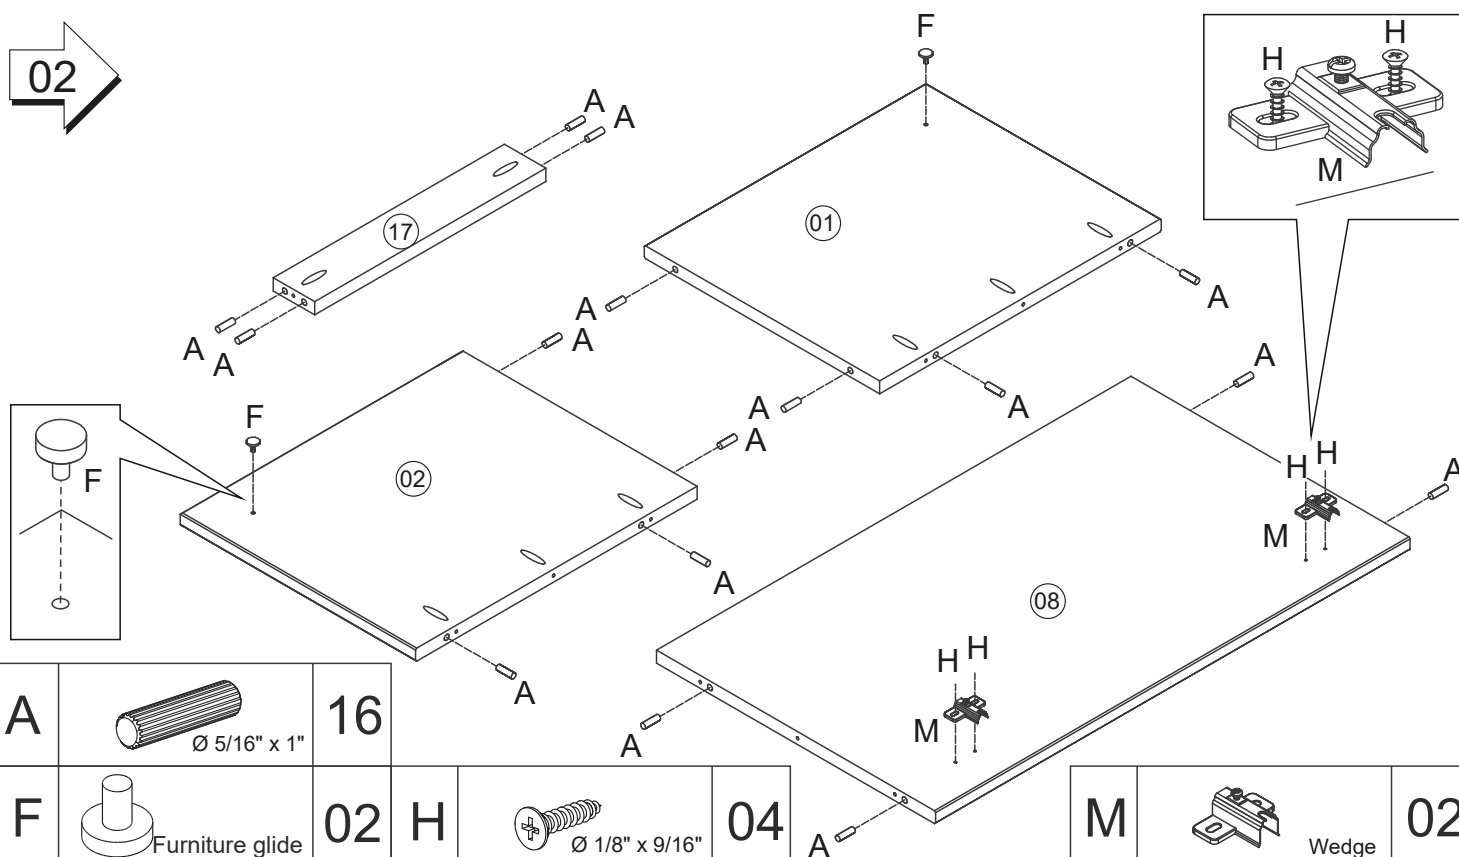02





A	 Ø 5/16" x 1"	16	F	 Furniture glide	02	H	 Ø 1/8" x 9/16"	04	M	 Wedge	02
---	-----------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------------------------	----	---	-------------------------------------------------------------------------------------------------------	----	---	------------------------------------------------------------------------------------------------	----


03

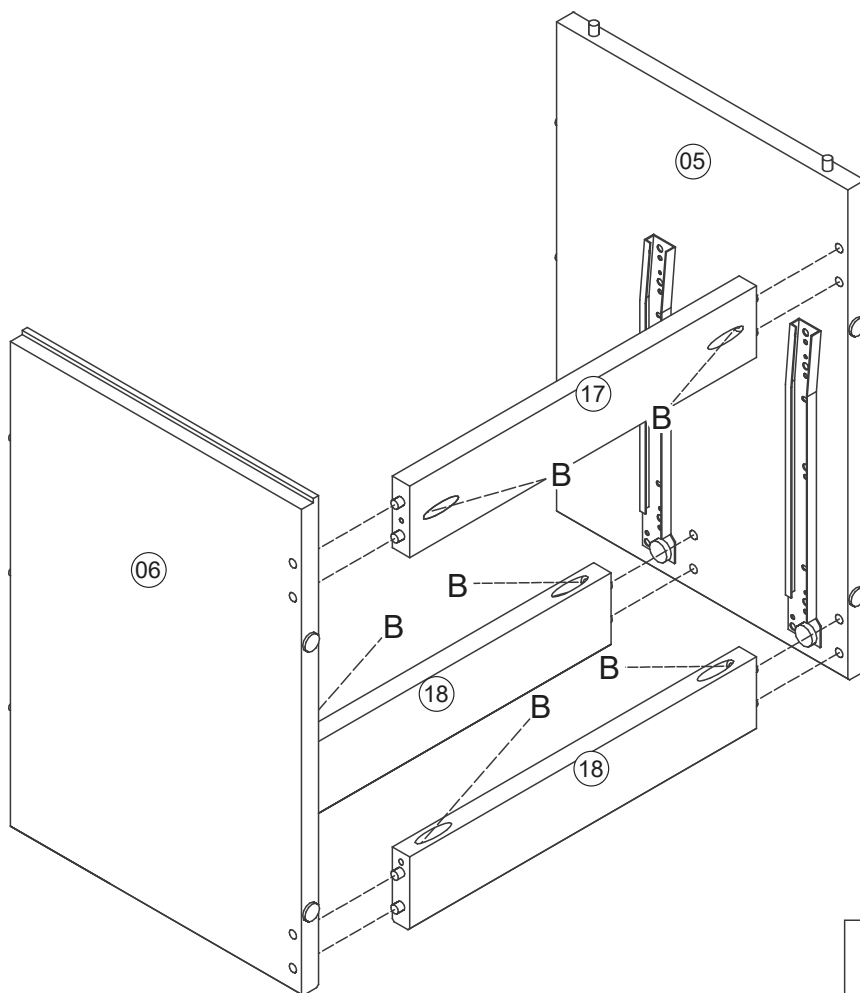


04

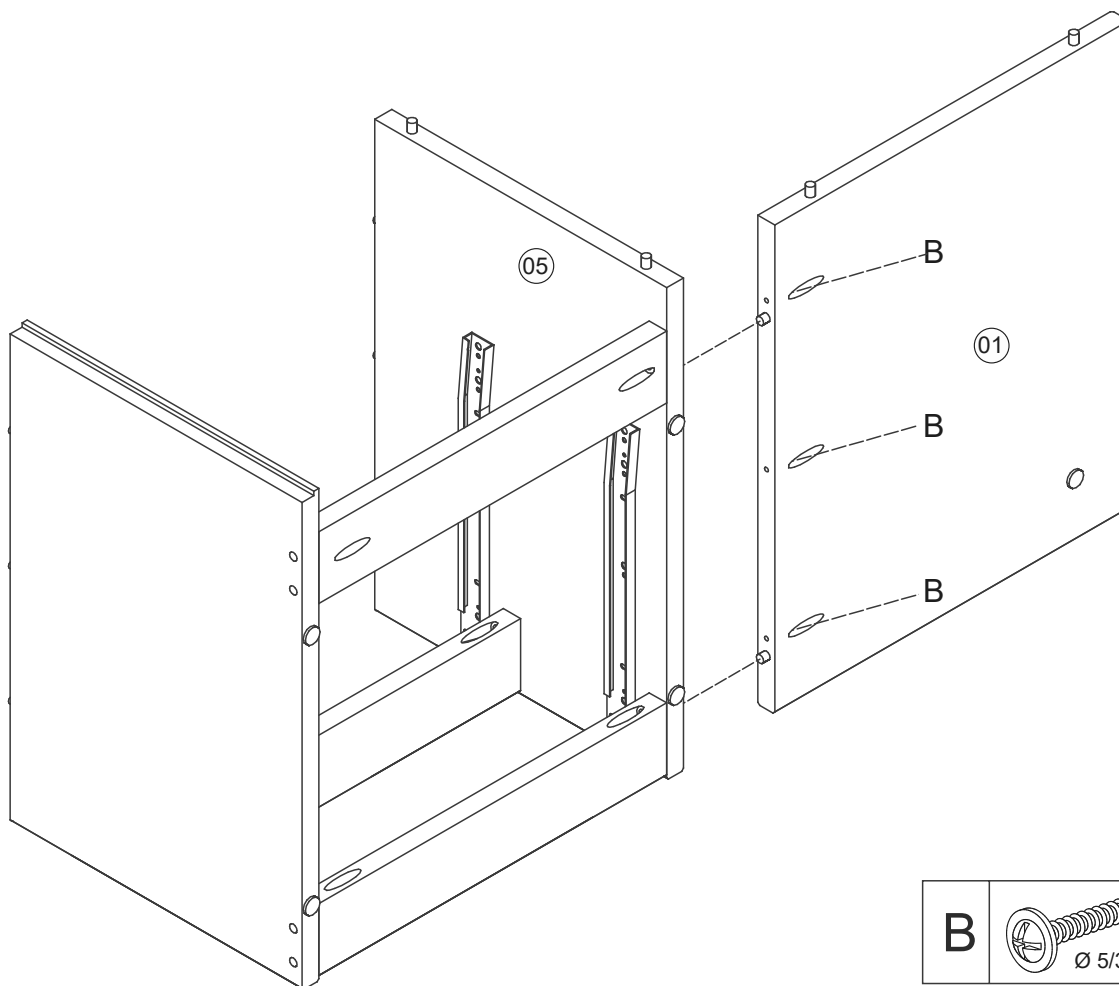



05

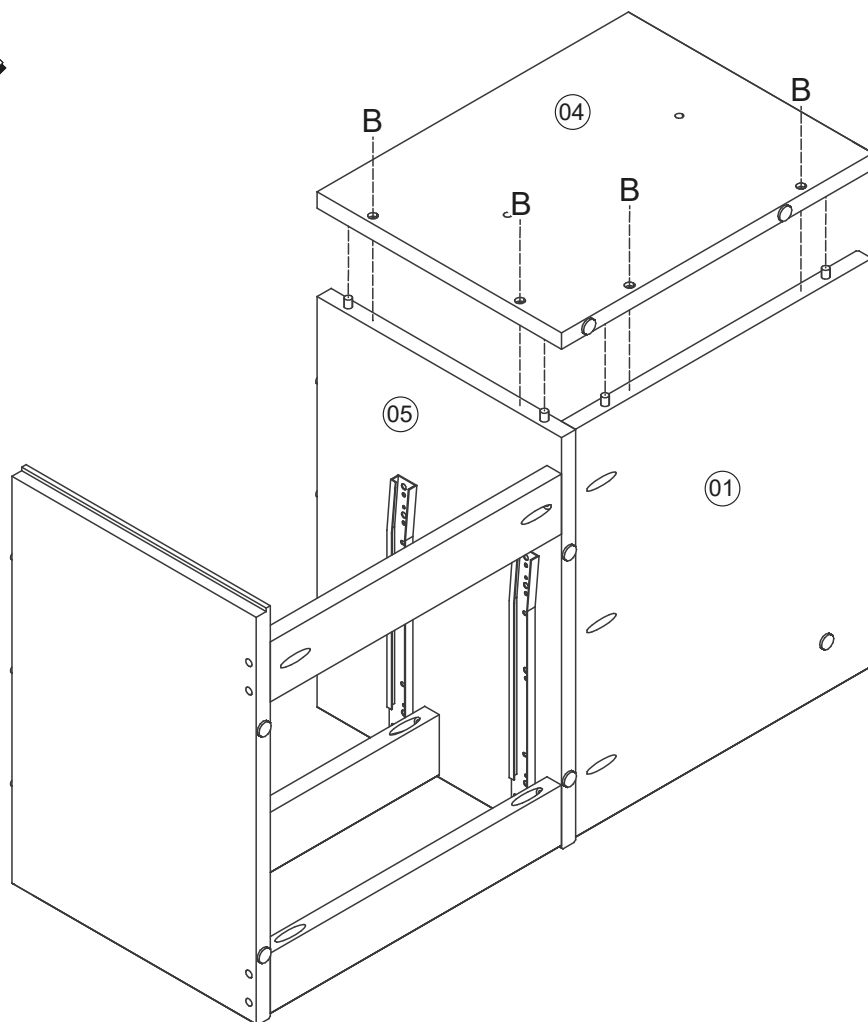



B	 Ø 5/32" x 1.3/16"	04
---	---------------------------------------------------------------------------------------------------------	----

06


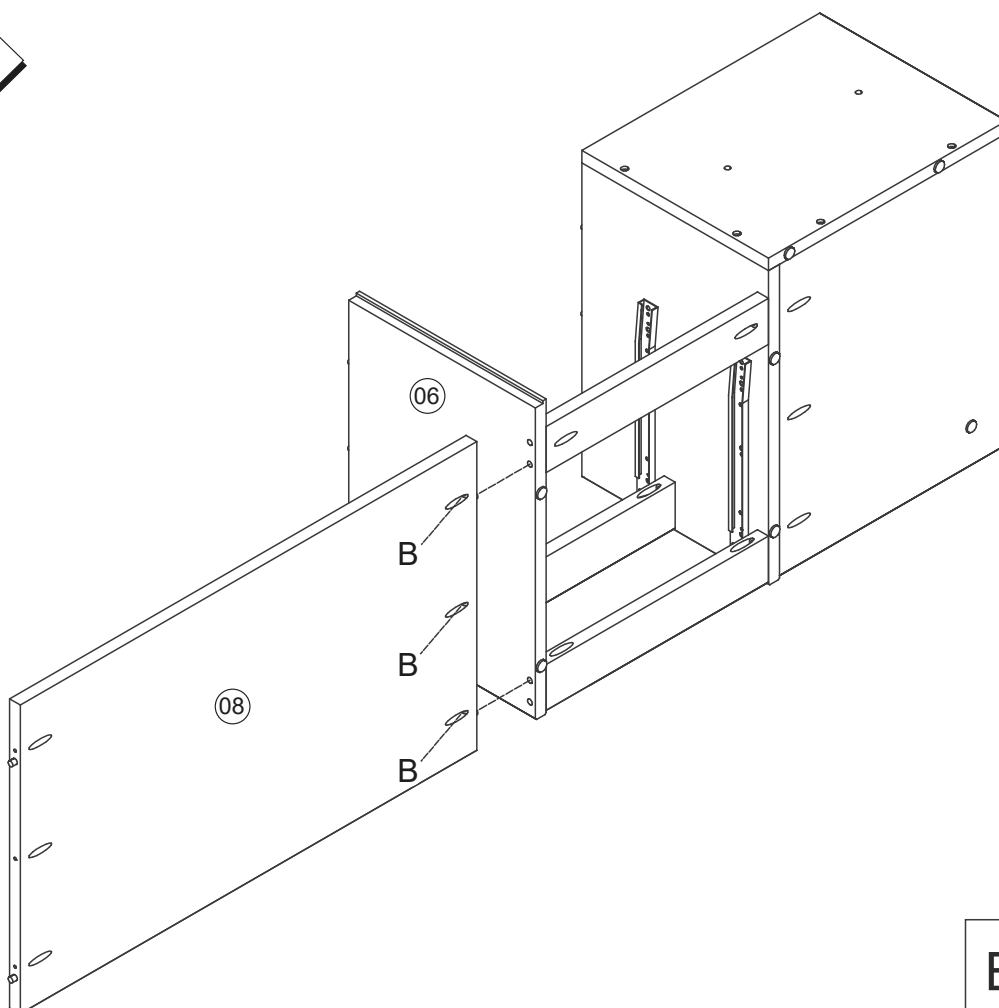


B	 Ø 5/32" x 1.3/16"	03
---	---------------------------------------------------------------------------------------------------------	----


07

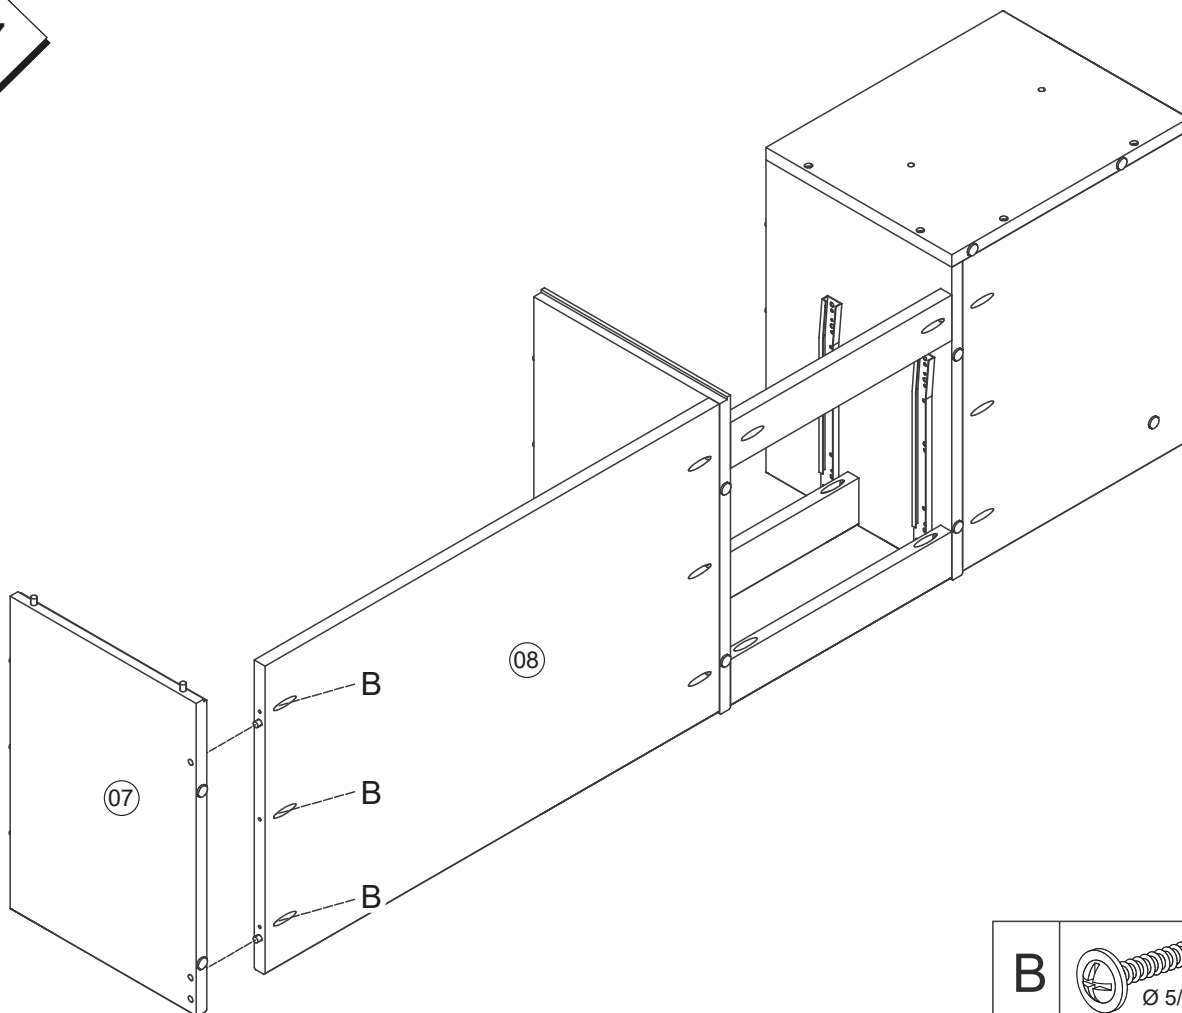


08

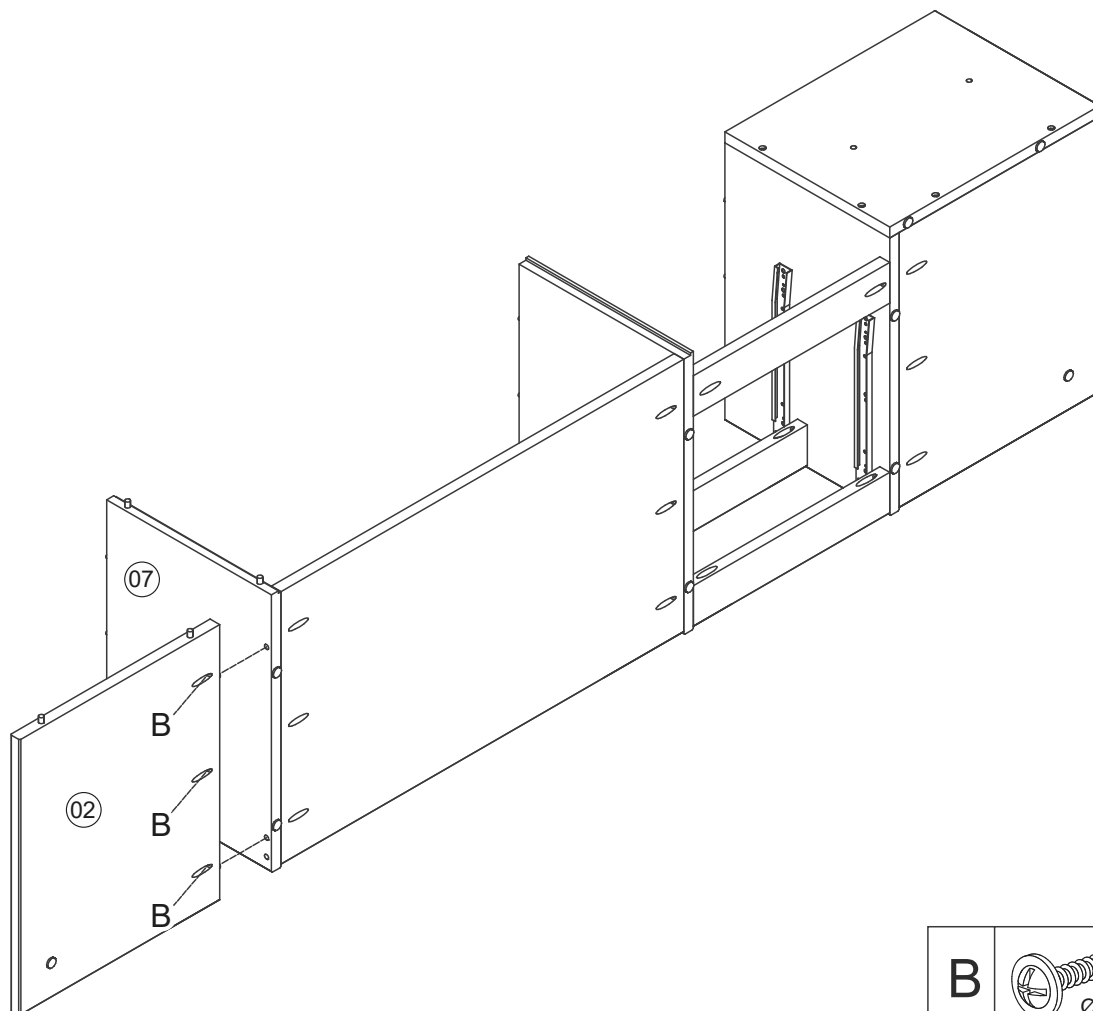



09

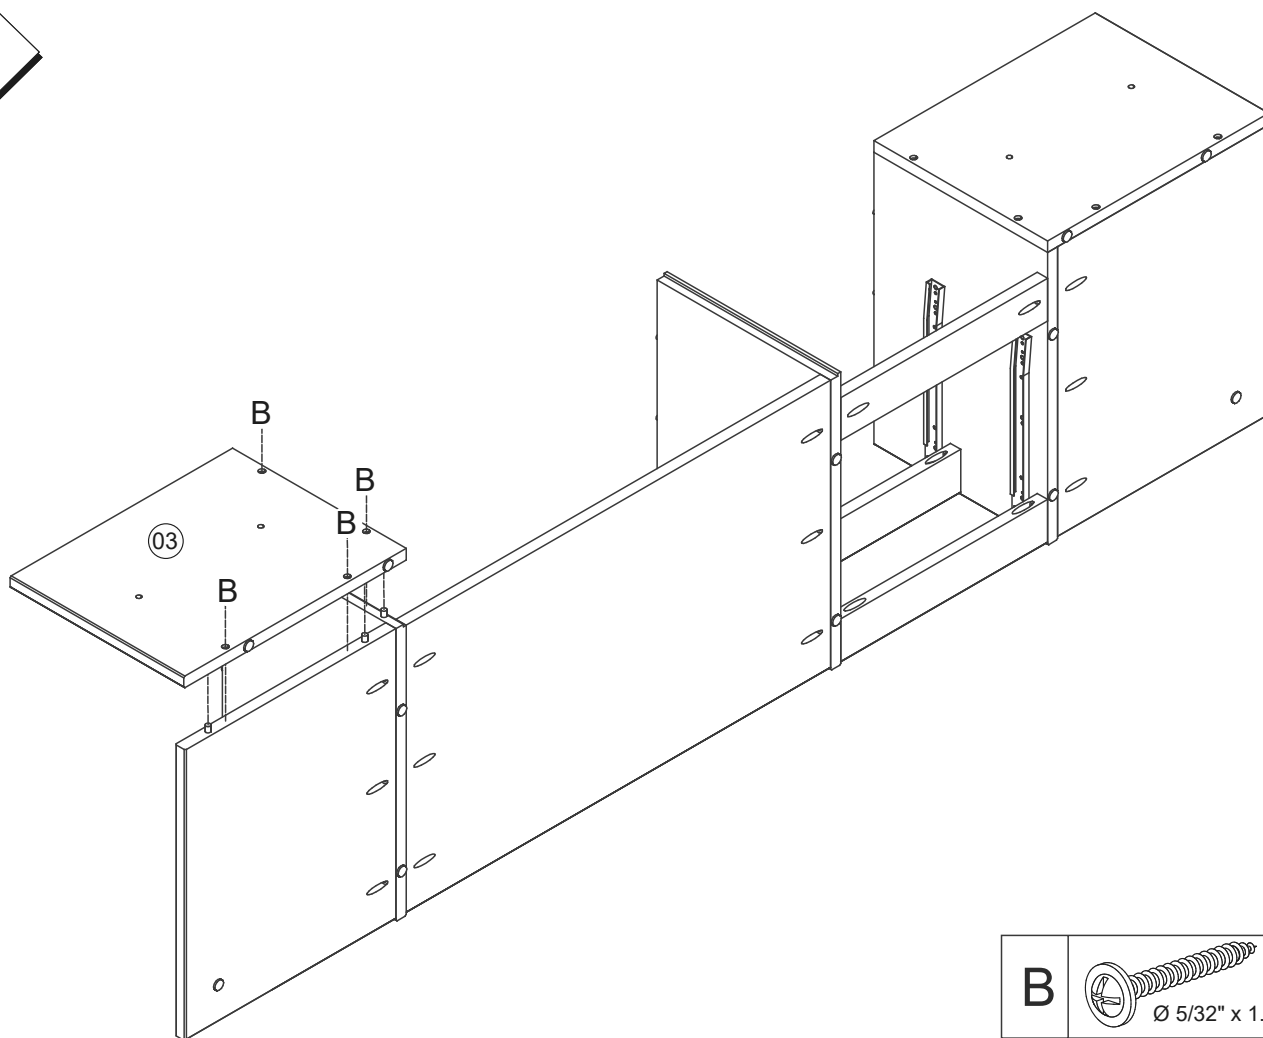

B	 $\varnothing 5/32" \times 1.3/16"$	04
---	-----------------------------------------------------------------------------------------------------------------------------	----





10

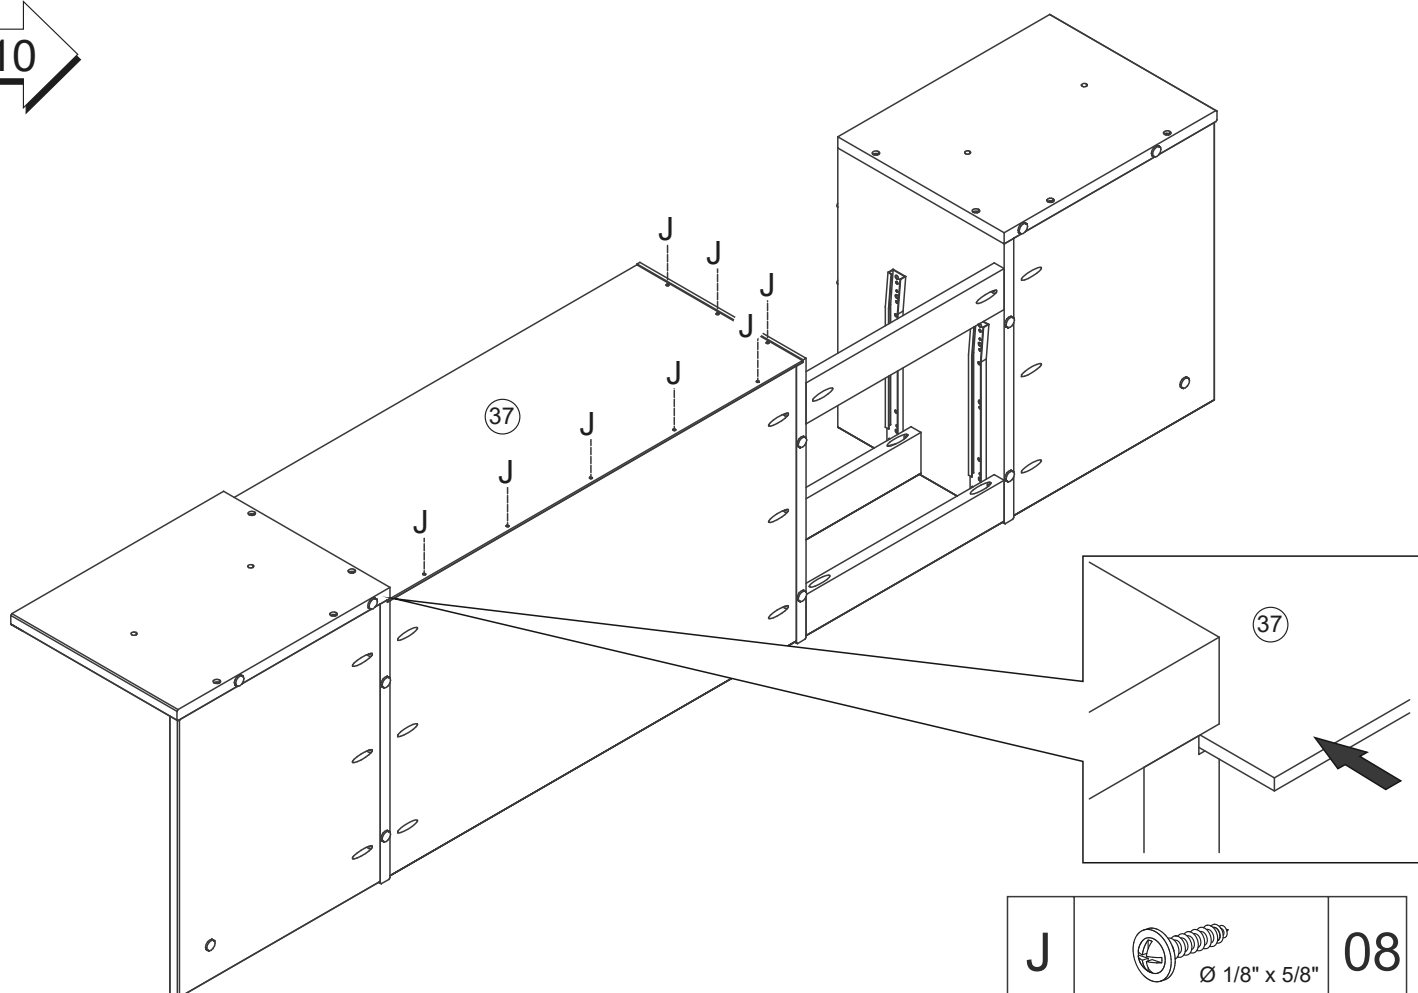

J	 $\varnothing 1/8" \times 5/8"$	08
---	-------------------------------------------------------------------------------------------------------------------------	----





11



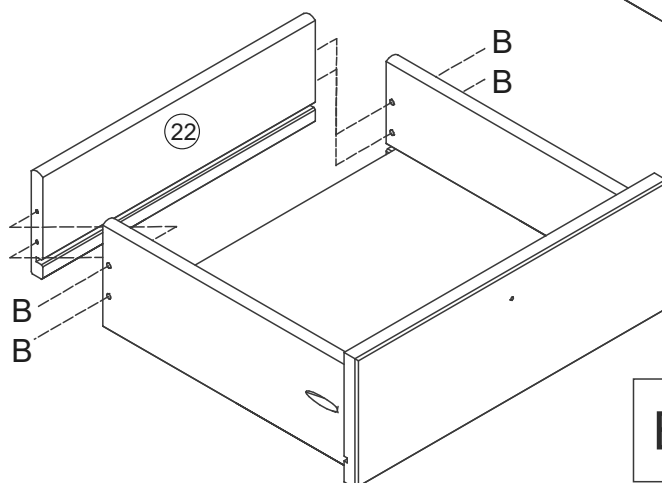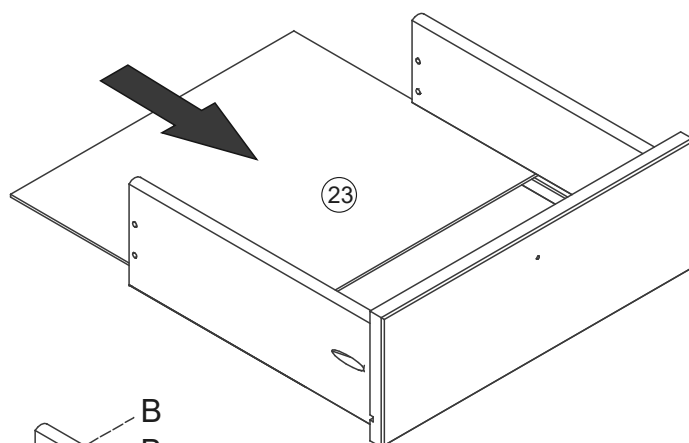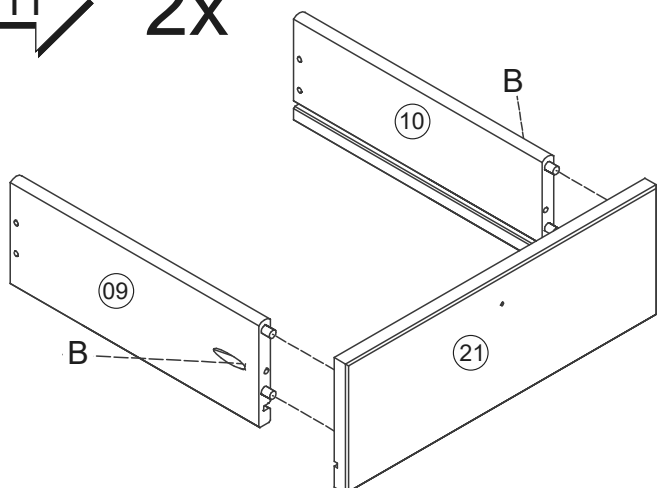


2x

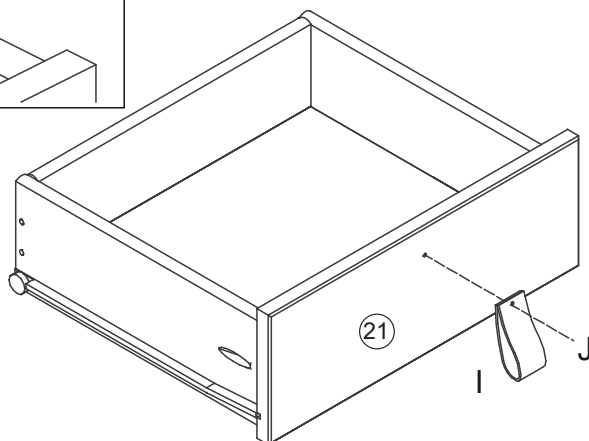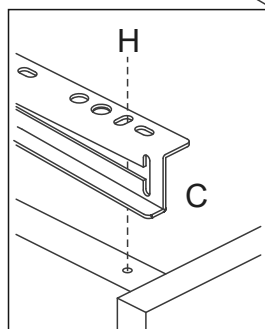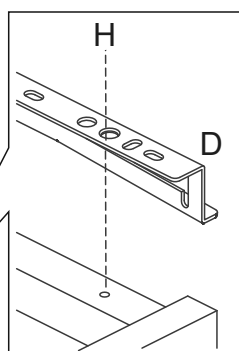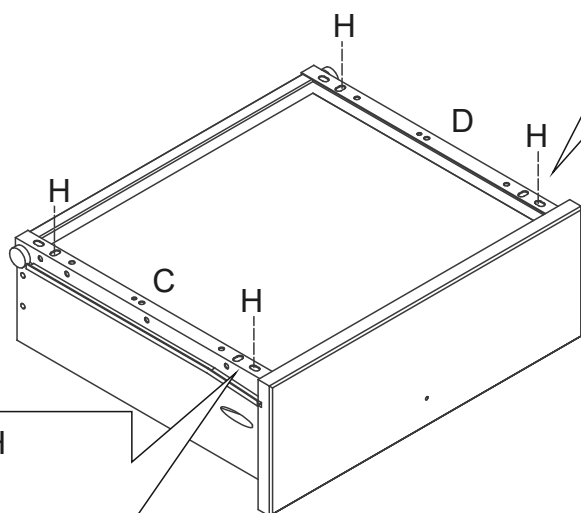


12

2x







I		Handle	02	J		Ø 1/8" x 5/8"	02
H		Ø 1/8" x 9/16"	08	C		12"	02
				D		12"	02


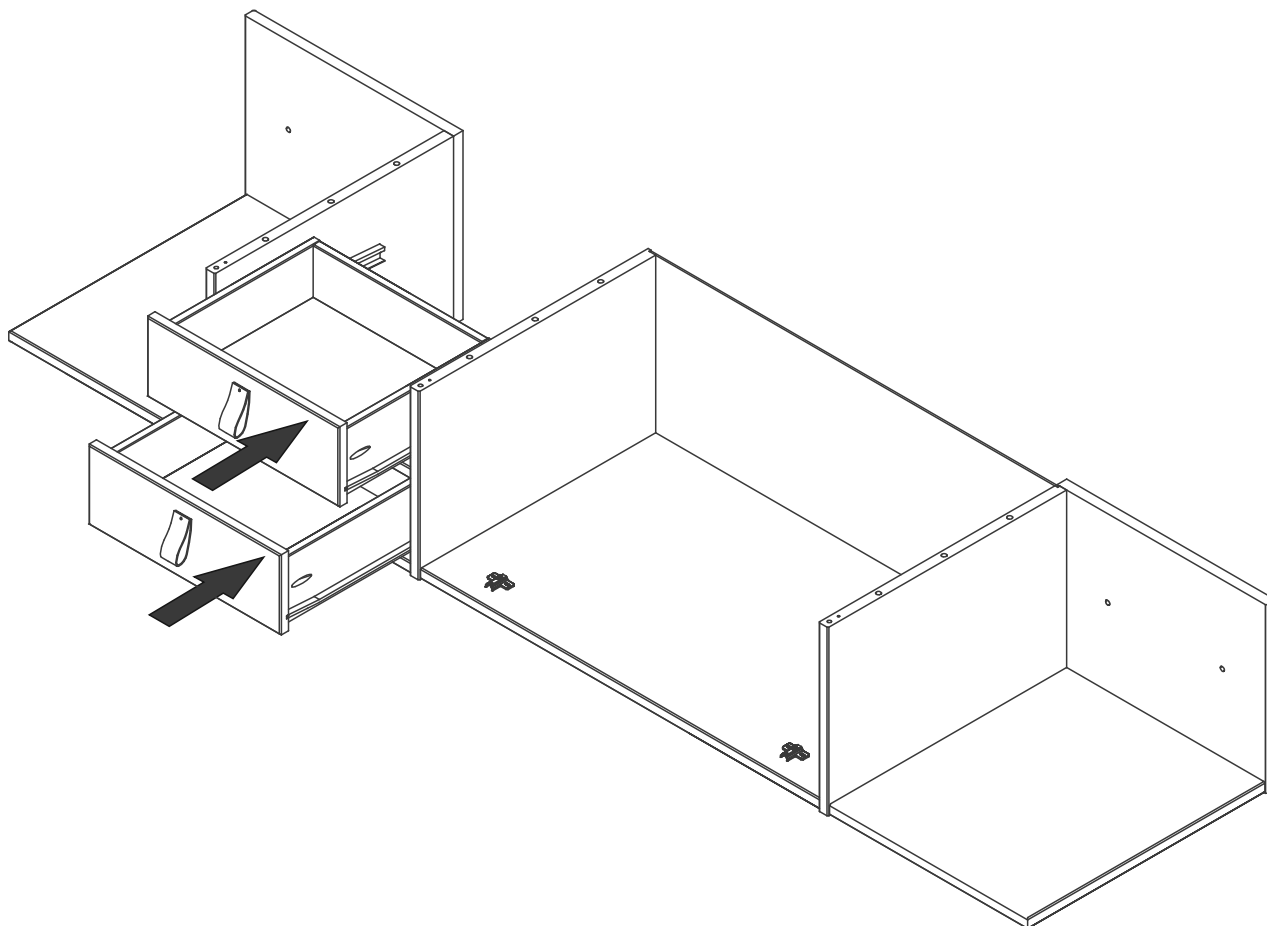
13

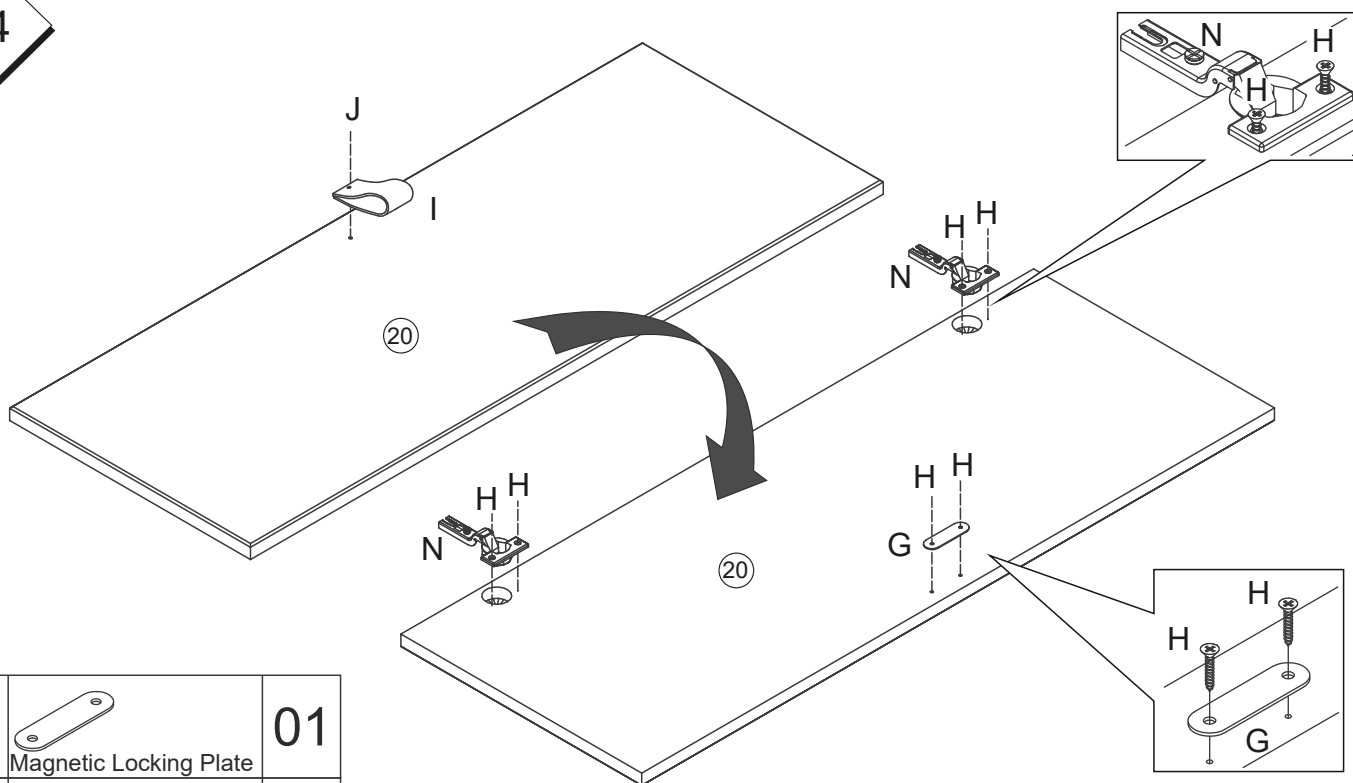


14




G		01
H	 Ø 1/8" x 9/16"	06
I		01

J	 Ø 1/8" x 5/8"	01	N		02
---	------------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------	----




Drawer Adjustment

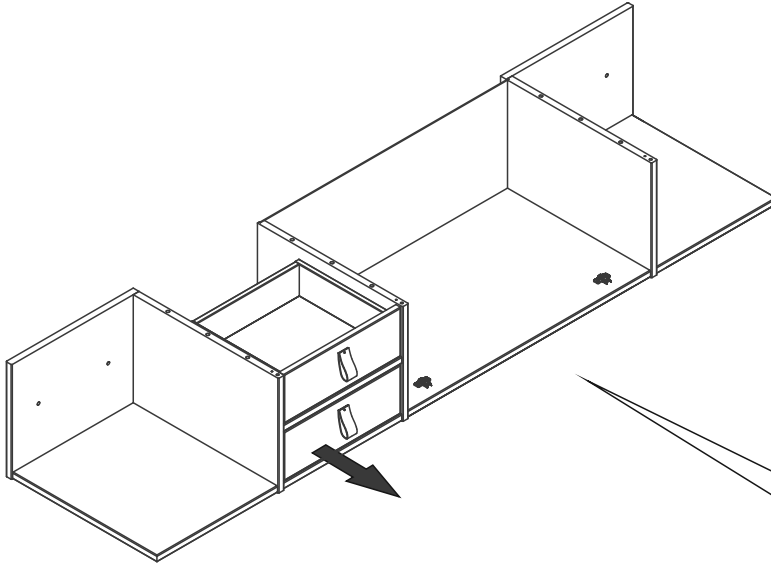

It is necessary to remove two screws from the slide to adjust


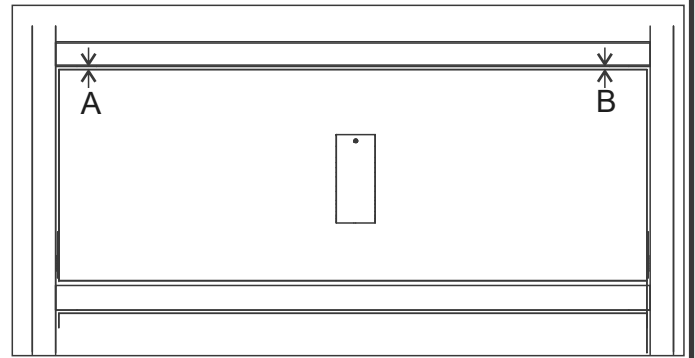


$A \neq B$

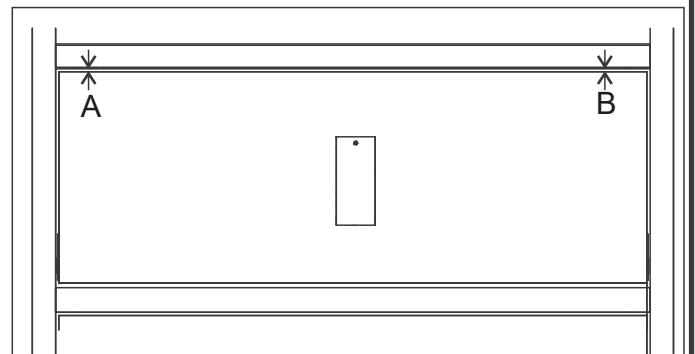
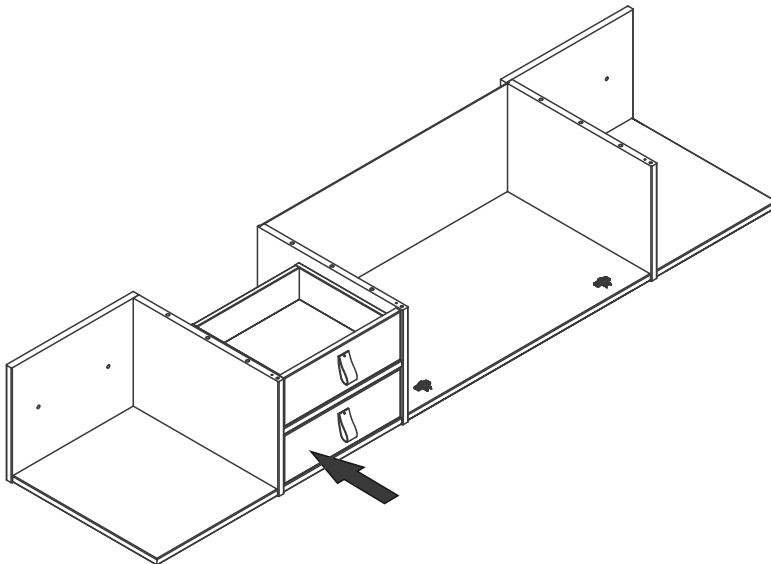
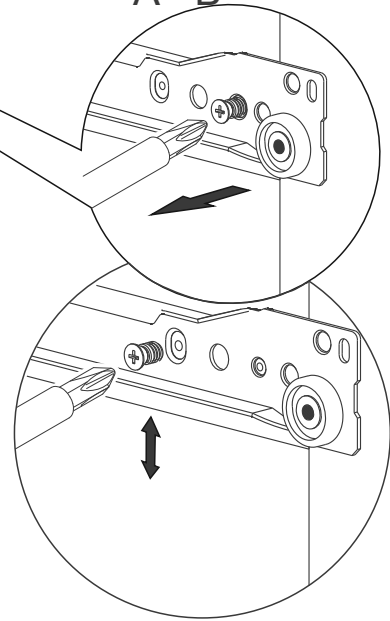


$A = B$

Drawer Adjustment

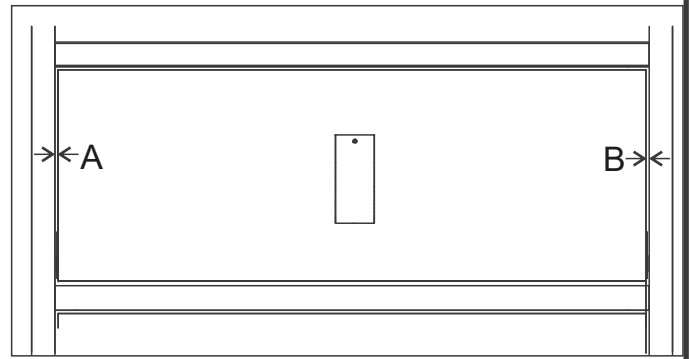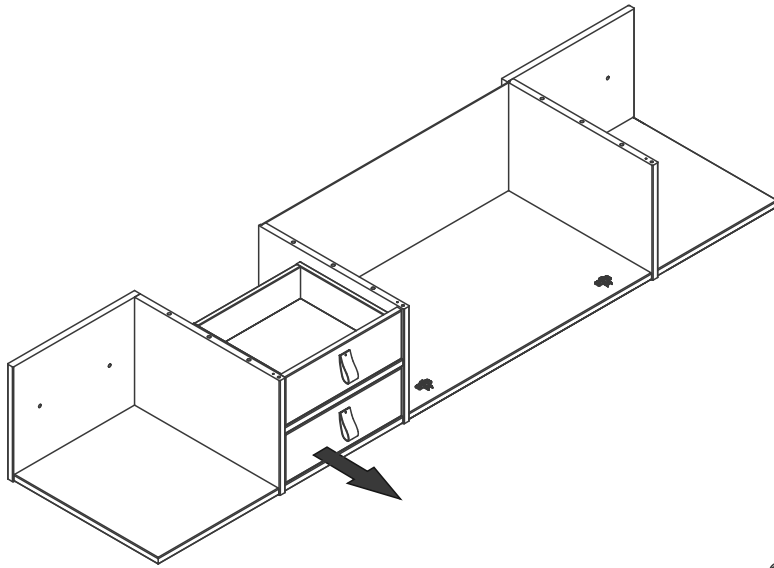


$A \neq B$

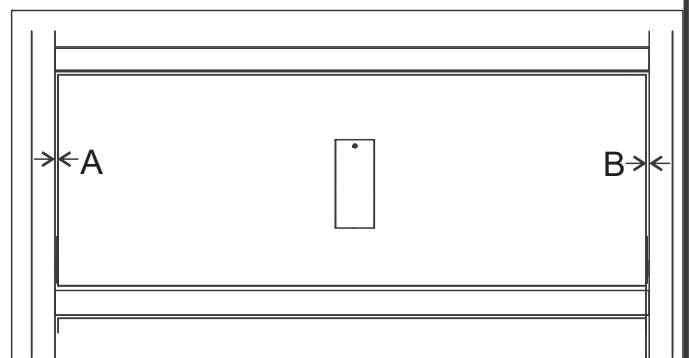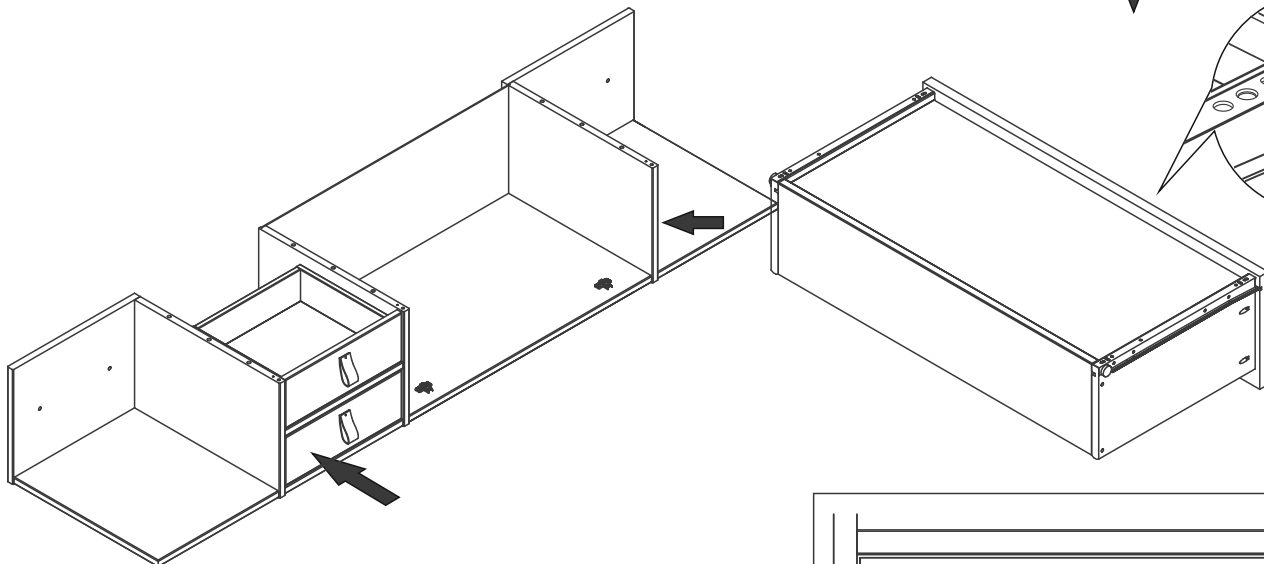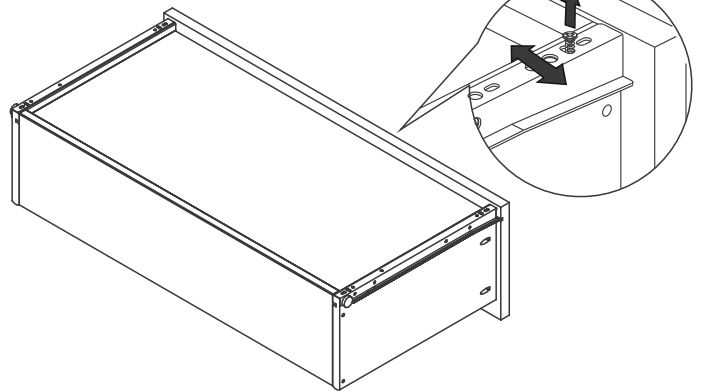

$A = B$








Side Module 1

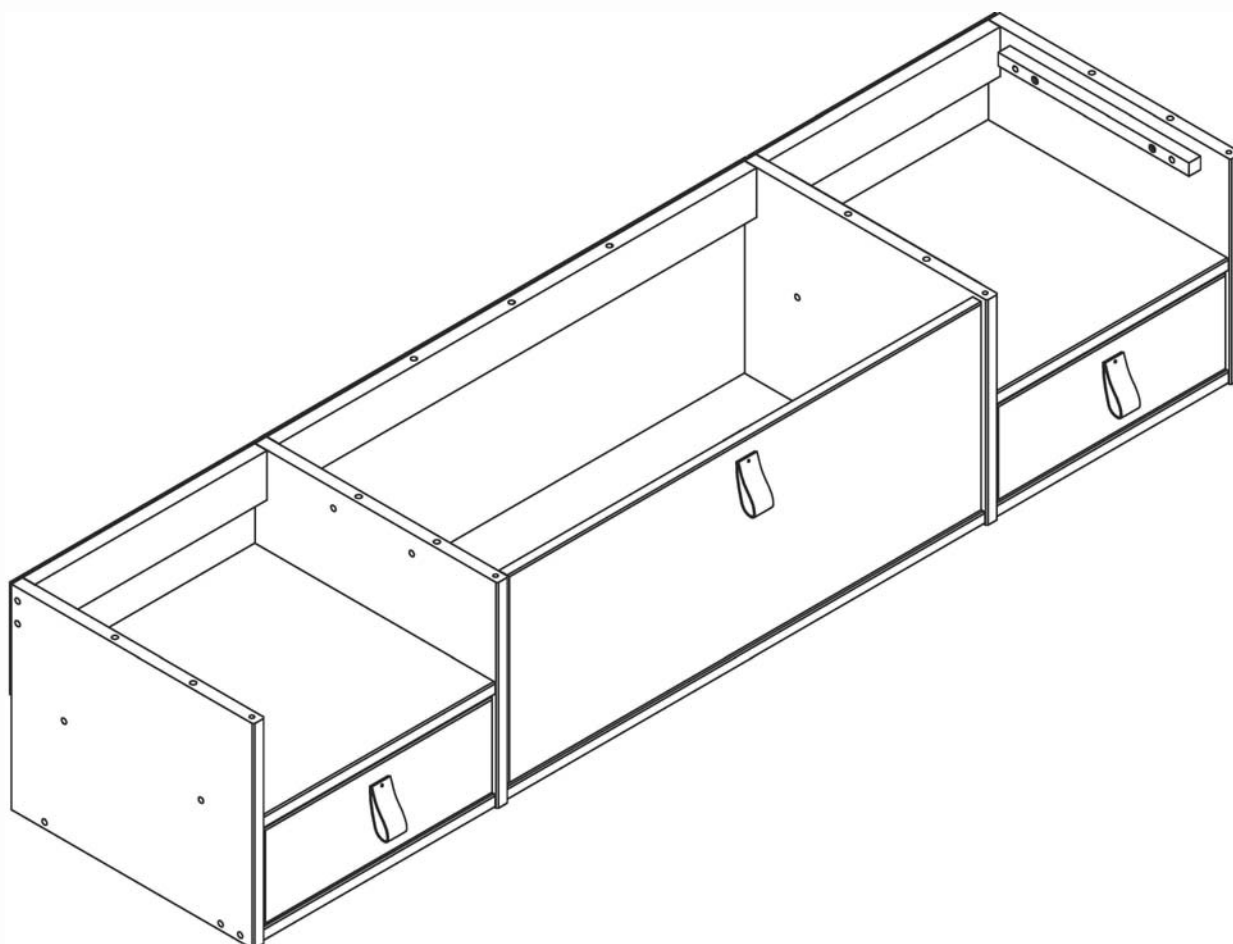





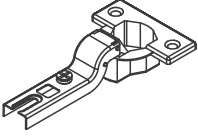


Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES



A	 Ø 5/16" x 1"	44
B	 Ø 5/32" x 1.3/16"	30
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	08
G	 Magnetic Locking Plate	01

H	 Ø 1/8" x 9/16"	18
I	 Handle	03
J	 Ø 1/8" x 9/16"	33
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01
M	 Wedge	02
N	 Hinge-joint	02



COMPONENTS

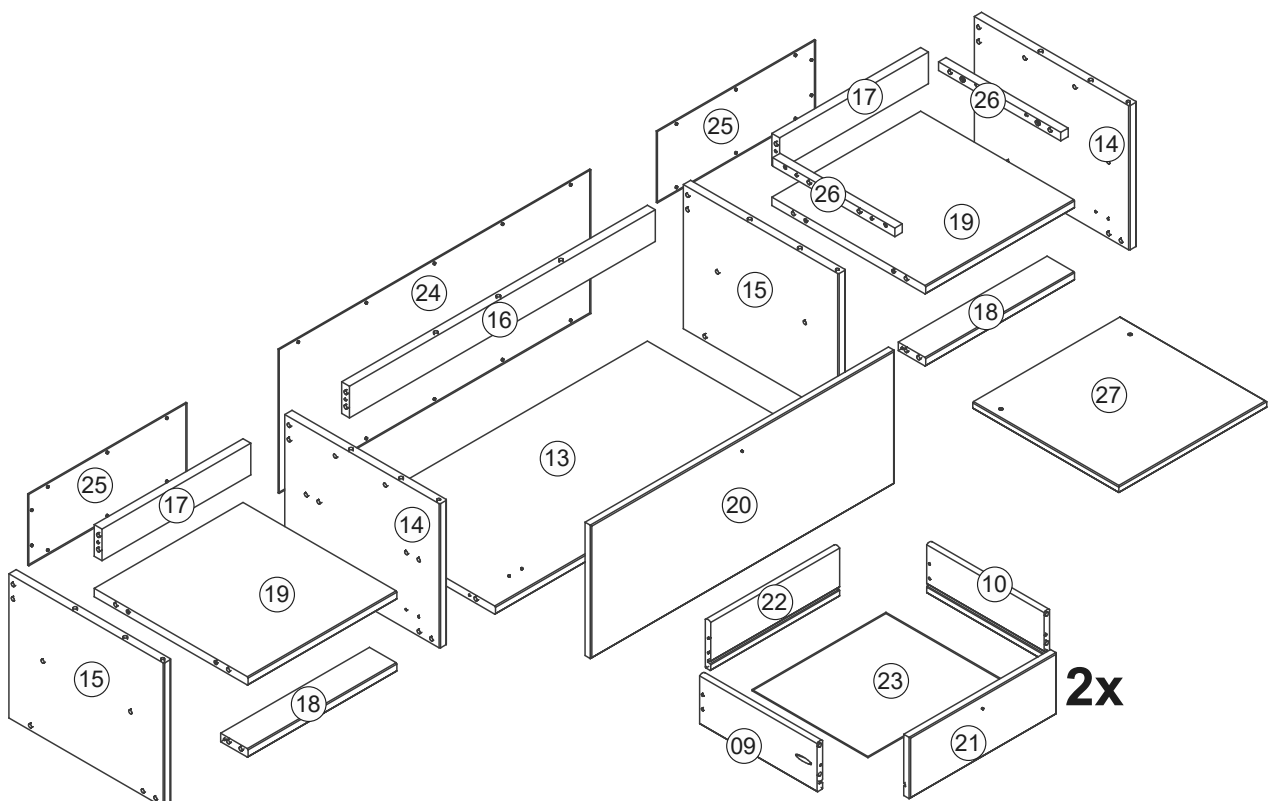


17 2x

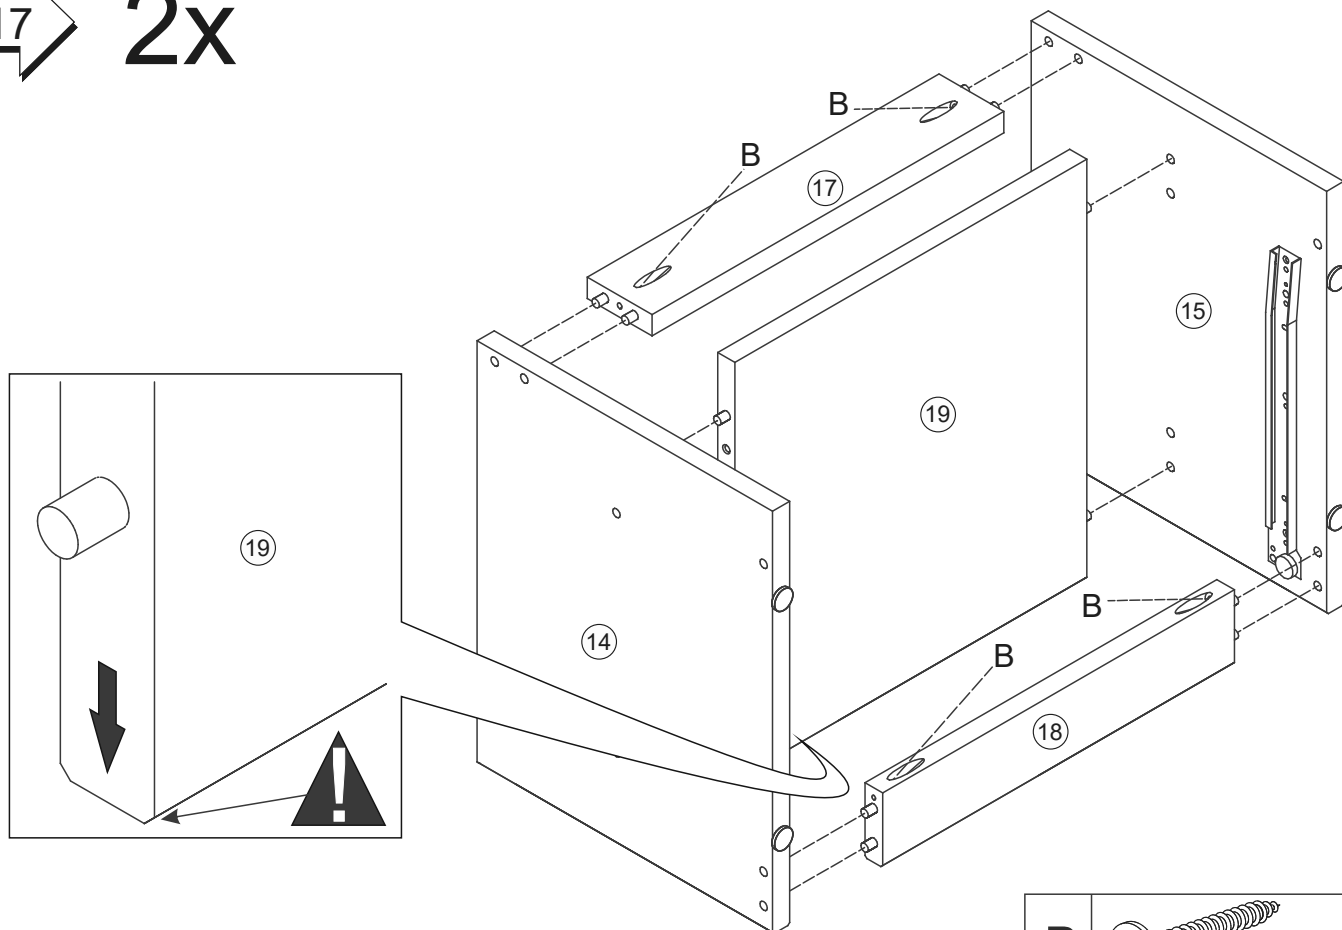


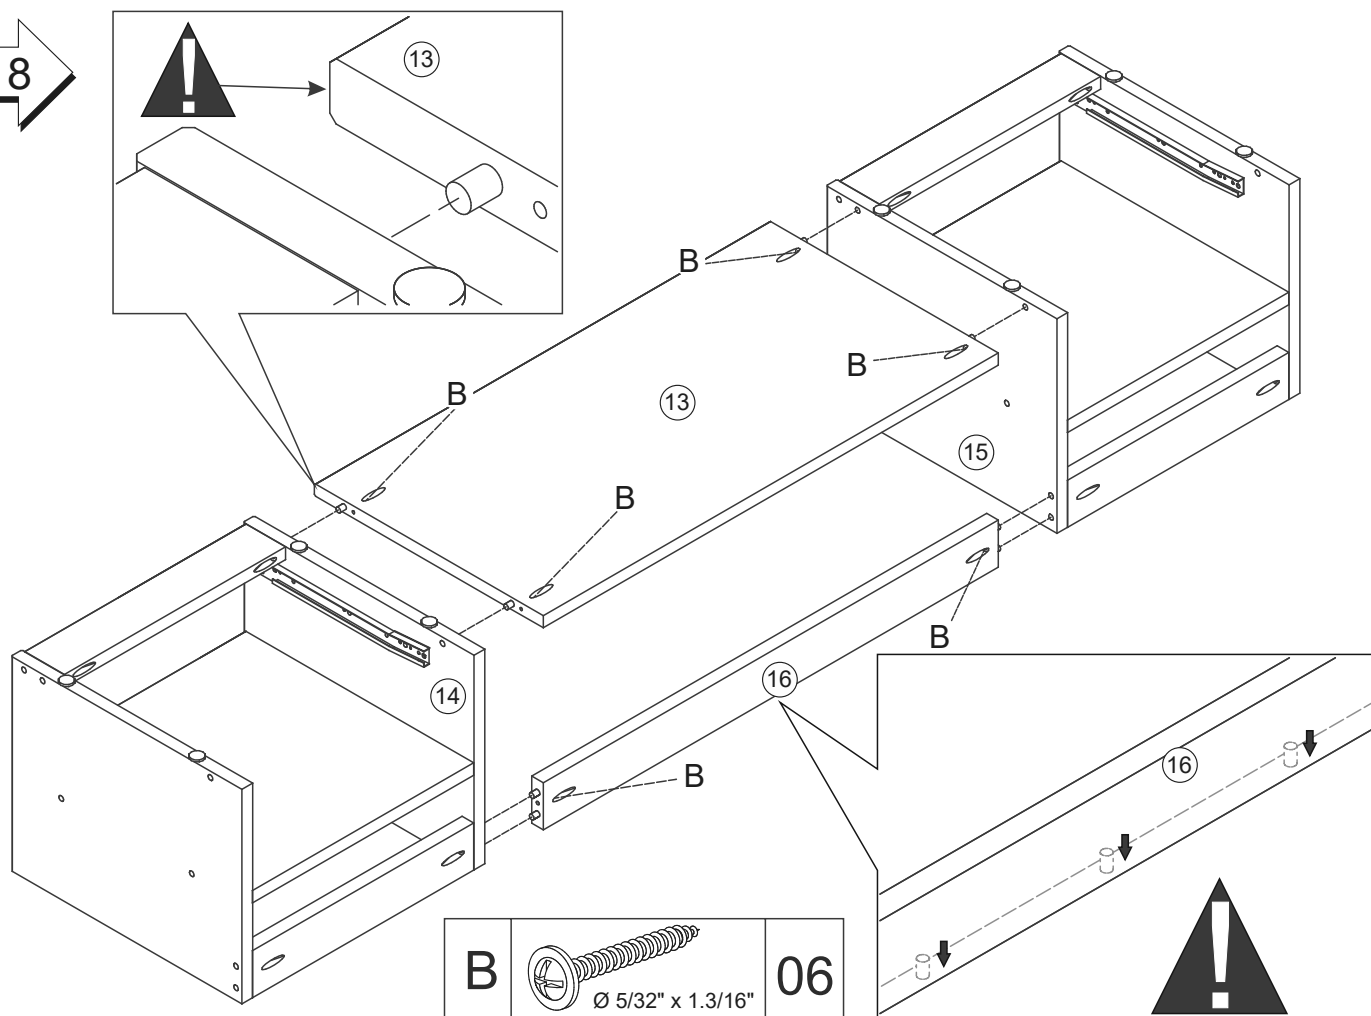

18

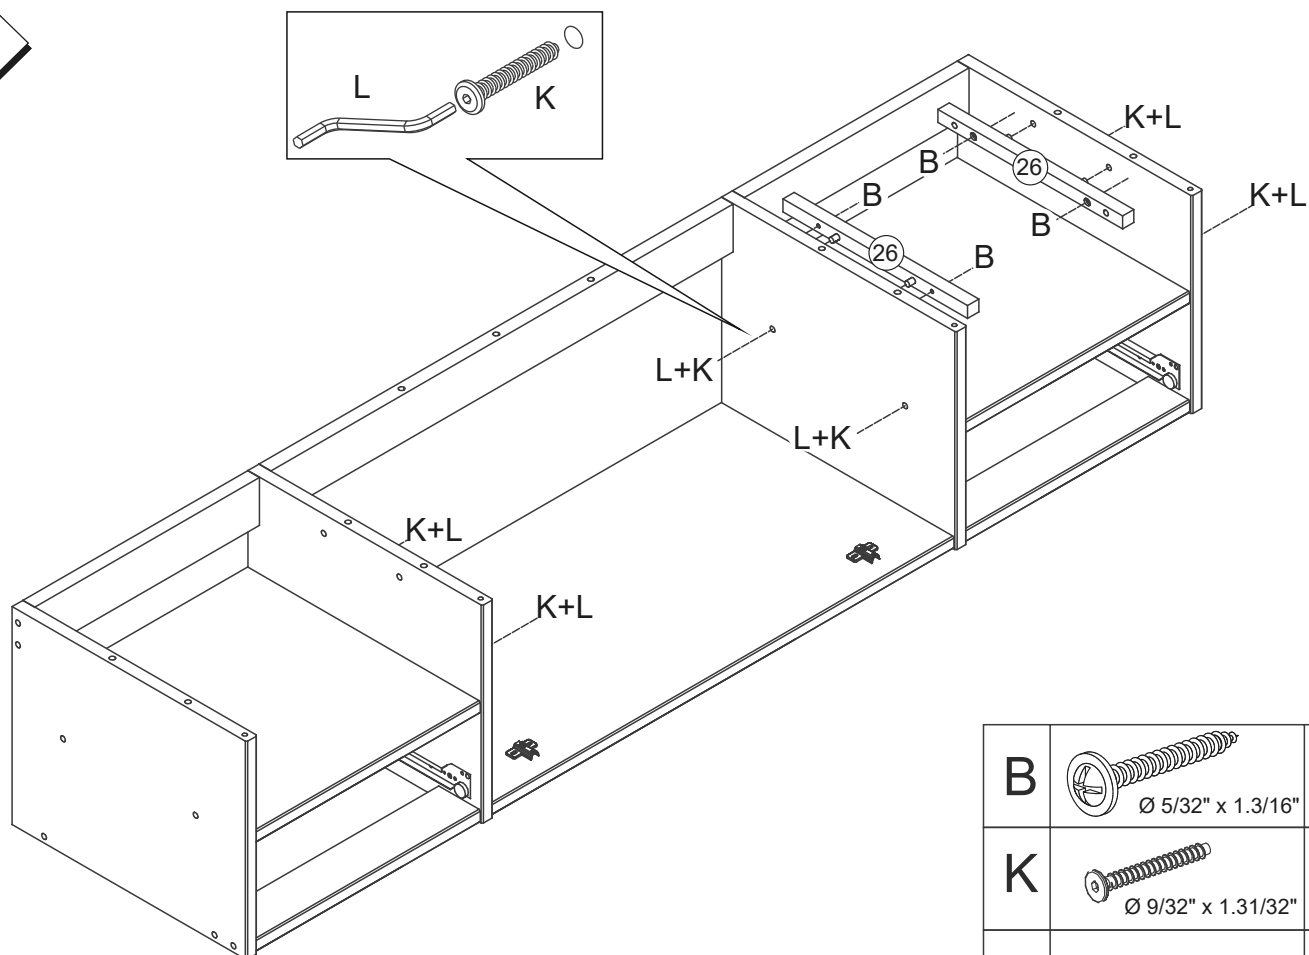



19






B	 Ø 5/32" x 1.3/16"	04
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01


20

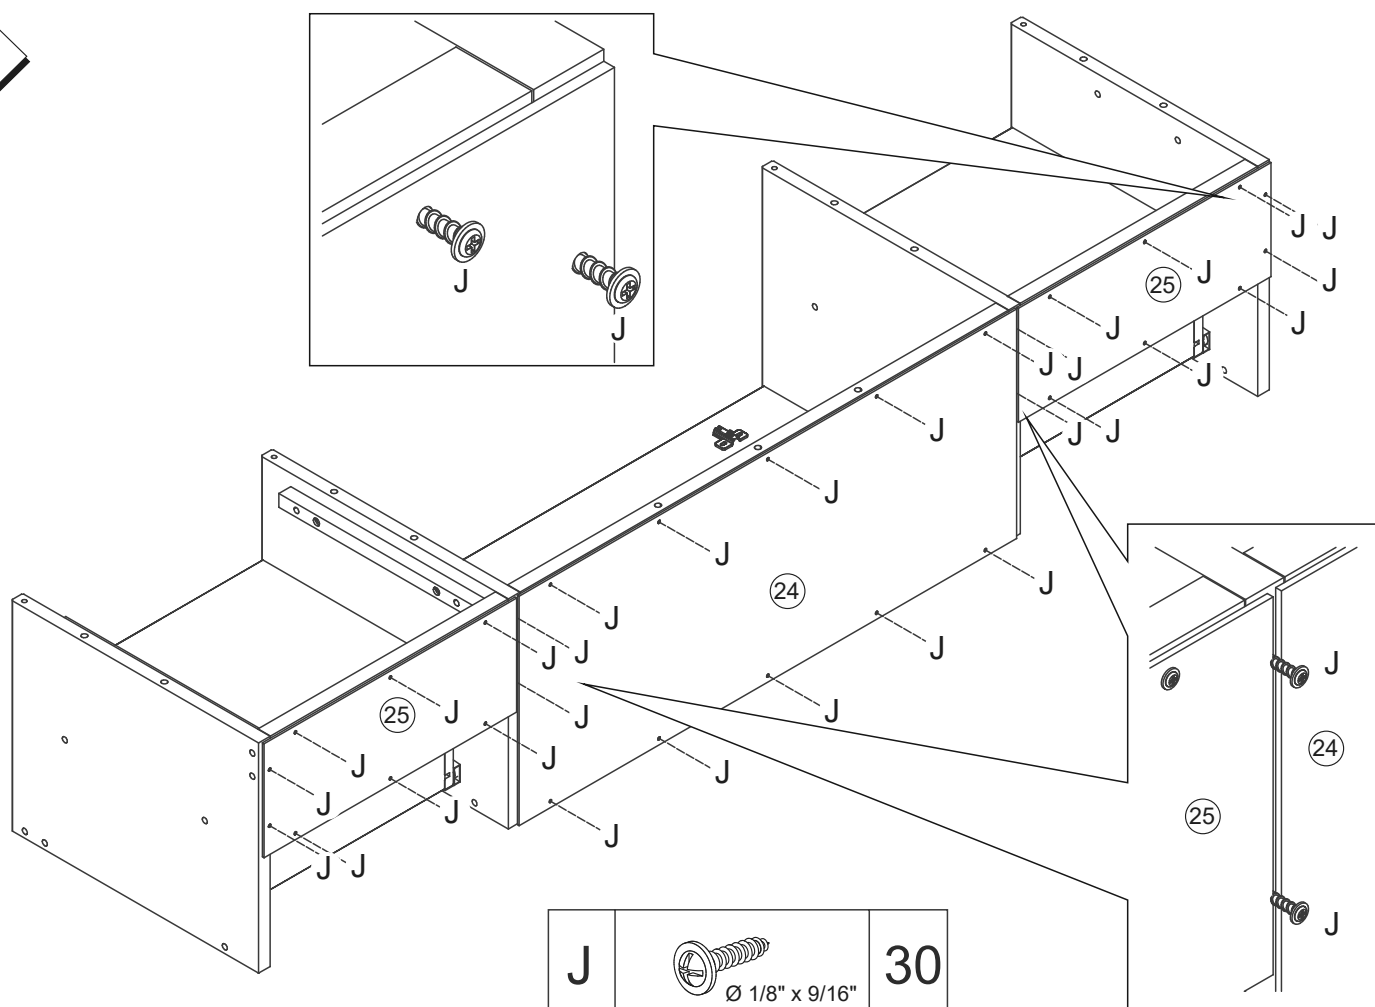





J	 Ø 1/8" x 9/16"	30
---	-------------------------------------------------------------------------------------------------------	----






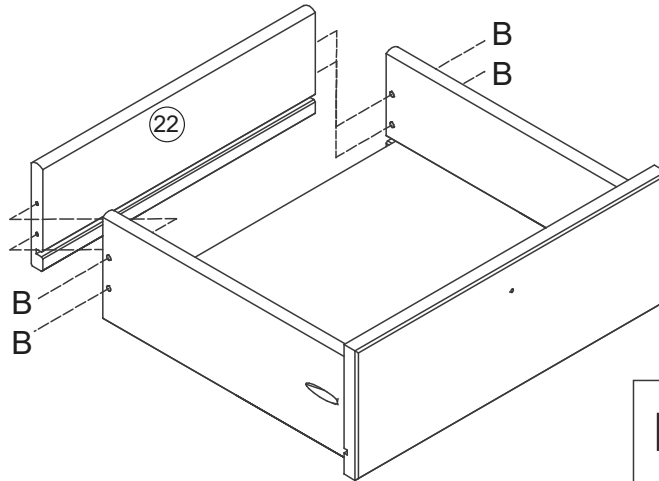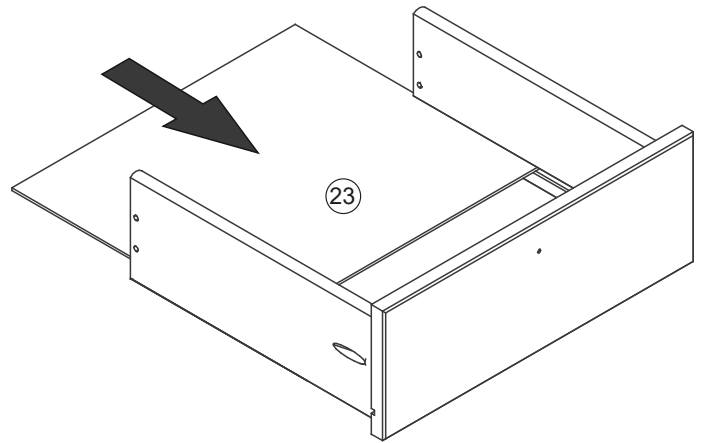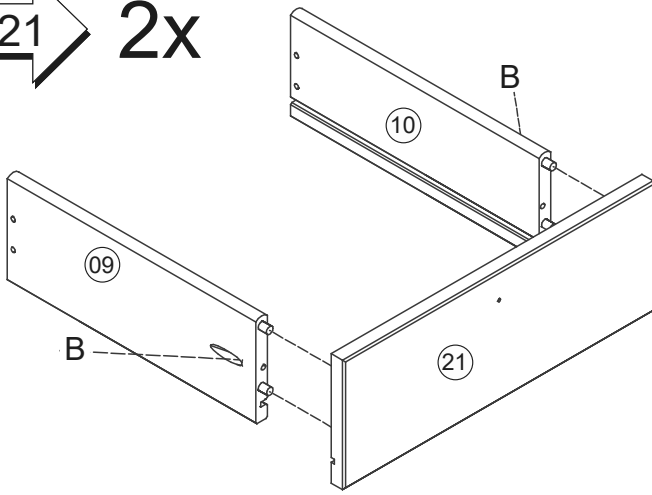21 → 2x




B		Ø 5/32" x 1.3/16"	12
---	--------------------------------------------------------------------------------------	-------------------	----

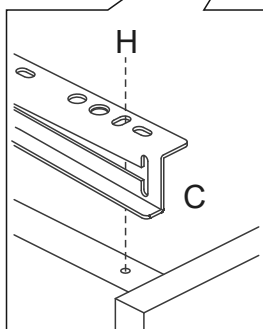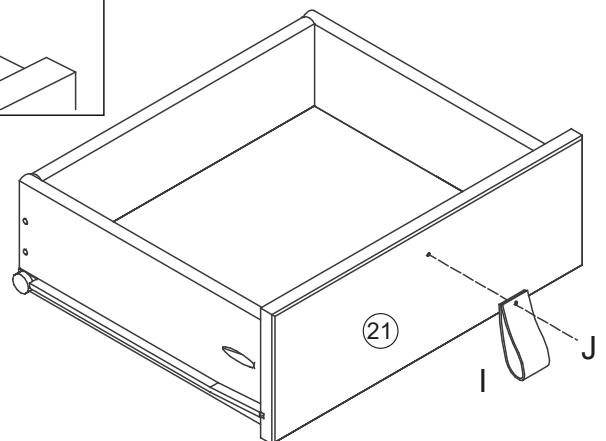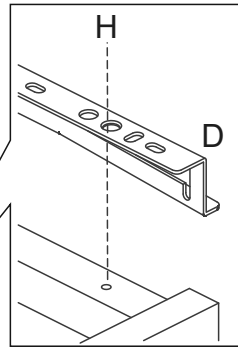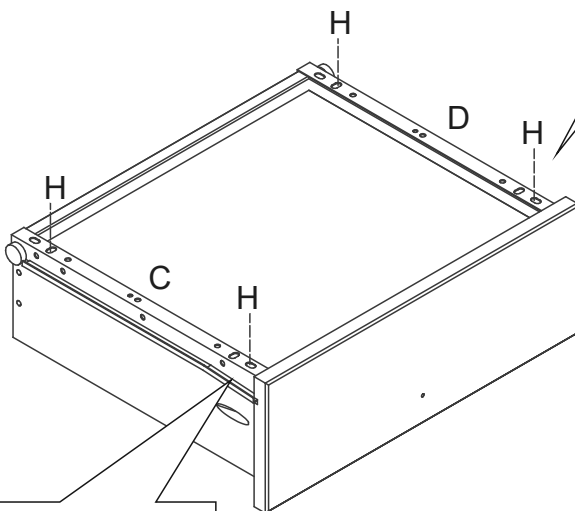22 → 2x







I		Handle	02	J		Ø 1/8" x 9/16"	02
H		Ø 1/8" x 9/16"	08	C		12"	02
				D		12"	02



23

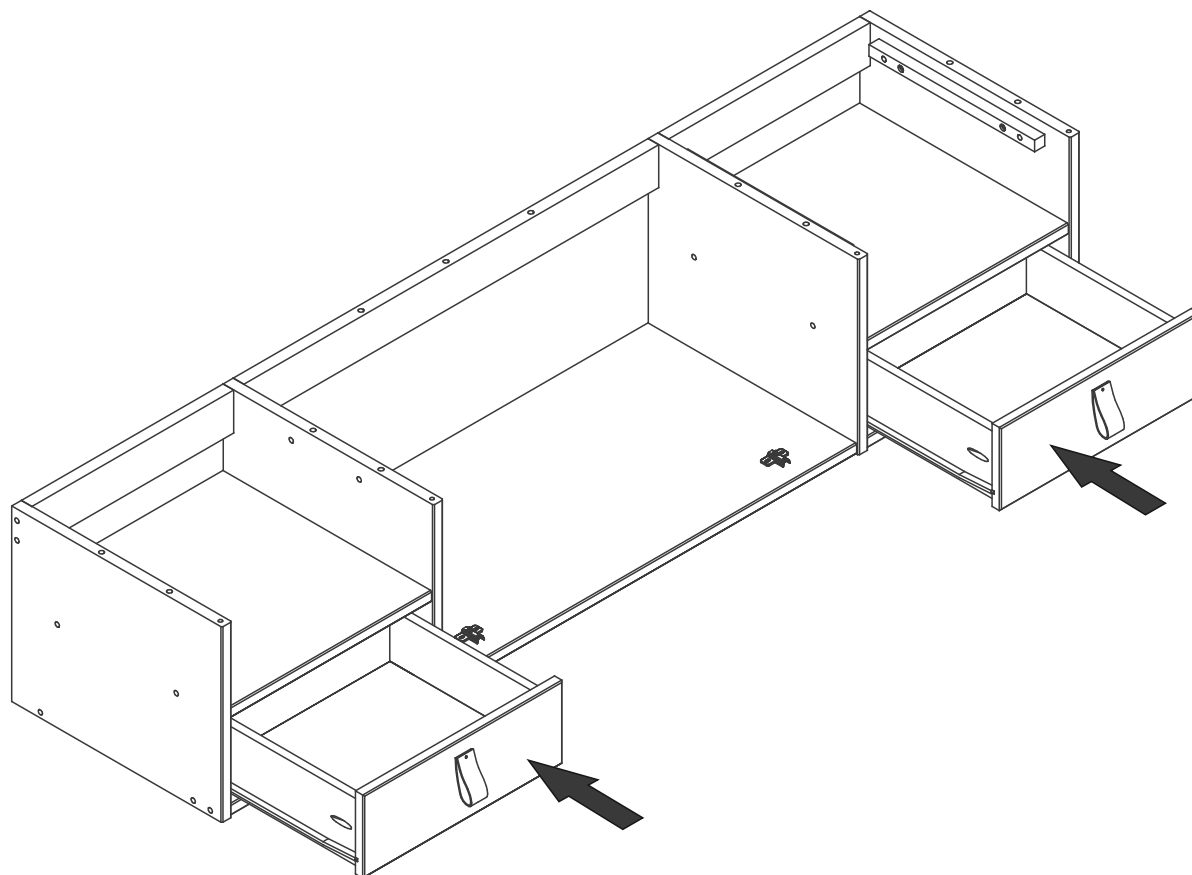


24

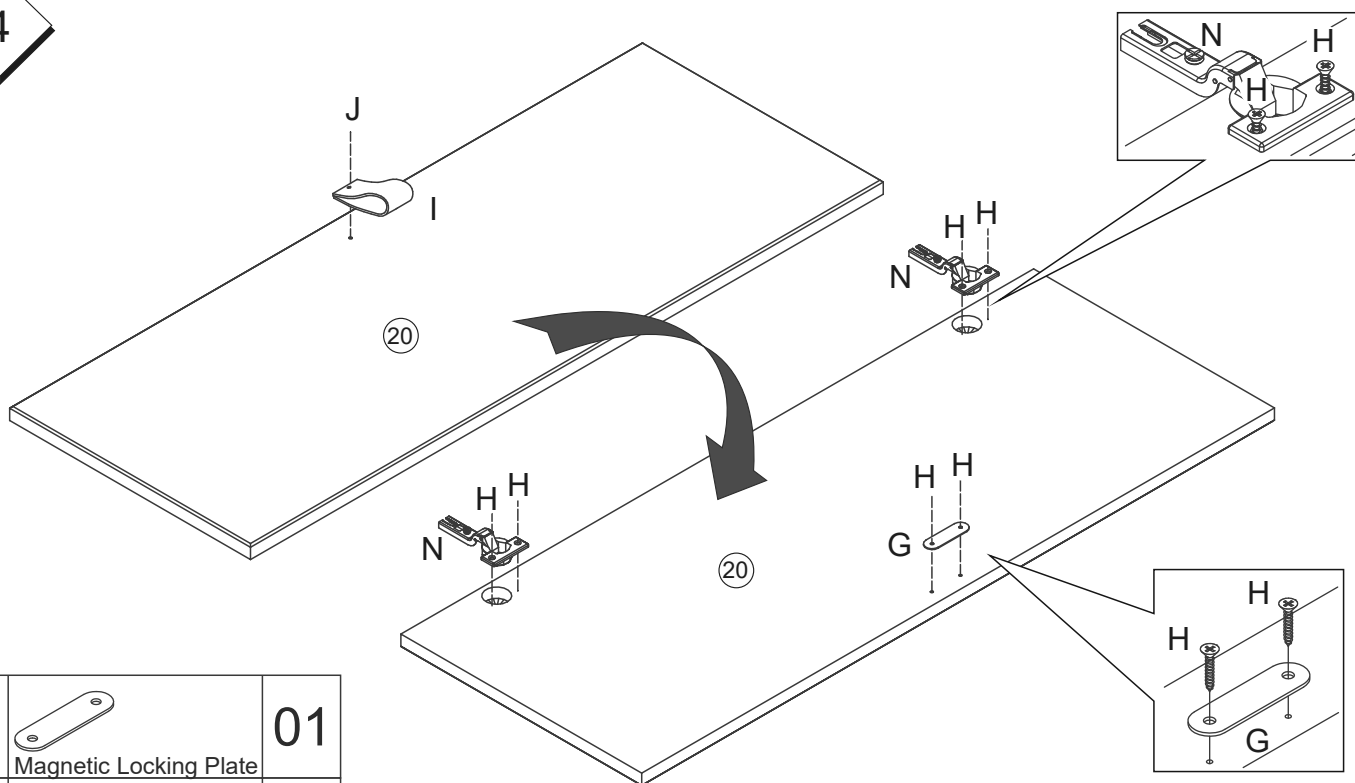


G		01
H	 Ø 1/8" x 9/16"	06
I		01

J	 Ø 1/8" x 9/16"	01	N		02
---	-------------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------	----





Drawer Adjustment

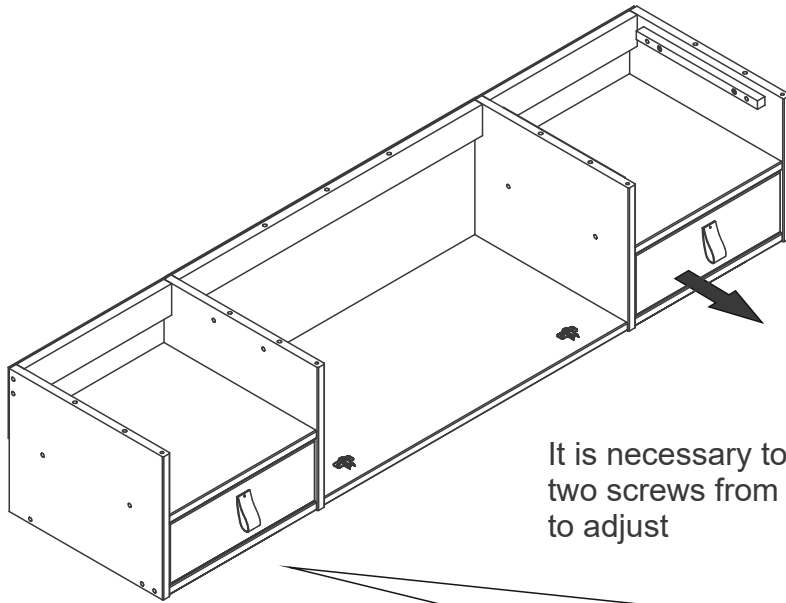

It is necessary to remove two screws from the slide to adjust

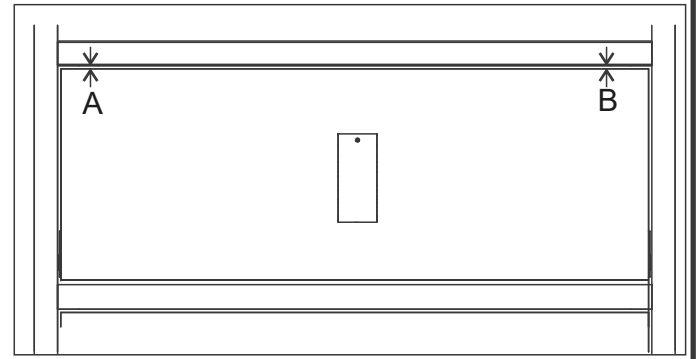


$A \neq B$

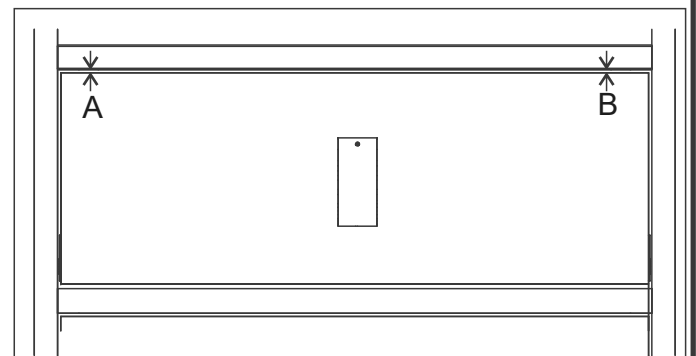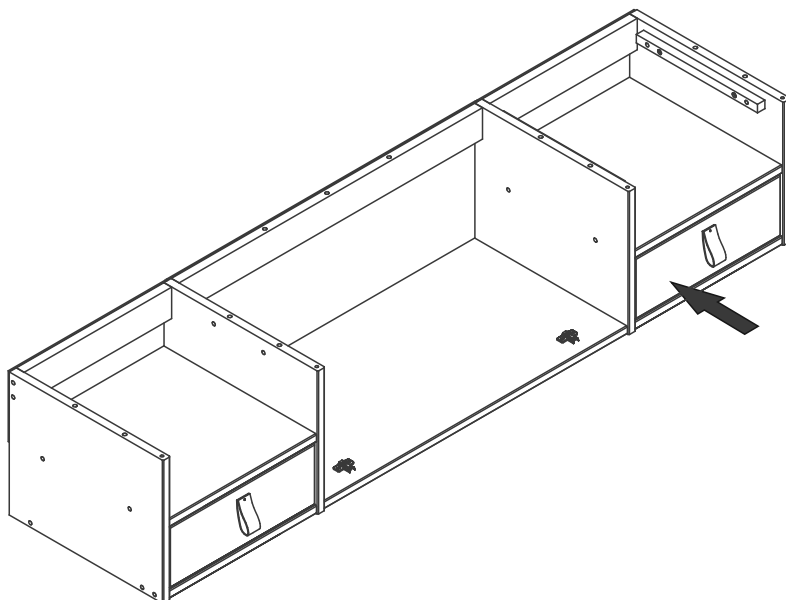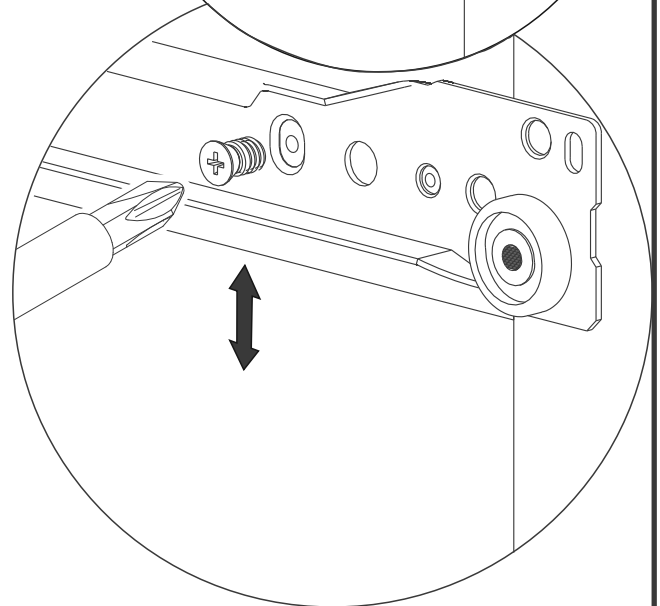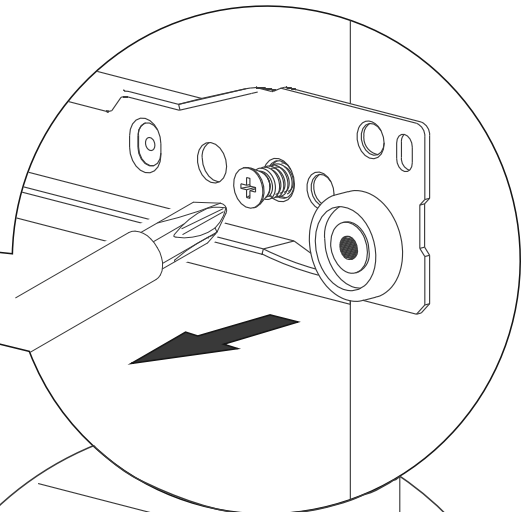


$A = B$

Drawer Adjustment

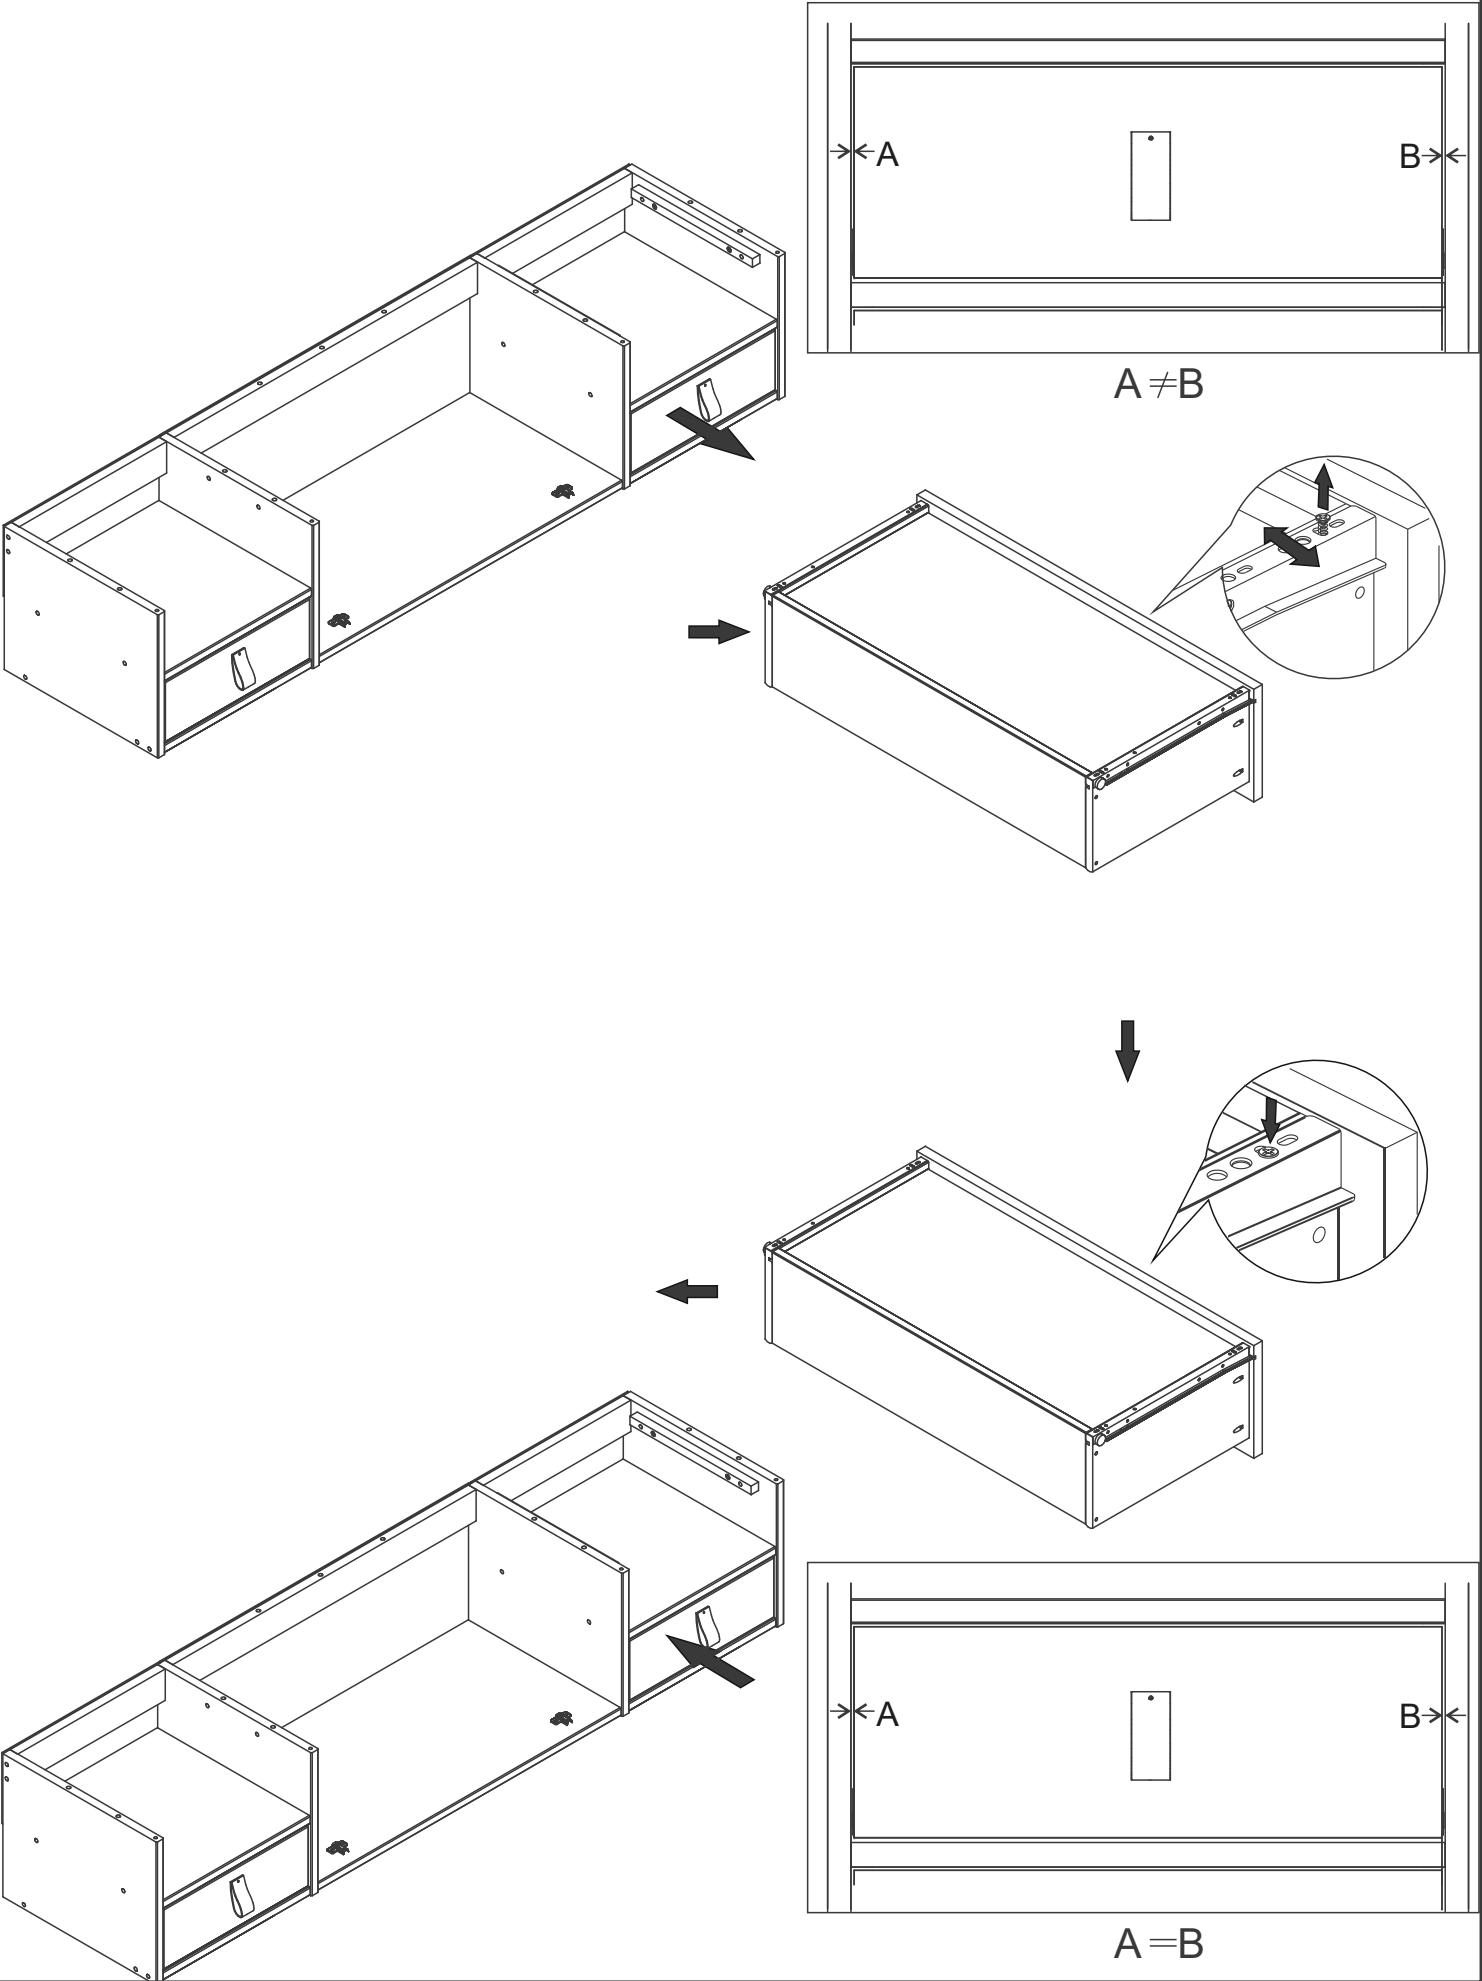








Side Module 2

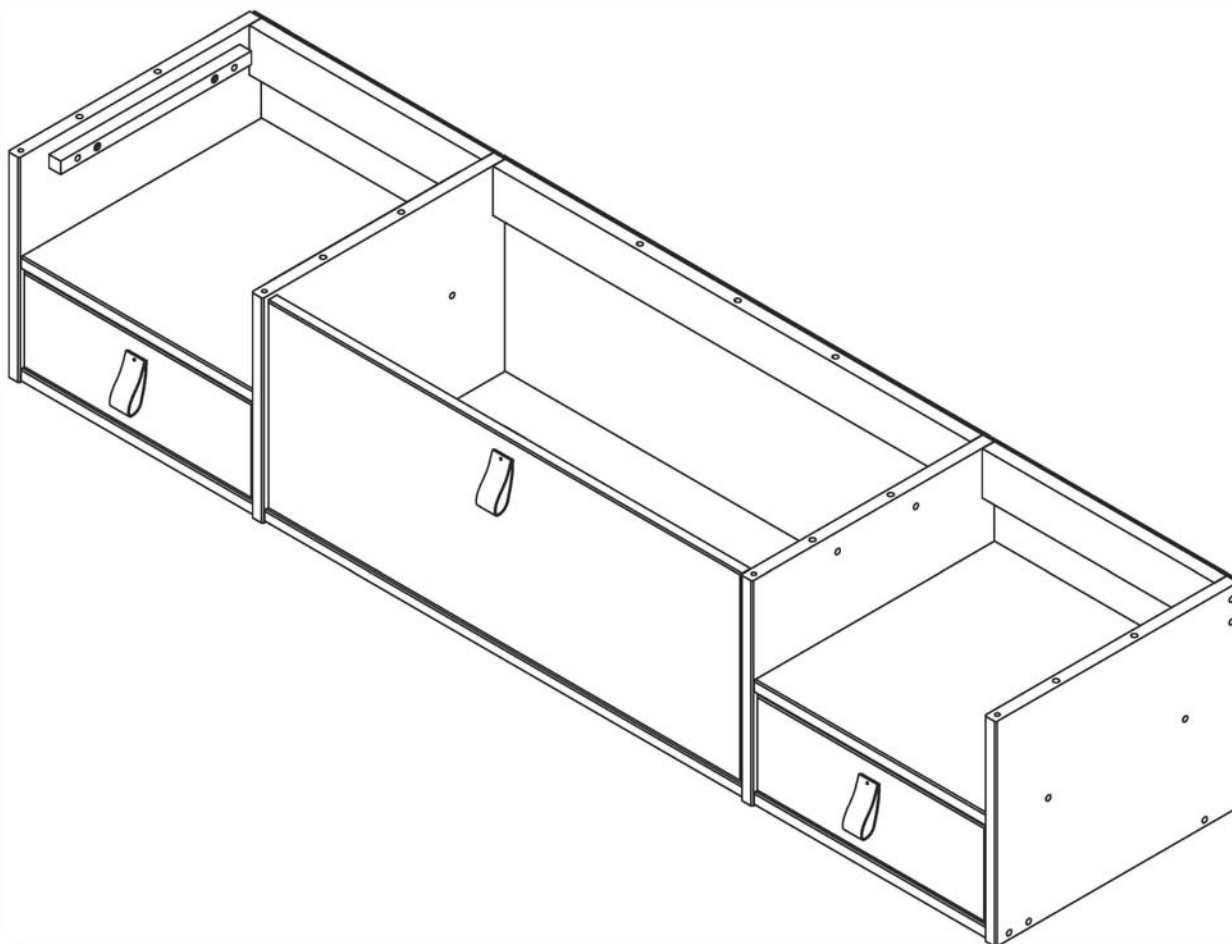





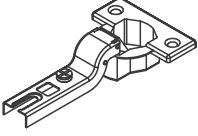


Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	44
B	 Ø 5/32" x 1.3/16"	30
C	 12"	02
D	 12"	02
E	 Ø 1/4" x 13/32"	08
F	 Furniture glide	08
G	 Magnetic Locking Plate	01



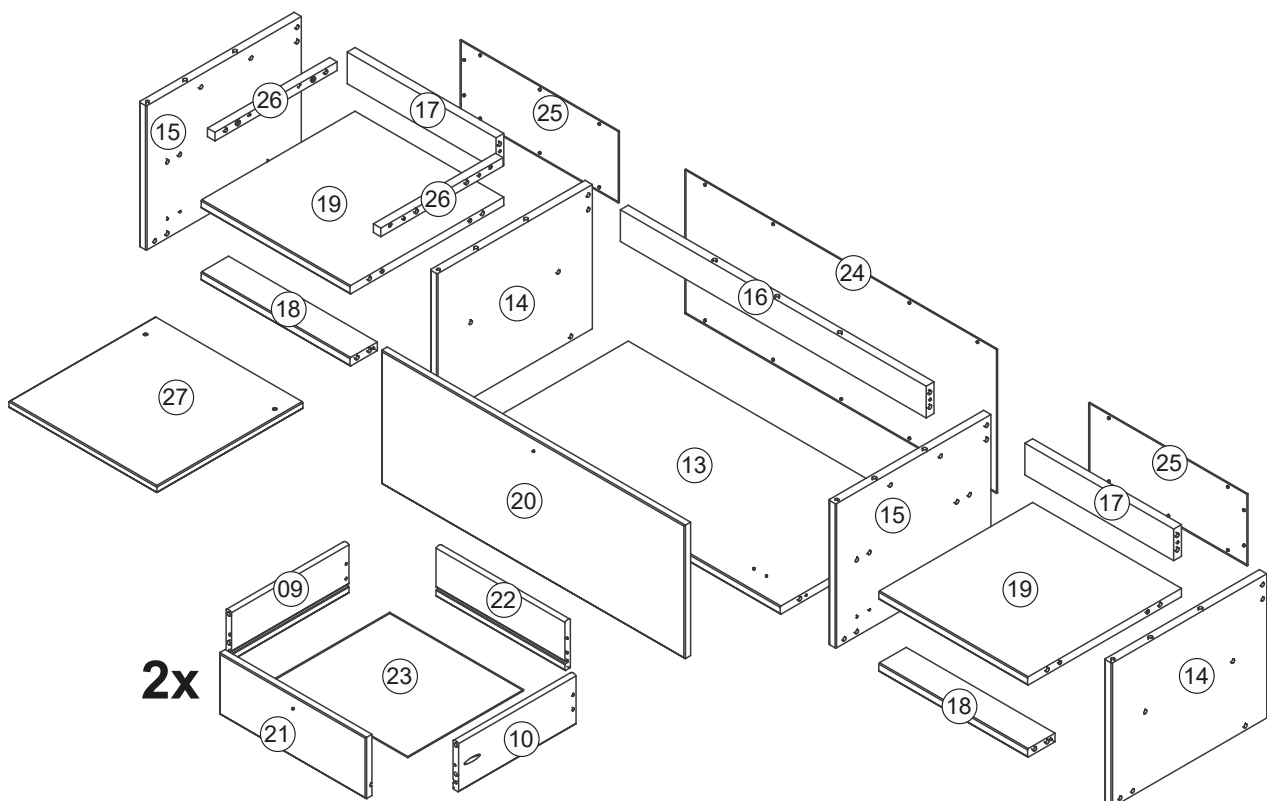

H	 Ø 1/8" x 9/16"	18
I	 Handle	03
J	 Ø 1/8" x 9/16"	33
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01
M	 Wedge	02
N	 Hinge-joint	02

COMPONENTS

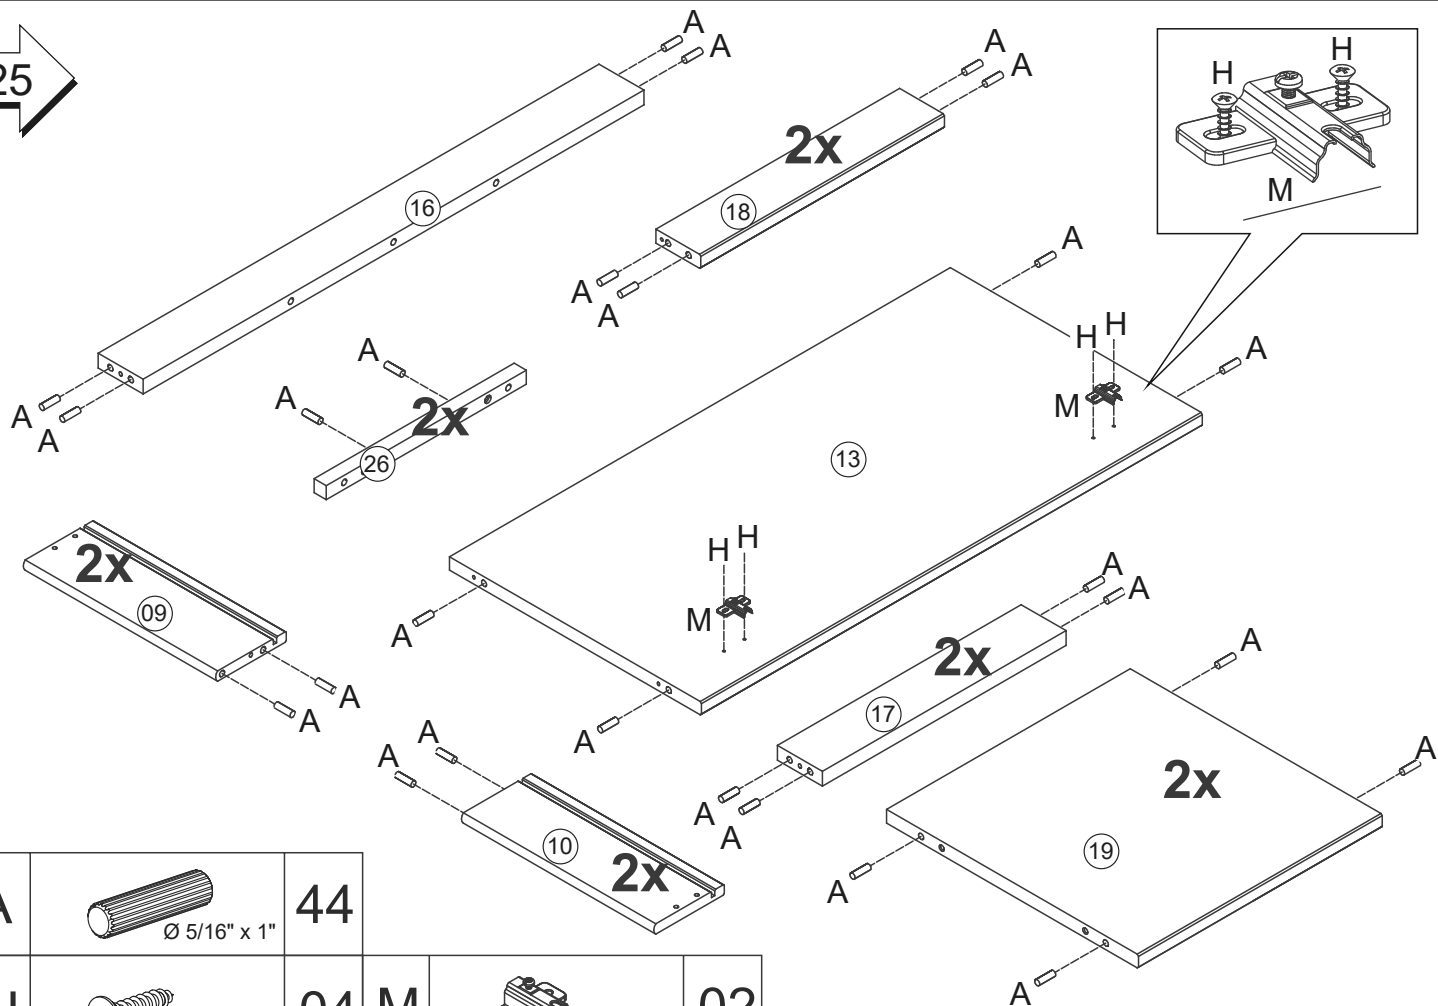


25







A	 Ø 5/16" x 1"	44	 2x		
H	 Ø 1/8" x 9/16"	04	M	 Wedge	02


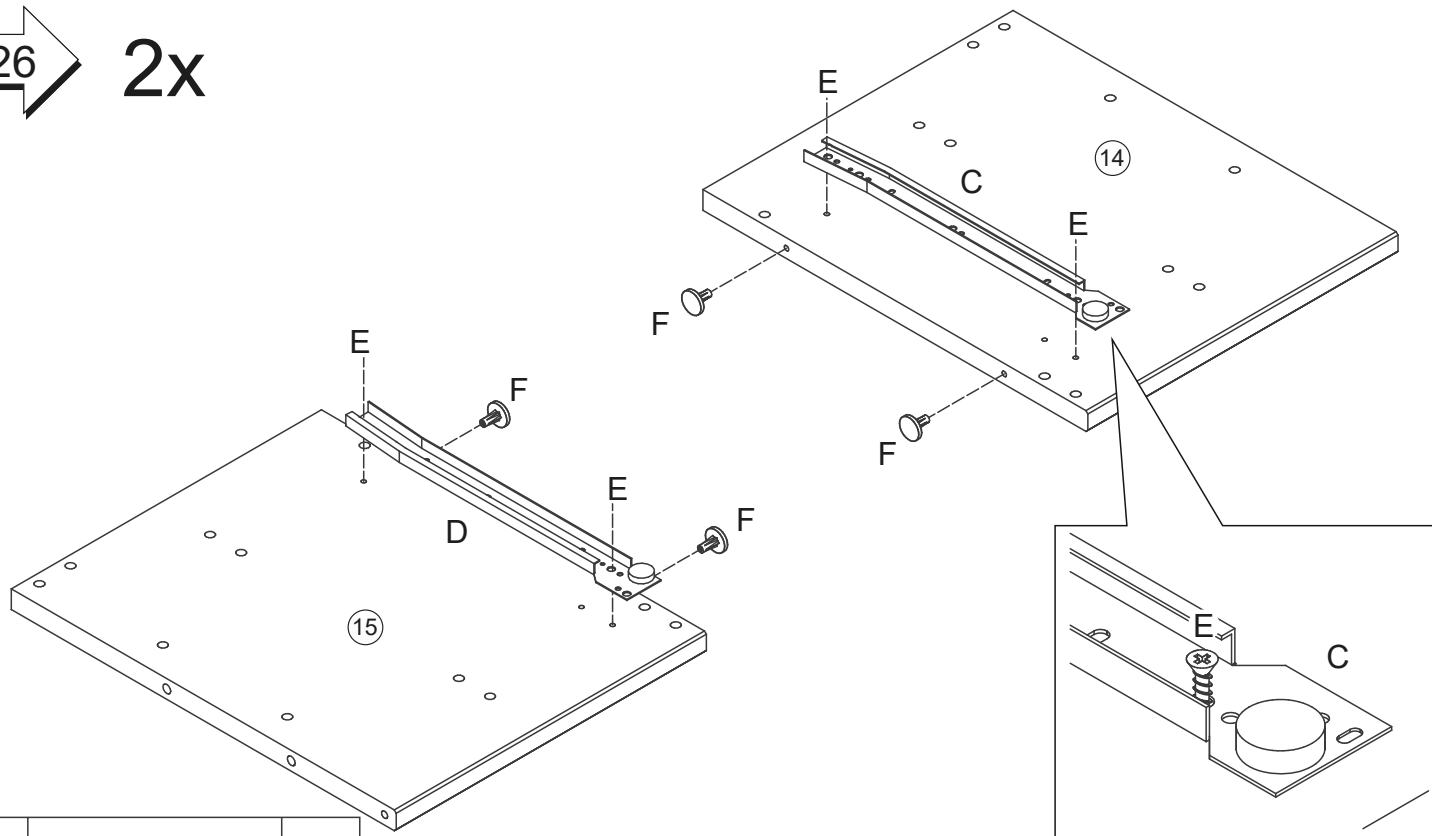
26

2x





E	 Ø 1/4" x 13/32"	08						
F	 Furniture glide	08	C	 12"	02	D	 12"	02


27 2x


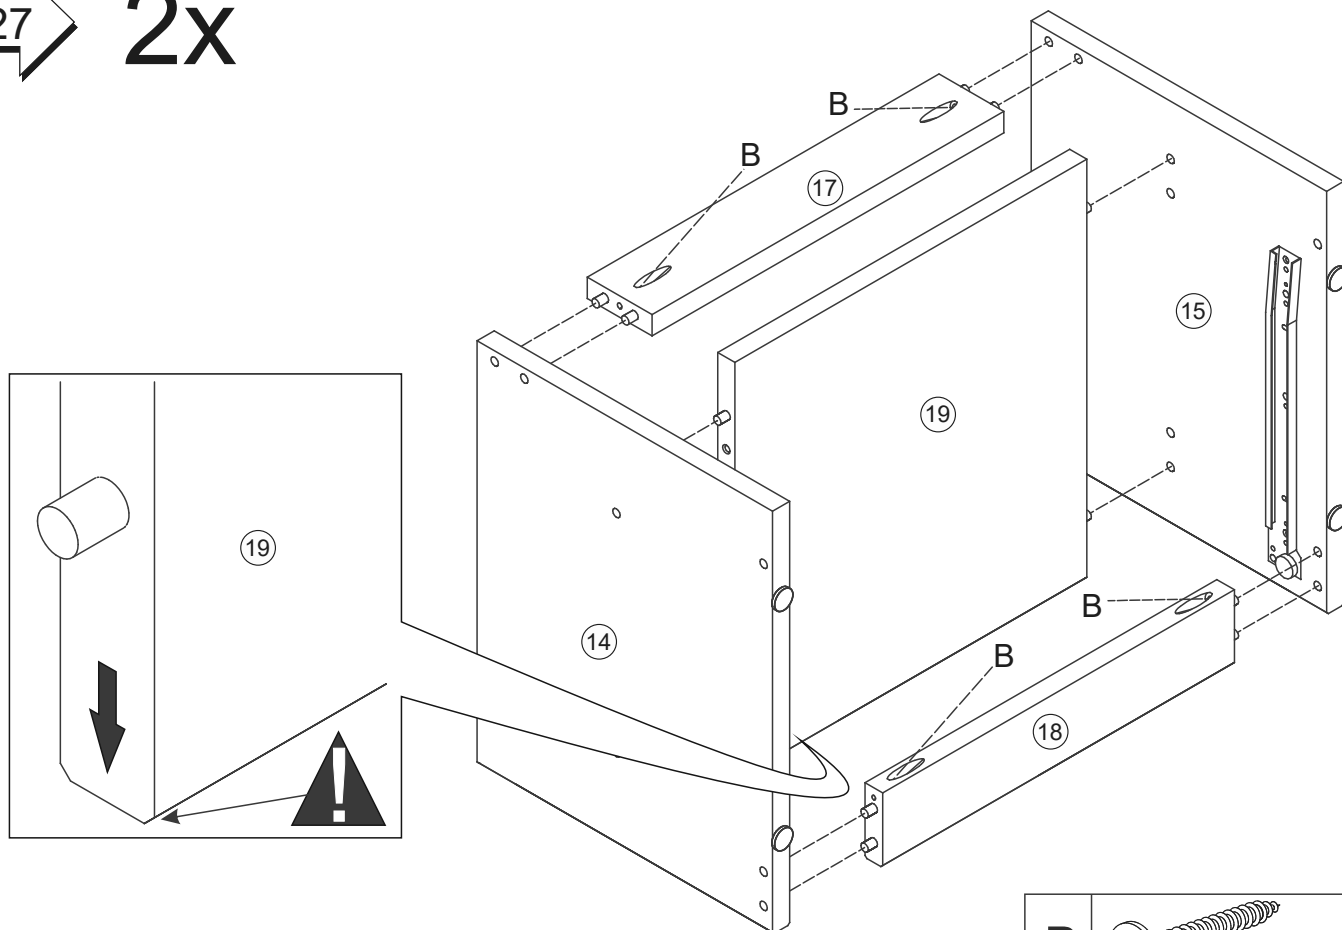



28

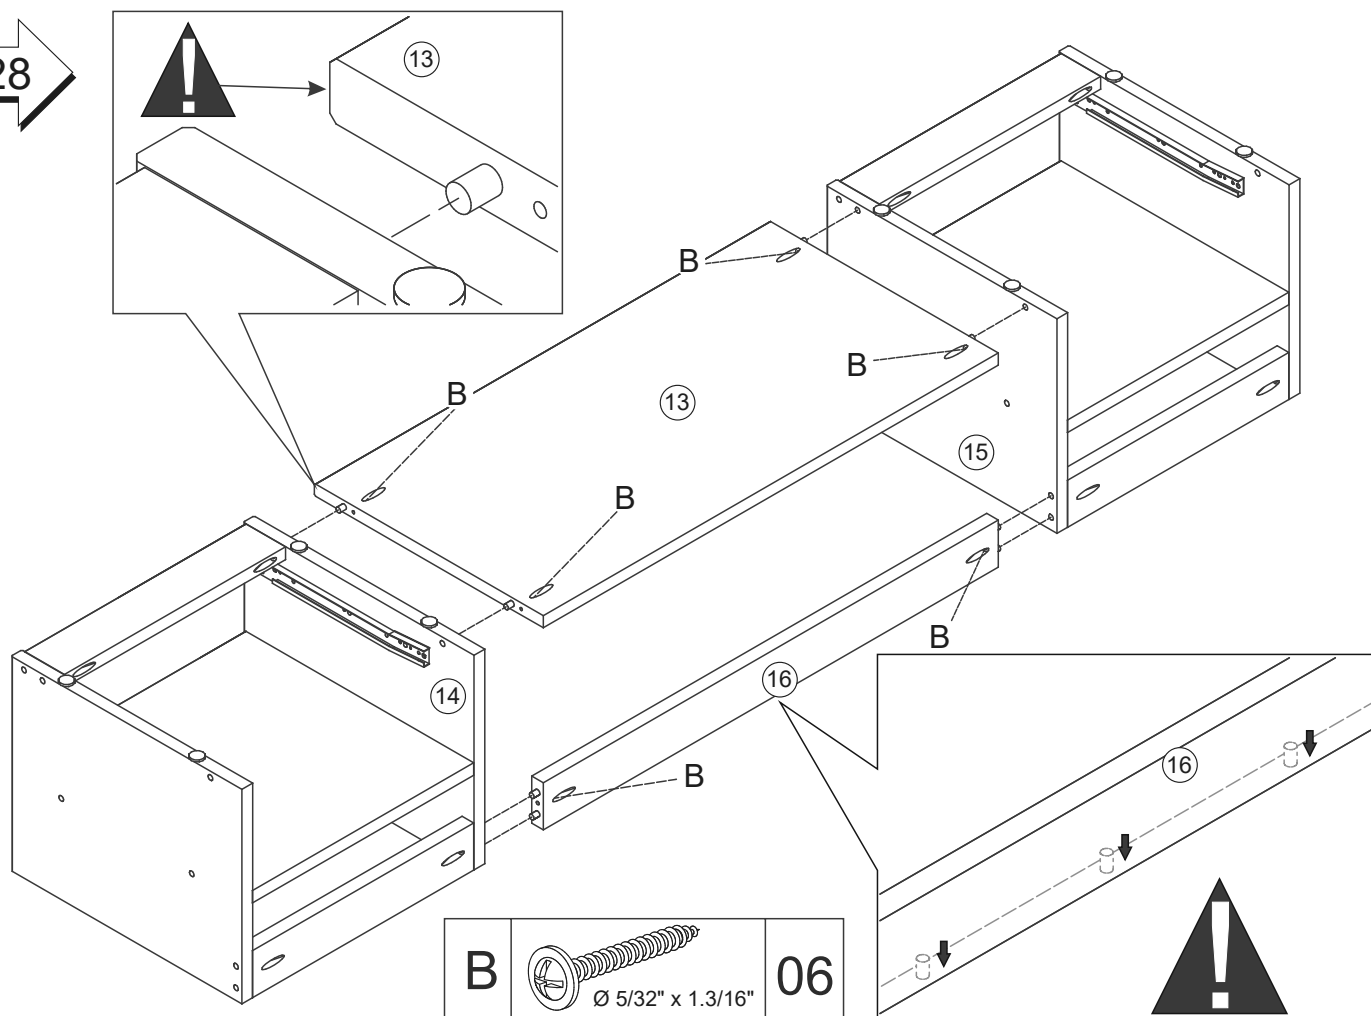



29

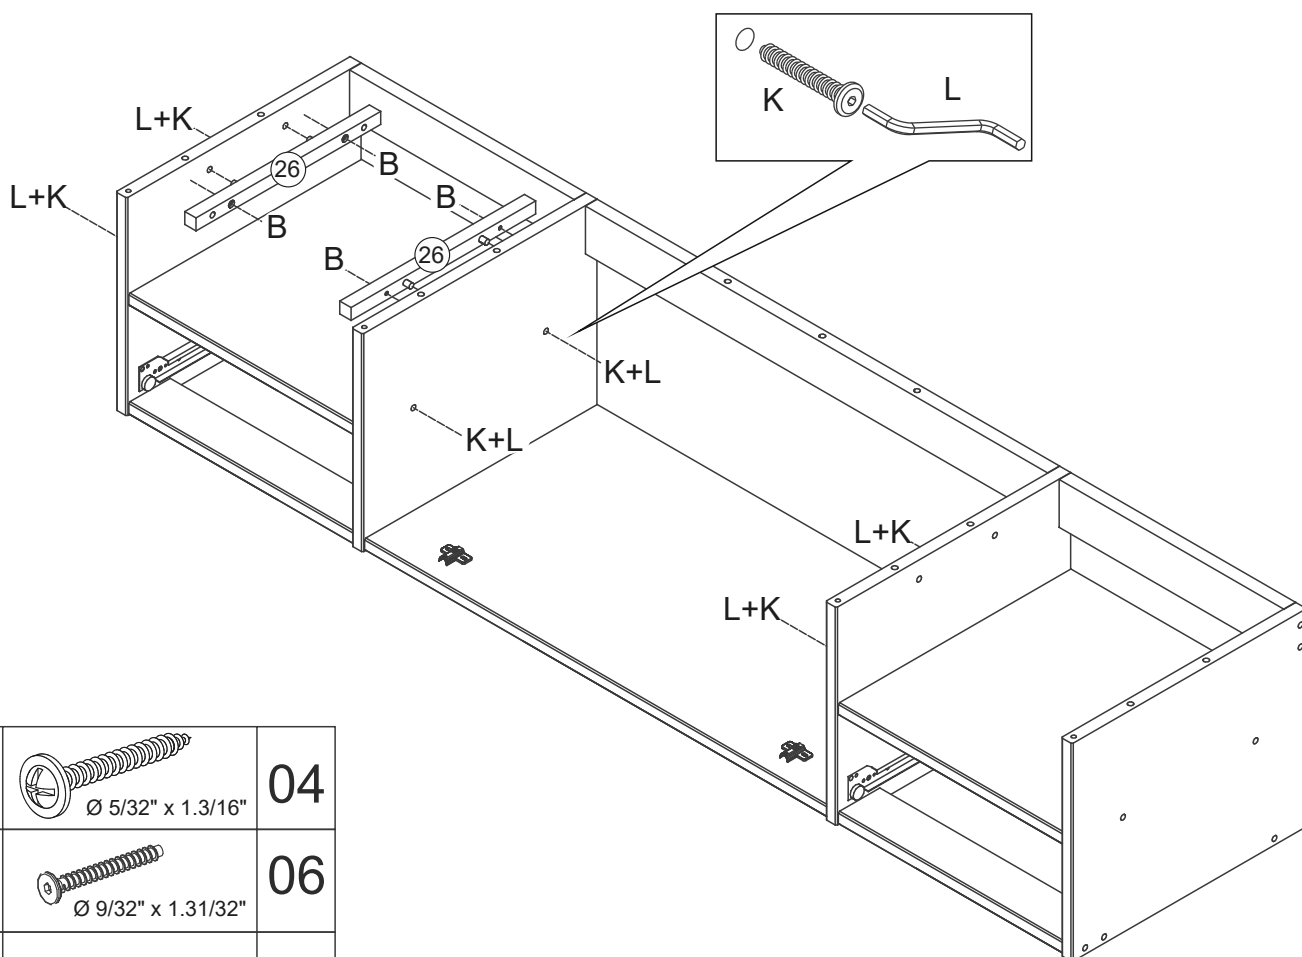




B	 Ø 5/32" x 1.31/16"	04
K	 Ø 9/32" x 1.31/32"	06
L	 Allen Key	01


30

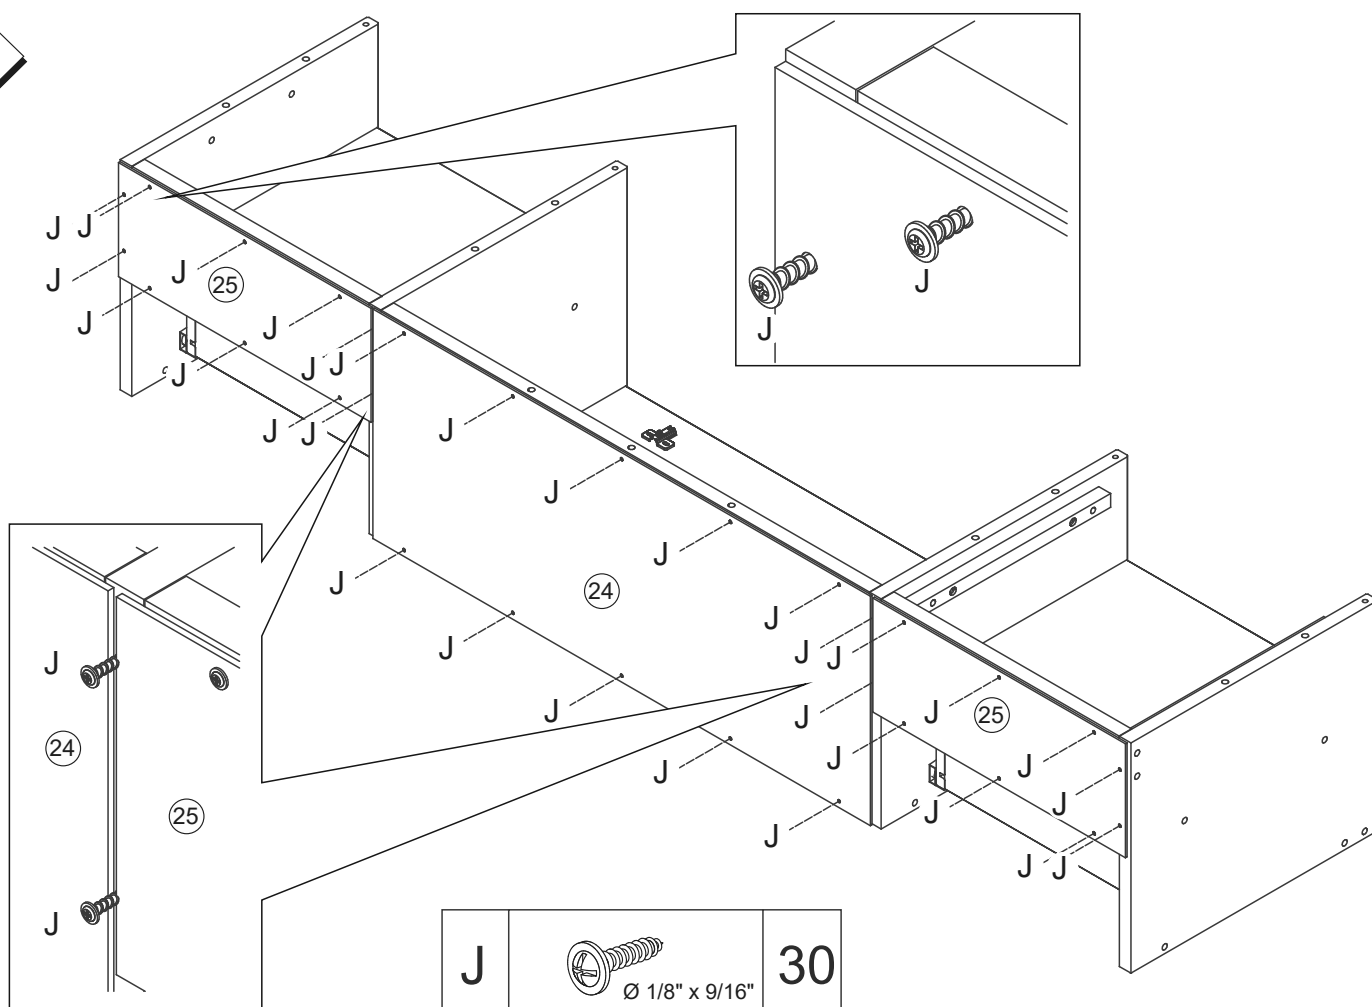





J	 Ø 1/8" x 9/16"	30
---	----------------------------------------------------------------------------------------------------	----



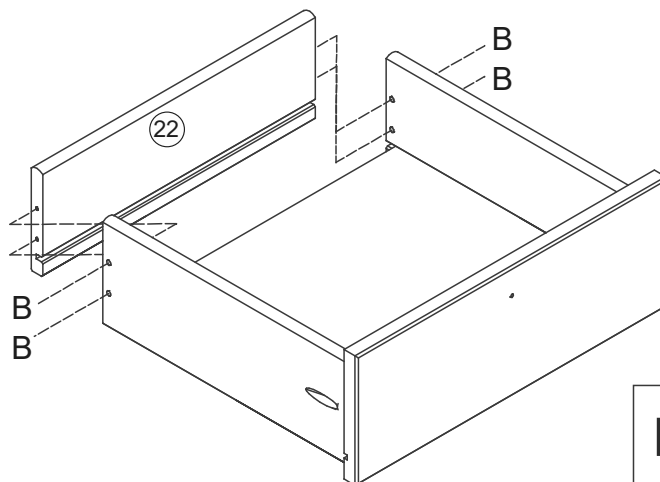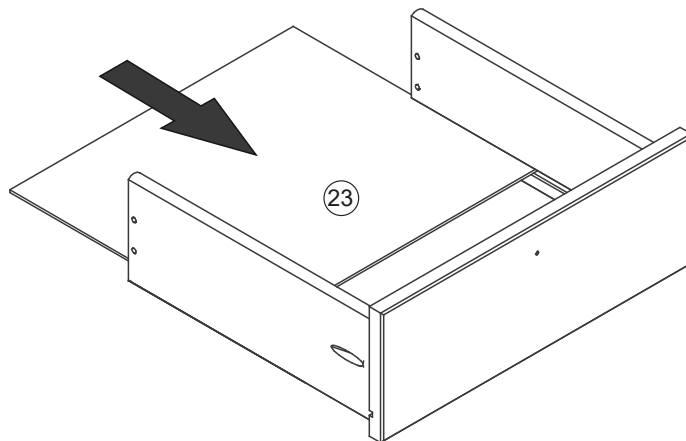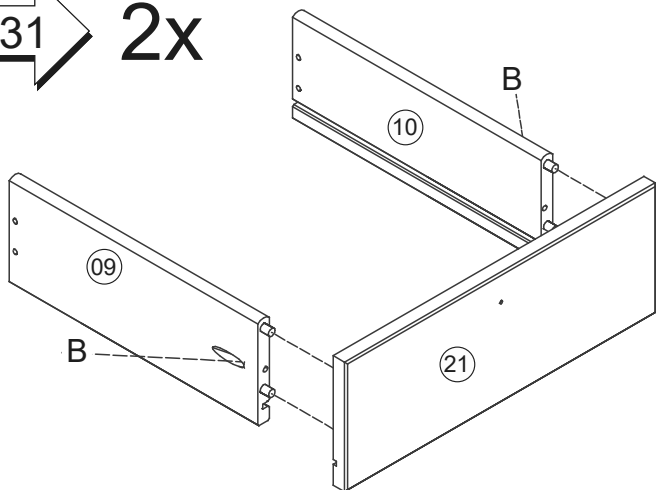


31 → 2x

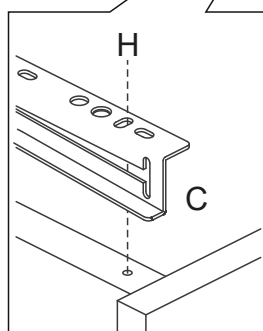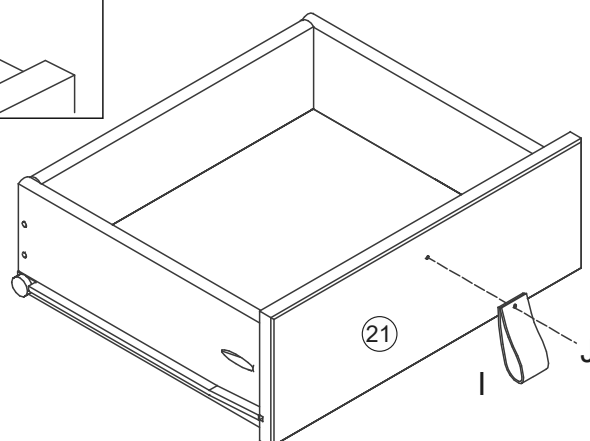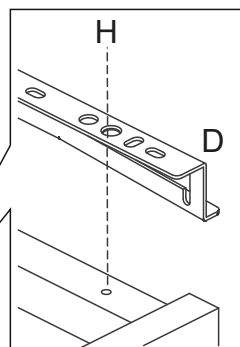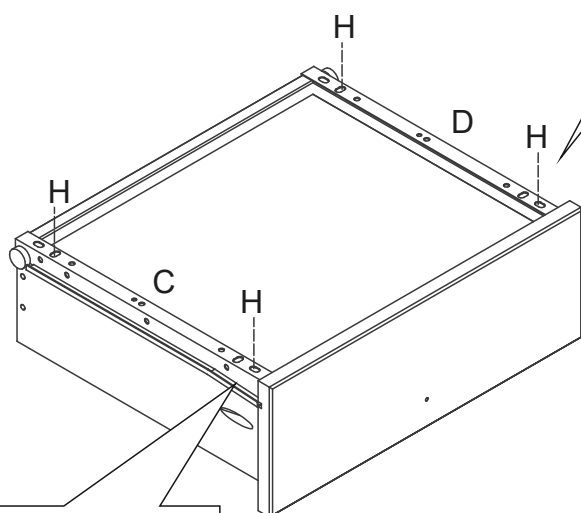


B		12
Ø 5/32" x 1.3/16"		

32 → 2x







I		02	J		02		
Handle				Ø 1/8" x 9/16"			
H		08	C		02	D	
Ø 1/8" x 9/16"				12"			12"



33

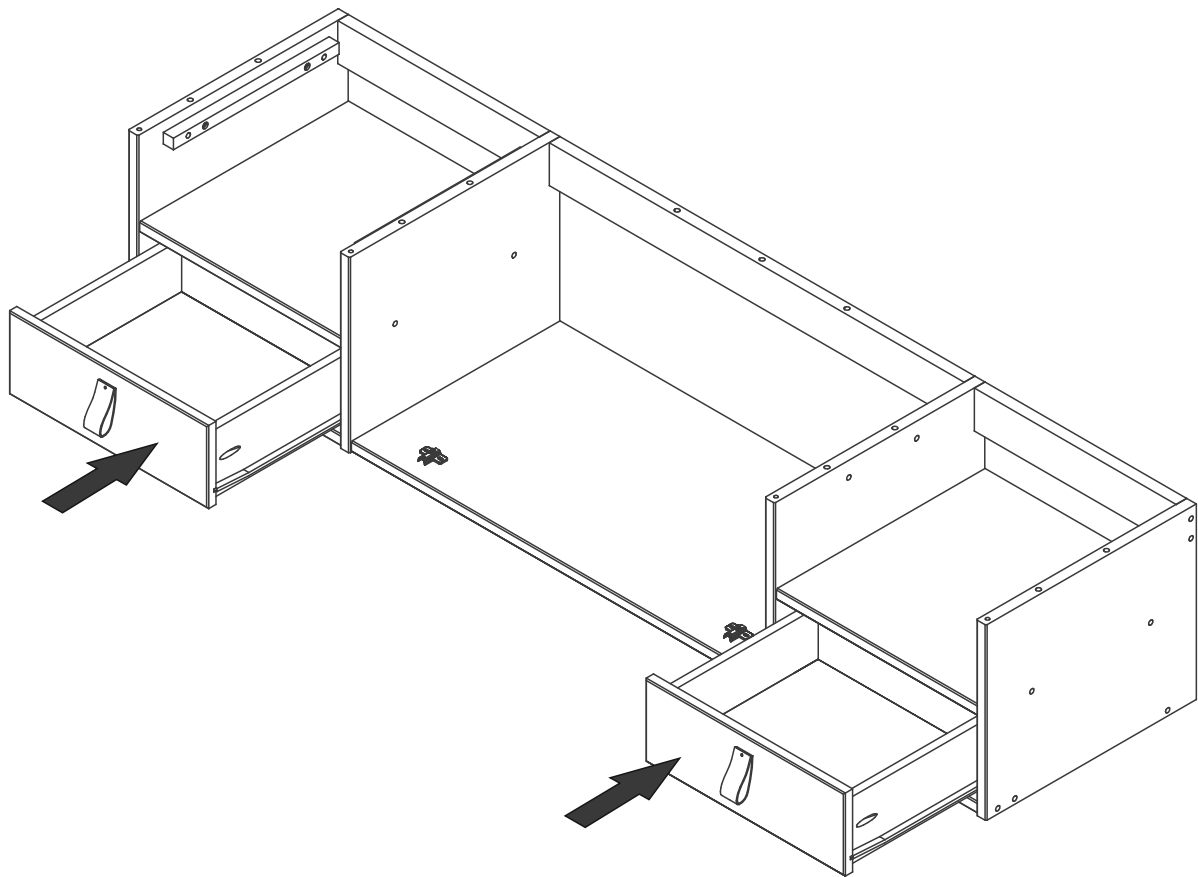


34

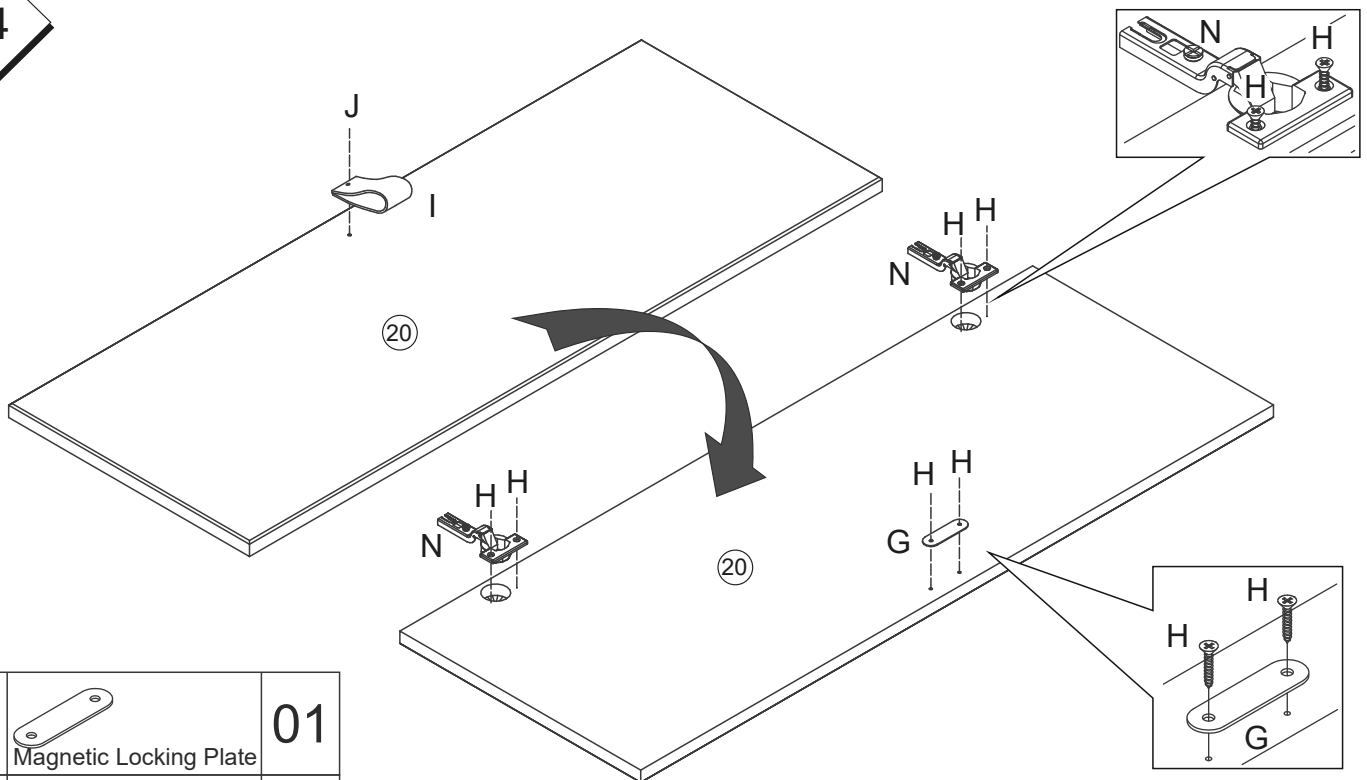


G		01
H	 Ø 1/8" x 9/16"	06
I		01

J	 Ø 1/8" x 9/16"	01	N		02
---	-------------------------------------------------------------------------------------------------------	----	---	--------------------------------------------------------------------------------------	----




Drawer Adjustment

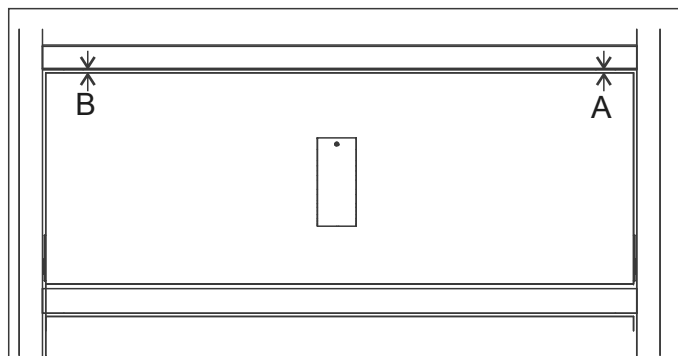


$A \neq B$

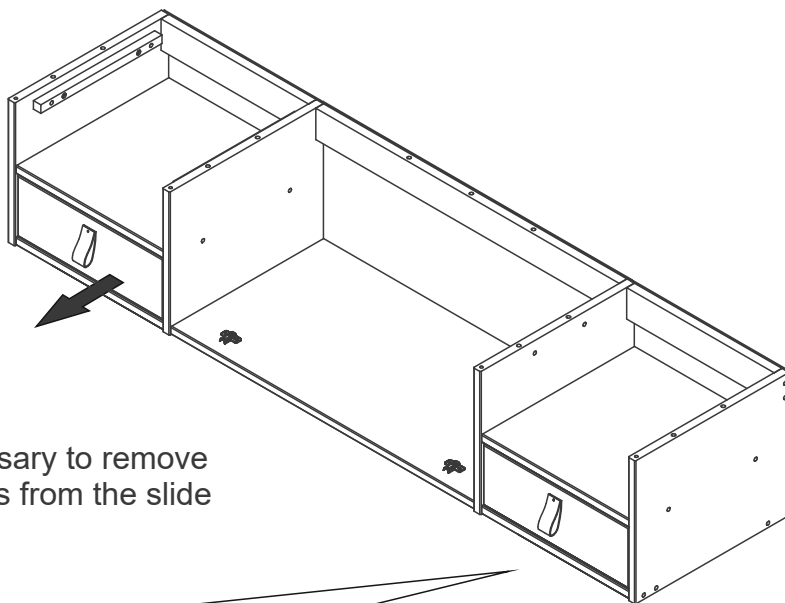


It is necessary to remove two screws from the slide to adjust

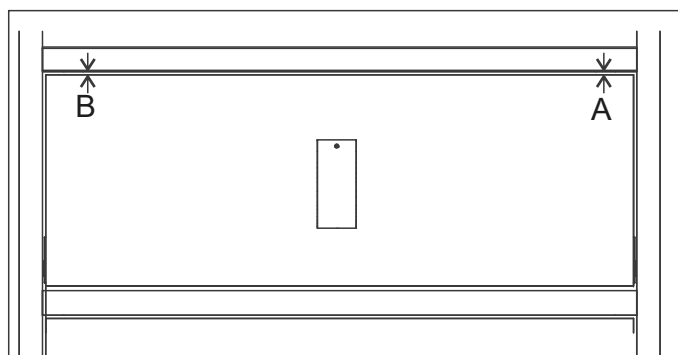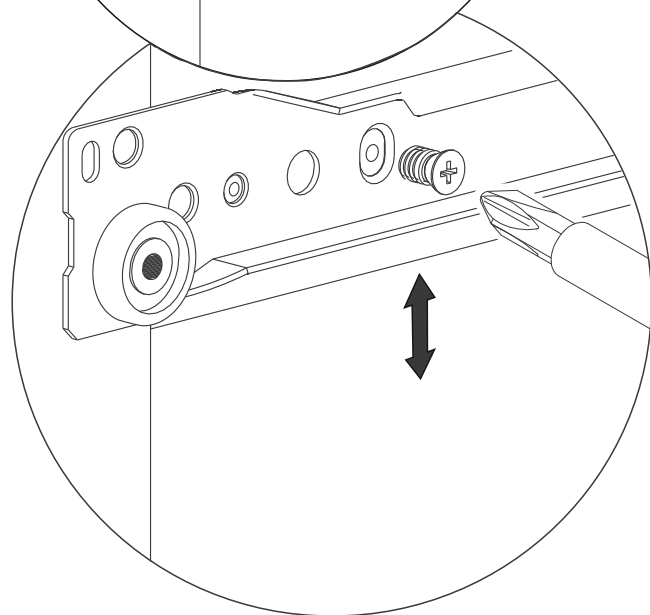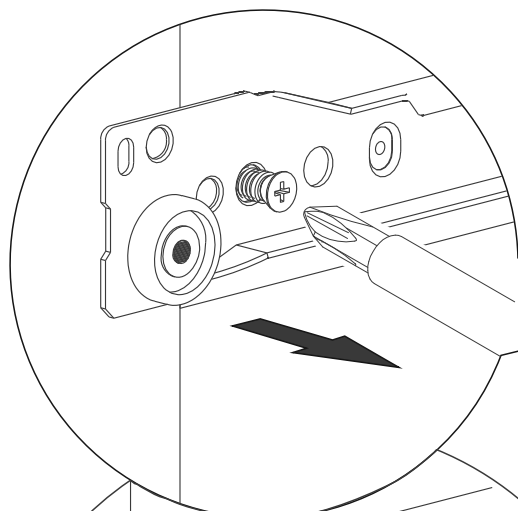








$A = B$

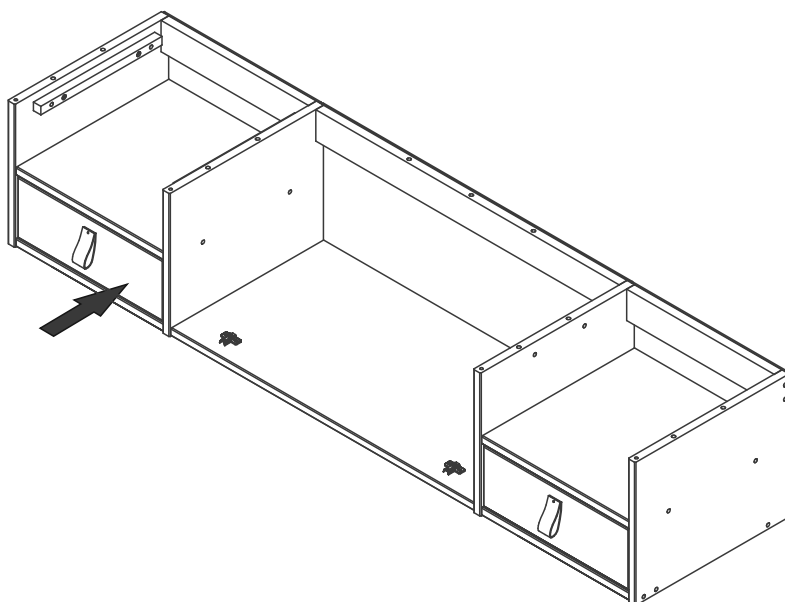

Drawer Adjustment

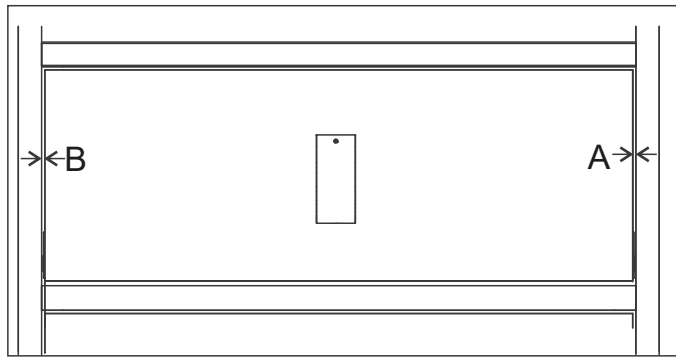


$A \neq B$

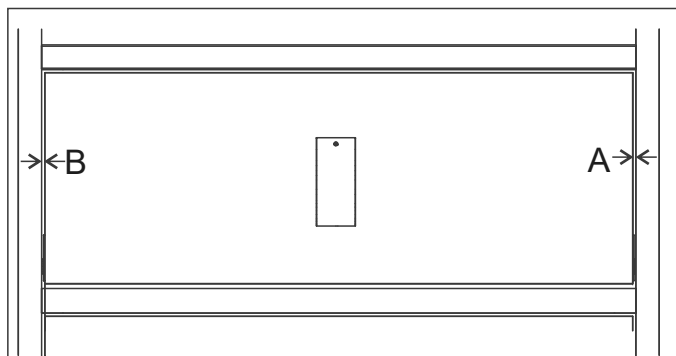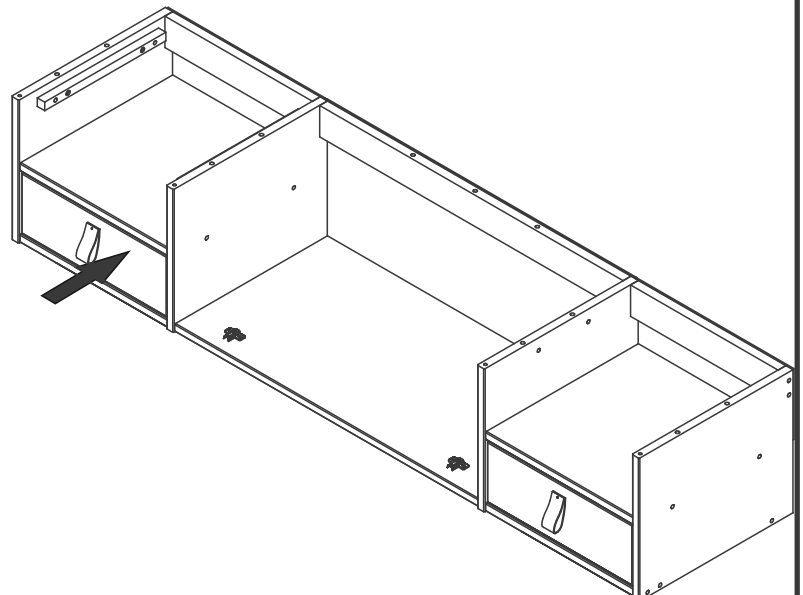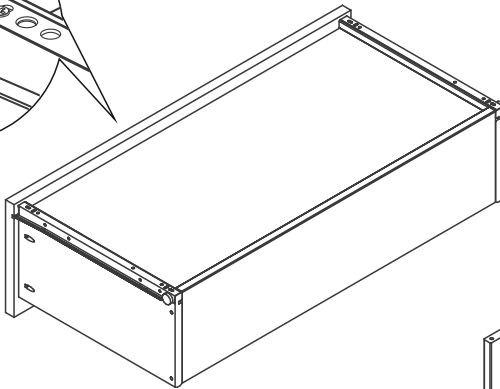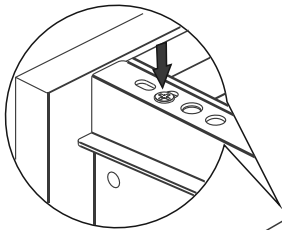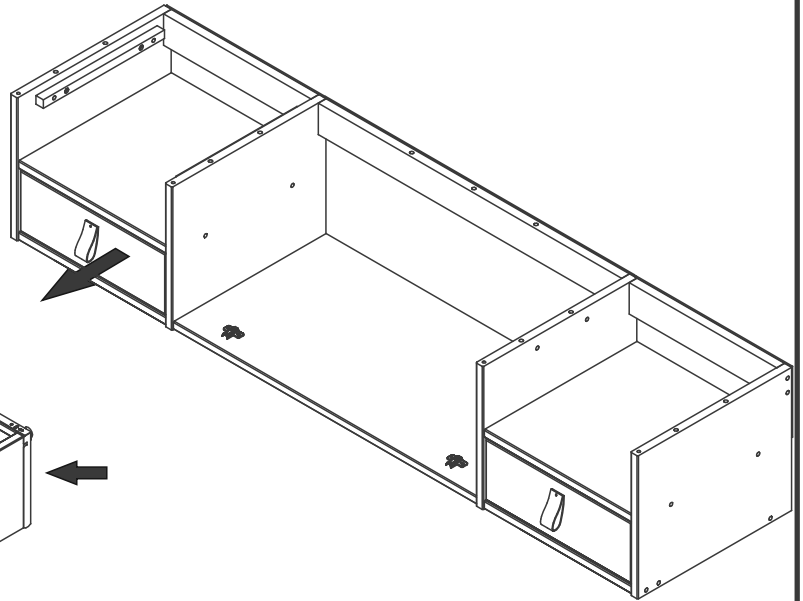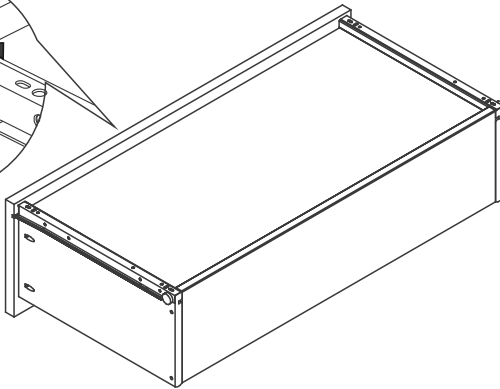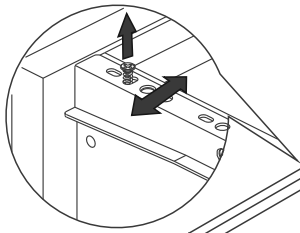

$A = B$









Upper Side




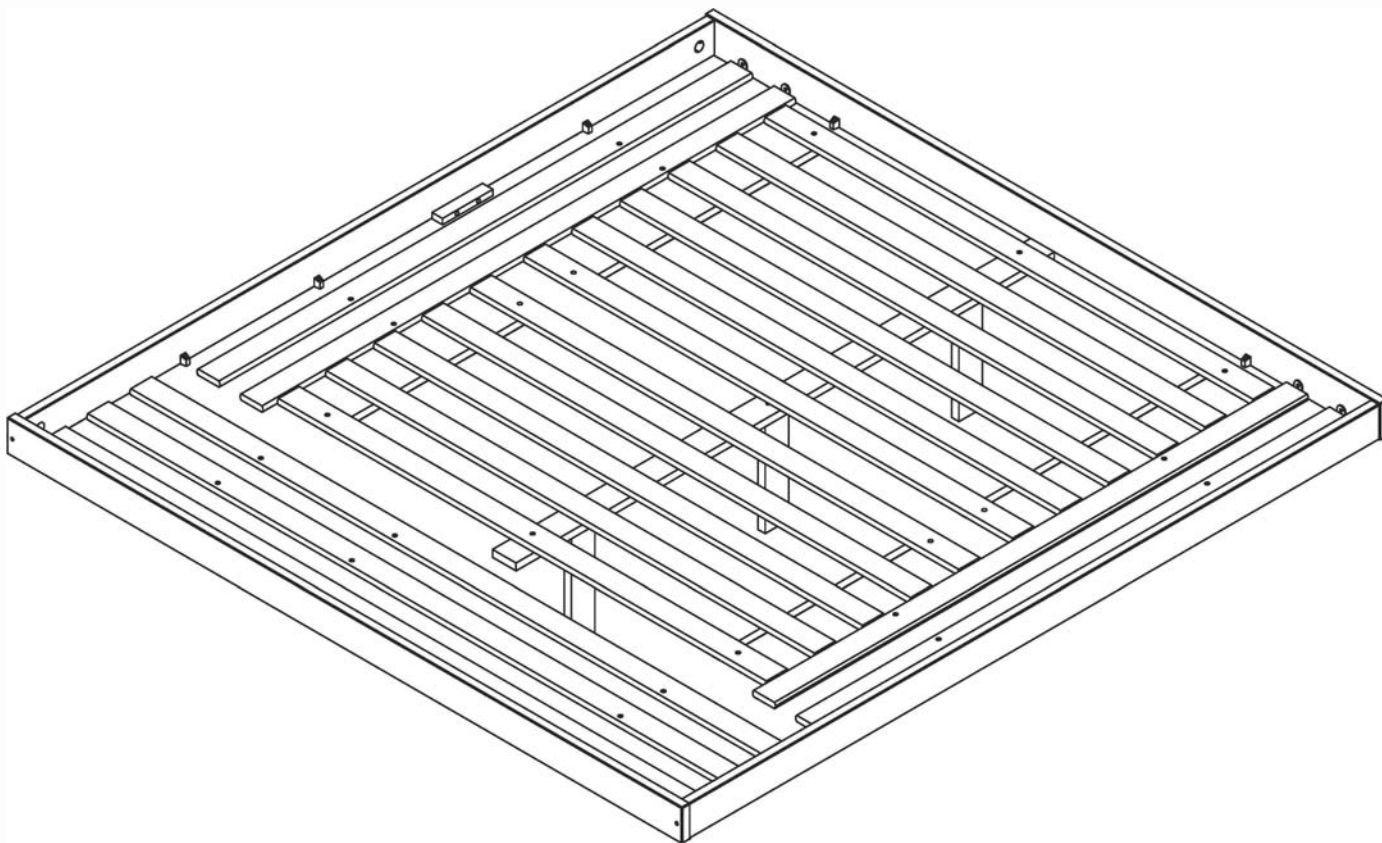




Attention!


- 1- Please read the assembly instructions very carefully before assembling your product.
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of packaging material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor.
- 3- The screws and bolts of your furniture have to be tightened periodically.
- 4- Please avoid contact to sharp objects.
- 5- Please avoid hitting the furniture surface.

HARDWARE/ACCESSORIES


A	 Ø 5/16" x 1"	43
H	 Ø 1/8" x 9/16"	22
L	 Allen Key	01
O	 Ø 9/32" x 2.3/4"	04
P	 Ø 1/4" x 2.3/4"	04
Q	 Elliptical nut	04
R	 Felt	04
S	 Magnetic clasp	03



T	 Ø 5/32"x 1.3/8"	40
U	 Ø 1/4" x 1"	09
V	 Corner fitting	10
X	 Trapeze	10+2
Y	 mm	01
Z	 Ø 9/32" x 2"	06

COMPONENTS

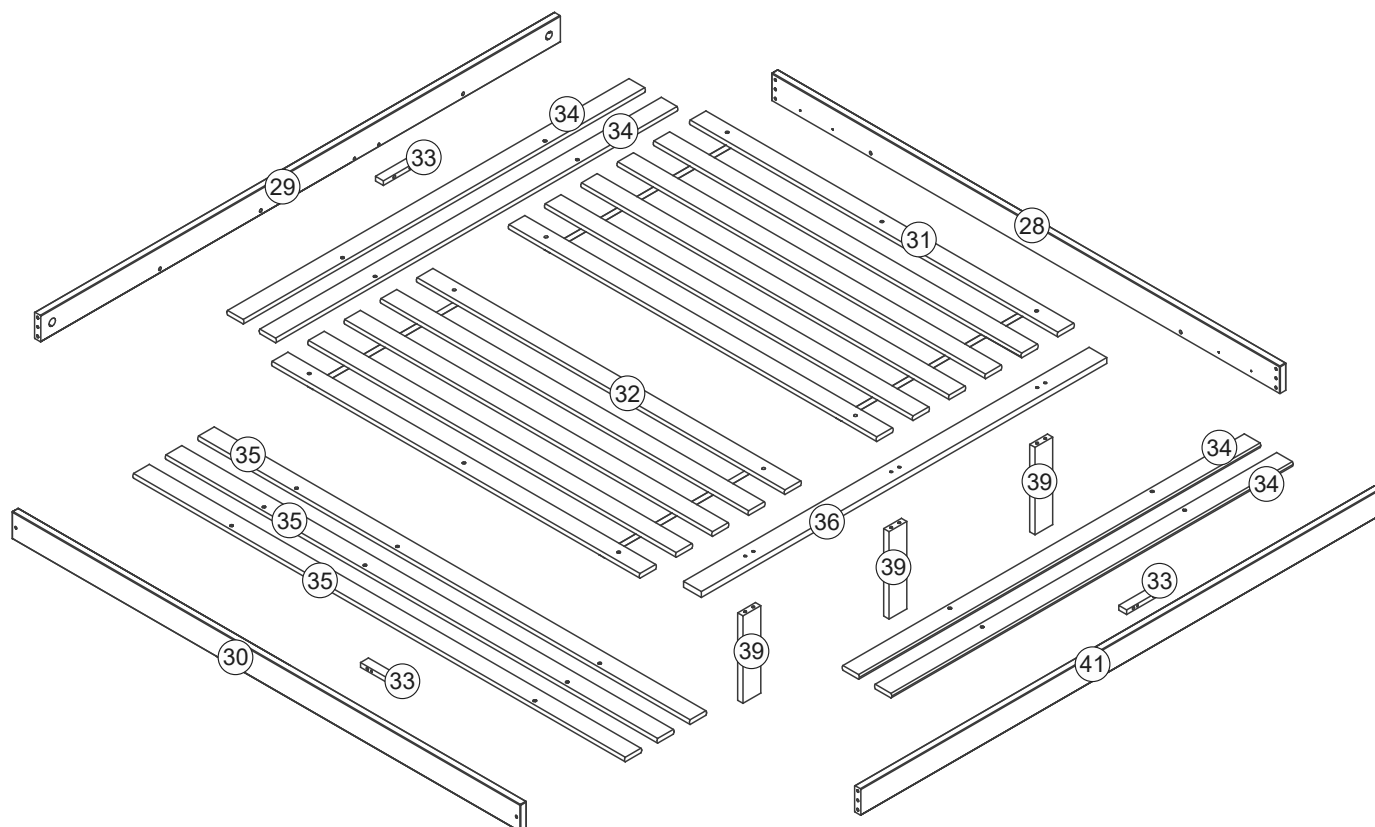




35

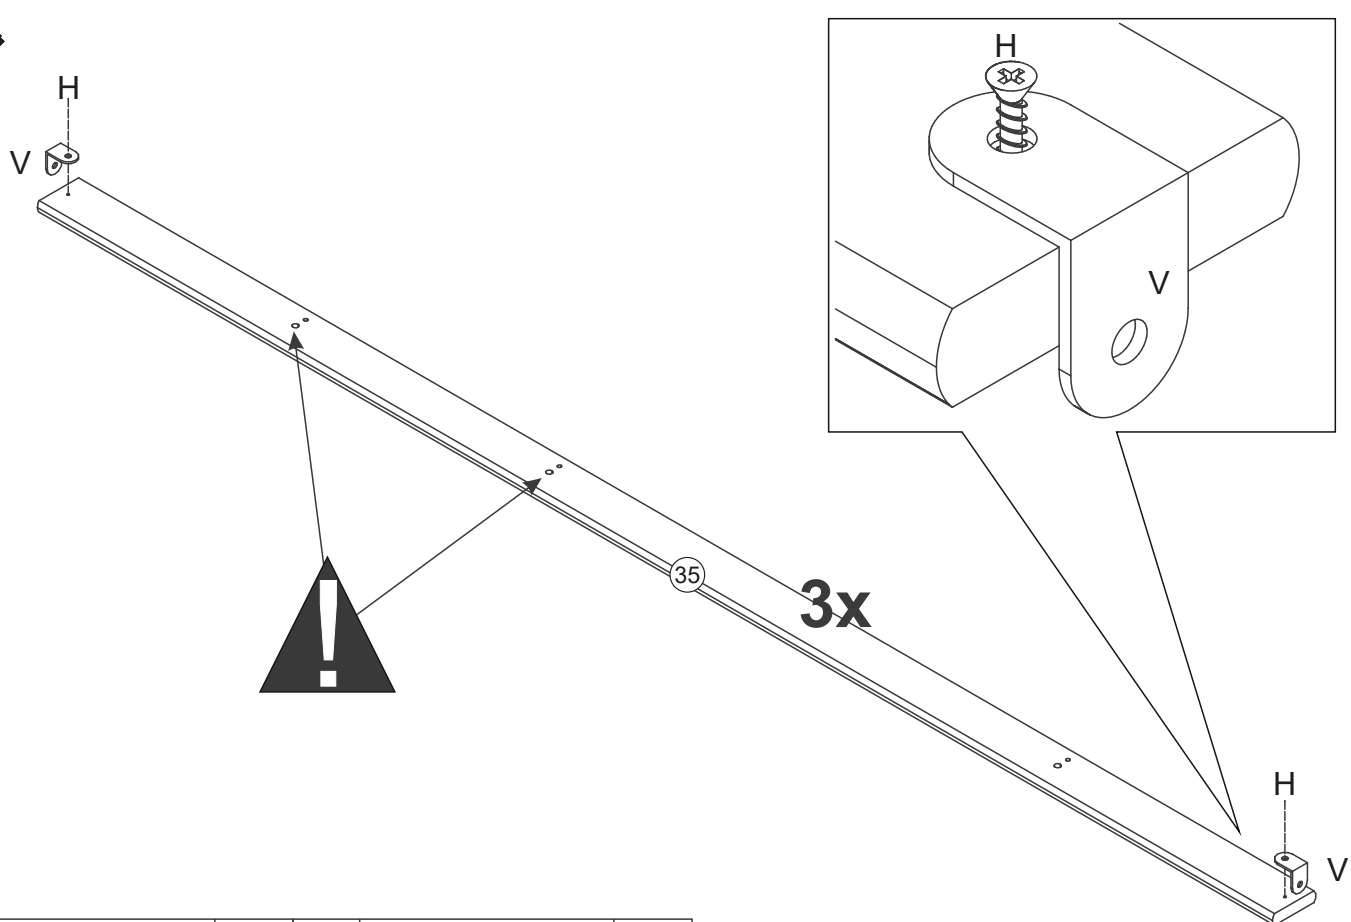



H	 Ø 1/8" x 9/16"	06	V	 Corner fitting	06
---	-------------------------------------------------------------------------------------------------------	----	---	----------------------------------------------------------------------------------------------------	----



36

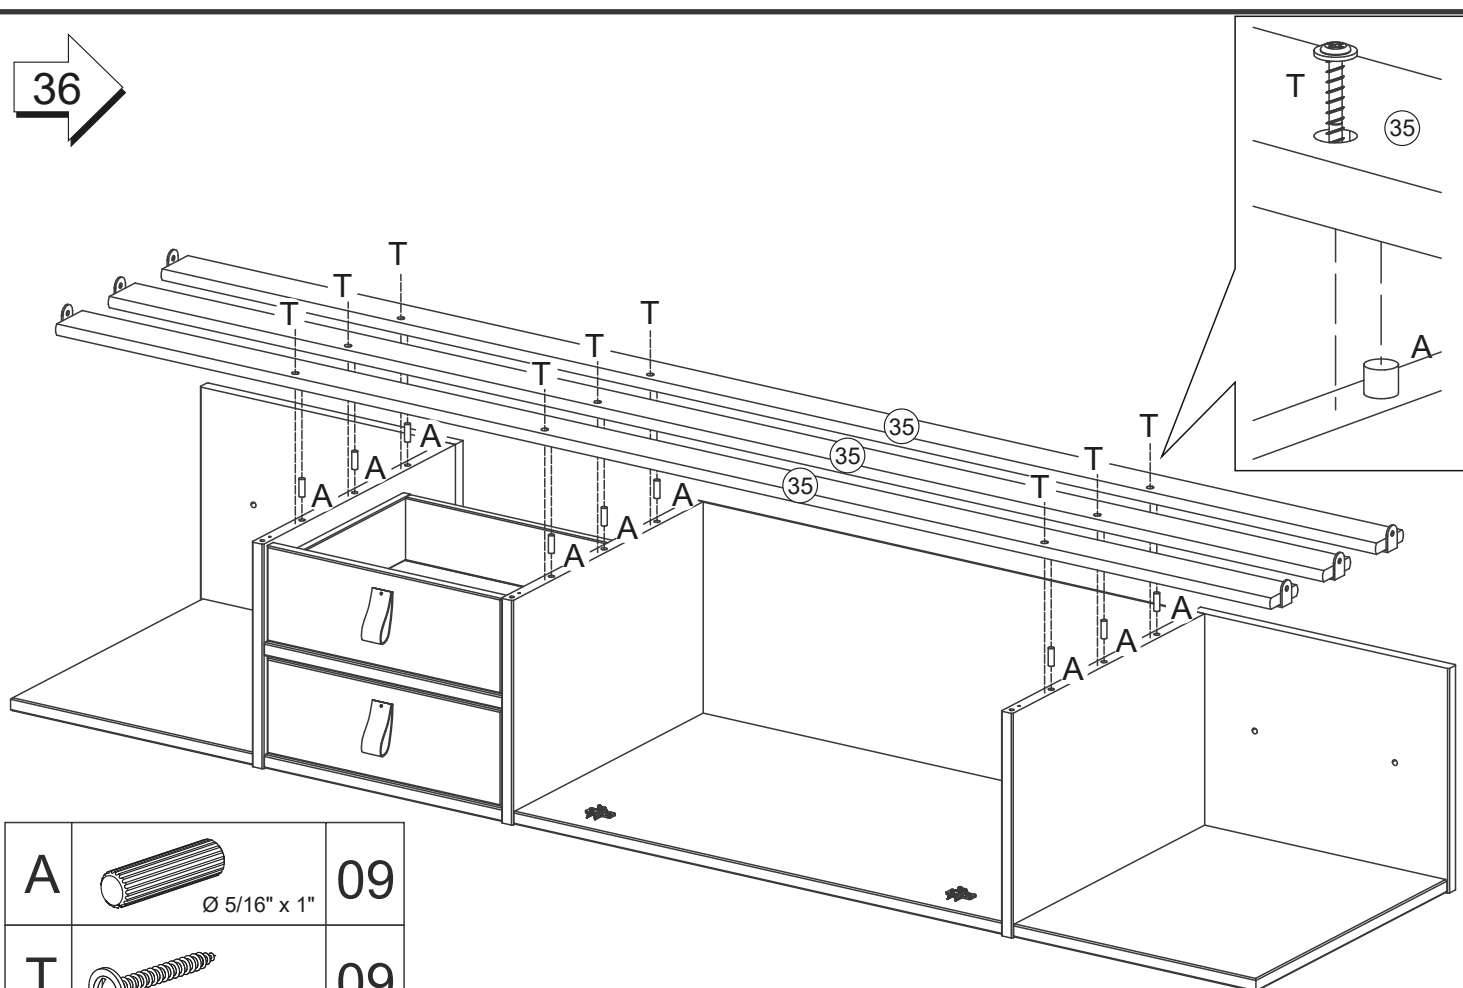

A	 Ø 5/16" x 1"	09
T	 Ø 5/32" x 1.3/8"	09


37

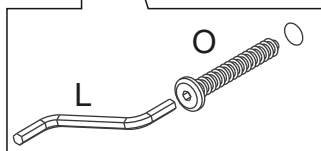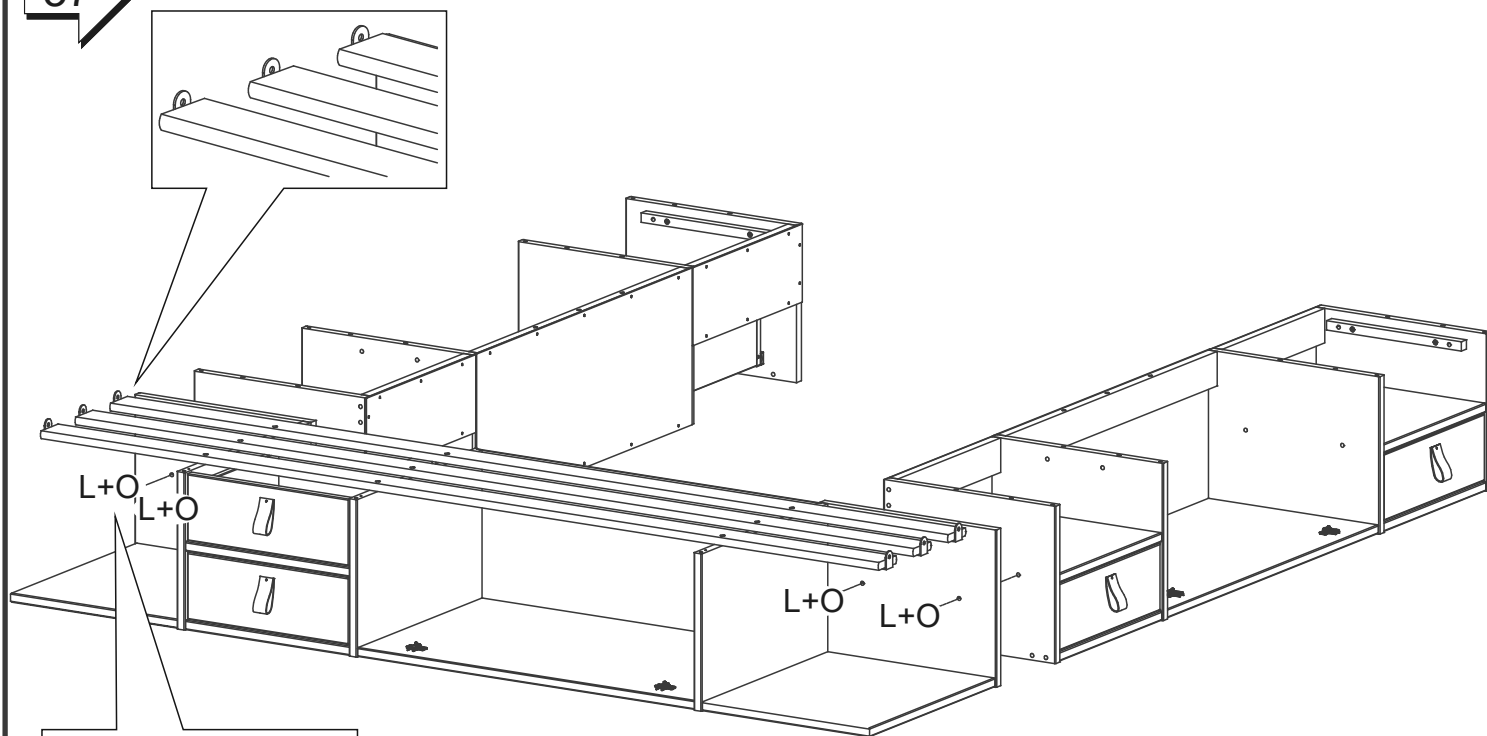




O	 Ø 9/32" x 2.3/4"	04
L	 Allen Key	01


38

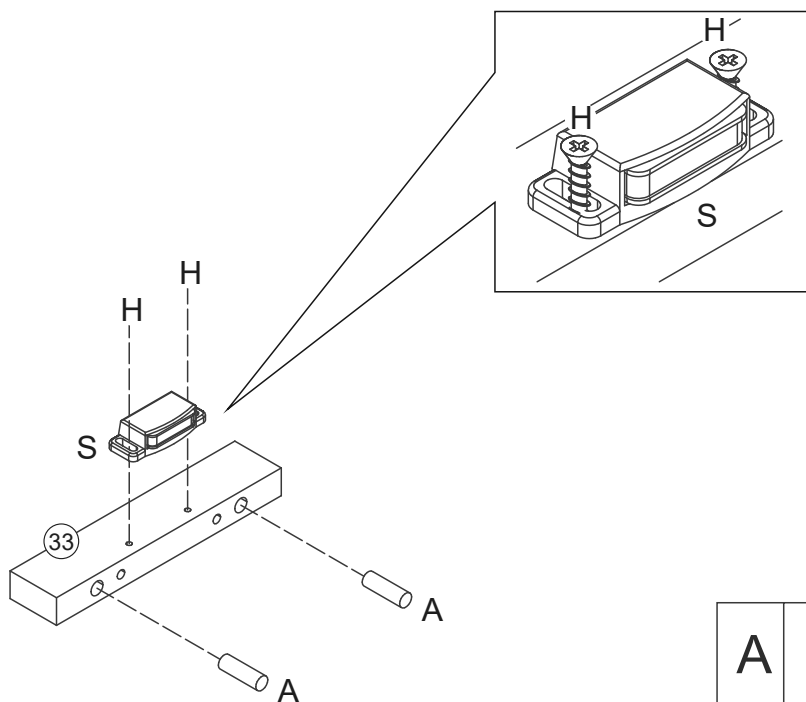3x




A	 Ø 5/16" x 1"	06
S	 Magnetic clasp	03
H	 Ø 1/8" x 9/16"	06

39

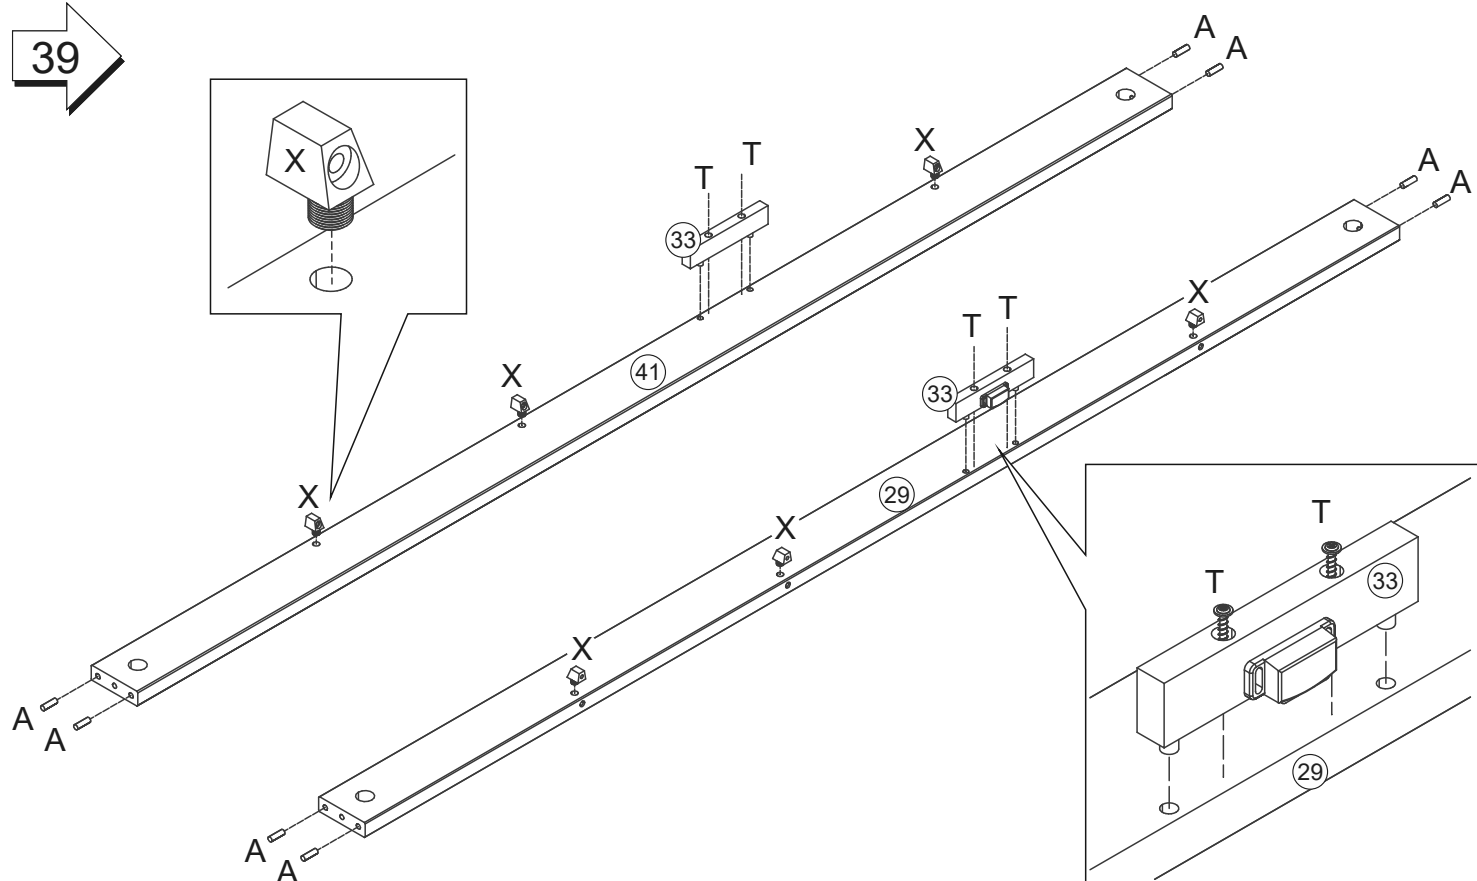


A



Ø 5/16" x 1"

08

T



Ø 5/32" x 1.3/8"

04


X



Trapeze

06

40

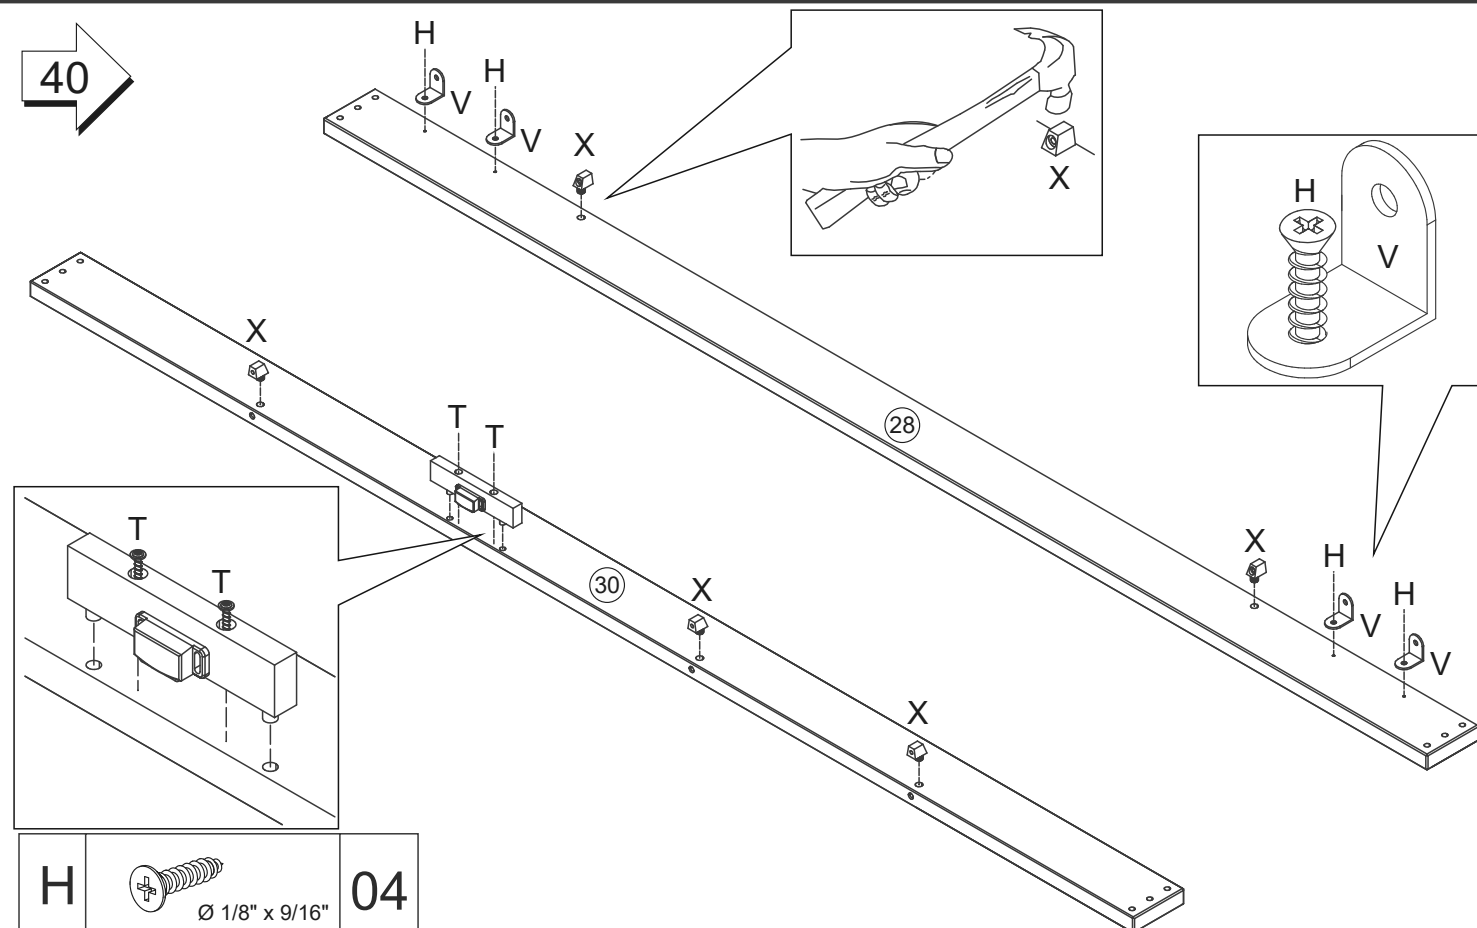


H



Ø 1/8" x 9/16"

04

T



Ø 5/32" x 1.3/8"

02

V



Corner fitting

04


X



Trapeze

05

41

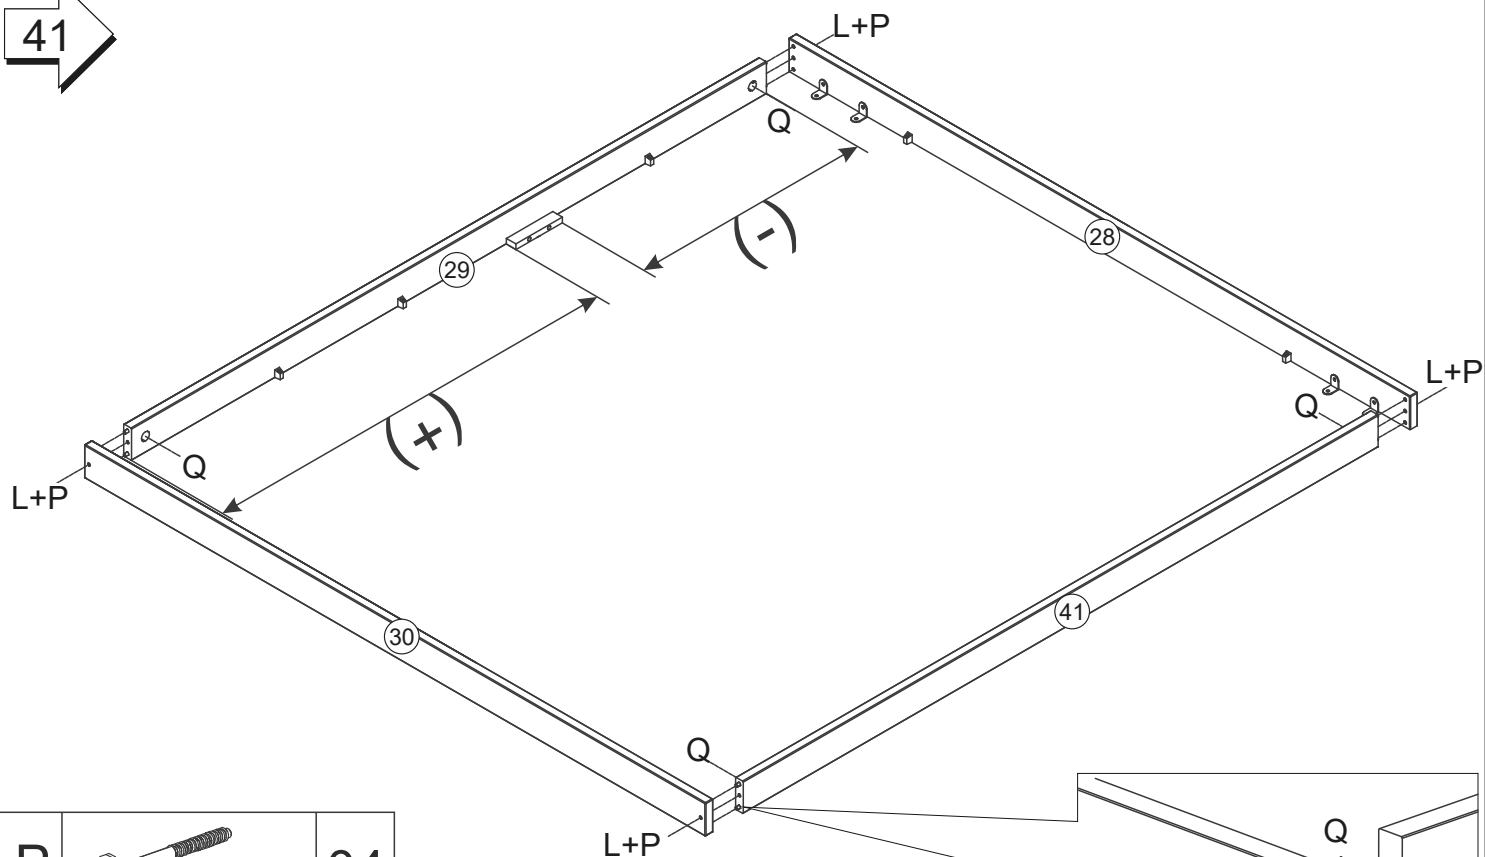

P



Ø 1/4" x 2.3/4"

04


Q



Elliptical nut


04

L




Allen Key


01

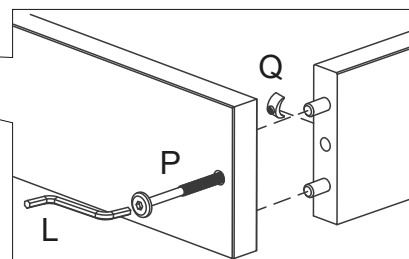

42


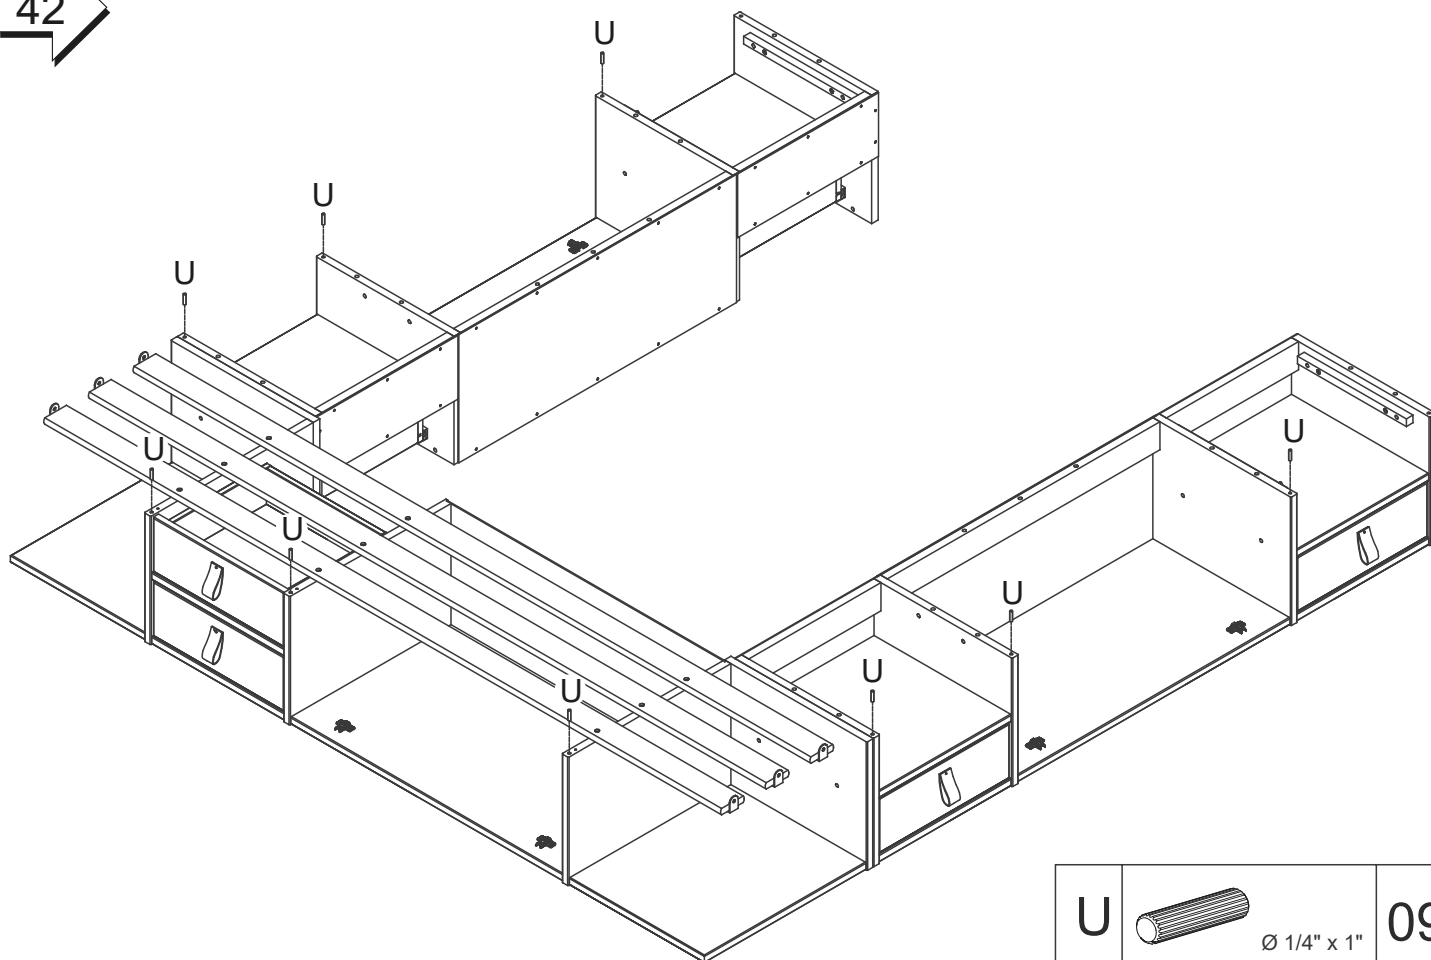



U




Ø 1/4" x 1"

09

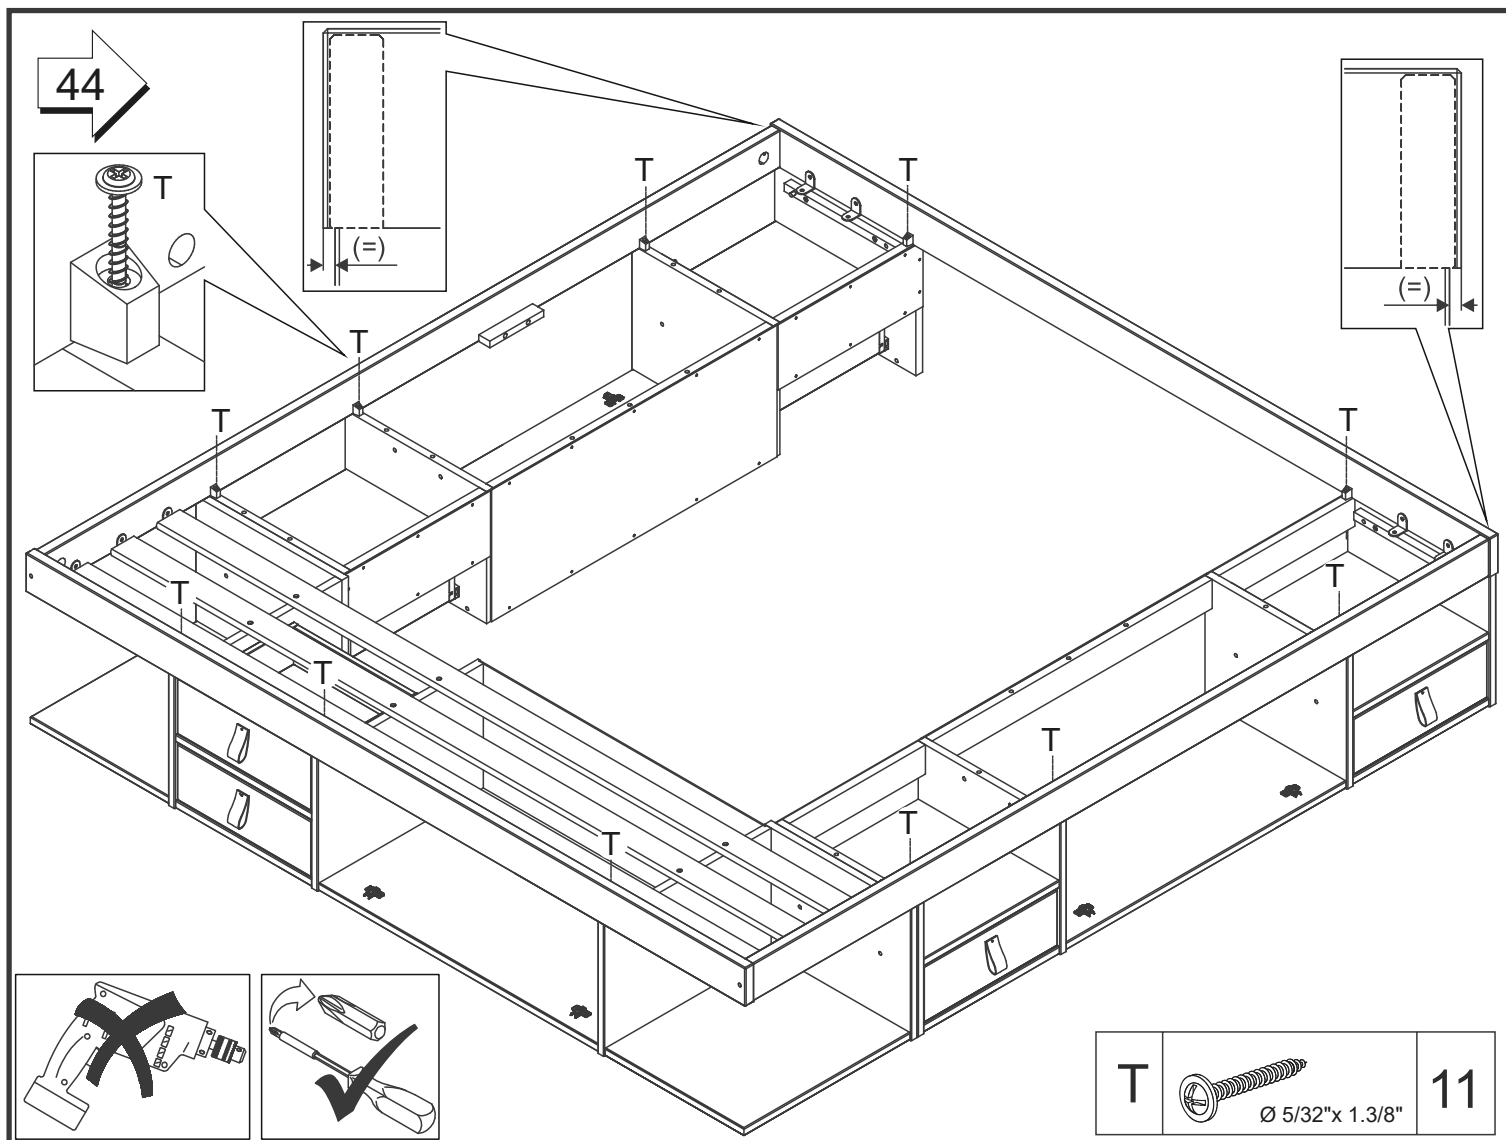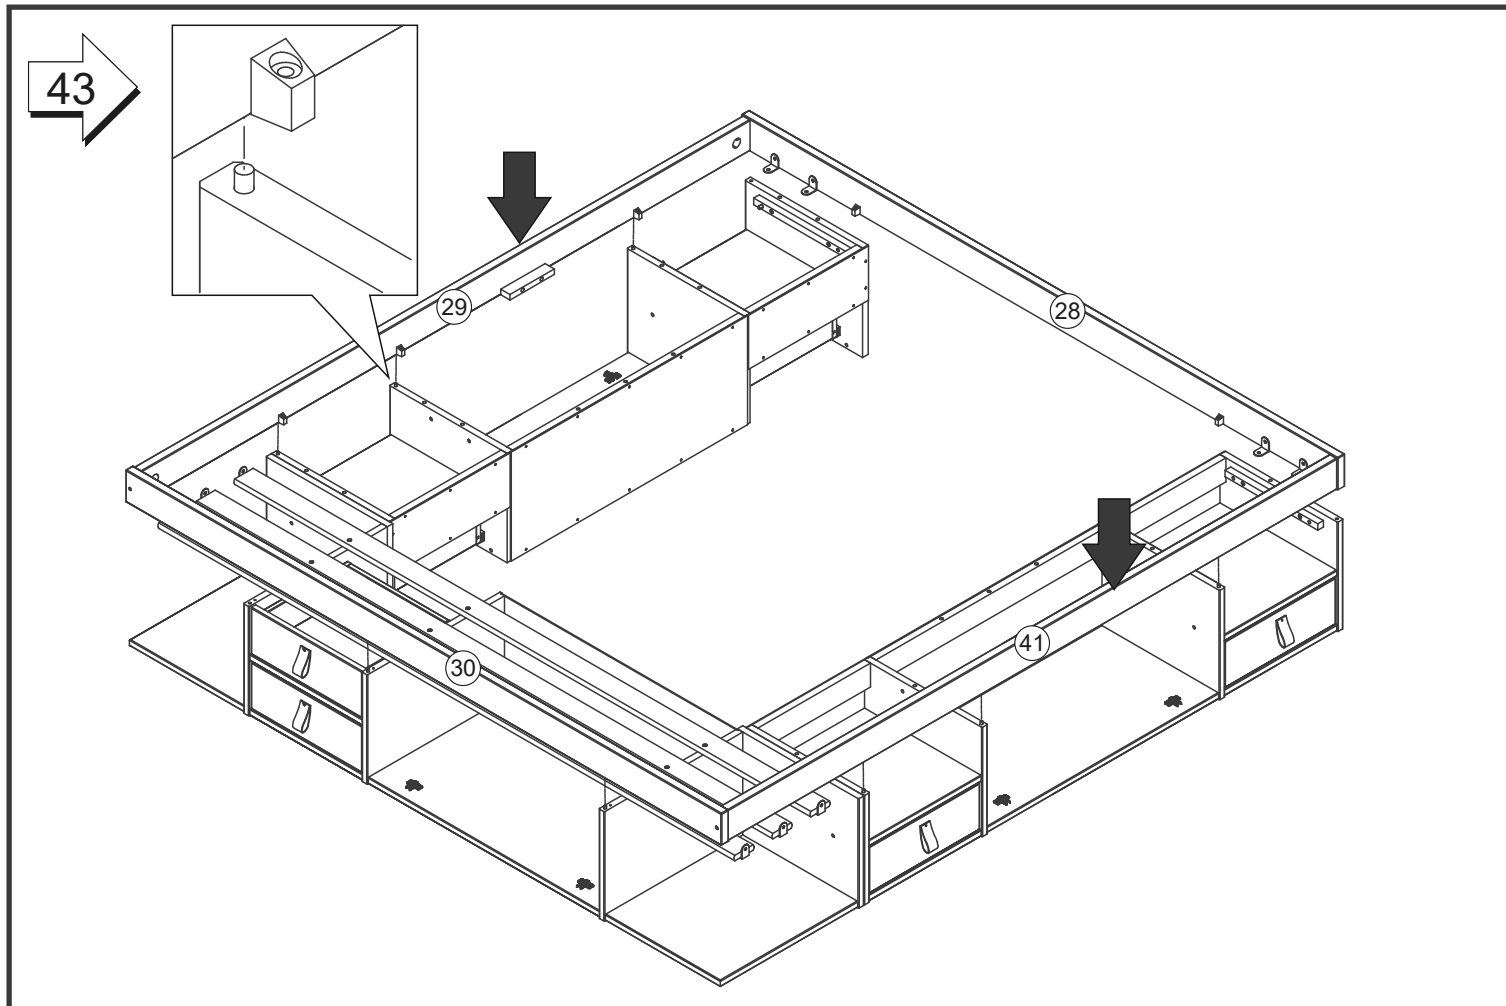


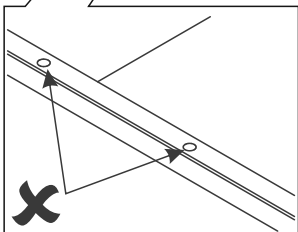


Ø 5/16" x 1"

A		16
	Ø 5/16" x 1"	


46

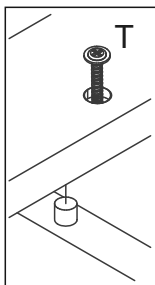


Ø 5/32"x 1.3/8"

T	 $\varnothing 5/32" \times 1.3/8"$	08
---	----------------------------------------------------------------------------------------------------------------------------	----



47

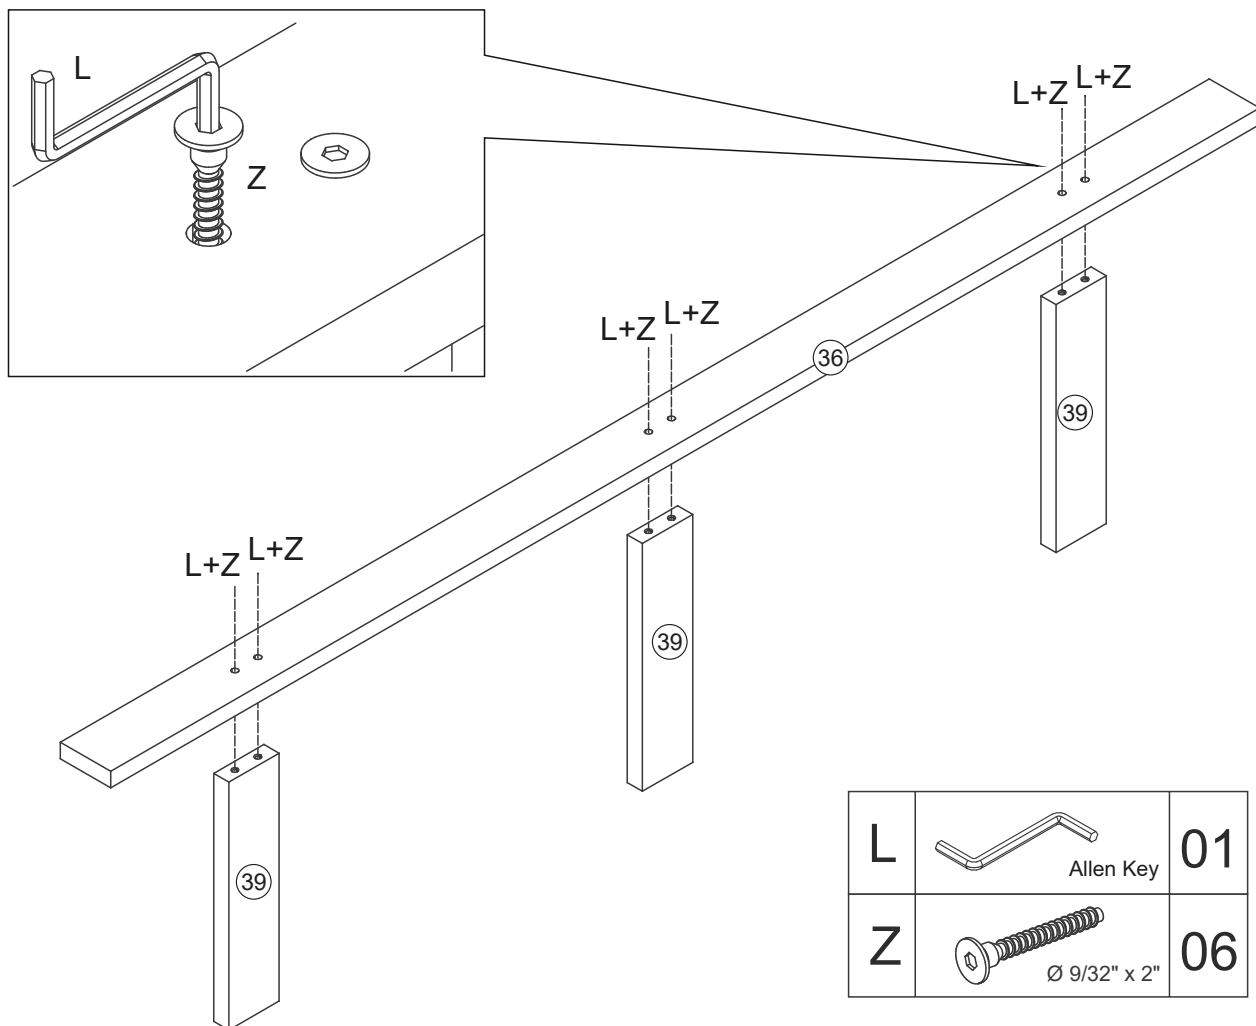






48


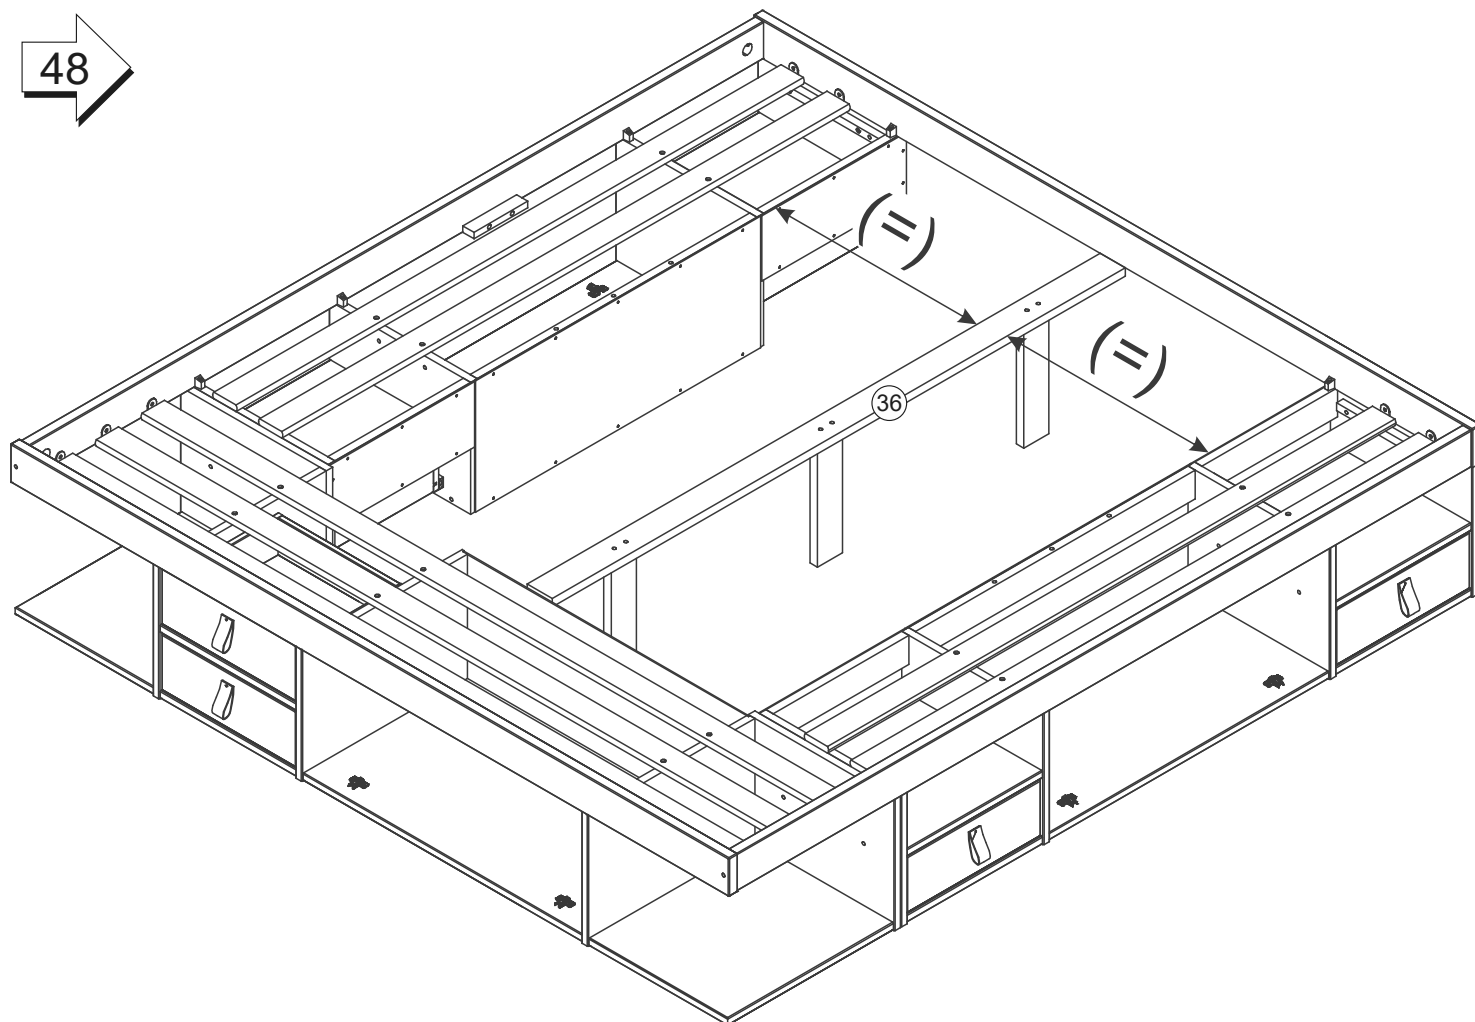


49

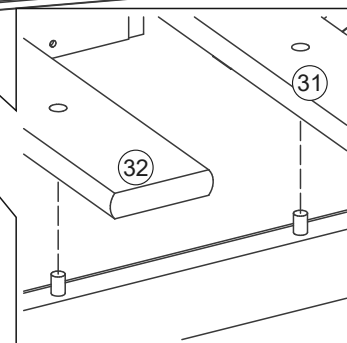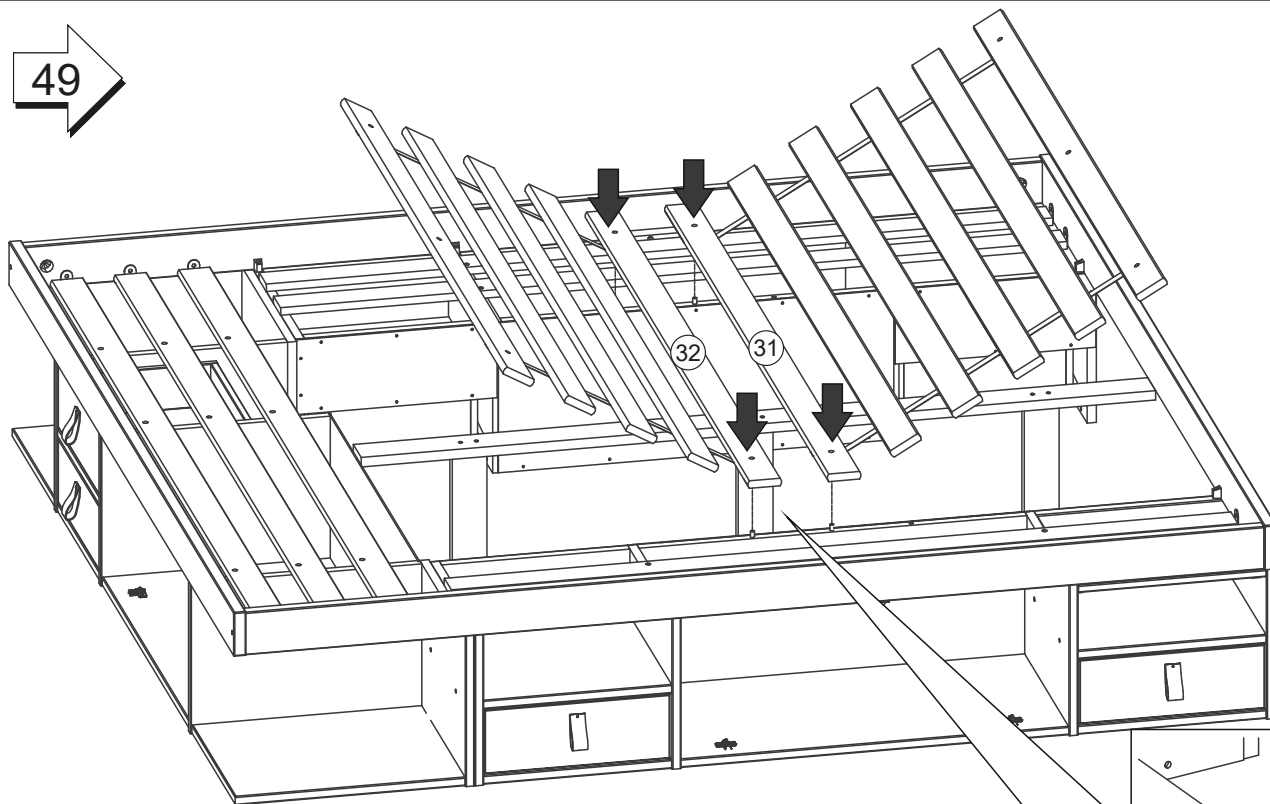


50

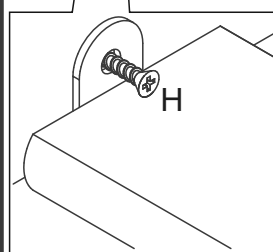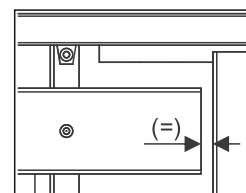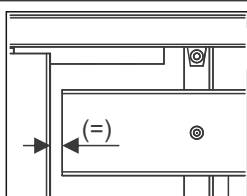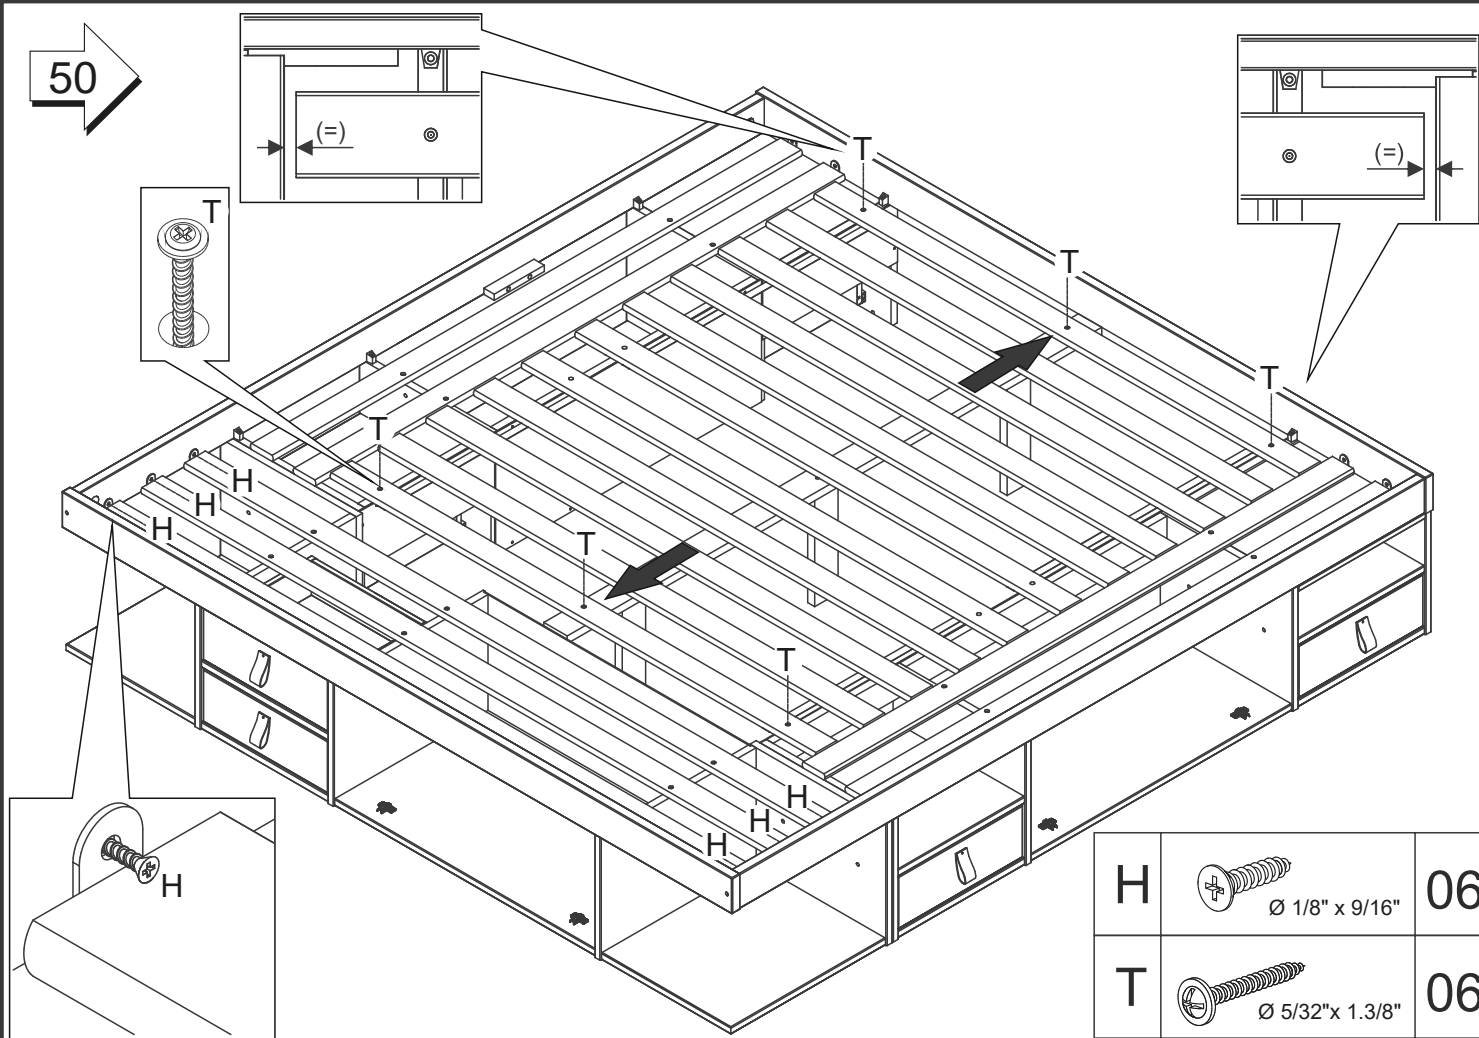


H	 Ø 1/8" x 9/16"	06
T	 Ø 5/32" x 1.3/8"	06

51

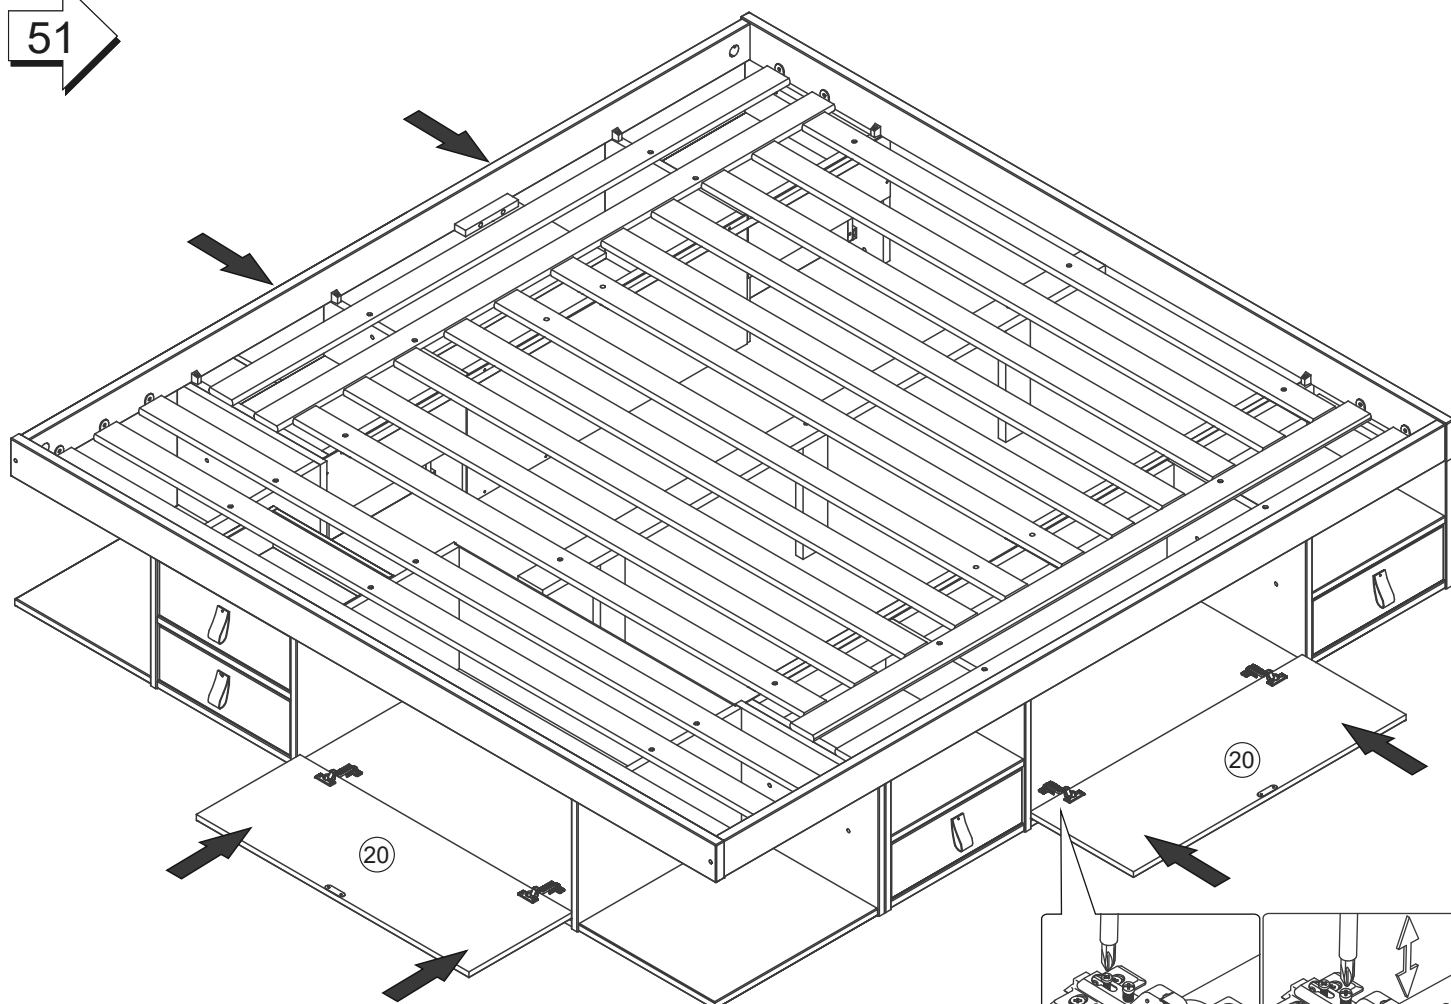

52

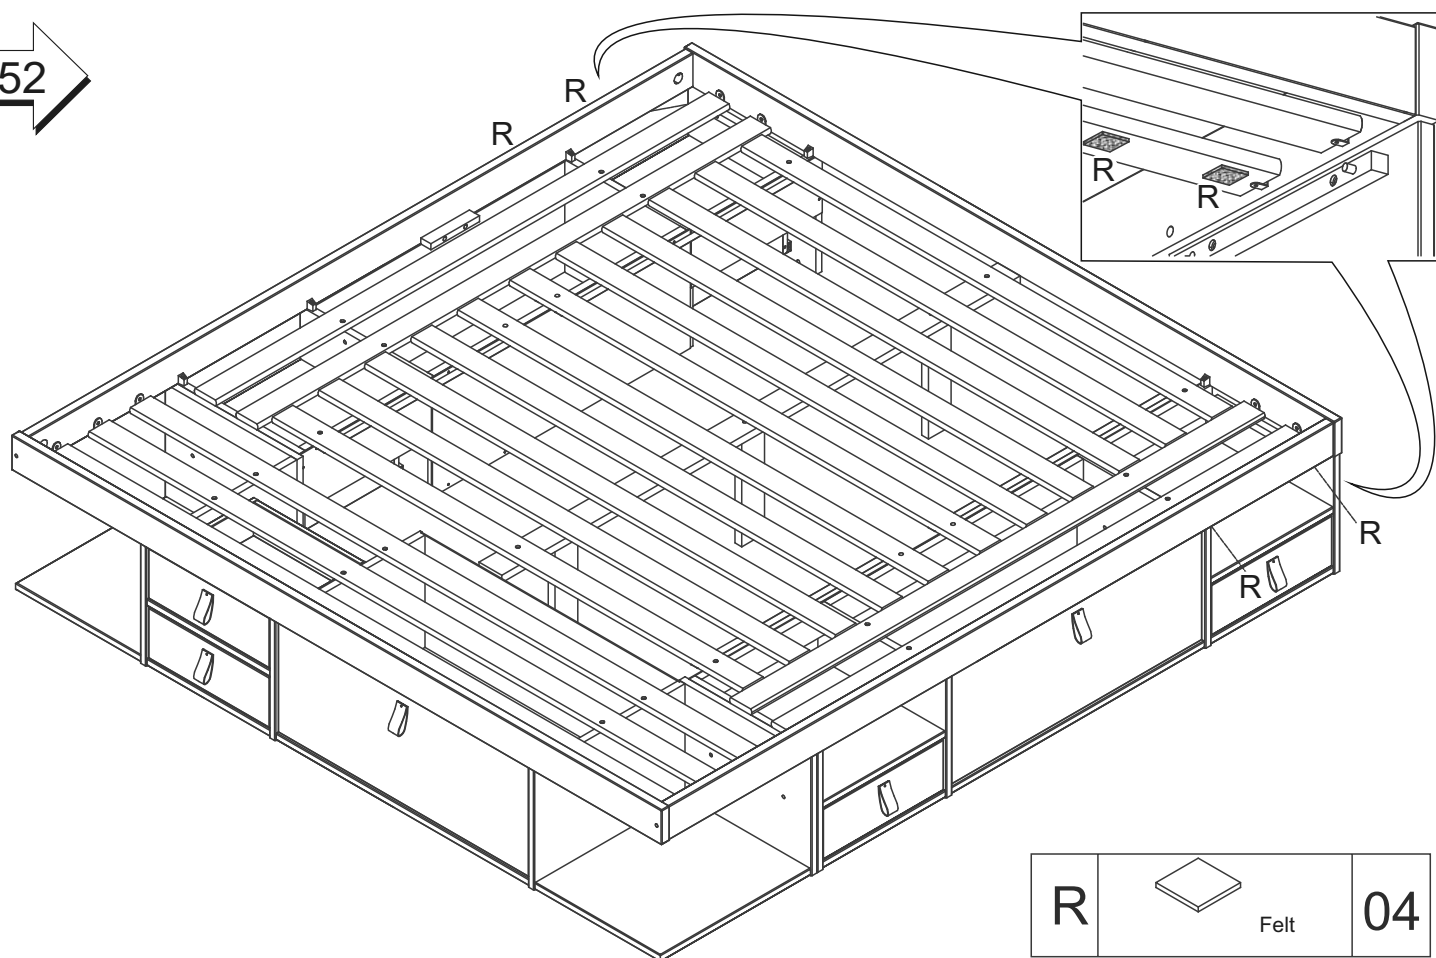


R




Felt

04

53

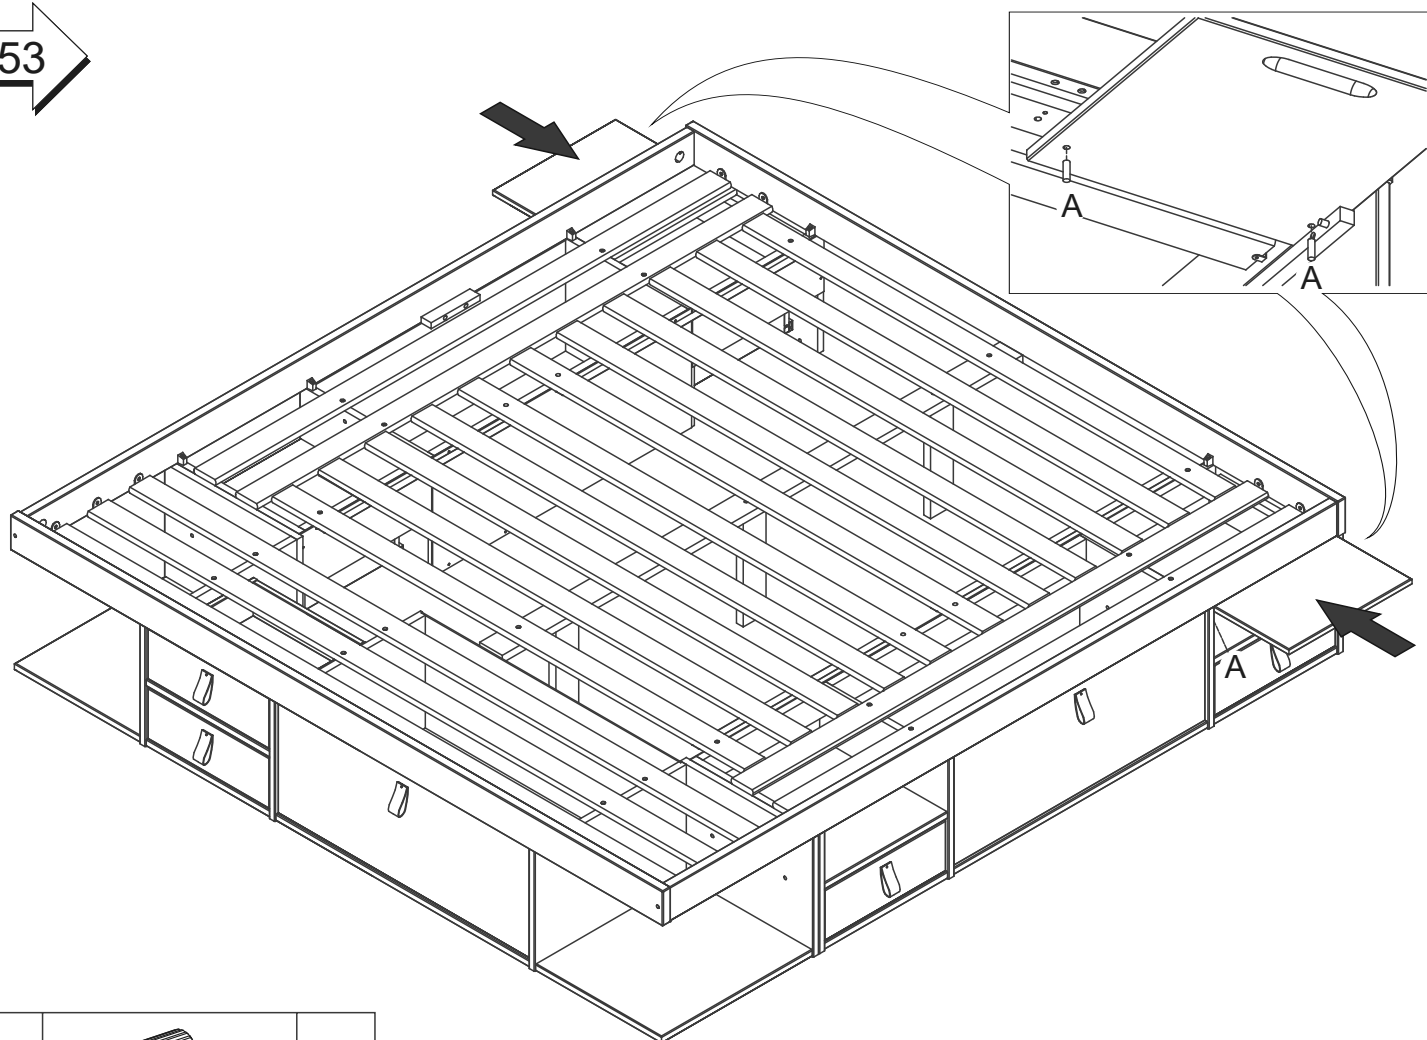


A




Ø 5/16" x 1"


04

54

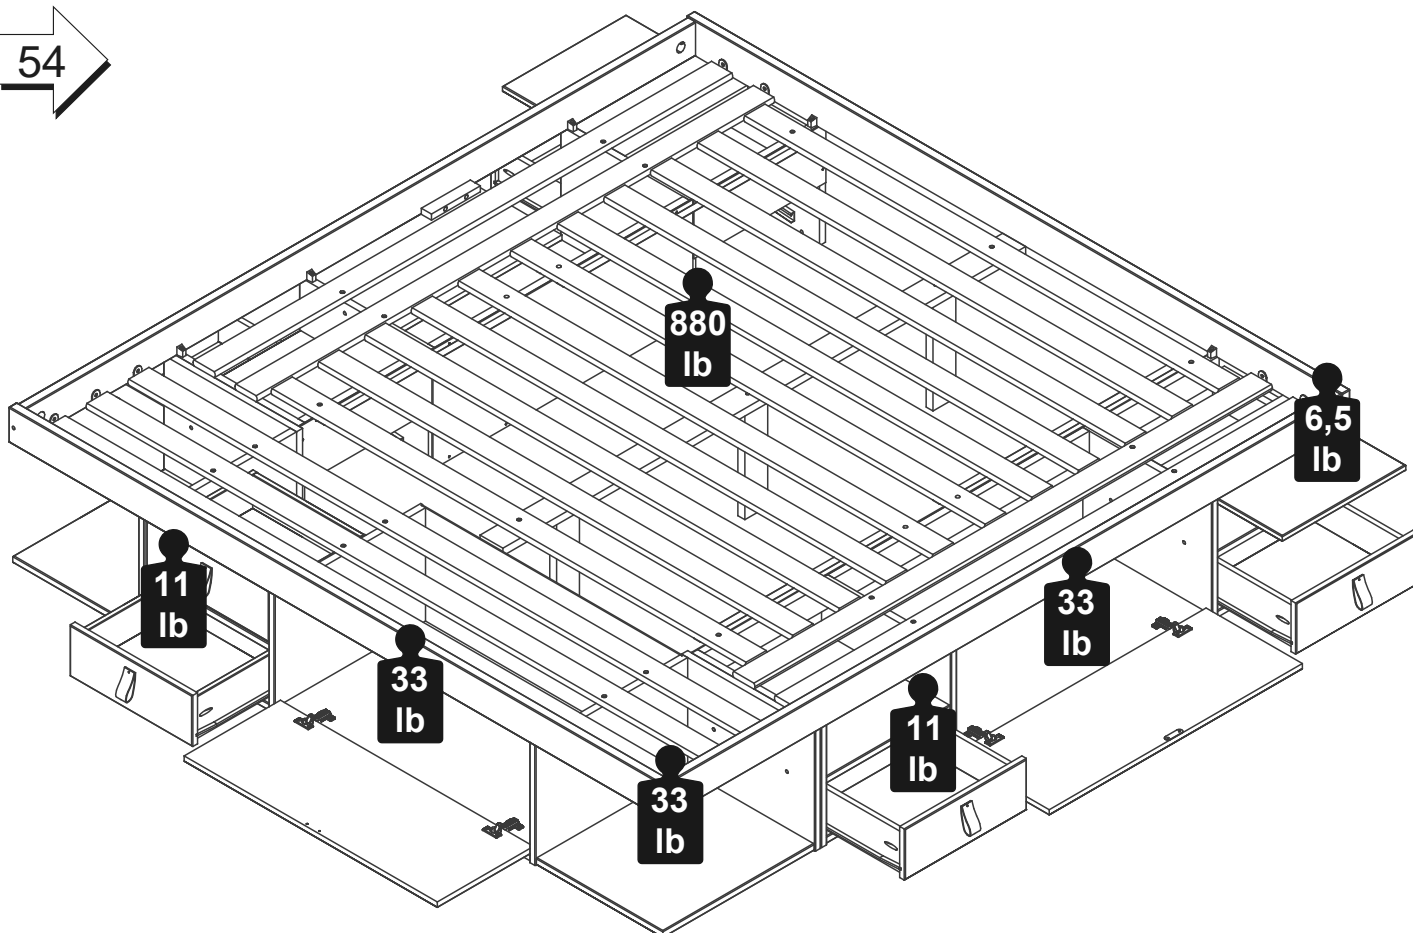

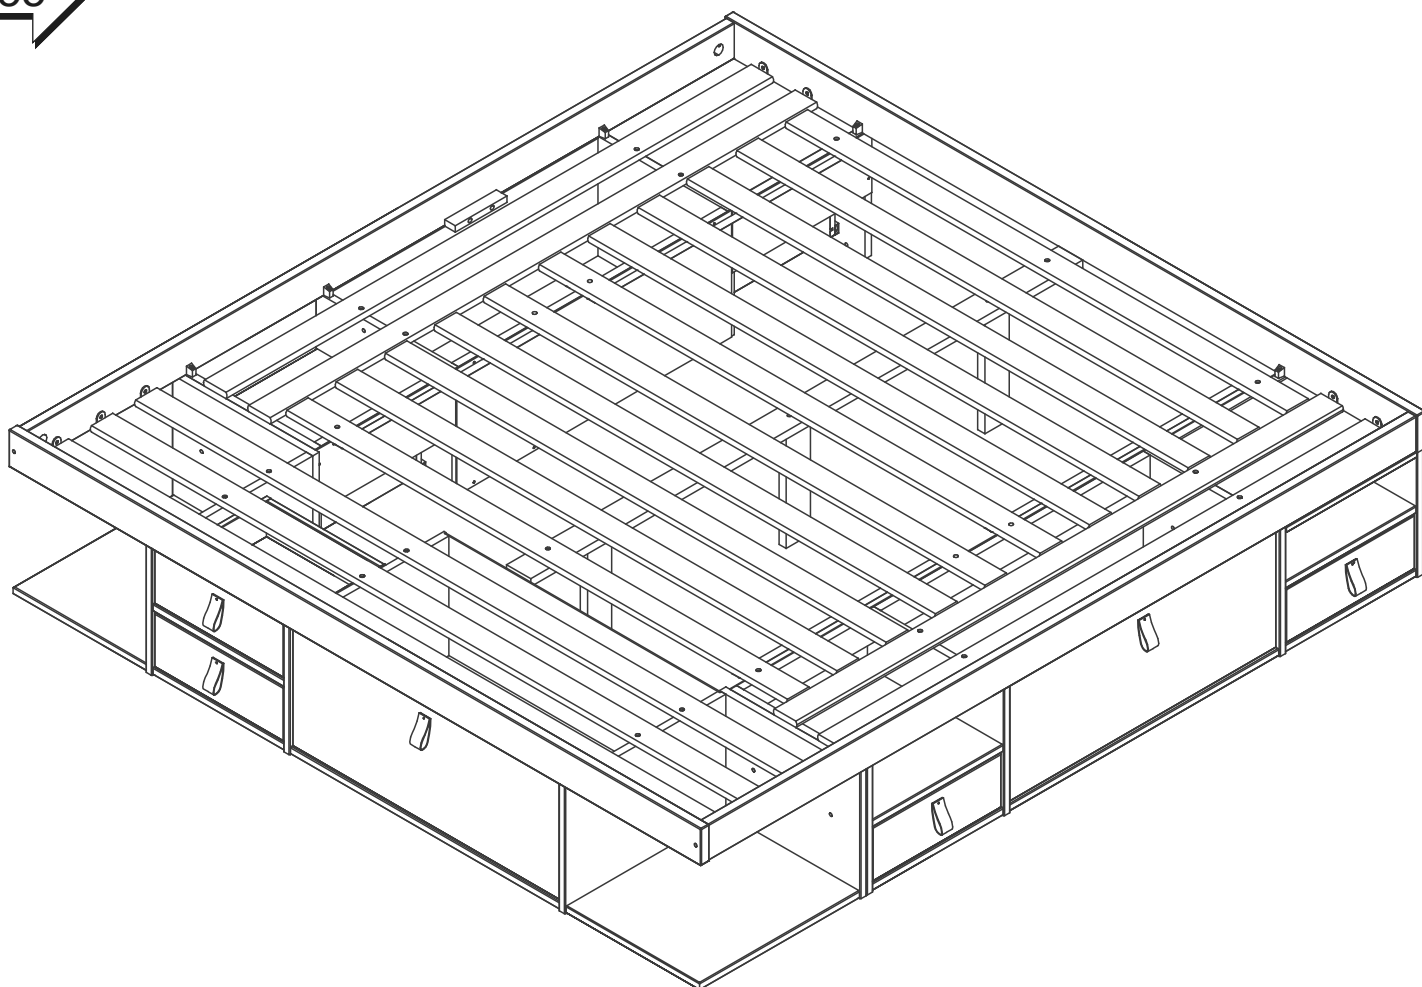


Please do not lift or pull the bed holding the bars around the slatted floor after having assembled your product

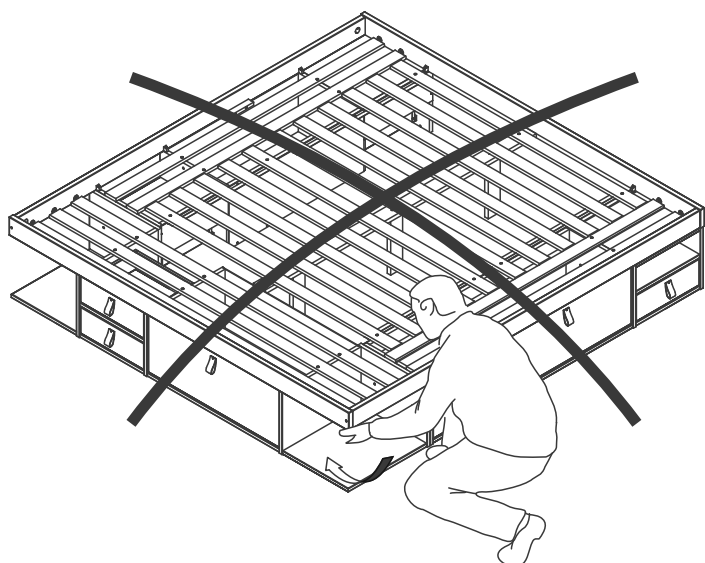

Hi there!

Have you finish the assembly of your product?

How about choosing a good place to set your MMM sticker? It's green and was send to you inside the accessories bag.

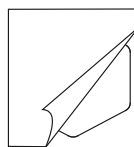

Please remove the adhesive label.

