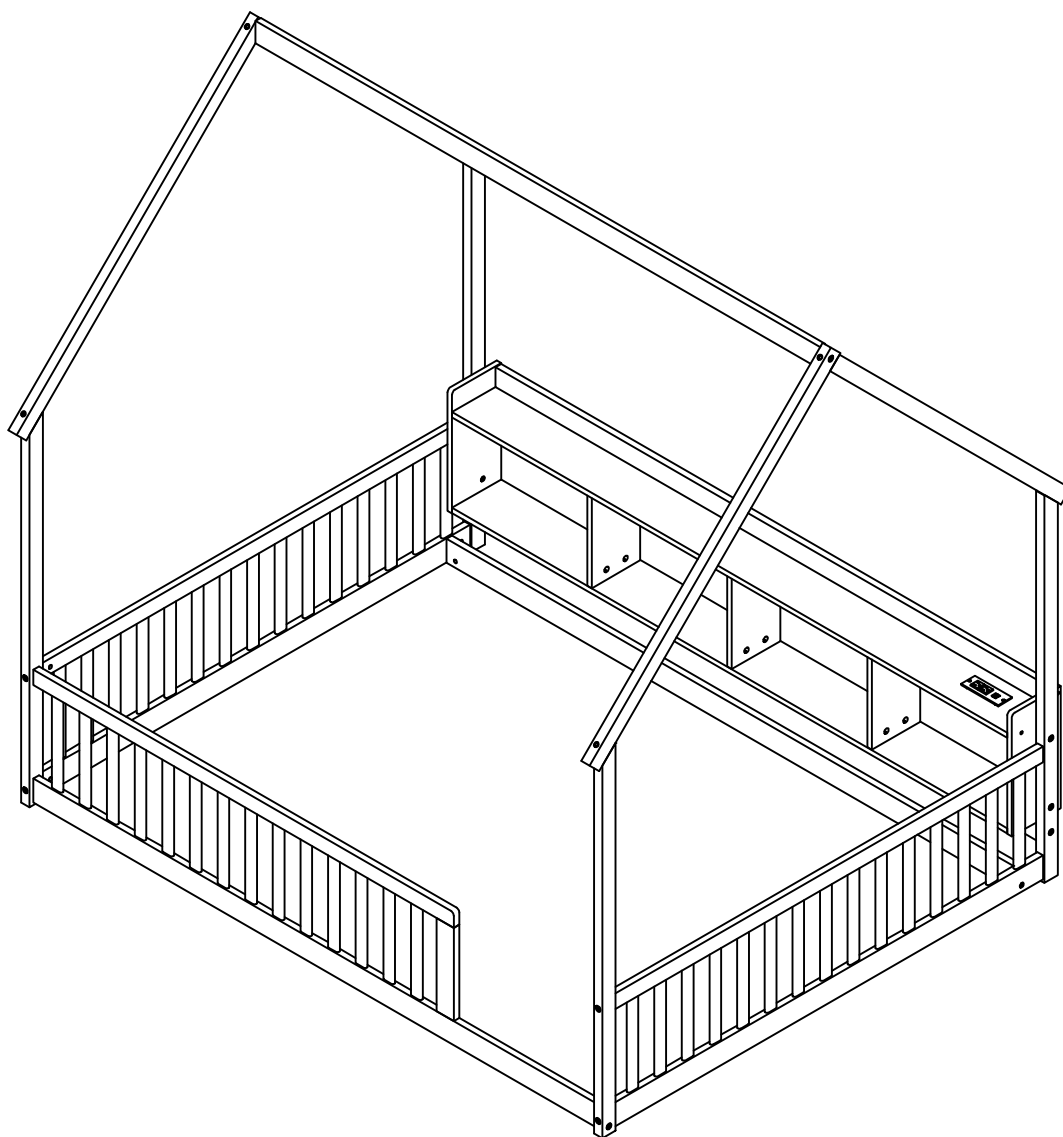



ASSEMBLY INSTRUCTIONS

FULL FLOOR HOUSE BED WITH STORAGE SHELVES




















SA33849




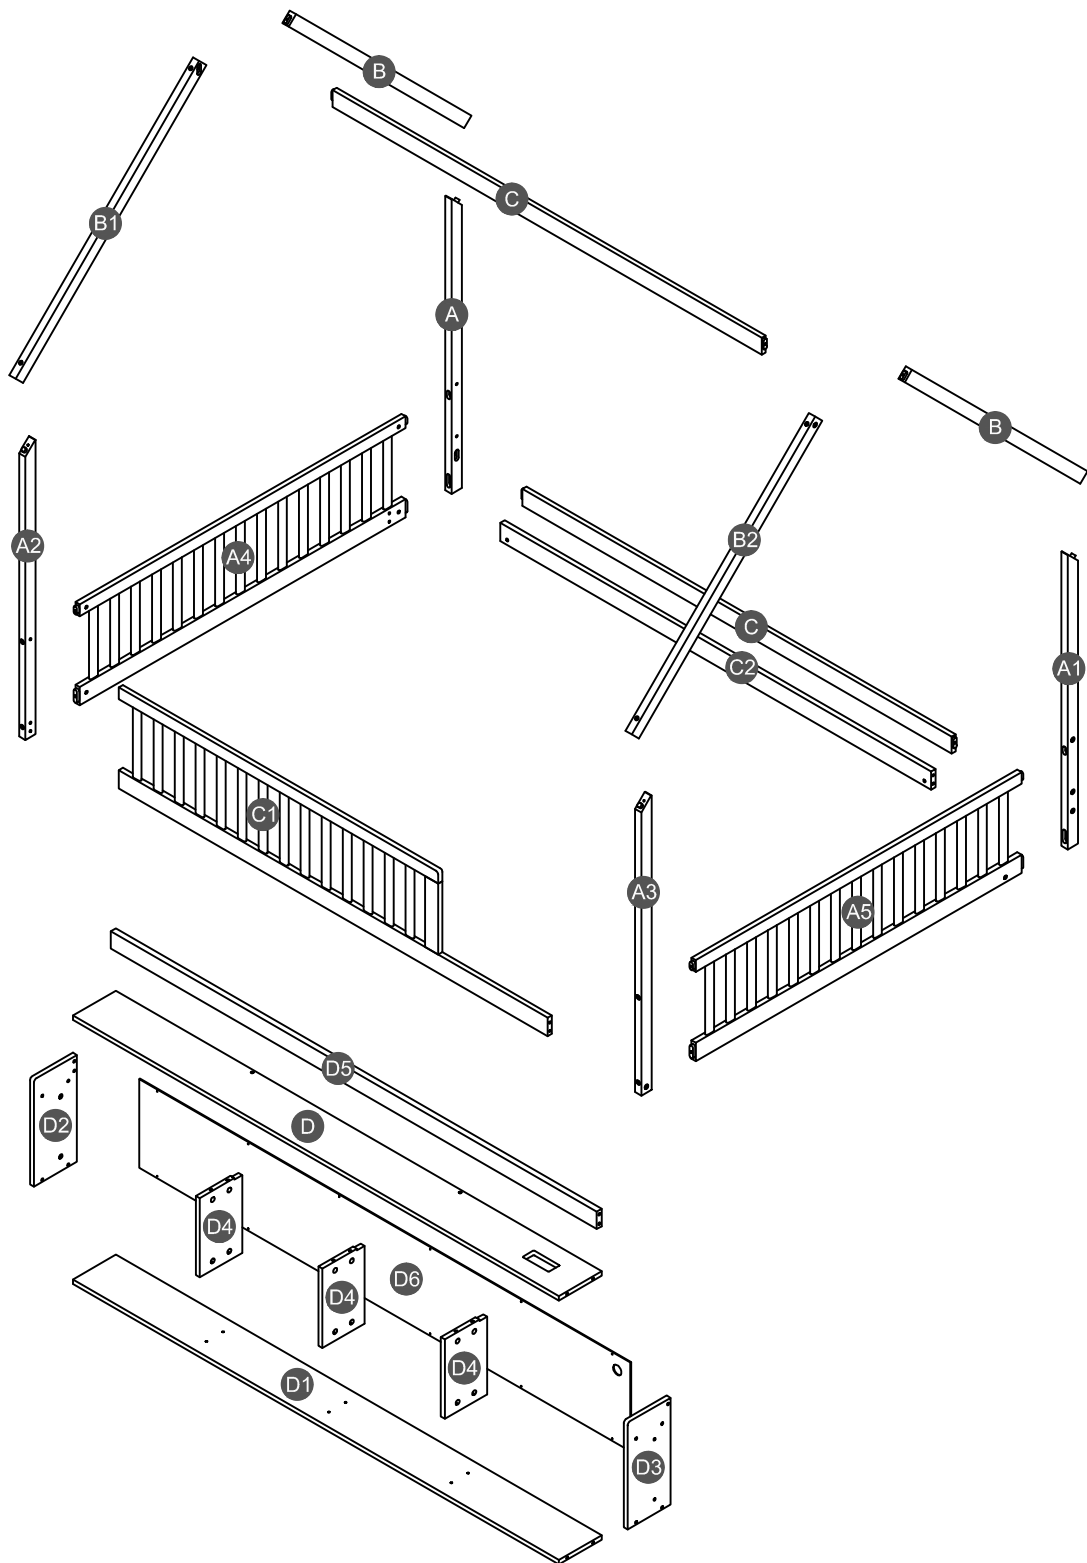
Detail View





Part List

A  Leg (Left back) - 1pc	A1  Leg (Right back) - 1pc	A2  Leg (Left front) - 1pc
A3  Leg (Right front) - 1pc	A4  Guard rail HB - 1pc	A5  Guard rail FB - 1pc
B  Upper bar (back) - 2pcs	B1  Upper bar (left front) - 1pc	B2  Upper bar (right front) - 1pc
C  Upper horizontal bar - 2pcs	C1  Guard rail (front) - 1pc	C2  Lower horizontal bar (back) - 1pc
D  Top panel - 1pc	D1  Bottom panel - 1pc	D2  Left side panel - 1pc
D3  Right side panel - 1pc	D4  Divider panel - 3pcs	D5  Upper horizontal bar - 1pc
D6  Back panel - 1pc		

Hardware List

1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (6pcs)	2  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (17pcs)	3  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (10pcs)
4  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (4pcs)	5  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (27pcs)	6  $(\varnothing 12) 1/4" \times 65 \text{mm}$ Hex-Head Screws (6pcs)
7  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head Screws (2pcs)	8  $21 \times 21 \times 17 \times 1.7 \text{mm}$ Metal bracket (1pc)	9  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (4pcs)
10  $\varnothing 3 \times 12 \text{mm}$ Wood screws (13pcs)	11  $\varnothing 7" \times 35 \text{mm}$ Cam lock (12pcs)	12  $\varnothing 14 \times 9 \text{mm}$ Cam lock (12pcs)
13  $1500 \times 125 \times 47 \times 43 \text{mm}$ Power outlet	14  L1900mm Led light (1pc)	15  L2000mm Adapter and wire strip (1pc)
16  $22 \times 10 \times 6 \text{mm}$ Clamp plastic (1pc)	17  $(1/4") 4.5 \times 58 \text{mm}$ Allen key	

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)





Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:


2		5		6	
4PCS		4PCS		3PCS	

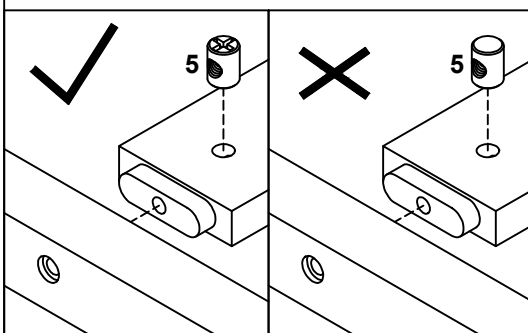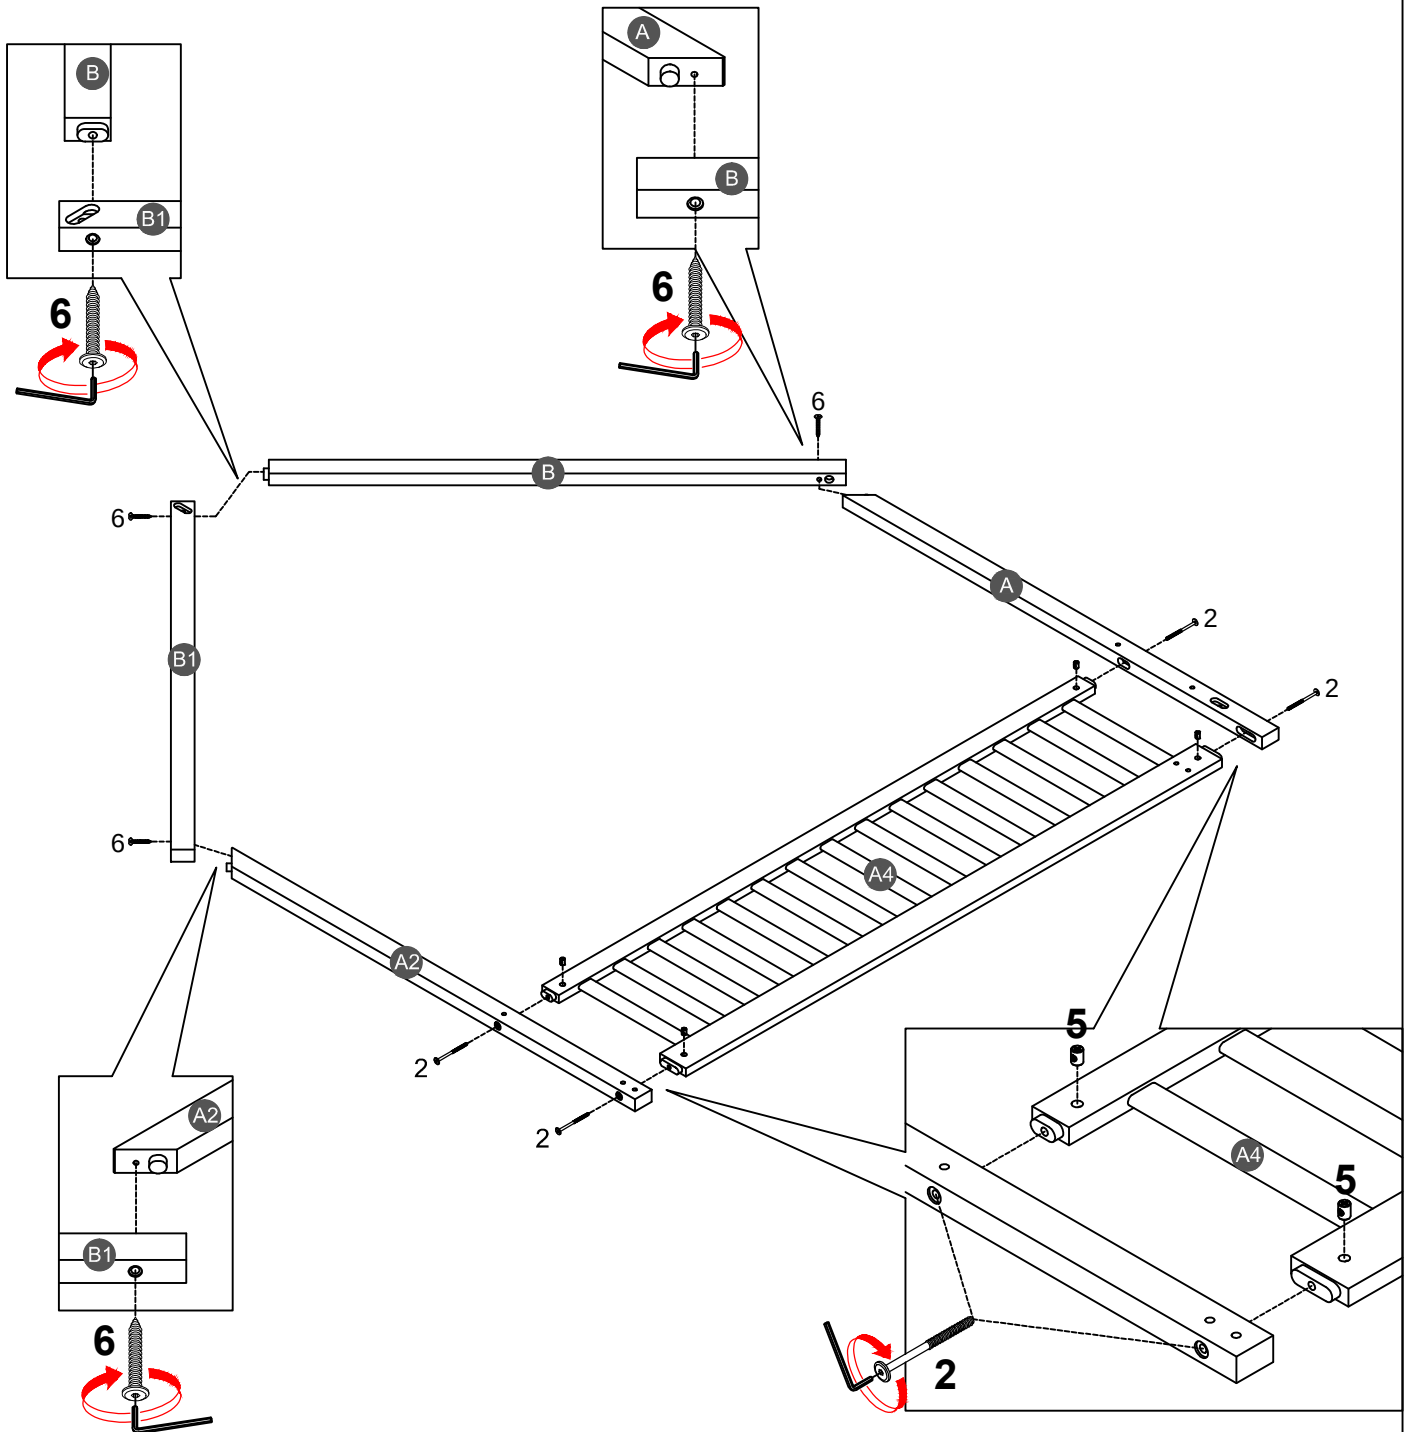

EN: Note: The side of part #5 with the "x" mark needs to be facing up, otherwise it cannot be tightened.

STEP 2:

2		5		6	
4PCS		4PCS		3PCS	

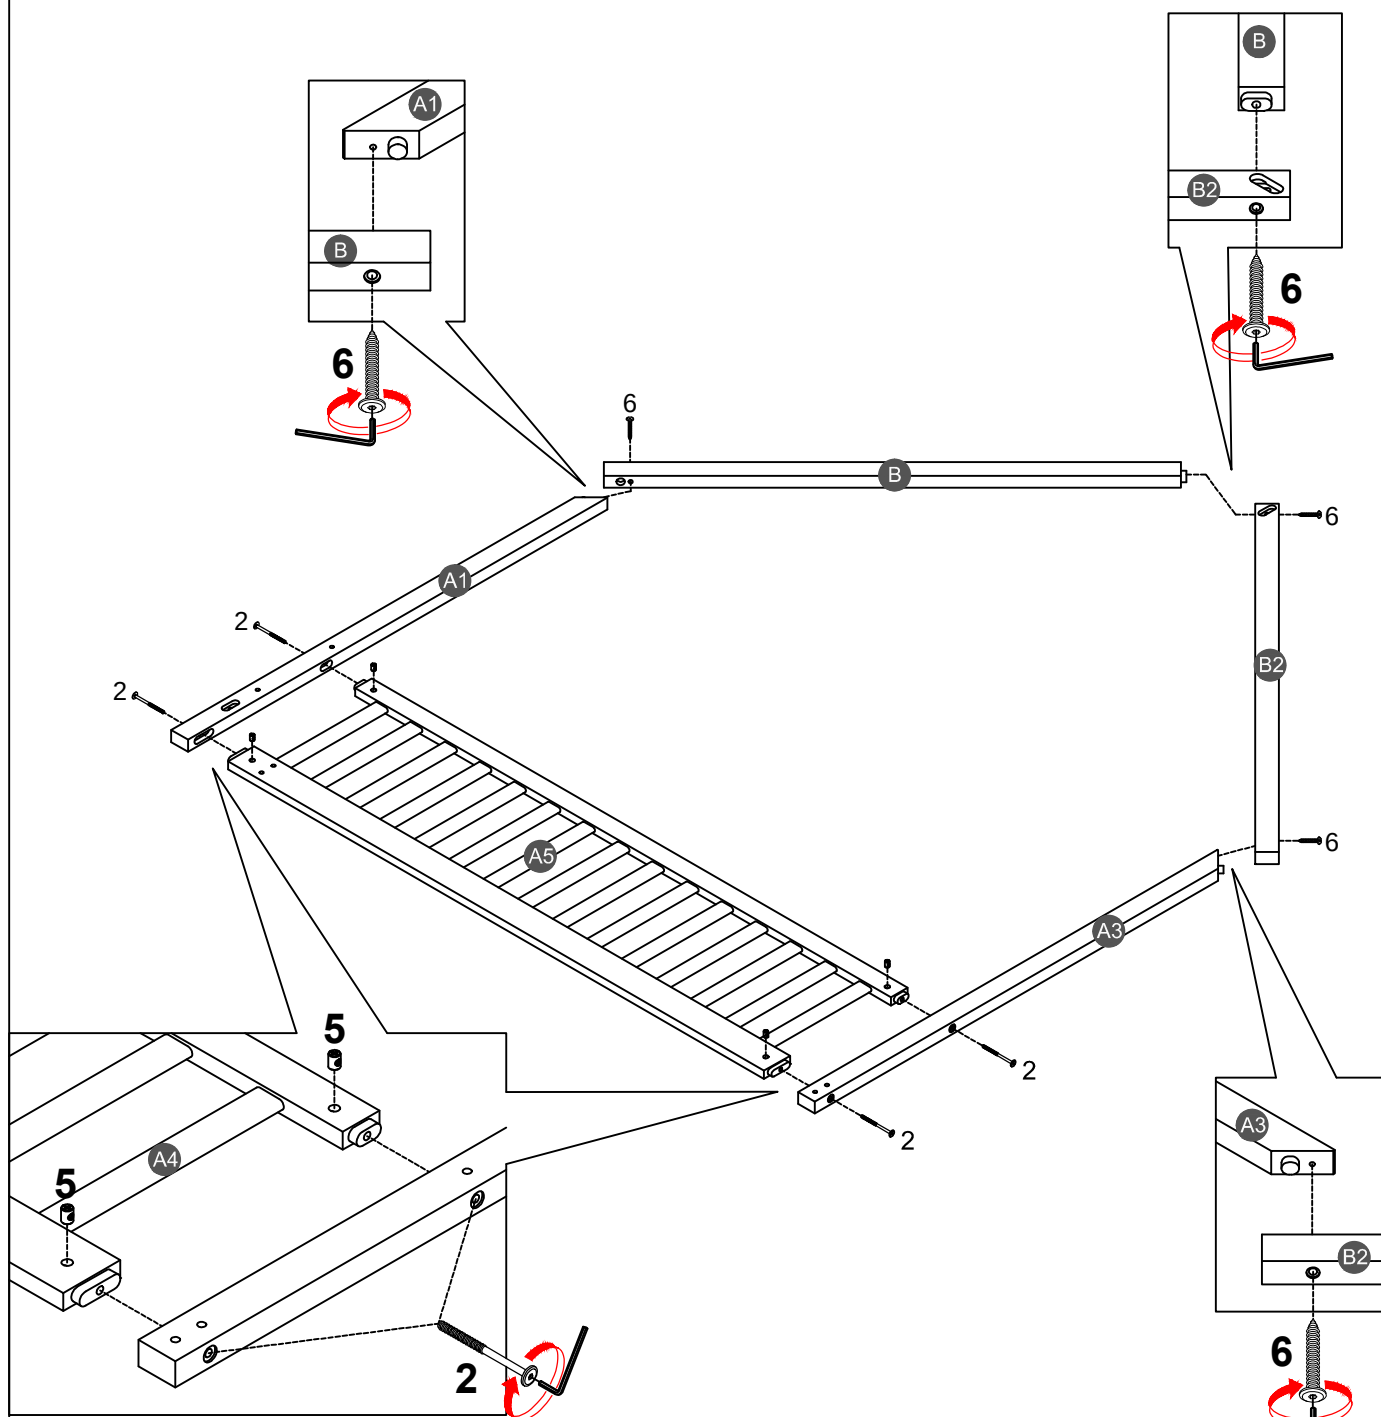


STEP 3:

1		2		5	
4PCS	9PCS	9PCS	9PCS	9PCS	9PCS


Note: Not fully tighten until all bolts are started.

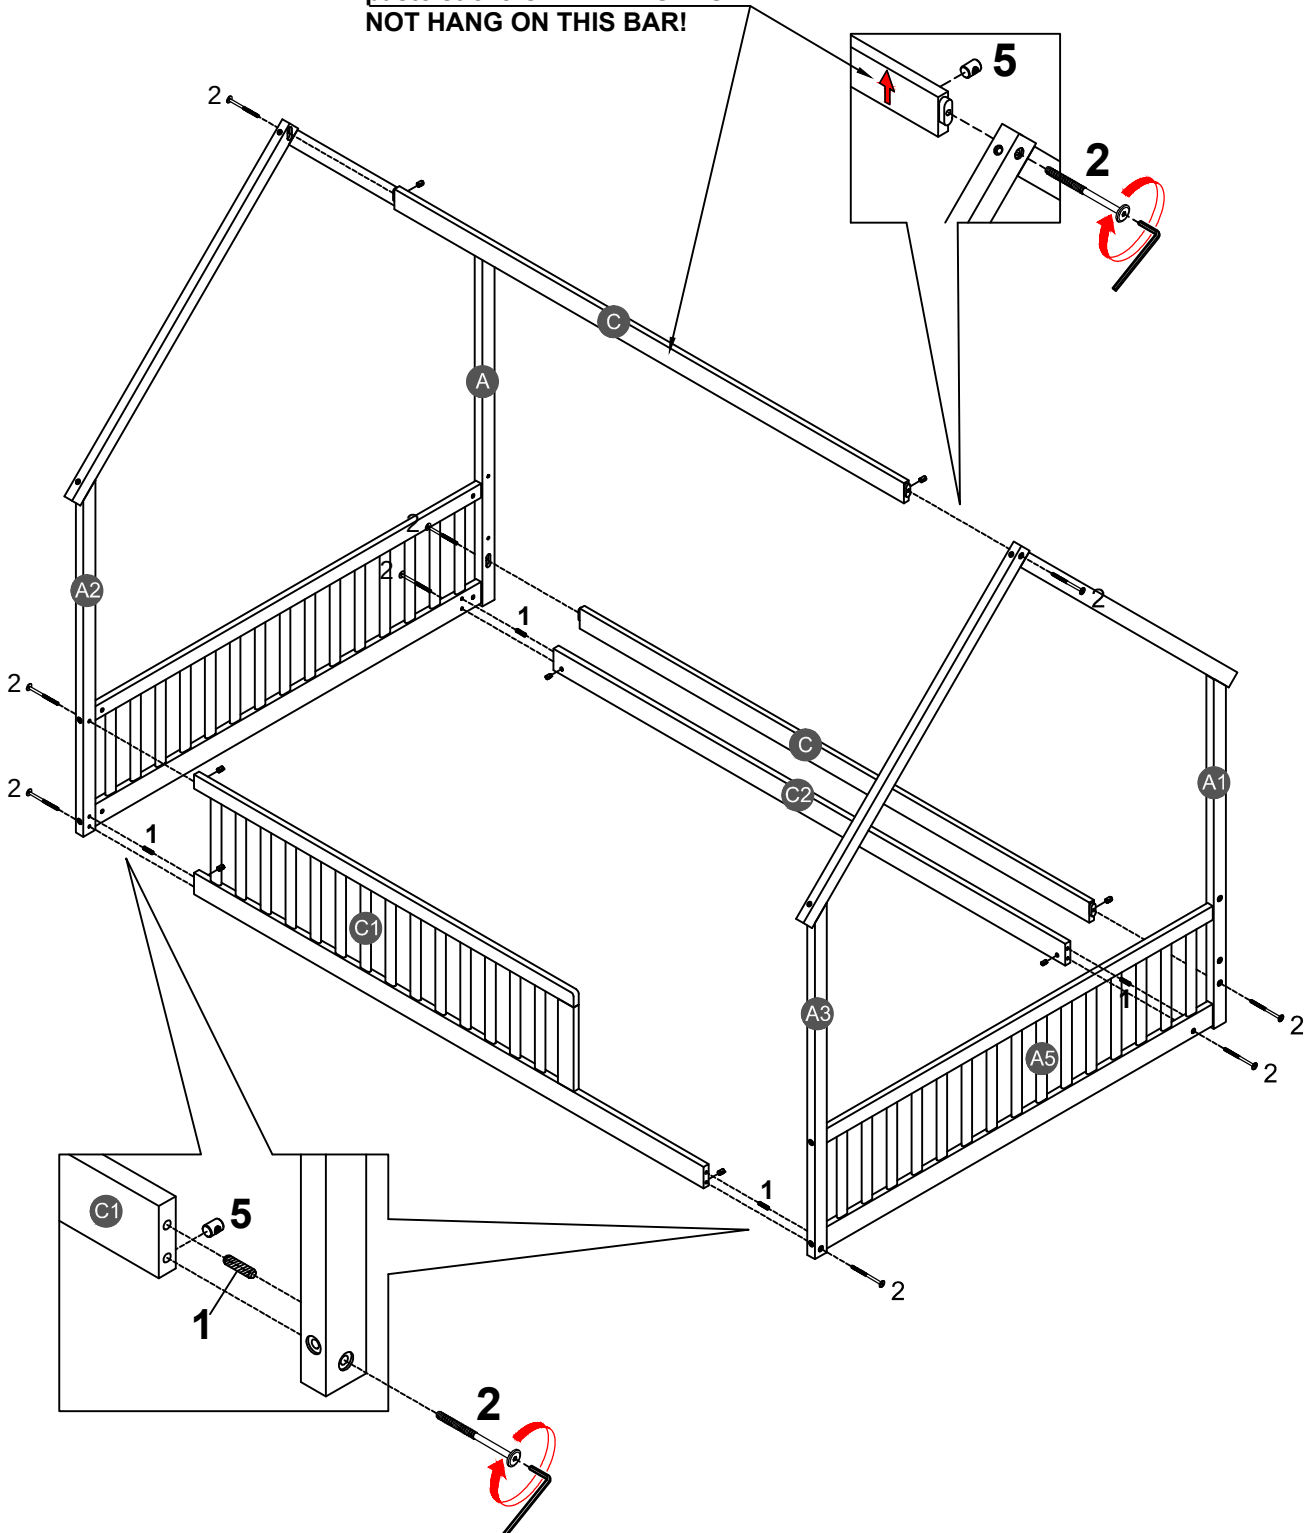**Remark: Upper horizontal
paste stickers WARNING: DO
NOT HANG ON THIS BAR!**




STEP 4:

8	9
	
1PC	2PCS


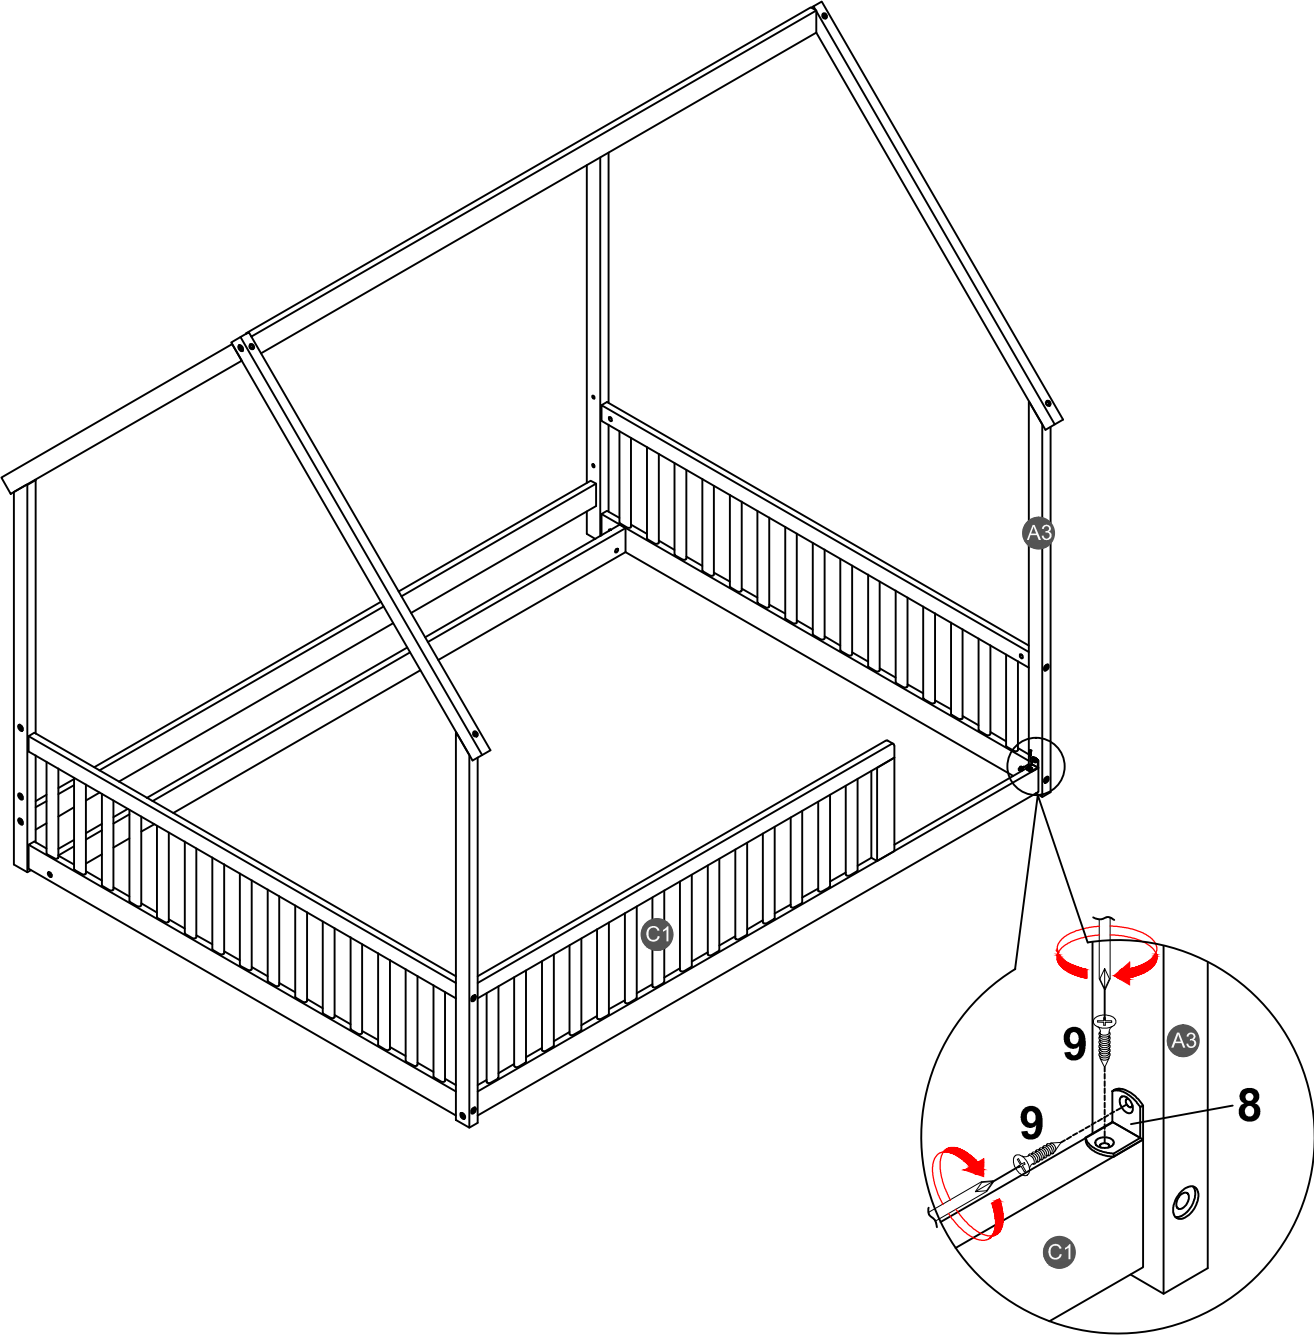


STEP 5:

11



12PCS

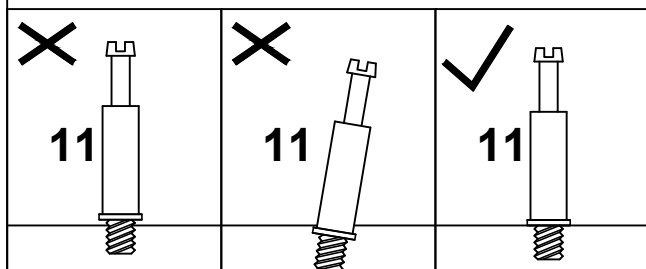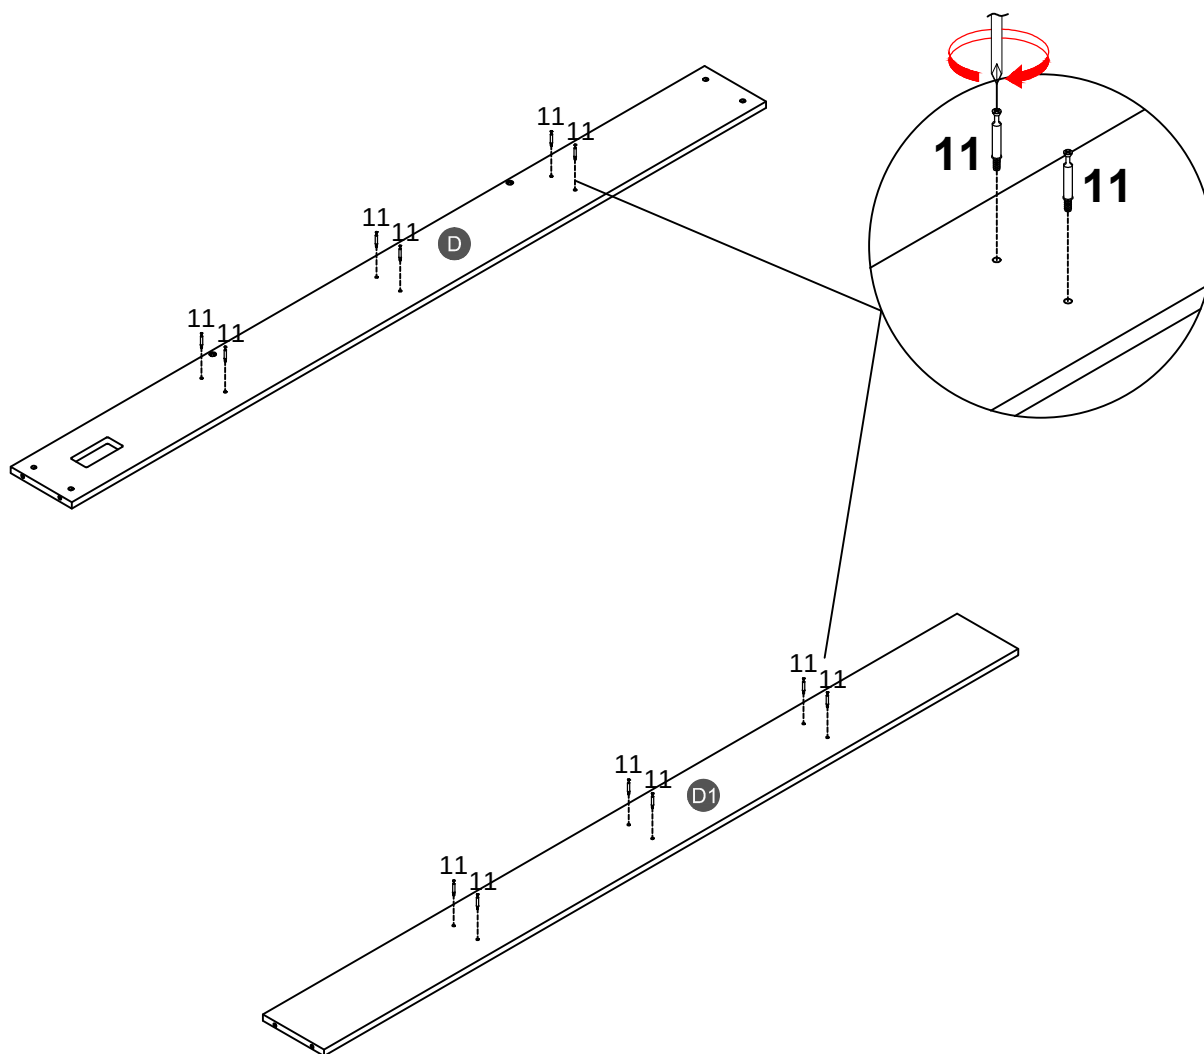


STEP 6:


12



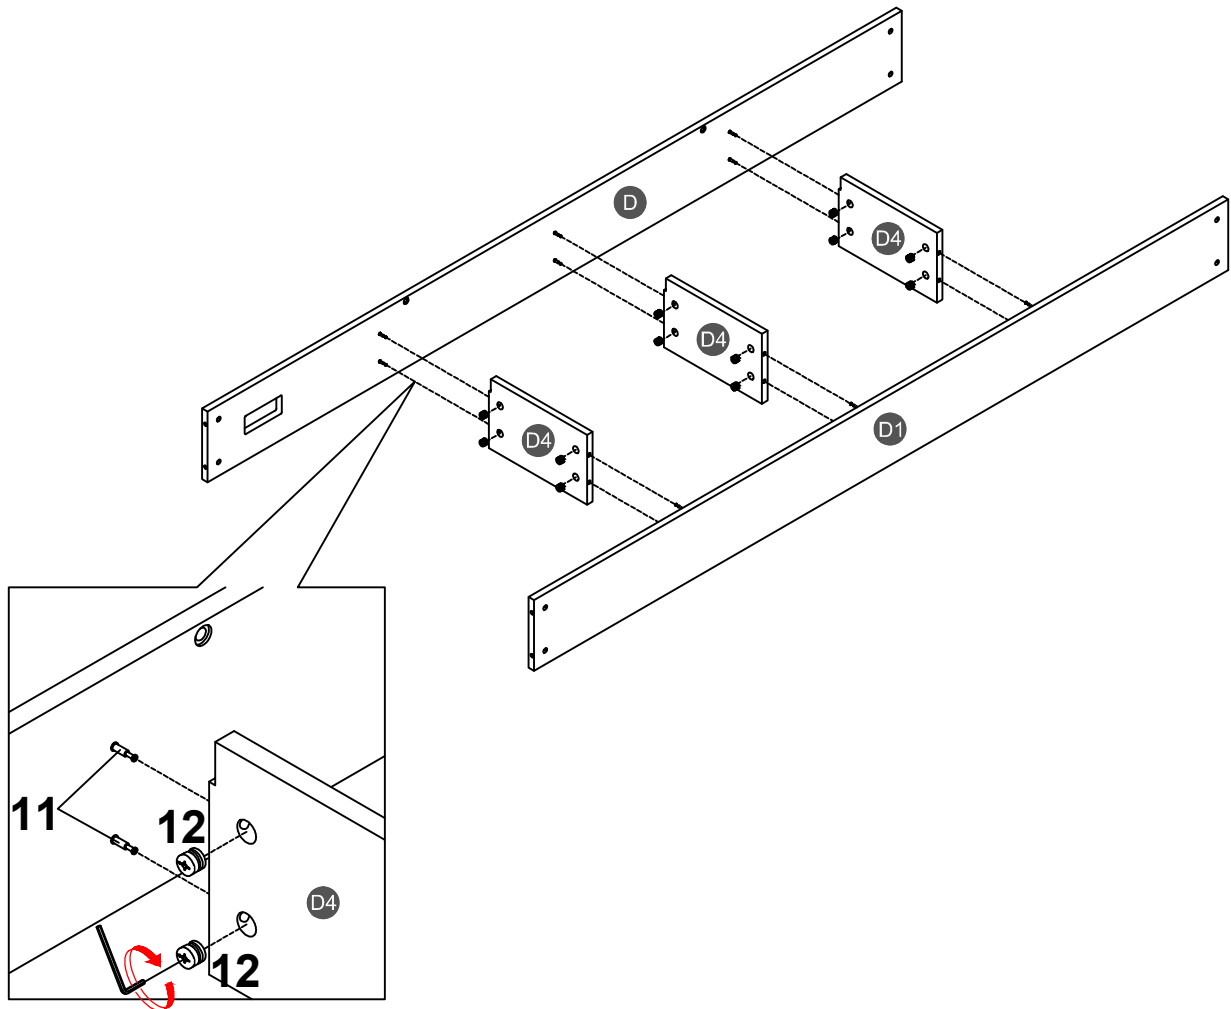
12PCS



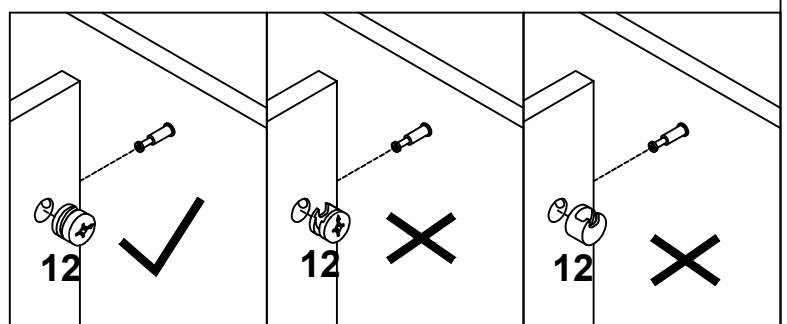Note: Place hardware #12 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #12 into the hole of hardware #11 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)



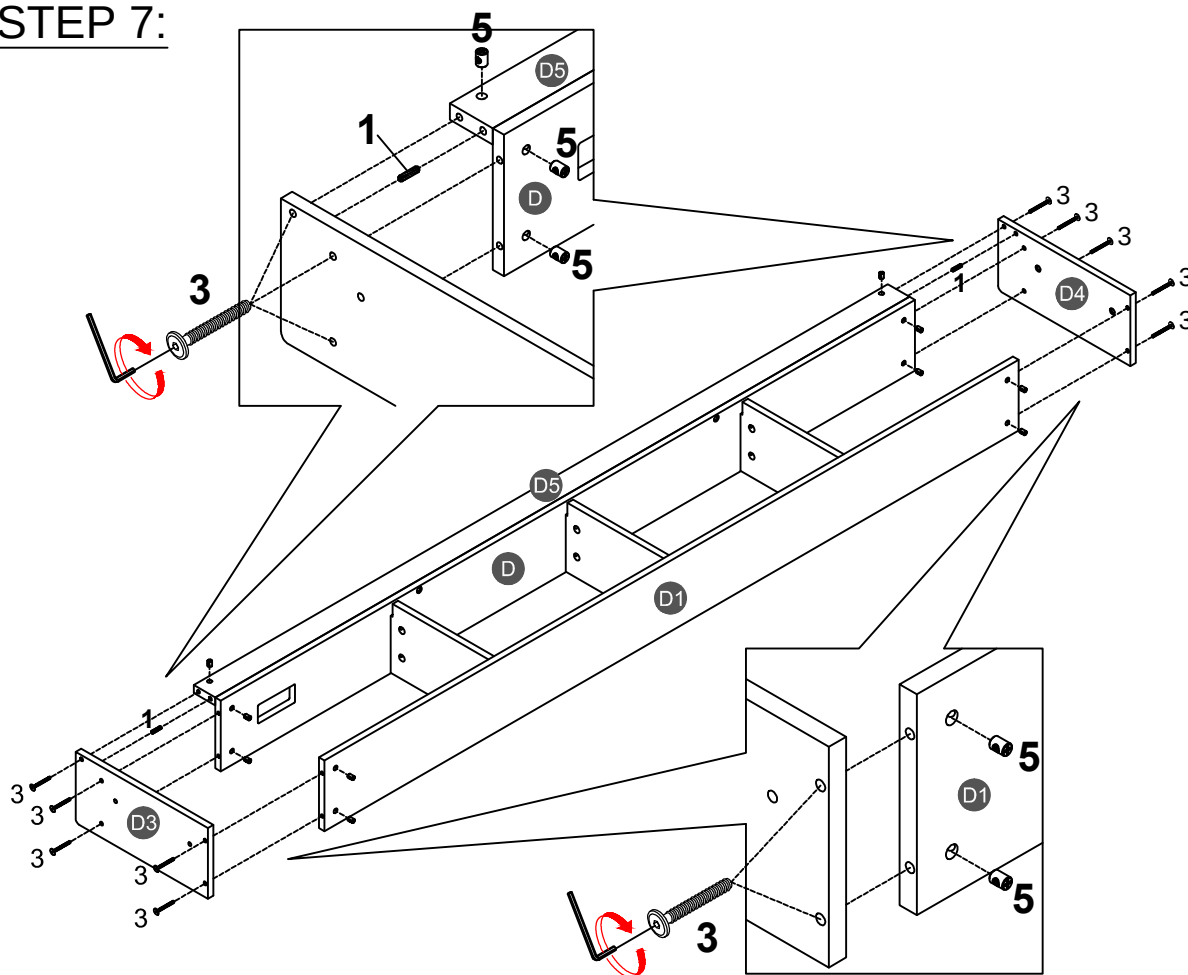
STEP 7:




1	
2PCS	
3	
10PCS	
5	
10PCS	


STEP 8:

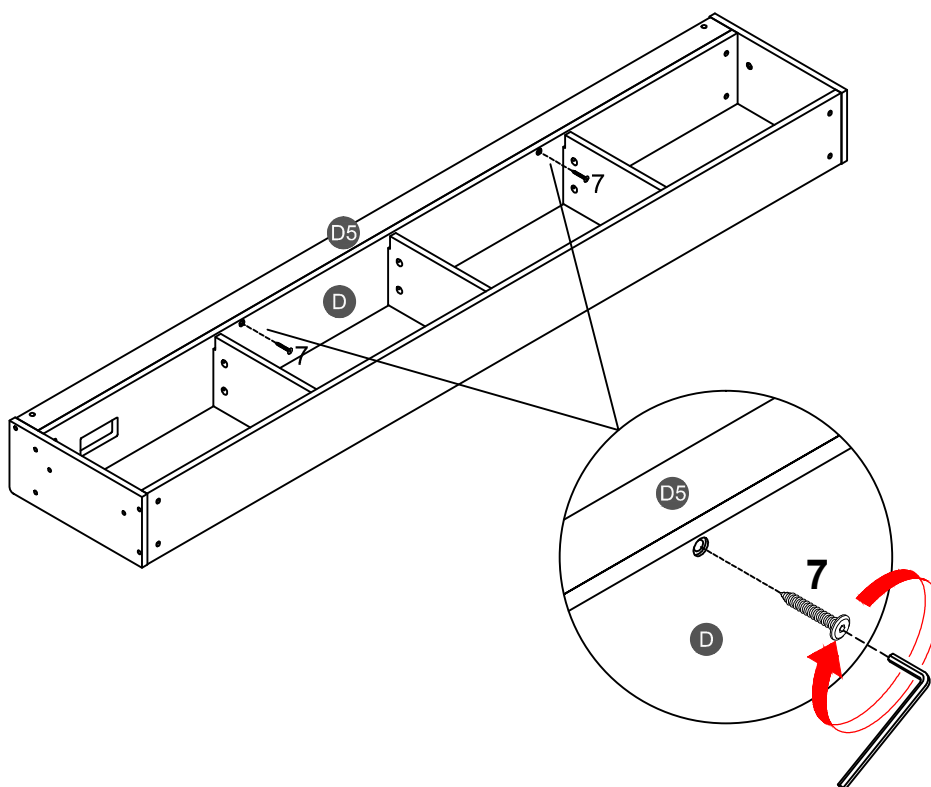ÉTAPE




7	
2PCS	

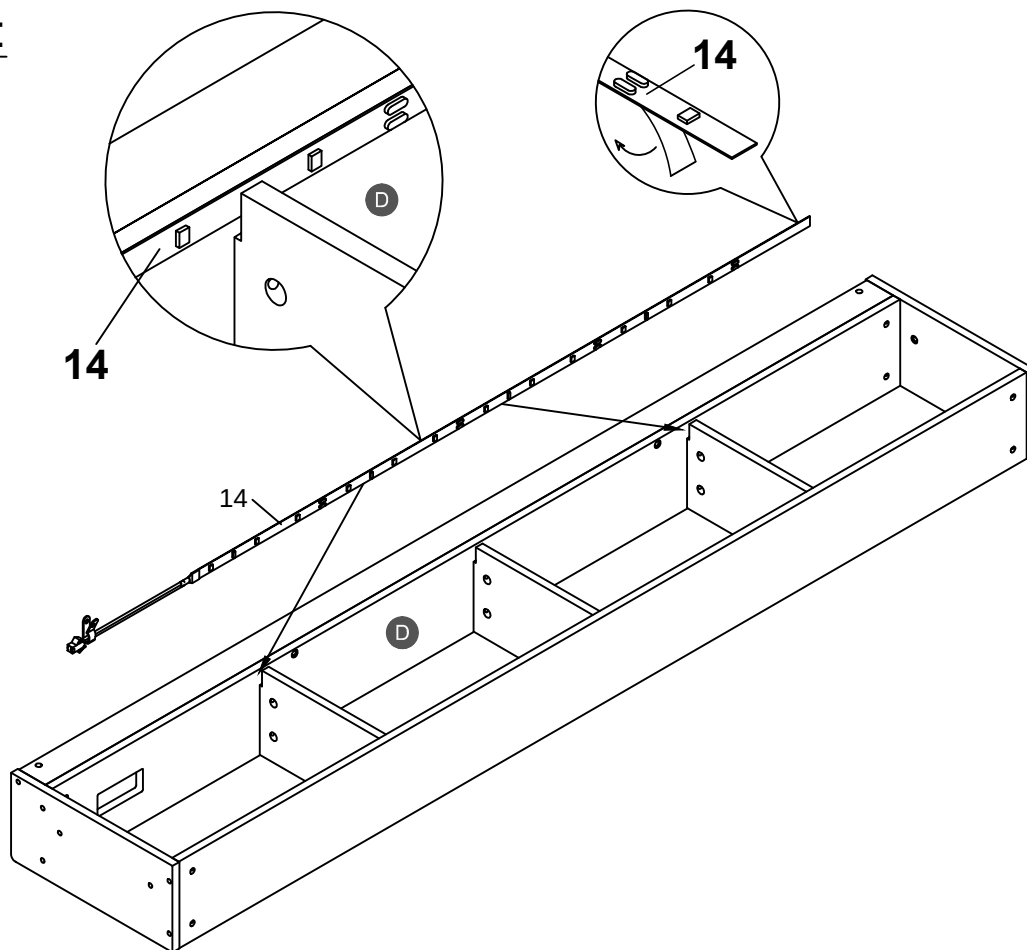STEP 9:




14



1PC

STEP 10:

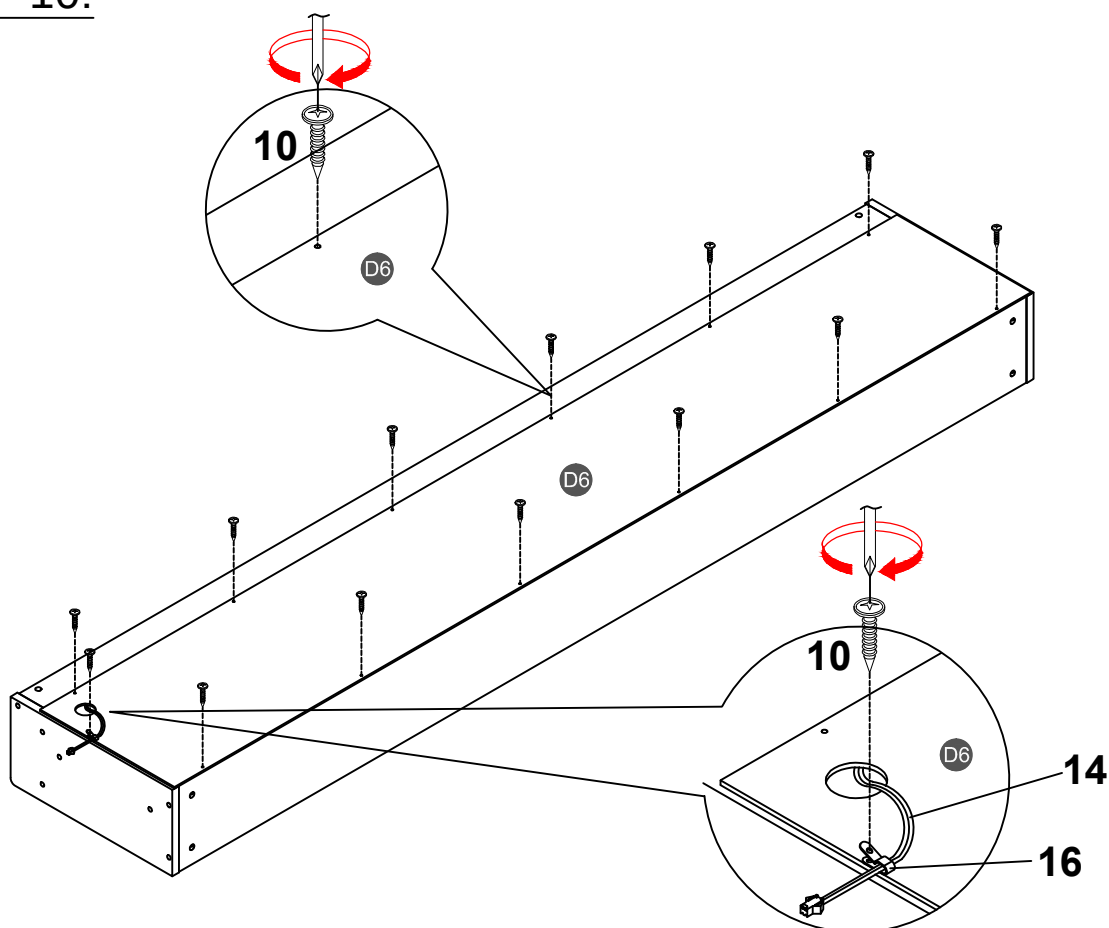ÉTAPE



10



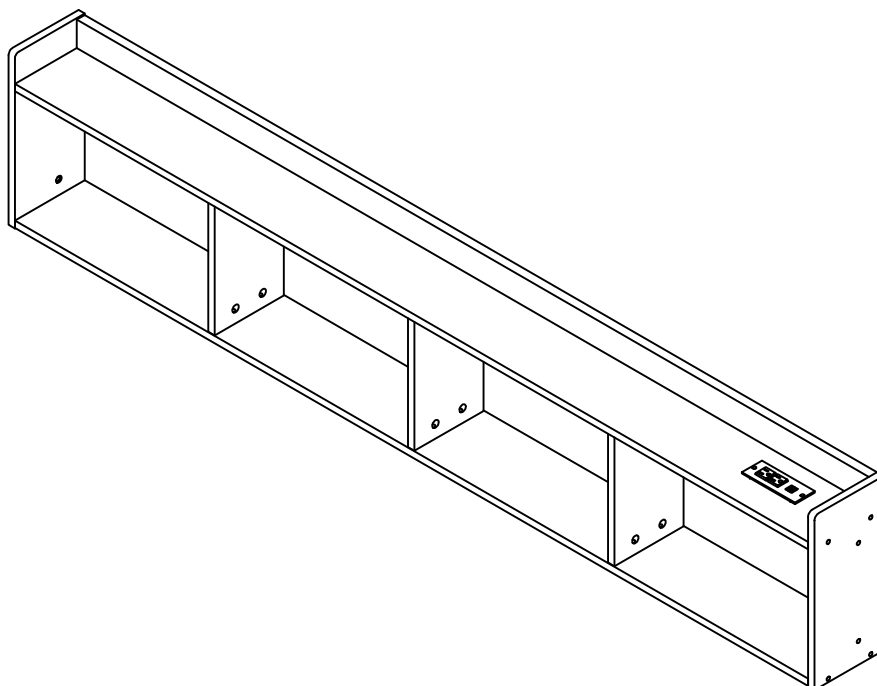
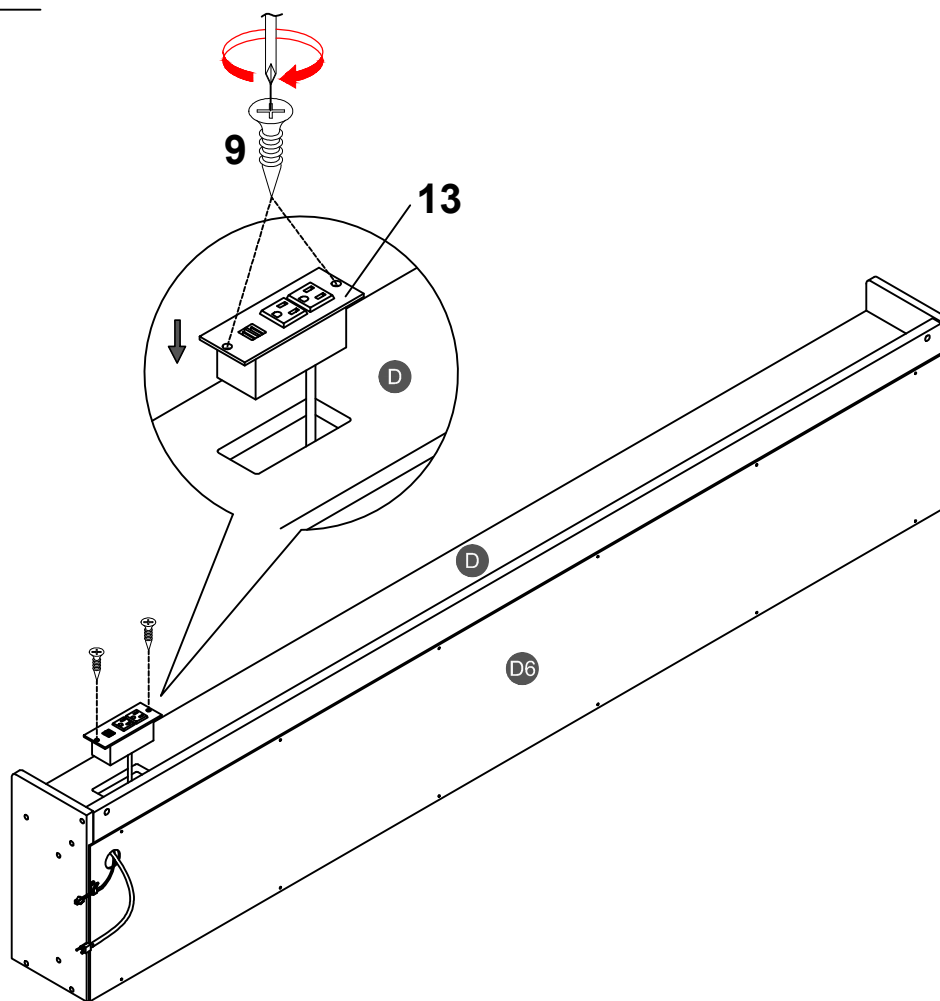
13PCS

16



1PC

STEP 11:



9




2PCS

13



1PC

STEP 12:

4		15	
4PCS		1PC	

