

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Wrench (included) and Phillips head screwdriver. (Not included)


CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

SAFAVIEH C O U T U R E

Model# SFV2169-Q

Product Dimensions: 63.625"W x 85.5"D x 48"H

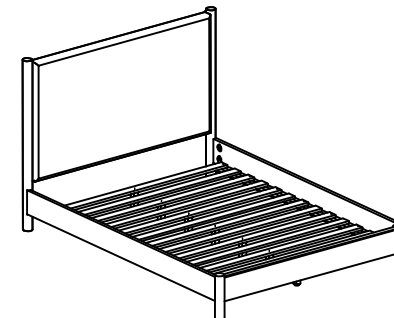

Weight Capacity : 550 lbs
Warning : Do not stand on the product
Warning : Do not over torque bolts

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
A	HEADBOARD		1x	1 of 3
B	FOOTBOARD		1x	2 of 3
C	ROLLER SLAT		1x	2 of 3
D	SIDE RAIL		2x	3 of 3
E	SUPPORT LEGS OF SLATS		7x	2 of 3

PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
HW1	WOOD SCREW $\varnothing 8 \times 32 \text{mm}$		14x	3 of 3
HW2	BOLT 5/16"-18 X 3.5"		8x	3 of 3
HW3	HALF MOON NUT 5/16"/30 x15 x 7.5mm		8x	3 of 3
HW4	SPLIT LOCK WASHER 5/16" x 1/2"		8x	3 of 3
HW5	NUT 5/16"-18		8x	3 of 3
HW6	WRENCH 13MM		1x	3 of 3

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Wrench (included) and Phillips head screwdriver. (Not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1

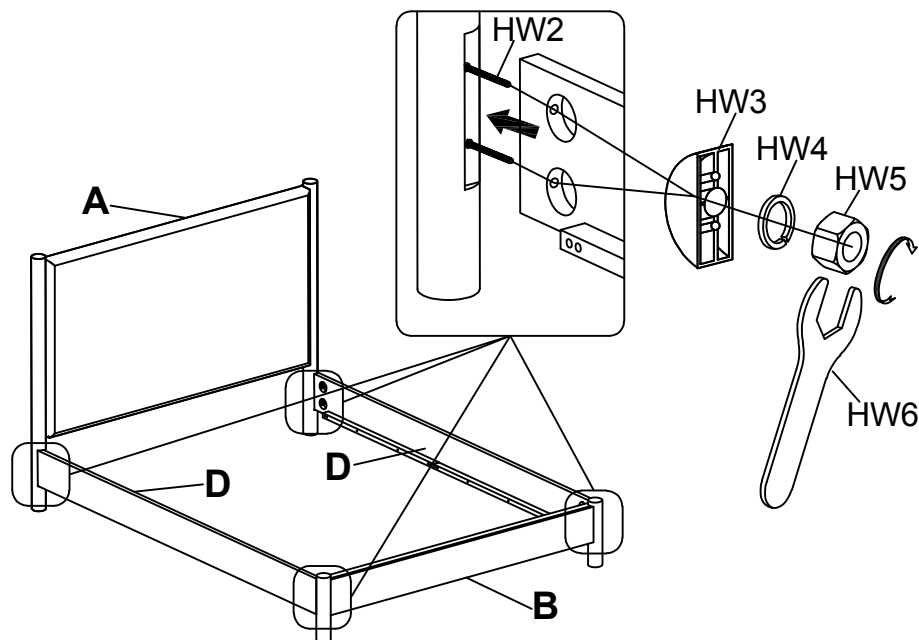

Step 1 :

Screw in 2 of the bolts (HW2) into the holes on the posts of the headboard (A). Align the bolts (HW2) to the holes in the side rails (D). Repeat this step for the footboard (B). Place the half moon nut (HW3), split lock washer (HW4), and nut (HW5) onto the bolts as shown. Use the wrench (HW6) to screw in the nut.

2

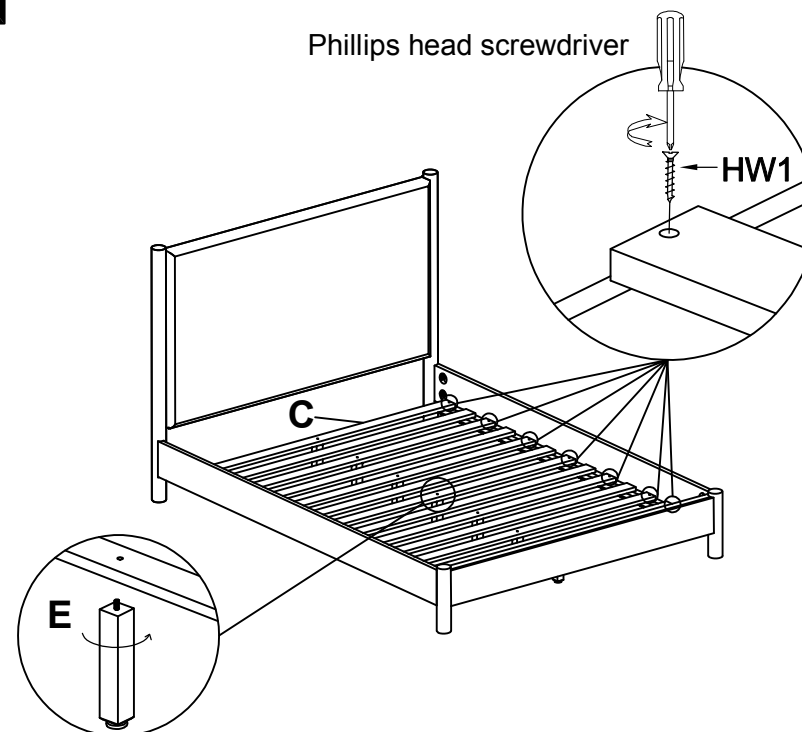

Step 2 :

Screw in the support legs (E) to the slats as shown. Use a Philips head screwdriver (not included) to screw in the wood screws (HW1) to connect the slats (C) to the inside wood bar of the side rails (D) as shown. Product is now ready for use.

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Wrench (included) and Phillips head screwdriver. (Not included)


CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

SAFAVIEH C O U T U R E

Model# SFV2169-K

Product Dimensions: 79.625"W x 85.5"D x 48"H

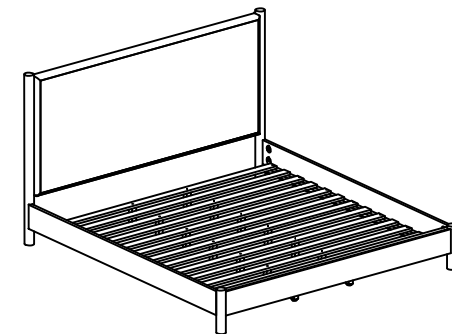

Weight Capacity : 550 lbs
Warning : Do not stand on the product
Warning : Do not over torque bolts



Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
A	HEADBOARD		1x	1 of 3
B	FOOTBOARD		1x	2 of 3
C	ROLLER SLAT		1x	2 of 3
D	SIDE RAIL		2x	3 of 3
E	SUPPORT LEGS OF SLATS		14x	2 of 3

PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
HW1	WOOD SCREW $\varnothing 8 \times 32 \text{mm}$		14x	3 of 3
HW2	BOLT 5/16"-18 X 3.5"		8x	3 of 3
HW3	HALF MOON NUT 5/16"/30 x15 x 7.5mm		8x	3 of 3
HW4	SPLIT LOCK WASHER 5/16" x 1/2"		8x	3 of 3
HW5	NUT 5/16"-18		8x	3 of 3
HW6	WRENCH 13MM		1x	3 of 3

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Wrench (included) and Phillips head screwdriver. (Not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

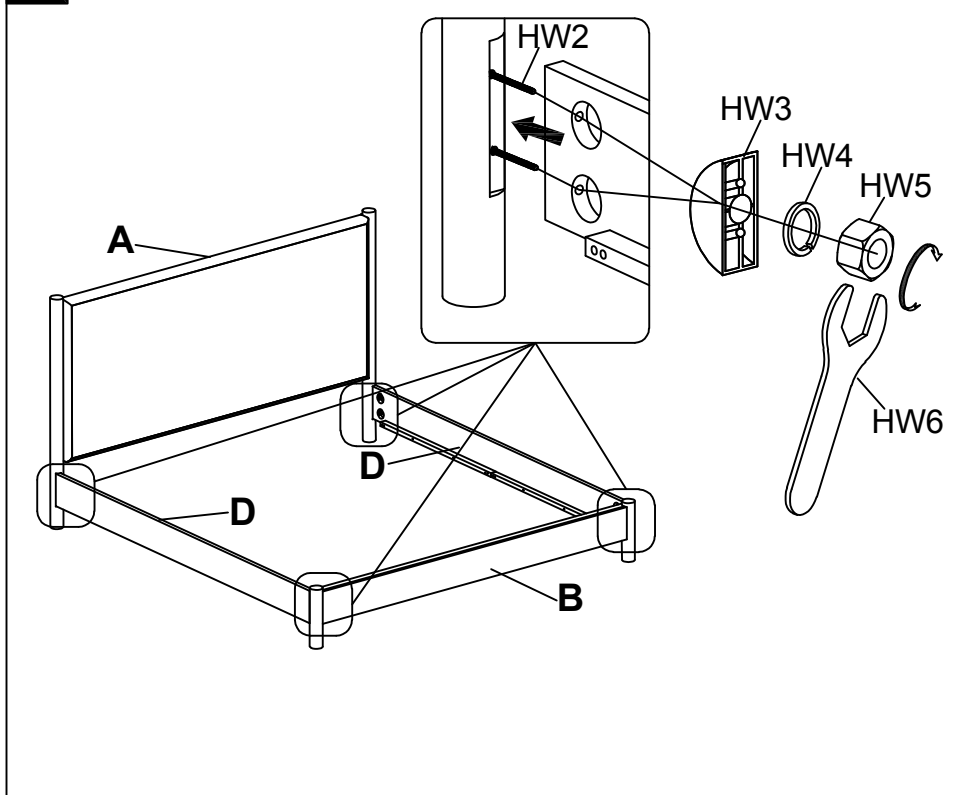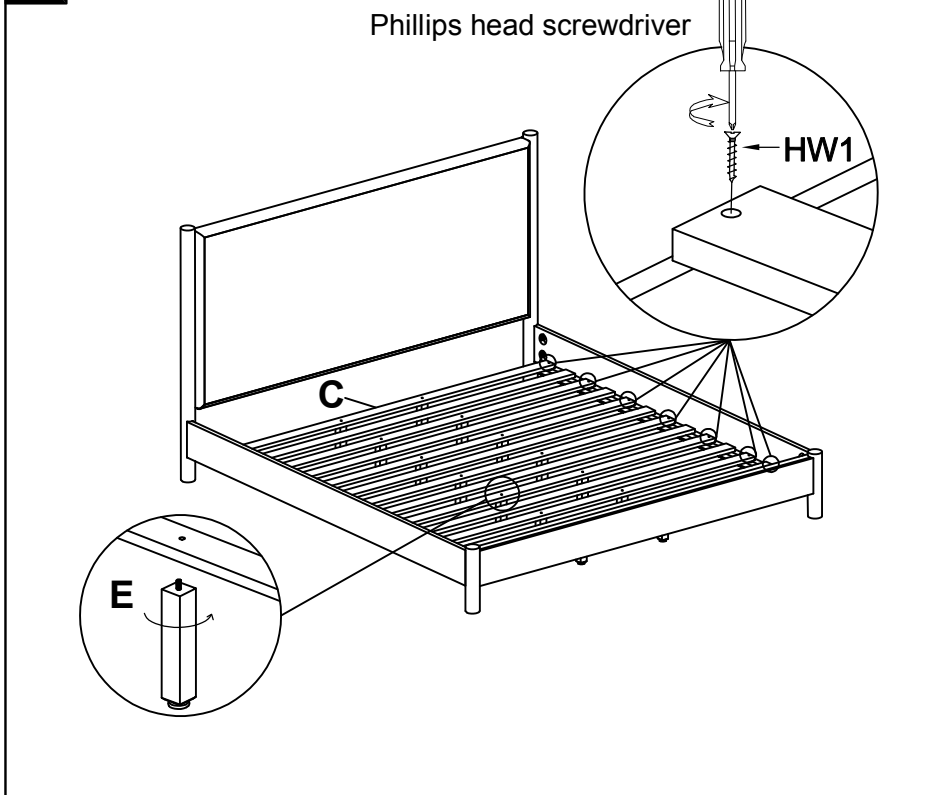1 	2 
Step 1 : Screw in 2 of the bolts (HW2) into the holes on the posts of the headboard (A). Align the bolts (HW2) to the holes in the side rails (D). Repeat this step for the footboard (B). Place the half moon nut (HW3), split lock washer (HW4), and nut (HW5) onto the bolts as shown. Use the wrench (HW6) to screw in the nut.	Step 2 : Screw in the support legs (E) to the slats as shown. Use a Philips head screwdriver (not included) to screw in the wood screws (HW1) to connect the slats (C) to the inside wood bar of the side rails (D) as shown. Product is now ready for use.