









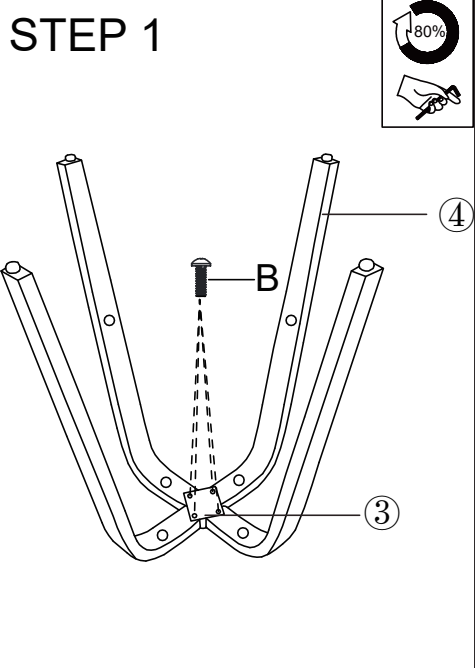



# Assembly Instruction

①*1pc		A*4+1EXT	 M6*30MM
②*1pc		B*10+1EXT	 M6*20MM
③*1pc		C*2+1EXT	 M6*16MM
④*4pcs		D*2	
⑤*1pc		G*1	 M6


**STEP 1**



**STEP 2**

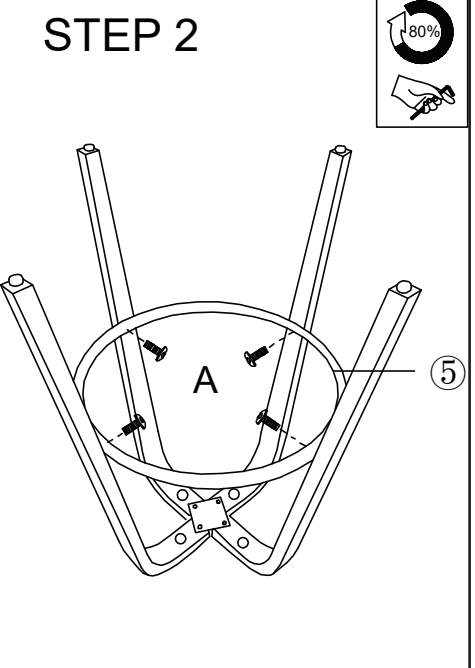


**STEP 3**

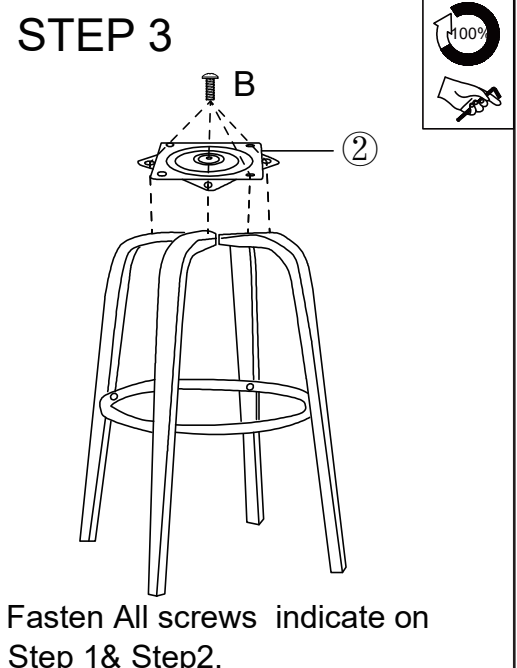

Fasten All screws indicate on Step 1 & Step 2.

**STEP 4**

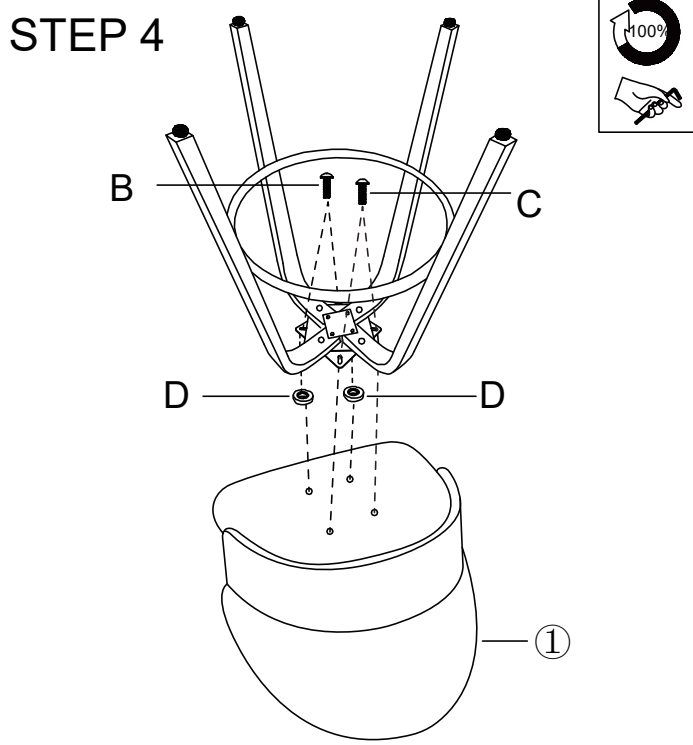

**STEP 5**

