


Farmhouse 5 Drawers Dresser

Assembly Instruction

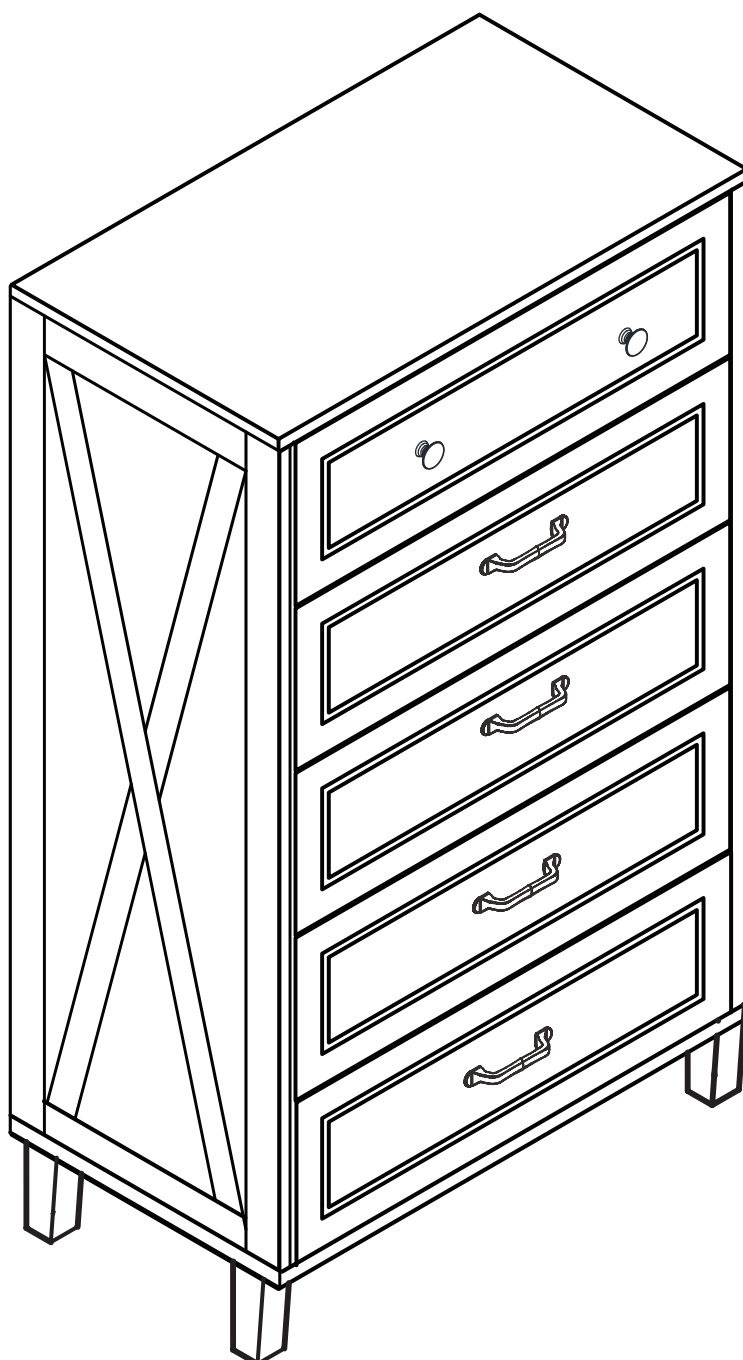

Model: DCD-FC01

INTRODUCTION


Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS







1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.

*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.







*IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.

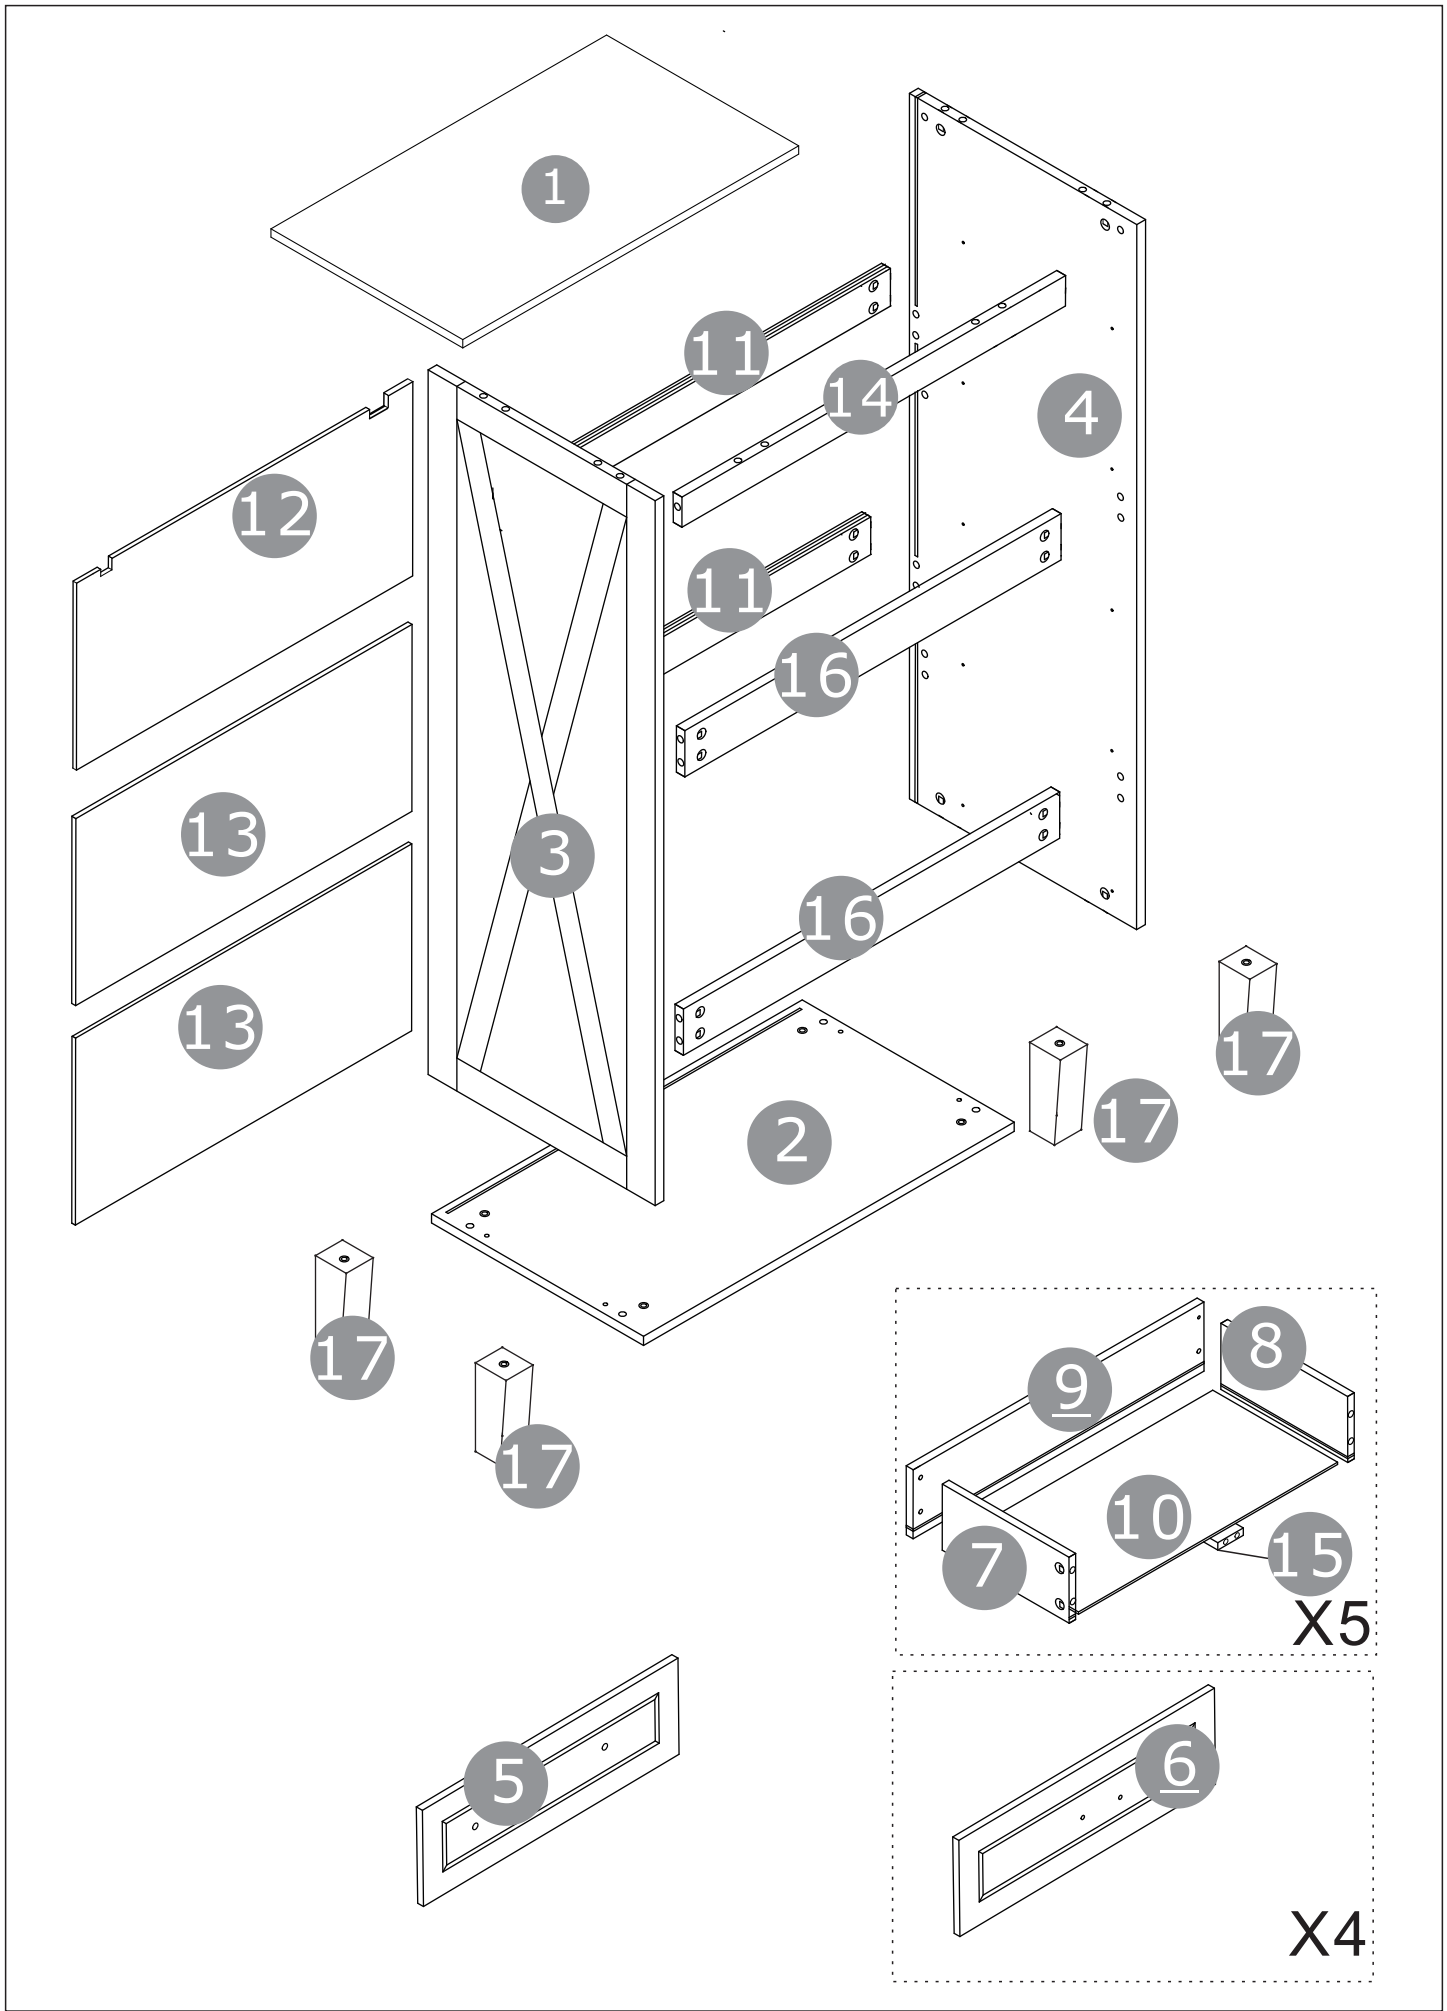







Hardware Provided

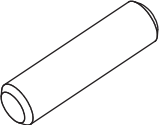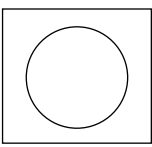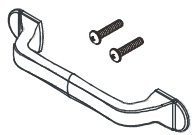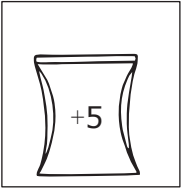A  Ø 5 x 35 mm X68	B  Ø 15 x 11mm X20	C  Ø 6 x 30 mm X10	D  L= 300mm X5	E  Ø 3 x 12 mm X62
F  X68	G  Ø4X22mm X2	H  X22	J  Ø 15 x 9.5 mm X48	K  Ø4X30 mm X20
L  Ø4 x 18mm X4	M  Ø4X30mm Ø4X14mm X2	N  Ø6x25mm X4	O  X1	 Package of spare white nuts




Parts Identification

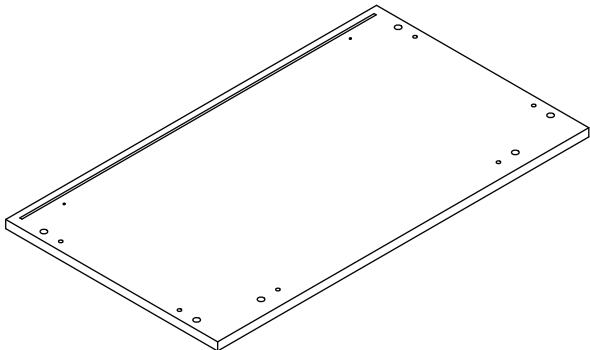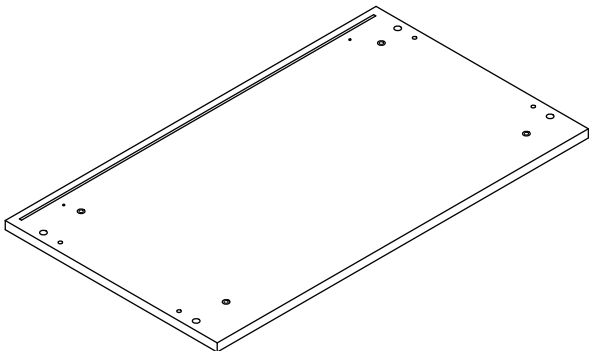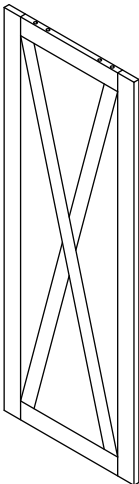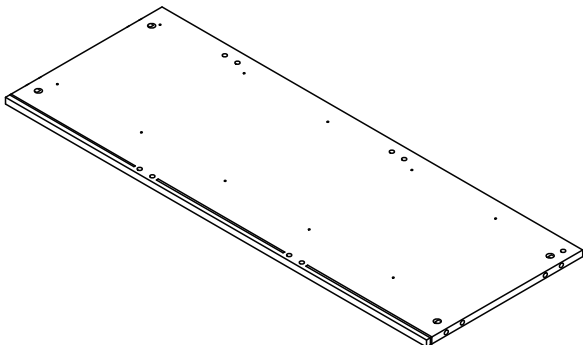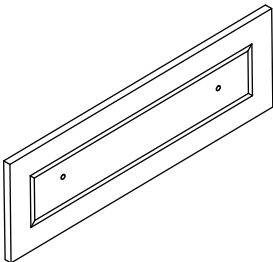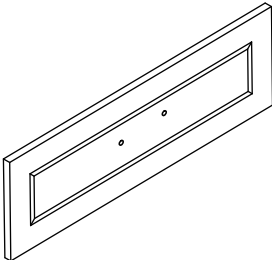1 	2 
3 	4 
5 	6  x4

Parts Identification

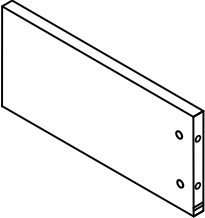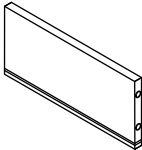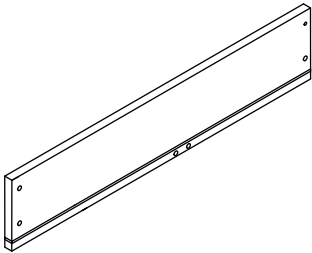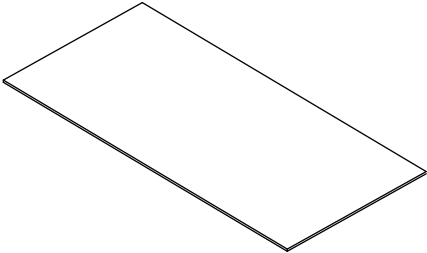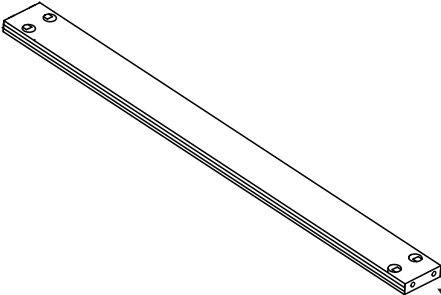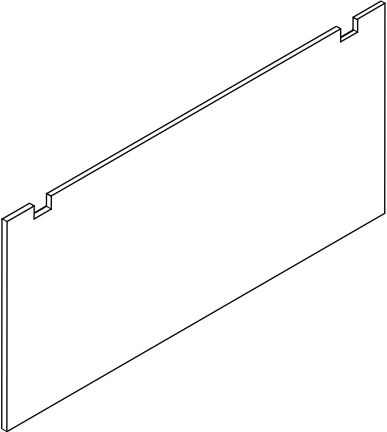
7  X5	8  X5
9  X5	10  X5
11  X2	12 

Parts Identification

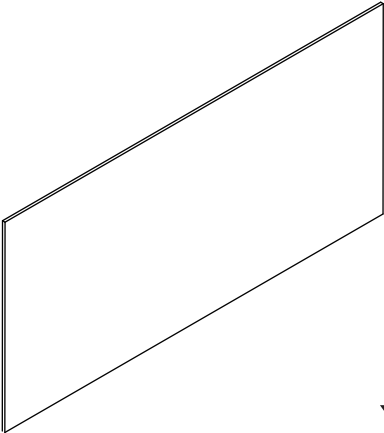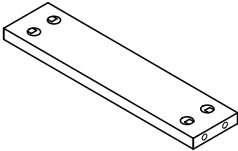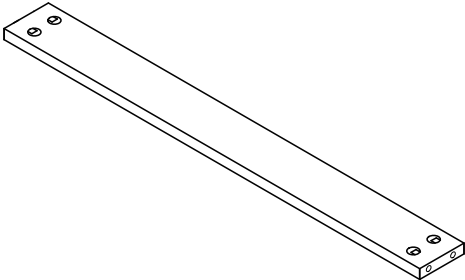
13  X2	14 
15  X5	16  X2
17  X4	

Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

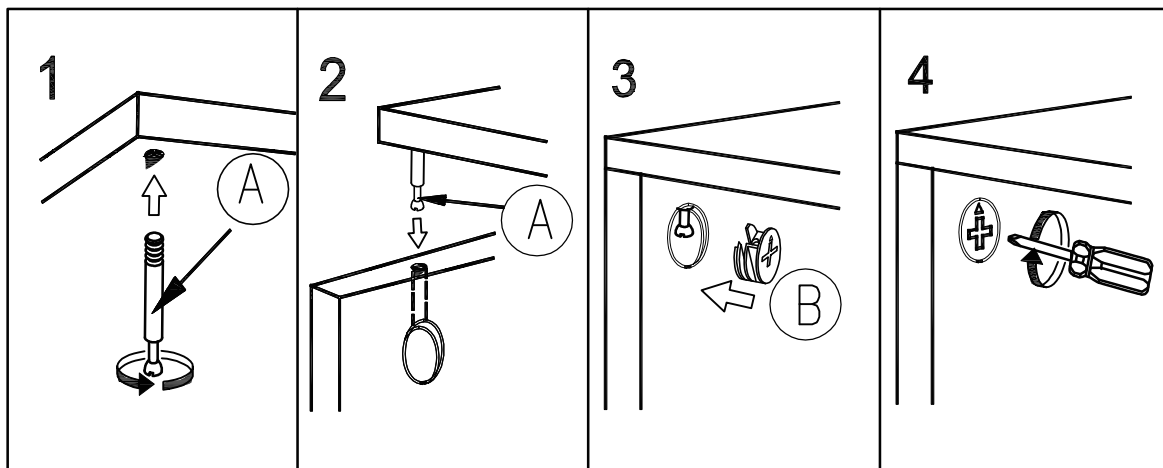

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

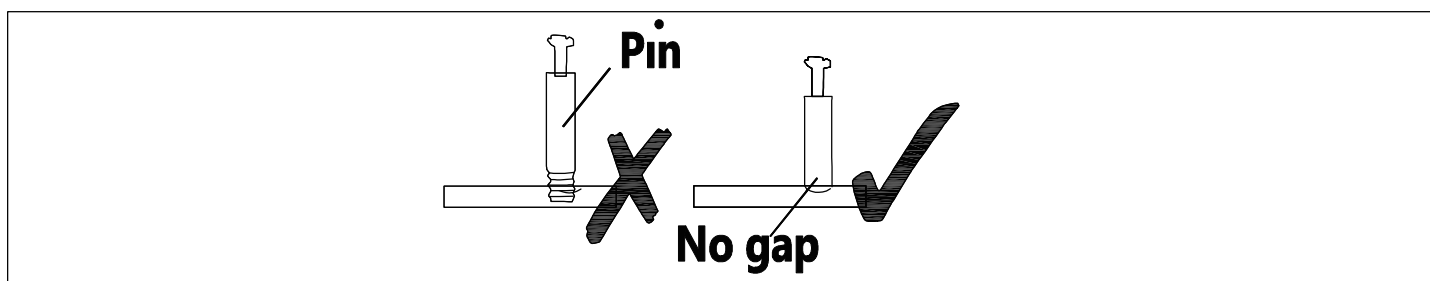

This furniture requires 2 people to assemble.
Make sure no parts missing or damaged
before assembly.



1

Dx4







CL

L=300mm

Ex8







Ø3 x 12 mm

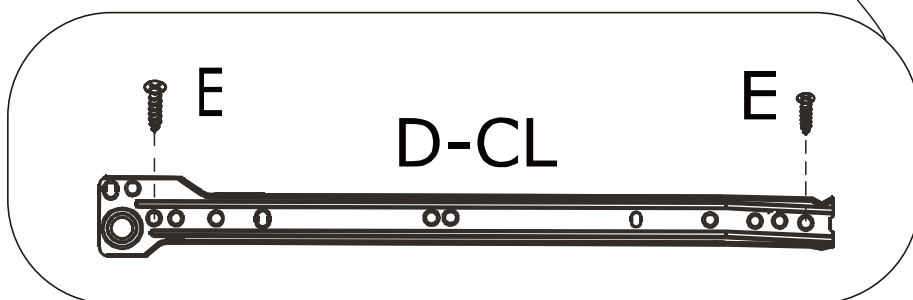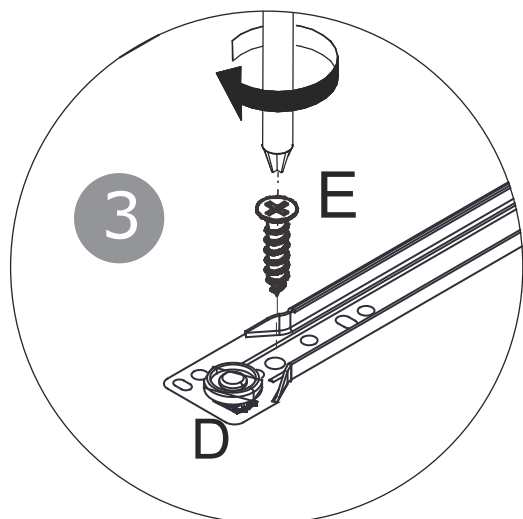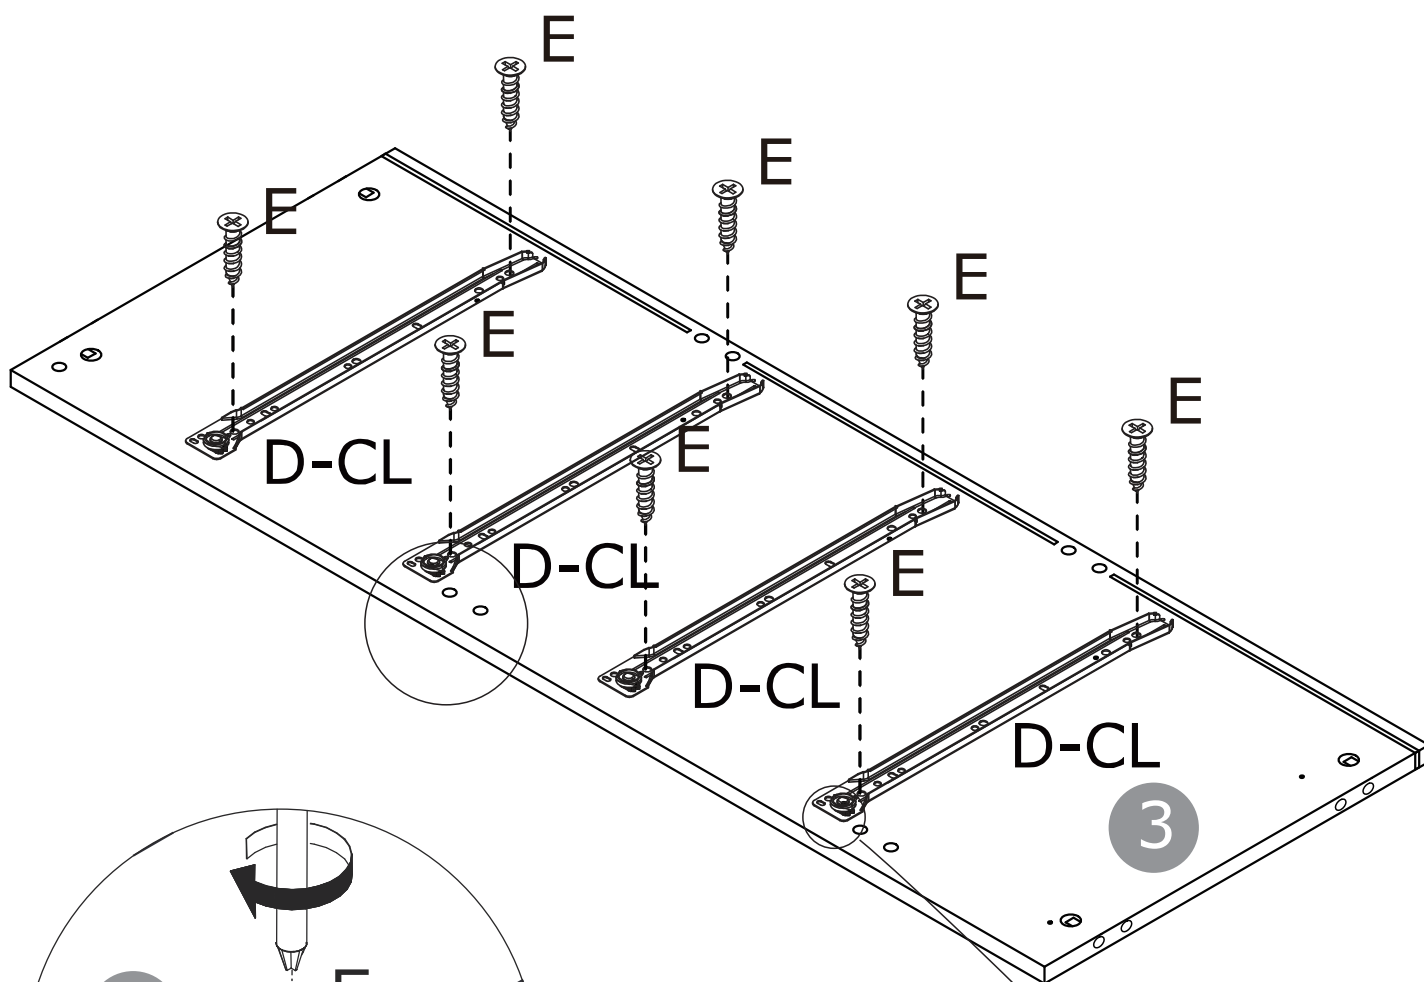

2




Dx4
CR
L=300mm

Ex8
Ø 3 x 12 mm

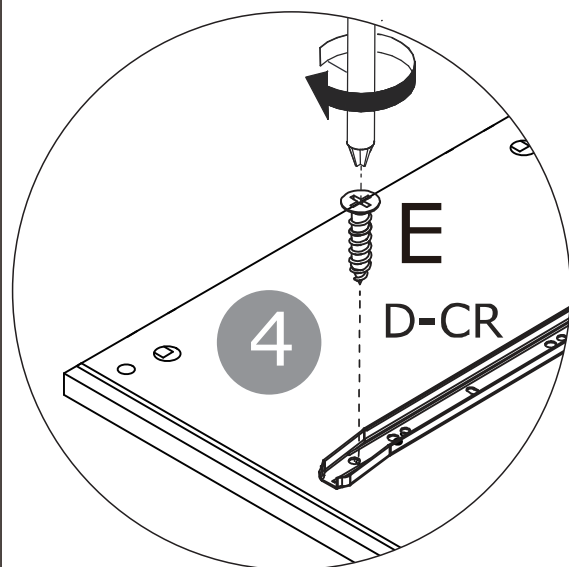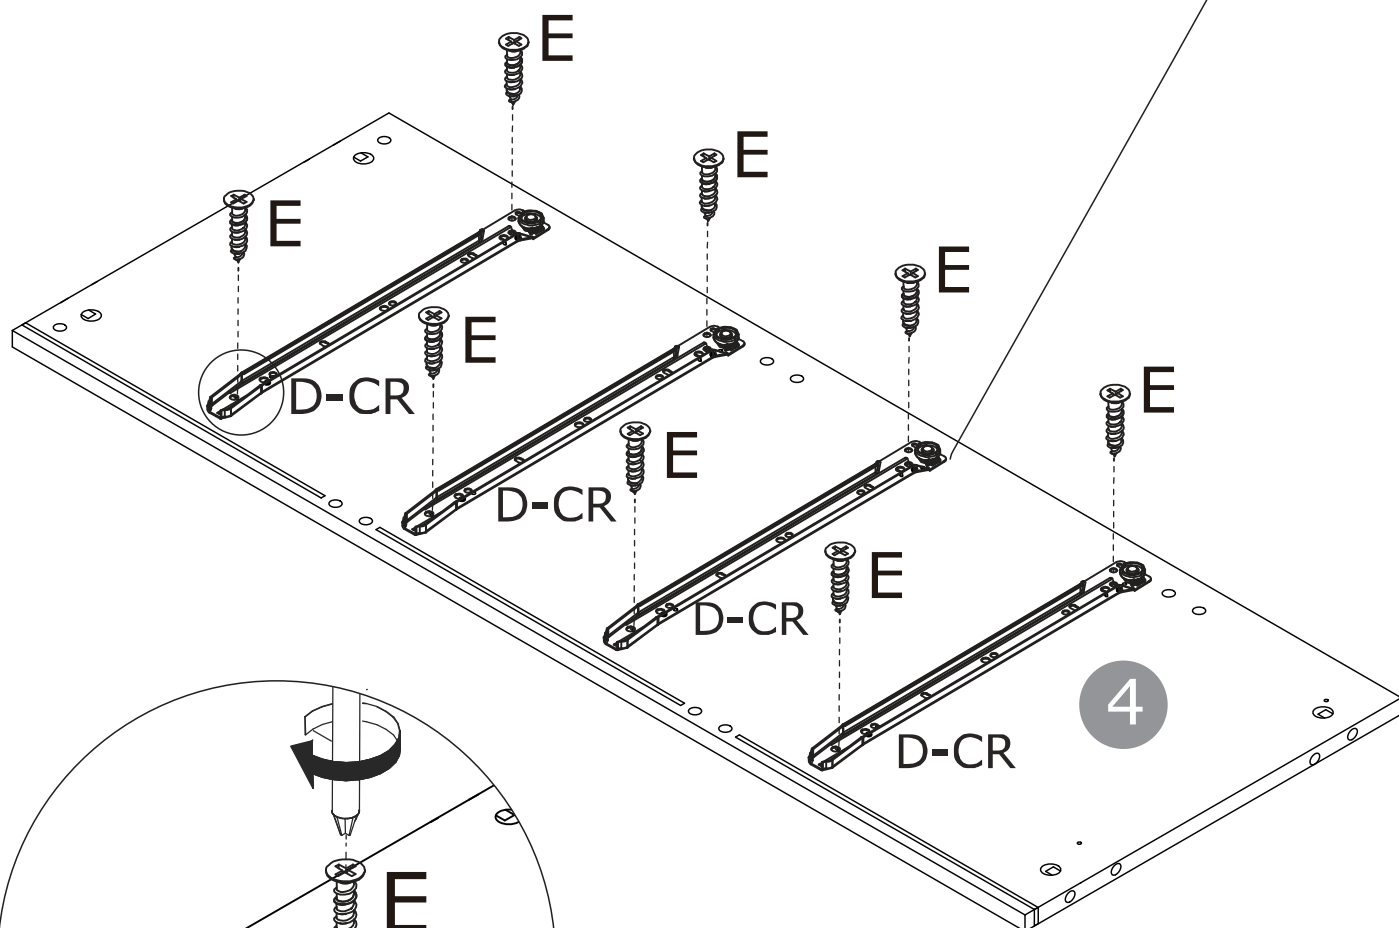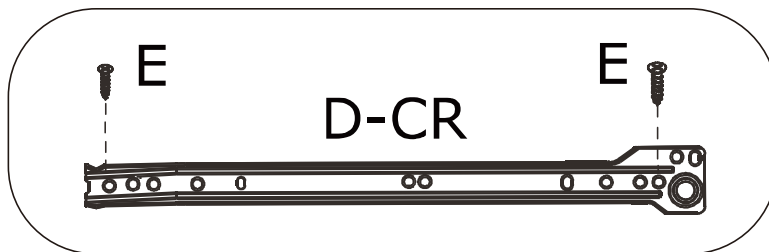

3

A x 18

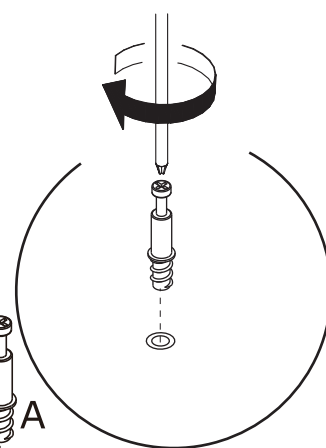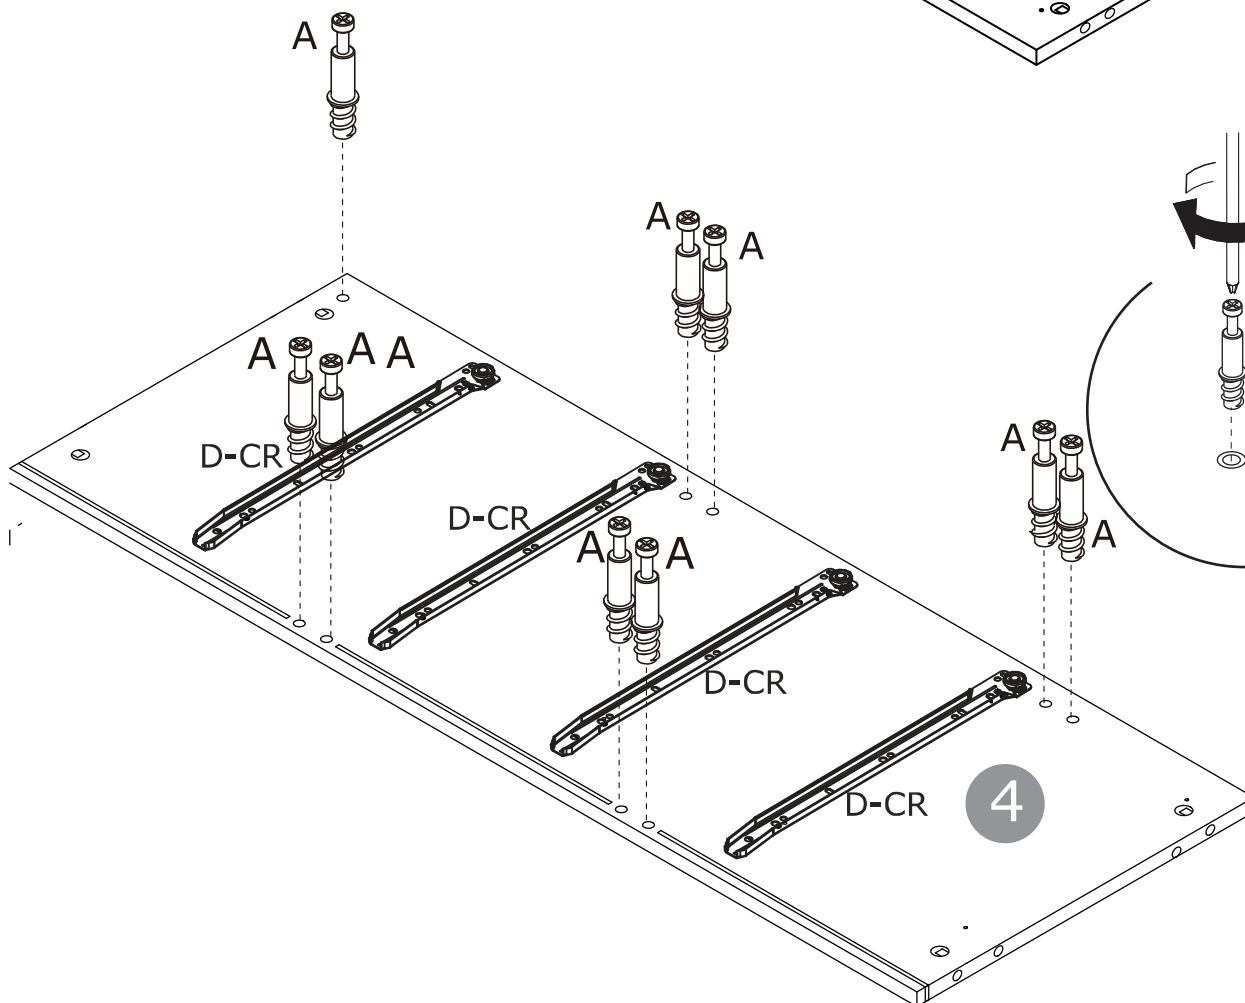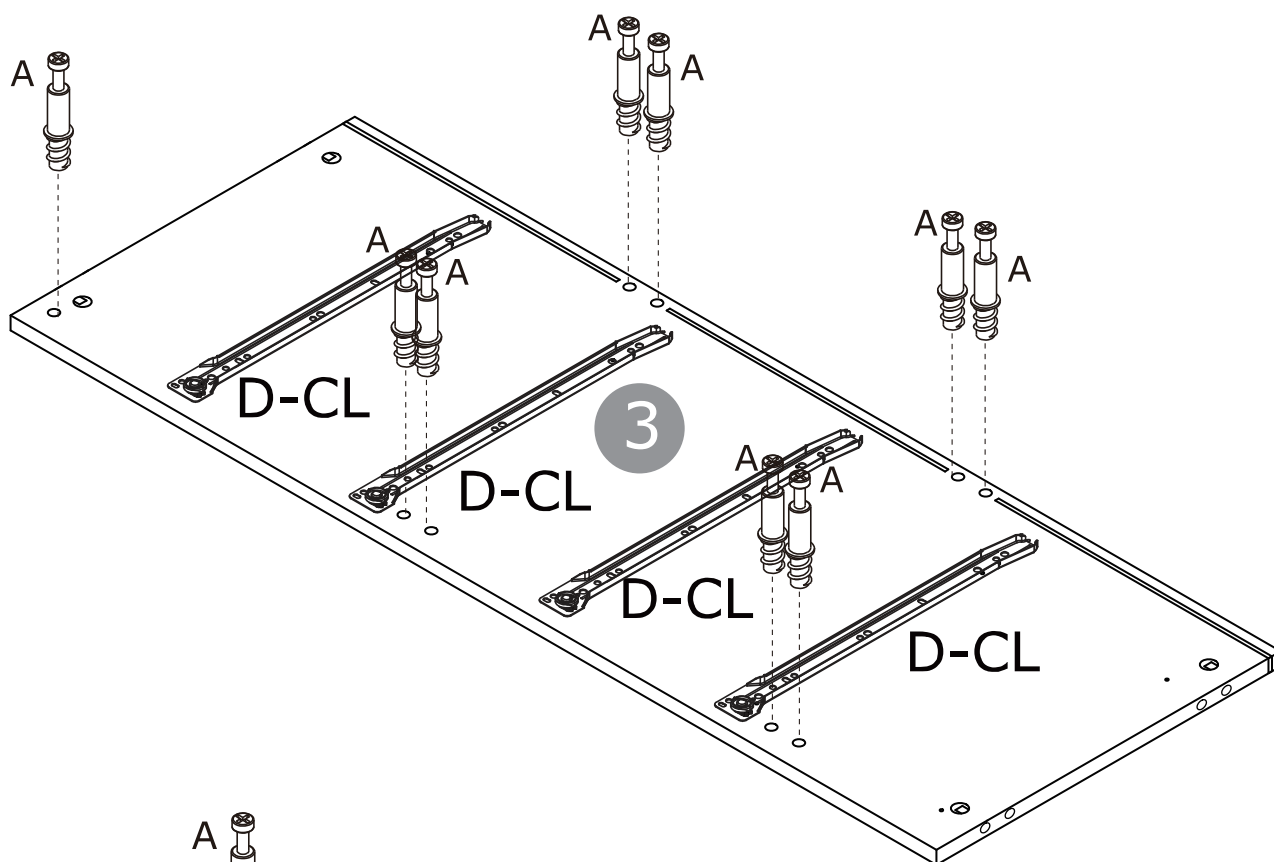


4

B x 4



Ø15 x 11 mm

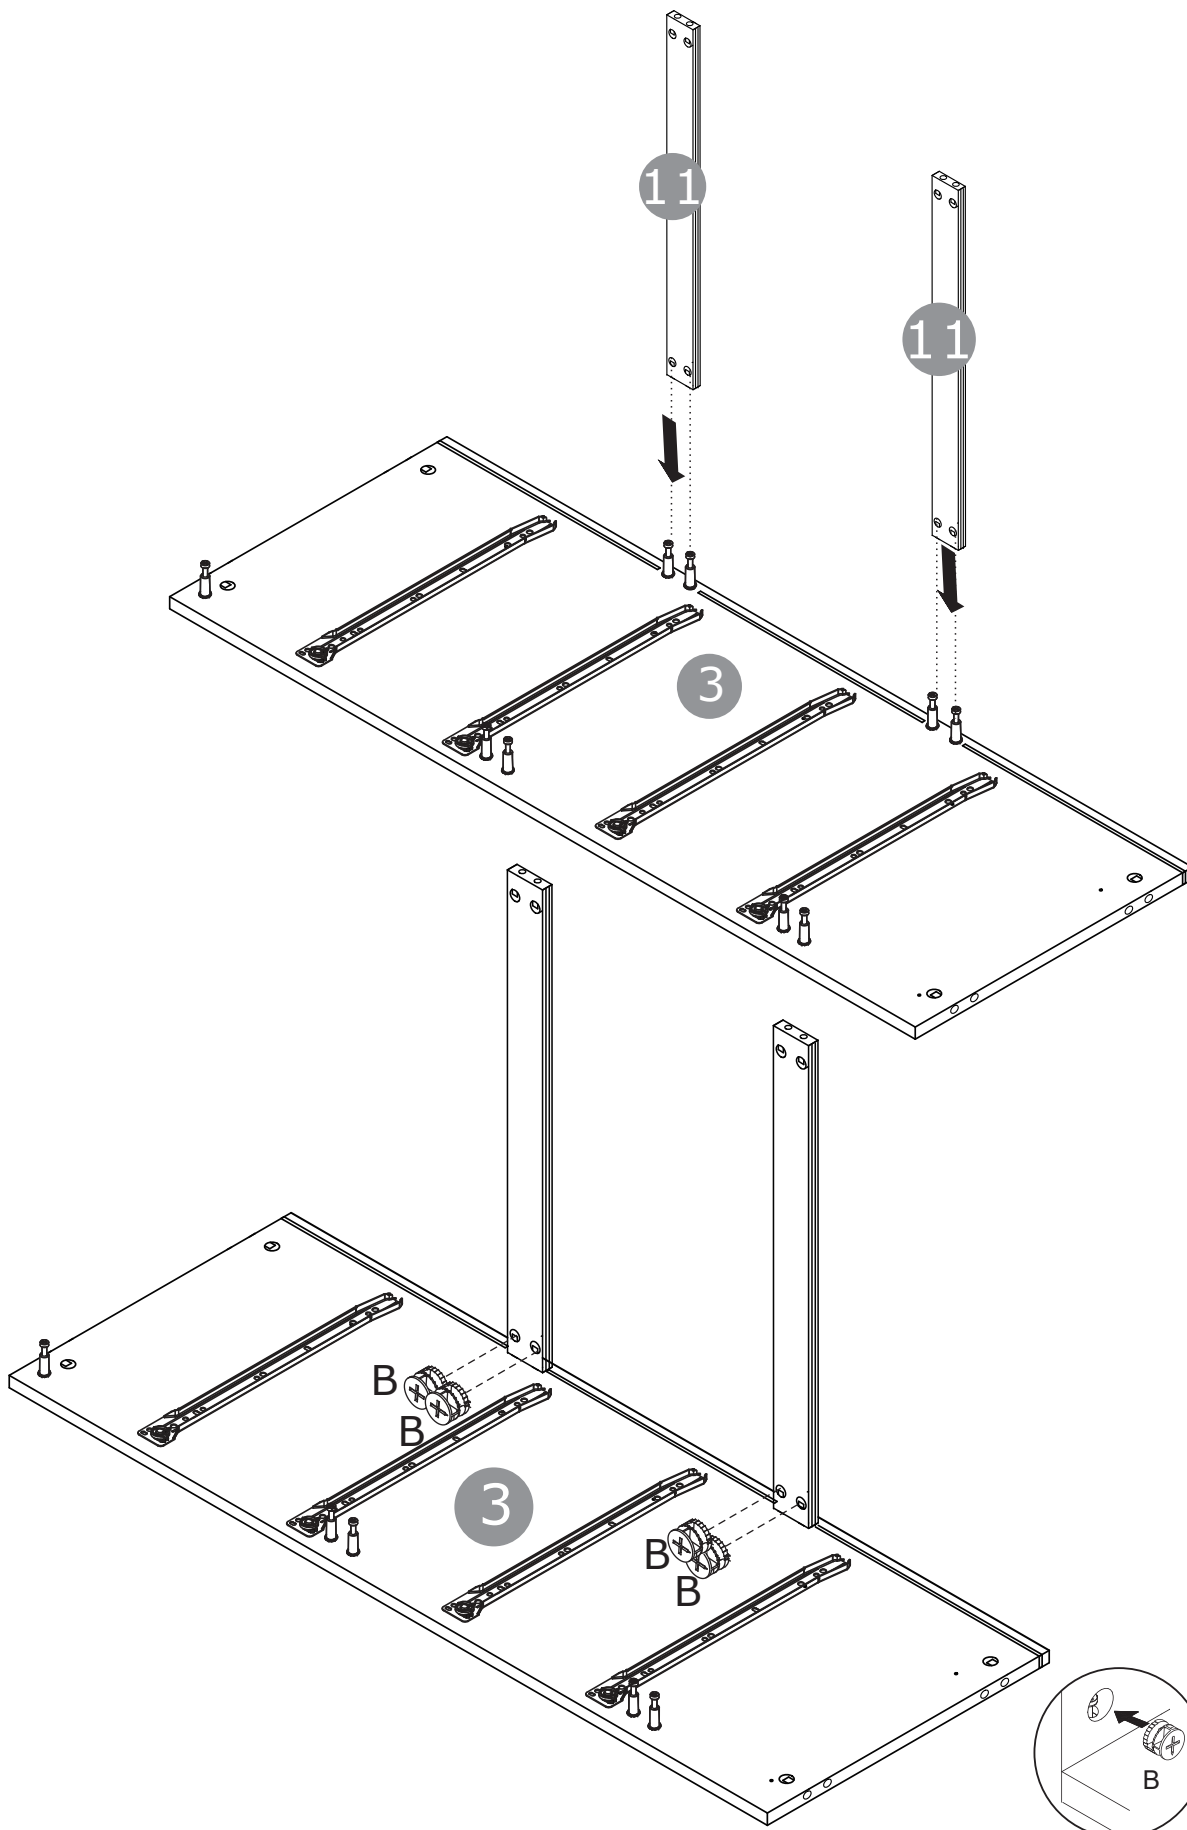


5


B x 5



Ø15 x 11 mm

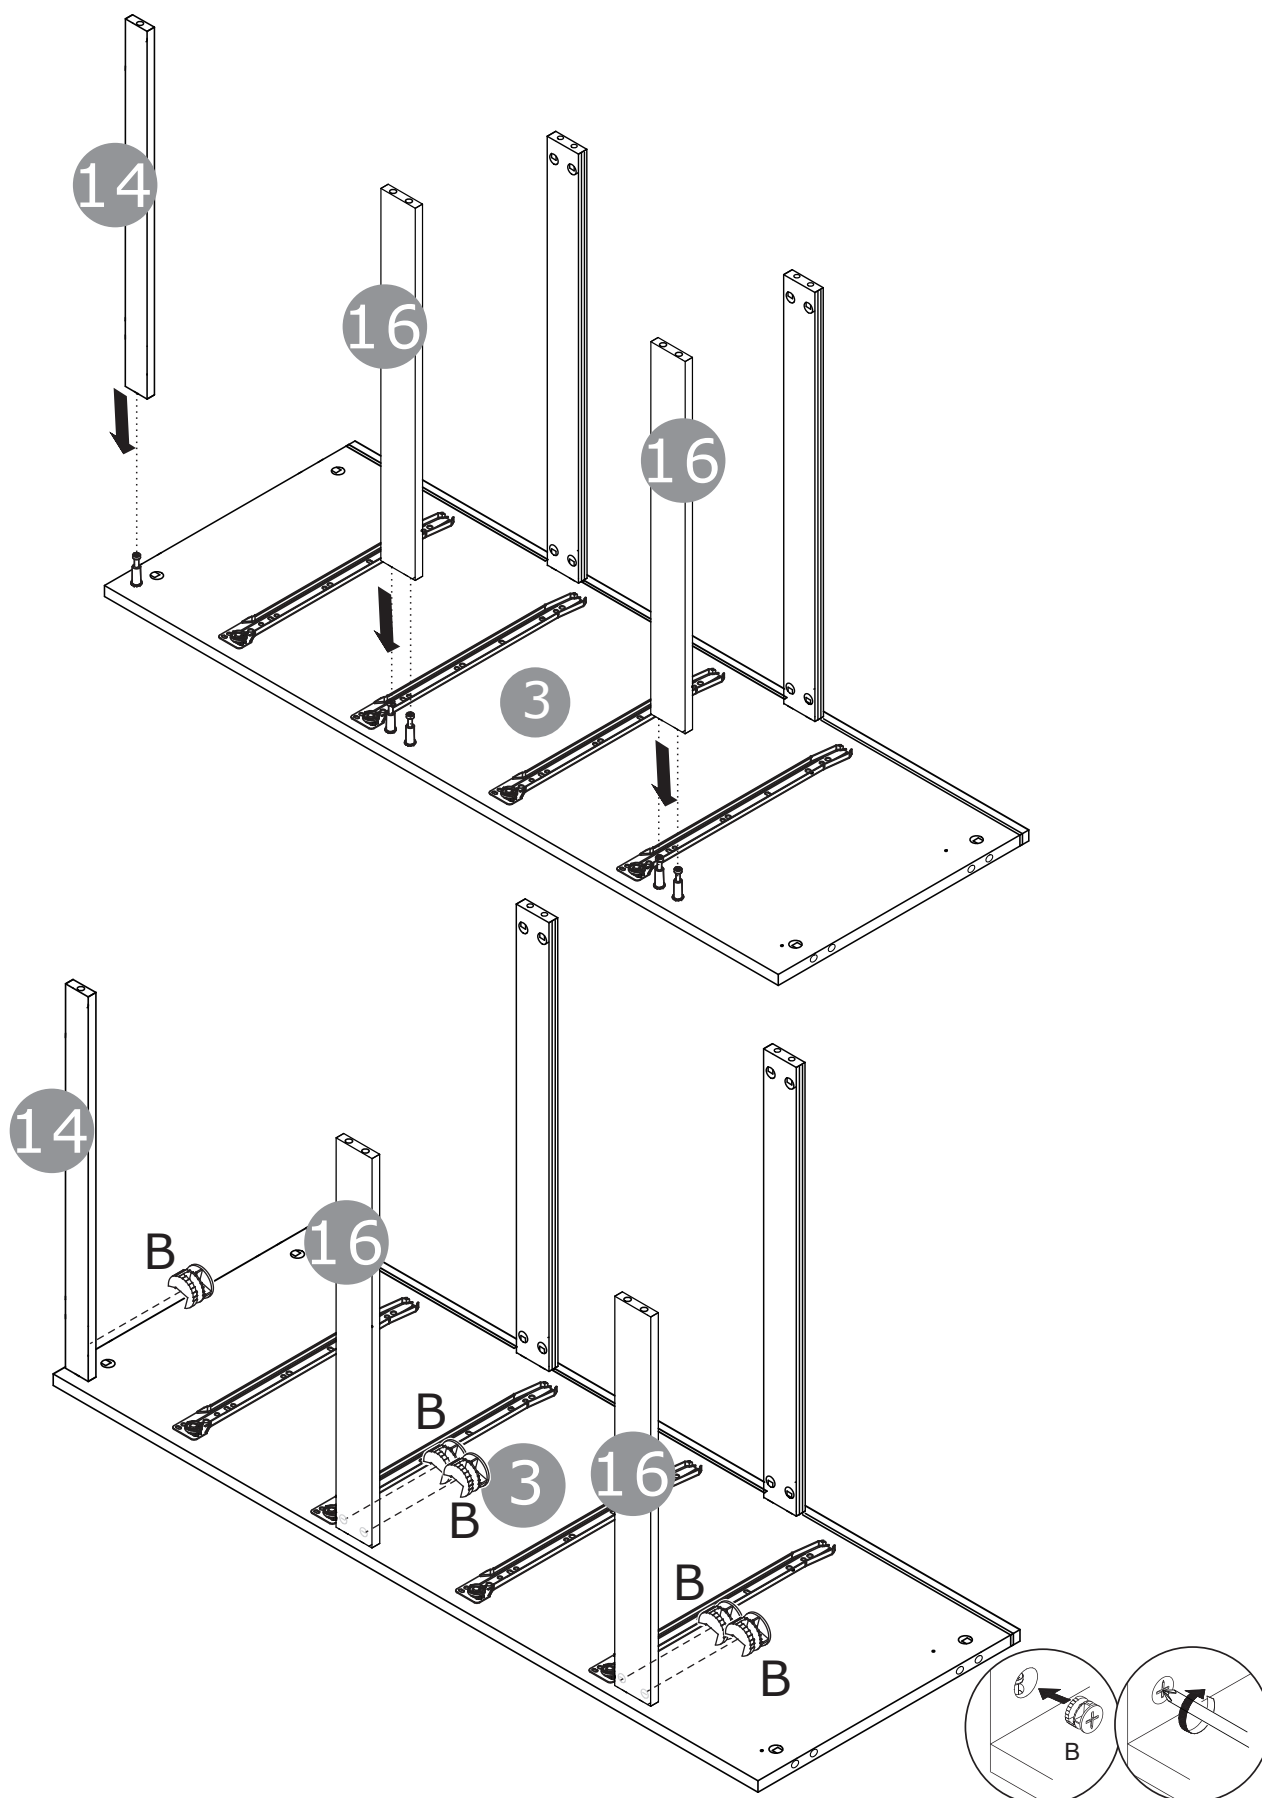

6



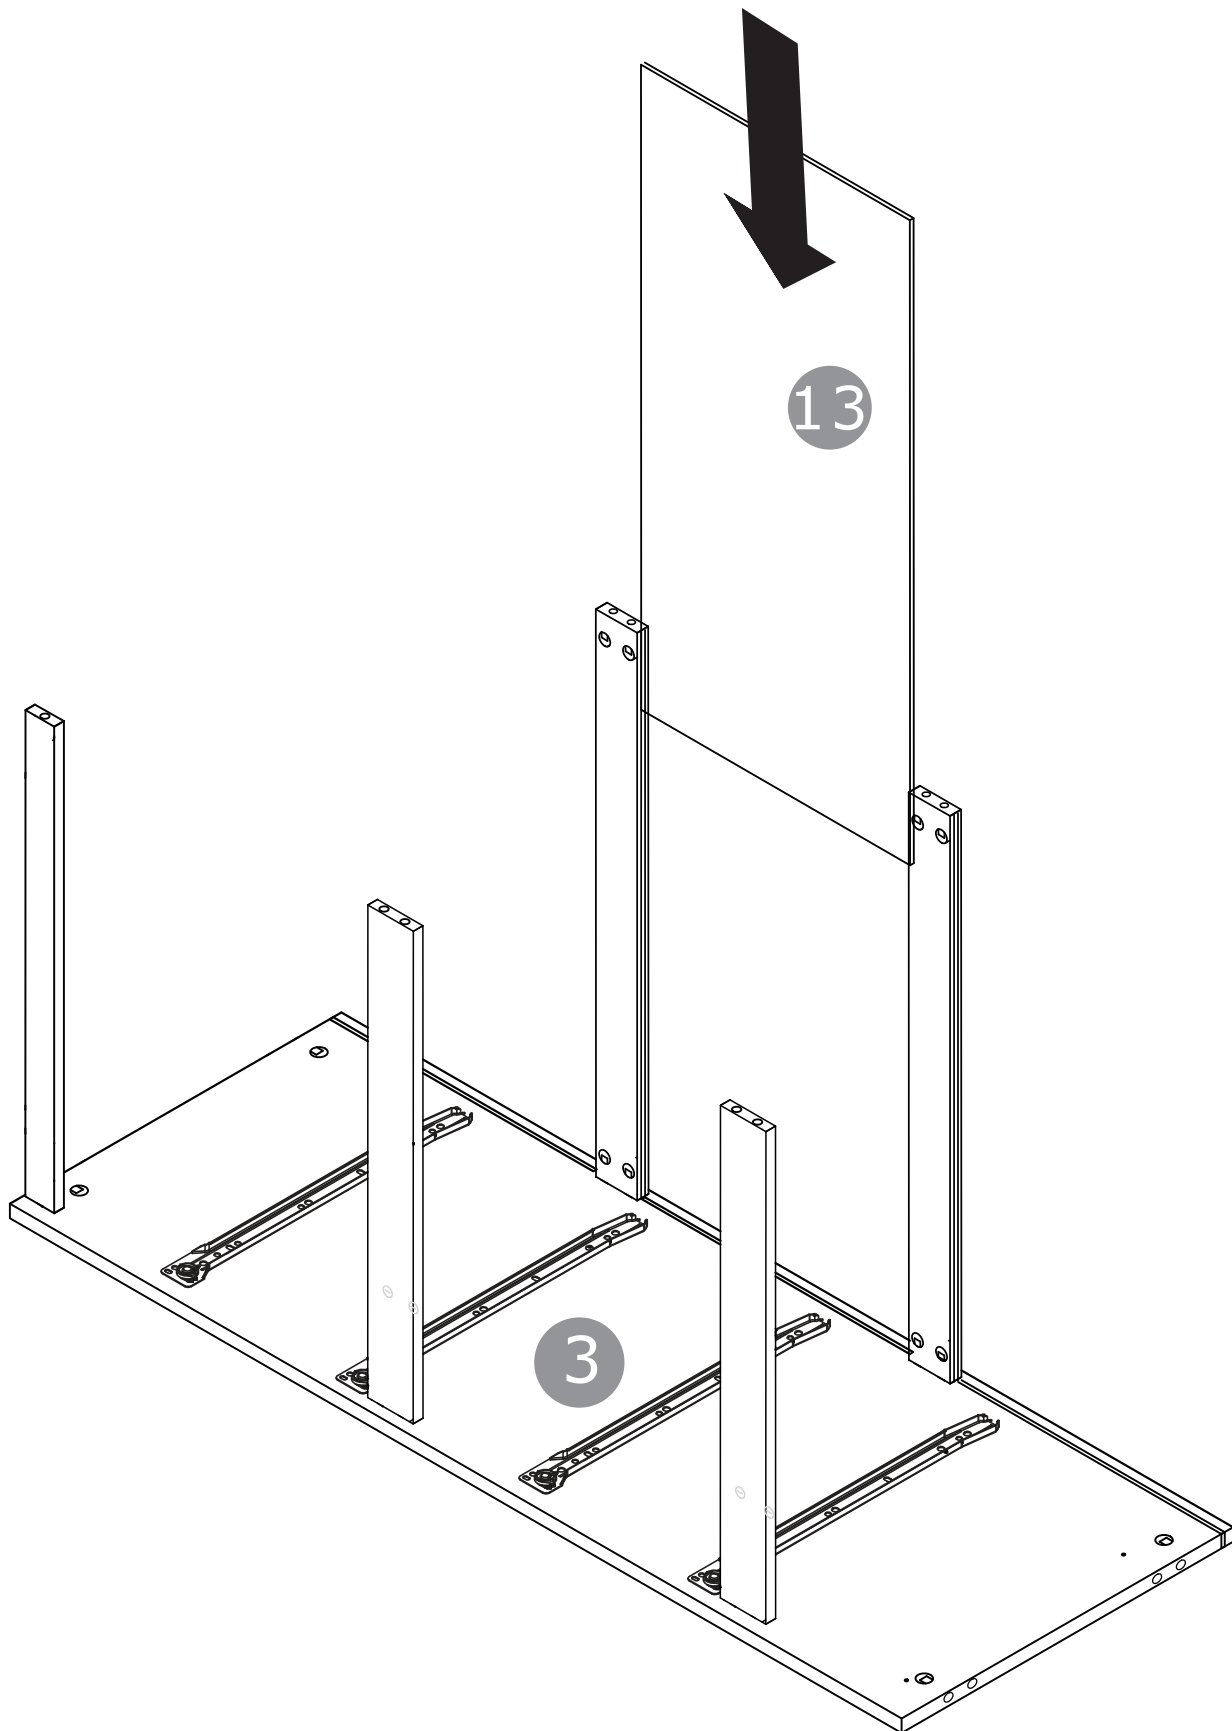


7


B x 9



Ø15 x 11 mm

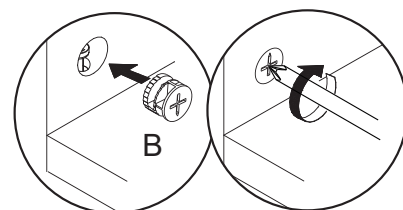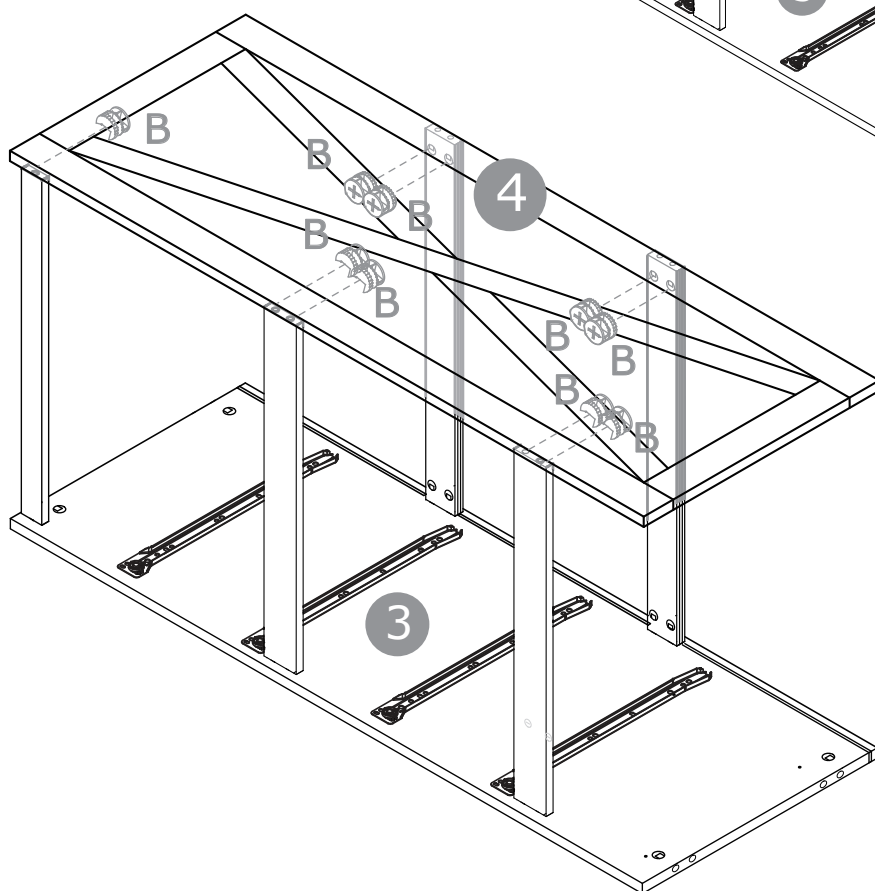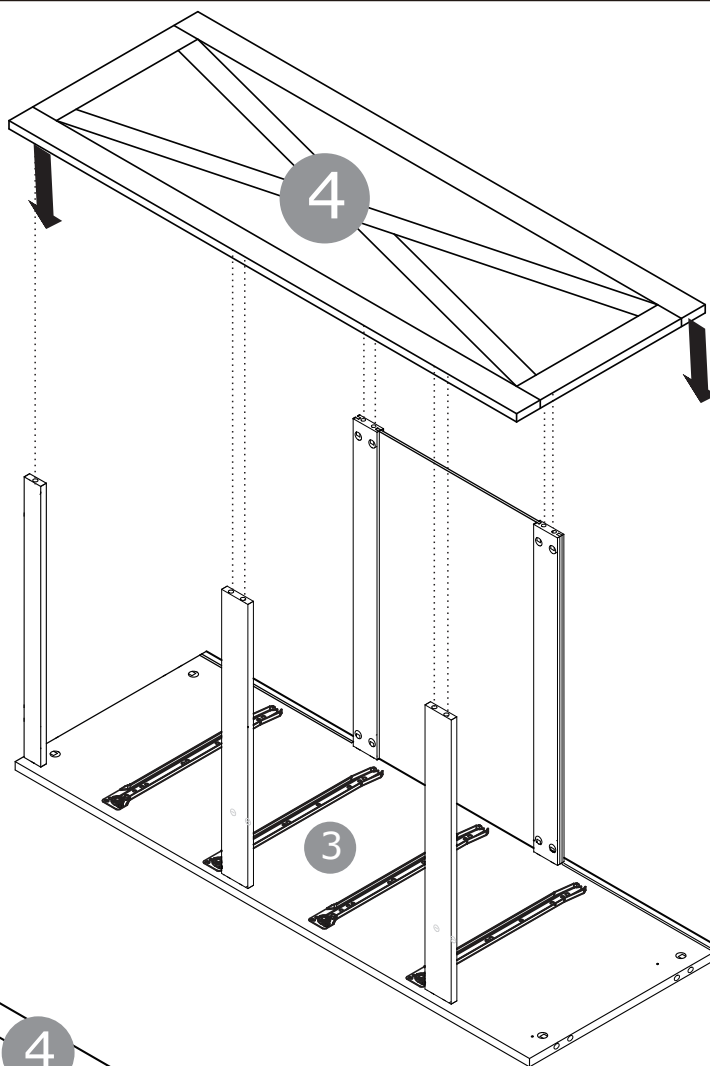

8


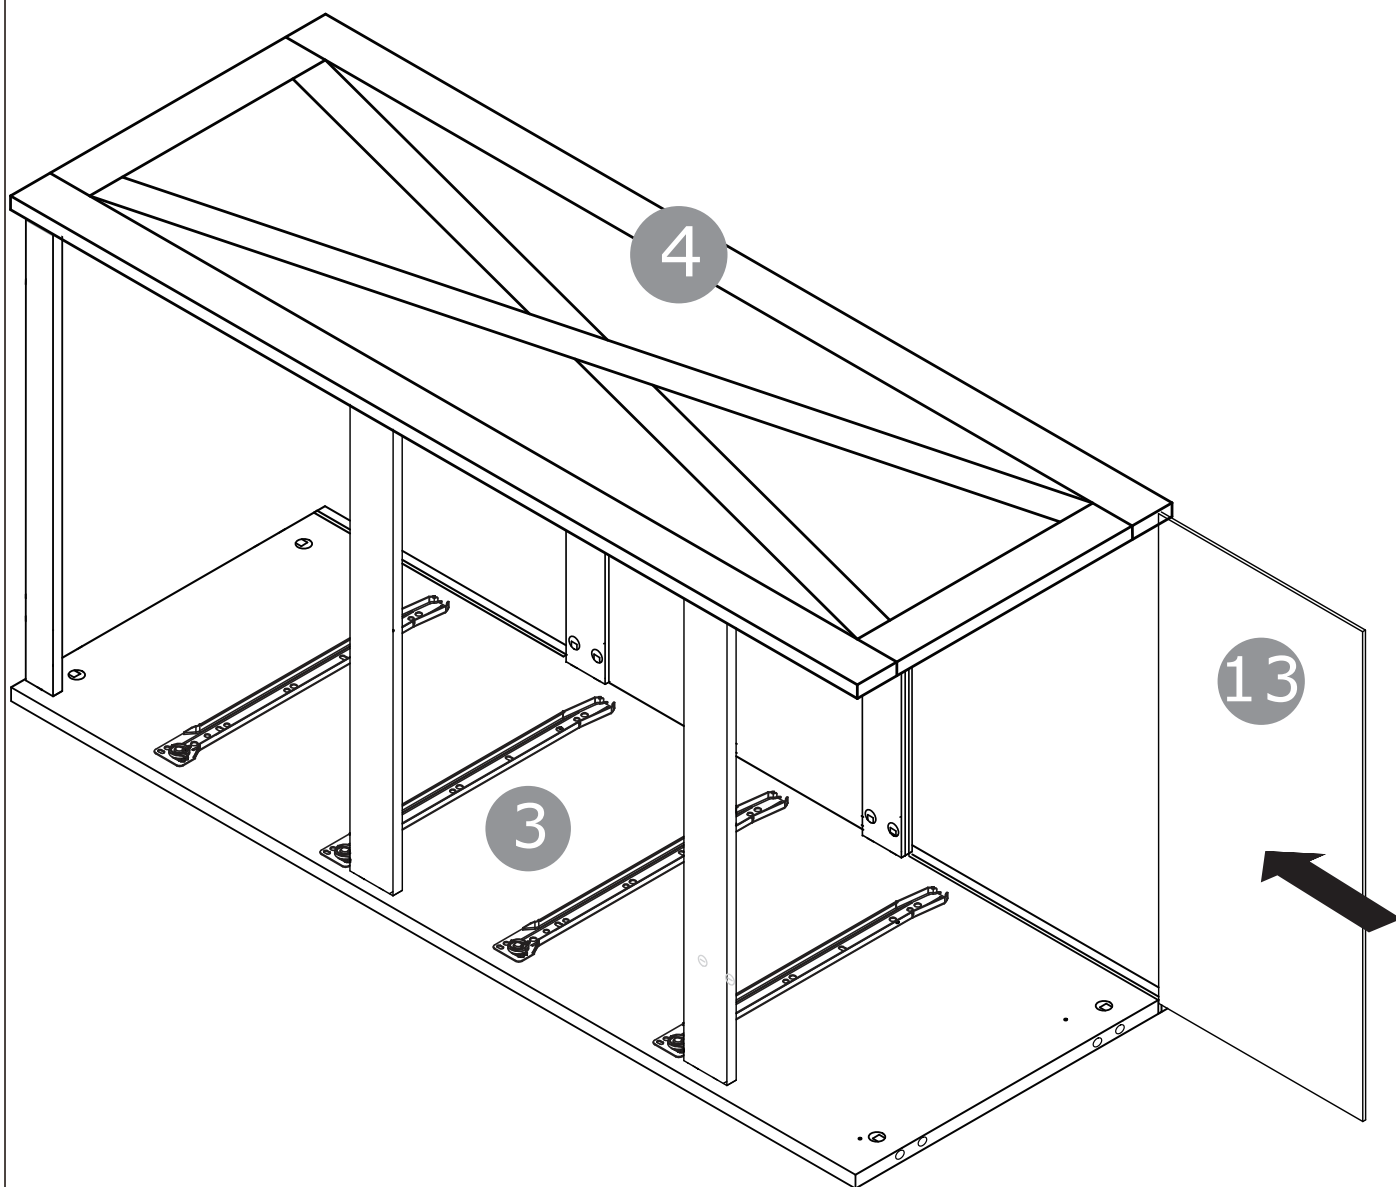


9

Nx4




Ø6x25mm

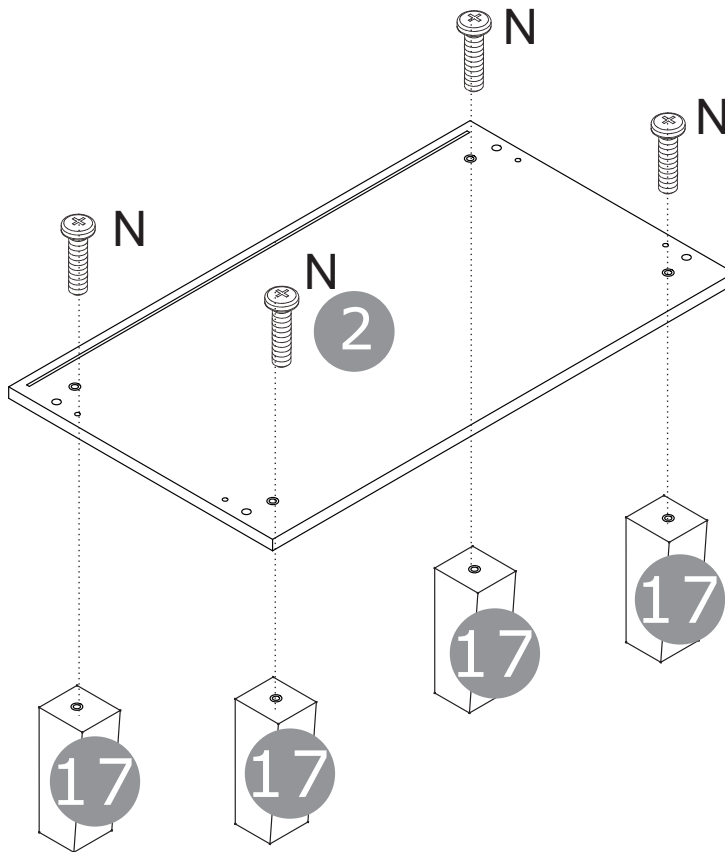

10

A x 4





Ø6 x 35 mm

C x 4



Ø6 x 30 mm

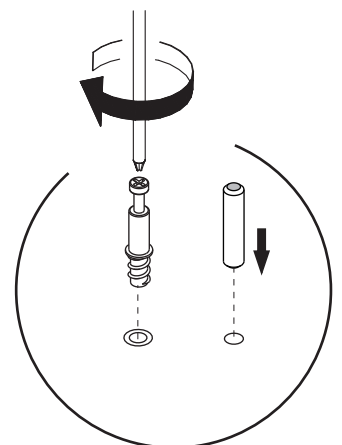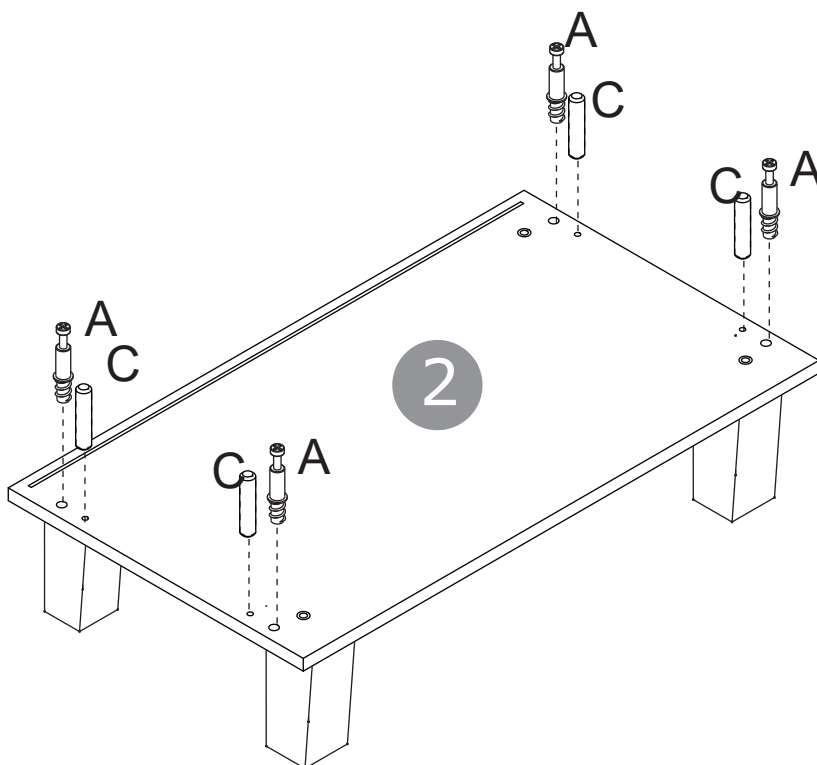


11

J x 4



Ø15 x 9.5 mm

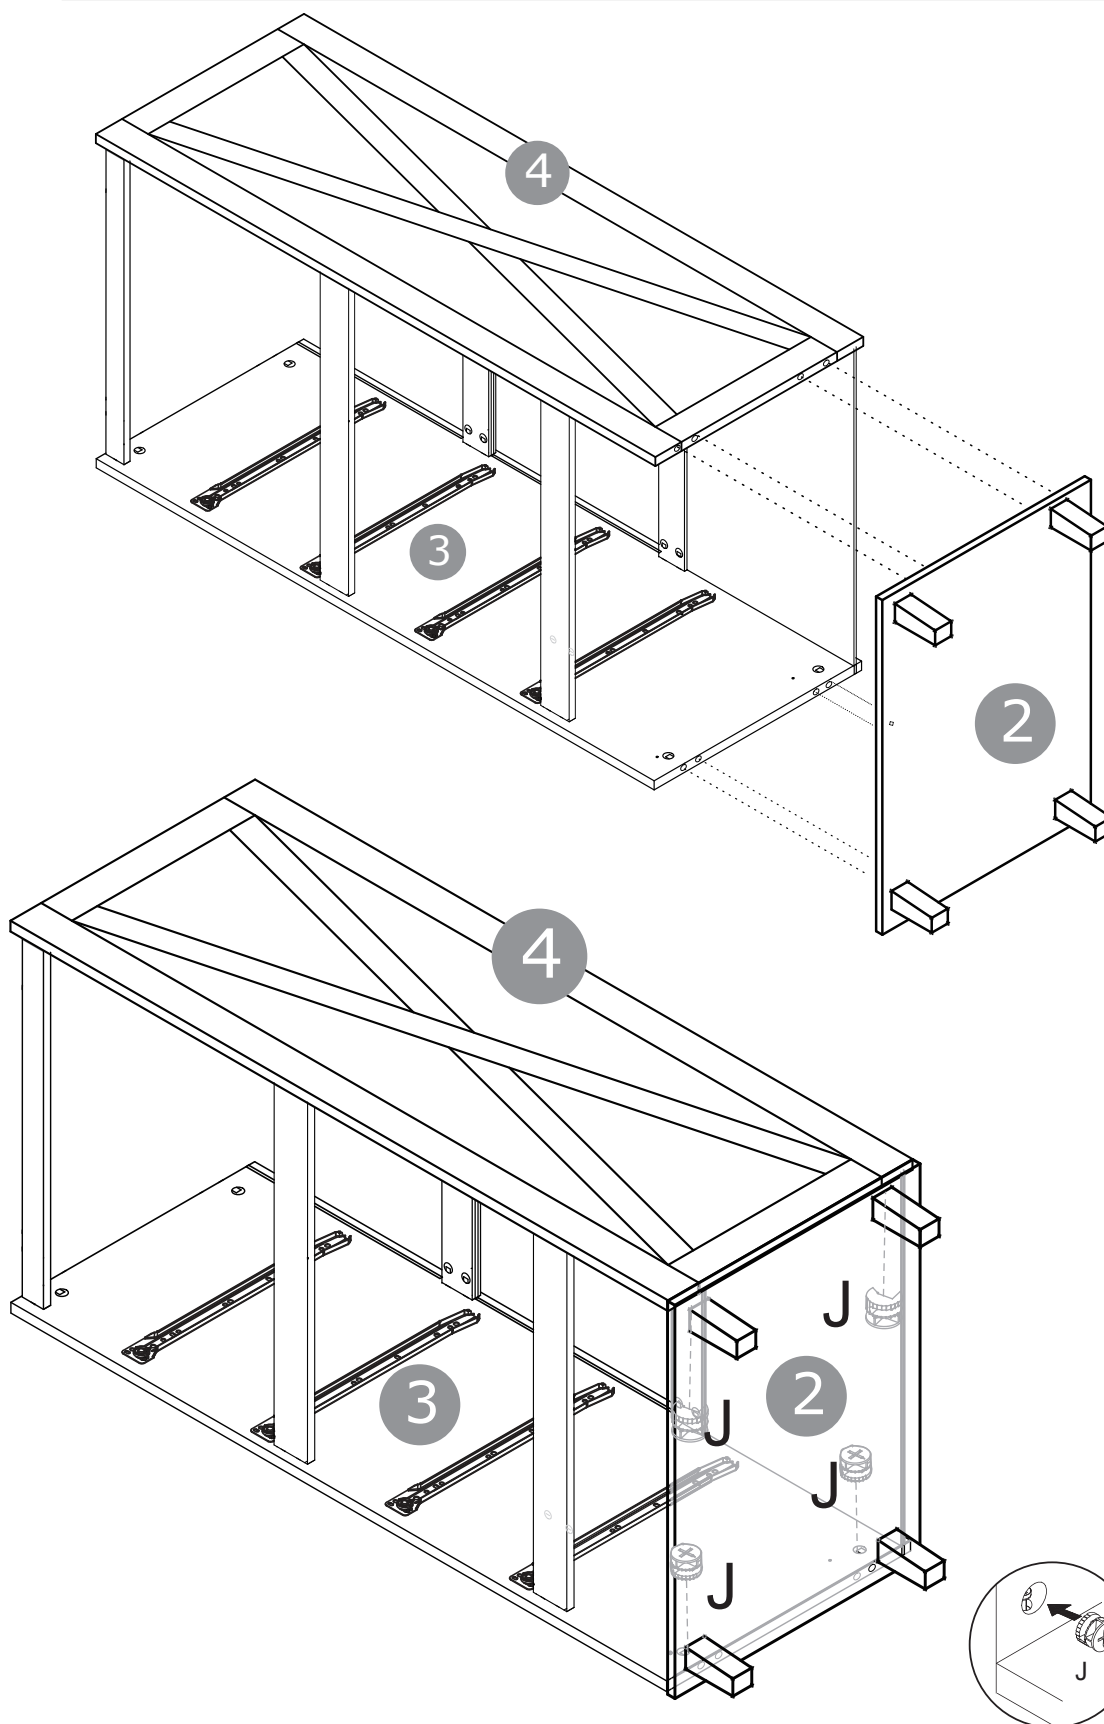

12

A x 6



Ø 5 x 35 mm

C x 6





Ø 6 x 30 mm


M x 2



Ø 4 x 14 mm

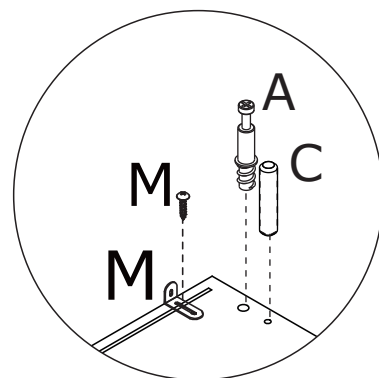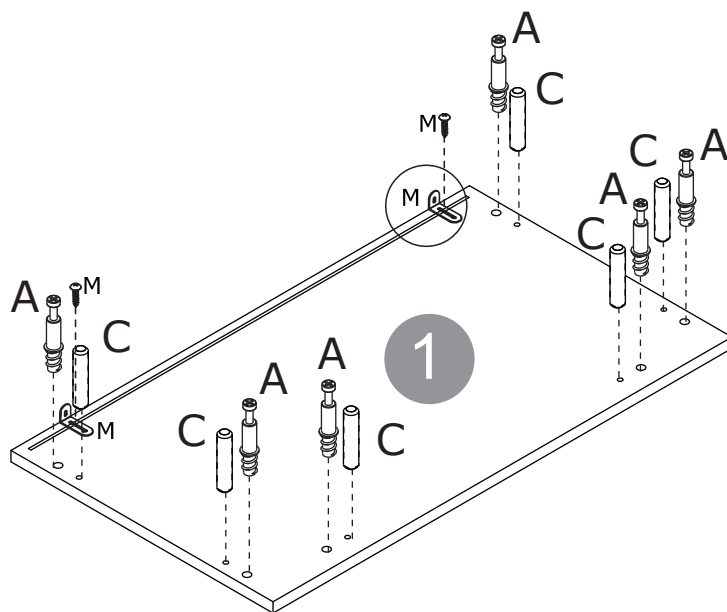

13

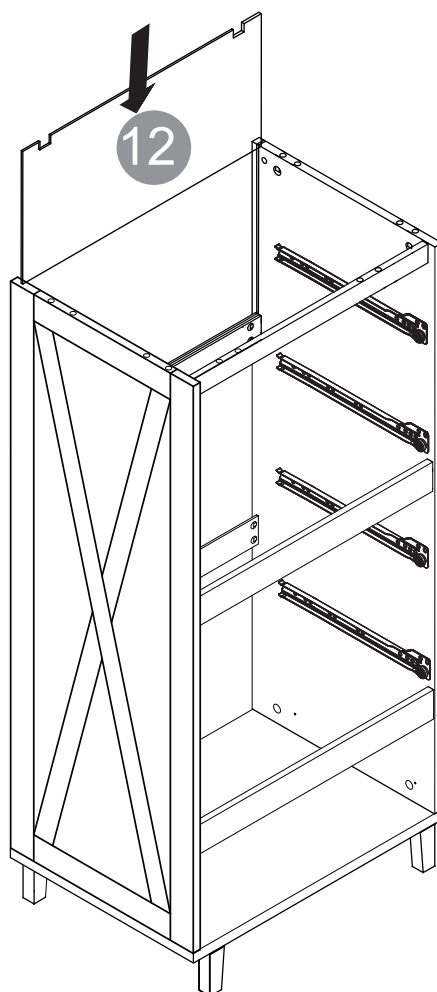

14

B x 2







Ø15 x 11 mm

J x 4



Ø15 x 9.5 mm

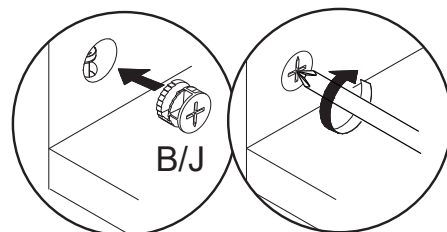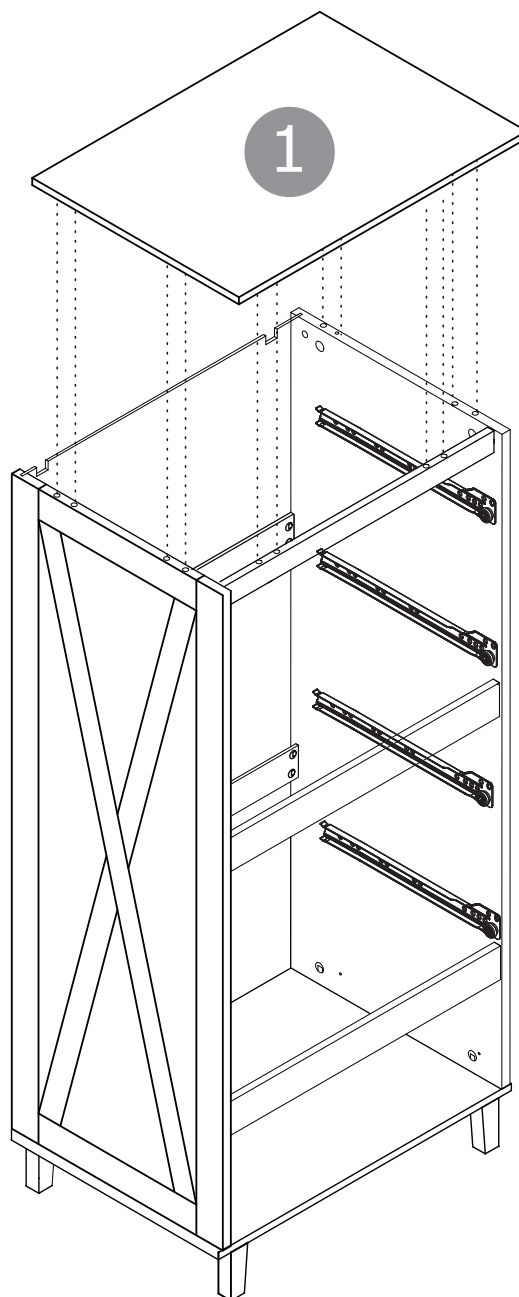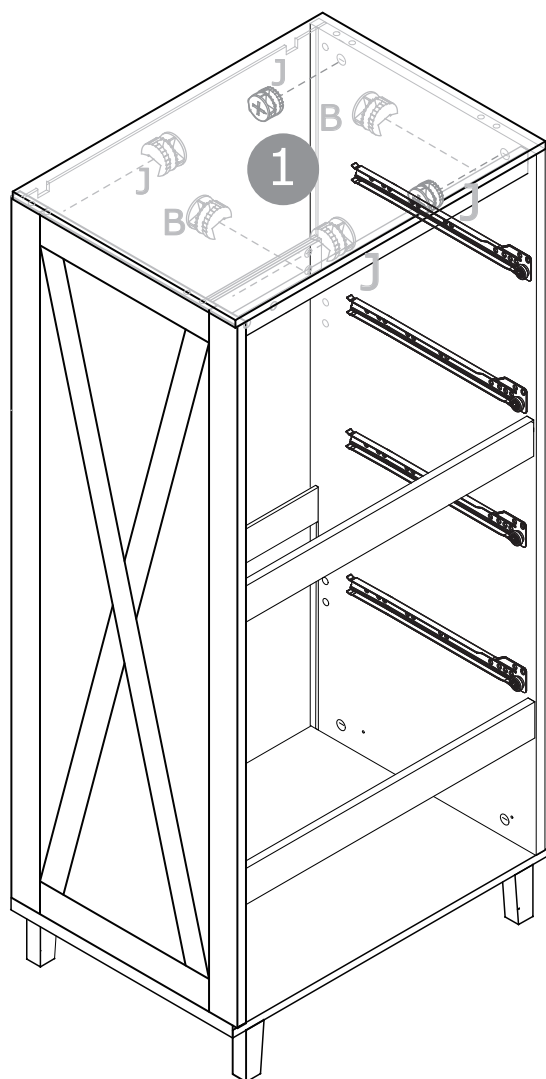

15

Dx1




L=300mm


Ex4



Ø 3 x 12 mm

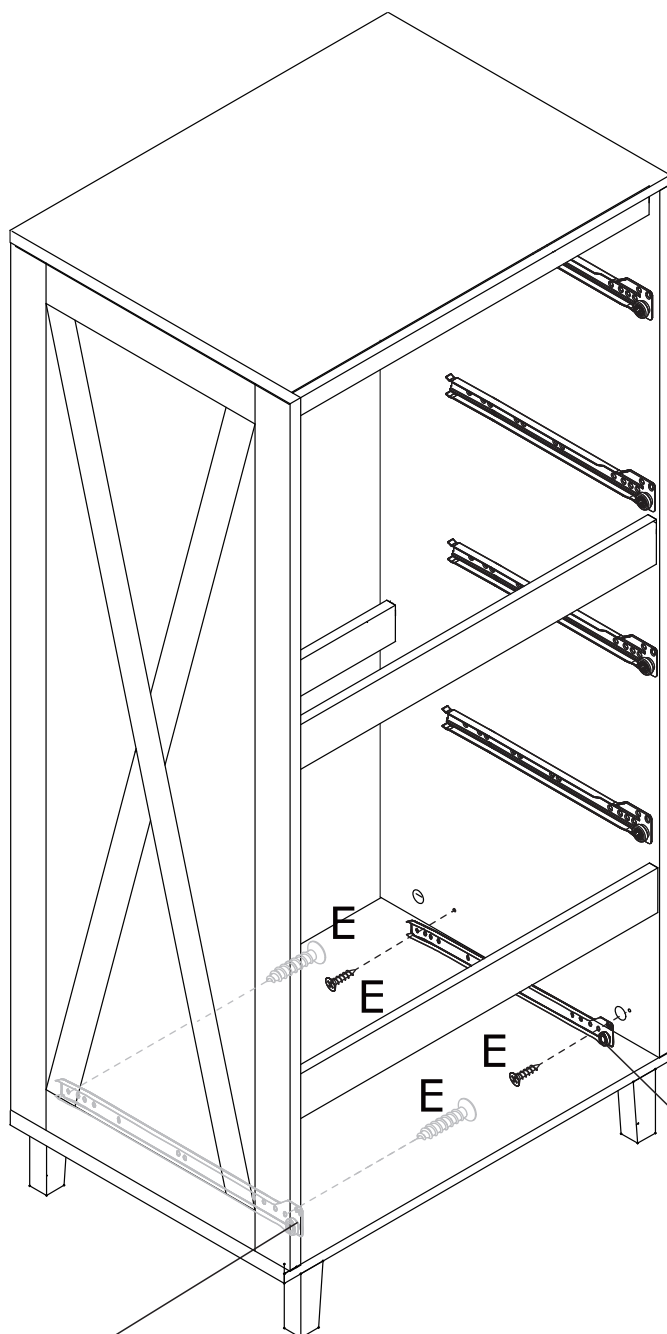


D-CL

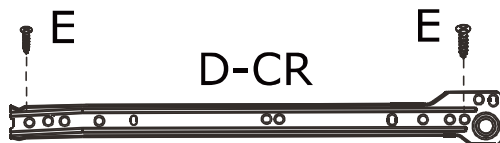


D-CR

16

Ax10



Ø 5 x 35 mm

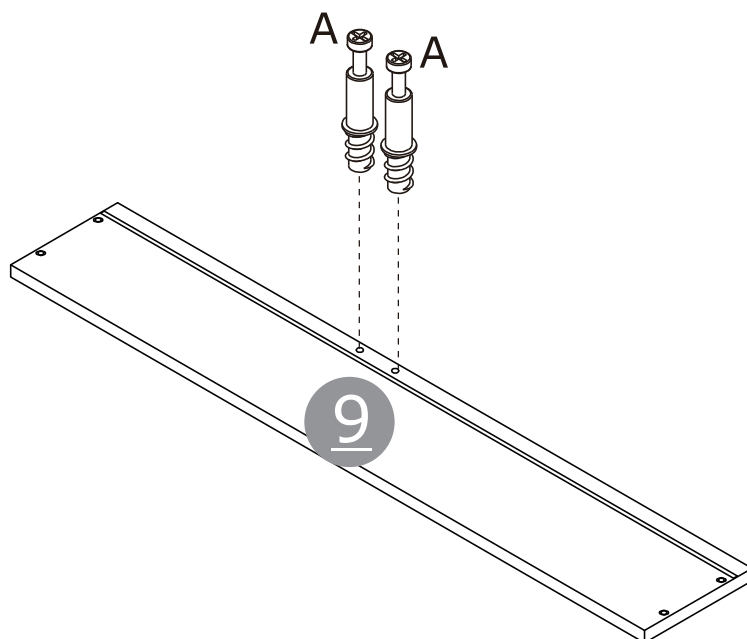

(*5) Please repeat this step five times.

17

Kx20




Ø 4 x 30 mm

Jx10




Ø 15 x 9.5 mm

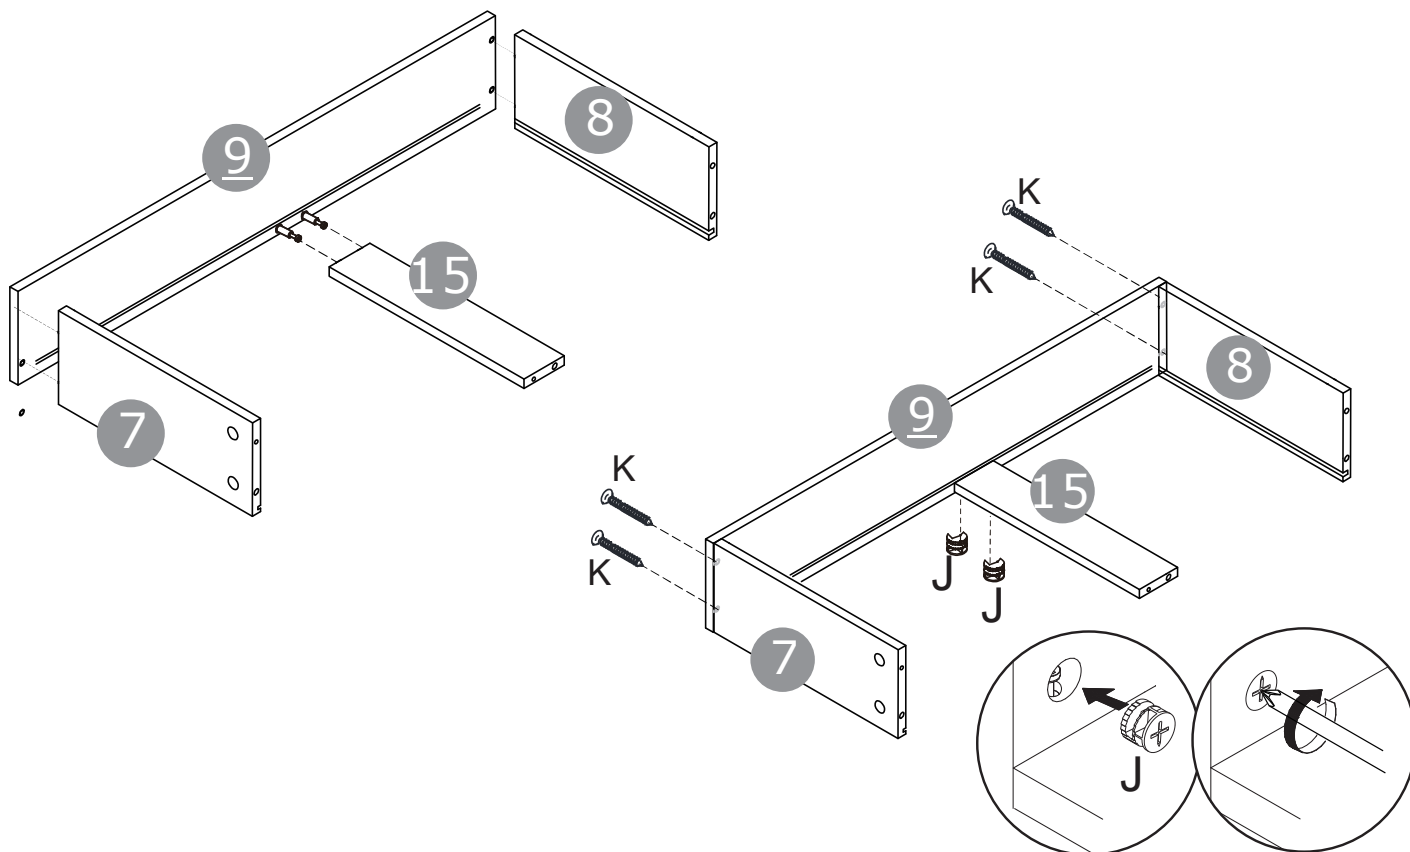

(*5) Please repeat this step five times.

18

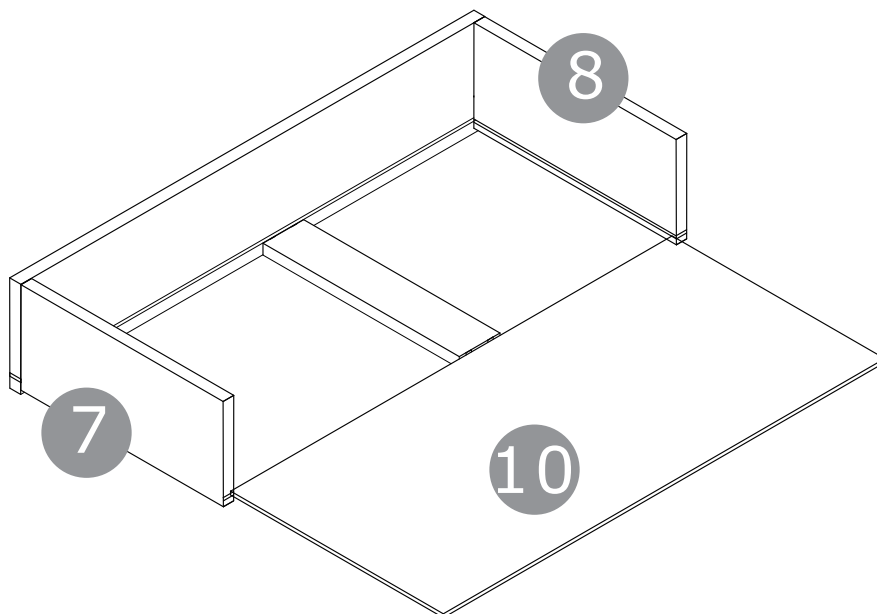


(*5) Please repeat this step five times.

19

Ax6

 Ø 5 x 35 mm

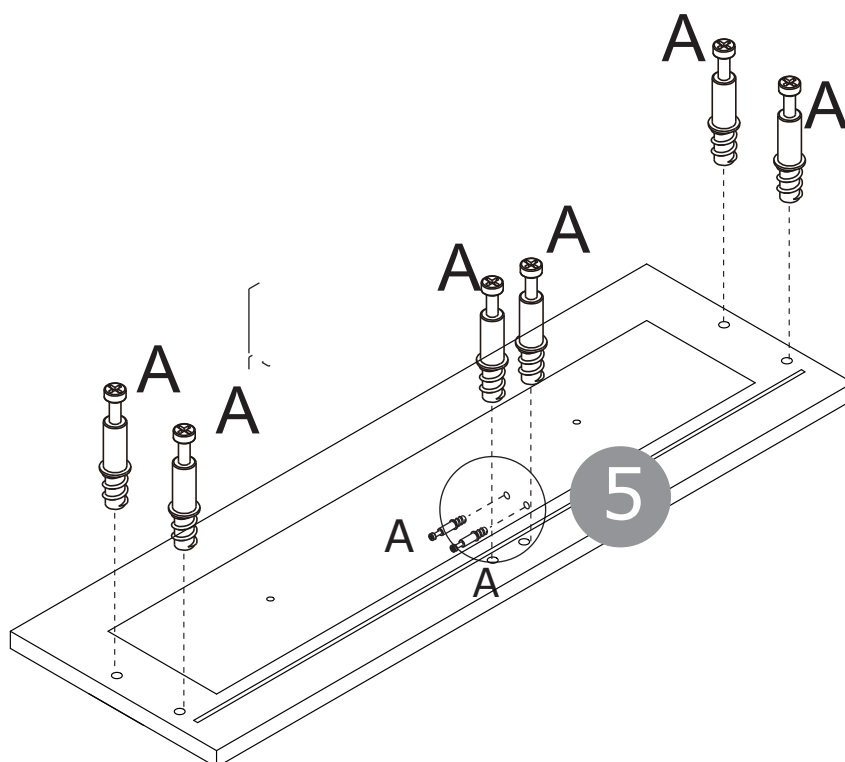

20

Jx6



Ø 15 x 9,5 mm



Gx2



Ø 4x22mm



8

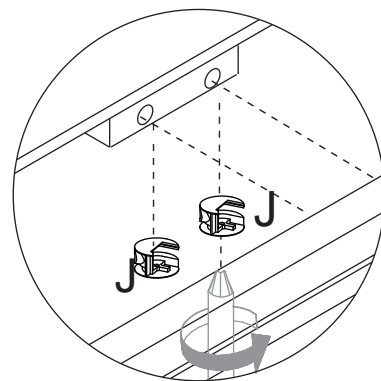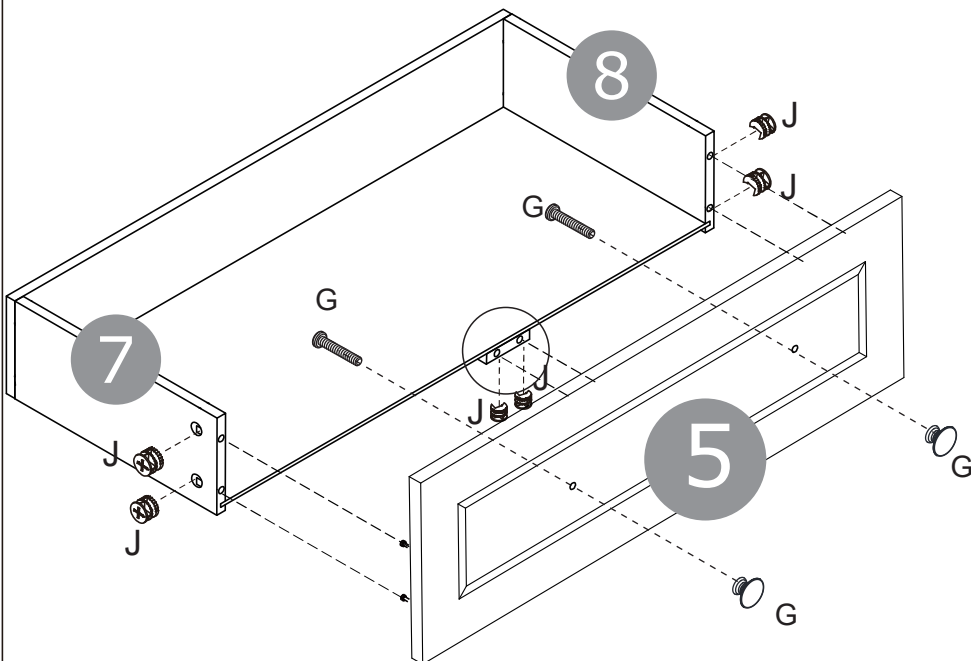

21

D x 1








L = 300 mm

E x 4




Ø 3 x 12 mm

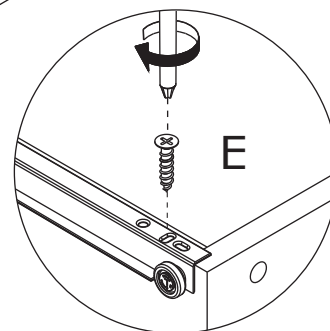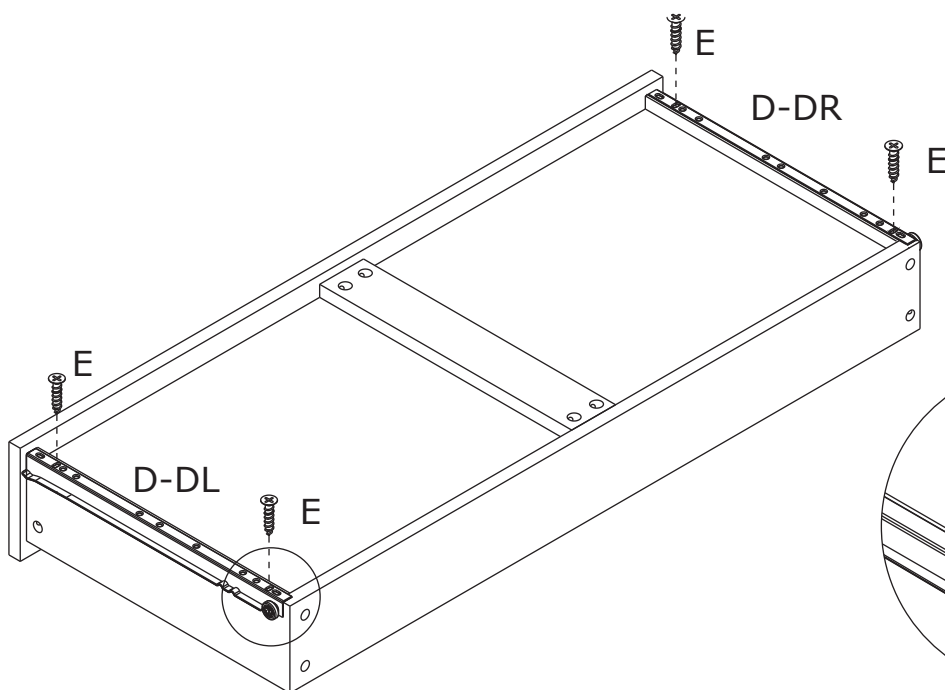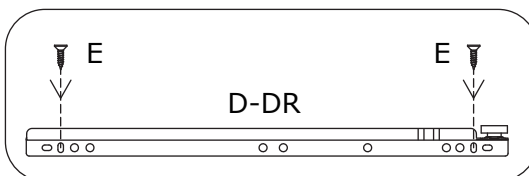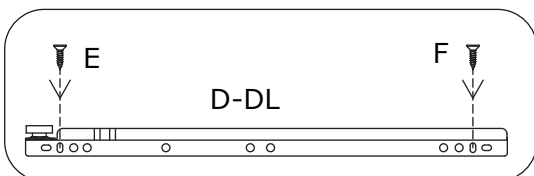

22

Ax24

Ø 5 x 35 mm

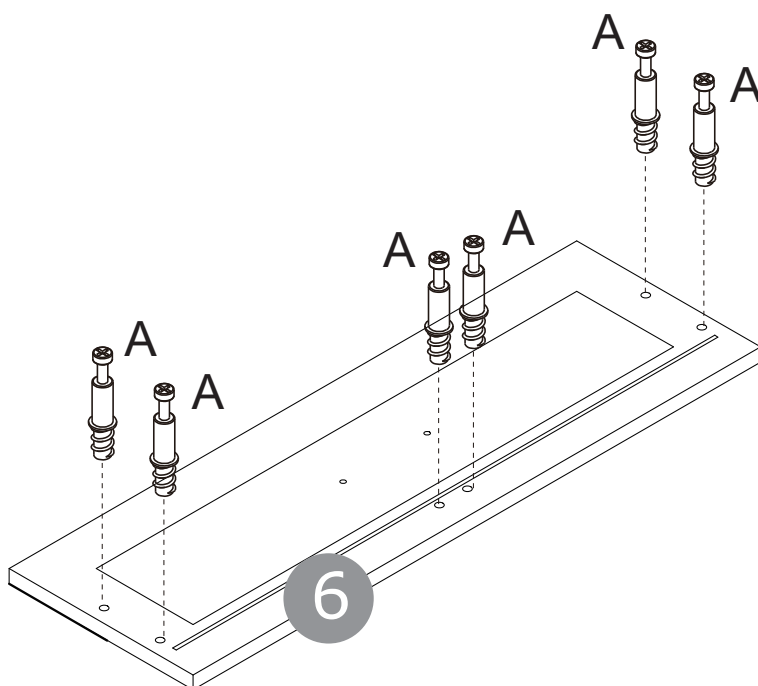

(*4) Please repeat this step four times.

23

Lx4




Ø4 x 18mm

Jx24



Ø 15 x 9.5 mm

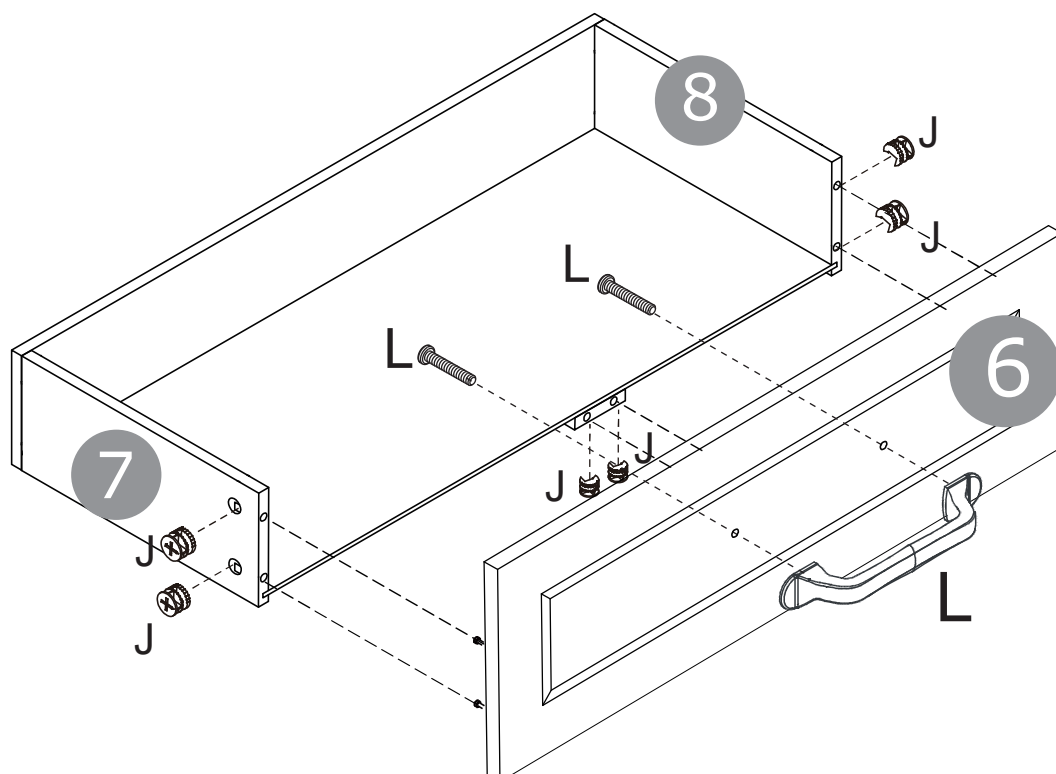

(*4) Please repeat this step four times.

24

D x 4







L = 300 mm

E x 16






Ø 3 x 12 mm

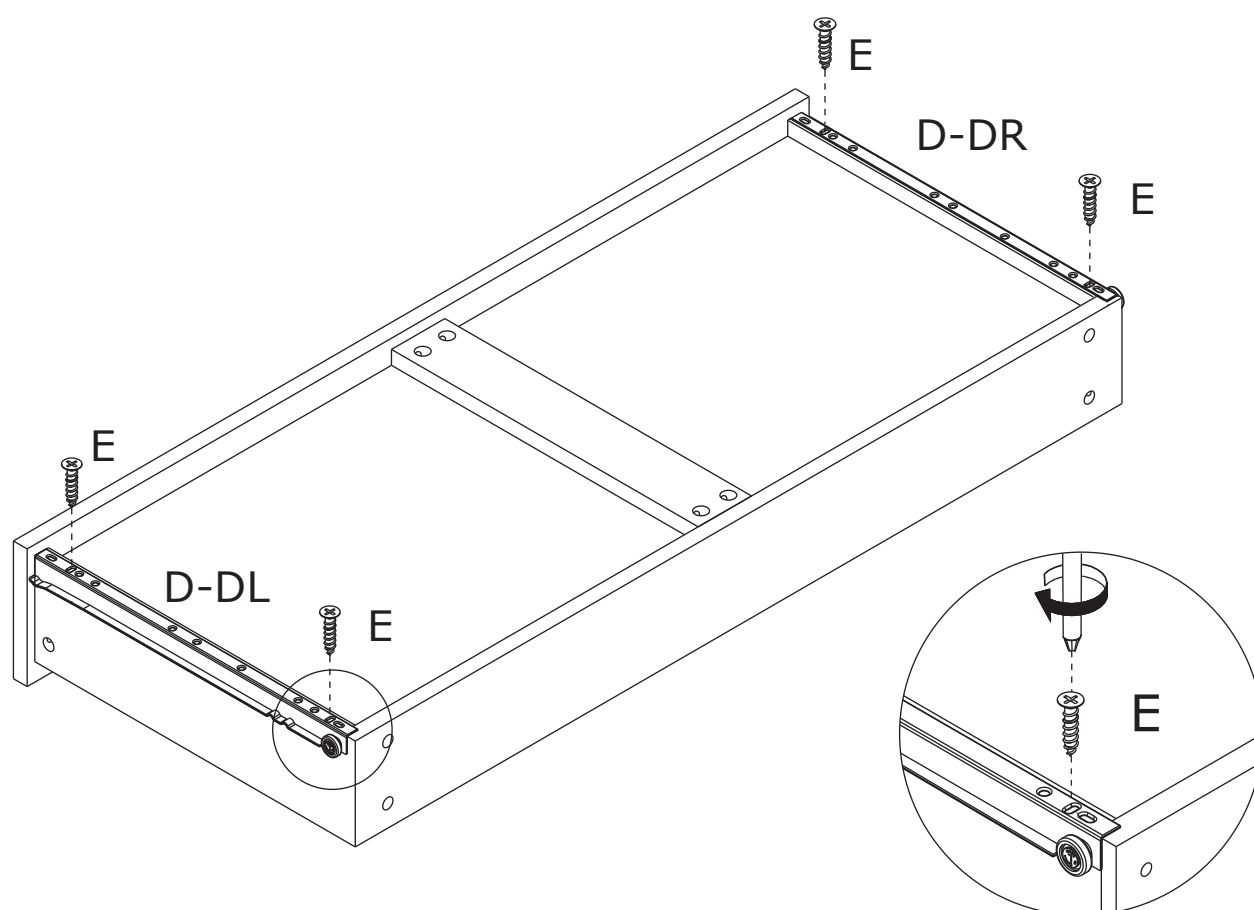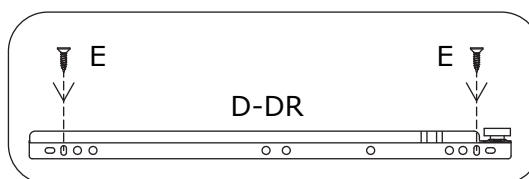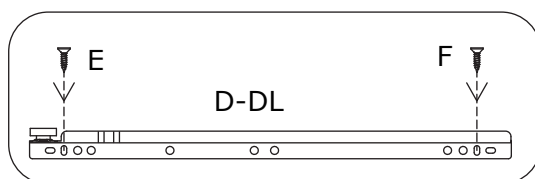

(*4) Please repeat this step four times.

25

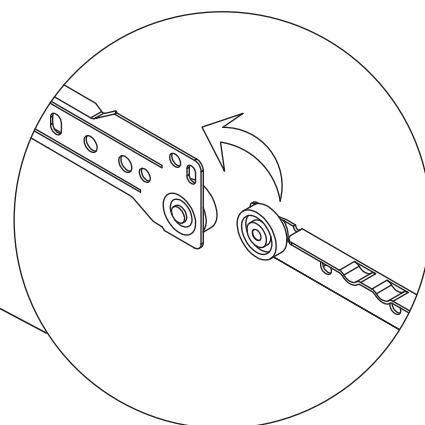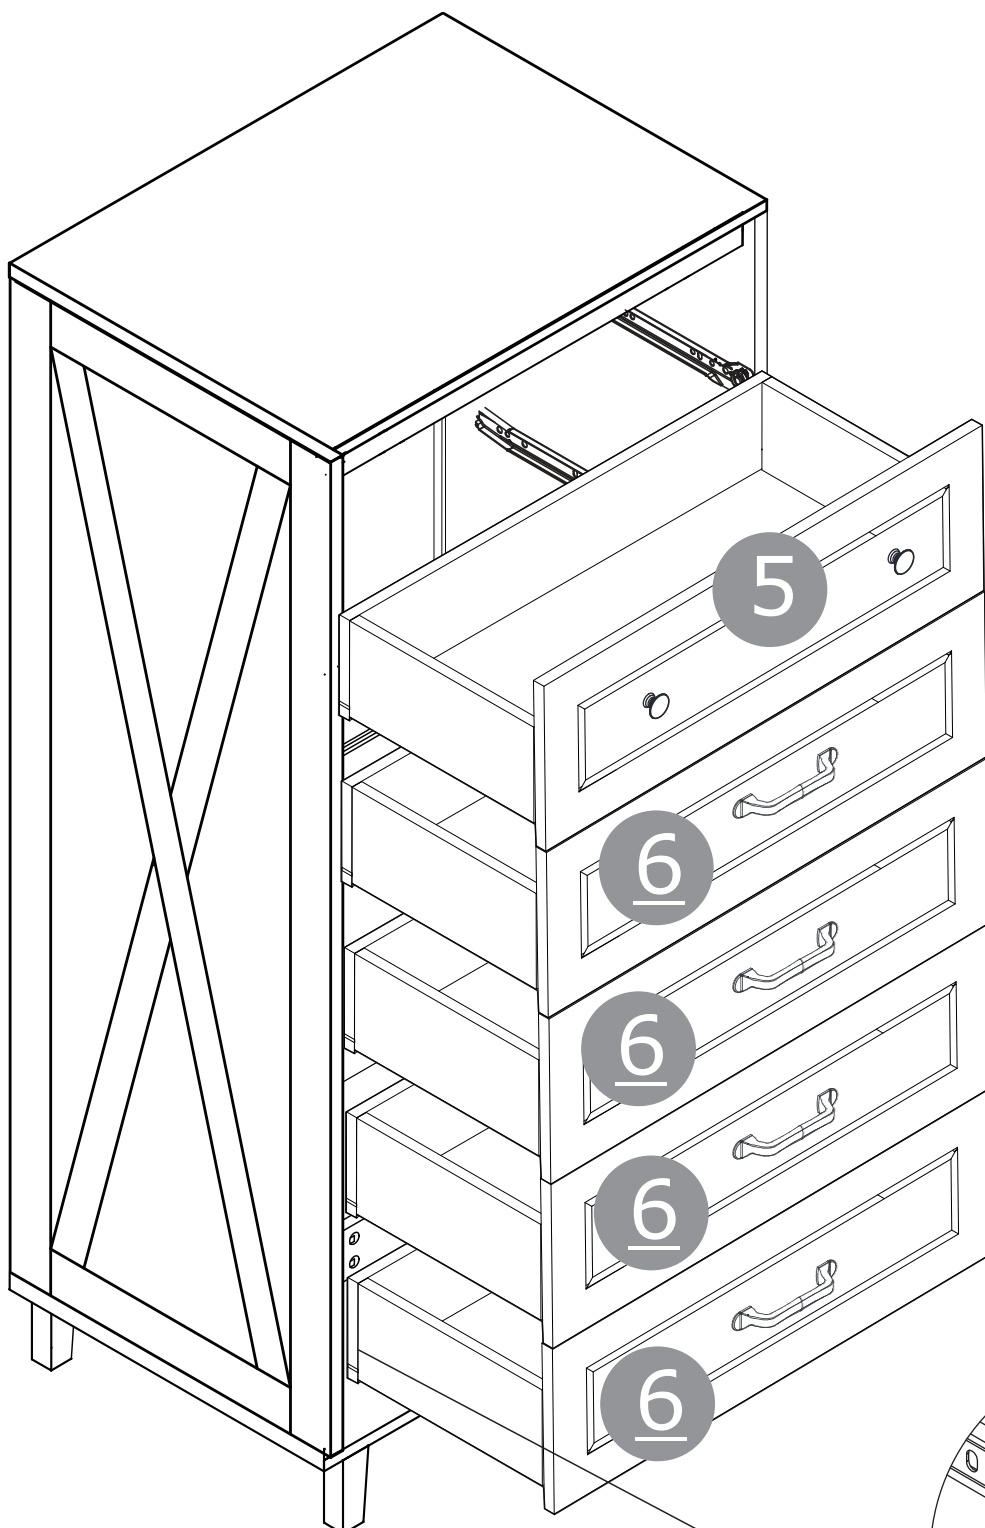

26





HX 22



E x 22





Ø 3 x 12 mm

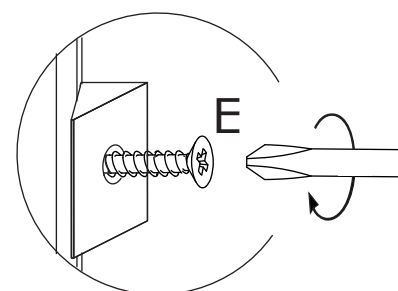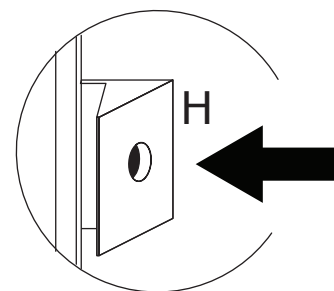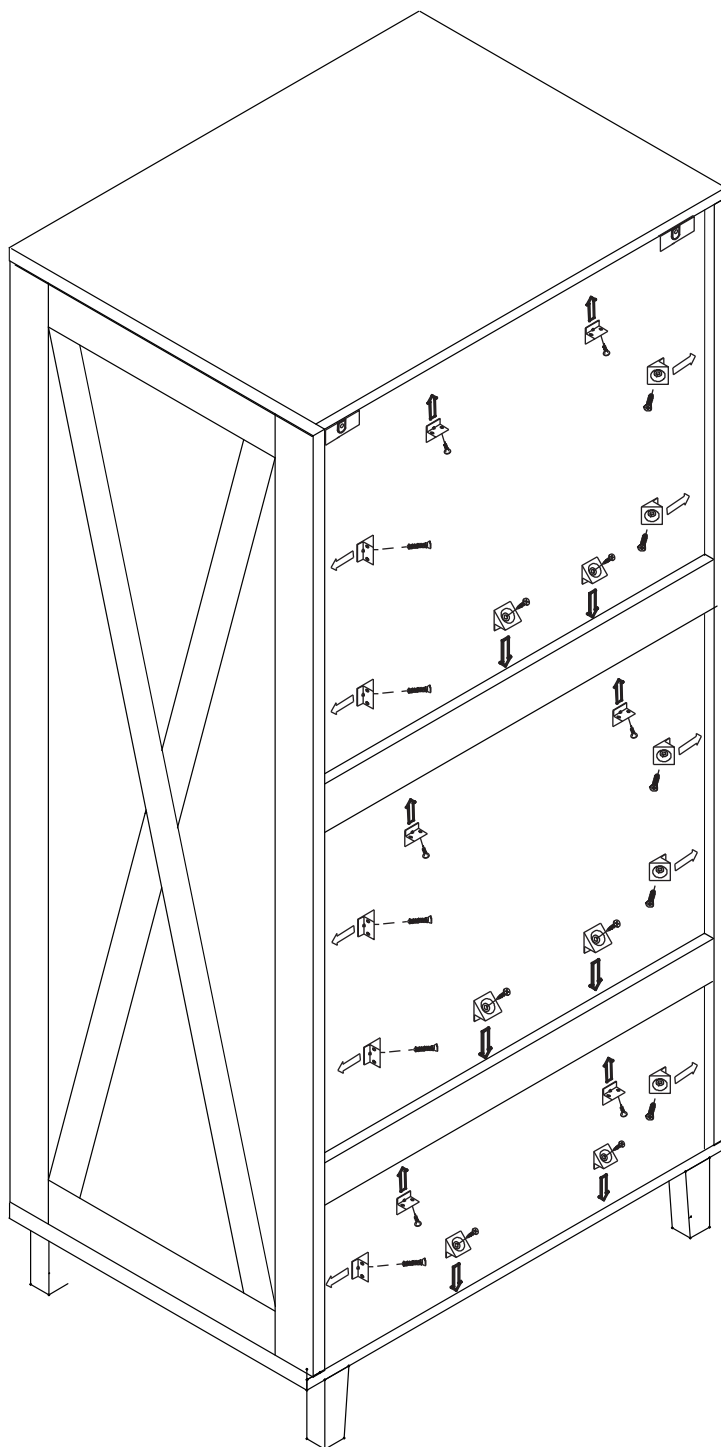


27

Mx2




WALL

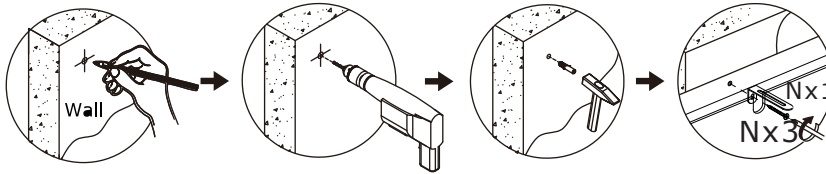




A solid wall	B cavity wall	C solid wood
$\Phi 6\text{mm}$ (1/4")	$\Phi 6\text{mm}$ (1/4")	$\Phi 4\text{mm}$ (1/8")

WALL

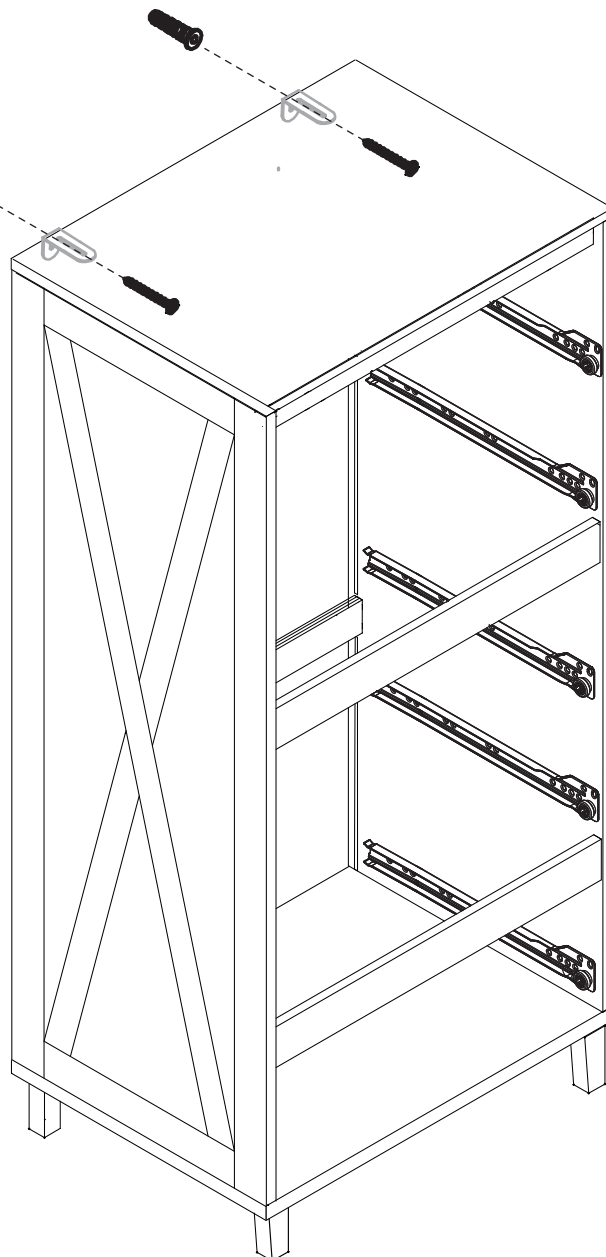

28

FX68

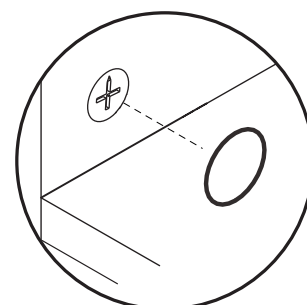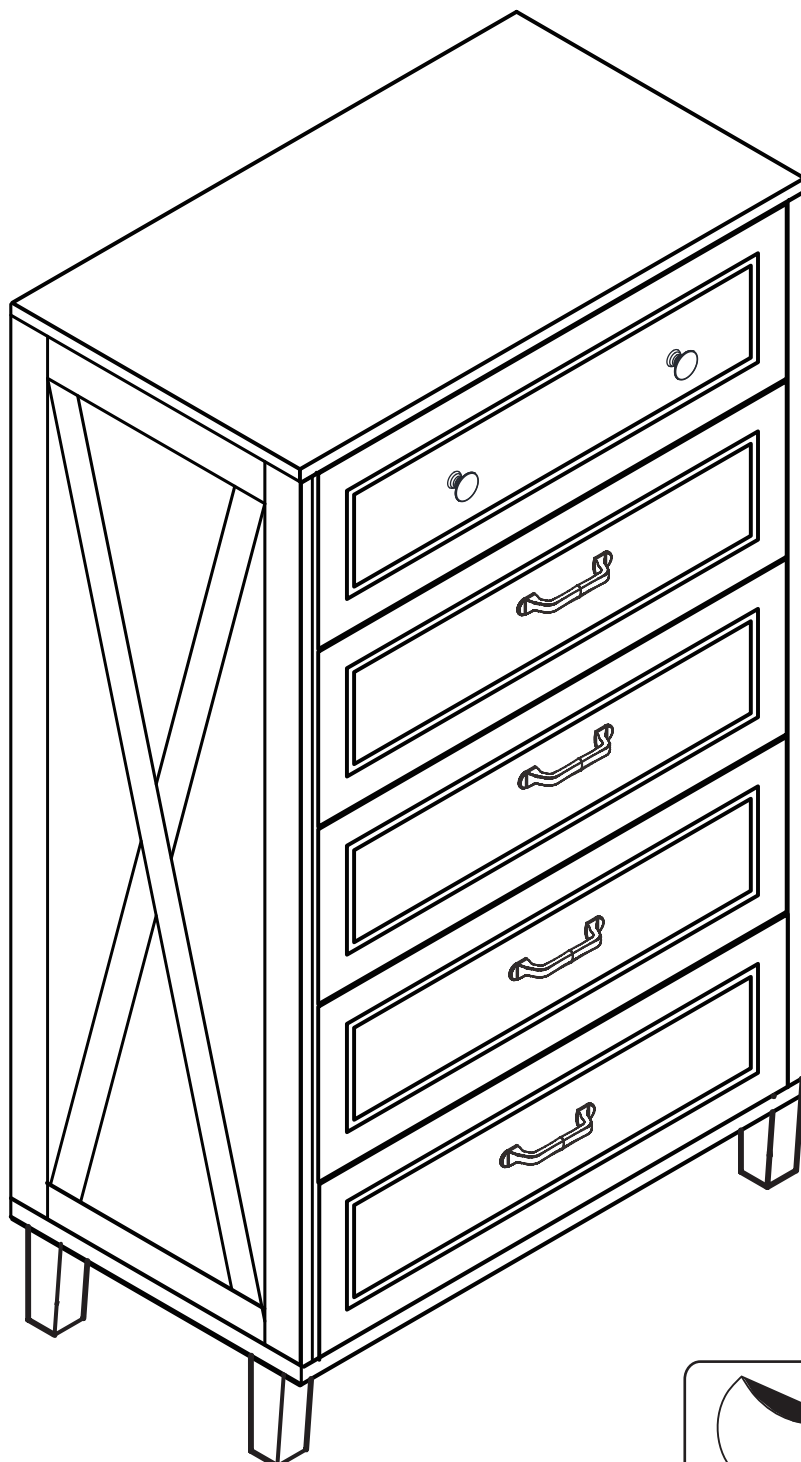

Shenzhenshi yumoshangmaoyouxiangongsi
Email: pdymproe@163.com
Add: Room 1203, Anqi Building, No. 1038, Taibai
Road Donghu Street, Luohu District, Shenzhen,
Guangdong 518000

