


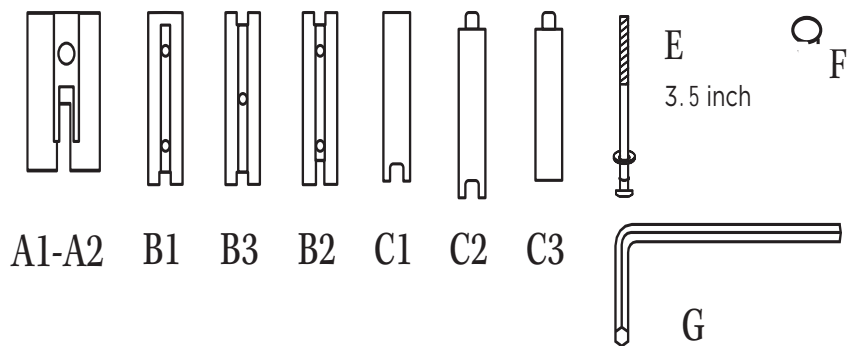
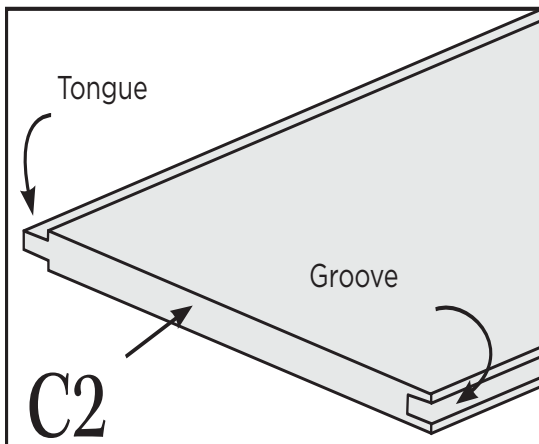
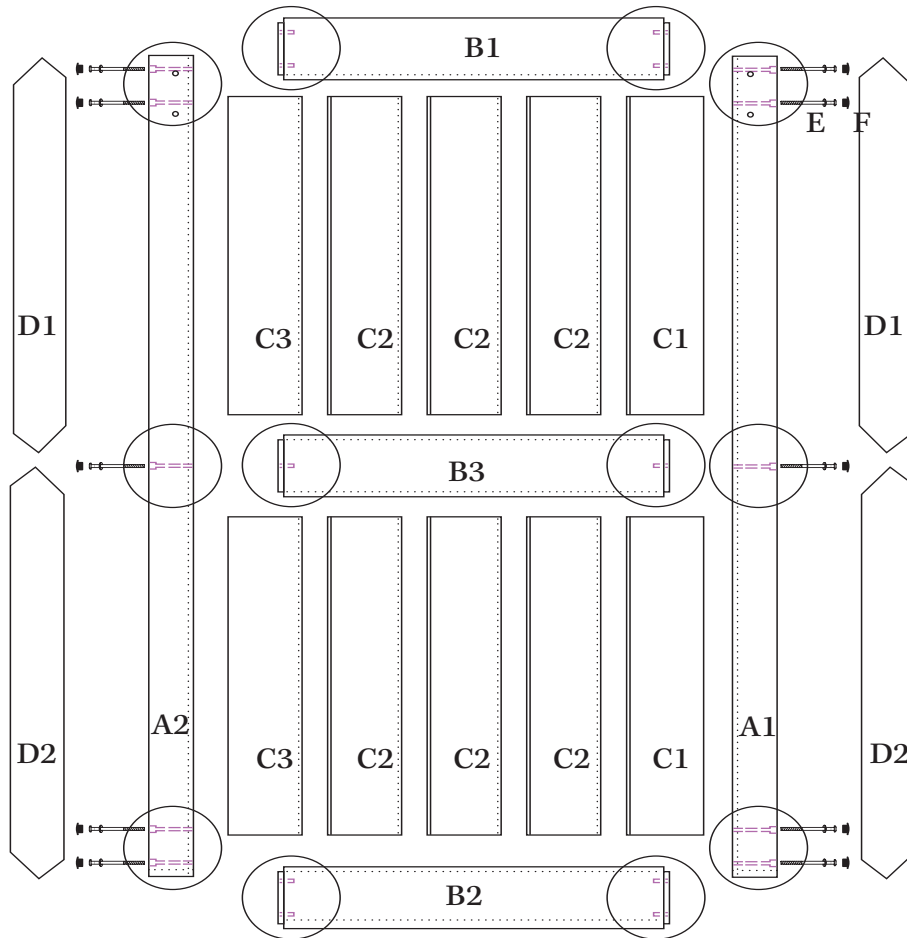
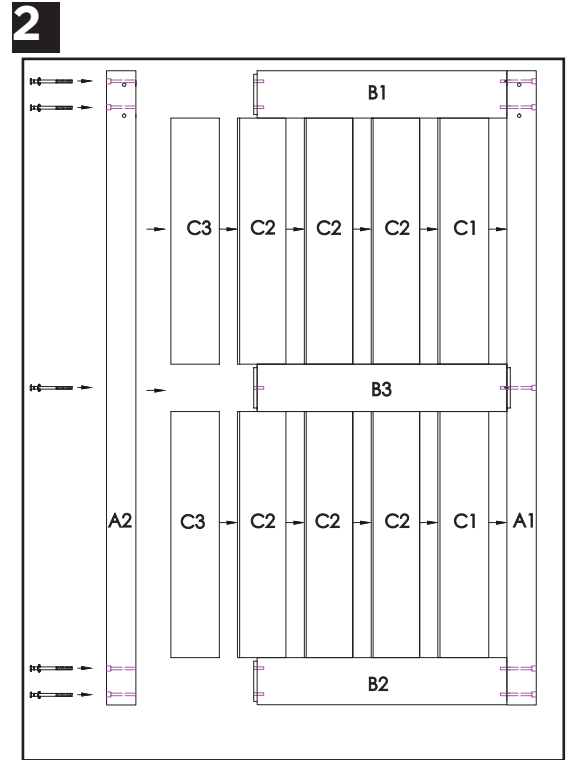


# K-design panel barn door installation guide

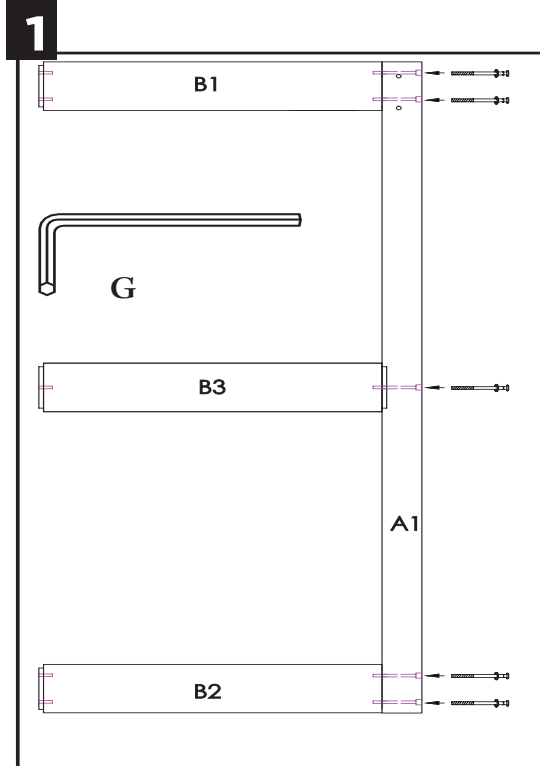



 Do not overscrew

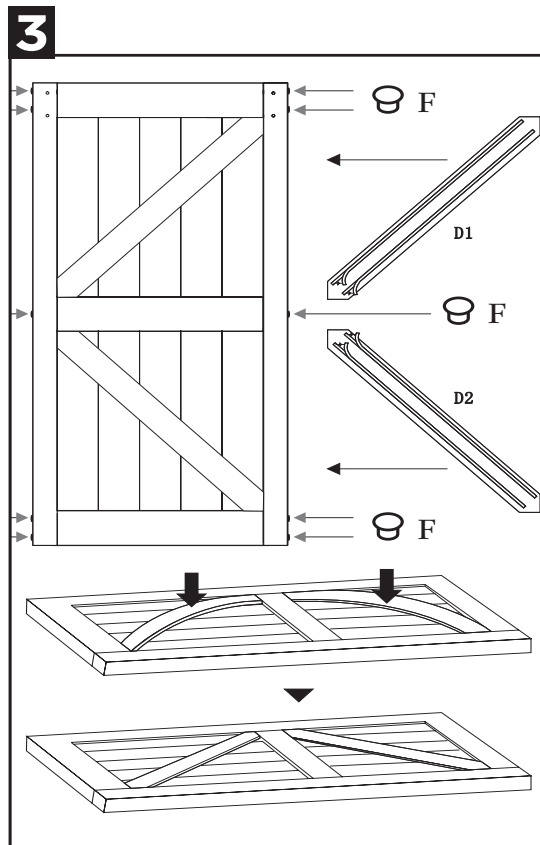

Remove the cover of the tape and adhere D1/D2 to the barn door

