




1

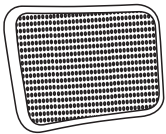

2




3







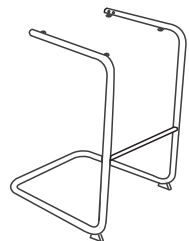

4




5



1	1x
2	1x
3	1x
4	1x
5	1x


<b>A</b>  6x20mm 8x	<b>B</b>  6x40mm 4x	<b>C</b>  ø18x6x1.5mm 4x	<b>D</b>  ø18x6x1.5mm 8x	<b>E</b>  M6 4x	<b>F</b>  M4 1x
-----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------

①

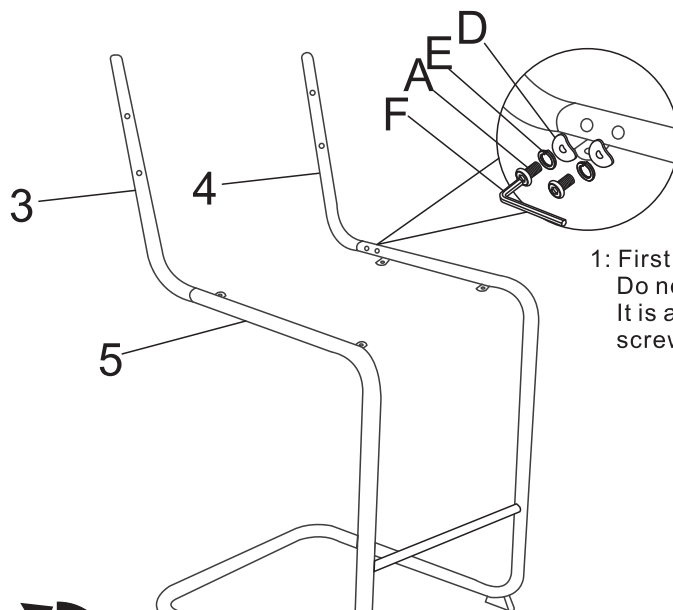


1: First assemble the backrest.  
Do not lock the four screws.  
It is advisable to tighten all four  
screws for 3-4 turns

②

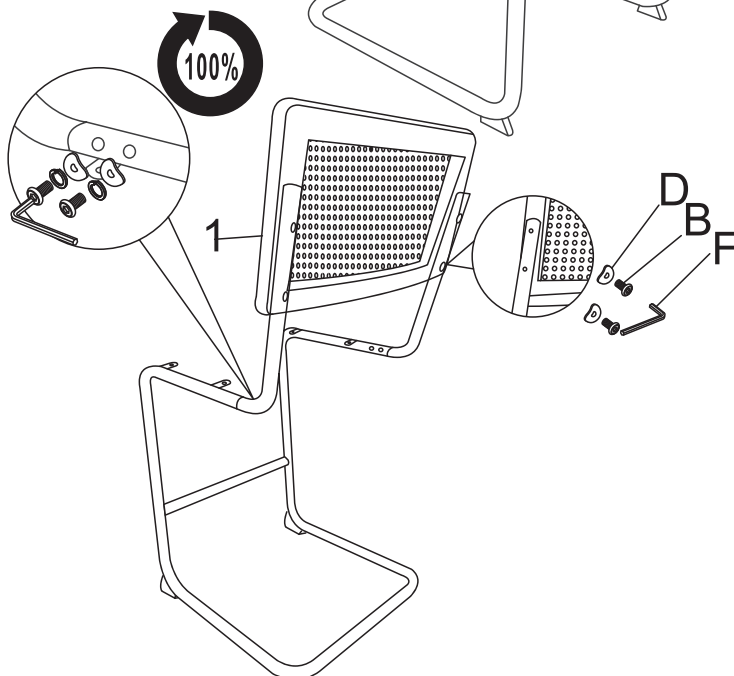

2: Then lock the four screws of the  
backrest and the four screws of  
the iron frame

③

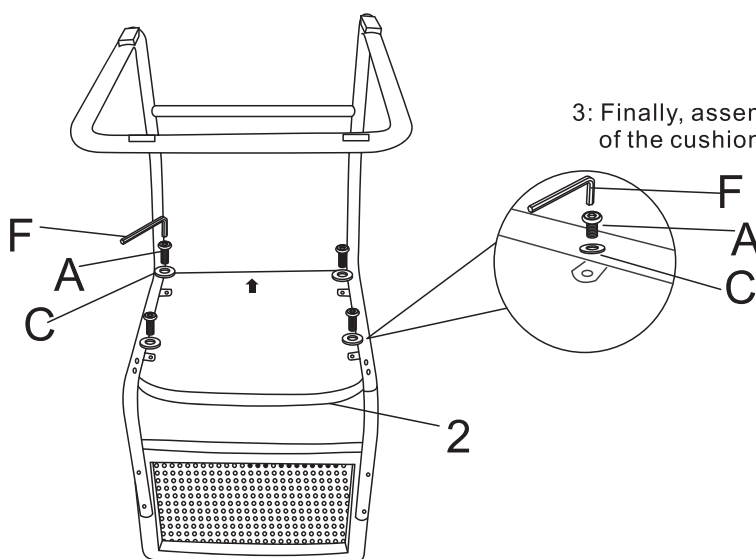

3: Finally, assemble the four screws  
of the cushion and lock them