

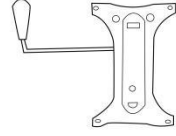






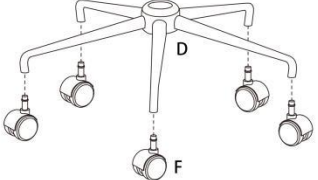
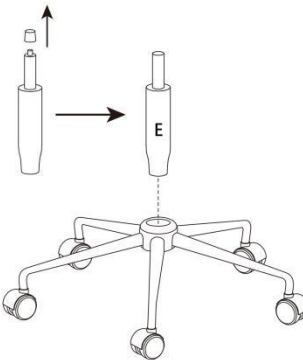
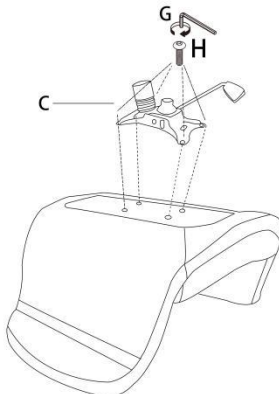
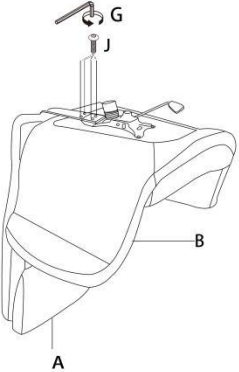
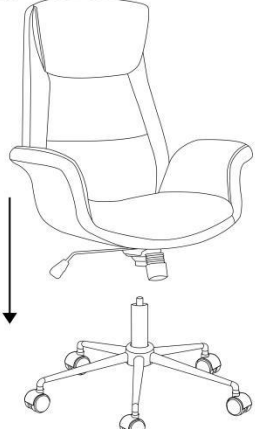



ASSEMBLING INSTRUCTION

Ax1 	Bx1 	Cx1 	Dx1 
Ex1 	Fx5 	Gx1 	Hx4 (M6x20mm)  Jx4 (M6x30mm) 

<p>STEP 1:</p>  <p>Diagram showing the base (D) with casters (F) being attached to the legs.</p>	<p>STEP 2:</p>  <p>Diagram showing the central post (E) being inserted into the base.</p>	<p>STEP 3:</p>  <p>Diagram showing the base assembly (C, D, E, F) being attached to the seat (B) using screws (H) and a hex key (G).</p>
<p>STEP 4:</p>  <p>Diagram showing the backrest (A) being attached to the seat (B) using screws (J) and a hex key (G).</p>	<p>STEP 5:</p>  <p>Diagram showing the seat being lowered onto the base assembly.</p>	<p>STEP 6:</p>  <p>Diagram showing the fully assembled office chair.</p>