


















ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

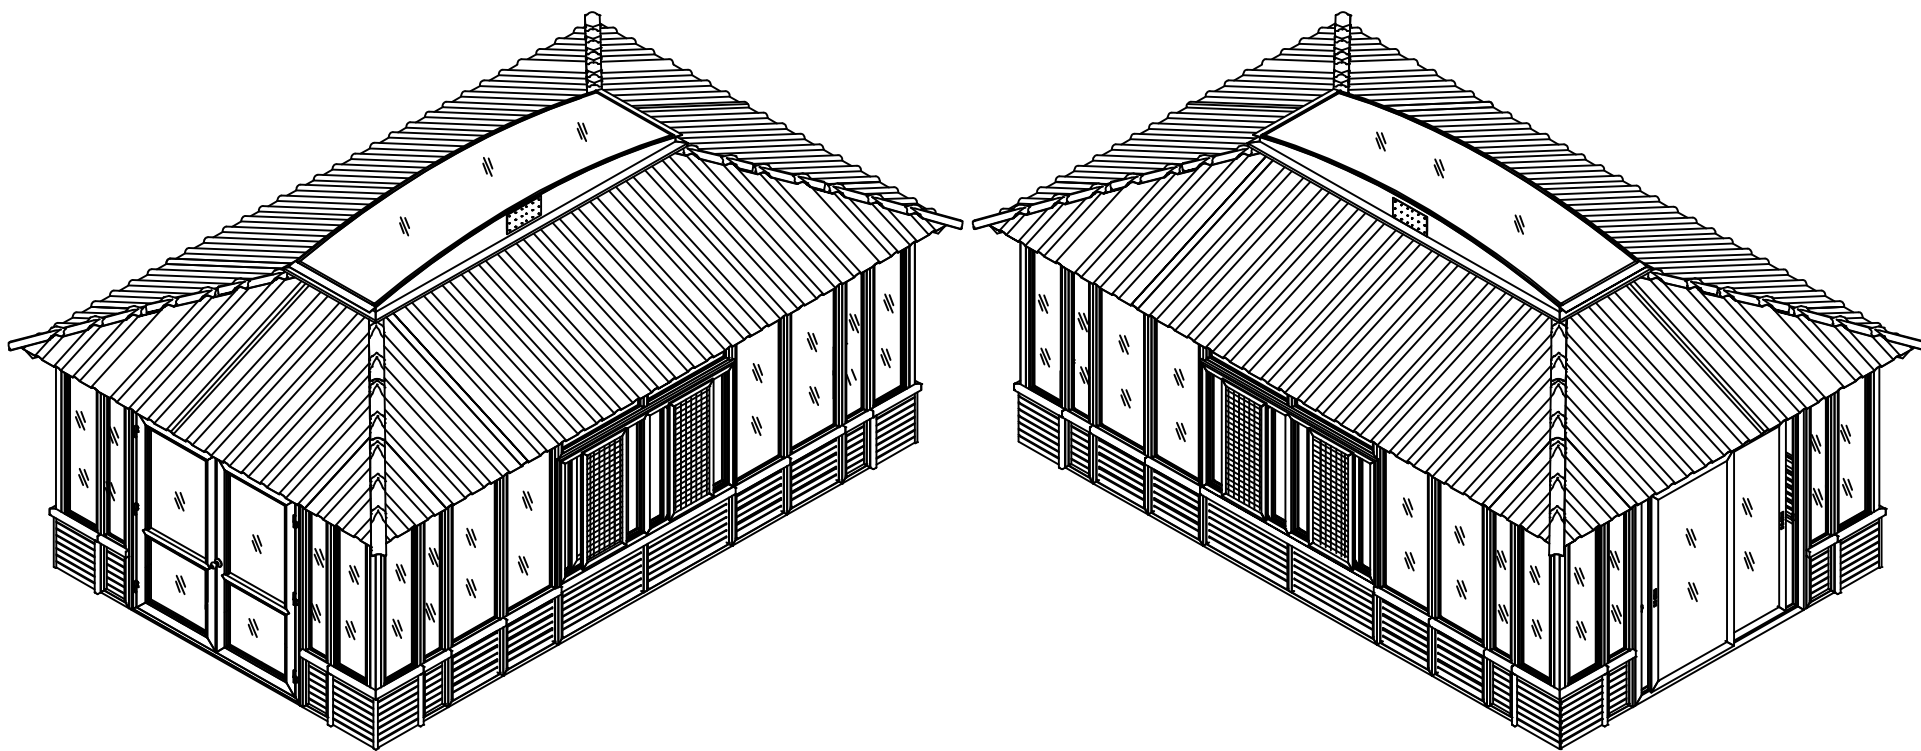

ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


A SIZE: 1670 X 80 X 70MM 65$\frac{3}{4}$" X 3" X 2$\frac{3}{4}$" X6	A-1 SIZE: 1670 X 80 X 70MM 65$\frac{3}{4}$" X 3" X 2$\frac{3}{4}$" X4	B SIZE: 2270 X 90 X 70MM 89$\frac{3}{8}$" X 3$\frac{1}{2}$" X 2$\frac{3}{4}$" X4	C SIZE: 2500X 60 X35MM 98$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	C1 SIZE: 1765 X 60 X 35MM 69$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	C2 SIZE: 1765 X 60 X 35MM 69$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X6	D SIZE: 590 X 90 X 35MM 23$\frac{1}{16}$" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4
D1 SIZE: 180X90X35MM 7" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4	E SIZE: 1190 X 60 X 35MM 46$\frac{7}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	E1 SIZE: 1190 X 60 X 35MM 46$\frac{7}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	F SIZE: 809 X 60 X 35MM 31$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	F1 SIZE: 809 X 60 X 35MM 31$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	G SIZE: 704 X 60 X 35MM 27$\frac{11}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	G1 SIZE: 704 X 60 X 35MM 27$\frac{11}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2
H SIZE: 377 X 60 X 35MM 14$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	H1 SIZE: 377 X 60 X 35MM 14$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	I SIZE: 1660 X 70 X 35MM 65$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	I1 SIZE: 1660 X 70 X 35MM 65$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	J SIZE: 1330 X 70 X 35MM 52$\frac{5}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	J1 SIZE: 1330 X 70 X 35MM 52$\frac{5}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	K SIZE: 1710 X 880 X 30MM 67$\frac{5}{16}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X4
K1 SIZE: 1710 X 880 X 30MM 67$\frac{5}{16}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X4	L SIZE: 942 X 862 X 30MM 37" X 34" X 1$\frac{1}{16}$" X4	L1 SIZE: 942 X 862 X 30MM 37" X 34" X 1$\frac{1}{16}$" X4	N SIZE: 1710 X 580 X 30MM 67$\frac{11}{16}$" X 22$\frac{5}{8}$" X 1$\frac{1}{16}$" X4	O SIZE: 720 X 115 X 50MM 28$\frac{1}{8}$" X 4$\frac{1}{2}$" X 2" X4	P SIZE: 830 X 115 X 50MM 33" X 4$\frac{1}{2}$" X 2" X4	P1 SIZE: 1020 X 115 X 50MM 41$\frac{1}{16}$" X 4$\frac{1}{2}$" X 2" X4
Q SIZE: 1398.5X 230 X 100MM 55" X 9" X 4" X2	Q0 SIZE: 1398.5X 230 X 100MM 55" X 9" X 4" X2	Q1 SIZE: 1007 X 107X 100MM 39$\frac{3}{8}$" X 4$\frac{1}{4}$" X 4" X2	Q2 SIZE: 805 X 35X35MM 31$\frac{1}{16}$" X 1$\frac{3}{8}$" X 1$\frac{3}{8}$" X3	R SIZE: 3310 X 875 X 3MM 130$\frac{1}{4}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X1	S1 SIZE: 1269 X 140 X 60MM 50" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2	S1-1 SIZE: 1269 X 140 X 60MM 50" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2
S2 SIZE: 800 X 140 X 60MM 31$\frac{1}{2}$" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2	S3 SIZE: 1710 X 880 X 30MM 67$\frac{5}{16}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X4	S4 SIZE: 1710 X 780 X 30MM 67$\frac{5}{16}$" X 30$\frac{11}{16}$" X 1$\frac{1}{16}$" X2	S5 SIZE: 1018 X 60 X 35MM 40" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X12	S6 SIZE: 946 X 70 X 35MM 37$\frac{1}{4}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X6	S7 SIZE: 2300X 90 X 35MM 90$\frac{1}{2}$" X 3$\frac{1}{4}$" X 1$\frac{3}{8}$" X4	S8 SIZE: 395 X 70 X 70MM 15$\frac{1}{2}$" X 2$\frac{3}{4}$" X 2$\frac{3}{4}$" X4

ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

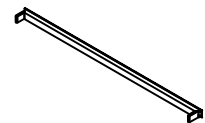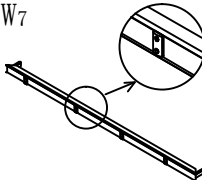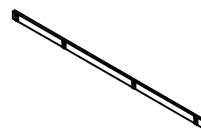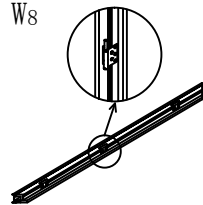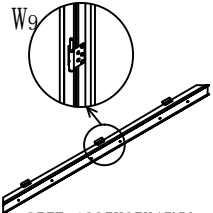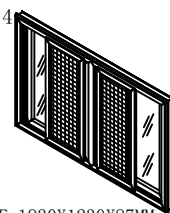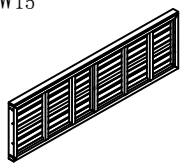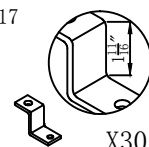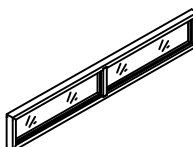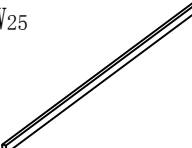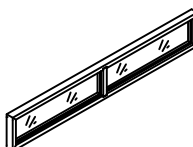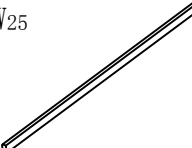
W1  SIZE: 525X95X2080MM 20³/₈"X3³/₄"X81¹/₈" X4	W2  SIZE: 600X60X2080MM 23³/₈"X2³/₈"X81¹/₈" X4	W3  SIZE: 600X60X2080MM 23³/₈"X2³/₈"X81¹/₈" X4	W4  SIZE: 305X60X2080MM 12"X2³/₈"X81¹/₈" X4	W5  SIZE: 305X60X2080MM 12"X2³/₈"X81¹/₈" X4	T1  X4	T2  X10	T3  X4	T6  X4		
W6  SIZE: 1837X65X45MM 72³/₈"X2¹/₁₆"X1¹/₄" X1	W6-1  SIZE: 1835X65X45MM 72³/₈"X2¹/₁₆"X1¹/₄" X1	W7  SIZE: 1837X65X45MM 72³/₈"X2¹/₁₆"X1¹/₄" X1	W7-1  SIZE: 1750X57X20MM 68³/₁₆"X2¹/₁₆"X¹/₄" X1	W8  SIZE: 1995X65X45MM 78³/₁₆"X2¹/₁₆"X1¹/₄" X1	T7  X4	T8  X2	T9  X4	T10  8-Ø8X50MM SIZE: ⁵/₁₆" X 2"		
W8-1  SIZE: 1997X65X45MM 78³/₁₆"X2¹/₁₆"X1¹/₄" X2	W9  SIZE: 1995X65X45MM 78³/₁₆"X2¹/₁₆"X1¹/₄" X1	W10  SIZE: 900X35X1932MM 35³/₈"X1¹/₈"X76¹/₈" X1	W10-1  SIZE: 924X35X1950MM 36" X1¹/₈"X76¹/₈" X1	W11  SIZE: 900X35X1932MM 35³/₈"X1¹/₈"X76¹/₈" X1	T10-1  16-Ø10X150MM SIZE: ³/₈" X 6"	T11  X4	T12  X1	T13  X2		
W11-1  SIZE: 924X35X1950MM 36" X1¹/₈"X76¹/₈" X1	W12  SIZE: 1900X59X90MM 74¹/₄"X2³/₈"X3¹/₄" X2	W13  SIZE: 60X35X1990MM 2³/₈"X1¹/₈"X78³/₈" X4	W14  SIZE: 1930X1230X87MM 76"X48³/₈"X3³/₈" X2	W15  SIZE: 1900X880X60MM 74¹/₄"X34¹/₈"X2³/₈" X2	T14  X1	T15  X4	T16  X28	T17  X30		
W18  SIZE: 1900X305X60MM 74¹/₄"X12"X2³/₈" X2	W25  SIZE: 1900X60X35MM 74¹/₄"X2³/₈"X1¹/₈" X2	W26  SIZE: 600X60X35MM 23³/₈"X2³/₈"X1¹/₈" X8	W27  SIZE: 305X60X35MM 12"X2³/₈"X1¹/₈" X8	T4  X4	U1  40-Ø5X90MM SIZE: ³/₁₆" X 3¹/₁₆"	U2  64-Ø5X75MM SIZE: ³/₁₆" X 3"	U3  222-Ø5X55MM SIZE: ³/₁₆" X 2¹/₁₆"	U4  344-Ø4X30MM SIZE: ¹/₁₆" X 1¹/₁₆"		
W18  SIZE: 1900X305X60MM 74¹/₄"X12"X2³/₈" X2	W25  SIZE: 1900X60X35MM 74¹/₄"X2³/₈"X1¹/₈" X2	W26  SIZE: 600X60X35MM 23³/₈"X2³/₈"X1¹/₈" X8	W27  SIZE: 305X60X35MM 12"X2³/₈"X1¹/₈" X8	T4  X4	T5  X2	V  SHIM X15	V1  PLASTIC SPACER PLECE X56	V2  X4	V3  X4	X  1-Ø5X30x70MM

ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#1

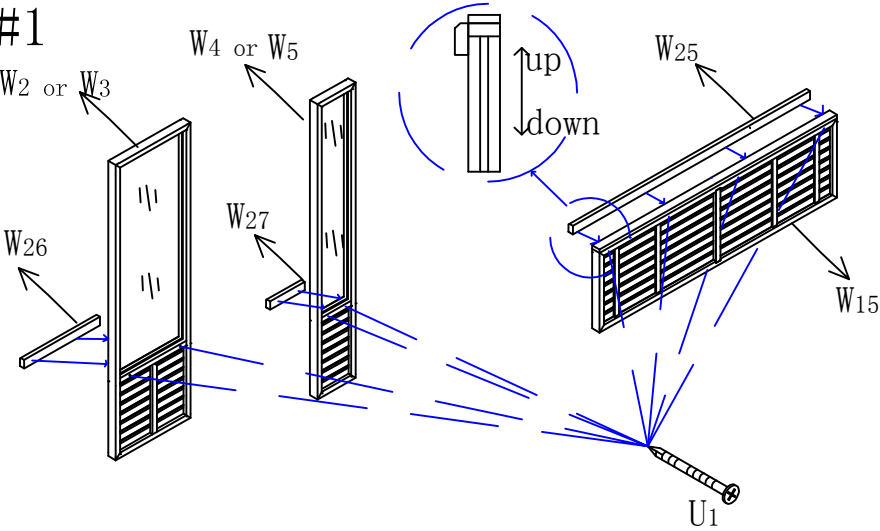

#2

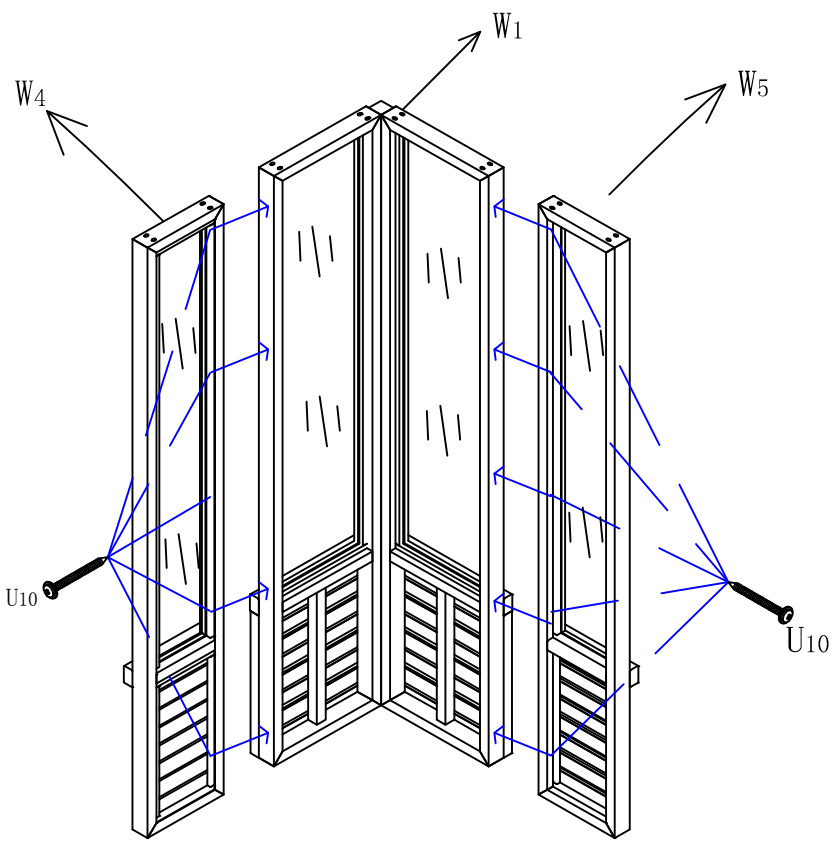


#3

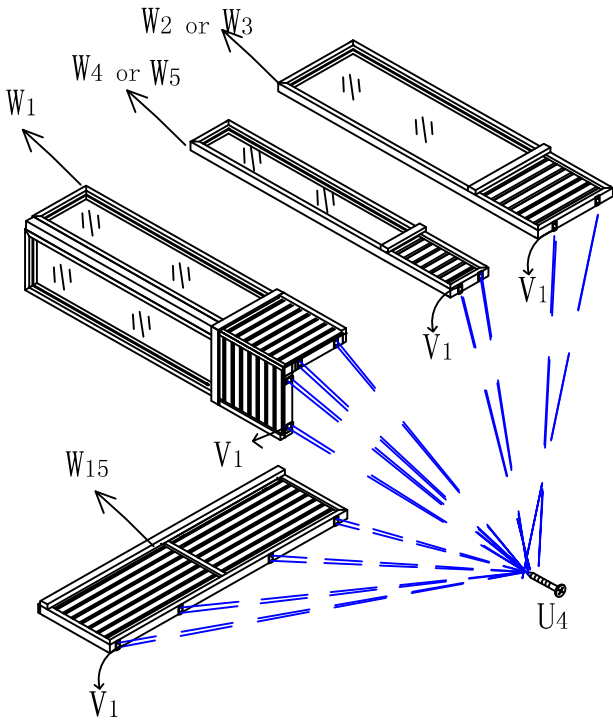


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#4

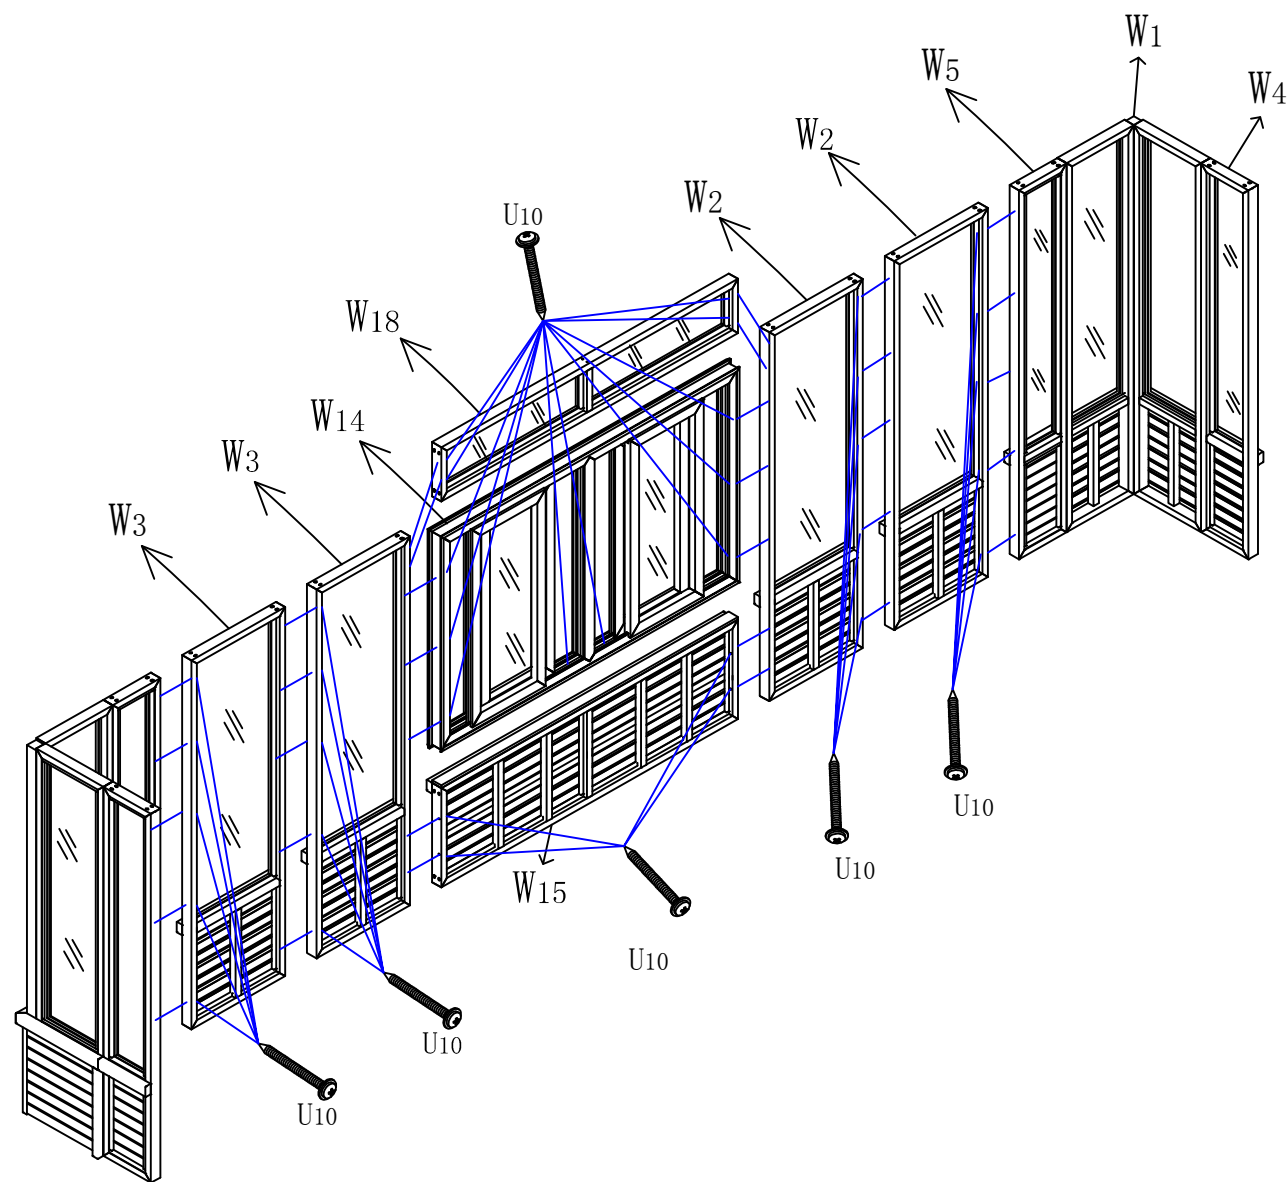


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#5

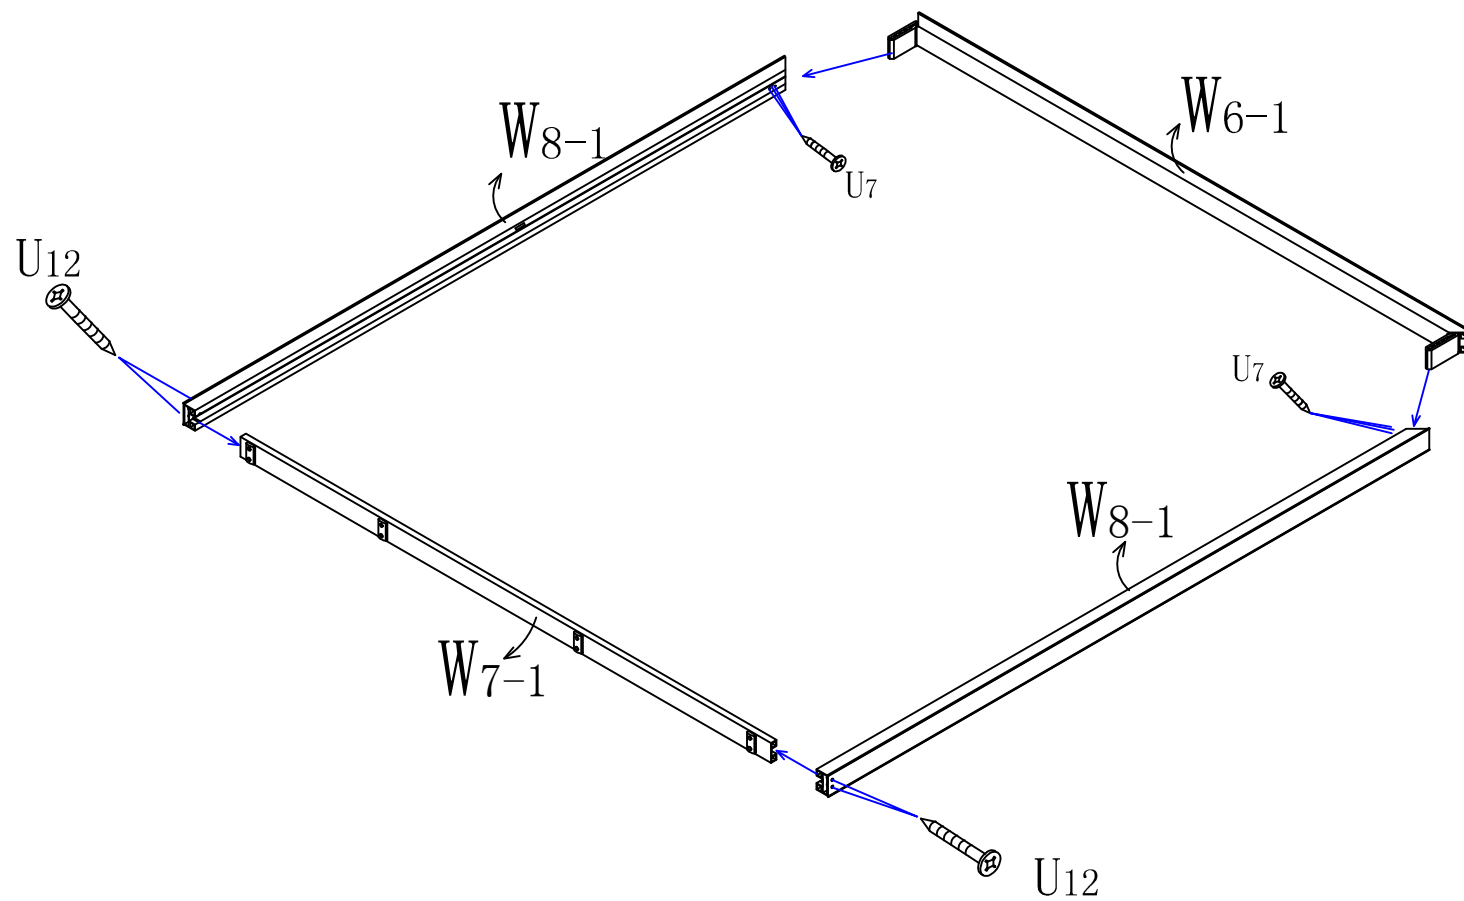


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#6

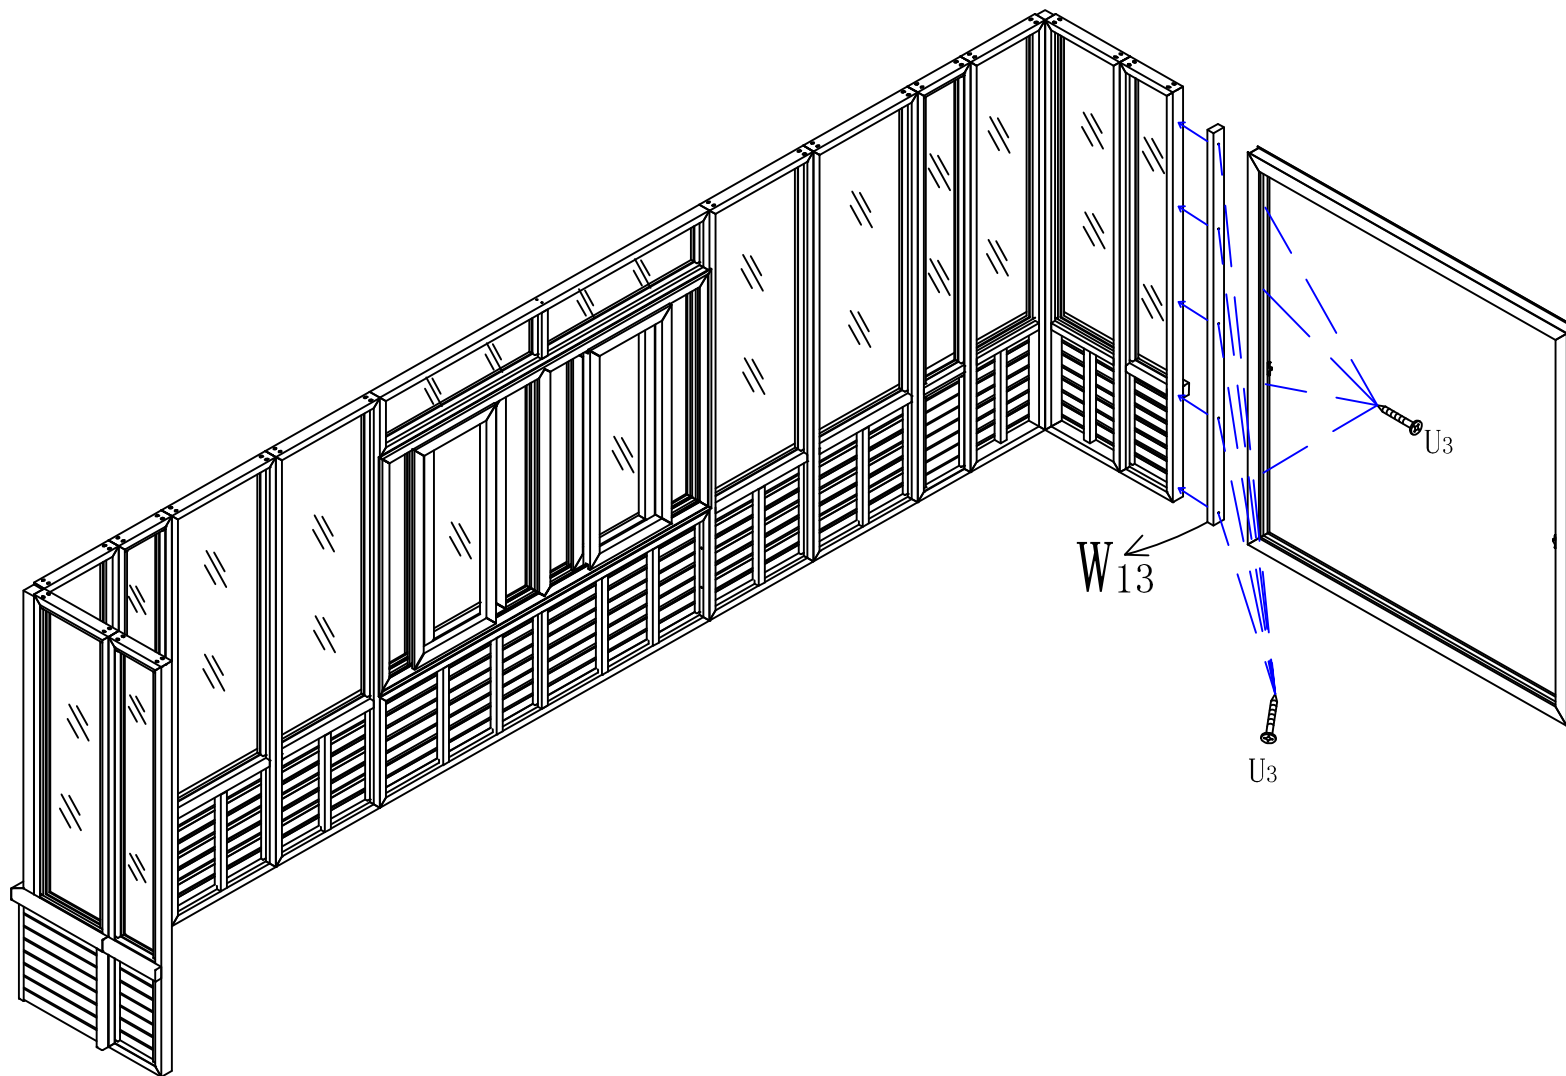


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#7

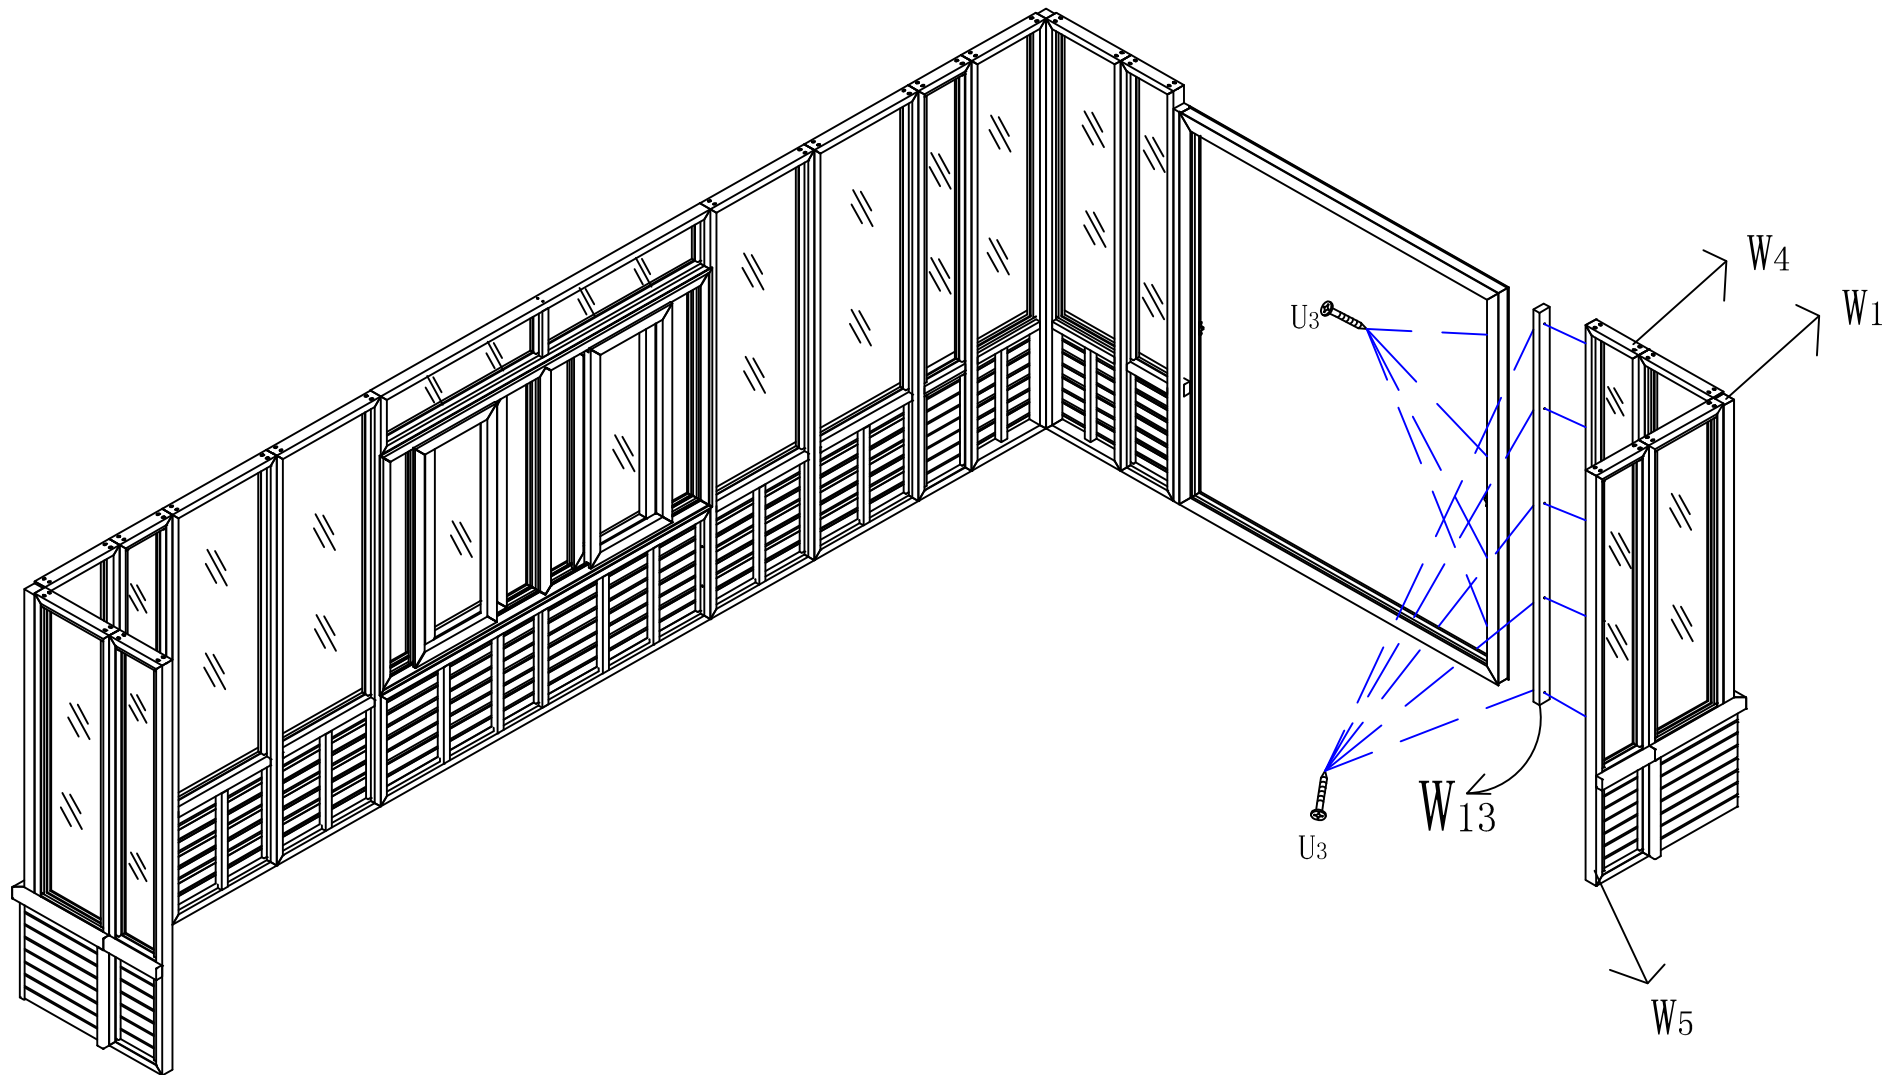


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#8

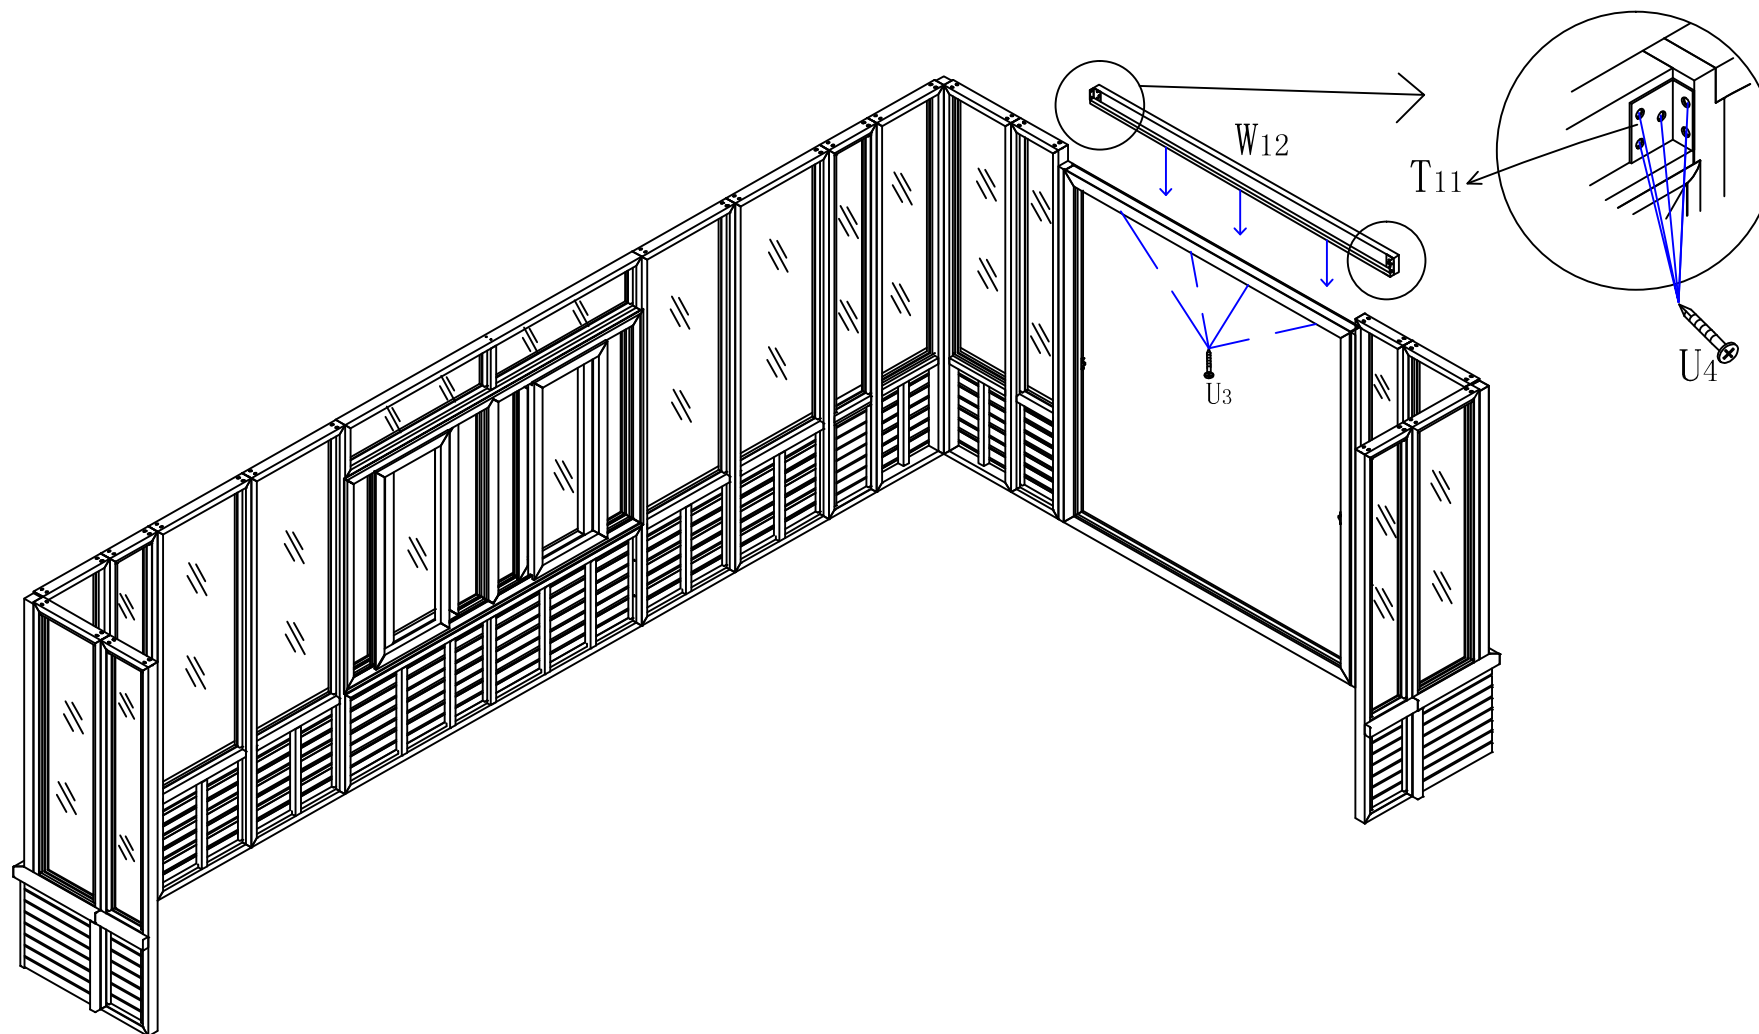


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#9

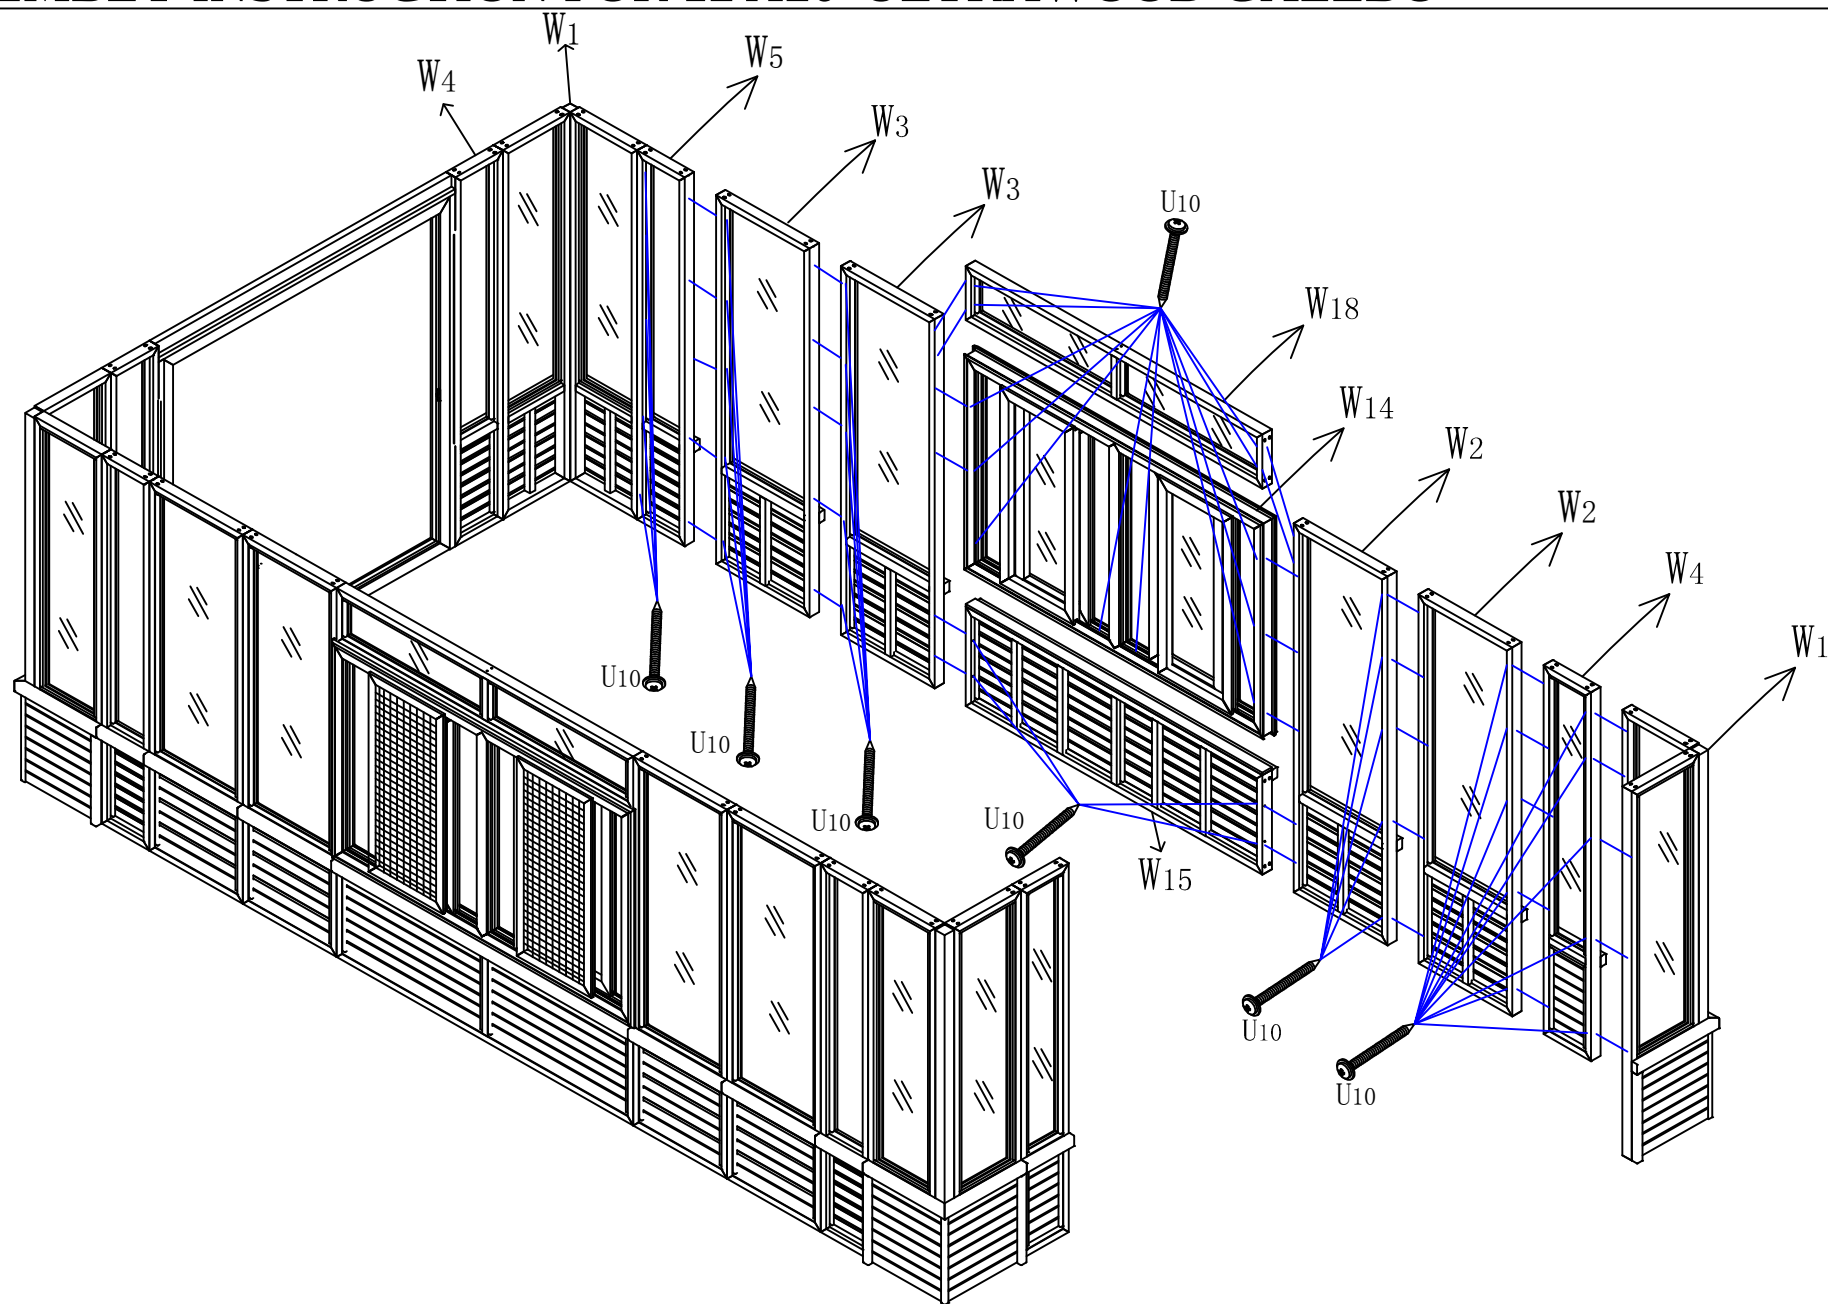


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#10

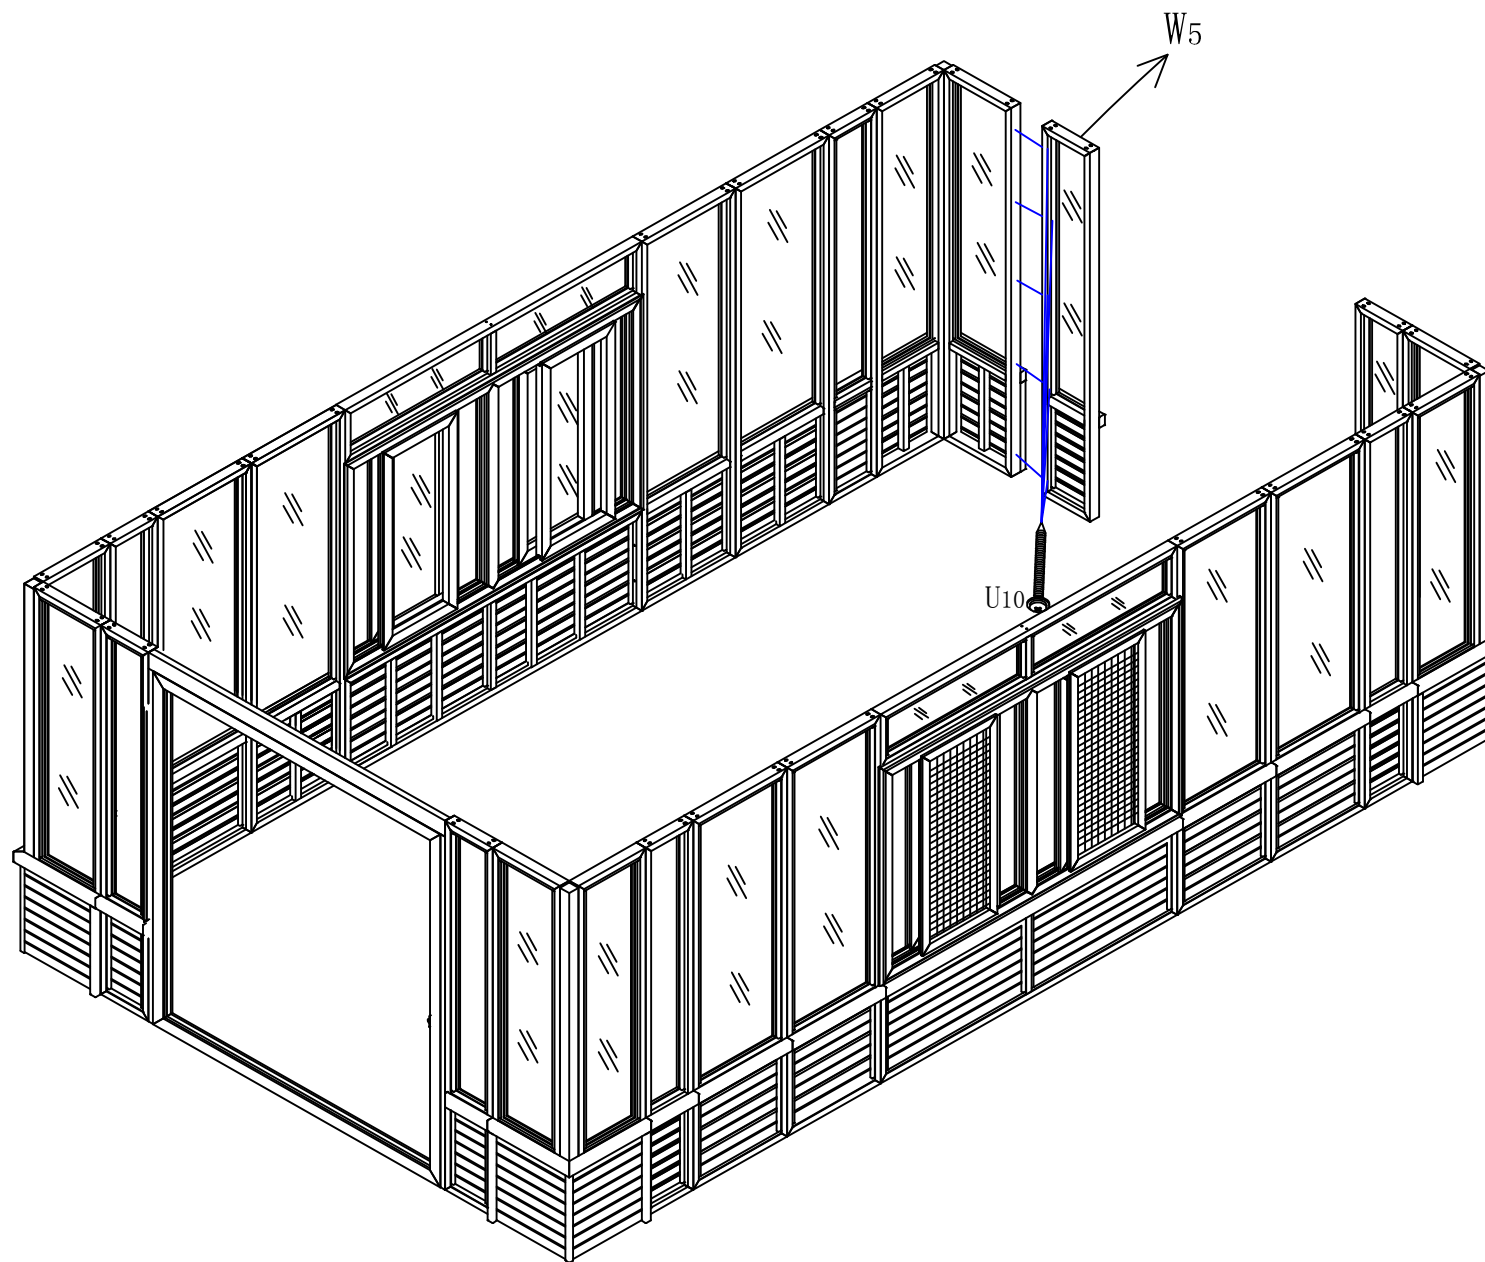


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#11

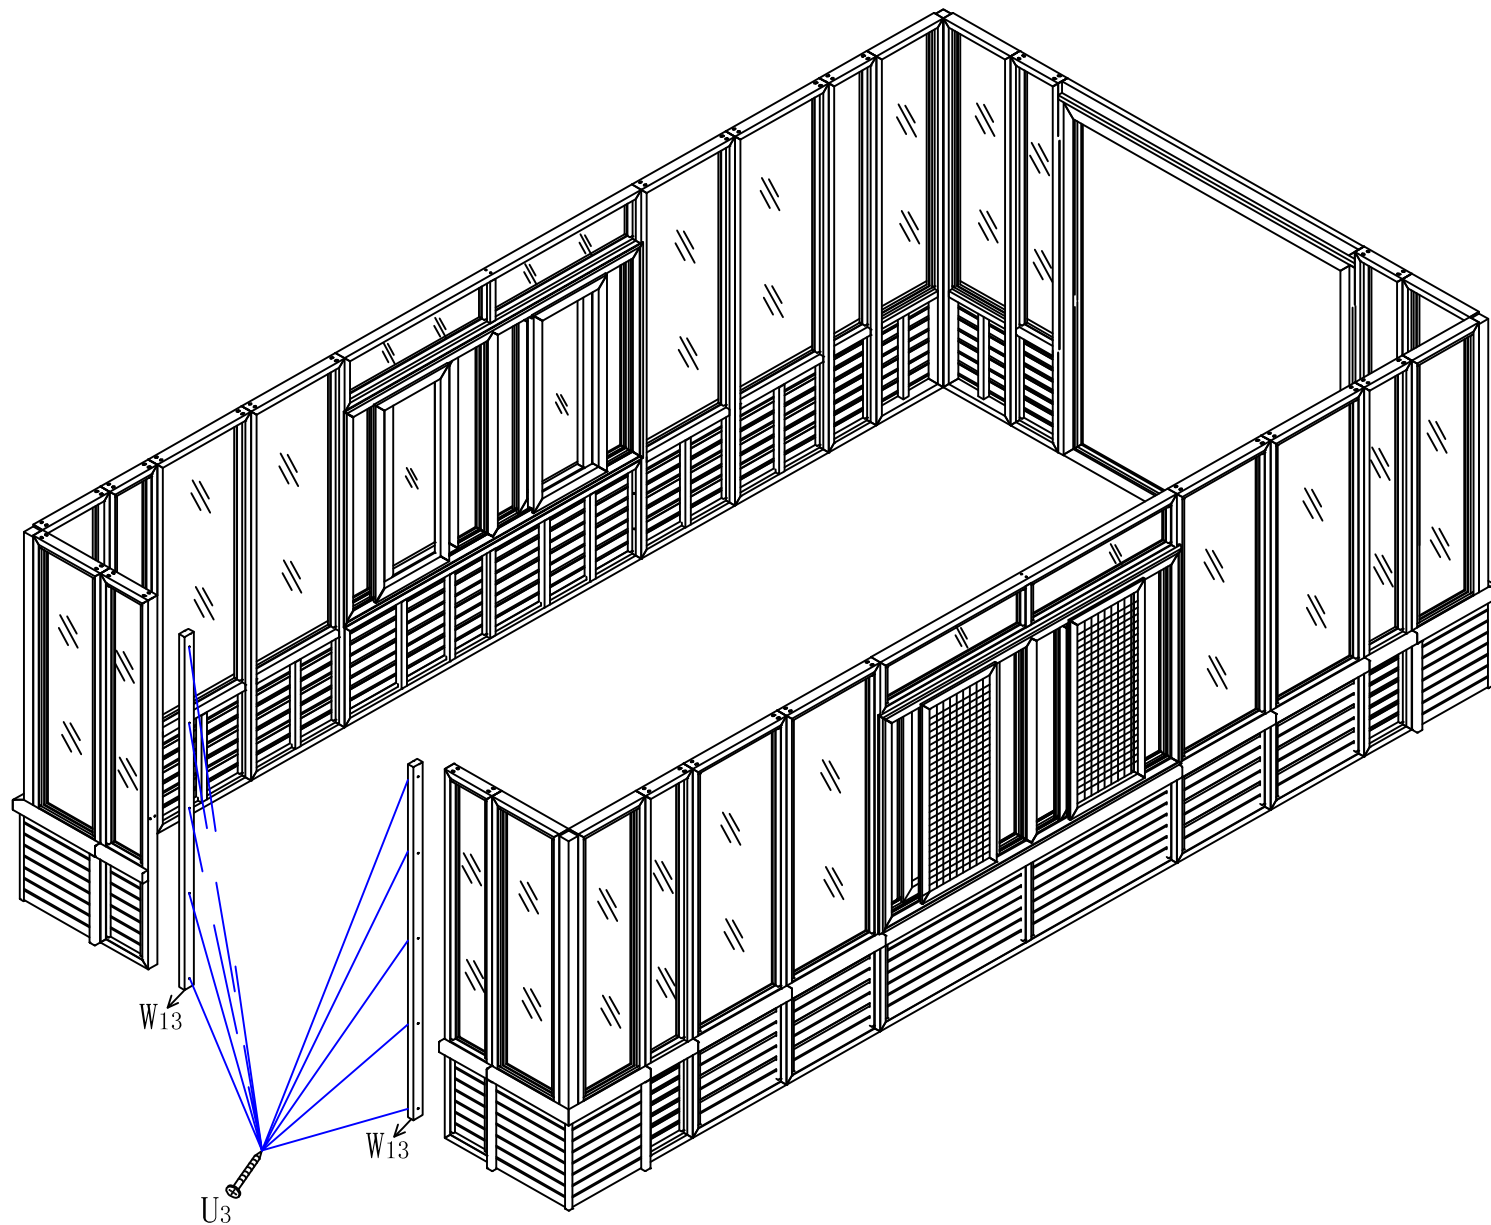


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#12

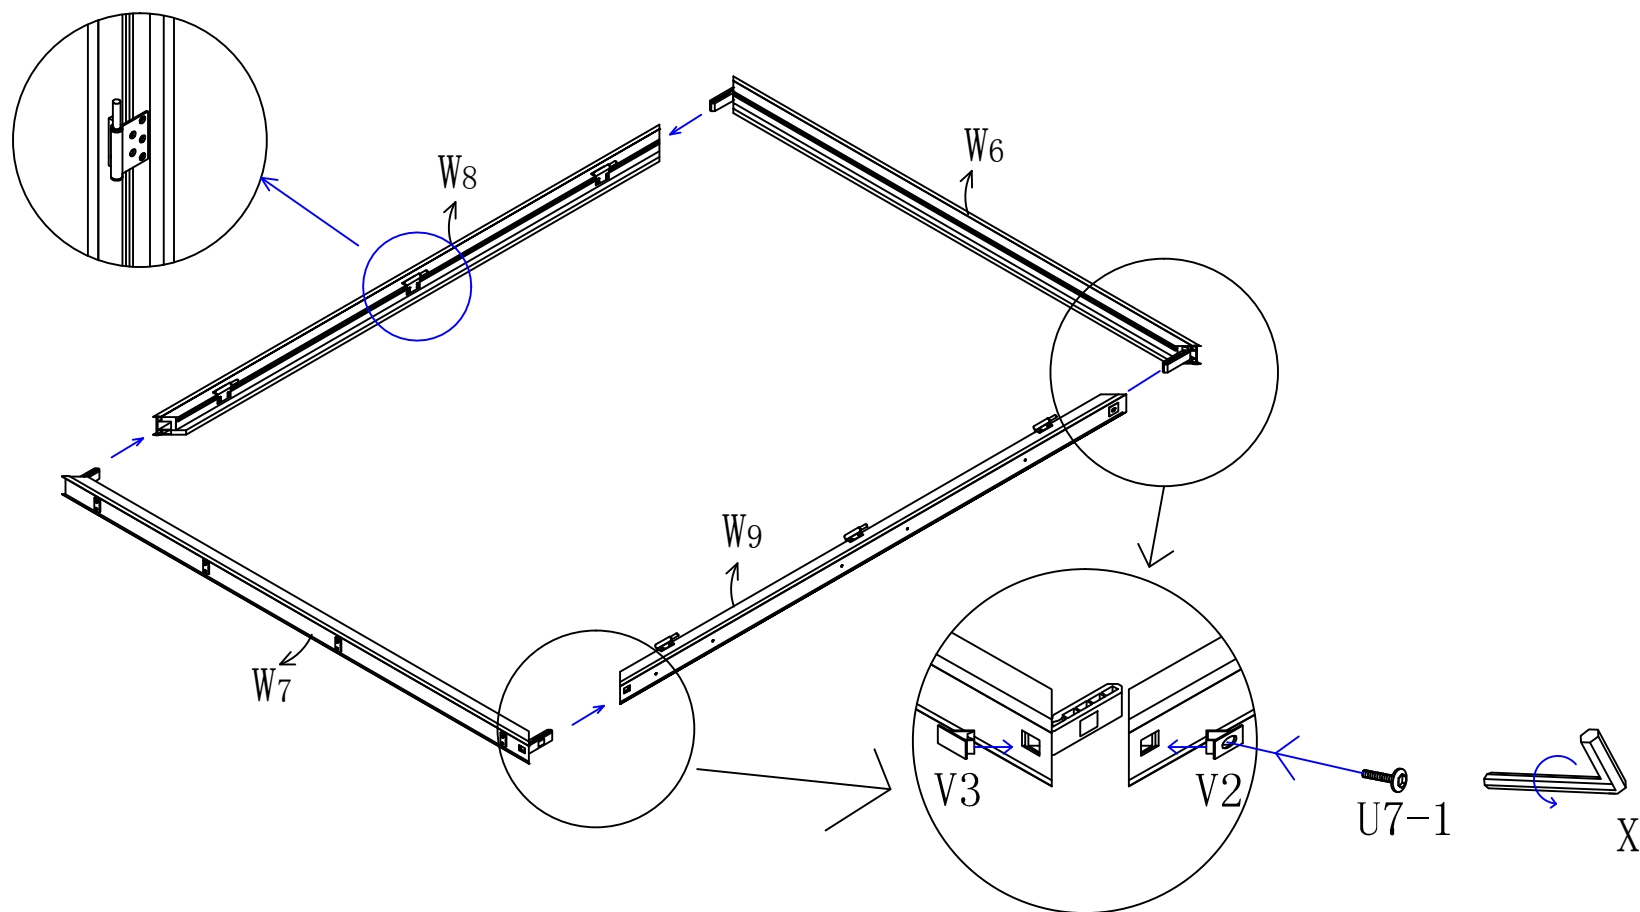


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#13

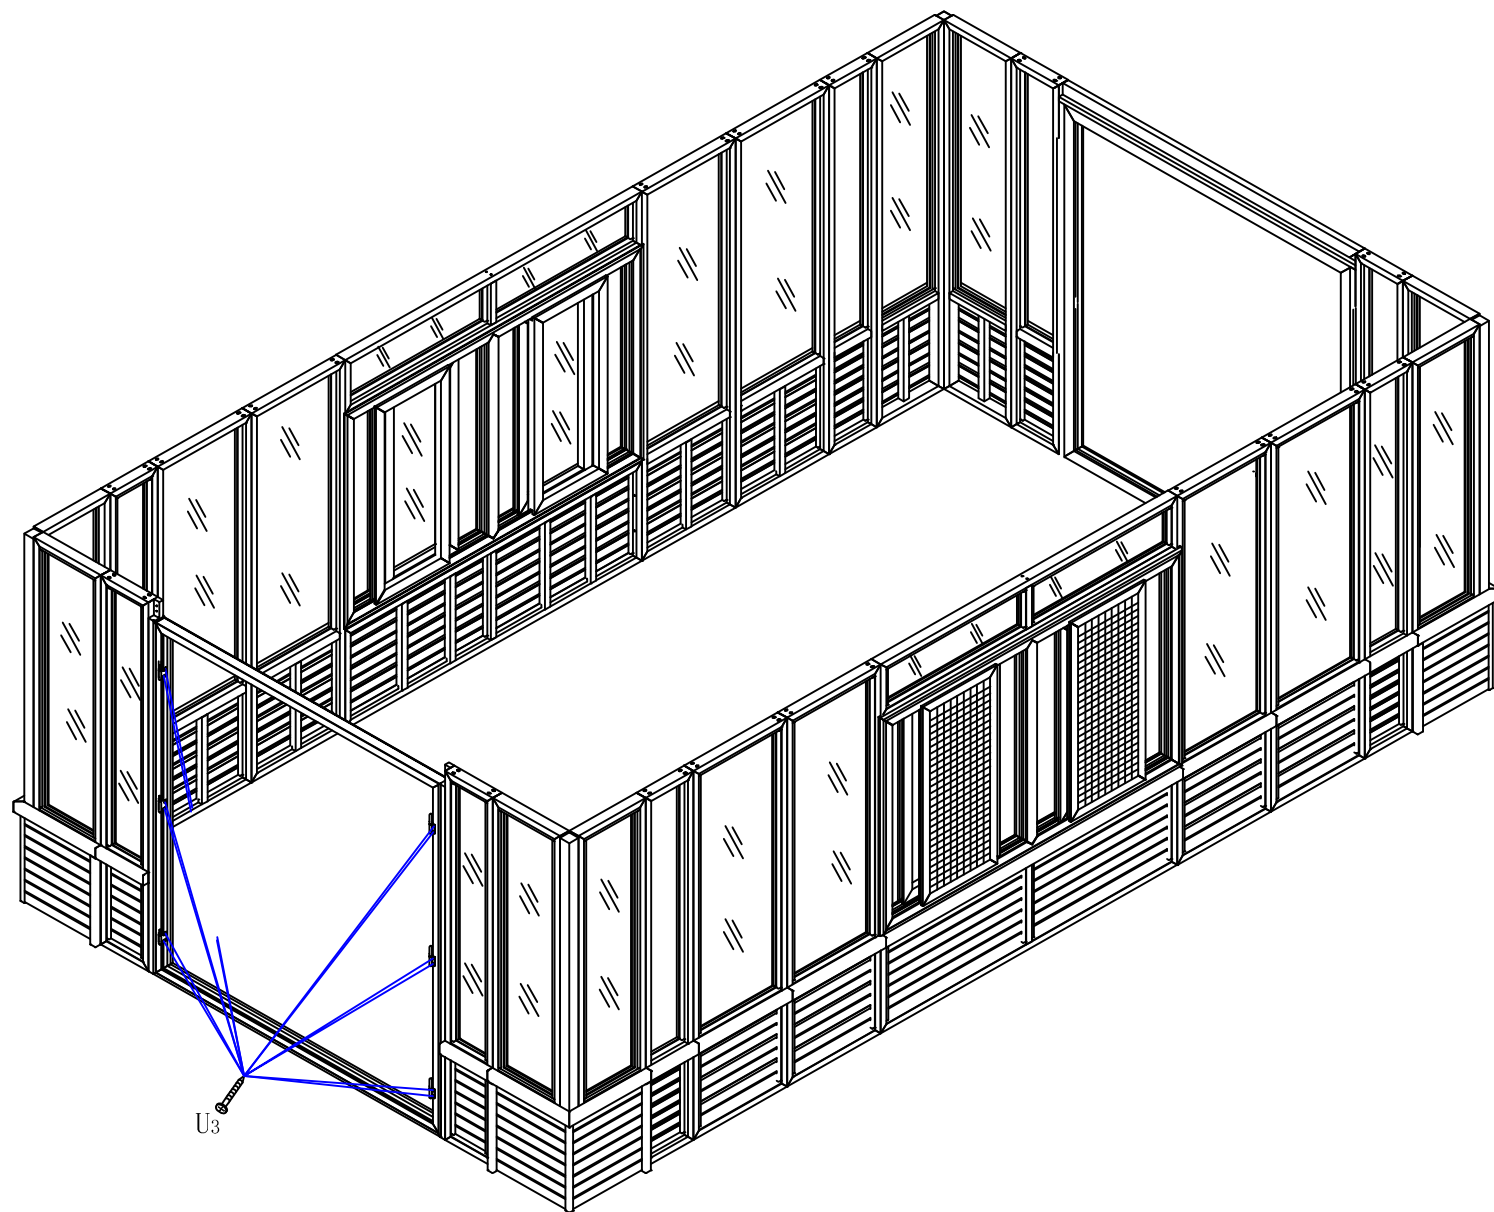


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#14

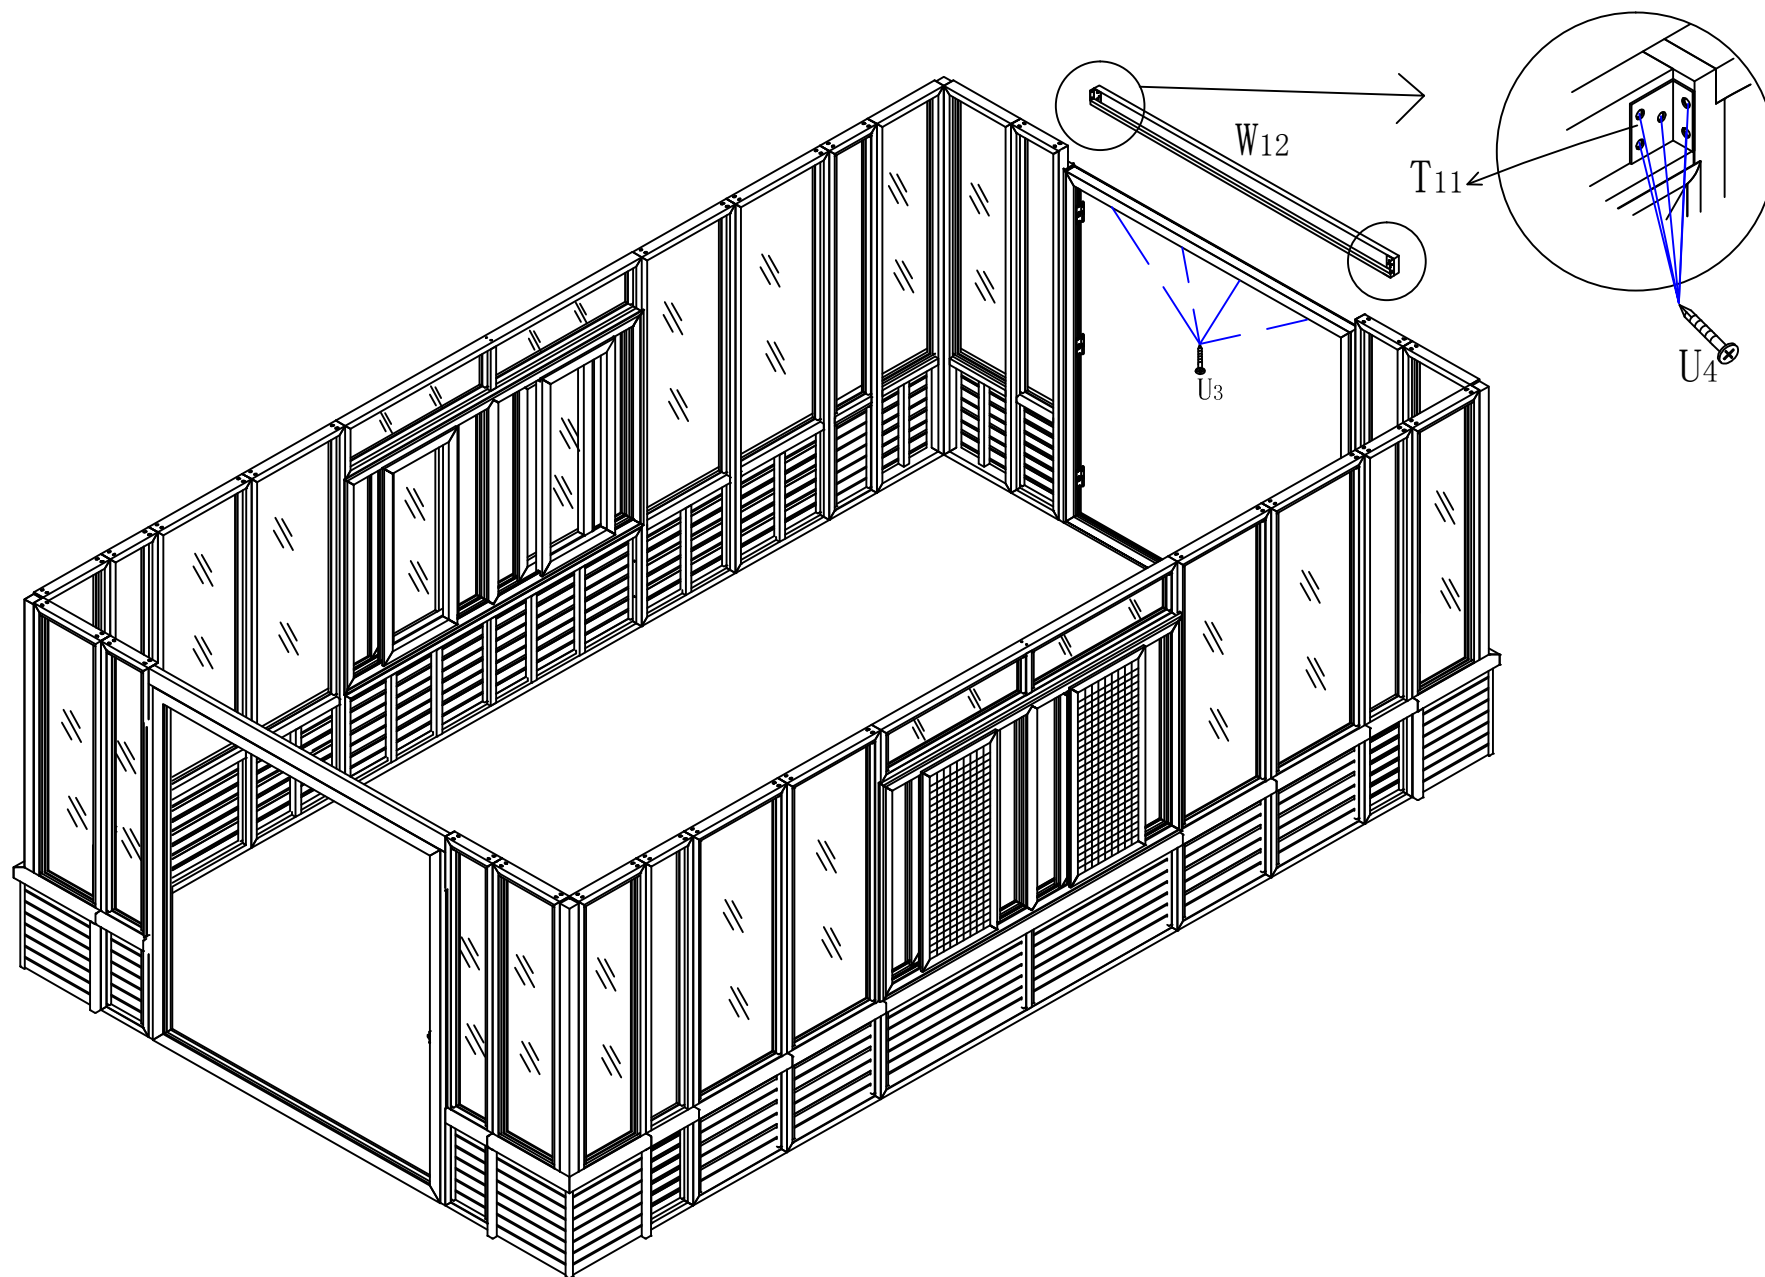


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#15

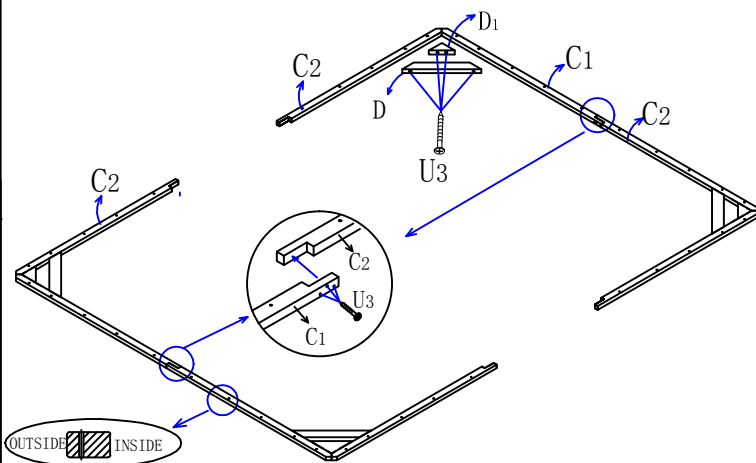


#16

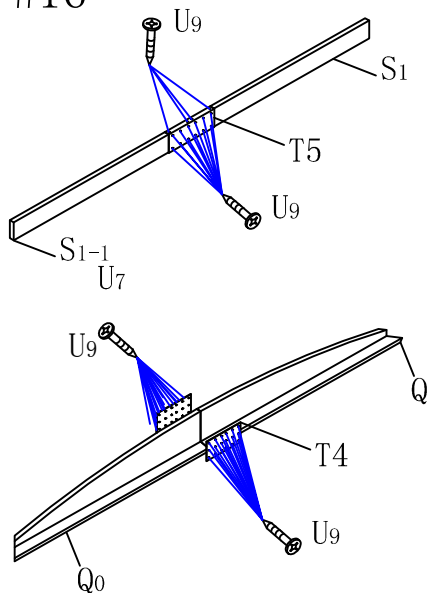


#17

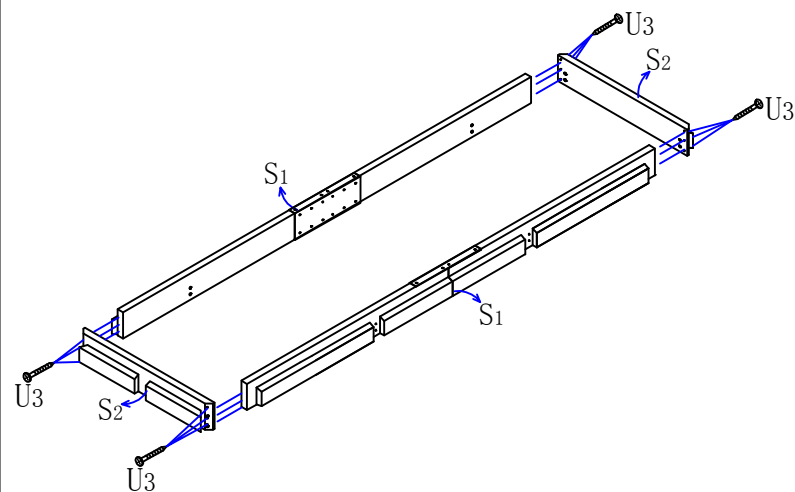

#18

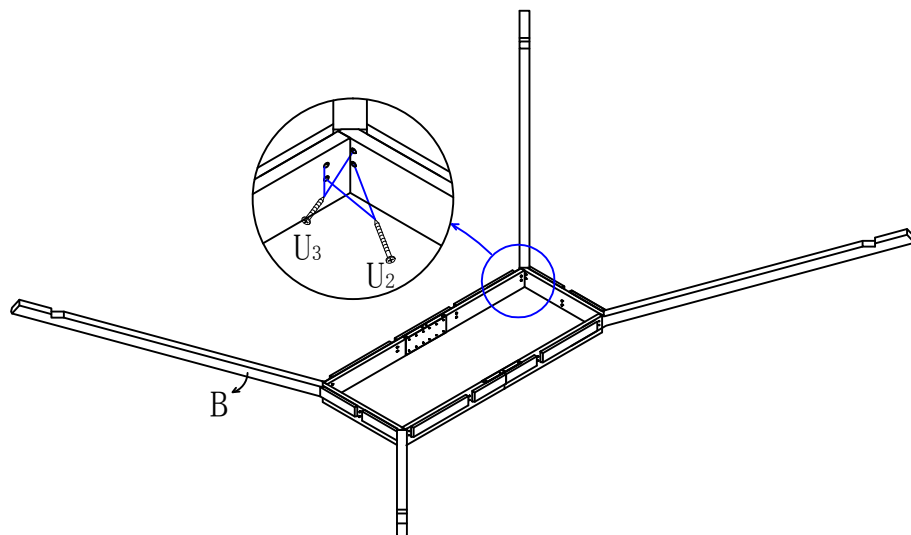


#19

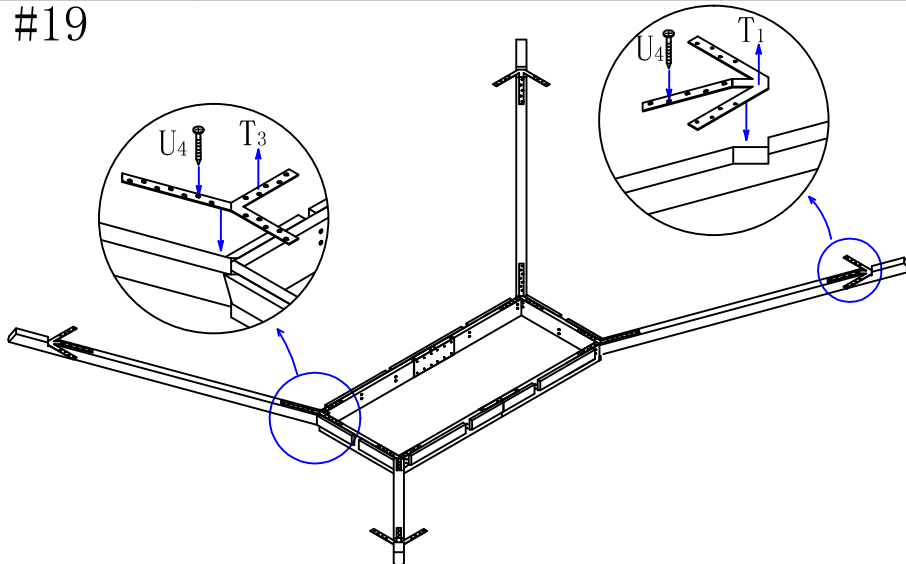


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#20

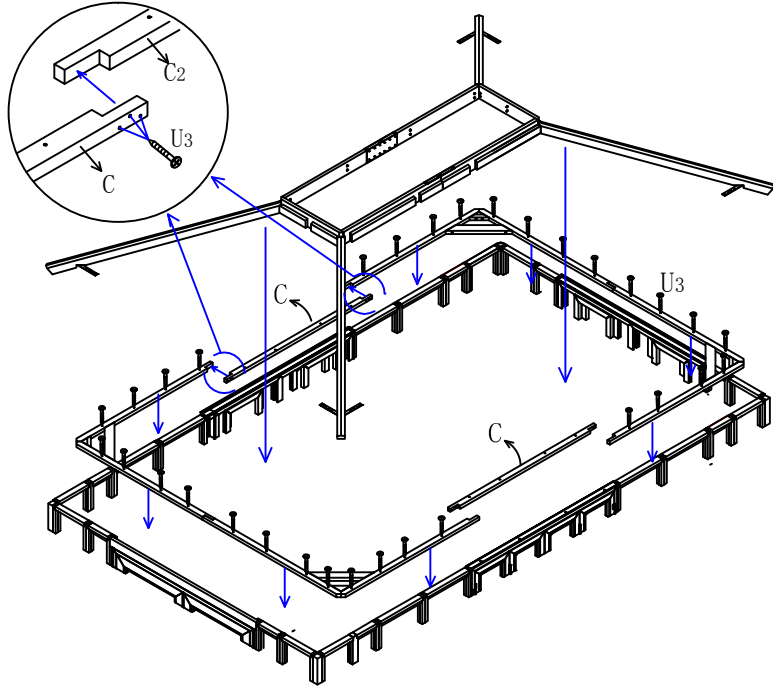


#21

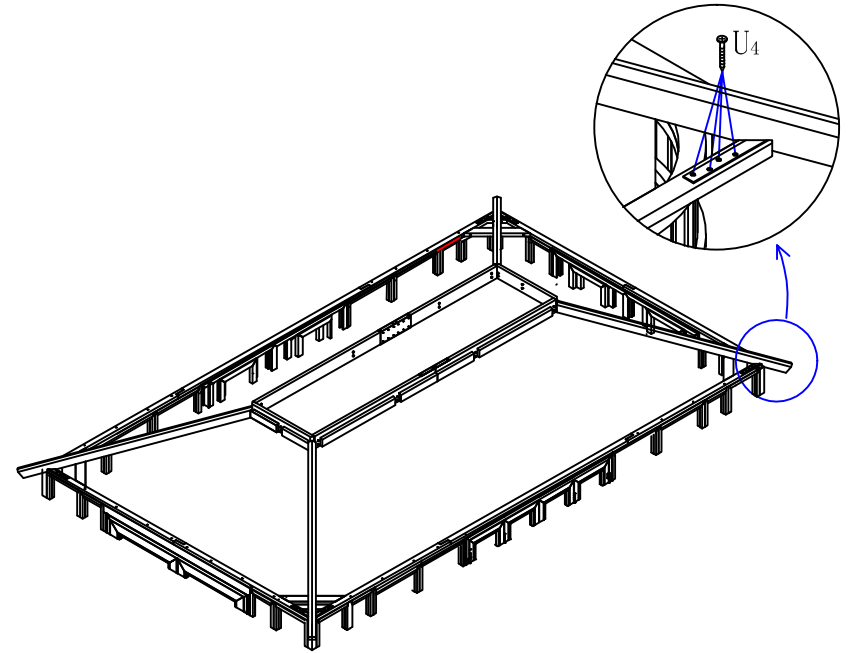

#22

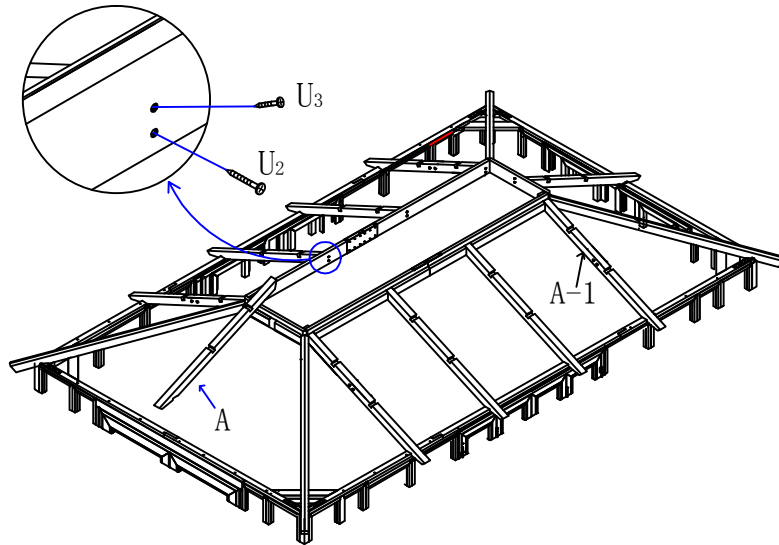


#23

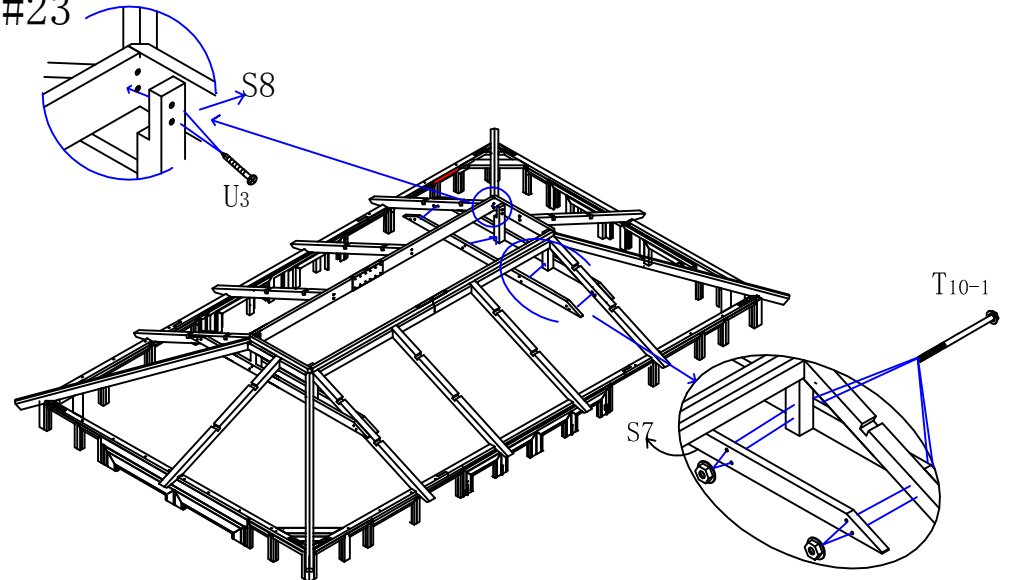


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#24

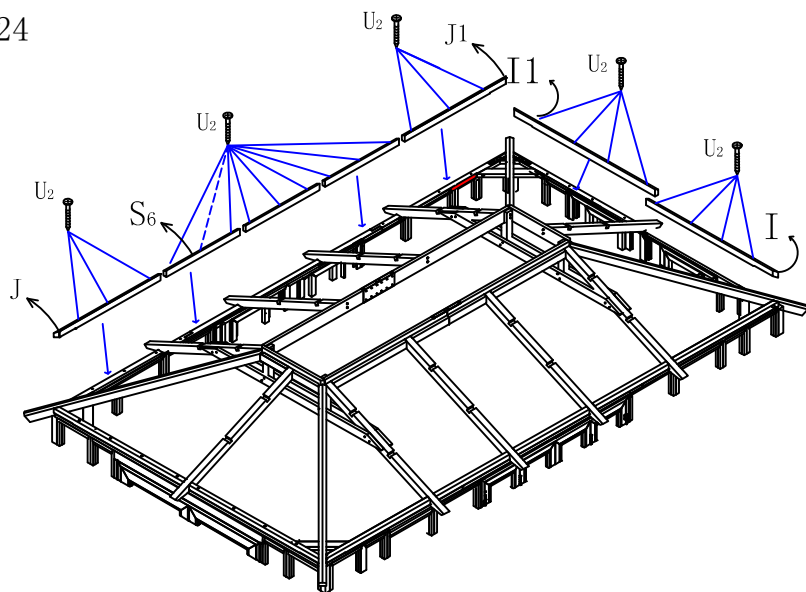


#25

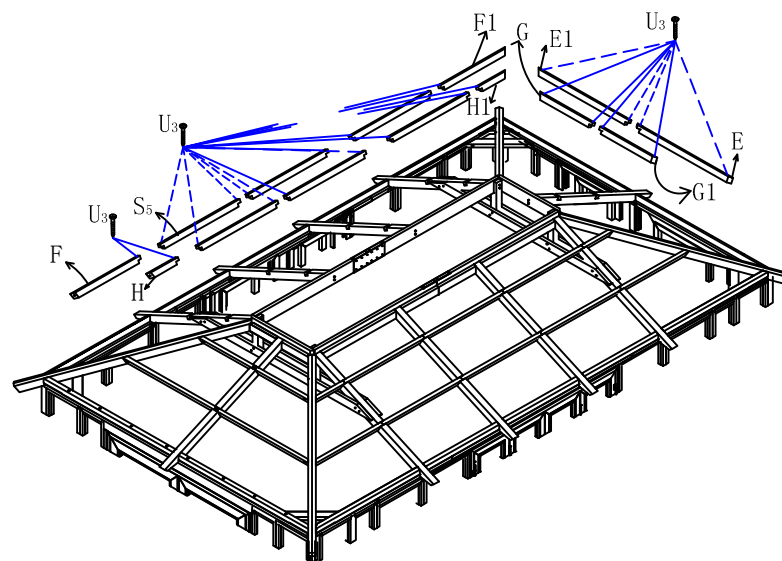

#26

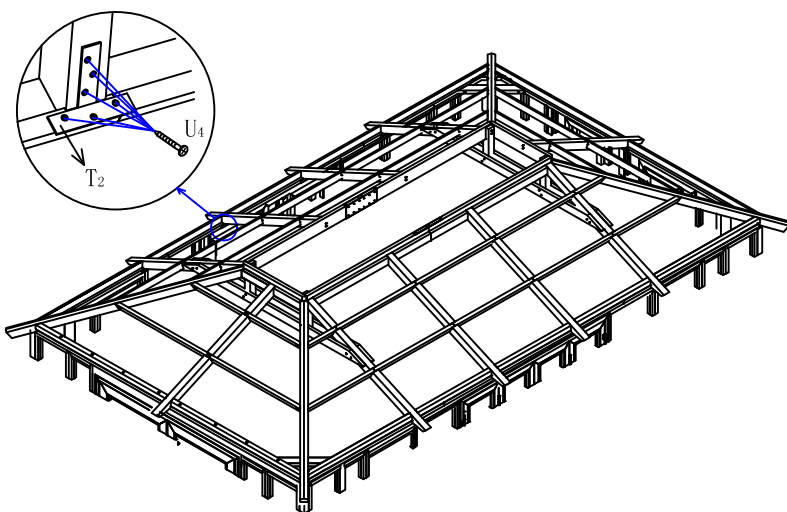


#27

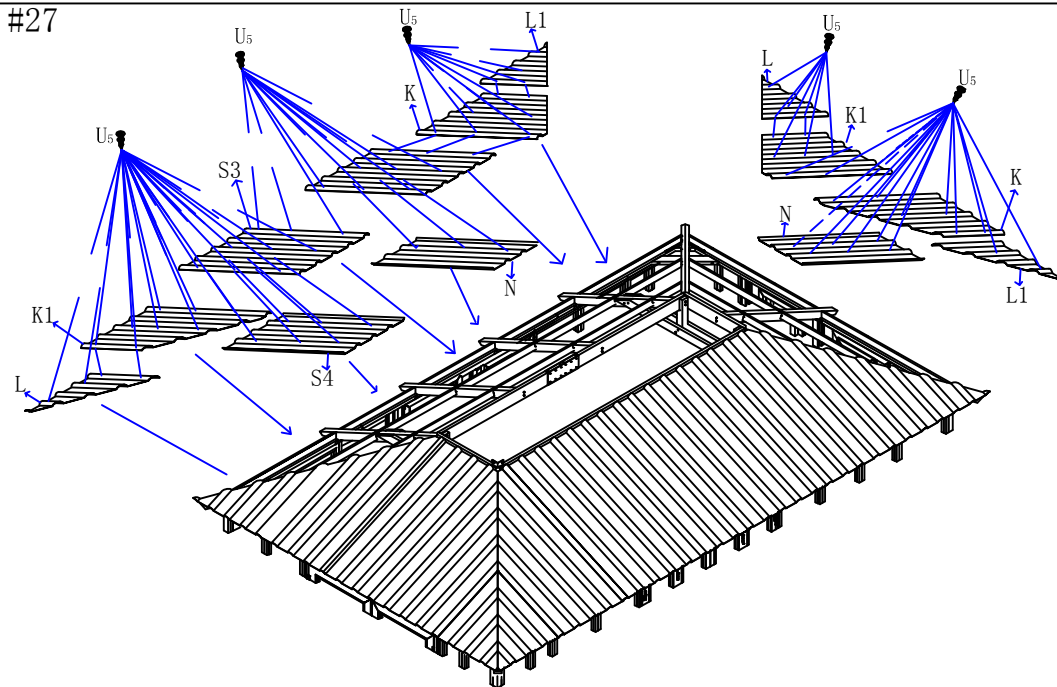


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#28

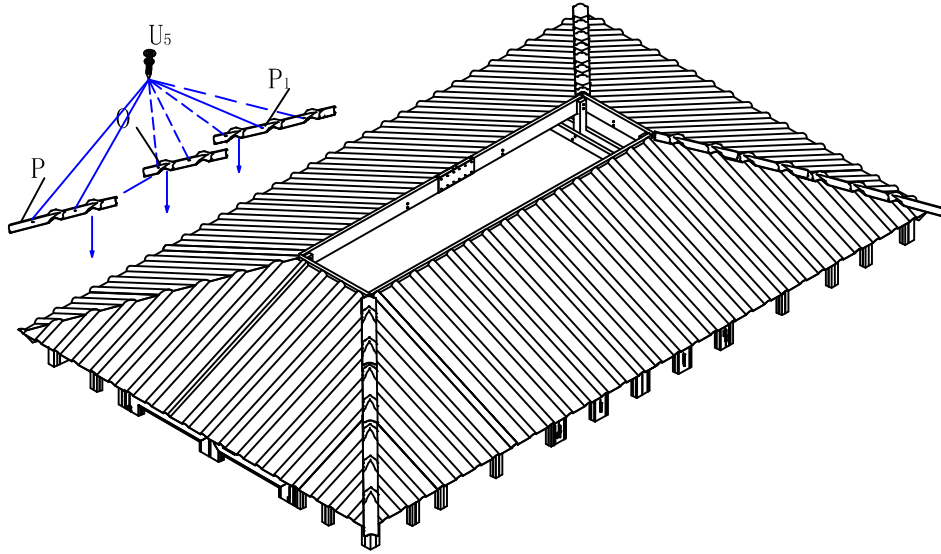


#29

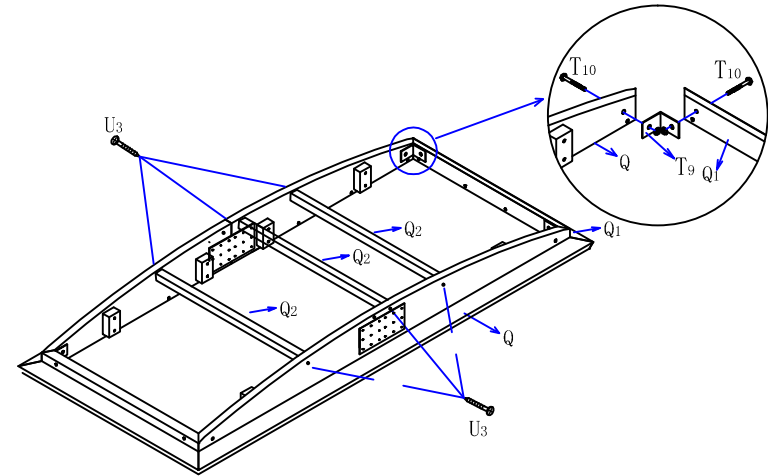

#30

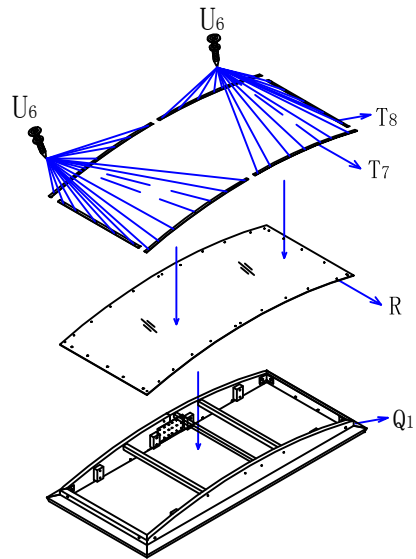


#31


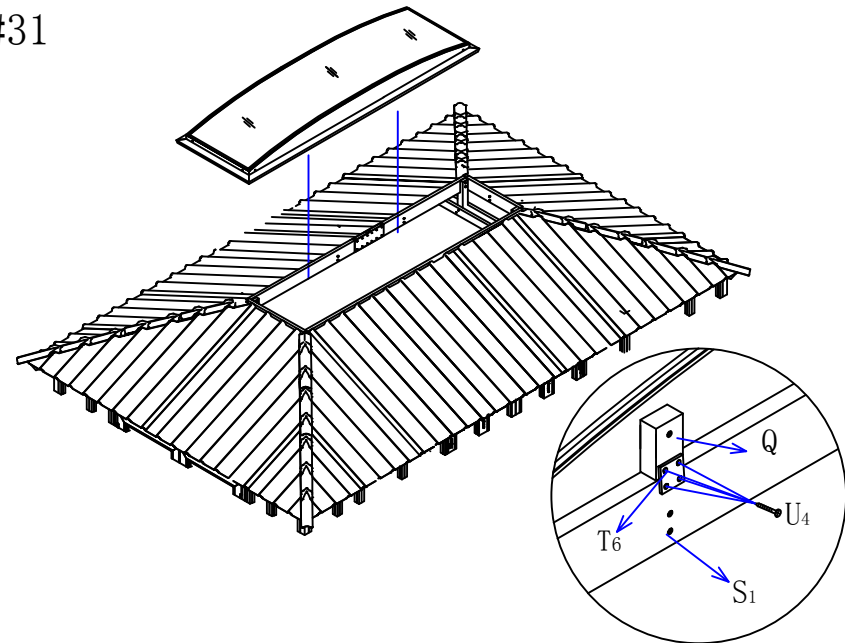


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#32

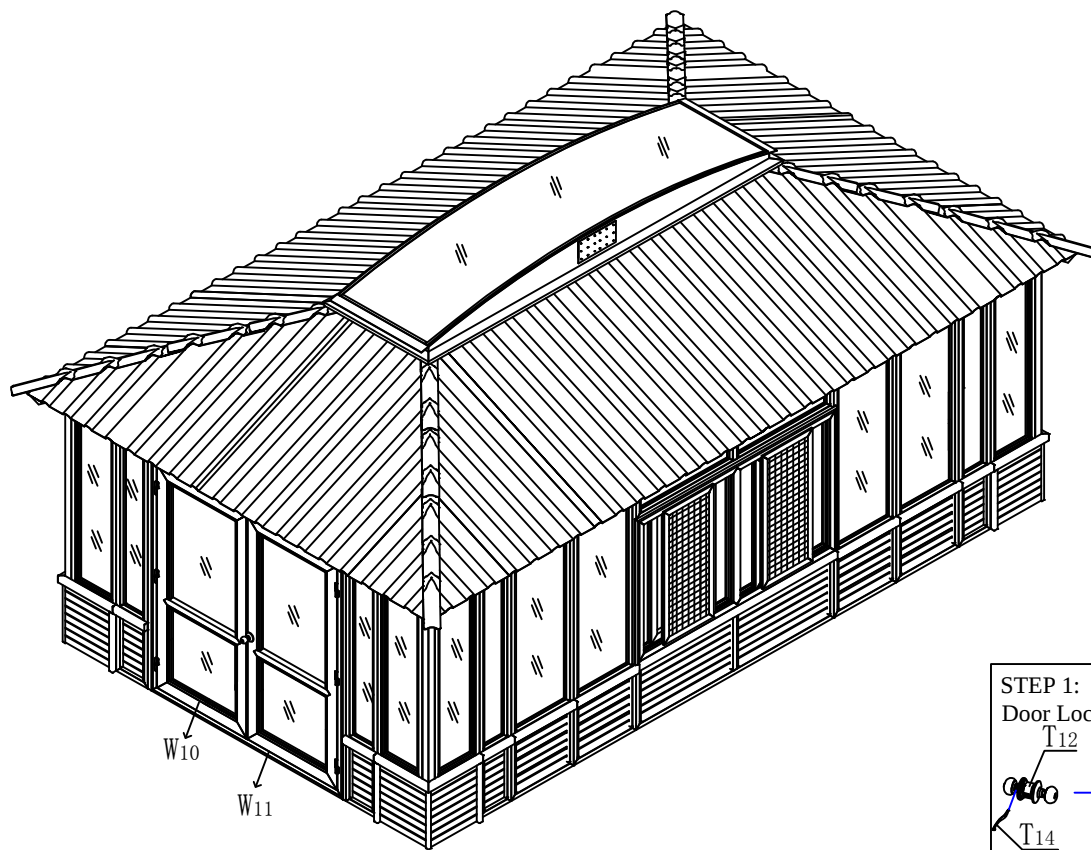


Install shims for smooth operation.

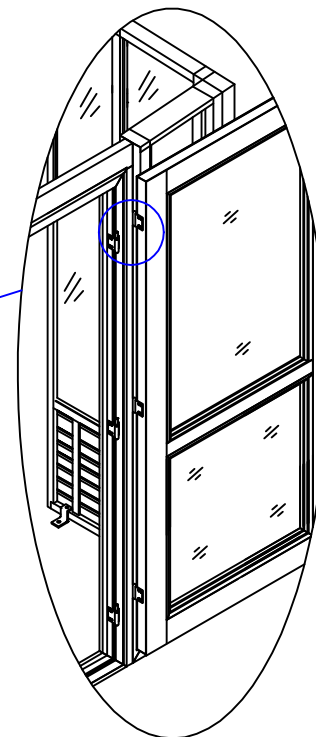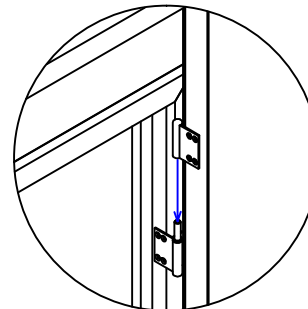


Install handle /lock assembly


STEP 1:
Door Lock Installation.

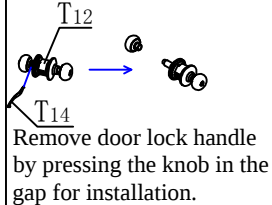


STEP 2:
Remove door lock cover ring and inner lock ring.




STEP 3: Door Lock Handle Installation.

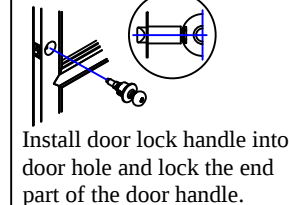


STEP 4: Install door lock inner ring with screw that shown.



STEP 5: Door Lock Cover Ring Installation.




STEP 6: Door Lock Handle Installation.


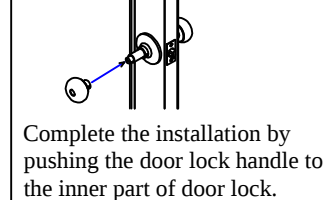


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#33

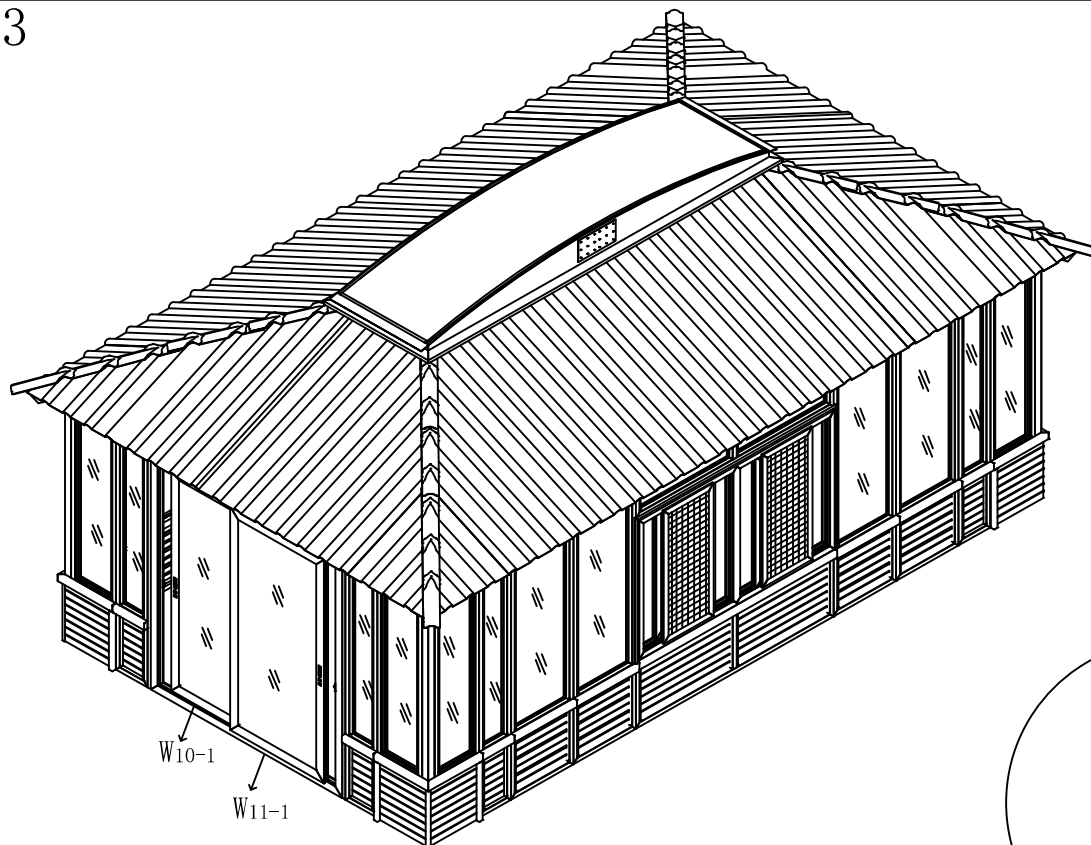


Install handle / lock assembly as shown

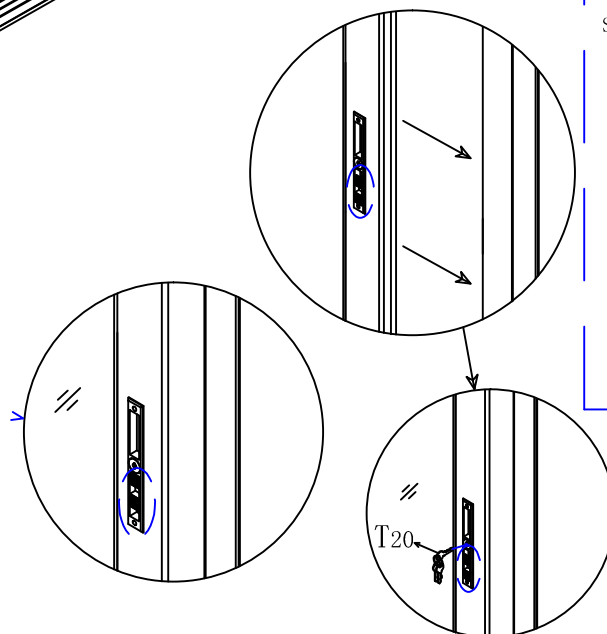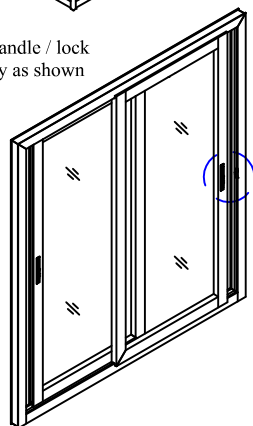

STEP:1

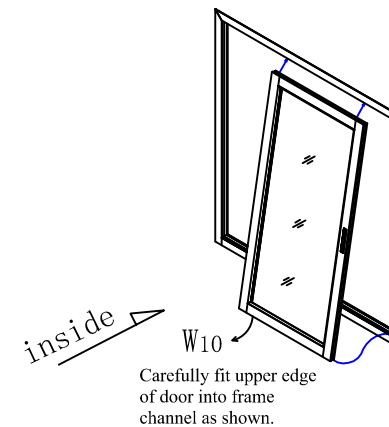

STEP:2

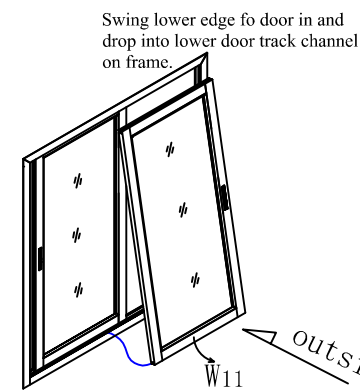

NOTE: Lock the door by turning the key to left after you push the lock button upward.

