


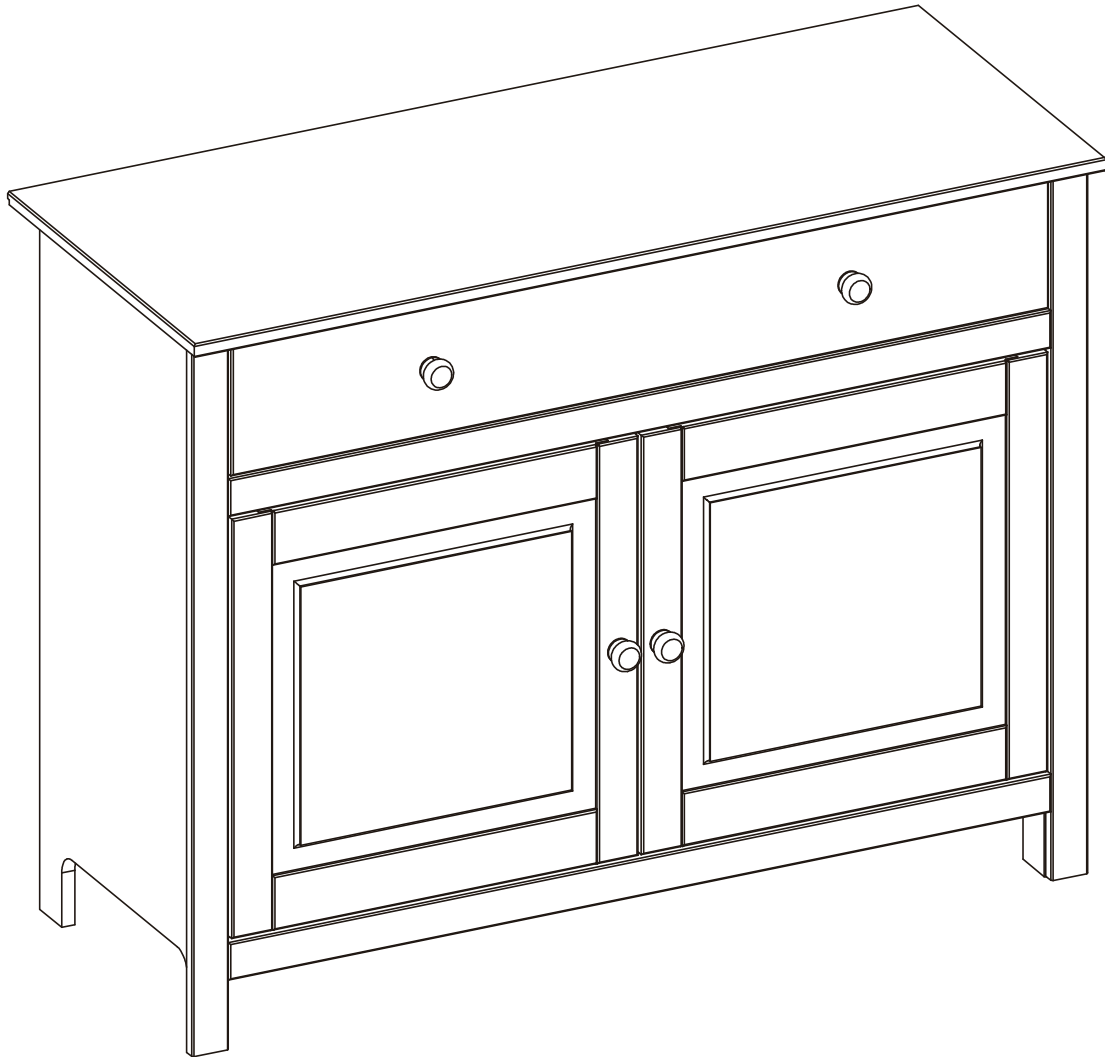
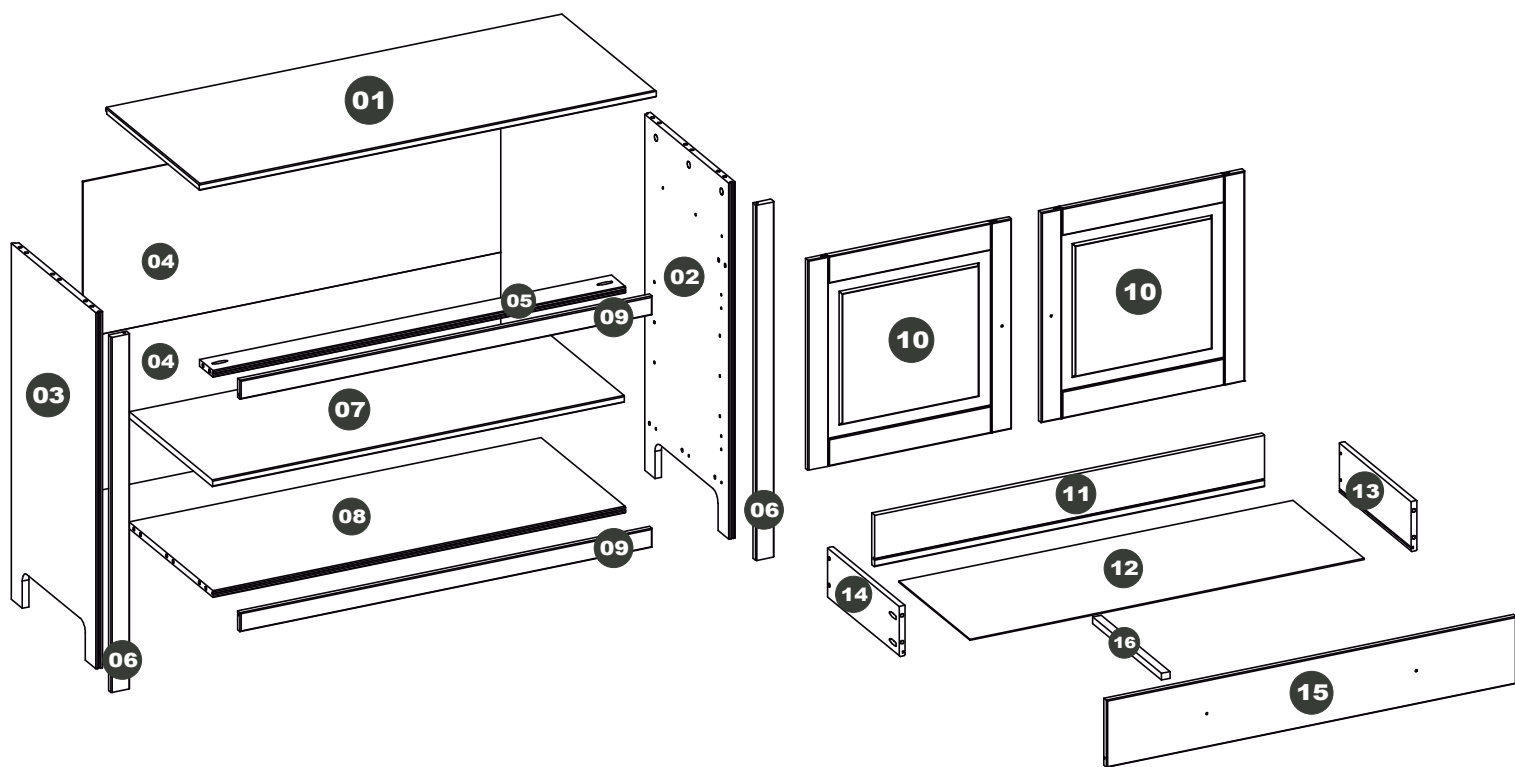



2 DOOR 1 DRAWER SIDEBORD

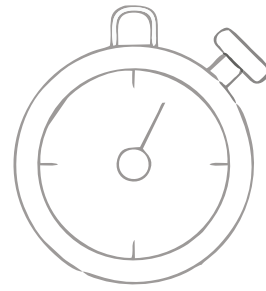


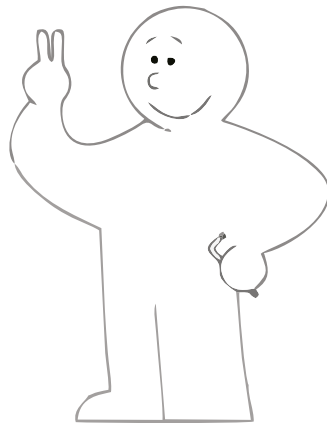


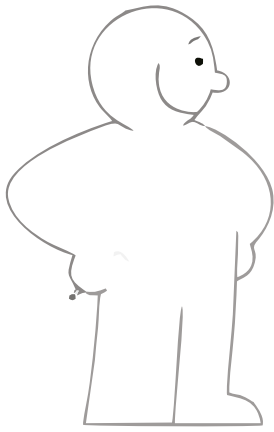


40 Min

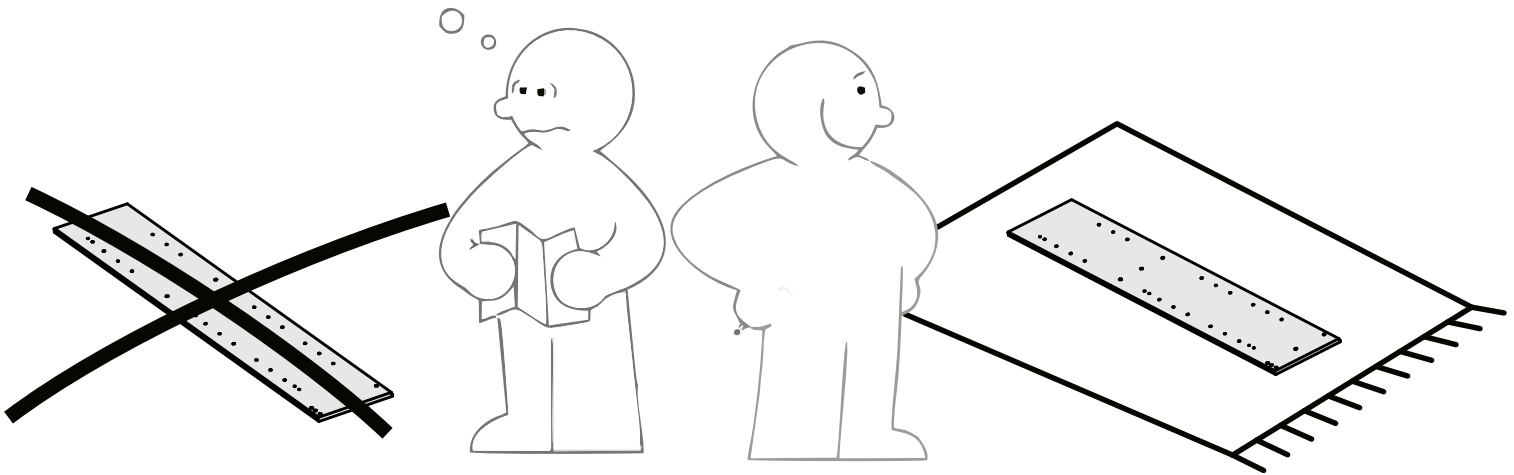

Tools required

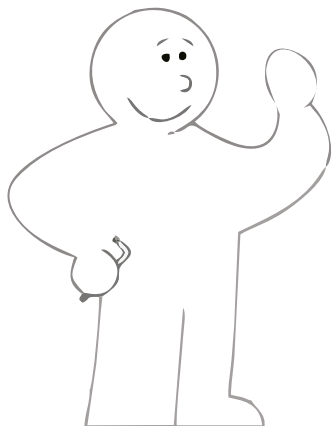


Phillips screwdriver
(medium & large)

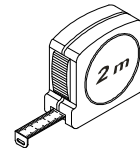











Ruler/tape
measure




Small
hammer




Eye protection
(when using a
hammer or glue)

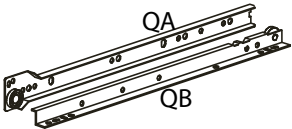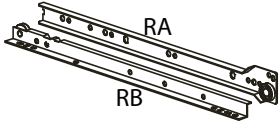
A	 8x30mm	20	B	 4,0x40mm	04
C		01	D		12
E	 4,0x16mm	17	F		26
G		04	H		04
I		04	J		04
K		01	L		02
M		12	N		12
O	 6,0x10mm	06	P	 3,0x16mm	06
Q	 QA QB LEFT SET	01	R	 RA RB RIGH SET	01
S	 3,5x30mm	13			


Ruler - Use this ruler to help correctly identify the screws






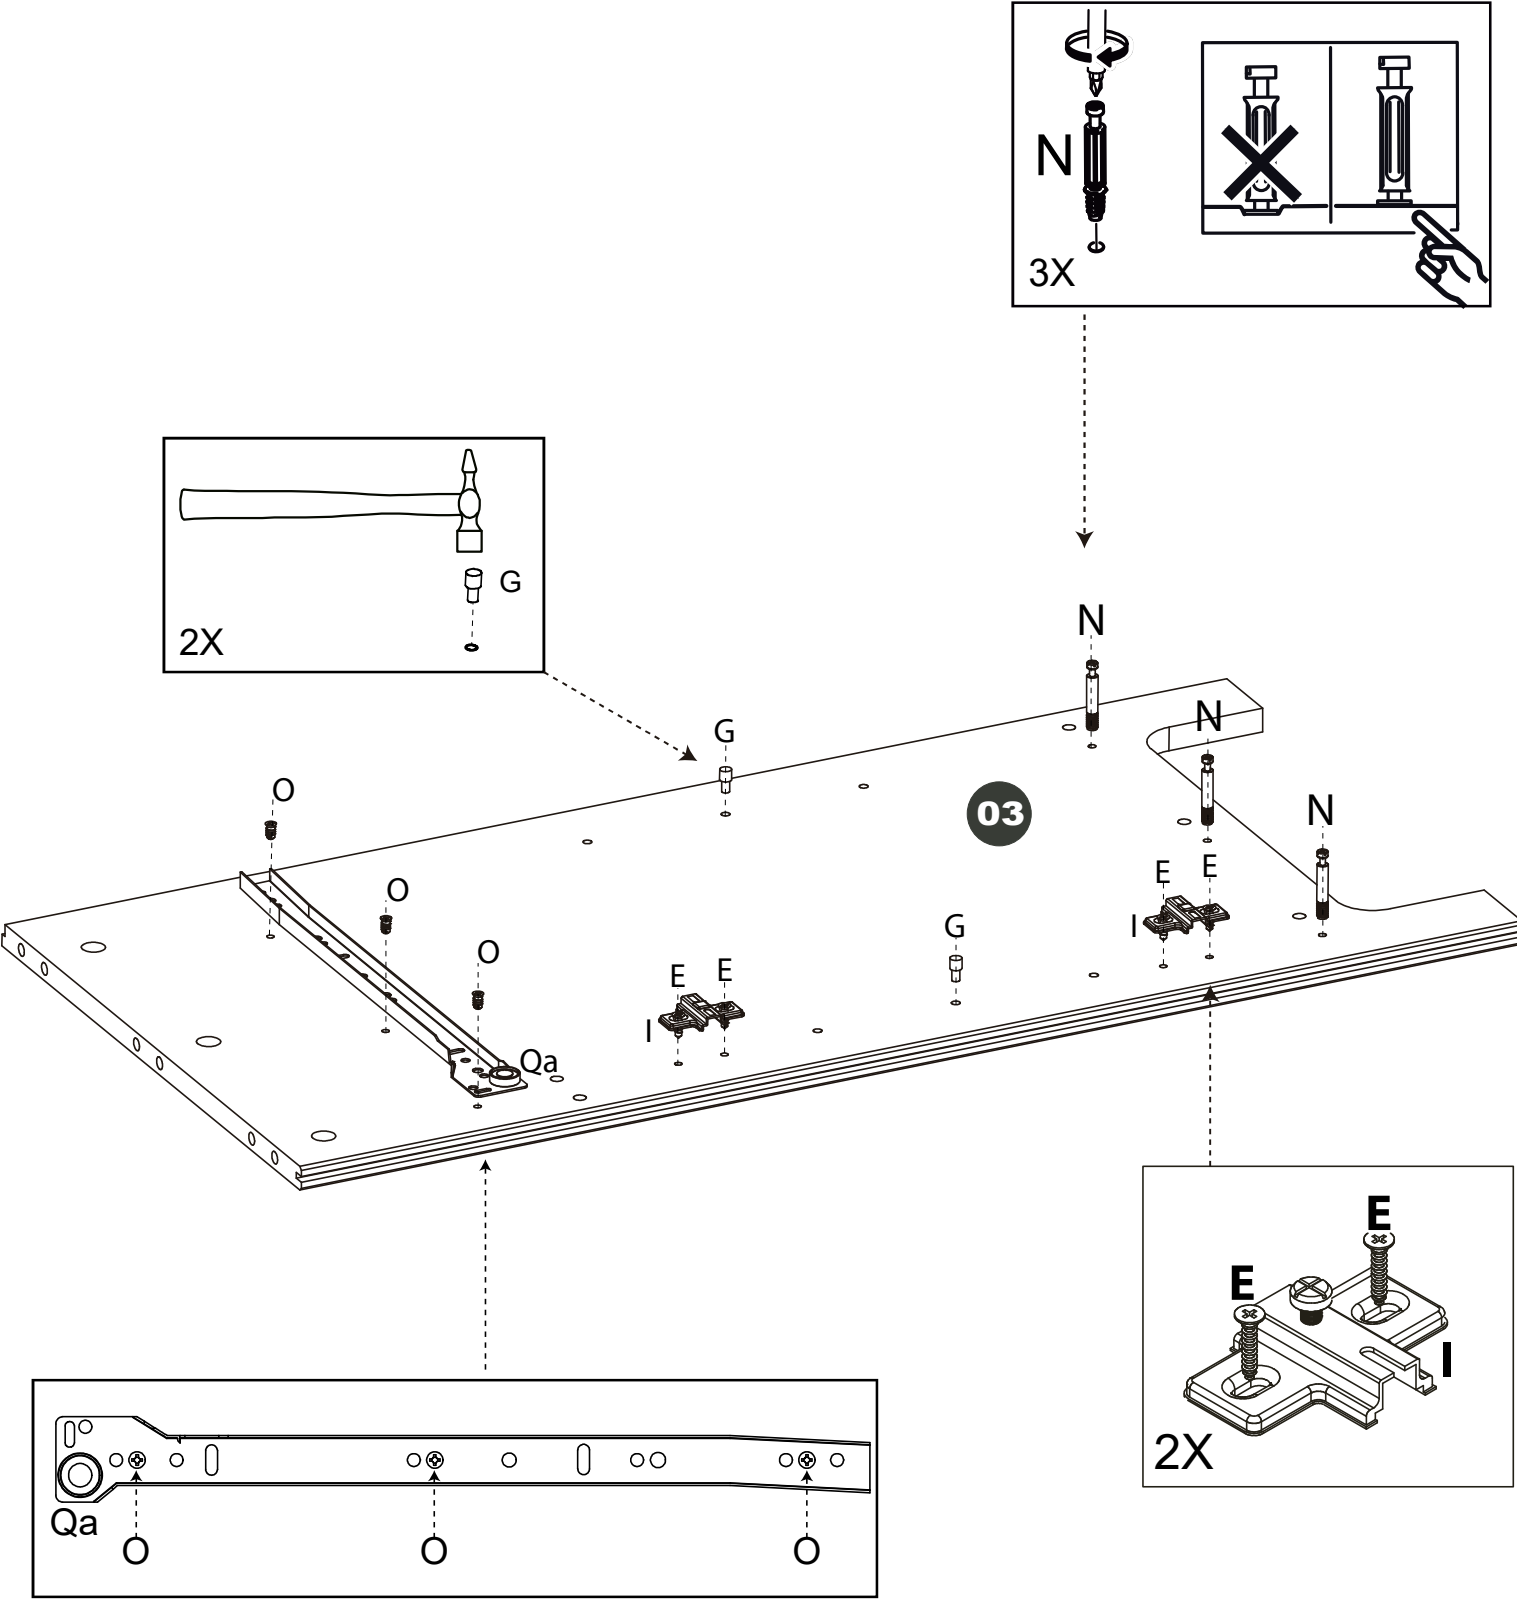


N		03	E	 4,0x16mm	04	G		02	I		02
Q	 Qa Qb LEFT SET	01	O	 6,0x10mm	03						





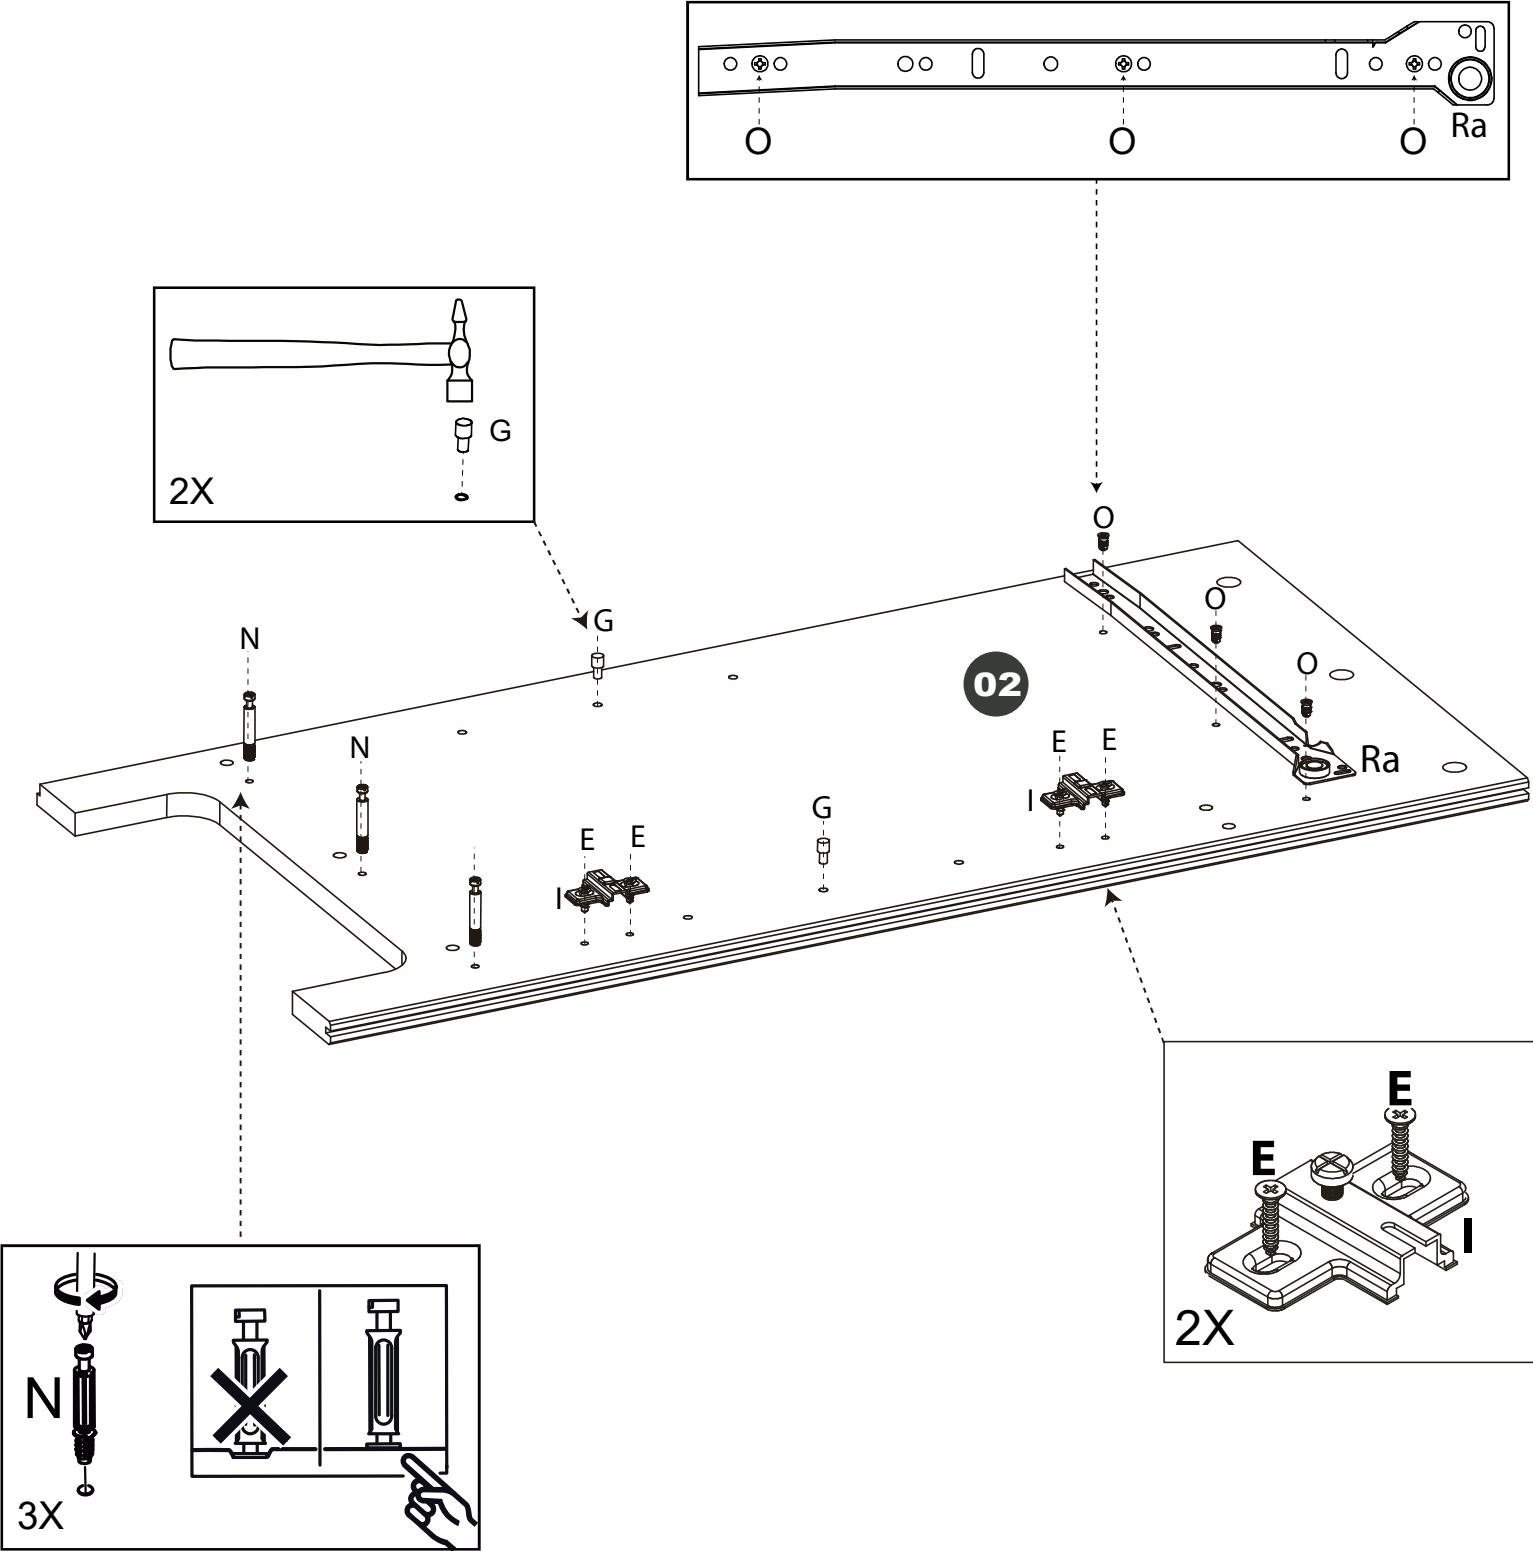


N		03	E	 4,0x16mm	04	G		02	I		02
R	 RIGHT SET	01	O	 6,0x10mm	03						



03

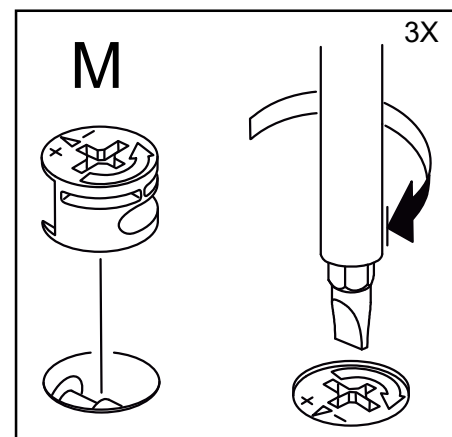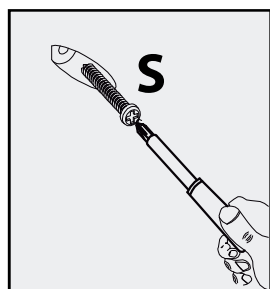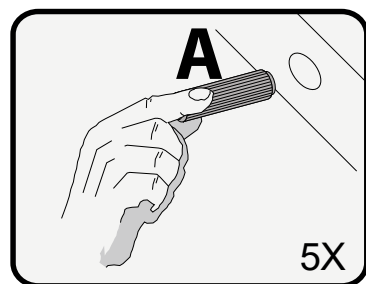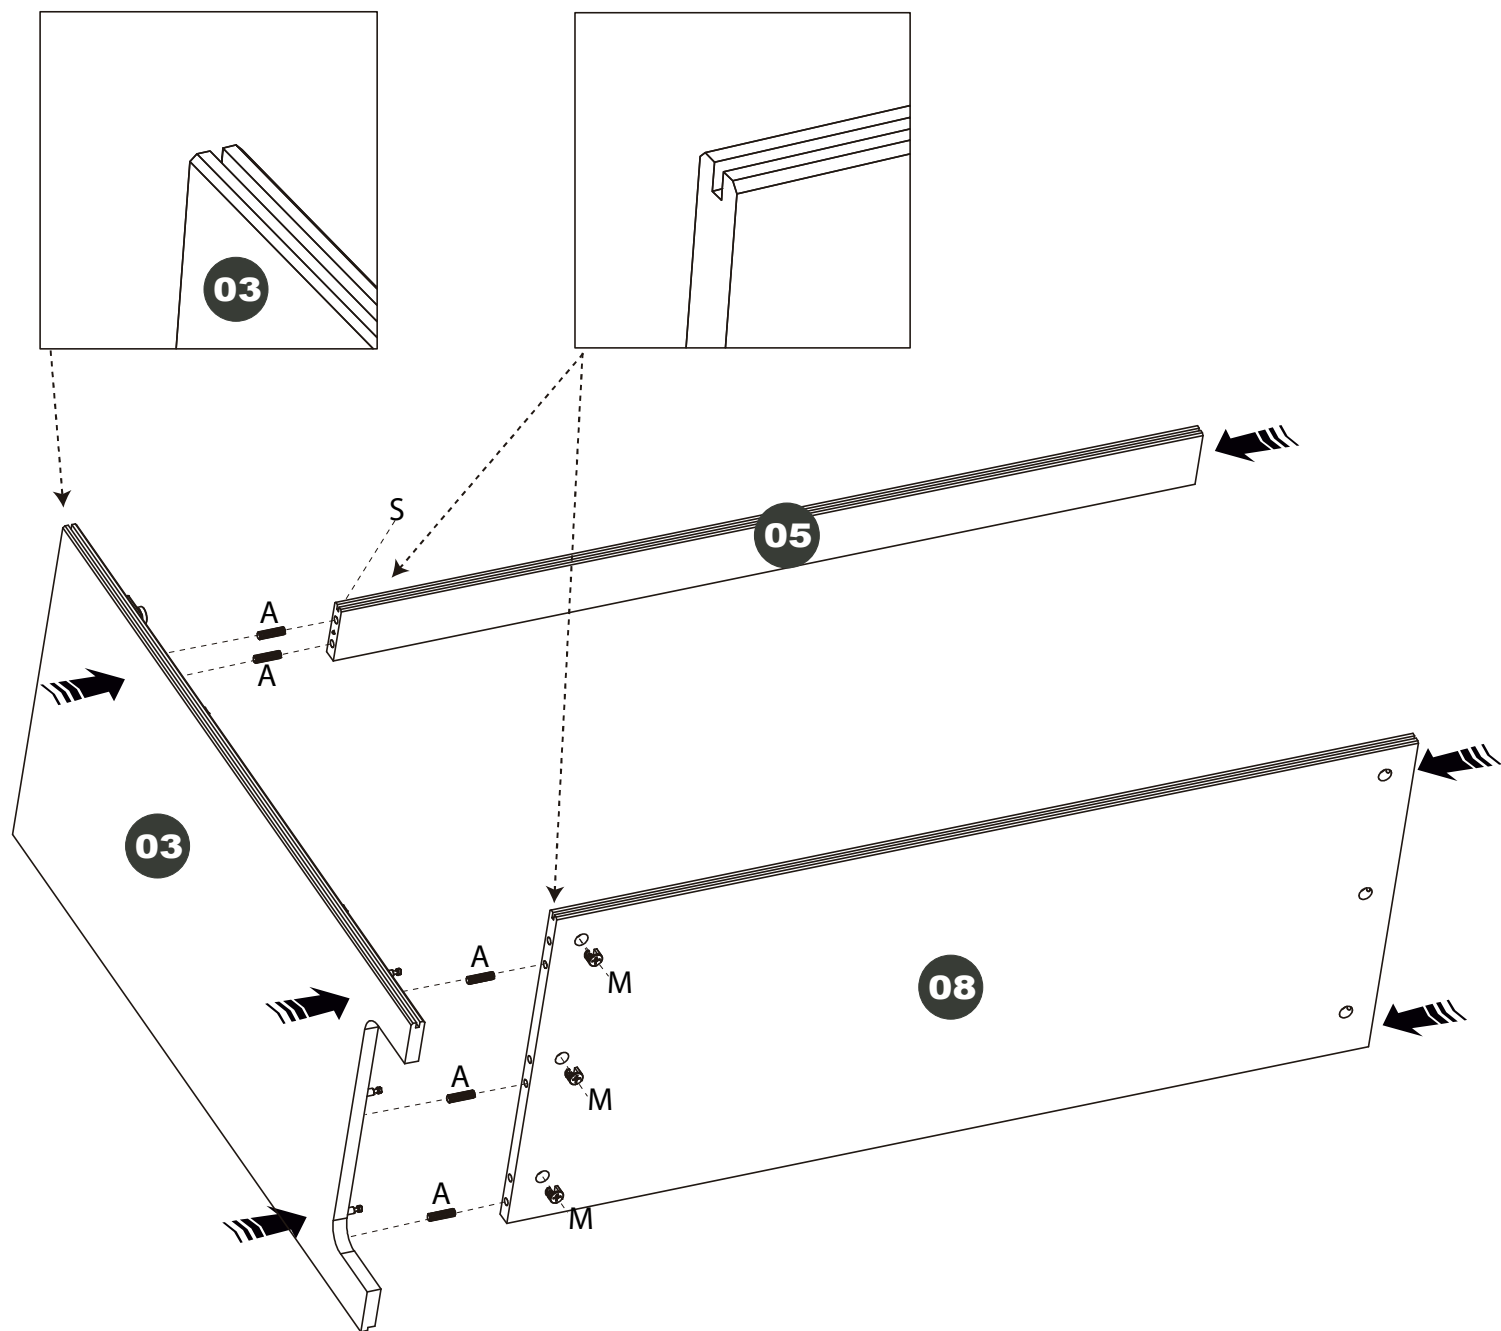



M		03	A		05	S		01
			8x30mm			3,5x30mm		

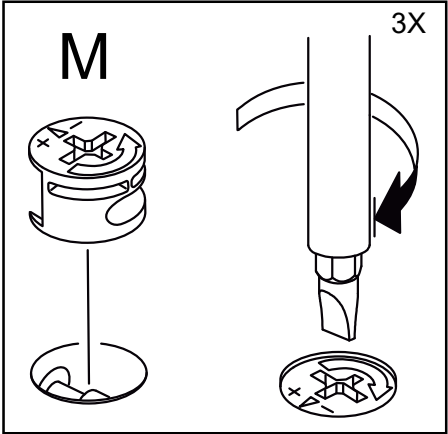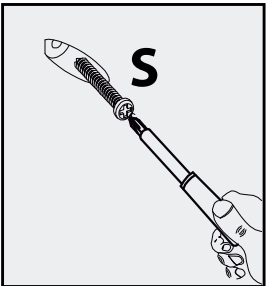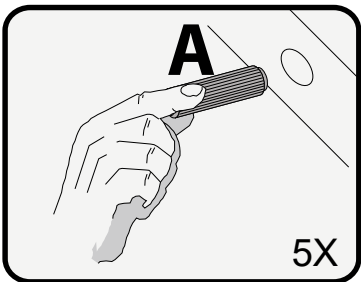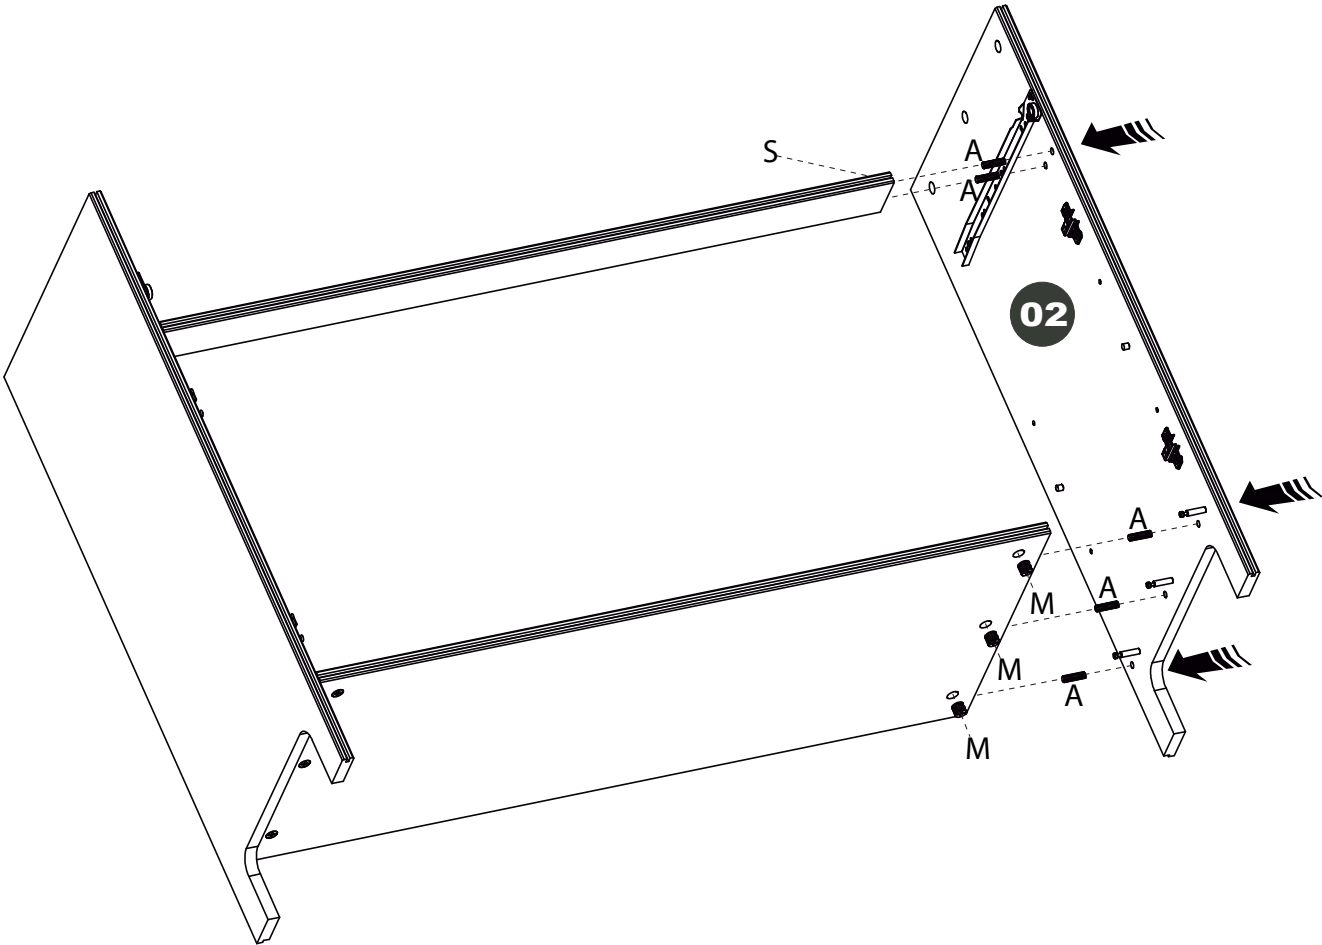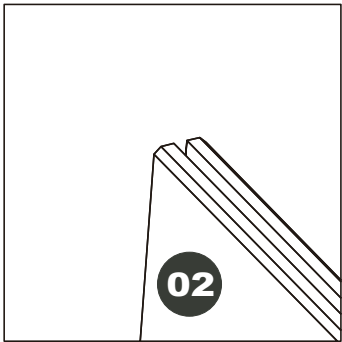


M		03	A		05	S		01
			8x30mm			3.5x30mm		

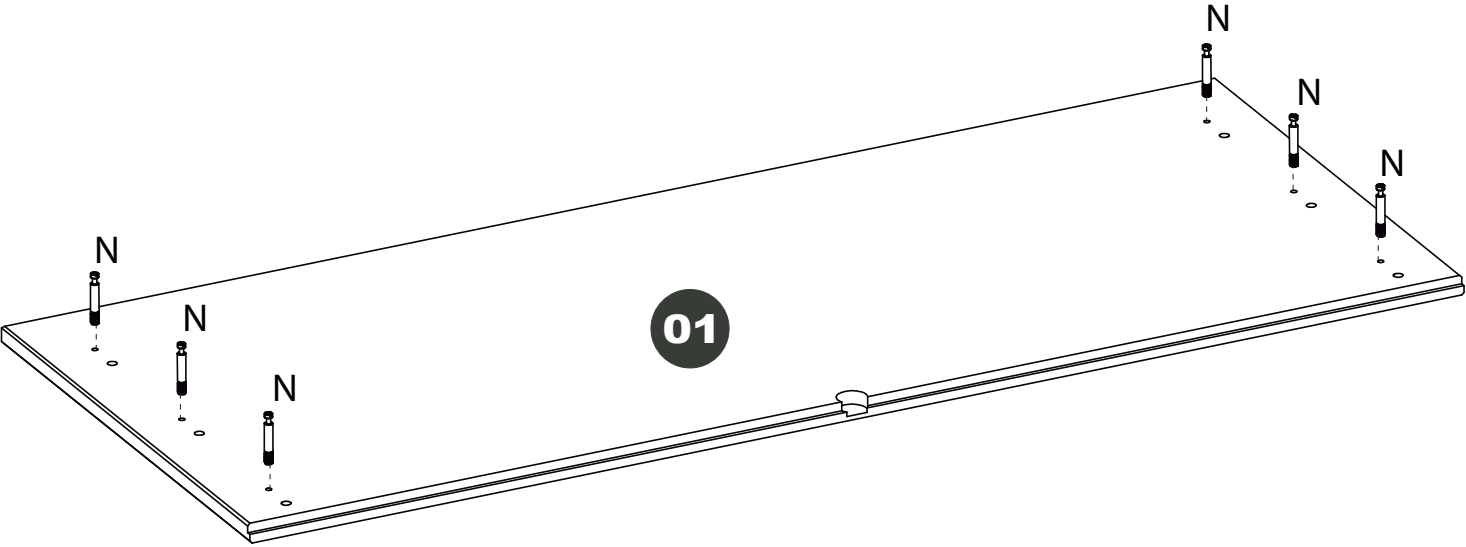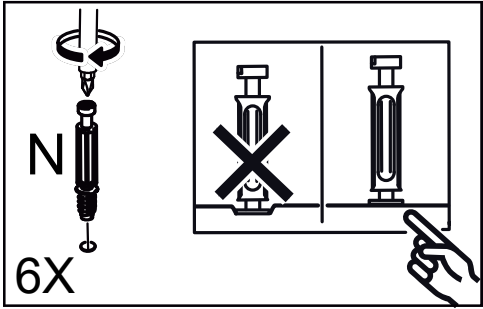




N		06
---	---	----

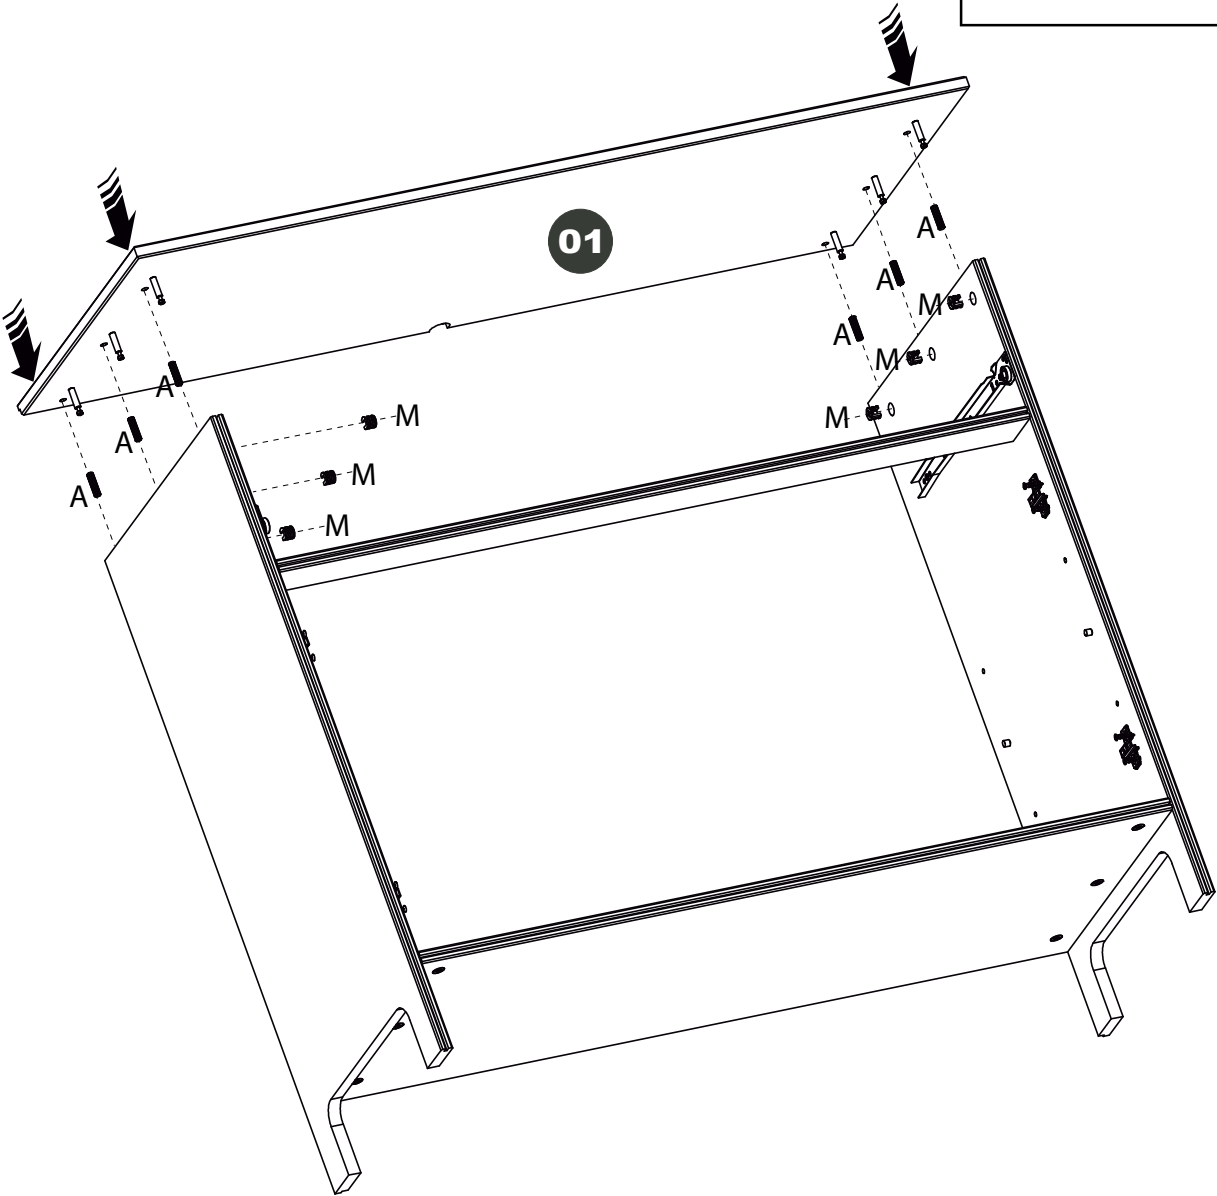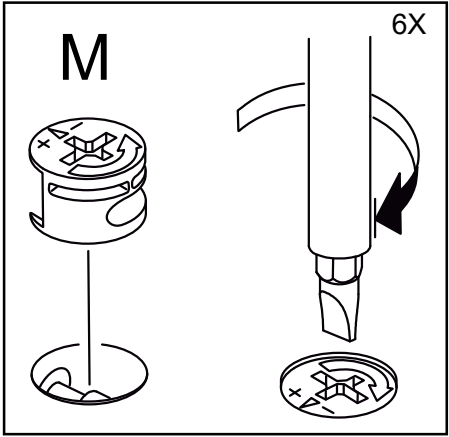




M		06	A		06
8x30mm					

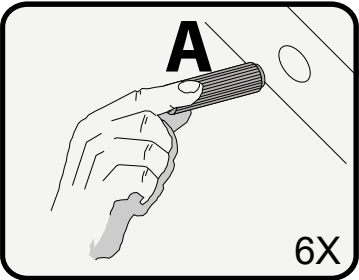

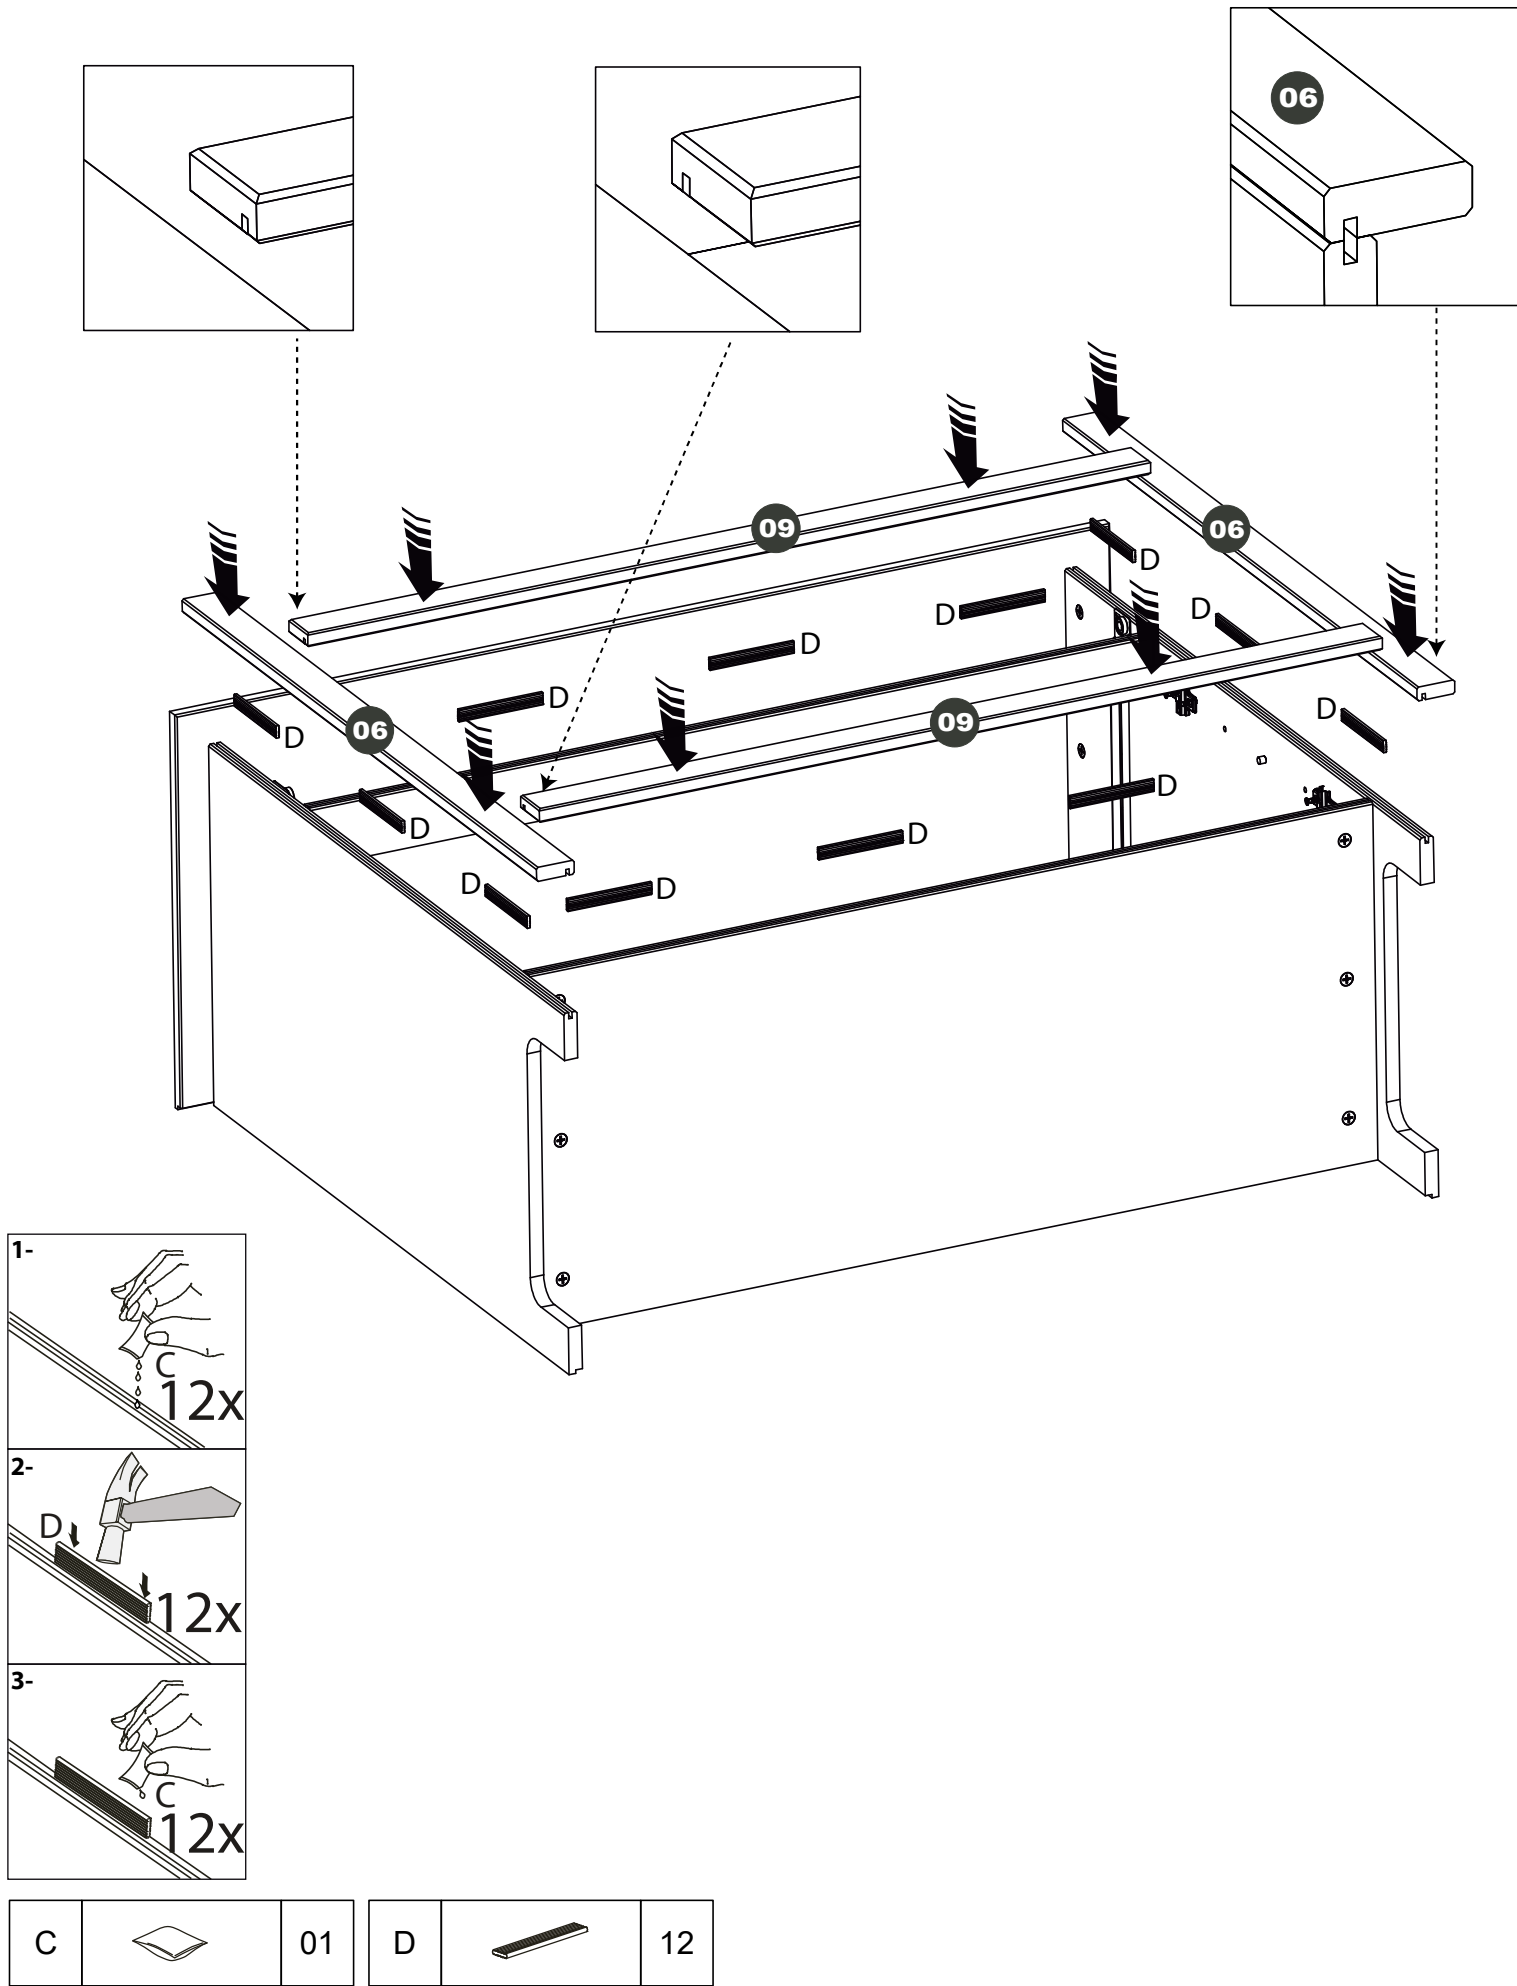

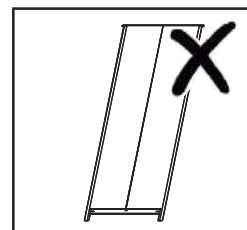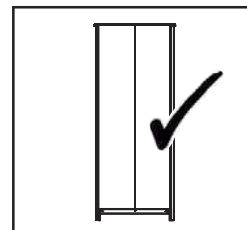

Important: Cabinet **MUST** be 'square' when back panel is attached.

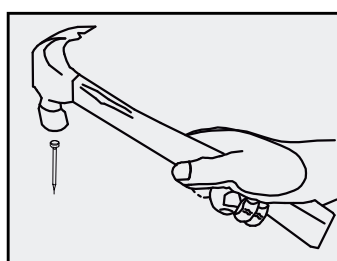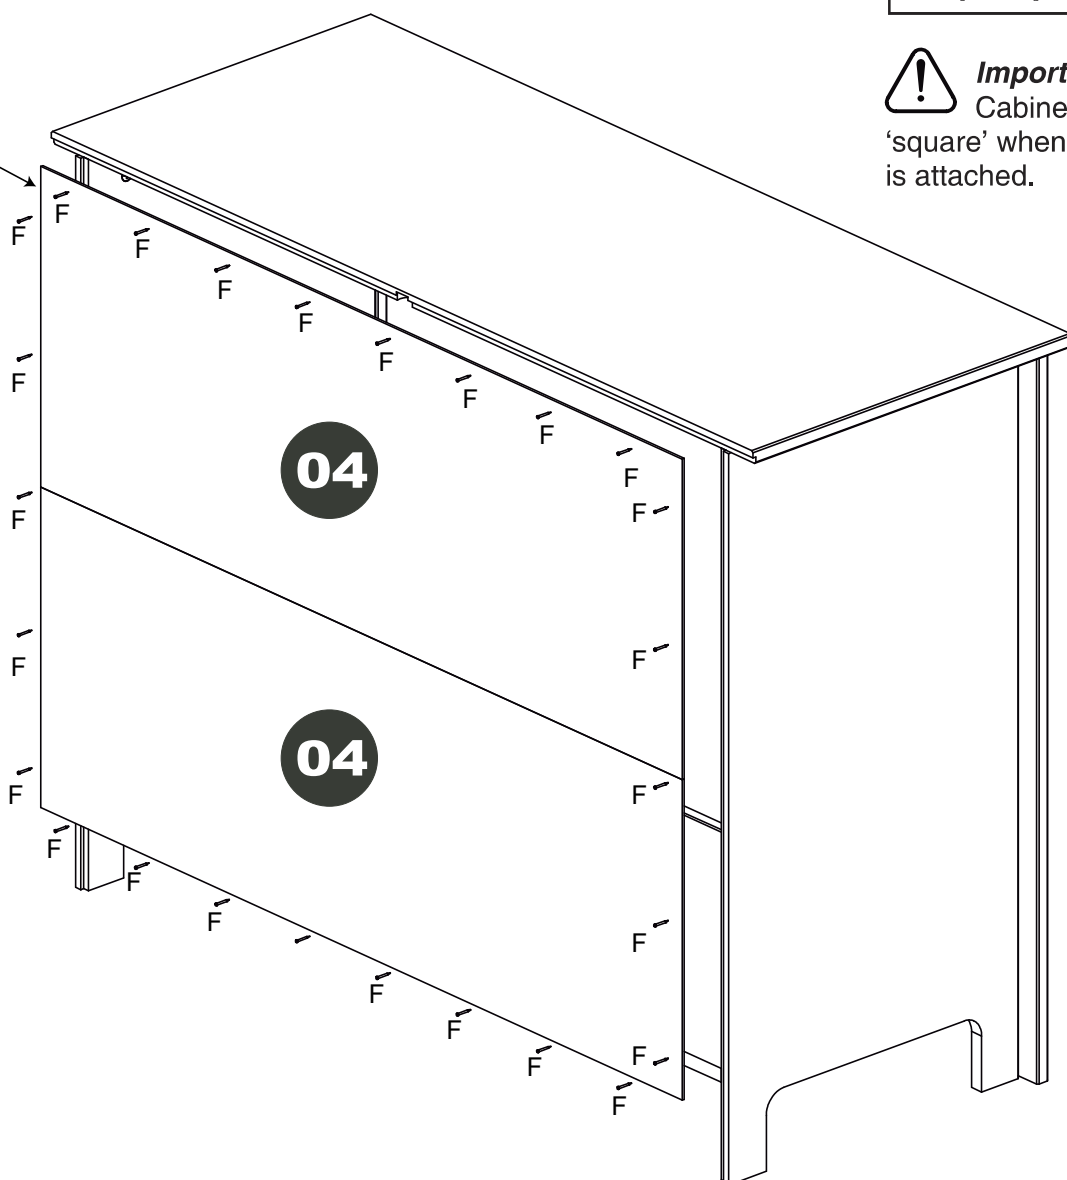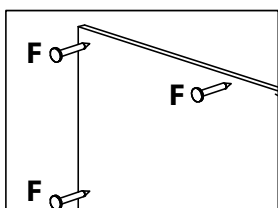



Use all back panels nails. Evenly spaced, they help make the unit strong.

F		26
---	--	----


10



Position the furniture into place and make a mark to the wall, as shown.

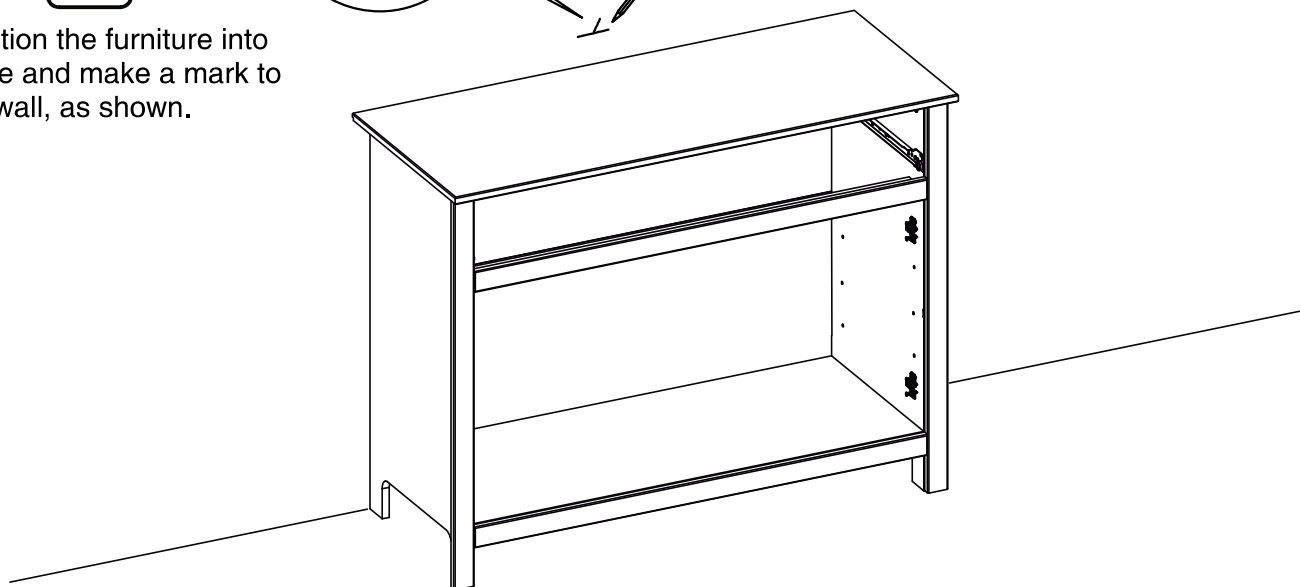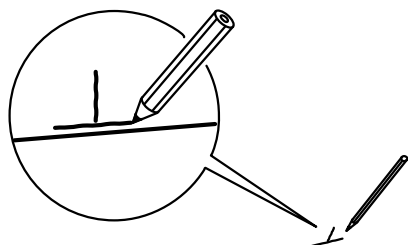

11

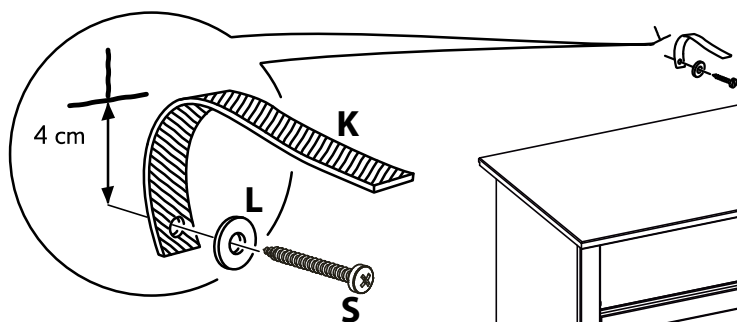


With help, carefully move the furniture away to access the mark in the wall.

Drill hole on wall 4cm below the mark, as shown in the diagram.



Before drilling, check wall for hidden pipes and cables.

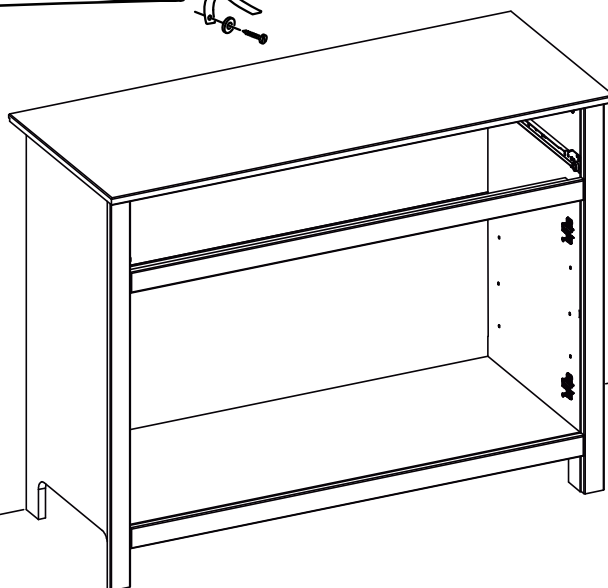



L		01	K		01	S		01
---	--	----	---	--	----	---	--	----

3.5x30mm

12





With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.

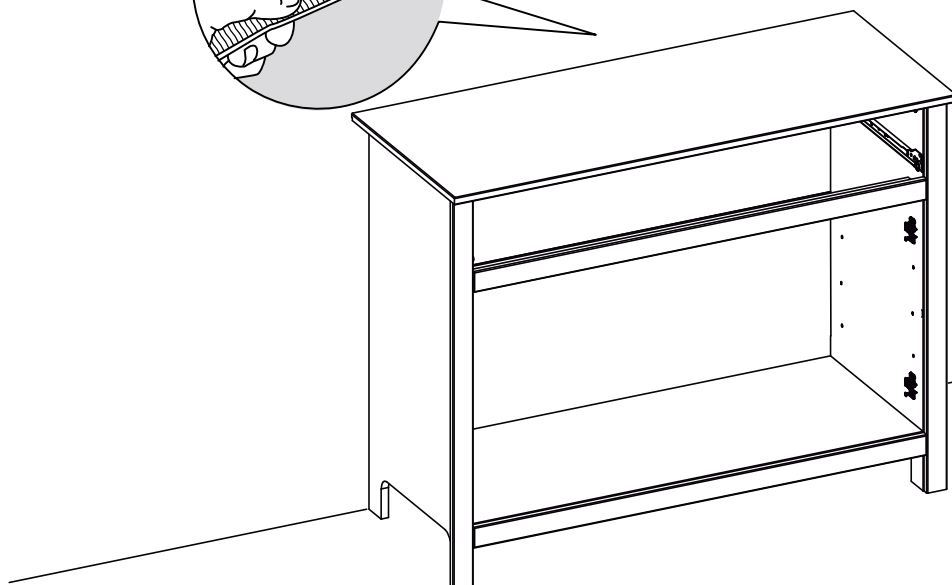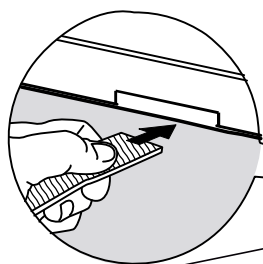

13



Inside the cabinet, hold wall strap in position and fix it using washer and screw, as shown.

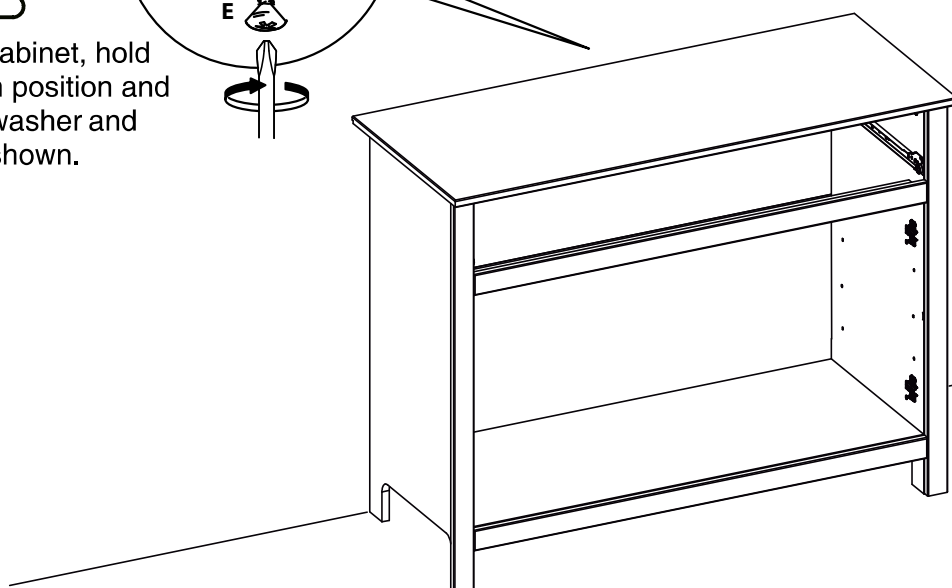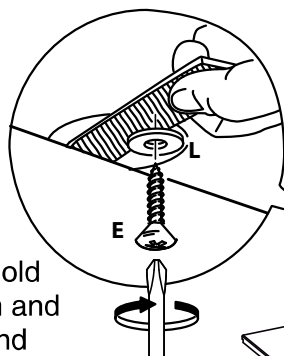


L		01
---	---	----


E		01
---	---	----

4,0x16mm




14

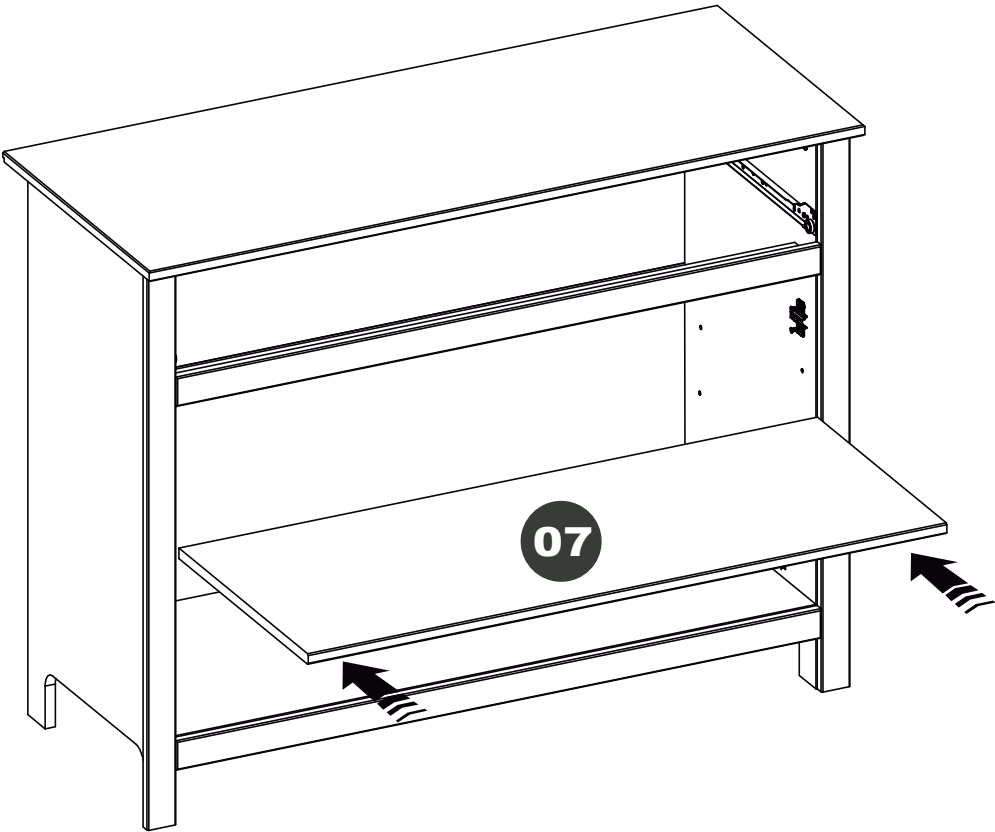




15
2x

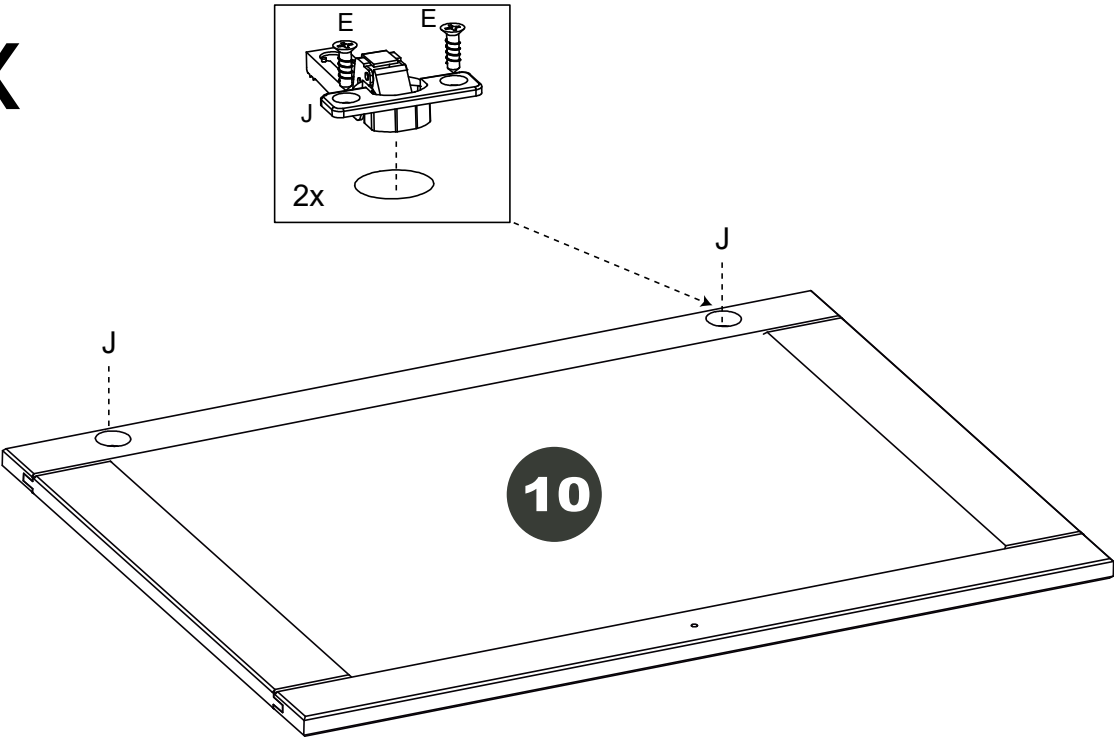


J		04	E		08
4,0x16mm					

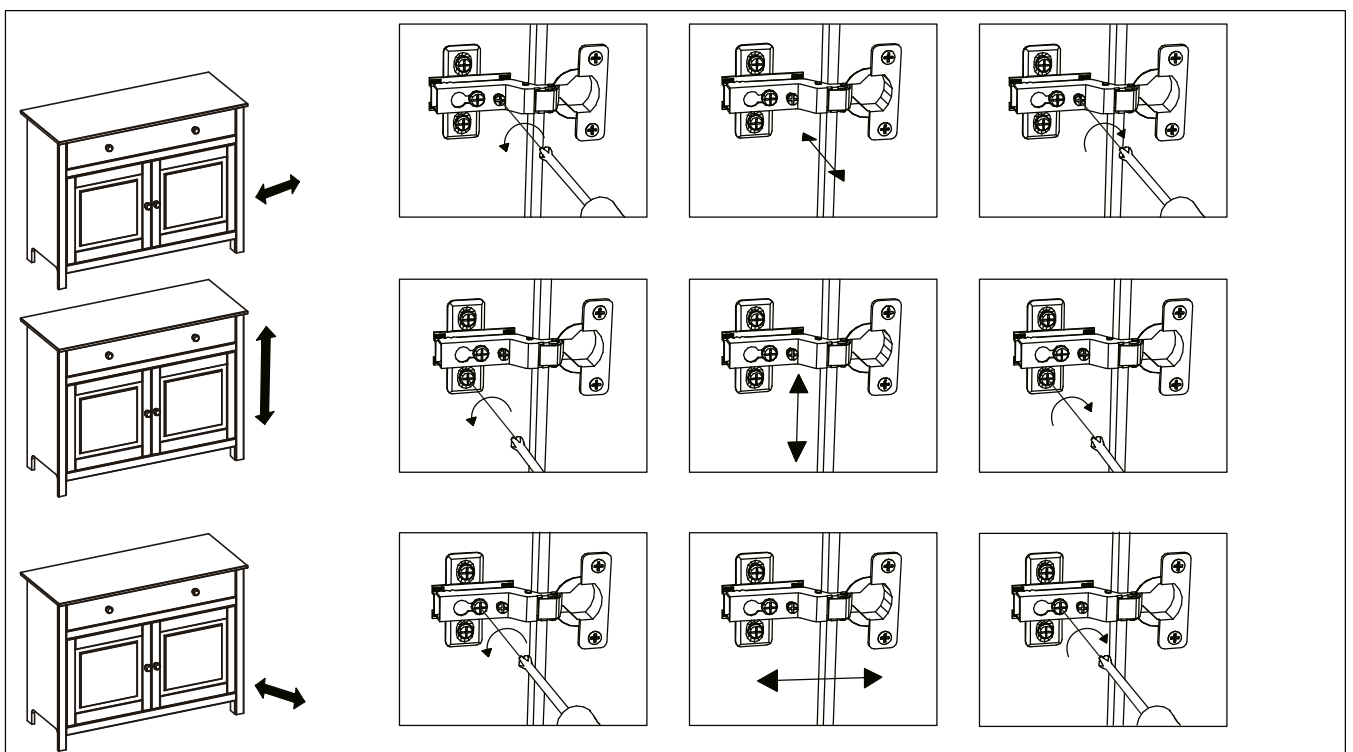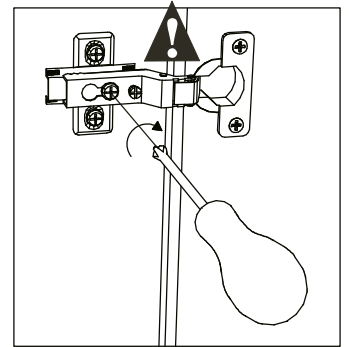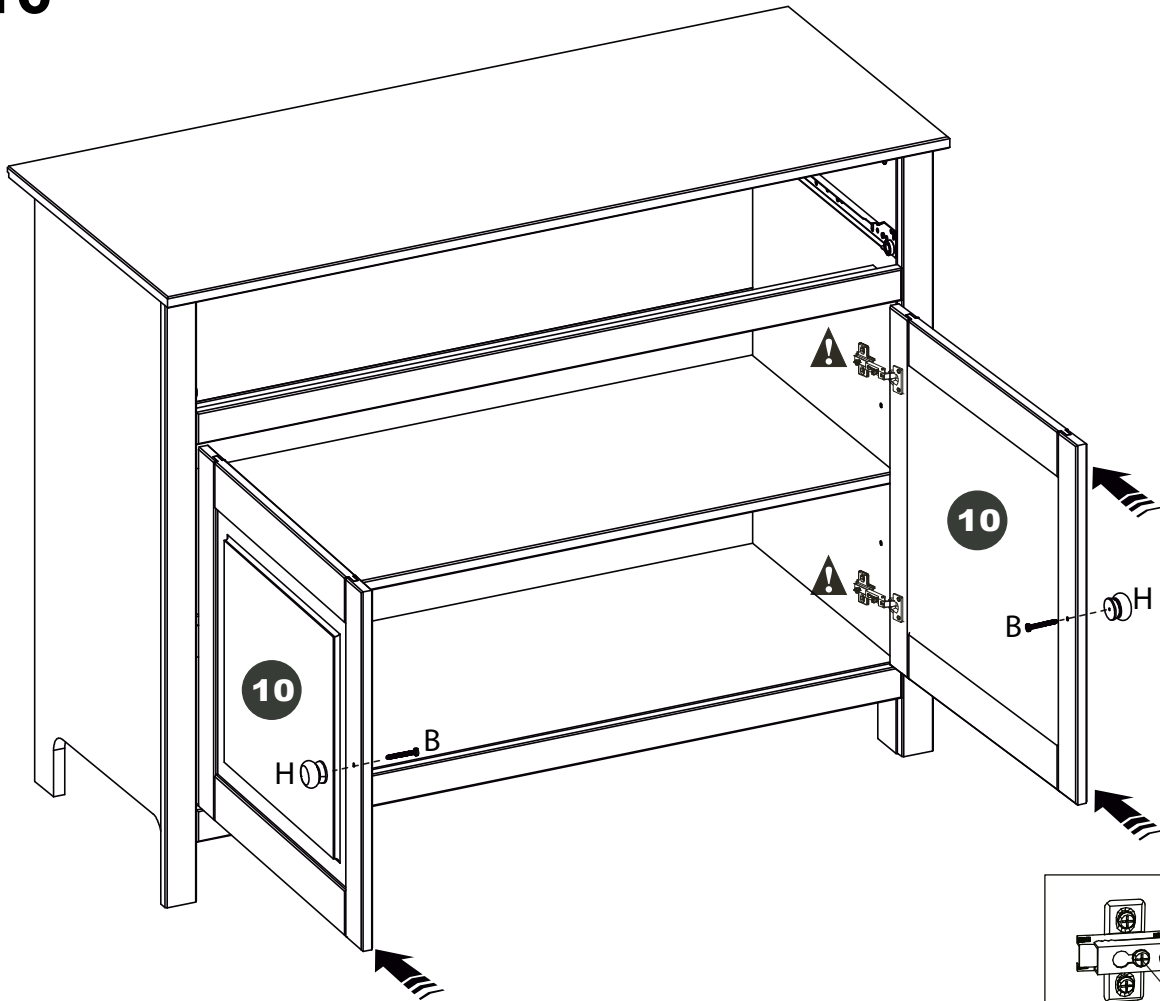



17

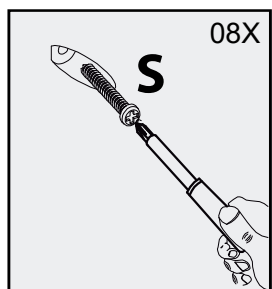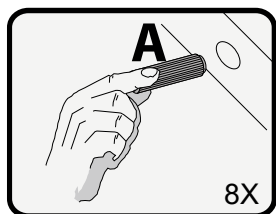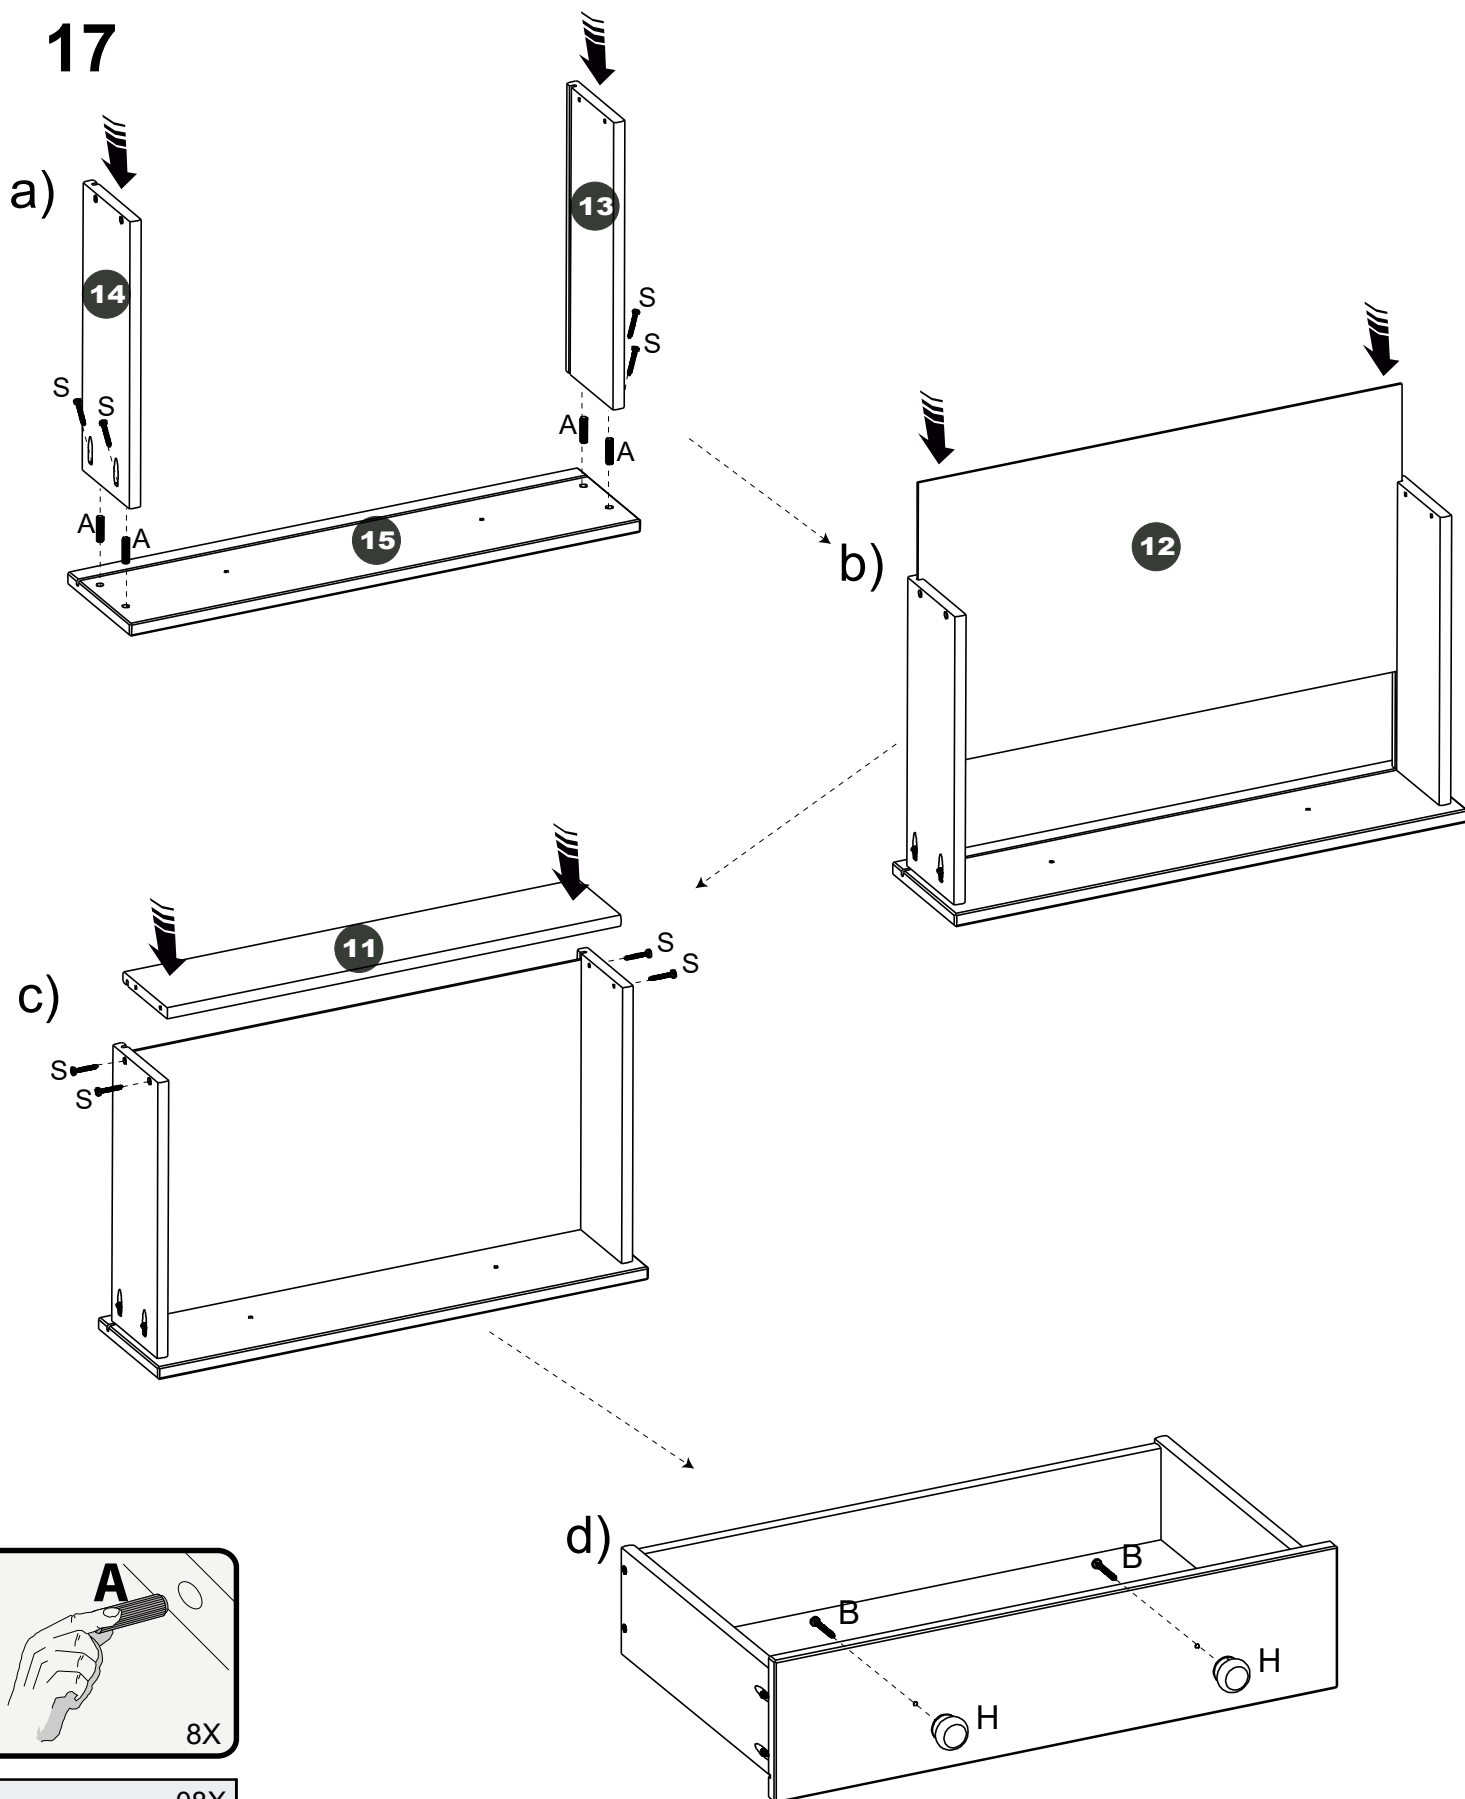



H		02	B		02	A		04	S		08
				4,0x40mm			8x30mm			3,5x30mm	

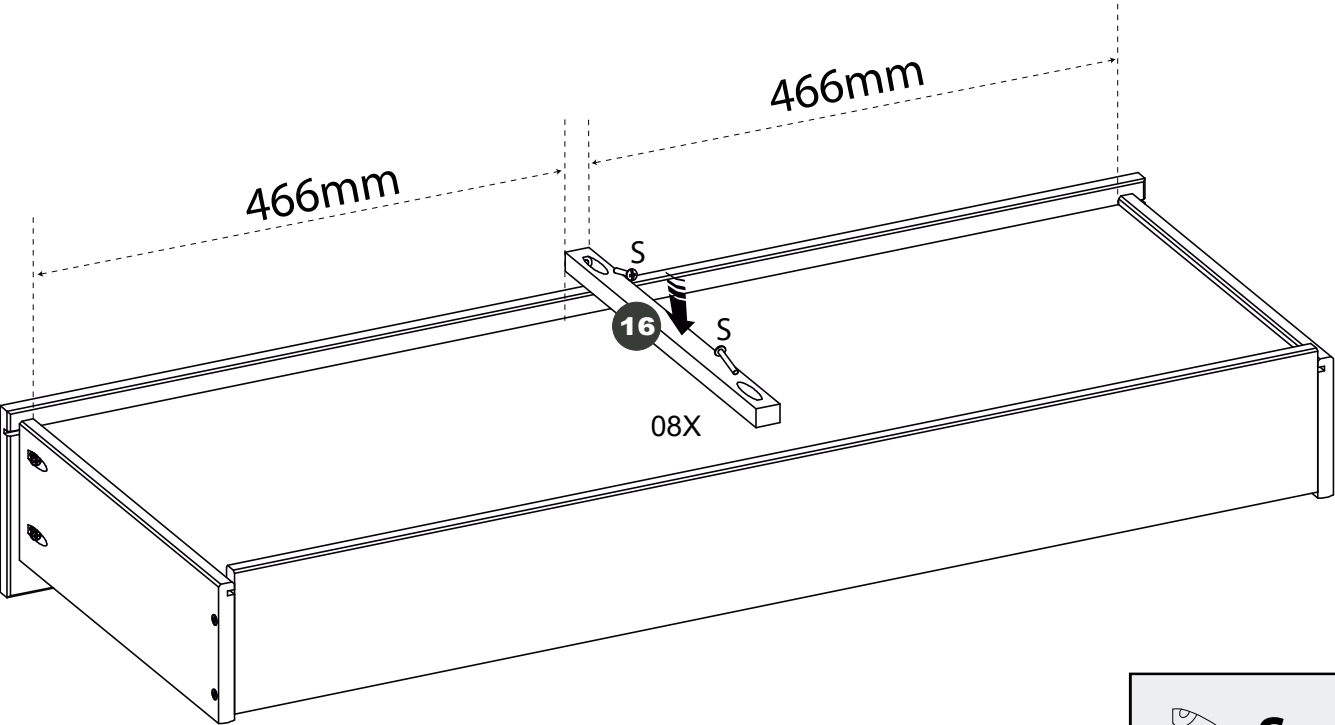

S		02
3,5x30mm		

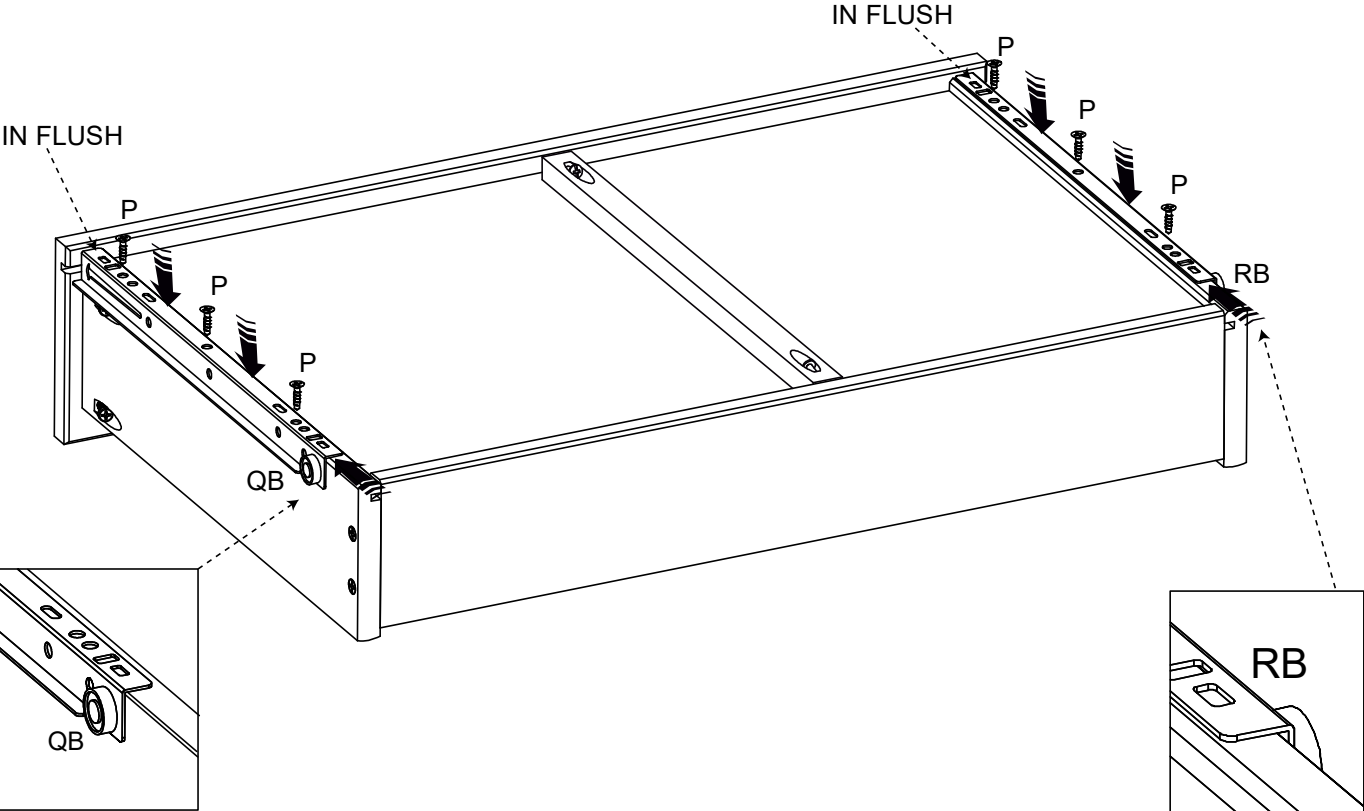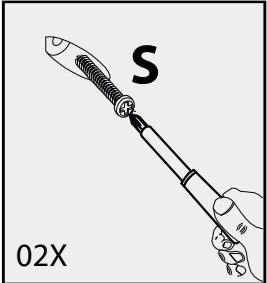

Q		01
LEFT SET		

R		01
RIGHT SET		

P		06
3,0x16mm		

