Farmhouse 7 Drawers Sideboard Buffet Cabinet

Assembly Instruction



Model: SC-FC02

INTRODUCTION


Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS


1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.

*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.
*IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.










Exploded View

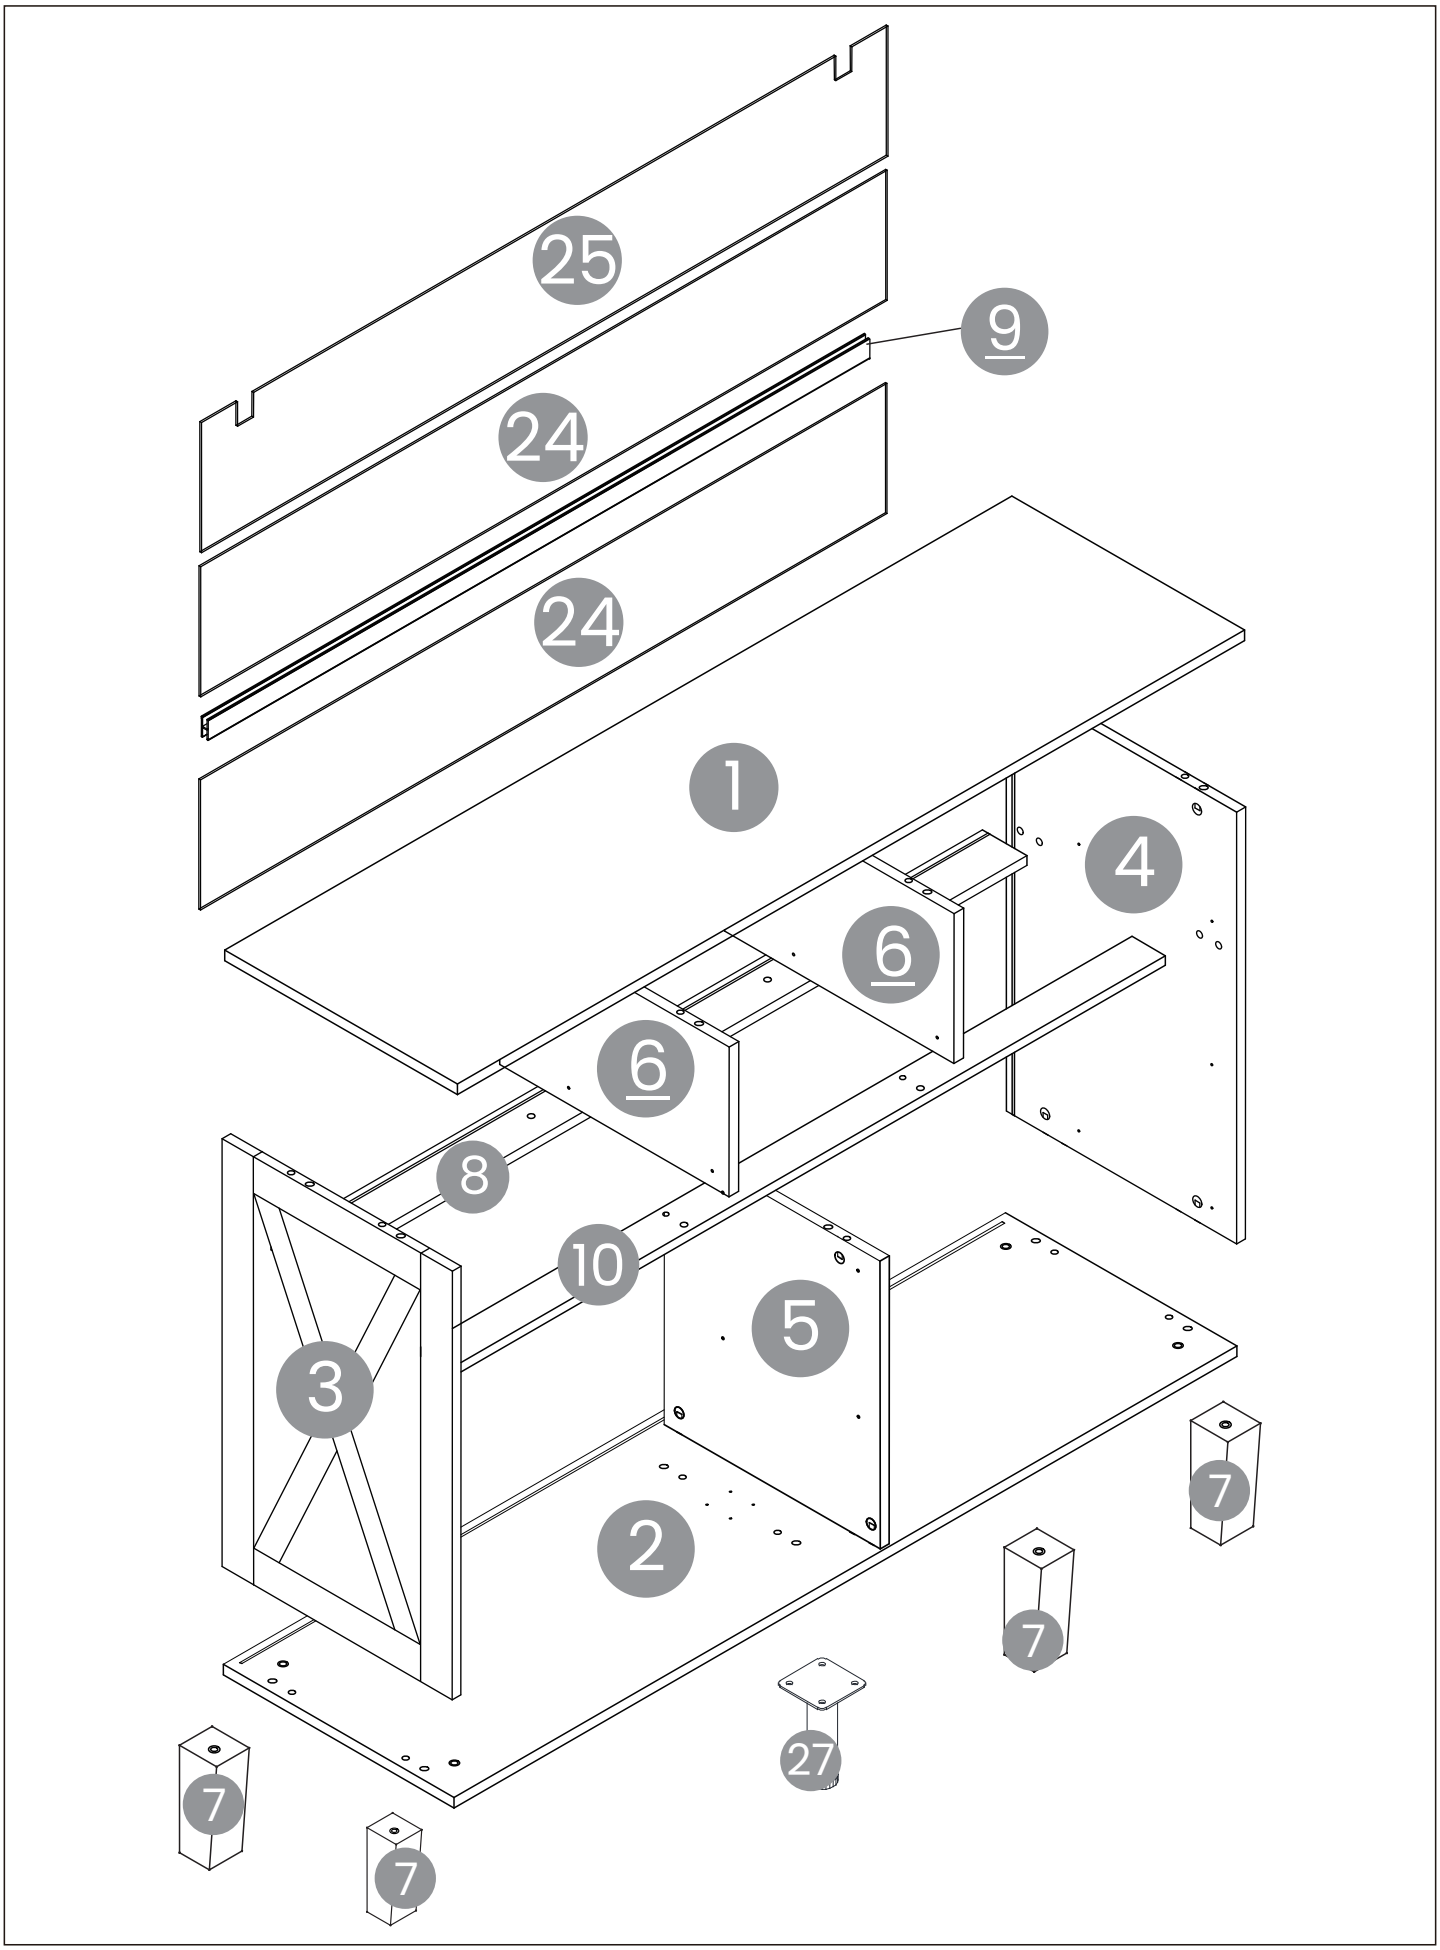

Exploded View

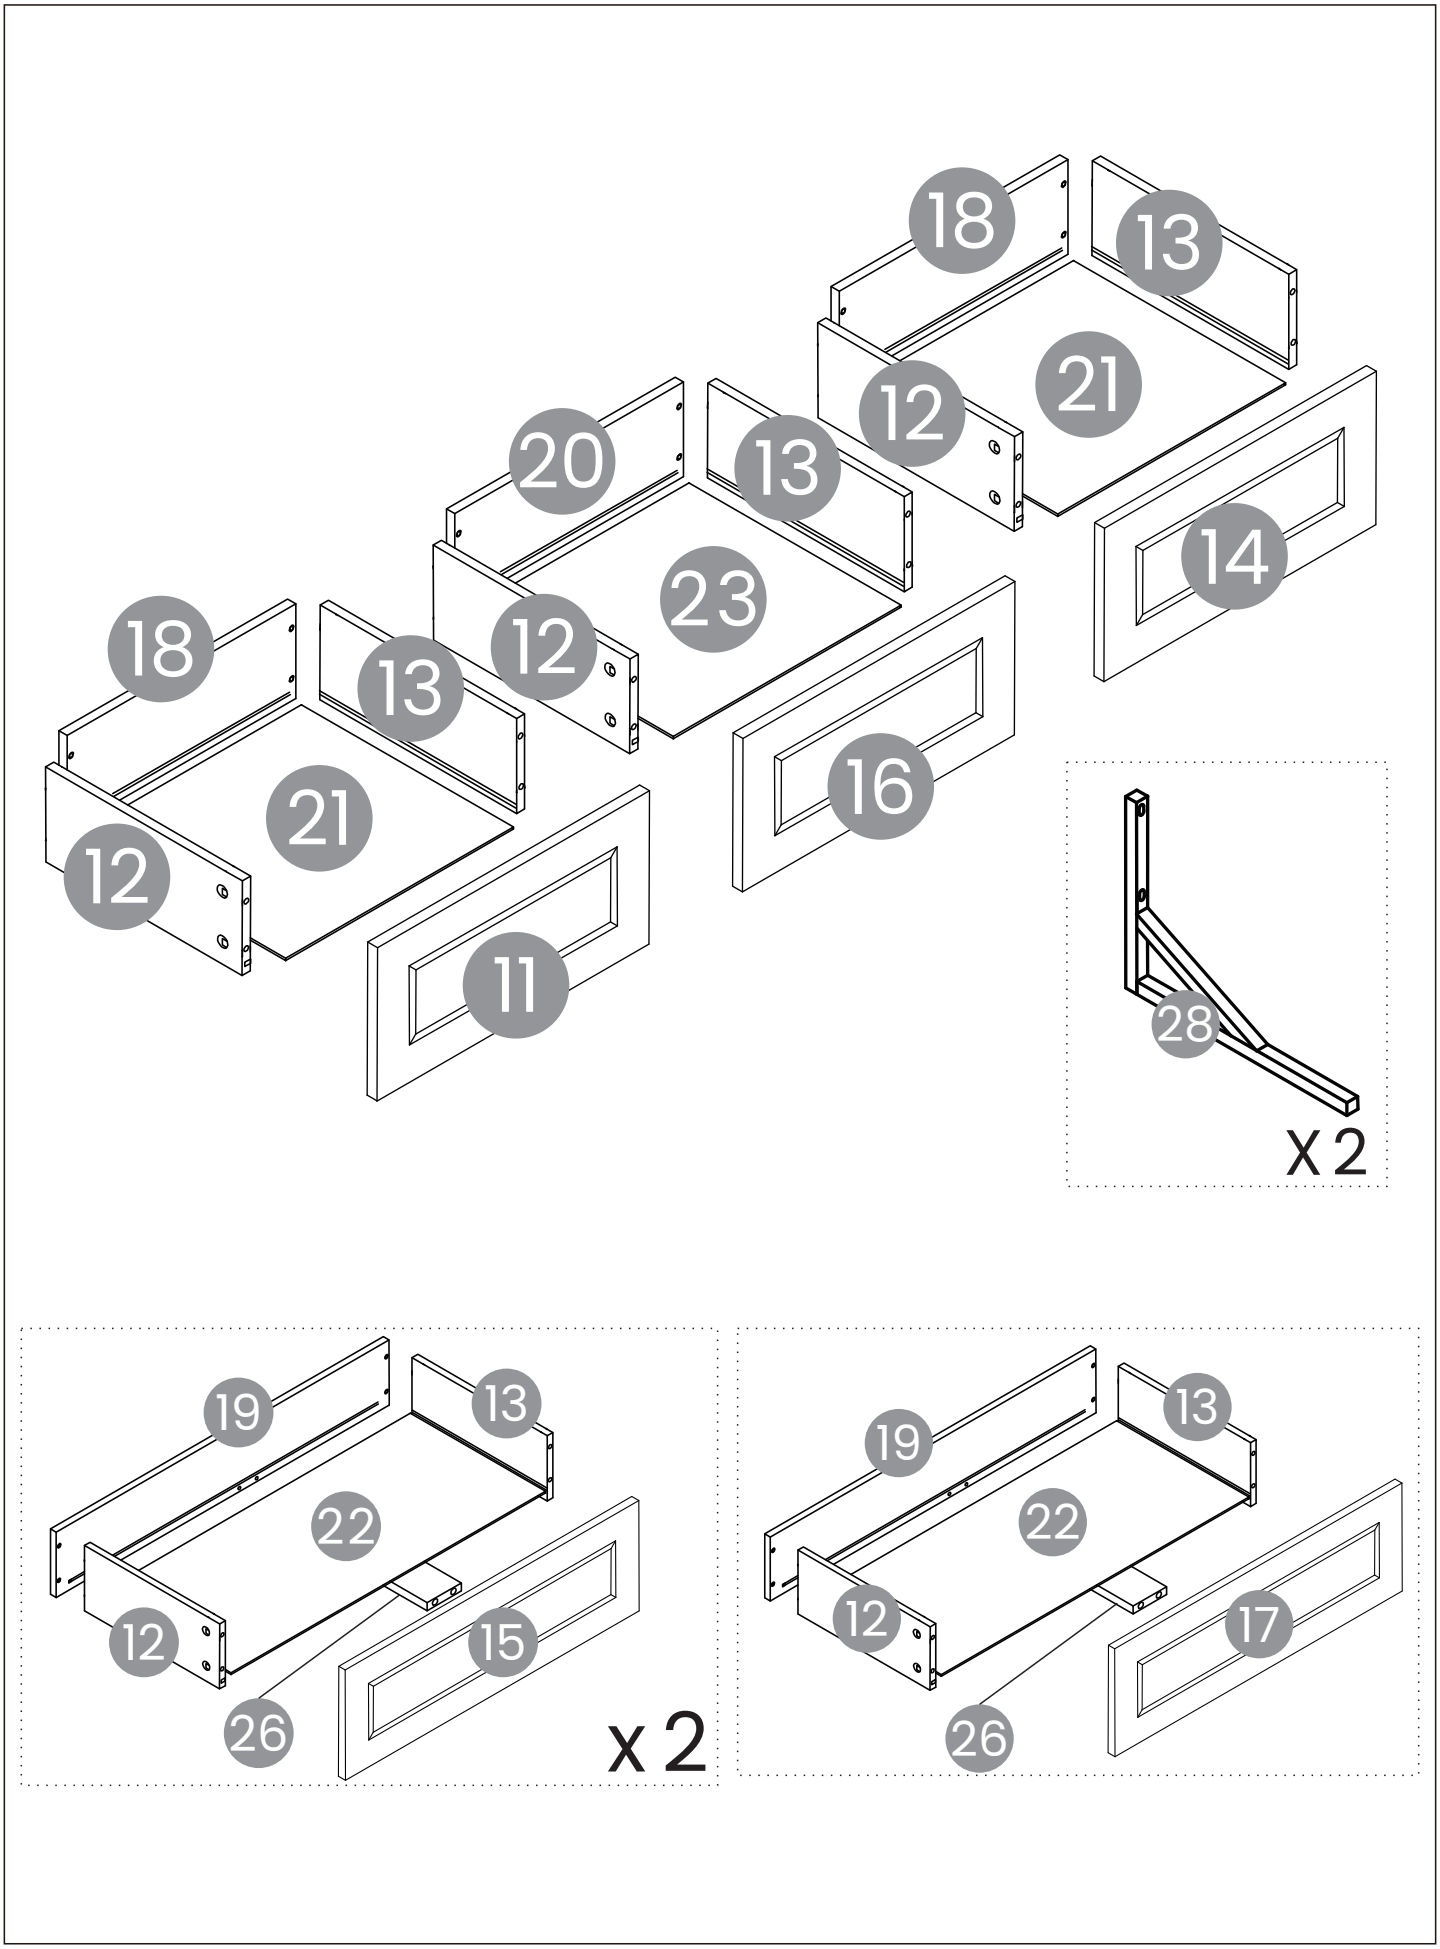


Parts Identification

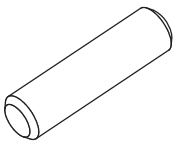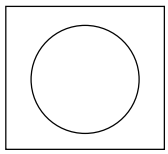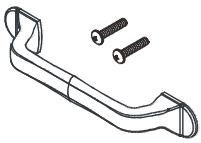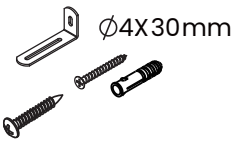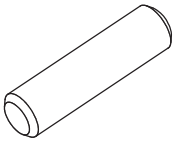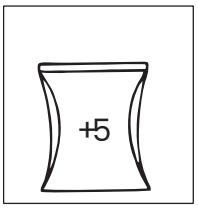
A  ∅5 x 35 mm X72	B  ∅15 x 11mm X20	C  ∅6 x 30 mm X8	D  L= 300mm X7	E  ∅3 x 12 mm X62
F  X72	G  ∅4X22mm X3	H  X14	J  ∅15 x 9 . 5 mm X52	K  ∅4X30mm X32
L  ∅4 x 18mm X4	M  ∅4X30mm ∅4X12mm X2	N  ∅6x25mm X4	O  X1	P  ∅8 x 30 mm X9
Q  ∅4 x 12 mm X4	R  ∅3.5 x 12 mm X8	 Package of spare white nuts		

Parts Identification


1

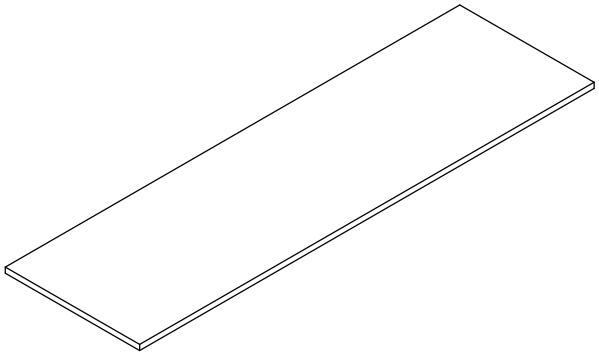


2

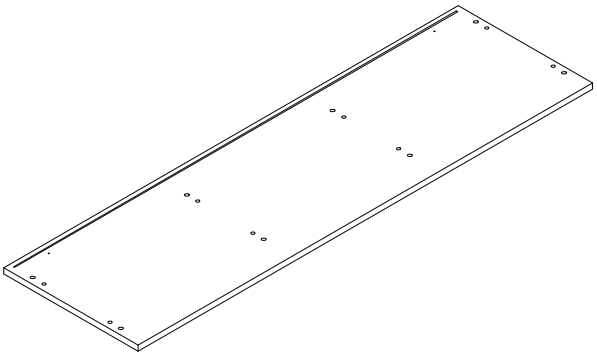


3

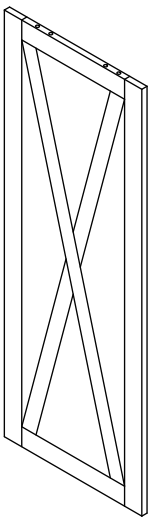


4

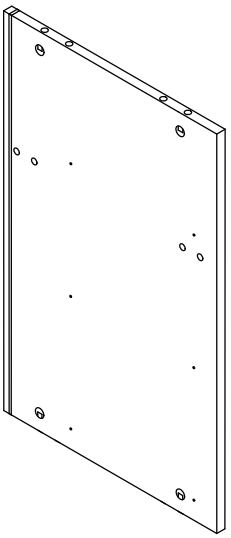

5

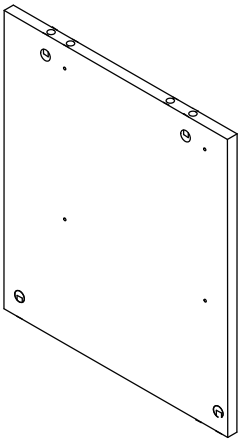


6

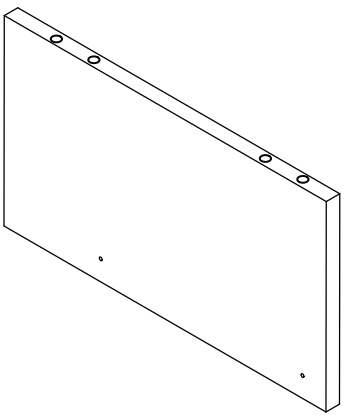

x 2


Parts Identification

7




X 4


8

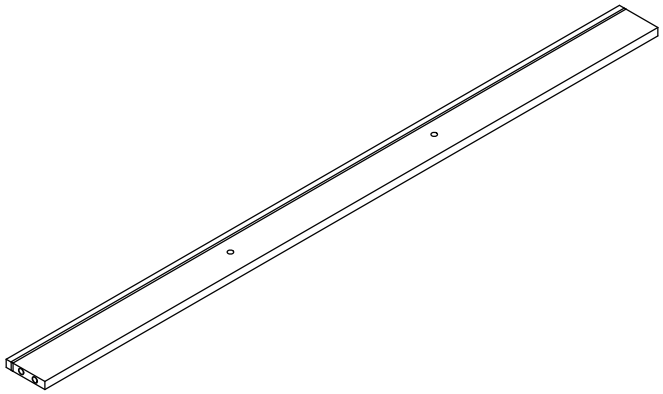


9

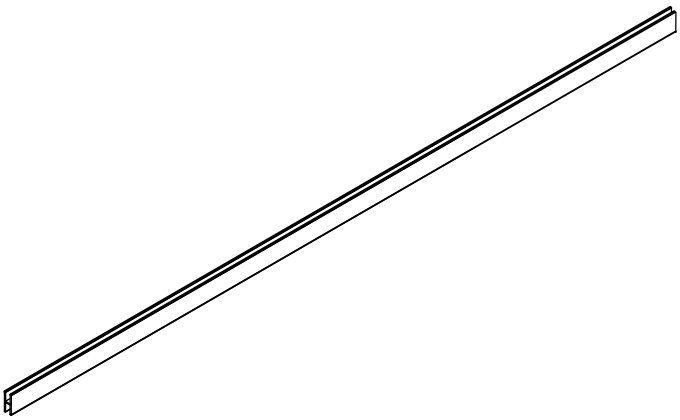


10

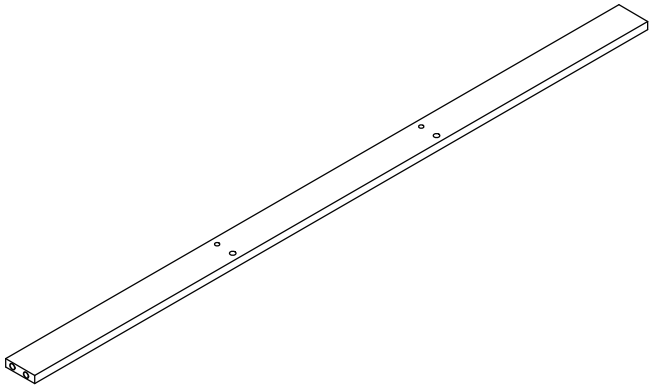

11

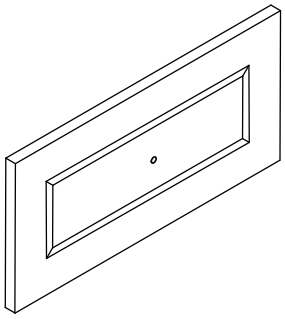


12

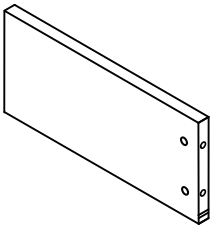

X 7


Parts Identification

13

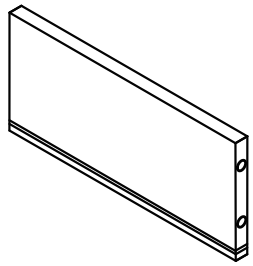


X 7

14

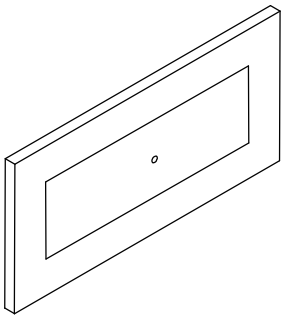


15

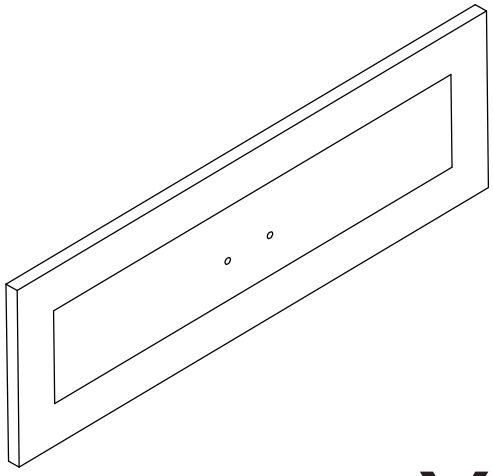


X 2

16

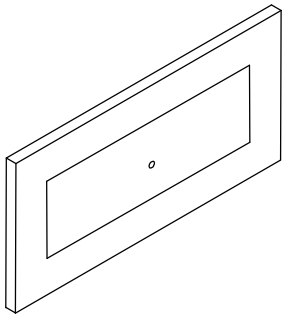


17

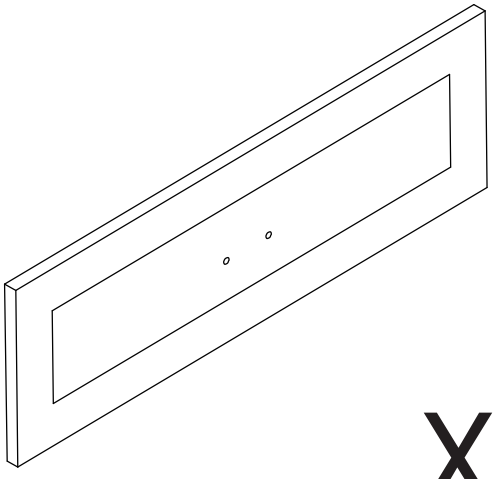

X 2


18

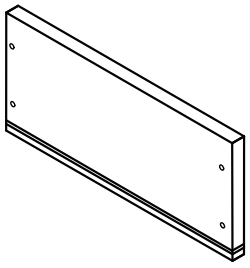

X 2


Parts Identification

19

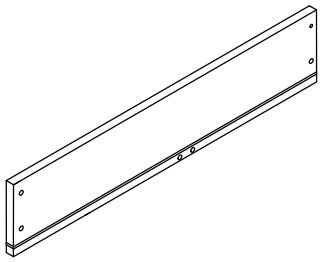


X 4

20

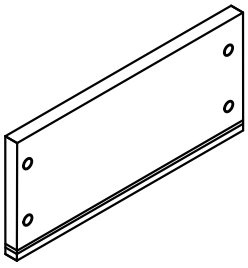


21

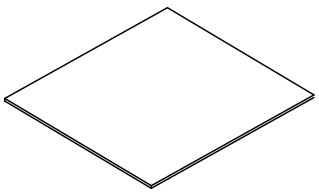


X 2

22

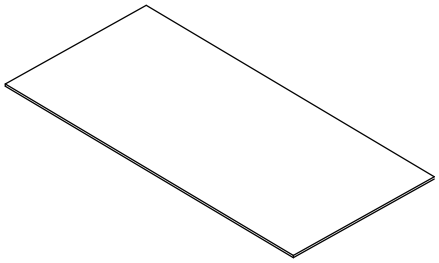


X 4

23

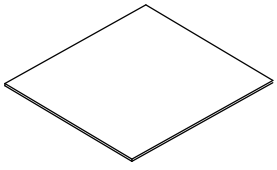


24

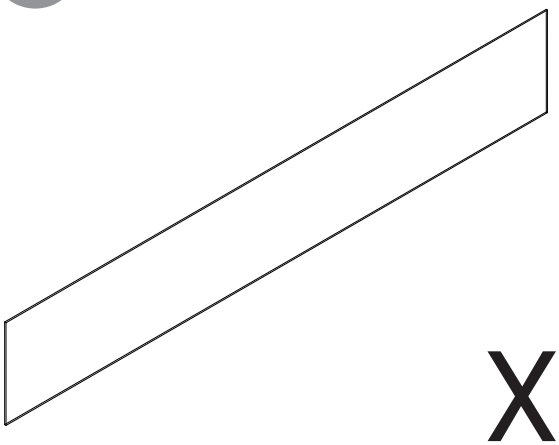


X 2

Parts Identification

25

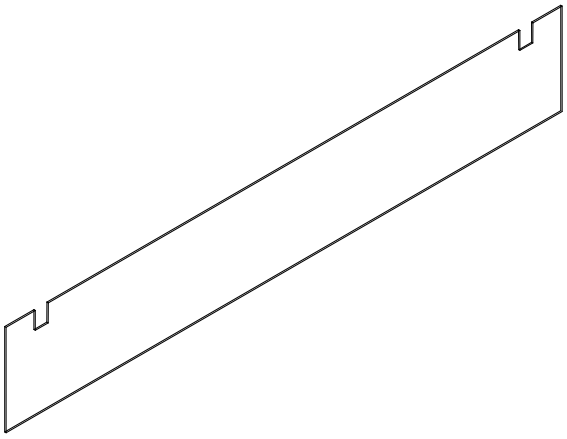


26

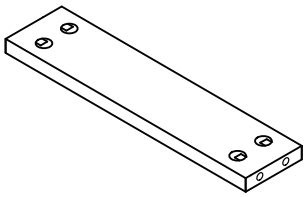


X 4

27

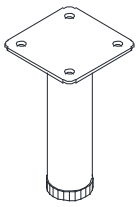


28

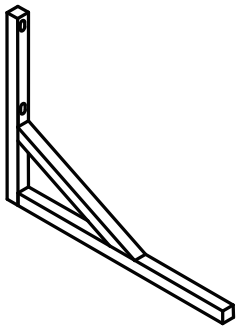


X 2

Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

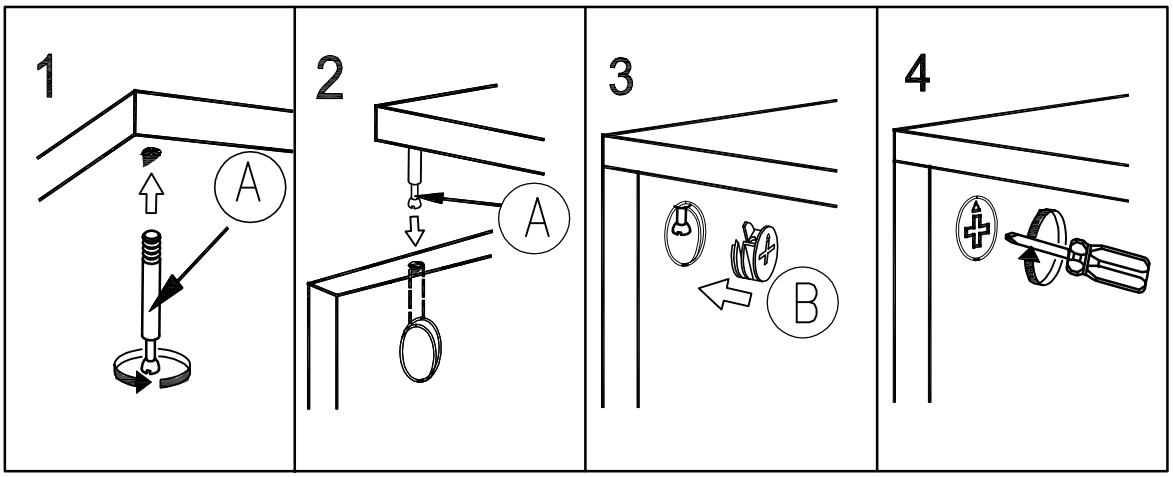


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

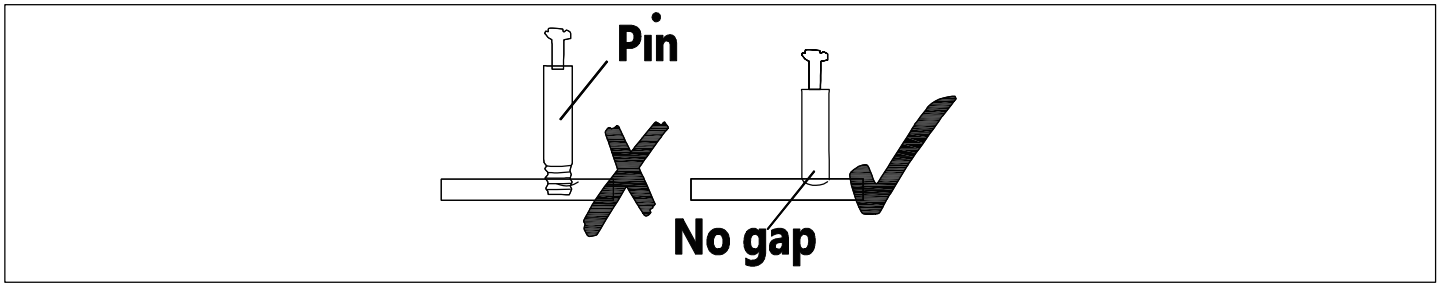





This furniture requires 2 people to assemble. Make sure no parts missing or damaged before assembly.

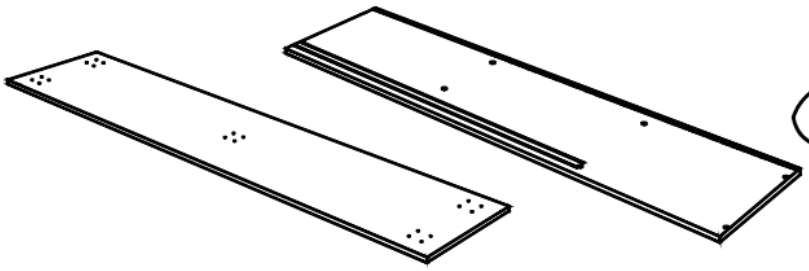





1


D x 2	E x 4	
 CL L=300mm	 ∅3 x 12 mm	

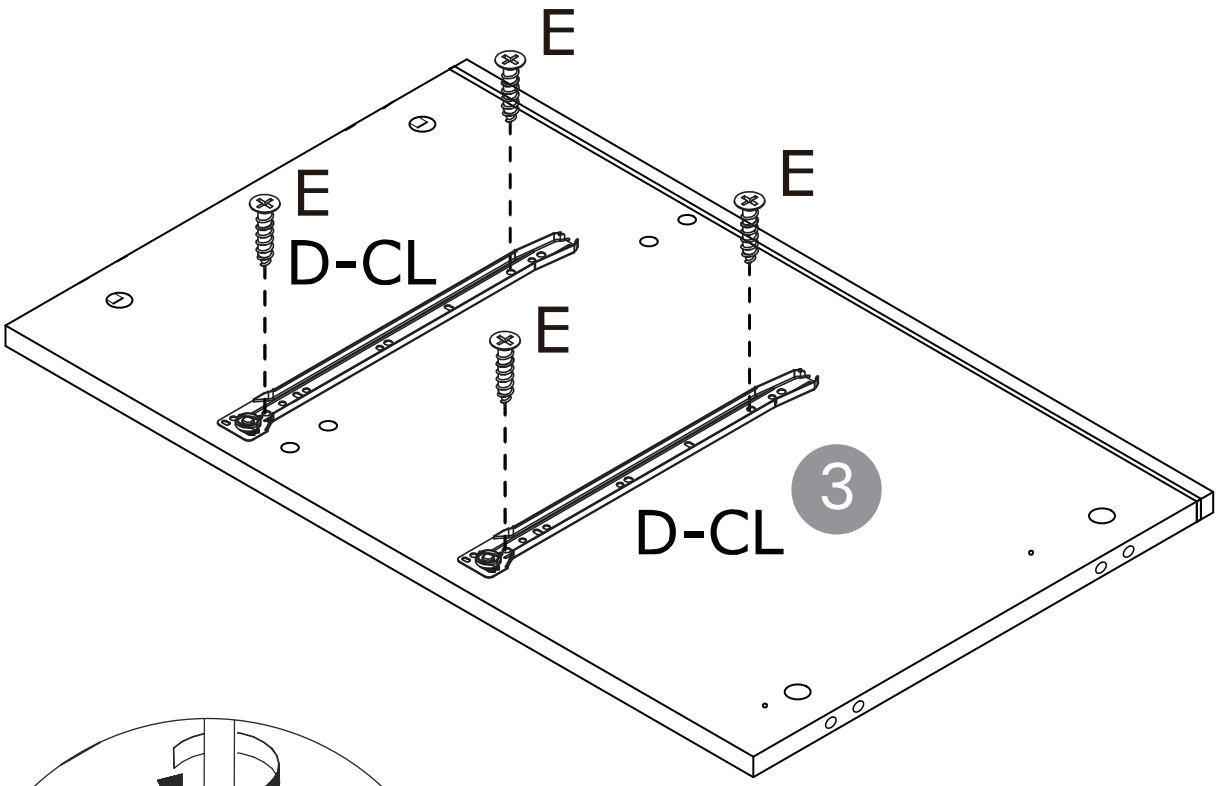


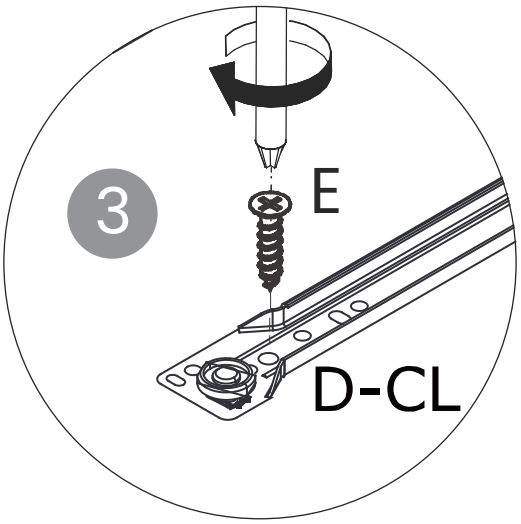


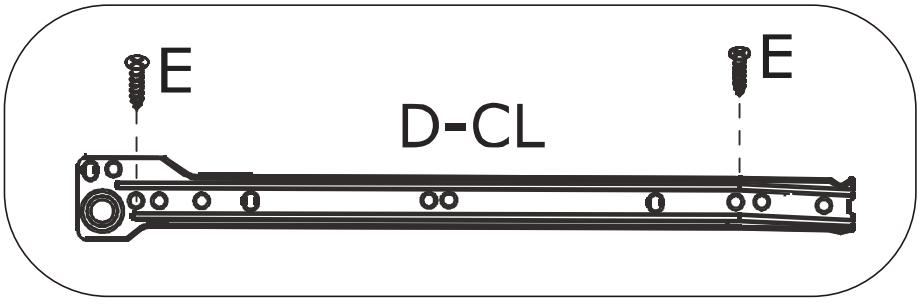


2

D x 2	E x 4	
 CR L=300mm	 ∅3 x 12 mm	

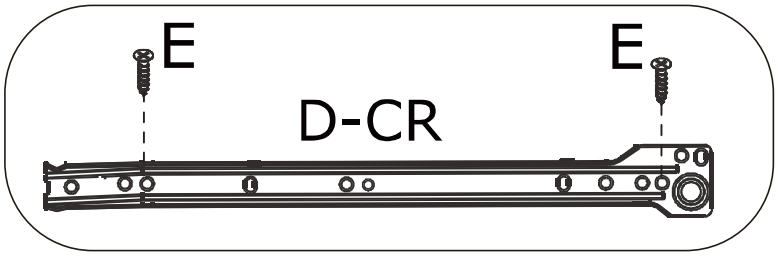

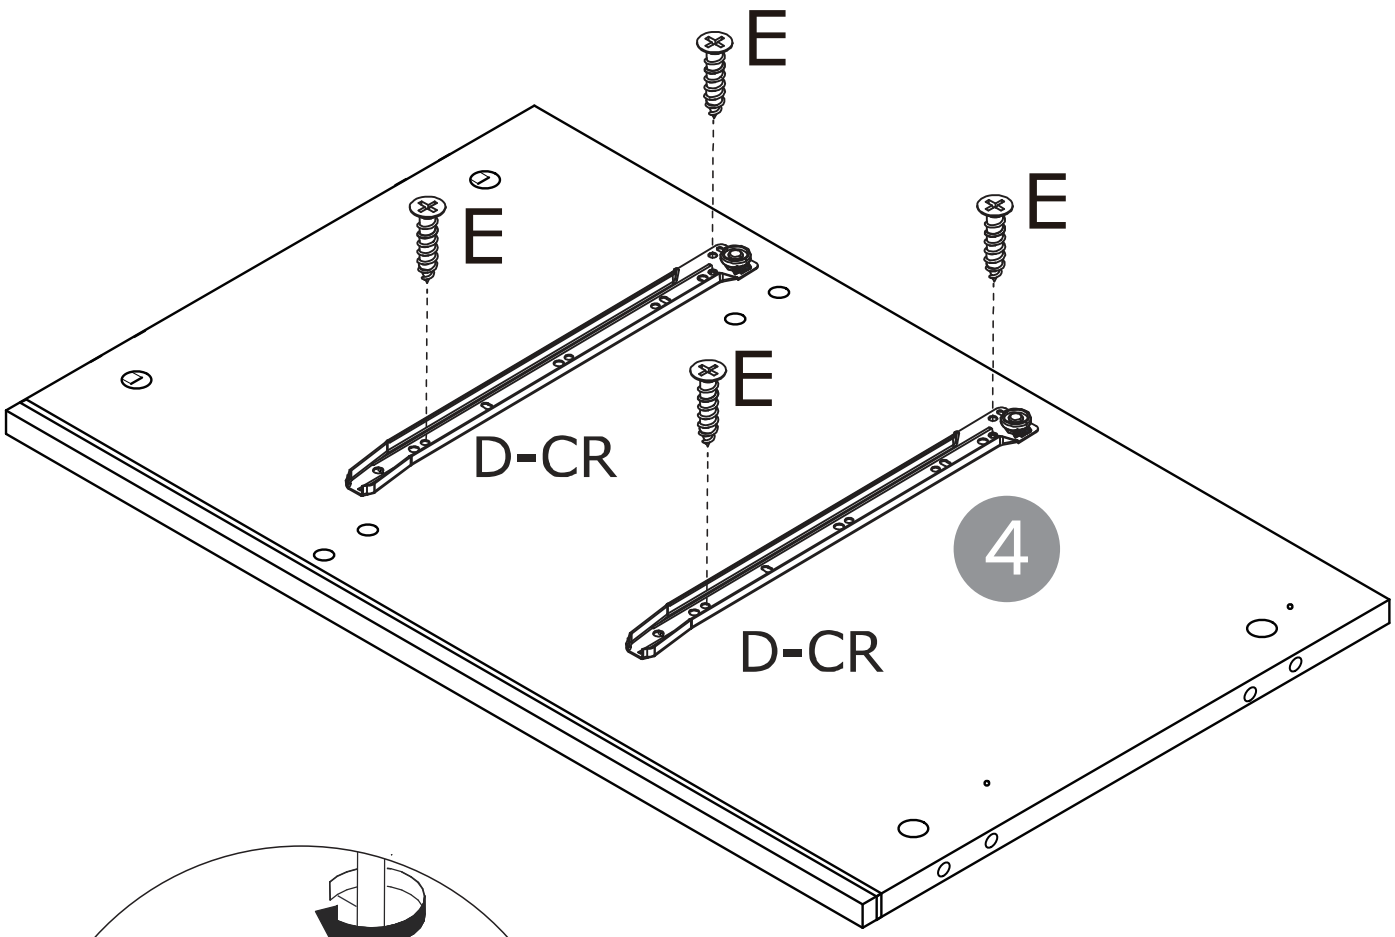

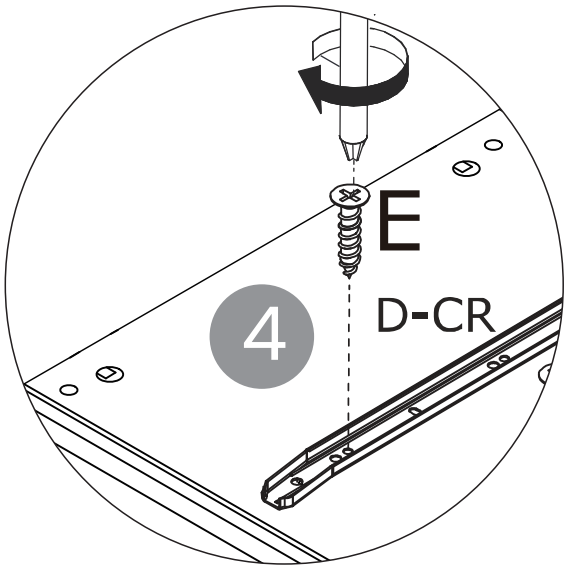



3


A x 8




∅ 5 x 35 mm





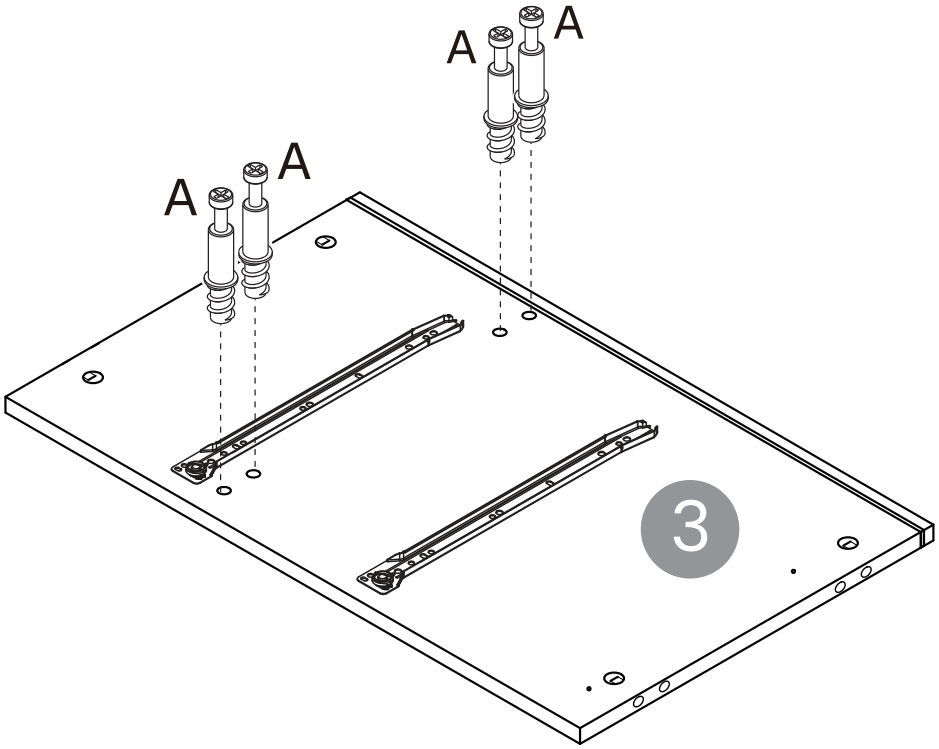


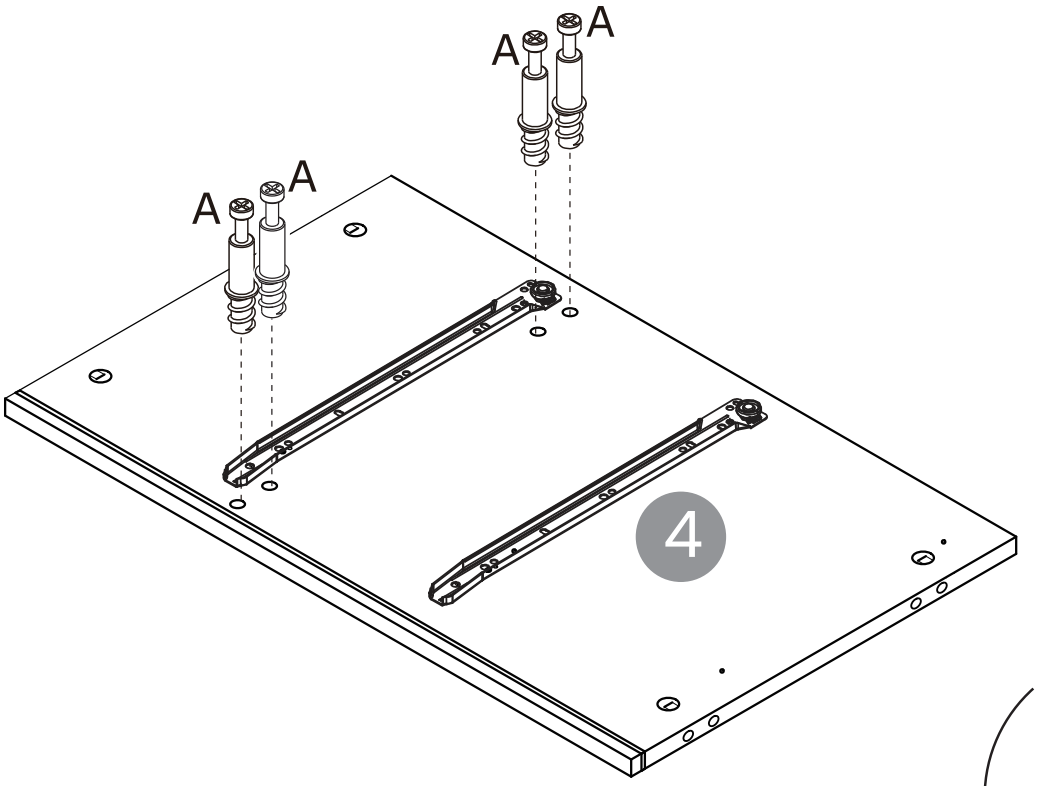

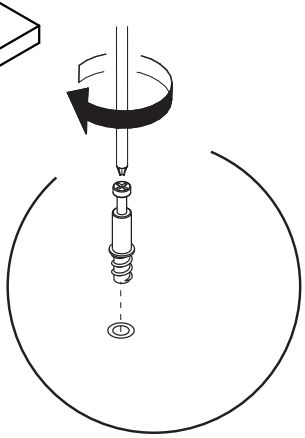


4

A x 4	P x 2	
		
∅ 5 x 35 mm	∅ 8 x 30 mm	

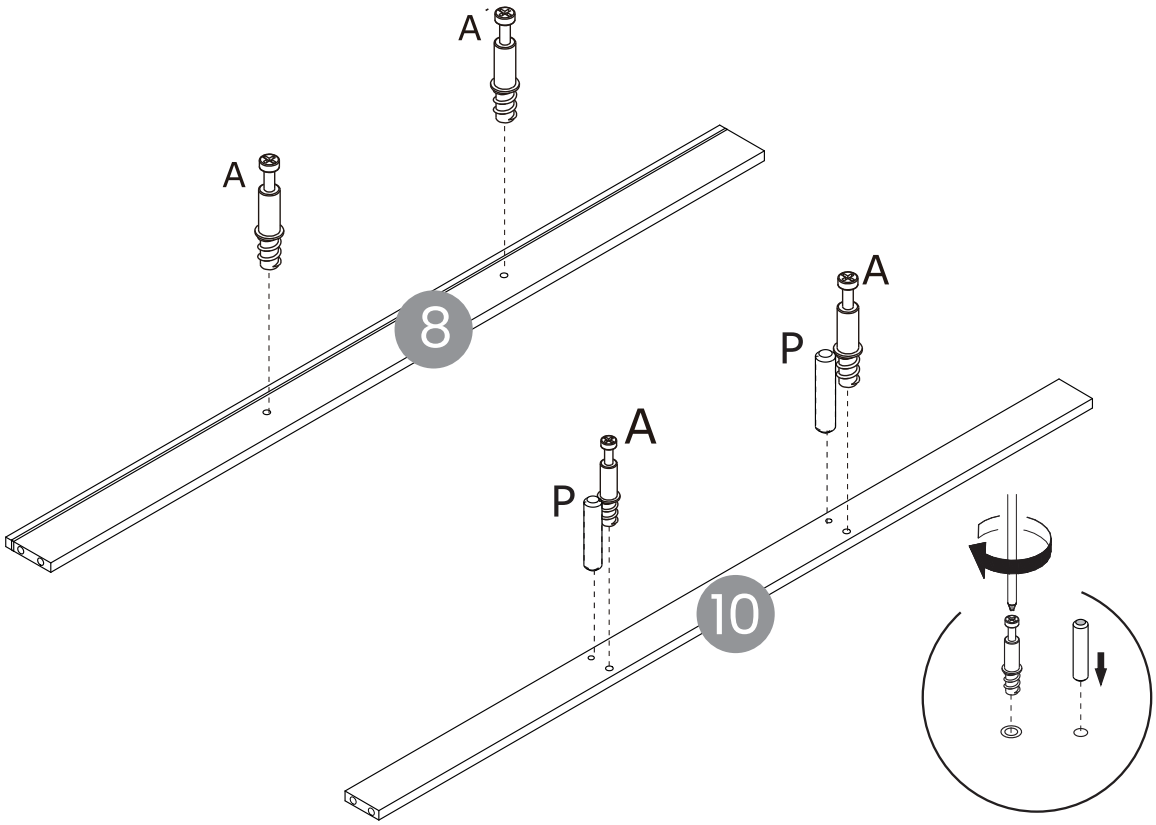

5

D x 2	Ex 4	
		
CR L=300mm	∅ 3 x 12 mm	

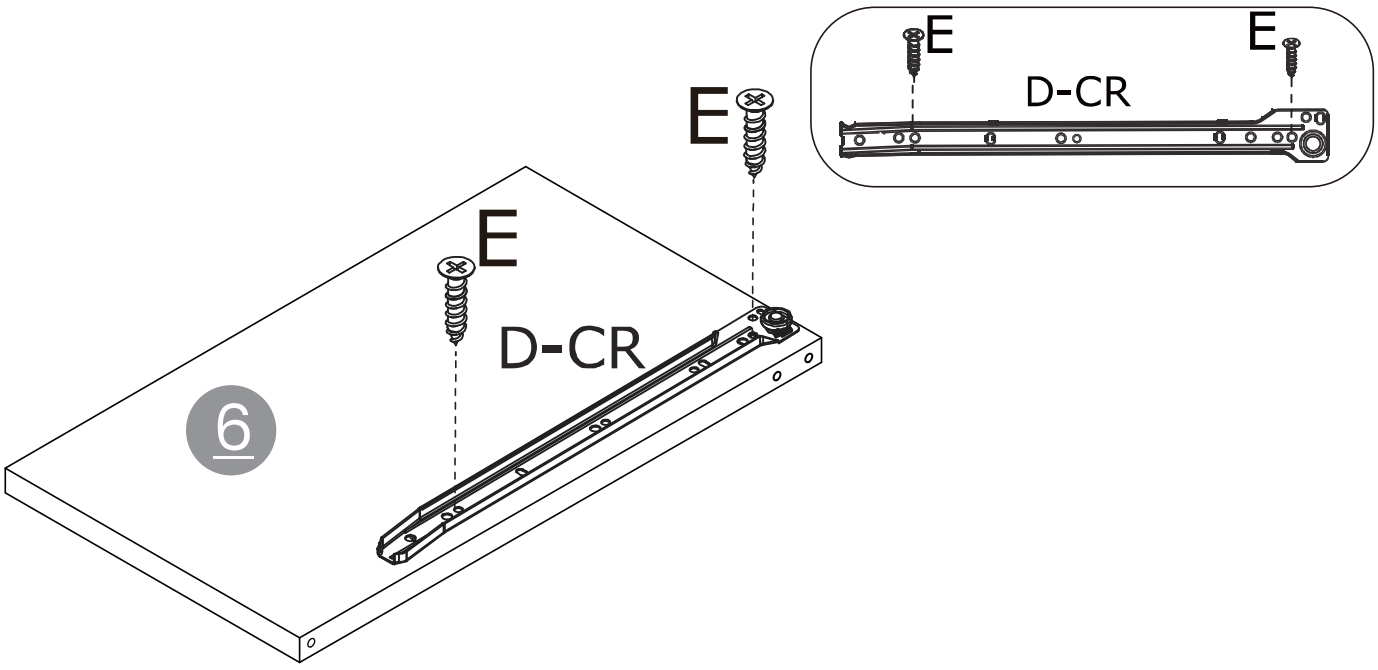


(*2) Please repeat this step twice.


6

B x 4



∅15 x 11 mm



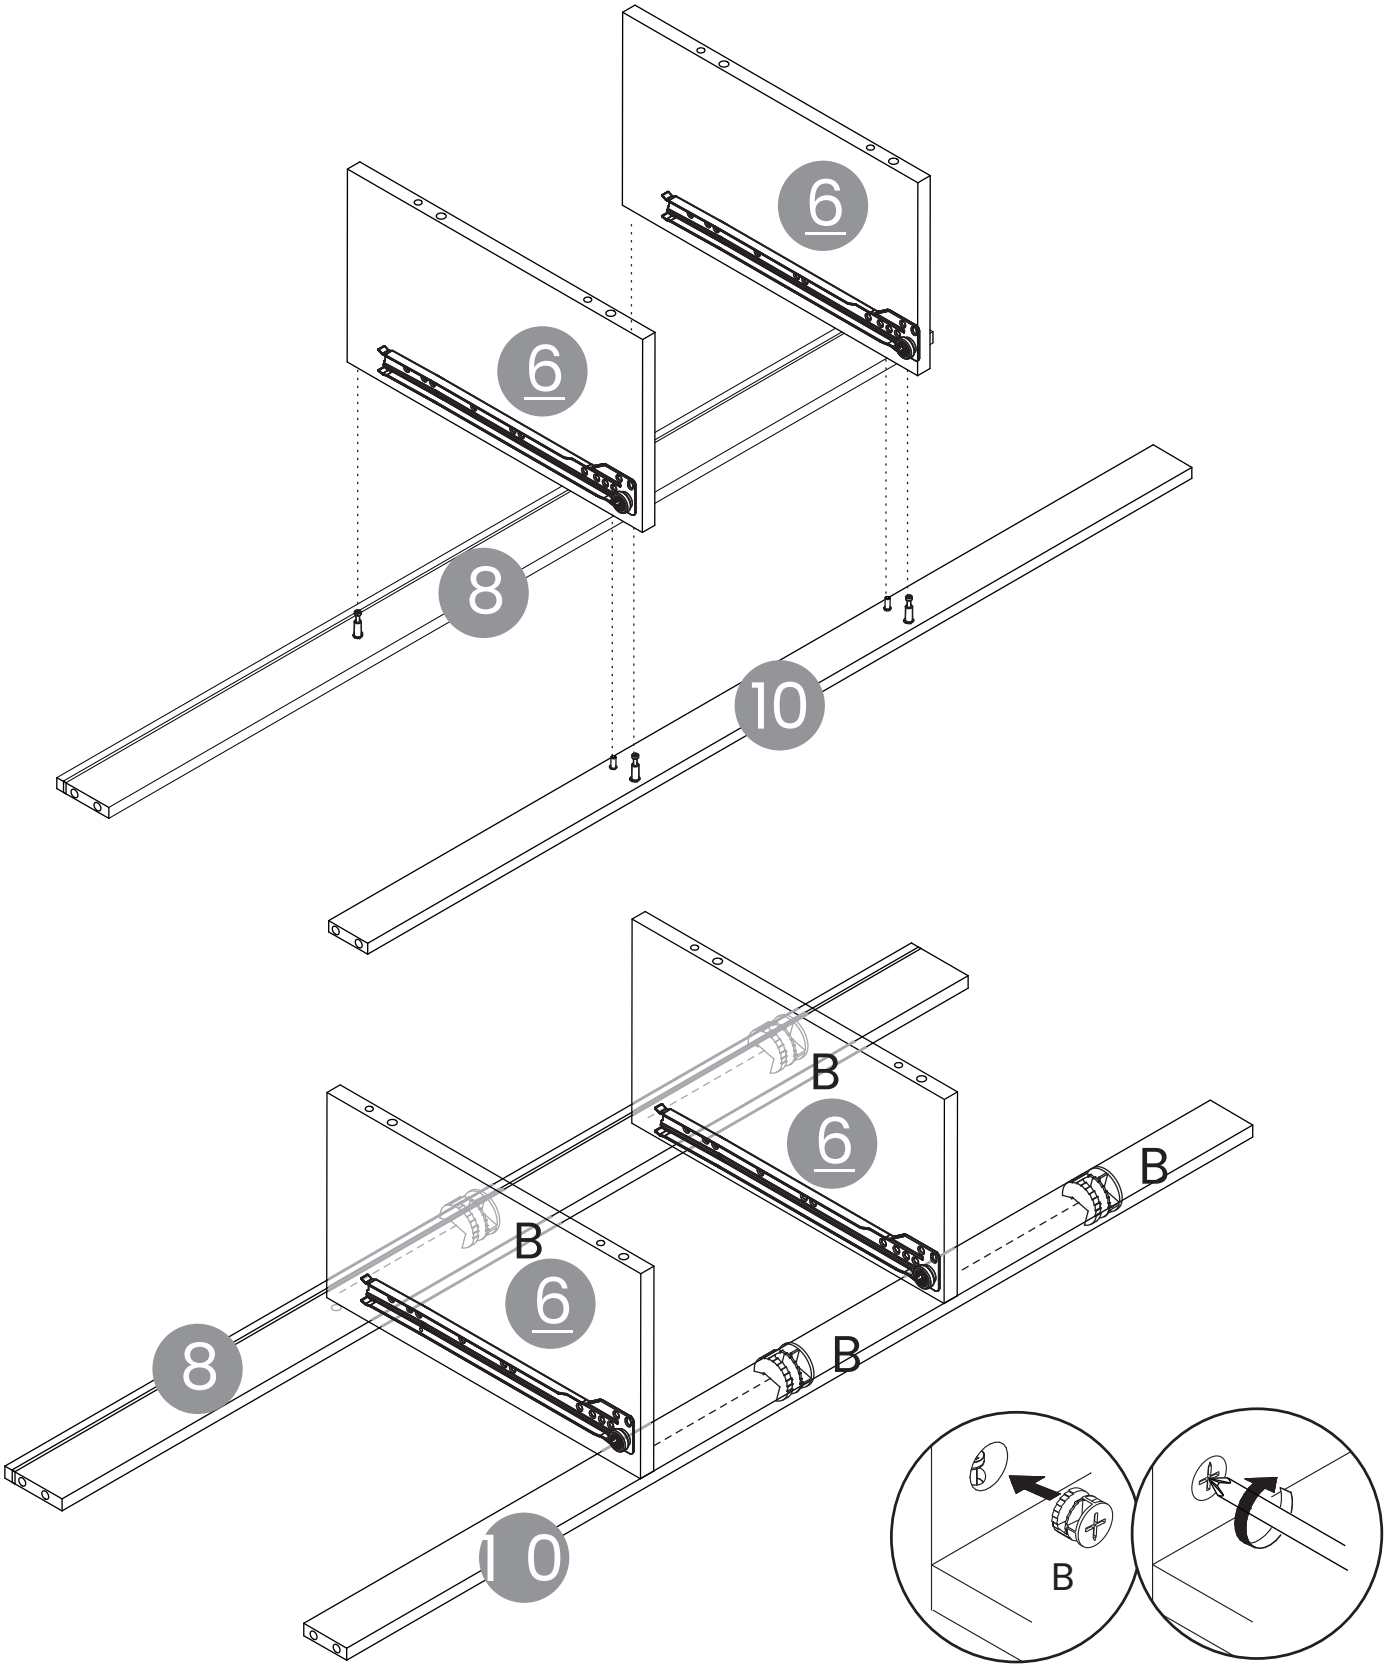



7

B x 4



∅15 x 11 mm



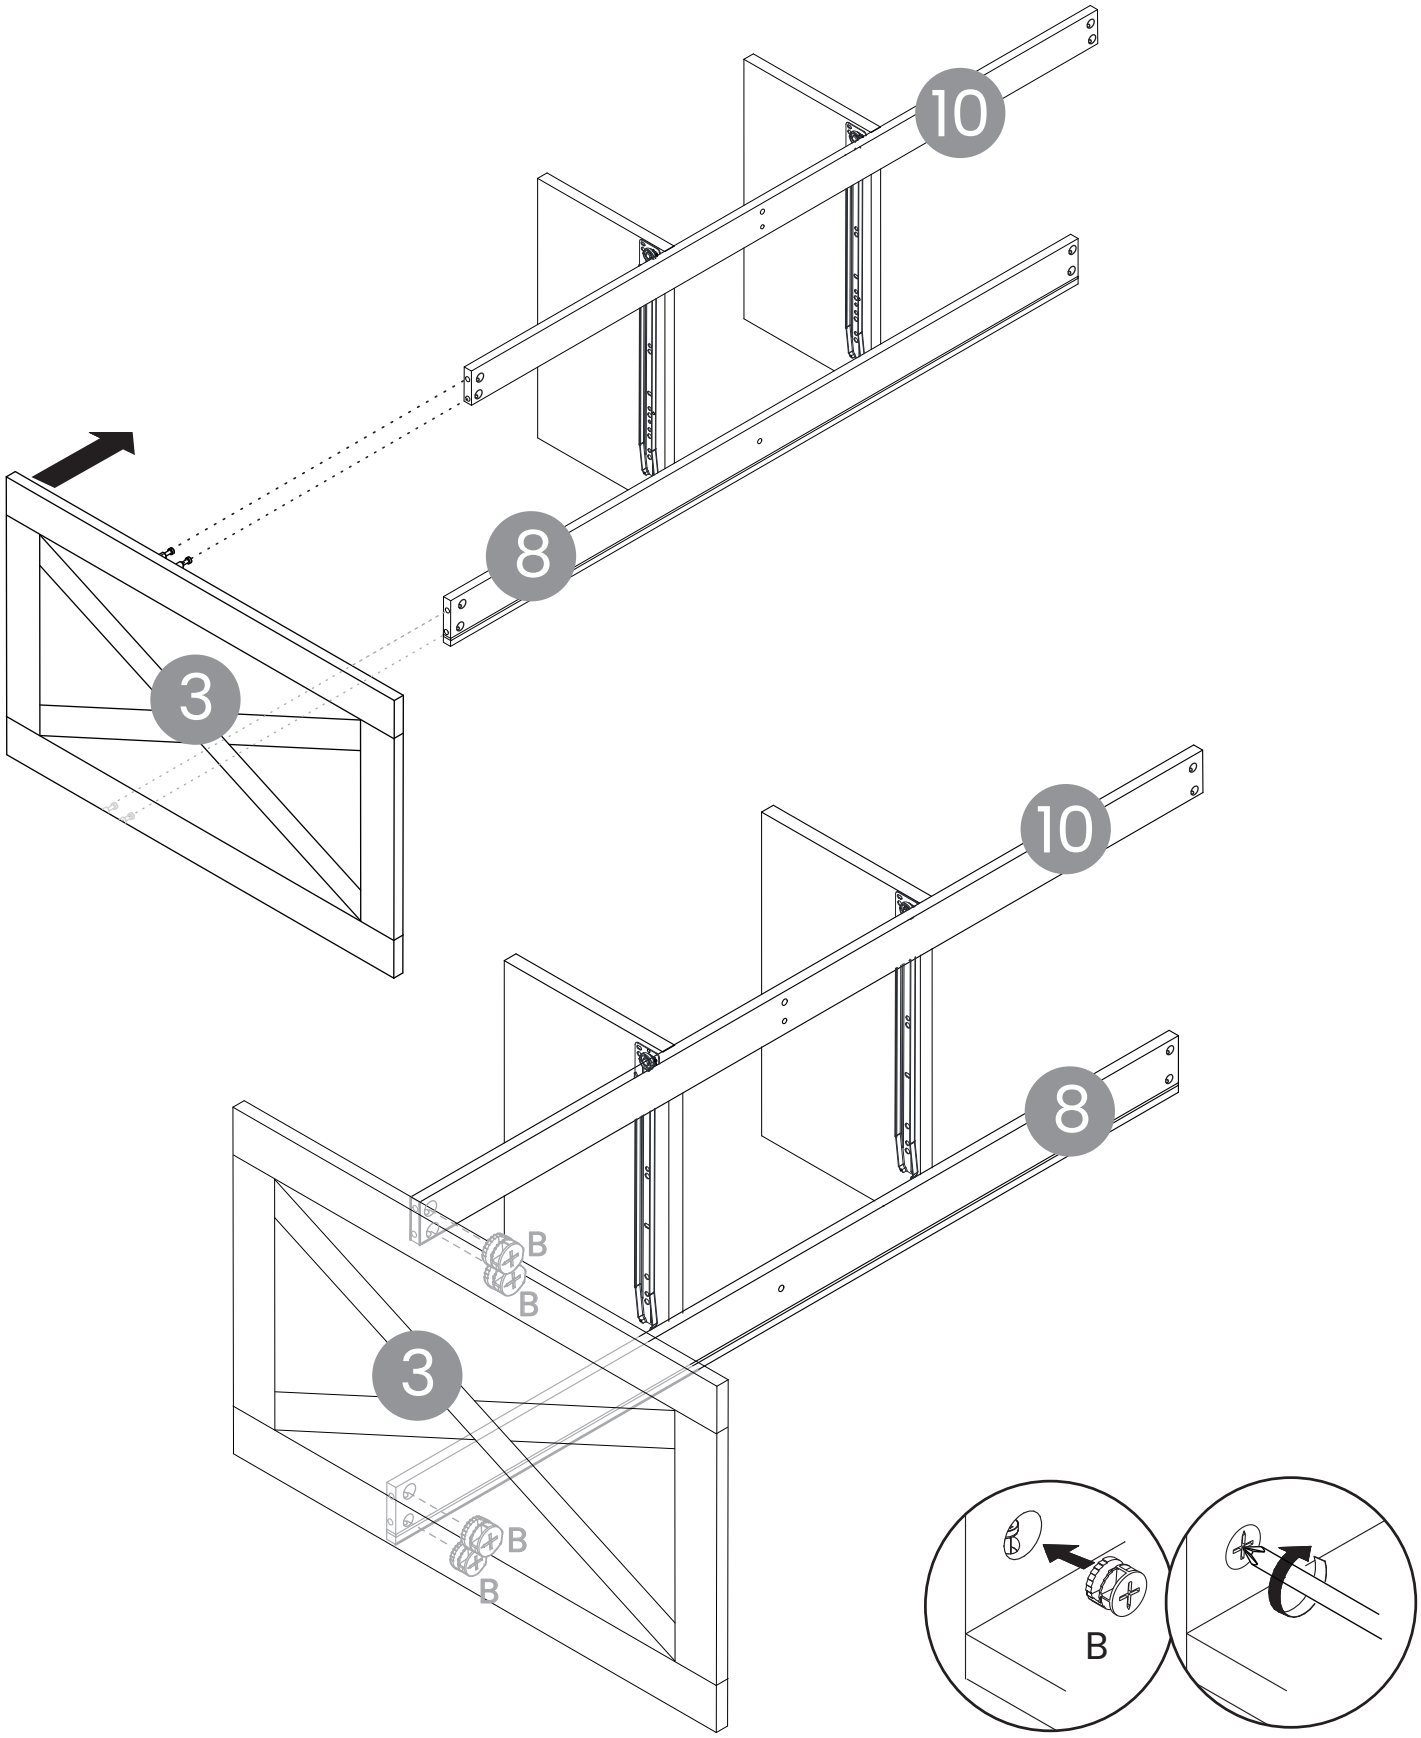



8


B x 4



∅15 x 11 mm




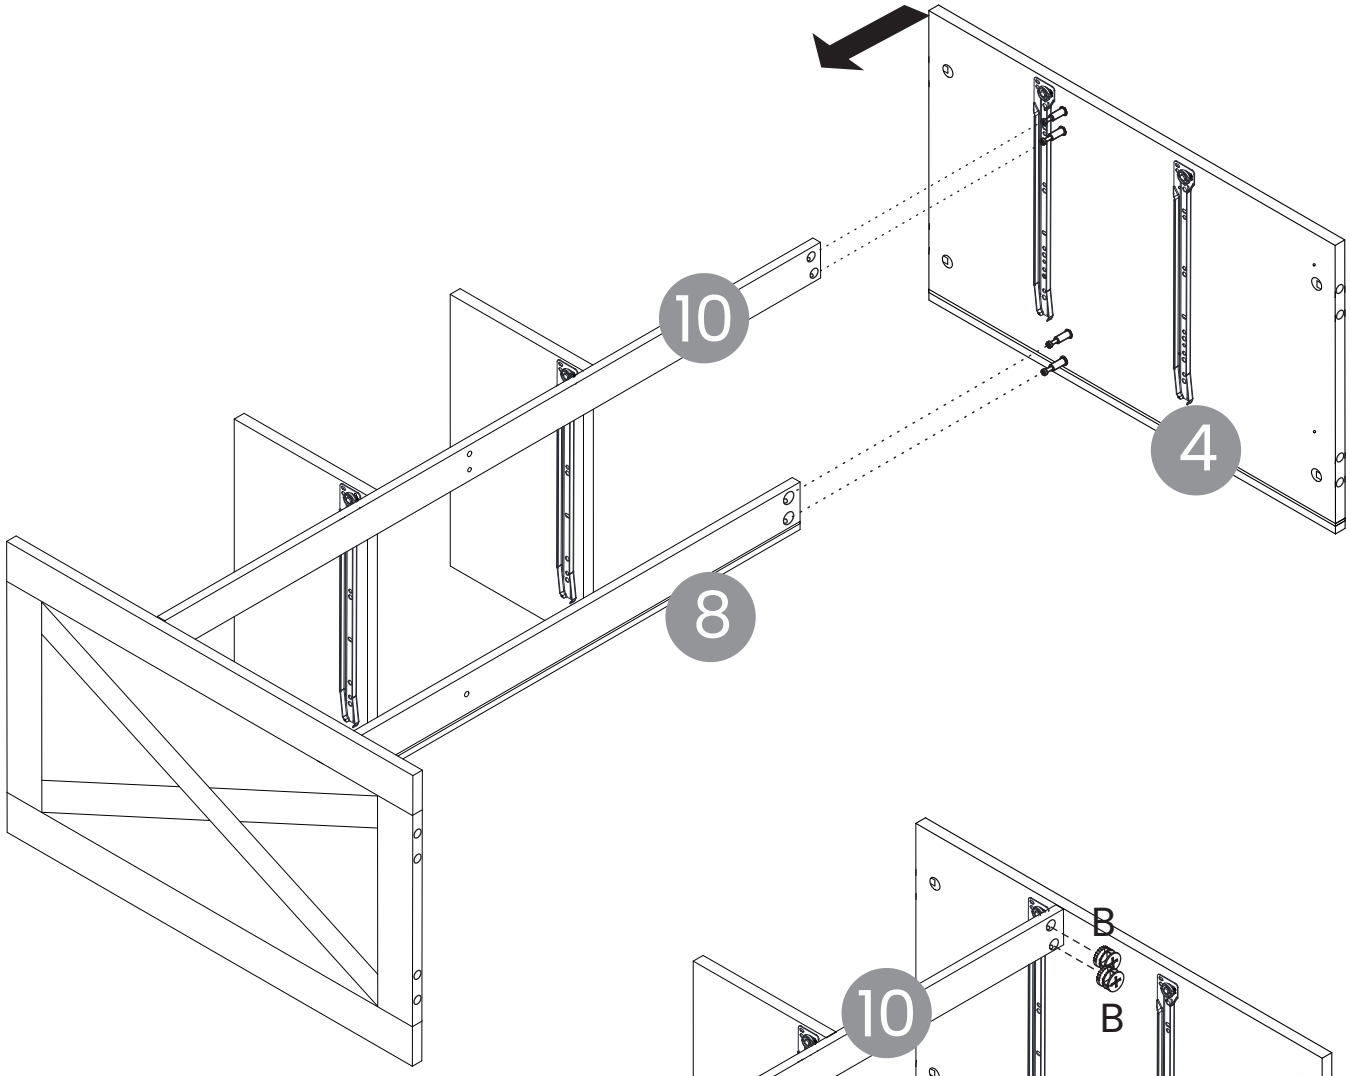


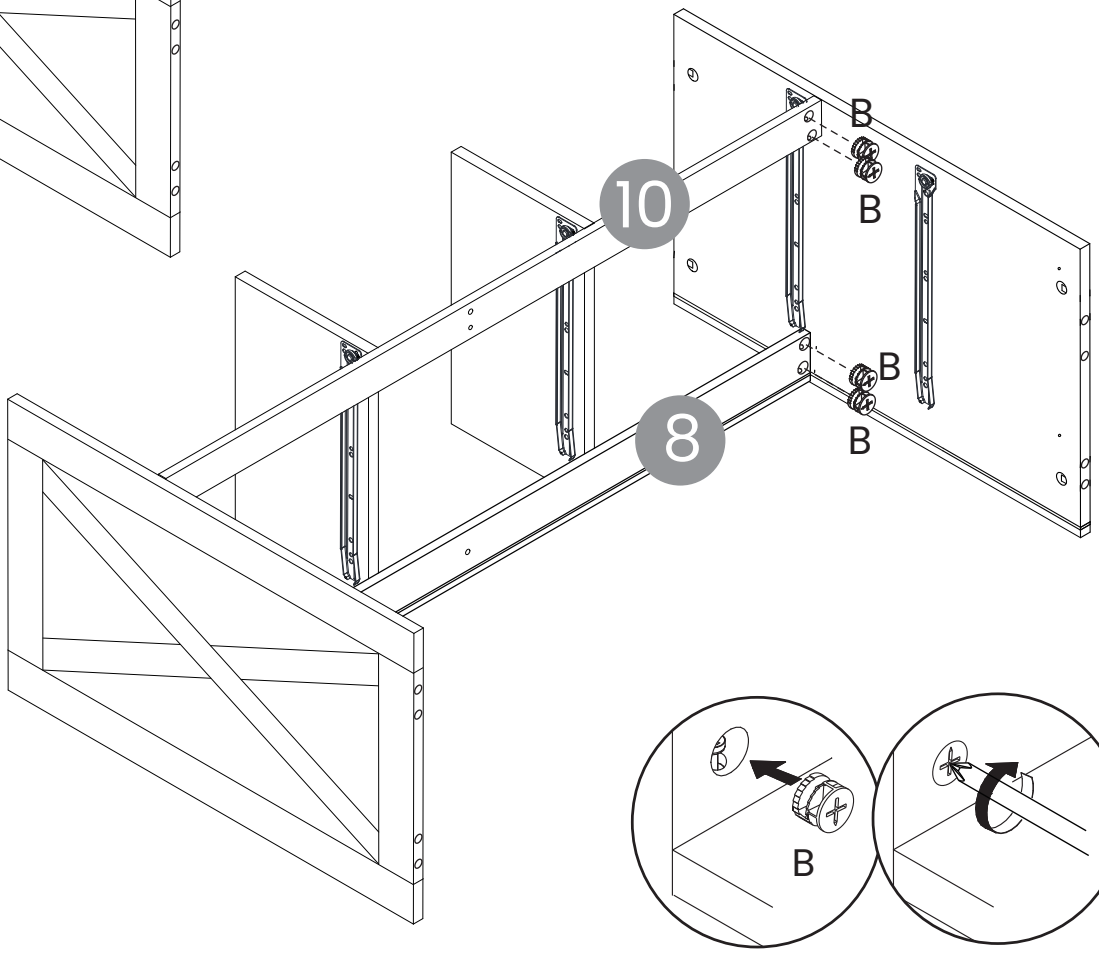

9


A x 2	P x 1	
∅ 5 x 35 mm	∅8 x 30 mm	

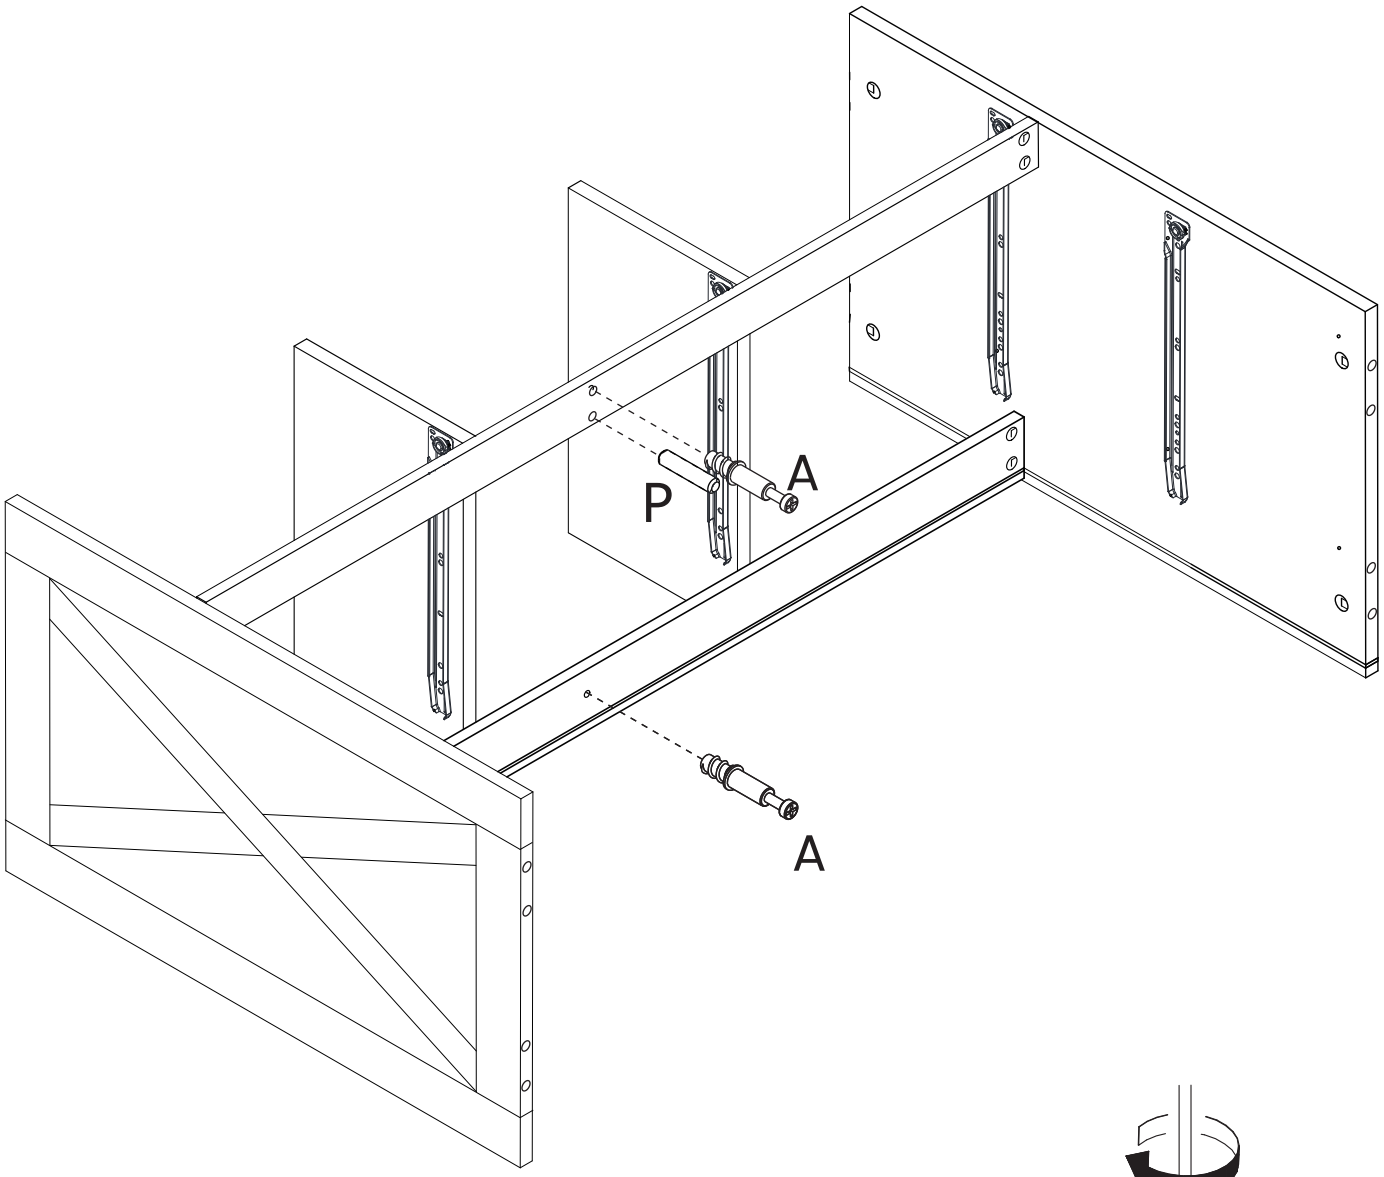

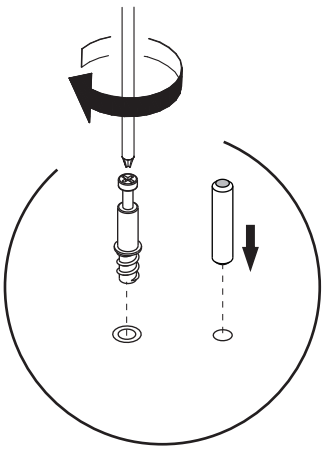

10

Dx1	Dx2	Ex 4	Rx2	
CL L=300mm	CR L=300mm	∅3 x 12 mm	∅3.5X12mm	

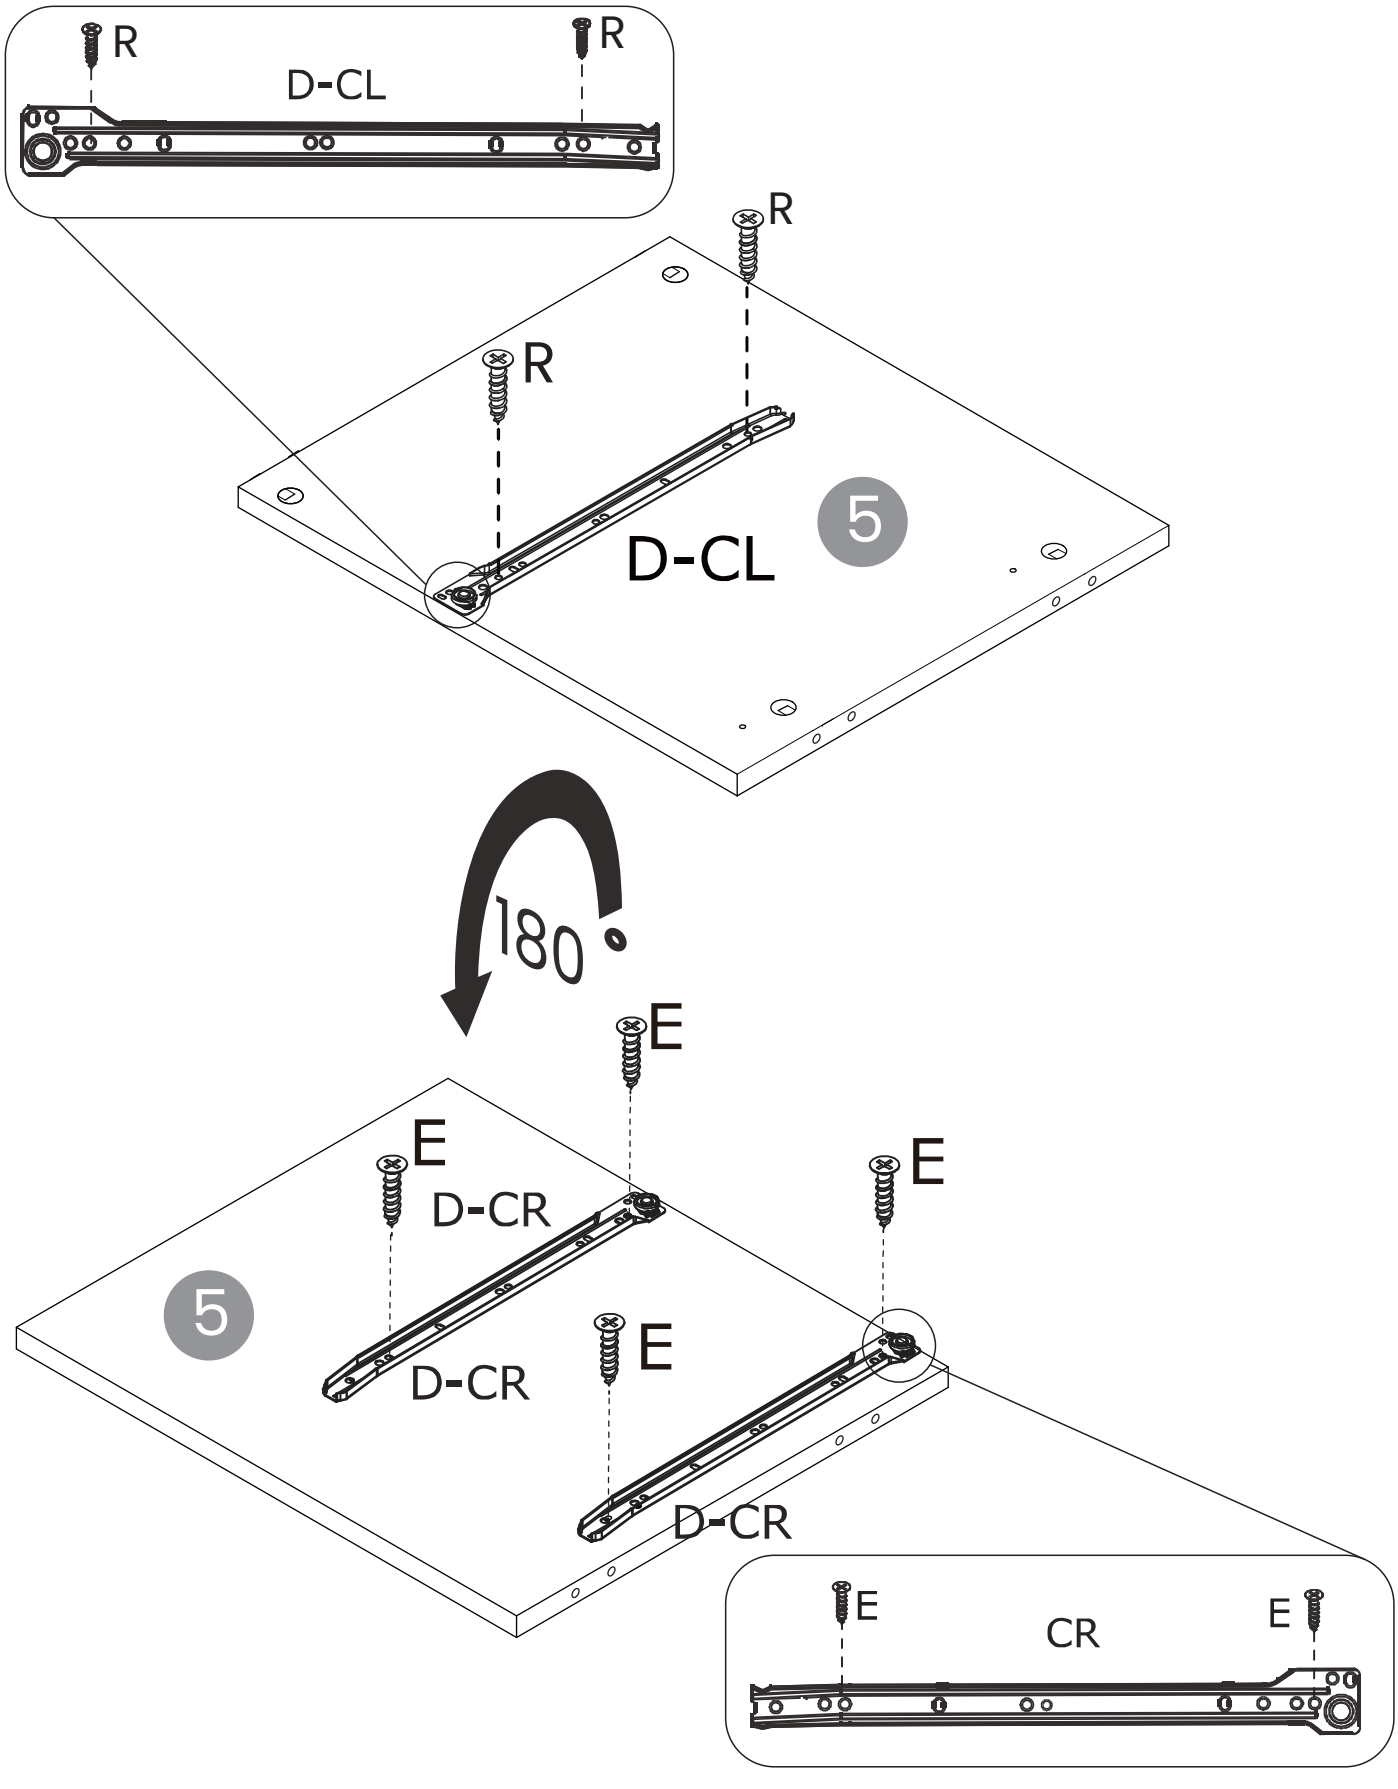



11


B x 2




15 x 11 mm



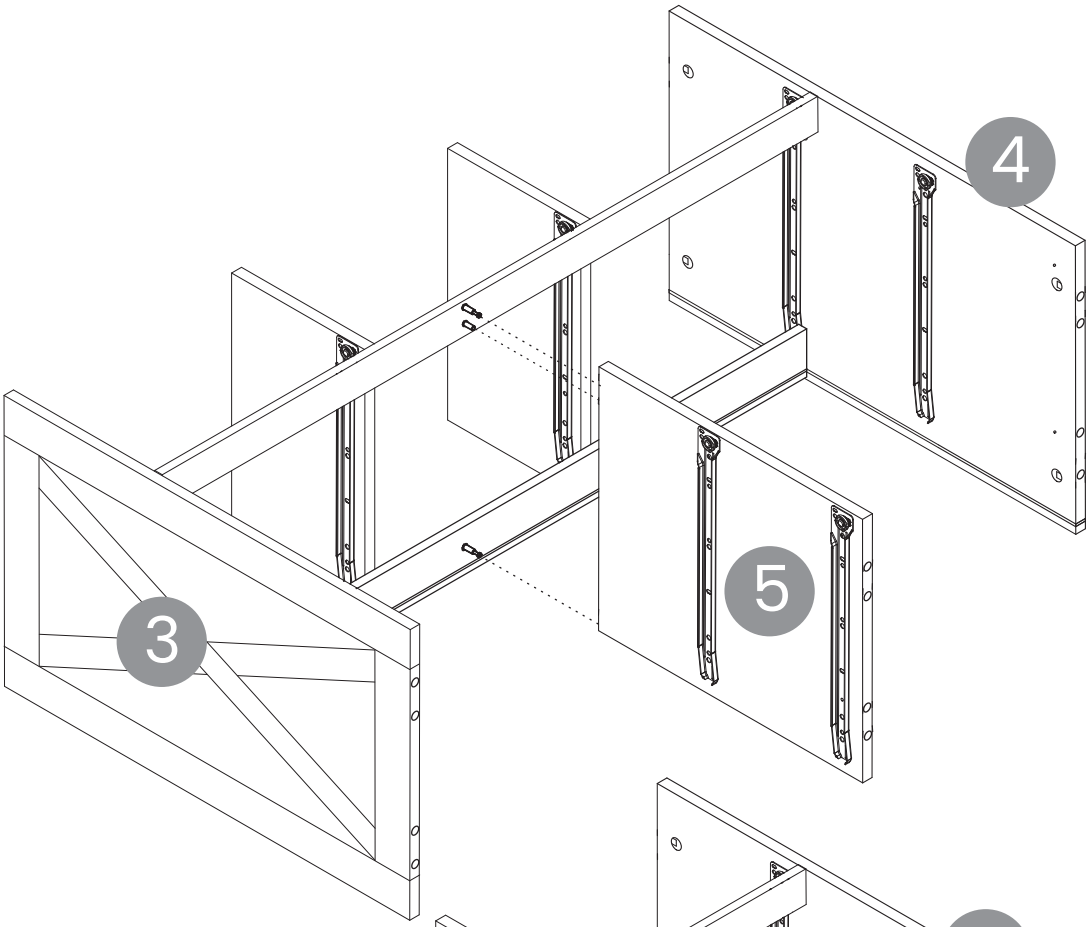

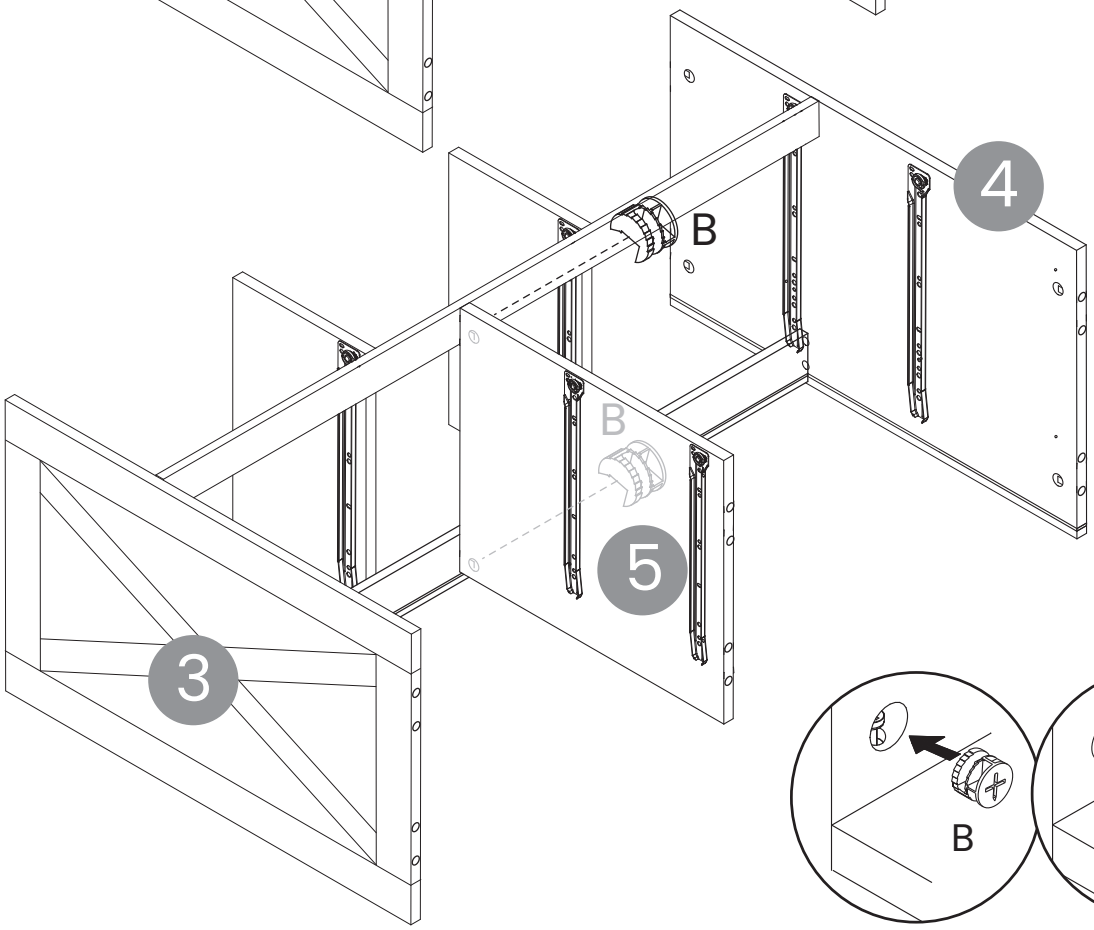


12

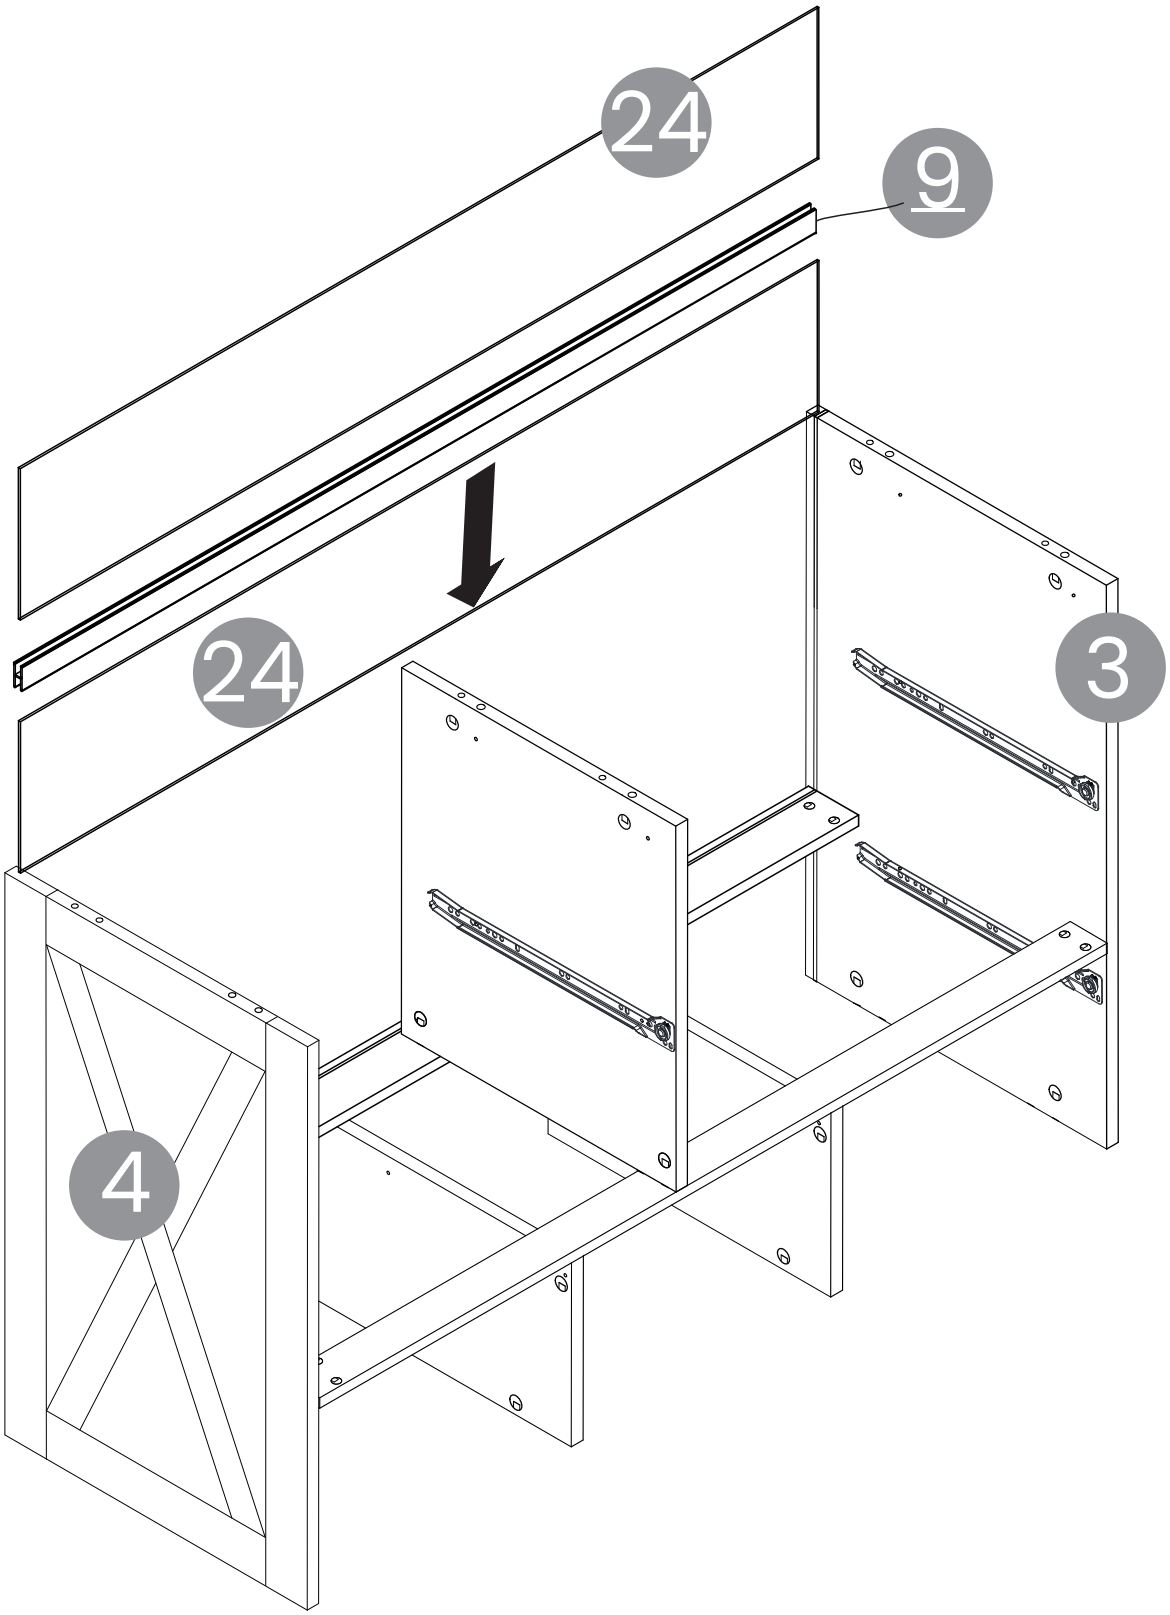


13

N x 4	Q x 4	
∅6x25mm	∅4 x 12 mm	

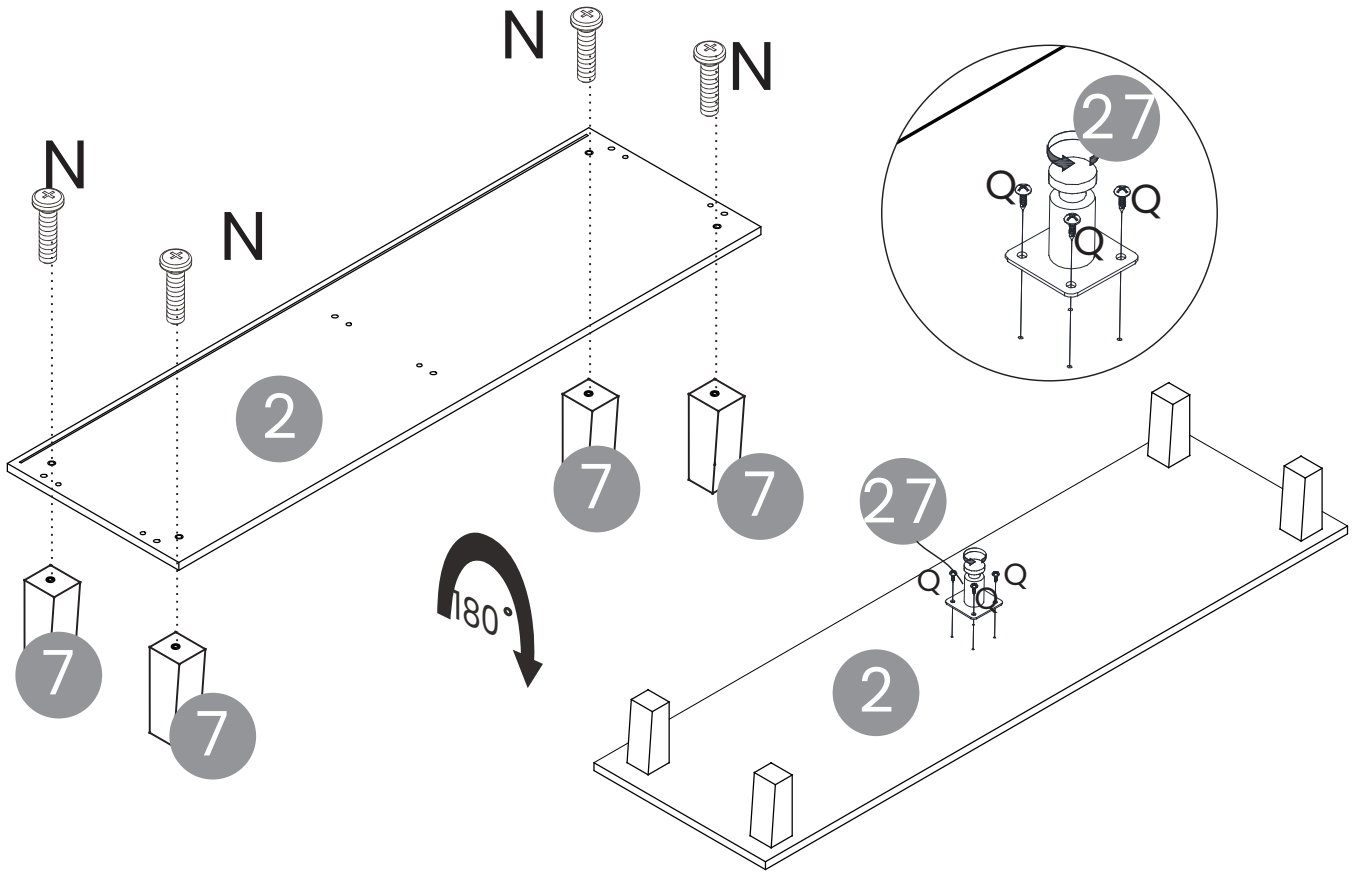


14


A x 6	C x 4	P x 2	
∅6 x 35 mm	∅6 x 30 mm	∅8 x 30 mm	

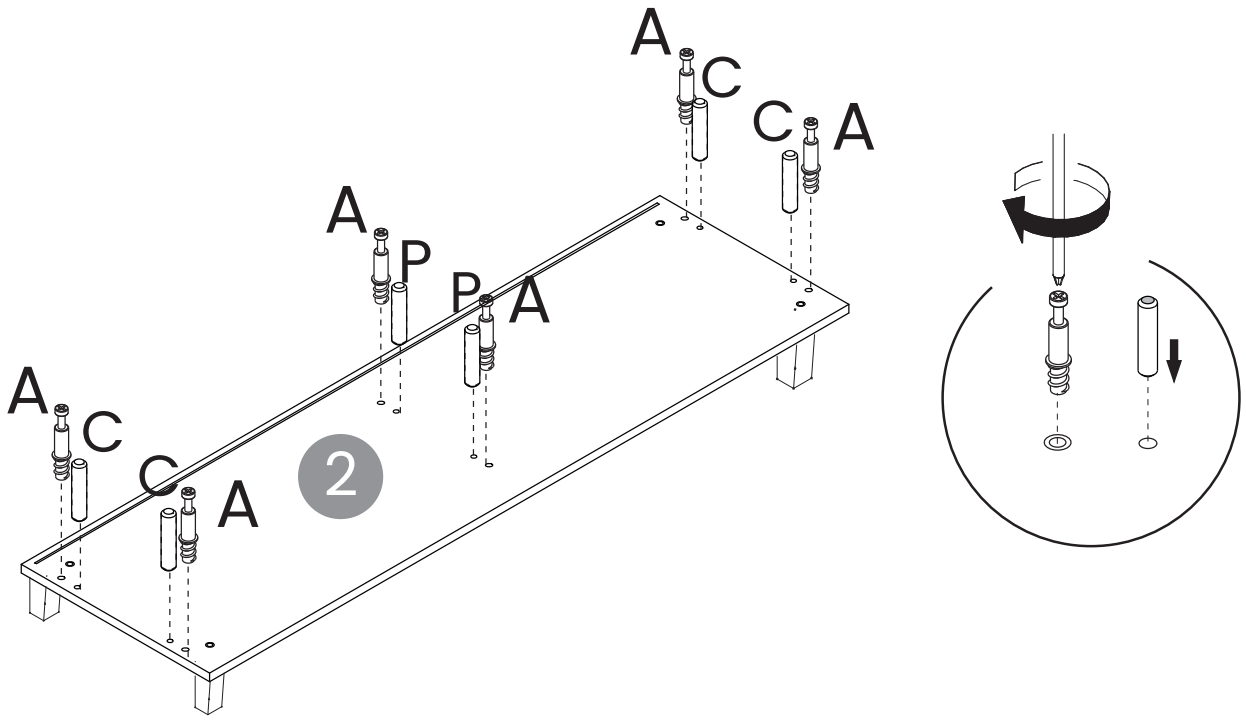

15


B x 2	J x 4	
∅15 x 11 mm	∅15 x 9.5 mm	

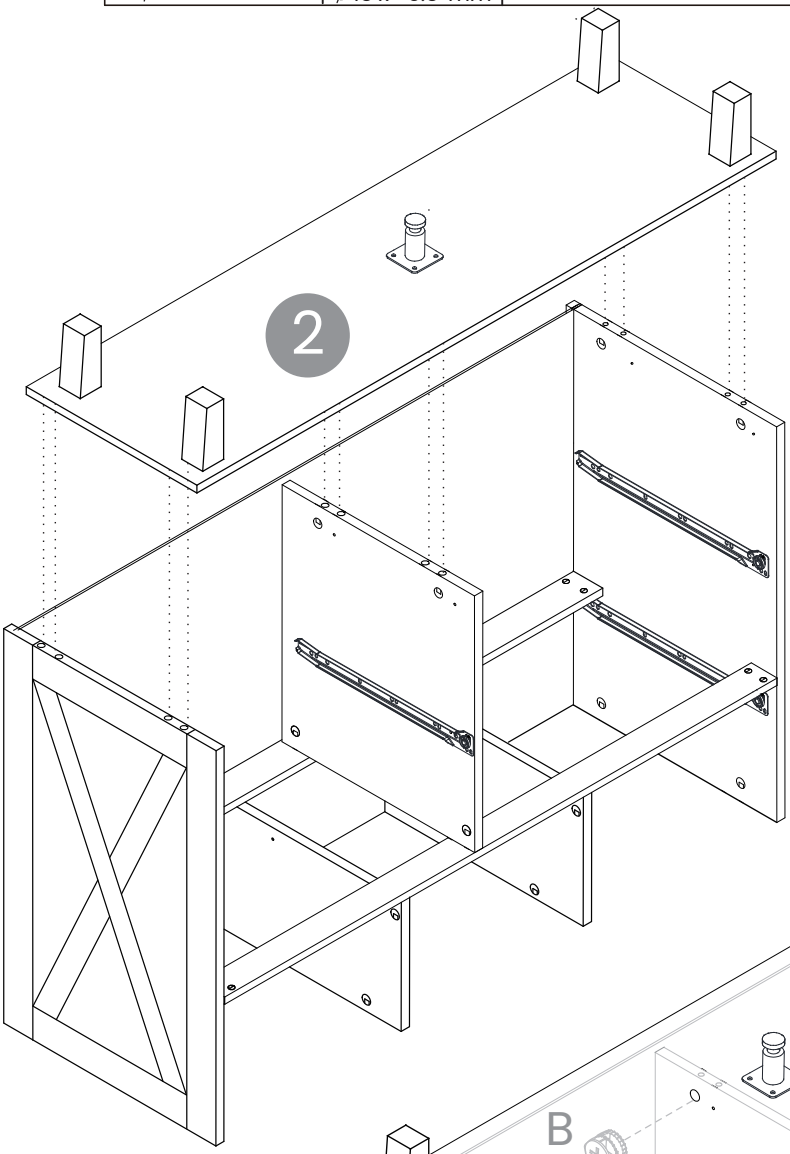

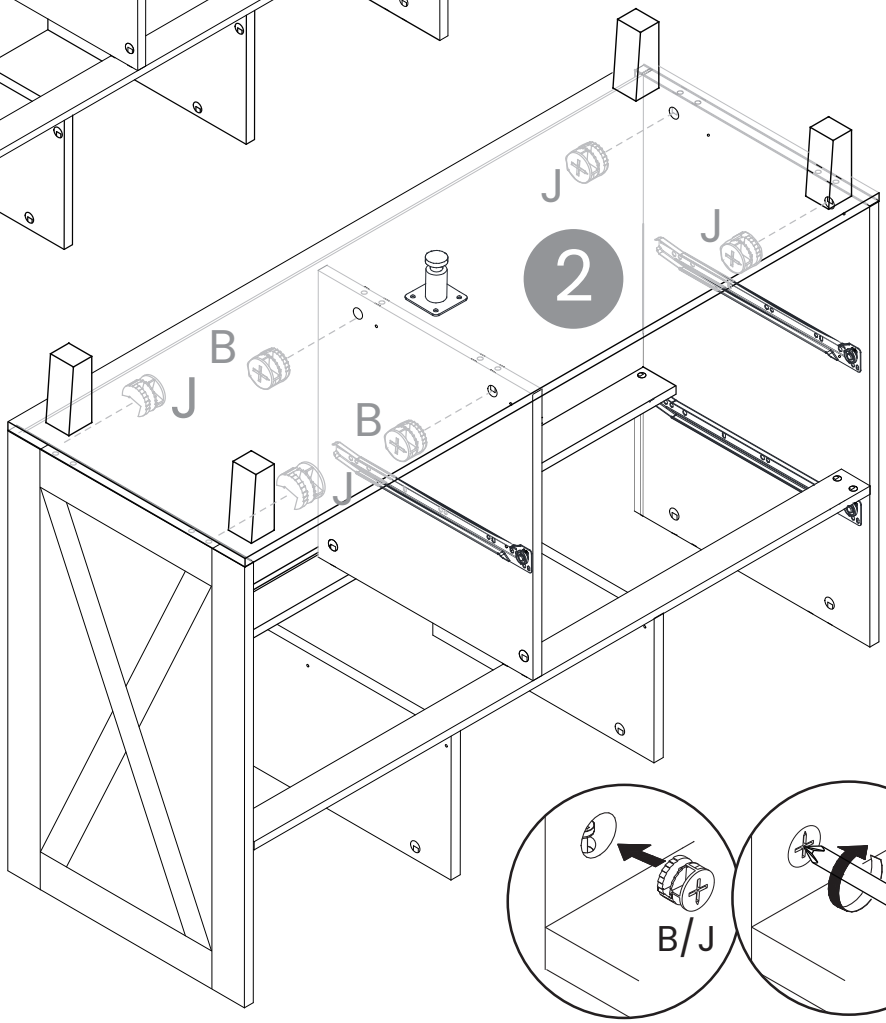


16


Dx4	Ex2	Rx6	
CL L=300mm	∅3 x 12 mm	∅3.5X12mm	

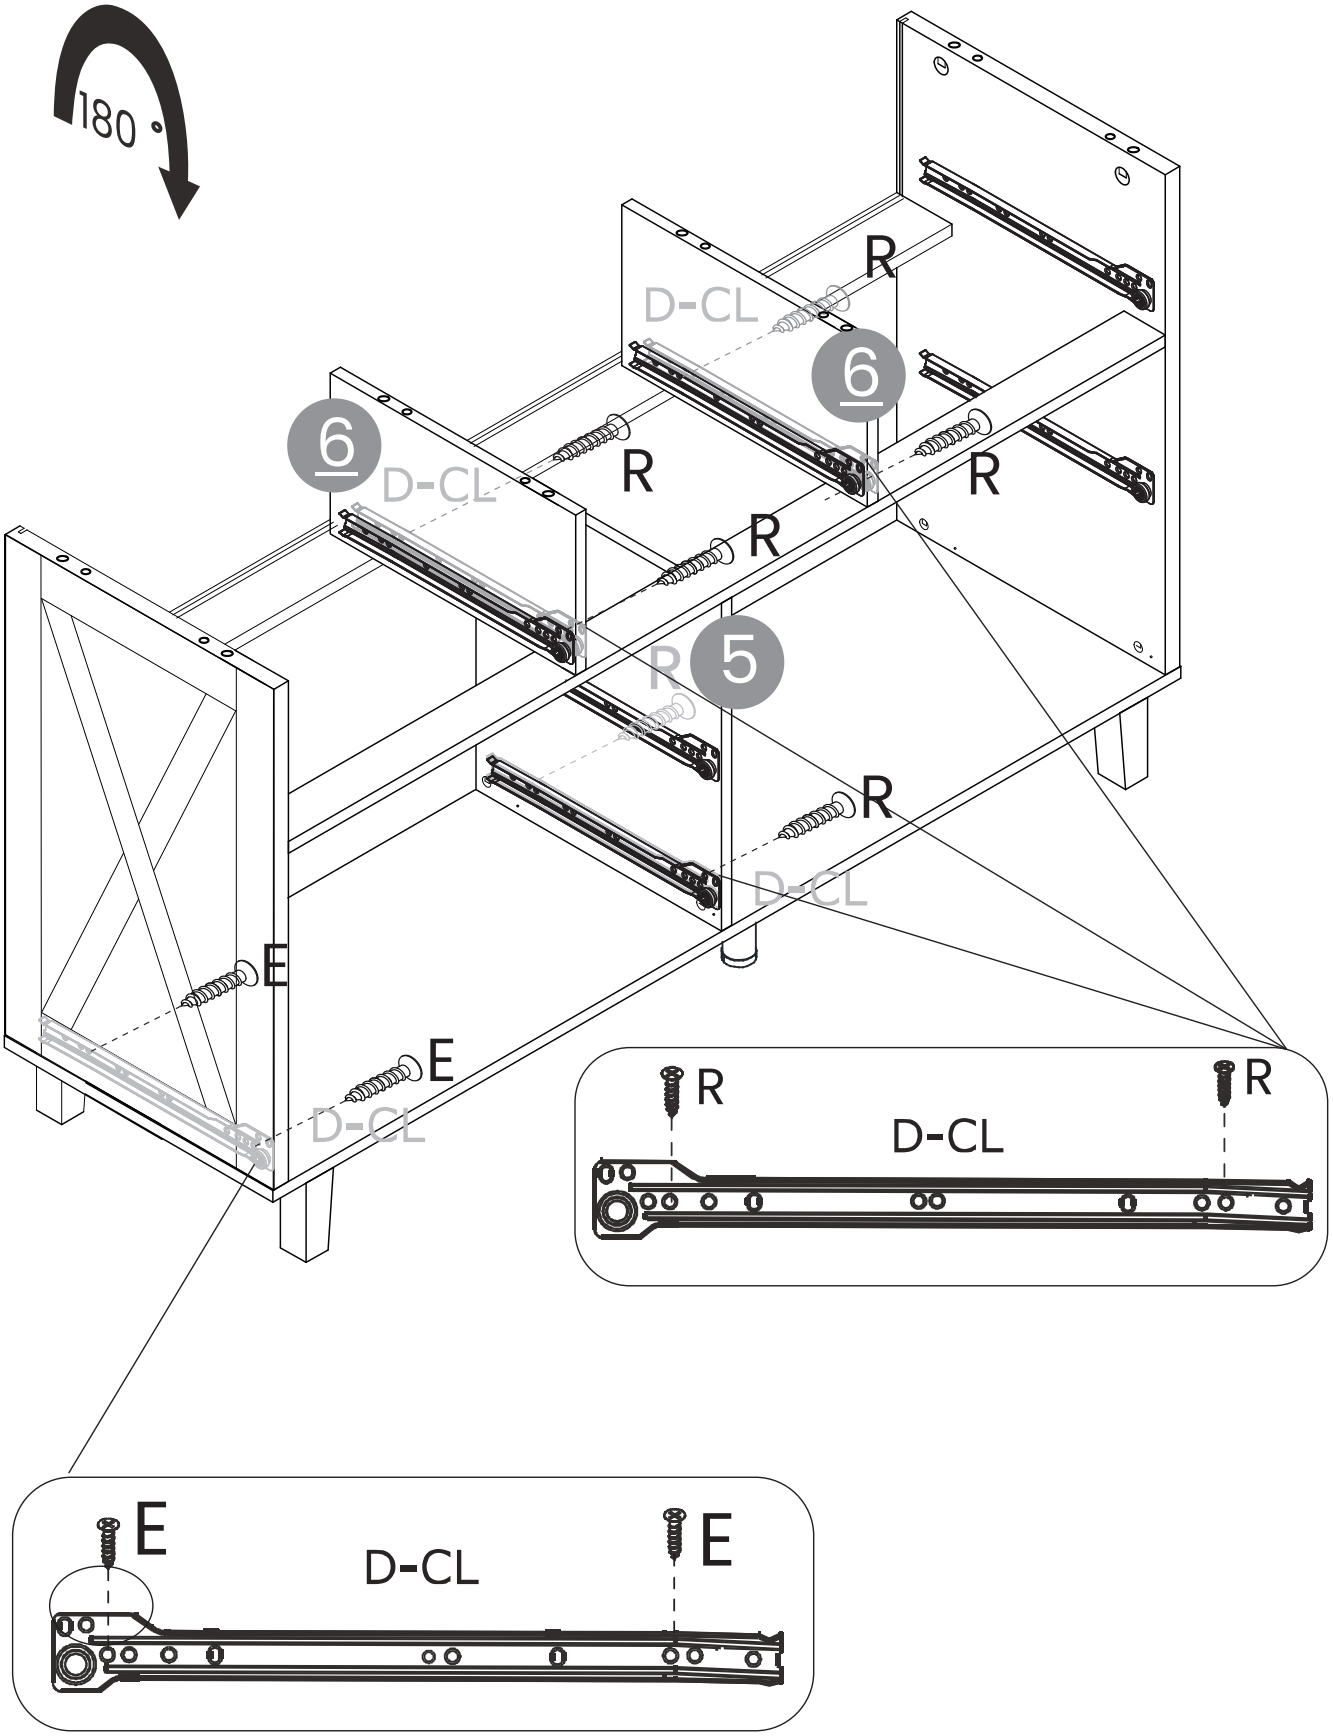


17

Dx1	Ex2	
CR L=300mm	∅3 x 12 mm	

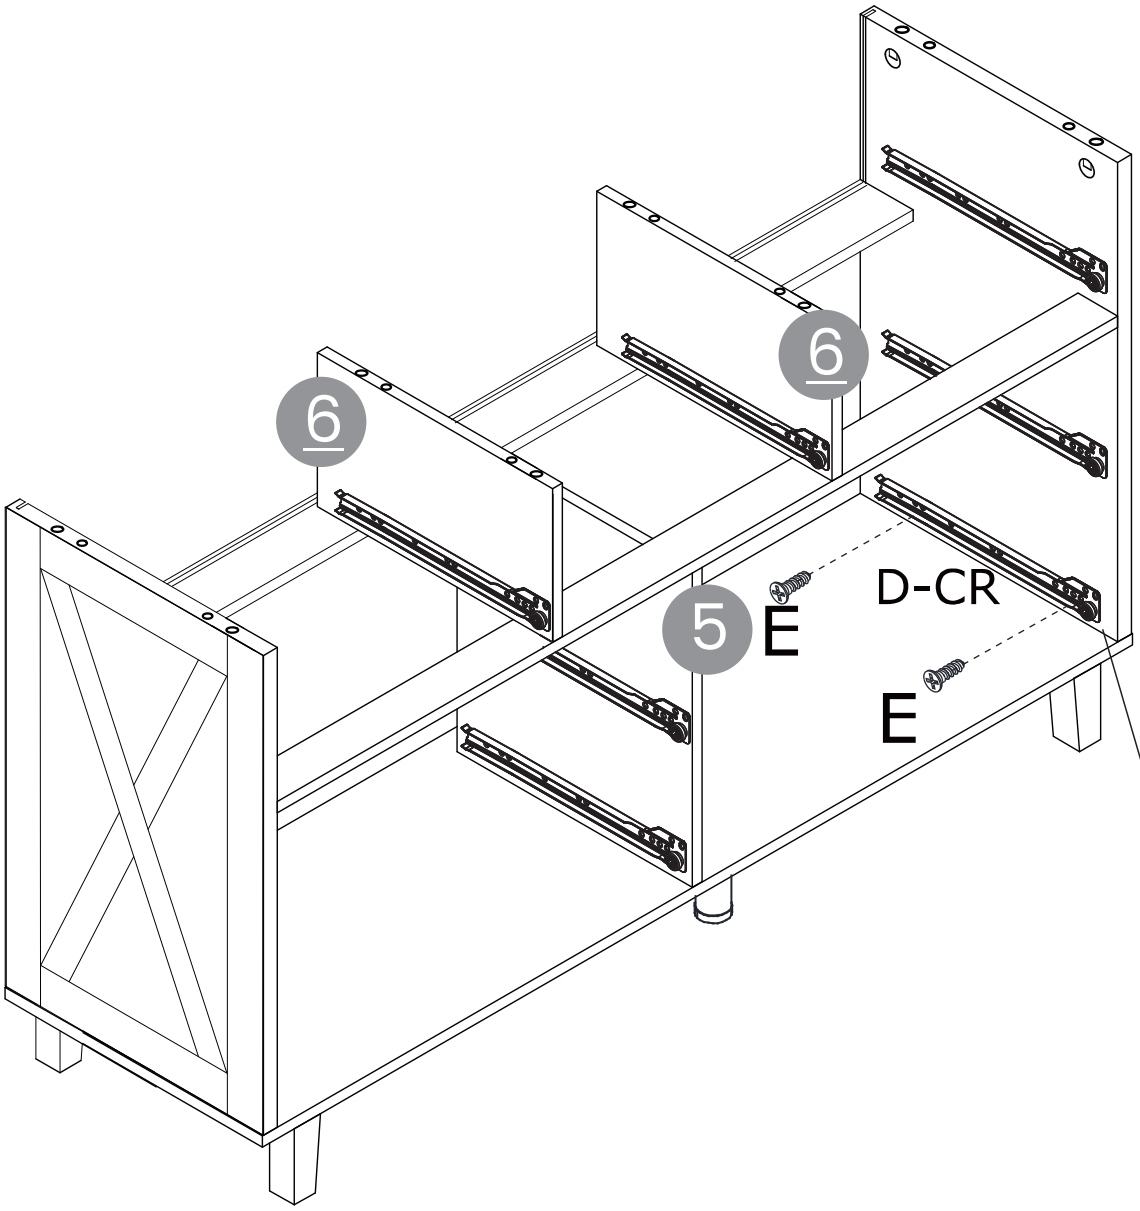

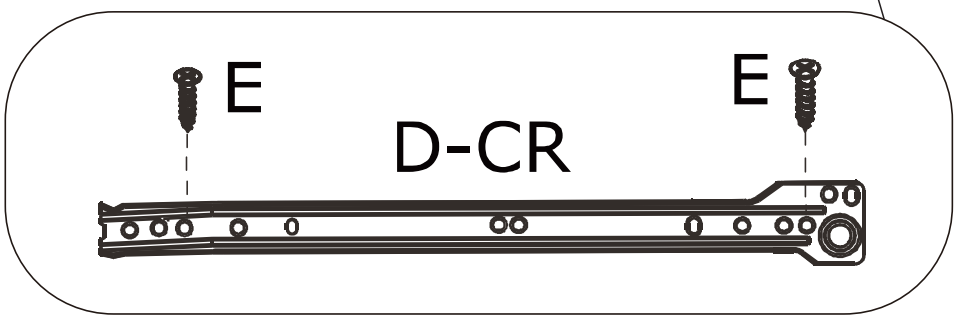

18

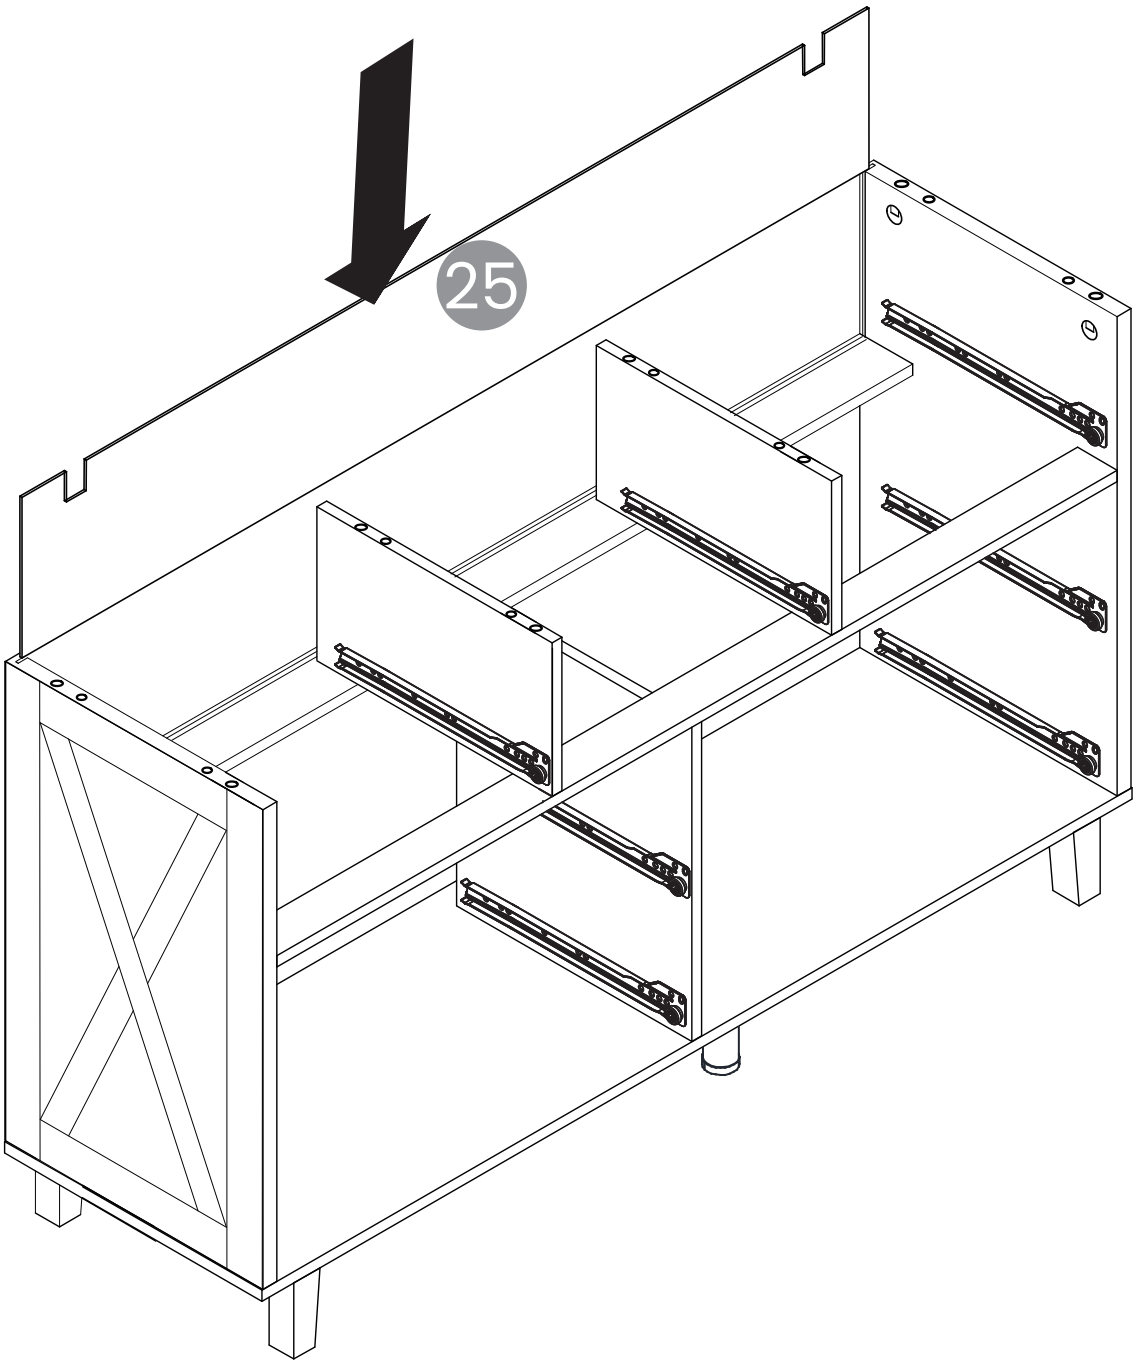



19

Mx 2






∅4X12mm



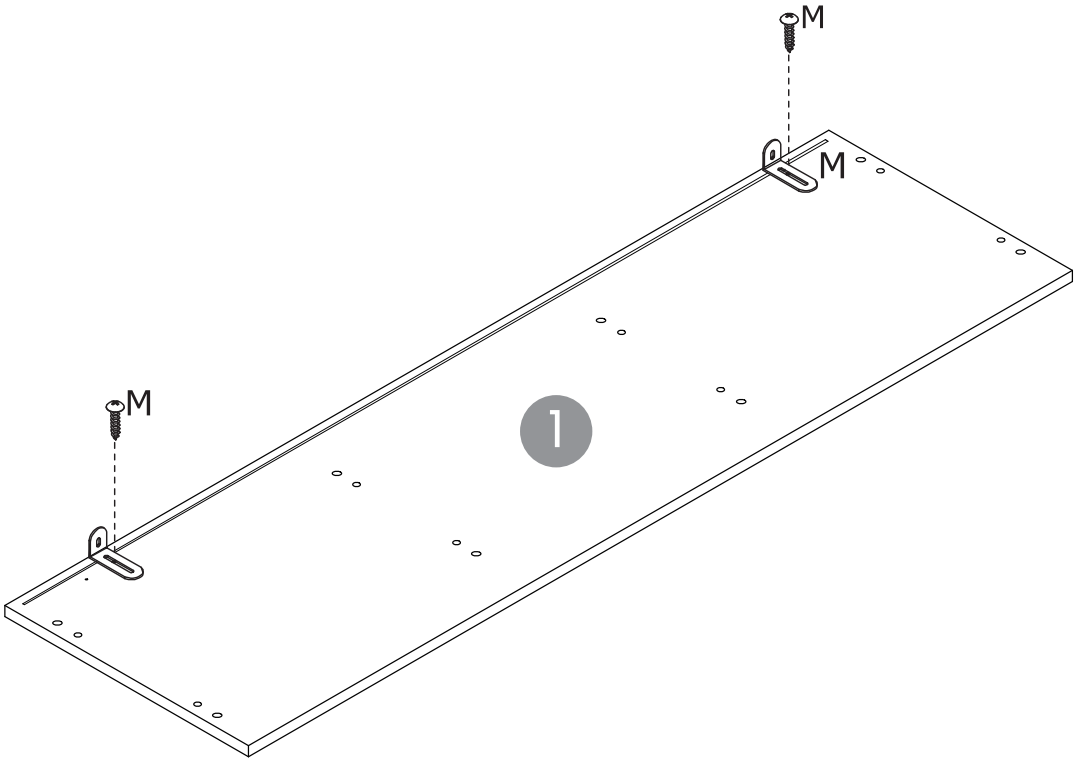


20

A x 8	C x 4	P x 4	
			
∅ 5 x 35 mm	∅8 x 30 mm	∅8 x 30 mm	

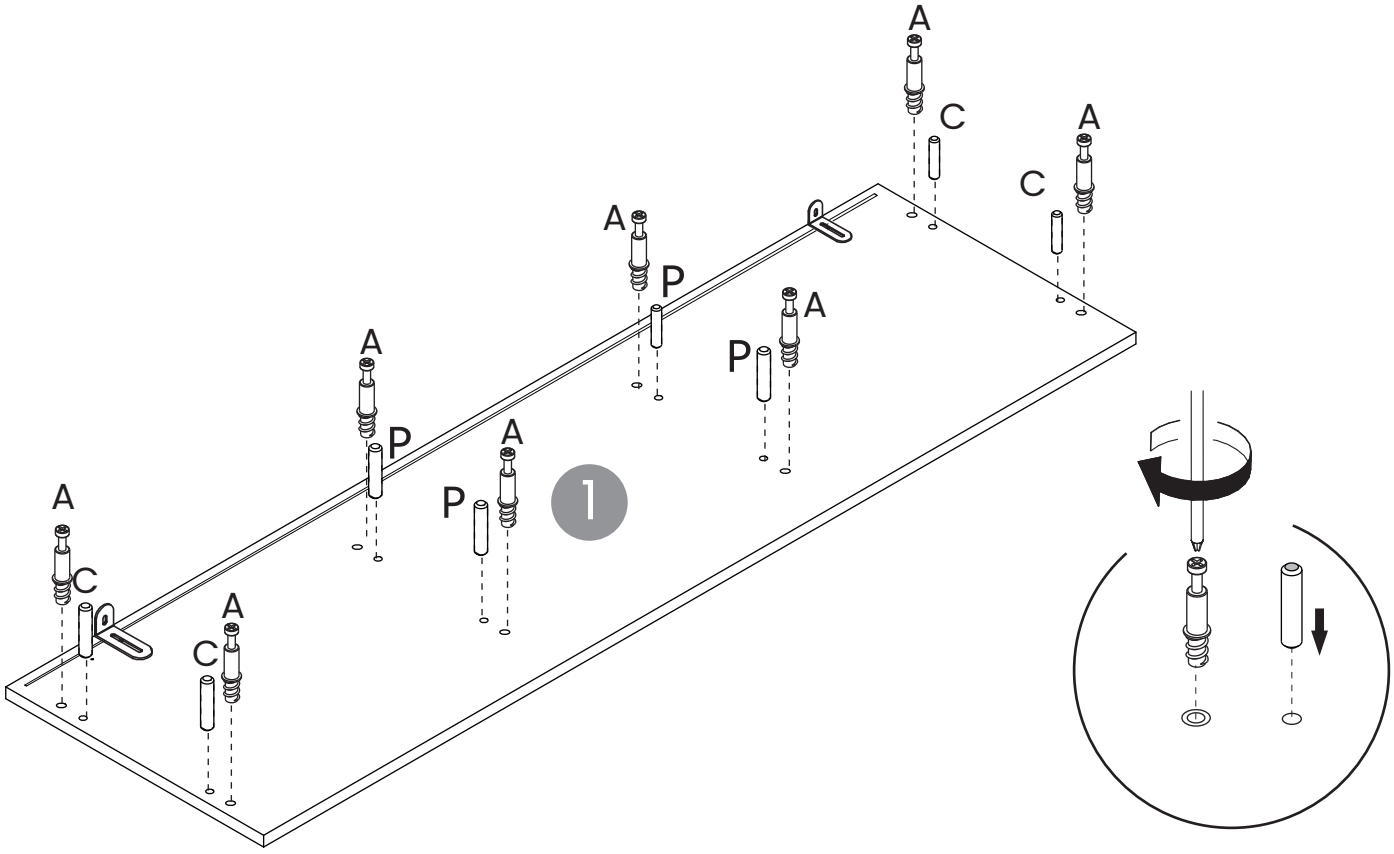


21

B x 4	J x 4	
∅15 x 11 mm	∅15 x 9.5 mm	

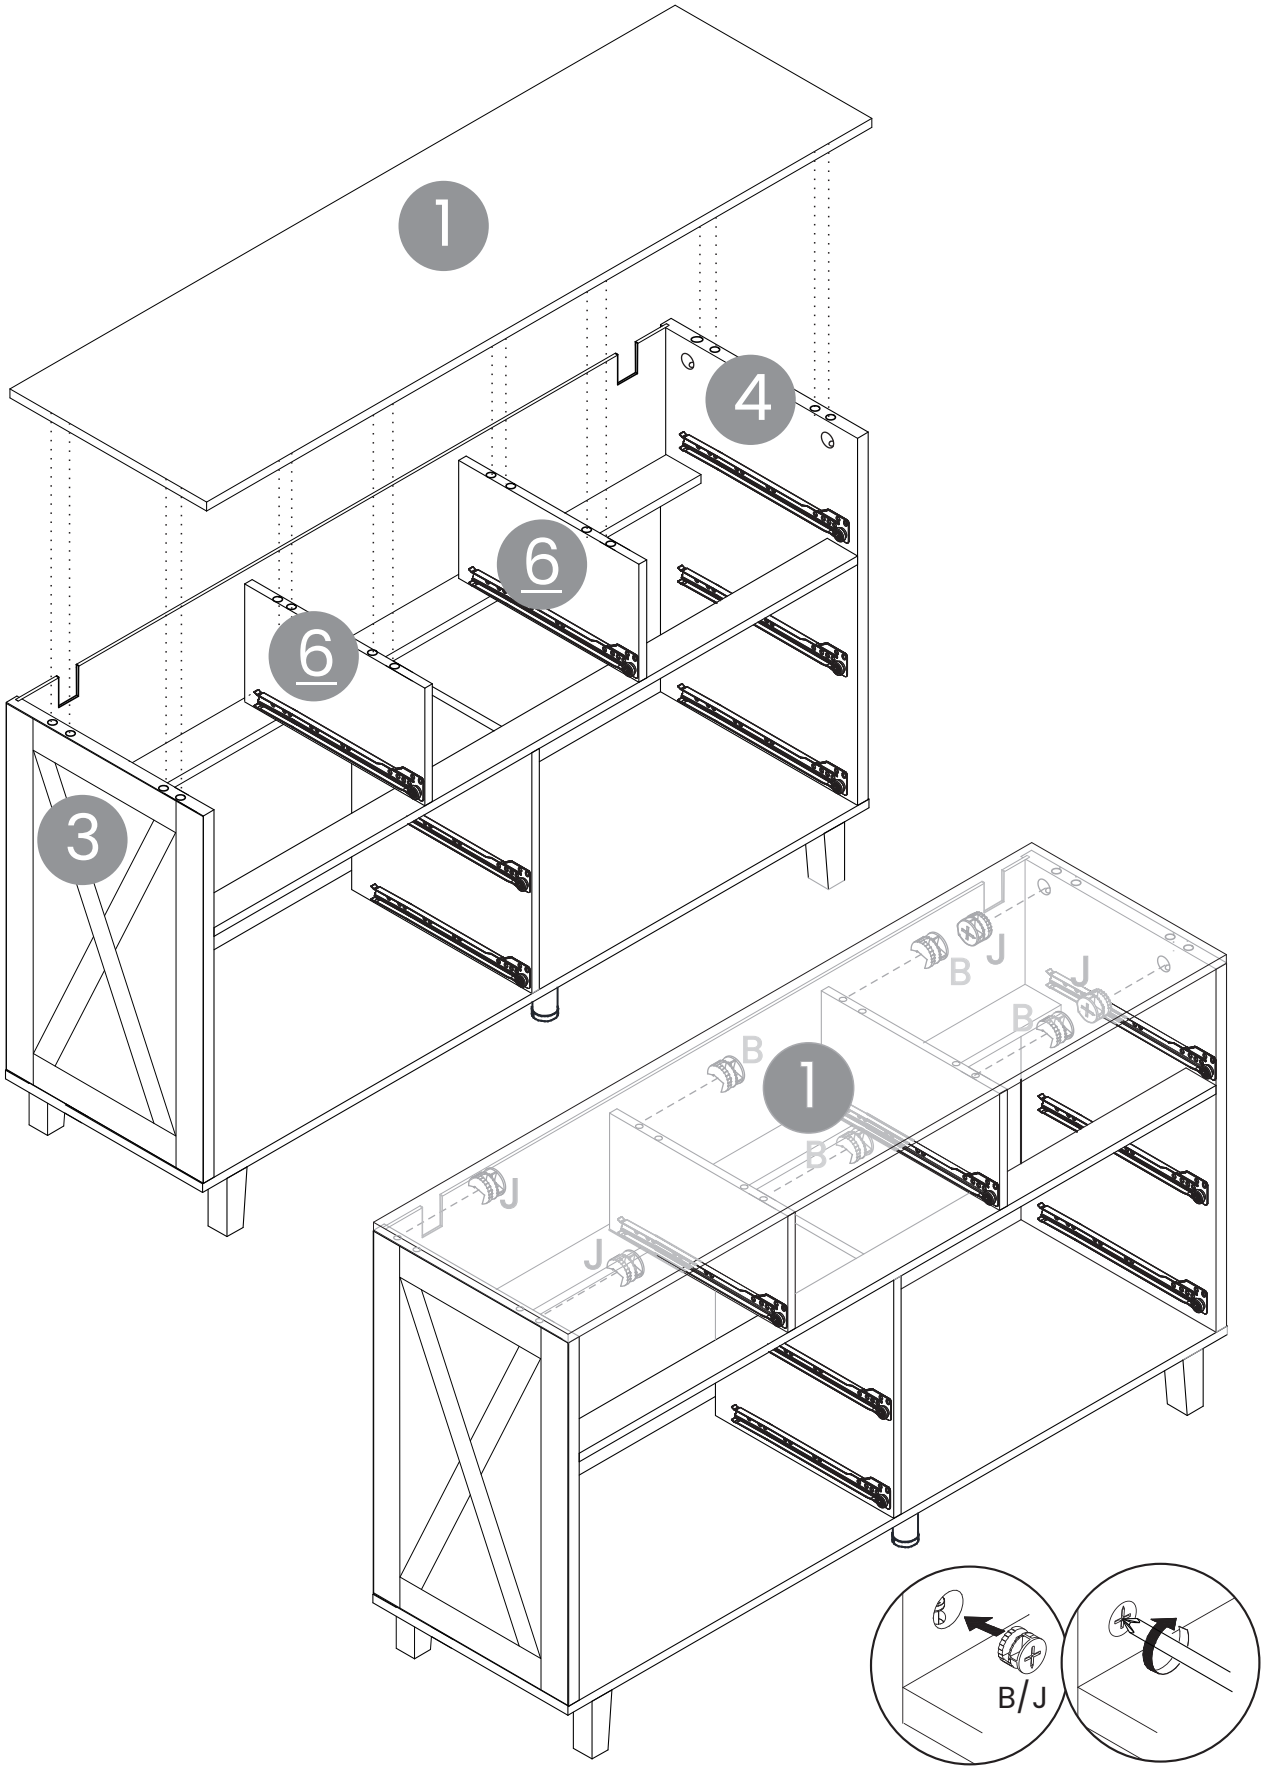

22

A x 12





∅6 x 35 mm

G x 3



∅4 x 22 mm



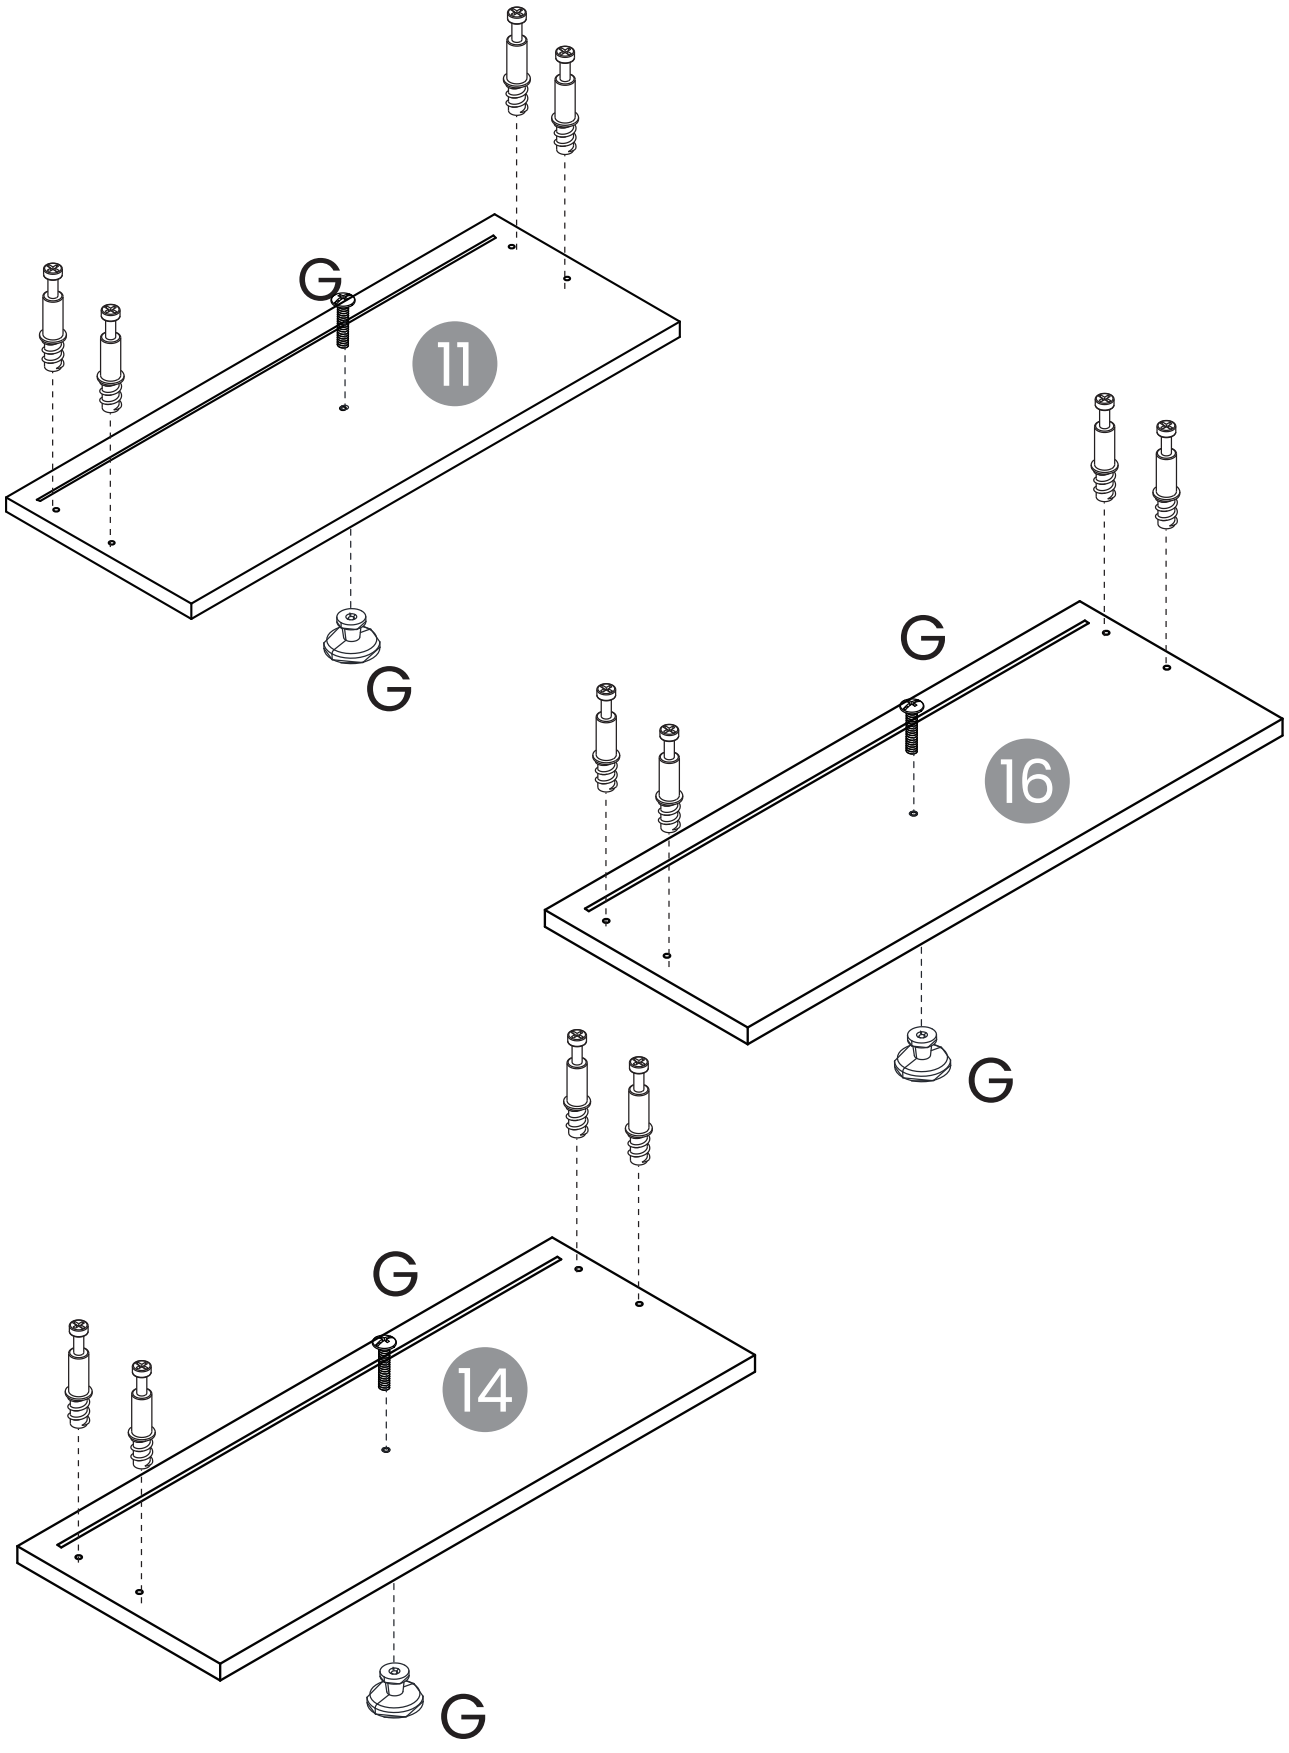



23

K x8



ø4X30mm



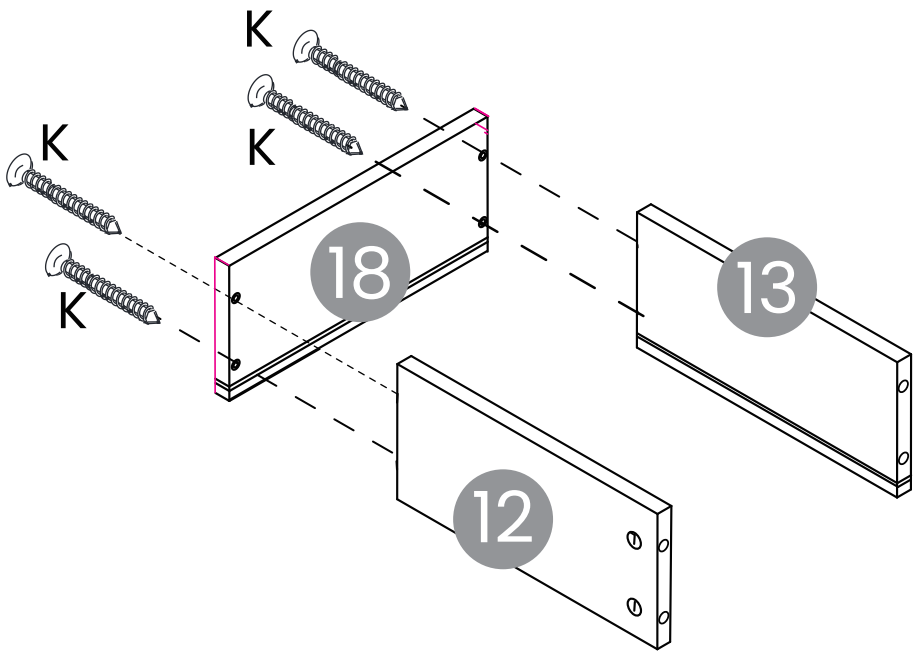


(*2) Please repeat this step twice.


24

K x4




ø4X30mm



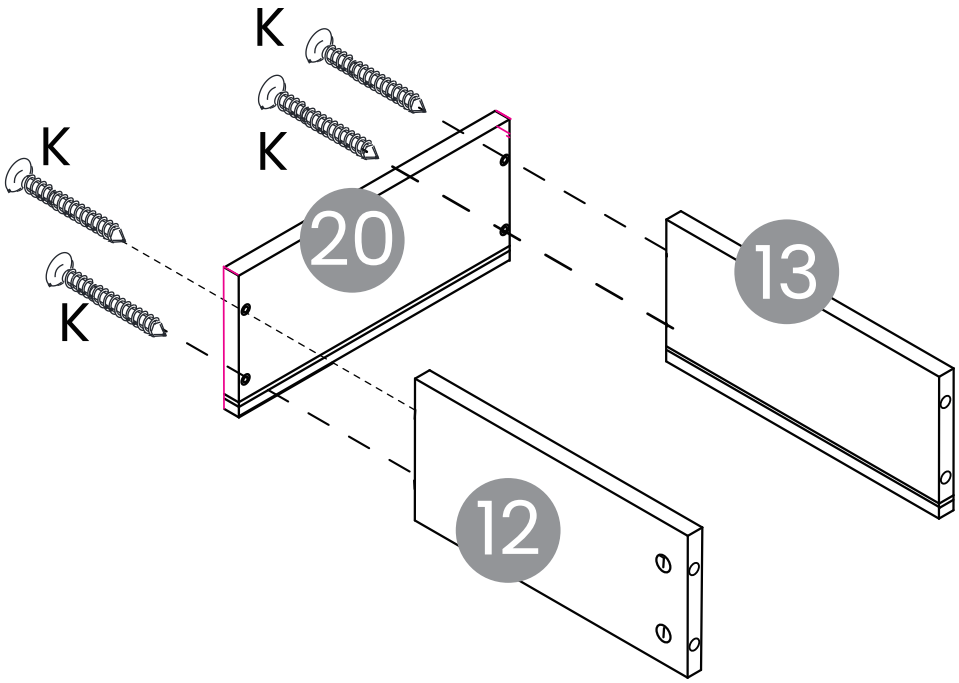


25

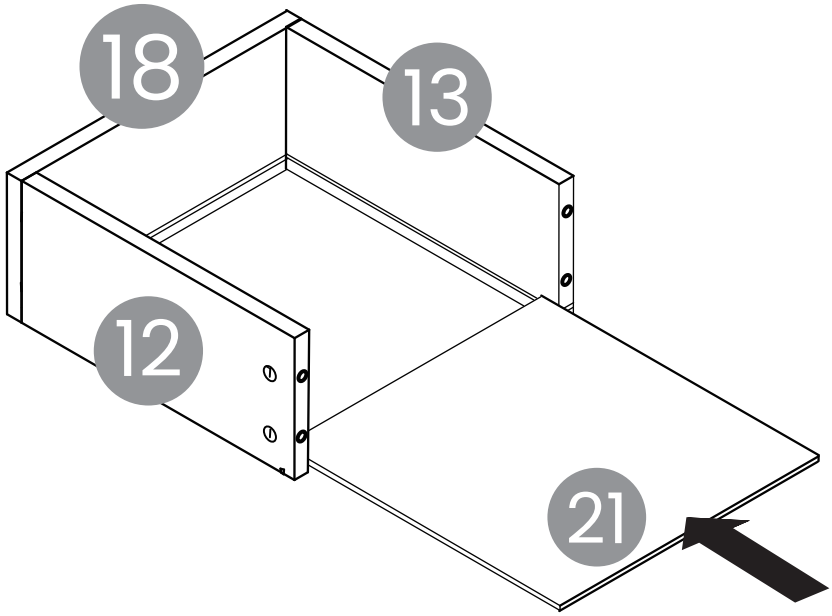

(*2) Please repeat this step twice.

26

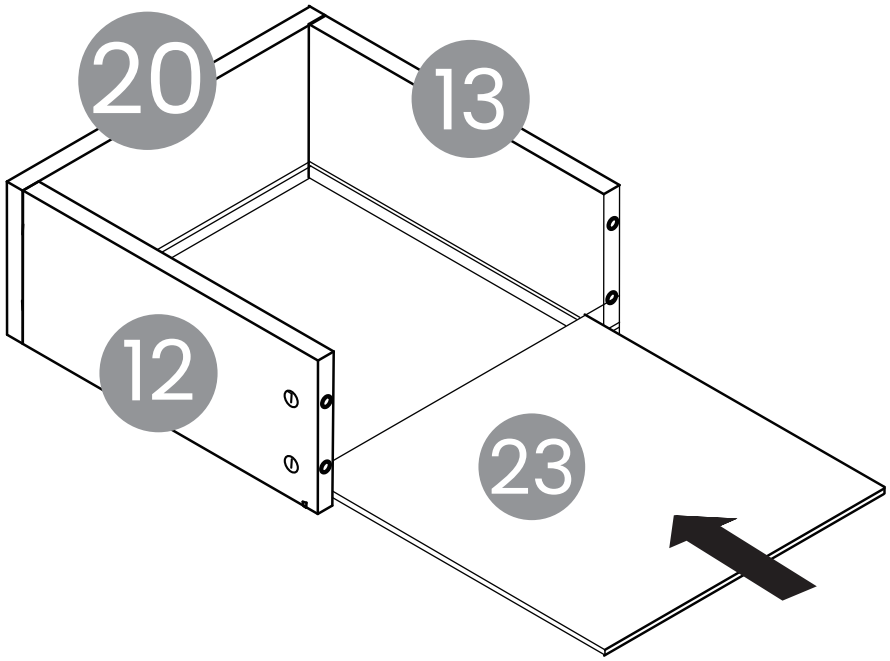



27

J x 4



∅15 x 9.5 mm



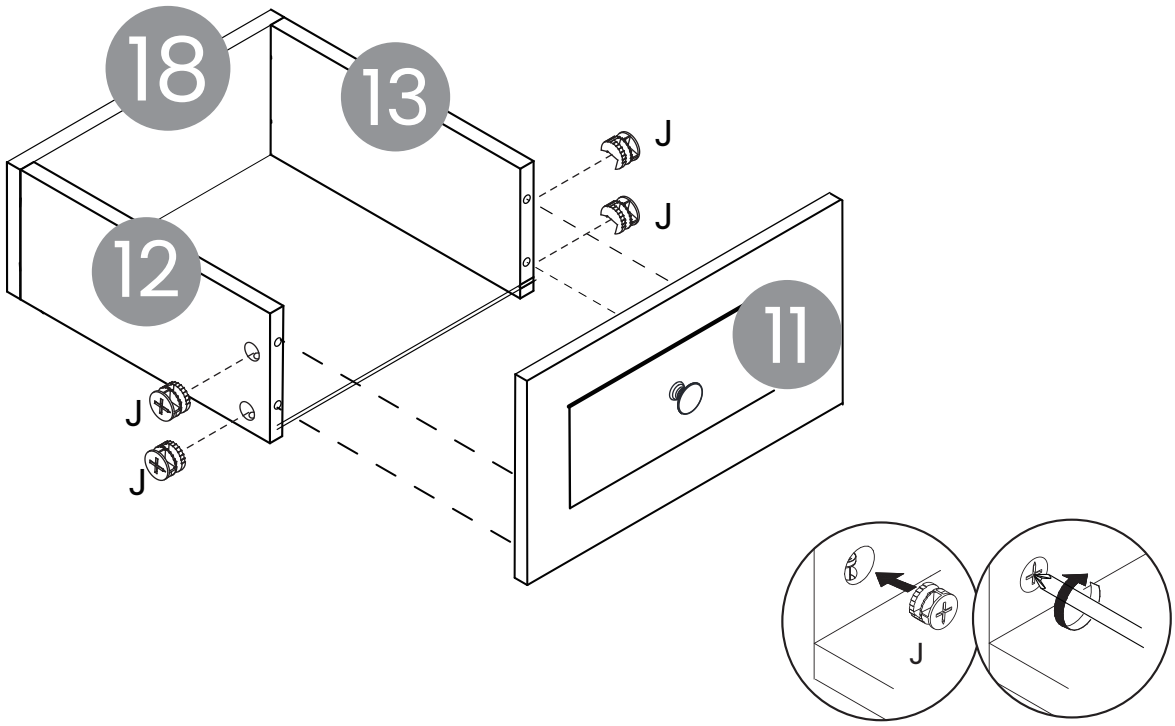



28

J x 4



∅15 x 9.5 mm



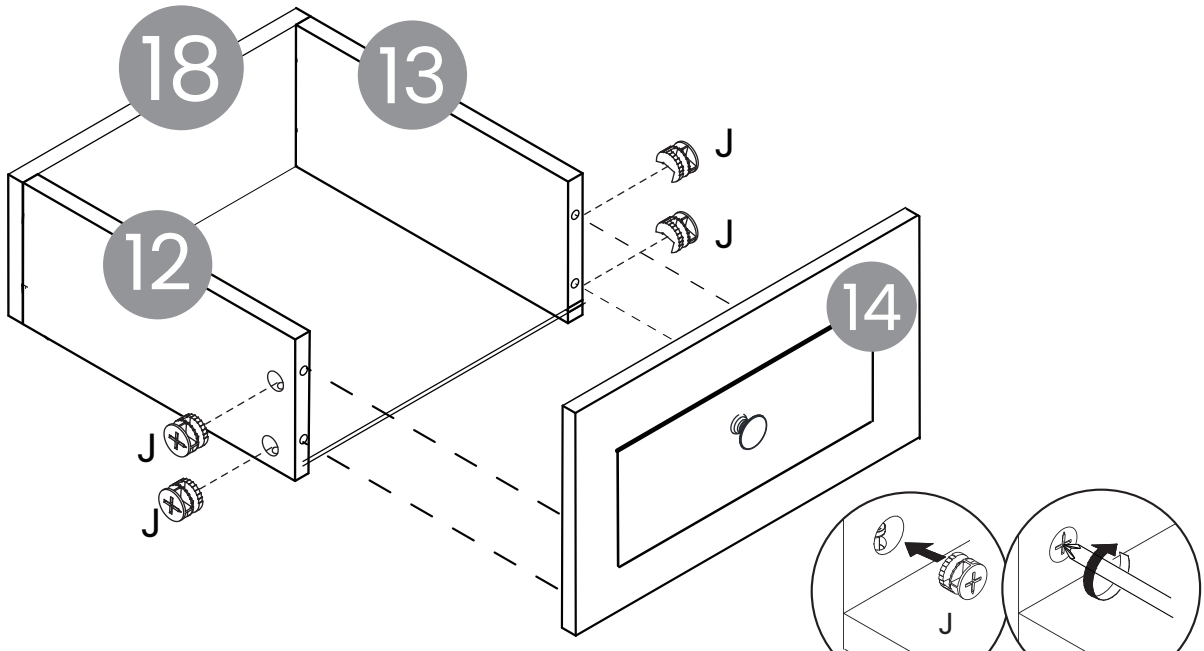



29

J x 4




∅15 x 9.5 mm



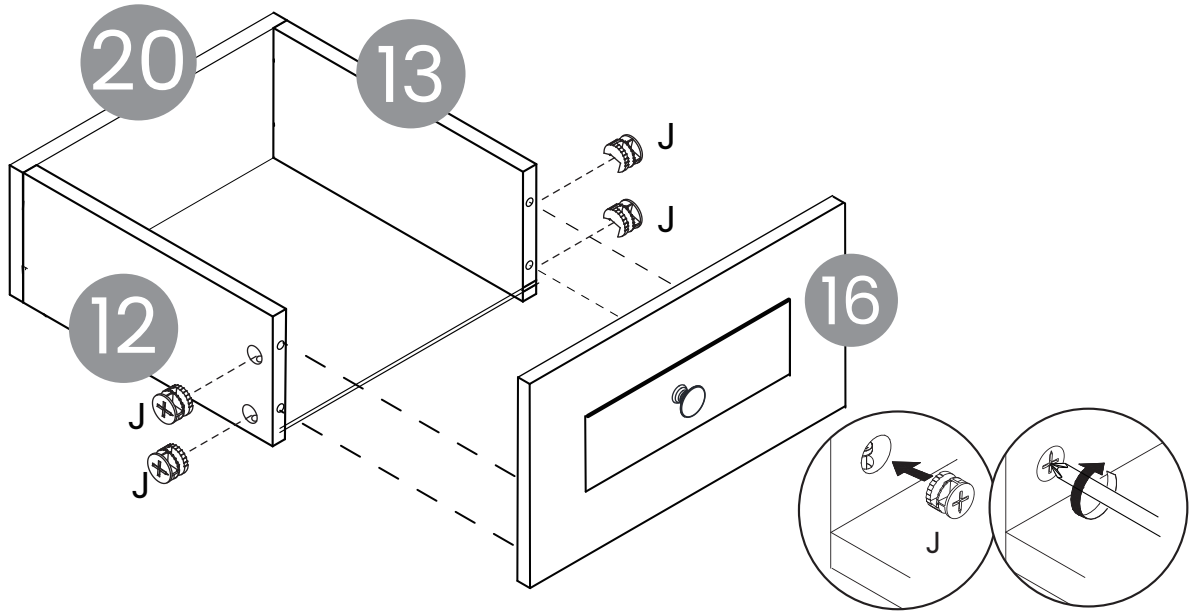

30

D x 1





L = 300 mm


E x 4




∅3 x 12 mm




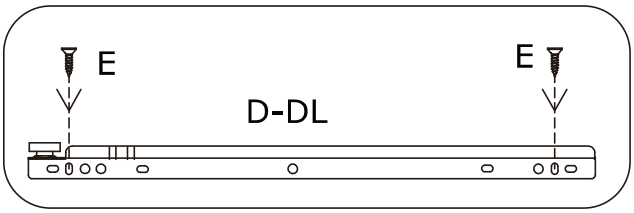


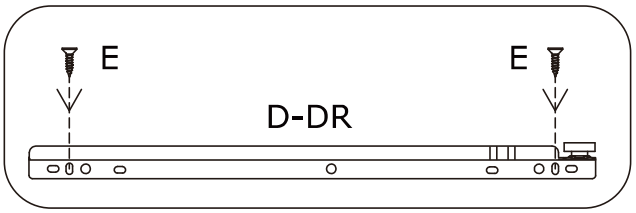


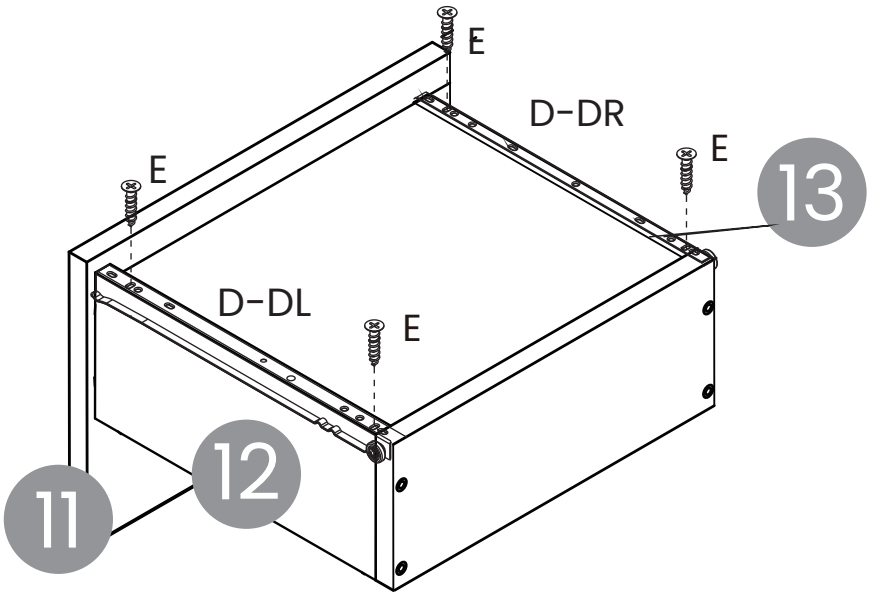


31



D x 1	E x 4	
		
L = 300 mm	∅3 x 12 mm	

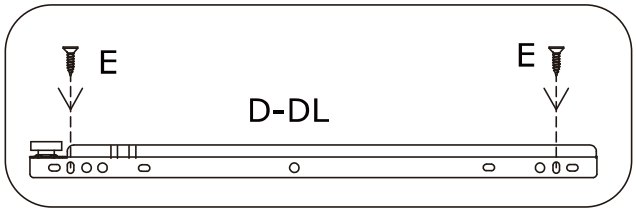


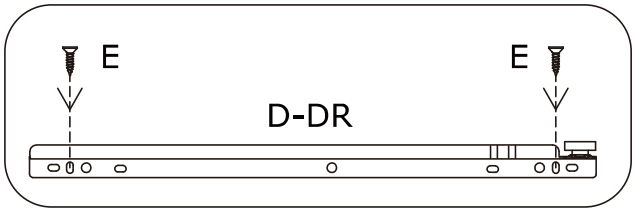


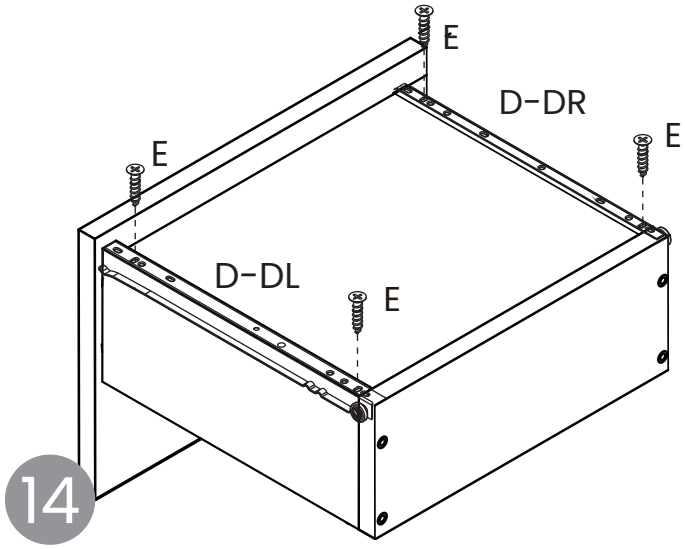


32

D x 1	E x 4	
		
L = 300 mm	∅3 x 12 mm	

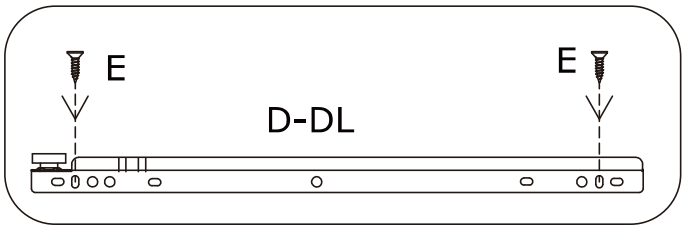


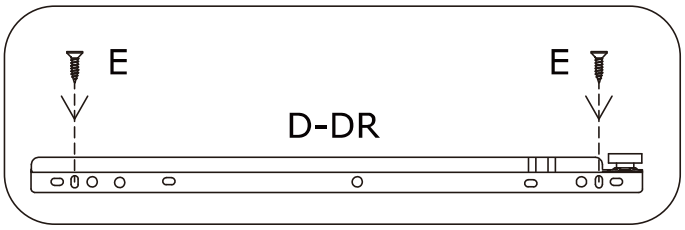

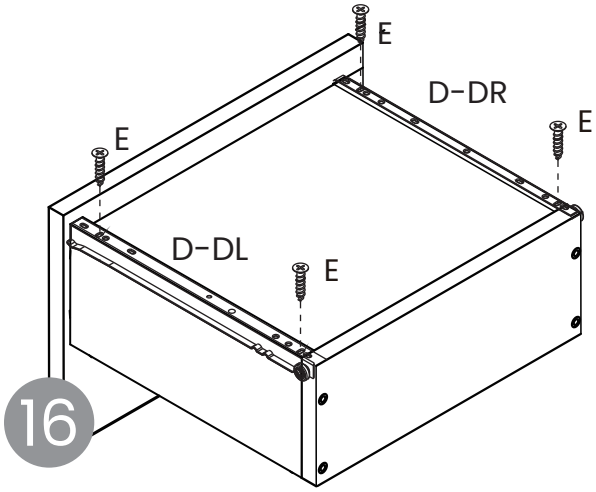



33

Ax 8



Ø 5 x 35 mm



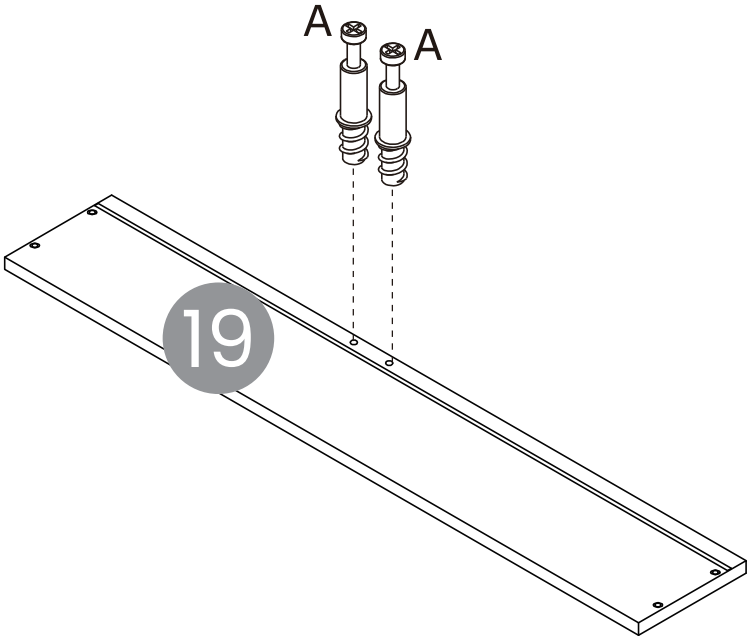

(*4) Please repeat this step four times.

34

Kx1 6





Ø4 x 30 mm

Jx 8




Ø15 x 9.5 mm



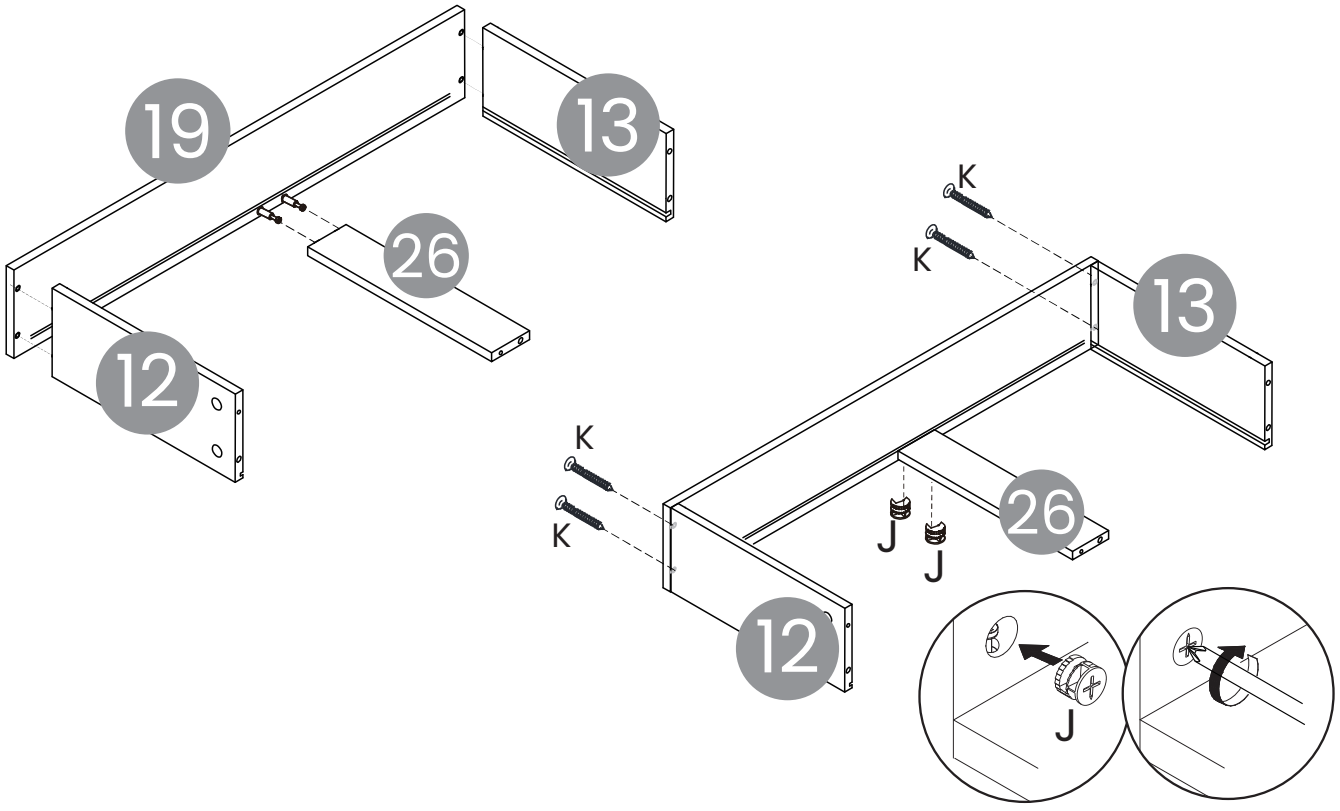

(*4) Please repeat this step four times.

35

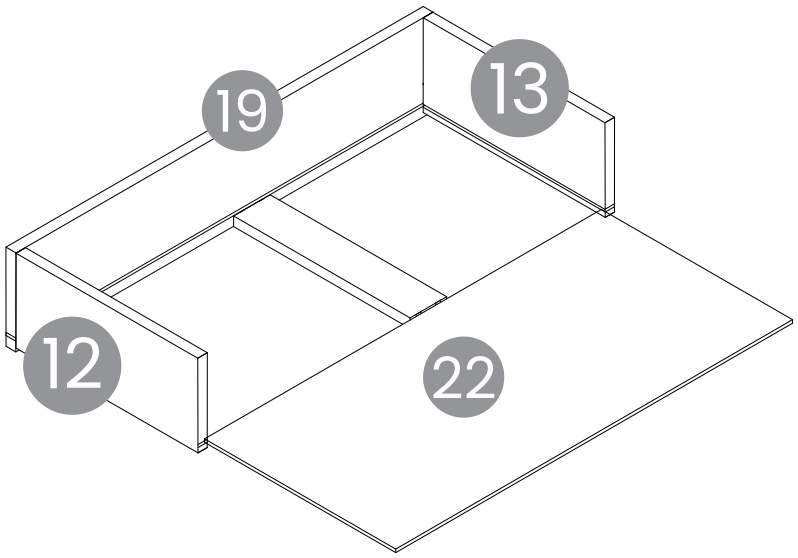


(*4) Please repeat this step four times.

36

Ax24





Ø 5x 35 mm

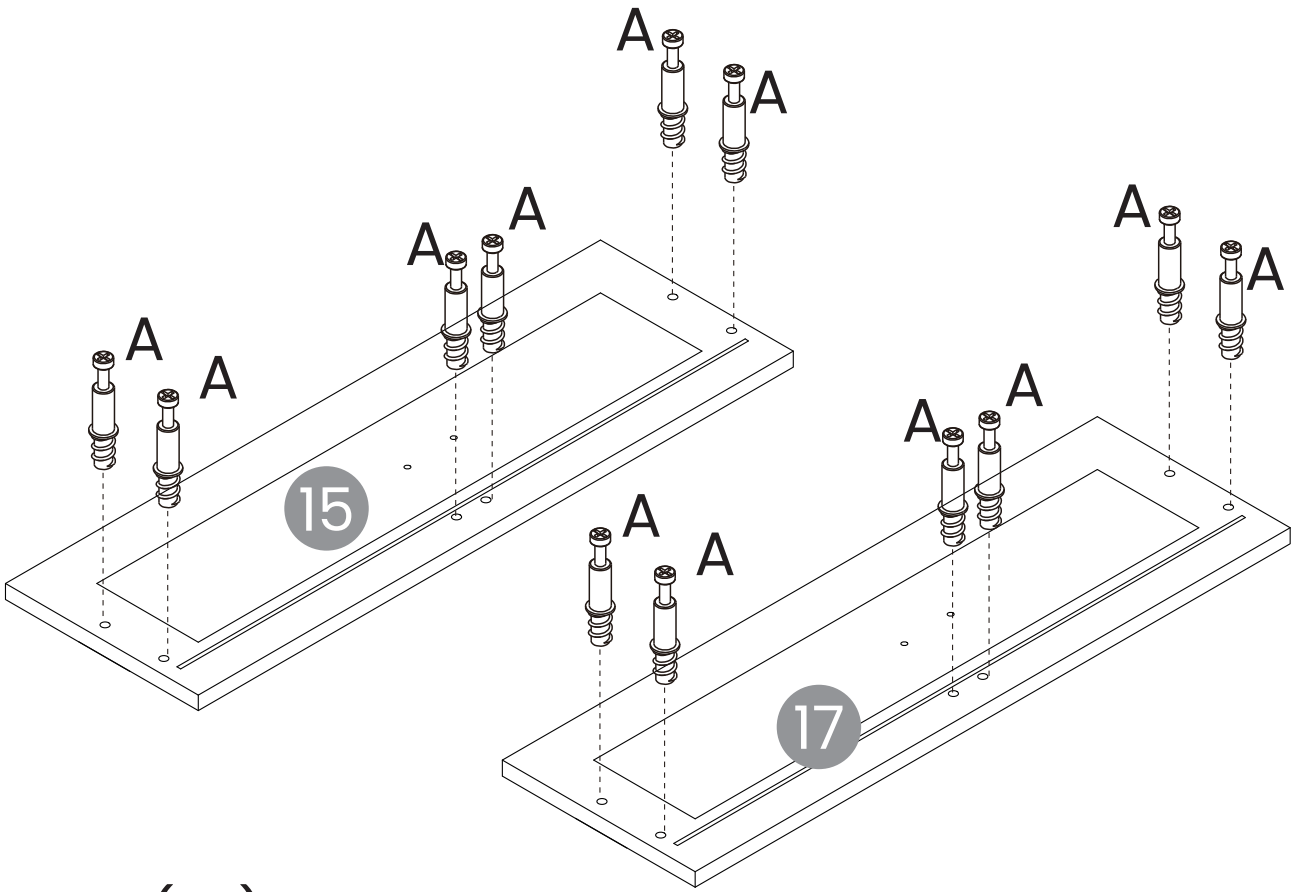

(*2) Please repeat this step twice.


37


L x 2	Jx1 2	
		
∅4 x 18mm	∅15 x 9.5 mm	

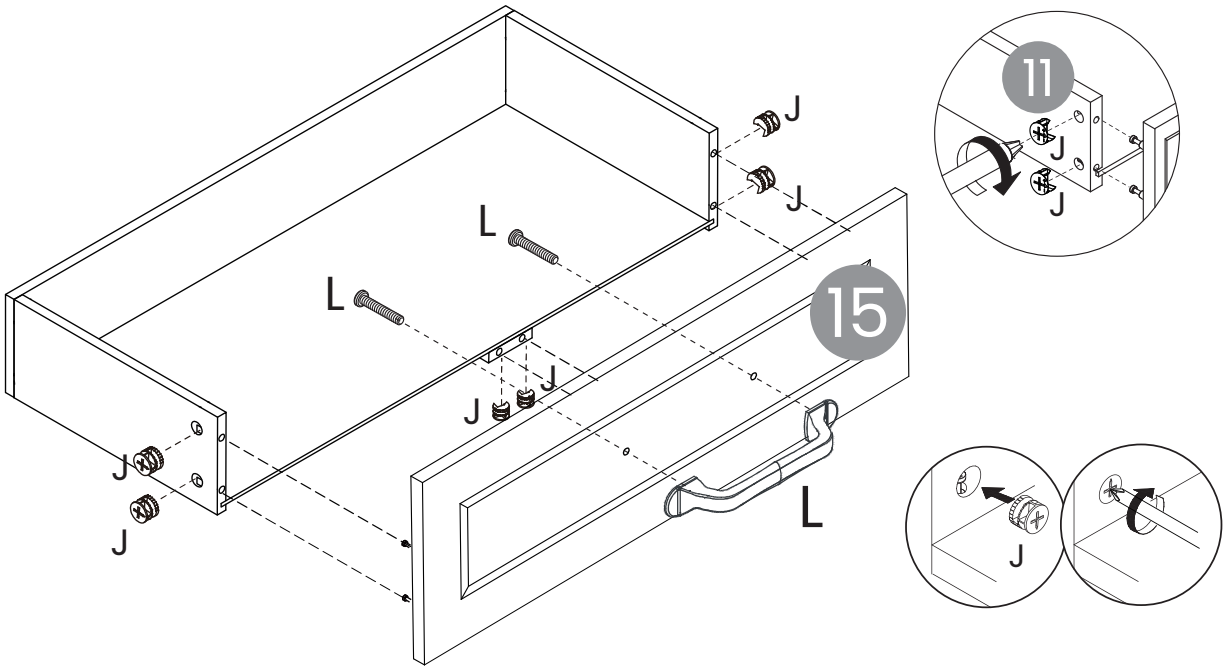

(*2) Please repeat this step twice.


38


D x 2	E x 8	
		
L = 300 mm	∅3 x 12 mm	

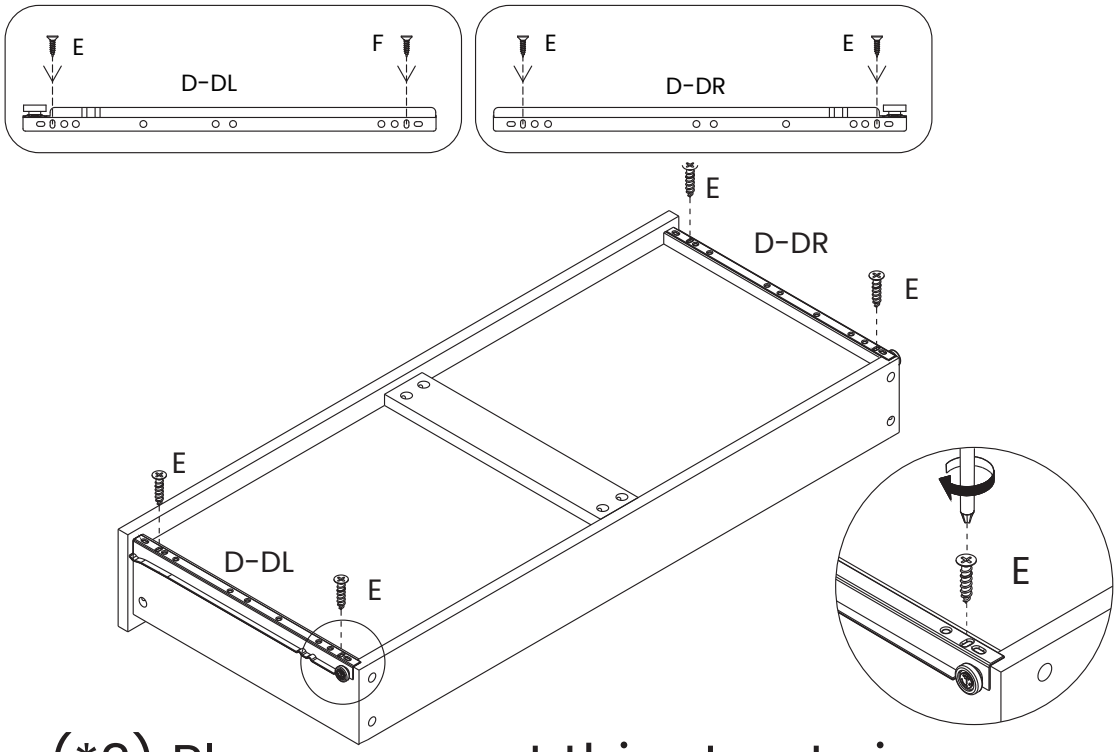

(*2) Please repeat this step twice.



39


L x 2	Jx1 2	
		
∅4 x 18mm	∅15 x 9.5 mm	

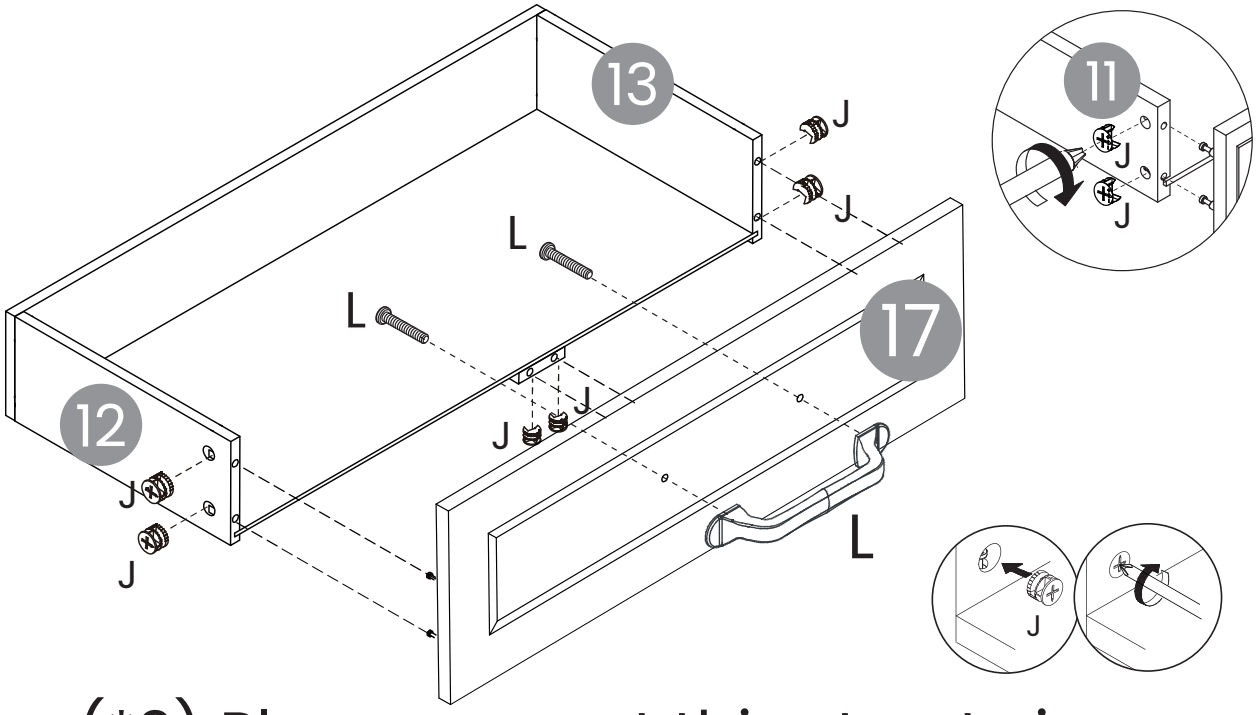


(*2) Please repeat this step twice.

40


D x 2	E x 8	
		
L = 300 mm	∅3 x 12 mm	

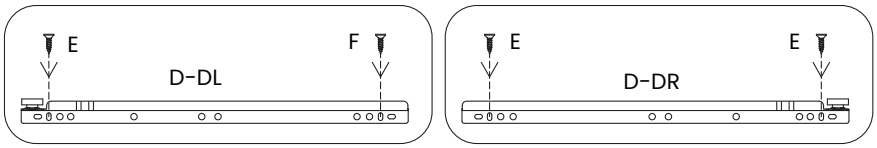


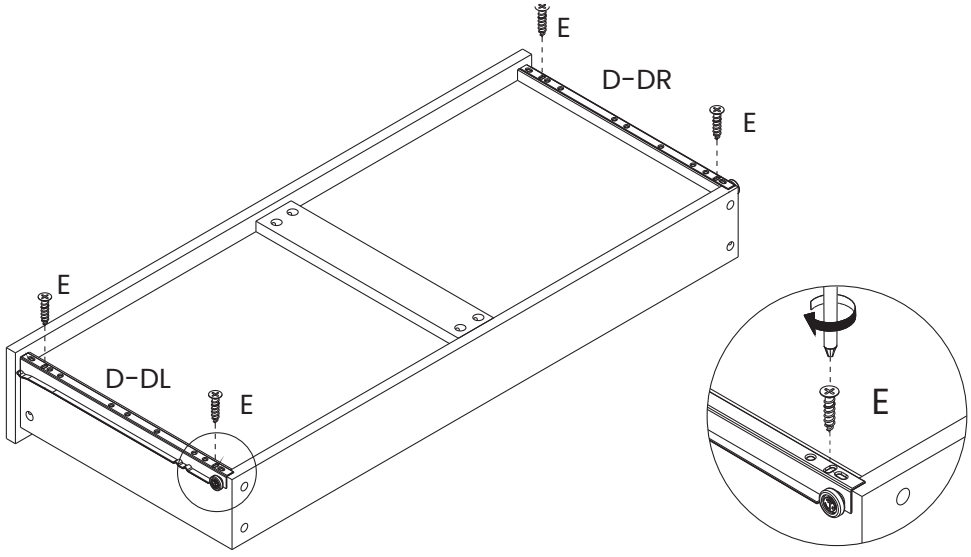


(*2) Please repeat this step twice.


41

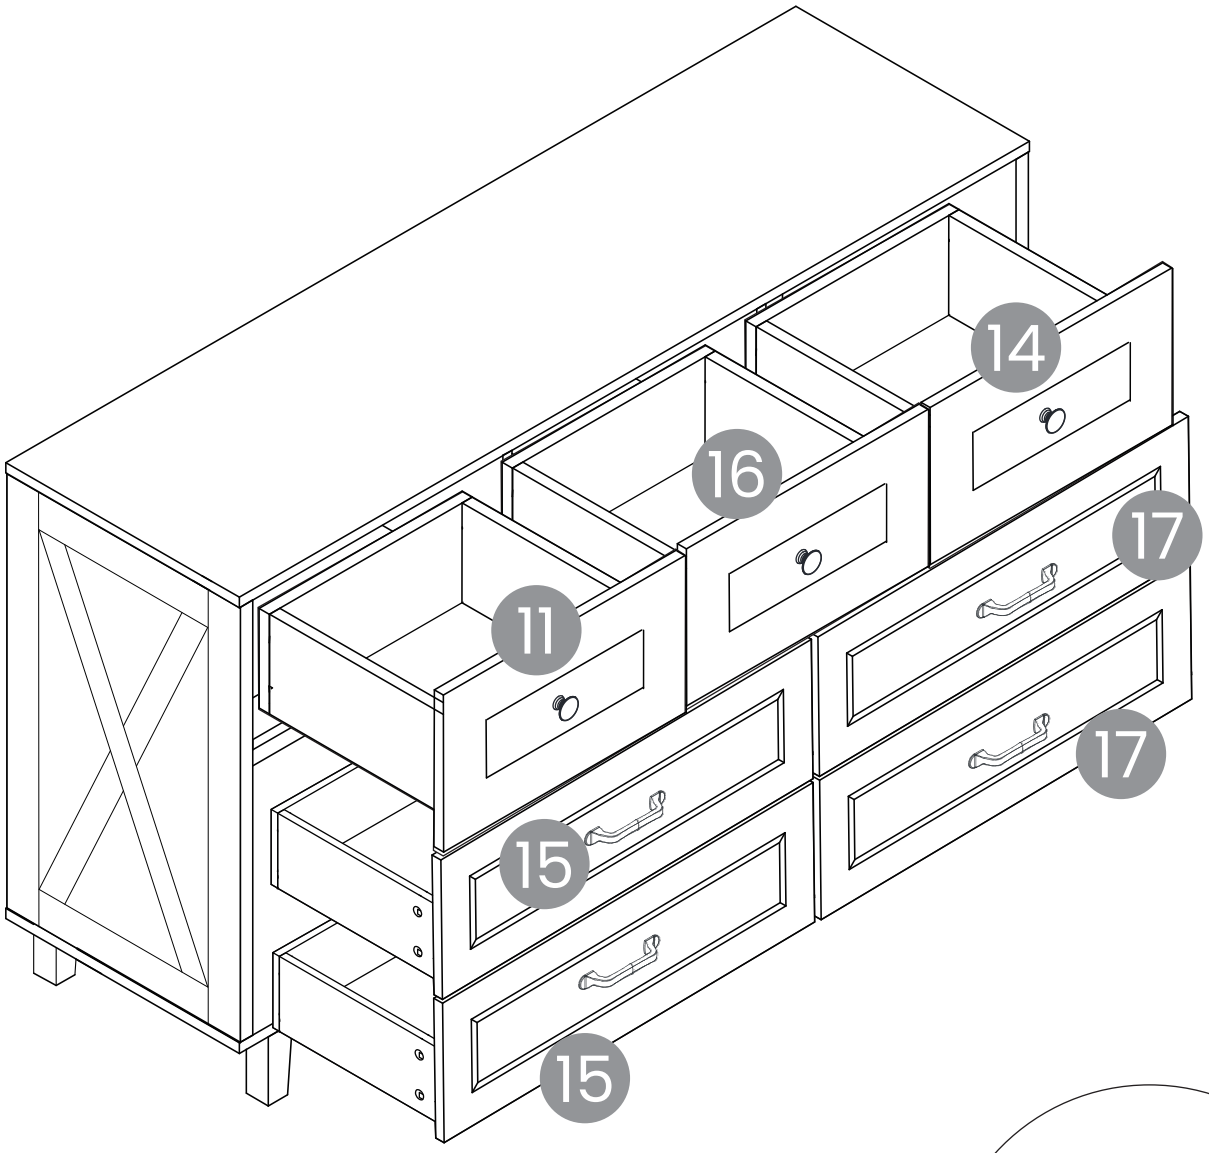


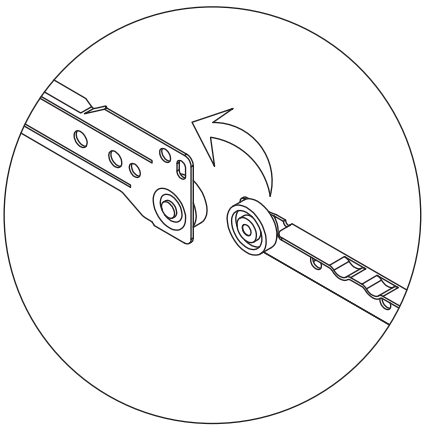


42

HX 14	E x 14	
	 ∅3 x 12 mm	

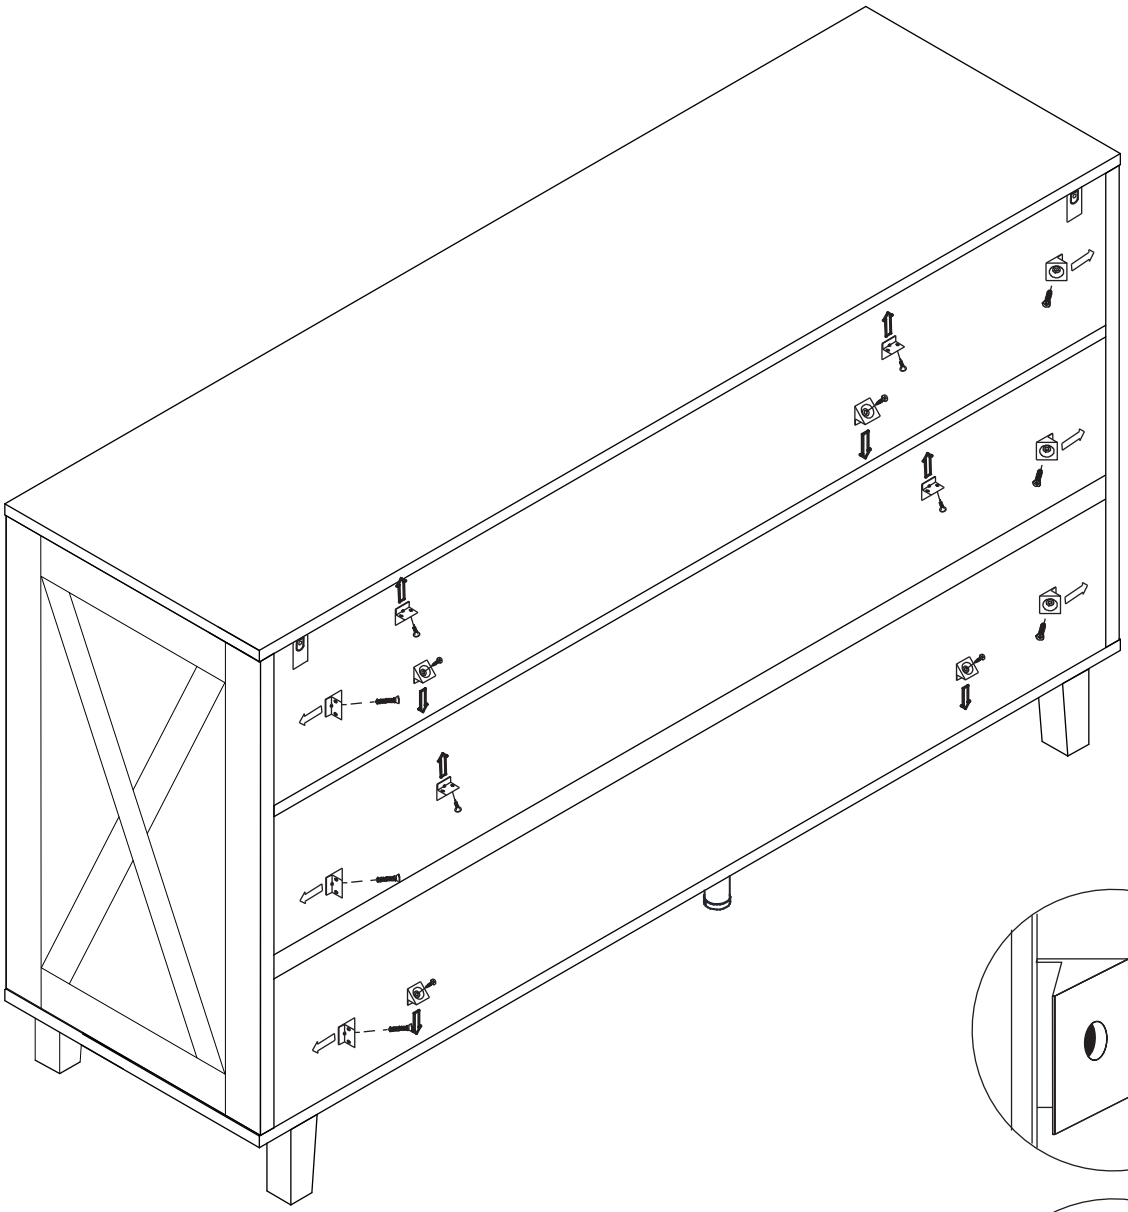

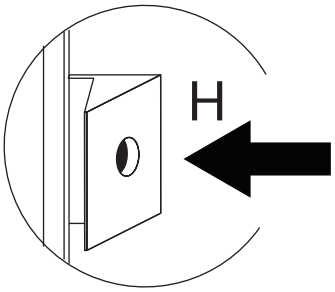


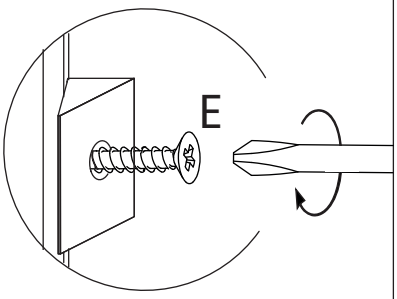


43


Mx 2






WALL

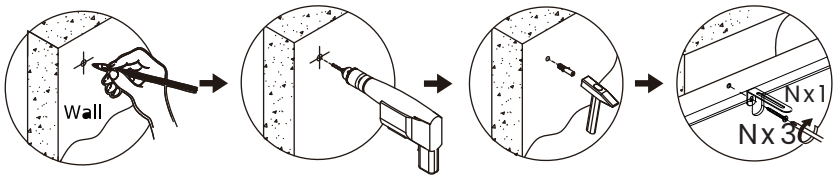
Wall
Nx1
Nx 3

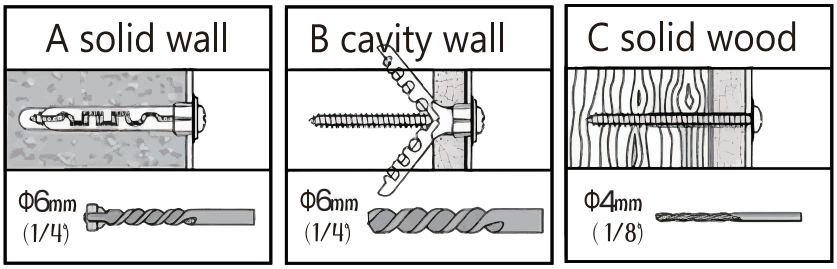
A solid wall
B cavity wall
C solid wood
Φ6mm
(1/4')
Φ6mm
(1/4')
Φ4mm
(1/8')

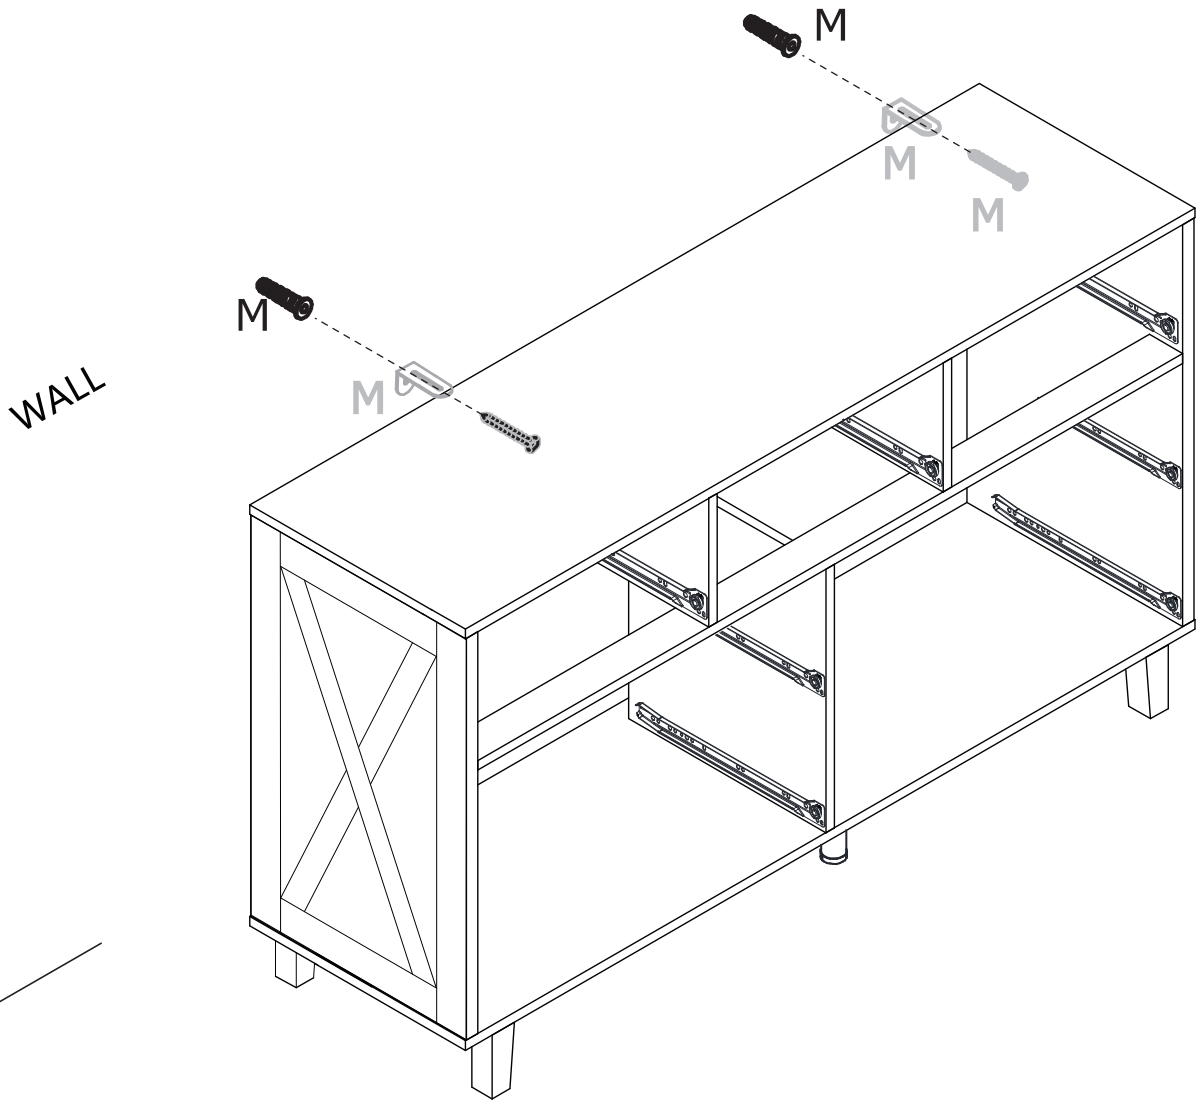

M
M
M
M
M
WALL

44

K x 4




Ø4 x 30 mm

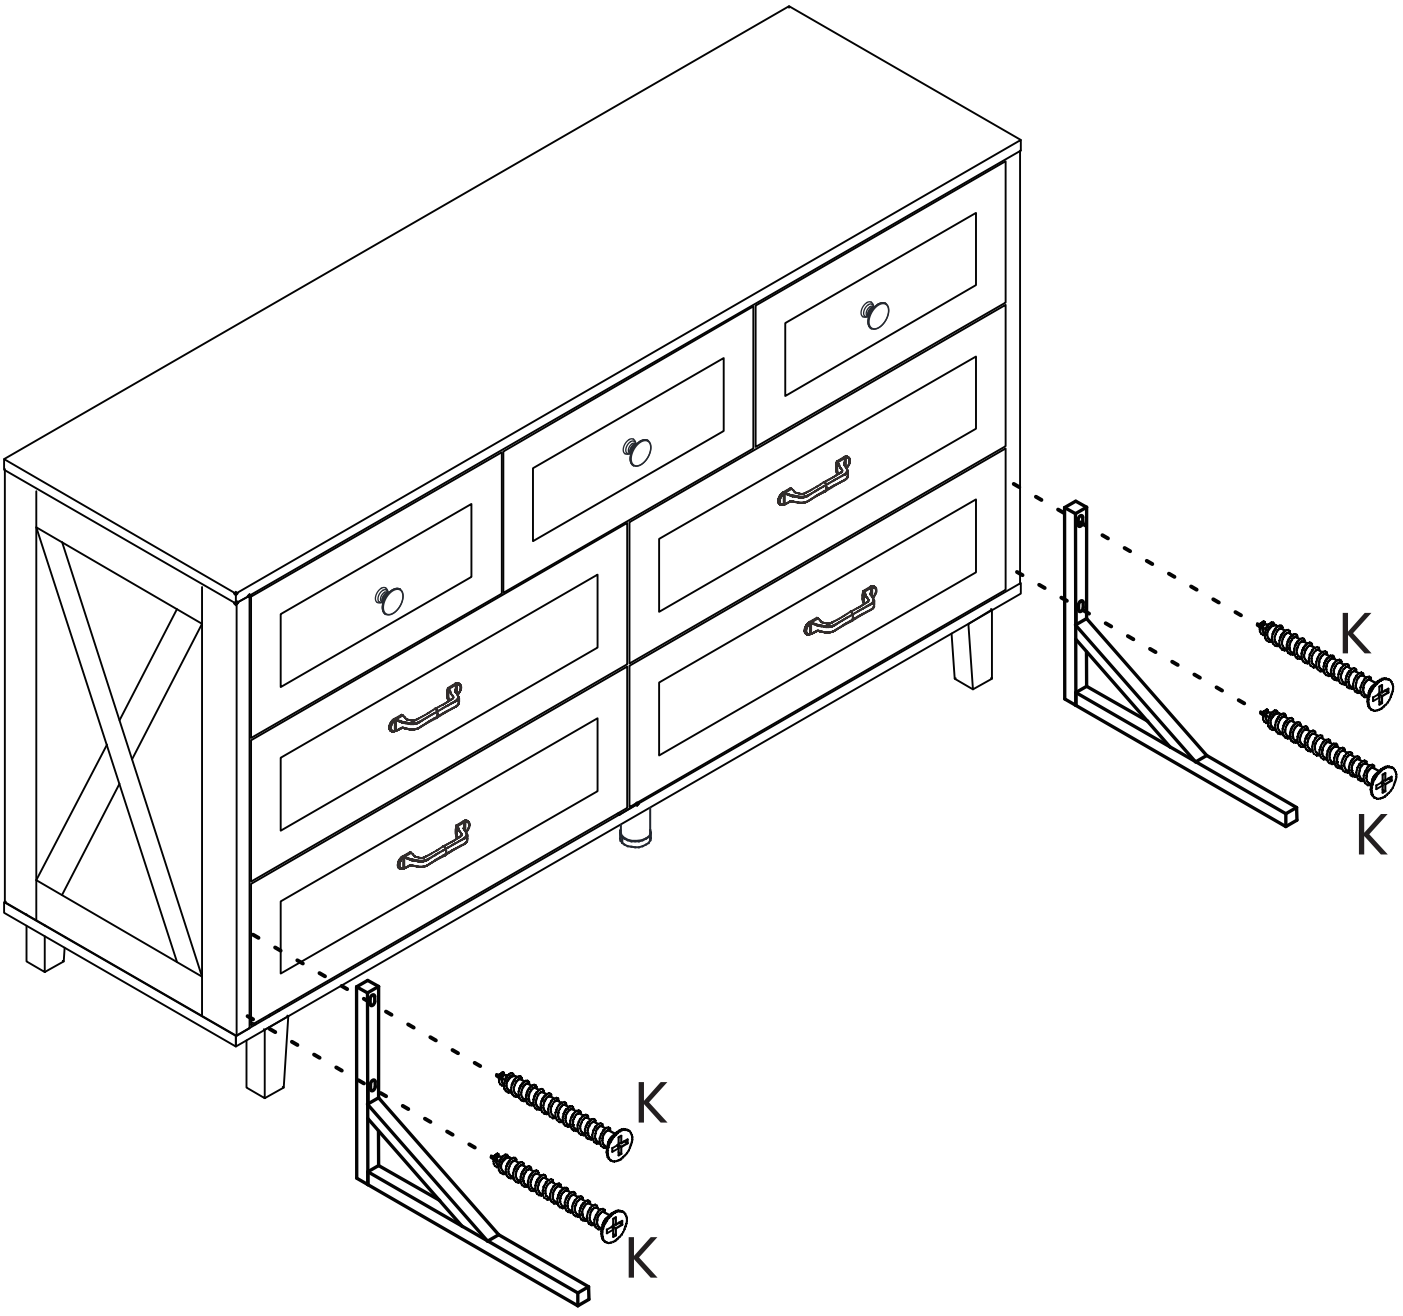

45

Fx72

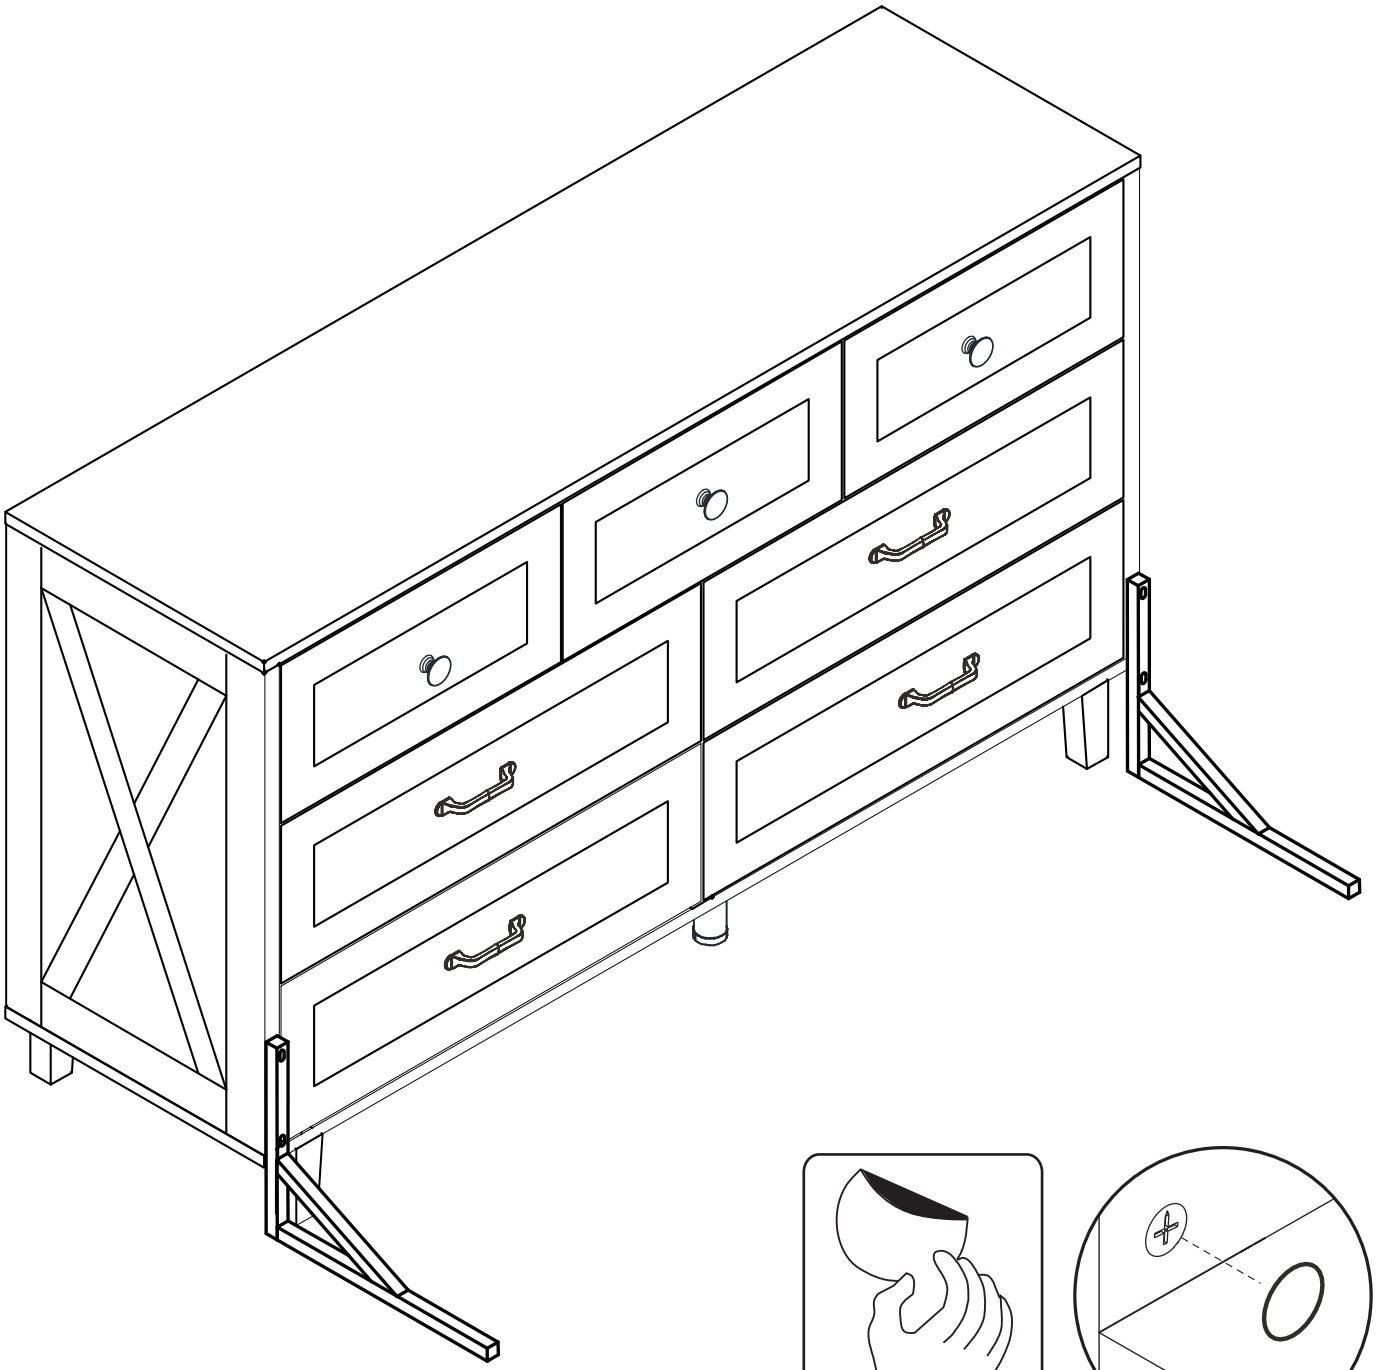

Shenzhenshi yumoshangmaoyouxiangongsi
Email: pdymproe@163.com
Add: Room 1203, Anqi Building, No. 1038, Taibai Road Donghu Street, Luohu District, Shenzhen, Guangdong 518000

